



Count on it.

Form No. 3396-672 Rev B

Parts Catalog

Cab Kit

**2015 and After Groundsmaster® 4500/4700-D
or Reelmaster® 7000-D Traction Unit**

Model No. 30901—Serial No. 315000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Frame, Seal and Mirror Assembly 4

Frame Mount Assembly 6

Windshield Wiper and Condenser Core Assembly 8

Wire Harness Assembly 10

Door and Window Assembly 12

RH Door Assembly 14

LH Door Assembly 16

Rear Window Assembly 18

Washer Bottle, Air-Conditioner Hose and Heater Hose Assembly 20

Mixing Box and Vent Hose Assembly 22

Headliner Wire Harness and Control Assembly 24

Mixing Box Mounting Bracket and Water Tray Assembly 26


Blower Fan and Evaporator Core Assembly 28

Heat / Air Conditioner Housing Assembly 30

Air Diverter and Expansion Valve Assembly 32

Air Diverter Assembly No. 121-8369 34

Frame, Seal and Mirror Assembly

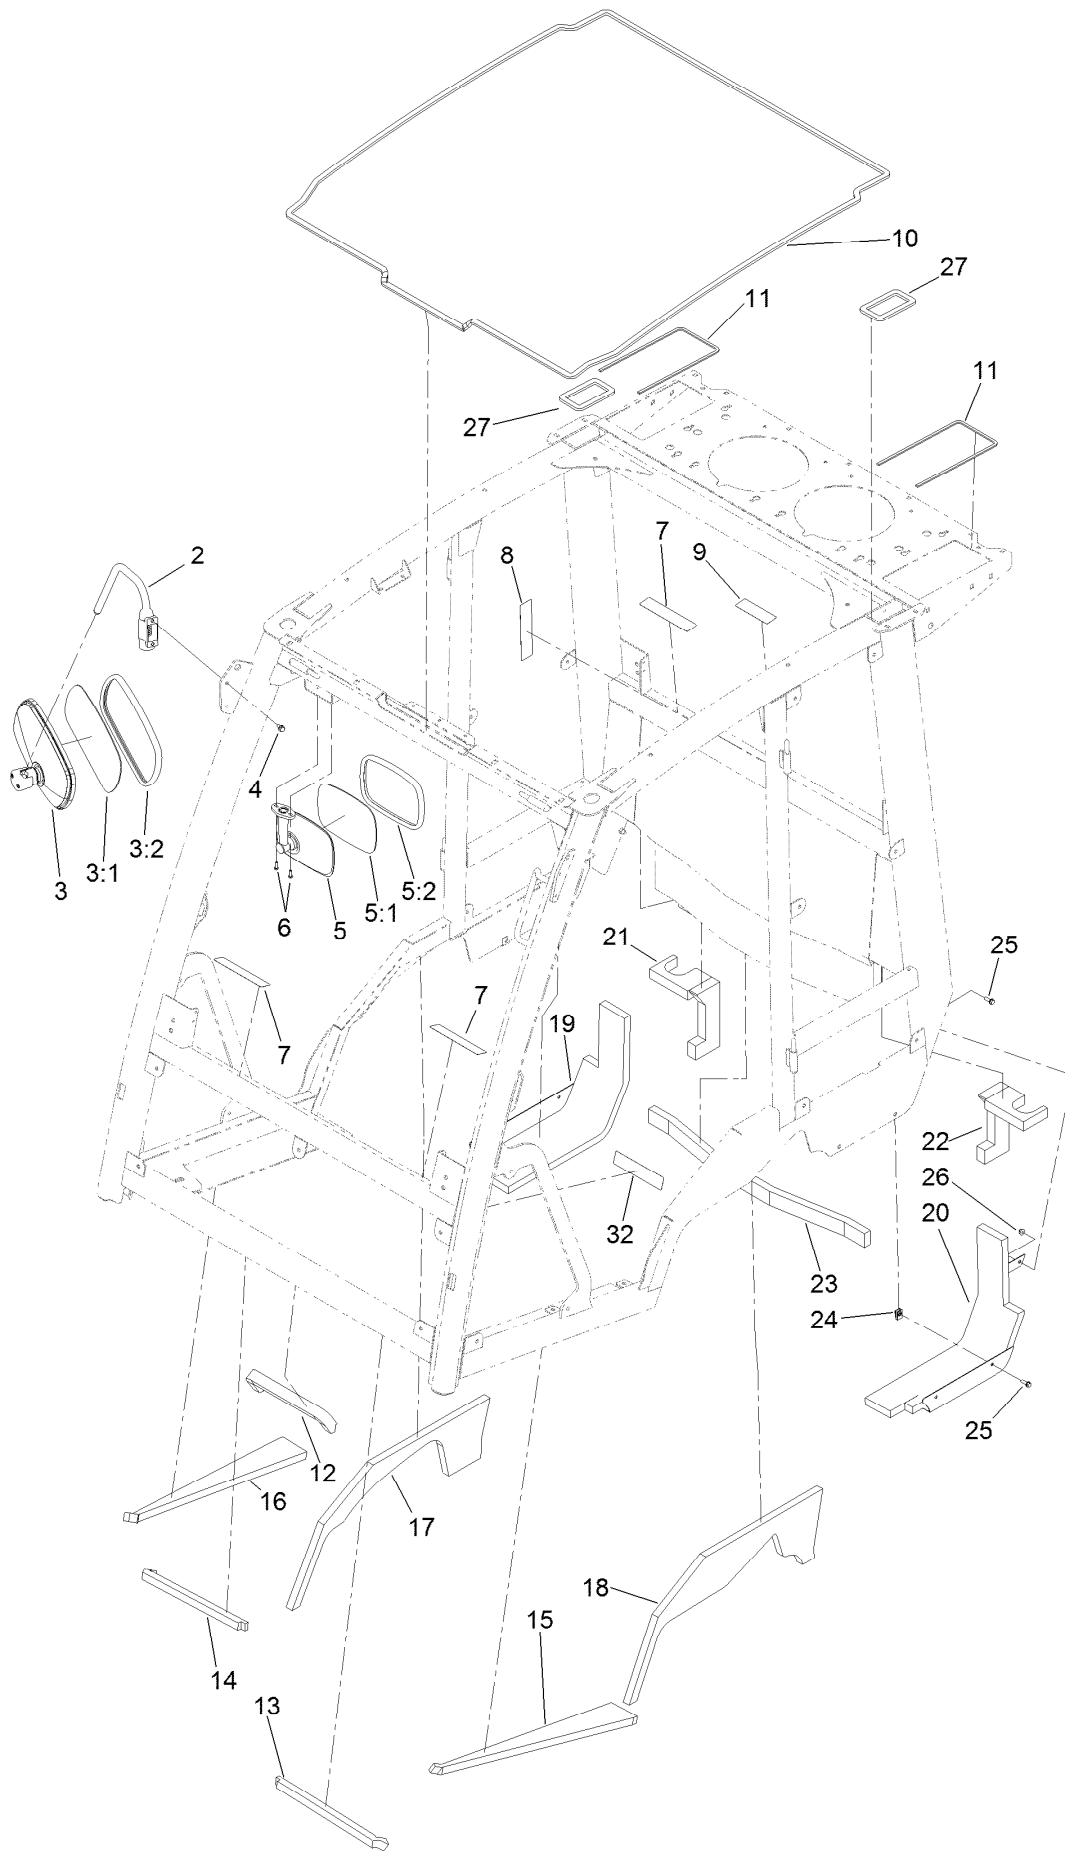


Frame, Seal and Mirror Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	121-8275	2	Arm-Mirror, Side	14	130-0395	1	Seal-Foam, Front Right
3	121-8341	2	Side Mirror ASM	15	130-0396	1	Seal-Foam, Left
3:1		1	Mirror-Glass ●	16	130-0397	1	Seal-Foam, Right
3:2		1	Gasket ●	17	130-0398	1	Foam-Tank, RH
4	33103-016	4	Screw-HHF	18	130-0391	1	Foam-Tank, LH
5	121-8343	1	Interior Mirror ASM	19	130-0542	1	Panel-Sealing, RH
5:1		1	Mirror ●	20	130-0543	1	Panel-Sealing, LH
5:2		1	Gasket ●	21	130-0353	1	Foam-Mount, RH
6	32144-32	2	Screw-PPH	22	130-0354	1	Foam-Mount, LH
7	130-0611	3	Decal-Window, Pin	23	130-0546	1	Foam-Rear
8	130-0594	1	Decal-Warning	24	107069	4	Clip
9	130-5355	1	Decal-Window, Hood	25	32105-15	6	Screw-HWH
10	130-0586	1	Seal-Foam, Frame Roof	26	104-7201	2	Nut-HF, NI
11	130-0587	2	Seal-Foam, Roof Air Filter	27	130-5855	2	Seal-Tube, Rear
12	130-0390	1	Seal-Foam, Front Center	32	132-3253	1	Decal-Service, Seat
13	130-0394	1	Seal-Foam, Front Left				

● Not serviced separately


Frame Mount Assembly

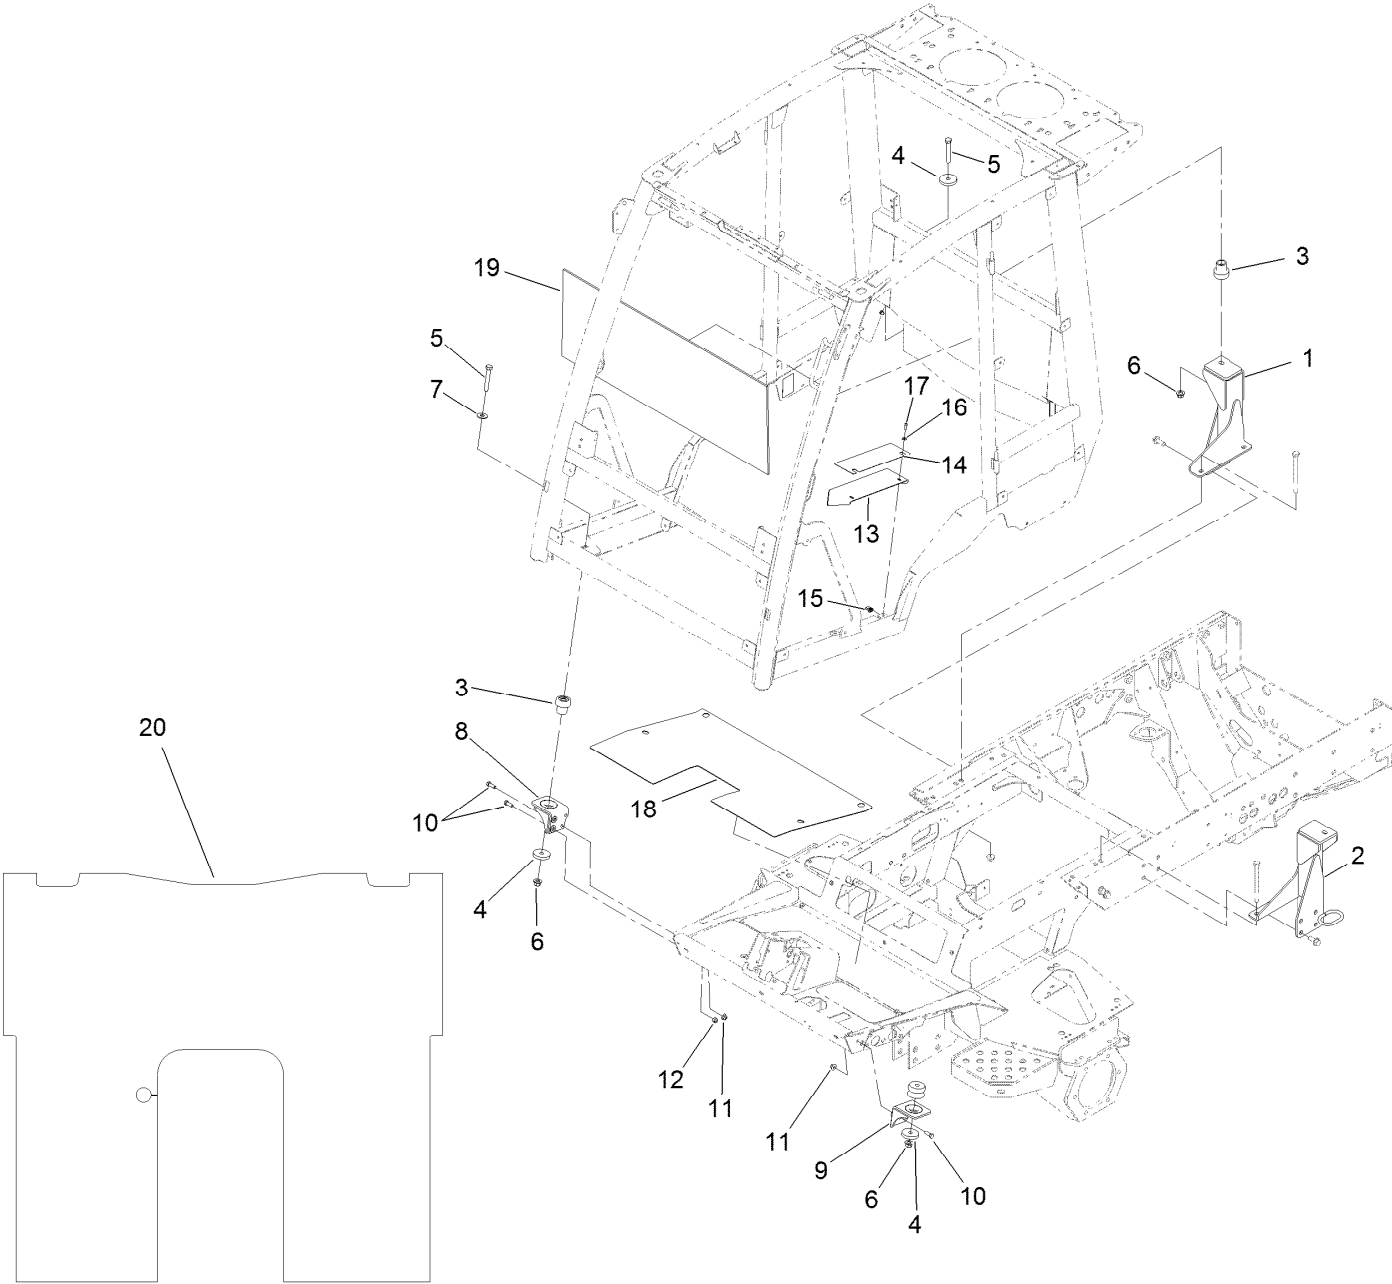

Frame Mount Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-0330-03	1	RH Rear Mount ASM	11	104-8301	5	Nut-HF, NI
2	130-0331-03	1	LH Rear Mount ASM	12	3296-39	2	Nut-Lock, NI
3	110-5954	4	Mount-Center, Bonded	13	132-3255-03	1	Bracket-Step
4	115-5519	4	Washer-Plain	14	132-3256	1	Pad-Adhesive
5	112-7264	4	Screw-HH	15	107069	2	Clip
6	99-5107	4	Nut-Lock	16	3256-1	2	Washer-Flat
7	3256-6	2	Washer-Flat	17	3274-69	2	Screw-HSBH
8	130-0379-03	1	RH Front Mount ASM	18	132-3254	1	Tread-Floor
9	130-0380-03	1	LH Front Mount ASM	19	132-3261	1	Panel-Upholstery, Rear
10	323-6	7	Screw-HH	20	132-3265	1	Blanket-Insulation


Windshield Wiper and Condenser Core Assembly

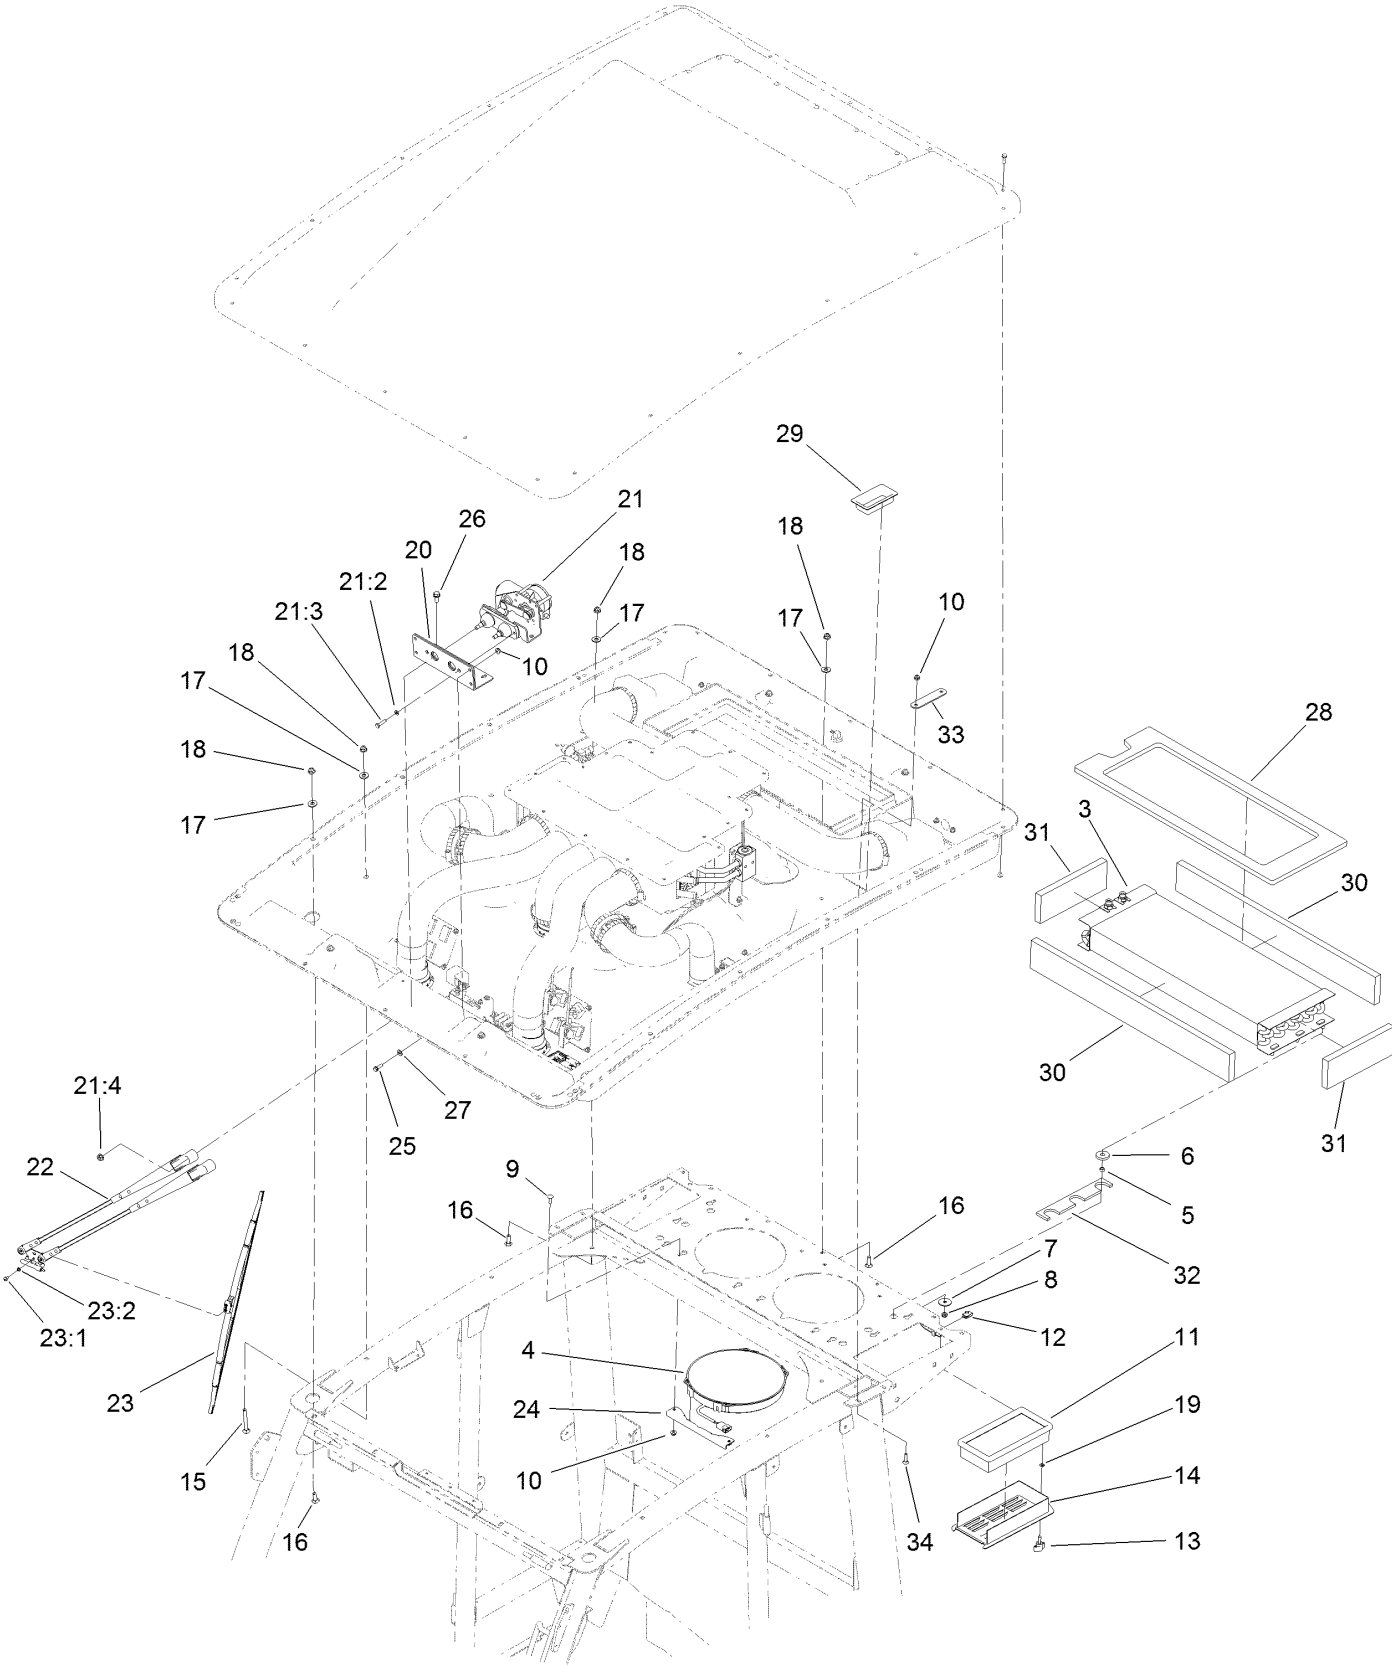

Windshield Wiper and Condenser Core Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	121-8447	1	Core-Condenser	21:2	3253-3	1	Washer-Lock
4	121-8459	2	Fan-Condenser	21:3	33113-025	1	Screw-HH
5	106-8489	6	Bushing-Sleeve	21:4	112-2844	2	Nut-HF
6	125-9982	6	Bushing-Flange	22	125-7453	1	Arm-Wiper
7	3256-57	6	Washer-Flat	23	125-7454	1	Blade-Wiper
8	3296-47	6	Nut-Lock,NI	23:1	47-2830	2	Screw
9	1-807512	8	Bolt-CARR	23:2	43-5920	2	Washer-Lock, Spring
10	104-7201	16	Nut-HF, NI	24	125-9621-03	4	Bracket-Mount, Fan
11	121-8457	2	Filter-Air	25	32105-15	4	Screw-HWH
12	107069	2	Clip	26	32144-11	3	Screw-HWH
13	98-8332	2	Knob	27	3256-1	4	Washer-Flat
14	125-9825-03	2	Cover-Air, Fresh	28	130-5647	1	Gasket-Foam, Condenser
15	3230-9	4	Screw-CARR	29	130-5661	2	Tube-Sleeve
16	3230-22	13	Screw-CARR	30	130-5649	2	Seal-Foam, Long
17	3256-3	17	Washer-Flat	31	130-5650	2	Seal-Foam, Short
18	104-8300	17	Nut-HF, NI	32	130-5931	2	Seal-Condenser
19	106-8737	2	Nut-Retainer	33	130-5854	2	Brace-Seal
20	130-5871	1	Bracket-Wiper	34	3229-30	4	Screw-CARR
21	125-7452	1	Wiper Motor ASM				


Wire Harness Assembly

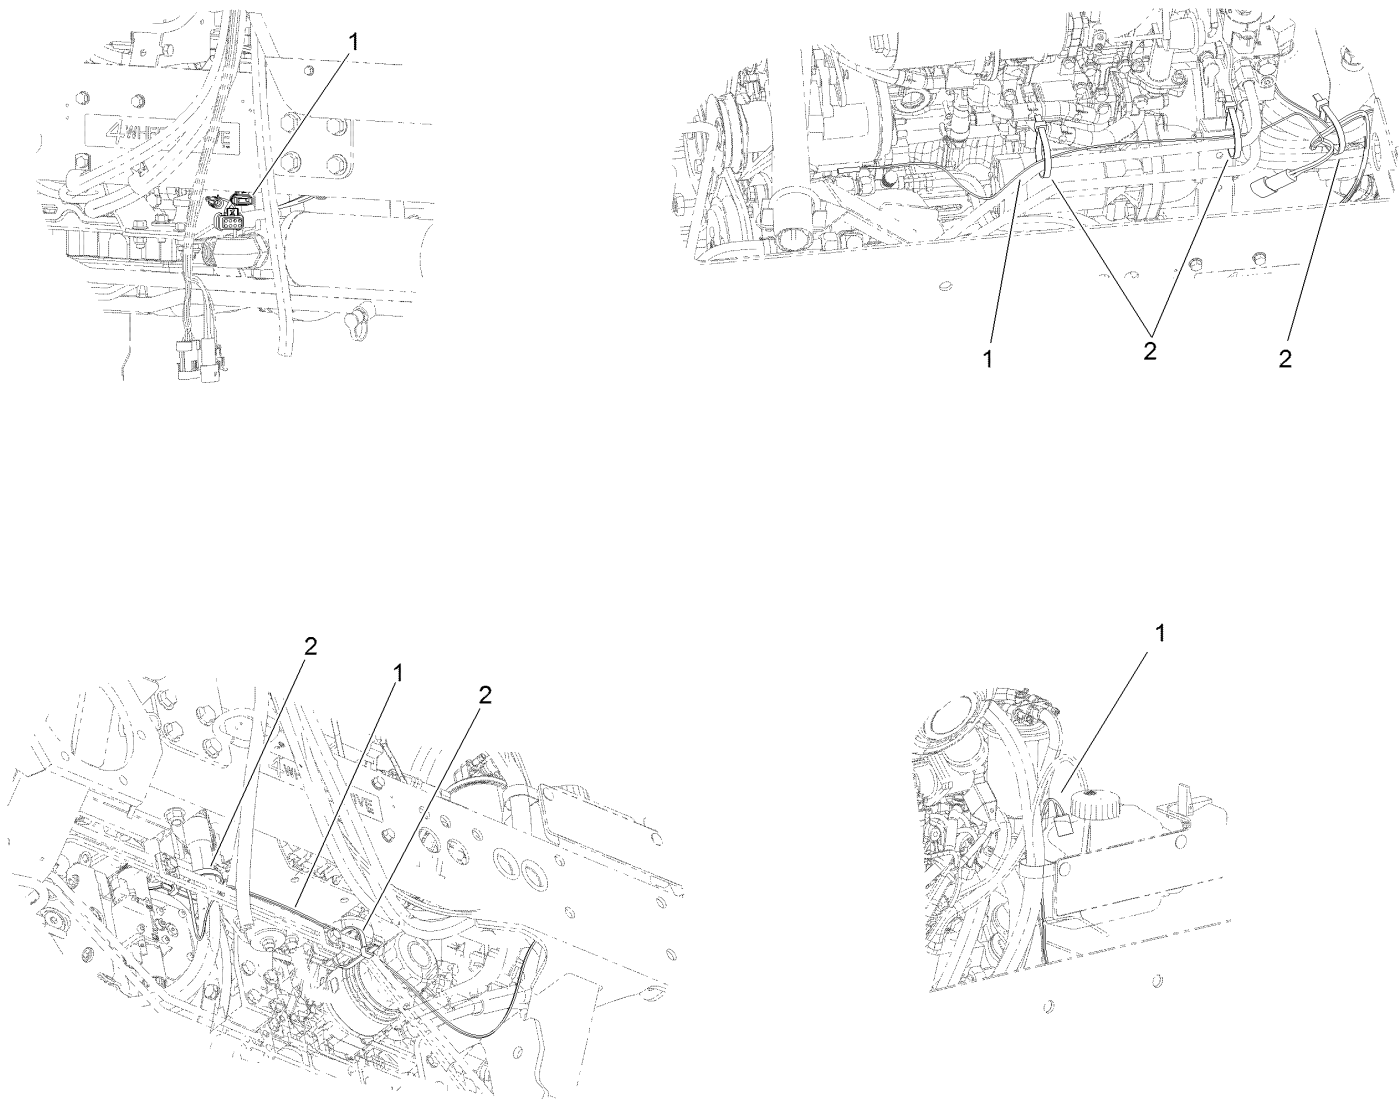

Wire Harness Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	122-0667	1	Harness-Wire
2	3334-945	5	Tie-Cable

Door and Window Assembly

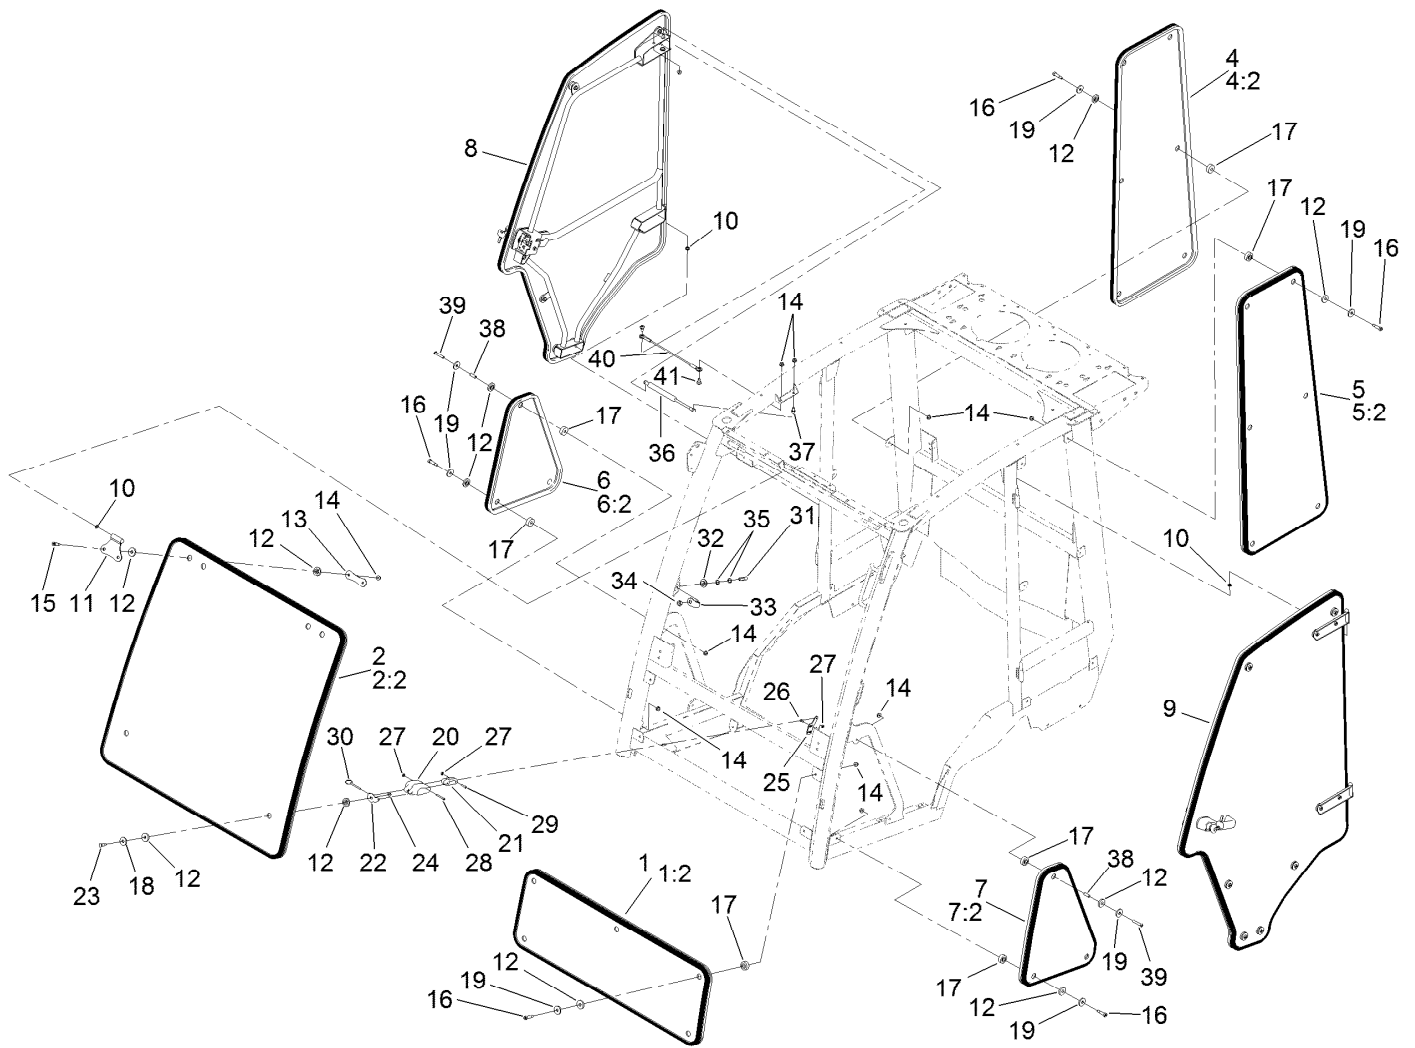


Door and Window Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-6193	1	Front-Lower Window ASM	19	130-5815	23	Washer-Backup
1:2	130-0329	1	Seal-Trim	20	125-9792	2	Handle-Window
2	130-5680	1	Upper Front Window ASM	21	125-9793	2	Link-Window
2:2	121-8212	1	Seal-Trim	22	125-9987	2	Mount-Latch
4	130-5676	1	RH-Side Window ASM	23	119-9812	2	Bolt-Shoulder
4:2	121-8215	1	Seal-Trim	24	104-7201	2	Nut-HF, NI
5	130-5677	1	LH-Side Window ASM	25	130-0590	2	Mount-Tab
5:2	121-8215	1	Seal-Trim	26	1-807513	4	Bolt-CARR
6	130-6191	1	RH Forward Window ASM	27	120-9681	8	Nut-Lock, NI
6:2	130-0357	1	Seal-Trim	28	3274-59	2	Screw-HSH
7	130-6192	1	LH Forward Window ASM	29	3274-14	2	Screw-HSH
7:2	130-0357	1	Seal-Trim	30	127-9850	2	Pin-Release, Quick
8		1	RH Door ASM ●	31	125-9993	2	Striker-Stud
9		1	LH Door ASM ●	32	125-9992	2	Adjuster-Stud
10	121-8441	6	Washer-Spacer	33	121-8393	2	Guard-Striker
11	121-8535-03	2	Hinge-Window	34	106-0327	2	Nut-Hex
12	125-9982	35	Bushing-Flange	35	73-0040	4	Washer-Thrust
13	127-9933	2	Plate-Backer, Windshield	36	130-6083	2	Spring-Gas, Door
14	104-8300	31	Nut-HF, NI	37	98-3104	2	Stud-Ball
15	125-9520	4	Screw-Shoulder, HSH	38	130-5725	4	Spacer
16	125-9521	19	Screw-Shldr HSH	39	125-7977	4	Screw-HSBH
17	125-9537	23	Bushing-Flange	40	130-5726	2	Lanyard
18	125-9676	2	Washer-Backup	41	120-9471	2	Bolt-Shoulder

● Not serviced separately


RH Door Assembly

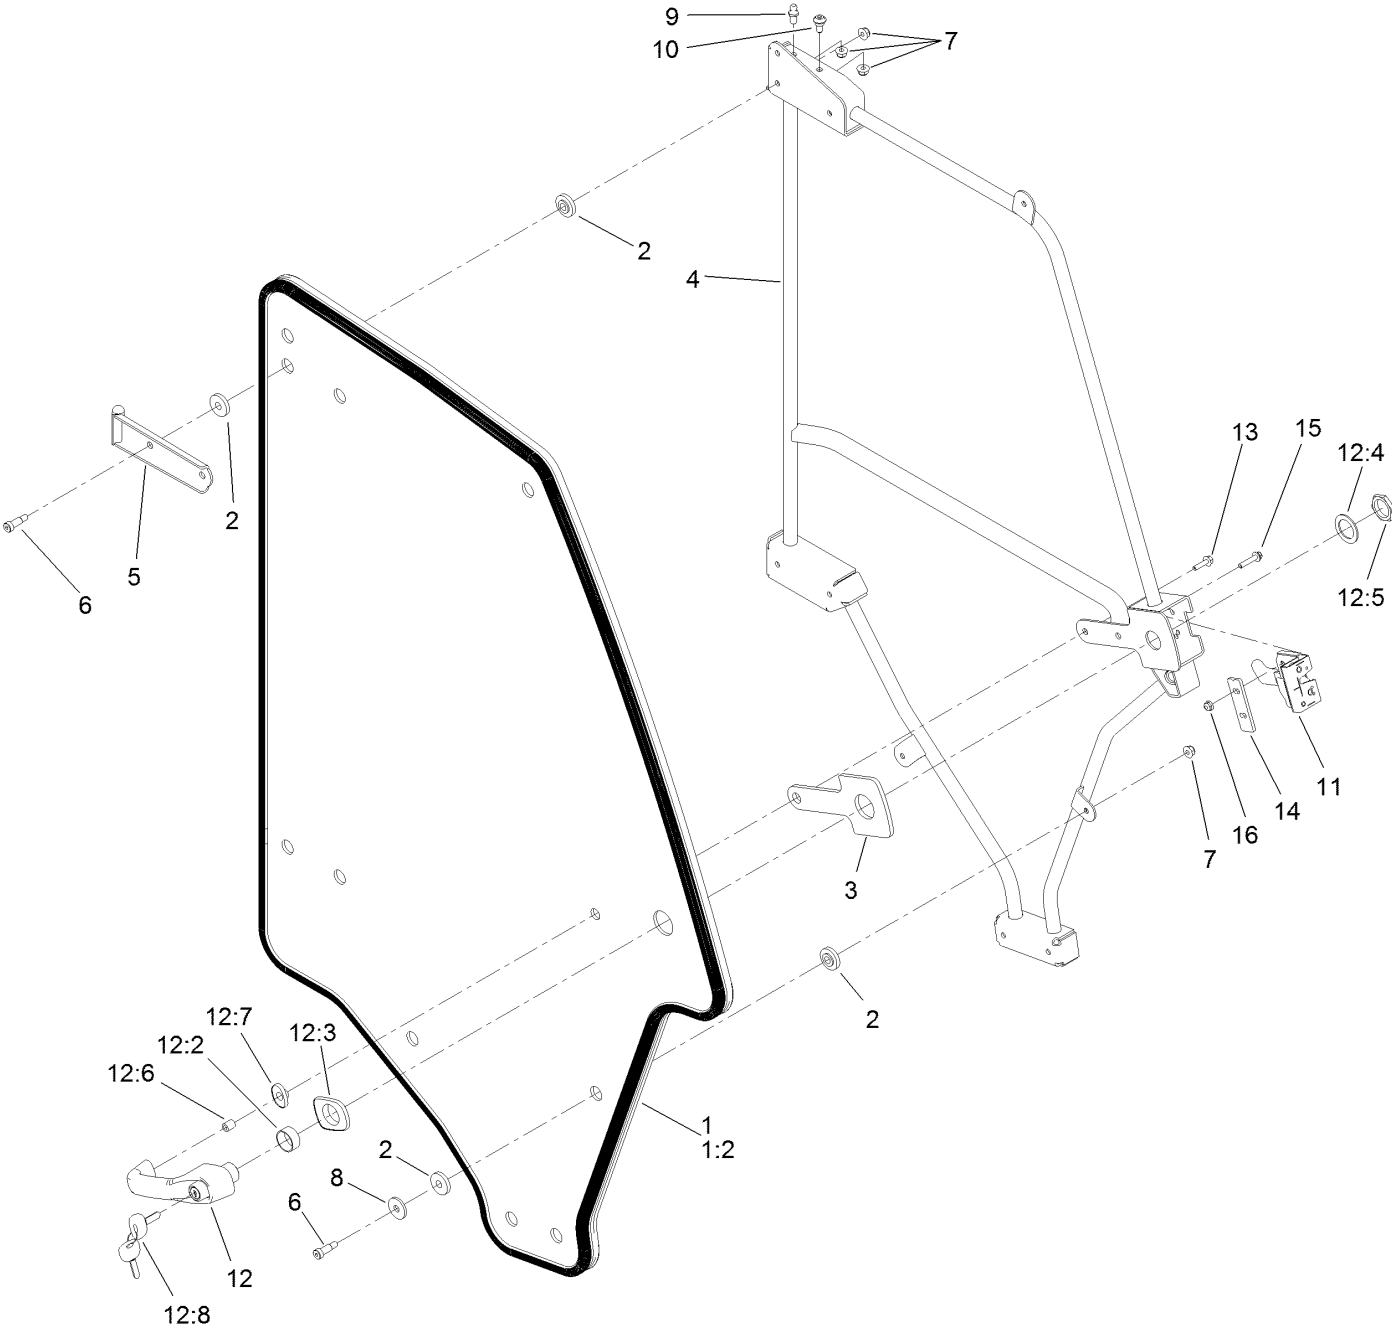

RH Door Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-6188	1	RH Door ASM	12	121-8630	1	Handle ASM
1:2	130-0362	1	Trim-Door	12:2	121-8628	1	Cylinder-Mounting, Key
2	125-9982	20	Bushing-Flange	12:3	121-8322	1	Grommet-Mounting, Large
3	121-8331	1	Gasket-Handle	12:4	121-8327	1	Washer
4	130-0367-03	1	Frame-Door, RH	12:5	121-8328	1	Nut
5	125-9618-03	2	Hinge-Door, RH	12:6	121-8627	1	Cylinder-Mounting, End
6	125-9520	10	Screw-Shoulder, HSH	12:7	121-8323	1	Grommet-Mounting, Small
7	104-8300	12	Nut-HF, NI	12:8	125-9531	1	Key-Set
8	125-9676	6	Washer-Backup	13	33103-025	1	Screw-HHF
9	98-3104	1	Stud-Ball	14	121-8395	1	Plate-Support, Latch
10	120-9471	1	Bolt-Shoulder	15	3234-21	2	Screw-HHF
11	121-8390	1	Latch-RH	16	104-7201	2	Nut-HF, NI


LH Door Assembly

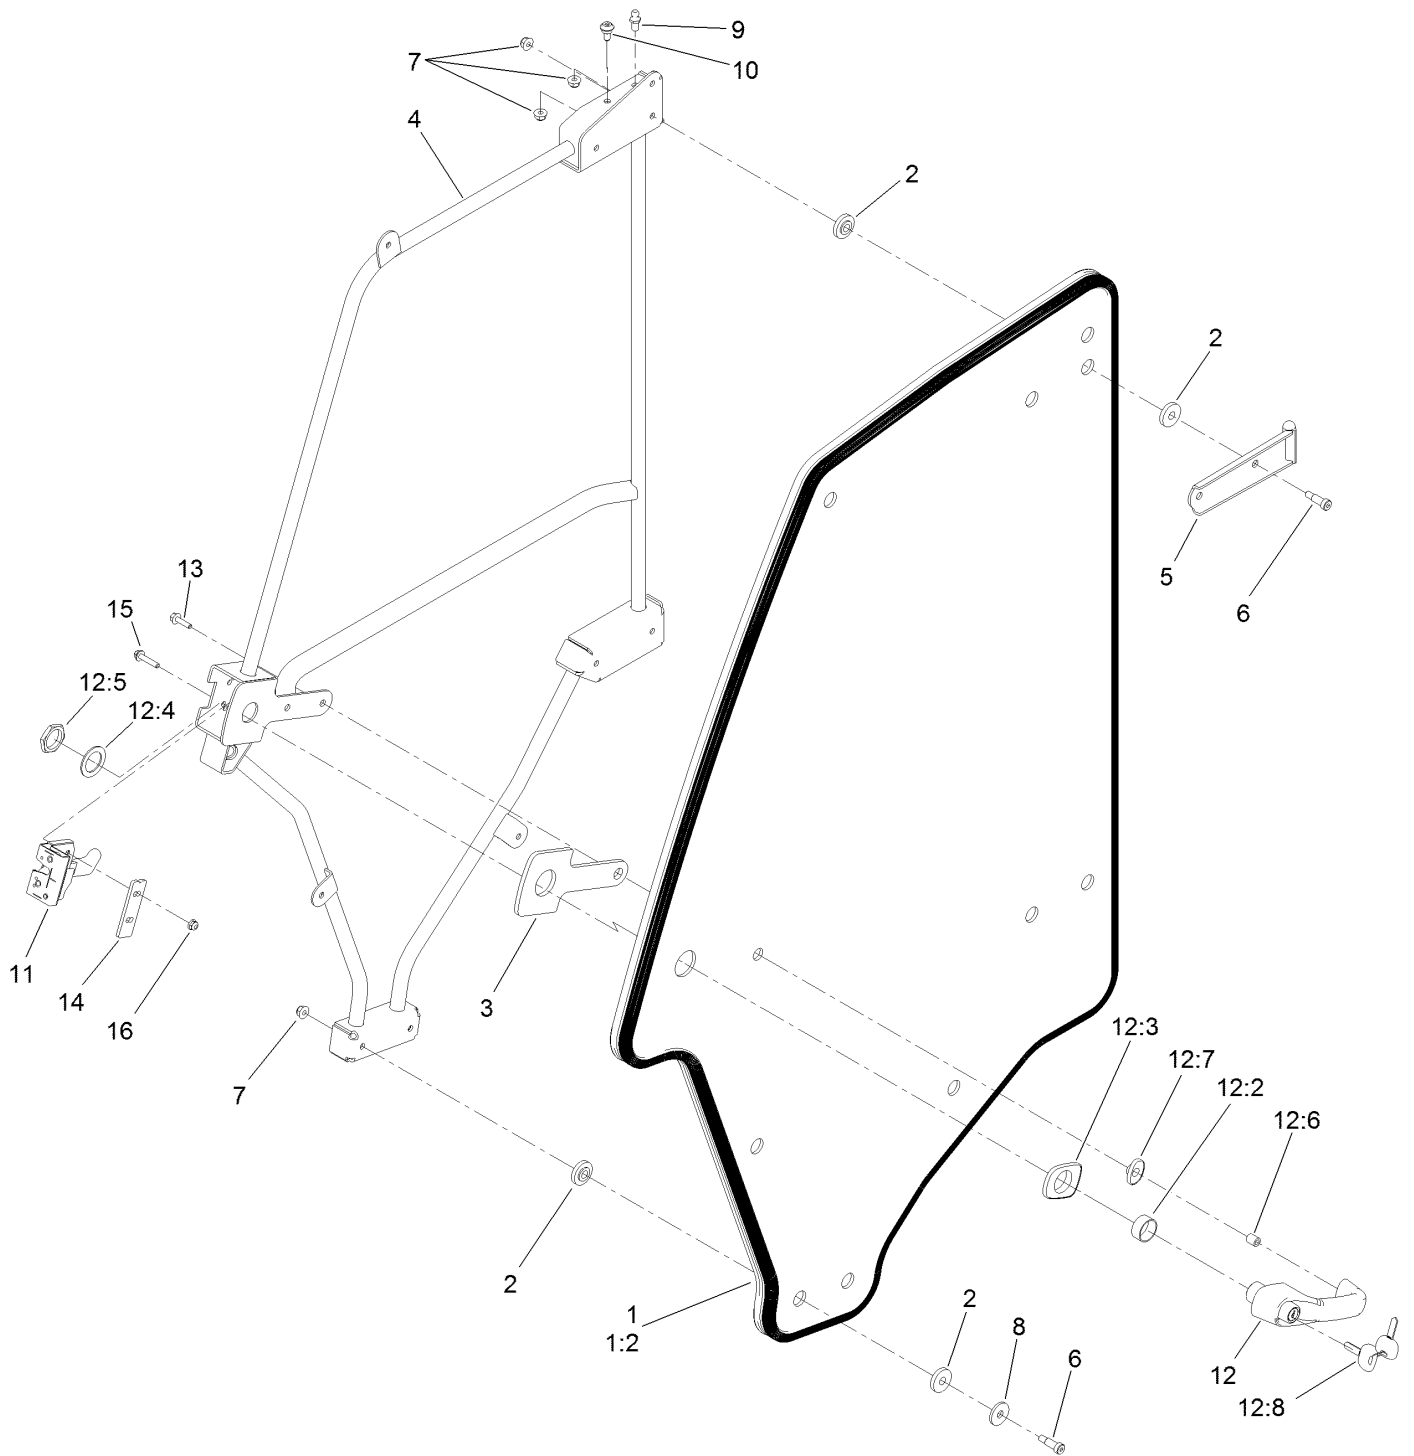

LH Door Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-6189	1	LH Door ASM	12	121-8630	1	Handle ASM
1:2	130-0362	1	Trim-Door	12:2	121-8628	1	Cylinder-Mounting, Key
2	125-9982	20	Bushing-Flange	12:3	121-8322	1	Grommet-Mounting, Large
3	121-8331	1	Gasket-Handle	12:4	121-8327	1	Washer
4	130-0368-03	1	Frame-Door, LH	12:5	121-8328	1	Nut
5	125-9619-03	2	Hinge-Door, LH	12:6	121-8627	1	Cylinder-Mounting, End
6	125-9520	10	Screw-Shoulder, HSH	12:7	121-8323	1	Grommet-Mounting, Small
7	104-8300	12	Nut-HF, NI	12:8	125-9531	1	Key-Set
8	125-9676	6	Washer-Backup	13	33103-025	1	Screw-HHF
9	98-3104	1	Stud-Ball	14	121-8395	1	Plate-Support, Latch
10	120-9471	1	Bolt-Shoulder	15	3234-21	2	Screw-HHF
11	121-8391	1	Latch-LH	16	104-7201	2	Nut-HF, NI

Rear Window Assembly

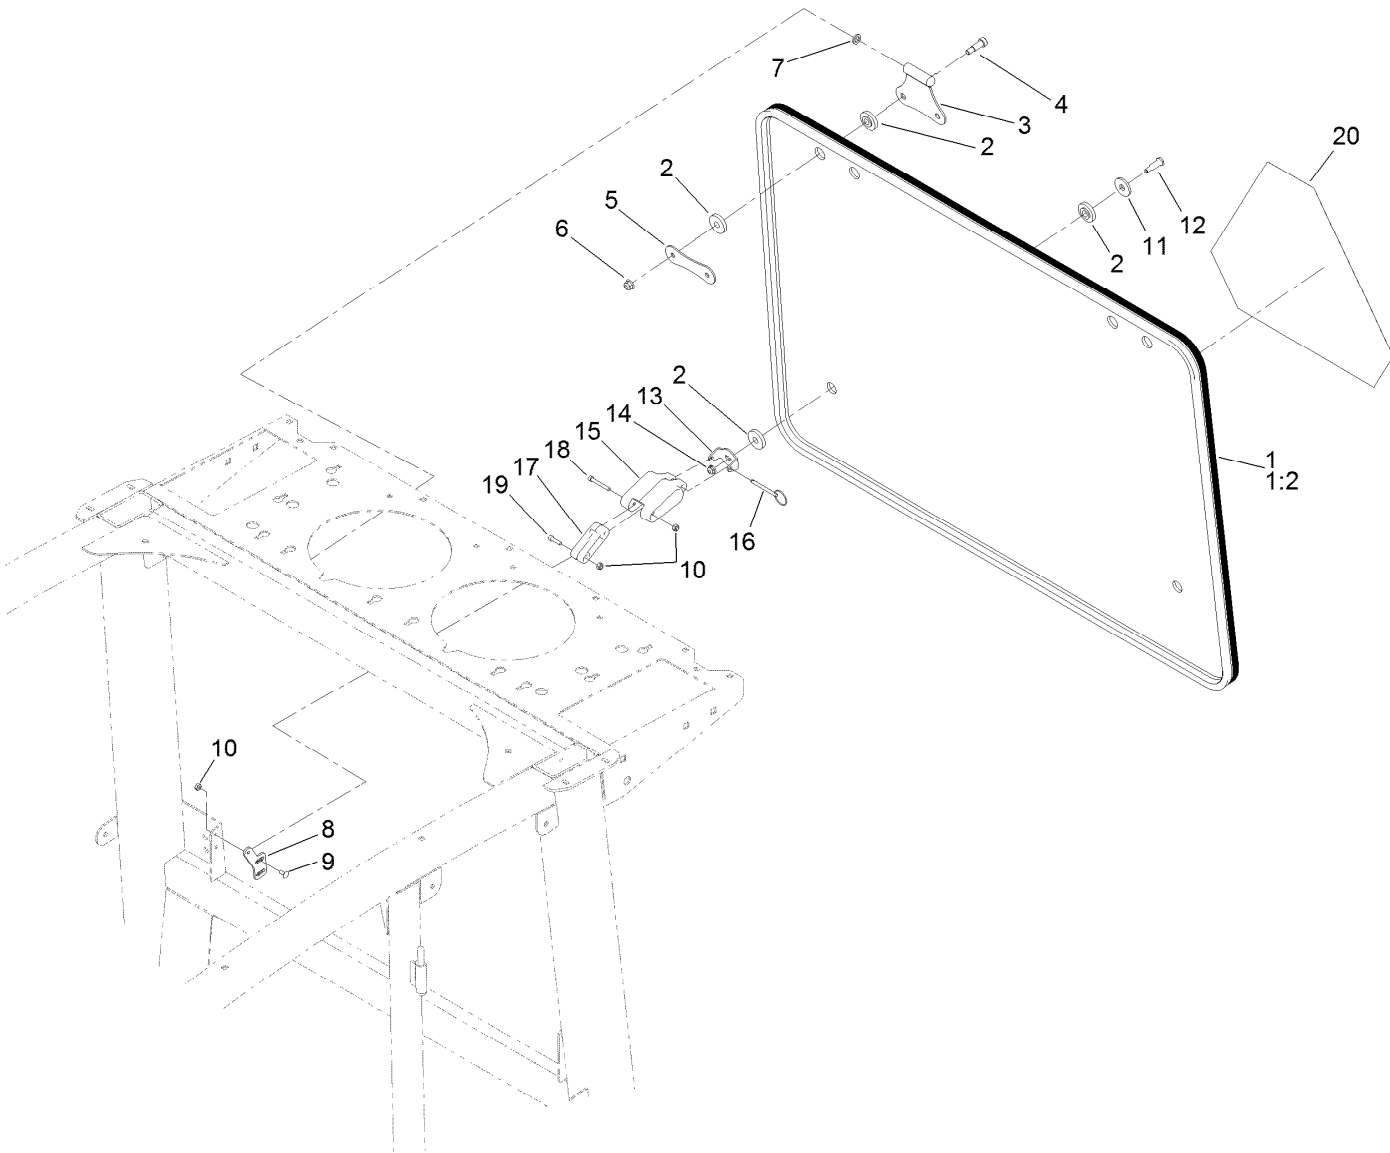

Rear Window Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-5682	1	Rear Window ASM	11	125-9676	2	Washer-Backup
1:2	130-0637	1	Seal-Trim	12	119-9812	2	Bolt-Shoulder
2	125-9982	12	Bushing-Flange	13	125-9987	2	Mount-Latch
3	121-8535-03	2	Hinge-Window	14	104-7201	2	Nut-HF, NI
4	125-9520	4	Screw-Shoulder, HSH	15	125-9792	2	Handle-Window
5	127-9933	2	Plate-Backer, Windshield	16	127-9850	2	Pin-Release, Quick
6	104-8300	4	Nut-HF, NI	17	125-9793	2	Link-Window
7	121-8441	2	Washer-Spacer	18	3274-59	2	Screw-HSH
8	130-0590	2	Mount-Tab	19	3274-14	2	Screw-HSH
9	1-807513	4	Bolt-CARR	20	120-0250	1	Decal-Warning
10	120-9681	8	Nut-Lock, NI				


This diagram illustrates the assembly of a vehicle chassis and engine. The chassis is shown in a dashed outline, and the engine is shown in a solid outline. Various components are labeled with numbers and alphanumeric codes:

- Chassis Components:** 11, 15, 3, 2, 10, 6, 1, 3, 3, 28, 18:1, 23, 22, 21, 20, 22, 19, 24, 18, 21, 27, 3, 27.
- Engine Components:** 12, 12, 25, 16, 17, 8, 8:2, 8:2:1, 8:2:2, 8:2:3, 7:3:1, 7:3:2, 7:3:3, 4:5, 4:4, 4:3, 4:3:1, 4:3:2, 4:2:1, 4:2, 4:2:2, 7:2:1, 7:2:2, 7:2, 8:3:1, 8:3:2, 8:3, 5:2:1, 5:2:2, 5:2, 5:3, 5:4, 5:2, 5:2:1, 5:2:2, 5:2:3, 5:2:4, 5:2:5, 5:2:6, 5:2:7, 5:2:8, 5:2:9, 5:2:10, 5:2:11, 5:2:12, 5:2:13, 5:2:14, 5:2:15, 5:2:16, 5:2:17, 5:2:18, 5:2:19, 5:2:20, 5:2:21, 5:2:22, 5:2:23, 5:2:24, 5:2:25, 5:2:26, 5:2:27, 5:2:28, 5:2:29, 5:2:30, 5:2:31, 5:2:32, 5:2:33, 5:2:34, 5:2:35, 5:2:36, 5:2:37, 5:2:38, 5:2:39, 5:2:40, 5:2:41, 5:2:42, 5:2:43, 5:2:44, 5:2:45, 5:2:46, 5:2:47, 5:2:48, 5:2:49, 5:2:50, 5:2:51, 5:2:52, 5:2:53, 5:2:54, 5:2:55, 5:2:56, 5:2:57, 5:2:58, 5:2:59, 5:2:60, 5:2:61, 5:2:62, 5:2:63, 5:2:64, 5:2:65, 5:2:66, 5:2:67, 5:2:68, 5:2:69, 5:2:70, 5:2:71, 5:2:72, 5:2:73, 5:2:74, 5:2:75, 5:2:76, 5:2:77, 5:2:78, 5:2:79, 5:2:80, 5:2:81, 5:2:82, 5:2:83, 5:2:84, 5:2:85, 5:2:86, 5:2:87, 5:2:88, 5:2:89, 5:2:90, 5:2:91, 5:2:92, 5:2:93, 5:2:94, 5:2:95, 5:2:96, 5:2:97, 5:2:98, 5:2:99, 5:2:100.

Washer Bottle, Air-Conditioner Hose and Heater Hose Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	120-4947	1	Valve-Heater	8:2	130-5755	1	Fitting-Female, Straight
2	130-0578	2	Fitting-Barb, 90 DEG	8:2:1	130-5775	1	Fitting Kit
3	2412-129	6	Clamp-Hose	8:2:2	117-2780	1	O-Ring
4	125-9702	1	Hose ASM	8:2:3	117-2784	1	Cap-Side, Low
4:2	130-5753	1	Fitting-45 DEG	8:3	130-5754	1	Fitting-Male, 45 DEG
4:2:1	130-5772	1	Fitting Kit	8:3:1	130-5775	1	Fitting Kit
4:2:2	117-2778	1	O-Ring	8:3:2	117-2780	1	O-Ring
4:3	130-5751	1	Fitting-Female, 90 DEG	8:4	130-5959	1	Cover-Foam
4:3:1	130-5772	1	Fitting Kit	8:5	3290-378	8	Tie-Cable
4:3:2	117-2778	1	O-Ring	9	125-9865	2	Hose-Drain
4:4	130-5958	1	Cover-Foam	10	125-9866	2	Hose-Drain
4:5	3290-378	8	Tie-Cable	11	127-9901	1	Hose-Washer Fluid
5	125-9703	1	Hose ASM	12	2412-39	2	Clamp-R
5:2	130-5751	2	Fitting-Female, 90 DEG	15	127-9905	1	Fitting-Hose, Barb
5:2:1	130-5772	1	Fitting Kit	16	117-2779	2	O-Ring
5:2:2	117-2778	1	O-Ring	17	117-2780	1	O-Ring
5:3	130-5958	1	Cover-Foam	18	125-5257	1	Tank-Fluid, Washer
5:4	3290-378	8	Tie-Cable	18:1	125-5258	1	Lid-Tank, Washer Fluid
6	125-9706	1	Hose-Heater	19	132-3268-03	1	Mount-Washer Bottle
7	132-3333	1	Hose ASM	20	132-3269-03	1	Plate-Bottle
7:2	130-5752	1	Fitting-Female, 90 DEG	21	3230-23	4	Bolt-CARR
7:2:1	130-5773	1	Fitting Kit	22	104-8300	4	Nut-HF, NI
7:2:2	117-2778	1	O-Ring	23	2412-74	1	R-Clamp
7:3	130-5757	1	Fitting-Straight, Female	24	74-5950	1	Latch-Swell
7:3:1	130-5773	1	Fitting Kit	25	119-0129	1	Fitting-Elbow, 90 DEG
7:3:2	117-2779	1	O-Ring	26	119-0128	1	Fitting-Elbow, 90 DEG
7:3:3	117-2783	1	Cap-Side, High	27	117-9410	1	Fitting-Straight
8	125-9862	1	Hose ASM	28	132-3347	2	Hose-Heater

Mixing Box and Vent Hose Assembly

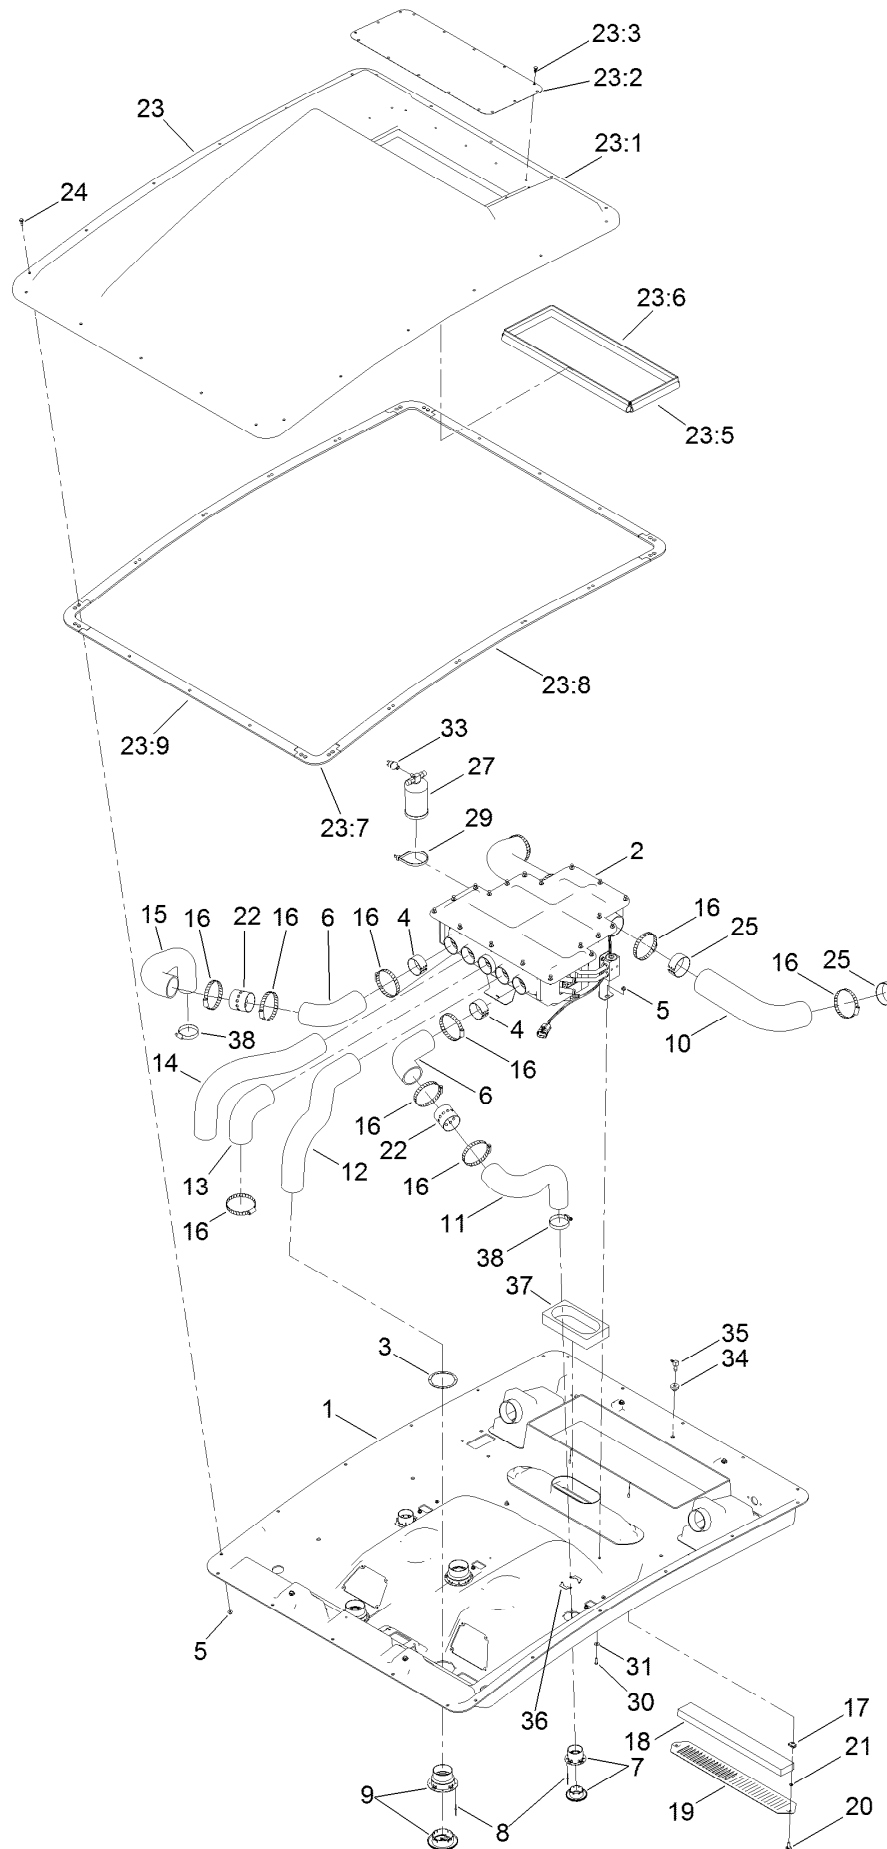


Mixing Box and Vent Hose Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-8470	1	Headliner	22	130-5927	2	Adapter-Bleed
2	121-8495	1	Box-Mixing, Heater A/C	23		1	Roof ASM ●
3	130-0558	3	Backplate-Rivet	23:1	125-9607	1	Roof
4	130-5938	2	Tube-Support	23:2	121-8472-03	1	Screen-Roof
5	104-7201	24	Nut-HF, NI	23:3	114-4899	16	Rivet-Push
6	130-5860	2	Hose-Vent	23:5	130-5865	2	Trim-Seal, Bulb
7	130-0455	2	Louver-Round, Snap-In	23:6	130-5864	2	Trim-Seal, Bulb
8	125-7503	20	Rivet-Pop	23:7	130-5961	4	Seal-Corner
9	130-0465	3	Louver-Round, Snap-In (4 Inch)	23:8	130-5960	2	Seal-Side
10	121-8473	2	Hose-Intake, Fresh Air	23:9	130-5962	2	Seal-Front, Rear
11	130-5861	1	Hose-Vent, Outer (LH)	24	119-4161	22	Bolt-Shoulder
12	121-8477	1	Hose-Vent, Defrost (LH)	25	130-5939	4	Tube-Support
13	130-0437	1	Hose-Vent, Center	27	130-5999	1	Drier-Receiver
14	121-8478	1	Hose-Vent, Defrost (RH)	29	3334-945	2	Tie-Cable
15	130-5862	1	Hose-Vent, Outer (RH)	30	3274-69	2	Screw-HSBH
16	2412-110	11	Clamp-Band/Screw	31	3256-1	2	Washer-Flat
17	107069	2	Clip	33	119-4501	1	Switch-Function, Dual
18	125-9532	1	Filter-Cab, Inside	34	46-6560	1	Bushing
19	125-9604-03	1	Plate-Cover, Recirculation	35	104-5228	1	Fitting-Elbow, 90 DEG
20	125-7438	2	Knob-Screw, Thumb	36	130-0445	4	Backplate-Rivet
21	106-8737	2	Nut-Retainer	37	130-0444	1	Foam-Inlet, Airbox
				38	2412-130	2	Clamp-Hose

● Not serviced separately


Headliner Wire Harness and Control Assembly

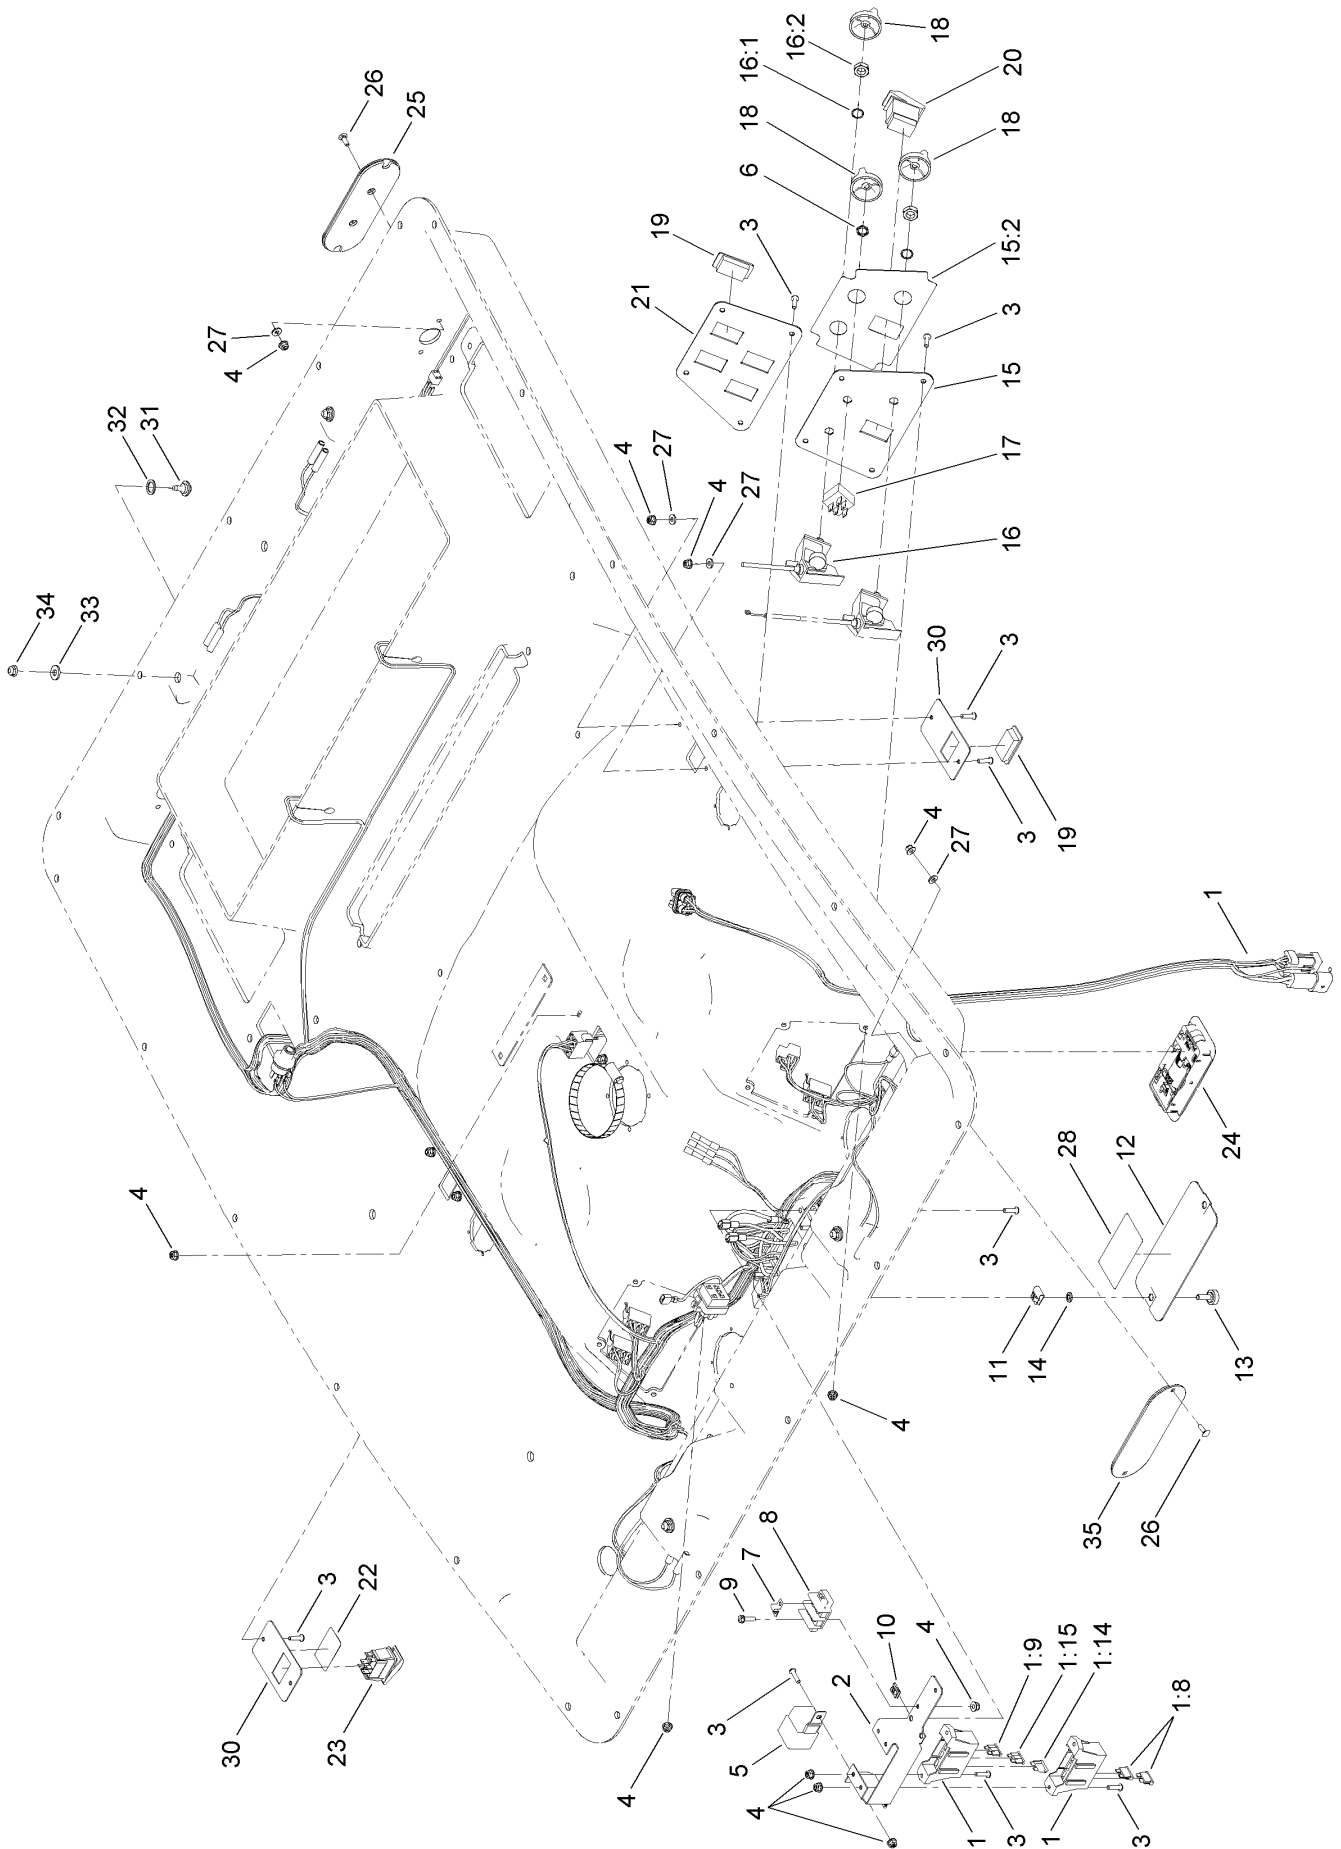

Headliner Wire Harness and Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-4387	1	Harness-Wire, Headliner	16:1	3254-20	1	Washer-Lock, Int
1:8	109355	2	Fuse-Blade, 15 Amp	16:2	3220-4	1	Nut-Jam
1:9	109103	1	Fuse-Blade, 30 Amp	17	122-0150	1	Switch, Rotary
1:14	109101	1	Fuse-Blade, 20 Amp	18	125-9510	3	Knob-Control
1:15	109102	1	Fuse-Blade, 25 Amp	19	99-7420	6	Plug-Hole
2	125-9606-03	1	Bracket-Fuse Block	20	95-8999	1	Switch-Rocker, On-None-On
3	104-2408	23	Screw-HSBH	21	125-9691-03	1	Panel-Switch, Lights
4	120-4578	29	Nut-HF	22	125-9688	1	Decal-Washer
5	99-7430	1	Relay-Mini	23	119-8355	1	Switch-Rocker
6	130-0588	1	Nut-Switch	24	125-7437	1	Light-Dome
7	42863	1	Strip-Jumper	25	130-5867	2	Cover-Light, Rear
8	42862	1	Block-Terminal, Ground	26	3229-34	8	Screw-CARR
9	32105-13	2	Screw-HWH	27	3256-14	14	Washer-Flat
10	107-1013	4	Nut-Speed	28	130-0458	1	Decal-Panel, Fuse
11	609900	2	Nut-Speed	30	130-0436	3	Panel-Switch
12	125-9603-03	1	Plate-Cover, Fuse	31	92-9698	4	Screw-Shoulder
13	125-7438	2	Knob-Screw, Thumb	32	94-8196	4	Washer-Nylon
14	106-8737	2	Nut-Retainer	33	3256-2	4	Washer-Flat
15	121-8481	1	Panel-Air/Heat	34	104-7201	4	Nut-HF, NI
15:2	121-8378	1	Decal, Air/Heat	35	130-5868	2	Cover-Light, Front
16	125-9677	1	Control-Rotary, Linear				


Mixing Box Mounting Bracket and Water Tray Assembly

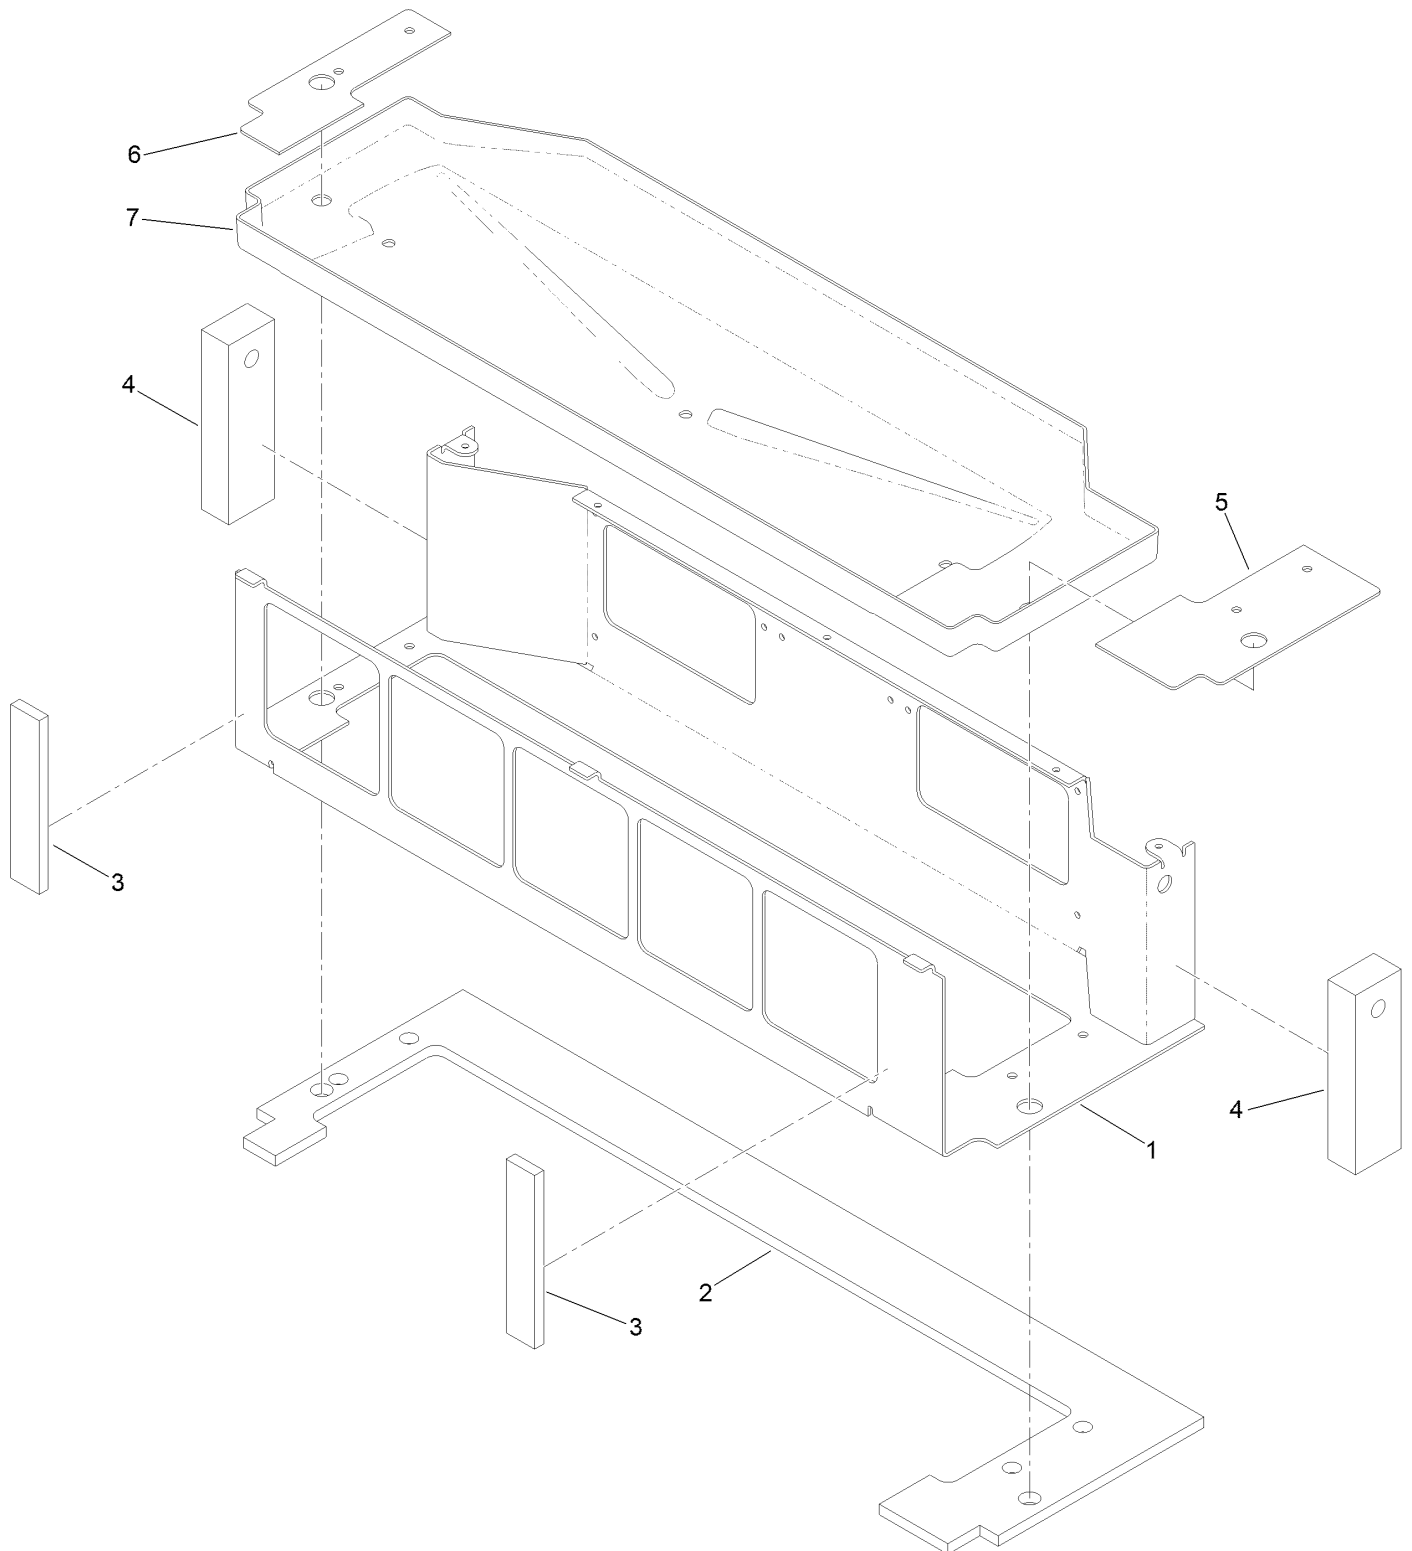

Mixing Box Mounting Bracket and Water Tray Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-5655-03	1	Bracket-Mount	5	130-5653	1	Gasket-Mount, LH Bracket
2	130-5659	1	Seal-Foam	6	130-5654	1	Gasket-Mount, RH Bracket
3	130-5808	2	Seal-Foam, Front	7	130-5660	1	Tray-Water
4	130-0602	2	Seal-End				

Blower Fan and Evaporator Core Assembly

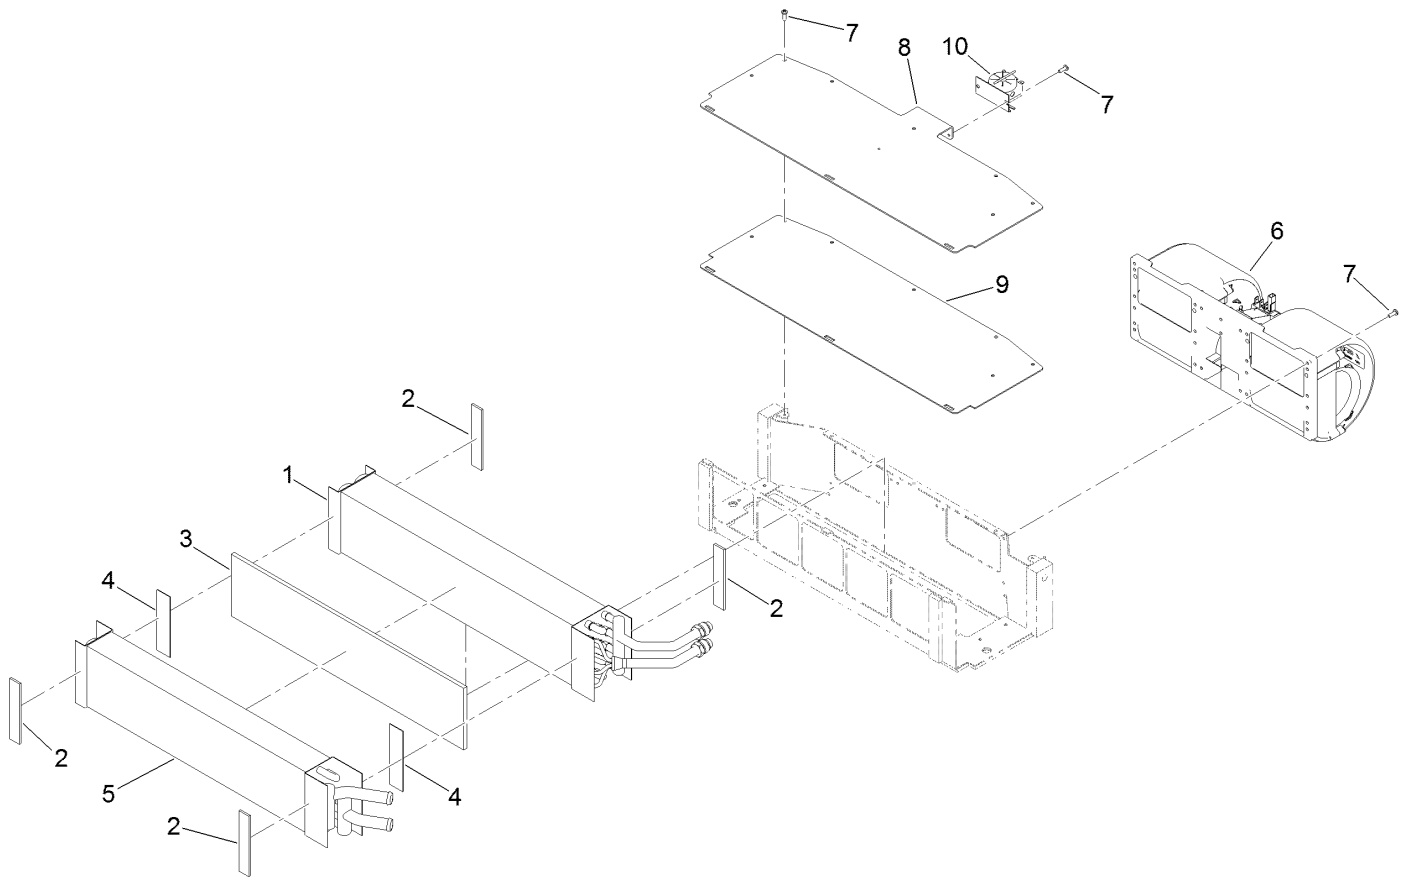


Blower Fan and Evaporator Core Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-5392	1	Core-Evaporator
2	130-5658	4	Gasket-Coil
3	130-5807	1	Foam
4	130-5806	2	Tape, Double-Sided
5	127-9915	1	Core-Heater
6	121-8451	1	Fan-Blower

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
7	363-8245	13	Screw-TAP
8	130-5656-03	1	Cover, Bracket-Mount
9	130-5652	1	Gasket-Mount, Cover Bracket
10	121-8385	1	Thermostat-Switch, Freeze


Heat / Air Conditioner Housing Assembly

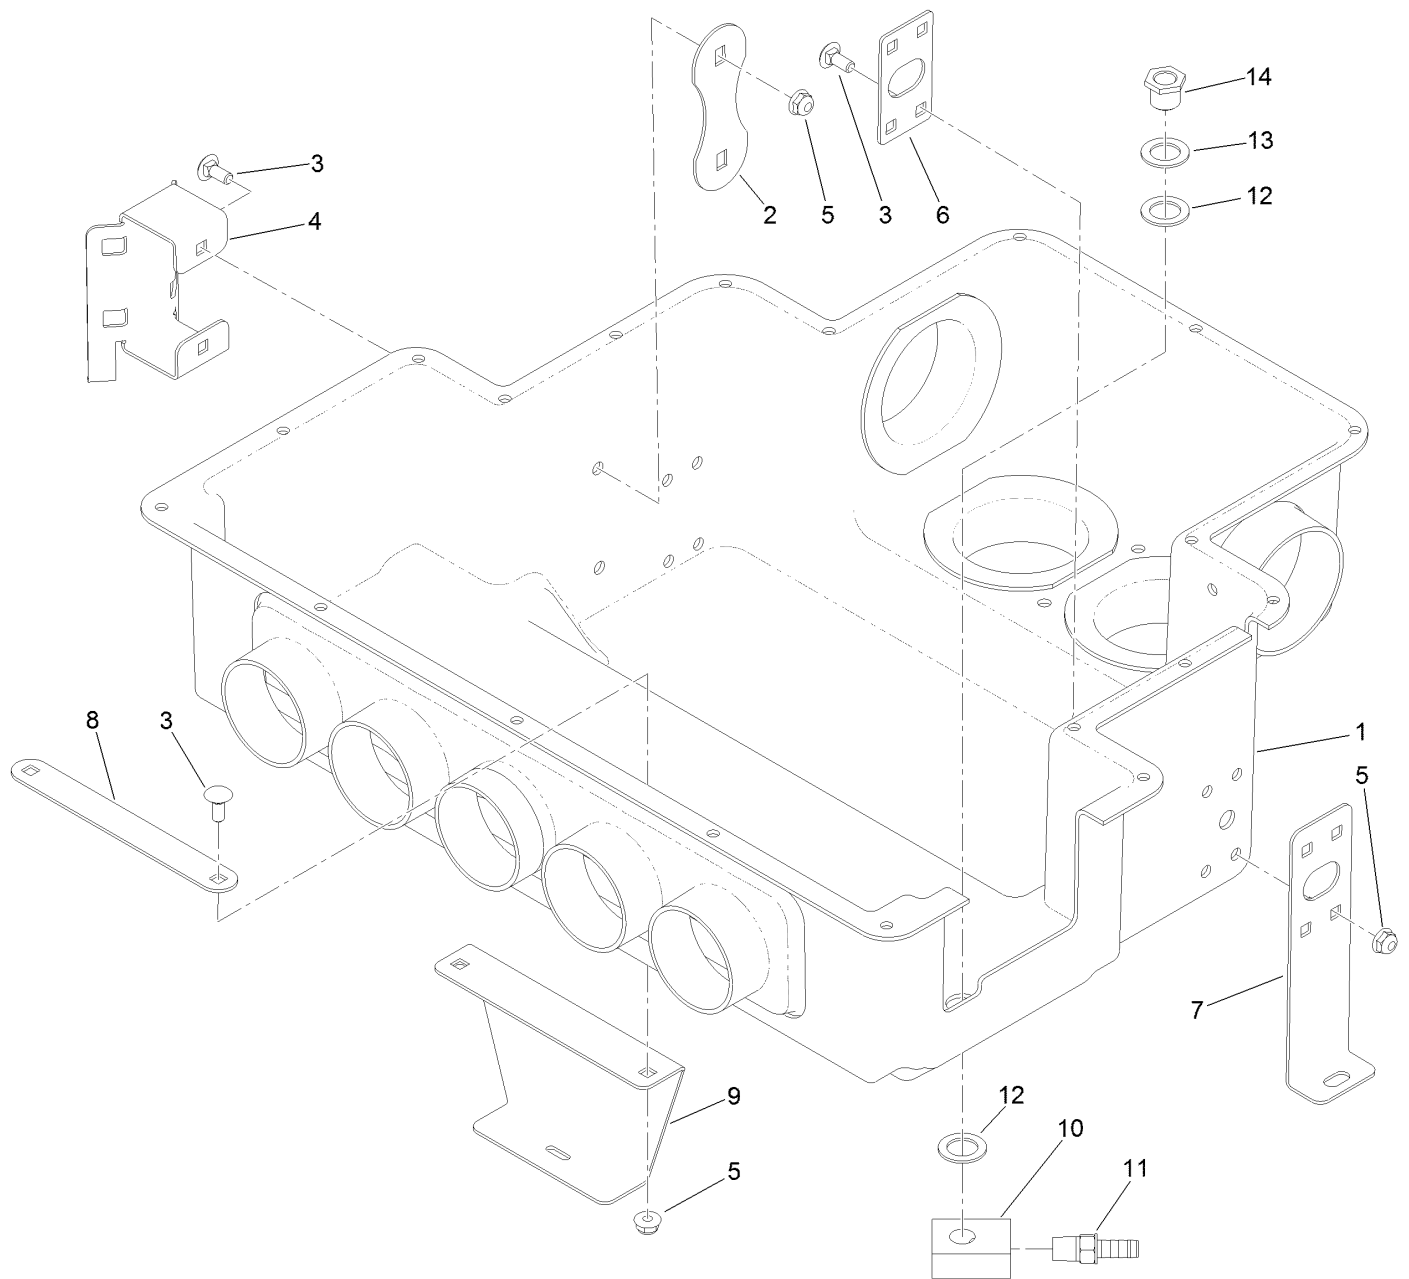

Heat / Air Conditioner Housing Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-5830	1	Housing-Heat/AC	8	125-7504	1	Plate-Backer, Center
2	121-8491	1	Plate-Support	9	130-0554	1	Bracket-Airbox, Center
3	3229-11	12	Screw-CARR	10	130-5601	2	Drain-Lower
4	121-8490	1	Bracket-Mount, Drier	11	108-0342	2	Fitting-Straight
5	104-7201	12	Nut-HF, NI	12	121-6840	4	Washer-Rubber
6	130-5834	2	Bracket-Support	13	107-3041	2	Washer-Flat
7	130-5821	2	Bracket-Airbox, Side	14	130-0293	2	Drain-Upper


Air Diverter and Expansion Valve Assembly

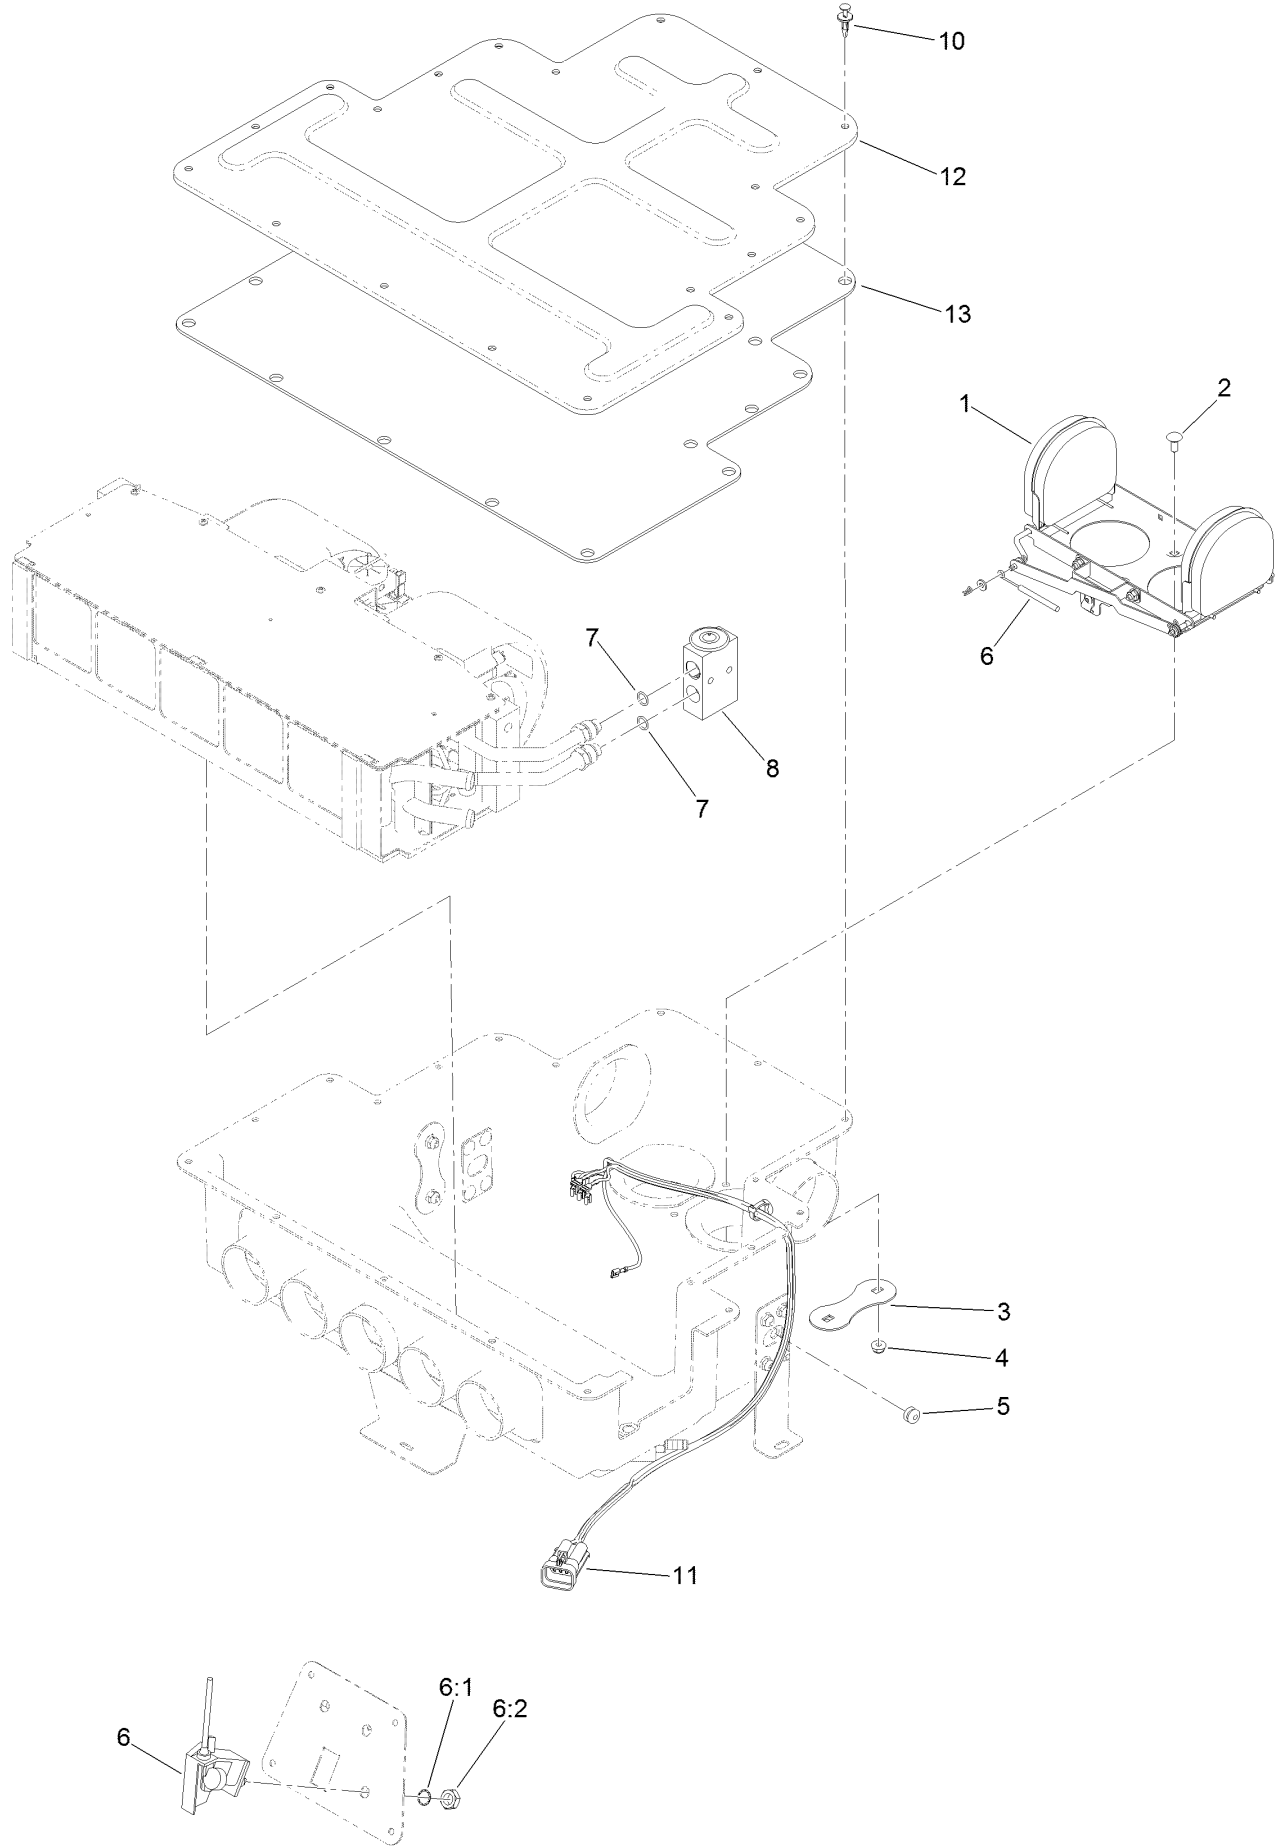

Air Diverter and Expansion Valve Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-8369	1	Air Diverter ASM	7	125-9524	2	O-Ring
2	3229-11	2	Screw-CARR	8	121-8384	1	Valve-Expansion
3	121-8491	1	Plate-Support	10	125-9622	19	Rivet-Blind
4	104-7201	2	Nut-HF, NI	11	122-0153	1	Harness-Wire, Heat/AC Blower
5	125-7528	1	Grommet-Cable	12	121-8449	1	Housing-Ventilation, Upper
6	125-9678	1	Control-Rotary, Linear	13	130-5614	1	Insulation-Cover
6:1	3254-20	1	Washer-Lock, Int				
6:2	3220-4	1	Nut-Jam				

Air Diverter Assembly No. 121-8369

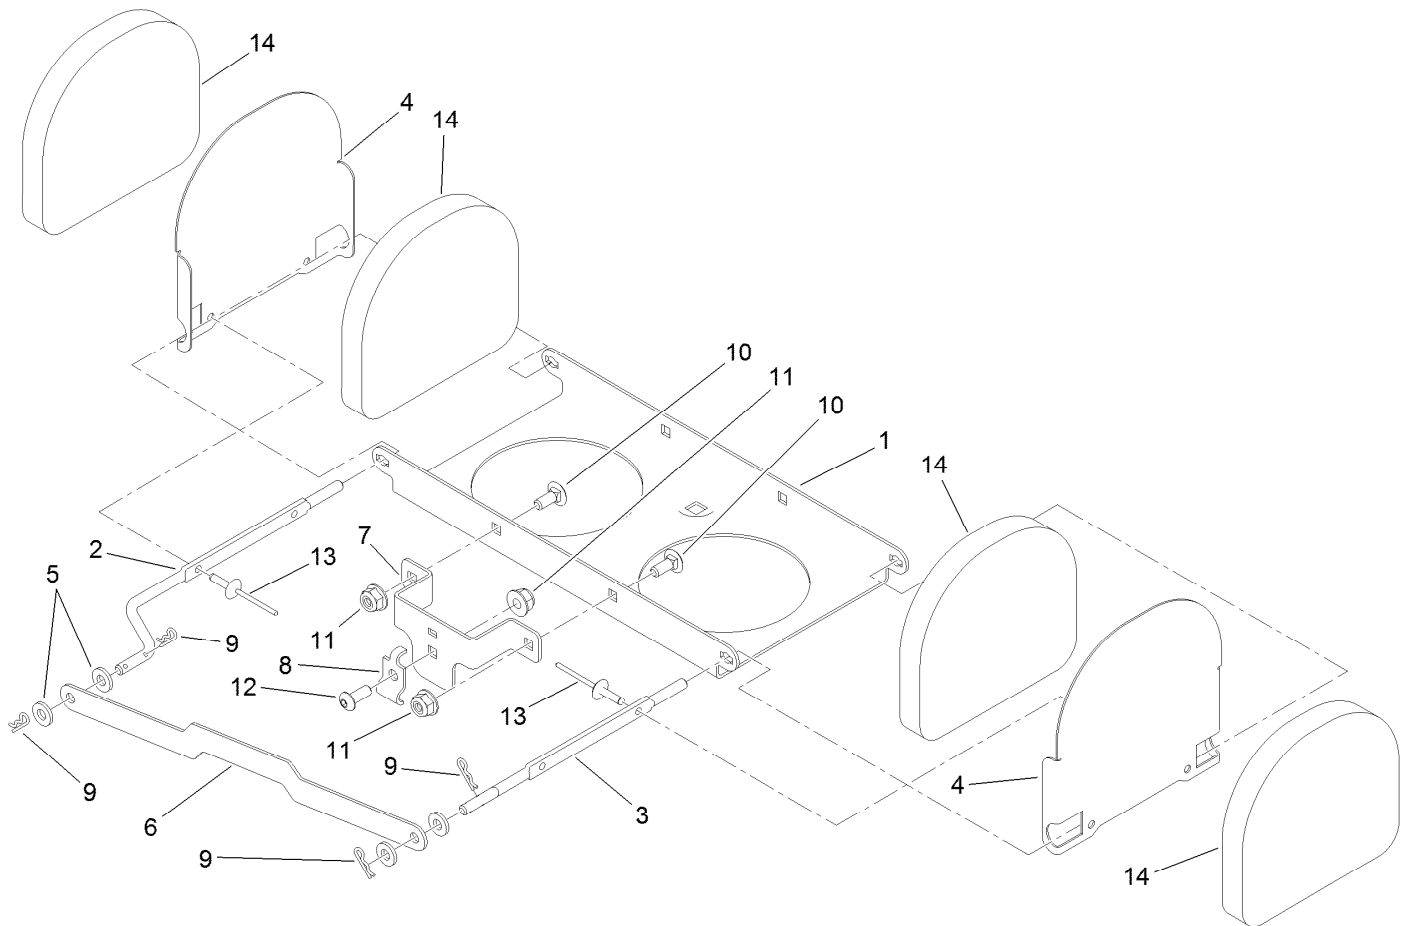

Air Diverter Assembly No. 121-8369 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-9697	1	Base-Mount	8	121-8256	1	Clamp-Conduit
2	121-8381	1	Shaft-Baffle, RH	9	108-2992	4	Pin-Hair
3	121-8382	1	Shaft-Baffle, LH	10	1-807513	2	Bolt-CARR
4	125-9698	2	Baffle-Air	11	120-4578	3	Nut-HF
5	3256-51	4	Washer-Flat	12	115-9830	1	Screw-HSBH
6	125-9696	1	Link-Baffle	13	3290-271	4	Rivet-Pop
7	121-8374	1	Mount-Cable	14	125-9699	4	Damper-Foam



Count on it.