



MODEL NO. 41105-50001 & UP

PARTS
MANUALMULTI-PRO™ 1100
VEHICLE

SAFETY AND INSTRUCTION DECALS

The following safety and instruction decals are installed on the Multi-Pro 1100™. If any become damaged or illegible, replace them. Decals and part numbers are listed below. Order replacements from your Authorized Toro Distributor.

WARNING

FAILURE TO OBEY THE SAFETY WARNINGS MAY RESULT IN INJURY TO YOU OR OTHERS.

THIS VEHICLE IS OF SUFFICIENT SIZE AND WEIGHT TO CAUSE SERIOUS INJURY IN CASE OF UPSET OR COLLISION.

WHILE OPERATING VEHICLE:

- READ AND UNDERSTAND OPERATOR'S MANUAL LOCATED BEHIND SEAT.
- DO NOT EXCEED PAYLOAD CAPACITY OF VEHICLE AND OR TORO ACCESSORIES OR PERMIT PASSENGER ANY PLACE ON VEHICLE EXCEPT SEAT.
- USE HAND HOLDS WHERE APPLICABLE.
- PLACE HEAVY LOADS FORWARD OF REAR AXLE. UNBALANCED OR TOP HEAVY LOADS CAN CAUSE UPSET.

WHILE OPERATING VEHICLE:

- REMAIN SEATED AND USE BOTH HANDS FOR STEERING.
- KEEP ARMS AND LEGS WITHIN VEHICLE BODY.
- AVOID SUDDEN STARTS AND STOPS.
- SUDDEN SHARP TURNS CAN CAUSE UPSET.
- REGULATE SPEED TO MEET ROAD AND WEATHER CONDITIONS.
- DO NOT OPERATE IN OR NEAR AN EXPLOSIVE ENVIRONMENT.
- IF A MALFUNCTION OCCURS, CEASE OPERATION. DO NOT OPERATE VEHICLE UNTIL CONDITION IS CORRECTED.

BEFORE LEAVING VEHICLE:

- TURN IGNITION TO "OFF" POSITION. REMOVE KEY.
- APPLY PARKING BRAKE. PARKING BRAKE IS NOT AUTOMATICALLY APPLIED.

87-0580

Part No. 87-0580: Located on Floor Board, behind Console.

CAUTION

• TO AVOID PERSONAL INJURY KEEP ALL SHIELDS IN PLACE.

• DISENGAGE AND SHUT OFF ENGINE BEFORE SERVICING OR UNCLOGGING MACHINE.

• KEEP HANDS, FEET AND CLOTHING AWAY FROM POWER-DRIVEN PARTS.

87-0450

Part No. 87-0450: Located on underside of Seat Panel.



Part No. 41176:
Located on Dash Panel, next to Ignition Switch.

IMPORTANT

HYDRAULIC FLUID ONLY

USE 10W40 MOTOR OIL WHICH MEETS API SERVICES SG, SF/CD SPECIFICATIONS.

87-0500

Part No. 87-0500: Located on top of Steering Pump Reservoir.

WARNING

AVOID POSSIBLE INJURY OR DEATH FROM A MACHINE RUNAWAY.

- DO NOT START ENGINE BY SHORTING ACROSS STARTER TERMINALS. MACHINE WILL START IN GEAR AND MOVE IF NORMAL STARTING CIRCUITRY IS BYPASSED.
- START ENGINE ONLY FROM OPERATOR'S SEAT WITH TRANSMISSION IN NEUTRAL OR PARK.
- NEVER START ENGINE WHILE STANDING NEXT TO MACHINE.


87-0430

Part No. 87-0430: Located left hand side of Seat Support.

READ YOUR OPERATOR'S MANUAL FOR OPERATING AND SAFETY INSTRUCTIONS. TO GET A REPLACEMENT MANUAL, SEND MODEL AND SERIAL NUMBERS TO: THE TORO CO., 8111 LYNDALE AVE. S., MPLS., MN 55420

65-3090

Part No. 65-3090: Located upper right corner of Dash Panel.

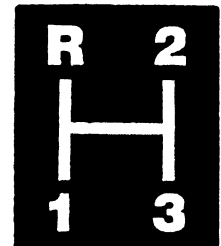


Part No. 41173: Located right hand side of Seat Support, in front of Gear Shifter.



Part No. 87-0640: Located on Seat Support, next to Throttle.



#66-6140 Located on Console Front.

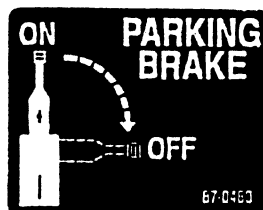


Part No. 87-0480: Located on Floor Board, at right of Emergency Brake.



Part No. 41174: Located top of Seat Support, near Accessory Control Handle.



#87-0630 Located on Console Front.

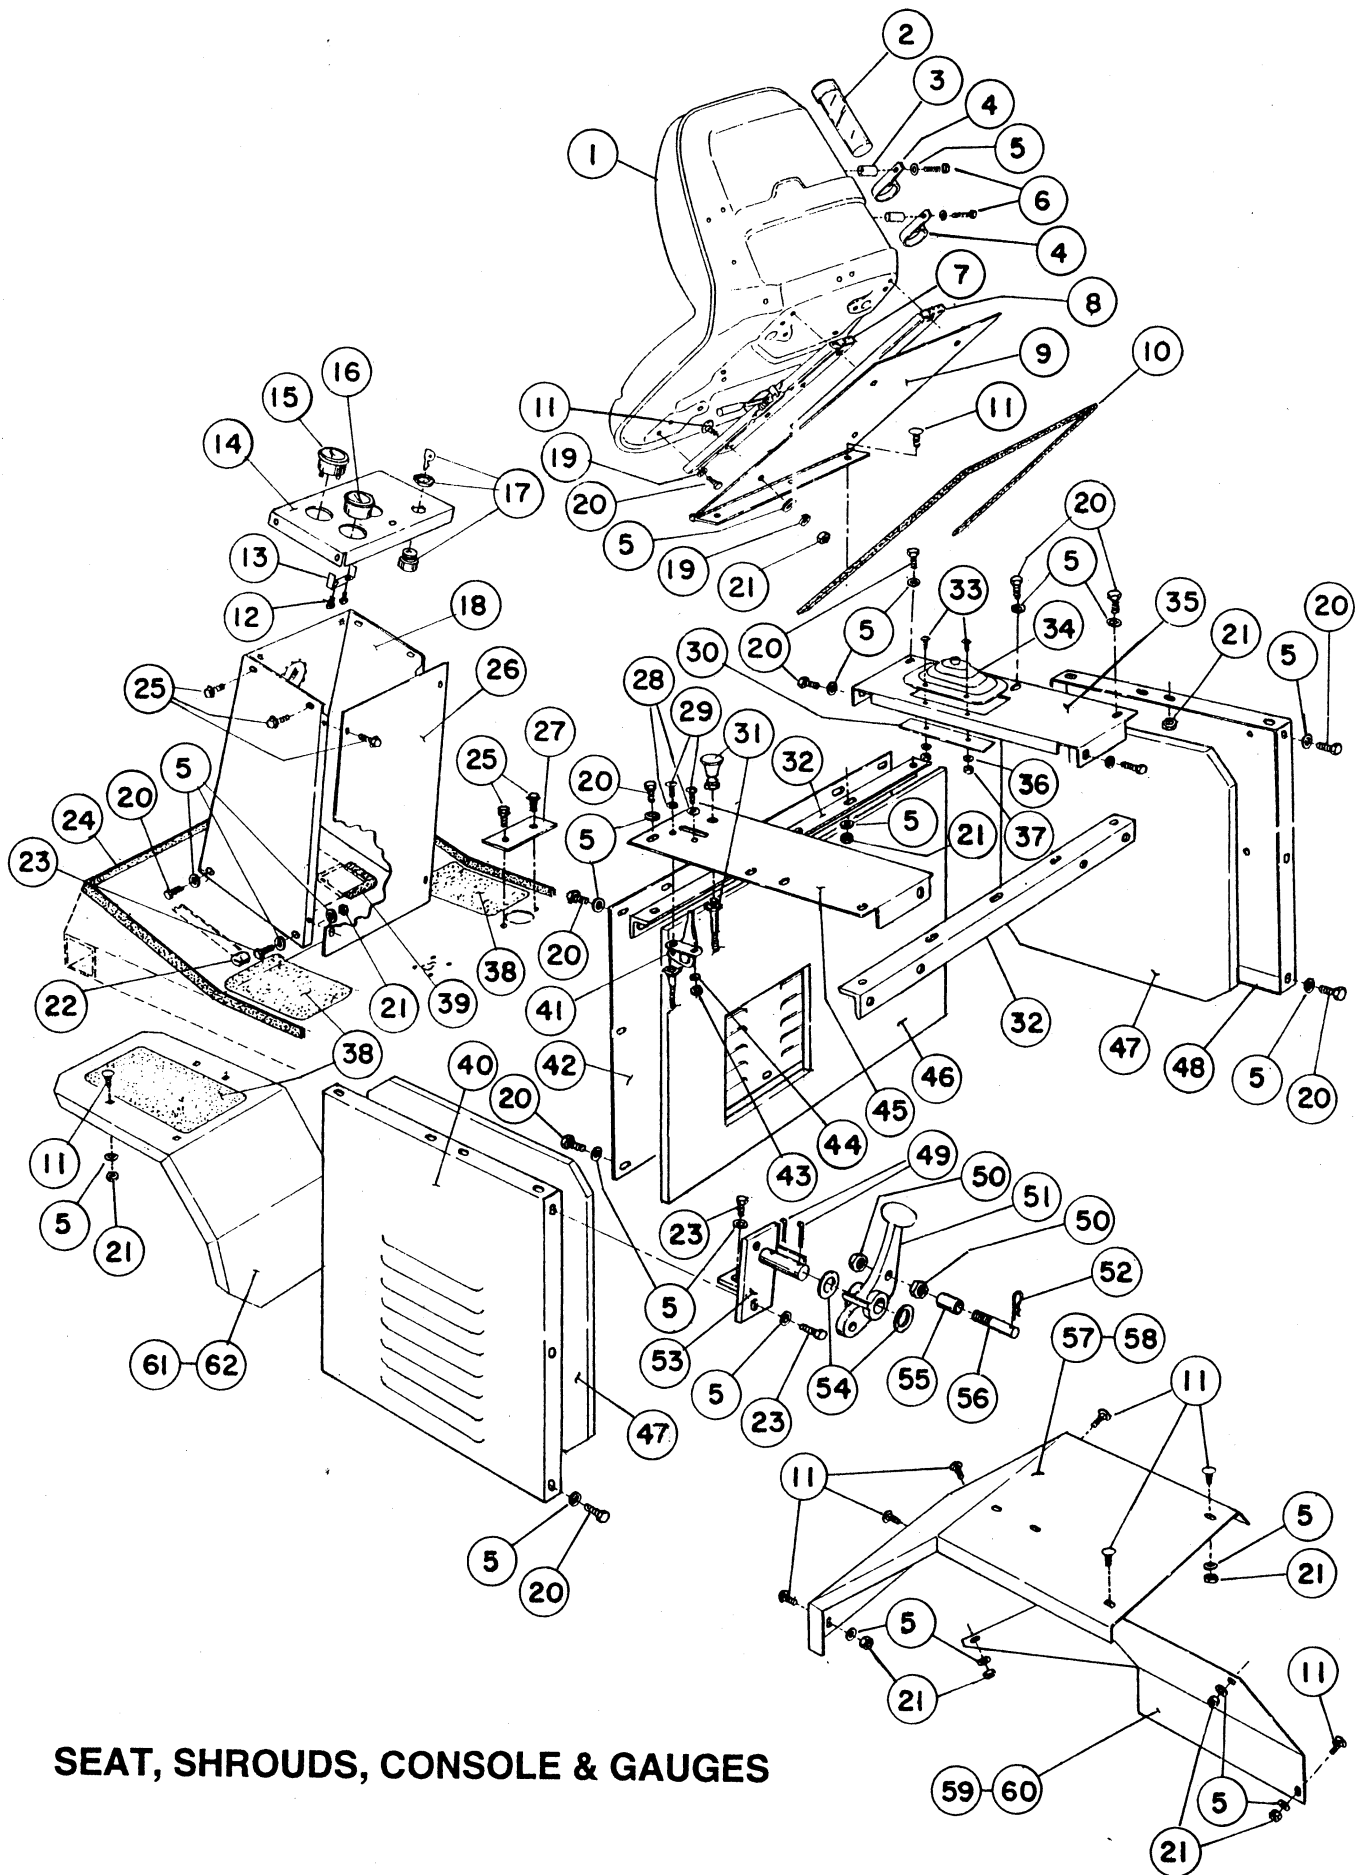

SEAT, SHROUDS, CONSOLE & GAUGES

SEAT, SHROUDS, CONSOLE & GAUGES

1100 VEHICLE


Ref	Part No.	Description	Qty
1	92-1180	Seat Assembly	1
2	42559	Storage Tube - Manuals	1
3	92-3973	Spacer	2
4	42560	Tube Mounting Bracket	2
5	24-10-BD	Flat Washer, 5/16	68
6	20-28-AGD	HHCS, 5/16 NC x 1-1/2	2
7	80-4260	Latch & Slide Seat Adjuster - L.H.	1
8	80-4250	Slide Seat Adjuster - R.H.	1
9	41686	Seat Panel Assembly	1
10	41689	Seat Trim	1
11	25-25-AGD	Carriage Bolt, 5/16 NC x 3/4"	29
12	34-94-AMVD	Hex Washer Hd. Self-Tap Screw, #10 x 3/8"	2
13	41116	Mtg Bracket - Amp Gauge	1
14	92-3500	Dash Panel Assembly	1
15	66-2950	Hour Meter	1
16	41115	Amp Gauge	1
17	31872	Key Switch & Key	1
18	92-0484	Console Wrapper Assembly	1
19	23-10-GD	Lock Washer, 5/16	8
20	20-24-AGD	HHCS, 5/16 NC x 3/4"	28
21	22-12-AJD	Hex Nut, 5/16 NC	39
22	41754	Rubber Pedal Stop	2
23	20-26-AGD	HHCS, 5/16 NC x 1"	3
24	42767	Floor Trim	1
25	34-140-AMVD	Hex Washer Hd. Self-Tap Screw, 1/4 NC x 5/8	12
26	40145	Console Cover - Rear	1
27	40121	Cylinder Floor Cover Plate	1
28	24-7-BD	Flat Washer, #10	2
29	34-99-AMVD	Hex Washer Hd. Self-Tap Screw, #10 NC x 3/4"	2
30	92-3975	Strap - Bellow Clamp	2

Ref	Part No.	Description	Qty
31	41697	Choke Control	1
32	41684	Seat Box Angle Assembly	2
33	92-3911	Flange Screw, 1/4 x 3/4"	1
34	92-3974	Rubber Bellow - Shifter	1
35	41682	Top Panel - R.H.	1
36	23-9-GD	Lock Washer, 1/4	4
37	22-11-AJD	Hex Nut, 1/4 NC	4
38	92-0032	Safety Track	4
39	92-3627	Hole Trim	1
40	42972	Side Panel - L.H.	1
41	41696	Throttle Control Assembly	1
42	41680	Front Panel	1
43	22-9-AJD	Hex Nut, #10 NC	2
44	23-7-GD	Lock Washer, #10	2
45	41683	Top Panel - L.H.	1
46	92-3786	Noise Barrier - Front Panel	1
47	92-3784	Noise Barrier - Side Panel	2
48	41753	Side Panel - R.H.	1
49	28-19-D	Cotter Pin, 1/8 x 1-1/4"	2
50	22-13-AJKD	Jam Nut, 3/8 NC	2
51	561555	Control Lever	1
52	328967	Hair Pin Cotter	1
53	41690	Handle Bracket Assembly	1
54	358042	Special Washer	2
55	92-3835	Spacer	1
56	92-3834	Handle Pin	1
57	42975	Rear Fender - L.H. (Shown)	1
58	42973	Rear Fender - R.H.	1
59	42976	Inner Fender - L.H. (Shown)	1
60	42974	Inner Fender - R.H.	1
61	42763	Front Fender - L.H.	1
62	42762	Front Fender - R.H.	1



WARNING


The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

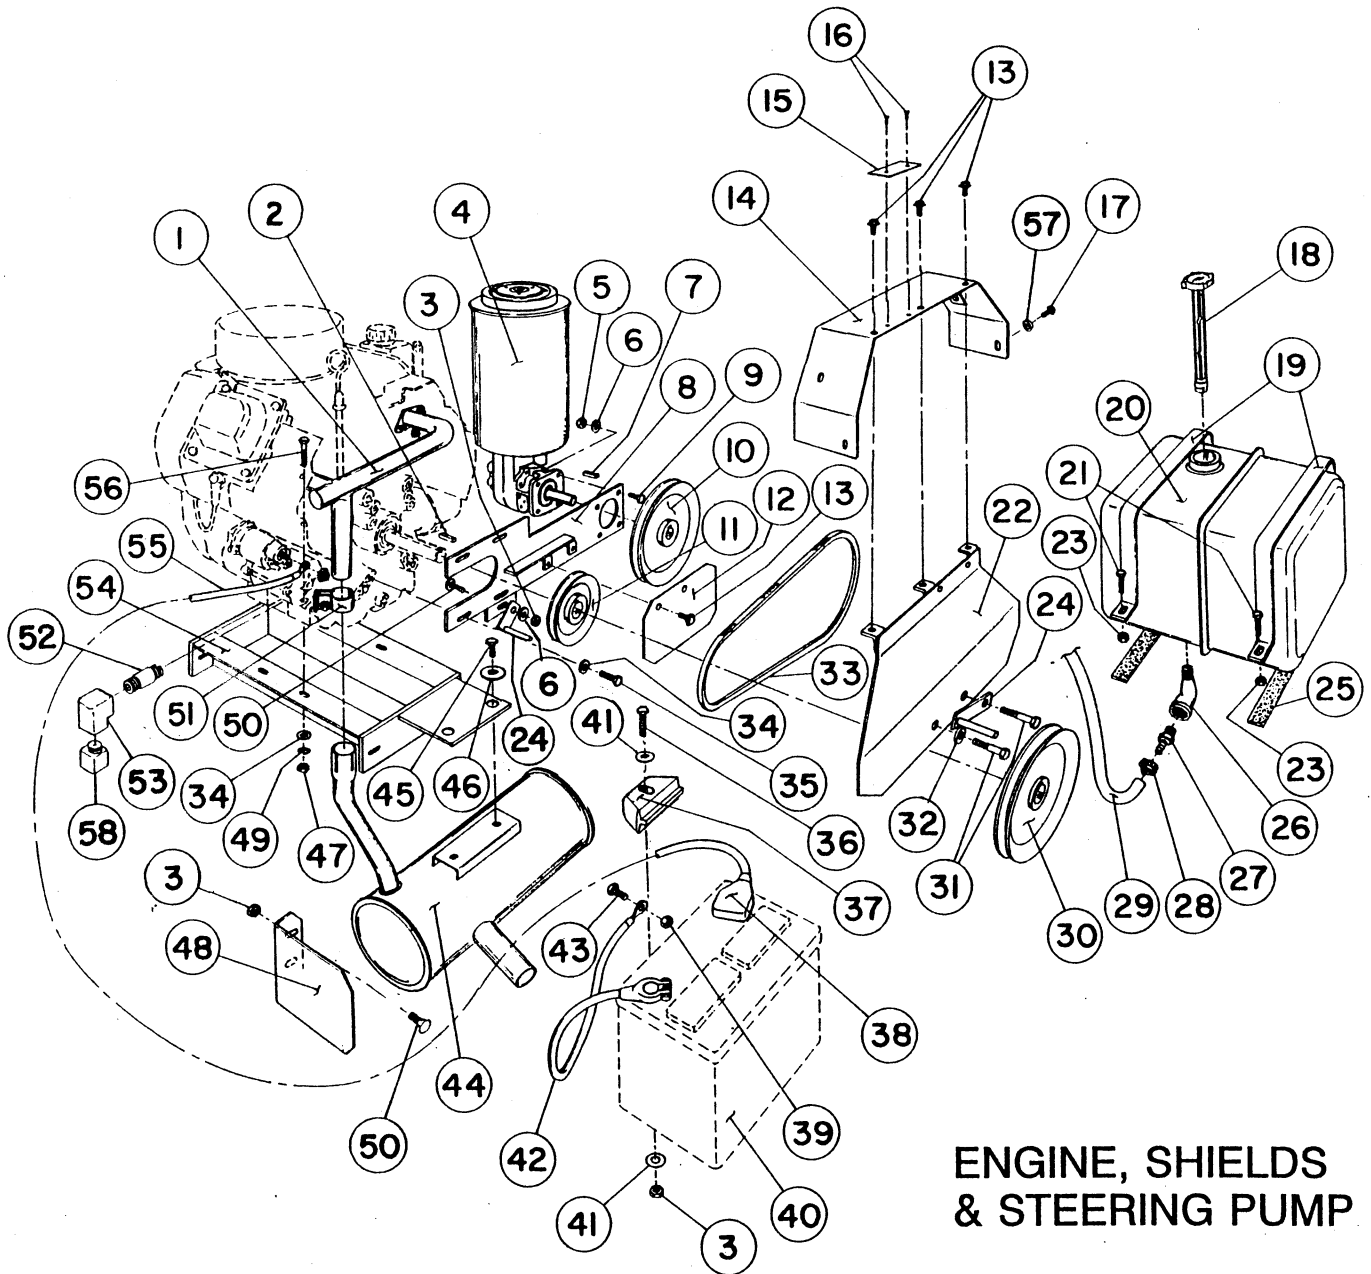

ENGINE, SHIELDS
& STEERING PUMP

ENGINE, SHIELDS & STEERING PUMP


Ref	Part No.	Description	Qty	Ref	Part No.	Description	Qty
1	92-0423	Header Pipe Assy	1	31	20-71-AGD	HHCS, 7/16 NC x 2-1/4"	2
2	314233	Square Key, 1/4 x 1-1/2"	1	32	24-12-AD	Flatwasher, 7/16	1
3	22-12-AJD	Hex Nut, 5/16 NC	4	33	92-0491	Power Steering Belt	1
4	92-0347	Pump w/ Reservoir	1	34	24-11-AD	Flatwasher, 3/8	8
5	22-12-AJFD	Hex Lock Nut, 5/16 NC	4	35	20-47-AGD	HHCS, 3/8 NC x 1"	4
6	24-10-BD	Flatwasher, 5/16 S.A.E.	5	36	20-29-AGD	HHCS, 5/16 NC x 1-3/4"	1
7	92-3876	Square Key	1	37	66-2490	Battery Retainer	1
8	92-3510	Pump Mounting Plate Assy	1	38	41138	Protective Cap (f/w 92-0031 Cable)	1
9	20-26-AGD	HHCS, 5/16 NC x 1"	4	39	22-13-AJD	Hex Nut, 3/8 NC	1
10	92-0487	Power Steering Pulley, 6"	1	40		Battery, 12 Volt	1
11	92-0488	Power Steering Pulley, 4"	1	41	24-10-AD	Flatwasher, 5/16	2
12	92-3621	Belt Shield	1	42	99060	Battery Ground Cable	1
13	34-140-AMVD	Hex Washer Hd Self-Tapping Screw, 1/4 NC x 5/8"	5	43	20-45-AD	HHCS, 3/8 NC x 3/4"	1
14	92-3619	Heat Deflector Assy	1	44	92-0422	Muffler Assy	1
15	80-9350	Hot Surface Plate	1		93-0899	Spark Arrestor, 1-1/4" Registered, (Optional)	1
16	42451	Pop Rivet	2	45	20-24-AGD	HHCS, 5/16 NC x 3/4"	2
17	42605	Metric Screw	4	46	356303	Flatwasher	2
18	41117	Fuel Cap & Gauge	1	47	22-13-BJD	Hex Nut, 3/8 NF	4
19	431366	Fuel Tank Strap	2	48	92-0499	Heat Deflector Plate	1
20	419018	Fuel Tank Assy	1	49	23-11-GD	Lock Washer, 3/8	4
21	20-6-AD	HHCS, 1/4 NC x 1-1/4"	4	50	25-25-AGD	Carriage Bolt, 5/16 NC x 3/4"	3
22	92-3624	Heat Shield Assy	1	51	92-0424	Muffler Clamp	1
23	22-11-AJFD	Hex Lock Nut, 1/4 NC	4	52	92-3647	Pipe Nipple, 3/8 NPT x 2"	1
24	92-3522	Belt Guide Assy	2	53	95023	90° Hyd. Elbow, 3/8 FPT	1
25		Armaflex Strip	NS	54	92-0497	Engine Base Assy	1
26	9900	90° Street Elbow	1	55	92-0031	Battery Cable & Cap	1
27	26291	Hose Barb	1	56	20-50-BGD	HHCS, 3/8 NF x 1-3/4"	4
28	97406	Hose Clamp	2	57	24-8-BD	Flatwasher, #12	4
29	92-3626	Hose, Tank to Filter	1	58	42435	Pipe Plug	1
30	40022	Engine Pulley - Sprayer	1				

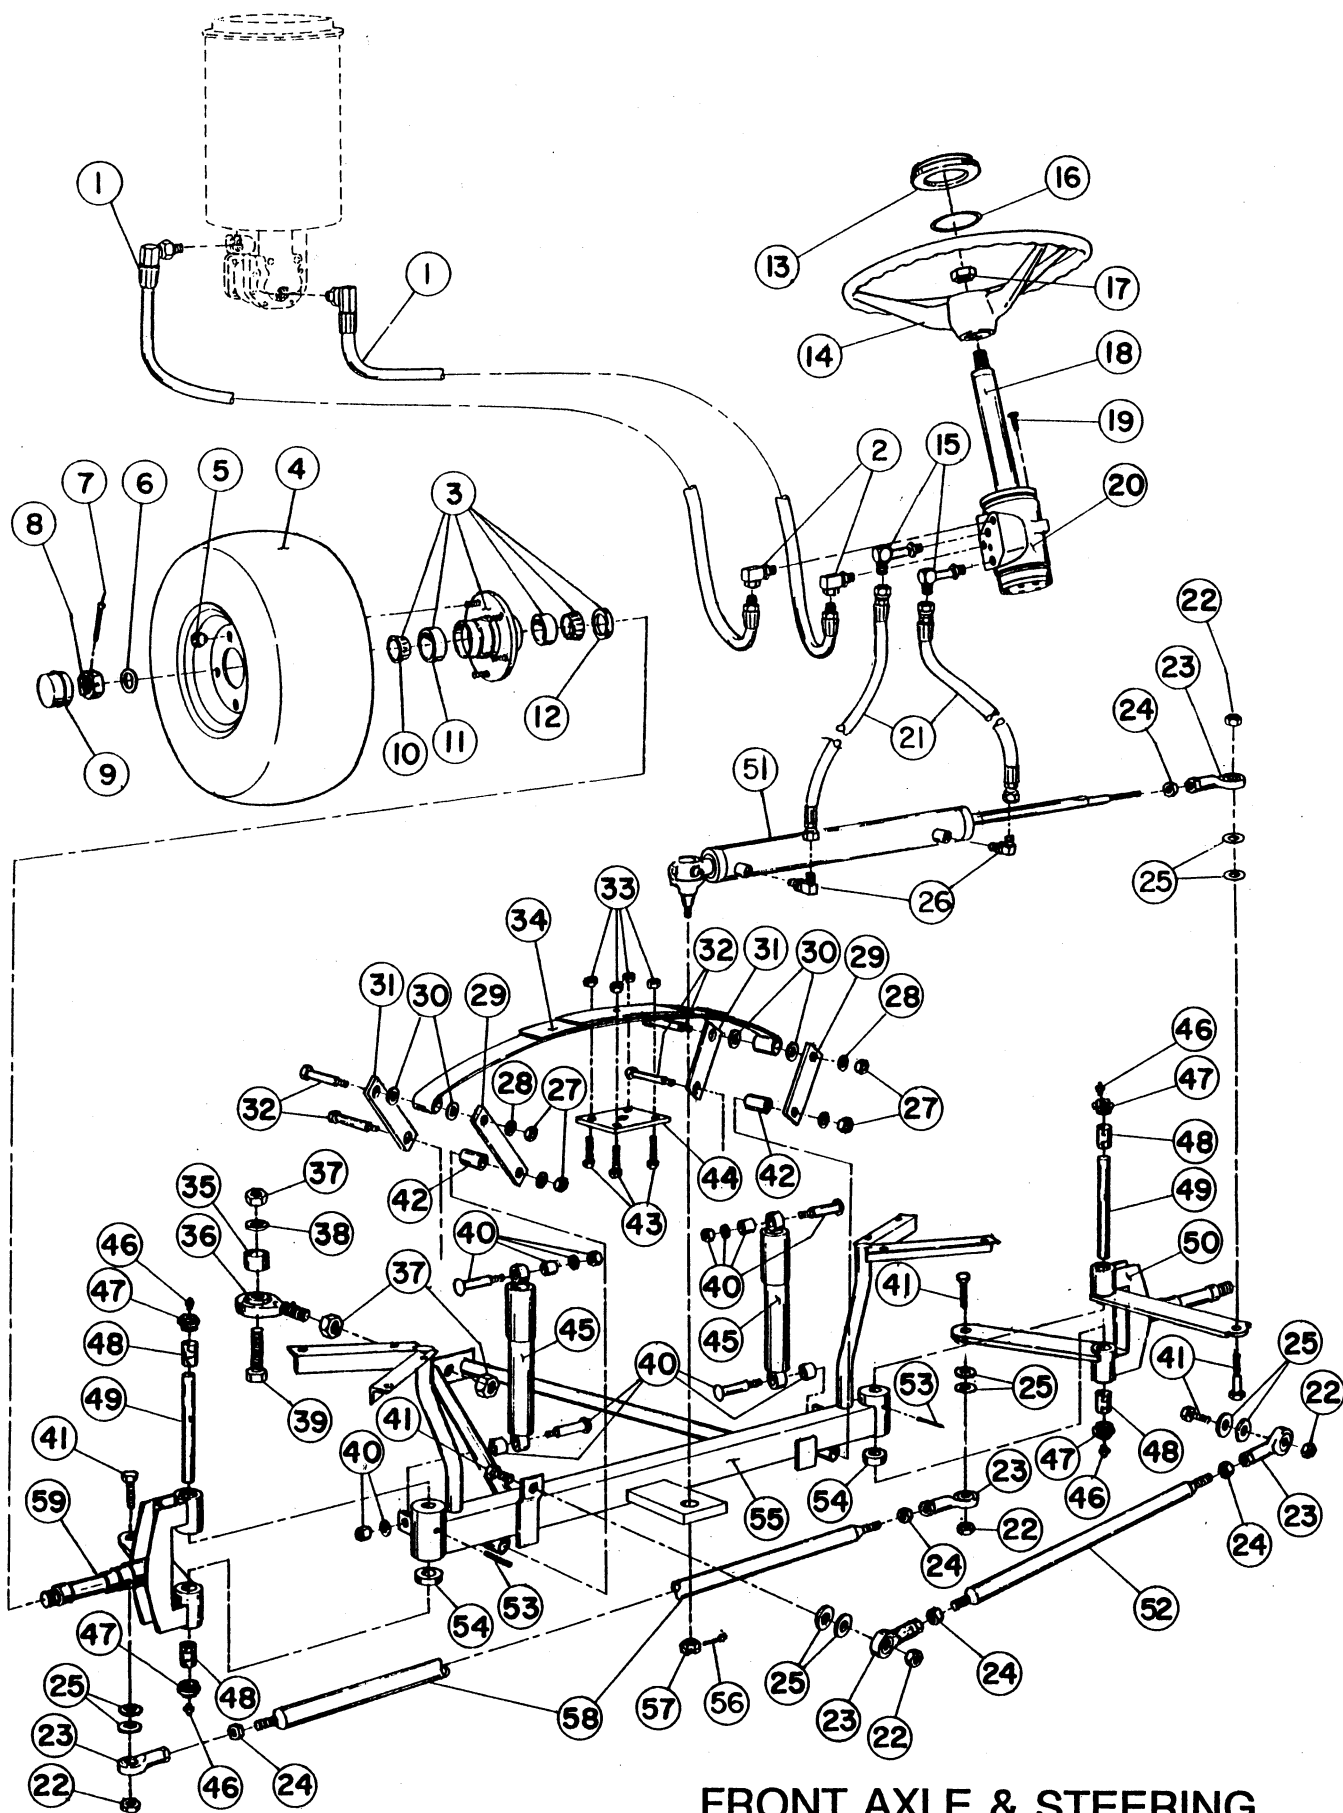


FRONT AXLE & STEERING

FRONT AXLE & STEERING

Ref	Part No.	Description	Qty	Ref	Part No.	Description	Qty
1	92-3507	90° Swivel Adapter	2	30	24-14-AD	Flat Washer, 9/16	4
2	92-3508	Hose Assy - Unit to Pump	2	31	42776	Shackle - Rear	2
3	40085	Hub Assy	2	32	42599	Shoulder Bolt	4
4	404504	Front Wheel & Tire Assy	2	33	22-13-AJFD	Lock Nut, 3/8 NC	4
	404683	Front Wheel Rim	2	34	42588	Spring - Leaf	1
	330802	Front Tire	2		42589	Bushing (f/w Spring)	2
5	321077	Wheel Nut (f/w Hub Assy)	10	35	42772	Spacer Tube	1
6	358042	Special Flat Washer	2	36	522085	Rod End, 3/4 NF	1
7	28-20-C	Cotter Pin, 1/8 x 1-1/2	2	37	22-18-BJC	Hex Nut, 3/4 NF	3
8	22-18-BJLD	Hex Slotted Nut, 3/4 NF	2	38	23-17-GD	Lock Washer, 3/4	1
9	40438	Dust Cap (f/w Hub Assy)	2	39	20-143-BGD	HHCS, 3/4 NF x 2-3/4"	1
10	40440	Cone (f/w Hub Assy)	4	40	42691	Bolt Assy	4
11	40439	Cup (f/w Hub Assy)	4	41	20-88-BGD	HHCS, 1/2 NF x 1-3/4 (Grade 5)	5
12	41321	Seal (f/w Hub Assy)	2	42	42592	Bushing - Shackle	2
13	41126	Cap	1	43	20-51-AGD	HHCS, 3/8 NC x 2" (Grade 5)	4
14	41125	Steering Wheel	1	44	42575	Spring Mounting Plate	1
15	92-3505	90° Adapter	1	45	42690	Shock Absorber	2
16	41127	O-Ring	1	46	361011	Grease Fitting	4
17	92-3513	Metric Hex Nut, M16 x 1.5 Thrd	1	47	539048	Special Plug	4
18	92-3503	Steering Column	1	48	728062	King Pin Bearing	4
19	42605	Hex Hd. Metric Screw, M6 x 1 Thrd x 16 mm	4	49	40081	King Pin	2
20	92-3502	Steering Control Unit	1	50	92-0421	Yoke Assy (Left Hand)	1
21	92-3979	Hose Assy - Power Steering	2	51	92-3978	Hydraulic Cylinder Assy	1
22	22-15-BJFD	Lock Nut, 1/2 NF	5	52	42689	Steering Tube Assembly	1
23	522087	Rod End, 1/2 NF	5	53	29-199-C	Spring Pin, 1/4 x 2"	2
24	22-15-BJKD	Hex Jam Nut, 1/2 NF	5	54	307358	Thrust Bearing	2
25	24-13-BD	Flat Washer, 1/2	10	55	92-0418	Front Axle Assy	1
26	92-3504	90° Adapter, 9/16	2	56	28-18-D	Cotter Pin, 1/8 x 1"	1
27	22-14-AJD	Hex Nut, 7/16 NC	4	57	22-16-BJLD	Hex Slotted Nut, 9/16 NF	1
28	23-12-GD	Lock Washer, 7/16	4	58	92-3528	Steering Tube Assy	1
29	42777	Shackle - Front	2	59	40078	Yoke Assy (Right Hand)	1

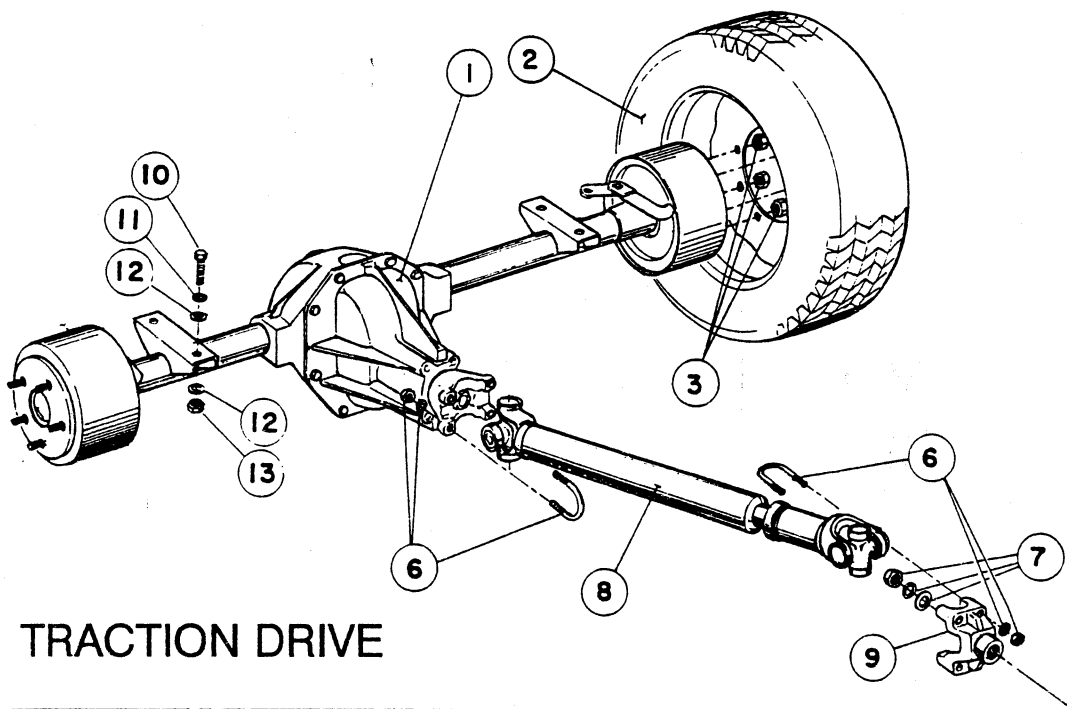


TRACTION DRIVE

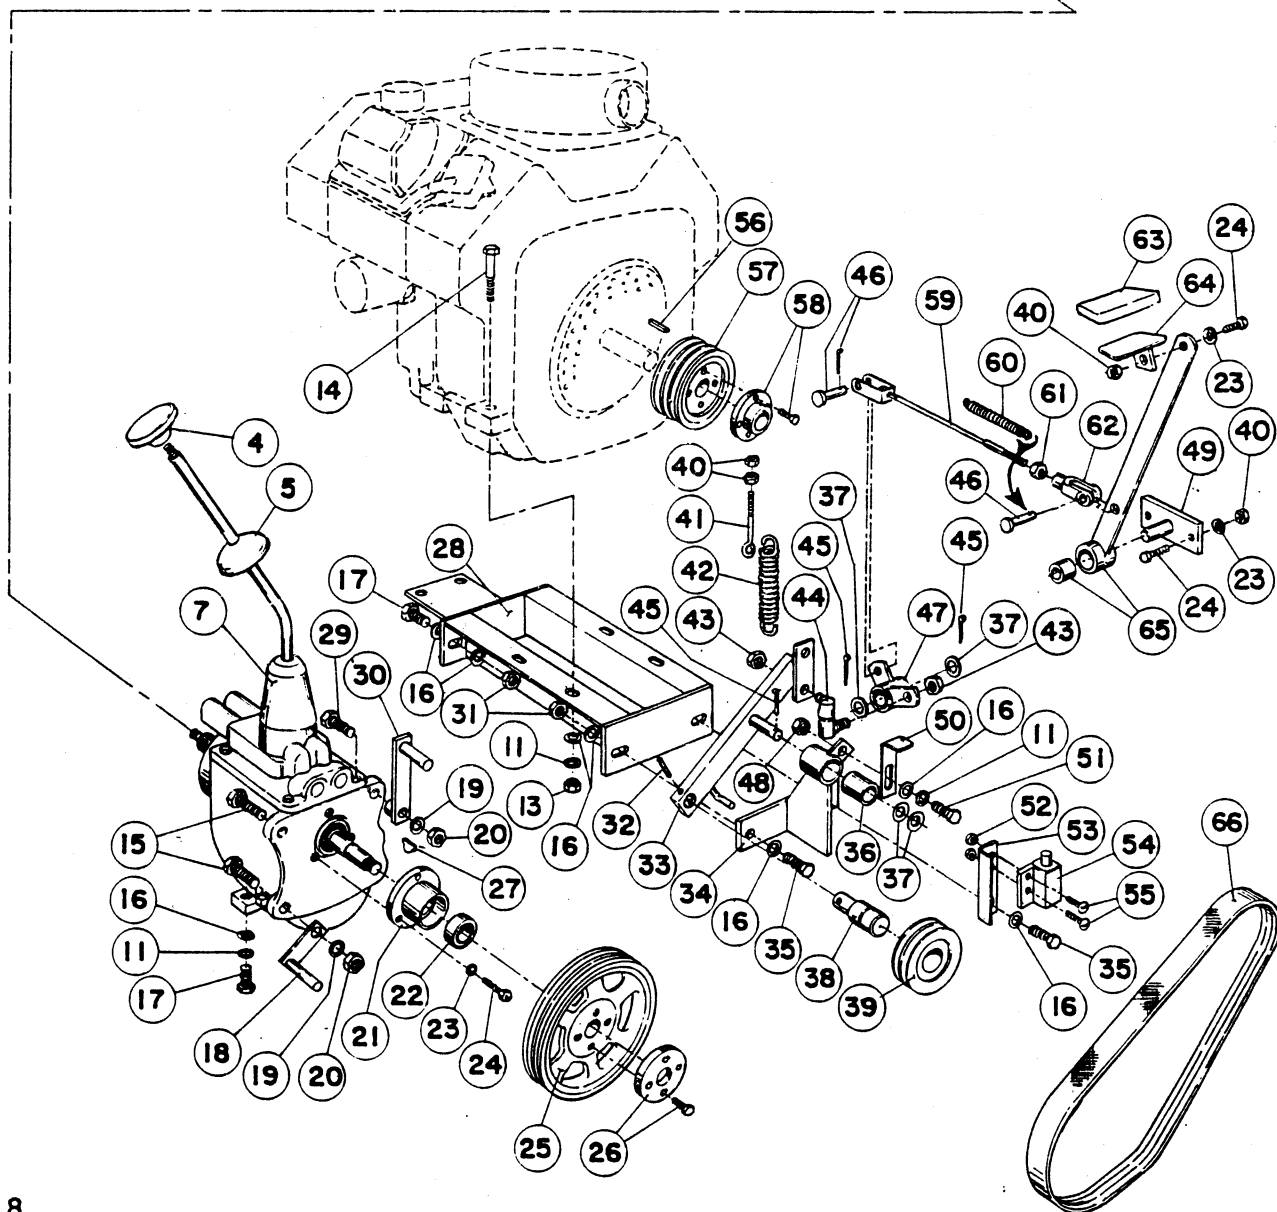

TRACTION DRIVE

Ref	Part No.	Description	Qty	Ref	Part No.	Description	Qty
1	92-8277	Rear Axle Assy	1	35	20-50-AGD	HHCS, 3/8 NC x 1-3/4"	2
2	42684	Rear Wheel & Tire Assy	2	36	307283	Bearing (f/w Clutch Pivot Assy)	1
	42685	Tire (f/w 42684 Assy)	2	37	358042	Special Washer	7
	42667	Wheel Rim (f/w 42684 Assy)	2	38	92-0056	Bearing	1
3	321077	Wheel Nut	10	39	40018	Idler Pulley	1
4	41112	Gear Shift Knob	1	40	22-12-AJD	Hex Nut, 5/16 NC	5
5	7275	Rubber Boot	1	41	92032	Eye Bolt	1
6	40220	U-Bolt Assy	4	42	5206	Clutch Spring	1
7	41004	Transmission (T-96)	1	43	22-13-BJFD	Lock Nut, 3/8 NF	2
8	380002	Drive Shaft Assy	1	44	41703	Ball Joint Assy	1
	41773	Journal & Bearings (f/w 380002)	2		41704	Ball Joint (f/w 41703)	2
9	41005	Output Yoke - Transmission	1		41705	Threaded Rod, 3/8 NF (f/w 41703)	1
10	20-48-BGD	HHCS, 3/8 NF x 1-1/4"	4	45	28-19-D	Cotter Pin, 1/8 x 1-1/4	3
11	23-11-GD	Lock Washer, 3/8	7	46	40258	Clevis Pin & Cotter Assy	2
12	24-11-BD	Flat Washer, 3/8 S.A.E.	8	47	41658	Rocker Arm Assy	1
13	22-13-BJD	Hex Nut, 3/8 NF	8		307276	Bearing (f/w 41658 Assy)	1
14	20-50-BGD	HHCS, 3/8 NF x 1-3/4"	4		361015	Grease Fitting	1
15	20-68-AGD	HHCS, 7/16 NC x 1-1/2"	3	48	22-13-AJD	Hex Nut, 3/8 NC	1
16	24-11-AD	Flat Washer, 3/8	16	49	42754	Pivot Assy	1
17	20-47-AGD	HHCS, 3/8 NC x 1"	4	50	40538	Belt Guide	1
18	40547	Belt Guide Assy	1	51	20-47-AGD	HHCS, 3/8 NC x 1"	1
19	23-12-GD	Lock Washer, 7/16	4	52	22-9-AJFD	Lock Nut, #10 NC	2
20	22-14-AJD	Hex Nut, 7/16 NC	4	53	41664	Clutch Switch Mtg. Brkt.	1
21	92-0013	Bearing Housing	1	54	41103	Safety Interlock Switch	1
22	6610	Transmission Bearing	1	55	34-99-AMVD	Hex Washer Hd. Self-Tap Screw, #10 NC x 3/4"	2
23	23-10-GD	Lock Washer, 5/16	6				
24	20-26-AGD	HHCS, 5/16 NC x 1"	6	56	314233	Square Key, 1/4"	1
25	40015	Transmission Pulley, (7.0" P.D.)	1	57	92-3981	Engine Pulley (4.0" P.D.)	1
26	41017	Bushing (15/16" Bore) includes fasteners	1	58	92-3982	Engine Bushing (1.0" Bore)	1
27	27-28-C	Woodruff Key (#809)	1	59	41744	Clutch Cable Assy	1
28	92-0497	Engine Base Assy	1	60	41469	Spring	1
29	20-71-AGD	HHCS, 7/16 NC x 2-1/4"	1	61	22-12-BJKD	Hex Jam Nut, 5/16 NF	1
30	41700	Belt Guide Assy	1	62	40019	Clevis, 5/16 NF	1
31	22-13-AJFD	Lock Nut, 3/8 NC	4	63	42719	Pedal Pad	1
32	29-108-C	Spring Pin, 3/16 x 1"	1	64	42716	Pedal Mtg. Brkt	1
33	41654	Idler Assy	1	65	40239	Clutch Arm Assy	1
34	41651	Clutch Pivot Assy	1		307276	Bearing (f/w Clutch Arm Assy)	1
				66	41679	Vehicle Drive Belt	1


T96 THREE-SPEED MANUAL TRANSMISSION

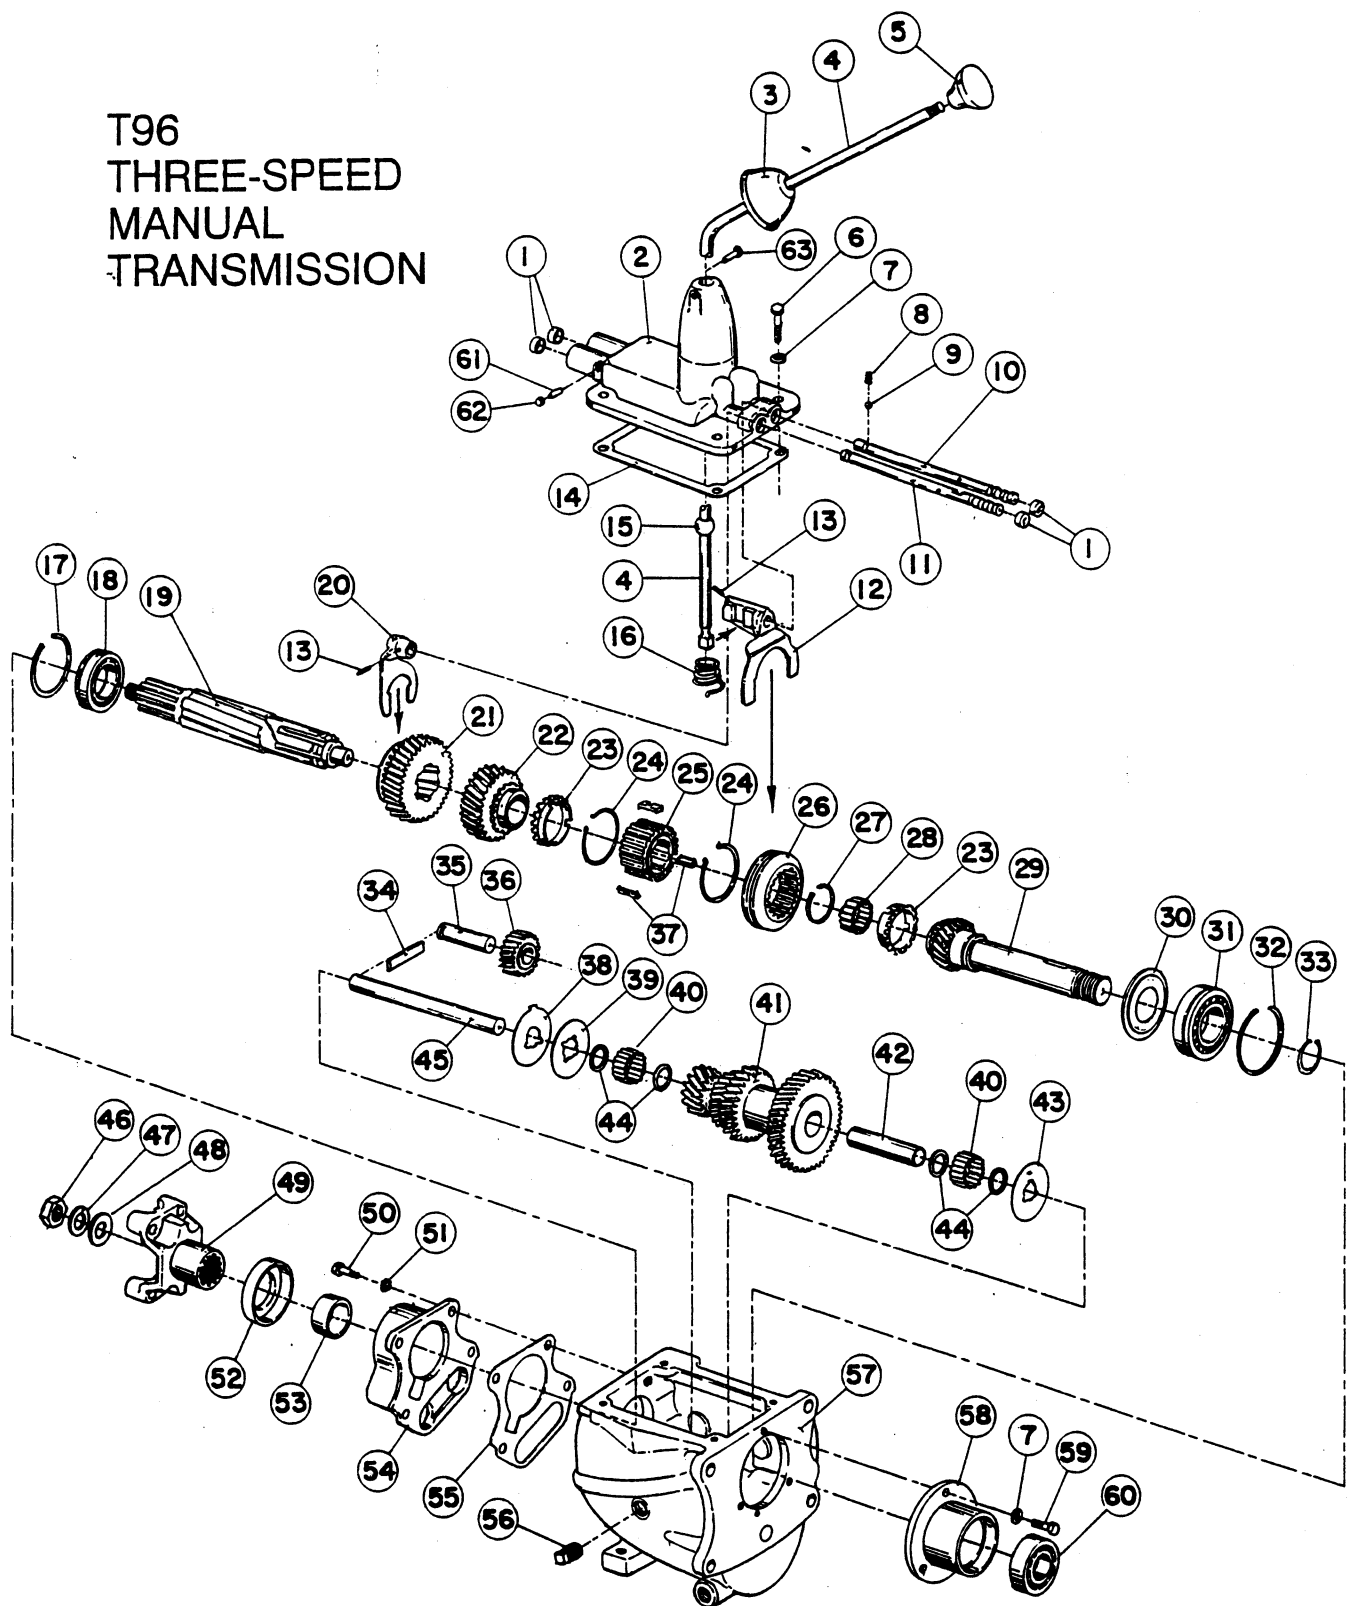

Note: Apply an RTV silicone sealant between the Transmission Case (57) and the Bearing Retainer (58). Also, use sealant on threads of the Cap Screws (59).

T96 THREE-SPEED MANUAL TRANSMISSION

Ref	Part No.	Description	Qty	Ref	Part No.	Description	Qty
1	41032	Shift Rail Cap	4	33	41060	Snap Ring	AR
2	41033	Top Cover	1	34	41061	Lock Plate	1
3	7275	Rubber Boot	1	35	41062	Reverse Idler Shaft	1
4	41034	Shift Lever	1	36	41063	Reverse Gear & Bushing Assembly	1
5	41112	Knob	1		41064	Reverse Gear Bushing (f/w Ref #36)	1
6	20-24-AGD	HHCS 5/16 NC x 3/4	4	37	41065	Shifting Plate	3
7	23-10-GD	Lock Washer, 5/16	7	38	41066	Thrust Washer	1
8	27674	Poppet Spring	2	39	41067	Rear Thrust Washer	1
9	7257	Steel Ball	2	40	9304	Cluster Roller Bearings (40)	2
10	41039	Shift Rail (High & Intermediate)	1	41	41068	Countershaft Gear	1
11	41040	Shift Rail (Low & Reverse)	1	42	41069	Bearing Spacer	1
12	41041	Shift Fork (High & Intermediate)	1	43	41070	Front Thrust Washer	1
13	41042	Gear Shift Fork Pin	2	44	9301	Bearing Spacer	4
14	41043	Top Cover Gasket	1	45	41071	Countershaft	1
15	41044	Fulcrum Ball	1	46	41072	Rear Nut - Mainshaft	1
16	41045	Control Lever spring	1	47	41073	Lock Washer - Mainshaft	1
17	41046	Snap Ring	AR	48	41074	Flat Washer - Mainshaft	1
18	41047	Rear Bearing	1	49	41005	Output Yoke	1
19	41048	Main Shaft	1	50	20-64-AGD	HHCS, 7/16 NC x 3/4	4
20	41049	Shift Fork (Low & Reverse)	1	51	33-12-GD	Lock Washer, 7/16	4
21	41050	Low & Reverse Gear	1	52	41077	Rear Seal	1
22	41051	Second Gear & Bushing Assembly	1	53	41082	Mainshaft Spacer	1
	41052	Second Gear Bushing (f/w Ref #22)	1	54	41078	Rear Bushing Retainer	1
23	41053	Blocking Ring	2	55	41079	Rear Bearing Retainer Gasket	1
24	41054	Syncro Spring	2	56	41080	Pipe Plug	1
25	41055	Clutch Hub	1	57	41081	Transmission Case	NS
26	41056	Clutch Sleeve	1	58	92-0013	Front Bearing Retainer	1
27	9302	Snap Ring - Clutch Hub	1	59	20-26-AGD	HHCS, 5/16 NC x 1"	3
28	7290	Roller Set (13)	1	60	6610	Bearing	1
29	7288	Input Shaft	1	61	41037	Interlock Plunger	1
30	41057	Oil Baffle	1	62	41038	Taper Plug	1
31	41058	Front Bearing	1	63	40604	Control Housing Pin	1
32	41059	Snap Ring	AR				

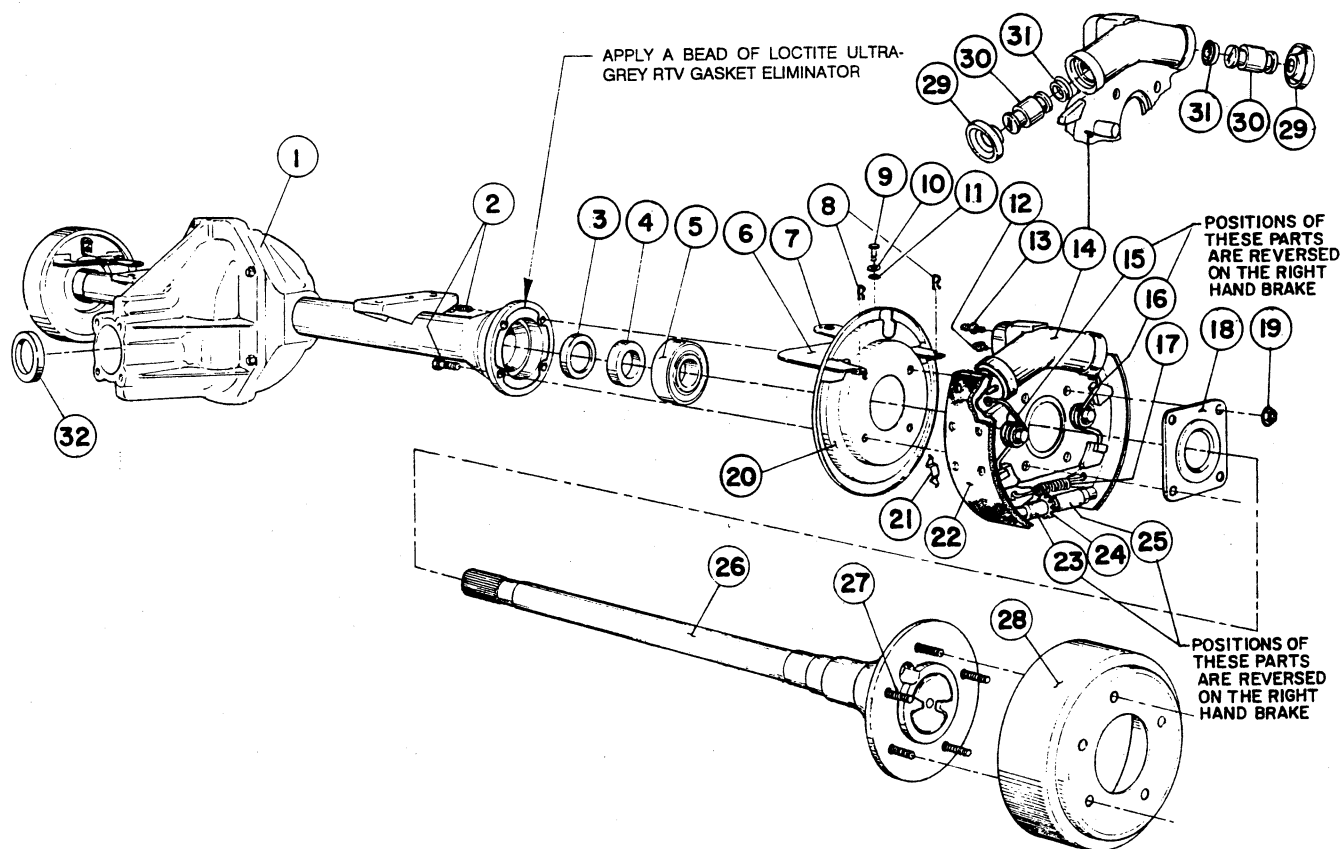


REAR AXLE BRAKES

Ref	Part No.	Description	Qty
1	92-8277	Rear Axle Assy	1
2	40452	Hex Hd Bolt	8
3	40455	Oil Seal	2
4	40454	Bearing Retainer Ring	2
5	40453	Bearing Assembly	2
6	40464	Strut Assembly	2
7	40468	Lever - Parking Brake	2
8	40474	Retainer - Parking Brake Lever Pin	4
9	40467	Pin	2
10	40466	Spring Washer - Antirattle	2
11	40465	Retainer - Parking Brake Lever Pin	2
12	41487*	Seat - Tube	2
13	40460	Screw - Bleeder	2
14	40462*	Torque Spider - Finished	2
15	40471	Spring - Shoe Return (L.H.)	2
16	40472	Spring - Shoe Return (R.H.)	2
17	40473	Spring Adjusting Screw	2

Ref	Part No.	Description	Qty
18	40450	Oil Seal	2
19	40449	Hex Nut	8
20	40475	Dust Shield	2
21	40476	Spring - Shoe Hold Down	4
22	84-8600	Shoe & Lining Assy - Primary & Secondary	2
23	40458	Socket - Adjusting Screw	2
24	40456	Adjusting Screw	2
25	40457	Pivot Nut - Adjusting Screw	2
26	40445	Flange Axle Shaft - R.H.	1
	40446	Flange Axle Shaft - L.H.	1
27	92-8279	Wheel Bolt	10
28	92-8280	Drum	2
29	40459	Boot & Ring Assy - Wheel Cylinder	4
30	40463	Piston - Wheel Cylinder	4
31	40461	Cup - Hydraulic	4
32	42162	Front Transmission Seal	1

* These items must be ordered together.

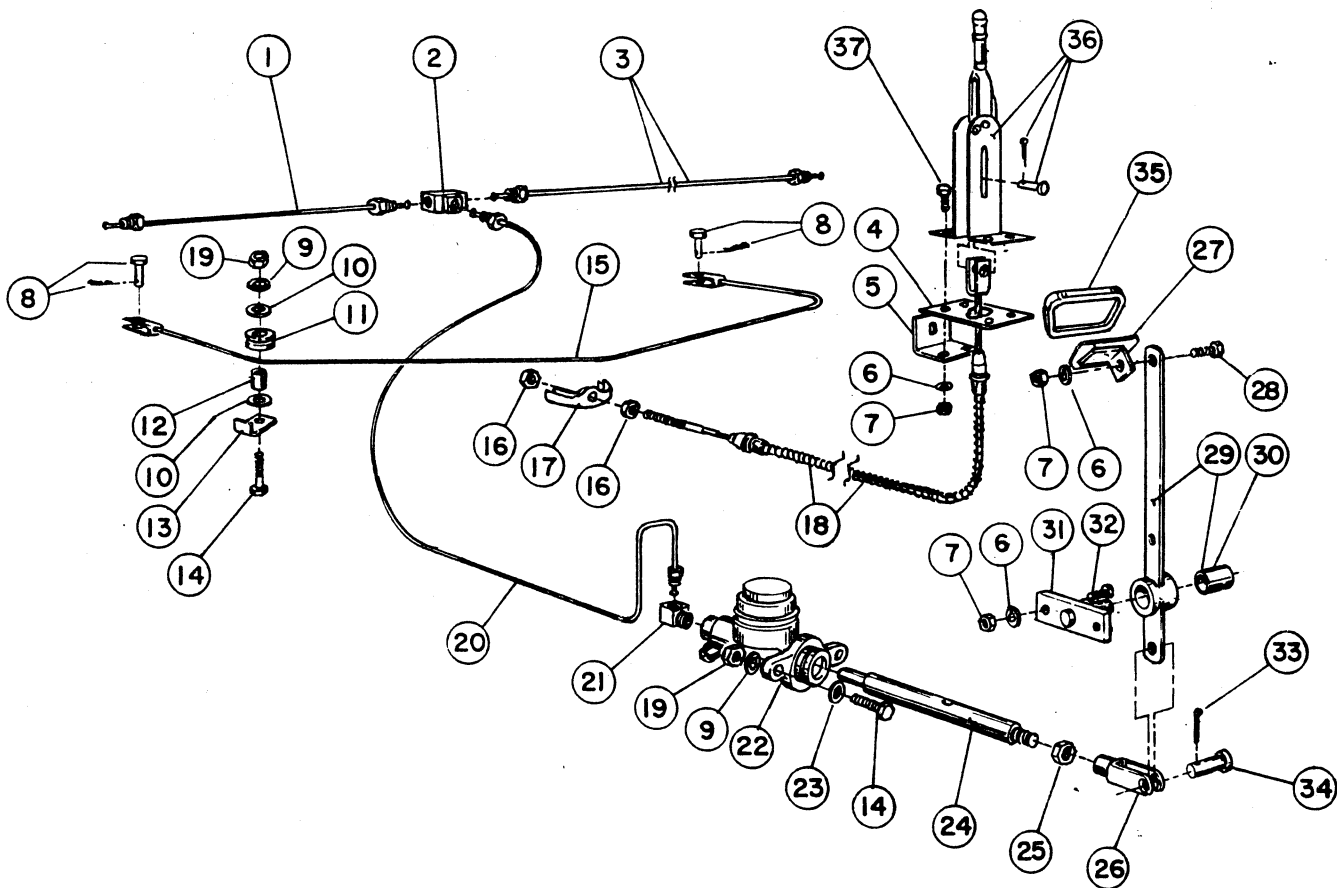


BRAKES

Ref	Part No.	Description	Qty
1	40097	Tube Assembly - Right Hand	1
2	98346	Hydraulic Tee	1
3	98877	Tube Assembly - Left Hand	1
4	41738	Spacer Plate	1
5	41722	Front Panel Bracket	1
6	23-10-GD	Lock Washer, 5/16	7
7	22-12-AJD	Hex Nut, 5/16 NC	7
8	40258	Yoke Pin & Cotter	2
9	23-11-GD	Lock Washer, 3/8	4
10	24-11-BD	Flat Washer, 3/8 S.A.E.	4
11	40099	Rope Guide	2
12	92-0019	Guide Spacer	2
13	92-0020	Guide Lug	2
14	20-49-AGD	Hex Hd Cap Screw, 3/8 NC x 1-1/2	4
15	42321	Cable Ass'y (Emergency Brake)	1
16	22-12-BJKD	Hex Jam Nut, 5/16 NF	2
17	28306	Brake Equalizer	1
18	41737	Brake Cable Assembly	1
19	22-13-AJD	Hex Nut, 3/8 NC	4

Ref	Part No.	Description	Qty
20	26032	Brake Tube Assembly	1
21	28368	90° Elbow	1
22	99208	Master Cylinder	1
23	24-11-AD	Flat Washer, 3/8	2
24	40094	Brake Rod Assembly	1
25	22-13-BJKD	Hex Jam Nut, 3/8	1
26	92037	Adjustable Clevis	1
27	42716	Pedal Mounting Bracket	1
28	20-26-AD	Hex Hd. Cap Screw, 5/16 NC x 1"	1
29	40238	Brake Arm Assembly	1
30	307276	Bearing (f/w Brake Arm Assembly)	1
31	42754	Pivot Assembly	1
32	20-26-AGD	Hex Hd Cap Screw 5/16 NC x 1"	2
33	28-19-D	Cotter Pin, 18 x 1-1/4	1
34	1126-P	Clevis Pin	1
35	42719	Foot Pad	1
36	30328	Brake Lever Assembly	1
37	20-24-AGD	Hex Hd Cap Screw, 5/16 NC x 3/4	4


DIFFERENTIAL

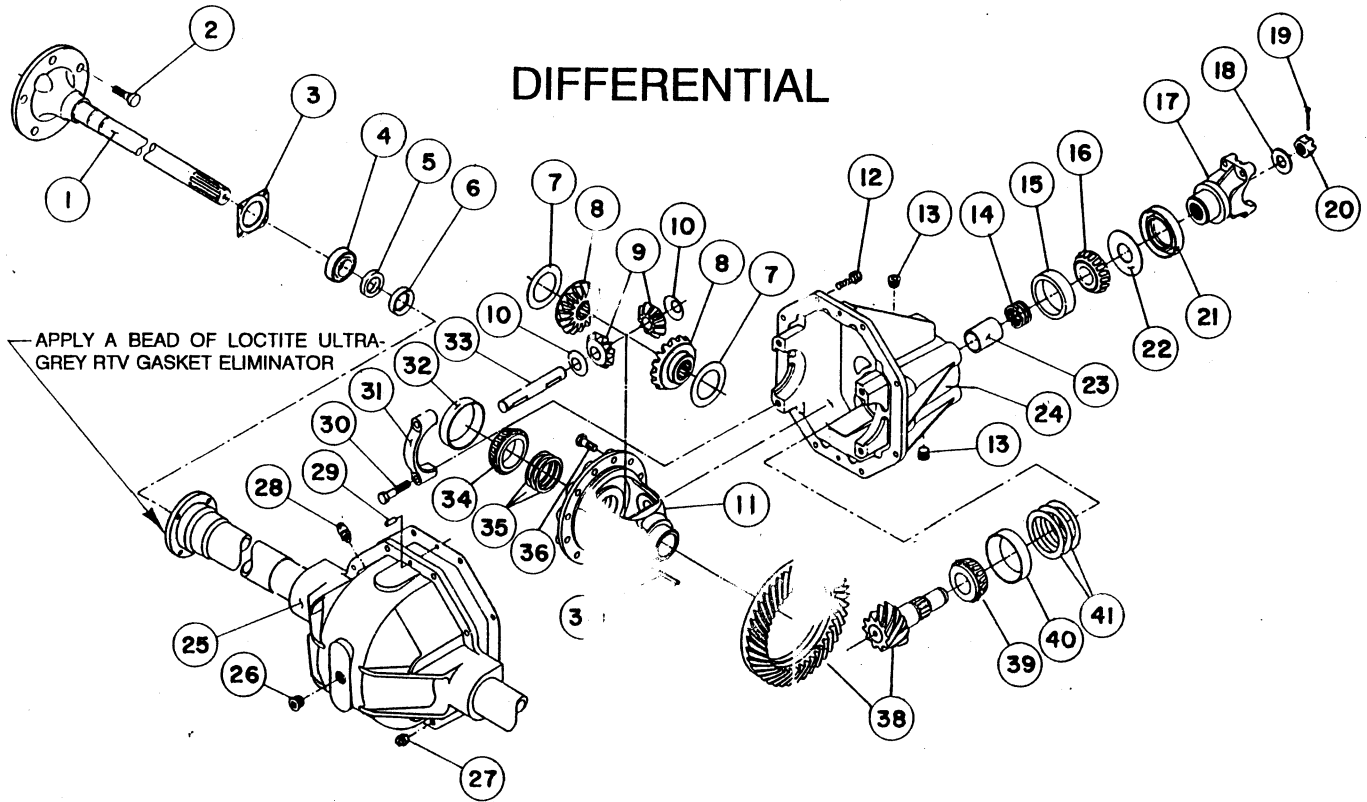

DIFFERENTIAL

Ref	Part No.	Description	Qty
1	40445	Flange Axle Shaft - R.H.	1
	40446	Flange Axle Shaft - L.H.	1
2	40447	Wheel Bolt	10
3	40450	Oil Seal	2
4	40453	Bearing	2
5	40454	Wheel Bearing Retainer Ring	2
6	40455	Oil Seal	2
7	42151	Thrust Washer	2
8	42147	Side Gear	2
9	42148	Pinion Mate	2
10	42152	Thrust Washer	2
11	42146	Differential Case	8
12	40452	Housing Bolt	8
13	42167	Oil Plug	2
14	42176	Shim, .003	AR
	42177	Shim, .005	AR
	42178	Shim, .010	AR
	42179	Shim, .030	AR
15	42156	Bearing Cup	1
16	42155	Bearing Cone	1
17	42169	End Yoke	1
18	42161	Washer	1
19	42159	Cotter Pin	1
20	42160	Nut	1
21	42162	Oil Seal	1


Ref	Part No.	Description	Qty
22	42163	Shim	1
23	42164	Spacer	1
24	42154	Carrier (includes #30 & #31)	1
25	42170	Rear Axle Housing	1
26	42172	Pipe Plug	1
27	42171	Nut	8
28	42175	Vent Assy	1
29	42174	Dowel Pin	2
30	43086	Bearing Cap Screw (f/w #24)	4
31	43085	Bearing Cap (f/w #24)	2
32	42165	Bearing Cup	2
33	42149	Pinion Mate Shaft	1
34	42166	Bearing Cone	2
35	42183	Shim, .003	AR
	42184	Shim, .005	AR
	42185	Shim, .010	AR
	42186	Shim, .030	AR
36	42168	Drive Gear Screw	10
37	42150	Pinion Lock Pin	1
38	42153	Matched Gear & Pinion Assy	1
39	42157	Bearing Cone	1
40	42158	Bearing Cup	1
41	42180	Shim, .003	AR
	42181	Shim, .005	AR
	42182	Shim, .010	AR

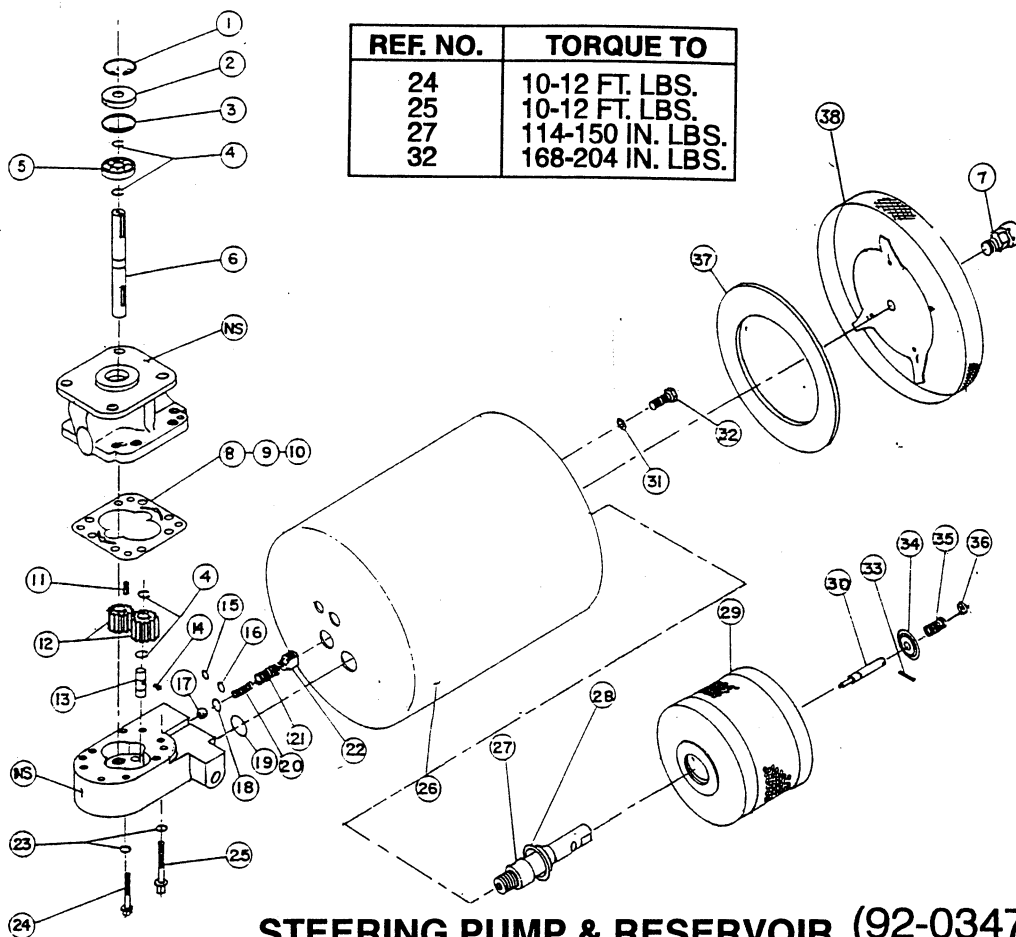

Ref	Part No.	Description	Qty
1	92-3873	Shaft Seal Snap Ring	1
2	92-3875	Shaft Oil Seal	1
3	92-3960	Spacer	1
4	92-3961	C-Rings	4
5	92-3874	Shaft Ball Bearing	1
6	92-3877	Drive Shaft	1
7	42175	Reservoir Vent	1
8	92-3881	Pump Housing Gasket - Silver (.00050 Thk)	AR
9	92-3882	Pump Housing Gasket - Gold (.00075 Thk)	AR
10	92-3880	Pump Housing Gasket - Amber (.00100 Thk)	AR
11	92-3876	Drive Shaft Key	1
12	92-3879	Drive & Idler Gear	2
13	92-3878	Idler Shaft	1
14	92-3962	Drive Pin	1
15	*	O-Ring .562 x .688 x .062	1
16	*	O-Ring .428 x .625 x .094	1
17	92-3872	Steel Ball	1
18	*	O-Ring .562 x .750 x .094	1

Ref	Part No.	Description	Qty
19	*	O-Ring .750 x 1.00 x .125	1
20	92-3871	Spring .245 x 1.031	1
21	92-3870	Spring .420 x 1.00	1
22	92-3886	Adjusting Screw	1
23	23-9-GD	1/4 Lock Washer	2
24	92-3883	1/4 - 20 x 1-3/8 Screw	6
25	92-3884	1/4 - 20 x 1-3/4 Screw	2
26	92-3857	Reservoir, Black	1
27	92-3865	Retaining Stud	1
28	92-3864	Sealing Cup	1
29	92-3863	Filter Element	1
30	92-3858	Relief Valve Stud	1
31	23-10-GD	Mounting Screw Lock Washer 5/16"	1
32	20-22-AGD	Reservoir Mounting Screw 5/16 x 1/2	1
33	92-3859	Relief Valve Roll Pin	1
34	92-3862	Relief Valve Sealing Cup	1
35	92-3861	Relief Valve Spring	1
36	92-3860	Relief Valve Spring Cup	1
37	92-3856	Reservoir Cover Gasket	1
38	92-8340	Reservoir Cover	1


* Indicates parts included in kit number 92-3885.

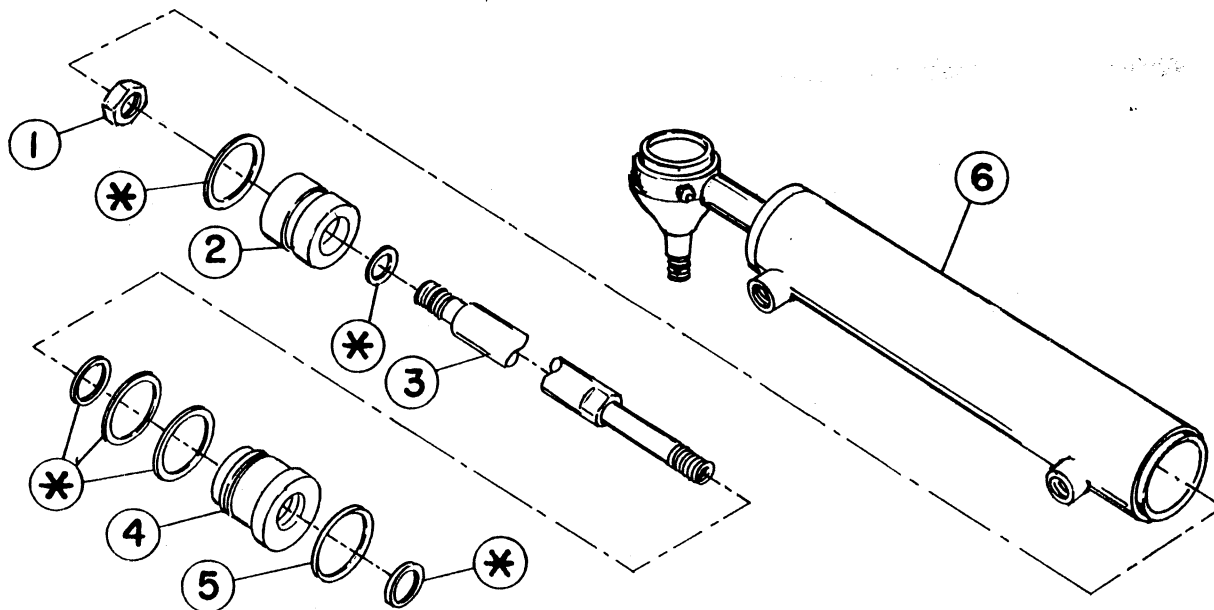

HYDRAULIC CYLINDER (92-3978)


Ref	Part No.	Description	Qty
1	92-3986	Nut	1
2	92-3988	Piston	1
3	92-3990	Shaft	1
4	92-3987	Head	1
5	92-3989	Retaining Ring	1
6	92-3991	Barrel w/ Clevis & Parts	1

* Indicates Parts Included in 92-3992 Repair Kit

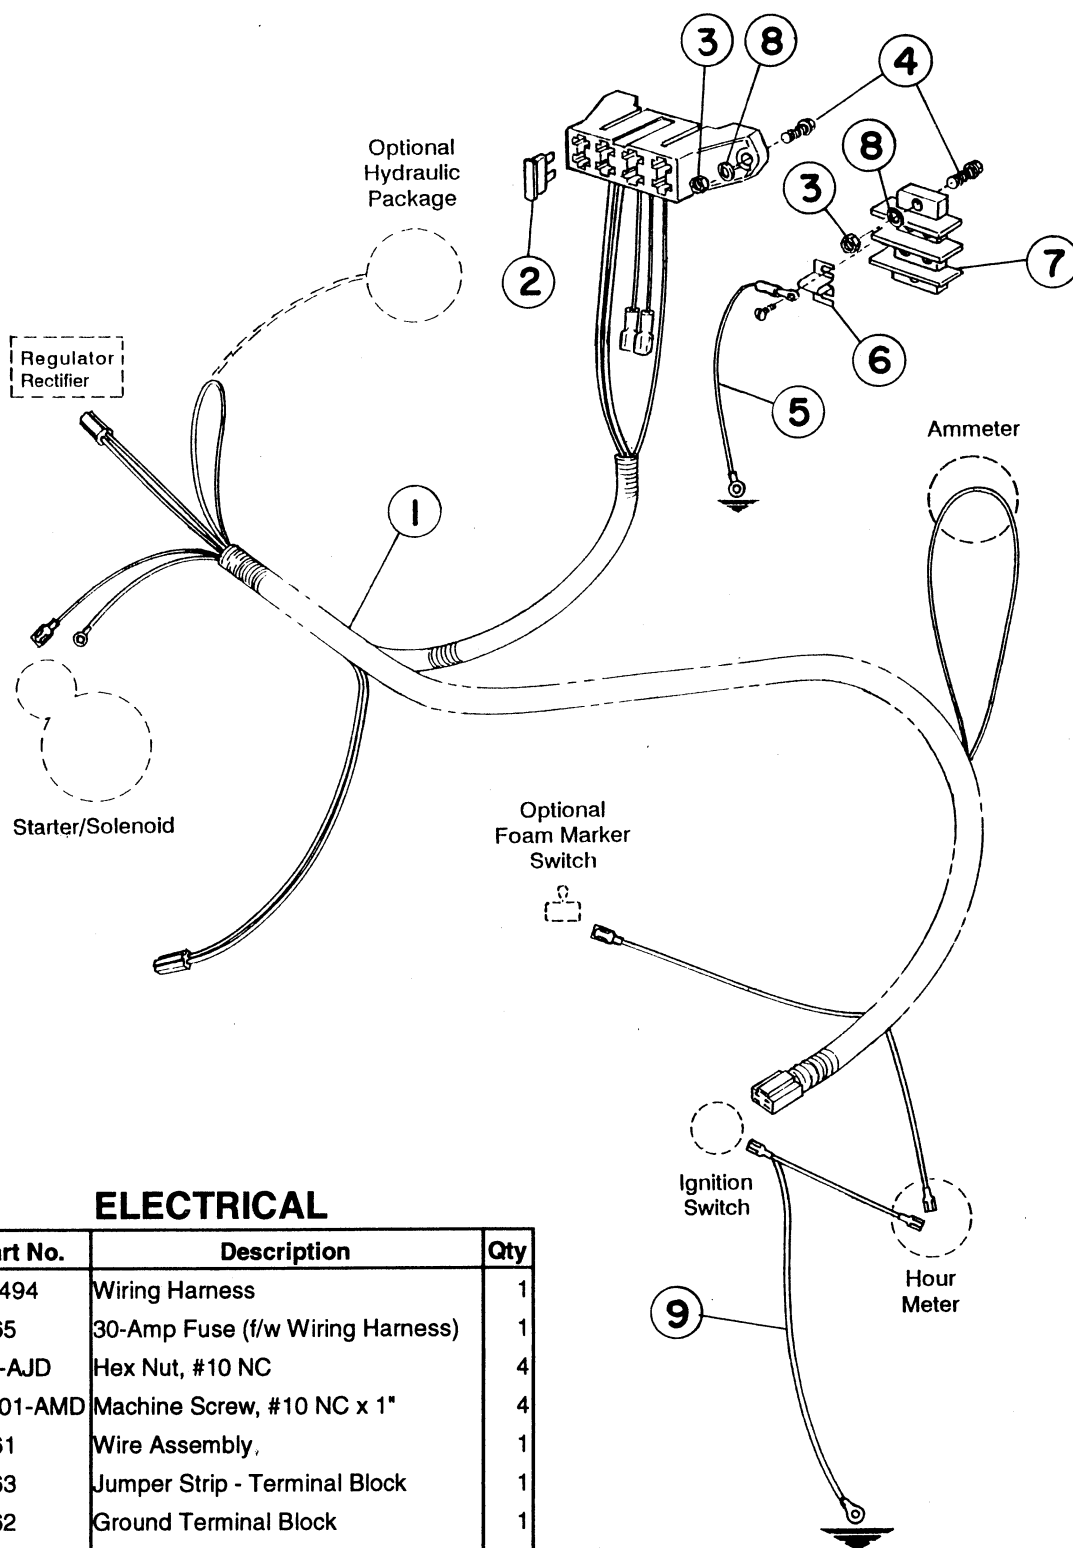

ELECTRICAL

Ref	Part No.	Description	Qty
1	92-0494	Wiring Harness	1
2	42765	30-Amp Fuse (f/w Wiring Harness)	1
3	22-9-AJD	Hex Nut, #10 NC	4
4	21-101-AMD	Machine Screw, #10 NC x 1"	4
5	42861	Wire Assembly,	1
6	42863	Jumper Strip - Terminal Block	1
7	42862	Ground Terminal Block	1
8	23-7-GD	Lock Washer #10	4
9	92-3527	Wire Assembly	1

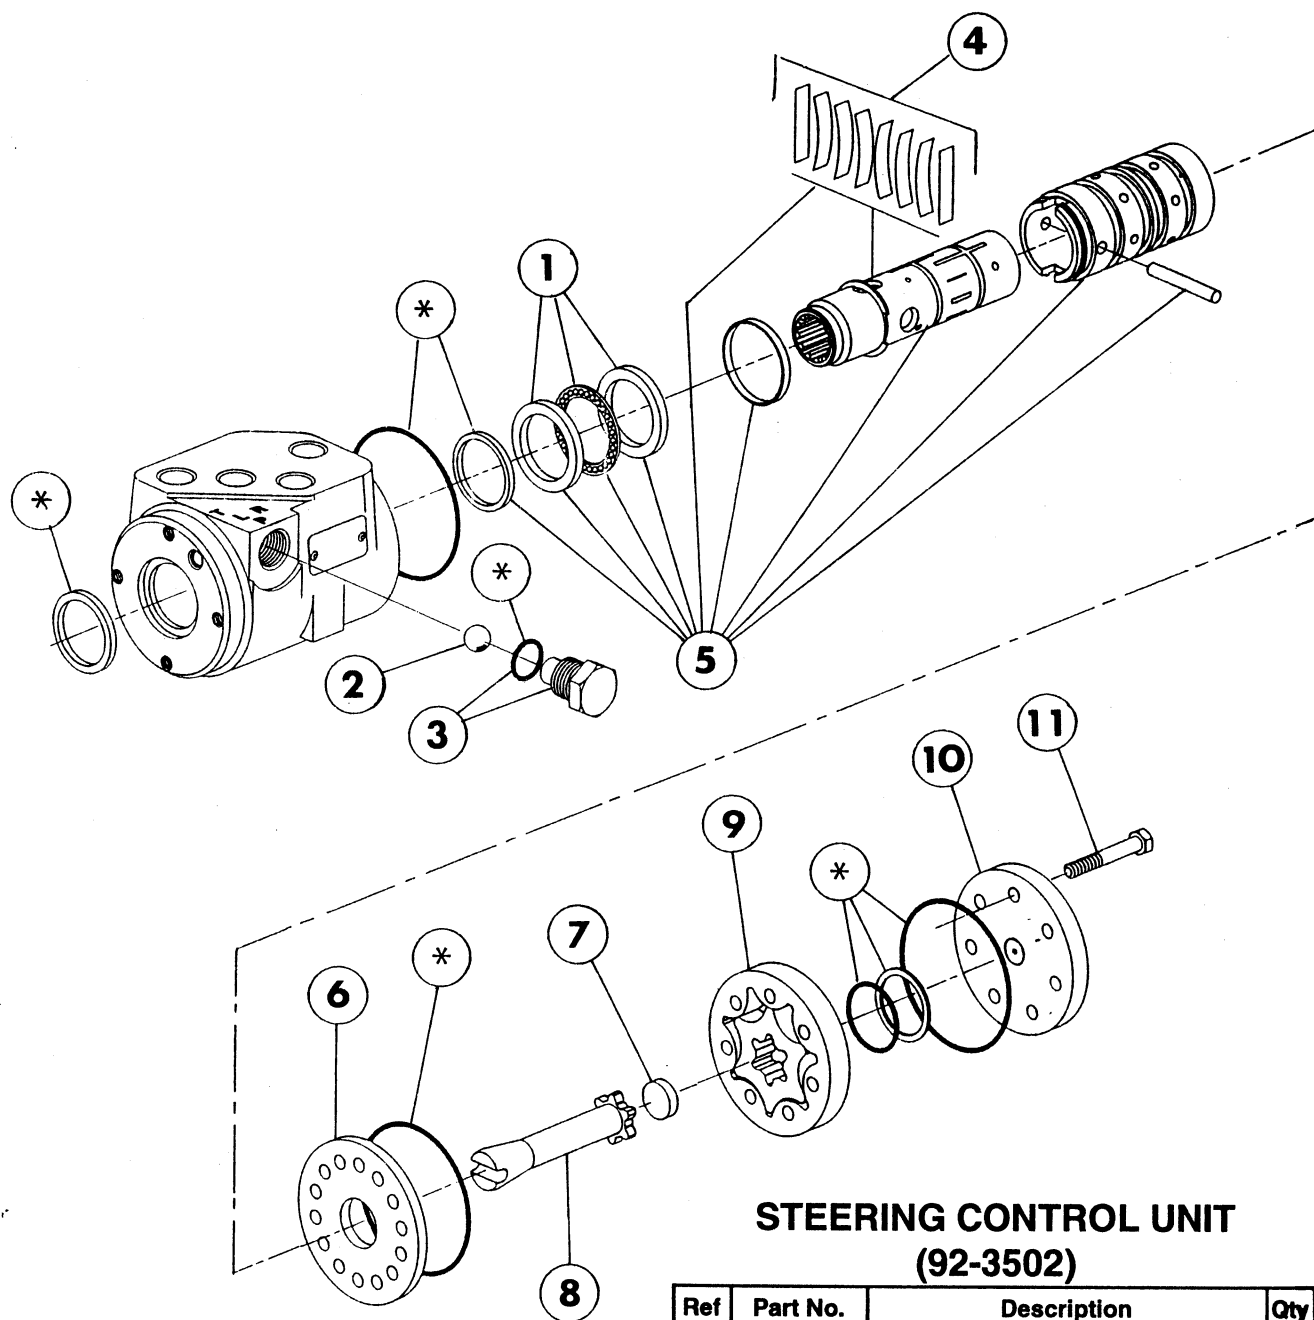

STEERING CONTROL UNIT (92-3502)

Ref	Part No.	Description	Qty
1	92-3839	Bearing Kit (f/w 92-3840)	1
2	92-3842	Check Ball	1
3	92-3841	Plug/O-Ring	1
4	93-1023	Spring Centering Kit (f/w 92-3840)	1
5	92-3840	Control Parts Assembly	1
6	92-3843	Wear Plate	1
7	92-3845	Spacer	1
8	92-3844	Drive	1
9	92-3846	Gerotor	1
10	92-3847	End Cap	1
11	92-3848	Cap Screw	1
*	92-3849	Seal Kit - Includes all parts indicated by an *	7

This image shows a single page of white paper with horizontal blue or grey ruling lines. The lines are evenly spaced and run across the width of the page. There is no handwriting or other markings on the paper.