



MODEL NO. 41105-90001 & UP

PARTS CATALOG

MULTI PRO® 1100 VEHICLE

⚠ SAFETY AND INSTRUCTION DECALS

The following safety and instruction decals are installed on the vehicle. If any become damaged or illegible, replace them. Decal part numbers are listed below and in the parts catalog. Order replacements from your Authorized TORO Distributor.



Part No. 87-0580: Located on Floor Board, behind Console.




Part No. 87-0450: Located on underside of Seat Panel.




Part No. 41176: Located on Dash Panel, next to Ignition Switch.



Part No. 85-4730: Located on Pump Plate Bracket.

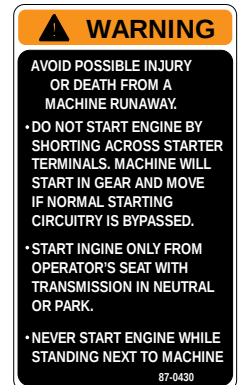

 Part No. 87-0430: Located on left side of Seat Support.




Part No. 65-3090: Located on upper right corner of Dash Panel.




Part No. 87-0640: Located on Seat Support, next to Throttle.




Part No. 62-5550: Located on Front of Console.

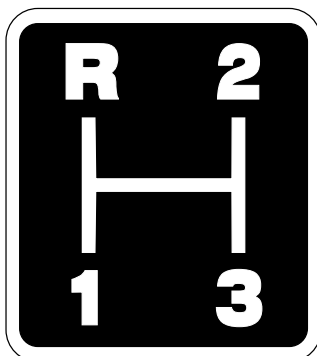

Part No. 41173: Located right hand side of Seat Support, in front of Gear Shifter.

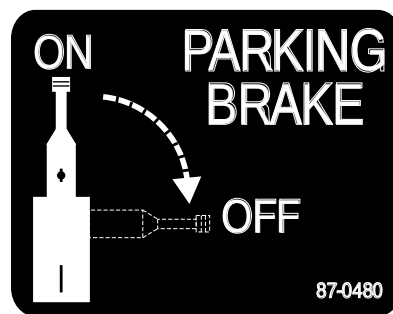


Part No. 87-0480: Located on Floor Board at right of Emergency Brake.

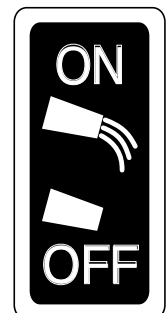

Part No. 41174: Located top of Seat Support near Accessory Control Handle.

MULTI PRO 1100

Part No. 87-0630: Located on Console Front.

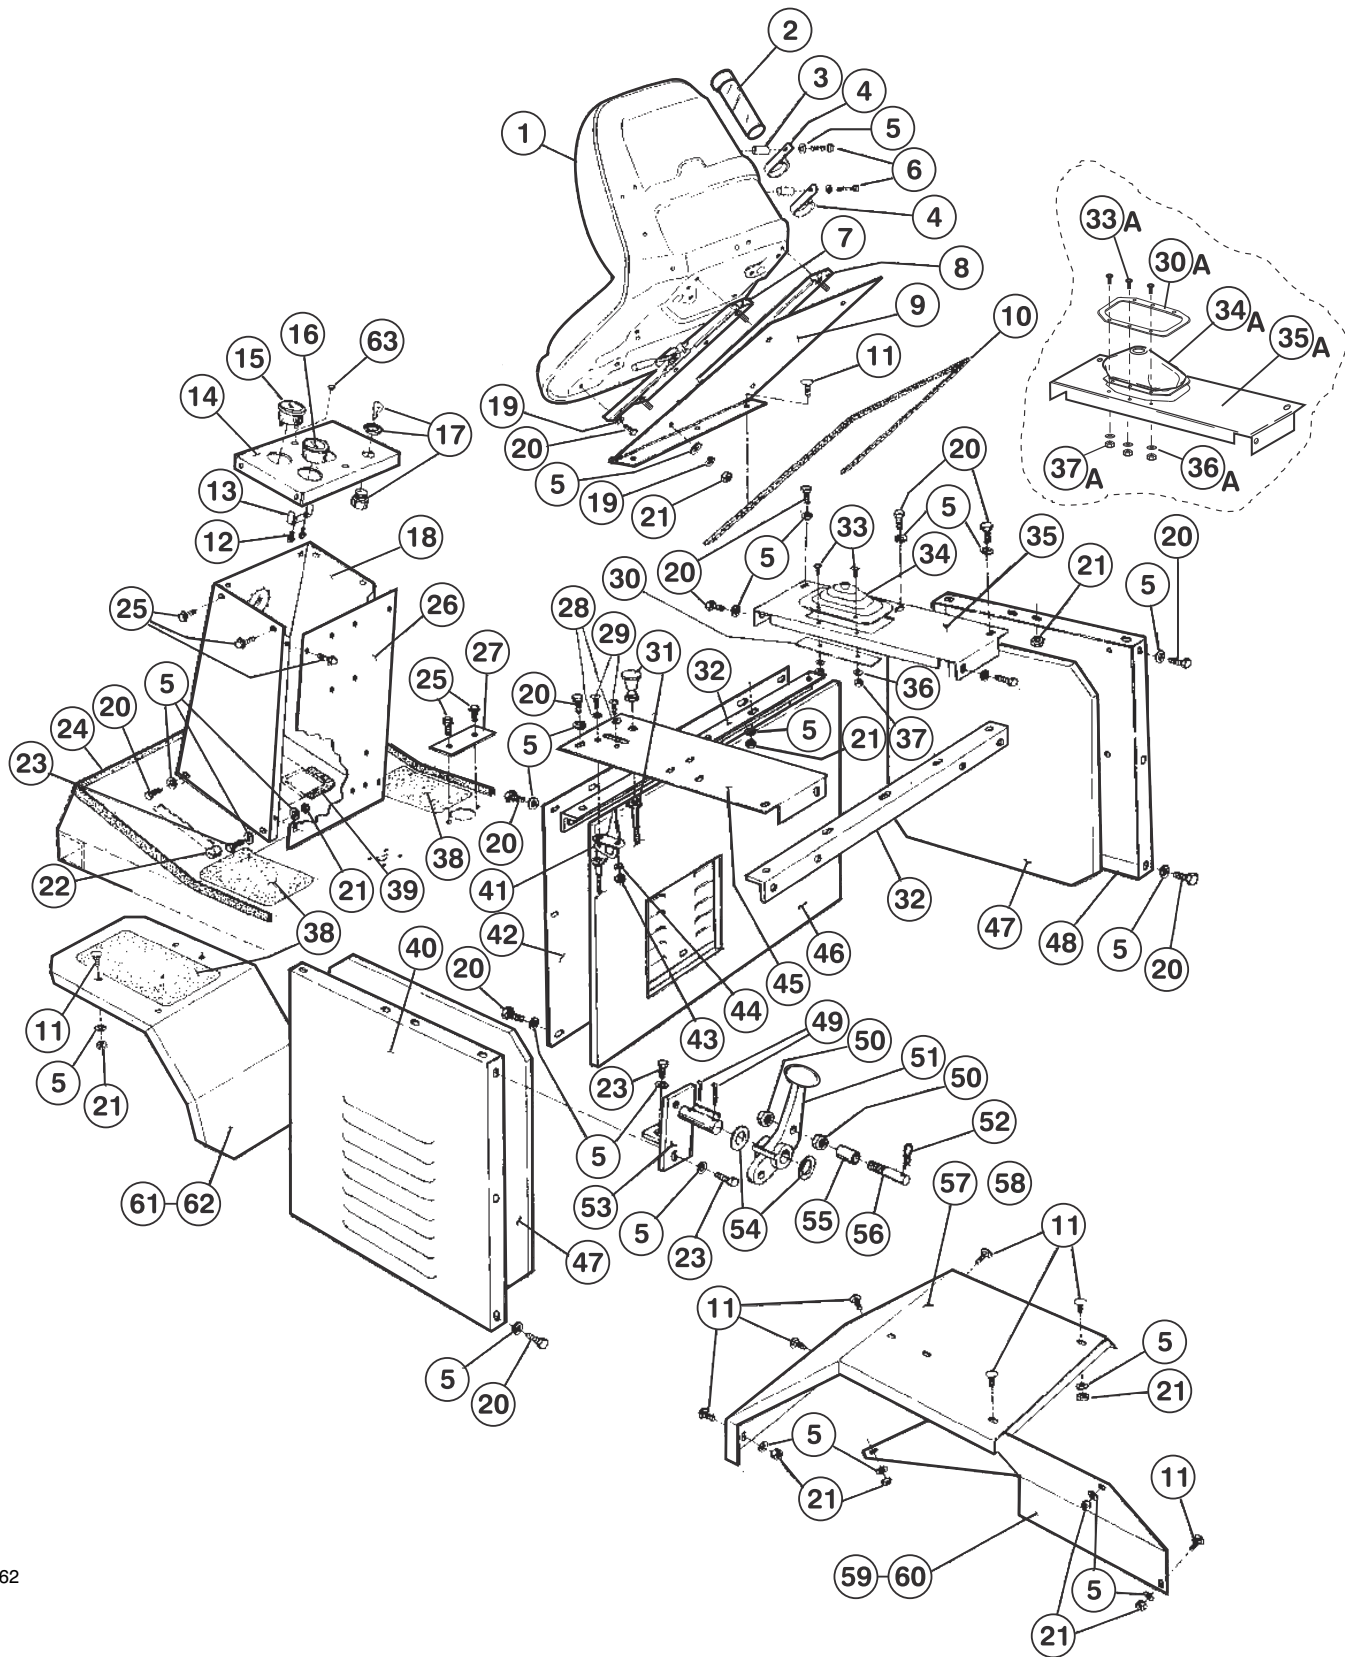

1462

SEAT, SHROUDS, CONSOLE & GAUGES


SEAT, SHROUDS, CONSOLE & GAUGES

#	Part No.	Description	Qty
1	92-1180	Seat Assembly	1
2	42559	Storage Tube-Manuals	1
3	92-3973	Spacer	2
4	42560	Tube Mounting Bracket	2
5	3256-23	Flat Washer, 5/16	68
6	322-7	HHCS, 5/16 NC x 1-1/2	2
7	51-0790	Latch & Slide Seat Adjuster-L.H.	1
8	51-0780	Slide Seat Adjuster-R.H.	1
9	41686	Seat Panel Assembly	1
10	41689	Seat Trim	1
11	3230-1	Carriage Bolt, 5/16 NC x 3/4"	25
12	32144-73	Hex Washer Hd. Self-Tap Screw, # 10 x 3/8"	2
13	41116	Mounting Bracket - Amp Gauge	1
14	92-3500	Dash Panel Ass'y	1
15	66-2950	Hour Meter	1
16	41115	Amp Gauge	1
17	31872	Key Switch & Key	1
18	92-0484	Console Wrapper Ass'y	1
19	3253-4	Lock Washer, 5/16"	8
20	322-3	HHCS, 5/16 NC x 3/4"	28
21	3217-6	Hex Nut, 5/16 NC	39
22	41754	Rubber Pedal Stop	2
23	322-5	HHCS, 5/16 NC x 1"	3
24	42767	Floor Trim	1
25	32104-57	Hex Washer Hd. Self-Tap Screw, 1/4 NC x 5/8	12
26	40145	Console Cover - Rear	1
27	40121	Cylinder Floor Cover Plate	1
28	3256-14	Flat Washer, #10	2
29	32144-125	Hex Washer Hd. Self-Tap Screw, #10 NC x 3/4"	2
30	92-3975	Strap-Bellow Clamp	2
(A) 30	87-3760	Plate- Shift Boot	1
31	41697	Choke Controls	1
32	41684	Seat Box Angle Ass'y	2

* Not Illustrated

(A) Leather Shift Boot Ass'y Parts.

#	Part No.	Description	Qty
33	92-3911	Flange Screw, 1/4 x 3/4"	4
(A) 33	3250-13	Hex Hd Screw	6
34	92-3974	Rubber Bellow - Shifter	1
(A) 34	87-8620	Leather Shift Boot	1
35	41682	Top Panel - R.H.	1
(A) 35	99-0737	Panel- Top Right	1
36	3253-3	Lock Washer, 1/4"	4
(A) 36	3253-3	Lock Washer, 1/4"	6
37	3217-5	Hex Nut, 1/4 NC	4
(A) 37	3296-2	Hex Hd Lock Nut	6
38	92-0032	Safety Track	4
39	92-3627	Hole Trim	1
40	42972	Side Panel - L.H.	1
41	41696	Throttle Control Ass'y	1
42	41680	Front Panel	1
43	3217-26	Hex Nut #10 NC	2
44	3253-17	Lock Washer # 10	2
45	41683	Top Panel L.H.	1
46	92-3786	Noise Barrier - Front Panel	1
47	92-3784	Noise Barrier - Side Panel	2
48	41753	Side Panel - R.H.	1
49	3272-12	Cotter Pin, 1/8 x 1 1/4"	2
50	3218-3	Jam Nut, 3/8 NC	2
51	561555	Control Lever	1
52	328967	Hair Pin Cotter	1
53	41690	Handle Bracket Ass'y	1
54	358042	Special Washer	2
55	92-3835	Spacer	1
56	92-3834	Handle Pin	1
57	42975	Rear Fender - L.H. (shown)	1
58	42973	Rear Fender - R.H.	1
59	42976	Inner Fender L.H. (shown)	1
60	42974	Inner Fender R.H.	1
61	42763	Front Fender L.H.	1
62	42762	Front Fender R.H.	1
63	94-7290	Hole Plug	1
*	93-6184	Splash Guard Kit	
*	93-6181	Individual Splash Guard	

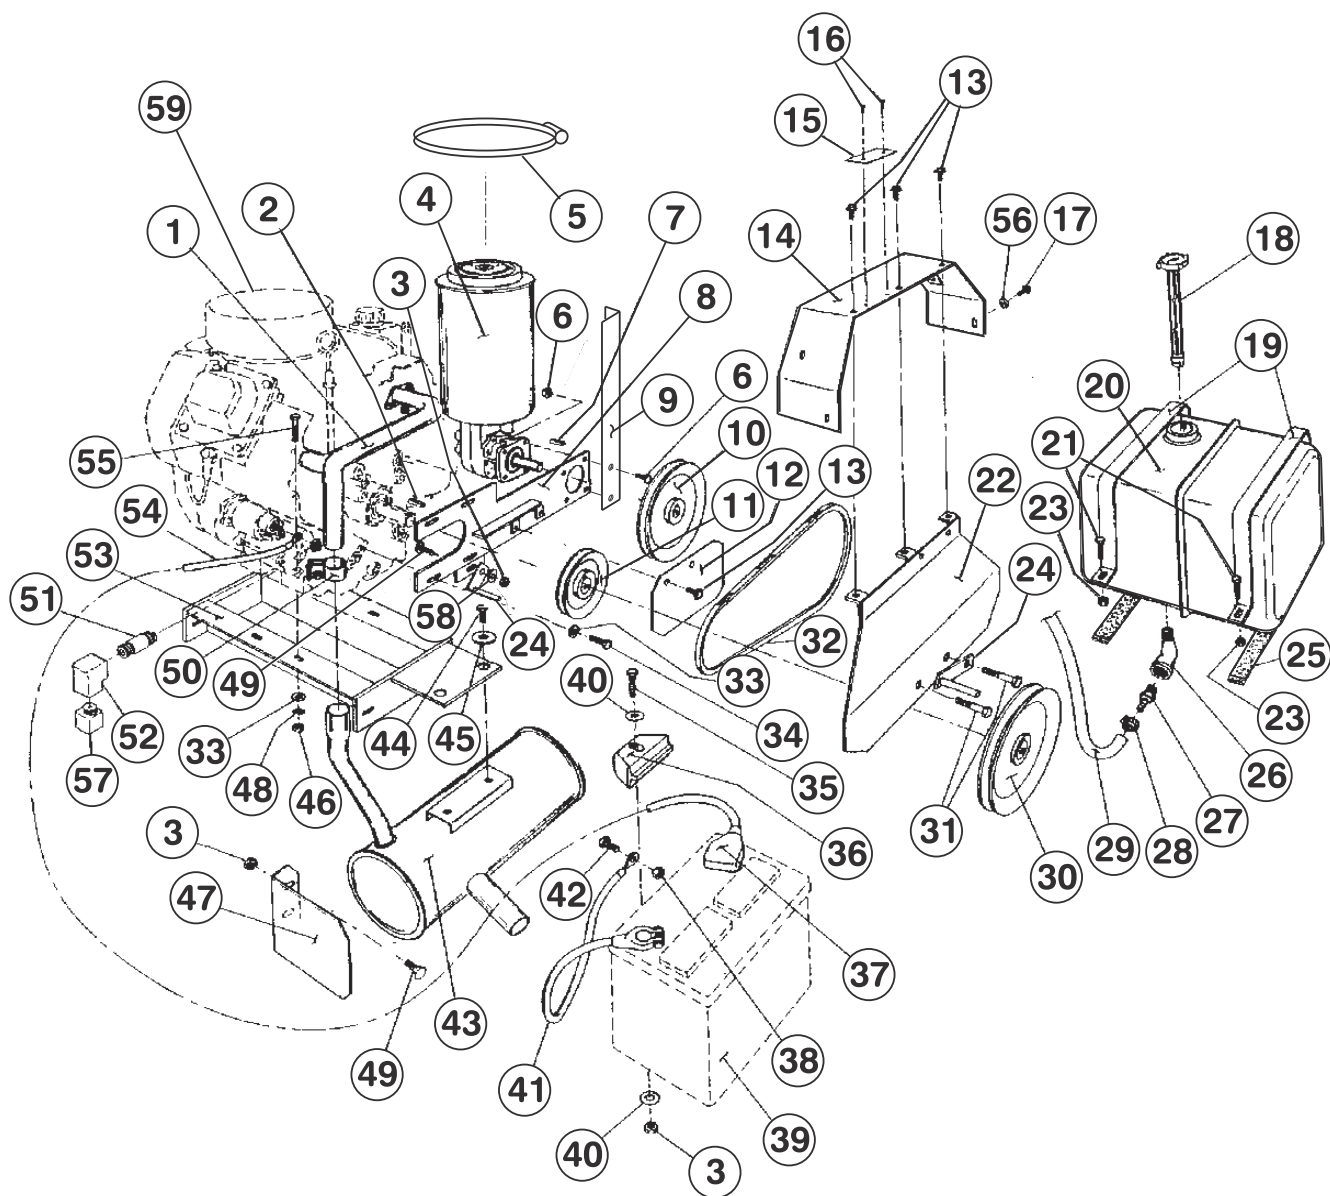


1451

ENGINE SHIELDS & STEERING PUMP

ENGINE SHIELDS & STEERING PUMP

#	Part No.	Description	Qty
1	93-6196	Header Pipe Ass'y	1
2	93-6167	Square Key, 1/4 x 2 1/8"	1
3	3217-6	Hex Nut, 5/16 NC	4
4	92-0347	Pump w/Reservoir	1
5	95-2418	Pump Clamp	1
6	322-5	HHCS, 5/16 NC x 1"	4
	32153-3	Hex Lock Nut, 5/16 NC	4
7	92-3876	Square Key	1
8	92-3510	Pump Mounting Plate Ass'y	1
9	95-2419	Pump Plate Bracket	1
10	92-0487	Power Steering Pulley, 6"	1
11	92-0488	Power Steering Pulley, 4"	1
12	92-3621	Belt Shield	1
13	32104-57	Hex Washer Hd Self-Tapping Screw, 1/4 NC x 5/8"	5
14	92-3619	Heat Deflector Ass'y	1
15	80-9350	Hot Surface Plate	1
16	42451	Pop Rivet	2
17	42605	Metric Screw	4
18	41117	Fuel Cap and Gauge	1
19	431366	Fuel Tank Strap	2
20	419018	Fuel Tank Ass'y	1
21	321-8	HHCS, 1/4 NC x 1 1/4"	4
22	92-3624	Heat Shield Ass'y	1
23	32146-17	Hex Lock Nut, 1/4 NC	4
24	92-3522	Belt Guide Ass'y	2
25	40228	Armaflex Strip	NS
26	9900	90° Stree Elbow	1
27	26291	Hose Barb	1
28	97406	Hose Clamp	2
29	92-3626	Hose Tank to Filter	1

#	Part No.	Description	Qty
30	40022	Engine Pulley - Sprayer	1
31	324-9	HHCS, 7/16 NC x 2 1/4"	2
32	92-0491	Power Steering Belt	1
33	3256-4	Flatwasher, 3/8	8
34	323-6	HHCS, 3/8 NC x 1"	4
35	322-9	HHCS, 5/16 NC x 1 3/4"	1
36	66-2490	Battery Retainer	1
37	41138	Protective Cap (f/w 92-0031Cable)	1
38	3217-7	Hex Nut, 3/8 NC	1
39		Battery, 12 Volt	1
40	3256-3	Flatwahrer, 5/16	2
41	99060	Battery Ground Cable	1
42	323-4	HHCS, 3/8 NC x 3/4"	1
43	93-6195	Muffler Ass'y	1
	42472	Spark Arrestor, 1 1/2" Registered, (Optional)	1
44	322-3	HHCS, 5/16 NC x 3/4"	2
45	356303	Flatwasher	2
46	3219-3	Hex Nut, 3/8 NF	4
47	92-0499	Heat Dflector Plate	1
48	3253-11	Lockwasher, 3/8	4
49	3230-1	Carriage Bolt, 5/16 NC x 3/4"	3
50	93-6197	Muffler Clamp	1
51	92-3647	Pipe Nipple, 3/8 NPT x 2	1
52	95023	90° Hyd. Elbow, 3/8 FPT	1
53	92-0497	Engine Base Ass'y	1
54	92-0031	Battery Cable and Cap	1
55	3211-8	HHCS, 3/8 NF x 1 3/4"	4
56	3256-16	Flatwasher, #12	4
57	42435	Pipe Plug	1
58	3256-23	Flatwasher, 5/16 S.A.E.	1
59	92-0492	18hp KOHLER Command Engine PS-62517	1

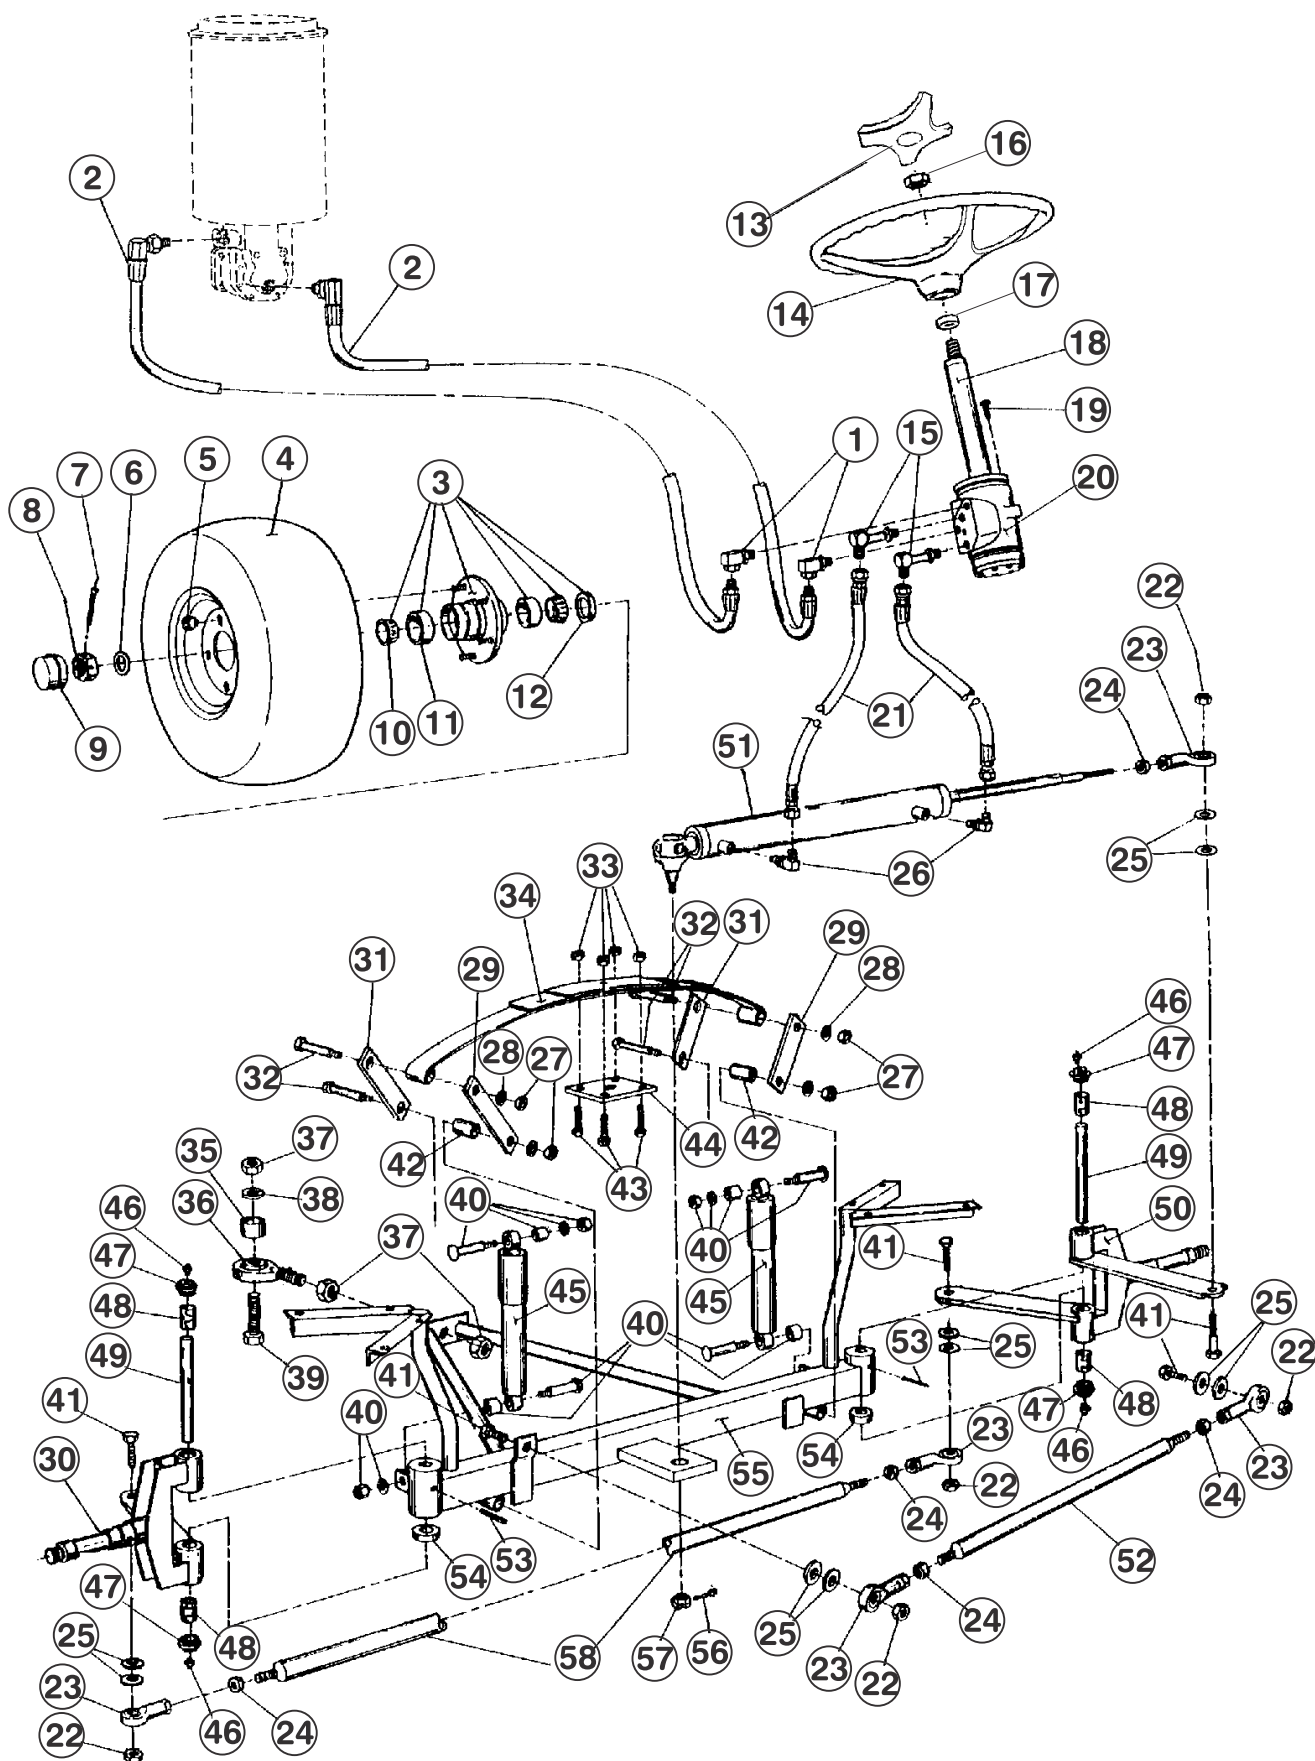



1452

FRONT AXLE & STEERING

FRONT AXLE & STEERING

#	Part No.	Description	Qty
1	92-3508	90° Swivel Adapter	2
2	92-3507	Hose Ass'y - Unit to Pump	2
	93-0884	Hose Cover	2
	95672	Tie Strap	4
3	40085	Hub Ass'y	2
4	93-6487	Front Wheel and Tire Ass'y	2
	404683	Front Wheel Rim	2
	93-6486	Front Tire	2
5	321077	Wheel Nut (f/w Hub Ass'y)	10
6	358042	Special Flat Washer	2
7	3272-13	Cotter Pin, 1/8 x 1 1/2"	2
8	32136-5	Hex Slotter Nut, 3/4 NF	2
9	40438	Dust Cap (f/w Hub Ass'y)	2
10	40440	Cone (f/w Hub Ass'y)	4
11	40439	Cup (f/w Hub Ass'y)	4
12	41321	Seal (f/w Hub Ass'y)	2
13	88-3870	Insert	1
14	93-5212	Steering Wheel	1
	94-3500	Steering Wheel Ass'y (ref No. 13,14,16)	
15	92-3505	90° Adapter	2
16	92-3513	Metric Hex Nut, M16 x 1.5 Thrd	1
17	93-5439	Seal	1
18	94-8792	Steering Column	1
19	42605	Hex Hd Metric Screw M6 x 1 Thrd x 16 mm	4
20	92-3502	Steering Control Unit	1
21	92-3979	Hose Ass'y - Power Steering	2
22	32153-14	Lock Nut, 1/2 NF	5
23	522087	Rod End, 1/2 NF	5
24	3220-15	Hex Jam Nut, 1/2 NF	5
25	3256-26	Flat Washer, 1/2	10
26	92-3504	90° Adapter, 9/16	2
27	3217-8	Hex Nut, 7/16 NC	4

#	Part No.	Description	Qty
28	3253-6	Lockwasher, 7/16	4
29	42777	Shackle - Front	2
30	40078	Yoke Ass'y (Right Hand)	1
31	42776	Shackle, Rear	2
32	42599	Shoulder Bolt	4
33	32153-2	Lock Nut, 3/8 NC	4
34	99-0569	Spring - Leaf	1
	42589	Bushing (f/w Spring)	2
35	42772	Spacer Tube	1
36	522085	Rod End, 3/4 NF	1
37	3219-7	Hex Nut, 3/4 NF	3
38	3253-9	Lockwasher, 3/4	1
39	3216-1	HHCS, 3/4 NF x 2 3/4"	1
40	42691	Bolt Ass'y	4
41	3213-14	HHCS, 1/2 NF x 1 3/4" (Grade 5)	5
42	42592	Bushing, Shackle	2
43	323-11	HHCS, 3/8 NC x 2 1/4" (Grade 5)	4
44	42575	Spring Mounting Plate	1
45	42690	Shock Absorber	2
46	361011	Grease Fitting	4
47	539048	Special Plug	4
48	728062	King Pin Bearing	4
49	40081	King Pin	2
50	92-0421	Yoke Ass'y (Left Hand)	1
51	92-3978	Hydraulic Cylinder Ass'y	1
52	42689	Steering Tube	1
53	32121-78	Spring Pin, 1/4 x 2"	2
54	307358	Thrust Bearing	2
55	92-0418	Front Axle Ass'y	1
56	3272-11	Cotter Pin, 1/8 x 1"	1
57	32136-13	Hex Slotted Nut, 9/16 NF	1
58	92-3528	Steering Tube	1
59	40078	Yoke Ass'y (Right Hand)	1

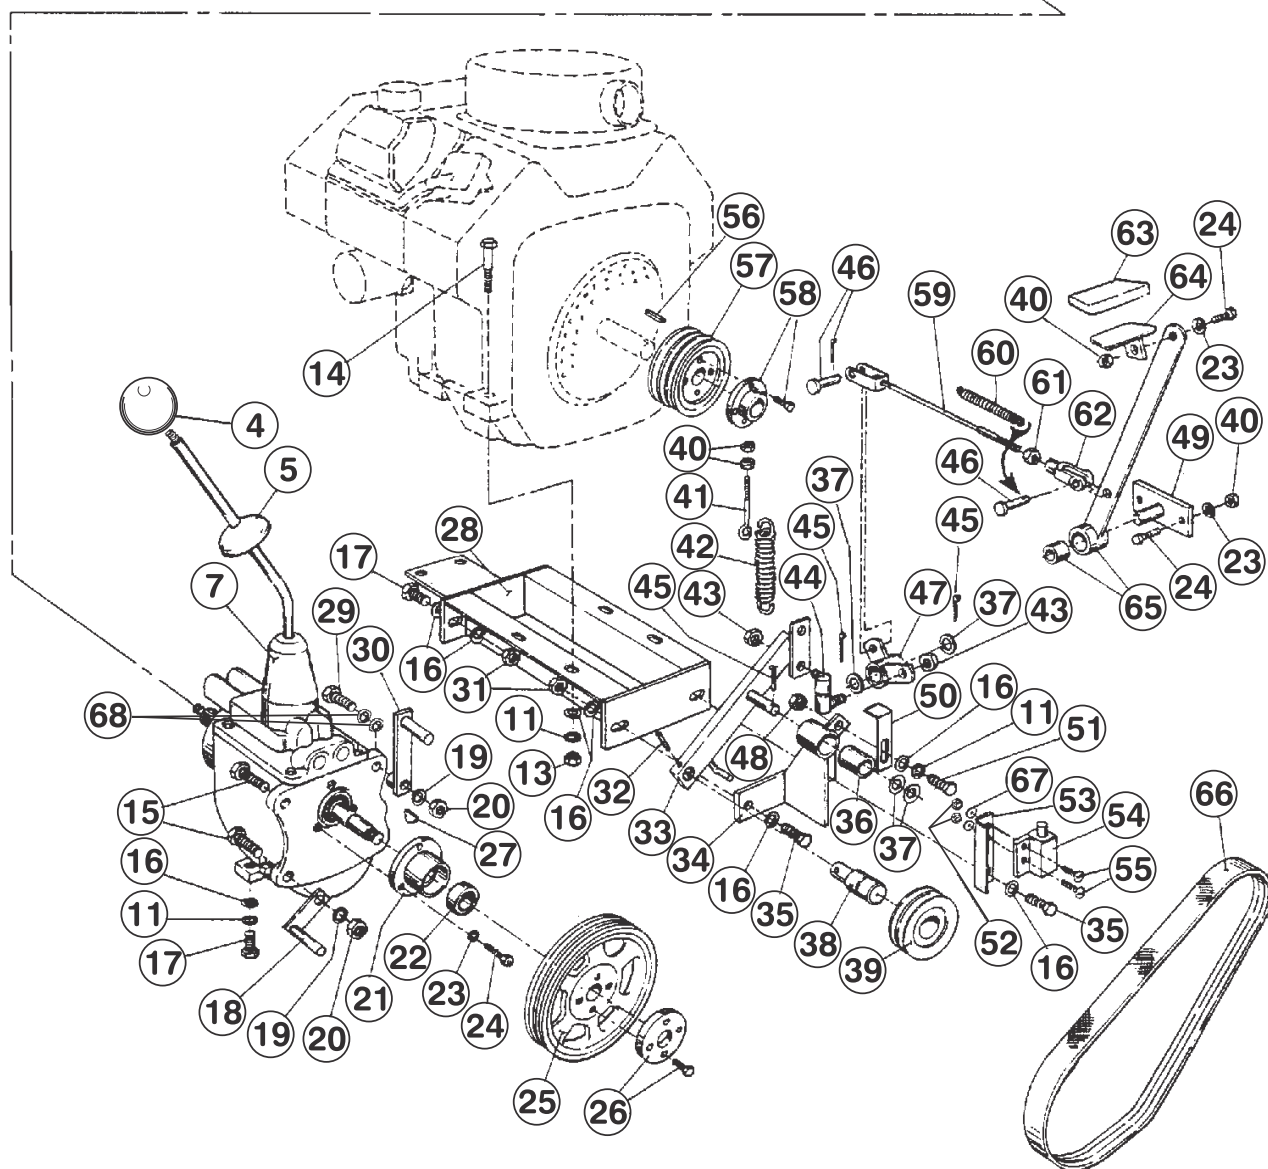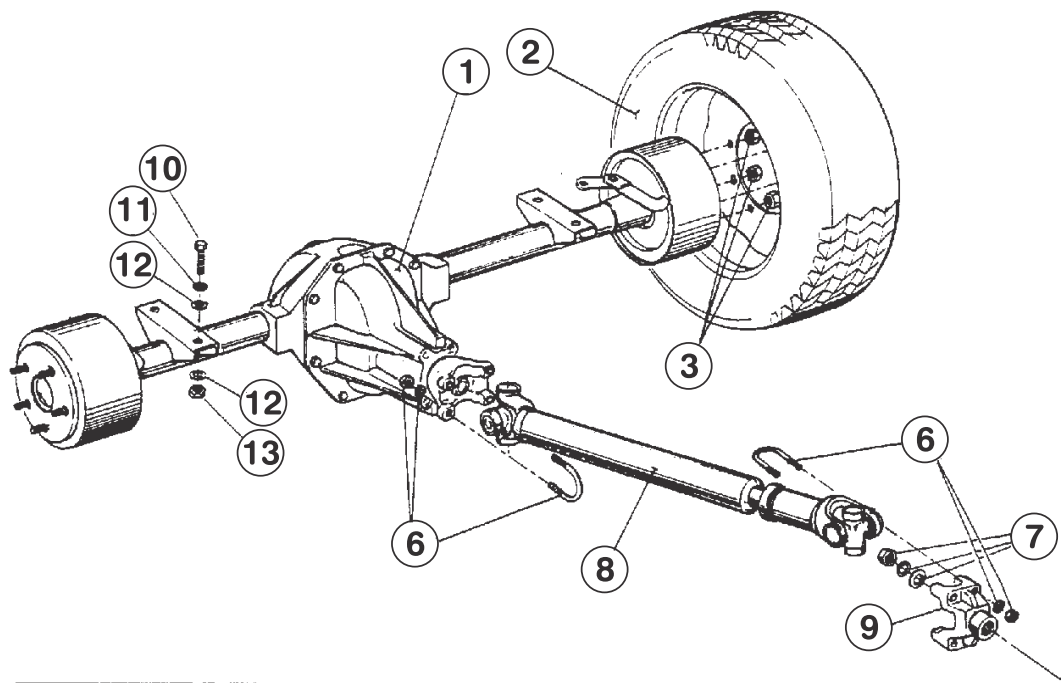


TRACTION DRIVE

TRACTION DRIVE

#	Part No.	Description	Qty
1	92-8277	Rear Axle Ass'y	1
2	95-2179	Rear Wheel and Tire Ass'y	2
	87-6740	Tire (f/w 95-2179 Ass'y)	2
	95-2180	Wheel Rim (f/w 95-2179 Ass'y)	2
3	321077	Wheel Nut	10
4	233-42	Gear Shift Knob	1
5	7275	Ruber Boot	1
6	40220	U-Bolt Ass'y	4
7	41004	Transmission (T-96)	1
8	95-2057	Drive Shaft Ass'y	1
	41773	Journal & Bearings (f/w 380002)	2
9	41005	Uotput Yoke - Transmission	1
10	3211-5	HHCS, 3/8 NF x 1 1/4"	4
11	3253-11	Lock Washer, 3/8	7
12	3256-24	Flat Washer, 3/8 S.A.E.	8
13	3219-3	Hex Nut, 3/8 NF	8
14	3211-8	HHCS, 3/8 NF x 1 3/4"	4
15	324-6	HHCS, 7/16 NC x 1 1/2"	3
16	3256-4	Flat Washer, 3/8	16
17	323-6	HHCS, 3/8 NC x 1"	4
18	40547	Belt Guide Ass'y	1
19	3253-6	Lock Washer, 7/16	4
20	3217-8	Hex Nut, 7/16 NC	4
21	92-0013	Bearing Housing	1
22	6610	Transmission Bearing	1
23	3253-4	Lock Washer, 5/16	6
24	322-5	HHCS, 5/16 NC x 1"	6
25	40015	Transmission Pulley, (7.0" P.D.)	1
26	41017	Bushing (15/16" Bore) includes fasteners	1
27	3257-10	Woodruff Key (#809)	1
28	92-0497	Engine Base Ass'y	1
29	324-9	HHCS, 7/16 NC x 2 1/4"	1
30	41700	Belt Guide Ass'y	1
31	32153-2	Lock Nut, 3/8 NC	4
32	32121-16	Spring Pin, 3/16 x 1"	1
33	41654	Idler Ass'y	1
34	41651	Clutch Pivot Ass'y	1
35	323-9	HHCS, 3/8 NCx 1 3/4"	2

#	Part No.	Description	Qty
36	307283	Bearing (f/w Clutch Pivot Ass'y)	1
37	358042	Special Washer	7
38	92-0056	Bearing	1
39	40018	Idler Pulley	1
40	3217-6	Hex Nut, 5/16 NC	5
41	92032	Eye Bolt	1
42	5206	Clutch Spring	1
43	32153-11	Lock Nut, 3/8 NF	2
44	41703	Ball Joint Ass'y	1
	41704	Ball Joint (f/w 41703)	2
	41705	Threaded Rod, 3/8 NF(f/w 41703)	1
45	3272-12	Cotter Pin, 1/8 x 1 1/4	3
46	40258	Clevis Pin & Cotter Ass'y	2
47	41658	Rocker Arm Ass'y	1
	307276	Bearing (f/w 41658 Ass'y)	1
	361015	Grease Fitting	1
48	3217-7	Hex Nut, 3/8 NC	1
49	42754	Pivot Ass'y	1
50	40538	Belt Guide	1
51	323-6	HHCS, 3/8 NC x 1"	1
52	3217-26	Hex Nut, #10 NC	2
53	41664	Clutch Switch Mounting Brkt.	1
54	41104	Safety Interlock Switch	1
55	32144-125	Hex Washer Hd Self-Tap Screw , #10 NC x 3/4"	2
56	314233	Square Key, 1/4"	1
57	92-3981	Engine Pulley (4.0" P.D.)	1
58	92-3982	Engine Bushing (1.0" Bore)	1
59	41744	Clutch Cable Ass'y	1
60	41469	Spring	1
61	3220-2	Hex Jam Nut, 5/16 NF	1
62	40019	Clevis, 5/16 NF	1
63	42719	Pedal Pad	1
64	42716	Pedal Mounting Brkt.	1
65	40239	Clutch Arm Ass'y	1
	307276	Bearing (f/w Clutch Arm Ass'y)	1
66	41679	Vehicle Drive Belt	1
67	3253-17	Lock Washer, #10	2
68	3256-5	Flat Washer, 7/16	2

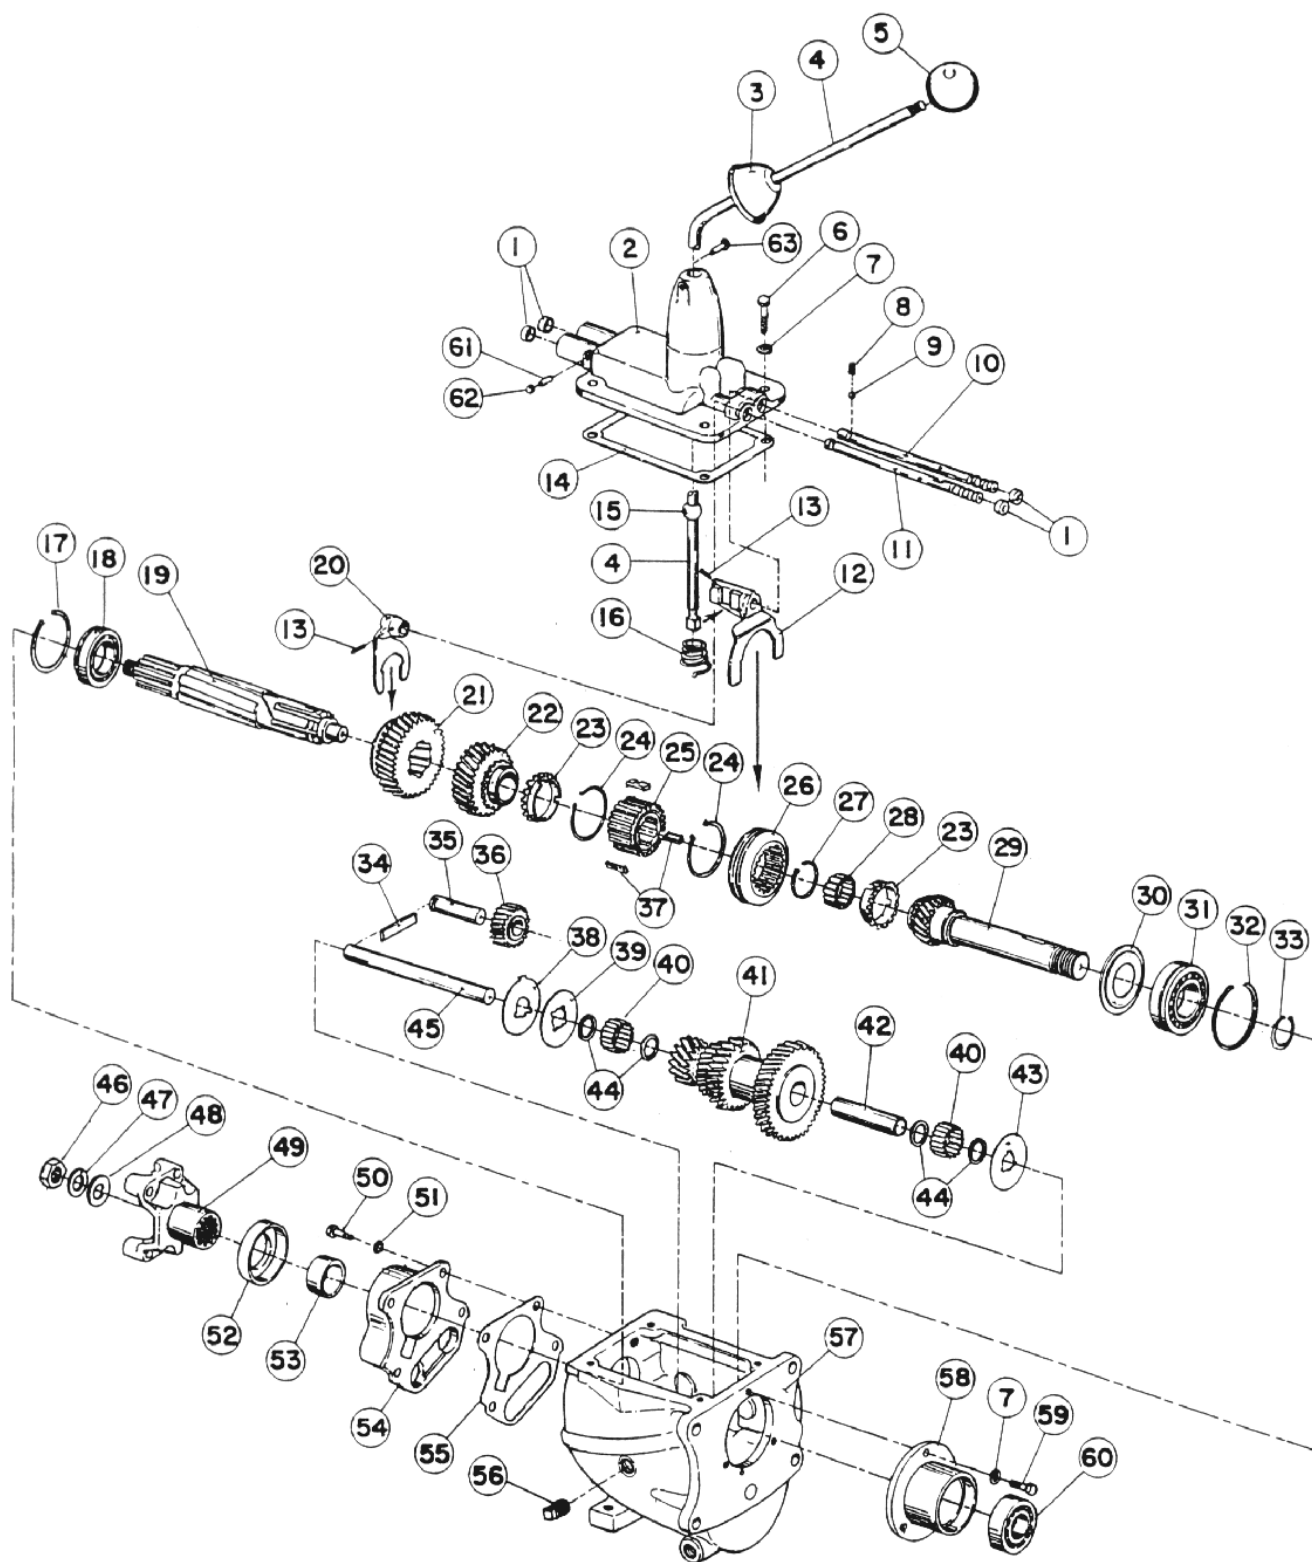

Note: Apply an RTV silicone sealant between the Transmission Case (57) and the Bearing Retainer (58). Also, use sealant on threads of the Cap Screws (59).


1454

T96 THREE-SPEED MANUAL TRANSMISSION

T96 THREE-SPEED MANUAL TRANSMISSION (41004)

#	Part No.	Description	Qty
1	92-0058	Shift Rail Cap	4
2	41033	Top Cover	1
3	7275	Rubber Boot	1
4	92-0059	Shift Lever	1
5	41112	Knob	1
6	322-3	HHCS, 5/16 NC x 3/4"	4
7	3253-4	Lock Washer, 5/16"	7
8	92-0055	Poppet Spring	2
9	7257	Steel Ball	2
10	41039	Shift Rail (High & Intermediate)	1
11	41040	Shift Rail (Low & Reverse)	1
12	41041	Shift Fork (High & Intermediate)	1
13	41042	Gear Shift Fork Pin	2
14	41043	Top Cover Gasket	1
15	41044	Fulcrum Ball	1
16	41045	Control Lever Spring	1
17	41046	Snap Ring	AR
18	41047	Rear Bearing	1
19	92-0061	Main Shaft	1
20	41049	Shift Fork (Low & Reverse)	1
21	41050	Low & Reverse Gear	1
22	41051	Second Gear & Bushing Ass'y	1
	41052	Second Gear Bushing (f/w Ref 22)	1
23	41053	Blocking Ring	2
24	41054	Syncro Spring	2
25	41055	Clutch Hub	1
26	41056	Clutch Sleeve	1
27	9302	Snap Ring Clutch Hub	1
28	7290	Roller Set (13)	1
29	7288	Input Shaft	1
30	41057	Oil Baffle	1
31	41058	Front Bearing	1
32	41059	Snap Ring	AR

#	Part No.	Description	Qty
33	41060	Snap Ring	AR
34	41061	Lock Plate	1
35	41062	Reverse Idler Shaft	1
36	95-2175	Reverse Gear & Bushing Ass'y	1
37	41065	Shifting Plate	3
38	41066	Thrust Washer	1
39	41067	Rear Thrust Washer	1
40	9304	Cluster Roller Bearings (40)	2
41	41068	Countershaft Gear	1
42	41069	Bearing Spacer	1
43	41070	Front Thrust Washer	1
44	9301	Bearing Spacer	4
45	41071	Countershaft	1
46	41072	Rear - Nut Mainshaft	1
47	41073	Lock Washer - Mainshaft	1
48	41074	Flat Washer - Mainshaft	1
49	41005	Output Yoke	1
50	324-2	HHCS, 7/16 NC x 3/4"	4
51	3253-6	Lock Washer, 7/16"	4
52	41077	Rear Seal	1
53	41082	Mainshaft Spacer	1
54	41078	Rear Bushing Retainer	1
55	41079	Rear Bearing Retainer Gasket	1
56	41080	Pipe Plug	1
57	41081	Transmission Case	NS
58	92-0013	Front Bearing Retainer	1
59	322-5	HHCS, 5/16 NC x 1"	3
60	6610	Bearing	1
61	41037	Interlock Plunger	1
62	41038	Taper Plug	1
63	40604	Control Housing Pin	1

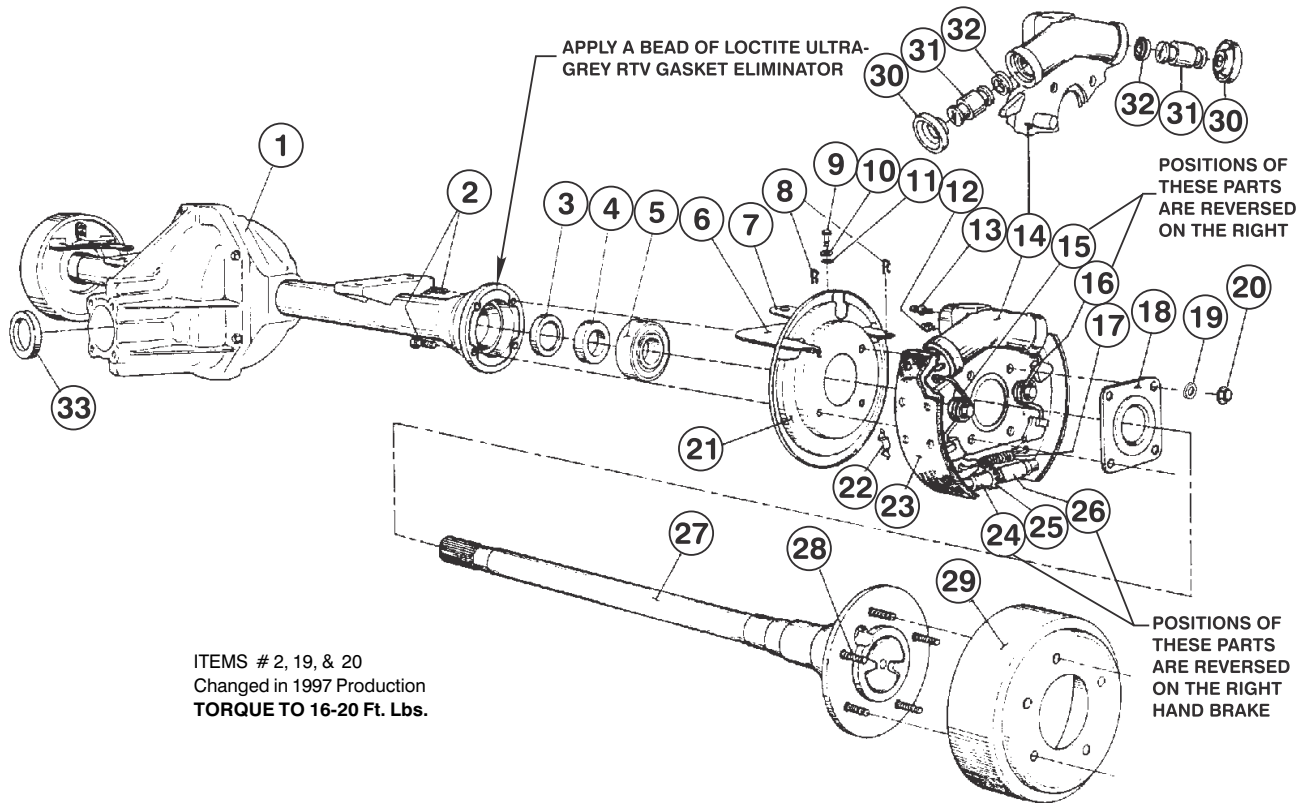


1455

REAR AXLE BRAKES

#	Part No.	Description	Qty
1	92-8277	Rear Axle Ass'y	1
2	94-6934	Brake Screw	8
3	92-1774	Oil Seal	2
4	24-8840	Bearing Retainer Ring	2
5	24-8180	Bearing Ass'y	2
6	40464	Strut Ass'y	2
7	40468	Lever - Parking Brake	2
8	21-9460	Retainer-Parking Brake Lever Pin	4
9	40467	Pin	2
10	40466	Spring Washer - Antirattle	2
11	40465		
12	41487*	Seat - Tube	2
13	40460	Screw - Bleeder	2
14	24-9530*	Torque Spider - Finished	2
15	21-9420	Spring - Shoe Return (L.H.)	2
16	21-9430	Spring - Shoe Return (R.H.)	2
17	21-5440	Spring Adjusting Screw	2

#	Part No.	Description	Qty
18	28-0670	Oil Seal	2
19	94-6936	Flat Washer	8
20	94-6935	Lock Nut	8
21	40475	Dust Shield	2
22	40476	Spring - Shoe Hold Down	2
23	84-8600	Shoe and Lining Ass'y - Primary and Secondary	2
24	21-9390	Socket Adjusting Screw	2
25	21-9370	Adjusting Screw	2
26	21-9380	Pivot Nut - Adjusting Screw	2
27	40445	Flange Axle Shaft - R.H.	1
	40446	Flange Axle Shaft - L.H.	1
28	92-8279	Wheel Bolt	10
29	92-8280	Drum	2
30	40459	Boot & Ring Ass'y-Wheel Cylinder	4
31	24-9540	Piston - Wheel Cylinder	4
32	24-9550	Cup - Hydraulic	4
33	42162	Front Transmission Seal	1

* These items must be ordered together.

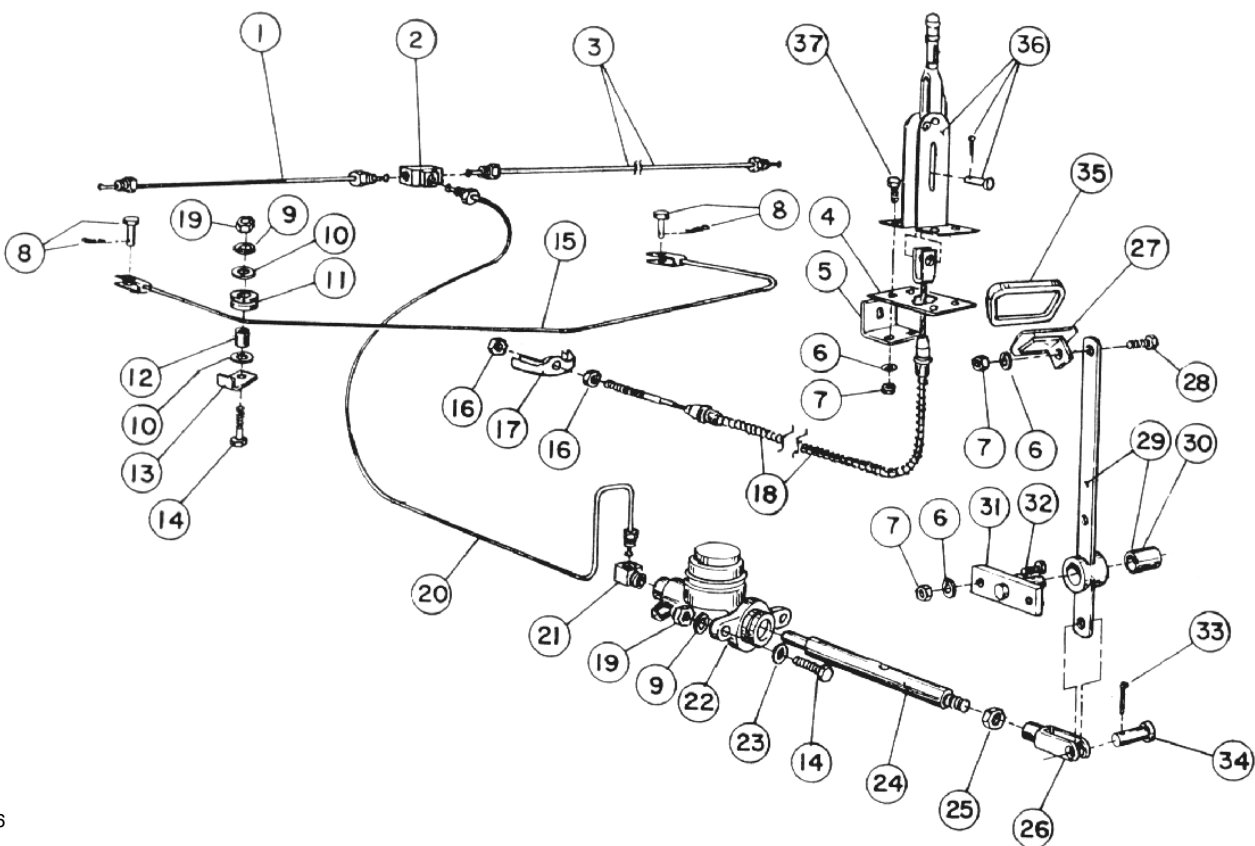


1456

BRAKES

#	Part No.	Description	Qty
1	40097	Tube Ass'y - (R.H.)	1
2	98346	Hydraulic Tee	1
3	98877	Tube Ass'y - (L.H.)	1
4	41738	Spacer Plate	1
5	41722	Front Panel Bracket	1
6	3253-4	Lock Washer, 5/16 NC	7
7	3217-6	Hex Nut, 5/16 NC	7
8	40258	Yoke Pin & Cotter	2
9	3253-11	Lock Washer, 3/8	4
10	3256-24	Flat Wsher, 3/8 SAE	4
11	40099	Rope Guide	2
12	92-0019	Guide Spacer	2
13	92-0020	Guide Lug	2
14	323-8	Hex Hd Cap Screw, 3/8 NCx1 1/2	4
15	42321	Cable Ass'y (Emergency Brake)	1
16	3220-2	Hex Jam Nut, 5/16 NF	2
17	28306	Brake Equalizer	1
18	41737	Brake Cable Ass'y	1
19	3217-7	Hex Nut, 3/8 NC	4

#	Part No.	Description	Qty
20	26032	Brake Tube Ass'y	1
21	28368	90° Elbow	1
22	99208	Master Cylinder	1
23	3256-4	Flat Washer, 3/8	2
24	40094	Brake Rod Ass'y	1
25	3219-3	Hex Jam Nut, 3/8	1
26	92037	Adjustable Clevis	1
27	42716	Pedal Mounting Brkt.	1
28	322-5	Hex Hd Cap Screw, 5/16 NC x 1	2
29	40238	Brake Arm Ass'y	1
30	307276	Bearing (f/w Brake Arm Ass'y)	1
31	42754	Pivot Ass'y	1
32	322-5	Hex Hd Cap Screw, 5/16 NC x 1	2
33	3272-12	Cotter Pin, 18 x 1 1/4	1
34	1126-P	Clevis Pin	1
35	42719	Foot Pad	1
36	30328	Brake Lever Ass'y	1
37	322-3	Hex Hd Cap Screw, 5/16 NC x 3/4	4

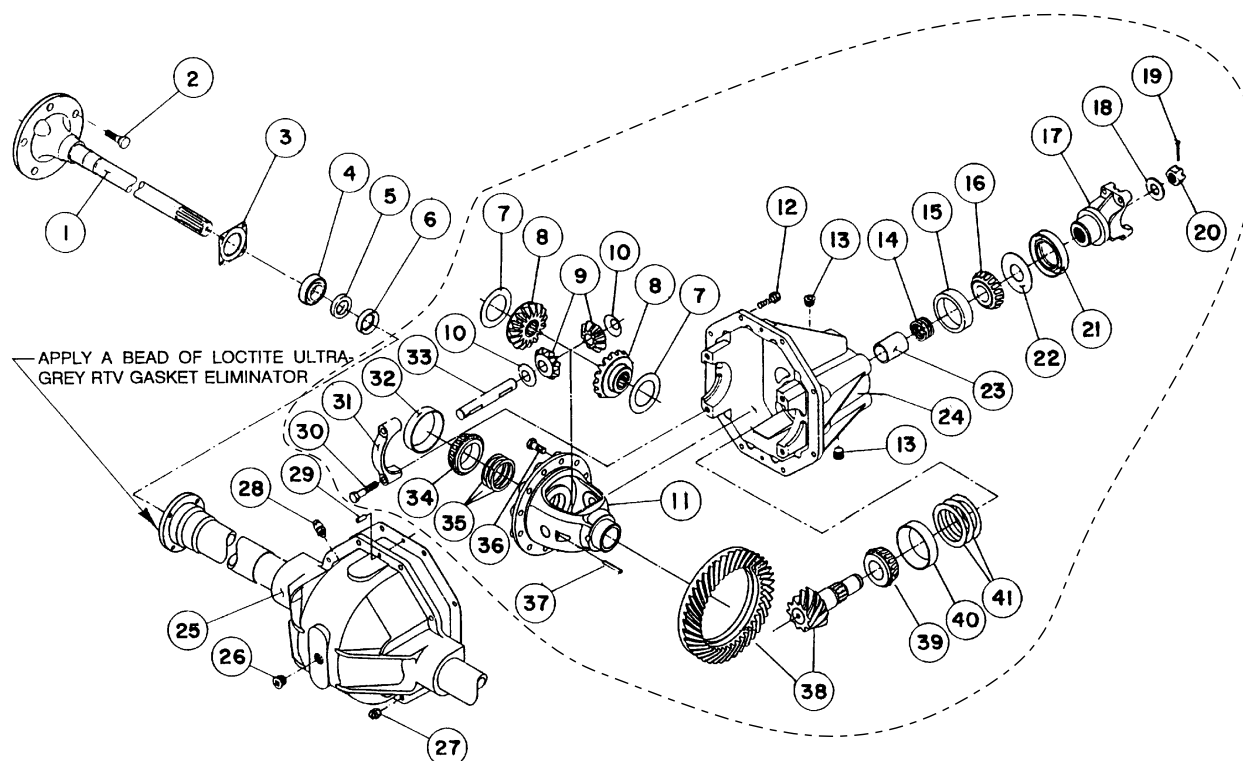

1457


DIFFERENTIAL (92-8277)

#	Part No.	Description	Qty
1	40445	Flange Axle Shaft (R.H.)	1
	40446	Flange Axle Shaft (L.H.)	1
2	40447	Wheel Bolt	10
3	40450	Oil Seal	2
4	40453	Bearing	2
5	40454	Wheel Bearing Retainer Ring	2
6	40455	Oil Seal	2
7*	42151	Thrust Washer	2
8*	42147	Side Gear	2
9*	42148	Pinion Mate	2
10*	42152	Thrust Washer	2
11*	42146	Differential Case	8
12*	40452	Housing Bolt	8
13*	42167	Oil Plug	2
14*	42176	Shim, .003	AR
	42177	Shim, .005	AR
	42178	Shim, .010	AR
	42179	Shim, .030	AR
15*	42156	Bearing Cup	1
16*	42155	Bearing Cone	1
17*	42169	End Yoke	1
18*	42161	Washer	1
19*	42159	Cotter Pin	1
20*	42160	Nut	1
21*	42162	Oil Seal	1

#	Part No.	Description	Qty
22*	42163	Shim	1
23*	42164	Spacer	1
24*	42154	Carrier (includes #30 & #31)	1
25	42170	Rear Axle Housing	1
26	42172	Pipe Plug	1
27	42171	Nut	8
28	42175	Vent Ass'y	1
29	42174	Dowel Pin	2
30*	43086	Bearing Cap Screw (f/w #24)	4
31*	43085	Bearing Cap (f/w #24)	2
32*	42165	Bearing Cup	2
33*	42149	Pinion Mate Shaft	1
34*	42166	Bearing Cone	2
35*	42183	Shim, .003	AR
	42184	Shim, .005	AR
	42185	Shim, .010	AR
	42186	Shim, .030	AR
36*	42168	Drive Gear Screw	10
37*	42150	Pinion Lock Pin	1
38*	42153	Matched Gear & Pinion Ass'y	1
39*	42157	Bearing Cone	1
40*	42158	Bearing Cup	1
41*	42180	Shim, .003	AR
	42181	Shim, .005	AR
	42182	Shim, .010	AR

* Indicates part is included in Carrier Assembly 95-9234

REF. NO.	TORQUE TO
24	10-12 FT. LBS.
25	10-12 FT. LBS.
27	114-150 IN. LBS.
32	168-204 IN. LBS.

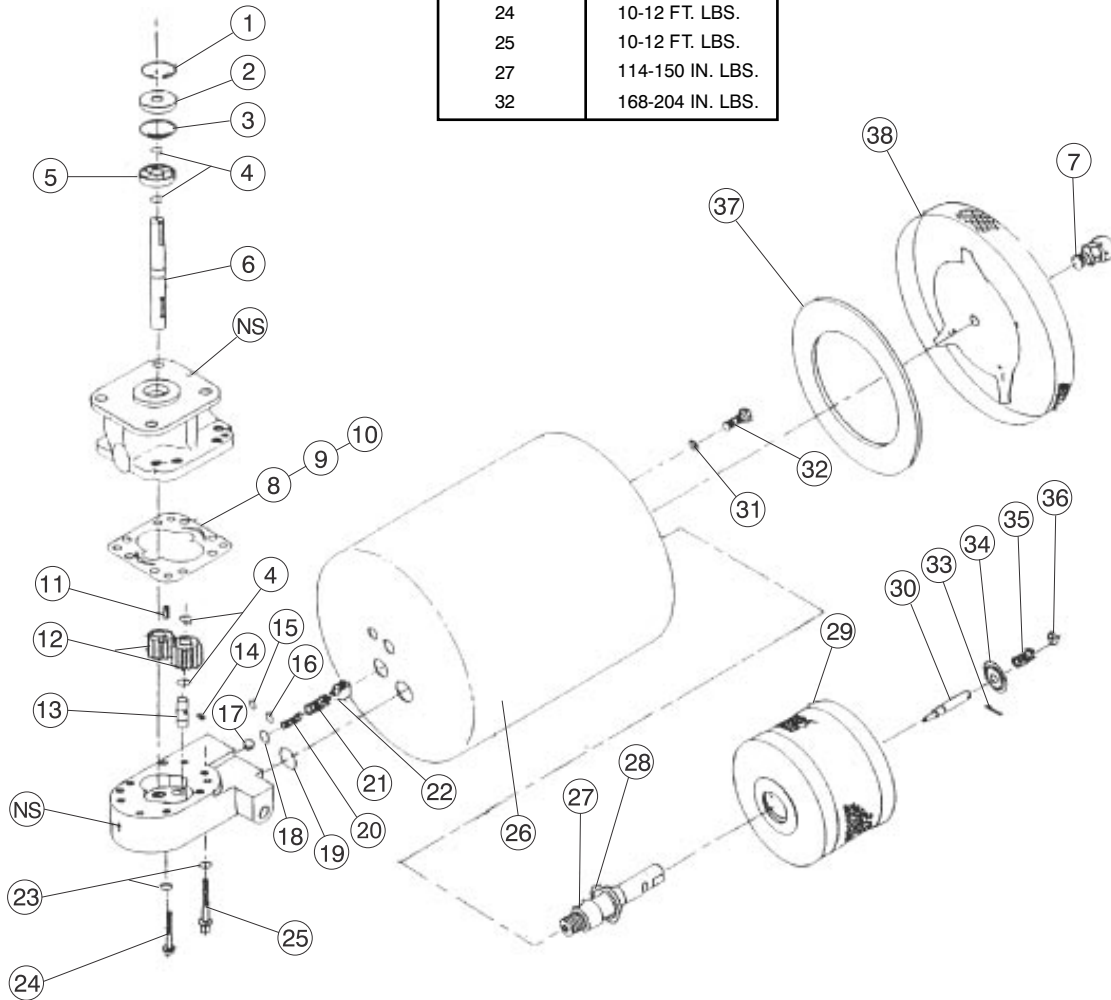


1458

STEERING PUMP & RESERVOIR (92-0347)

#	Part No.	Description	Qty
1	92-3873	Shaft Seal Snap Ring	1
2	92-3875	Shaft Oil Seal	1
3	92-3960	Spacer	1
4	92-3961	C - Rings	4
5	92-3874	Shaft Ball Bearing	1
6	92-3877	Drive Shaft	1
7	42175	Reservoir Vent	1
8	92-3881	Pump Housing Gasket	AR
	2260140	Silver (.00050 Thk)	
9	92-3882	Pump Housing Gasket	AR
	2260141	Gold (.00075 Thk)	
10	92-3880	Pump Housing Gasket	AR
	2260032	Amber (.00100 Thk)	
11	92-3876	Drive Shaft Key	1
12	92-3879	Drive Idler Gear	2
13	92-3878	Idler Shaft	1
14	92-3962	Drive Pin	1
15	*	O-Ring .562 x .688 x .062	1
16	*	O-Ring .428 x .625 x .094	1
17	92-3872	Steel Ball	1
18	*	O-Ring .562 x .750 x .094	1
19	*	O-Ring .750 x 1.00 x .125	1

#	Part No.	Description	Qty
20	92-3871	Spring .245 x 1.031	1
21	92-3870	Spring .420 x 1.00	1
22	92-3886	Adjusting Screw	1
23	23-9-GD	Lock Washer, 1/4	2
24	92-3883	Screw, 1/4-20 x 1 3/8	6
25	92-3884	Screw, 1/4-20 x 1 3/4	2
26	92-3857	Reservoir, Black	1
27	92-3865	Retaining Stud	1
28	92-3864	Sealing Cup	1
29	92-3863	Filter Element	1
30	92-3858	Relief Valve Stud	1
31	3253-4	Mntg. Screw Lock Washer, 5/16	1
32	322-1	Reservoir Mntg. Screw, 5/16 x 1/2	1
33	92-3859	Relief Valve Roll Pin	1
34	92-3862	Relief Valve Sealing Cup	1
35	92-3861	Relief Valve Spring	1
36	92-3860	Relief Valve Spring Cup	1
37	92-3856	Reservoir Cover Gasket	1
38	92-8340	Reservoir Cover	1

* Indicates parts included in kit number 92-3885.

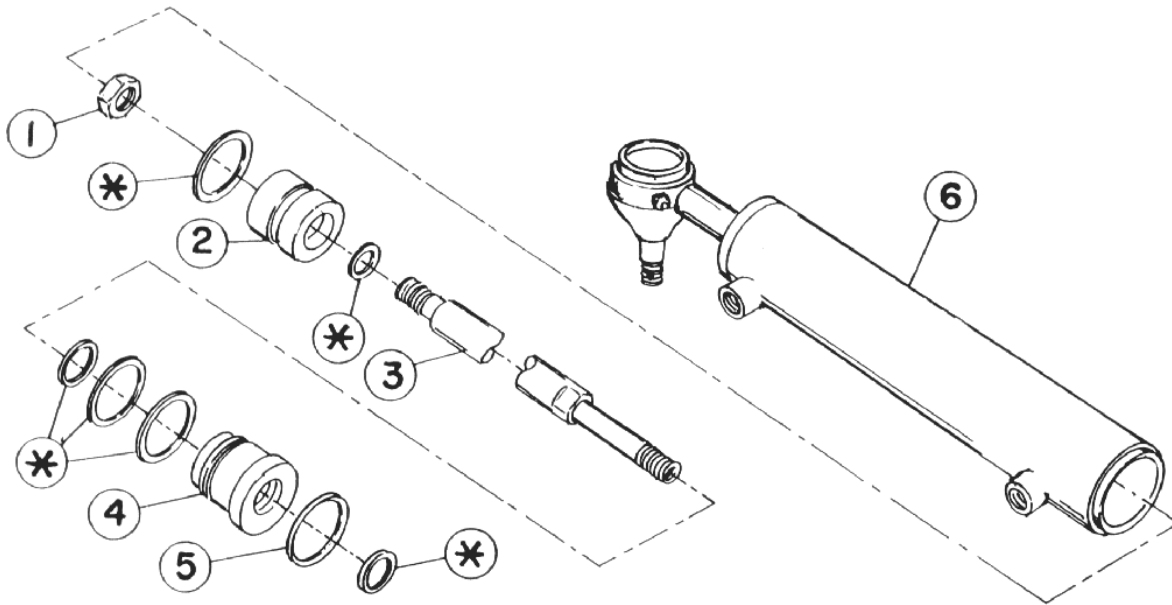


1174

HYDRAULIC CYLINDER (92-3978)

#	Part No.	Description	Qty
1	92-3986	Nut	1
2	92-3988	Piston	1
3	92-3990	Shaft	1
4	92-3987	Head	1
5	92-3989	Retaining Ring	1
6	92-3991	Barrel w/ Clevis & Parts	1


* Indicates Parts included in 92-3992 Repair Kit

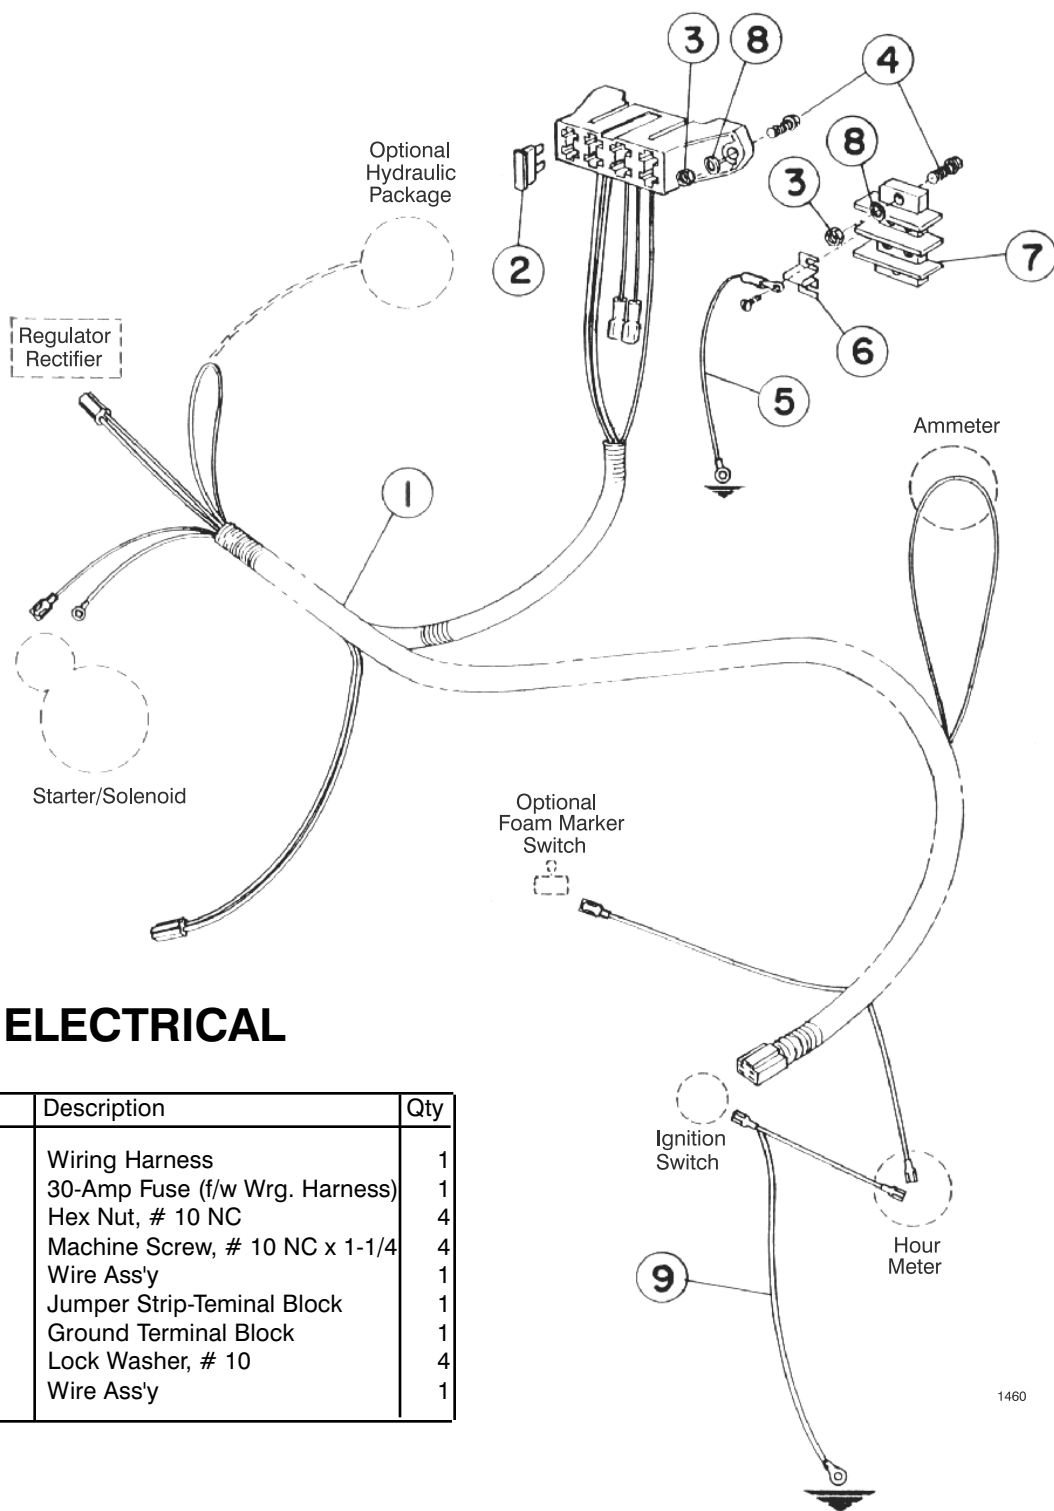

ELECTRICAL

#	Part No.	Description	Qty
1	92-0494	Wiring Harness	1
2	42765	30-Amp Fuse (f/w Wrg. Harness)	1
3	3217-26	Hex Nut, # 10 NC	4
4	3290-360	Machine Screw, # 10 NC x 1-1/4	4
5	42861	Wire Ass'y	1
6	42863	Jumper Strip-Terminal Block	1
7	42862	Ground Terminal Block	1
8	3253-17	Lock Washer, # 10	4
9	92-3527	Wire Ass'y	1

1460

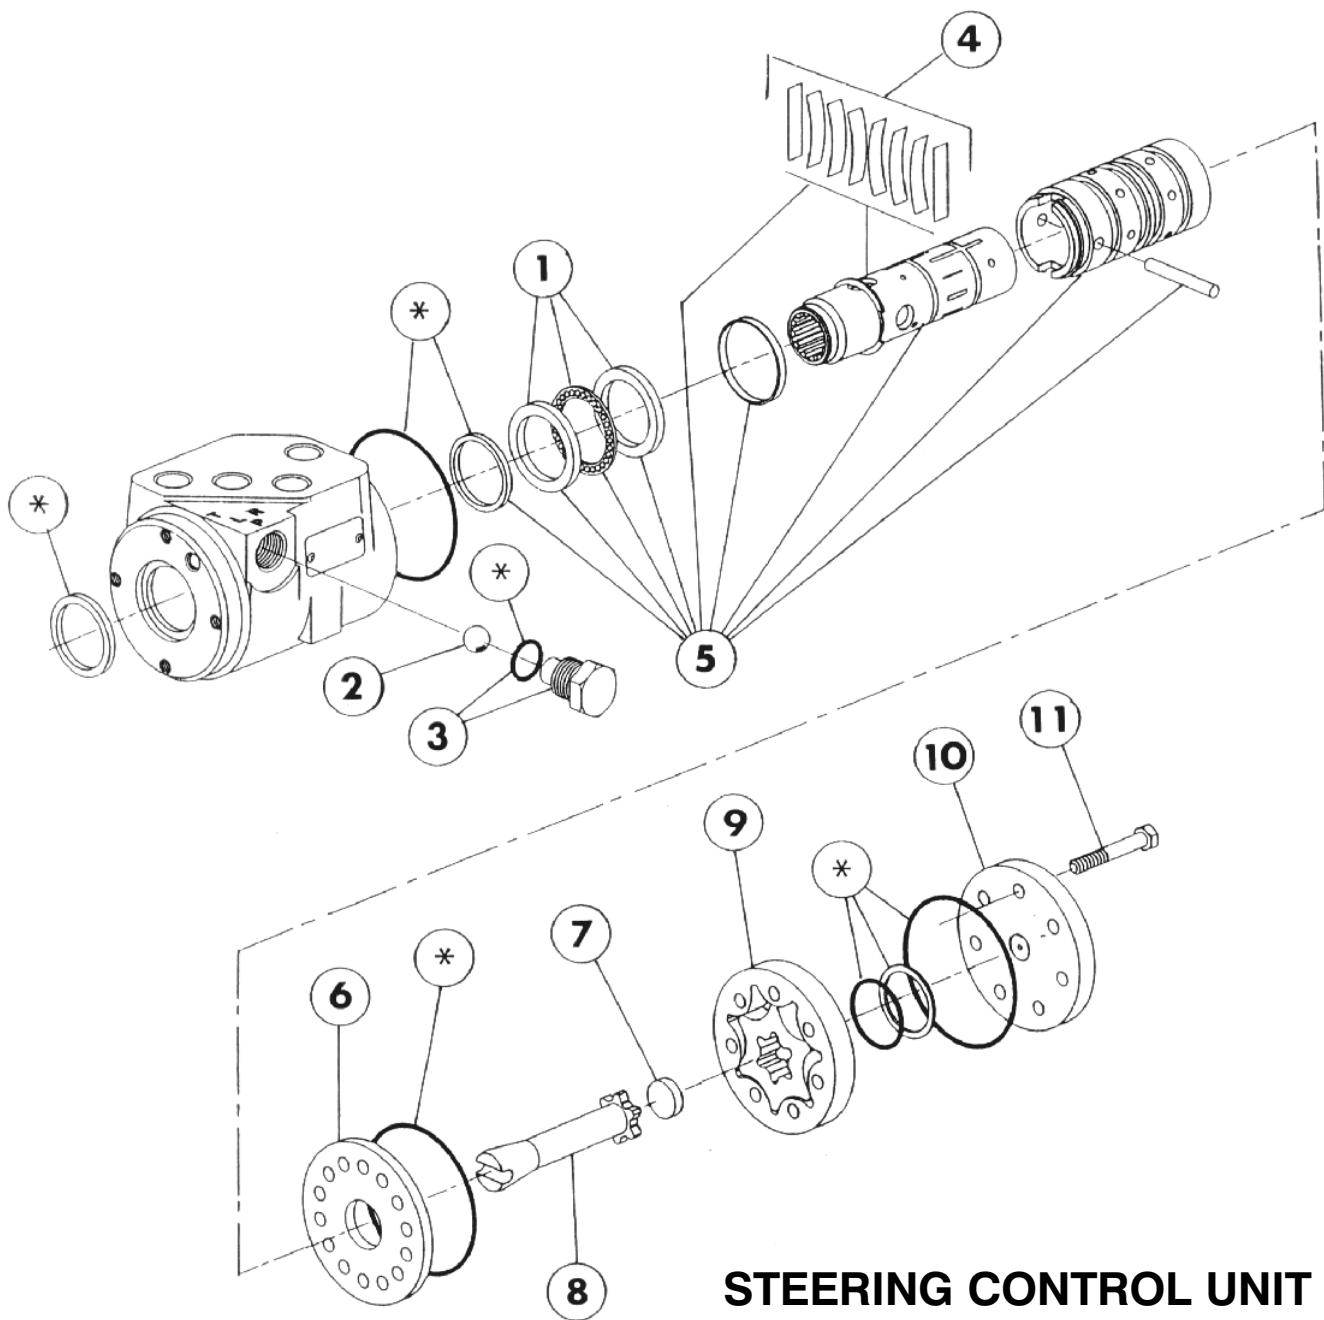

STEERING CONTROL UNIT (92-3502)

#	Part No.	Description	Qty
1	92-3839	Bearing Kit (f/w 92-3840)	1
2	92-3842	Check Ball	1
3	92-3841	Plug/O-Ring	1
4	93-1023	Spring Centering Kit (f/w 92-3840)	1
5	92-3840	Control Parts Ass'y	1
6	92-3843	Wear Plate	1
7	92-3845	Spacer	1
8	92-3844	Drive	1
9	92-3846	Gerotor	1
10	92-3847	End Cap	1
11	92-3848	Cap Screw	1
*	92-3849	Seal Kit - Includes all parts indicated by an *	7

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's Products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit which is not reflected in your manual, see your TORO distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS:

The Multi Pro® 1100 Vehicle has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the floor board of the vehicle. In any correspondence concerning the unit, supply the model number and, the serial numbers to ensure correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of your Vehicle.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; Use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Decals	1	Brakes	13
Seat, Shrouds, Console,& Guages	2-3	Differential	14
Engine, Shields, & Steering Pump	4-5	Steering Pump & Reservoir	15
Front Axle & Steering	6-7	Hydraulic Cylinder	16
Traction Drive	8-9	Electrical	17
T96 Three Speed Manual Transmission	10-11	Steering Control Unit	18
Rear Axle Breaks	12		



Helping you put quality into play.®