




MODEL NO. 62012-3000001 & UP

PARTS CATALOG

T 1200 GENERATOR

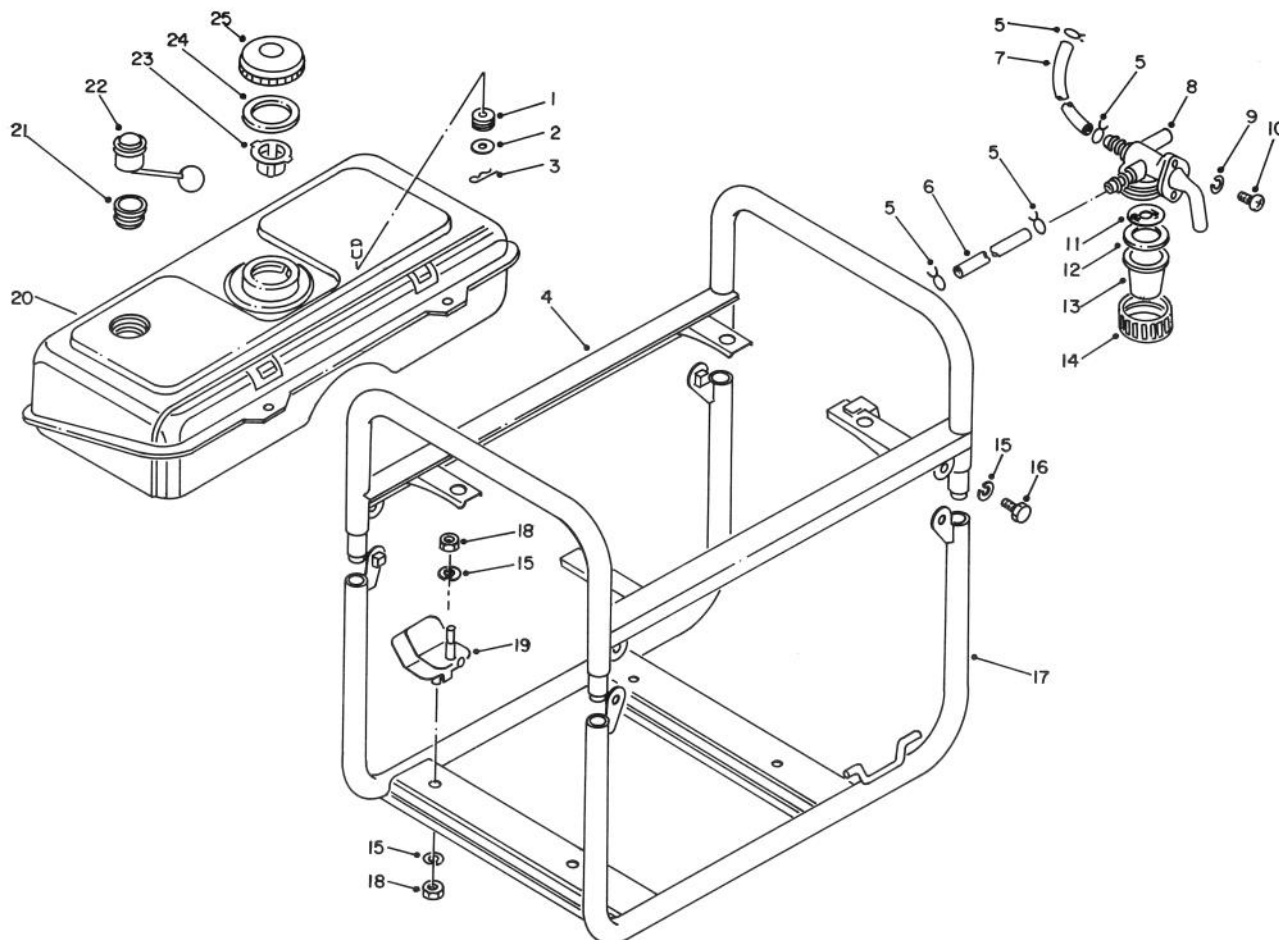

FUEL TANK & FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	50-0890	Cushion	4
2	50-0760	Washer	3
3	50-0970	Clip	3
4	50-3580	Frame — Upper	1
5	50-0990	Clip	4
6	50-0920	Hose — Fuel	1
7	50-0930	Hose — Fuel	1
8	50-3740	Cock Assembly Fuel (Incl. Ref. #11-14)	1
9	81-1420	Washer — Lock	2
10	50-0240	Screw	2
11	50-3750	Filter	1
12	50-3770	Gasket	1
13	50-3780	Cup	1

Ref. No.	Part No.	Description	No. Used
14	50-3760	Cap	1
15	81-1120	Washer — Lock	12
16	50-0050	Bolt	4
17	50-3590	Frame — Lower	1
18	50-0520	Nut	8
19	50-1600	Mounting — Engine	2
*	50-1590	Mounting — Engine	2
20	50-3670	Tank — Fuel	1
21	50-3850	Gasket	1
22	50-3830	Gauge Assembly Fuel	1
23	50-3810	Filter	1
24	50-4630	Gasket	1
25	50-3700	Cap	1
*	50-1230	Tool	1


*Not Illustrated

COPYRIGHT © ALL RIGHTS RESERVED

The Toro Company — 1983

MINNEAPOLIS, MN 55420 — U.S.A.


PRICE \$1.00

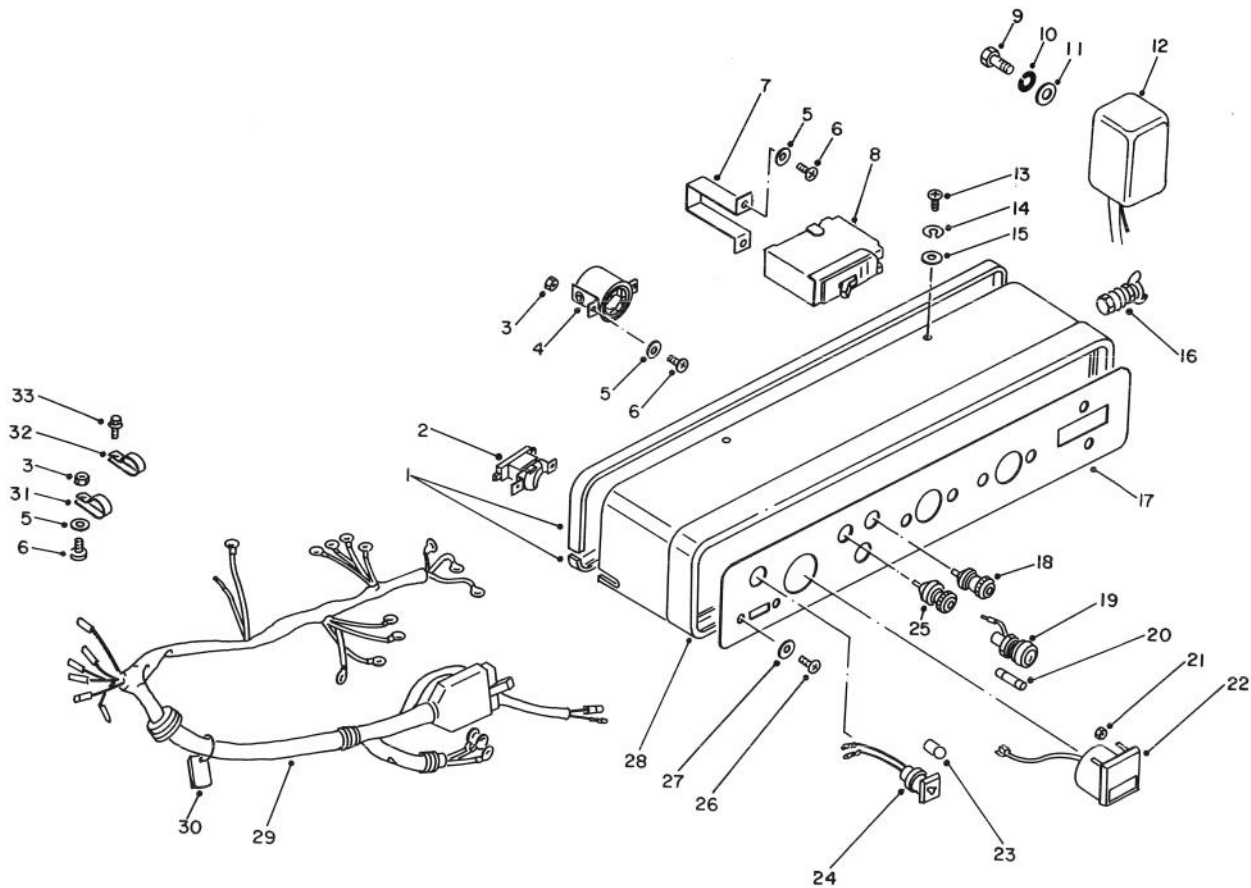

CONTROL PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	50-4300	Seal	2
2	50-4350	Switch — Engine	1
3	50-0500	Nut	4
4	50-4490	Receptacle	1
5	50-0600	Washer	6
6	50-0240	Screw	6
7	50-4380	Holder — Breaker	1
8	50-4370	Breaker — Circuit (10A)	1
9	50-0020	Bolt	1
10	50-0570	Washer — Lock	1
11	50-0620	Washer	1
12	50-3550	Unit — Oil Level Alarm	1
13	50-0280	Screw	5
14	81-1380	Washer — Lock	5
15	50-0610	Washer	5
16	50-4530	Terminal — Ground	1
17	50-4320	Plate — Panel	1

Ref. No.	Part No.	Description	No. Used
18	50-4510	Terminal (+)	1
19	50-4410	Holder — Fuse (Incl. Ref. #20)	1
21	50-4470	Fuse (15A)	1
21	50-0490	Nut	1
22	50-3470	Meter — Voltage	1
23	50-3490	Bulb	1
24	50-5370	Lamp Assembly Oil Level (Incl. Ref. #23)	1
25	50-4520	Terminal (-)	1
26	50-0220	Screw	2
27	50-0590	Washer	2
28	50-4270	Panel — Control	1
29	50-4570	Wiring Harness — Control	1
30	50-4590	Fuse — Spare	1
31	50-1060	Clamp	1
32	50-1050	Clamp	2
33	81-1280	Bolt	1

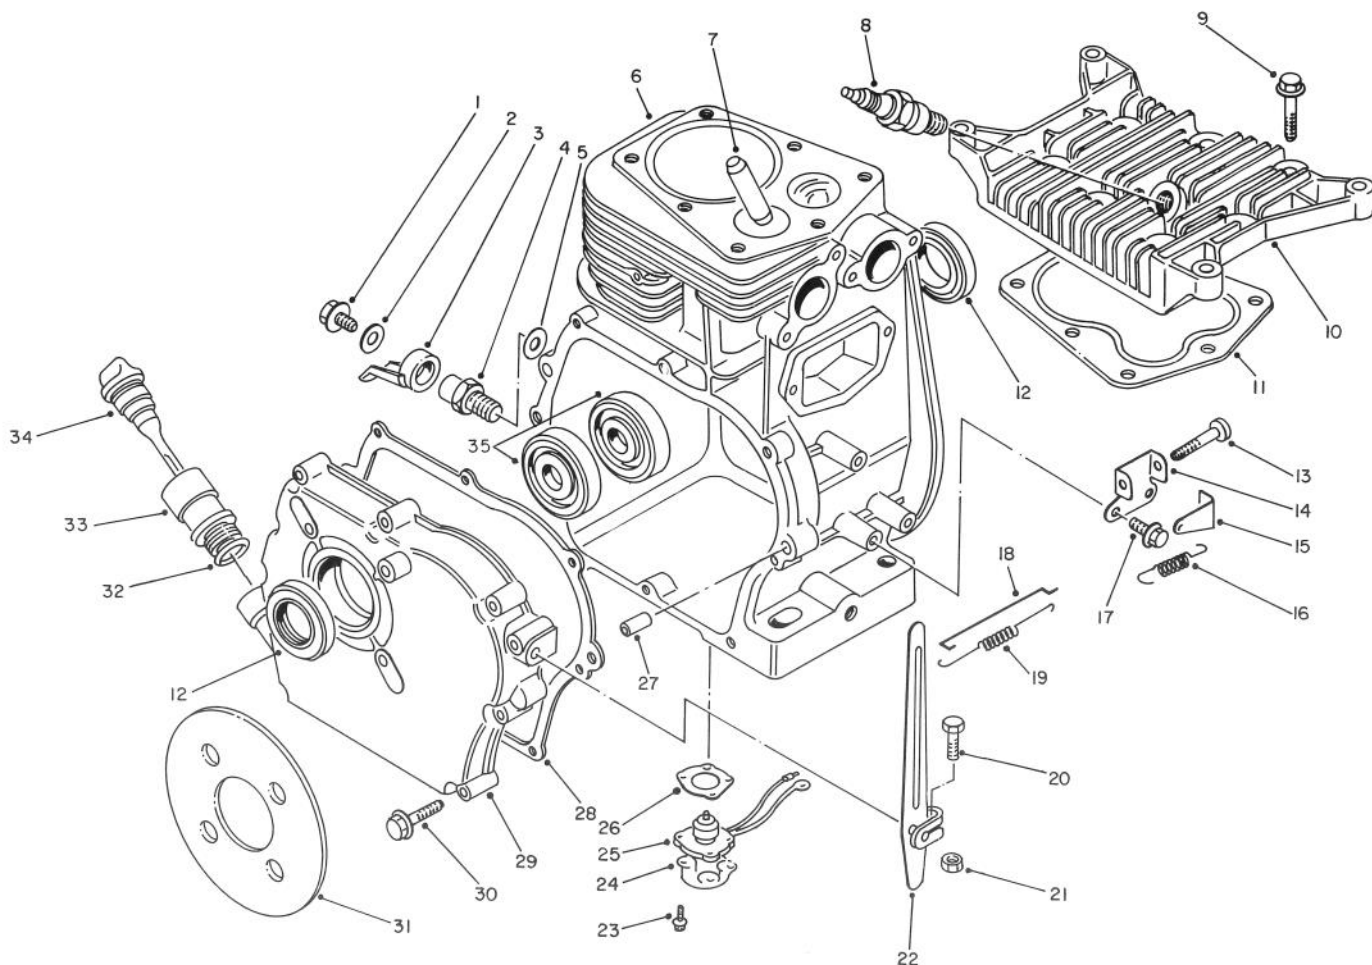


ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	50-0200	Plug — Drain	1
2	50-0790	Gasket	1
3	50-1360	Plate — Oil Drain Guide	1
4	50-1370	Adapter	1
5	50-0800	Gasket	1
6	50-1320	Cylinder	1
7	50-1350	Guide Valve	2
8	50-1160	Spark Plug (NKG, BP-5HS)	1
9	50-0190	Bolt	7
10	50-1260	Cylinder Head	1
11	50-1290	Gasket	1
12	50-0870	Oil Seal	2
13	50-0680	Screw	1
14	50-3260	Bracket — Governor Spring	1
15	50-3230	Hook — Spring	1
16	50-1150	Spring	1
17	50-0170	Bolt	2
18	50-3300	Rod — Carburetor	1
19	50-1130	Spring	1

Ref. No.	Part No.	Description	No. Used
20	50-0030	Bolt	1
21	46-0400	Nut	1
22	50-3200	Lever — Control	1
23	81-1300	Bolt	4
24	50-3540	Plate — Lead Cord	1
25	50-3510	Sensor — Oil Level	1
26	50-3520	Gasket	1
27	50-0440	Pin	2
28	50-1430	Gasket — Crankcase	1
29	50-1400	Cover — Crankcase Side	1
30	81-0550	Bolt	8
31	50-3970	Seat — Joint	1
32	50-0950	O-Ring (Optional)	1
33	50-1610	Extension — Oil Filter (Optional)	1
34	50-1450	Gauge — Oil Level	1
35	50-0830	Bearing	2
*	50-1510	Gasket Set (Optional)	1

*Not Illustrated

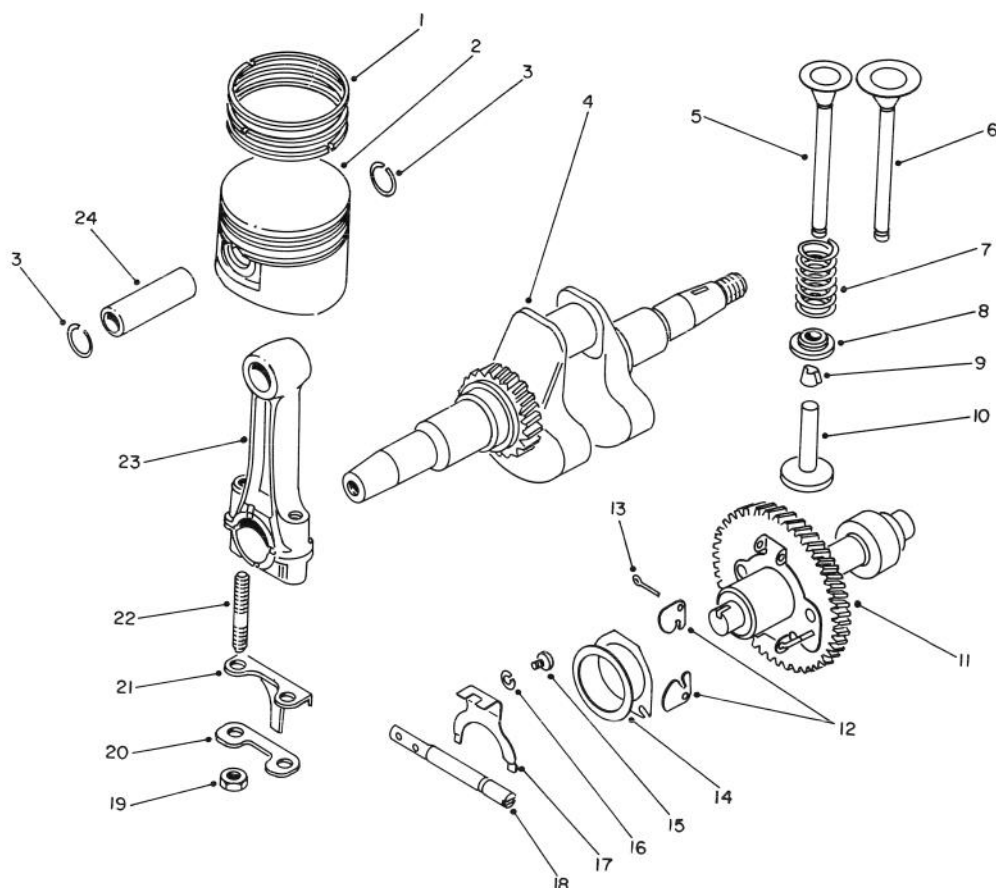


CRANKSHAFT & CAMSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	50-1740	Ring Set — Piston Std.	1
*	50-1750	Ring Set — Piston (O.S.:0.25)	1
*	50-1760	Ring Set — Piston (O.S.:0.5)	1
2	50-1650	Piston Std.	1
*	50-1660	Piston (O.S.:0.25)	1
*	50-1670	Piston (O.S.:0.5)	1
3	50-0960	Circlip	2
4	50-1930	Crankshaft	1
5	50-2110	Valve — Exhaust	1
6	50-2080	Valve — Intake	1
7	50-2120	Spring — Valve	2
8	50-2140	Retainer — Spring	2
9	50-2160	Cotter — Valve	2
10	50-2030	Tappet (L:36.46)	2
*	50-2040	Tappet (L:36.39)	2

Ref. No.	Part No.	Description	No. Used
*	50-2050	Tappet (L:36.53)	2
11	50-1950	Cam Shaft	1
12	50-3070	Arm	14
13	50-0430	Cotter Pin	2
14	50-3110	Spacer — Governor	1
15	50-0220	Screw	2
16	50-0590	Washer — Lock	2
17	50-3150	Plate — Shifter	1
18	50-3130	Shaft — Throttle Return	1
19	50-0510	Nut	2
20	50-1890	Plate — Lock	1
21	50-1870	Plate — Splash	1
22	50-0670	Stud Bolt	2
23	50-1840	Rod — Connecting	1
24	50-1800	Pin — Piston	1


*Not Illustrated

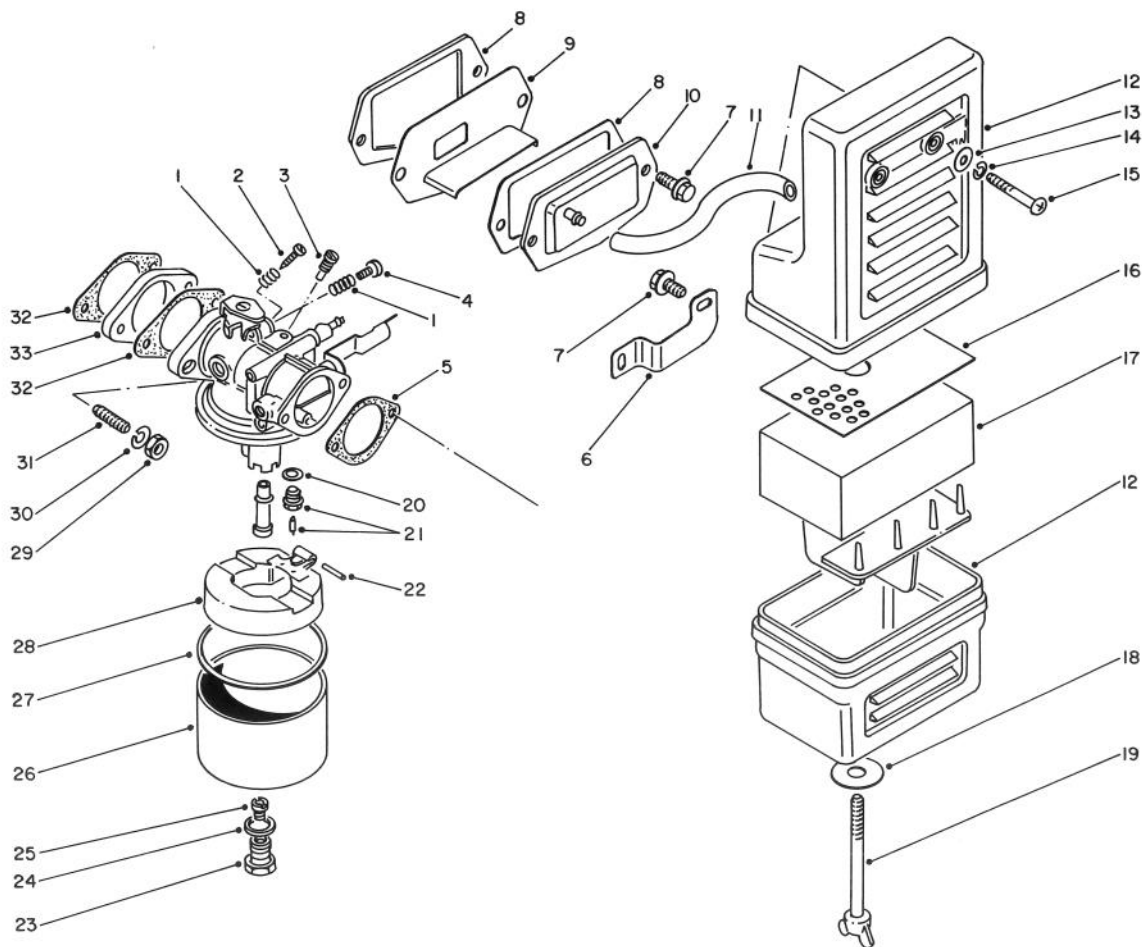

AIR CLEANER & CARBURETOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	50-2330	Spring	2
2	50-2360	Adjuster	1
3	50-1210	Jet — Pilot (40)	1
4	50-2320	Screw — Throttle Stop	1
5	50-2530	Gasket — Cleaner (T:0.5)	1
6	50-2520	Bracket — Air Cleaner	1
7	81-1300	Bolt	4
8	50-1540	Gasket (T 1.6)	2
9	50-1560	Reed Valve Assembly	1
10	50-1520	Cap — Breather	1
11	50-0940	Pipe Breather (L:110-95)	1
12	50-2410	Cleaner Assembly (Incl. Ref. #16-19)	1
13	50-0610	Washer	2
14	81-1380	Washer — Lock	2
15	50-0330	Screw	2
16	50-2490	Holder	1
17	50-2470	Filter	1

Ref. No.	Part No.	Description	No. Used
18	50-2570	Washer	1
19	50-2550	Bolt — Wing	1
20	50-2400	Gasket	1
21	50-2390	Valve — Needle	1
22	50-2310	Pin	1
23	50-2370	Bolt	1
24	50-2380	Gasket	1
25	50-1190	Jet — Main (72-5)	1
26	50-2230	Carburetor Assembly (Incl. Ref. #20-25 & 27-28)	1
27	50-2290	Gasket	1
28	50-2270	Float	1
29	81-0900	Nut	2
30	50-0570	Washer — Lock	2
31	50-0080	Stud Bolt	2
32	50-2180	Gasket (T:0.5)	2
33	50-2200	Insulator (T:8)	1

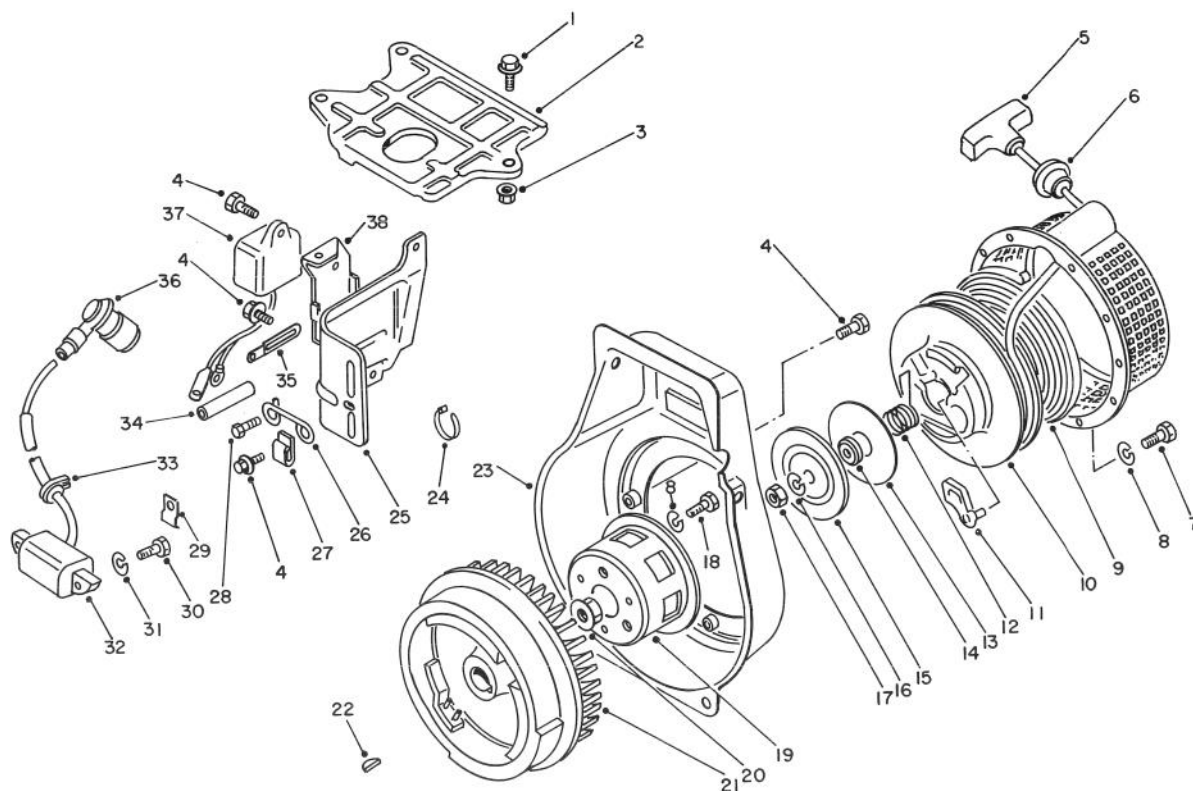


RECOIL STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	81-0530	Bolt	3
2	50-2810	Cowling — Upper	1
3	46-0400	Nut	3
4	50-0170	Bolt	10
5		Grip	1
6	50-2990	Grip Assembly (Incl. Ref. #5)	1
7	50-0650	Bolt	3
8	50-0570	Washer — Lock	6
9	50-2900	Spring	1
10	50-2860	Reel	1
11	50-2880	Ratchet	1
12	50-2940	Spring	1
13	50-2980	Slide Plate	1
14	50-2970	Cover	1
15	50-2920	Plate	1
16	81-1120	Washer — Lock	1
17	50-0750	Nut	1
18	50-0020	Bolt	3
19	50-3050	Pulley — Starter	1
20	50-0540	Nut	1

Ref. No.	Part No.	Description	No. Used
21	50-3360	Rotor	1
22	50-0640	Key	1
23	50-2740	Cover — Cooling Fan	1
24	50-1100	Clamp	1
25	50-2780	Cowling Side	1
26	50-1030	Clamp	1
27	50-1040	Clamp	1
28	81-1280	Bolt	1
29	50-1010	Clamp	1
30	50-0690	Bolt	2
31	50-0580	Washer — Lock	2
32	50-3330	Stator	1
33	50-3380	Grommet	1
34	50-3440	Tube	1
35	50-1000	Clamp	1
36	50-3450	Cap — Spark Plug	1
37	50-3410	Unit — Transistor Magneto	1
38	50-3430	Bracket	1
*	50-2840	Starter Assembly Recoil (Incl. Ref. #4-5 & 9-17)	1


*Not Illustrated

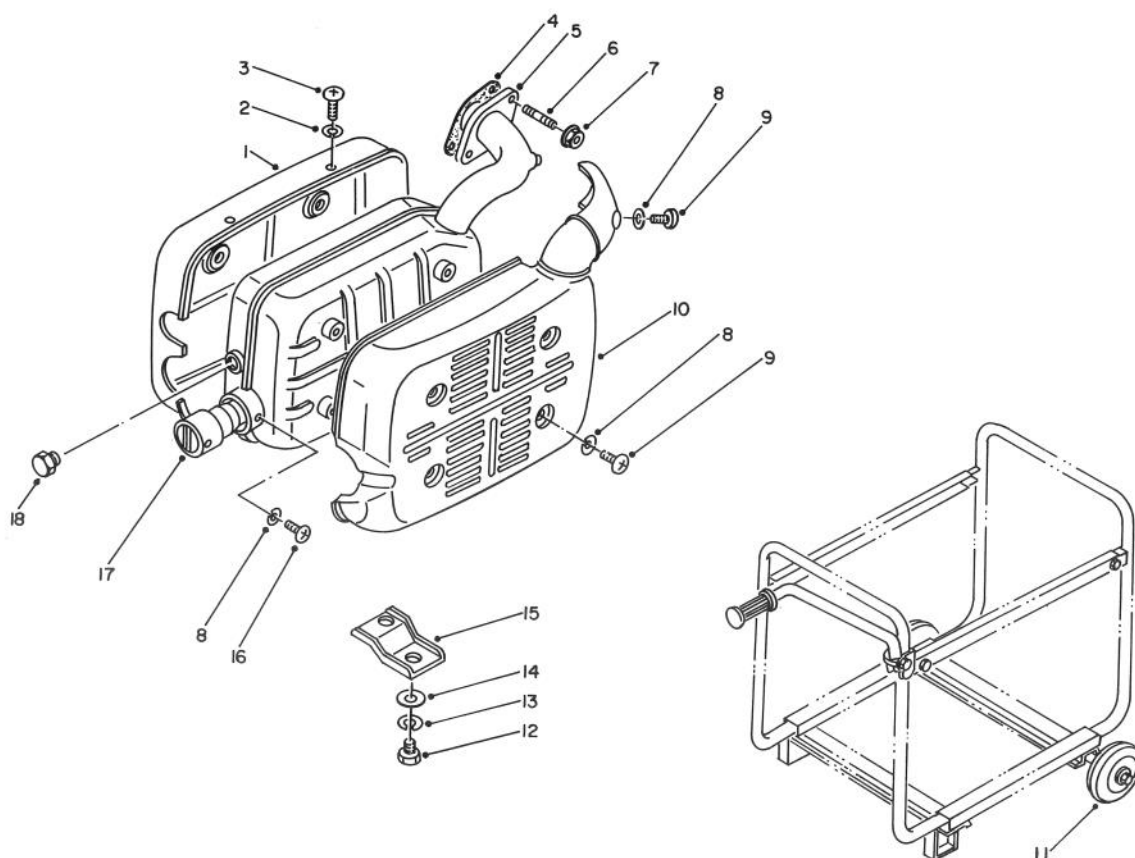

MUFFLER-EXHAUST ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	50-2690	Cover — Rear	1
2	81-1420	Washer — Lock	3
3	50-0230	Screw	3
4	50-2590	Gasket — Exhaust	1
5	50-2630	Muffler	1
6	50-0100	Stud Bolt	2
7	50-0530	Nut	2
8	50-0570	Washer — Lock	9
9	81-1140	Screw	9

Ref. No.	Part No.	Description	No. Used
10	50-2660	Cover — Front	1
11	50-3660	Wheel Assembly (Optional)	1
12	50-0060	Bolt	1
13	81-1120	Lockwasher	1
14	50-0630	Washer	1
15	50-2650	Bracket — Muffler	1
16	50-0350	Screw	1
17	50-2700	Tube — Clean Out	1
18	50-2640	Plug — Drain	2

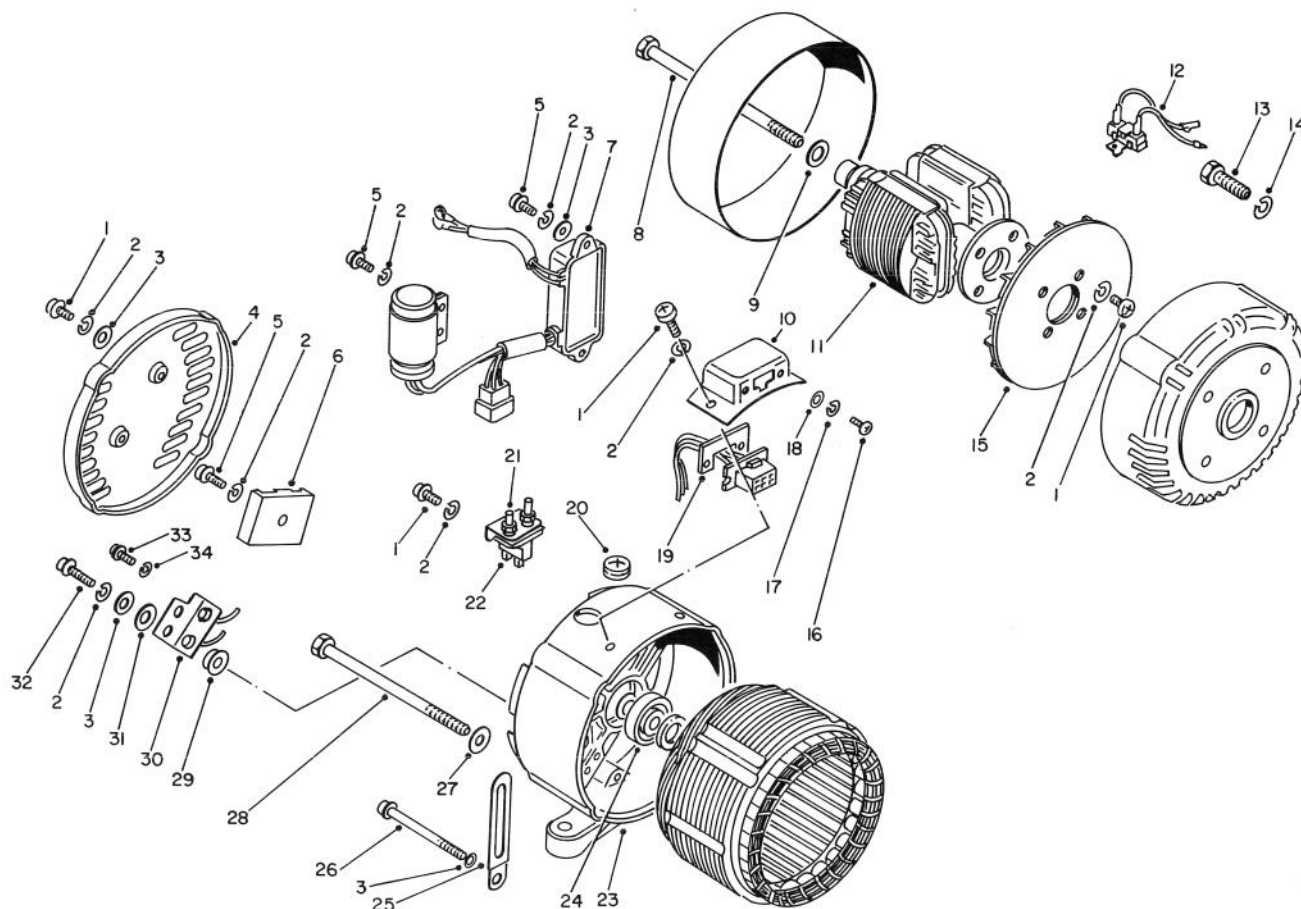

GENERATOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	50-0280	Screw	10
2	81-1380	Washer — Lock	17
3	50-0610	Washer	8
4	50-3980	Cover — Rear	1
5	50-0300	Screw	5
6	50-4010	Terminal	1
7	50-4040	Regulator — Voltage	1
8	50-4240	Bolt (8 x 117)	1
9	50-0630	Washer	1
10	50-3990	Cover Coupler	1
11	50-4210	Rotor	1
12	50-4060	Register	1
13	50-0070	Bolt	4
14	50-5730	Washer — Lock	4
15	50-4260	Fan	1
16	50-0220	Screw	2
17	50-0560	Washer — Lock	2

Ref. No.	Part No.	Description	No. Used
18	50-0590	Washer	2
19	50-4000	Plate — Coupler Holder	1
20	50-4190	Grommet	1
21	50-4160	Holder — Brush	1
22	50-4180	Brush	2
23	50-3950	Generator (120V)	1
24	50-0470	Bearing	1
25	50-1070	Clamp	1
26	50-0340	Screw	2
27	50-0620	Washer	4
28	50-4030	Bolt (6 x 160)	4
29	50-4110	Washer	2
30	50-4090	Diode	1
31	50-4130	Bushing	2
32	50-0310	Screw	2
33	81-1410	Screw	1
34	81-1420	Washer — Lock	1