



Count on it.

Form No. 3471-951 Rev A

Parts Catalog

Workman® UTX 4 Passenger Utility Vehicle

Model No. 08101—Serial No. 417400000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

 
Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Frame and ROPS Assembly	4
Front Suspension Assembly	6
Front Control Arm Assembly No. 145-7771	7
Rear Suspension and Subframe Assembly	8
Pedals and Controls Assembly	10
Steering Assembly	11
Brake Assembly	12
Master Cylinder Assembly No. 104-6782	13
Brake Caliper Assembly No. 127-7424	14
Hood and Front Fender Assembly	15
Dash Assembly	16
Seat Base Assembly	17
Cargo Bed Assembly	18
Cargo Bed Kit Assembly	19
Electrical Assembly	20
Battery Assembly	22
Engine Drivetrain and Exhaust Assembly	23
Engine, Transaxle and Clutch Assembly	24
Secondary Clutch Assembly No. 147-8173	25
Primary Clutch Assembly No. 147-8172	26
Transaxle Assembly No. 140-2611	27
Front Differential and Driveshaft Assembly	28
Front Differential Assembly No. 140-4752	29
Intermediate Driveshaft Assembly No. 140-4771	31
Driveshaft Assembly No. 140-4763	32
Cooling System Assembly	33
Radiator Assembly No. 147-7970	34
Fuel System Assembly	35
Air Cleaner Assembly	36
Air Cleaner Assembly No. 106-5277	37
Hose Intake Assembly No. 145-2118	38
Cylinder Block Assembly	39
Crankshaft and Piston Assembly	40
Camshaft and Rocker Arm Assembly	41
Cylinder Head Assembly	42
Timing Cover Assembly	43
Intake Manifold Assembly	44
Exhaust Manifold Assembly	45
Oil Pan Assembly	46
Oil Pump Assembly	47
Water Pump Assembly	48
Starter Assembly	49
Alternator Assembly	50
Rear Plate Assembly	51
Ignition Assembly	52
Throttle Body Assembly	53
Coolant Plug Assembly	54
Coolant Inlet Assembly	55
Electrical Assembly	56
Flywheel Assembly	57
Attachments and Accessories	58

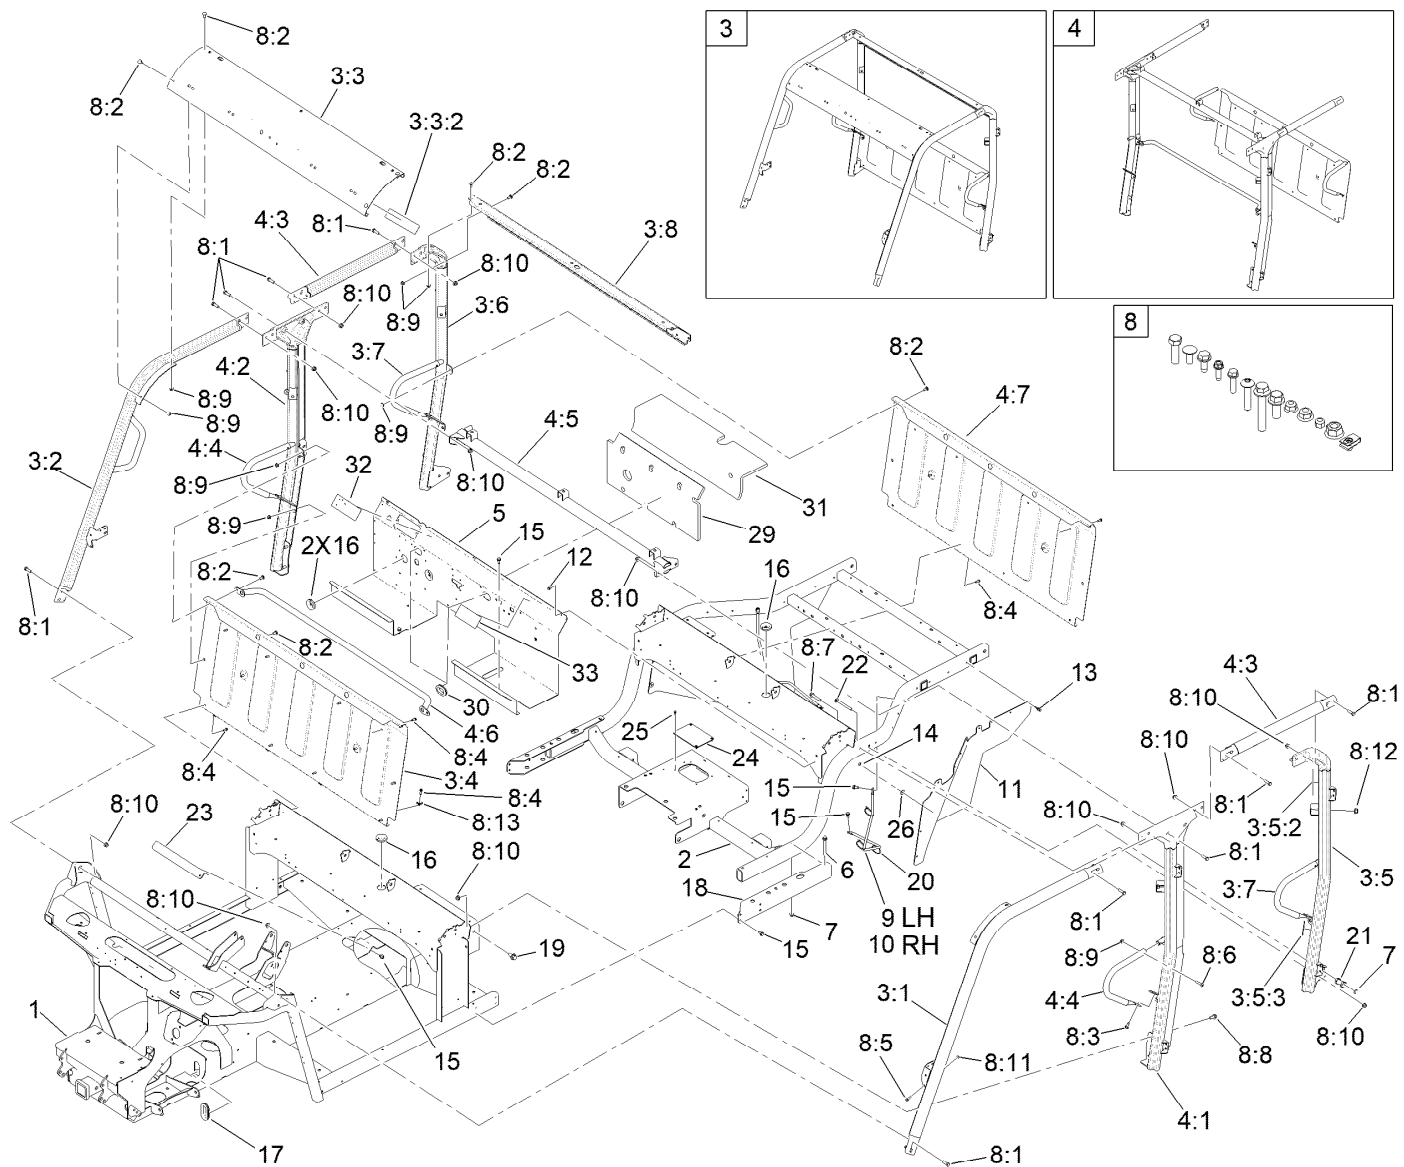


Frame and ROPS Assembly

Ref.	Part Number	Qty.	Description
1	161-5388	1	Front Frame ASM (4 Passenger)
2	147-8106	1	Rear Frame ASM
3		1	Standard ROPS Kit ●
3:1	137-2737	1	Front ROPS ASM-LH
3:2	137-2738	1	Front ROPS ASM-RH
3:3	140-2583	1	ROPS Front Crosslink ASM
3:3:2	144-1143	1	Decal-Utx, Safety
3:4	138-9438	1	Panel-Back, Seat
3:5	140-2597	1	LH ROPS Rear Tube ASM
3:5:2	145-2215	1	Decal-ROPS Safety, Utx
3:5:3	144-2267	1	Decal-Compliance, ROPS
3:6	137-2726	1	ROPS Rear Tube ASM-RH
3:7	138-5787	2	Tube-Restraint, Shoulder
3:8	137-6892	1	Crosslink-Rear, ROPS
4		1	Mid ROPS Kit (Crew) ●
4:1	161-5315	1	ROPS Middle Tube ASM, LH

Ref.	Part Number	Qty.	Description
4:2	161-5316	1	ROPS Middle Tube ASM, RH
4:3	137-2848	2	ROPS Connector Tube ASM
4:4	138-5787	2	Tube-Restraint, Shoulder
4:5	137-2835	1	ROPS Support Tube ASM
4:6	137-2916	1	Rear Seat Handle ASM
4:7	138-9438	1	Panel-Back, Seat
5	145-7960-03	1	Panel-Underseat
6	116-4701	4	Screw-HHF
7	104-8301	6	Nut-HF, NI
8	144-2296	1	Crew ROPS Hardware Kit
8:1	144-2258	20	Screw-HH
8:2	144-2265	16	Bolt-CARR
8:3	32144-70	8	Screw-HWHTF
8:4	49-2040	24	Screw-HWHTF
8:5	32144-86	2	Screw-HWHTF
8:6	126-7439	4	Screw-Torx
8:7	144-2409	2	Screw-HHF

 
● Not serviced separately

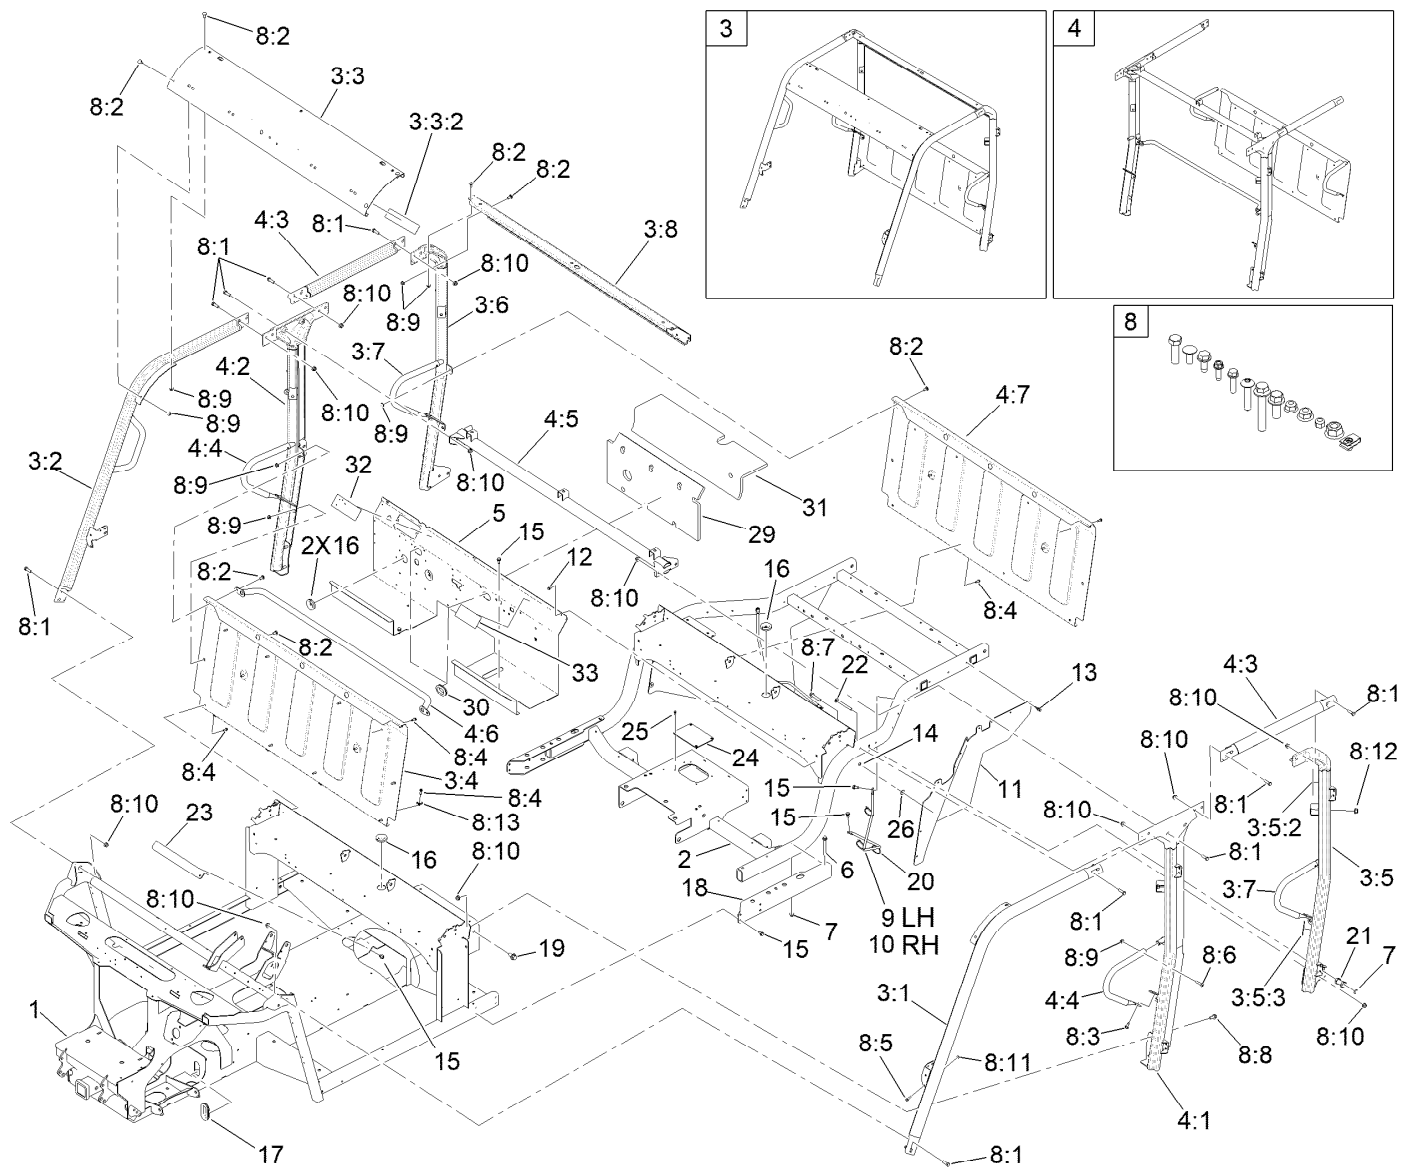

Frame and ROPS Assembly (continued)

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
8:8	3234-42	4	Screw-HHF	18	161-5385-03	2	Rail-Frame
8:9	104-8300	20	Nut-HF, NI	19	3234-6	7	Screw-HHF
8:10	104-8301	26	Nut-HF, NI	20	3290-378	6	Tie-Cable
8:11	3296-73	2	Nut-Lock, NI	21	140-4775	2	Pin-Latch
8:12	144-2269	4	Nut-HF, NI	22	3231-37	2	Screw-CARR
8:13	107069	4	Clip	23	144-2225-03	1	Brace-Cross
9	139-3432	1	Support-Skirt, LH Side	24	144-2245	1	Cover-Access
10	139-3433	1	Support-Skirt, RH Side	25	139-1692	4	Screw-PTH
11	147-2825	2	Skirt-Side	26	3256-67	6	Washer
12	32144-4	3	Screw-HWH	29	145-7990	1	Foam-Barrier, Heat
13	125-9622	16	Rivet-Blind	30	110-5090	1	Grommet
14	138-5775	6	Screw-Delta Point	31	145-7998	1	Foam-Barrier, Heat
15	32144-70	20	Screw-HWHTF	32	161-5445	1	Decal-Fuse, Vehicle
16	163-4938	4	Grommet	33	161-5435	1	Decal- Maintenance, Gas
17	240-12	1	Grommet-Rubber				

 
● Not serviced separately

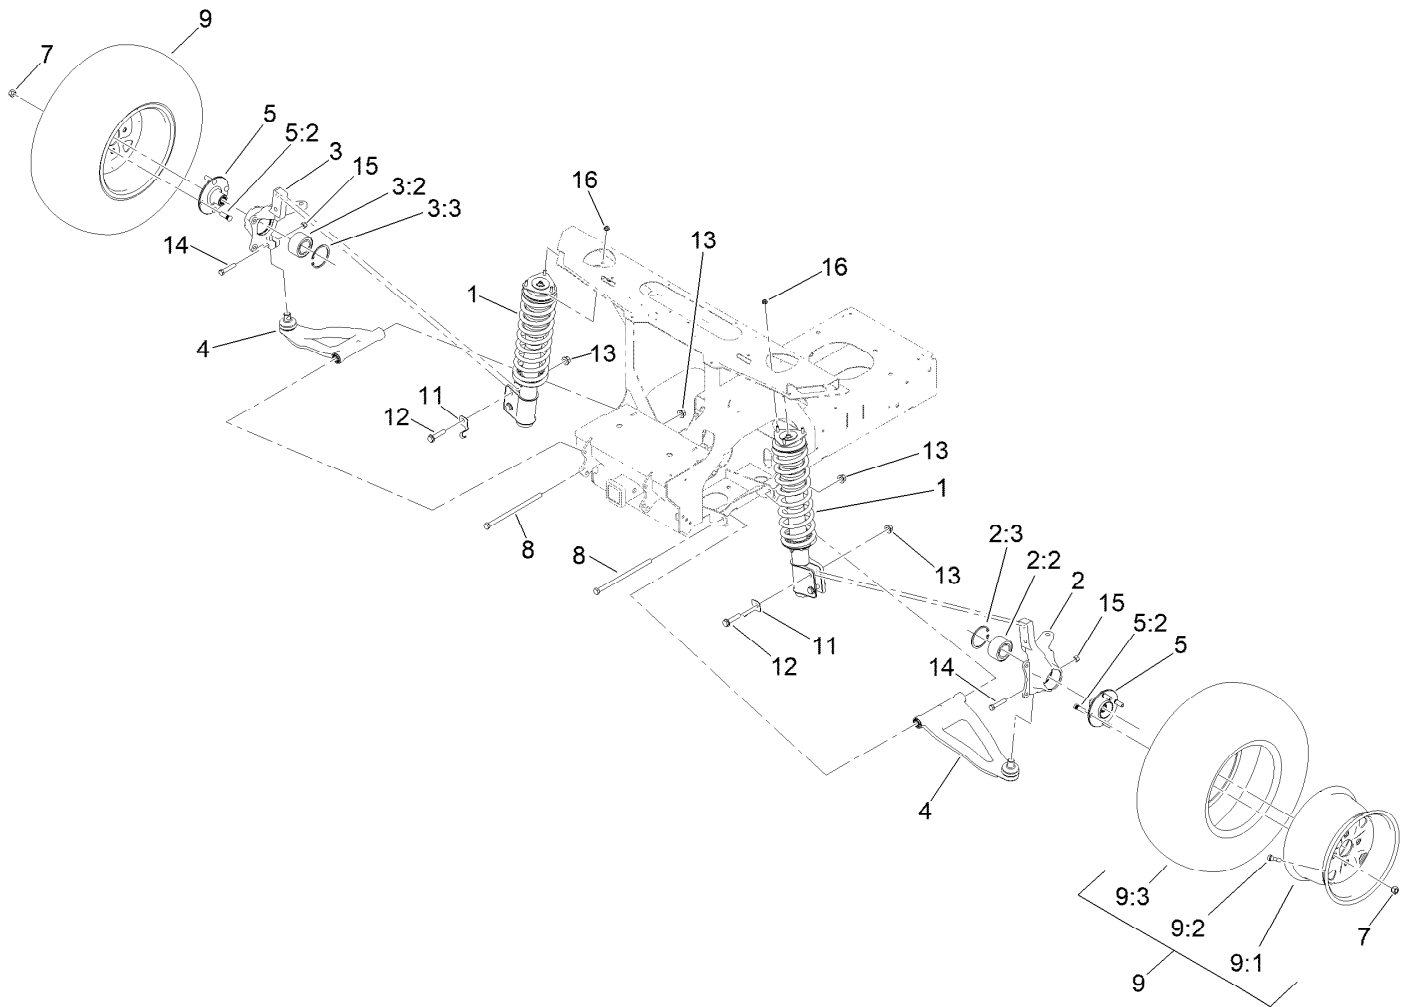

Front Suspension Assembly


Ref.	Part Number	Qty.	Description
1	147-2706	2	Strut ASM
2	138-9319	1	Knuckle ASM-Front, LH
2:2	133-7272	1	Bearing-Ball
2:3	144-2207	1	Ring-Retaining
3	138-9320	1	Knuckle ASM-Front, RH
3:2	133-7272	1	Bearing-Ball
3:3	144-2207	1	Ring-Retaining
4	145-7771	2	Control Arm ASM-Front
5	137-6754	2	Hub ASM
5:2	137-6760	4	Stud-Wheel
7	139-2564	8	Nut-Lug

Ref.	Part Number	Qty.	Description
8	325-39	2	Screw-HH
9	136-9419	2	Tire/Wheel ASM
9:1	136-9418	1	Wheel-12X7-12
9:2	232-27	1	Stem-Valve
9:3	137-2689	1	Tire
11	137-6766	2	Bracket-Hose, Brake
12	3234-46	4	Screw-HHF
13	99-5107	6	Nut-Lock
14	115-2398	2	Bolt-HH
15	3296-48	2	Nut-Hex
16	112-2844	6	Nut-HF

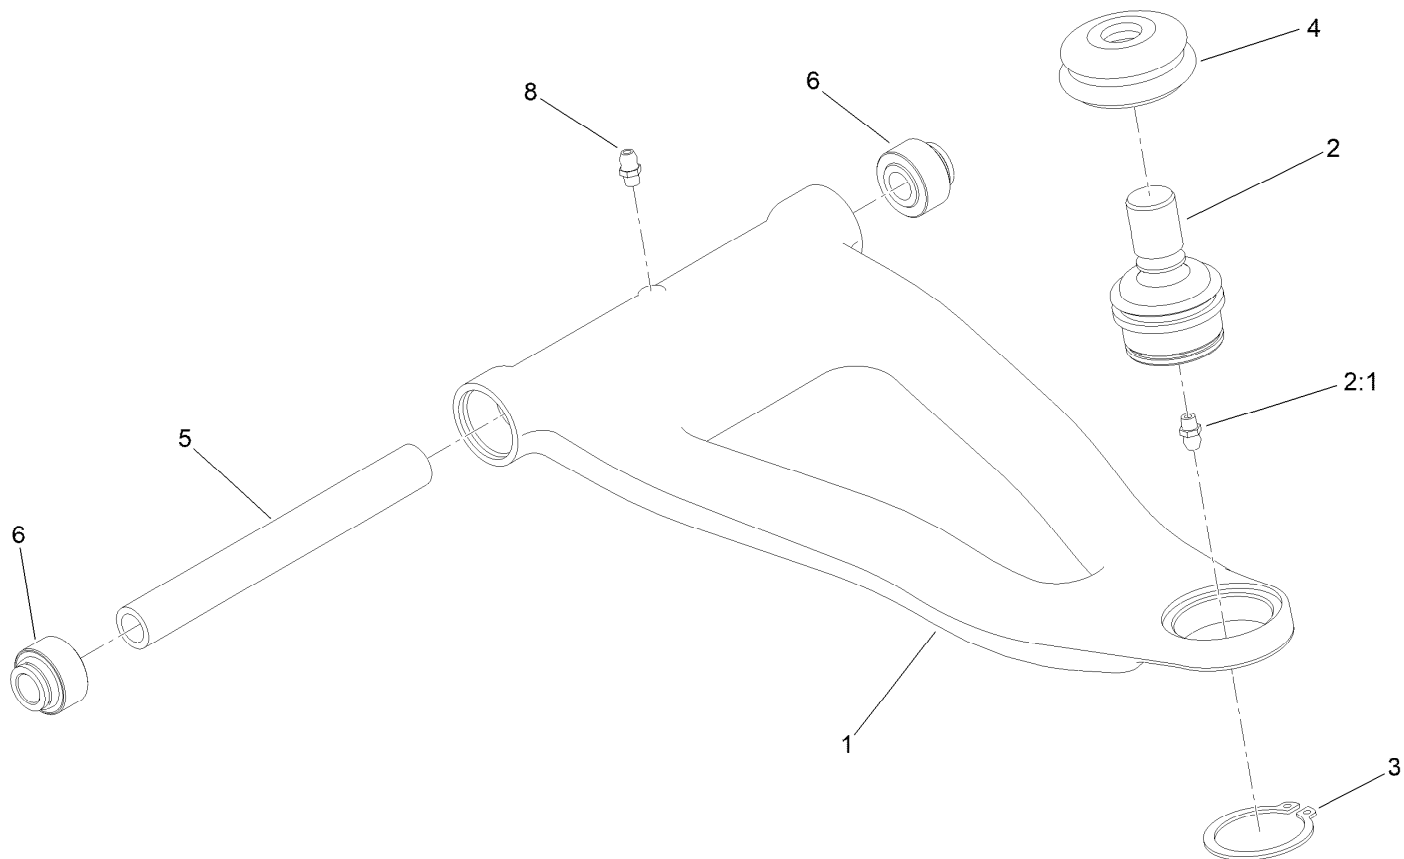 

Front Control Arm Assembly No. 145-7771


Ref.	Part Number	Qty.	Description
1	145-7762	1	Control Arm-Front
2	115-2165	1	Ball Joint
2:1	302-5	1	Fitting-Grease
3	32151-104	1	Ring-Retaining, External
4	87-2420	1	Seal-Joint, Ball
5	145-7757	1	Spacer
6	145-7756	2	Bushing-Ball
8	302-60	1	Fitting-Grease

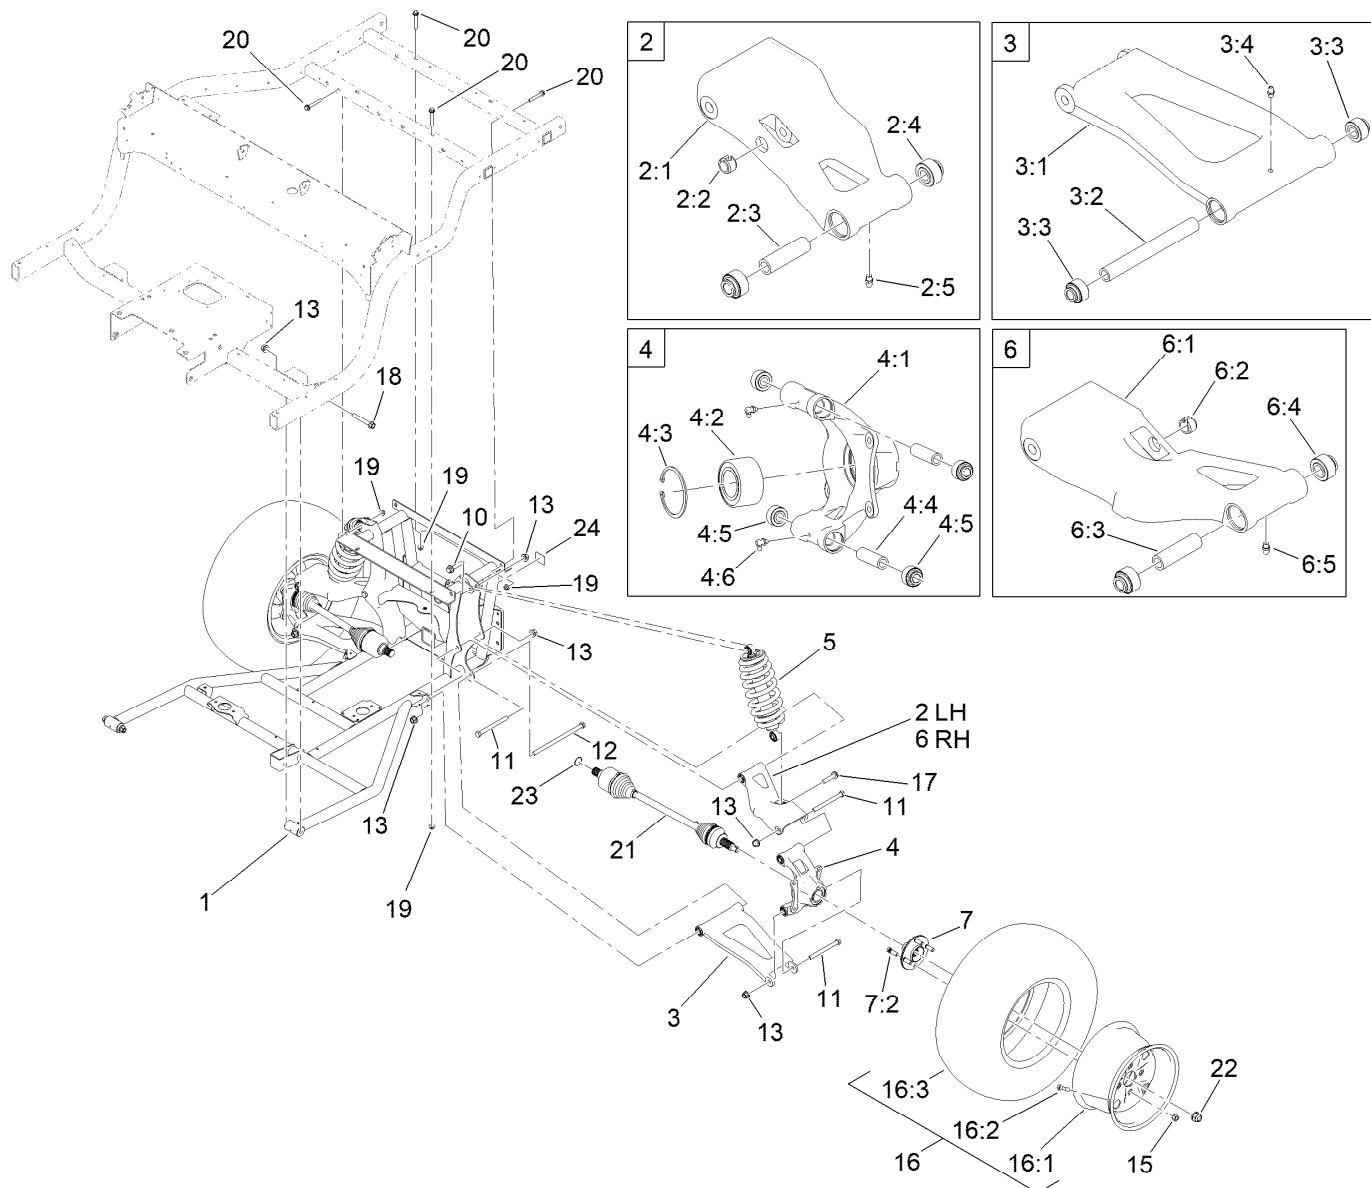 

Rear Suspension and Subframe Assembly

Ref.	Part Number	Qty.	Description
1	147-8109	1	Engine Cradle ASM
2	145-7775	1	Control Arm ASM-Rear, LH Upper
2:1	145-7765	1	Control Arm-Rear Uprr, LH
2:2	137-2659	1	Bushing-Tension
2:3	145-7770	1	Spacer
2:4	145-7756	2	Bushing-Ball
2:5	302-5	1	Fitting-Grease
3	145-7772	2	Control Arm ASM-Rear
3:1	145-7763	1	Control Arm-Rear, Lower
3:2	145-7757	1	Spacer
3:3	145-7756	2	Bushing-Ball
3:4	302-5	1	Fitting-Grease
4	145-7773	2	Knuckle ASM-Rear
4:1	145-7764	1	Knuckle-Rear
4:2	133-7272	1	Bearing-Ball
4:3	144-2207	1	Ring-Retaining
4:4	145-7770	2	Spacer
4:5	145-7756	4	Bushing-Ball
4:6	302-60	2	Fitting-Grease
5	145-7758	2	Shock/Spring ASM


Ref.	Part Number	Qty.	Description
6	145-7774	1	Control Arm ASM-Rear, RH Upper
6:1	145-7766	1	Control Arm-Rear Uprr, RH
6:2	137-2659	1	Bushing-Tension
6:3	145-7770	1	Spacer
6:4	145-7756	2	Bushing-Ball
6:5	302-5	1	Fitting-Grease
7	137-6754	2	Hub ASM
7:2	137-6760	4	Stud-Wheel
10	3234-27	2	Screw-HHF
11	325-22	6	Screw-HH
12	325-39	2	Screw-HH
13	99-5107	12	Nut-Lock
15	139-2564	8	Nut-Lug
16	136-9420	2	Tire/Wheel ASM
16:1	136-9418	1	Wheel-12X7-12
16:2	232-27	1	Stem-Valve
16:3	137-2690	1	Tire
17	3234-46	2	Screw-HHF
18	114-8419	2	Screw-HHF
19	104-8301	8	Nut-HF, NI

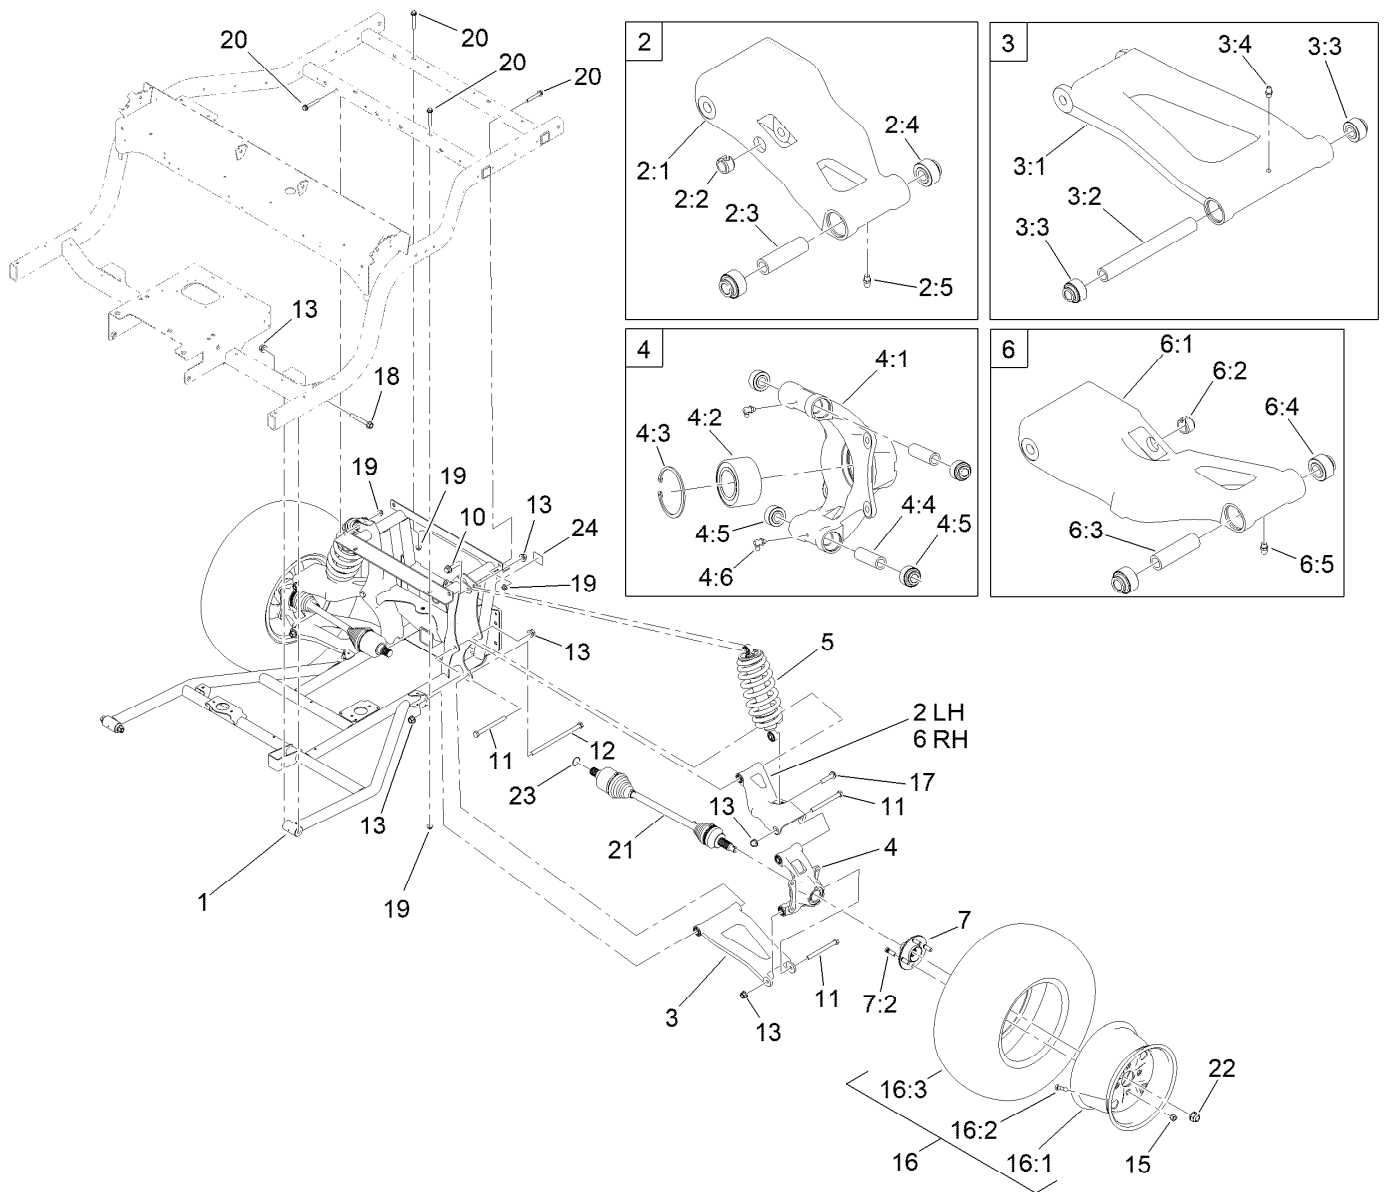 

Rear Suspension and Subframe Assembly (continued)

Ref.	Part Number	Qty.	Description
20	3234-39	8	Screw-HHF
21	140-2608	2	Cv Axle ASM
22	115-2164	2	Nut-Spindle


Ref.	Part Number	Qty.	Description
23	119-1156	2	O-Ring
24	145-2205	1	Decal-Load, Towing

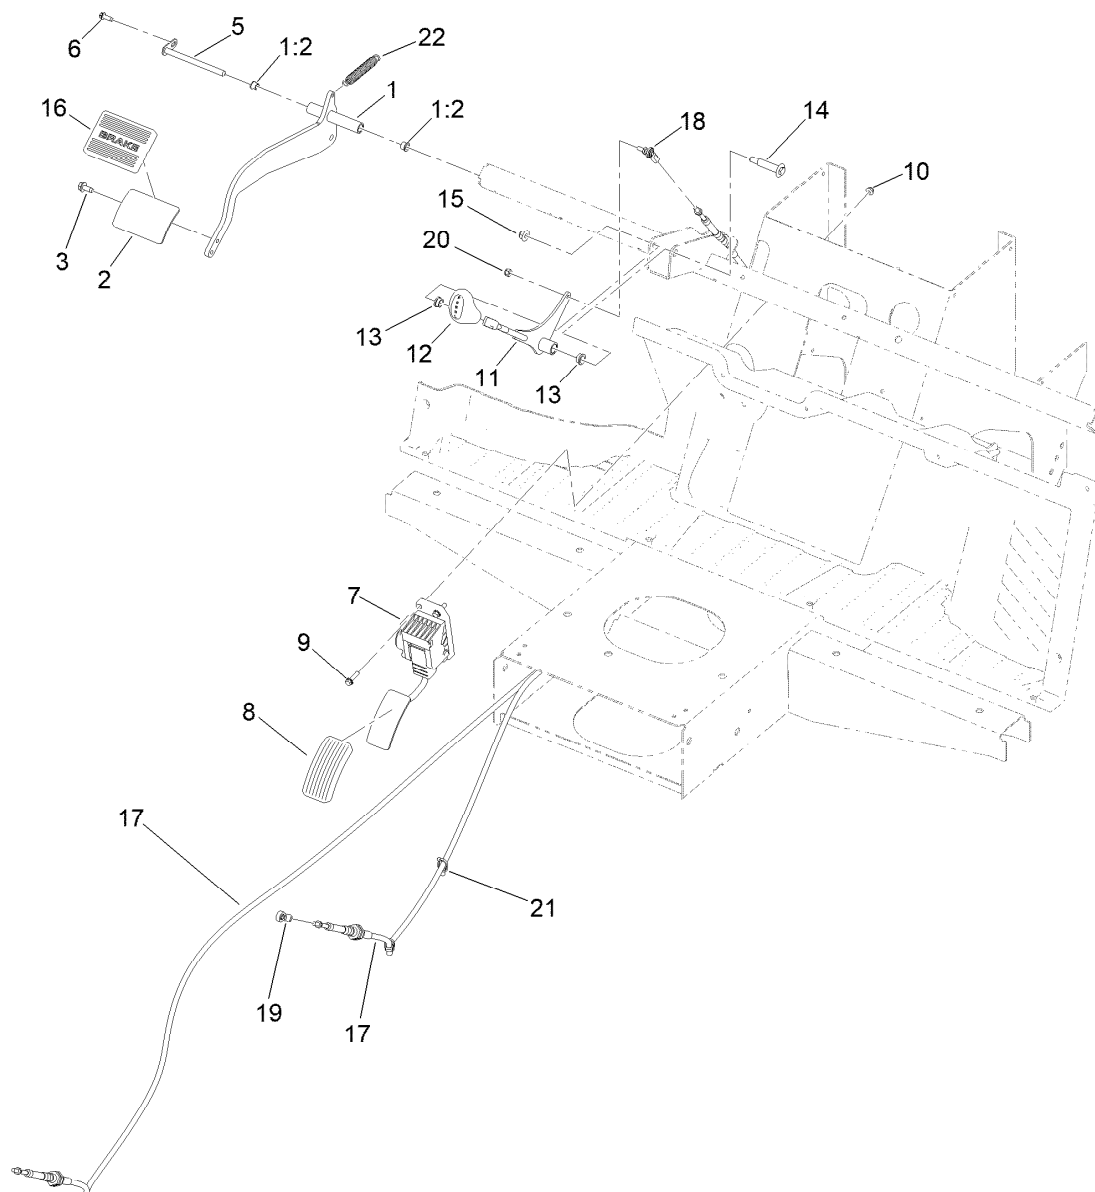 

Pedals and Controls Assembly

Ref.	Part Number	Qty.	Description
1	163-4935	1	Brake Pedal ASM
1:2	256-116	2	Bushing-Flange
2	161-5256	1	Brake Pedal Pad ASM [black]
3	32144-70	2	Screw-HWHTF
5	136-9306	1	Pivot Shaft ASM
6	49-2040	1	Screw-HWHTF
7	144-2740	1	Pedal ASM-Accelerator
8	140-4572	1	Pedal Pad-Throttle
9	120-4654	3	Screw-HHF
10	104-7201	3	Nut-HF, NI
11	161-5472	1	Shifter ASM


Ref.	Part Number	Qty.	Description
12	139-4655	1	Knob-Shifter
13	256-156	2	Bushing-Flange
14	92-1057	1	Bolt-Shoulder
15	104-8301	1	Nut-HF, NI
16	161-5253	1	Footpad-Pedal
17	140-4652	1	Cable-Shift (Crew)
18	110-2554	1	Rod End-Spherical
19	147-2705	1	Rod End-Spherical
20	3296-3	1	Nut-Lock
21	32180-030	2	Clip-Tie
22	132-6915	1	Spring-Extension

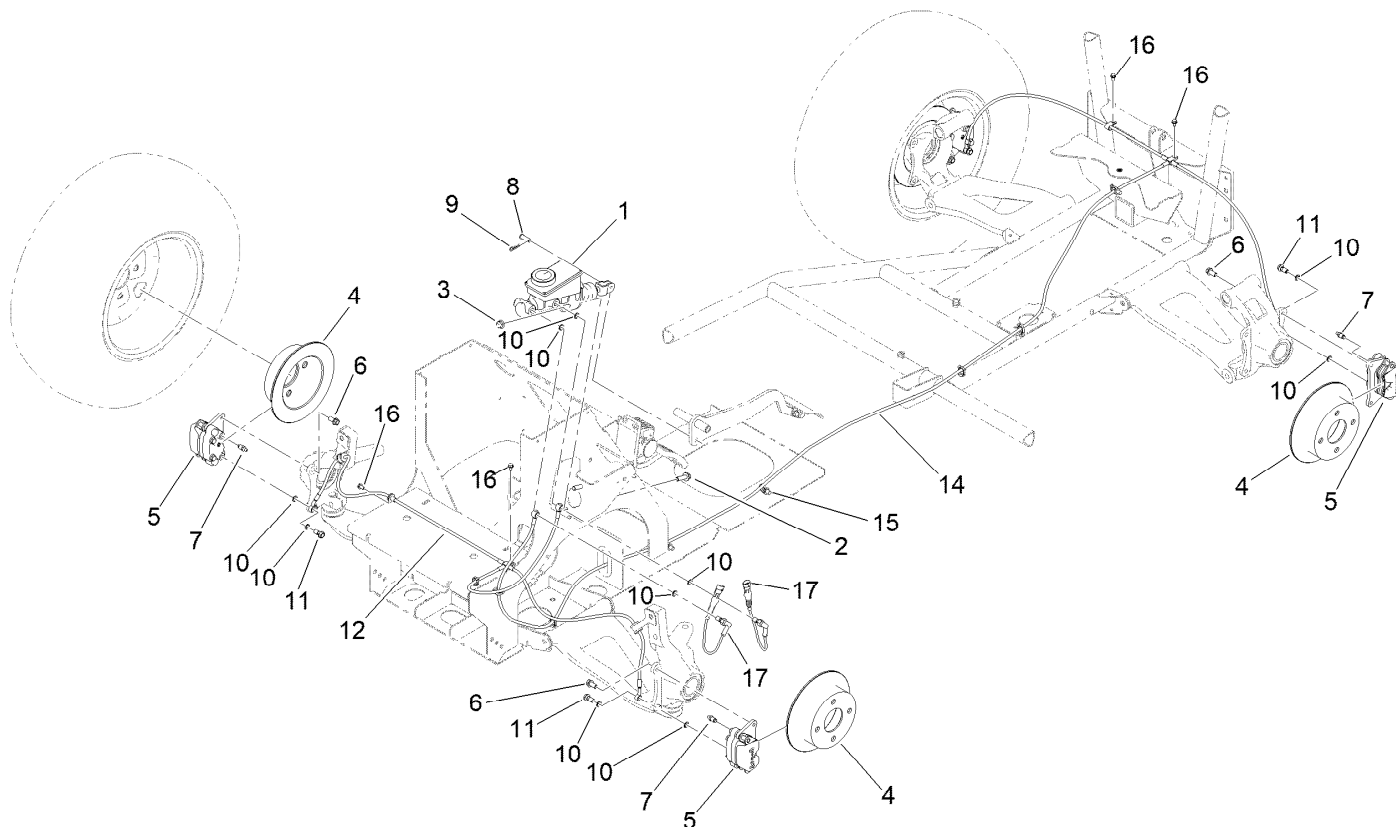 

Brake Assembly


Ref.	Part Number	Qty.	Description
1	104-6782	1	Master Cylinder ASM
2	119-4061	2	Screw-HHF
3	104-8301	2	Nut-HF, NI
4	133-7273	4	Rotor-Brake
5	127-7424	4	Brake Caliper ASM
6	144-5550	8	Screw-Spl
7	119-9509	4	Screw-Bleed
8	283-2	1	Pin-Clevis
9	1-806003	1	Pin-Cotter

Ref.	Part Number	Qty.	Description
10	115-2341	12	Washer-Banjo
11	120-4875	4	Bolt-Flange, Banjo
12	137-6768	1	Hose ASM-Brake, Front
14	139-4403	1	Hose ASM-Brake, Rear (Extended)
15	32180-030	9	Clip-Tie
16	32144-4	4	Screw-HWH
17	144-2227	2	Switch-Brake, Pressure

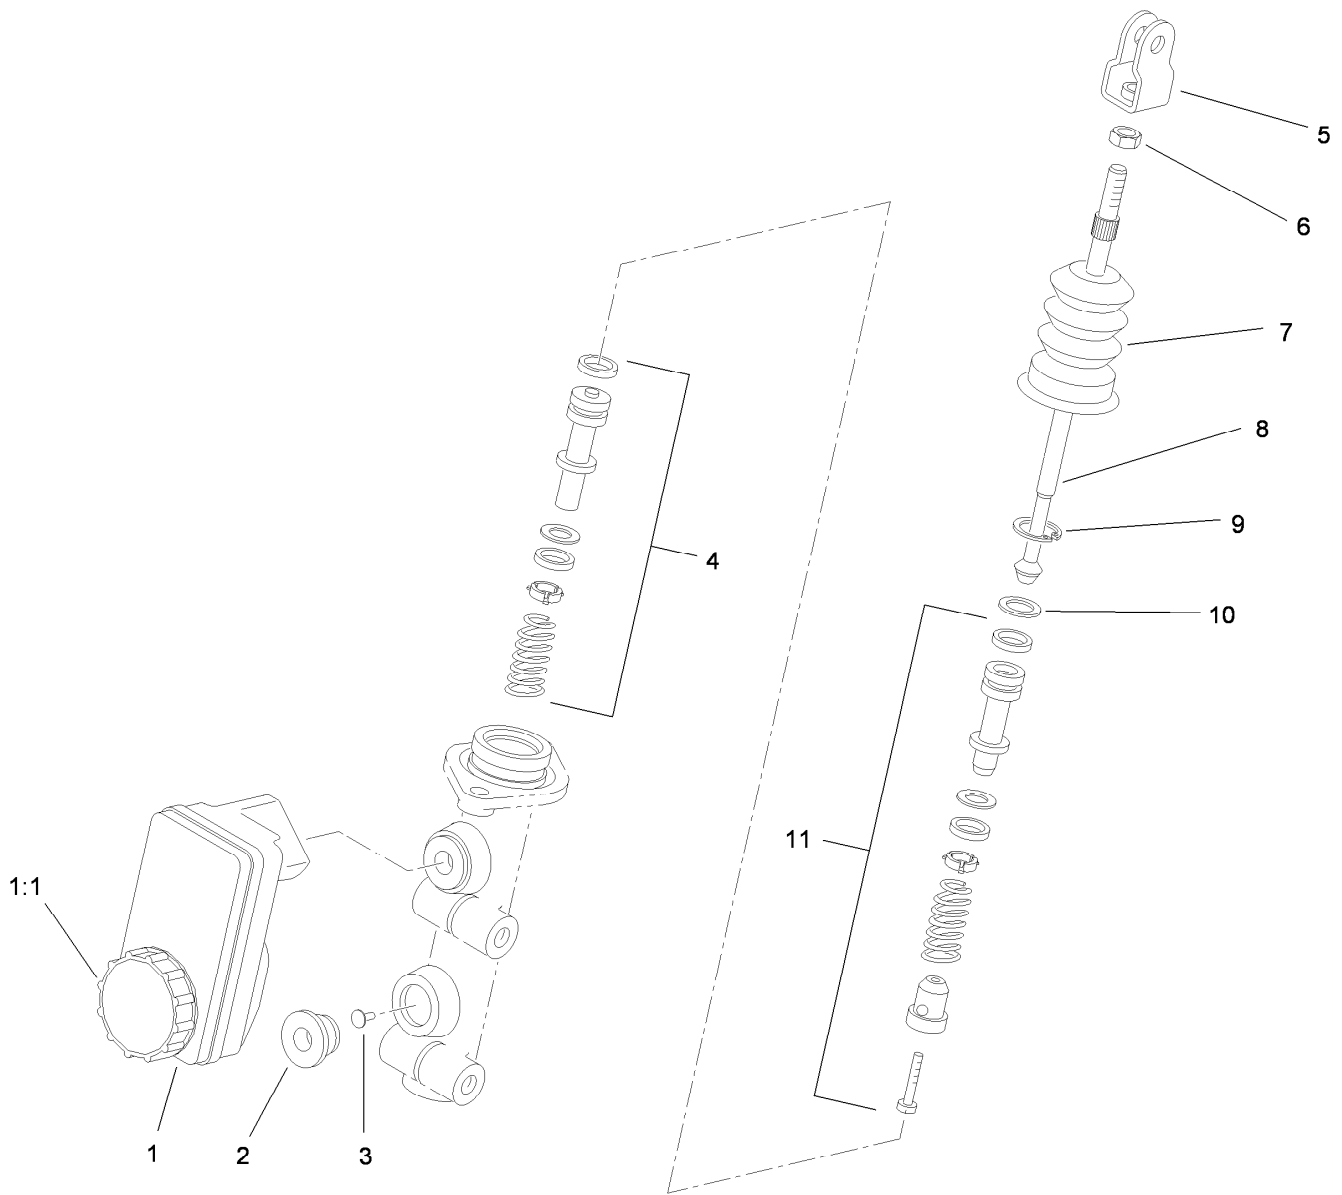 


Master Cylinder Assembly No. 104-6782

Ref.	Part Number	Qty.	Description
1	104-6845	1	Reservoir ASM
1:1	92-4112	1	Cap ASM
2	93-8971	2	Seal-Port, Flange
3	92-4103	1	Pin-Stop
4	92-4102	1	Secondary Piston ASM
5	92-4110	1	Clevis
6	21-0360	1	Nut-Hex
7	94-5209	1	Cover-Dust
8	94-5210	1	Rod-Push
9	92-4109	1	Ring-Snap
10	92-4108	1	Retainer-Washer
11	92-4101	1	Primary Piston ASM

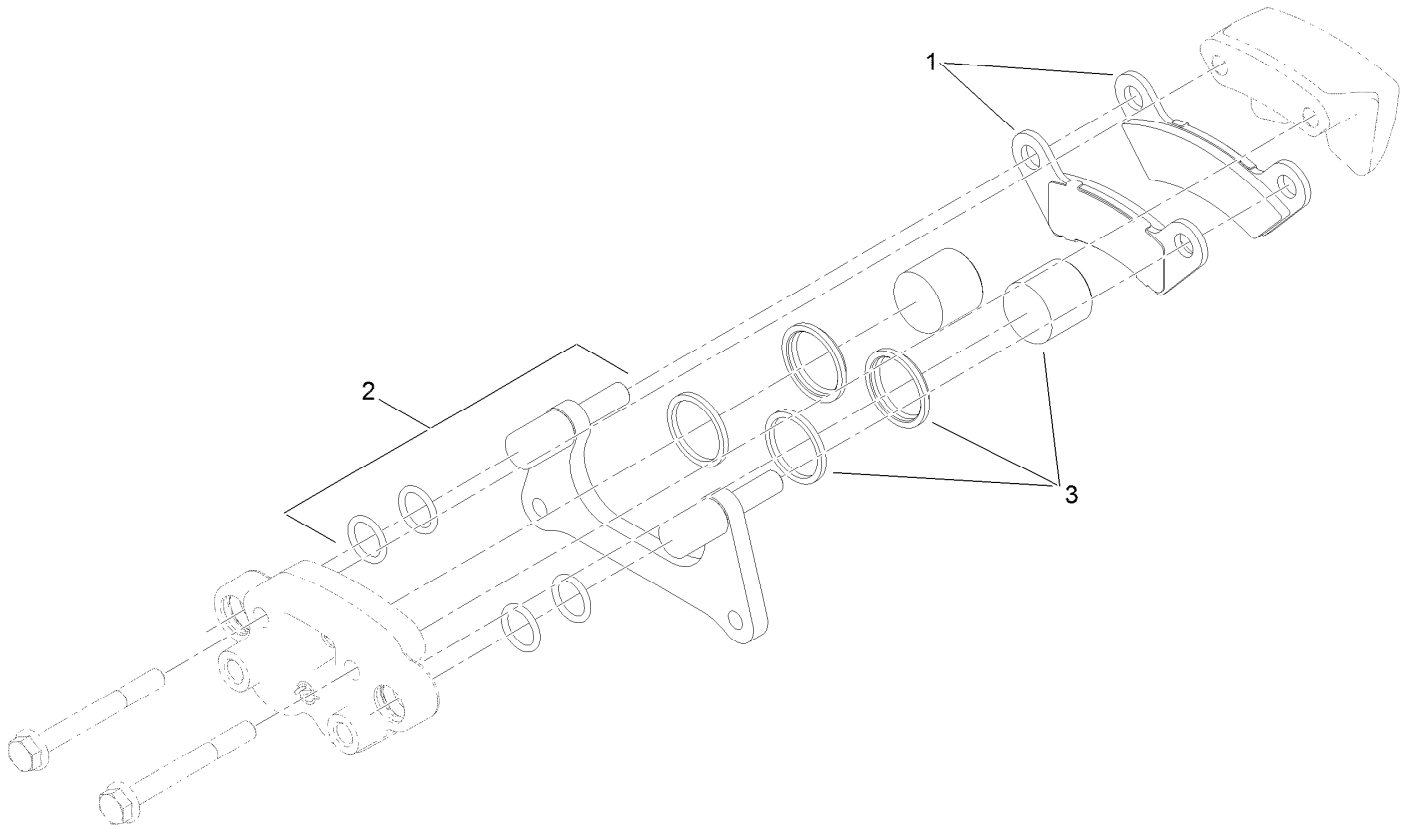 

Brake Caliper Assembly No. 127-7424


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	140-2580	1	Brake Pad Service Kit (Front, Qty 4)
2	119-9511	1	Bracket Kit
3	133-0614	1	Piston Kit

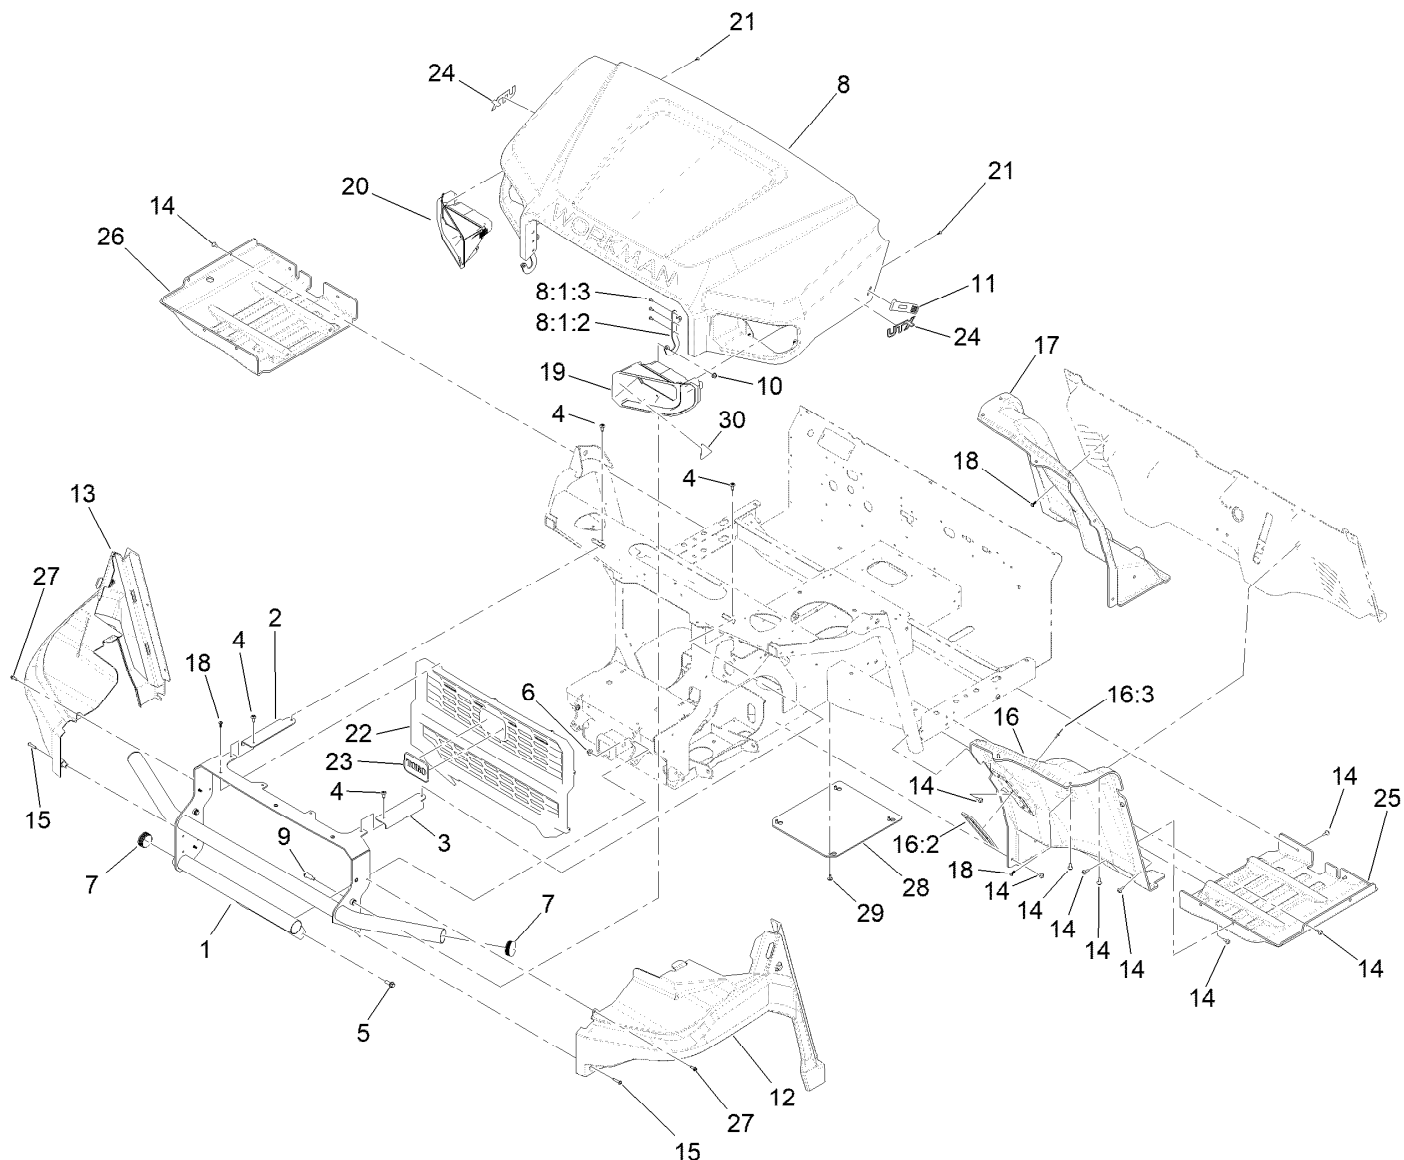 

Hood and Front Fender Assembly

Ref.	Part Number	Qty.	Description
1	136-9540	1	UTV Bumper ASM
2	144-2423-05	1	Bracket-Mount, Utx Bumper [blk-Txt]
3	144-2421-05	1	Bracket-Mount, Utx Bumper [blk-Txt]
4	138-9753	4	Screw
5	3234-42	2	Screw-HHF
6	104-8301	2	Nut-HF, NI
7	137-6827	4	Plug-Plastic
8	137-6820SP	1	UTV Hood ASM
8:1:2	137-6817	2	Bracket-Pivot, Hood
8:1:3	114439	6	Rivet-Blind
9	136-7192	2	Bolt-Shoulder, HHF
10	104-8300	2	Nut-HF, NI
11	137-6856	2	Strap-Hood
12	137-2816SP	1	Fender-Front, LH
13	137-2817SP	1	Fender-Front, RH
14	119-4012	38	Screw-HWHTF
15	132-6777	2	Screw-Twh Thd Roll


Ref.	Part Number	Qty.	Description
16	161-5471	1	Fender ASM-Inner, LH
16:2	161-5383	1	Plate-Reinforcement, Fender
16:3	3269-24	6	Rivet
17	161-5306	1	Fender-Inner, RH
18	138-5775	9	Screw-Delta Point
19	138-5778	1	Headlight ASM, LH
20	138-5779	1	Headlight ASM, RH
21	139-3430	8	Screw-Bhf
22	140-4646	1	Grill-Utx
23	144-2294	1	Emblem-Toro
24	144-1145	2	Decal-Utx, Emblem
25	161-5309	1	Plate-Skid, LH (Crew)
26	161-5310	1	Plate-Skid, RH (Crew)
27	49-2040	2	Screw-HWHTF
28	163-4942	2	Plate-Cover, Center
29	126-6266	8	Screw-Tph
30	161-5222	2	Decal-Reflector, Fender

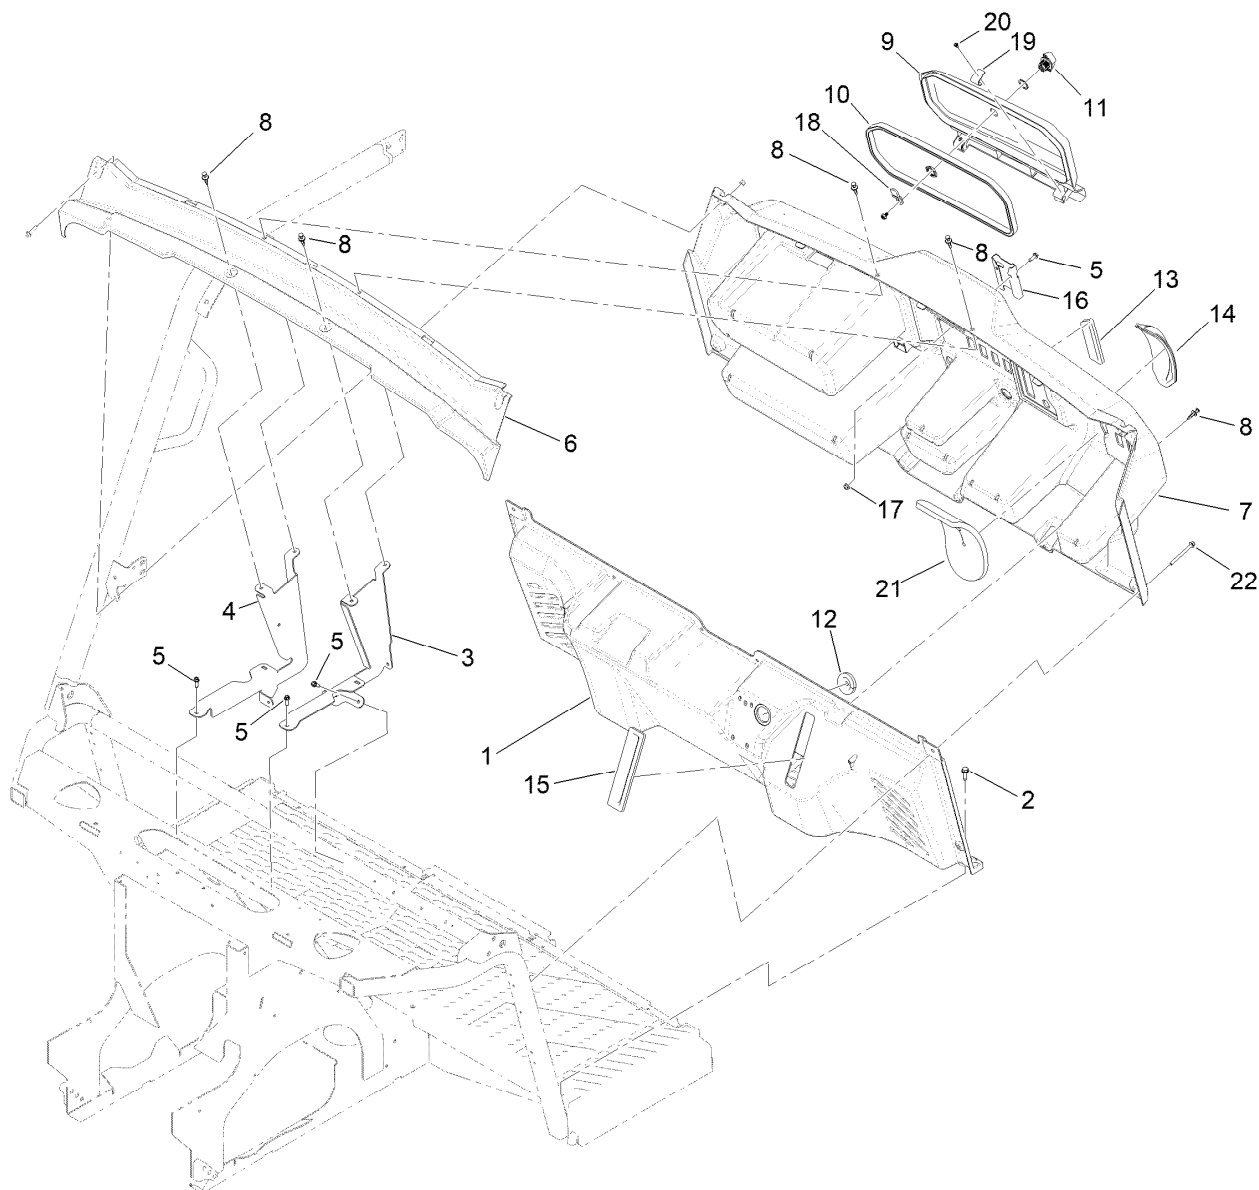 

Dash Assembly

Ref.	Part Number	Qty.	Description
1	137-2749SP	1	Footboard
2	701243	4	Screw-Thd Roll, HWH
3	145-2174-03	1	Bracket-Dash, LH
4	145-2178-03	1	Bracket-Dash, RH
5	49-2040	8	Screw-HWHTF
6	138-0041SP	1	Panel-Windshield, Dash
7	138-0040SP	1	Dash
8	125-9622	8	Rivet-Blind
9	138-0039SP	1	Door-Glove Box
10	139-3462	1	Seal-Door, Glove Box
11	140-4679	1	Latch-Quarter Turn
12	163-4938	1	Grommet


Ref.	Part Number	Qty.	Description
13	161-5260	1	Grommet-Shifter
14	161-5261	1	Grommet-Steering Column
15	161-5262	1	Grommet-Brake Pedal
16	139-3449-05	1	Bracket-Mount, Radio
17	104-7201	4	Nut-HF, NI
18	140-4680	1	Cam-Latch, Quarter Turn
19	145-0840	2	Bracket-Glove Box
20	32144-42	2	Screw-Thd Form, HWH
21	147-2822	1	Seal-Foam, Steering Column
22	138-3653	2	Screw-HHF

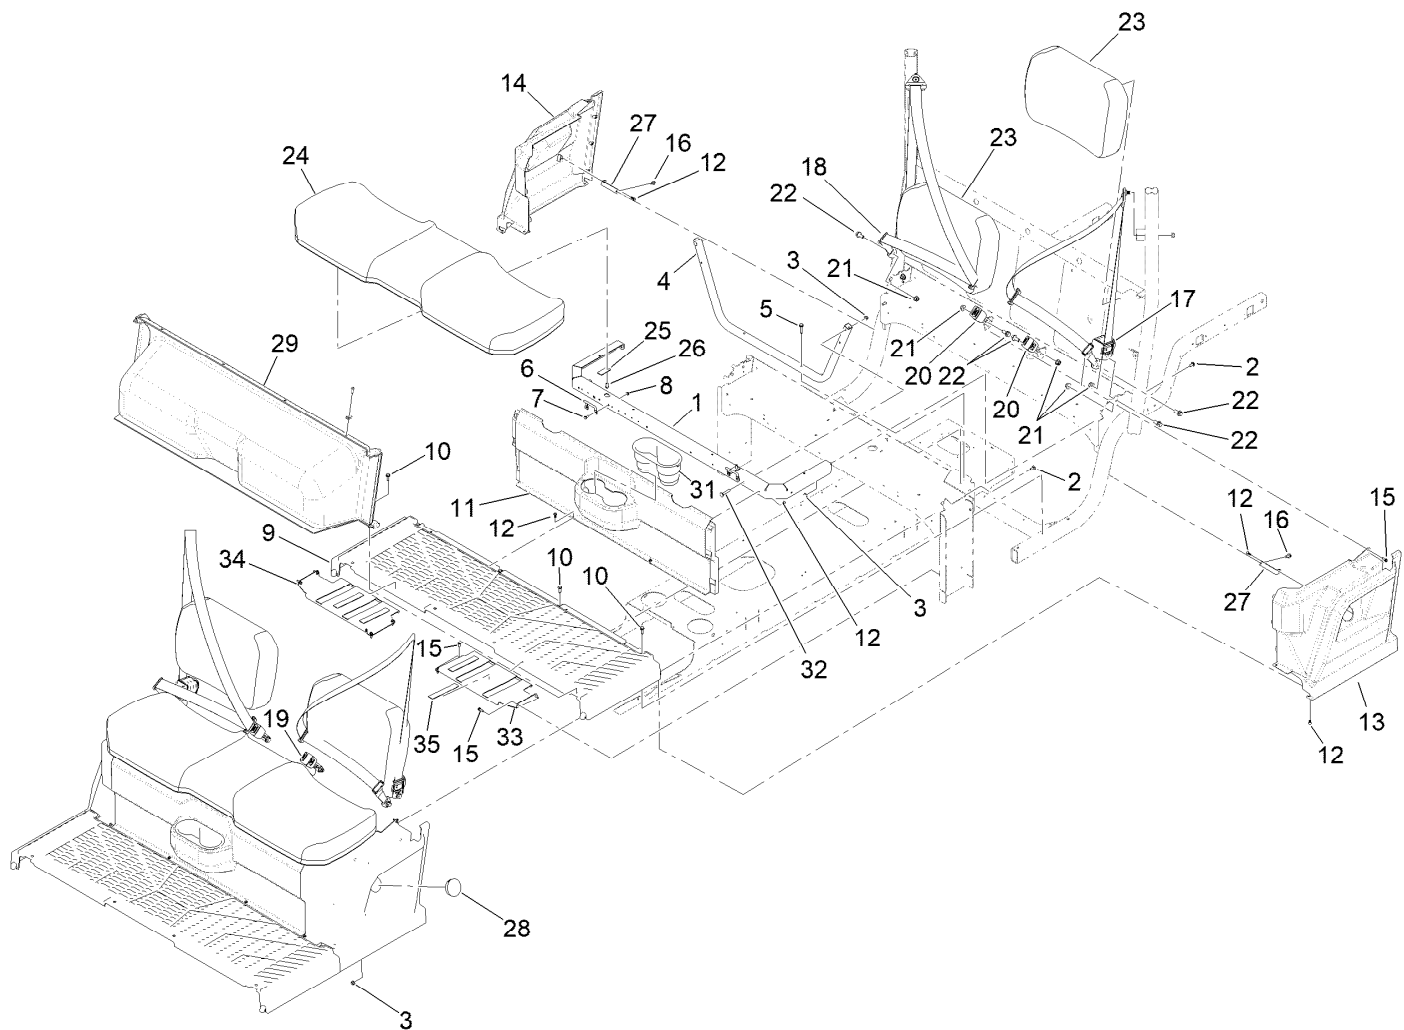 

Seat Base Assembly

Ref.	Part Number	Qty.	Description
1	137-6896-03	2	Frame-Seat, Bottom
2	3230-23	4	Bolt-CARR
3	104-8300	8	Nut-HF, NI
4	137-2746-03	2	Tube-Support, Seat
5	32144-57	4	Screw
6	137-6888	4	Wire-Hinge
7	321-3	8	Screw-HH
8	104-7201	8	Nut-HF, NI
9	137-6874SP	2	Plate-Floor
10	701243	12	Screw-Thd Roll, HWH
11	137-6875SP	2	Panel-Seat Base
12	138-5775	28	Screw-Delta Point
13	137-2813SP	2	Panel-Seat Base, LH
14	137-2814SP	2	Panel-Seat Base, RH
15	49-2040	12	Screw-HWHTF
16	32144-70	2	Screw-HWHTF
17	140-2676	2	Retractor-Seat Belt, LH


Ref.	Part Number	Qty.	Description
18	140-2677	2	Retractor-Seat Belt, RH
19	140-2678	1	Buckle-Seat Belt, W/Switch
20	140-2679	3	Buckle-Seat Belt
21	144-2269	12	Nut-HF, NI
22	144-2289	12	Screw-HHF
23	145-2211	4	Seat Backrest ASM
24	145-2207	2	Bench Seat Bottom ASM
25	145-7954	4	Bracket-Hinge, Seat
26	3274-55	4	Screw-HSBH
27	138-9411	2	Support-Panel-Side
28	136-9791	1	Plug-Panel
29	137-2949	1	Panel-Rear, Seat
31	139-3454	2	Cup Holder
32	3230-5	4	Bolt-CARR
33	145-2183-03	1	Bracket-Stiffener, Footboard
34	145-2184-03	1	Bracket-Stiffener, Footboard
35	145-2182	4	Adhesive-Strip

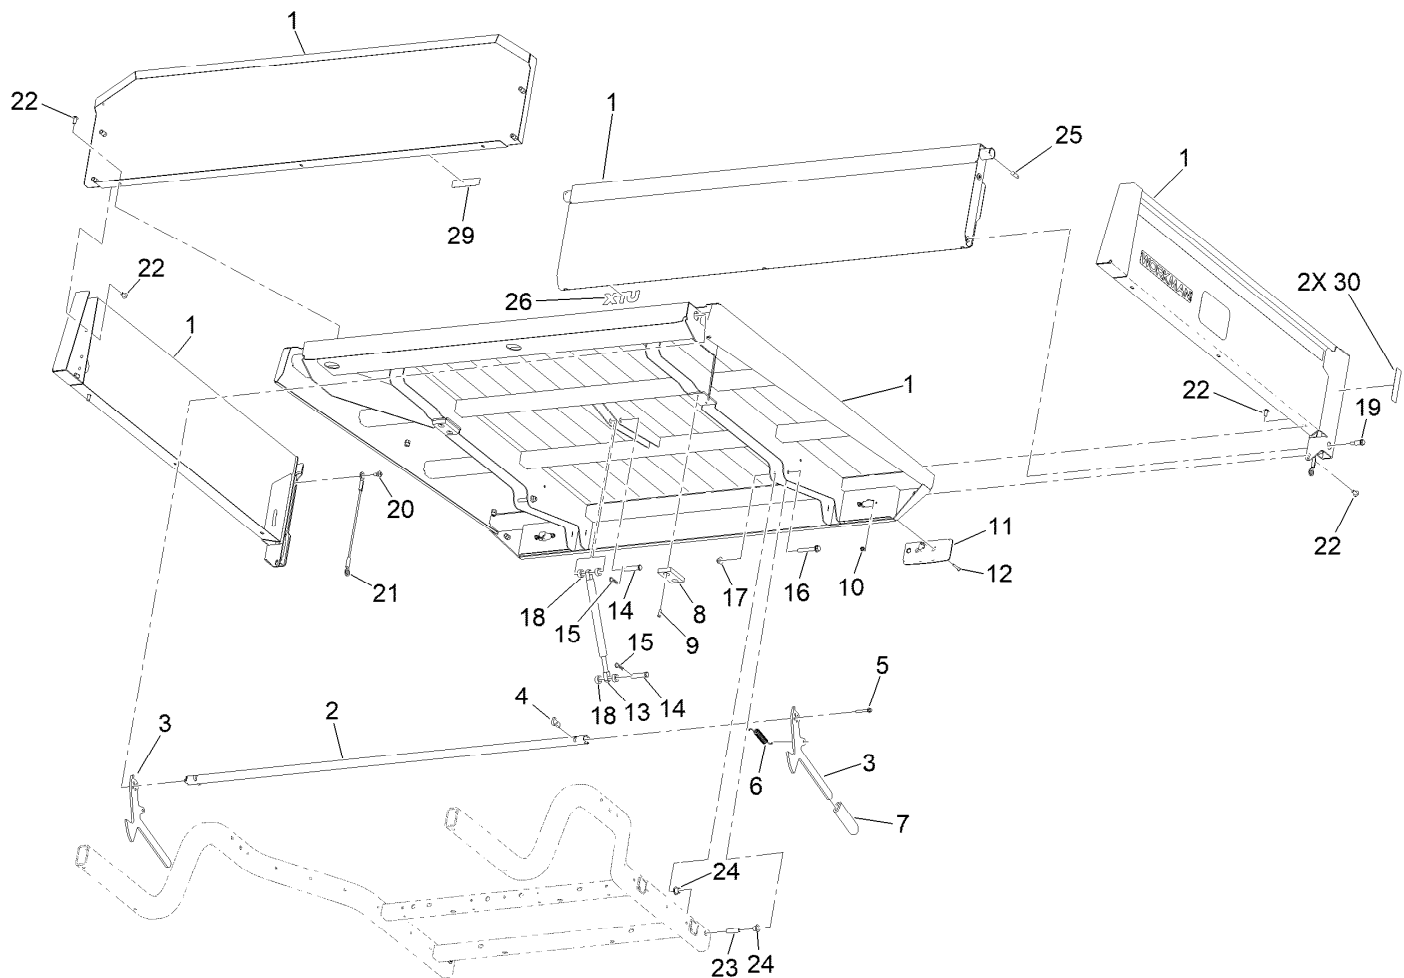 

Cargo Bed Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1		1	Cargo Bed Kit ●	16	3234-39	2	Screw-HHF
2	139-4421-03	1	Tube-Latch	17	104-8301	2	Nut-HF, NI
3	147-2709	2	Latch-Bed	18	66-6500	4	Spacer-Wheel
4	139-4422	2	Plate-Threaded	19	147-2747	2	Screw-Shoulder,HHF,Lock
5	147-2746	2	Screw-HHF,Lock	20	120-9471	4	Bolt-Shoulder
6	140-2663	2	Spring-Extension	21	130-5726	2	Lanyard
7	1-633268	2	Grip-Lever	22	138-9753	15	Screw
8	93-9719	2	Block-Wear	23	144-2211	2	Sleeve-Pivot, Bed
9	3274-69	4	Screw-HSBH	24	125-5239	4	Bushing-Flange
10	120-4578	4	Nut-HF	25	133-7146	2	Plug-Tailgate, Anti-Rattle
11	139-2071	2	Light-Rear Tail/Stop/Turn	26	144-1145	1	Decal-Utx, Emblem
12	3250-52	4	Screw-PPH	29	144-2293	1	Decal-Cargo Bed Safety, Crew
13	139-4417	1	Spring-Gas	30	161-5428	2	Decal-Reflector, Rear
14	283-5	2	Pin-Clevis				
15	3290-467	2	Pin-Hair				



 
● Not serviced separately

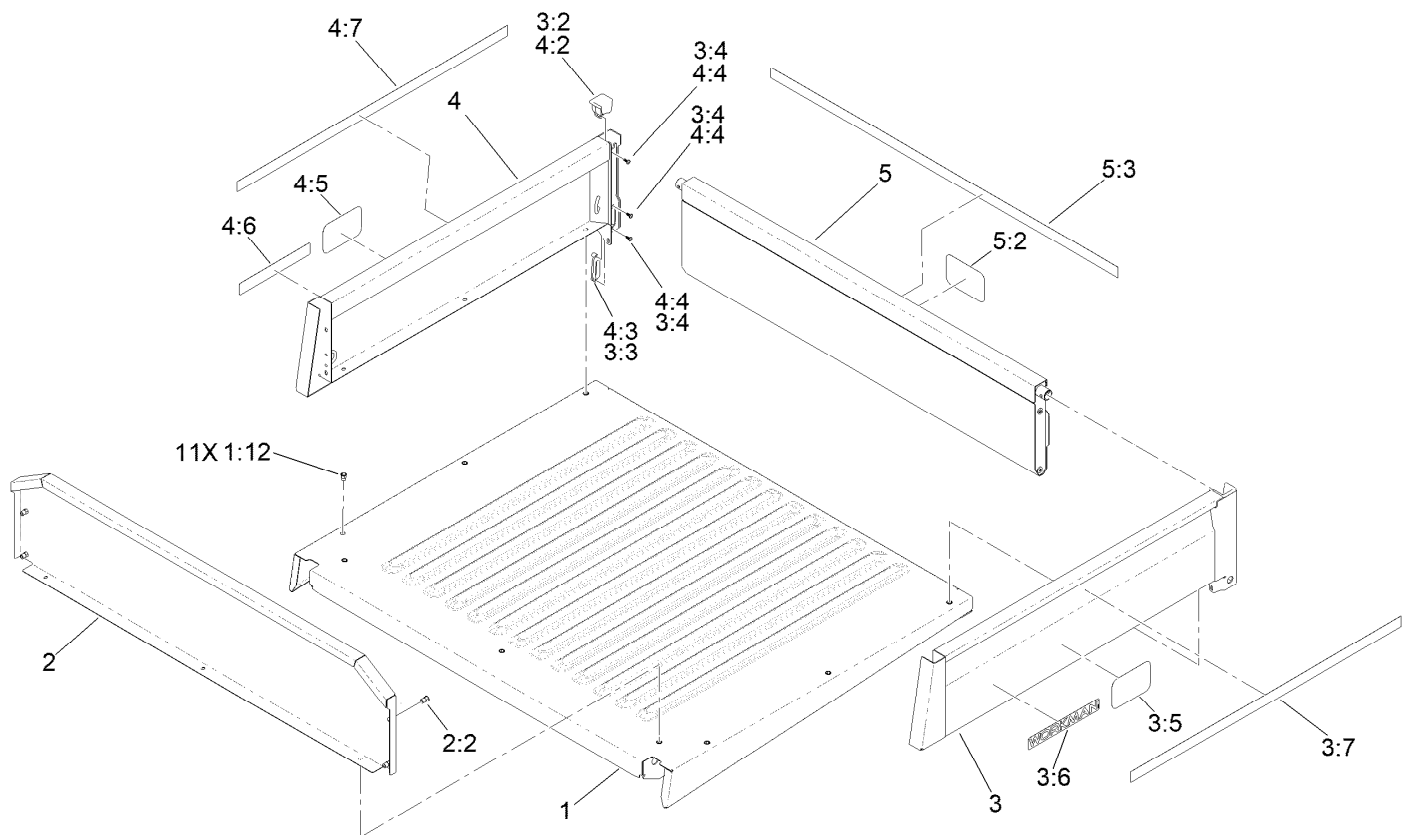

Cargo Bed Kit Assembly

Ref.	Part Number	Qty.	Description
1	147-2750	1	Flat Bed ASM
1:12	138-2899	15	Nut-Clinch
2	140-4675	1	Panel ASM-Front, Bed
2:2	138-2899	4	Nut-Clinch
3	147-8103	1	Bed Side ASM, LH
3:2	140-2690	1	Retainer-Tailgate
3:3	139-4690	1	Bushing-Tailgate
3:4	138-5775	3	Screw-Delta Point
3:5	105-1217	1	Decal
3:6	140-4835	1	Decal-Workman, Gray
3:7	144-2277	1	Decal-Red Stripe, 43"




Ref.	Part Number	Qty.	Description
4	147-8104	1	Bed Side ASM, RH
4:2	140-2690	1	Retainer-Tailgate
4:3	139-4690	1	Bushing-Tailgate
4:4	138-5775	3	Screw-Delta Point
4:5	105-1217	1	Decal
4:6	140-4835	1	Decal-Workman, Gray
4:7	144-2277	1	Decal-Red Stripe, 43"
5	147-8102	1	Tailgate ASM
5:2	105-1217	1	Decal
5:3	144-2281	1	Decal-Red Stripe, 55.25"

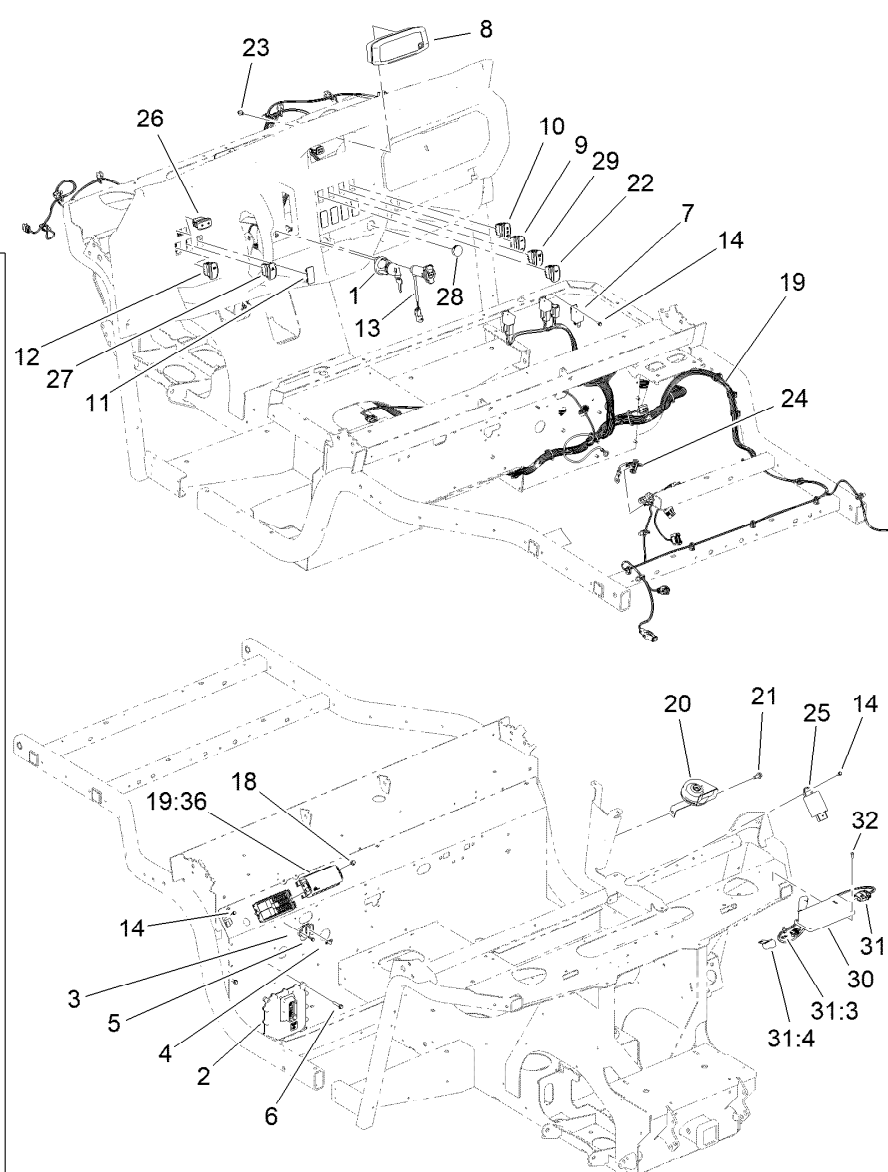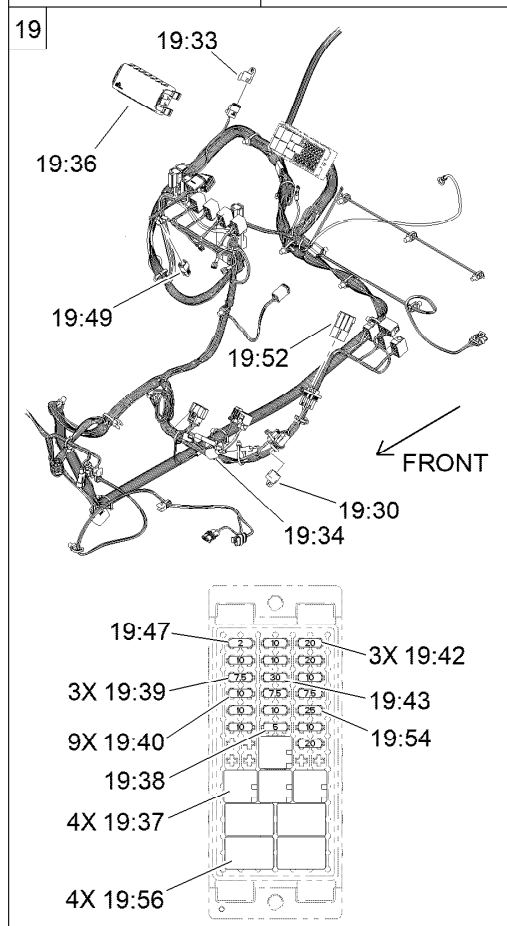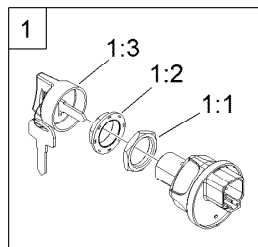   

Electrical Assembly

Ref.	Part Number	Qty.	Description
1	121-5159	1	Switch-Ignition
1:1	121-5160	1	Nut-Hex
1:2	122-2704	1	Nut-Face, M22 (Plastic)
1:3	121-5162	1	Set-Key, Ignition
2	127-2770	1	Controller
3	42862	1	Block-Terminal, Ground
4	42863	1	Strip-Jumper
5	100-4351	2	Screw-HWH
6	32144-110	4	Screw-HWH
7	99-7435	3	Relay
8	147-8095	1	Cluster-Instrument
9	144-2440	1	Switch-Rocker, On-None-On
10	144-2445	1	Switch-Rocker, On-On-On
11	99-7420	5	Plug-Hole
12	144-2405	1	Switch-Rocker, On-None-On
13	139-3420	1	Port-USB
14	32144-112	5	Screw-HWH
18	33103-012	2	Screw-HHF


Ref.	Part Number	Qty.	Description
19	122-2316	1	Harness-Wire, Utx Gas 4 Passenger
19:30	32180-156	1	Cap-Plug, 6 Way
19:33	32180-089	1	Cap-Plug, 3 Way
19:34	100-4918	1	Diode
19:36	32180-393	1	Cover-Chief, Bric
19:37	126-3991	4	Relay-Micro
19:38	121-8864	1	Fuse-Mini Blade, 5 Amp
19:39	121-8865	3	Fuse-Mini Blade, 7.5 Amp
19:40	121-8866	9	Fuse-Mini Blade, 10 Amp
19:42	121-8868	3	Fuse-Mini Blade, 20 Amp
19:43	121-8870	1	Fuse-Mini Blade, 30 Amp
19:47	121-8861	1	Fuse-Mini Blade, 2 Amp
19:49	32180-282	1	Resistor-120 Ohm
19:52	32160-128	1	Connector-Mp280, 3M (Sealed)
19:54	121-8869	1	Fuse-Mini Blade, 25 Amp
19:56	126-6157	4	Relay-Micro 280, Spdt
20	139-4557	1	Horn-ASM
21	32144-70	1	Screw-HWHTF

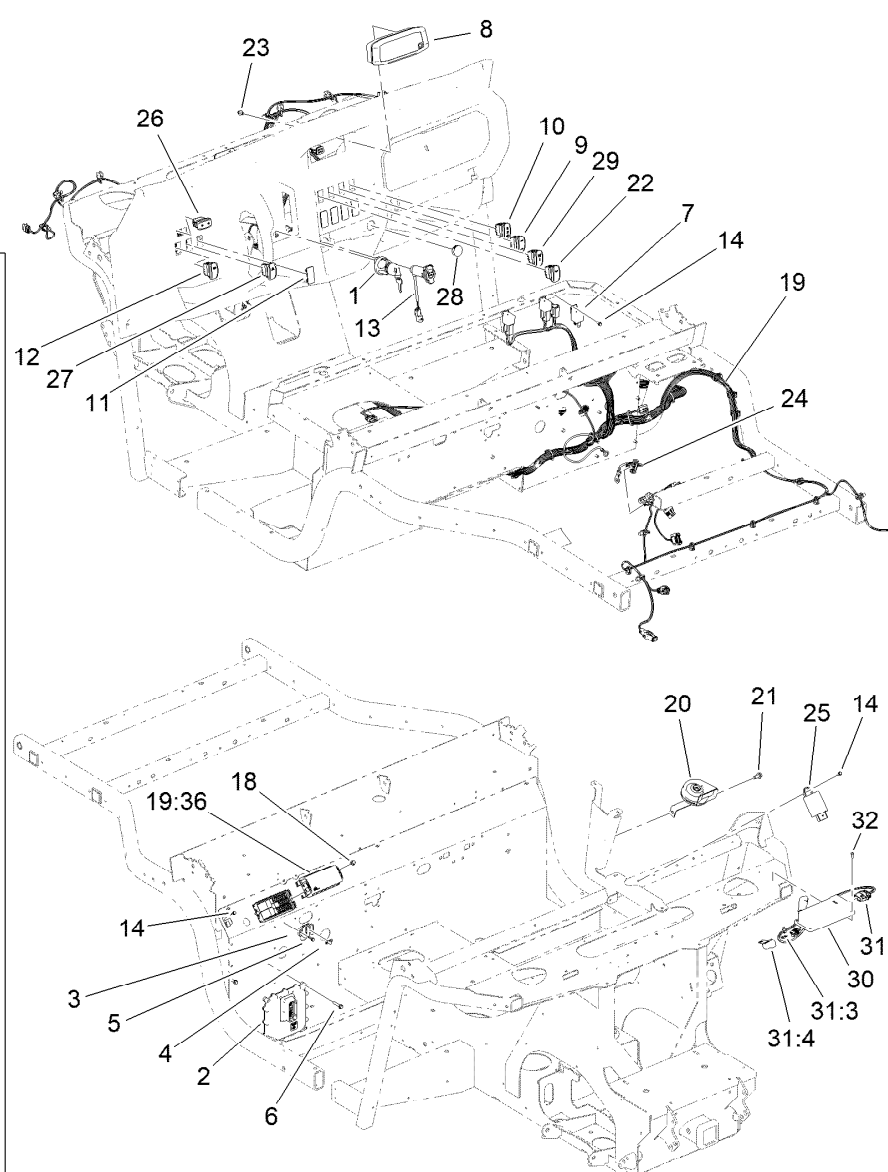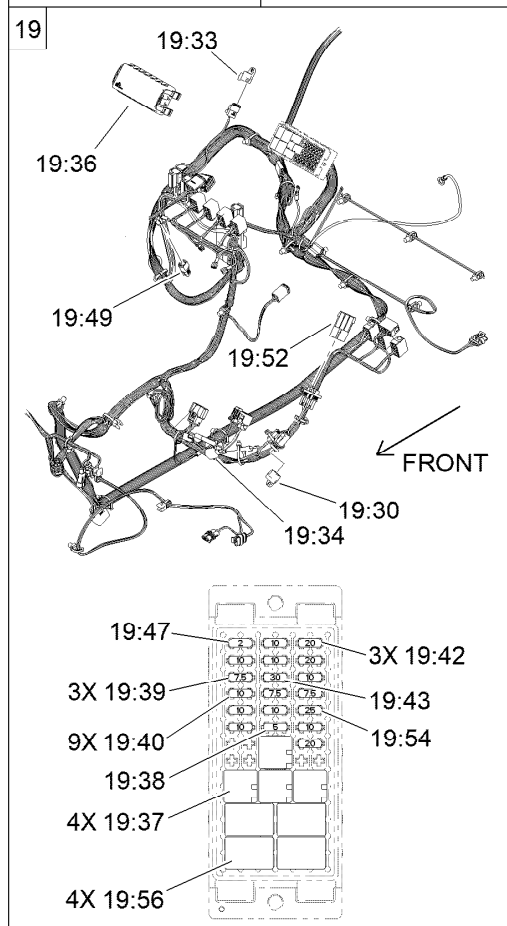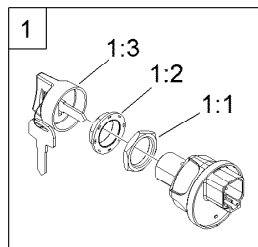   

Electrical Assembly (continued)


Ref.	Part Number	Qty.	Description
22	144-2415	1	Switch-Rocker, (On)-None-Off
23	3234-13	2	Screw-HHF
24	99-3441	1	Harness-Wire, Fusible Link
25	139-2080	1	Flasher-Dual Rate
26	144-2425	1	Switch-Rocker, On-Off-On
27	144-2400	1	Switch-Rocker, On-None-On

Ref.	Part Number	Qty.	Description
28	145-2160	1	Plug-Panel
29	145-2200	1	Switch-Rocker, (On)-On-Off
30	161-9001	1	Gateway-Telematics
31	122-2160	1	Harness-Wire
31:3	121-8861	1	Fuse-Mini Blade, 2 Amp
31:4	32180-101	1	Cover-Fuse, Single
32	32144-32	4	Screw-PPH

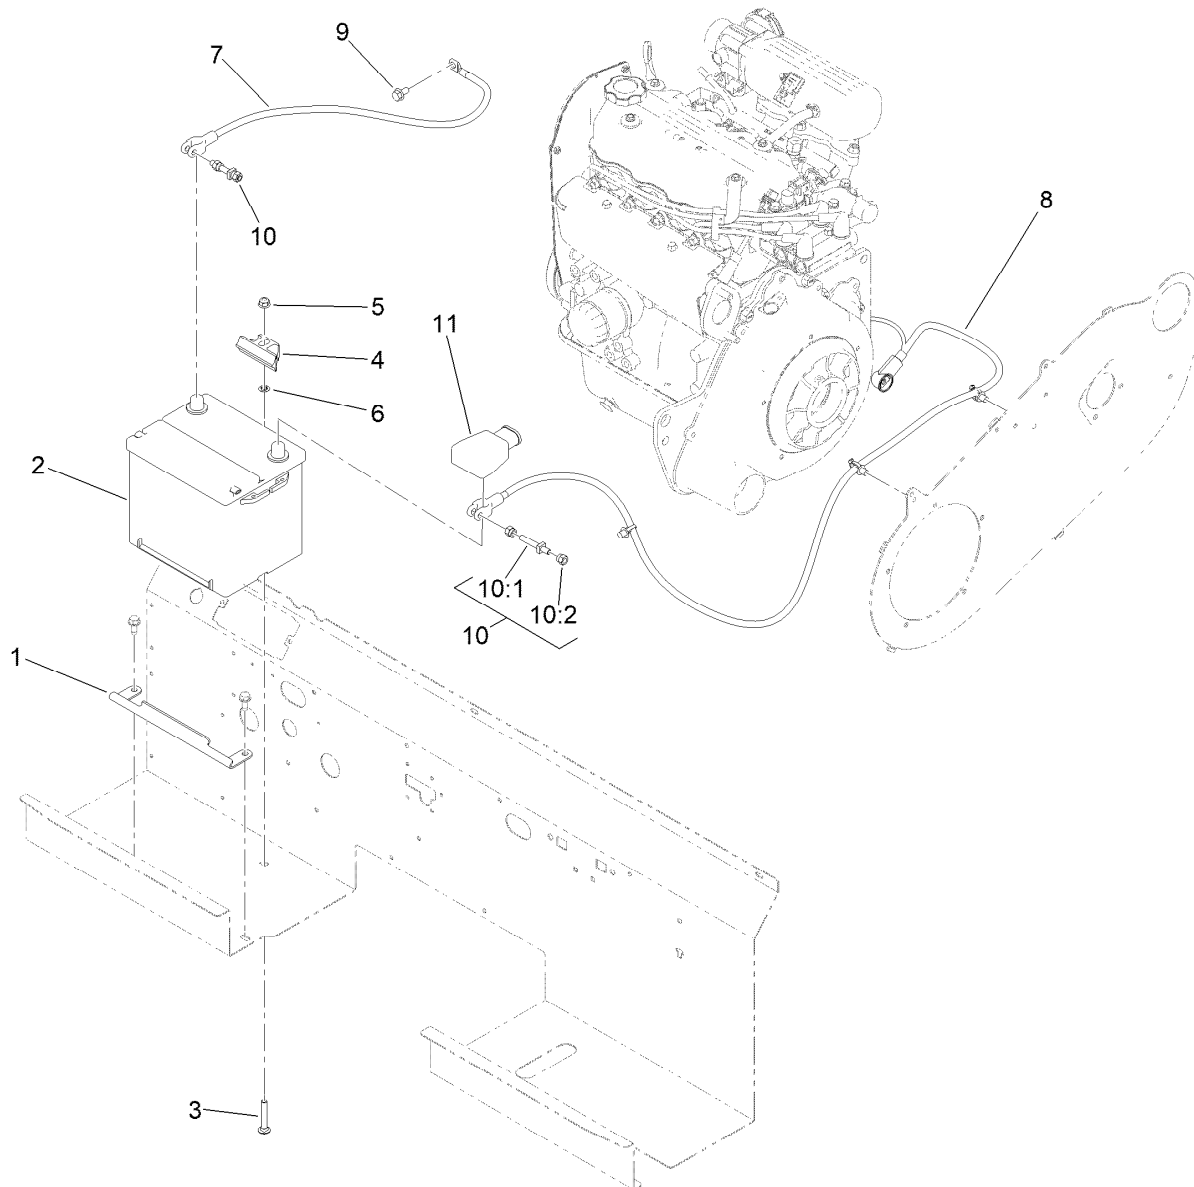 

Battery Assembly

Ref.	Part Number	Qty.	Description
1	147-8051	1	Hold Down-Battery
2	106-5187	1	Battery- Dry, 12V, 525 CCA
3	3230-6	1	Bolt-CARR
4	138-6335	1	Retainer-Battery
5	104-8300	1	Nut-HF, NI
6	109-5667	1	Nut-Push
7	122-1781	1	Cable-Battery, Bk ASM
8	122-1780	1	Cable-Battery, Rd ASM
9	33104-016	1	Screw-HHF
10	112-9921	2	Bolt ASM
10:1	32180-107	1	Bolt-Clamp, Battery
10:2	32180-108	2	Nut-Hex Shoulder
11	32180-110	1	Insulator-Lead Cast

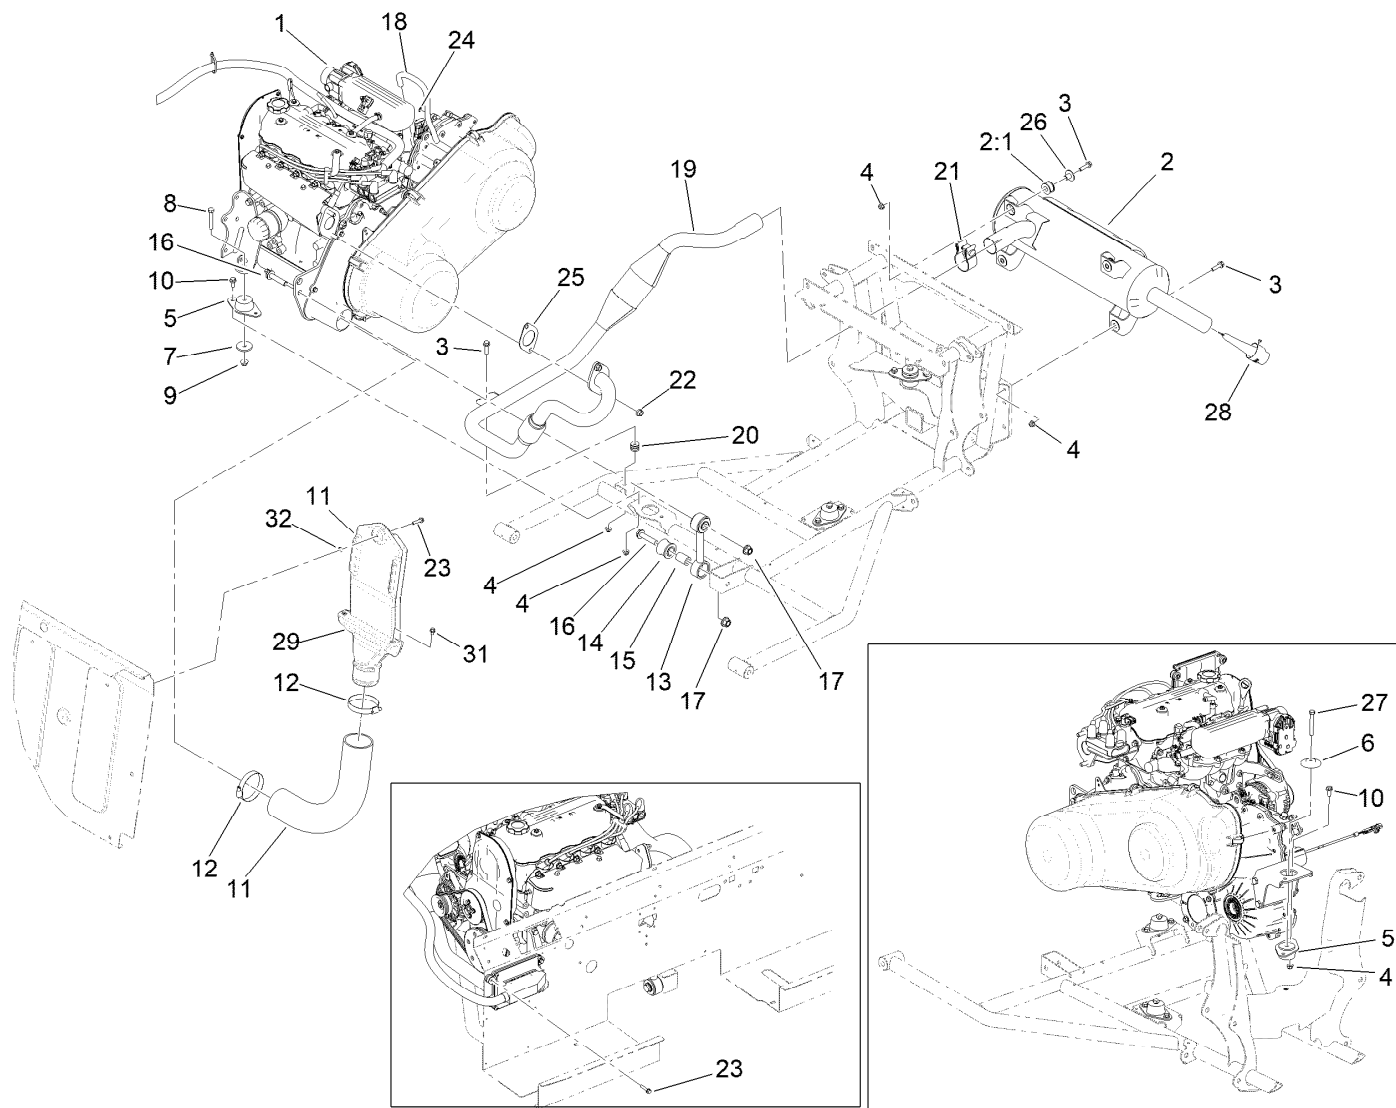 


Engine Drivetrain and Exhaust Assembly

Ref.	Part Number	Qty.	Description
1		1	Engine/Drivetrain ASM ●
2	138-9335	1	Muffler ASM (With Mounts)
2:1	138-9300	4	Isolator-Mount, Muffler
3	3234-36	5	Screw-HHF
4	104-8300	11	Nut-HF, NI
5	139-0856	3	Mount-Engine
6	138-6462	1	Support-Isolator
7	80-8560	2	Washer-Hardened
8	323-11	2	Screw-HH
9	104-8301	2	Nut-HF, NI
10	3234-47	6	Screw-HHF
11	147-2704	1	Duct-Inlet, Cvt
12	2412-125	2	Clamp-Hose
13	140-4685	1	Link Rod ASM
14	140-4697	2	Bushing, Rubber
15	109-5010	2	Spacer

Ref.	Part Number	Qty.	Description
16	3234-46	2	Screw-HHF
17	99-5107	2	Nut-Lock
18	110-4110	1	Hose-Fuel
19	140-2617	1	Pipe-Exhaust
20	131-5945	1	Isolator-Engine
21	144-2413	1	Clamp-Manifold (1.87" DIA)
22	136-8683	2	Nut-Lock
23	32144-110	5	Screw-HWH
24	32151-86	1	E-Ring
25	145-2119	1	Gasket-Exhaust
26	138-9301	4	Mount-Top Hat, Muffler
27	323-12	1	Screw-HH
28	144-2433	1	Arrester- Spark, 1.75"
29	147-2700	1	Hood-Cvt Intake
31	3234-26	2	Screw-HHF
32	1-803037	1	Nut-Retaining

 
● Not serviced separately

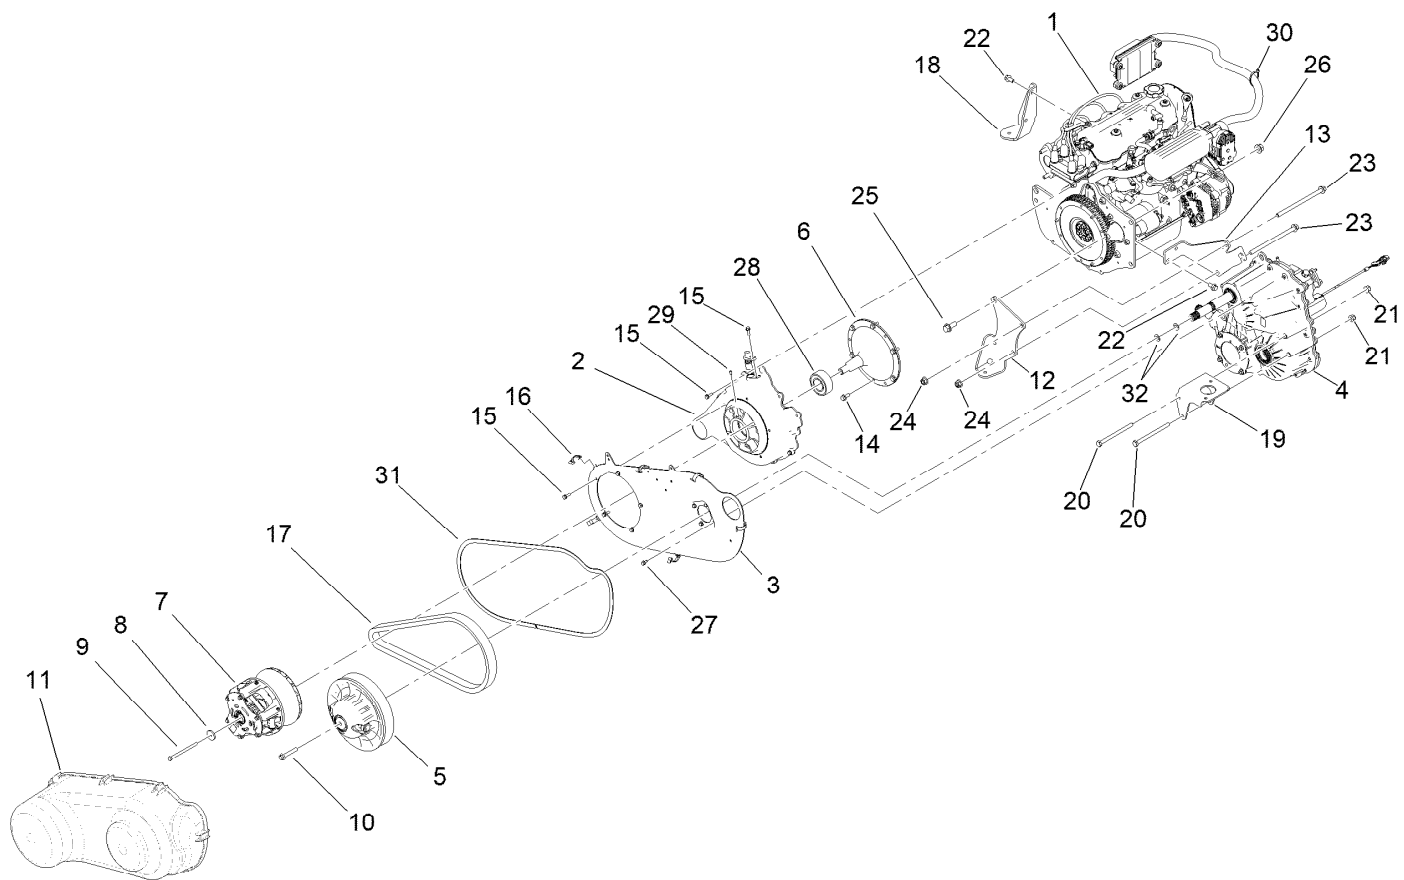

Engine, Transaxle and Clutch Assembly


Ref.	Part Number	Qty.	Description
1	144-2216	1	Engine (Gas, 40 HP)
2	145-2143	1	Housing-Flywheel, Gas
3	161-5254	1	Plate-Spanner
4	140-2611	1	Transaxle ASM
5	147-8173	1	Clutch-Secondary
6	145-2145	1	Adapter-Clutch
7	147-8172	1	Clutch-Primary
8	104-6550	1	Washer-Clutch
9	99-7201	1	Screw-HH
10	140-4777	1	Screw-HHF
11	140-2603	1	Enclosure-Cvt
12	147-8071	1	Bracket-Transmission, LH
13	145-7785-03	1	Bracket-Trans, RH (Gas)
14	33104-020	6	Screw-HHF
15	110-3986	14	Screw
16	140-4669	6	Clip-Spring
17	145-7789	1	Belt-Variable

Ref.	Part Number	Qty.	Description
18	147-8093	1	PSI Front Engine Mount ASM
19	140-2624-03	1	Bracket-Drivetrain, Rear
20	33115-140	2	Screw-HH
21	103-9511	2	Nut-Flg
22	120-4839	4	Screw-HHF
23	140-2689	2	Screw-HH
24	114-8417	2	Nut-HF, NI
25	3234-38	2	Screw-HHF
26	99-5107	2	Nut-Lock
27	104-2628	4	Screw
28	145-2146	1	Bearing-Ball
29	133-1717	1	Screw-Set
30	3290-378	1	Tie-Cable
31	145-7799	1	Gasket-Cover, Cvt
32	36-4780	2	Washer-Plain

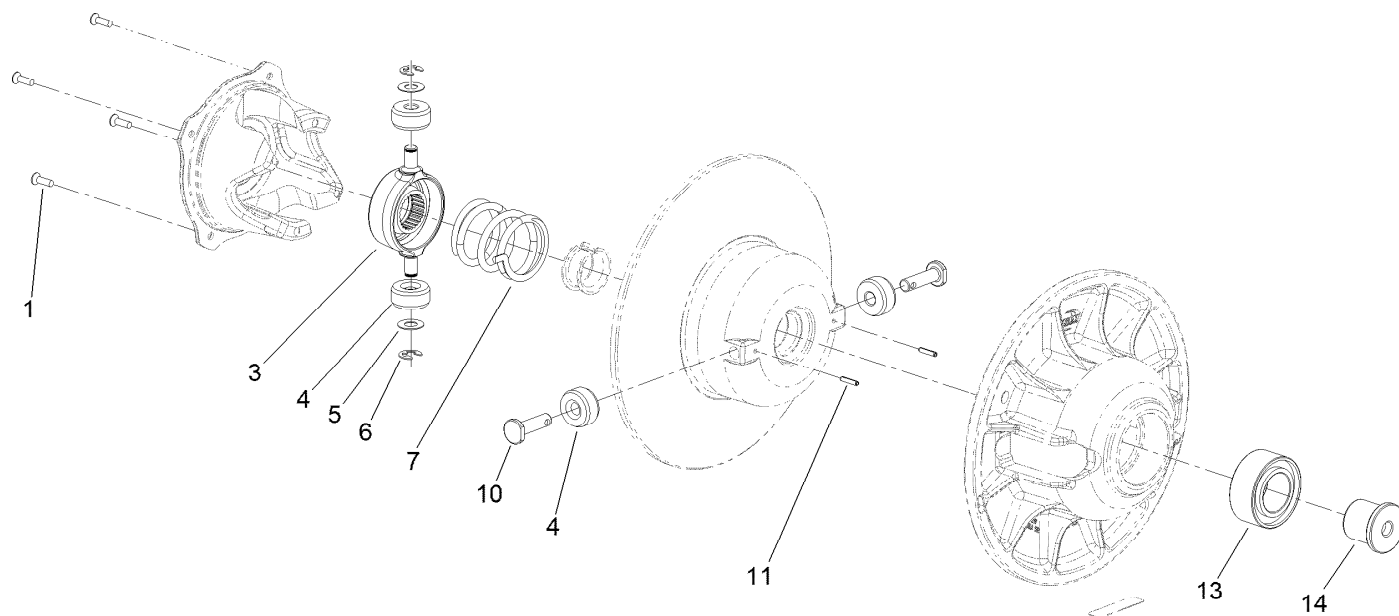 


Secondary Clutch Assembly No. 147-8173

Ref.	Part Number	Qty.	Description
1	145-2104	4	Screw, Machine Torx Sfch 10-32 X .625
3	145-2025	1	Spider 9.5 25T Mach
4	145-2026	4	Roller-Clutch 1.135 X .550
5	130-4059	2	Washer-Thrust
6	130-4058	2	E-Ring
7	145-2027	1	Spring-Comp 2.00 OD Secondary 175-320
10	130-4063	2	Pin-Roller
11	130-4065	2	Pin-Spring, Slotted
13	145-2028	1	Bearing-Ball
14	147-8180	1	Sleeve-Shoulder

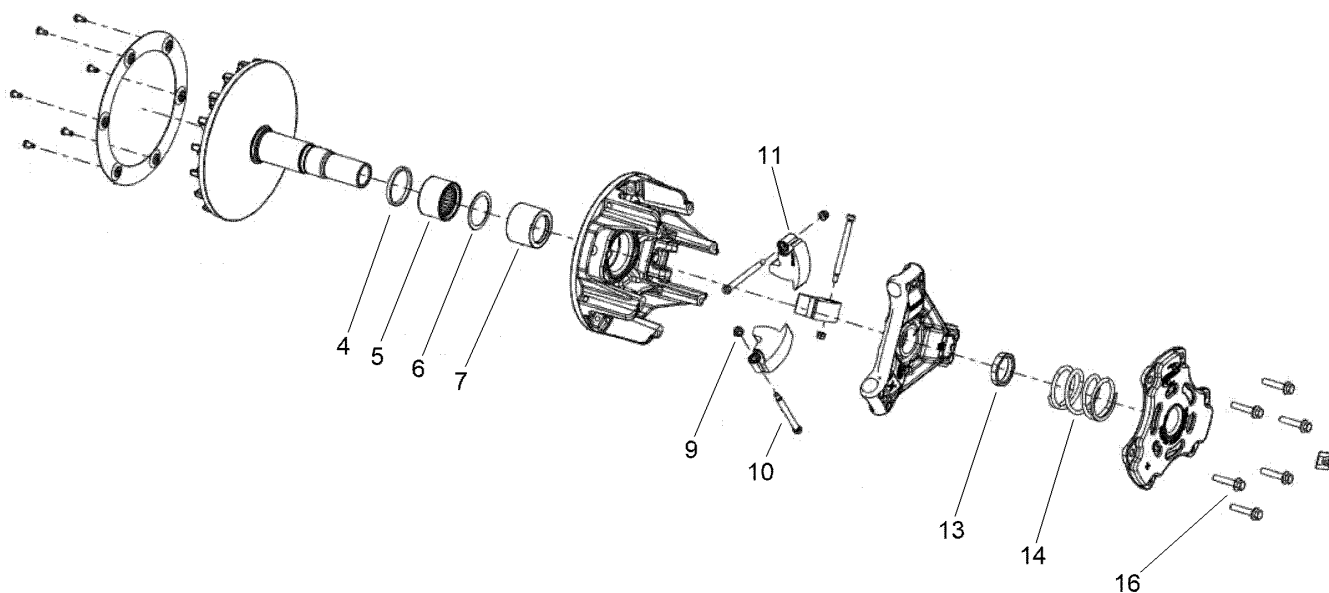 

Primary Clutch Assembly No. 147-8172


Ref.	Part Number	Qty.	Description
4	145-2018	1	Washer-Thrust
5	147-8178	1	Subassembly, Idler Primary
6	130-4069	1	Washer-Thrust
7	147-8177	1	Cap-Idler Sleeve
9	145-2103	3	Nut, Lock Hex 10-24 Flexloc
10	119-6016	3	Screw-Shoulder
11	145-2021	3	Weight-Clutch M17-198
13	161-5255	1	Nut-Jam
14	145-2022	1	Spring-Compression 2.00 OD Primary 70-13
16	145-2024	6	Screw-Hex Flange 1/4-20 X 1.25

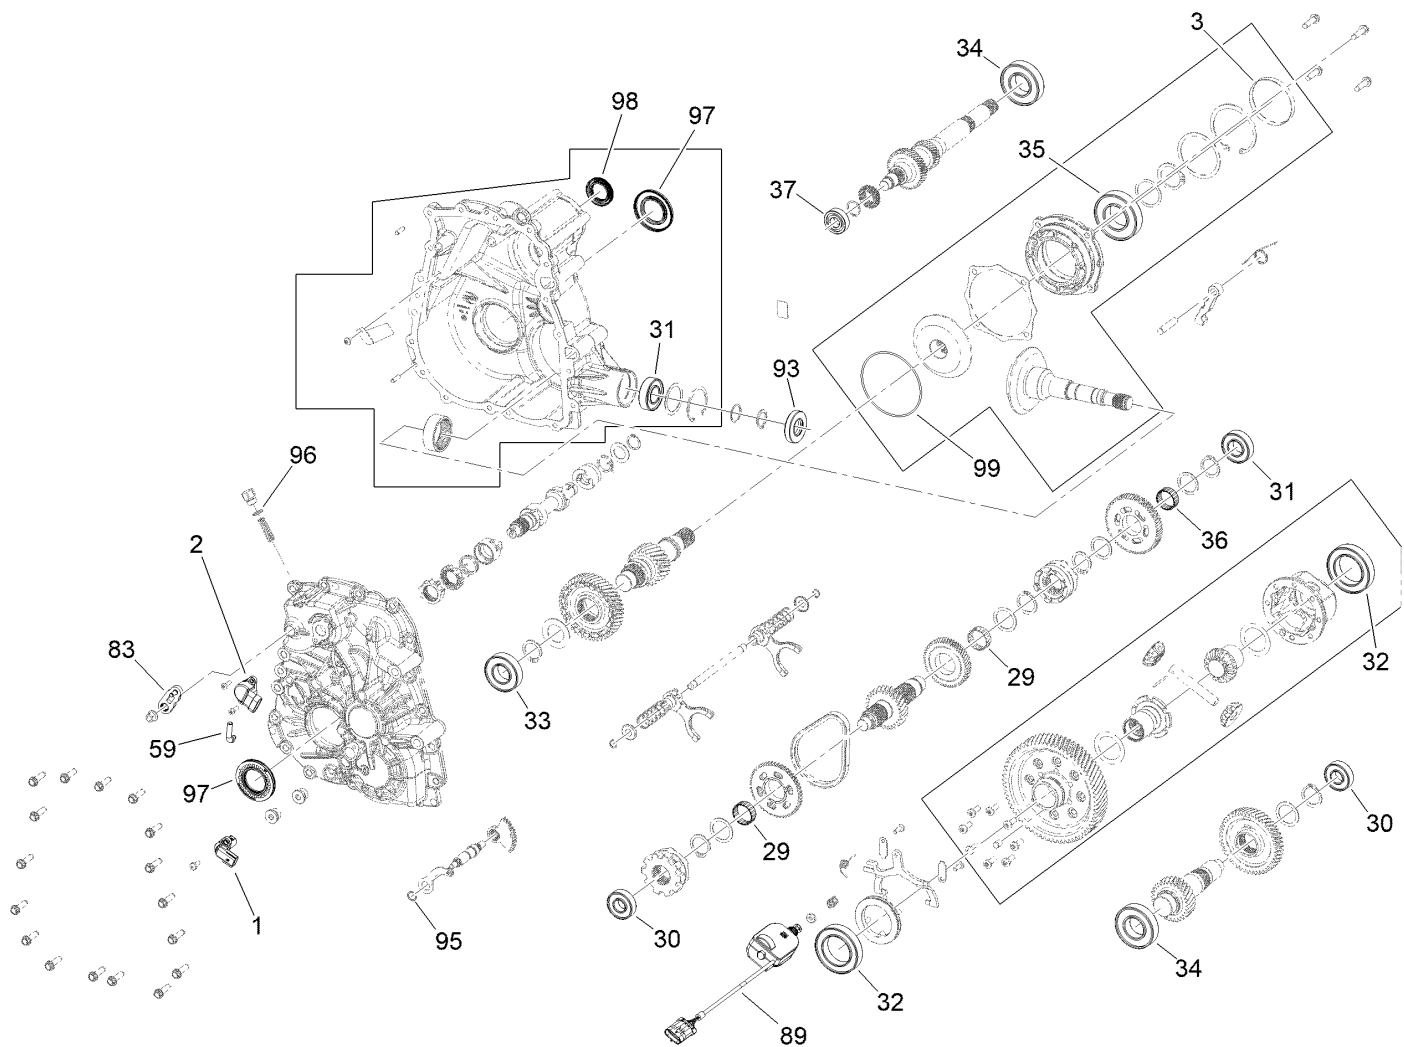 

Transaxle Assembly No. 140-2611

Ref.	Part Number	Qty.	Description
1	145-2039	1	Sensor,Speed, Transaxle
2	145-2040	1	Sensor, Assembly, Rotary Position
3	145-2030	1	Plug-Expansion 80MM X 10MM
29	130-4616	2	Bearing-Needle
30	145-2031	2	Bearing, Ball 6204 C3
31	145-2032	2	Bearing, Ball 6205 C3
32	130-4666	2	Bearing-Ball
33	145-2033	1	Bearing, Ball 6206 C3
34	145-2034	2	Bearing, Ball 6207 C3
35	145-2035	1	Bearing, Ball 6208 C3
36	130-4618	1	Bearing-Needle
37	145-2036	1	Bearing, Ball 6203 C3


Ref.	Part Number	Qty.	Description
59	145-2037	1	Tube,Vent, 90-1/4" Hose
83	145-2038	1	Subassembly, Bellcrank
89	145-2041	1	Shift Actuator, 2 Position
93	145-2042	1	Seal, Triple Lip, 0.984 X 2.047 X 0.394
95	145-2043	1	O-Ring
96	145-2044	1	O-Ring, 0.530 ID X .082 Wide
97	145-2045	2	Seal, Triple Lip, Viton, 40 X 70 X 7
98	145-2046	1	Seal, Triple Lip, 1.180 X 1.8520 X 0.315
99	145-2047	1	O-Ring, Nitrile

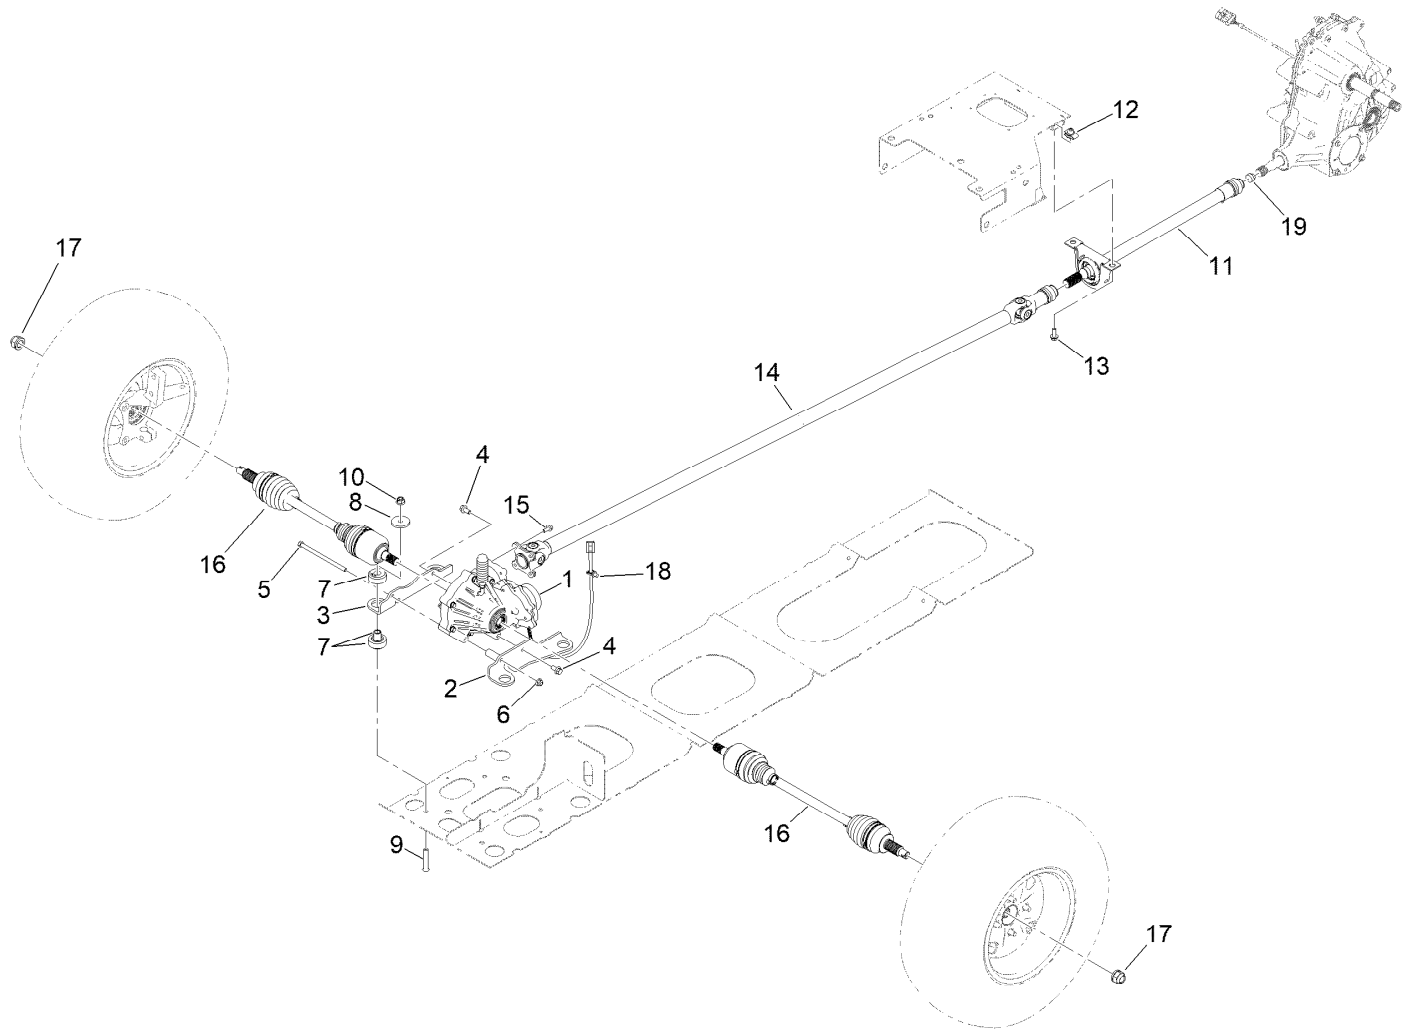 

Front Differential and Driveshaft Assembly

Ref.	Part Number	Qty.	Description
1	140-4752	1	Differential-Front
2	147-8083	1	Mount ASM-Differential, LH
3	161-5242	1	Mount-Differential, RH
4	145-7778	2	Screw-HHF
5	323-26	1	Screw-HH
6	104-8301	1	Nut-HF, NI
7	147-2708	4	Mount-Isolator
8	109-6919	4	Washer-Plain
9	144-2215	4	Screw-Bht
10	114-8417	4	Nut-HF, NI


Ref.	Part Number	Qty.	Description
11	140-4771	1	Driveshaft ASM-Intermediate
12	105-4886	2	Nut-Tinnerman
13	3234-42	2	Screw-HHF
14	140-4763	1	Driveshaft ASM (Crew)
15	139-3392	4	Screw-Lock
16	140-2644	2	Cv Axle ASM, Front
17	115-2164	2	Nut-Spindle
18	32180-030	1	Clip-Tie
19	145-7787	1	Bumper-Drive Shaft

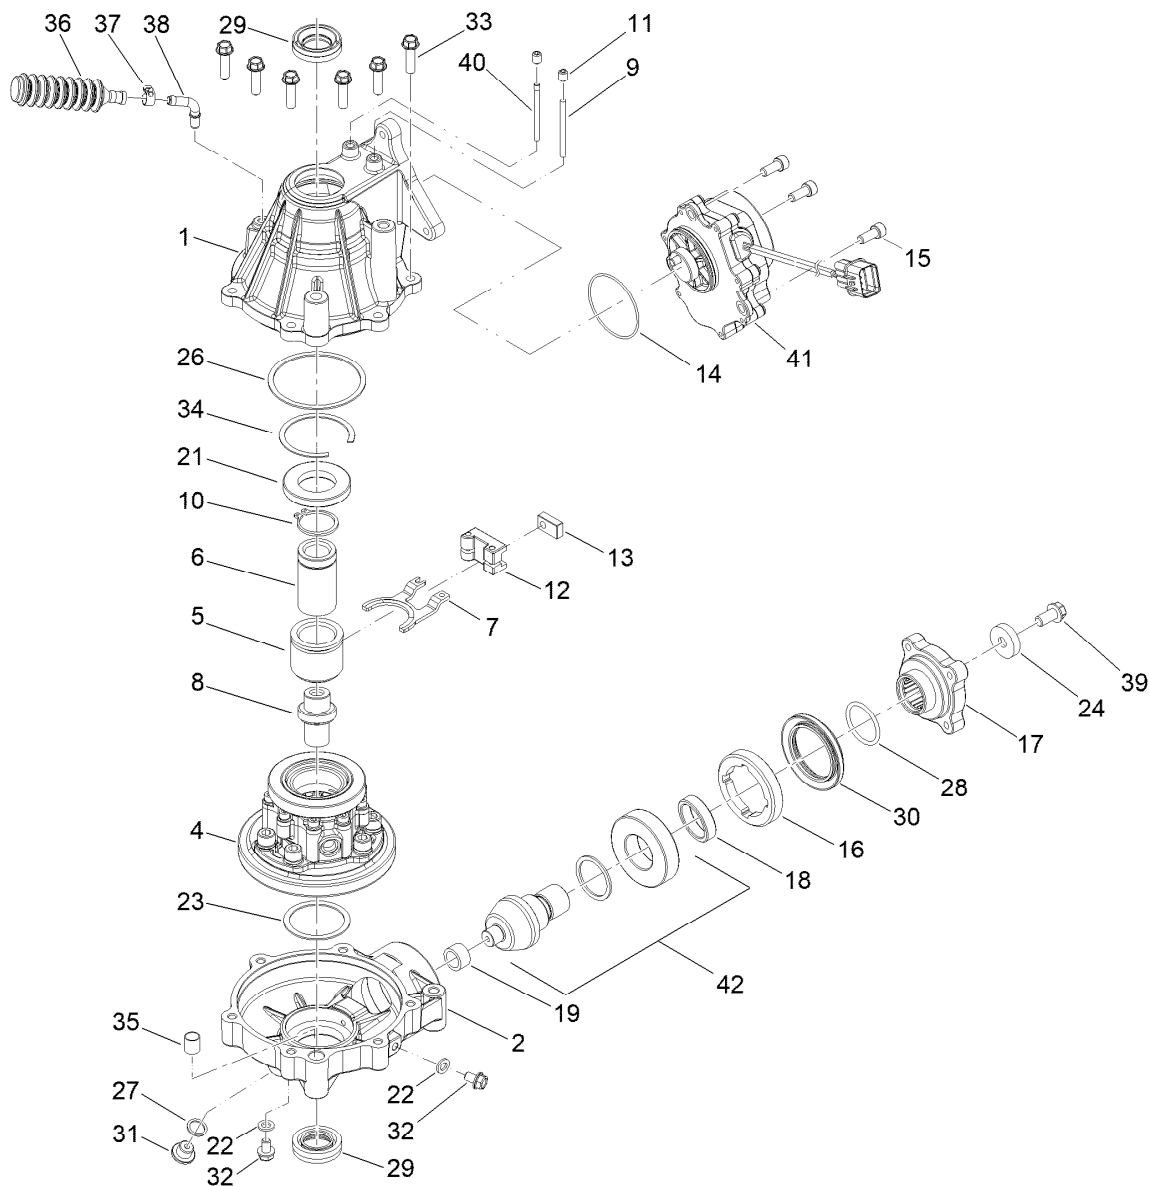 

Front Differential Assembly No. 140-4752


Ref.	Part Number	Qty.	Description
1	145-7895	1	Cover
2	145-7896	1	Housing
4	145-7898	1	Planet Carrier Sub-ASM
5	145-7899	1	Clutch
6	145-7900	1	Support Ring
7	145-7901	1	Fork
8	145-7902	1	Gear A
9	145-7903	1	Pin, 5 X 62L
10	145-7904	1	Retaining Ring, External 34
11	145-7905	2	Bolt, M10 X 10L
12	145-7906	1	Slider A
13	145-7907	1	Slider B
14	145-7908	1	O-Ring, 62 I.D. X 2 Wide
15	145-7909	3	Screw, Socket Head, M8X20L
16	145-7910	1	Nut, M74
17	145-7911	1	Flange
18	145-7912	1	Bushing
19	145-7913	1	Needle Bearing, Hk1612
21	145-7915	1	Ball Bearing, 16007
22	145-7916	2	Washer, 8.2 X 16 X 2T

Ref.	Part Number	Qty.	Description
23	145-7917	1	Shim, 50.5 X 61
24	145-7918	1	Lock Washer
26	145-7920	1	Shim, 79 X 89
27	145-7921	1	Washer, 14.5 X 22 X 1T
28	145-7922	1	O-Ring, P26
29	145-7923	2	Seal, 25 X 45 X 7T X 11T
30	145-7924	1	Seal, 40 X 75 X 8T X 12T
31	145-7925	1	Plug, M14 X 9.5L
32	145-7926	2	Screw, Hex Head, M8 X Pi.25 X 12L
33	145-7927	6	Screw, Hex Head, M8 X P1.25 X 30L
34	145-7928	1	Retaining Ring, Internal 62
35	145-7929	1	Location Pin
36	145-7930	1	Breathing Tube
37	145-7931	1	Ring
38	145-7932	1	Tube, Vent, 90 DEG
39	145-7933	1	Screw, Hex Head, M10 X P1.25 X 20L
40	145-7934	1	Pin, 5 X 4.63 X 62L

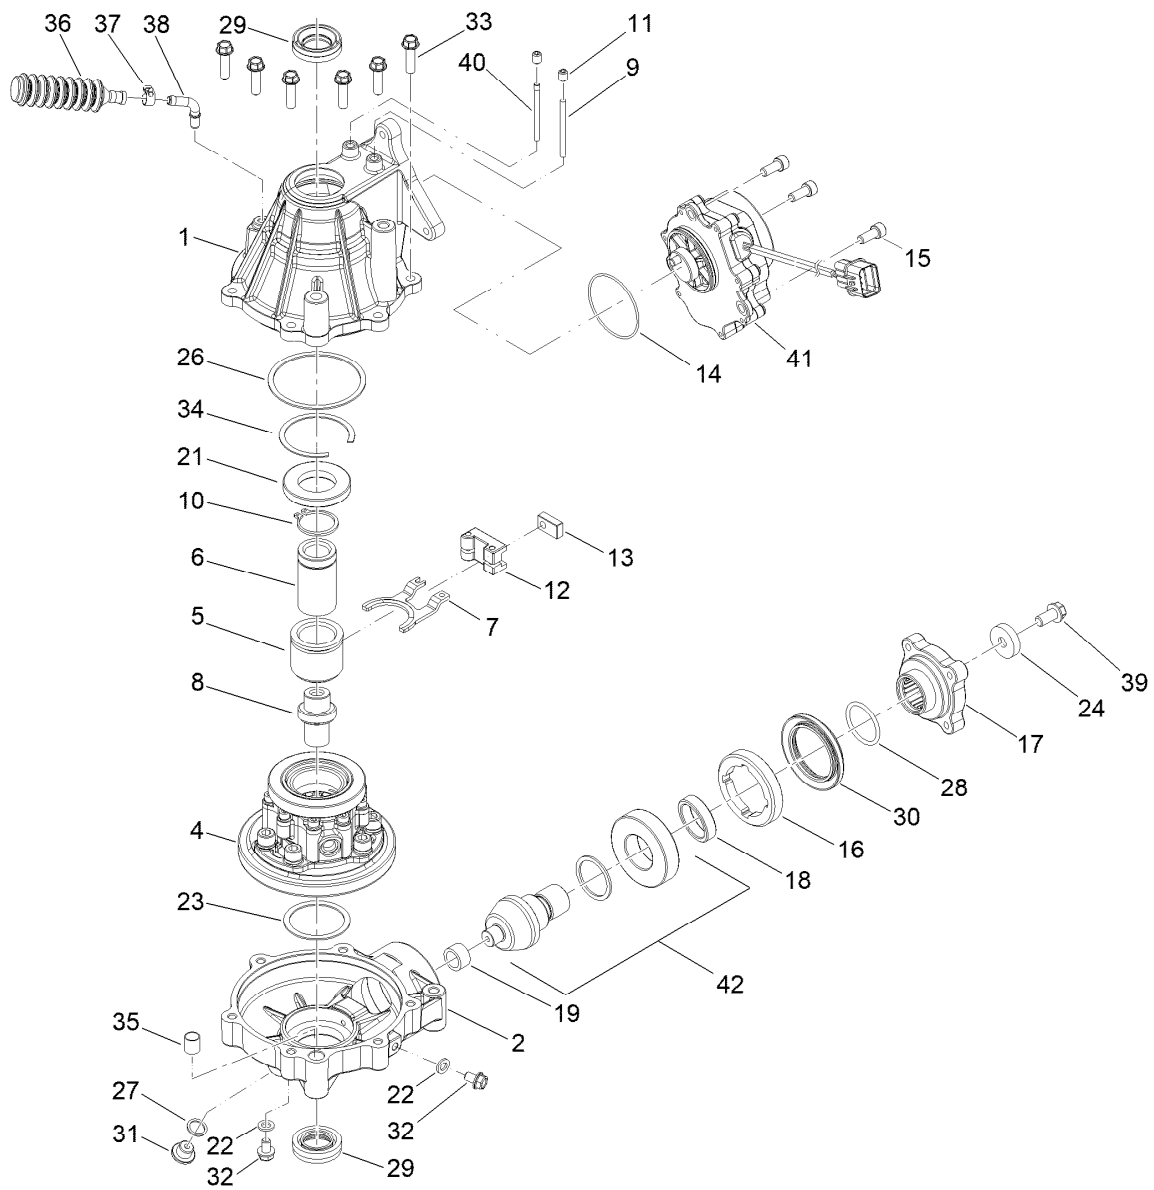 


Front Differential Assembly No. 140-4752 (continued)

Ref.	Part Number	Qty.	Description
41	145-7935	1	Actuator
42	163-4939	1	Pinion Service ASM

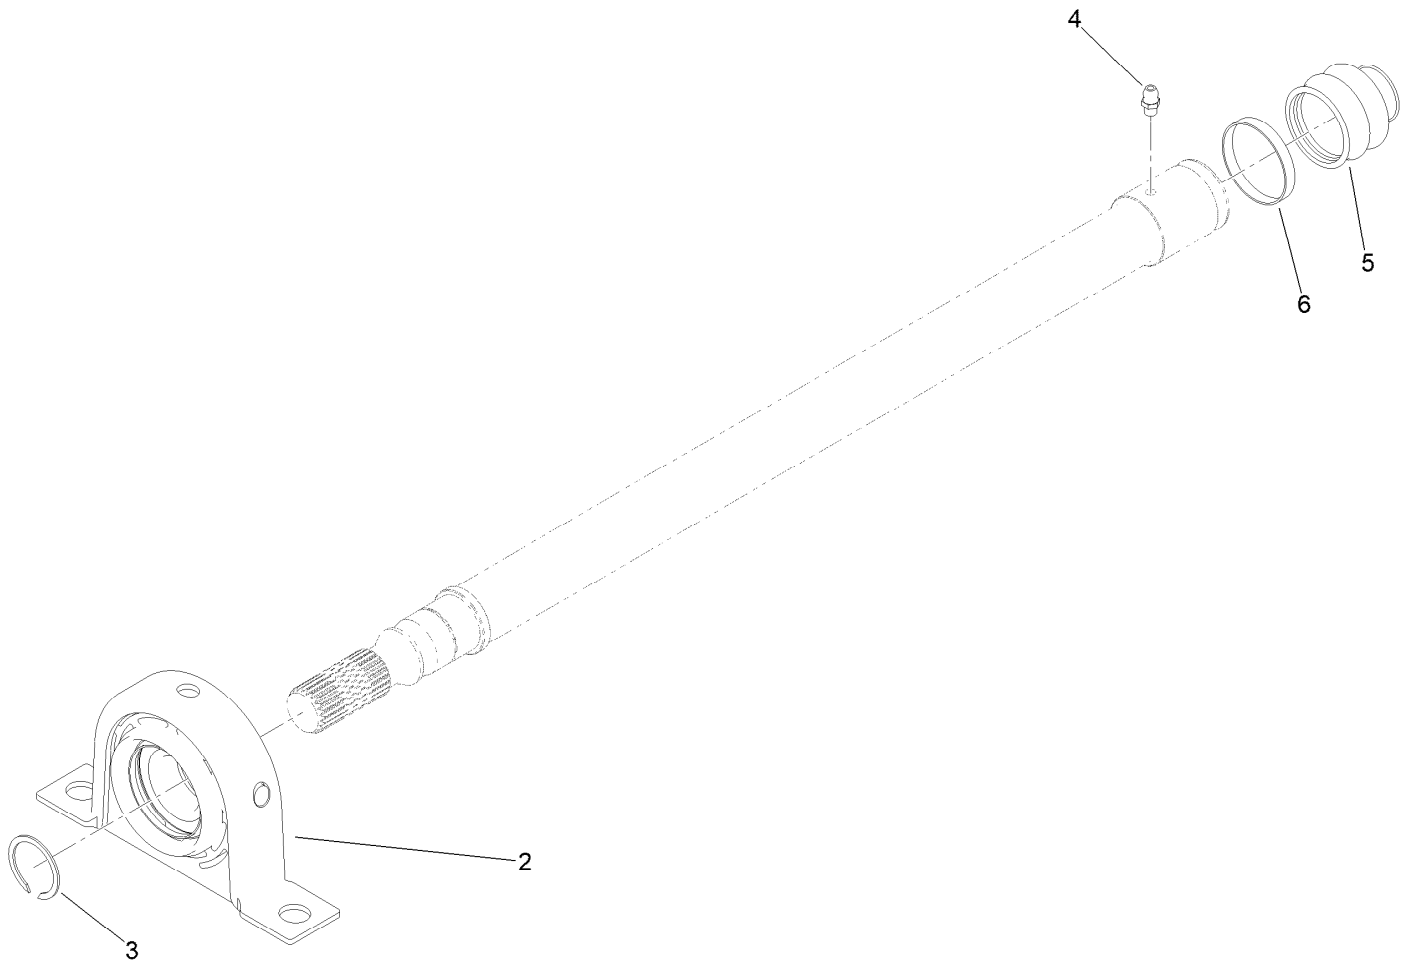 


Intermediate Driveshaft Assembly No. 140-4771

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	139-4442	1	Bearing-Hanger
3	144-2208	1	Retainer-Bearing
4	302-5	1	Fitting-Grease
5	140-4772	1	Boot-Joint, Slip
6	140-4760	1	Band

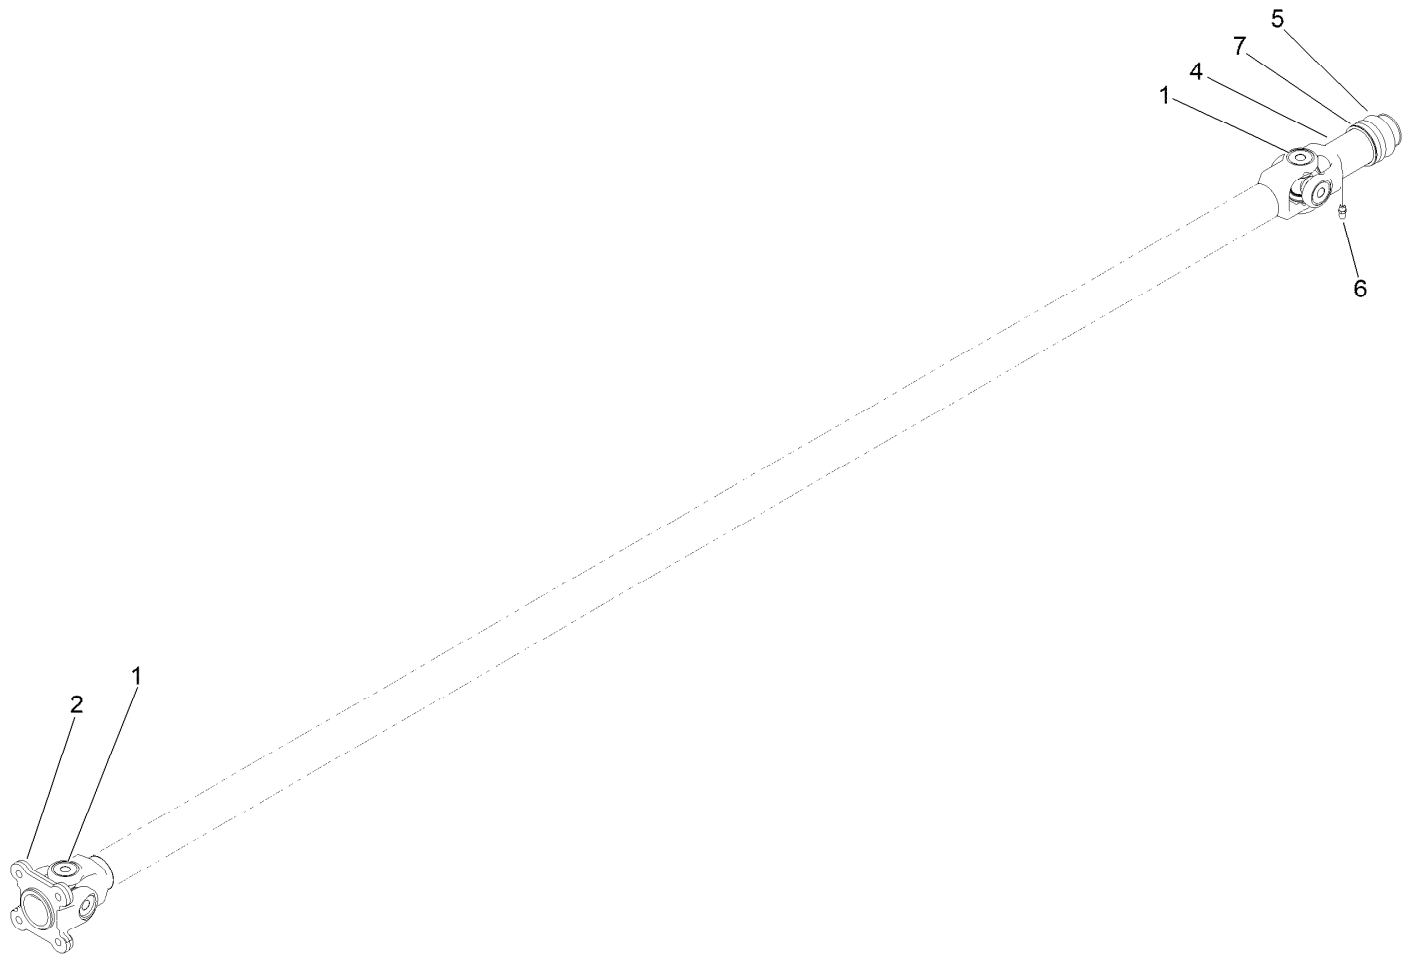 

Driveshaft Assembly No. 140-4763


Ref.	Part Number	Qty.	Description
1	138-9162	2	U-Joint Kit
2	138-9178	1	Yoke-Flange
4	140-4753	1	Yoke-Slip, Female
5	140-4754	1	Boot-Joint, Slip
6	110-4755	1	Fitting-Grease
7	140-4760	1	Band

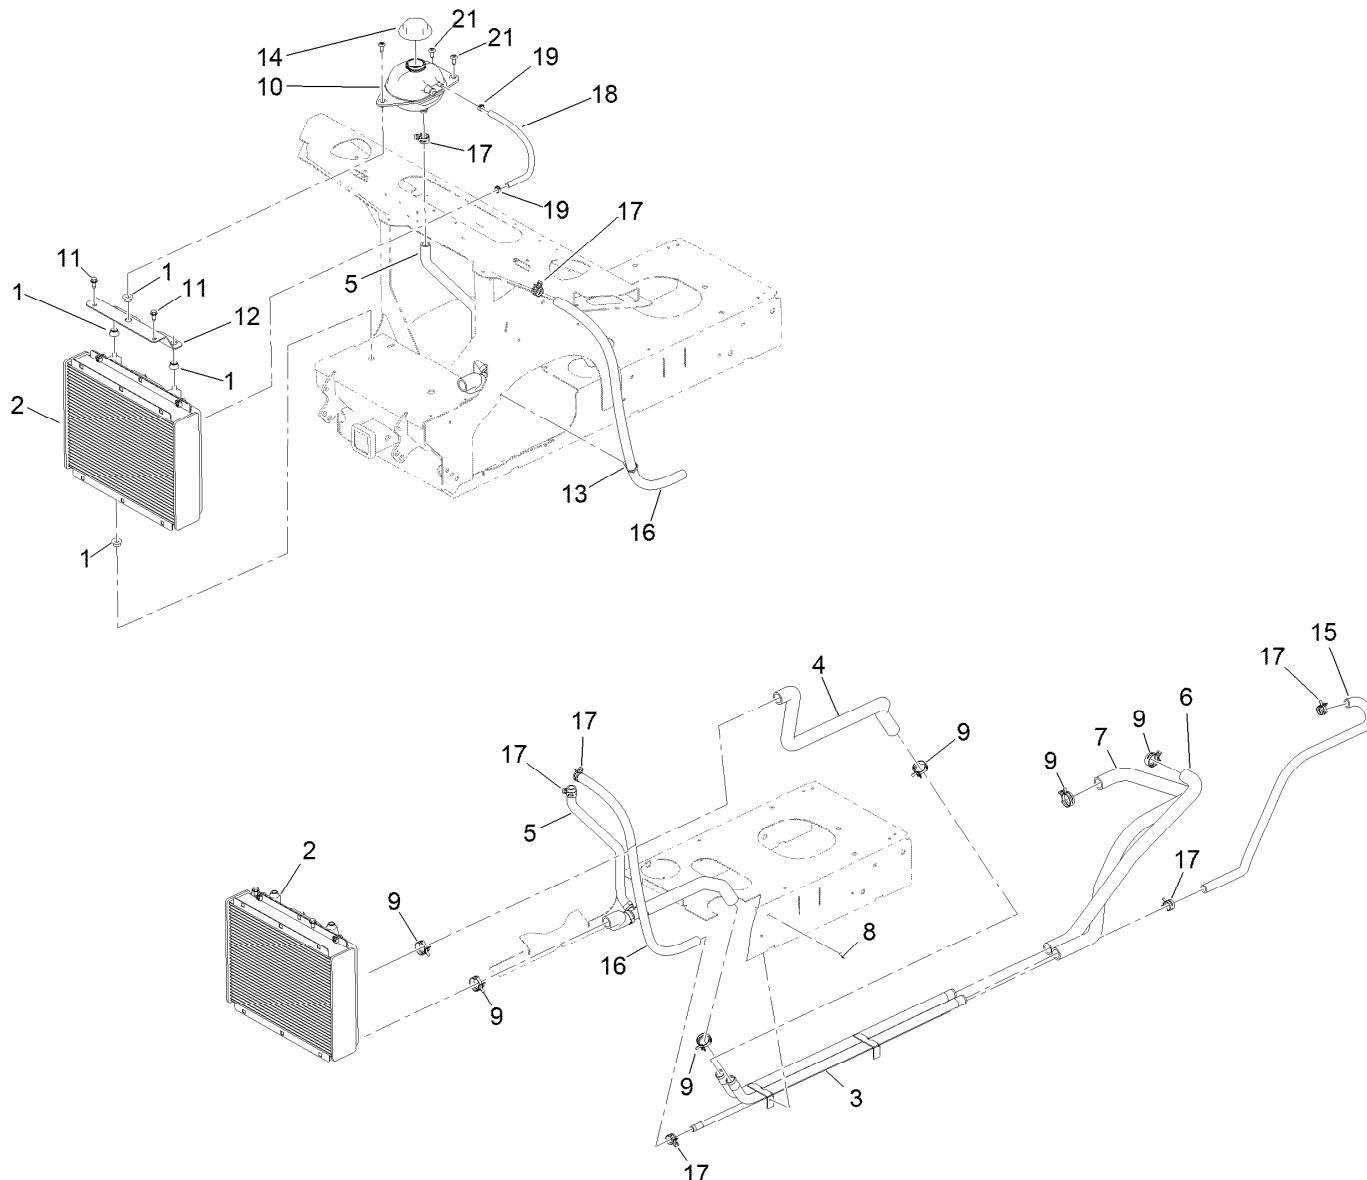 

Cooling System Assembly


Ref.	Part Number	Qty.	Description
1	137-6828	4	Bushing-Flange
2	147-7970	1	Radiator ASM
3	138-9349	1	Tube ASM-Coolant, Extended
4	140-2628	1	Hose-Radiator, Upper
5	140-4751	1	Hose ASM-Coolant
6	140-2634	1	Hose-Coolant, Upper
7	144-2242	1	Hose-Coolant, Lower
8	32144-4	3	Screw-HWH
9	144-2246	8	Clamp-Sc Band
10	147-8086	1	Coolant Tank ASM

Ref.	Part Number	Qty.	Description
11	32144-70	2	Screw-HWHTF
12	147-8056-05	1	Bracket-Mount, Radiator
13	32180-030	2	Clip-Tie
14	161-5218	1	Ratcheting Coolant Cap ASM
15	144-2220	1	Hose-Coolant, Minor
16	140-4757	1	Hose-Coolant
17	144-2248	5	Clamp-Sc Band
18	120-5019	1	Hose-Coolant
19	92-2379	2	Clamp-Hose
21	138-9753	3	Screw

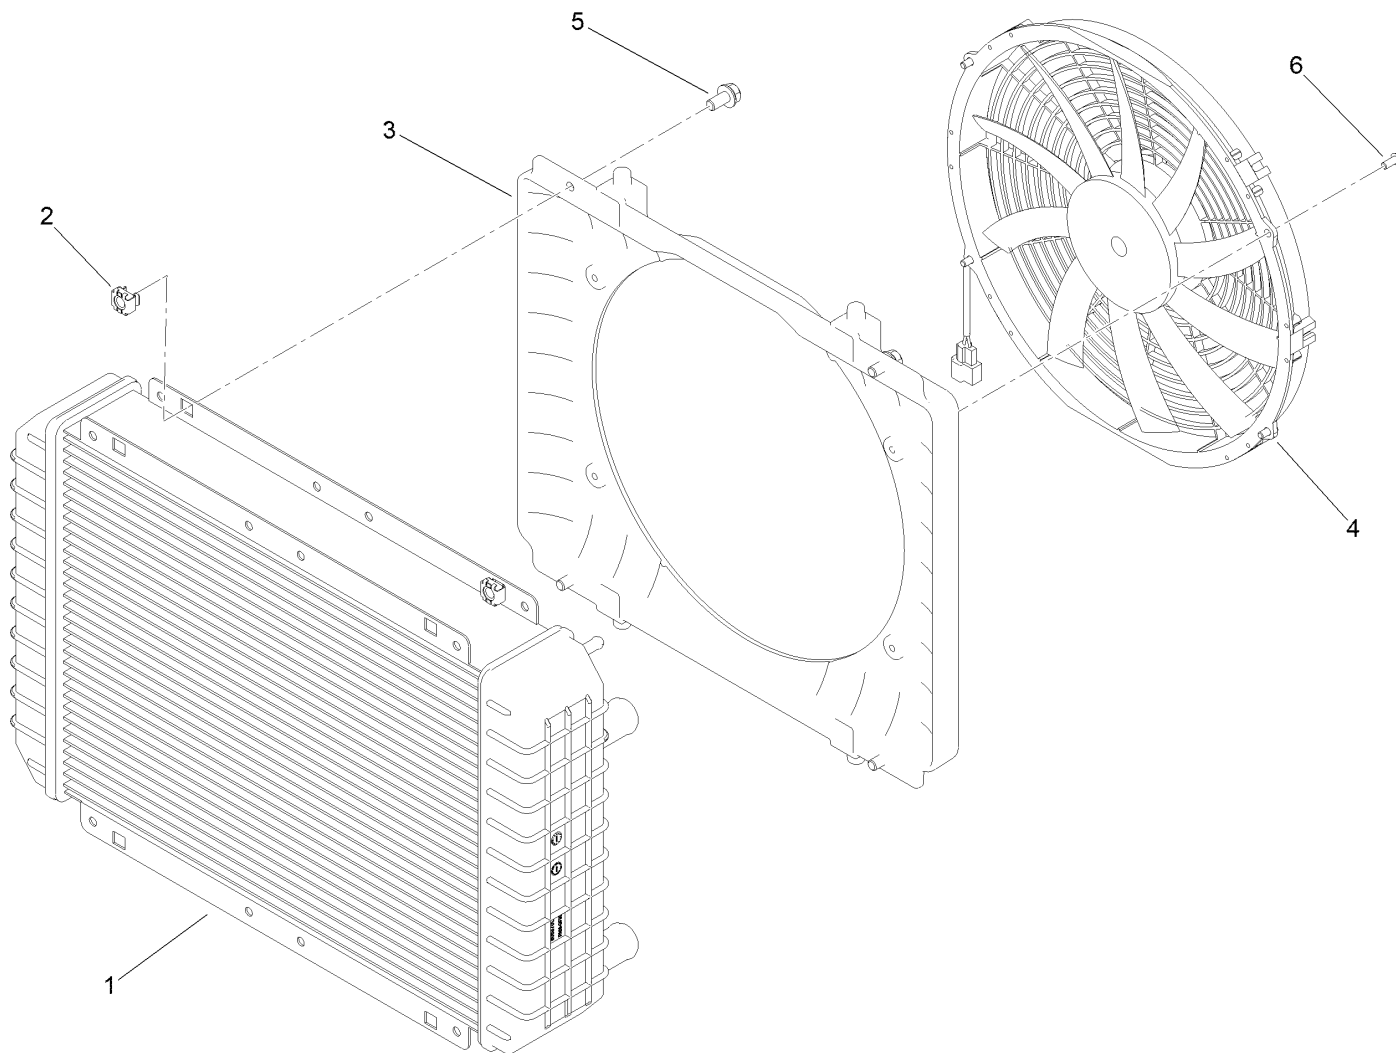 

Radiator Assembly No. 147-7970


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-7971	1	Radiator
2	703856	4	Nut-Sq, Caged
3	139-4587	1	Shroud-Fan, Radiator
4	140-4694	1	Fan
5	139-2593	4	Screw-HHF
6	147-7972	4	Screw-BHCS

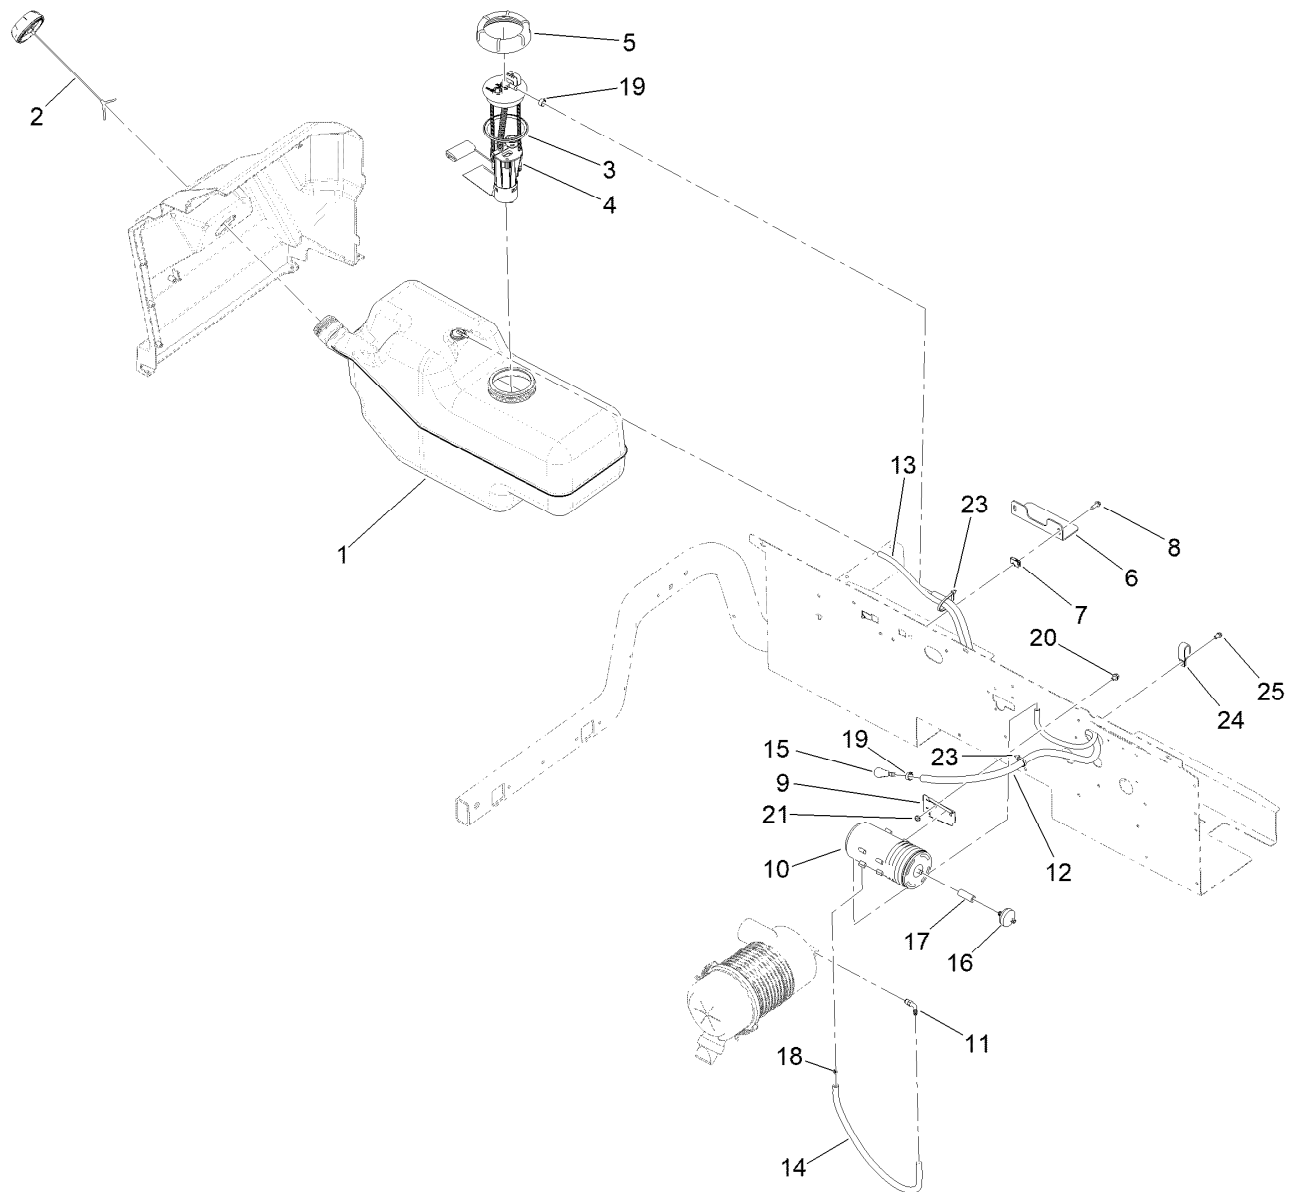 

Fuel System Assembly


Ref.	Part Number	Qty.	Description
1	137-2711	1	Fuel Tank ASM (8 Gallon Gas)
2	126-1789	1	Cap-Fuel, Ratcheting
3	138-9333	1	Gasket-Fuel Sender
4	138-9330	1	Fuel Pump ASM
5	138-9332	1	Cap-Fuel Sender
6	163-4937	1	Bracket-Mount, Fuel Tank
7	107069	2	Clip
8	49-2040	2	Screw-HWHTF
9	114-0292	1	Bracket-Canister, Carbon
10	117-1221	1	Canister-Carbon, 800Cc
11	94-7222	1	Barb-Hose
12	144-2247	1	Hose-Fuel

Ref.	Part Number	Qty.	Description
13	119-3517	1	Hose-Fuel
14	109-0298	1	Line-Fuel
15	125-2921	1	Fitting-Fuel
16	115-7854	1	Filter-Fuel, Inline
17	106-5317	1	Hose-Fuel
18	120-2038	1	Cartridge-Valve, Check
19	92-2379	2	Clamp-Hose
20	3234-26	2	Screw-HHF
21	3296-56	2	Nut-Lock, NI
23	3290-378	3	Tie-Cable
24	92-5753	2	Clamp-Hose
25	32144-4	2	Screw-HWH

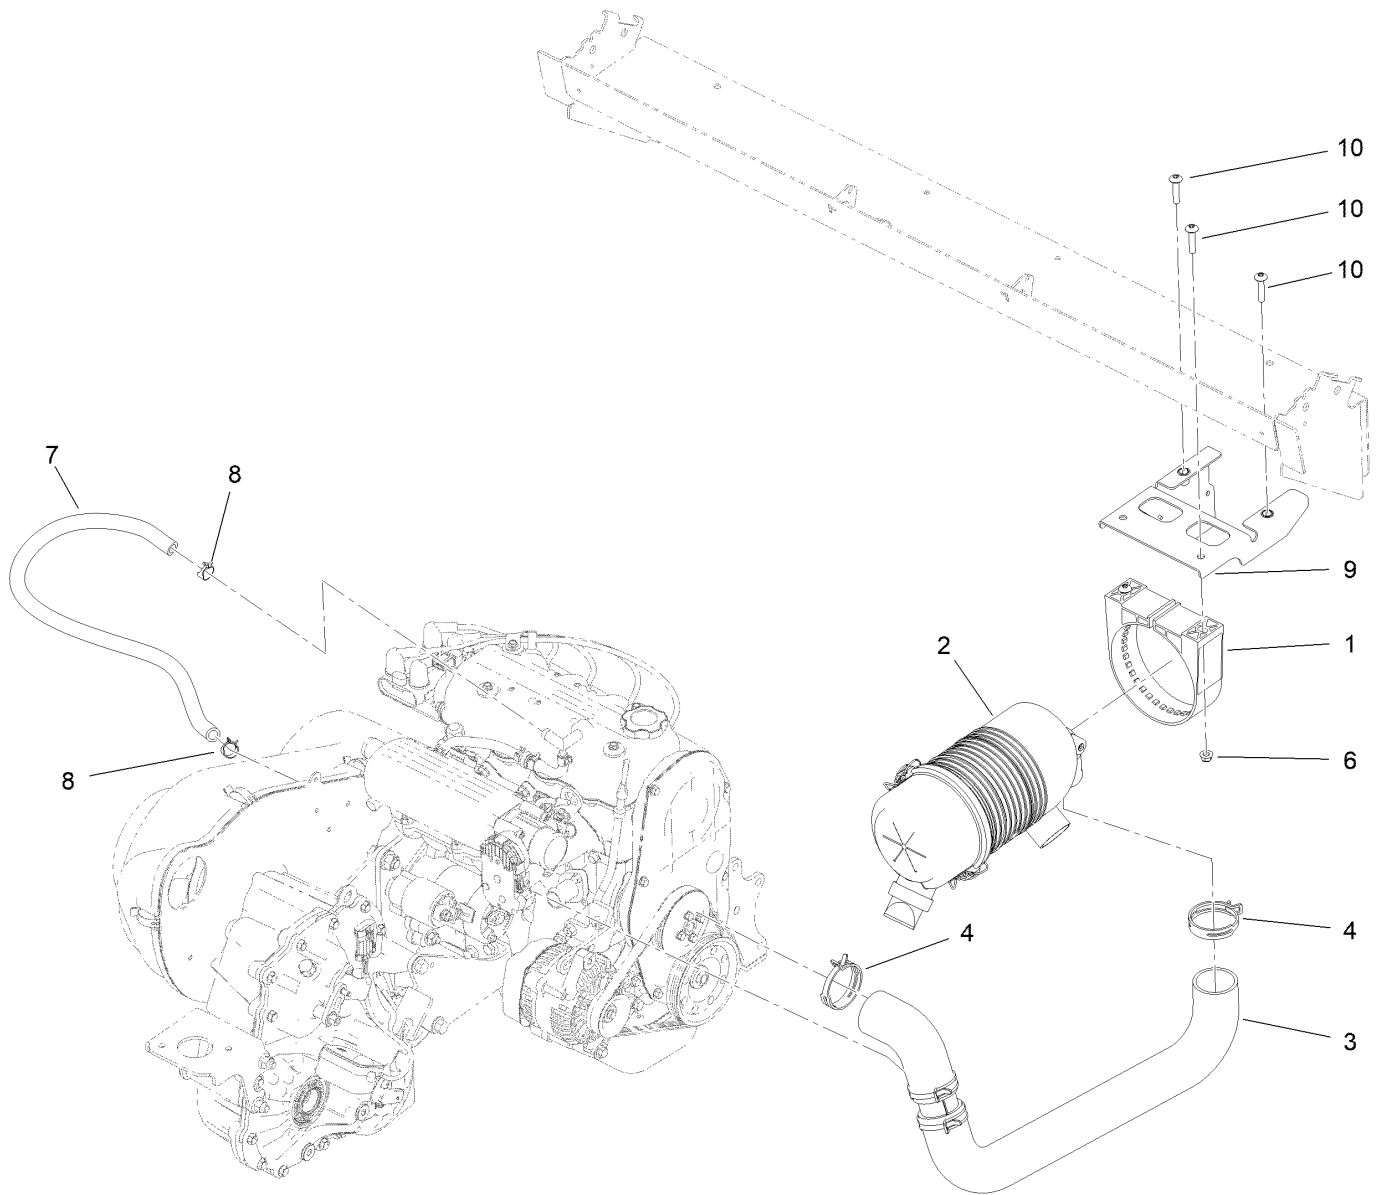 


Air Cleaner Assembly

Ref.	Part Number	Qty.	Description
1	98-4525	1	Bracket-Cleaner, Air
2	106-5277	1	Air Cleaner ASM
3	145-2118	1	Hose ASM-Intake
4	144-2200	2	Clamp-Sc Band
6	104-8300	2	Nut-HF, NI
7	127-1777	1	Hose-Fuel
8	2412-143	2	Clamp-Hose
9	147-8105	1	Air Cleaner Bracket ASM
10	126-7439	4	Screw-Torx

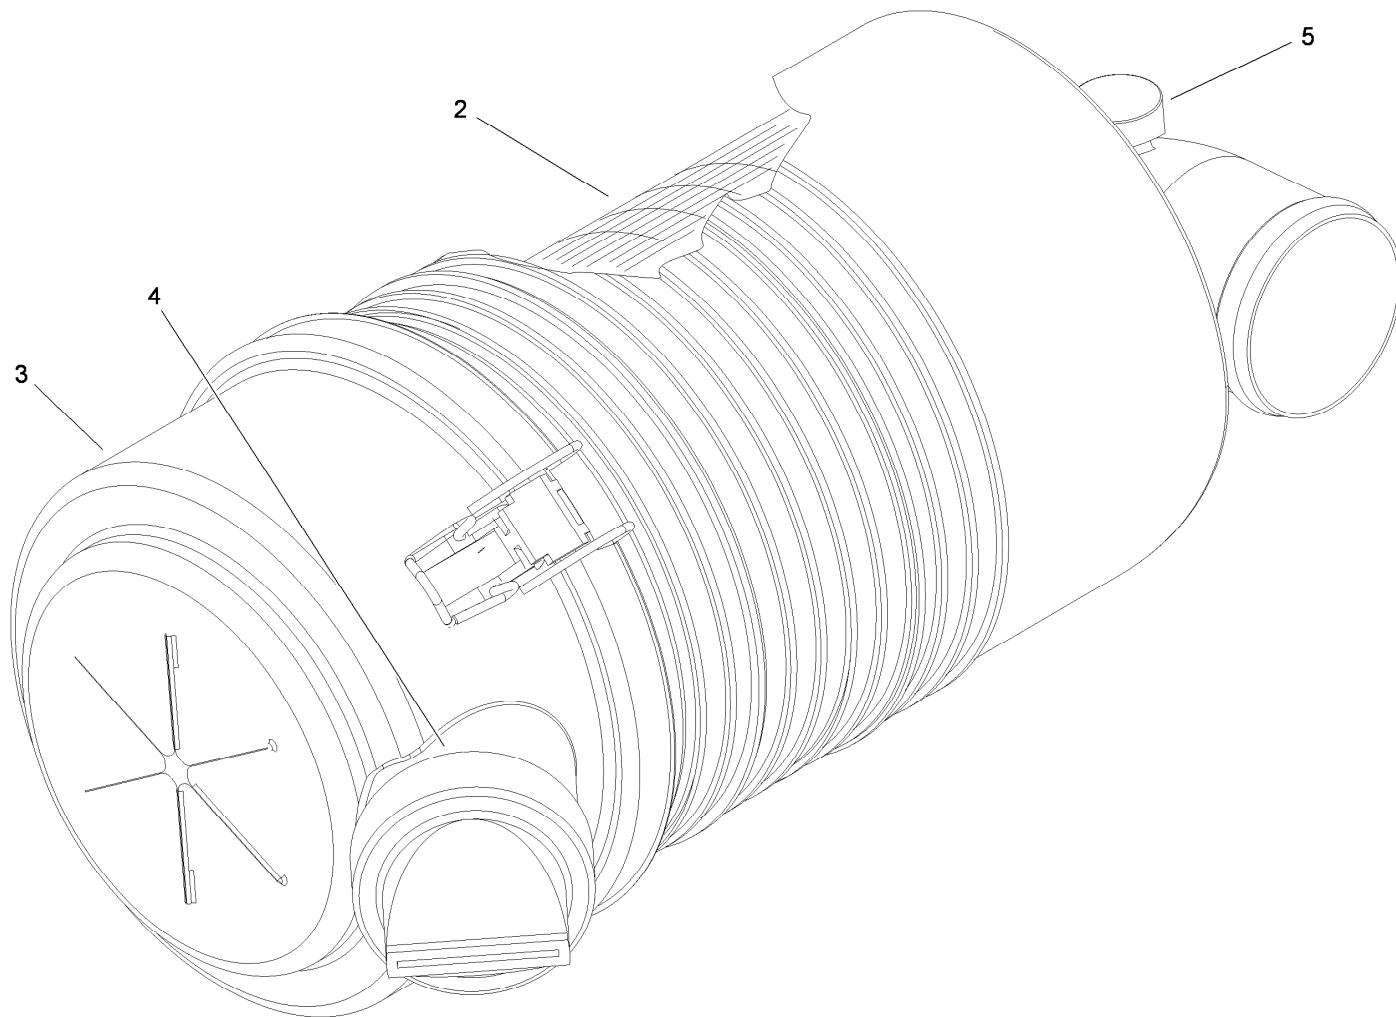 


Air Cleaner Assembly No. 106-5277

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	108-3810	1	Filter-Air
3	98-9771	1	Cover ASM
4	87-9400	1	Valve-Vacuator
5	285-17	1	Plug-Pipe

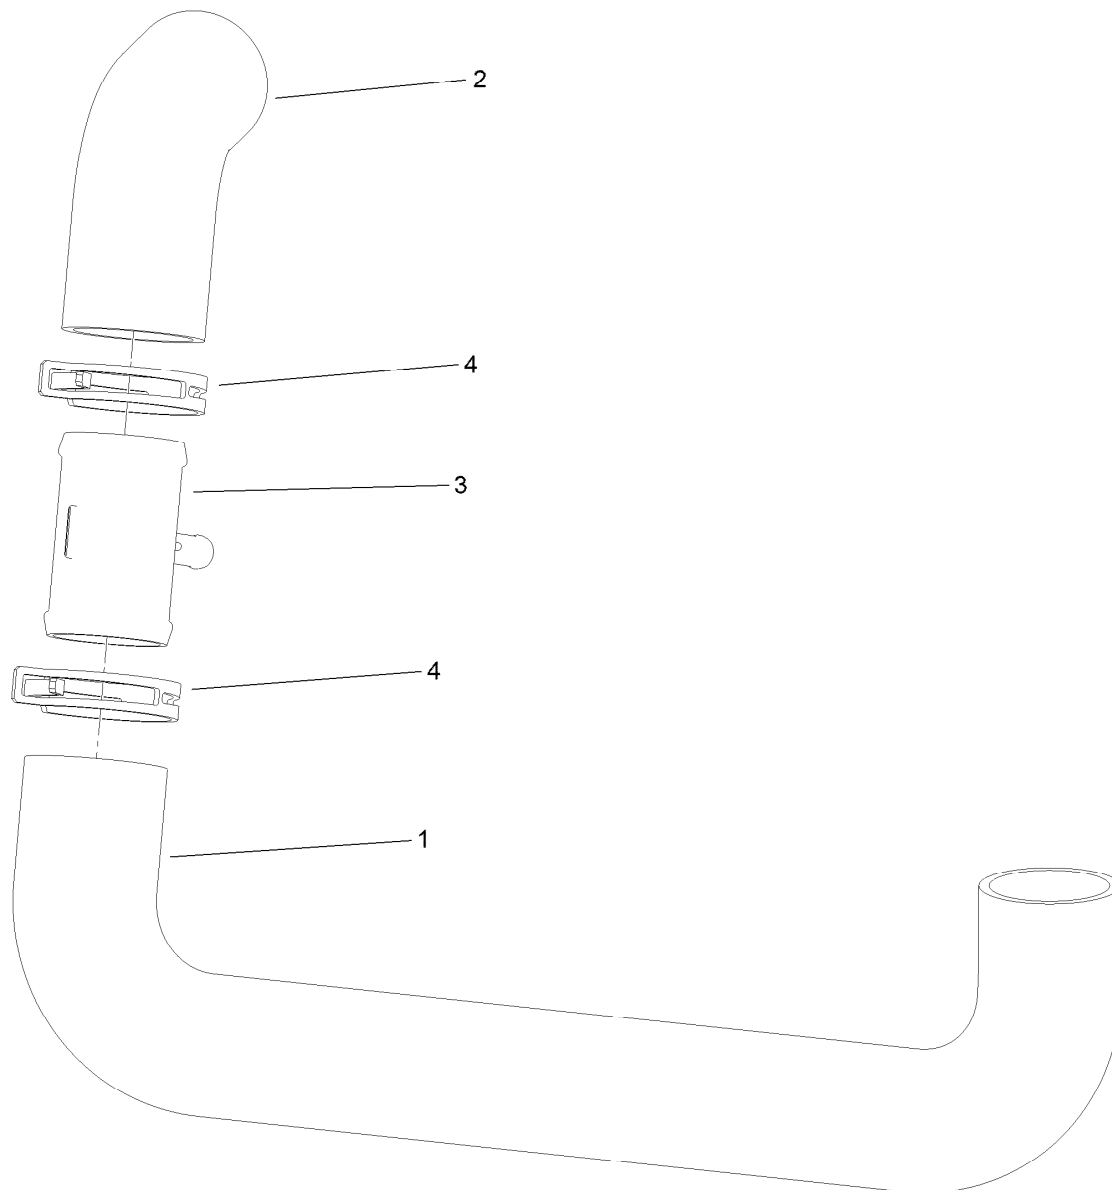 


Hose Intake Assembly No. 145-2118

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-2116	1	Hose-Air Intake, A
2	145-2117	1	Hose-Air Intake, B
3	145-2112	1	Fitting-Tee
4	144-2200	2	Clamp-Sc Band

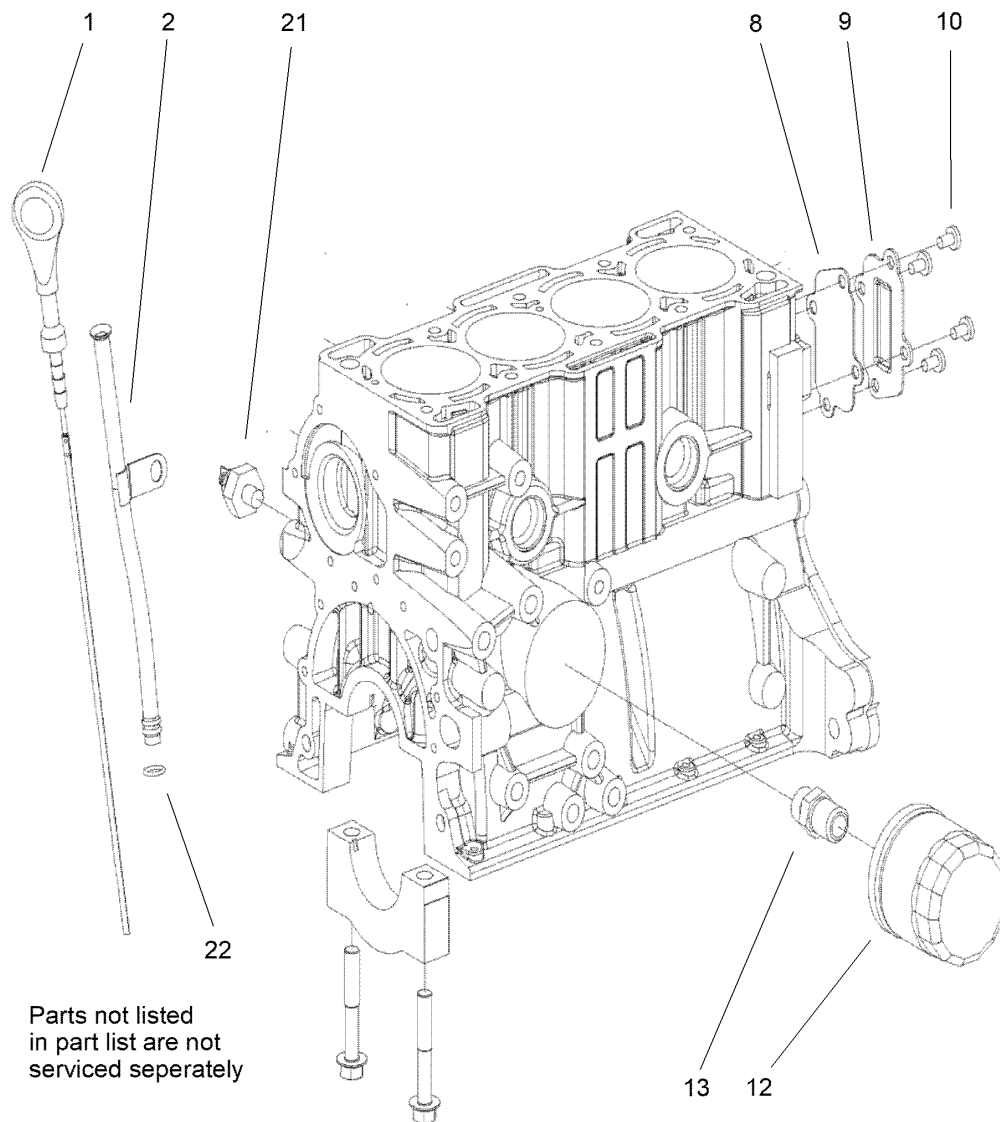 

Cylinder Block Assembly


Ref.	Part Number	Qty.	Description
1	145-7937	1	Dip Stick, Oil
2	145-7938	1	Tube, Dipstick
8	145-7939	1	Gasket, Water Sealing Cover
9	145-7940	1	Cover, Water Sealing
10	145-7941	4	Bolt
12	145-7942	1	Filter, Oil
13	145-7943	1	Fitting, Oil Filter
21	145-7944	1	Switch, Oil Pressure
22	145-7945	1	Seal, Dipstick Tube

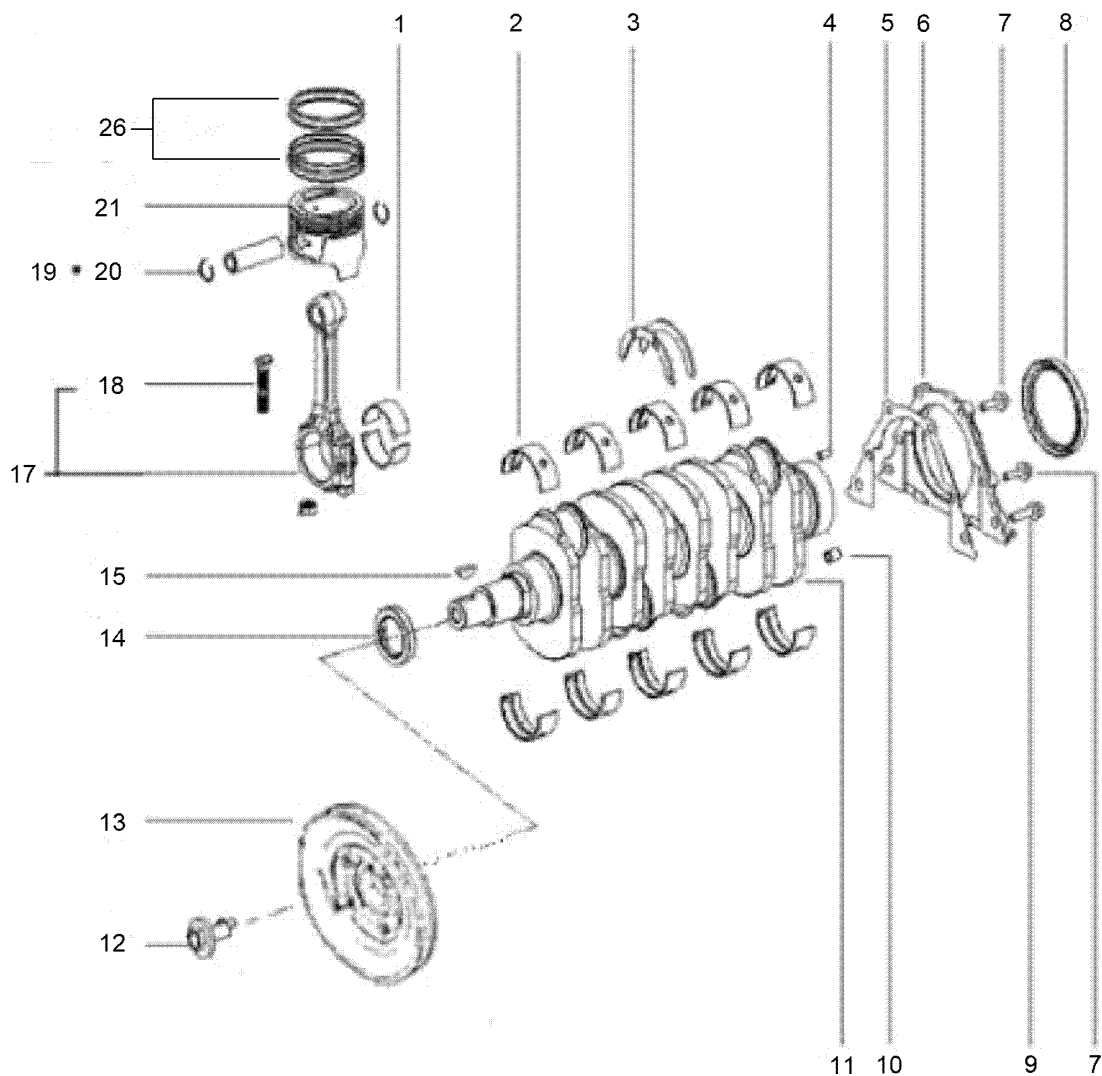 

Crankshaft and Piston Assembly


Ref.	Part Number	Qty.	Description
1	145-7947	1	Bearing, Connecting Rod
2	145-7946	1	Bearing, Main (Set Of 10)
3	145-7948	1	Bearing, Thrust
4	145-7949	1	Pin, Locating
5	147-2550	1	Gasket, Oil Seal Housing
6	147-2551	1	Housing, Oil Seal
7	147-2552	4	Bolt, Oil Seal Housing
8	147-2553	1	Seal, Oil (Rear)
9	147-2554	2	Bolt, Oil Seal Housing
10	147-2555	3	Bushing
11	147-2556	1	Crankshaft

Ref.	Part Number	Qty.	Description
12	147-2557	1	Bolt, Crankshaft Pulley
13	147-2558	1	Pulley, Crankshaft
14	147-2559	2	Seal-Oil (Front)
15	147-2560	2	Key, Woodruff
17	147-2561	4	Connecting Rod
18	147-2562	8	Bolt-Rod, Connecting
19	147-2563	8	Clip, Piston Pin
20	147-2564	4	Pin, Piston
21	147-2565	4	Piston
26	147-2566	4	Piston Ring Set - Complete

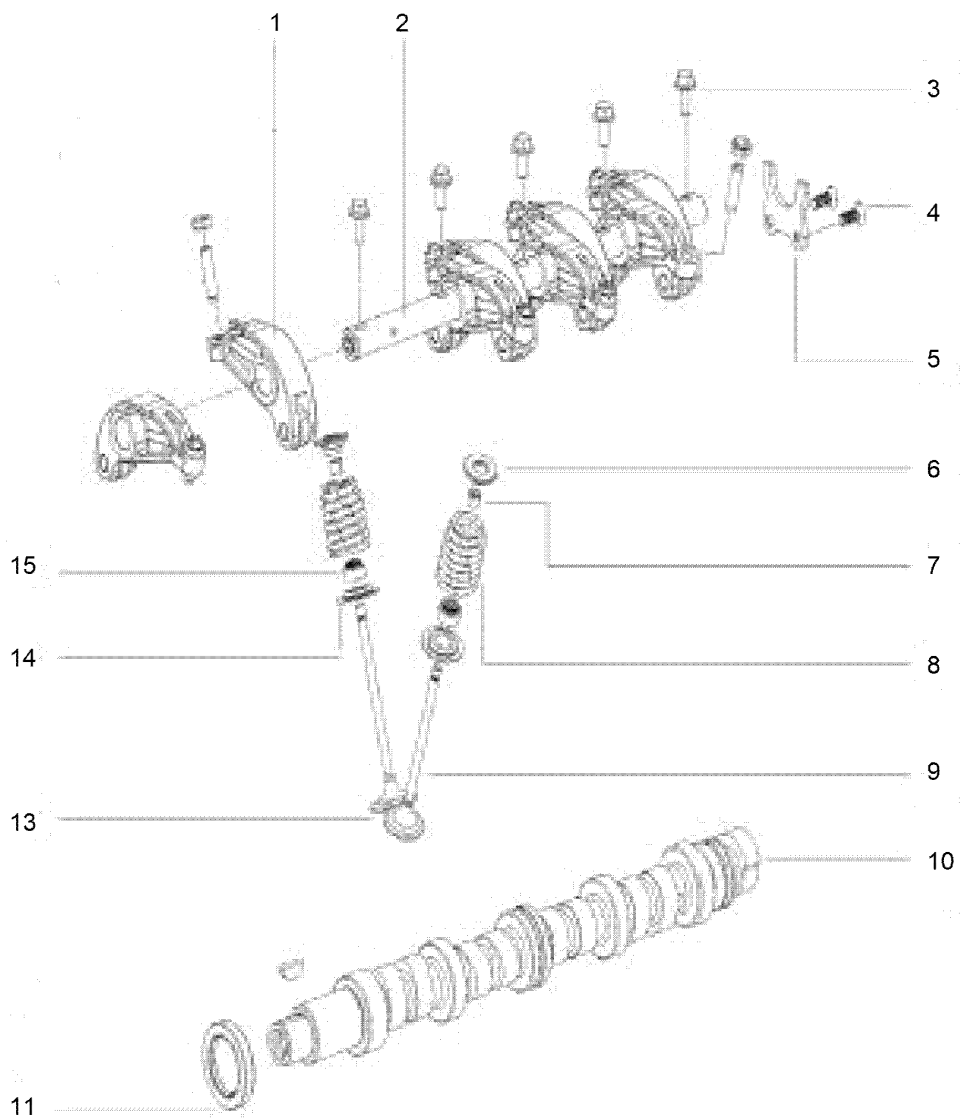 


Camshaft and Rocker Arm Assembly

Ref.	Part Number	Qty.	Description
1	147-2567	8	Arm, Rocker
2	147-2568	1	Shaft, Rocker Arm
3	147-2569	5	Bolt
4	147-2570	2	Bolt
5	147-2571	1	Plate, Camshaft Thrust
6	147-2572	8	Seat, Valve Spring
7	147-2573	16	Rotaton, Valve
8	147-2574	8	Valve, Spring
9	147-2575	4	Valve, Exhaust
10	147-2576	1	Camshaft
11	147-2577	1	Seal, Camshaft
13	147-2578	4	Valve, Intake
14	147-2580	8	Seat, Valve Spring
15	147-2579	8	Seal, Valve Stem

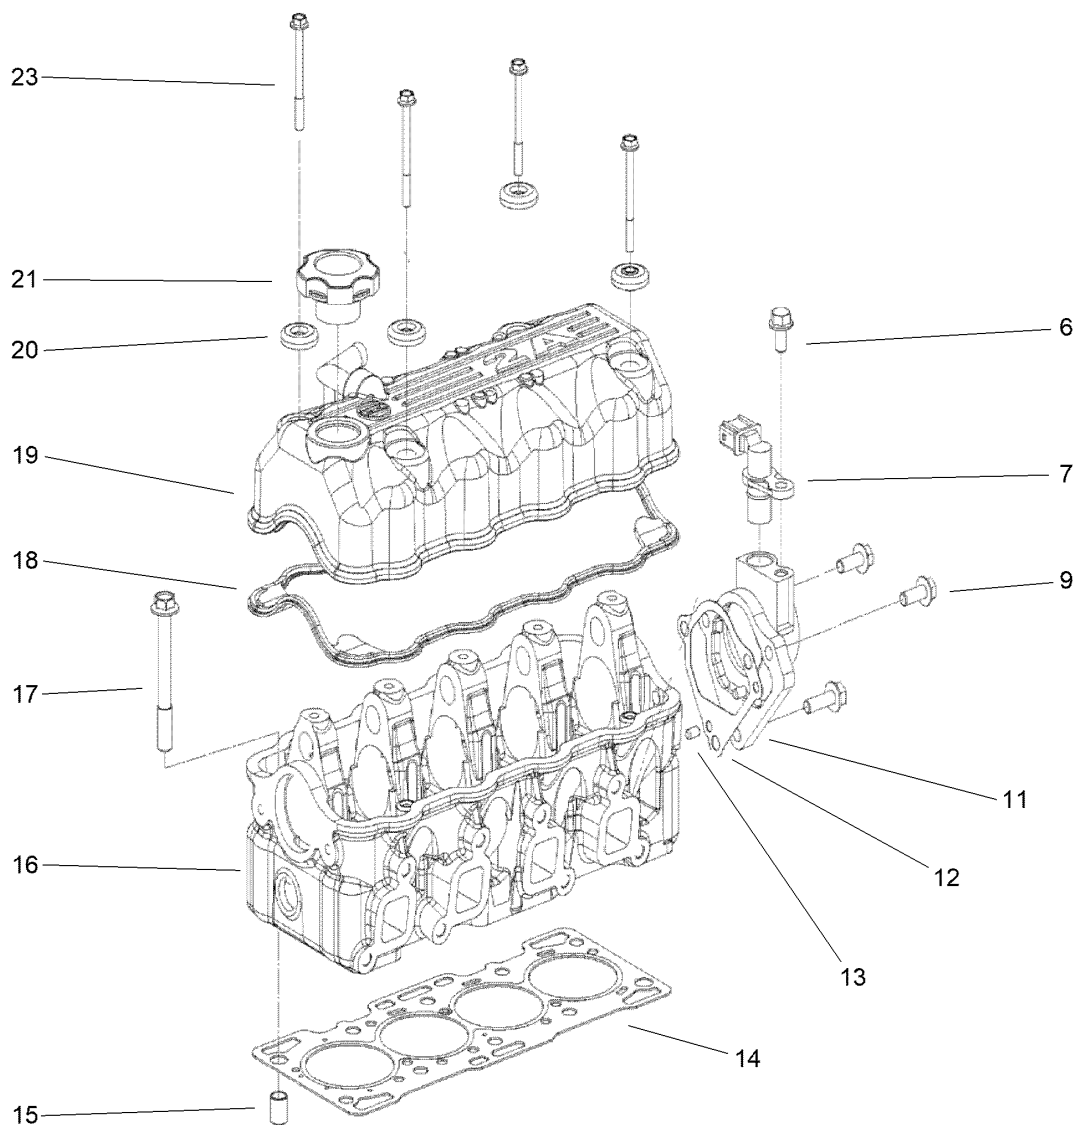 

Cylinder Head Assembly


Ref.	Part Number	Qty.	Description
6	147-2581	1	Bolt
7	147-2582	1	Sensor, Camshaft
9	147-2583	4	Bolt, Intake Manifold
11	147-2584	1	Housing, Camshaft Sensor
12	147-2585	1	Gasket, Camshaft Sensor Housing
13	147-2586	2	Pin, Locating
14	147-2587	1	Gasket, Cylinder Head
15	147-2588	4	Pin, Locating
16	147-2589	1	Head, Cylinder
17	147-2590	10	Bolt, Cylinder Head
18	147-2591	1	Gasket, Rocker Cover
19	147-2592	1	Cover, Rocker
20	147-2593	4	Spacer
21	147-2594	1	Cap, Oil
23	147-2595	4	Bolt, Rocker Cover

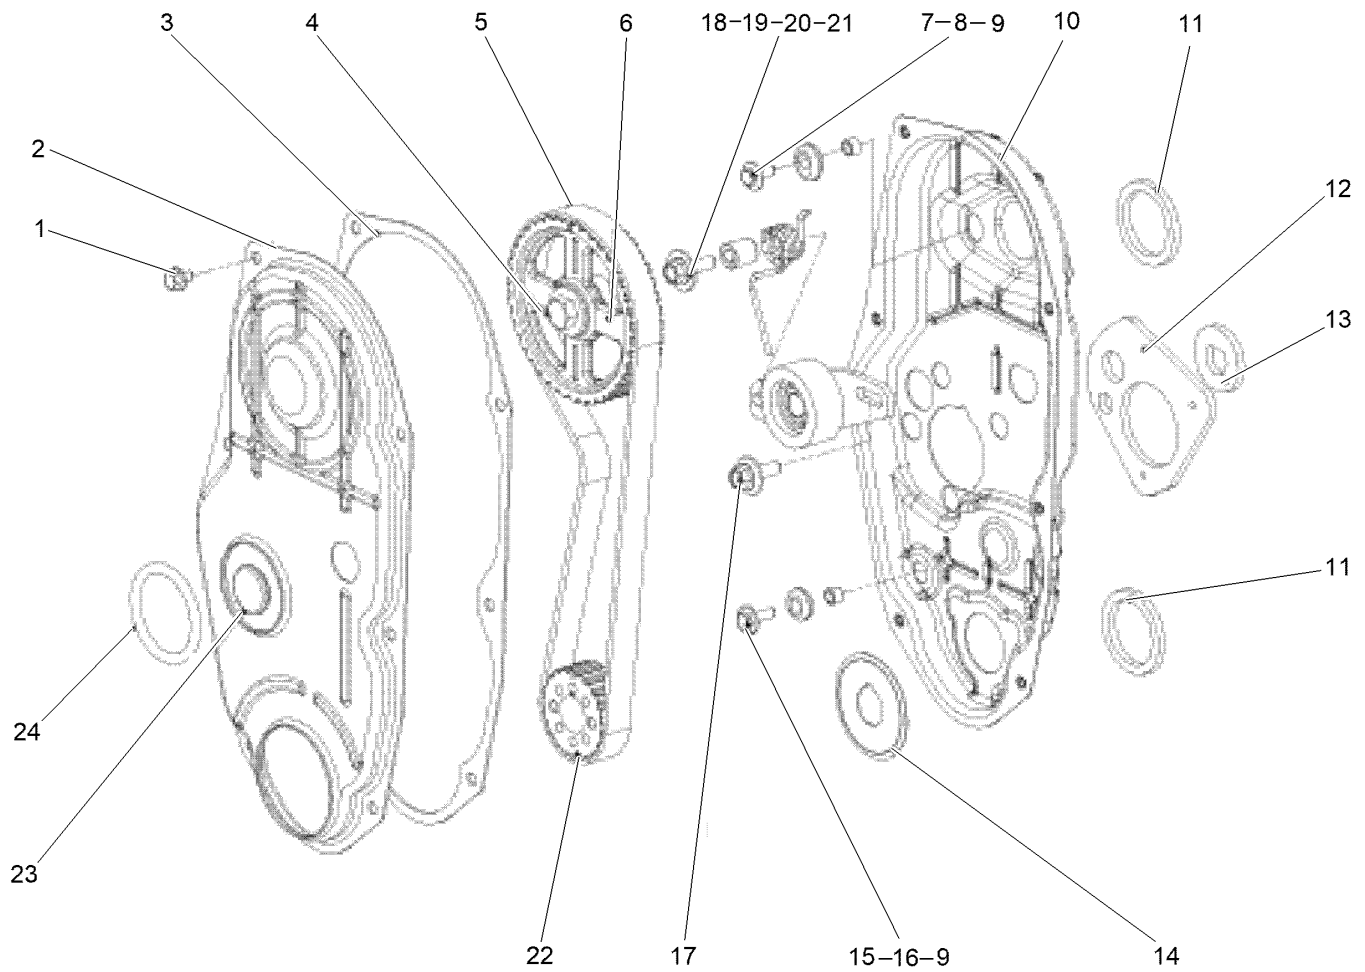 

Timing Cover Assembly

Ref.	Part Number	Qty.	Description
1	147-2596	6	Bolt
2	147-2597	1	Front Cover
3	147-2598	1	Gasket, Front Cover
4	147-2599	1	Bolt
5	147-2600	1	Belt, Timing (90 Teeth)
6	147-2601	1	Sprocket, Camshaft
7	147-2602	2	Bolt, Front Cover
8	147-2603	2	Washer
9	147-2604	4	Spacer
10	147-2605	1	Rear Cover
11	147-2606	2	Seal, Oil Cover
12	147-2607	1	Gasket-Cover
13	147-2608	1	Washer


Ref.	Part Number	Qty.	Description
14	147-2609	1	Cover
15	147-2610	2	Bolt, Front Cover
16	147-2611	2	Gasket, Rear Cover
17	147-2612	1	Bolt-Tensioner (Incls Washer)
18	147-2613	1	Bolt, Tensioner
19	147-2614	1	Bushing, Torsion Spring
20	147-2615	1	Spring, Torsion
21	147-2616	1	Tensioner
22	147-2617	1	Sprocket, Crankshaft
23	147-2618	1	Cover
24	147-2619	1	Seal, Front Cover

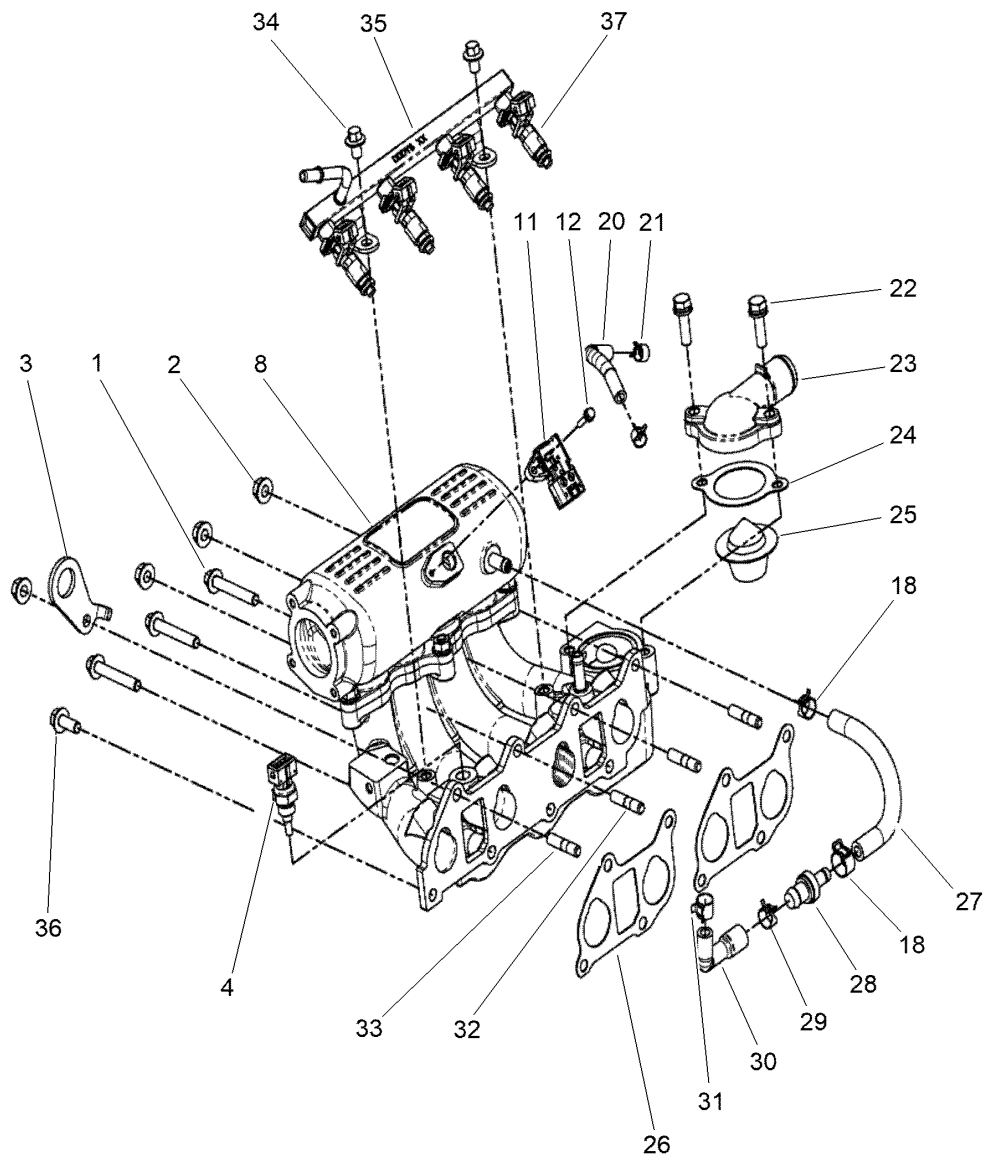 

Intake Manifold Assembly


Ref.	Part Number	Qty.	Description
1	147-2620	3	Bolt, Intake Manifold
2	147-2621	4	Nut, Intake Manifold
3	147-2622	1	Lifting Eye
4	147-2623	1	Sensor, Water Temp
8	147-2624	1	Manifold, Intake
11	147-2625	1	Sensor, Air
12	147-2626	1	Bolt
18	147-2627	2	Clamp
20	147-2628	1	Hose, Coolant
21	147-2629	2	Clamp
22	147-2630	2	Bolt
23	147-2631	1	Outlet, Water
24	147-2632	1	Gasket, Thermostat Cover

Ref.	Part Number	Qty.	Description
25	147-2633	1	Thermostat
26	147-2634	2	Gasket, Intake Manifold
27	147-2635	1	Hose, Pvc Vent
28	147-2636	1	Pcv
29	147-2637	1	Clamp
30	147-2638	1	Hose, Pcv
31	147-2639	1	Clamp
32	147-2640	3	Stud, Intake Manifold
33	147-2641	1	Stud, Exhaust Manifold
34	147-2642	2	Bolt, Fuel Rail
35	147-2643	1	Rail, Fuel
36	147-2583	1	Bolt, Intake Manifold
37	145-7936	4	Injector W/Clip

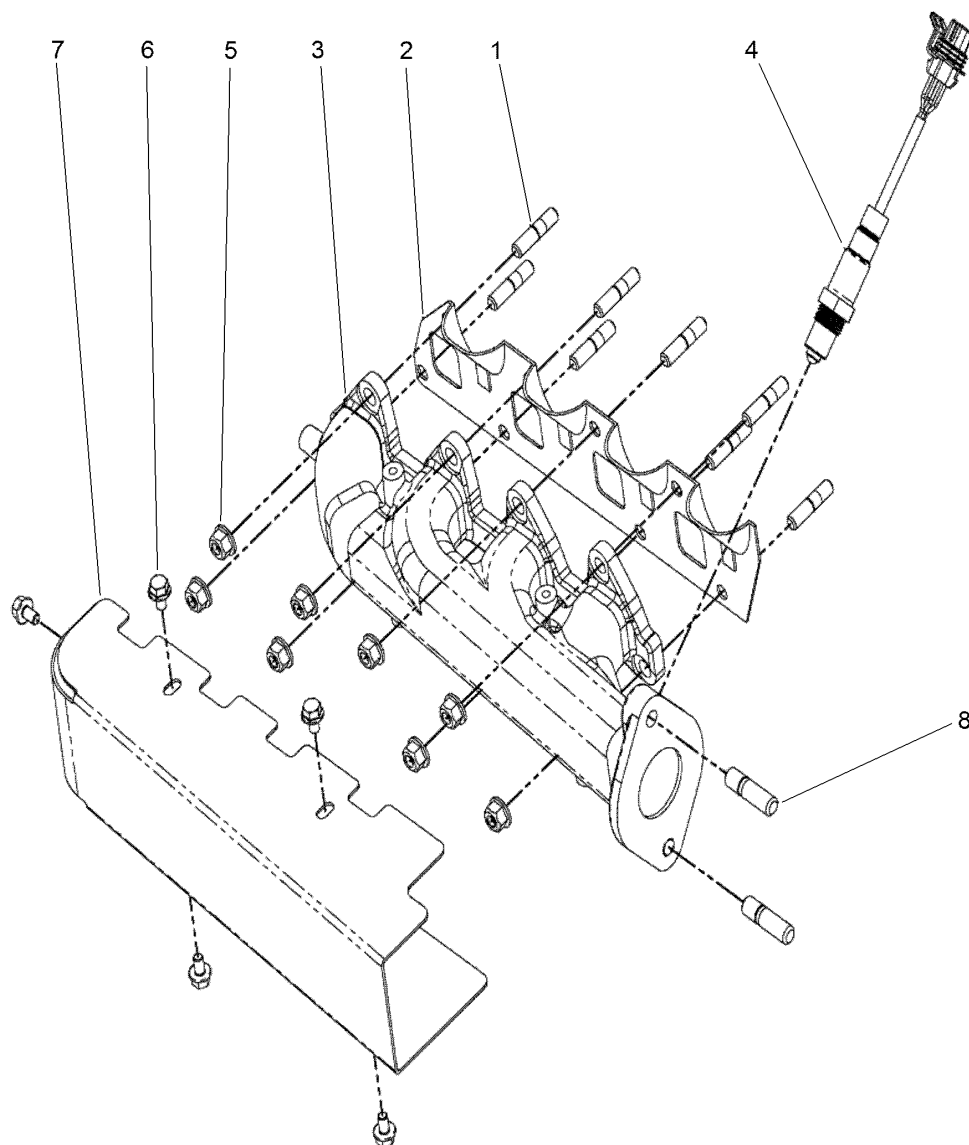 


Exhaust Manifold Assembly

Ref.	Part Number	Qty.	Description
1	147-2644	8	Stud
2	147-2645	1	Gasket, Exhaust Manifold
3	147-2646	1	Manifold, Exhaust
4	147-2647	1	Sensor, O2
5	147-2648	8	Nut
6	147-2649	5	Screw
7	147-2650	1	Shield, Exhaust
8	147-2651	2	Stud

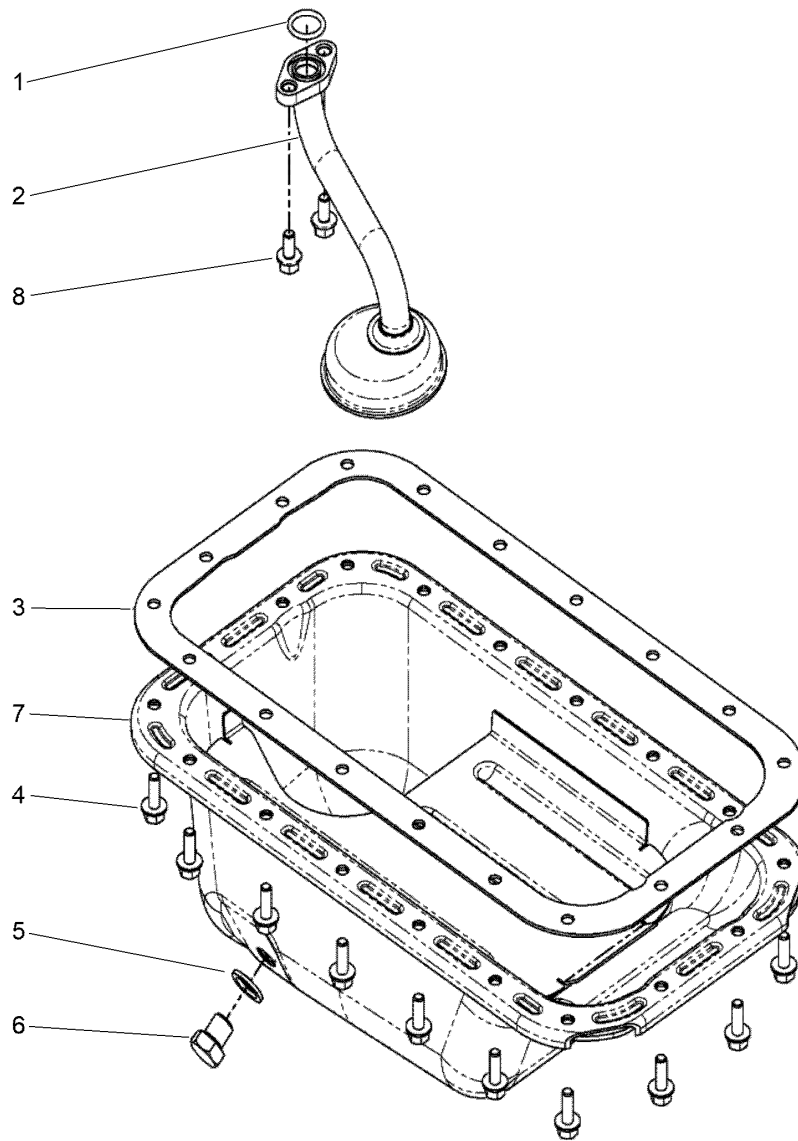 


Oil Pan Assembly

Ref.	Part Number	Qty.	Description
1	147-2652	1	Seal, Oil Strainer
2	147-2653	1	Tube, Oil Pick Up
3	147-2654	1	Gasket, Oil Pan
4	147-2569	18	Bolt
5	147-2655	1	Seal, Drain Plug
6	147-2656	1	Plug, Drain
7	147-2657	1	Pan, Oil
8	147-2658	2	Bolt

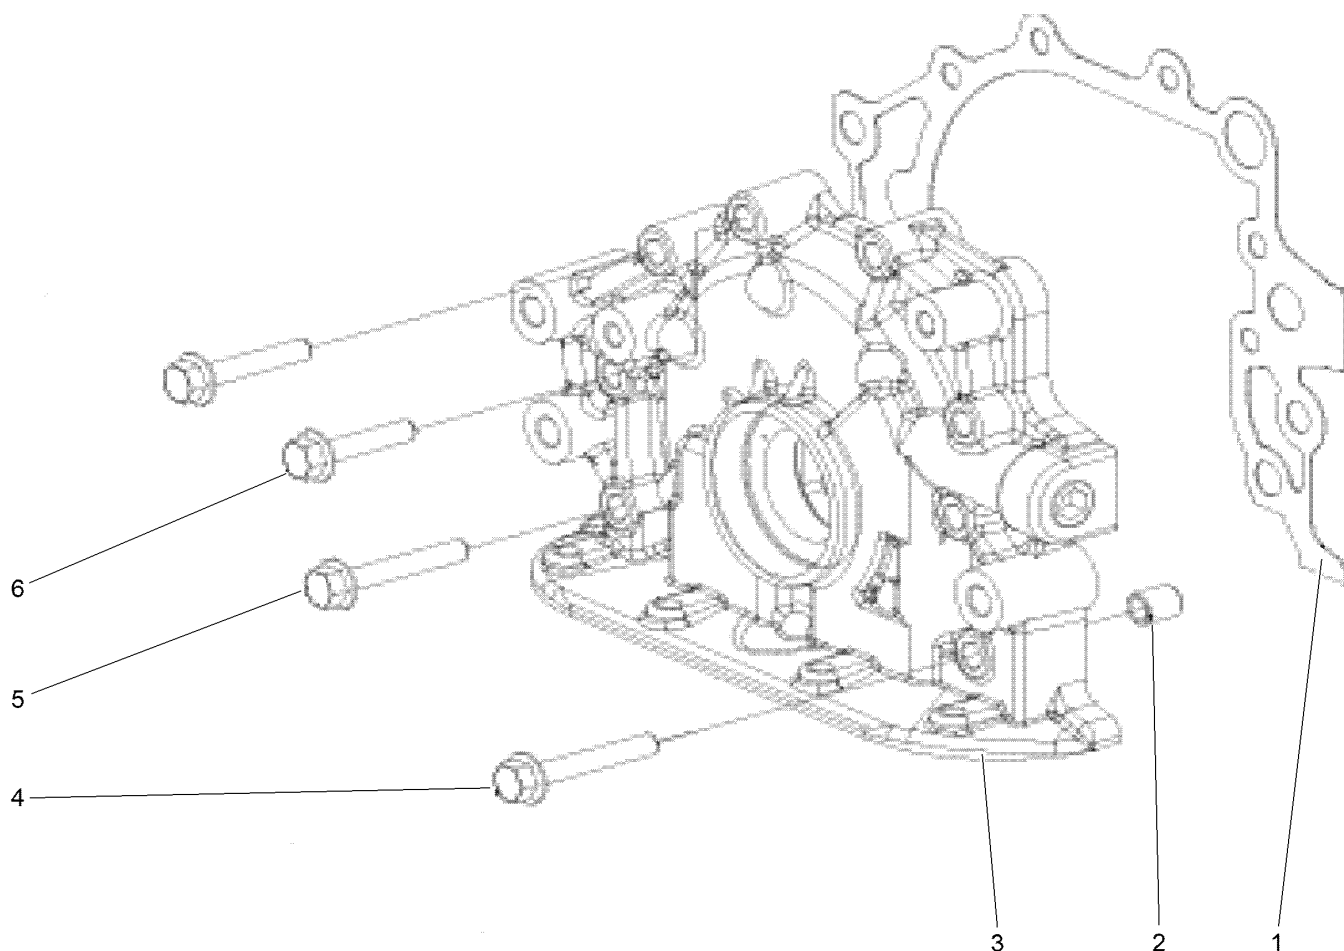 


Oil Pump Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-2659	1	Gasket, Oil Pump
2	147-2555	4	Bushing
3	147-2660	1	Pump, Oil
4	147-2661	3	Bolt
5	147-2662	3	Bolt
6	147-2663	5	Bolt, Oil Pump

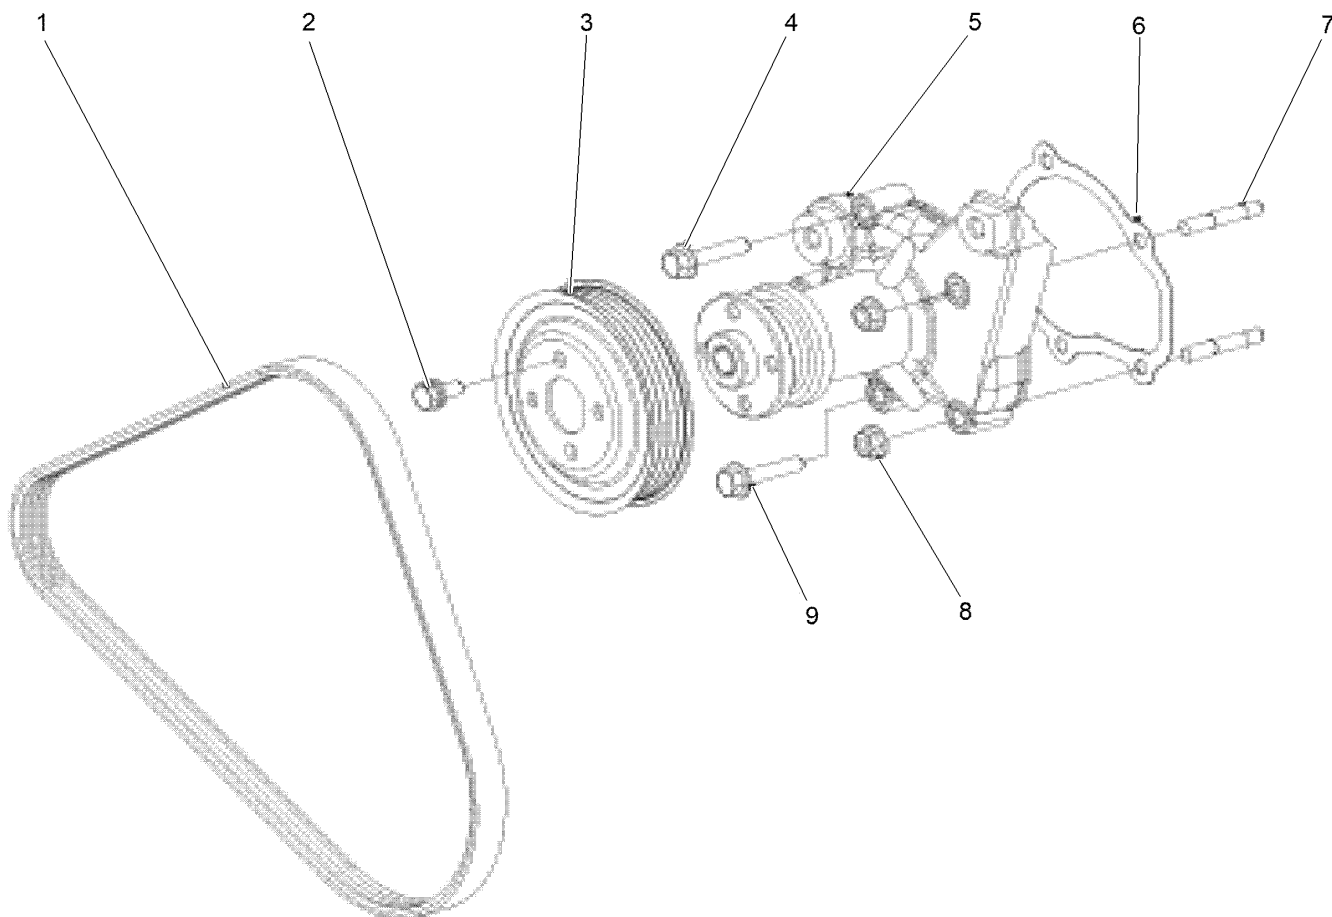 


Water Pump Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-2664	1	Belt
2	147-2665	4	Bolt
3	147-2666	1	Pulley, Water Pump
4	147-2661	1	Bolt
5	147-2667	1	Pump, Water
6	147-2668	1	Gasket, Water Pump
7	147-2669	2	Stud, Water Pump
8	147-2670	2	Nut
9	147-2662	1	Bolt

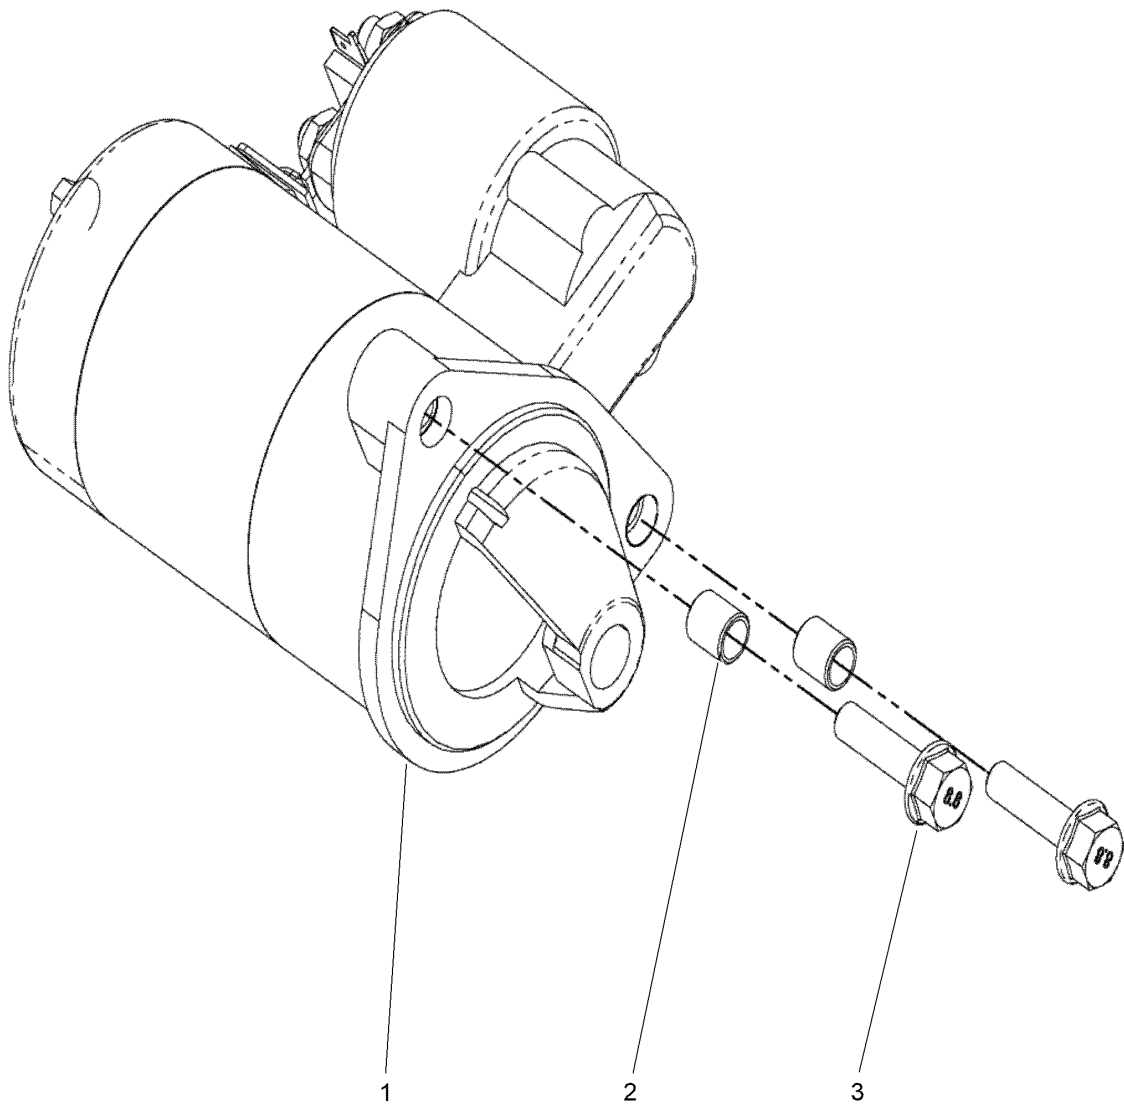 


Starter Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-2671	1	Starter
2	147-2672	2	Dowel
3	147-2673	2	Bolt

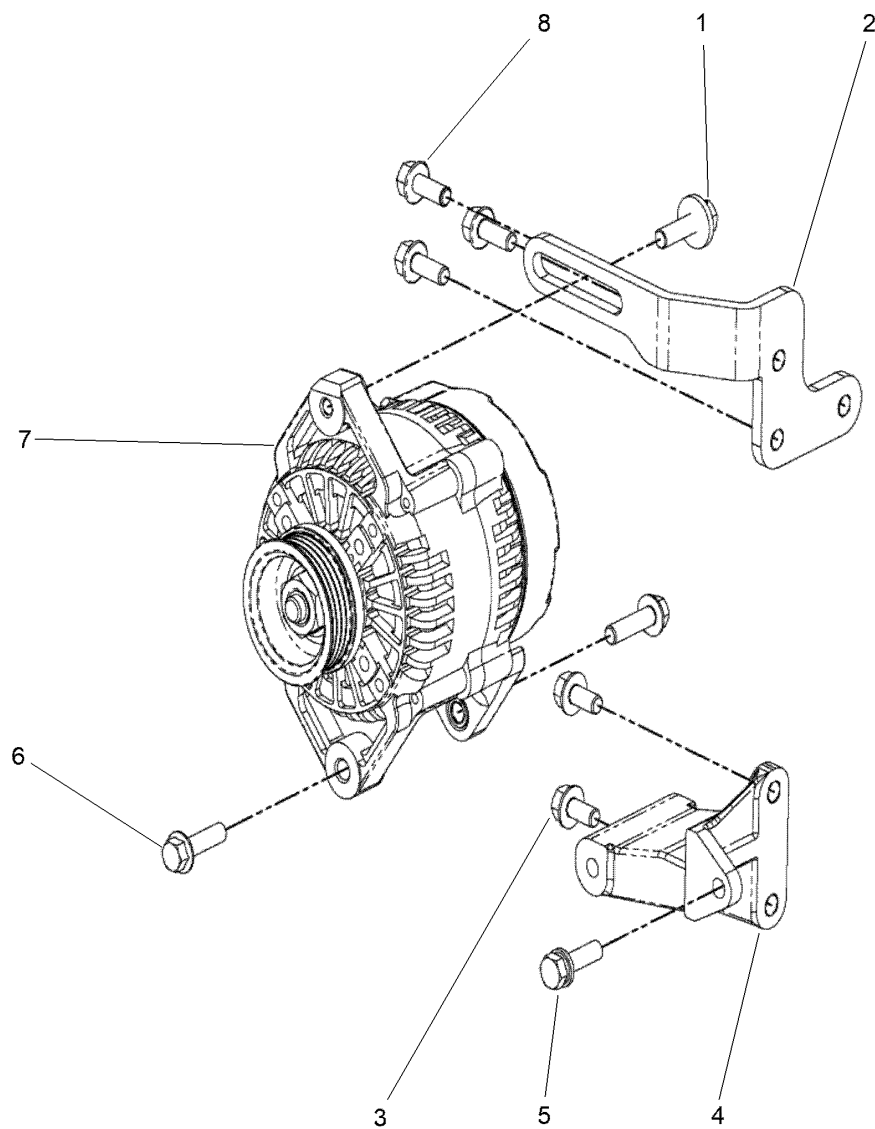 


Alternator Assembly

Ref.	Part Number	Qty.	Description
1	147-2674	1	Bolt, Alternator
2	147-2675	1	Bracket, Alternator
3	147-2676	2	Bolt, Alt Support
4	147-2677	1	Support, Alternator
5	147-2678	1	Bolt, Alt Support
6	147-2679	1	Bolt
7	147-2680	1	Alternator
8	147-2681	3	Bolt

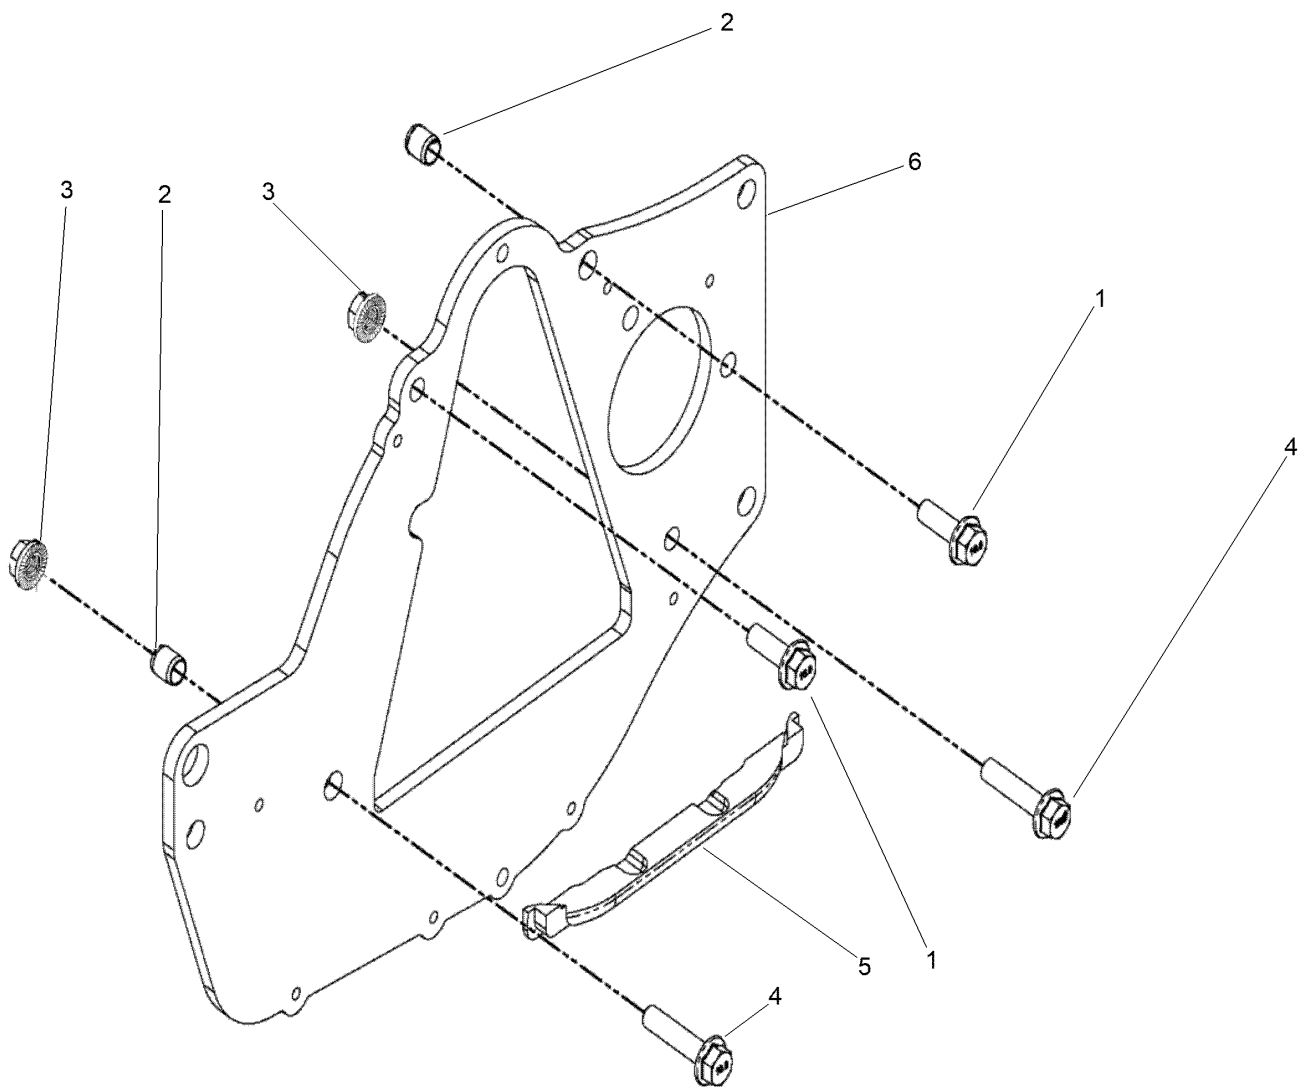 


Rear Plate Assembly

Ref.	Part Number	Qty.	Description
1	147-2682	2	Bolt
2	147-2683	2	Spacer
3	147-2684	2	Nut
4	147-2685	2	Bolt
5	145-2003	1	Seal-Plate, Rear
6	144-2201	1	Plate-Engine

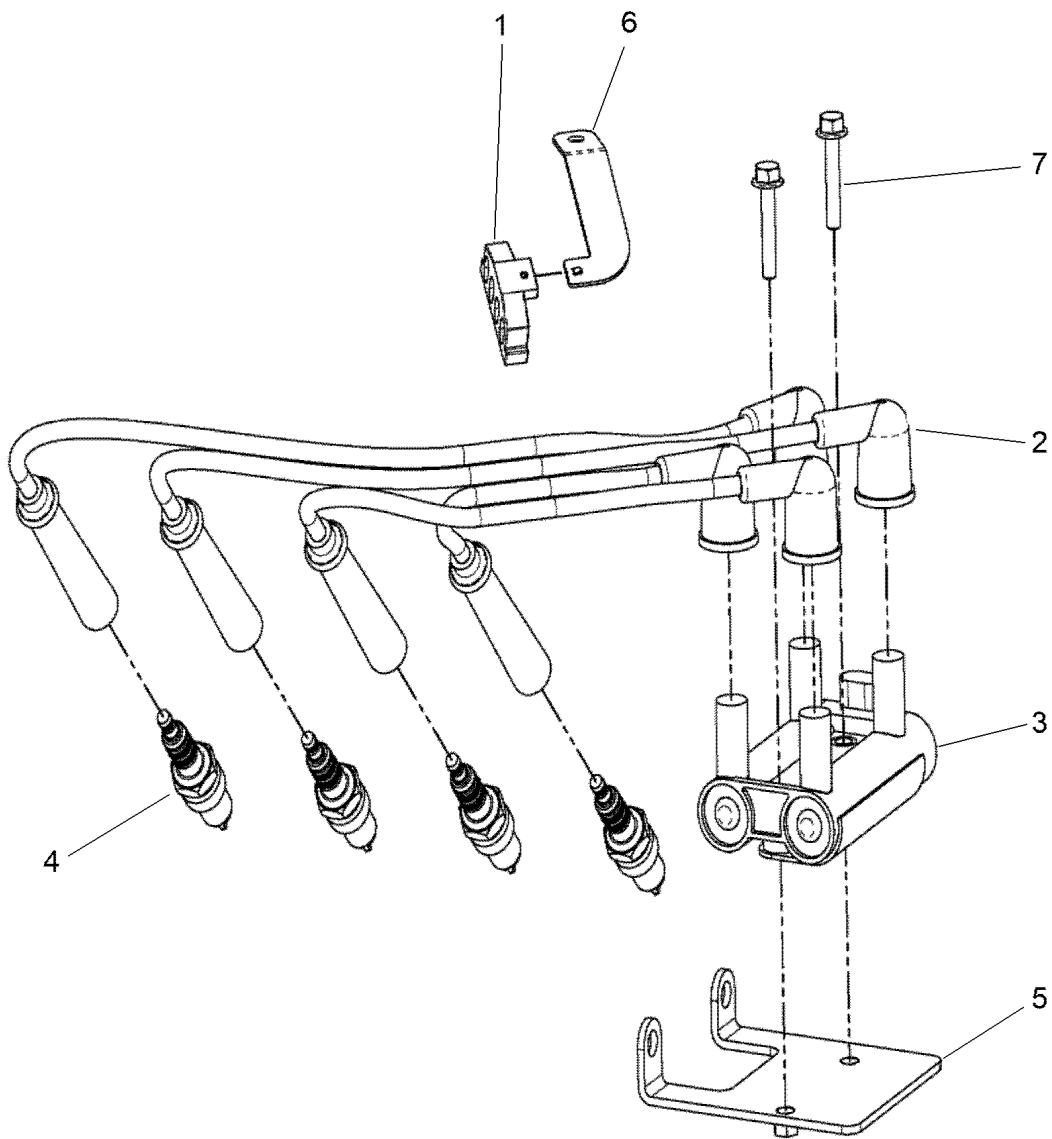 


Ignition Assembly

Ref.	Part Number	Qty.	Description
1	147-2688	1	Retainer, Wire#4
2	147-2689	1	Wires, Spark Plug
3	147-2690	1	Coil, Ignition
4	145-2128	4	Kit-Spark Plug
5	147-2691	1	Bracket, Coil Rear
6	147-2692	1	Bracket, Ignition Wires
7	147-2693	2	Bolt

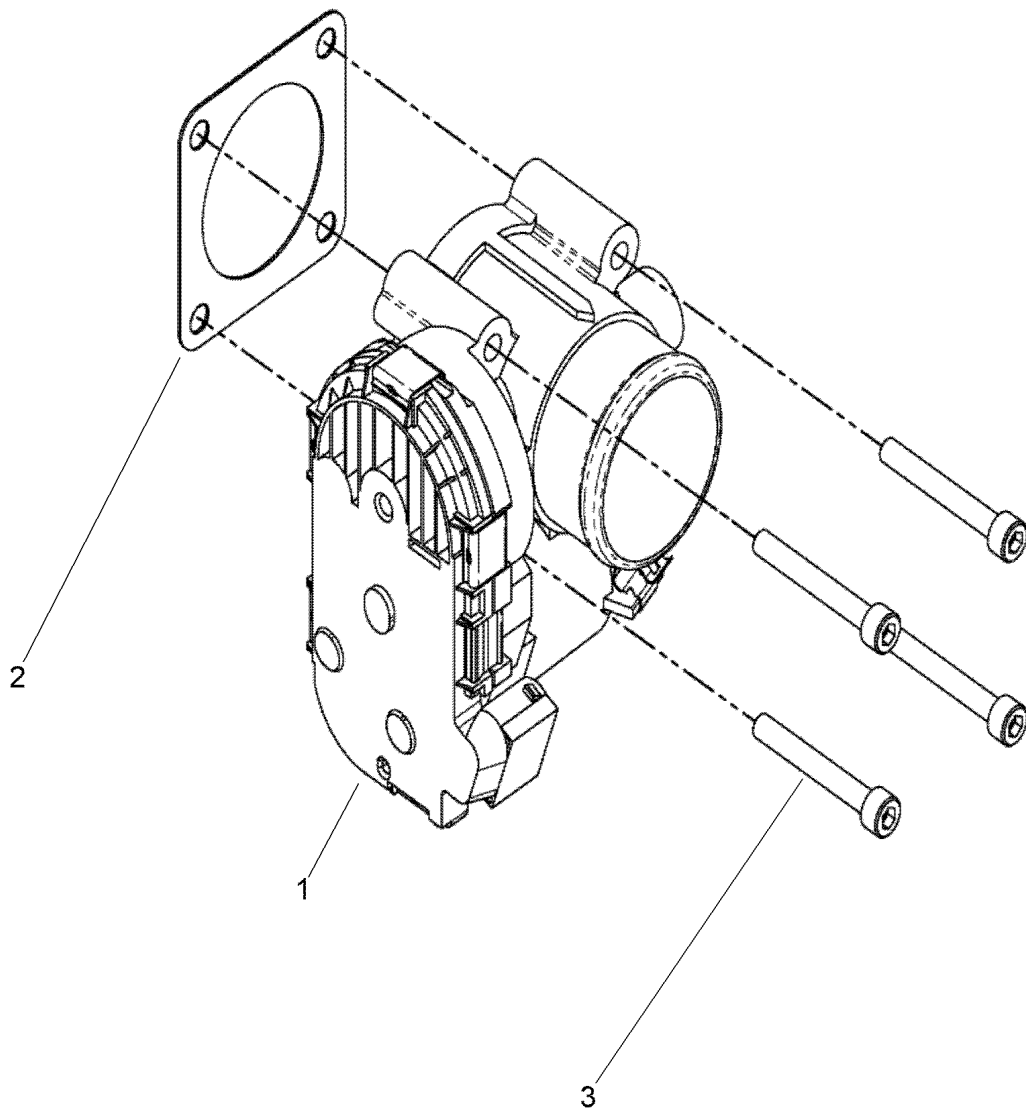 


Throttle Body Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-2694	1	Body, Throttle
2	147-2695	1	Gasket
3	147-2696	4	Screw

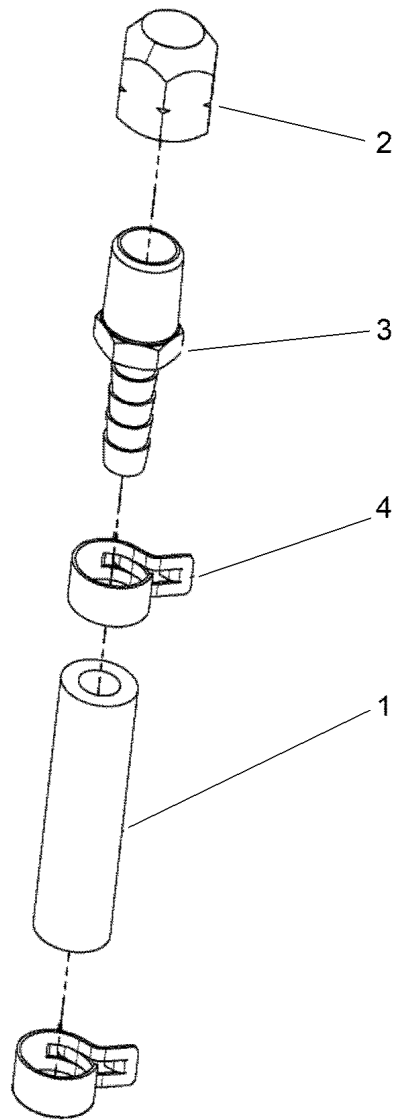 


Coolant Plug Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-2697	1	Hose, Heater (2 Inches)
2	147-2698	1	Fitting
3	147-2699	1	Fitting
4	145-2660	2	Clamp, Tension

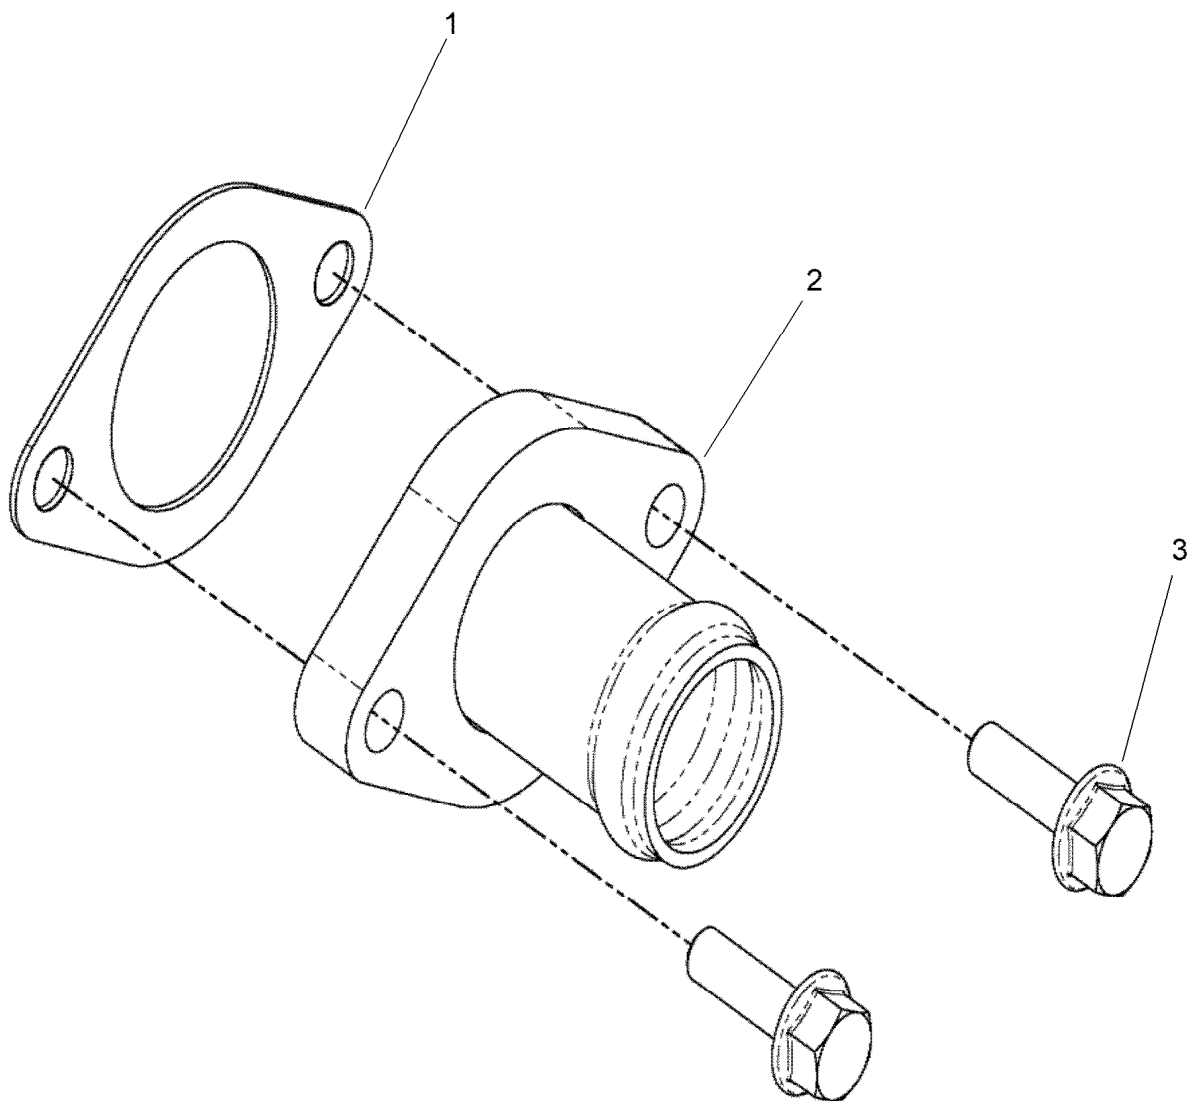 


Coolant Inlet Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-2661	1	Gasket, Water Inlet
2	145-2662	1	Inlet, Coolant Straight
3	145-2663	2	Bolt, Flange

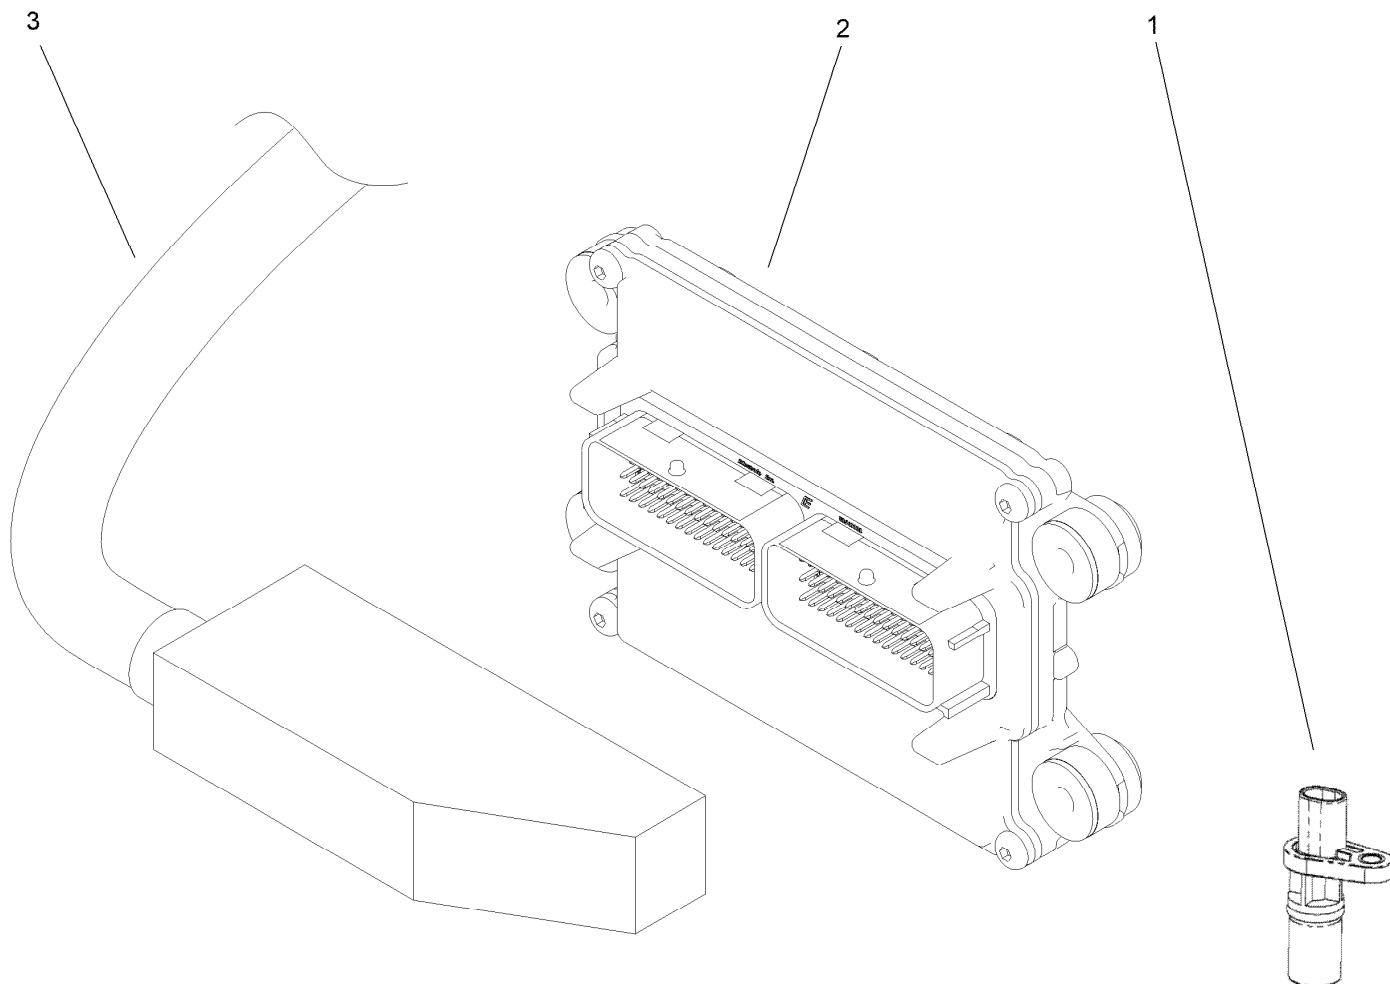 

Electrical Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-2010	1	Sensor-Position, Crankshaft
2	144-2232	1	Ecu
3	145-2666	1	Harness

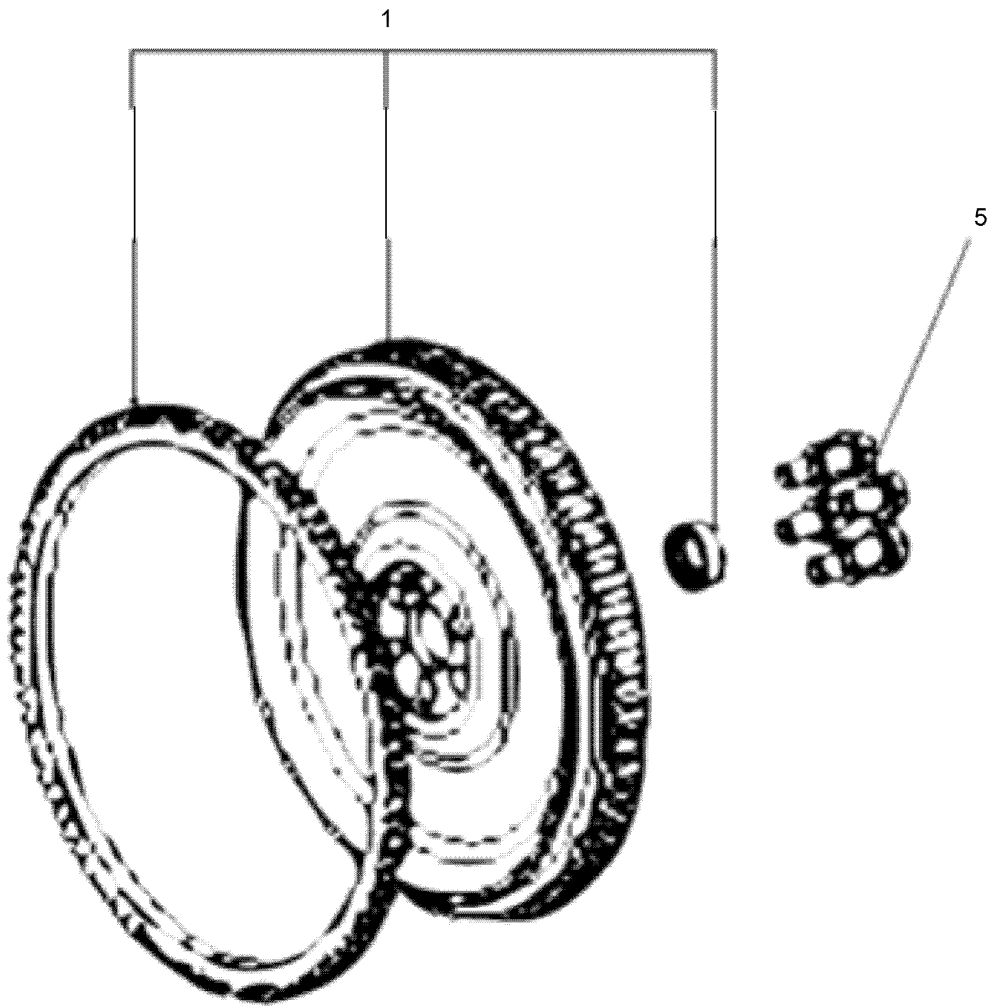 

Flywheel Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	163-4948	1	Flywheel Assy
5	163-4949	6	Bolt,Flywheel

Attachments and Accessories

For 08101 Workman UTX 4 Passenger Utility Vehicle

Product Name	Model/Part
Canopy-Crew.....	08111
Glass Windshield and Wiper.....	08112
Polycarbonate Windshield.....	08113
Polycarbonate Doors - Standard.....	08114
Polycarbonate Doors - Crew.....	08115
Polycarbonate Rear Windshield.....	08116
Overhead Console and Wire Harness.....	08130
Work Lights.....	08131
Beacon.....	08132
Electric Bed Lift.....	08134
Supervisor Key.....	08136
Side View Mirror Kit.....	08140
Rear View Mirror Kit.....	08141
Center Bed Racking, Workman UTX/MDX.....	08142
Under Seat Storage.....	08143
27in Alloy Wheels and Tires.....	08144
Draw Bar.....	08146
Side Bed Racking, Workman UTX/MDX/GTX.....	08148
Reverse Alarm Kit.....	131-8549
Wrench-Adjuster, Spring.....	139-4678
Puller-Clutch, UTX.....	140-4672
Universal Wireless Hourmeter Kit.....	144-2436
Universal 12V Power Point Kit.....	144-2438
Spark Arrester Kit.....	144-2443
Toro Premium Synthetic Transaxle Fluid.....	145-2048

Notes:



Count on it.