



Count on it.

Parts Catalog

Groundsmaster® 5900/5910 Rotary Mower

Model No. 31598—Serial No. 315000001 and Up

Model No. 31598TE—Serial No. 315000001 and Up

Model No. 31599—Serial No. 315000001 and Up

Model No. 31599TE—Serial No. 315000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

 
Frame and Rear Axle Assembly	6
RH PTO Valve Assembly	7
Hydraulic PTO Manifold Assembly No. 117-1112	8
LH PTO Valve Assembly	9
Hydraulic PTO Manifold Assembly No. 117-1111	10
Filter Manifold Assembly	11
Hydraulic Filter Manifold Assembly No. 119-7703	12
Axle Assembly No. 114-5982-01	13
Rear Axle Assembly	14
Left Rear Wheel Hydraulic Motor Assembly No. 114-5593	16
Tie Rod Assembly No. 110-6049-03	17
Right Rear Wheel Hydraulic Motor Assembly No. 114-5594	18
Hydraulic Steering Cylinder Assembly No. 98-0661	19
Front Axle and Brake Assembly	20
Planetary Assembly No. 105-4500-03	22
Brake Assembly No. 119-8258	23
Brake Assembly No. 119-8259	24
Front PTO Valve Assembly	25
Hydraulic PTO Manifold Assembly No. 117-1110	26
Traction Valve Assembly	27
Hydraulic Traction Manifold Assembly No. 110-6062	28
Hydraulic Motor Assembly No. 114-4849	29
Seat and Platform Assembly	30
Air Ride Seat Suspension Assembly No. 108-1488	32
Steering Column Assembly	34
Steering Tower Assembly No. 117-5492	36
Steering Valve Assembly No. 130-7949	37
Traction Pedal Assembly	38
Brake Pedal Assembly	39
Control Console Assembly	40
Electrical Component Assembly	42
Battery and Lift Manifold Assembly	44
Hydraulic Lift Manifold Assembly	46
Hydraulic Lift Manifold Assembly No. 119-7731	47
Front Deck Lift Arm and Cylinder Assembly	48
Wing Lift Arm Assembly	50
Hydraulic Gear Motor Assembly No. 114-4940	52
Hydraulic Cylinder Assembly No. 114-4831	53
Hydraulic Cylinder Assembly No. 114-4830	54
Hydraulic Cylinder Assembly No. 114-5685	55
Wing Connection and Impact Arm Assembly	56
Hood and Bumper Assembly	58
Air Cleaner and Muffler Assembly	60
Air Cleaner Assembly No. 112-7329	61
Radiator and Fan Shroud Assembly	62
Radiator Assembly	64
Engine and Mount Assembly	65
4 Wheel Drive Hydraulic Manifold Assembly	66
4 Wheel Drive Hydraulic Manifold Assembly No. 110-6063	67
Flush Manifold Assembly	68
Flush Valve Assembly No. 120-9869	69
Fan and Coupling Assembly	70
Hydraulic Fan Motor Assembly No. 112-7400	71
Steer/Fan Manifold Assembly	72

Contents (continued)

Hydraulic Manifold Assembly No. 110-6065	73
Hydraulic Tank Assembly	74
Hydraulic Pump Assembly	76
Triple Pump Assembly No. 114-4840	78
Piston Pump Assembly No. 121-3900	80
Traction Hydraulic Plumbing Assembly	82
Power-Take-Off Hydraulic Plumbing Assembly	84
Lift Arms Hydraulic Plumbing Assembly	85
Steering Hydraulic Plumbing Assembly	86
Hydraulic Tank Plumbing Assembly	87
Acoustic Foam Assembly	88
Battery Cable Routing and Assembly	89
Fuel Tank Assembly	90
Engine Breather Assembly	91
Roll-Over Protection System Assembly For ROPS Model Only	92
Right Hand Tail Light Assembly No. 108-8007	93
Left Hand Tail Light Assembly No. 108-8008	94
Vinyl Premium Seat Assembly No. 117-5676	95
Head Light Assembly No. 114-5928	96
Cab Mounting Assembly For Cab Model Only	97
Compressor Mount and Cab Fluids Assembly For Cab Model Only	98
Cab Seat Assembly For Cab Model Only	100
Cloth Premium Seat Assembly No. 117-9429	101
Cab Frame, Mirror and Decal Assembly For Cab Model Only	102
Windshield Wiper, Filter and Air Conditioning Assembly For Cab Model Only	104
Window and Door Assembly For Cab Model Only	106
Left Hand Door Assembly For Cab Model Only	108
Right Hand Door Assembly For Cab Model Only	110
Left Side Hose Assembly For Cab Model Only	112
Right Side Hose Assembly For Cab Model Only	114
Mixing Box and Vent Hose Assembly For Cab Model Only	116
Headliner Wire Harness and Control Assembly For Cab Model Only	118
Mixing Box Mounting Bracket and Water Tray Assembly For Cab Model Only	120
Blower Fan and Evaporator Core Assembly For Cab Model Only	121
Heat / Air Conditioner Housing Assembly For Cab Model Only	122
Air Diverter and Expansion Valve Assembly For Cab Model Only	123
Air Diverter Assembly No. 121-8369 For Cab Model Only	124
Center Deck and Winglet Assembly	126
Center Front Deck and Decal Assembly No. 110-5911	127
Right Front Deck and Decal Assembly No. 110-5914	128
Left Front Deck and Decal Assembly No. 110-5917	129
Center Deck Belt and Pulley Assembly	130
Driving Spindle Assembly No. 119-4547	131
Double Driven Spindle Assembly No. 119-4548	132
High Driven Spindle Assembly No. 119-4549	133
Center Deck Roller, Skid and Caster Wheel Assembly	134
10 Inch Wheel Assembly No. 93-4240	135
Center Deck Spindle and Blade Assembly	136
Center Deck Belt Cover Assembly	137
Center Deck Chamber Assembly	138
Center Deck Transport Damper Assembly	139
Right Deck Belt and Pulley Assembly	140
Right Deck Decal Assembly No. 110-5921	141
Right Deck Roller, Skid and Caster Wheel Assembly	142

Contents (continued)

Right Deck Spindle and Blade Assembly	143
Right Deck Belt Cover Assembly	144
Right Deck Chamber Assembly	145
Right Deck Stop and Hose Guide Assembly	146
Left Deck Belt and Pulley Assembly	147
Left Deck Decal Assembly No. 110-5931	148
Left Deck Roller, Skid and Caster Wheel Assembly	149
Left Deck Spindle and Blade Assembly	150
Left Deck Belt Cover Assembly	151
Left Deck Chamber Assembly	152
Engine Alternator Assembly	153
Engine Starter Assembly	154
Engine Gear Case Front Cover Assembly	155
Engine Water Pump and Thermostat Assembly	156
Engine Exhaust Manifold Assembly	157
Engine Valve Cover Assembly	158
Engine Oil Filter and Dipstick Assembly	159
Engine Fuel Filter Assembly	160
Attachments and Accessories	161

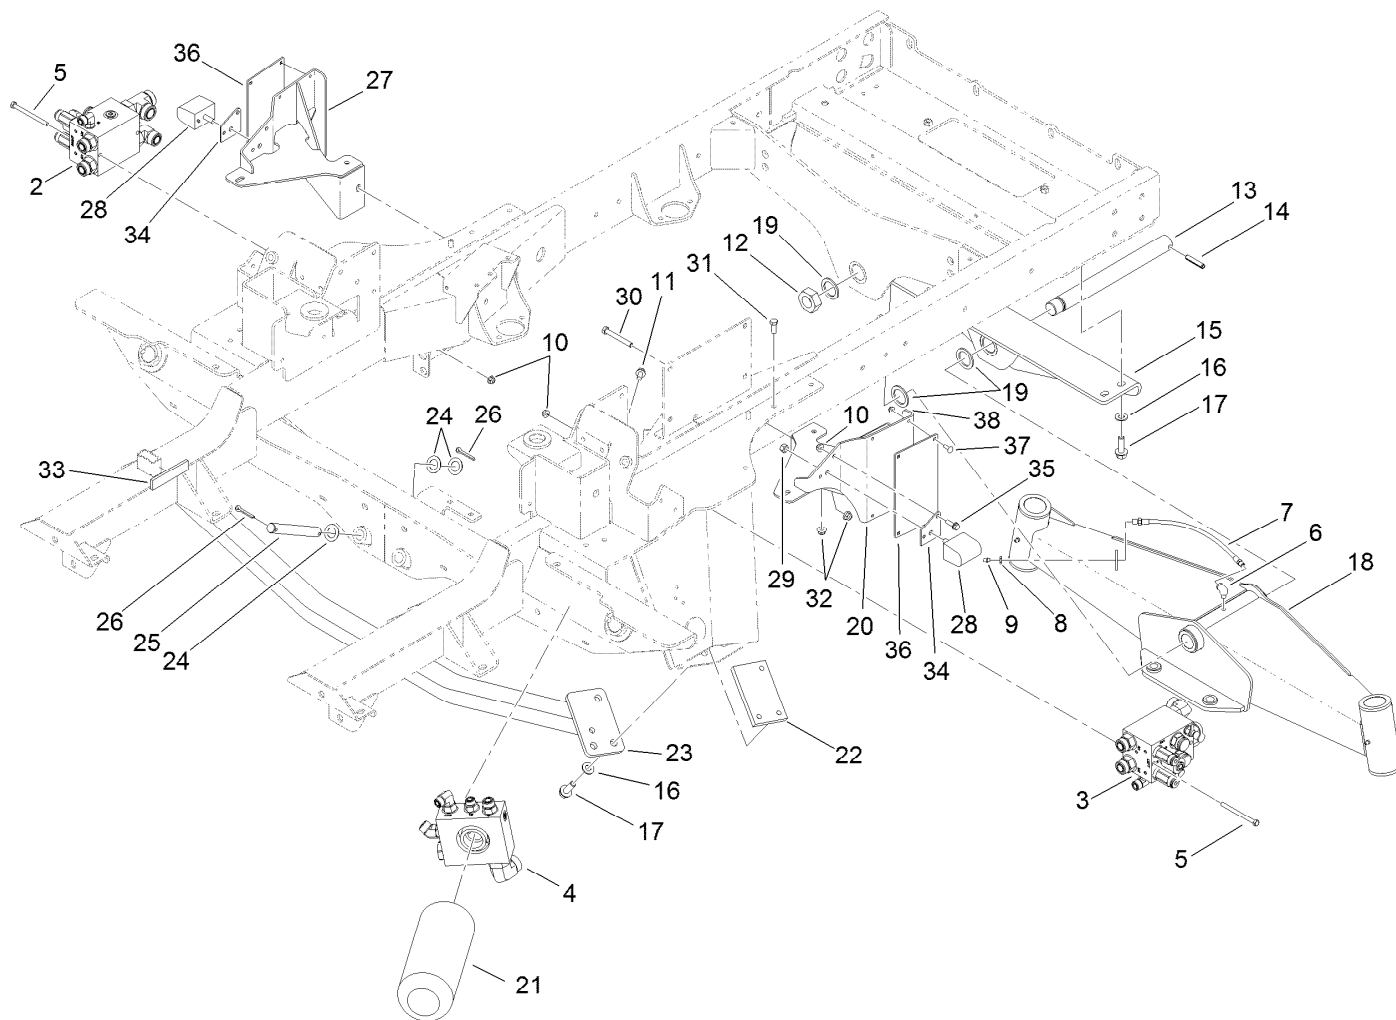


Frame and Rear Axle Assembly

Ref.	Part Number	Qty.	Description
2		1	RH PTO Valve ASM ●
3		1	LH PTO Valve ASM ●
4		1	Filter Manifold ASM ●
5	322-19	4	Screw-HH
6	2811-7	1	Elbow
7	114-5586	1	Hose ASM (With Fitting)
8	114-5587	1	Nut
9	302-5	1	Fitting-Grease
10	104-8300	6	Nut-HF, NI
11	3234-1	4	Screw-HHF
12	3296-68	1	Nut-Lock, NI
13	114-5970	1	Shaft-Pivot
14	32121-110	1	Pin-Roll, Slotted
15	110-6033-01	1	Support-Axle
16	3256-26	10	Washer-Flat
17	100-6116	10	Screw-HHF
18	114-5982-01	1	Axle ASM
19	98-1452	3	Washer-Thrust
20	119-8275-01	1	Pad-Transport, LH

Ref.	Part Number	Qty.	Description
21	86-6110	1	Filter-Hydraulic
22	114-5990	2	Plate-Tapped
23	114-5969-01	1	Crossmember
24	110-6767	8	Washer-Thrust
25	110-6006	2	Pin-Clevis
26	3272-30	4	Pin-Cotter
27	119-8270-01	1	Pad-Transport, RH
28	87-3470	2	Bumper
29	33025-00	2	Nut-Lock, NI
30	323-14	2	Screw-HH
31	323-6	4	Screw-HH
32	104-8301	6	Nut-HF, NI
33	115-5465	1	Seal-Trim
34	115-8826	2	Shim-Bumper
35	3234-17	2	Screw-HHF
36	117-5476	2	Pad-Roller
37	1-807512	8	Bolt-CARR
38	104-7201	8	Nut-HF, NI


 
● Not serviced separately

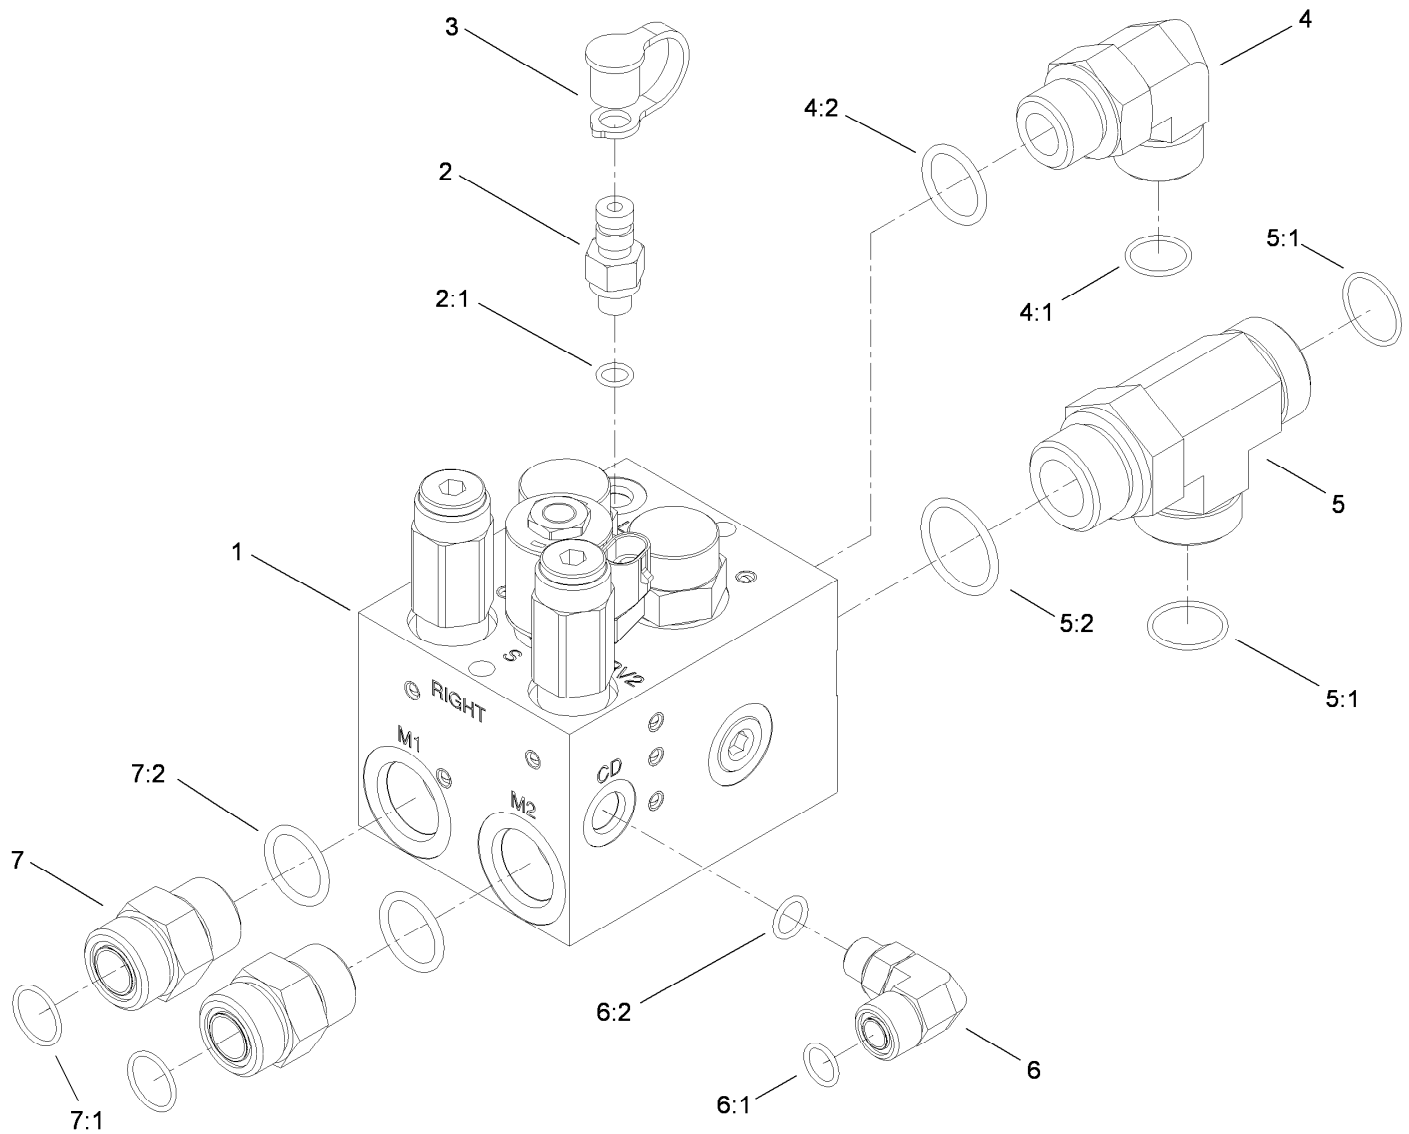

RH PTO Valve Assembly


Ref.	Part Number	Qty.	Description
1	117-1112	1	Manifold-PTO, RH
2	354-77	1	Fitting-Quick
2:1	237-78	1	O-Ring
3	354-79	1	Cap-Dust
4	340-142	1	Fitting-Elbow, 90 DEG
4:1	237-58	1	O-Ring
4:2	237-81	1	O-Ring
5	104-3795	1	Fitting-Tee

Ref.	Part Number	Qty.	Description
5:1	340-65	2	O-Ring
5:2	237-146	1	O-Ring
6	340-99	1	Fitting-HYD, 90 DEG
6:1	237-30	1	O-Ring
6:2	237-42	1	O-Ring
7	340-9	2	Fitting-STR
7:1	237-58	1	O-Ring
7:2	237-81	1	O-Ring

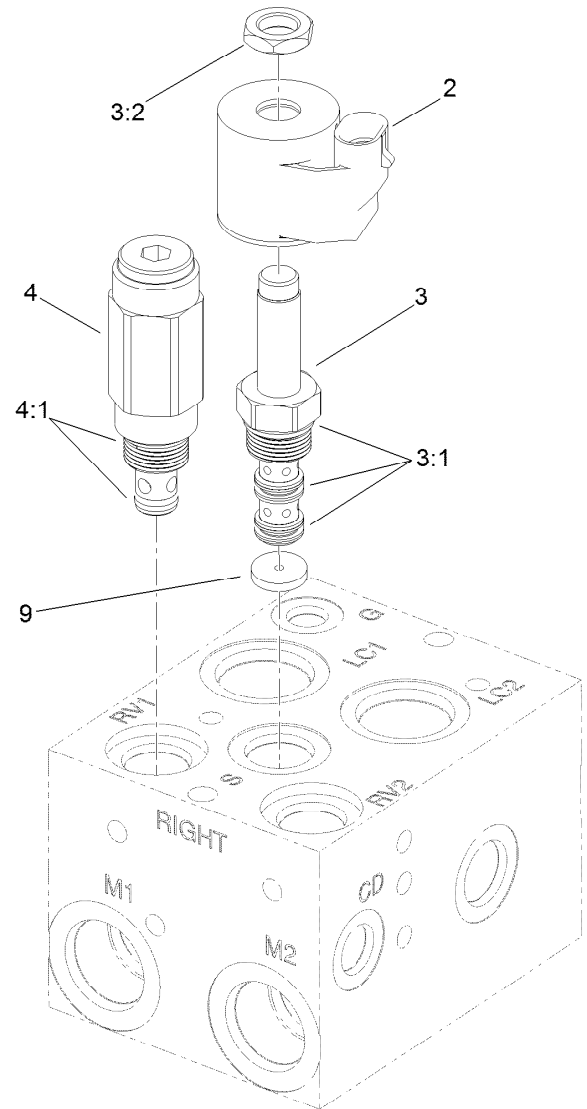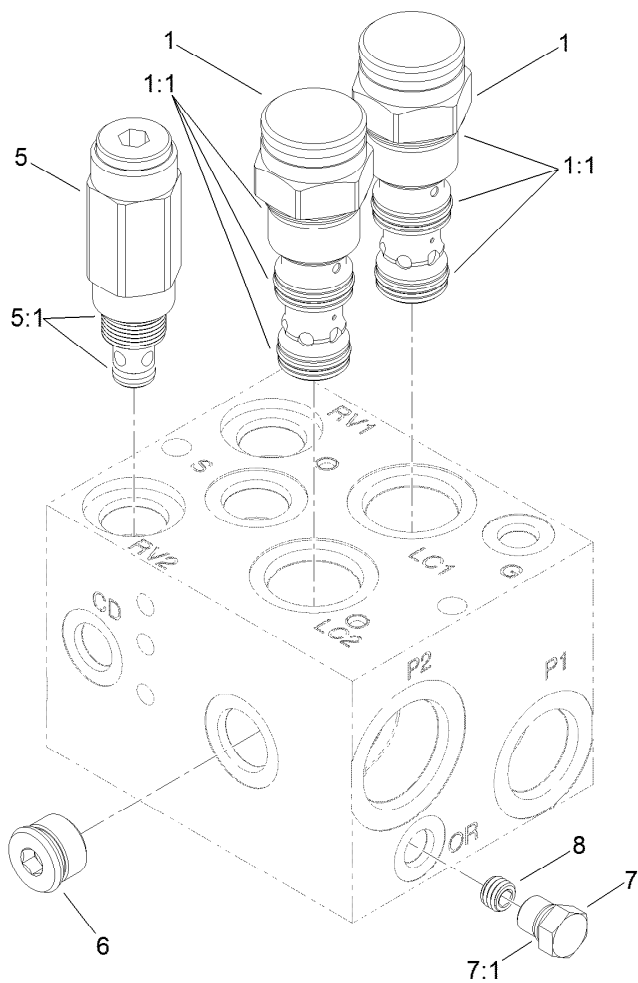  

Hydraulic PTO Manifold Assembly No. 117-1112


Ref.	Part Number	Qty.	Description
1	114-5511	2	Cartridge-Logic
1:1	119-8048	1	Seal Kit
2	105-9333	1	Coil-12Vdc
3	110-0494	1	Valve-Solenoid
3:1	110-8773	1	Seal Kit
3:2	110-2634	1	Nut-Coil
4	114-5514	1	Valve-Relief, 2000 PSI
4:1	105-9156	1	Seal Kit
5	114-5512	1	Valve-Relief, 600 PSI
5:1	105-9156	1	Seal Kit
6	106-1027	1	Plug
7	353-990	1	Plug ASM
7:1	237-78	1	O-Ring
8	112-6538	1	Orifice (.063 Inch)
9	117-2791	1	Disc-Orifice (.050)

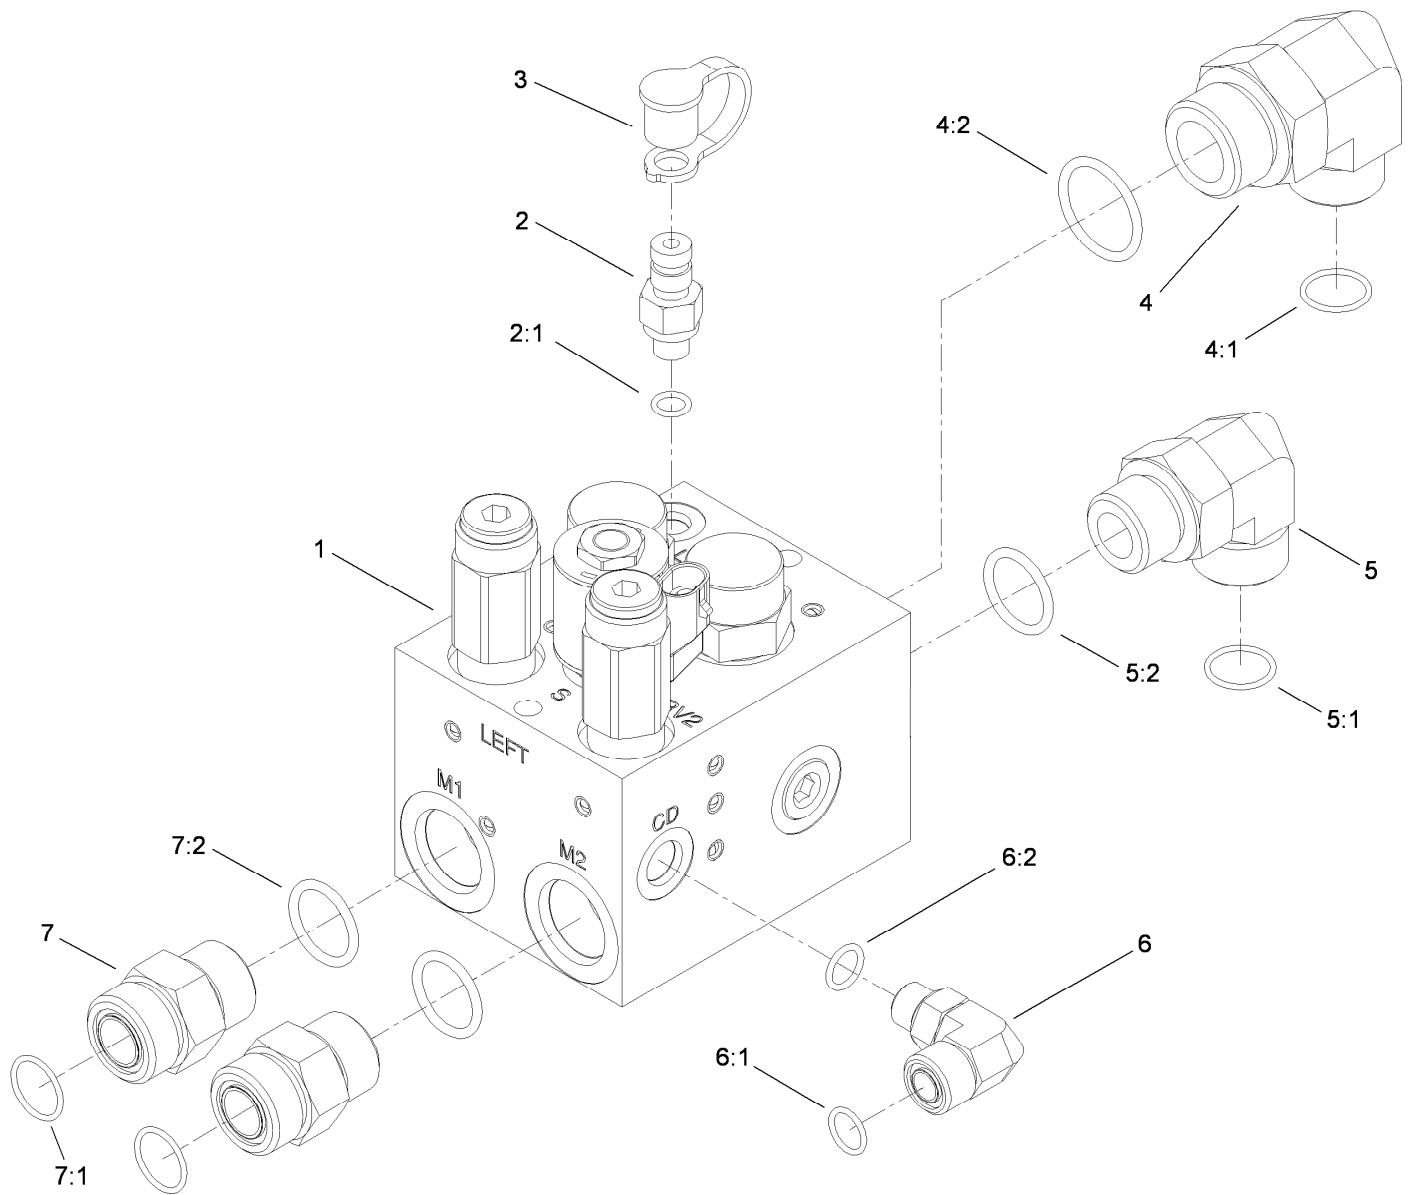 

LH PTO Valve Assembly


Ref.	Part Number	Qty.	Description
1	117-1111	1	Manifold-PTO, LH
2	354-77	1	Fitting-Quick
2:1	237-78	1	O-Ring
3	354-79	1	Cap-Dust
4	340-142	1	Fitting-Elbow, 90 DEG
4:1	237-58	1	O-Ring
4:2	237-81	1	O-Ring
5	340-15	1	Fitting-Elbow 90

Ref.	Part Number	Qty.	Description
5:1	237-58	1	O-Ring
5:2	237-146	1	O-Ring
6	340-99	1	Fitting-HYD, 90 DEG
6:1	237-30	1	O-Ring
6:2	237-42	1	O-Ring
7	340-9	2	Fitting-STR
7:1	237-58	1	O-Ring
7:2	237-81	1	O-Ring

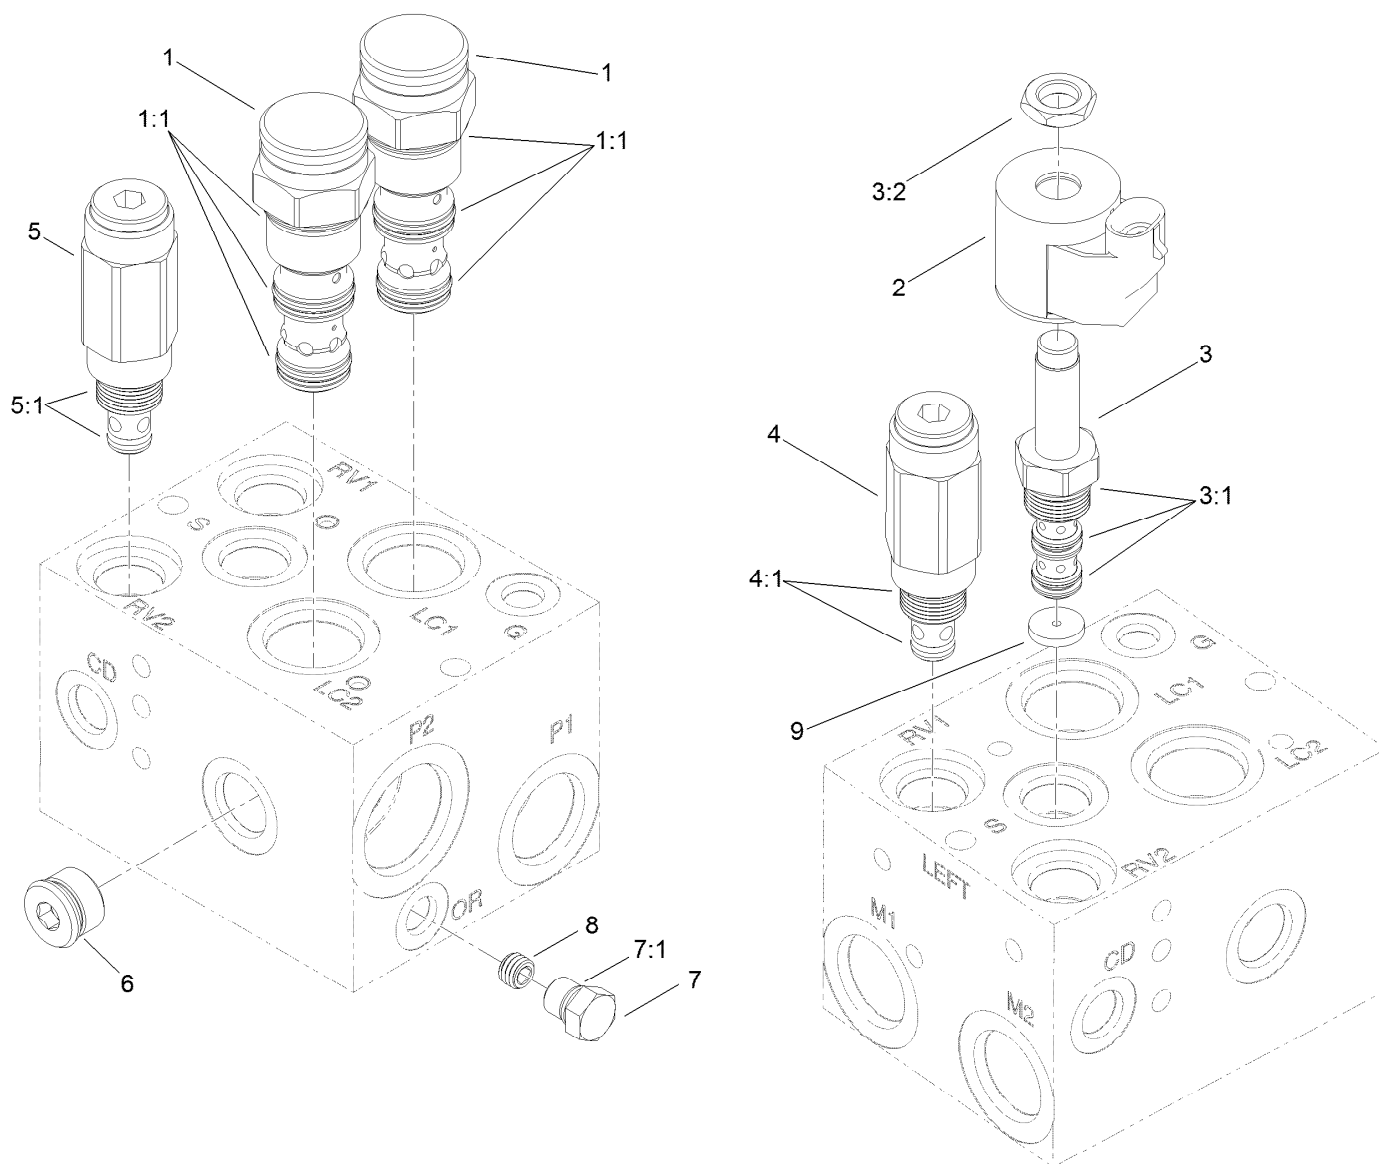 

Hydraulic PTO Manifold Assembly No. 117-1111

Ref.	Part Number	Qty.	Description
1	114-5511	2	Cartridge-Logic
1:1	119-8048	1	Seal Kit
2	105-9333	1	Coil-12Vdc
3	110-0494	1	Valve-Solenoid
3:1	110-8773	1	Seal Kit
3:2	110-2634	1	Nut-Coil
4	114-5510	1	Valve-Relief, 3000 PSI
4:1	105-9156	1	Seal Kit
5	114-5512	1	Valve-Relief, 600 PSI
5:1	105-9156	1	Seal Kit
6	106-1027	1	Plug
7	353-990	1	Plug ASM
7:1	237-78	1	O-Ring
8	112-6538	1	Orifice (.063 Inch)
9	117-2791	1	Disc-Orifice (.050)

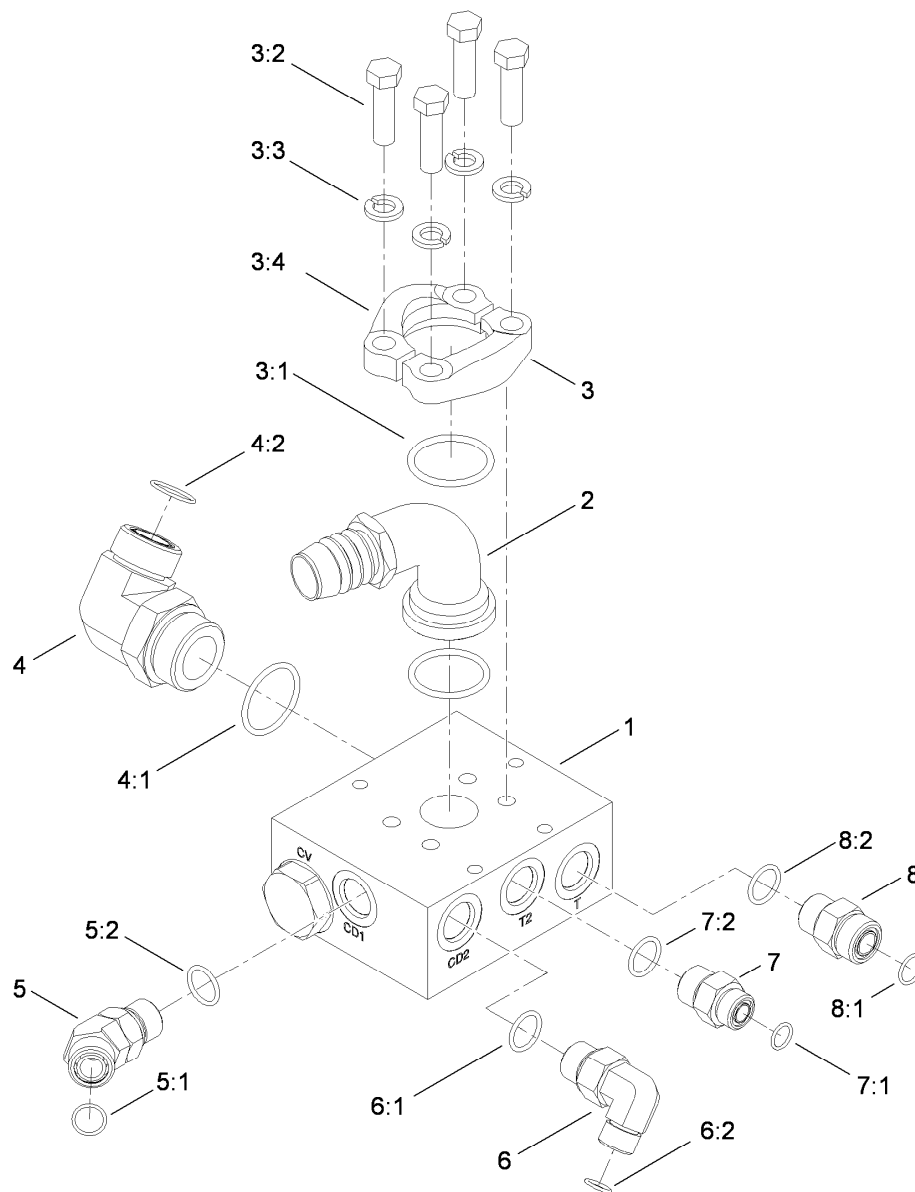 


Filter Manifold Assembly

Ref.	Part Number	Qty.	Description
1	119-7703	1	Manifold-Filter
2	112-7374	1	Fitting
3	114-0090	1	Flange Kit
3:1	115-5420	1	O-Ring
3:2	324-6	4	Screw-HH
3:3	3253-6	4	Washer-Lock
3:4		2	Halve-Flange ●
4	340-79	1	Fitting-Elbow 90
4:1	237-101	1	O-Ring
4:2	340-65	1	O-Ring
5	340-14	1	Fitting-HYD, 45 DEG


Ref.	Part Number	Qty.	Description
5:1	237-65	1	O-Ring
5:2	237-80	1	O-Ring
6	340-105	1	Fitting-Elbow, 90 DEG
6:1	237-80	1	O-Ring
6:2	237-30	1	O-Ring
7	340-6	1	Fitting-Straight
7:1	237-30	1	O-Ring
7:2	237-80	1	O-Ring
8	340-7	1	Fitting-Straight
8:1	237-65	1	O-Ring
8:2	237-80	1	O-Ring

 ● Not serviced separately

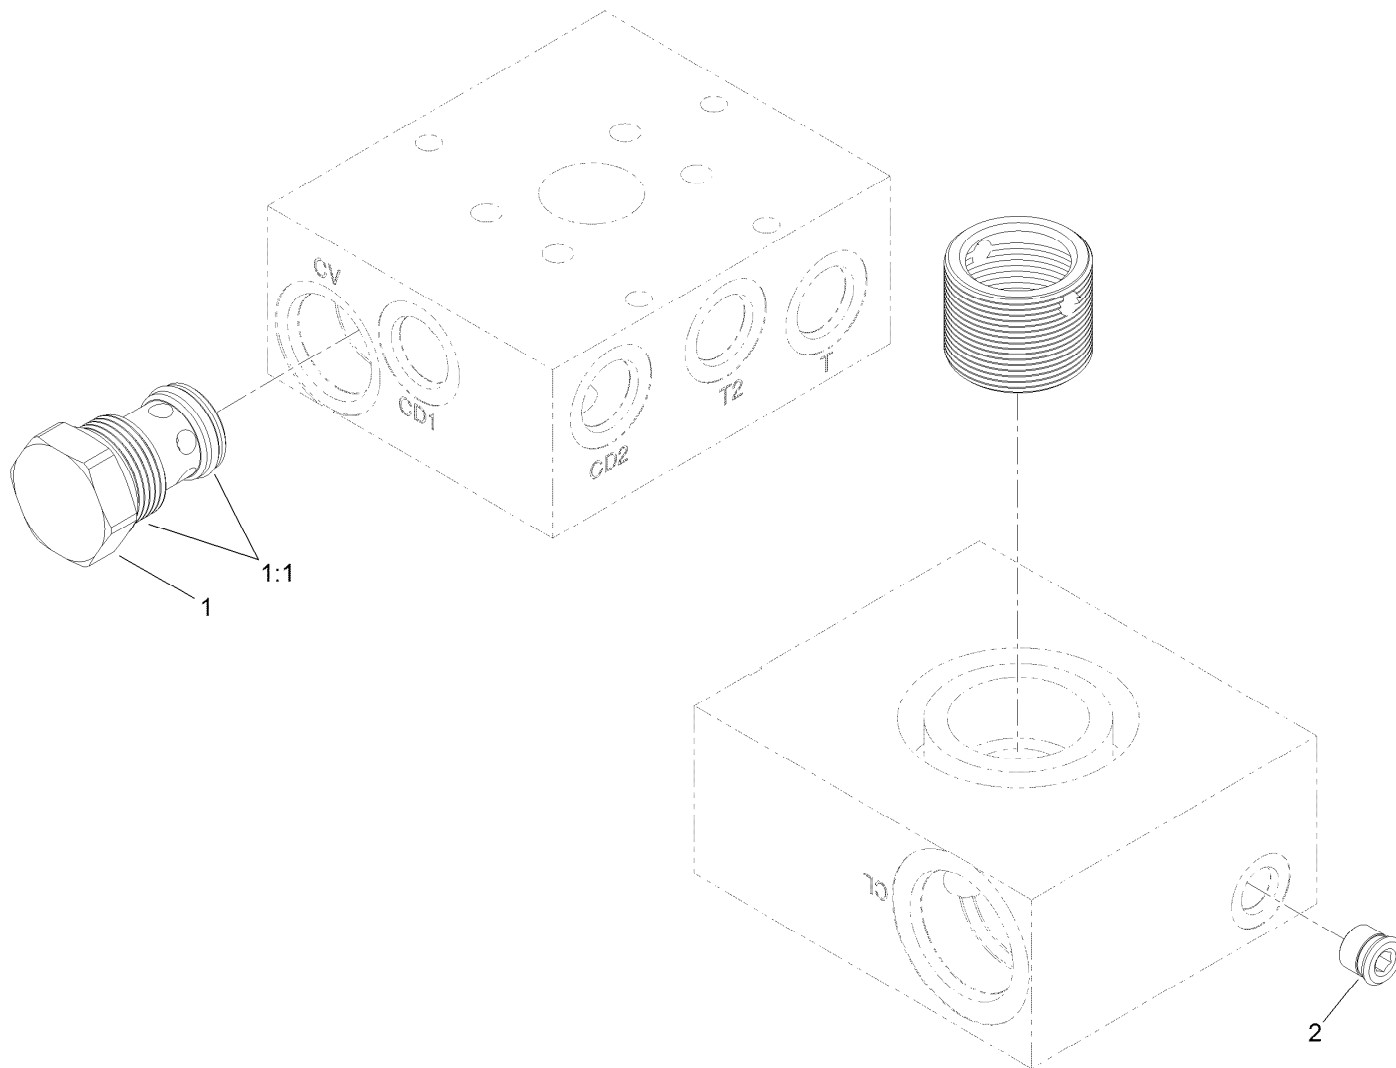

Hydraulic Filter Manifold Assembly No. 119-7703


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	115-5411	1	Valve-Check, 43 PSI
1:1	115-5416	1	Seal Kit
2	106-1026	1	Plug-HYD

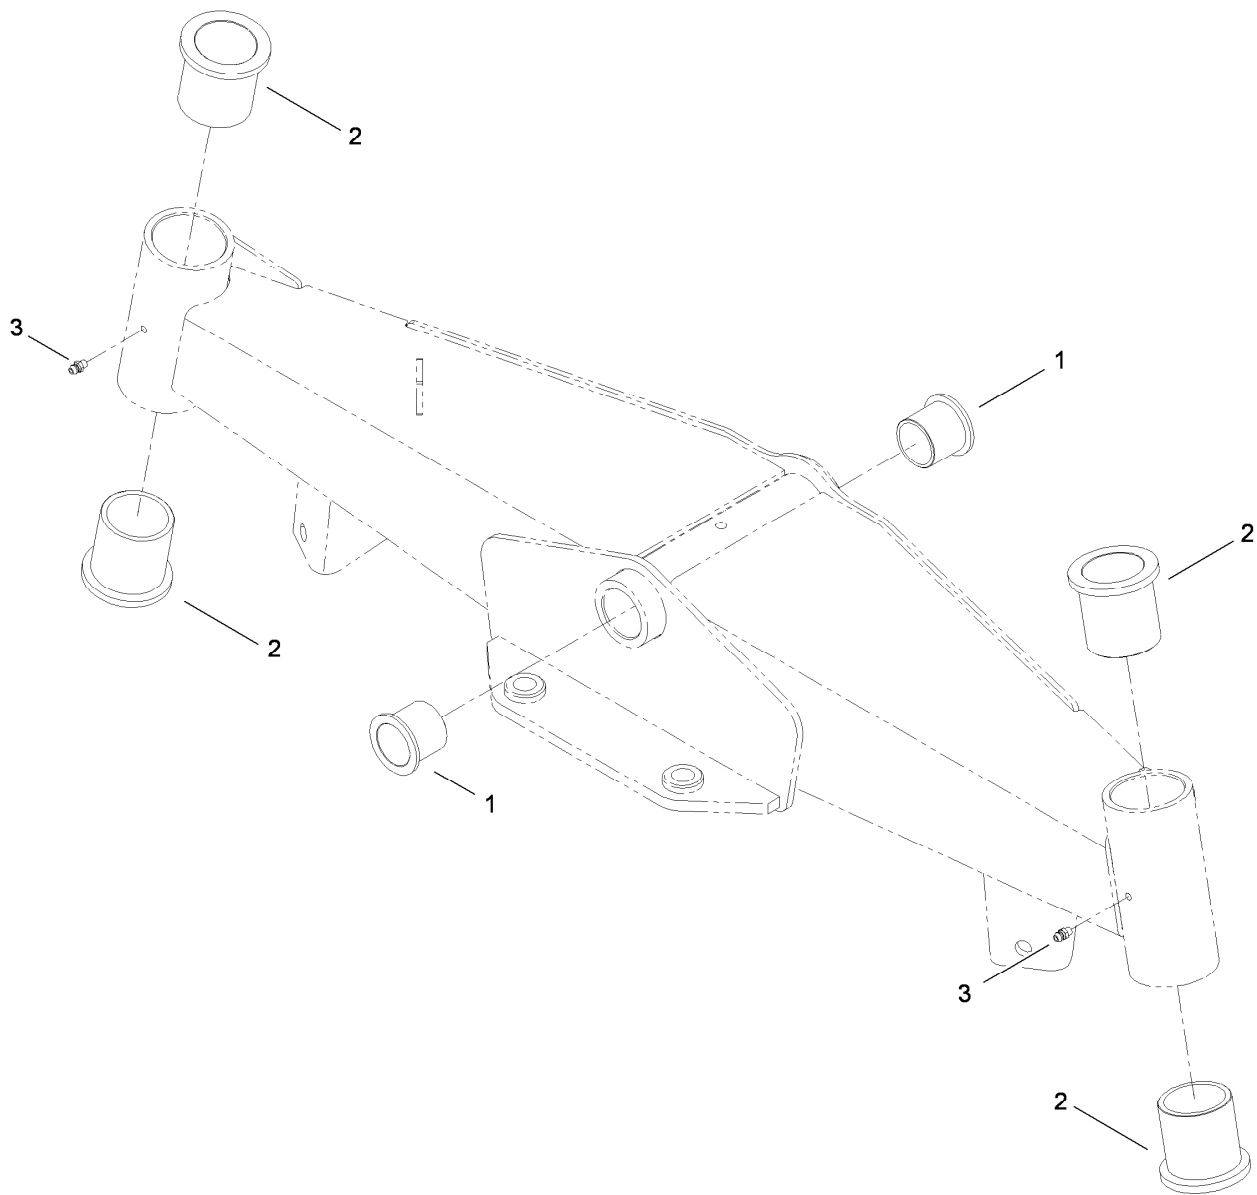 

Axle Assembly No. 114-5982-01

Ref.	Part Number	Qty.	Description
1	69-6470	2	Bushing-Caster
2	100-2506	4	Bushing-Castor
3	302-5	2	Fitting-Grease

 
Rear Axle Assembly

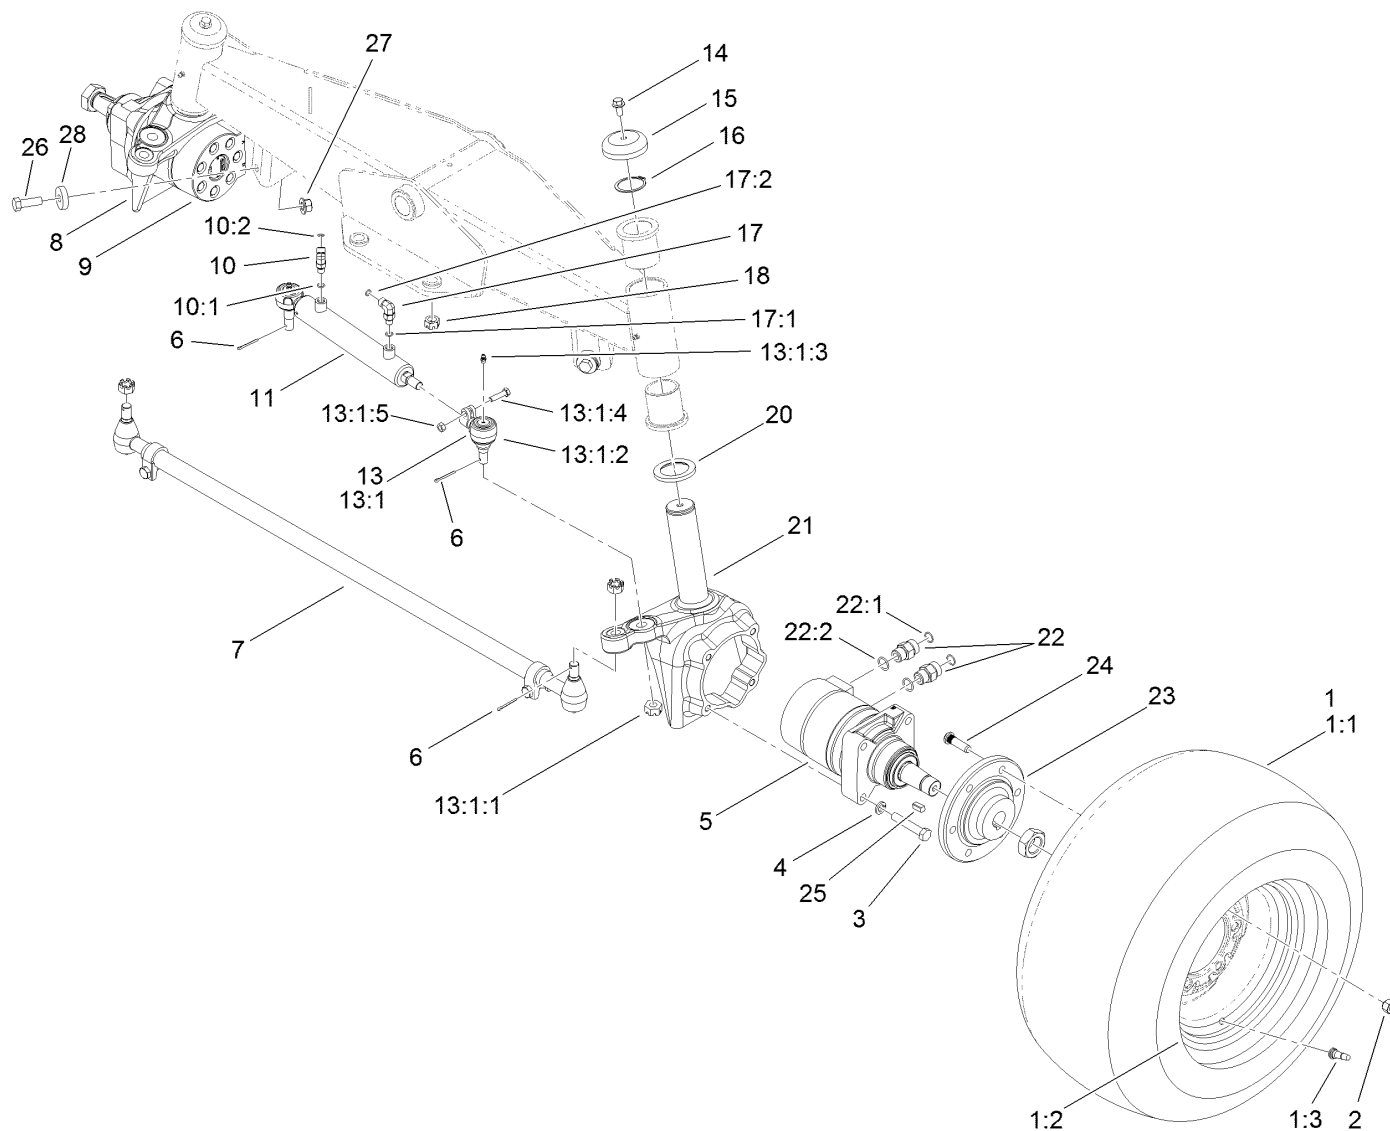

Rear Axle Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	120-9886	2	Wheel And Tire ASM	13:1:4	3210-7	1	Screw-HH
1:1	120-9884	1	Rim-Wheel	13:1:5	32152-5	1	Nut-Hex
1:2	117-2901	1	Tire	14	3234-12	2	Screw-HHF
1:3	5108	1	Valve	15	100-3362	2	Cap-Spindle
2	92-7483	12	Nut-Lug	16	100-4196	2	Ring-Retaining
3	325-11	8	Screw-HH	17	340-132	2	Fitting-Elbow, 90 DEG
4	3253-7	8	Washer-Lock	17:1	237-78	1	O-Ring
5	114-5593	1	HYD Motor ASM	17:2	237-21	1	O-Ring
6	3272-12	6	Pin-Cotter	18	32136-13	2	Nut-SHH
7	110-6049-03	1	Tie Rod ASM	20	100-2508	2	Washer-Thrust
8	110-6015-01	1	Spindle-Steer, RH	21	110-6013-01	1	Spindle-Steer, LH
9	114-5594	1	HYD Motor ASM	22	340-7	4	Fitting-Straight
10	340-103	2	Fitting-HYD, 45 DEG	22:1	237-65	1	O-Ring
10:1	237-78	1	O-Ring	22:2	237-80	1	O-Ring
10:2	237-21	1	O-Ring	23	117-1102-03	2	Hub-7.50 Inch, 6 Bolt
11	98-0661	2	HYD Cylinder ASM	24	10-6830	12	Stud-Type, Drive
13	106-6895-03	2	Ball Joint ASM	25	117-5198	2	Key-Square
13:1		1	Joint-Ball ●	26	325-6	2	Screw-HH
13:1:1	32136-13	1	Nut-SHH	27	99-5107	2	Nut-Lock
13:1:2	106-6896	1	Seal	28	30-8770	2	Washer
13:1:3	302-5	1	Fitting-Grease				

 
● Not serviced separately

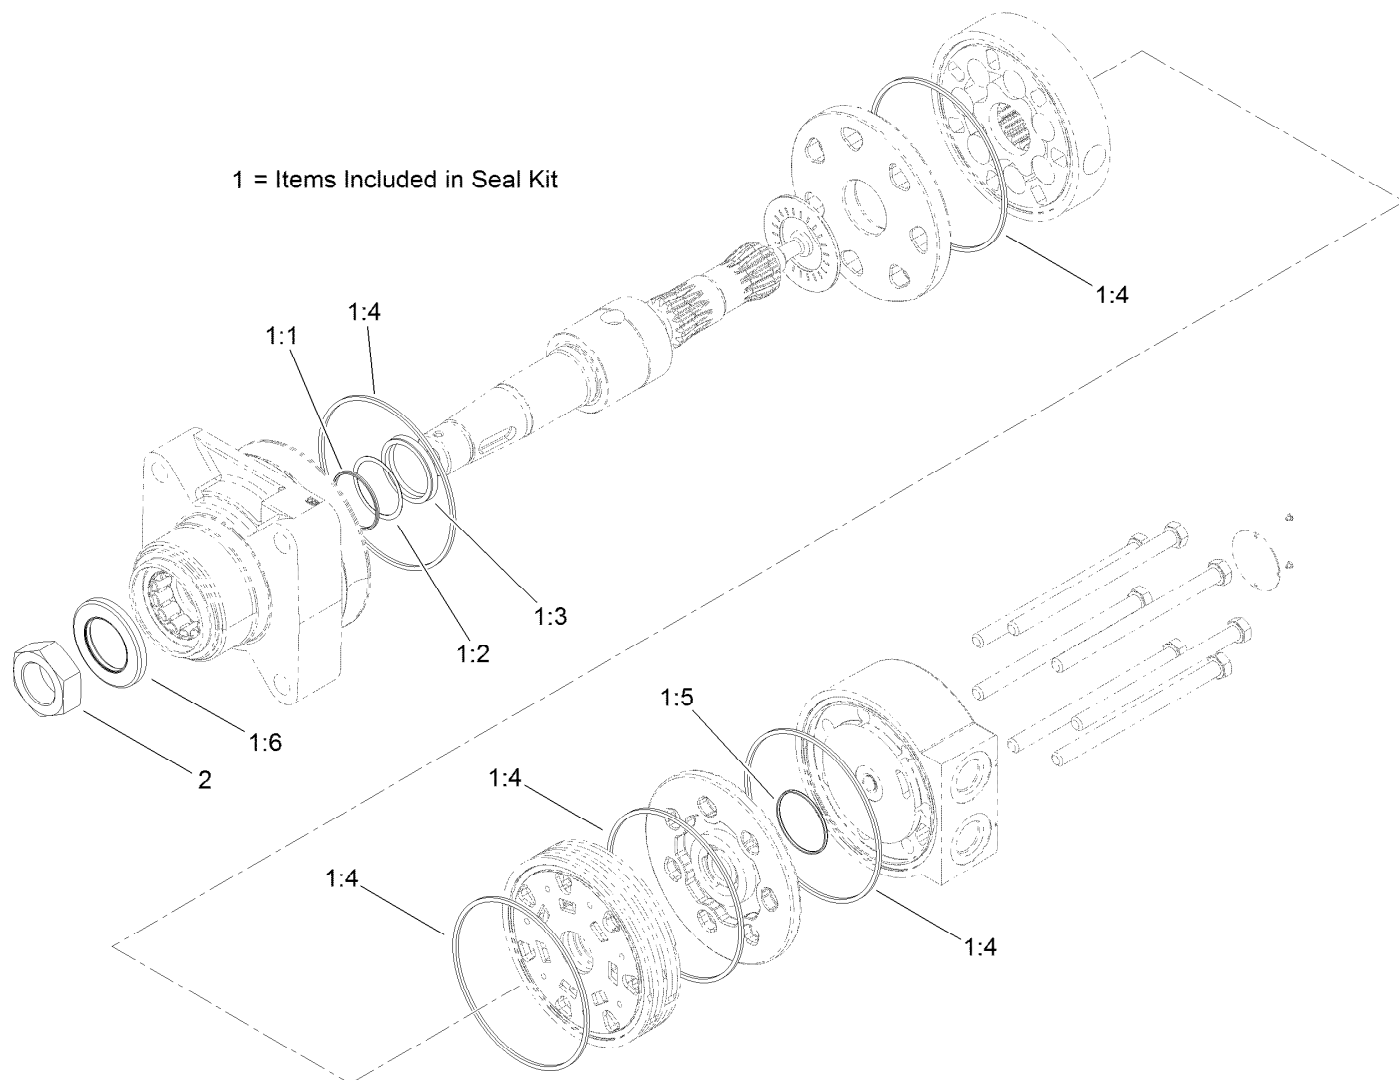

Left Rear Wheel Hydraulic Motor Assembly No. 114-5593

Ref.	Part Number	Qty.	Description
1	100-6131	1	Seal Kit
1:1		1	Ring-Back Up ●
1:2		1	Washer-Back Up ●
1:3		1	Seal-Shaft ●
1:4		5	Seal-Ring ●
1:5		1	Seal-Commutator ●
1:6		1	Seal-Dirt And Water ●
2	107-9319	1	Nut-Hex

 
● Not serviced separately

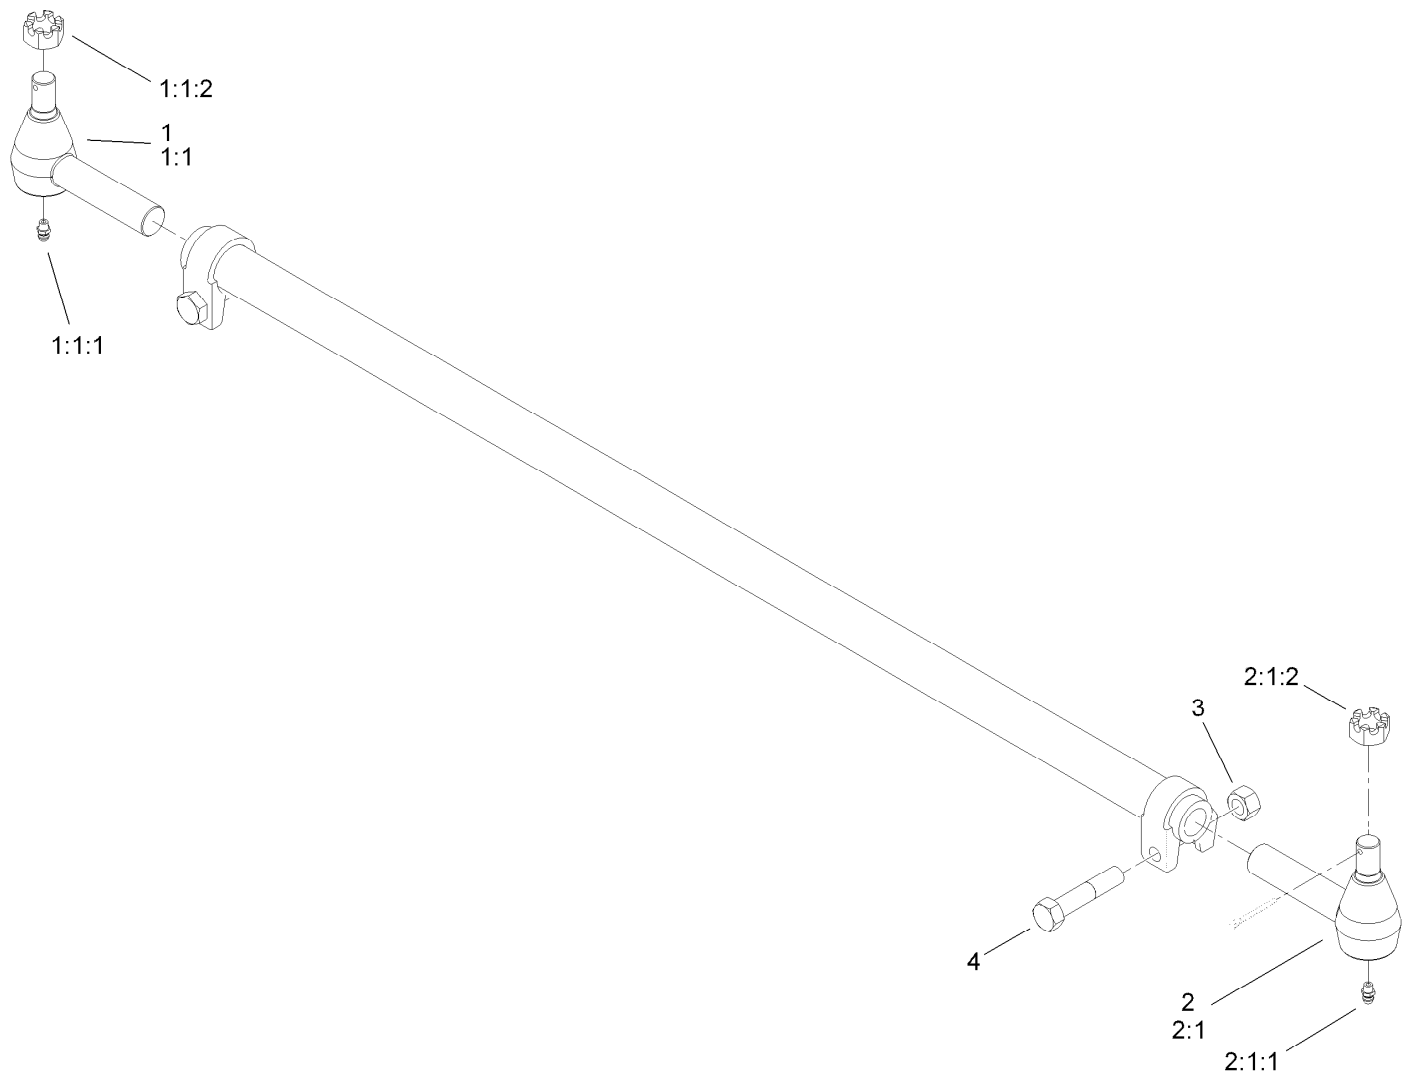

Tie Rod Assembly No. 110-6049-03

Ref.	Part Number	Qty.	Description
1	110-6141-03	1	RH Tie Rod End ASM
1:1		1	Rod End-Tie, RH ●
1:1:1	302-5	1	Fitting-Grease
1:1:2	32136-2	1	Nut-SHH
2	110-6142-03	1	LH Tie Rod End ASM
2:1		1	Rod End-Tie, LH ●
2:1:1	302-5	1	Fitting-Grease
2:1:2	32136-2	1	Nut-SHH
3	44-2200	1	Screw-Blade
4	32153-7	1	Nut-Lock

 
● Not serviced separately

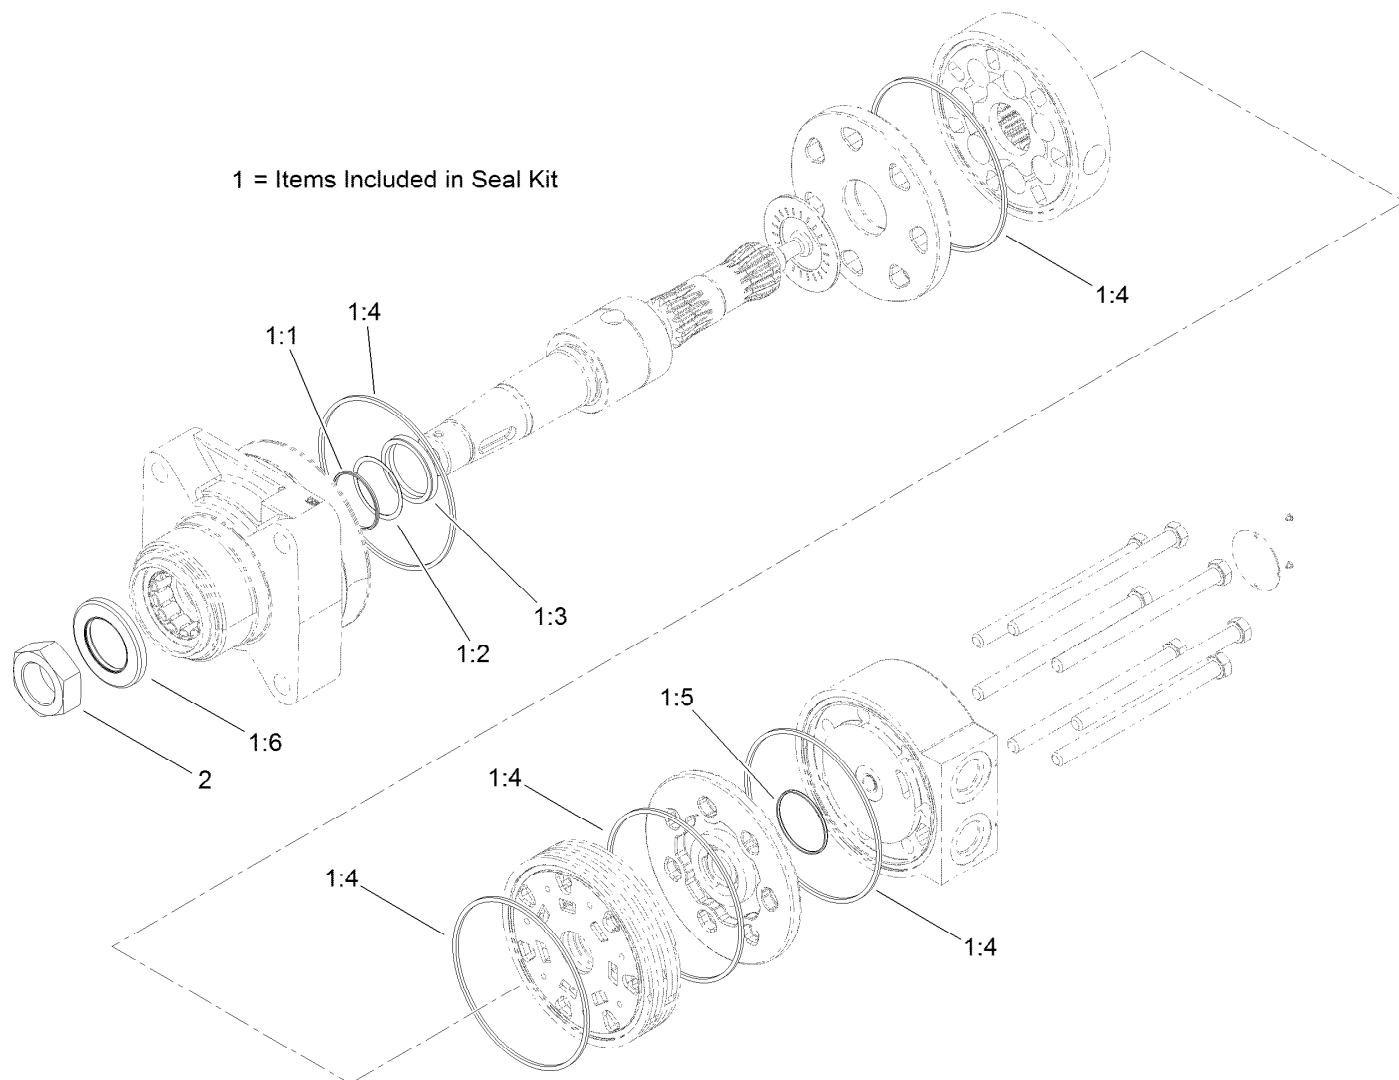

Right Rear Wheel Hydraulic Motor Assembly No. 114-5594

Ref.	Part Number	Qty.	Description
1	100-6131	1	Seal Kit
1:1		1	Ring-Back Up ●
1:2		1	Washer-Back Up ●
1:3		1	Seal-Shaft ●
1:4		5	Seal-Ring ●
1:5		1	Seal-Commutator ●
1:6		1	Seal-Dirt And Water ●
2	107-9319	1	Nut-Hex

 ● Not serviced separately

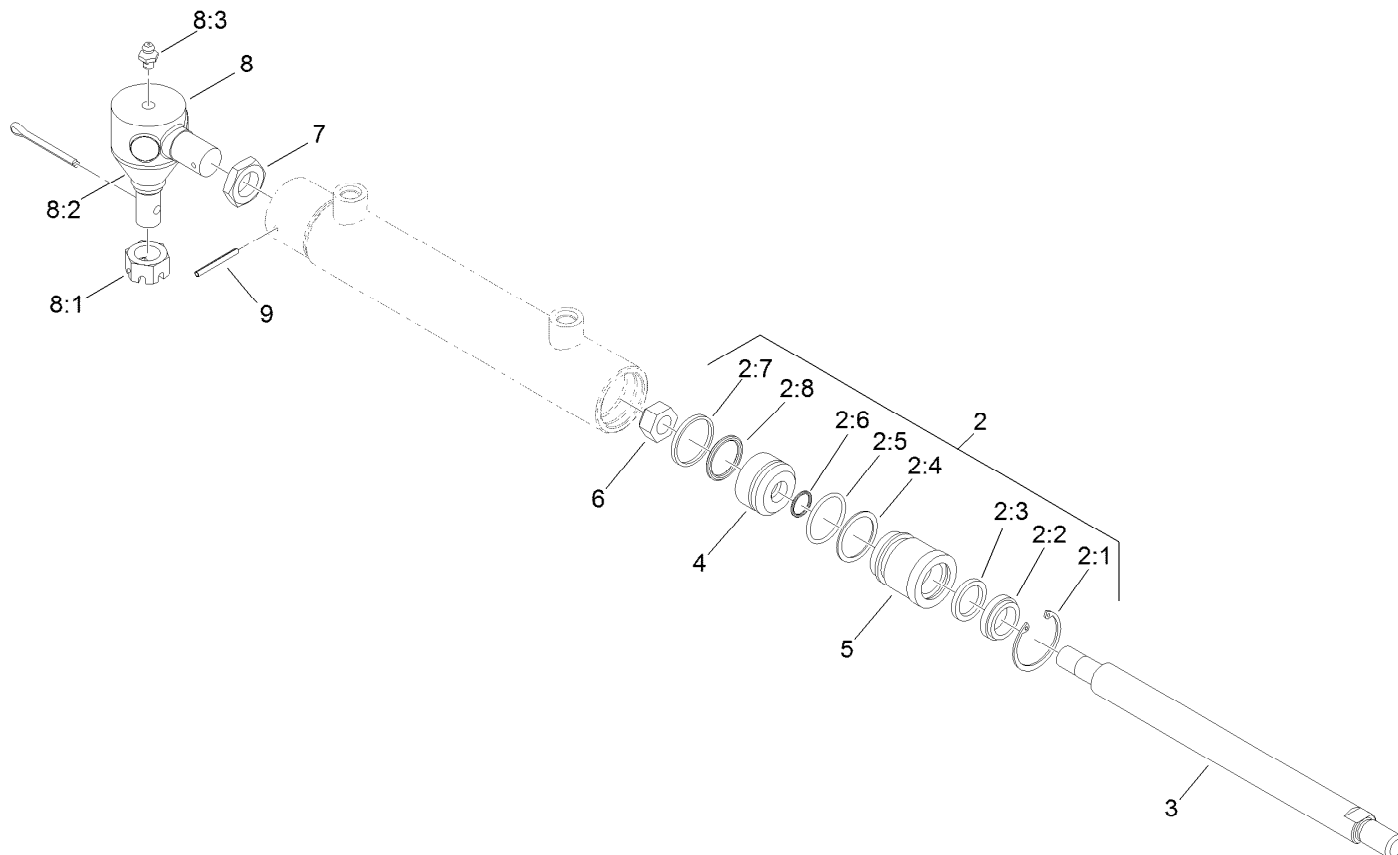


Hydraulic Steering Cylinder Assembly No. 98-0661

Ref.	Part Number	Qty.	Description
2	98-0667	1	Repair Kit
2:1		1	Ring-Retaining ●
2:2		1	Wiper-Rod ●
2:3		1	Seal-U Cup ●
2:4		1	Ring-Back Up ●
2:5		1	O-Ring ●
2:6		1	O-Ring ●
2:7		1	Ring-Piston ●
2:8		1	O-Ring ●
3		1	Rod-Piston ●

Ref.	Part Number	Qty.	Description
4		1	Ring-Head ●
5		1	Piston ●
6		1	Nut-Lock ●
7	69-1980	1	Nut-Jam
8	82-5730	1	Tie Rod End ASM
8:1	105-7941	1	Nut-Hex, Slotted
8:2	105-7835	1	Seal
8:3	302-5	1	Fitting-Grease
9	32121-34	1	Pin-Roll

● Not serviced separately

 
Front Axle and Brake Assembly

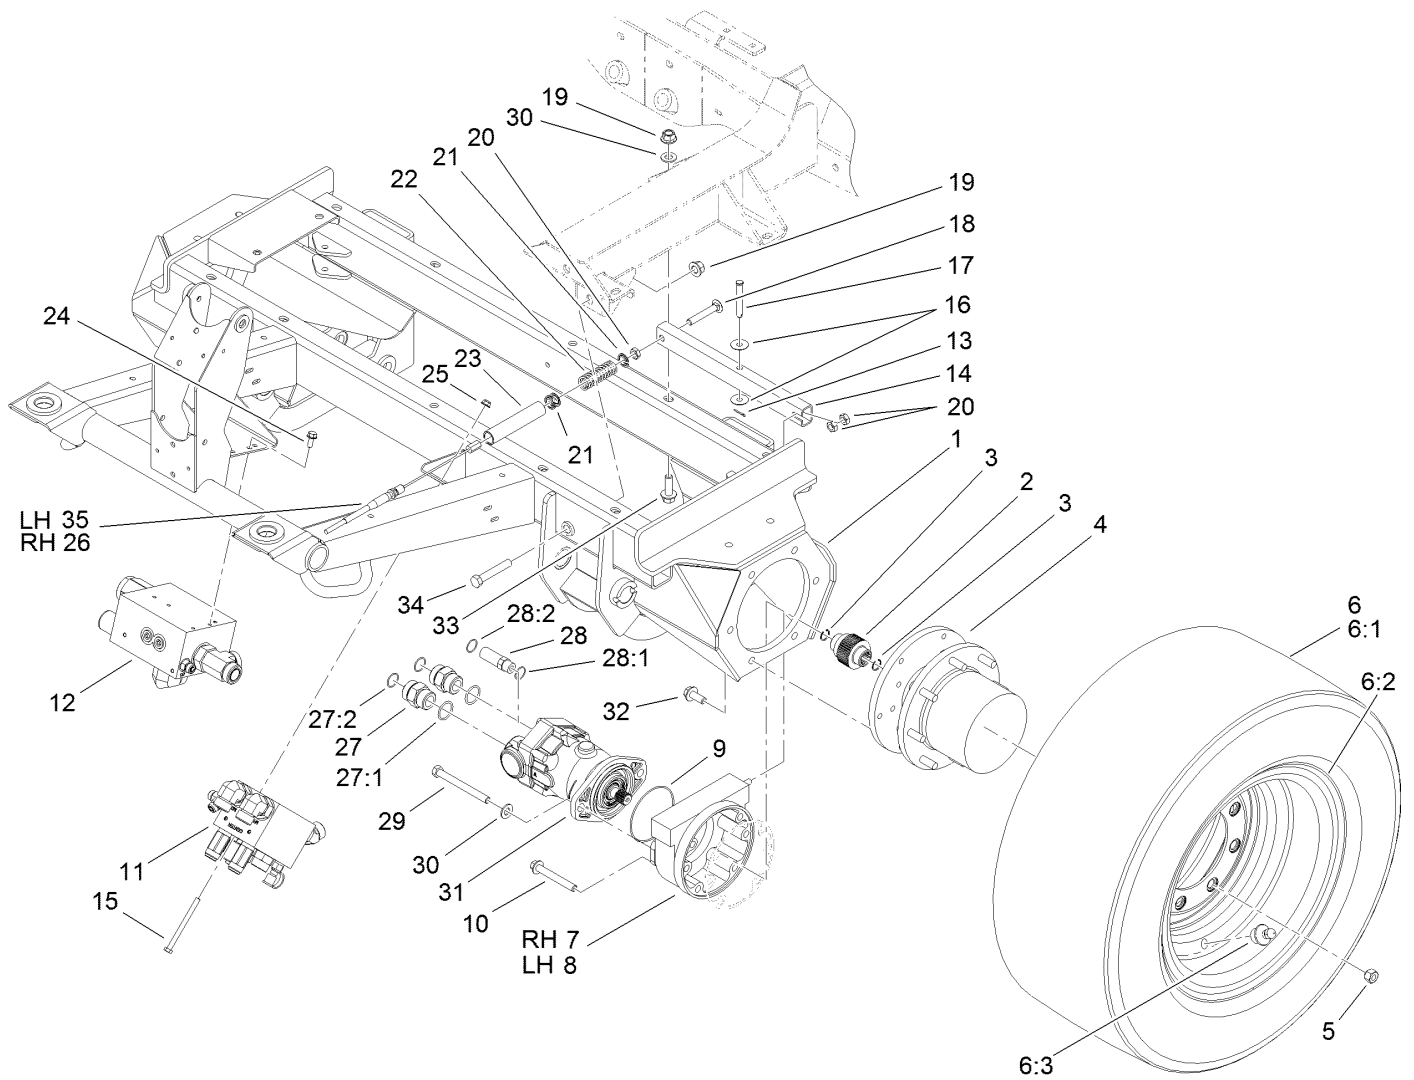

Front Axle and Brake Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	110-5974-01	1	Frame-Axle, Front	19	99-5107	10	Nut-Lock
2	100-3046	2	Shaft-Brake, Splined	20	3218-4	6	Nut-Jam
3	93-7972	4	Ring-Retaining, Internal	21	94-3050	6	Plate-Spring
4	105-4500	2	Planetary ASM	22	94-3088	2	Spring-Compression
5	92-7483	16	Nut-Lug	23	114-0161	2	Spacer-Plain
6	114-4860	2	Wheel And Tire ASM	24	110-5053	4	Screw-HHF
6:1	114-4861	1	Tire	25	104-8300	2	Nut-HF, NI
6:2	114-4862	1	Wheel	26	114-0159	1	Cable-Brake, RH
6:3	232-24	1	Stem-Valve	27	104-3797	4	Fitting-Straight
7	119-8258	1	Brake ASM	27:1	237-146	1	O-Ring
8	119-8259	1	Brake ASM	27:2	340-65	1	O-Ring
9	237-166	2	O-Ring	28	94-2628	2	Fitting-STR
10	33106-090	8	Screw-HHF	28:1	237-79	1	O-Ring
11		1	Front PTO Valve ASM ●	28:2	237-30	1	O-Ring
12		1	Traction Valve ASM ●	29	33116-120	4	Screw-HH
13	3272-6	2	Pin-Cotter	30	3256-26	12	Washer-Flat
14	114-0160-03	2	Lever-Brake	31	114-4849	2	Piston Motor ASM
15	322-19	2	Screw-HH	32	33106-030	12	Screw-HHF
16	105-6814	4	Washer-Plain	33	100-6116	8	Screw-HHF
17	283-52	2	Pin-Clevis	34	325-12	2	Screw-HH
18	3232-17	2	Screw-CARR	35	114-0158	1	Cable-Brake, LH

 ● Not serviced separately

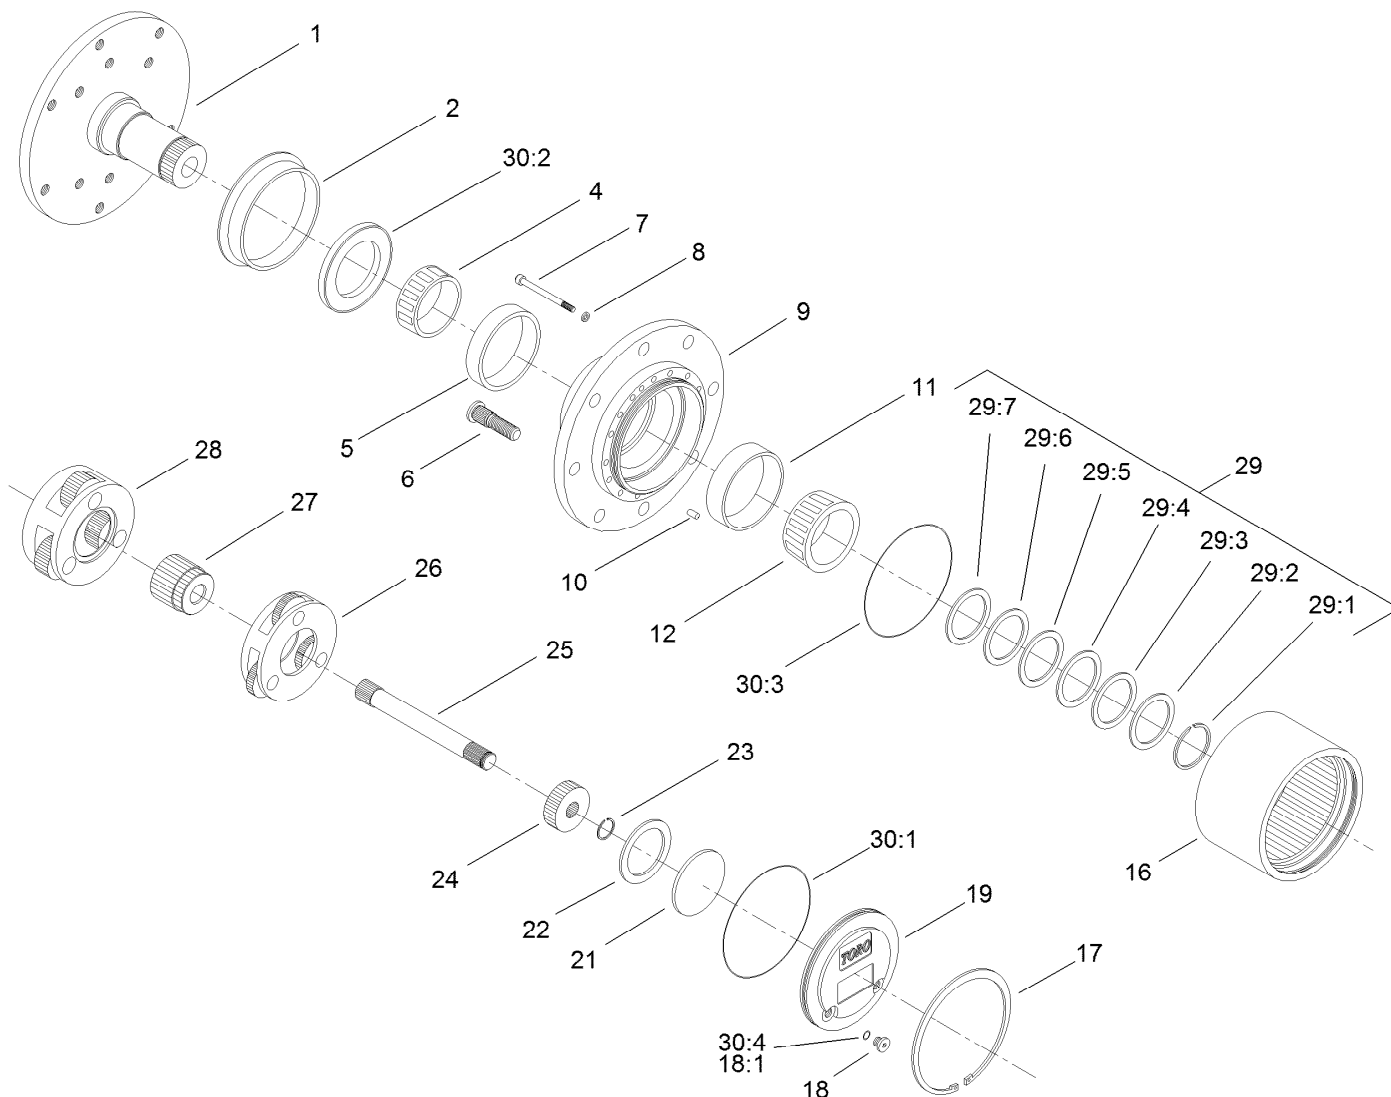


Planetary Assembly No. 105-4500-03

Ref.	Part Number	Qty.	Description
1		1	Spindle ■
2	105-8122	1	Seal-Boot
4	105-8120	1	Bearing-Cone
5	105-8119	1	Bearing-Cup
6	105-8124	8	Stud-Wheel
7	105-8125	16	Bolt-Head, Socket
8	3253-18	16	Washer-Lock
9		1	Housing ■
10	105-8121	1	Pin-Dowel
11	105-8117	1	Bearing-Cup
12	105-8118	1	Bearing-Cone
16	105-8113	1	Gear-Ring
17	105-8132	1	Ring-Retaining
18	353-990	2	Plug ASM
18:1	237-78	1	O-Ring
19	105-8138	1	Cap-End
21	105-8133	1	Plug-Thrust
22	105-8123	1	Washer-Thrust
23	105-8131	1	Ring-Retaining

Ref.	Part Number	Qty.	Description
24	105-8114	1	Gear-Primary
25	105-8115	1	Shaft-Drive
26	105-8129	1	Carrier-Primary
27	105-8139	1	Gear-Secondary
28	105-8130	1	Carrier-Secondary
29	105-8136	1	Shim Kit
29:1		1	Ring-Snap ■
29:2		1	Shim-Bearing, 2.9Mm ■
29:3		1	Shim-Bearing, 2.8Mm ■
29:4		1	Shim-Bearing, 2.7Mm ■
29:5		1	Shim-Bearing, 2.6Mm ■
29:6		1	Shim-Bearing, 2.5Mm ■
29:7		1	Shim-Bearing, 2.4Mm ■
30	105-8137	1	Seal Kit ●
30:1		1	O Ring-Flange Cap ■
30:2		1	Seal-Oil ■
30:3		2	O Ring-End Cap ■
30:4	237-78	2	O-Ring


● Not illustrated

 ■ Not serviced separately

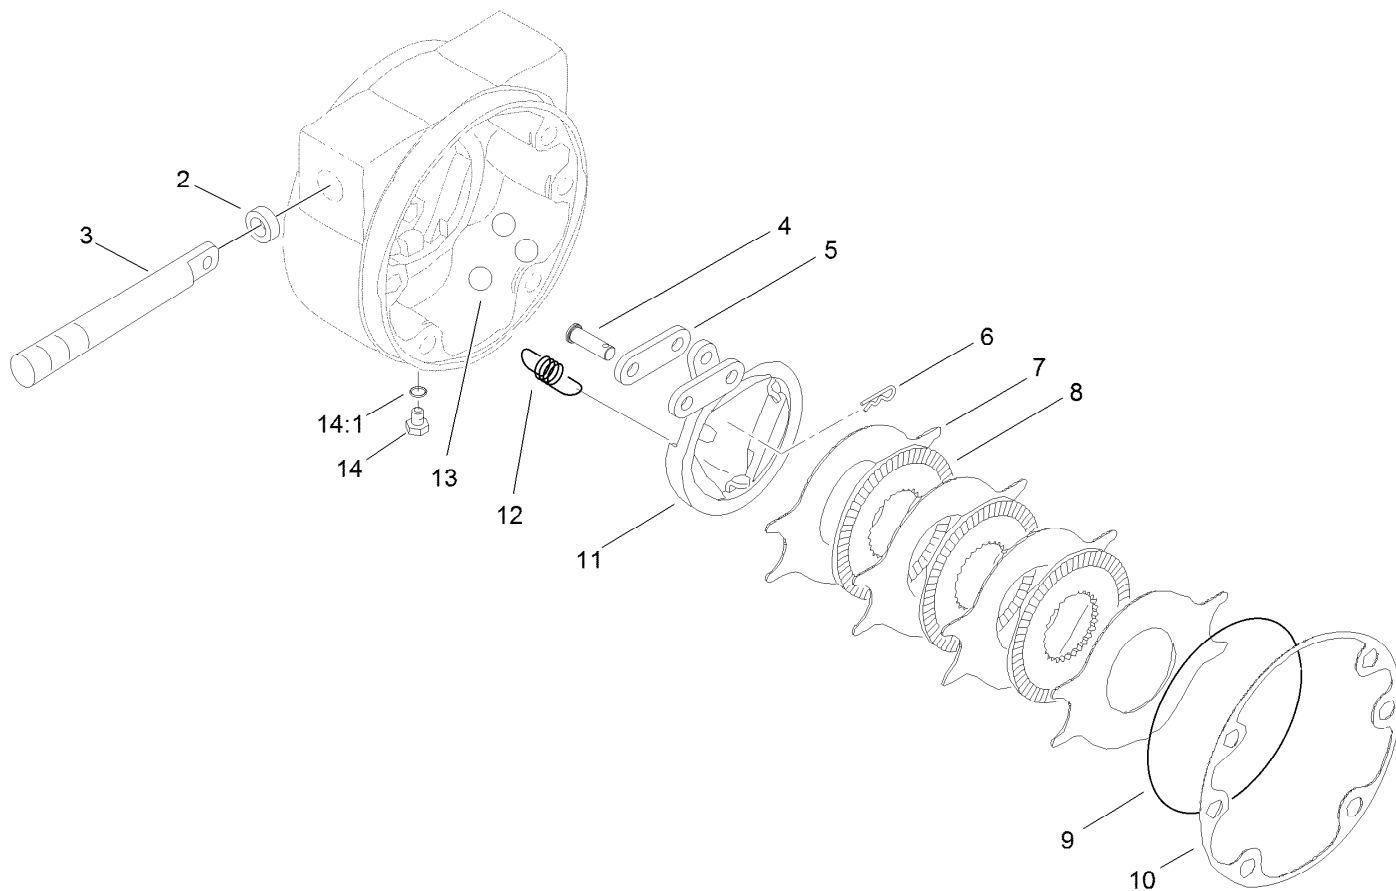


Brake Assembly No. 119-8258

Ref.	Part Number	Qty.	Description
2	93-7977	1	Seal
3	93-7978	1	Rod-Pull
4	93-7983	2	Pin-Clevis
5	93-7980	2	Link
6	93-7979	2	Pin-Hitch
7	93-7986	4	Disc-Stationary
8	119-8257	3	Disc-Rotating, Metallic
9	93-7976	1	Ring-Retaining
10	93-7984	1	Gasket
11	104-4280	1	Actuator-Rotating
12	93-7987	3	Spring-Extension
13	93-7985	3	Ball
14	353-990	2	Plug ASM
14:1	237-78	1	O-Ring

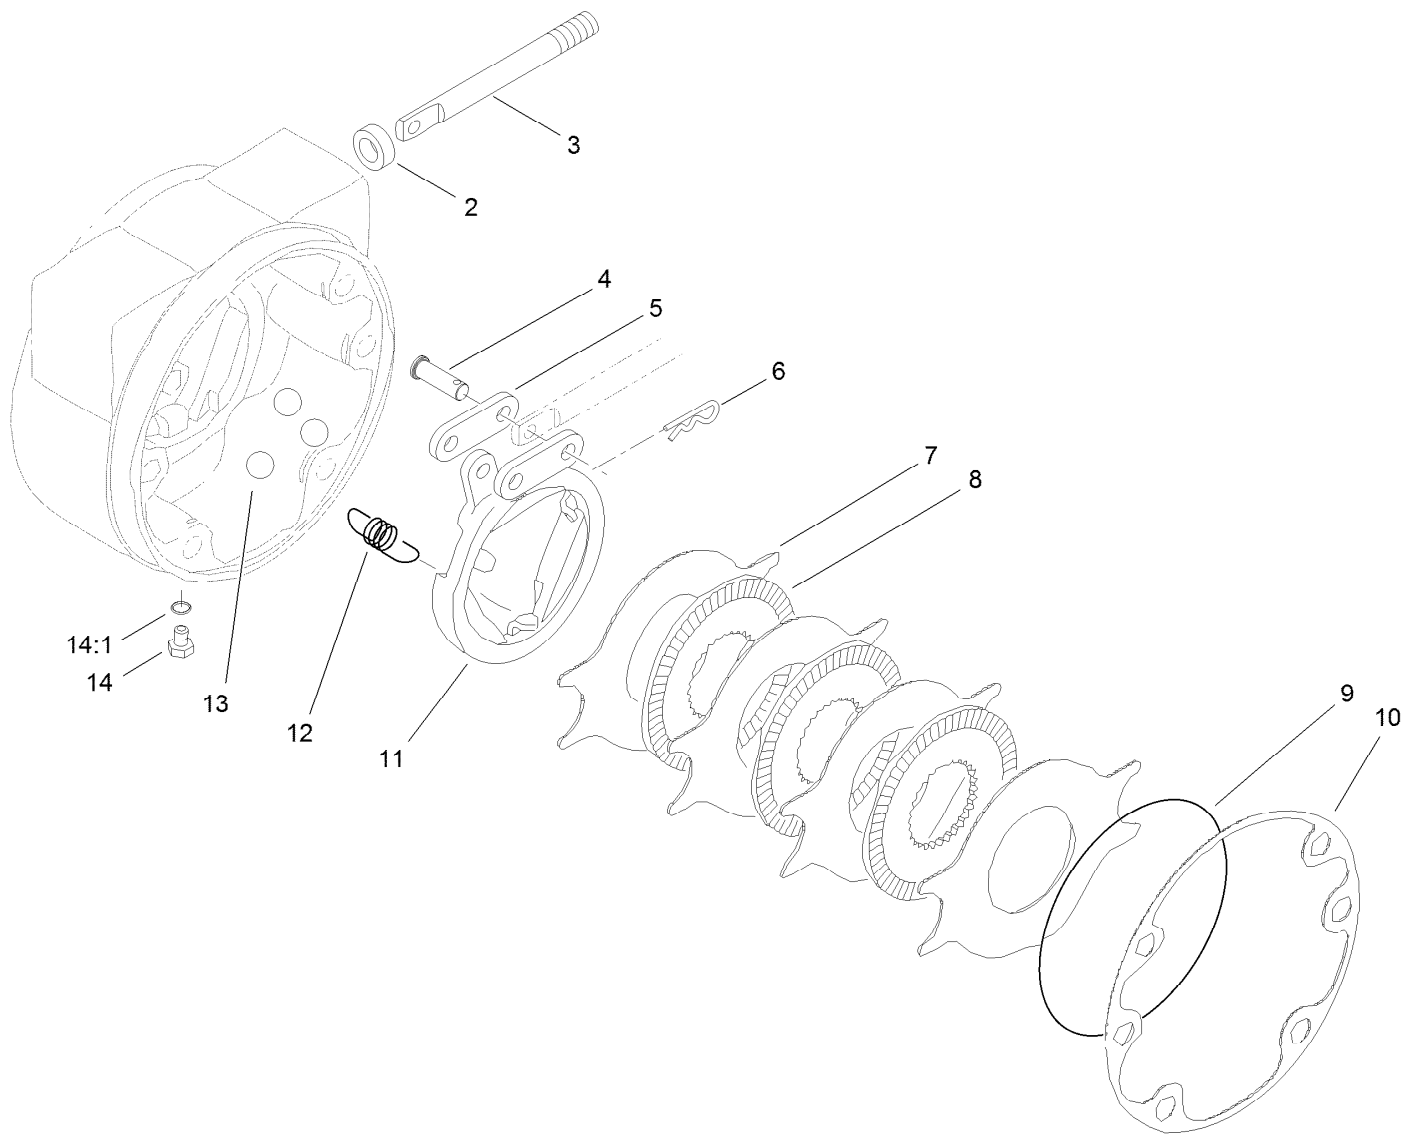 

Brake Assembly No. 119-8259


Ref.	Part Number	Qty.	Description
2	93-7977	1	Seal
3	93-7978	1	Rod-Pull
4	93-7983	2	Pin-Clevis
5	93-7980	2	Link
6	93-7979	2	Pin-Hitch
7	93-7986	4	Disc-Stationary
8	119-8257	3	Disc-Rotating, Metallic
9	93-7976	1	Ring-Retaining
10	93-7984	1	Gasket
11	104-4279	1	Actuator-Rotating
12	93-7987	3	Spring-Extension
13	93-7985	3	Ball
14	353-990	2	Plug ASM
14:1	237-78	1	O-Ring

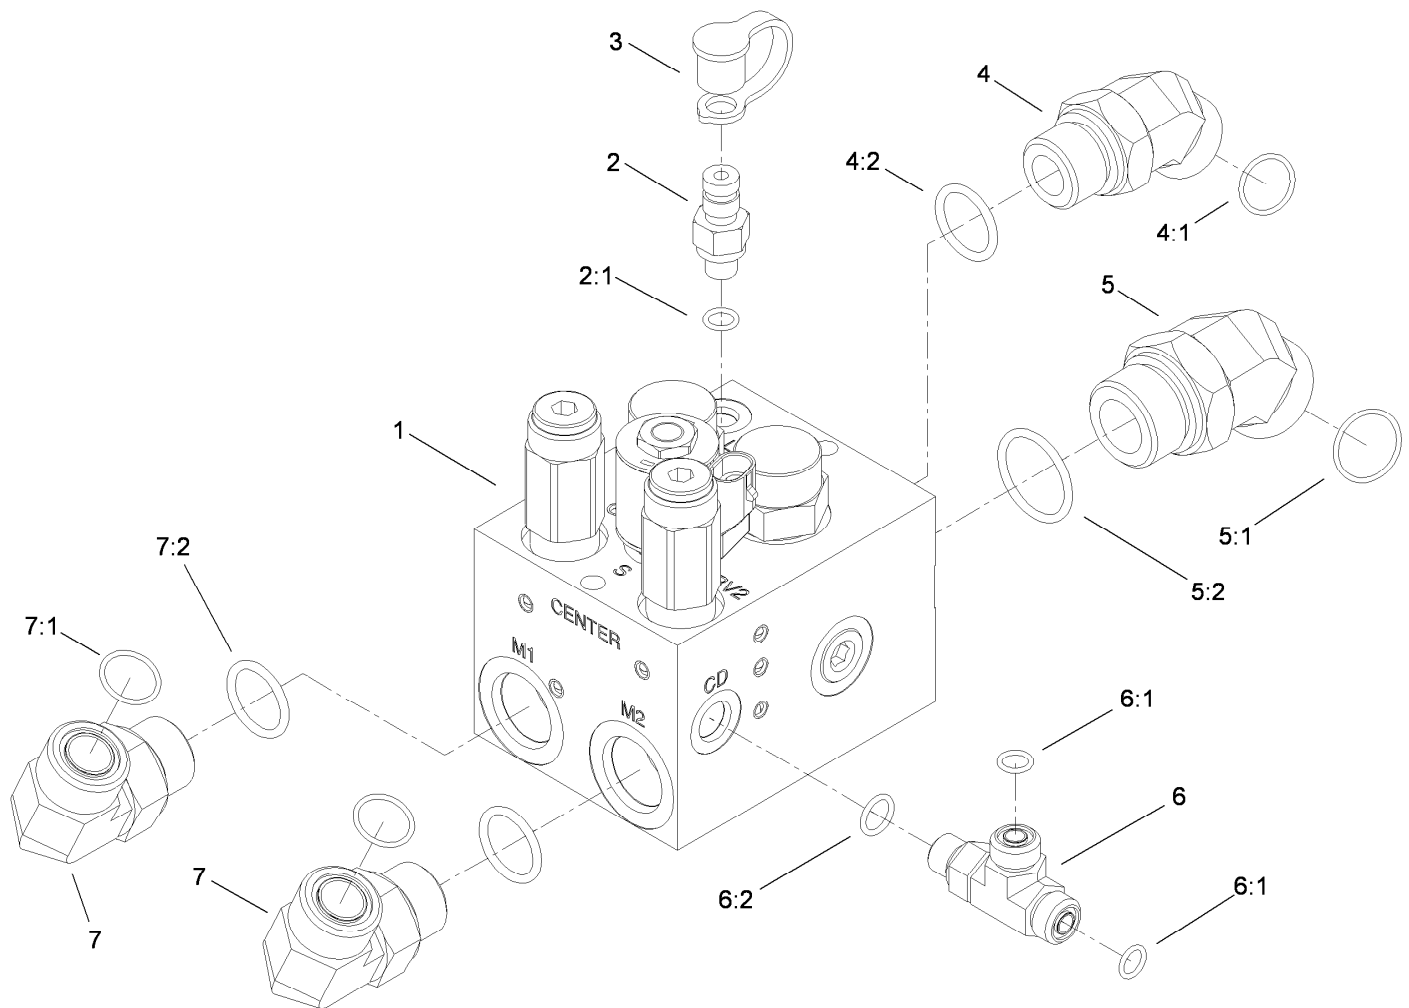 

Front PTO Valve Assembly


Ref.	Part Number	Qty.	Description
1	117-1110	1	Manifold-PTO, Front
2	354-77	1	Fitting-Quick
2:1	237-78	1	O-Ring
3	354-79	1	Cap-Dust
4	100-5530	1	Fitting-45 DEG
4:1	237-58	1	O-Ring
4:2	237-81	1	O-Ring
5	104-3509	1	Fitting-HYD, 45 DEG

Ref.	Part Number	Qty.	Description
5:1	237-146	1	O-Ring
5:2	340-65	1	O-Ring
6	340-86	1	Fitting-Tee
6:1	237-22	2	O-Ring
6:2	237-42	1	O-Ring
7	340-142	2	Fitting-Elbow, 90 DEG
7:1	237-58	1	O-Ring
7:2	237-81	1	O-Ring

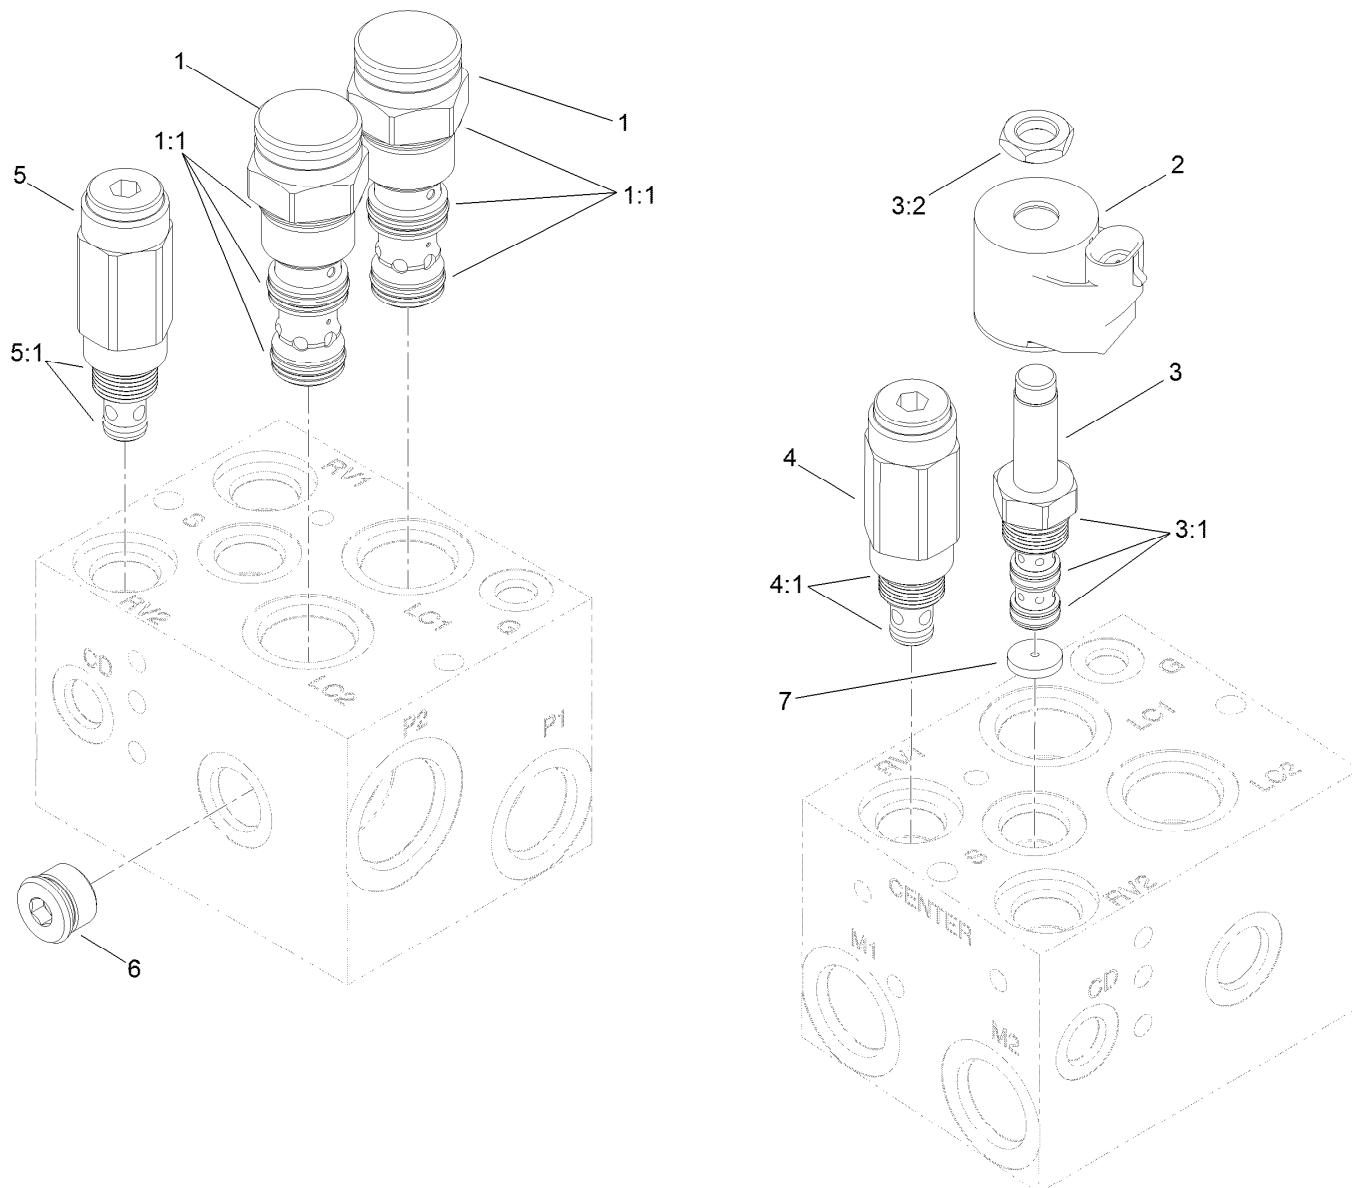 

Hydraulic PTO Manifold Assembly No. 117-1110


Ref.	Part Number	Qty.	Description
1	114-5511	2	Cartridge-Logic
1:1	119-8048	1	Seal Kit
2	105-9333	1	Coil-12Vdc
3	110-0494	1	Valve-Solenoid
3:1	110-8773	1	Seal Kit
3:2	110-2634	1	Nut-Coil
4	114-5510	1	Valve-Relief, 3000 PSI
4:1	105-9156	1	Seal Kit
5	114-5512	1	Valve-Relief, 600 PSI
5:1	105-9156	1	Seal Kit
6	106-1027	1	Plug
7	117-2791	1	Disc-Orifice (.050)

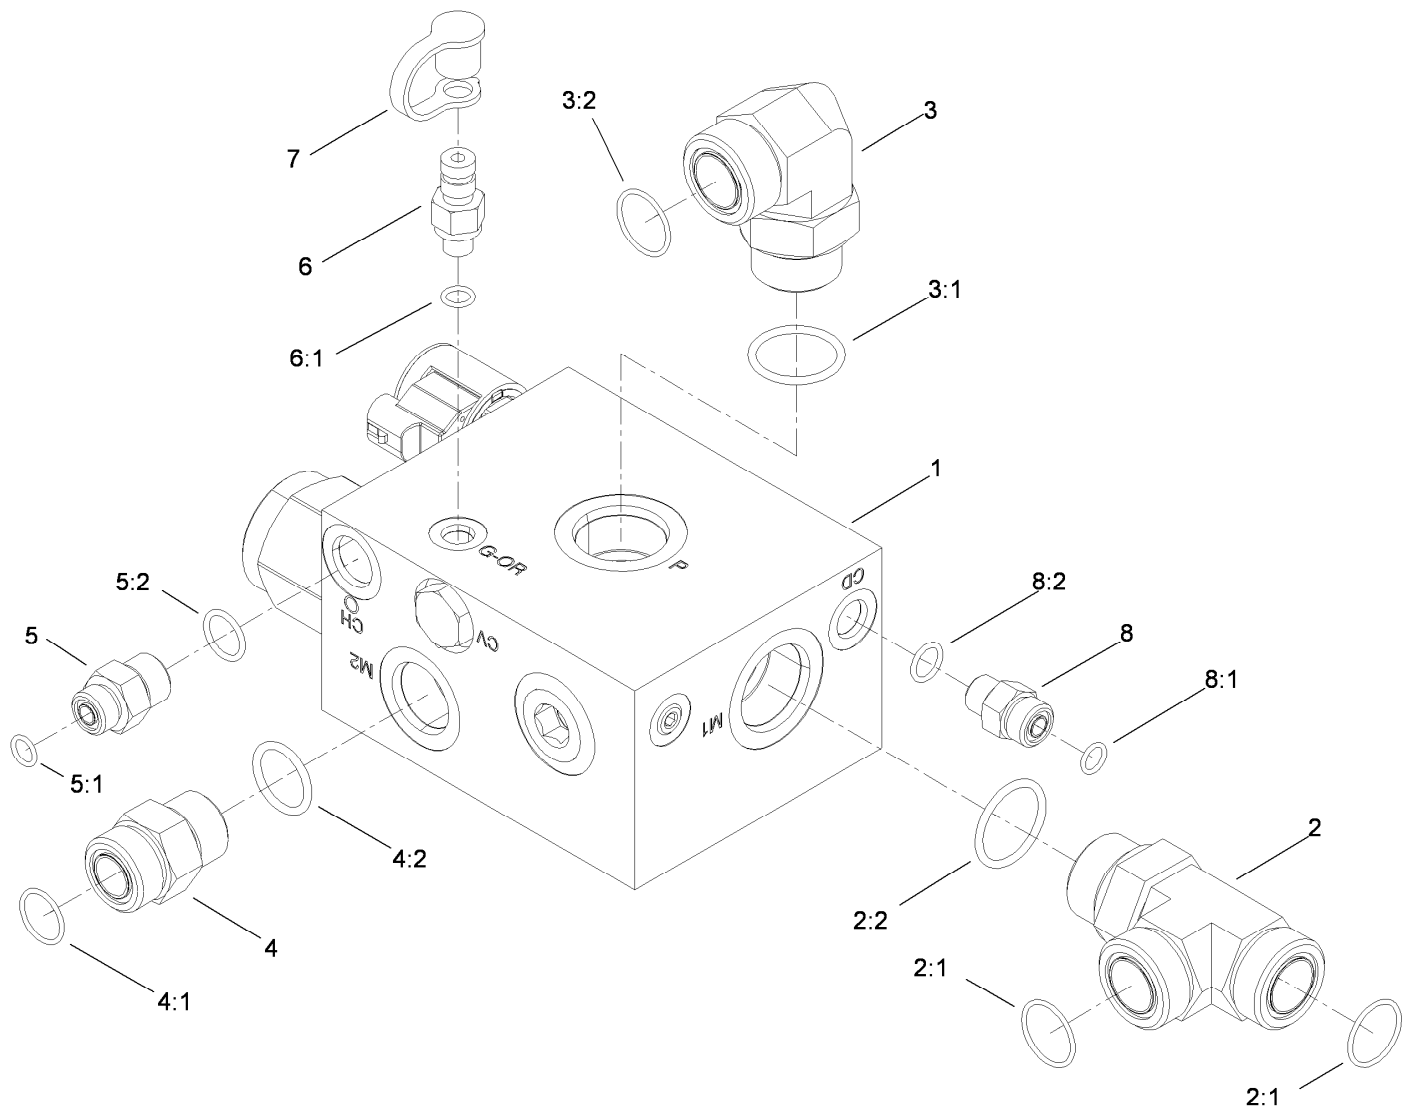 

Traction Valve Assembly


Ref.	Part Number	Qty.	Description
1	110-6062	1	Manifold-Traction
2	104-3795	1	Fitting-Tee
2:1	340-65	2	O-Ring
2:2	237-146	1	O-Ring
3	340-129	1	Fitting-Elbow, 90 DEG
3:1	237-146	1	O-Ring
3:2	340-65	1	O-Ring
4	340-9	1	Fitting-STR
4:1	237-58	1	O-Ring
4:2	237-81	1	O-Ring

Ref.	Part Number	Qty.	Description
5	340-3	1	Fitting-Straight
5:1	237-22	1	O-Ring
5:2	237-79	1	O-Ring
6	354-77	1	Fitting-Quick
6:1	237-78	1	O-Ring
7	354-79	1	Cap-Dust
8	340-2	1	Fitting-Straight
8:1	237-22	1	O-Ring
8:2	237-42	1	O-Ring

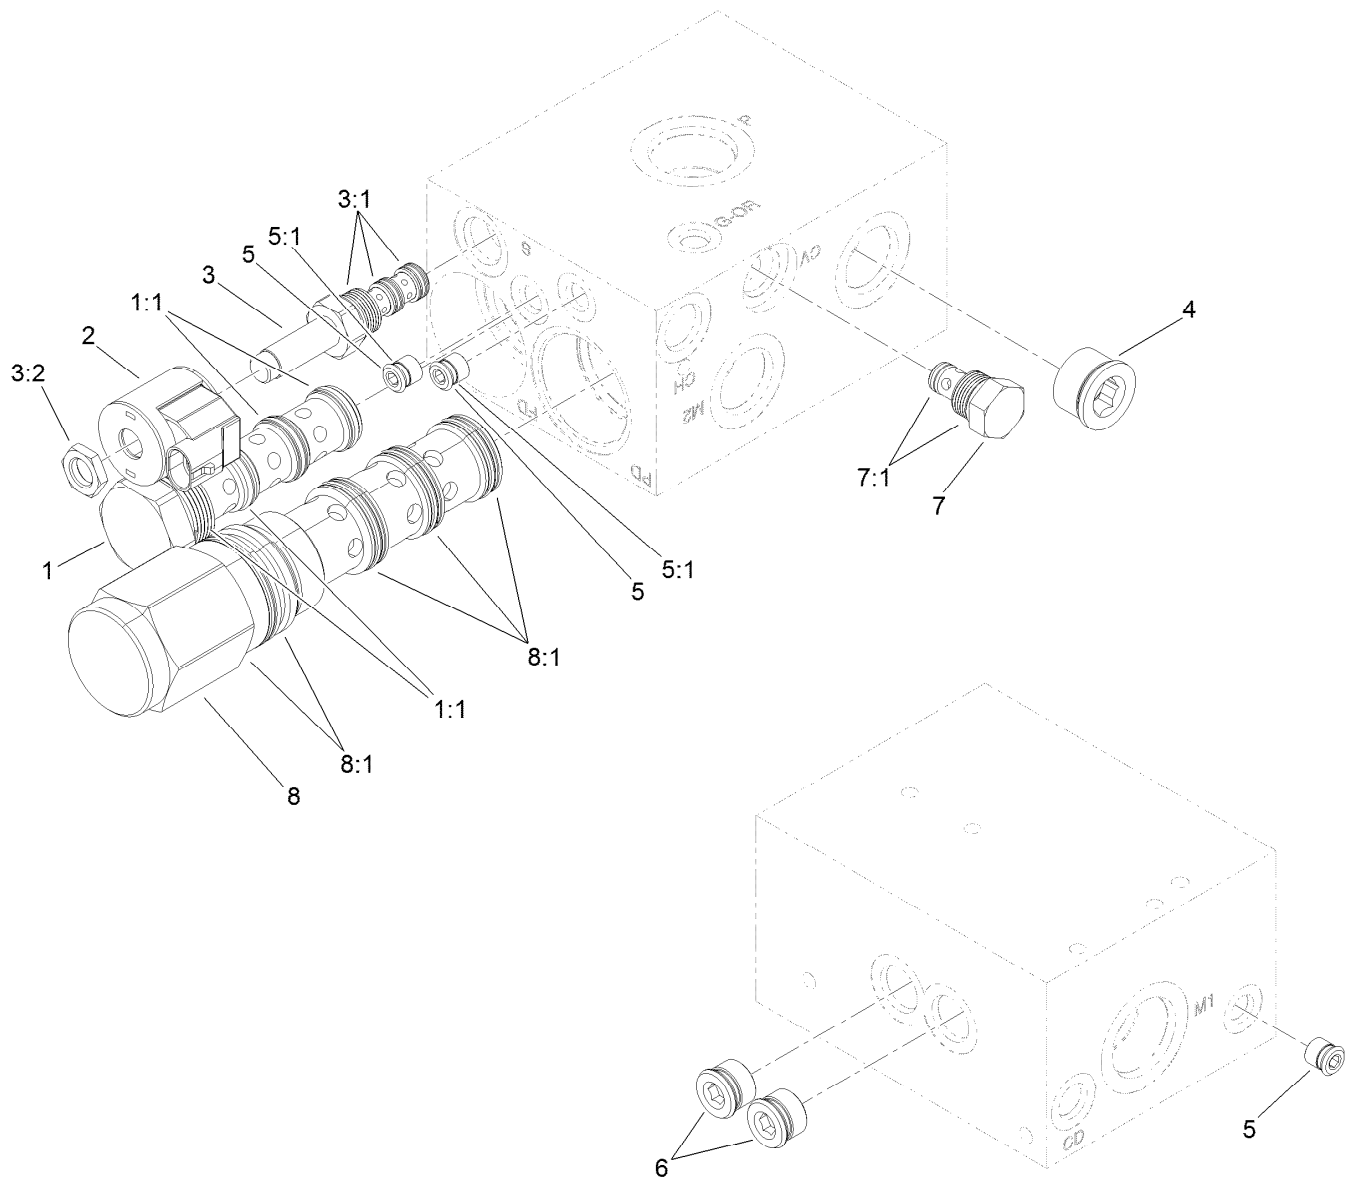 

Hydraulic Traction Manifold Assembly No. 110-6062

Ref.	Part Number	Qty.	Description
1	115-5407	1	Divider-Flow, 50/50 Split
1:1	115-5414	1	Seal Kit
2	105-9333	1	Coil-12Vdc
3	110-0494	1	Valve-Solenoid
3:1	110-8773	1	Seal Kit
3:2	110-2634	1	Nut-Coil
4	106-1029	1	Plug-Leak, Zero
5	353-990	3	Plug ASM
5:1	237-78	1	O-Ring
6	106-1027	2	Plug
7	105-9321	1	Check Valve ASM
7:1	105-9156	1	Seal Kit
8	115-5408	1	Valve-Directional, Pilot
8:1	115-5415	1	Seal Kit

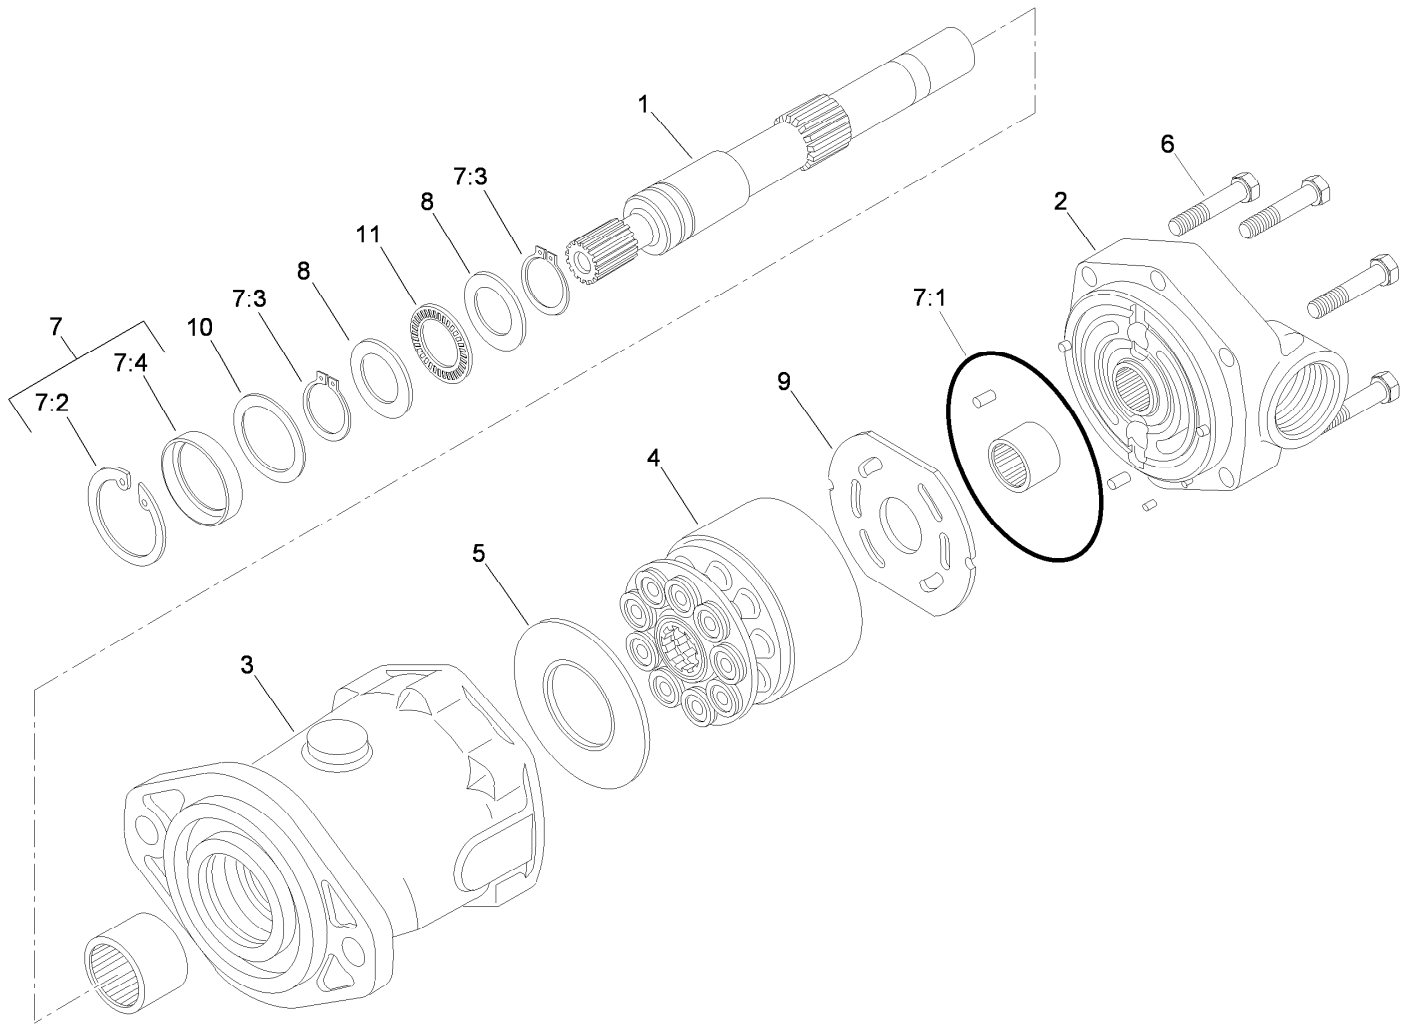 


Hydraulic Motor Assembly No. 114-4849

Ref.	Part Number	Qty.	Description
1	94-3004	1	Shaft-Drive, Splined
2		1	Backplate ASM ●
3		1	Housing ASM ●
4	76-6910	1	Rotating Kit
5	76-6970	1	Insert-Plate, Cam
6	94-3002	6	Screw-Cap
7	106-6876	1	Seal Kit
7:1		1	O-Ring ●
7:2	76-7010	1	Ring-Retaining
7:3	76-7000	2	Ring-Retaining
7:4		1	Seal-Shaft ●
8	76-6950	2	Race-Thrust
9	94-3003	1	Plate-Valve
10	60-6240	1	Washer
11	76-6960	1	Bearing-Thrust

● Not serviced separately

 Seat and Platform Assembly

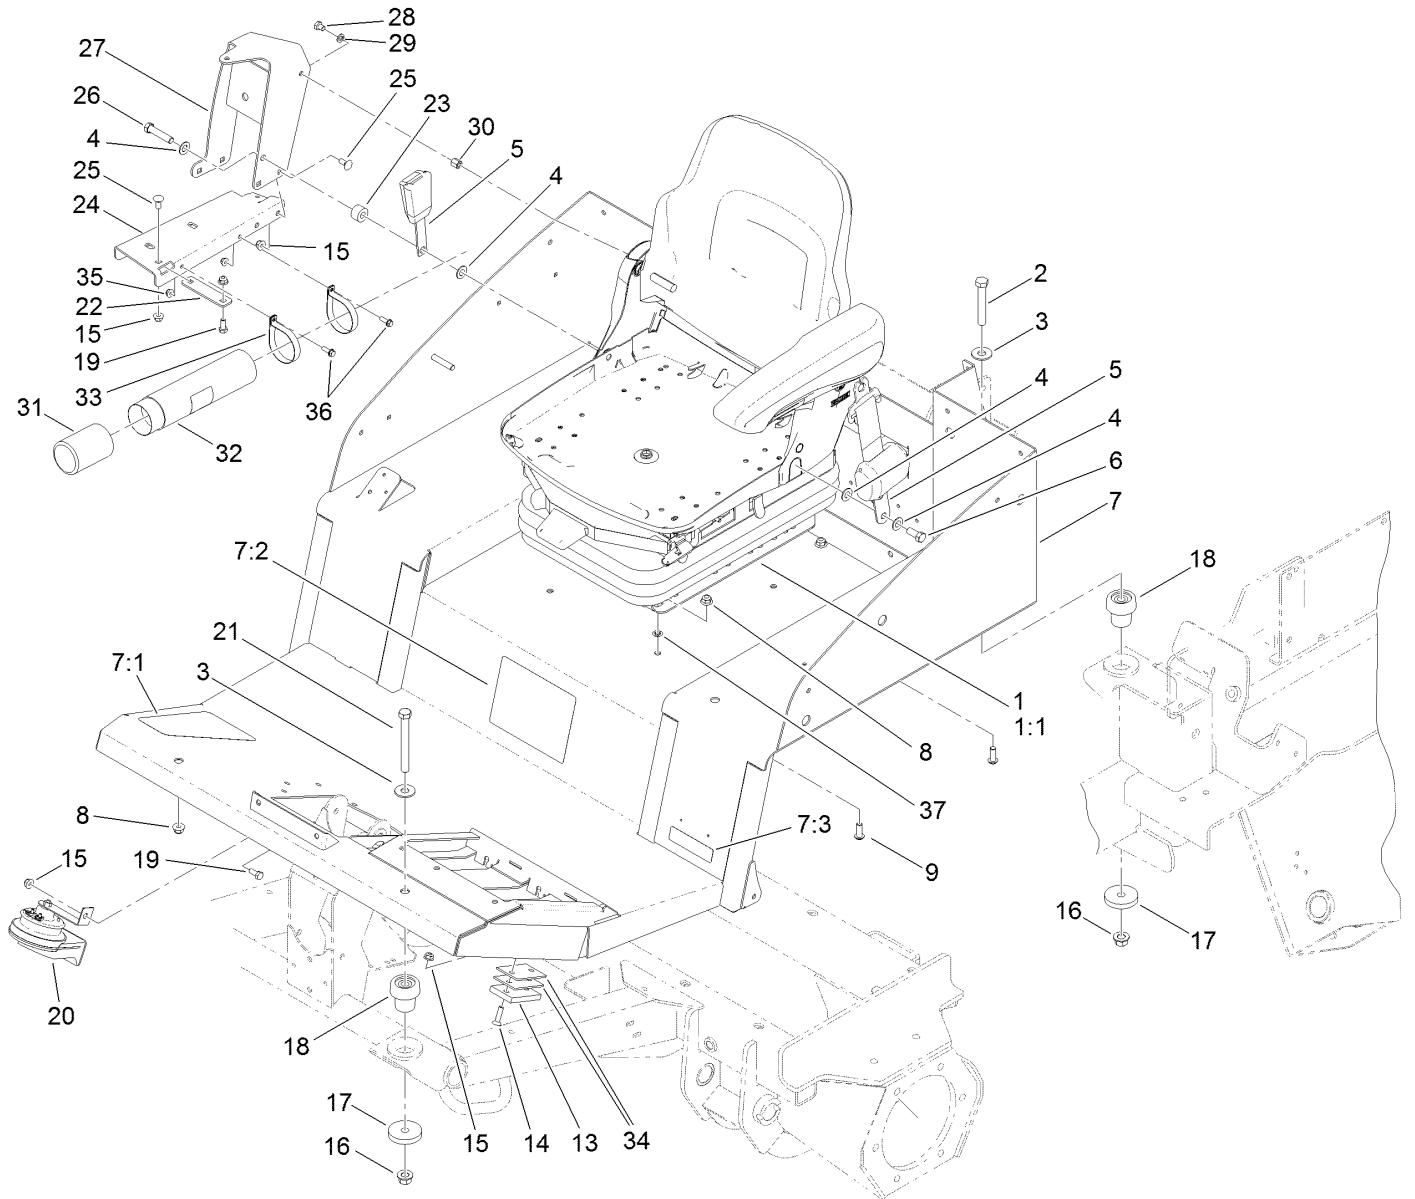


Seat and Platform Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Seat And Suspension ASM ●	18	110-5954	4	Mount-Center, Bonded
1:1	108-1488	1	Seat Suspension ASM	19	322-3	2	Screw-HH
2	112-7264	2	Screw-HH	20	116749	1	Horn
3	92-2651	6	Washer	21	702093	2	Screw-HH
4	3256-25	4	Washer-Flat	22	112-7449-03	1	Bracket-Support
5	110-0413	1	Seatbelt-Retractable	23	17-7190	1	Spacer-Finger
6	3212-4	1	Screw-HH	24	112-7437-03	1	Channel-Support
7	117-9400	1	Platform ASM	25	3230-1	5	Bolt-CARR
7:1	114-0849	1	Decal-Pedal, Traction	26	3212-8	1	Screw-HH
7:2	114-0846	1	Decal-Instructions, Operating	27	112-7446-03	1	Support-Arm
7:3	117-2718	1	Decal-Arrester, Spark	28	33114-010	1	Screw-HH
8	104-8301	4	Nut-HF, NI	29	3253-4	1	Washer-Lock
9	3231-22	4	Screw-CARR	30	112-7405	1	Nut-Hex, Coupling
13	69-9290	2	Pad-Bumper	31	104-7048	1	Cap-Housing
14	32108-103	4	Screw-FH	32	104-7050	1	Tube-Manual
15	104-8300	11	Nut-HF, NI	33	107-1865	2	R-Clamp
16	99-5107	4	Nut-Lock	34	114-5553	4	Shim-Pad
17	115-5519	4	Washer-Plain	35	104-7201	2	Nut-HF, NI
				36	32105-15	2	Screw-HWH
				37	107-3154	4	Nut-Push

● Not serviced separately

 Air Ride Seat Suspension Assembly No. 108-1488

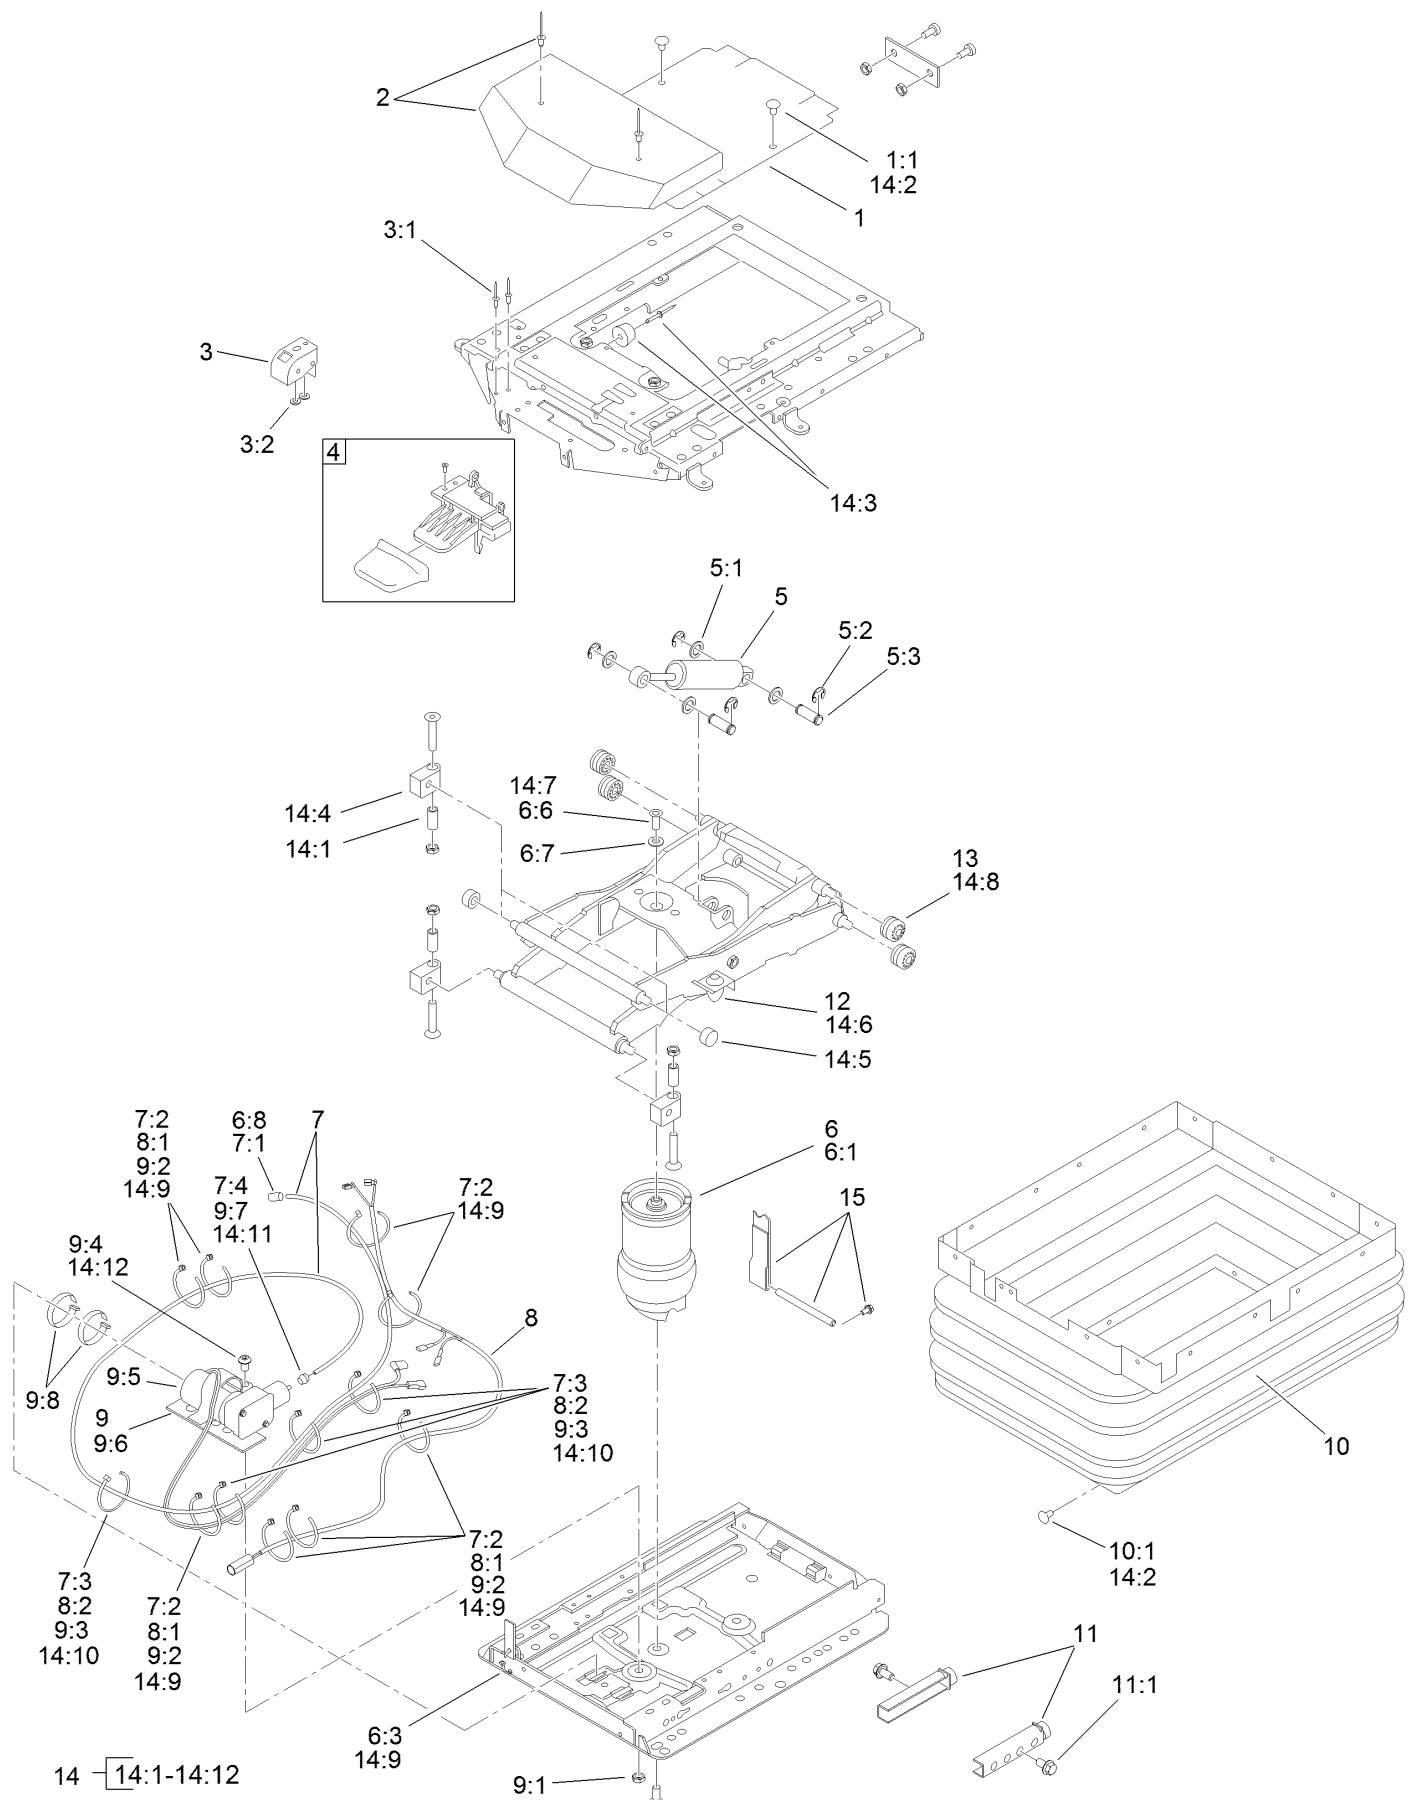


Air Ride Seat Suspension Assembly No. 108-1488 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	108-8026	1	Cover ASM	9:2		5	Tie-Wire ■
1:1	39-5710	2	Plug-Plastic	9:3		4	Tie-Wire ■
2	108-8027	1	Cover	9:4		1	Screw ■
3	108-8028	1	Level Indicator Kit	9:5		1	Compressor ■
3:1		2	Rivet ■	9:6		1	Plate-Mounting ■
3:2		2	Washer ■	9:7		1	Nipple-Hose ■
4	108-8029	1	Valve-Control, Air	9:8		2	Clamp ■
5	108-8030	1	Shock Absorber Kit	10	108-8035	1	Bellows ASM
5:1		4	Washer ■	10:1	39-5710	23	Plug-Plastic
5:2		4	C-Clip ■	11	108-8036	1	Stop Kit
5:3		2	Pin ■	11:1		2	Screw ■
6	108-8031	1	Air Spring Kit	12	107-1213	2	Bumper Set
6:1		1	Air Spring ■	13	108-8037	4	Roller
6:3		2	Cable Tie ■	14	108-8038	1	Wear Parts Kit ●
6:6		2	Screw ■	14:1		4	Spacer ■
6:7		1	Washer ■	14:2	39-5710	2	Plug-Plastic
6:8		1	Nipple-Hose ■	14:3		1	Bumper ■
7	108-8032	1	Air Tube ASM	14:4		4	Support-Housing ■
7:1		1	Nipple-Hose ■	14:5		2	Roller ■
7:2		7	Tie-Wire ■	14:6	107-1213	2	Bumper Set
7:3		4	Tie-Wire ■	14:7		2	Screw ■
7:4		1	Nipple-Hose ■	14:8	108-8037	4	Roller
8	108-8033	1	Connecting Cable ASM	14:9		9	Tie-Wire ■
8:1		8	Tie-Wire ■	14:10		4	Tie-Wire ■
8:2		4	Tie-Wire ■	14:11		1	Nipple-Hose ■
9	108-8034	1	Compressor Kit	14:12		1	Screw ■
9:1		1	Nut ■	15	119-2161	1	Tether Kit

● Not illustrated


■ Not serviced separately

 Steering Column Assembly

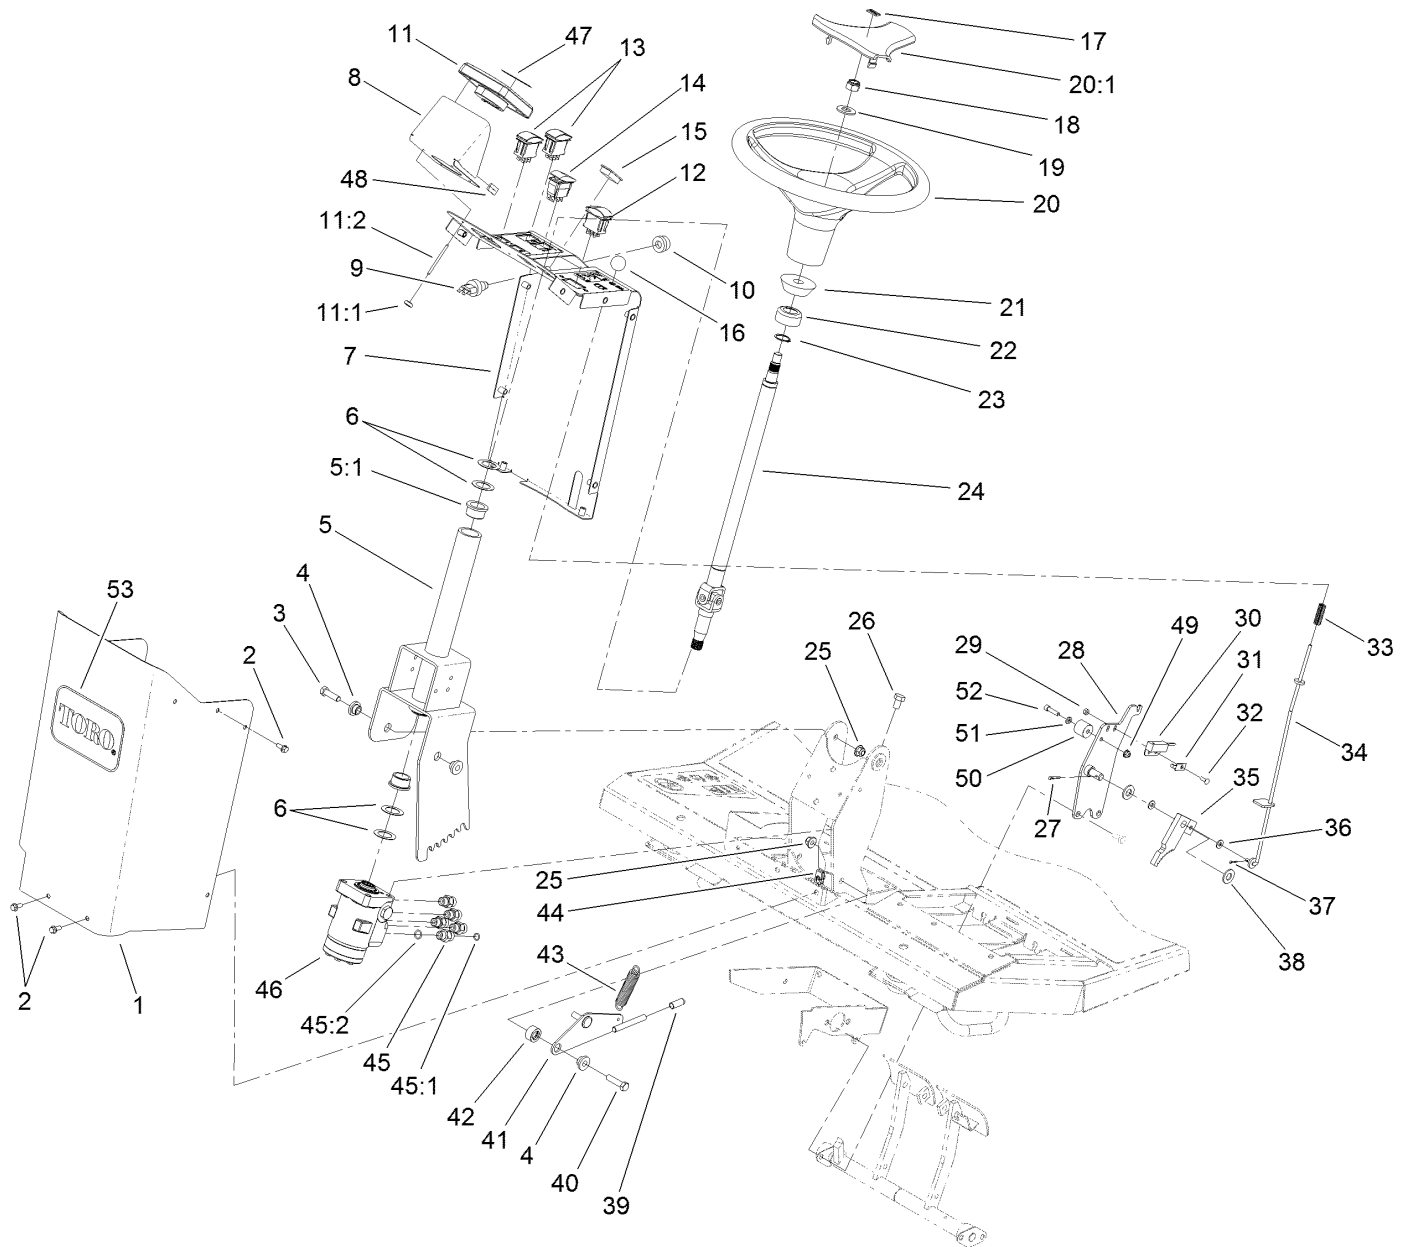


Steering Column Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	117-5493-01	1	Cover-Steering Tower, Front	26	33115-016	4	Screw-HH
2	3234-33	12	Screw-HHF	27	3272-10	1	Pin-Cotter
3	323-7	2	Screw-HH	28	114-0190-03	1	Pivot-Parking, Brake
4	93-5988	3	Hub-Pivot	29	3296-2	1	Nut-Lock, NI
5	114-0167	1	Steering Column ASM	30	100-1270	1	Switch-Proximity
5:1	256-132	2	Bushing-Flange	31	100-4872	1	Plate-Switch, Neutral
6	9547	4	Washer-Thrust	32	3229-34	1	Screw-CARR
7	117-5492	1	Steering Tower ASM	33	95-1821-03	1	Spring-Compression
8	115-5447-01	1	Guard-Visor	34	114-0195	1	Rod-Parking, Brake
9	112-3324	1	Switch-Horn	35	63-7900-03	1	Rack
10	112-3313	1	Nut-Weatherproof	36	3256-22	2	Washer-Flat
11	125-5320	1	Infocenter Kantrak 2700	37	3272-5	1	Pin-Cotter
11:1	115-8884	4	Nut-Thumb	38	3256-26	2	Washer-Flat
11:2	115-8885	4	Stud	39	93-5446	1	Cap-Vinyl
12	107-8034	1	Switch-Rocker, On-Off-On	40	323-8	1	Screw-HH
13	100-1535	2	Switch-Rocker, (On)-Off-(On)	41	114-5907-03	1	Lever-Tilt
14	112-3530	1	Switch-Rocker, On-On-On	42	114-4854	1	Spacer-Cup
15	99-7420	3	Plug-Hole	43	13-0480	1	Spring
16	233-17	1	Knob	44	107069	2	Clip
17	98-1459	1	Decal	45	340-2	5	Fitting-Straight
18	108-9342	1	Nut-Hex	45:1	237-22	1	O-Ring
19	3256-27	1	Washer-Flat	45:2	237-42	1	O-Ring
20	98-1471	1	Wheel-Steering	46	130-7949	1	Steering Control Valve ASM
20:1	98-1468	1	Cover-Wheel, Steering	47	114-5554	1	Decal-Center, Info
21	93-5429	1	Collar-Foam	48	115-5417	2	Strip-Foam
22	93-5439	1	Seal-Steering	49	104-7201	1	Nut-HF, NI
23	32151-29	2	Ring-Retaining	50	117-5499	1	Spacer-Deflector
24	93-5428	1	Shaft-Steering	51	55-9620	1	Spacer-Plate, Pivot
25	104-8301	3	Nut-HF, NI	52	3274-9	1	Screw-HSH
				53	62-5550	1	Decal

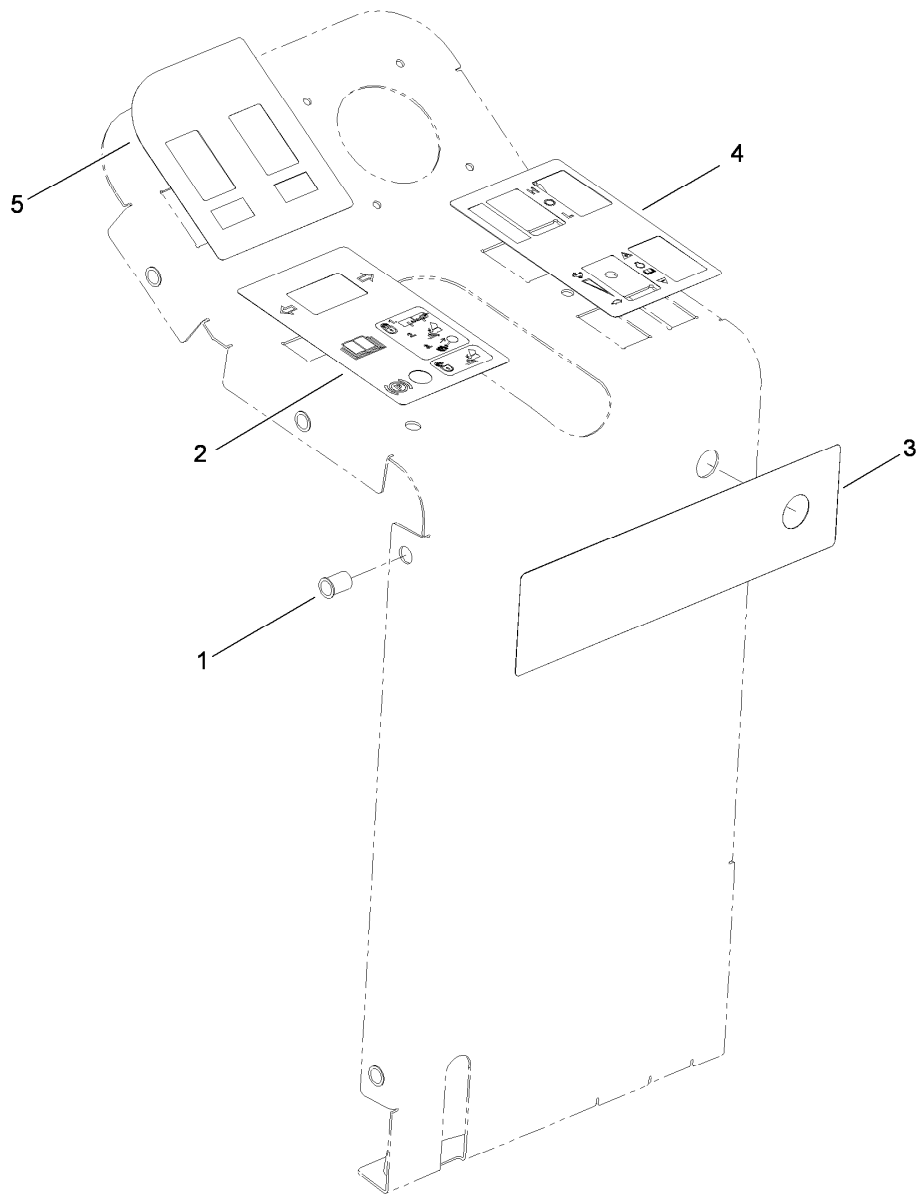 


Steering Tower Assembly No. 117-5492

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	32148-6	10	Nut-Clinch
2	114-0844	1	Decal-Column, Steering (LH)
3	114-0845	1	Decal-Column, Steering
4	114-0848	1	Decal-Column, Steering (RH)
5	114-0906	1	Decal-Attachment

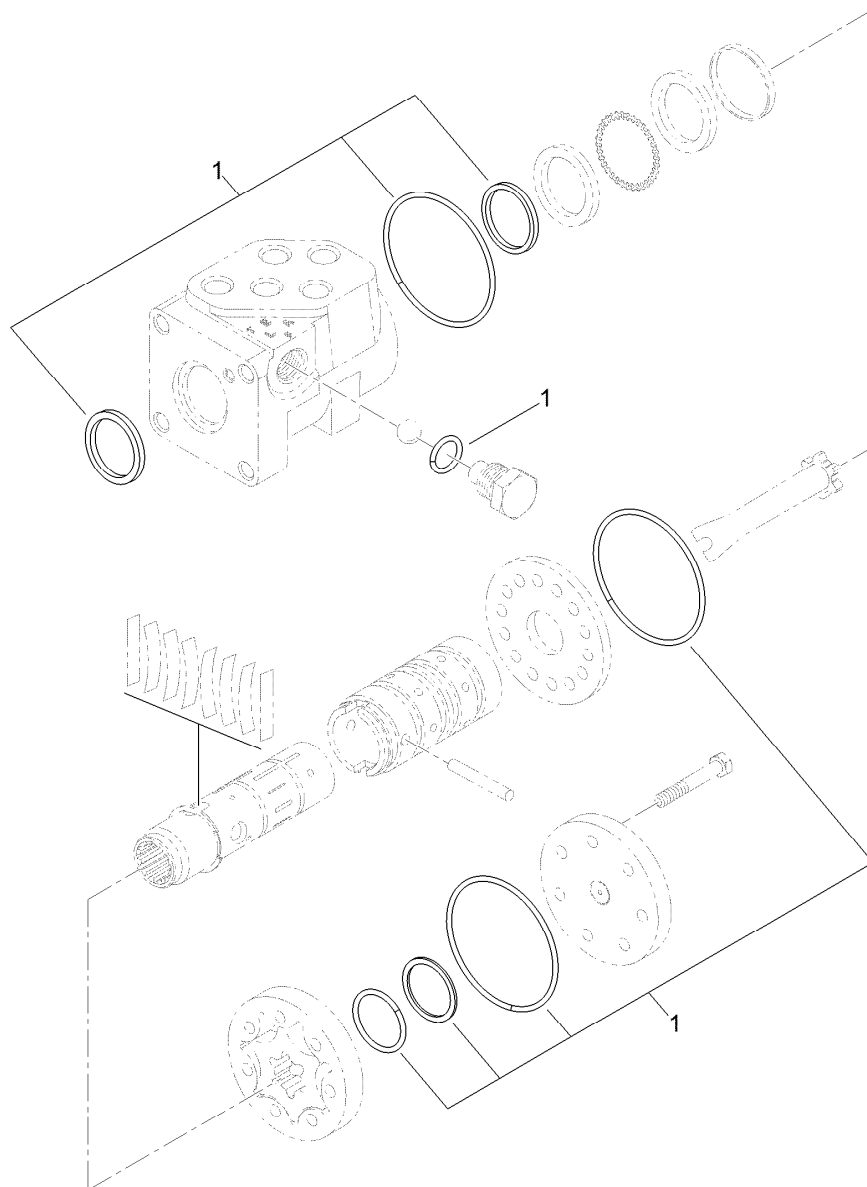 


Steering Valve Assembly No. 130-7949

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-8358	1	Seal Kit

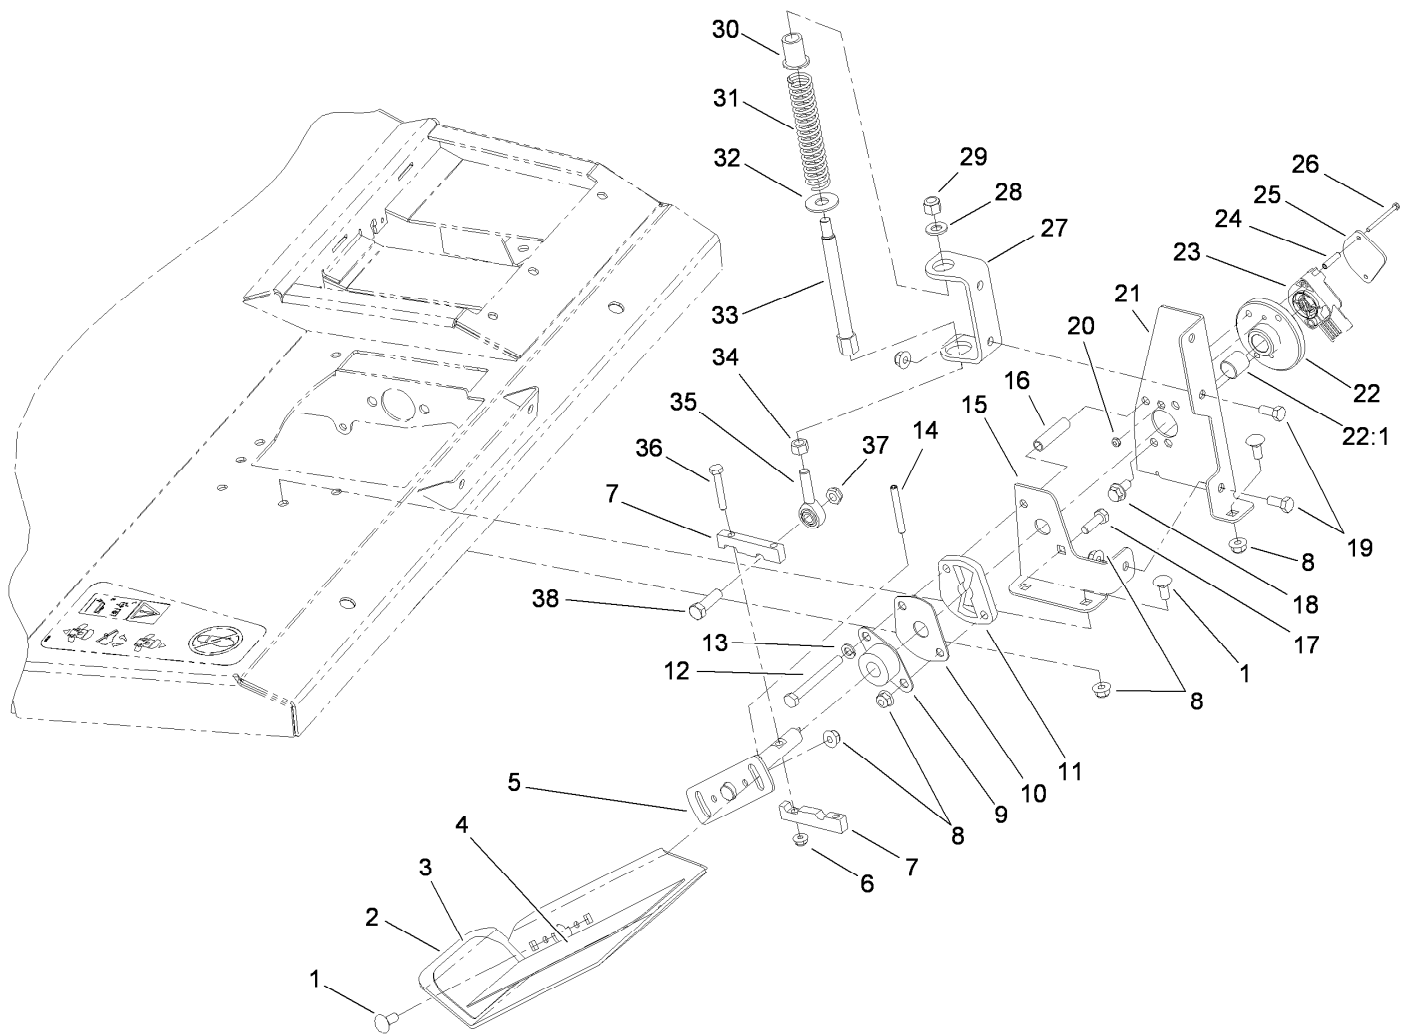 

Traction Pedal Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	3230-1	6	Bolt-CARR	21	117-5451-01	1	Bracket-Sensor
2	110-5986-01	1	Pedal-Traction	22	117-5445	1	Bushing Hub ASM
3	93-5368	1	Abrasive-Pedal	22:1	95-7497	1	Bushing-Wheel
4	93-5347	1	Abrasive-Pedal	23	114-5609	1	Sensor-Position
5	117-5450	1	Shaft-Pedal, Traction	24	114-5608	2	Spacer-Standoff
6	104-7201	2	Nut-HF, NI	25	114-5595	1	Plate-Capture
7	117-5459	2	Block-Clamp	26	32105-25	2	Screw-SHH
8	104-8300	10	Nut-HF, NI	27	117-5452-01	1	Bracket-Spring
9	256-236	1	Bearing-Mount, Flange	28	3256-24	1	Washer-Plain
10	117-5455	1	Plate-Cover	29	3296-6	1	Nut-Lock
11	117-5454	1	Plate-Butterfly	30	92-7610	1	Retainer-Spring
12	322-14	1	Screw-HH	31	84-9100	1	Spring
13	3253-4	1	Washer-Lock	32	3256-5	1	Washer-Flat
14	32121-78	1	Pin-Roll	33	117-5446	1	Shaft-Spring
15	117-5453-01	1	Bracket-Butterfly	34	3219-3	1	Nut-Hex
16	93-7960	1	Spacer	35	2411-36	1	Bearing-End, Rod
17	322-5	1	Screw-HH	36	321-37	2	Screw-HH
18	114-7728	2	Screw-HHF, Patch	37	3296-59	1	Nut-Lock, NI
19	322-3	3	Screw-HH	38	323-7	1	Screw-HH
20	3296-9	2	Nut-Hex				

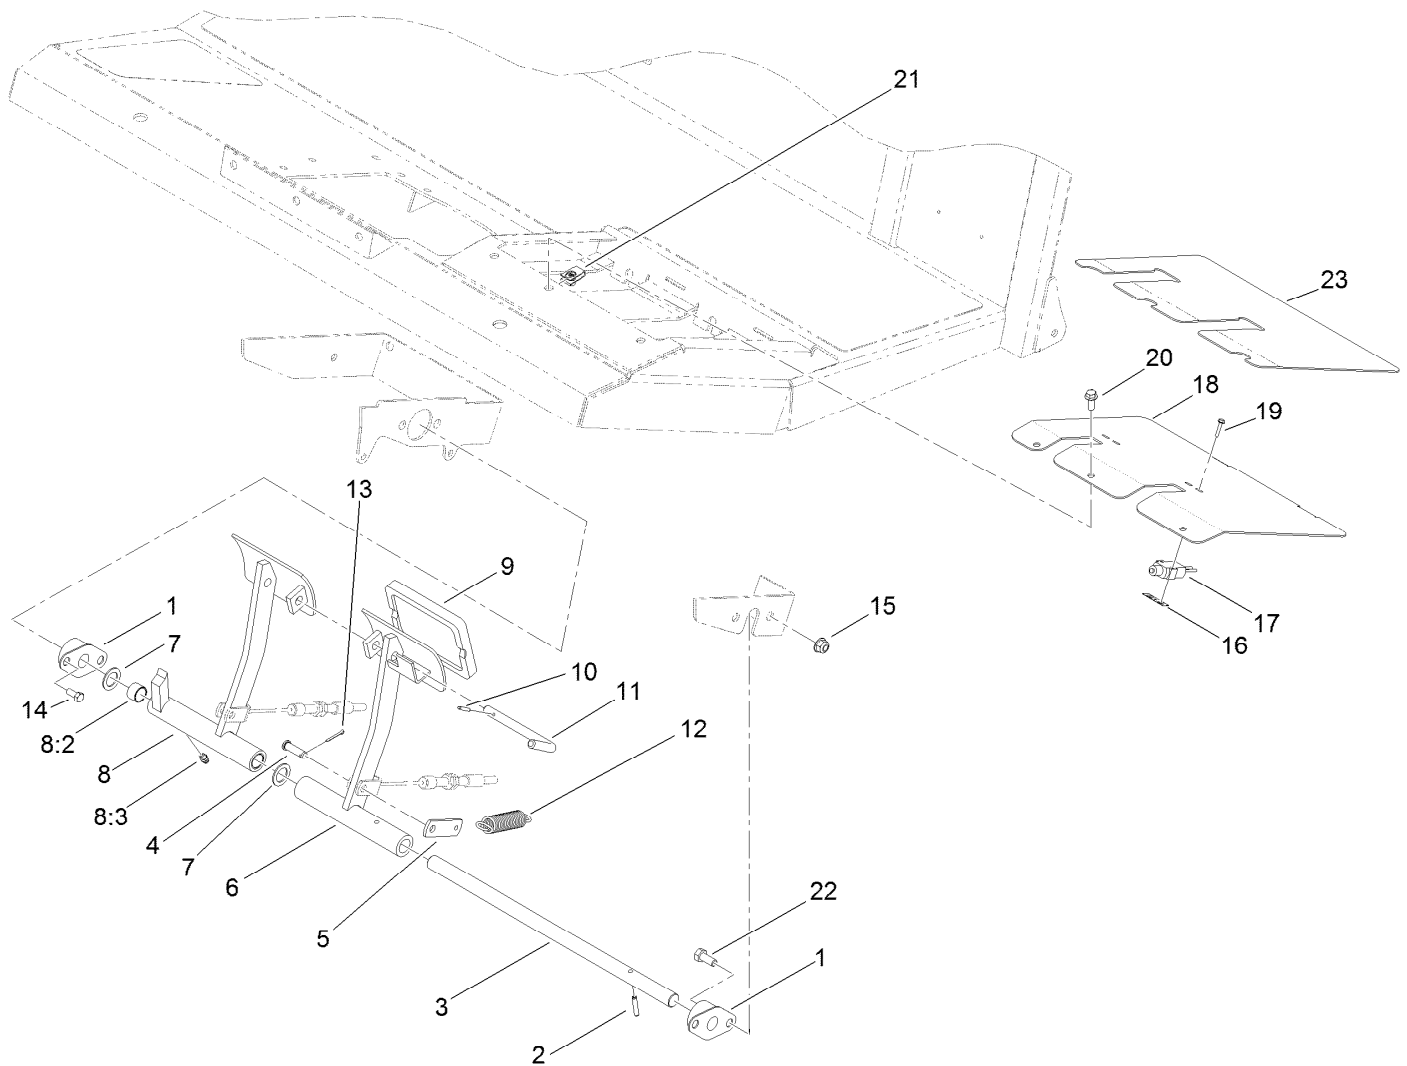 


Brake Pedal Assembly

Ref.	Part Number	Qty.	Description
1	256-236	2	Bearing-Mount, Flange
2	32121-16	1	Pin-Spring
3	75-1470	1	Pin-Pivot, Brake
4	283-61	2	Pin-Yoke
5	100-5540	2	Strap-Brake
6	75-1440-03	1	Pedal-Brake, LH
7	3256-69	5	Washer-Flat
8	75-1430	1	RH Brake Pedal ASM
8:2	256-42	2	Bushing
8:3	302-5	1	Fitting-Grease
9	93-8742	2	Footpad-Brake
10	32121-50	1	Pin-Spring
11	63-7880	1	Pin-Latch, Brake

Ref.	Part Number	Qty.	Description
12	93-5262	2	Spring-Extension
13	3272-6	2	Pin-Cotter
14	322-3	2	Screw-HH
15	104-8300	4	Nut-HF, NI
16	108-9824	2	Nut-Switch
17	99-3410	2	Switch
18	114-0740-01	1	Bracket-Switch
19	117-5458	4	Screw-HHF
20	3234-33	3	Screw-HHF
21	107069	3	Clip
22	322-2	2	Screw-HH
23	130-5992	1	Tread-Abrasive, Cover

 
Control Console Assembly

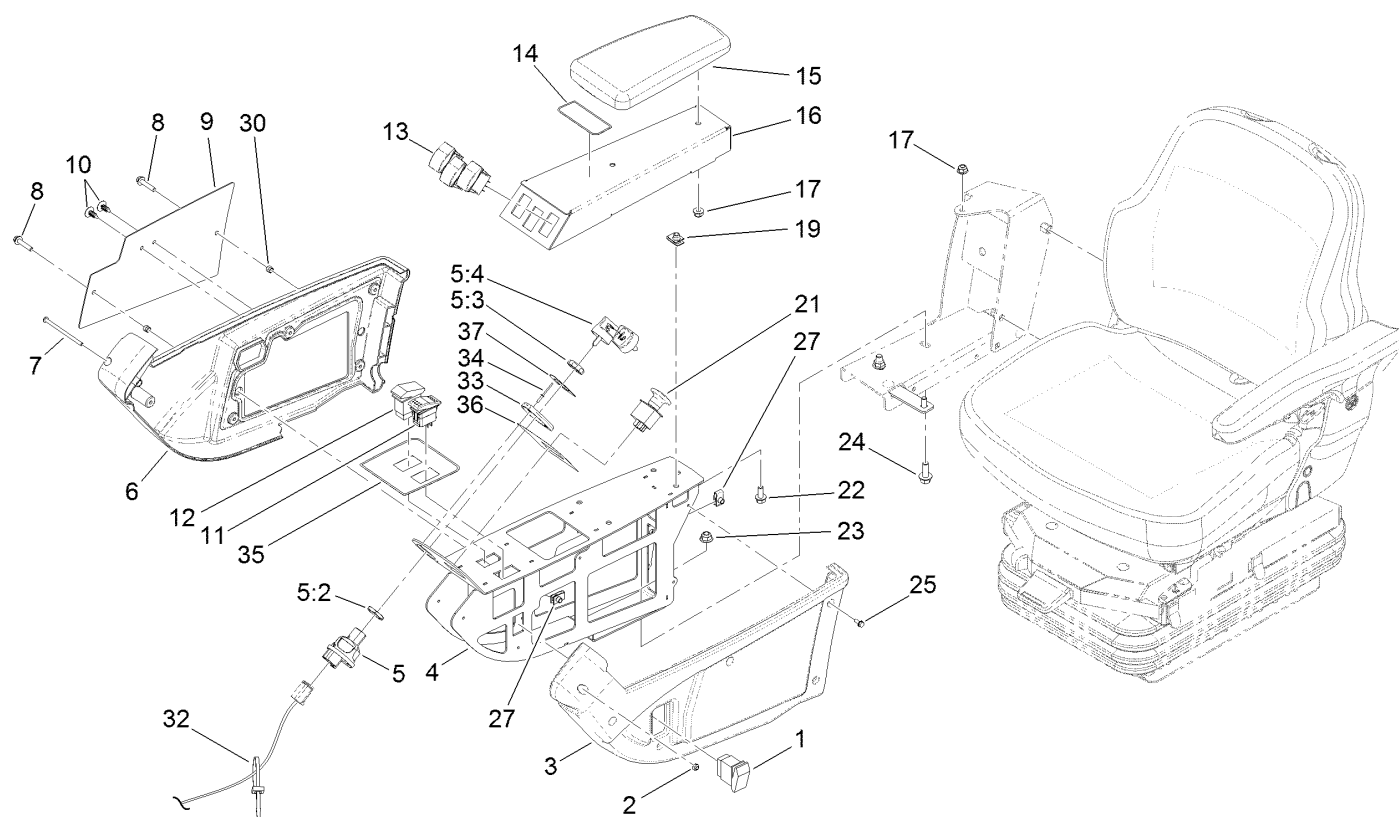

Control Console Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	95-8999	1	Switch-Rocker, On-None-On	14	114-0135	1	Decal-Console, Lift
2	3296-12	1	Nut-Lock, NI	15	108-7602	1	Rest-Arm
3	108-7604	1	Cover-LH	16	127-3531-03	1	Panel-Control
4	121-3876-03	1	Panel	17	104-8300	3	Nut-HF, NI
5	121-5159	1	Switch-Ignition	19	94-2413	4	Nut-U
5:2	121-5160	1	Nut-Hex	21	93-9999	1	Switch-PTO
5:3	121-5161	1	Nut-Face	22	3234-5	5	Screw-HHF
5:4	121-5162	1	Set-Key, Ignition	23	104-8301	2	Nut-HF, NI
6	108-7605	1	Cover-RH	24	3234-42	2	Screw-HHF
7	3250-22	1	Screw-PPH	25	32144-112	10	Screw-HWH
8	3234-21	2	Screw-HHF	27	107069	2	Clip
9	115-8849-03	1	Plate-Cover	30	110-0542	2	Spacer-Flange
10	117-2382	2	Plug-Plastic	32	3290-378	1	Tie-Cable
11	114-3329	1	Switch-Rocker	33	121-3889	1	Step-Elevated, Switch
12	106-2027	1	Switch-Intermittent	34	3269-17	2	Rivet-Pop
13	100-1535	3	Switch-Rocker, (On)-Off-(On)	35	114-0133	1	Decal-Console, Lower
				36	121-3883	1	Decal-Console, PTO
				37	121-3884	1	Decal-Console, Upper

 
Electrical Component Assembly

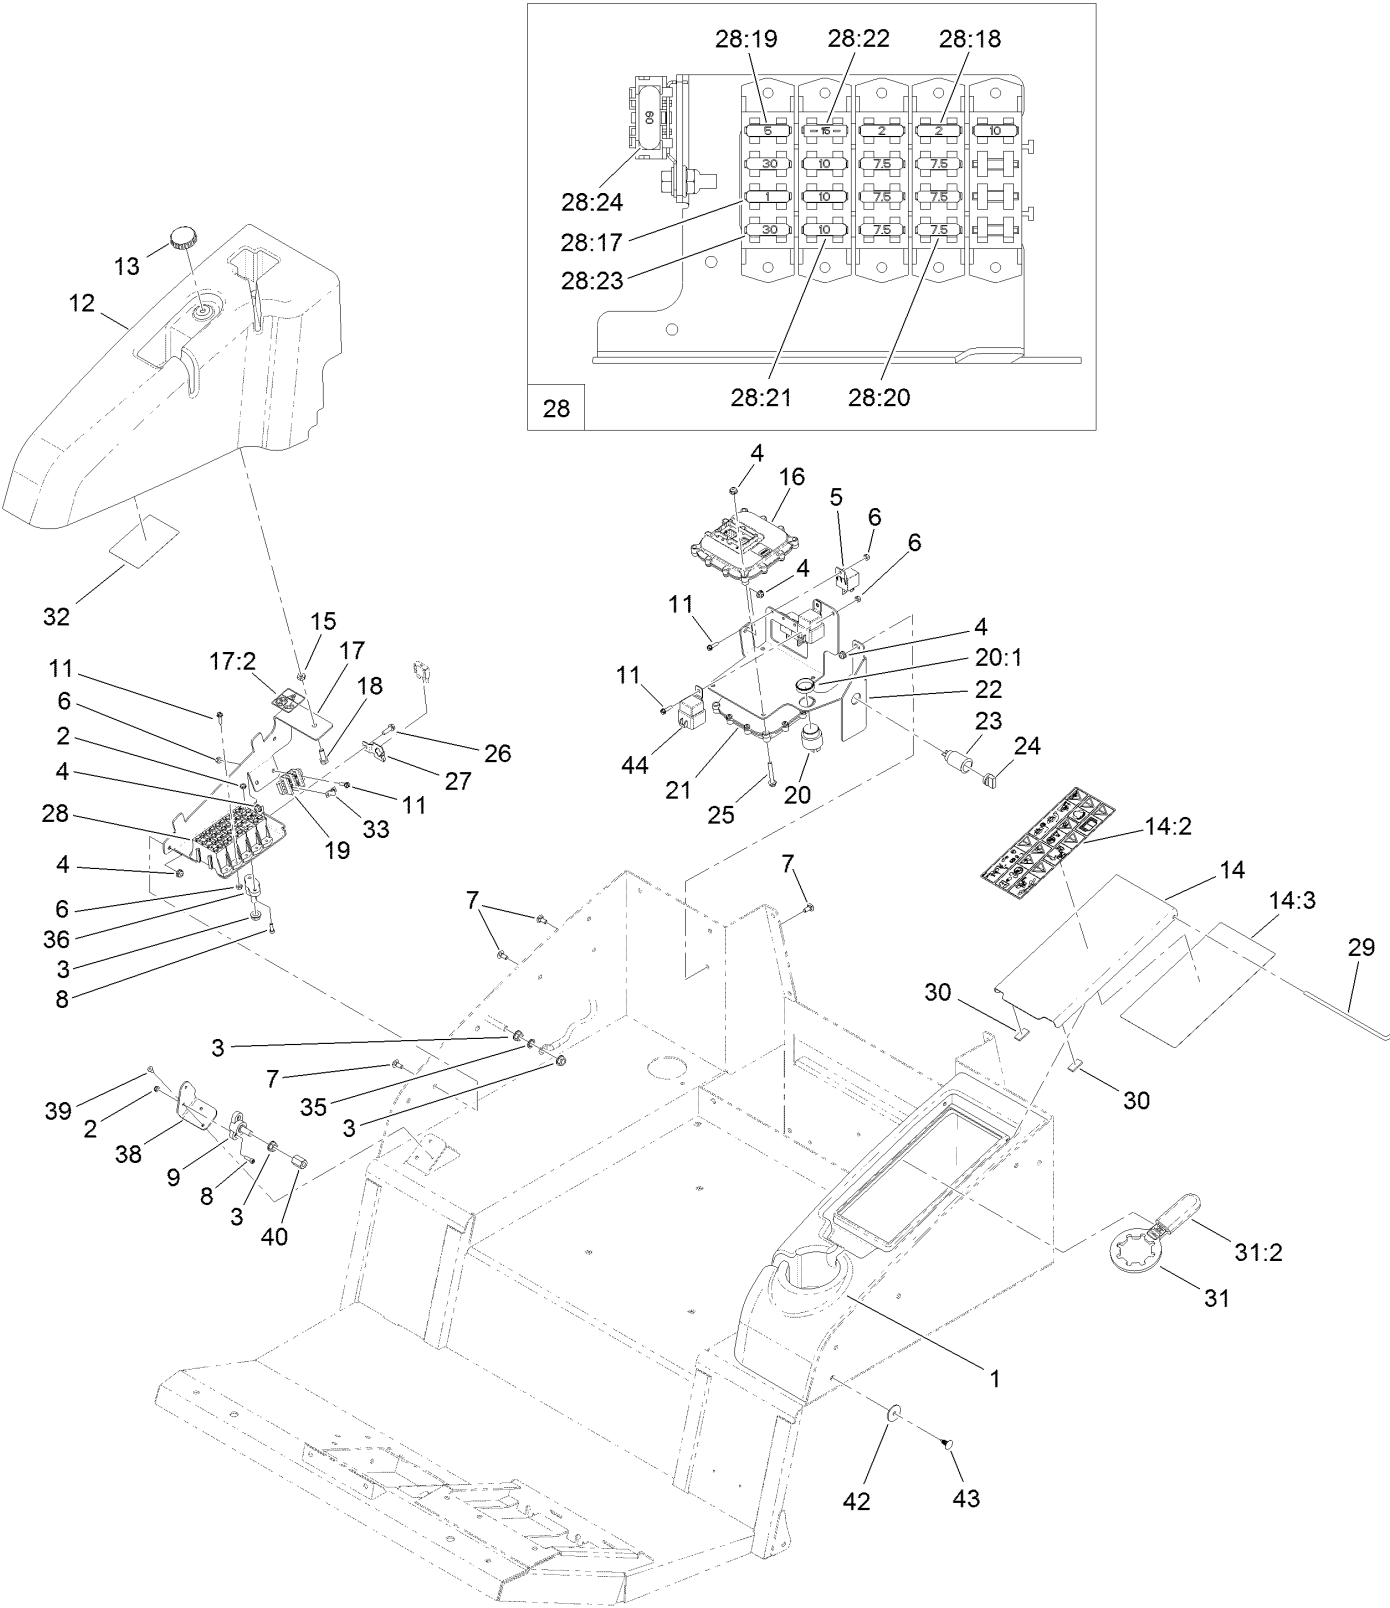

Electrical Component Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	112-7316	1	Cover-Storage, Center	25	321-44	4	Screw-HHF
2	3296-27	4	Nut-Lock, NI	26	32105-15	1	Screw-HWH
3	3290-357	4	Nut-HSF	27	114-5502	1	Clip-Fuse
4	104-7201	9	Nut-HF, NI	28	122-0274	1	Harness-Wire
5	99-7435	4	Relay	28:17	104-9055	1	Fuse-Blade, 1 Amp
6	3296-2	11	Nut-Lock, NI	28:18	94-6710	2	Fuse-2 Amp
7	3229-11	4	Screw-CARR	28:19	110928	1	Fuse-Blade, 5 Amp
8	3273-26	4	Screw-HSH	28:20	114241	6	Fuse-Blade, 7.5 Amp
9	110-8822	1	Block-Junction	28:21	218-578	4	Fuse-Blade, 10 Amp
11	32105-13	11	Screw-HWH	28:22	109355	1	Fuse-Blade, 15 Amp
12	112-7315	1	Cover-Power, Center	28:23	109103	2	Fuse-Blade, 30 Amp
13	94-5583	1	Knob	28:24	114-3342	1	Fuse-Maxi, 60 Amp
14	125-5319	1	Lid-Center, Storage	29	114-5508	1	Rod-Hinge
14:2	117-2754	1	Decal-Warning	30	115-5417	2	Strip-Foam
14:3	130-2449	1	Decal-Service	31	121-3874	1	Wrench ASM
15	3218-2	1	Nut-Hex Jam	31:2	119-1846	1	Grip
16	115-1900	1	Controller	32	125-5263	1	Decal-Fuse
17	125-5265	1	Power Center Bracket ASM	33	42863	1	Strip-Jumper
17:2	115-5459	1	Decal-Warning	35	3254-6	1	Washer-Lock, Internal
18	322-5	1	Screw-HH	36	110-8823	1	Block-Junction
19	42862	1	Block-Terminal, Ground	38	115-5592	1	Mount-Post, Positive
20	80-9330	1	Audio Alarm ASM	39	3290-409	2	Rivet
20:1	104-5107	1	Nut-Plastic, Knurled	40	113690	1	Nut-Coupling
21	114-3321	1	Controller-Tec	42	3256-55	8	Washer-Flat
22	125-5262-01	1	Bracket-Power Center, Rear	43	117-2382	8	Plug-Plastic
23	99-7411	1	Point-Power	44	99-7430	2	Relay-Mini
24	99-7416	1	Cap				

 Battery and Lift Manifold Assembly

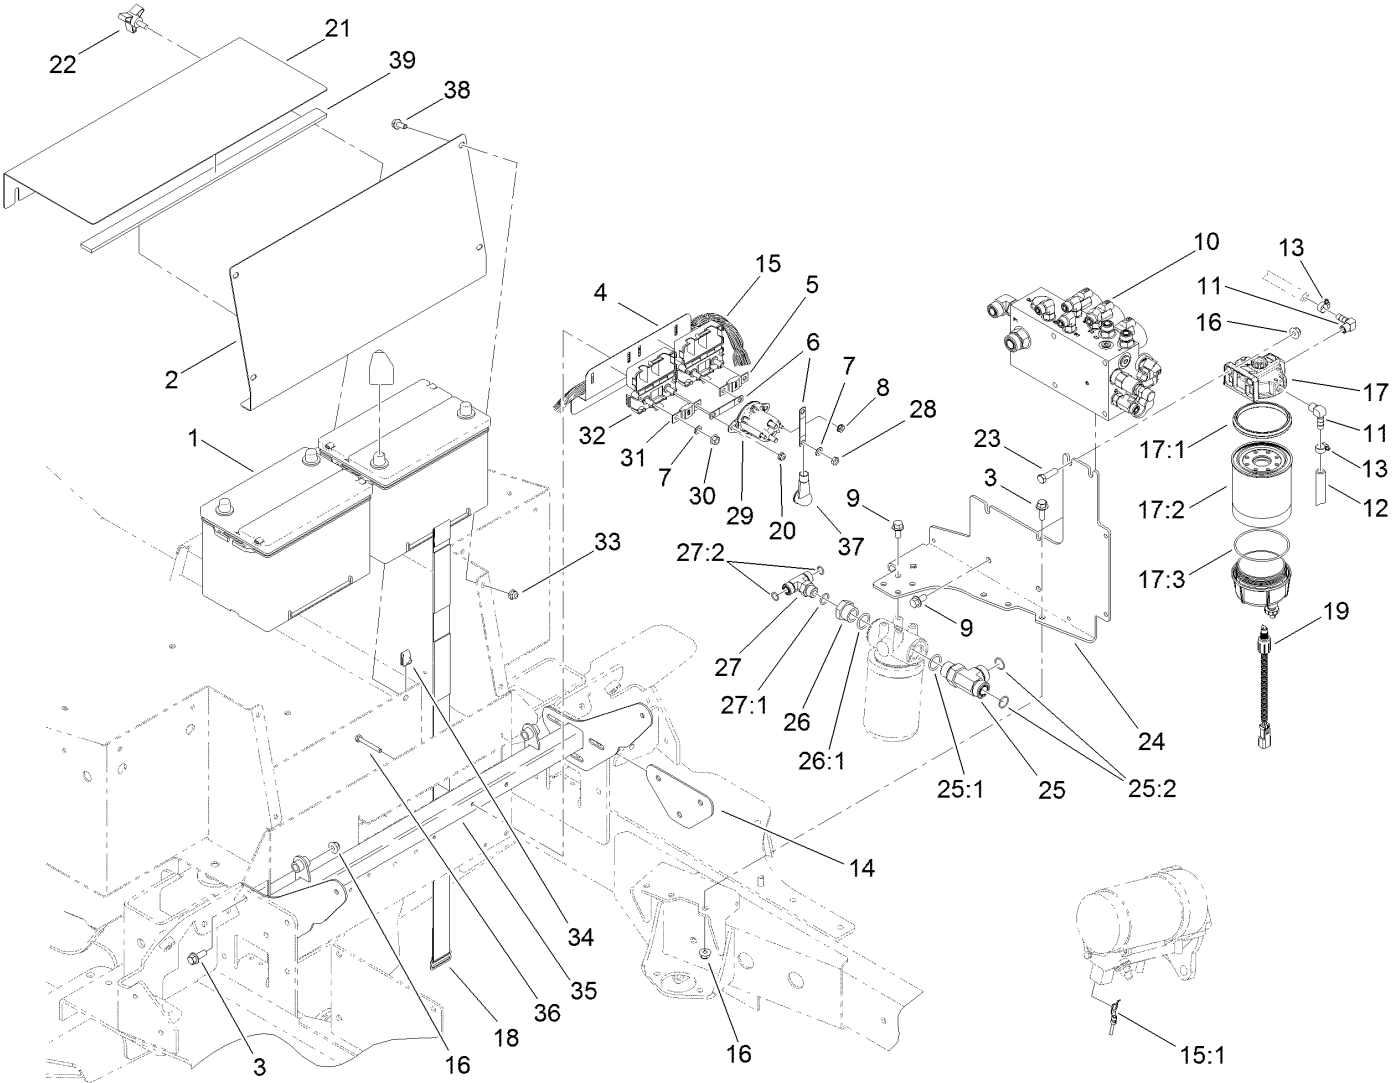


Battery and Lift Manifold Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		2	Battery-12 Volt, Wet ●■	20	104-7201	2	Nut-HF, NI
2	121-3886-01	1	Panel-Access, Rear	21	121-3885-01	1	Cover-Battery
3	3234-42	5	Screw-HHF	22	700806	2	Knob
4	114-5681-03	1	Support-Fuse	23	323-7	2	Screw-HH
5	110-8820	1	Fuse-Mega, 300A	24	119-7732-03	1	Plate-Mount, Filter
6	114-5682	2	Strap-Jumper	25	340-148	1	Fitting-Tee
7	3255-8	6	Washer-Lock	25:1	237-81	1	O-Ring
8	32149-8	2	Nut-Keps	25:2	237-58	2	O-Ring
9	3234-1	8	Screw-HHF	26	96-0864	1	Fitting-Straight
10		1	Lift Manifold ASM ■	26:1	237-81	1	O-Ring
11	354-93	2	Fitting-Elbow, 90	27	340-157	1	Fitting-HYD, Tee
12	114-0832	1	Hose-Fuel	27:1	237-79	1	O-Ring
13	2412-108	2	Clamp-Worm	27:2	237-30	2	O-Ring
14	114-5585	2	Shim-Support, Hood	28	3220-2	2	Nut-Jam
15	122-0275	1	Harness-Wire, Rear	29	114-3315	1	Solenoid
15:1	117-5461	1	Harness-Wire, Starter	30	33004-00	4	Nut-HF
16	104-8301	7	Nut-HF, NI	31	110-8818	1	Fuse-Mega, 125A
17	114-0149	1	Fuel/Water Separator Filter ASM	32	114-3318	2	Holder-Fuse, Mega
17:1	115-5470	1	Gasket-Beveled	33	104-8300	4	Nut-HF, NI
17:2	115-5471	1	Element-Separator, Fuel/Water	34	94-2413	2	Nut-U
17:3	115-5472	1	O Ring-Bowl	35	119-8252-03	1	Support-Hood
18	114-0881	2	Strap-Battery	36	321-11	2	Screw-HH
19	114-0170	1	Sensor-Wif	37	32180-008	1	Insulator-Lug, Red
				38	3234-47	4	Screw-HHF
				39	108-9683	1	Strip-Foam

● Obtain locally.

 
■ Not serviced separately

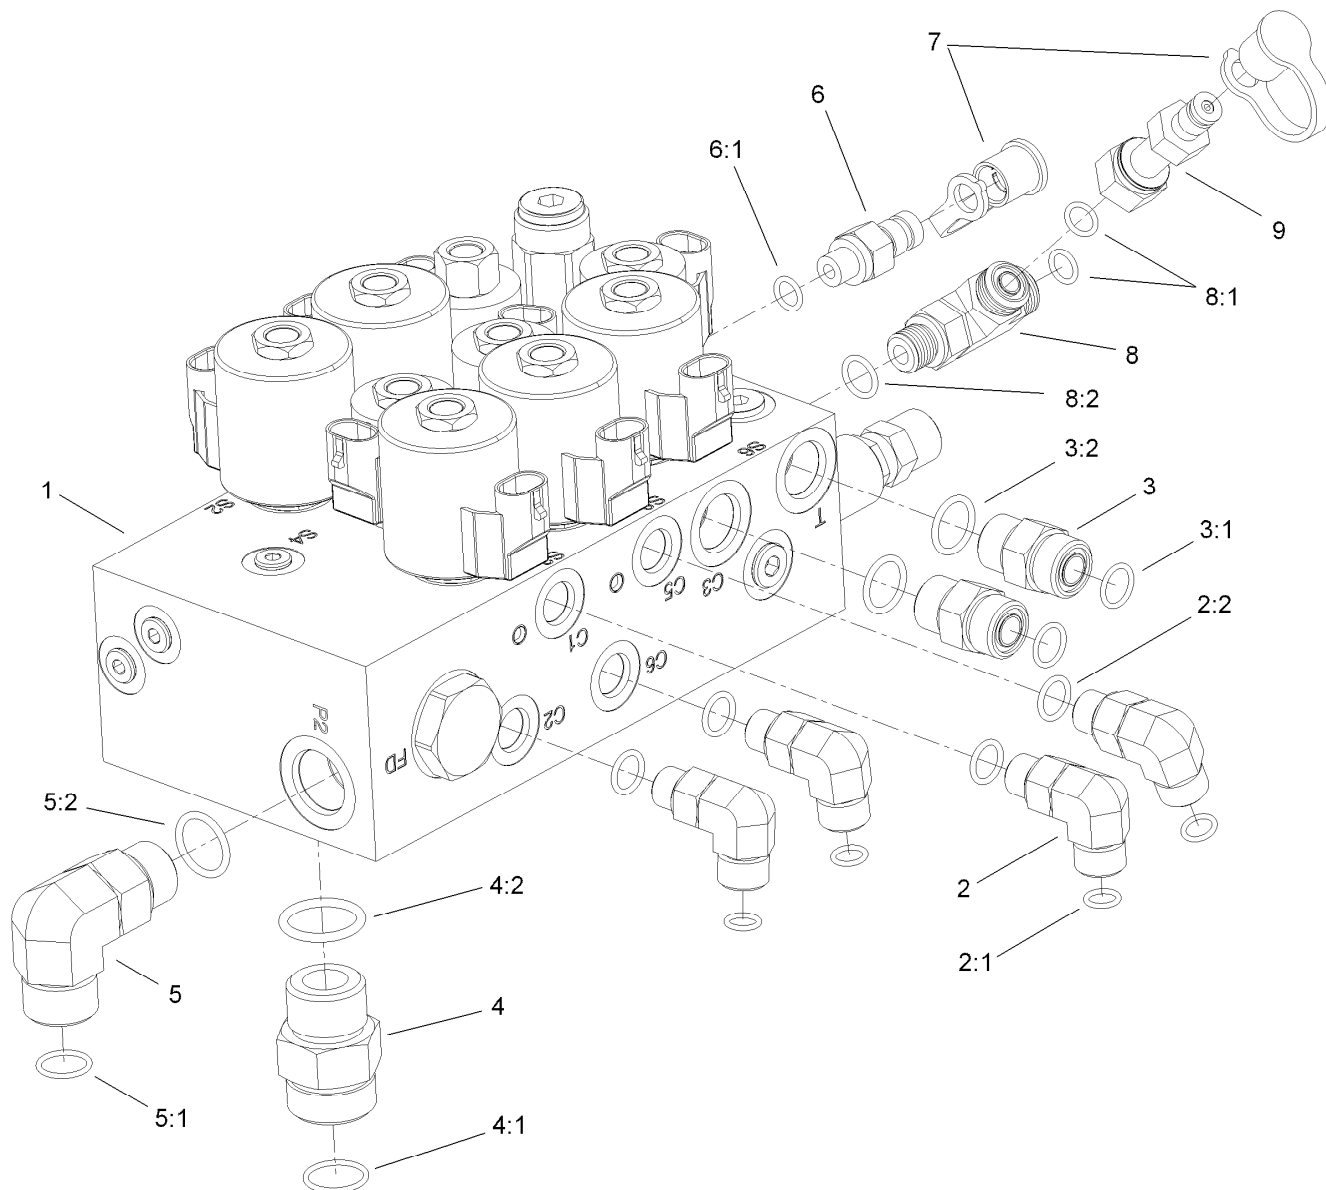

Hydraulic Lift Manifold Assembly

Ref.	Part Number	Qty.	Description
1	119-7731	1	HYD Lift Manifold ASM
2	340-77	4	Fitting-Elbow, 90 DEG
2:1	237-22	1	O-Ring
2:2	237-42	1	O-Ring
3	340-4	2	Fitting-Straight
3:1	237-30	1	O-Ring
3:2	237-79	1	O-Ring
4	340-9	1	Fitting-STR
4:1	237-58	1	O-Ring
4:2	237-81	1	O-Ring

Ref.	Part Number	Qty.	Description
5	340-17	1	Fitting-Elbow, 90 DEG
5:1	237-65	1	O-Ring
5:2	237-80	1	O-Ring
6	354-77	1	Fitting-Quick
6:1	237-78	1	O-Ring
7	354-79	2	Cap-Dust
8	340-86	1	Fitting-Tee
8:1	237-22	2	O-Ring
8:2	237-42	1	O-Ring
9	86-5480	1	Nipple-Test

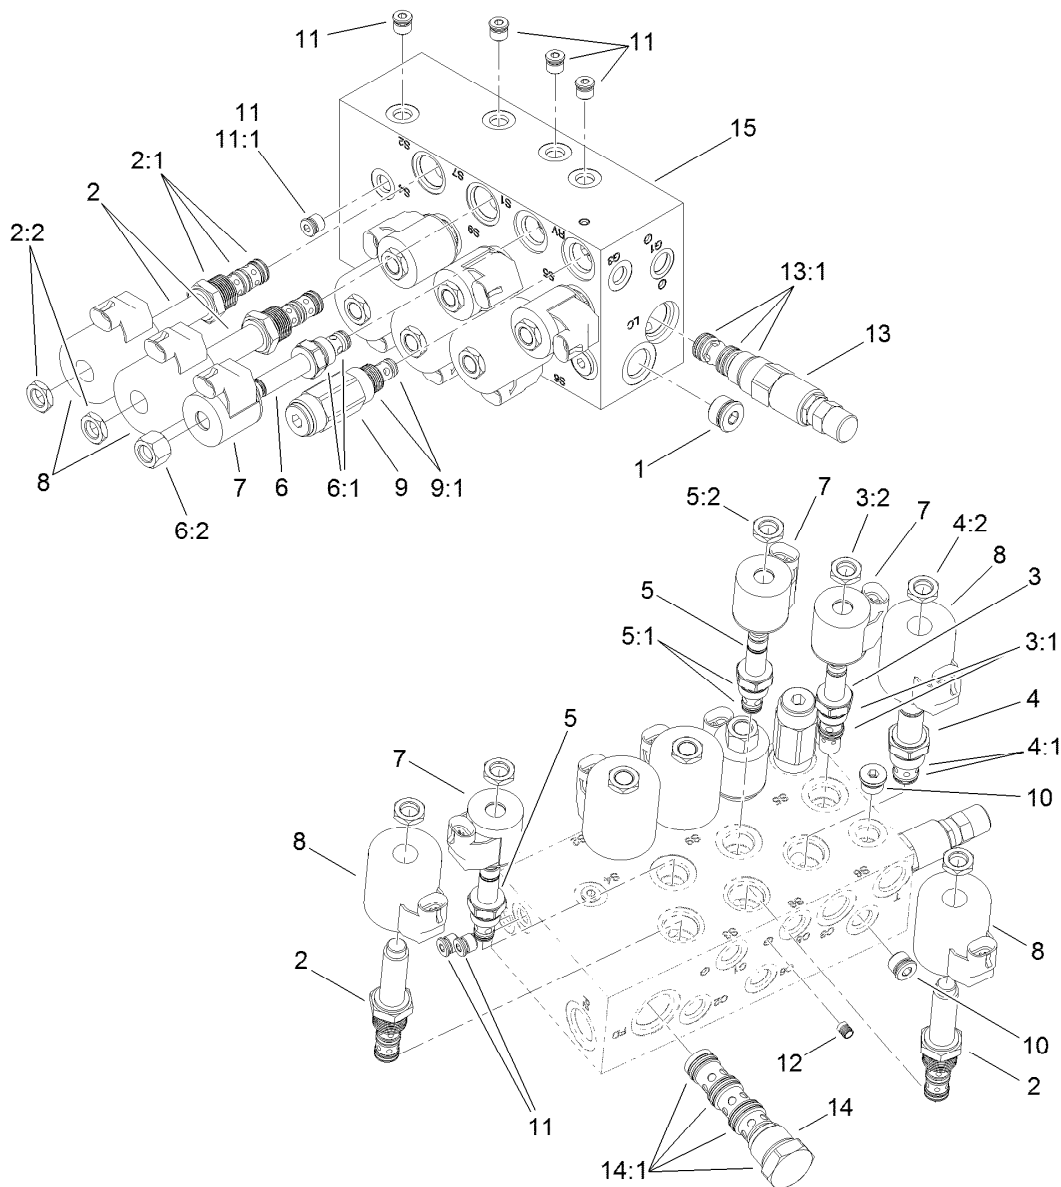 

Hydraulic Lift Manifold Assembly No. 119-7731


Ref.	Part Number	Qty.	Description
1	106-1027	1	Plug
2	115-5400	4	Solenoid Valve ASM
2:1	107-7813	1	Seal Kit
2:2	110-2634	1	Nut-Coil
3	115-5405	1	Solenoid Valve ASM
3:1	115-5413	1	Seal Kit
3:2	110-2634	1	Nut-Coil
4	115-5404	1	Valve-Solenoid
4:1	105-9159	1	Seal Kit
4:2	110-2634	1	Nut-Coil
5	119-7706	2	Valve-Solenoid
5:1	119-7716	1	Seal Kit
5:2	110-2634	1	Nut-Coil
6	107-7517	1	Valve-Solenoid
6:1	105-9156	1	Seal Kit ●

Ref.	Part Number	Qty.	Description
6:2	107-7812	1	Nut-Solenoid
7	105-9333	4	Coil-12Vdc
8	110-2630	5	Coil-12Vdc
9	115-5499	1	Valve-Relief
9:1	105-9156	1	Seal Kit
10	106-1026	2	Plug-HYD
11	353-990	7	Plug ASM
11:1	237-78	1	O-Ring
12		6	Plug-Expander ■
13	119-7721	1	Valve-Logic, Vented
13:1	119-2159	1	Seal Kit
14	115-5406	1	Divider-Flow
14:1	110-6111	1	Seal Kit
15		1	Manifold Block ■

● Not illustrated

■ Not serviced separately

 Front Deck Lift Arm and Cylinder Assembly

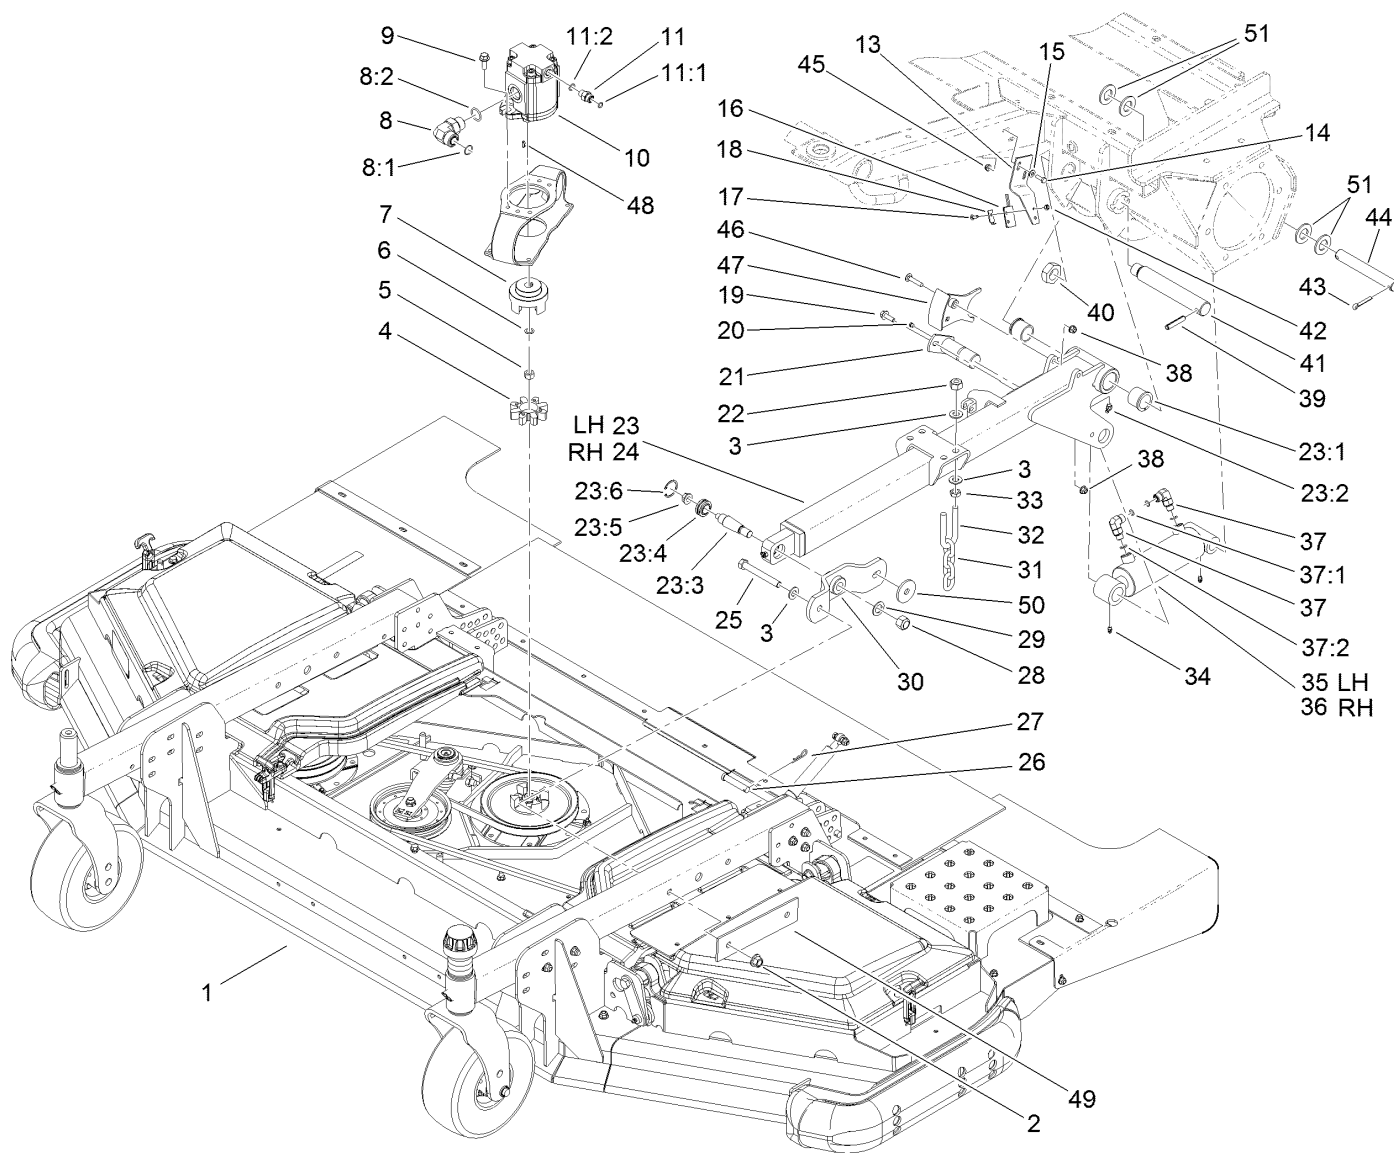


Front Deck Lift Arm and Cylinder Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Front Deck ASM ■	24:2	302-11	2	Fitting-Lube, 45 DEG ●
2	99-5107	4	Nut-Lock	24:3	105-7468	1	Stud-Tapered ●
3	3256-26	12	Washer-Flat	24:4	105-7441	1	Bearing-Spherical ●
4	104-3542	3	Spider	24:5	32128-42	1	Nut-HF ●
5	110-8815	3	Nut-Hex	24:6	32151-34	1	Ring-Retaining ●
6	112-6957	3	Washer-Hardened	25	325-17	4	Screw-HH
7	104-3541	3	Hub-Spider	26	92-2743	2	Pin-Clevis
8	340-142	5	Fitting-Elbow, 90 DEG	27	3290-467	2	Pin-Hair
8:1	237-58	1	O-Ring	28	3296-41	2	Nut-Lock NI
8:2	237-81	1	O-Ring	29	86-1440	2	Washer-Flat
9	3234-42	6	Screw-HHF	30	115-5442-01	2	Support-Hub
10	114-4940	3	Gear Motor ASM	31	95-6231	2	Chain-HOC
11	340-2	3	Fitting-Straight	32	104-0108	2	U-Bolt
11:1	237-22	1	O-Ring	33	3218-5	4	Nut-Jam
11:2	237-42	1	O-Ring	34	302-5	4	Fitting-Grease
13	114-5671	1	Bracket-Sensor	35	114-4831	1	LH Lift Cylinder ASM
14	321-4	2	Screw-HH	36	114-4830	1	RH Lift Cylinder ASM ●
15	3256-22	2	Washer-Flat	37	340-77	4	Fitting-Elbow, 90 DEG
16	106-9288	1	Sensor-Proximity, Ferrous	37:1	237-22	1	O-Ring
17	3229-34	1	Screw-CARR	37:2	237-42	1	O-Ring
18	100-4872	1	Plate-Switch, Neutral	38	104-8300	3	Nut-HF, NI
19	3234-29	2	Screw-HHF	39	32121-110	2	Pin-Roll, Slotted
20	1-811010	2	Plug	40	3296-49	2	Nut-Lock, NI
21	125-1912	2	Pin-Pivot	41	100-3017	2	*obs Pin-Lift Arm
22	3296-25	4	Nut-Lock, NI	42	3296-2	1	Nut-Lock, NI
23	110-5962	1	LH Front Lift Arm ASM	43	3272-30	4	Pin-Cotter
23:1	104-0015	2	Bushing-Flange	44	110-6006	2	Pin-Clevis
23:2	302-11	2	Fitting-Lube, 45 DEG	45	104-7201	2	Nut-HF, NI
23:3	105-7468	1	Stud-Tapered	46	3230-4	1	Bolt-CARR
23:4	105-7441	1	Bearing-Spherical	47	114-0738-01	1	Sensor Trigger ASM
23:5	32128-42	1	Nut-HF	48	3257-3	3	Key-Woodruff
23:6	32151-34	1	Ring-Retaining	49	69-8790-01	2	Plate-Reinforcing
24	110-5966	1	RH Front Lift Arm ASM	50	75-7730	2	Washer-Thrust
24:1	104-0015	2	Bushing-Flange ●	51	3256-29	8	Washer-Flat

● Not illustrated

■ Not serviced separately

 Wing Lift Arm Assembly

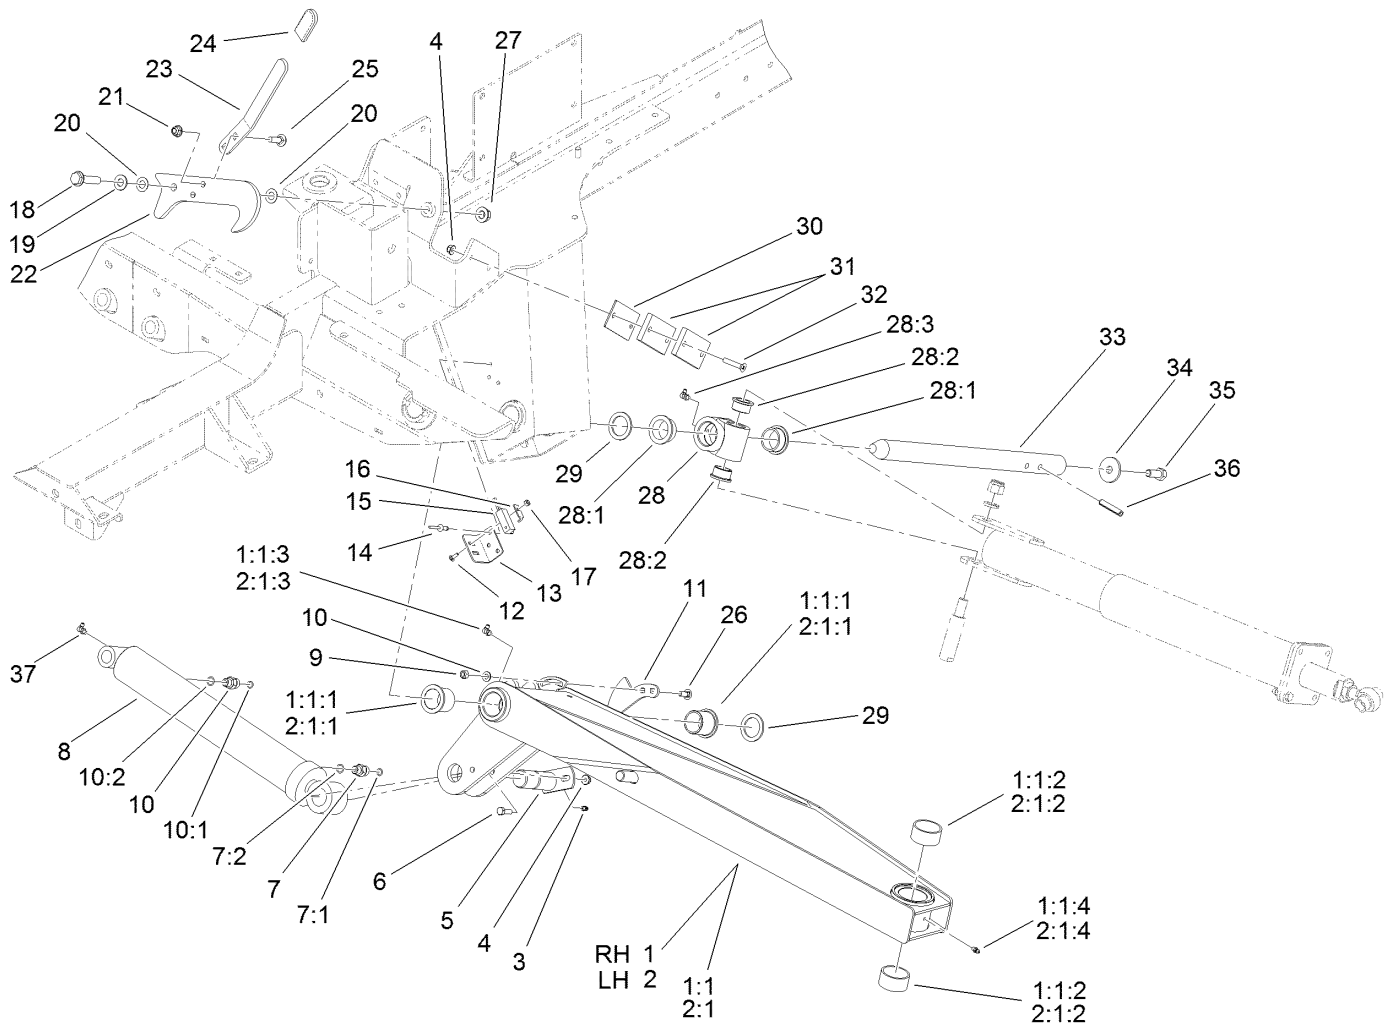


Wing Lift Arm Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	114-5650-01	1	RH Lift Arm ASM ●	14	3290-412	6	Rivet-Blind
1:1		1	Arm-Lift, RH ●■	15	106-9288	2	Sensor-Proximity, Ferrous
1:1:1	69-6470	2	Bushing-Caster ●	16	100-4872	2	Plate-Switch, Neutral
1:1:2	114-5596	2	Bushing-Straight ●	17	3296-2	2	Nut-Lock, NI
1:1:3	302-60	1	Fitting-Grease ●	18	3234-46	2	Screw-HHF
1:1:4	302-5	1	Fitting-Grease ●	19	3256-26	2	Washer-Flat
2	114-5660-01	1	LH Lift Arm ASM	20	104-3577	4	Washer
2:1		1	Arm-Lift, LH ■	21	104-8301	4	Nut-HF, NI
2:1:1	69-6470	2	Bushing-Caster	22	119-7723-03	2	Latch-Wing
2:1:2	114-5596	2	Bushing-Straight	23	114-5659-03	2	Handle-Latch
2:1:3	302-60	1	Fitting-Grease	24	48-7081	2	Grip-Plastic
2:1:4	302-5	1	Fitting-Grease	25	3231-25	4	Bolt-CARR
3	302-5	2	Fitting-Grease	26	3230-16	4	Screw-CARR
4	104-8300	6	Nut-HF, NI	27	99-5107	2	Nut-Lock
5	125-1912	2	Pin-Pivot	28	115-5468	2	Pivot Hub ASM
6	322-5	2	Screw-HH	28:1	115-5469	2	Bushing-Flange
7	340-2	2	Fitting-Straight	28:2	114-5680	2	Bushing-Flange
7:1	237-22	1	O-Ring	28:3	302-60	1	Fitting-Grease
7:2	237-42	1	O-Ring	29	98-1452	4	Washer-Thrust
8	114-5685	2	HYD Cylinder ASM	30	114-5675	2	Shim-Pad
9	104-8300	4	Nut-HF, NI	31	69-9300	4	Pad-Bumper
10	119-7707	2	Fitting-HYD, Straight (Check)	32	3289-22	4	Screw-FH
10:1	237-22	1	O-Ring	33	121-3882	2	Shaft-Pivot, Lift Arm
10:2	237-42	1	O-Ring	34	106-2008	2	Washer-Thrust
11	112-7339	2	Plate-Sensing	35	325-5	2	Screw-HH
12	3229-34	2	Screw-CARR	36	117-5479	4	Pin-Spring
13	112-7338	2	Plate-Aluminum	37	302-60	2	Fitting-Grease

● Not illustrated

 
■ Not serviced separately

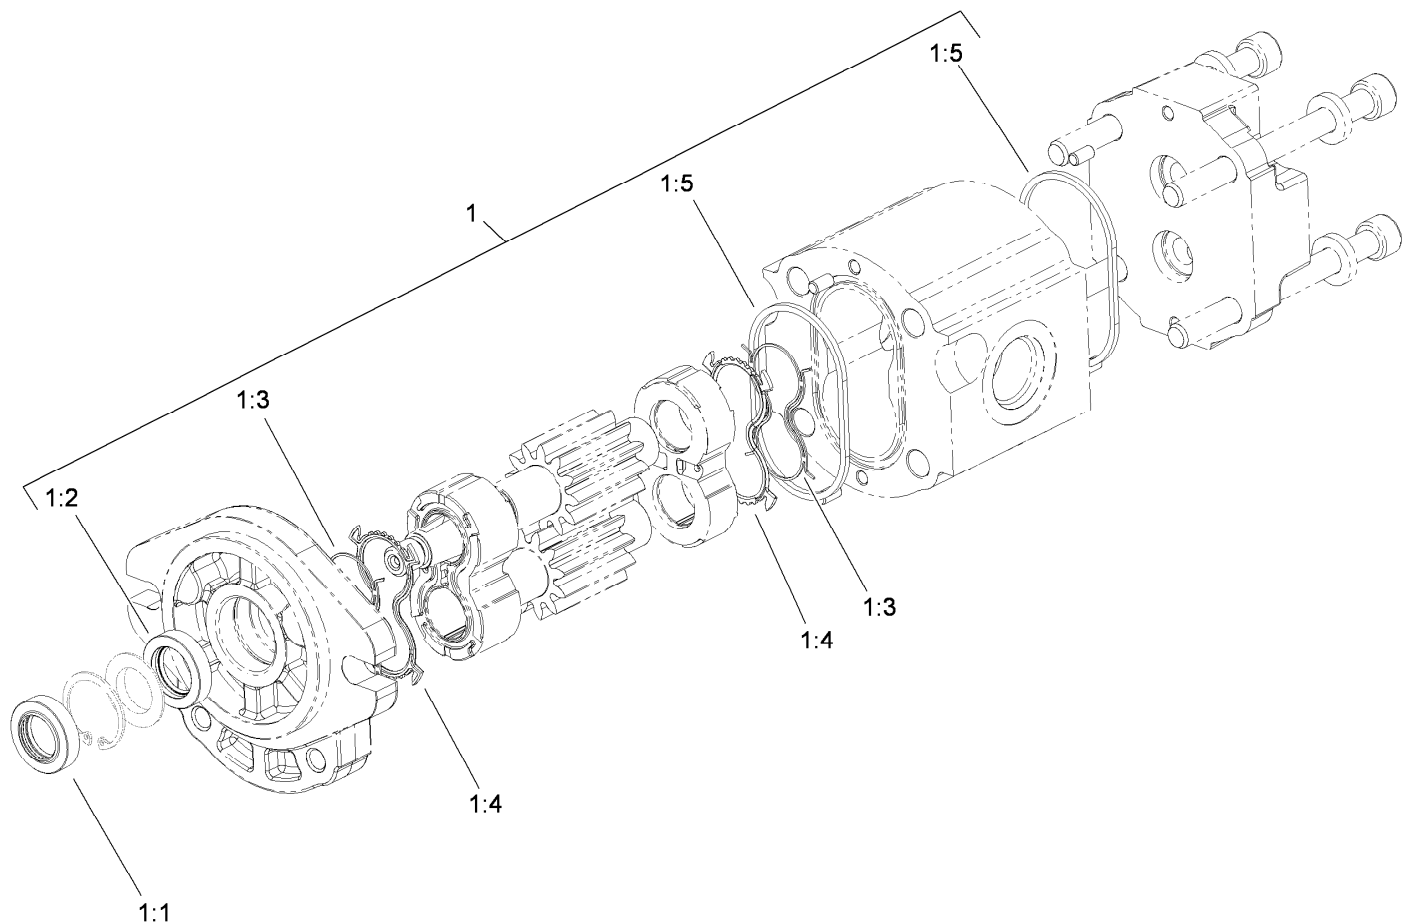

Hydraulic Gear Motor Assembly No. 114-4940

Ref.	Part Number	Qty.	Description
1	114-5620	1	Seal Kit
1:1		1	Seal-Shaft ●
1:2		1	Seal-Shaft ●
1:3		2	Seal-Anti Extrusion ●
1:4		2	Seal-Plate, Balancing ●
1:5		2	O Ring-Housing ●

 
● Not serviced separately

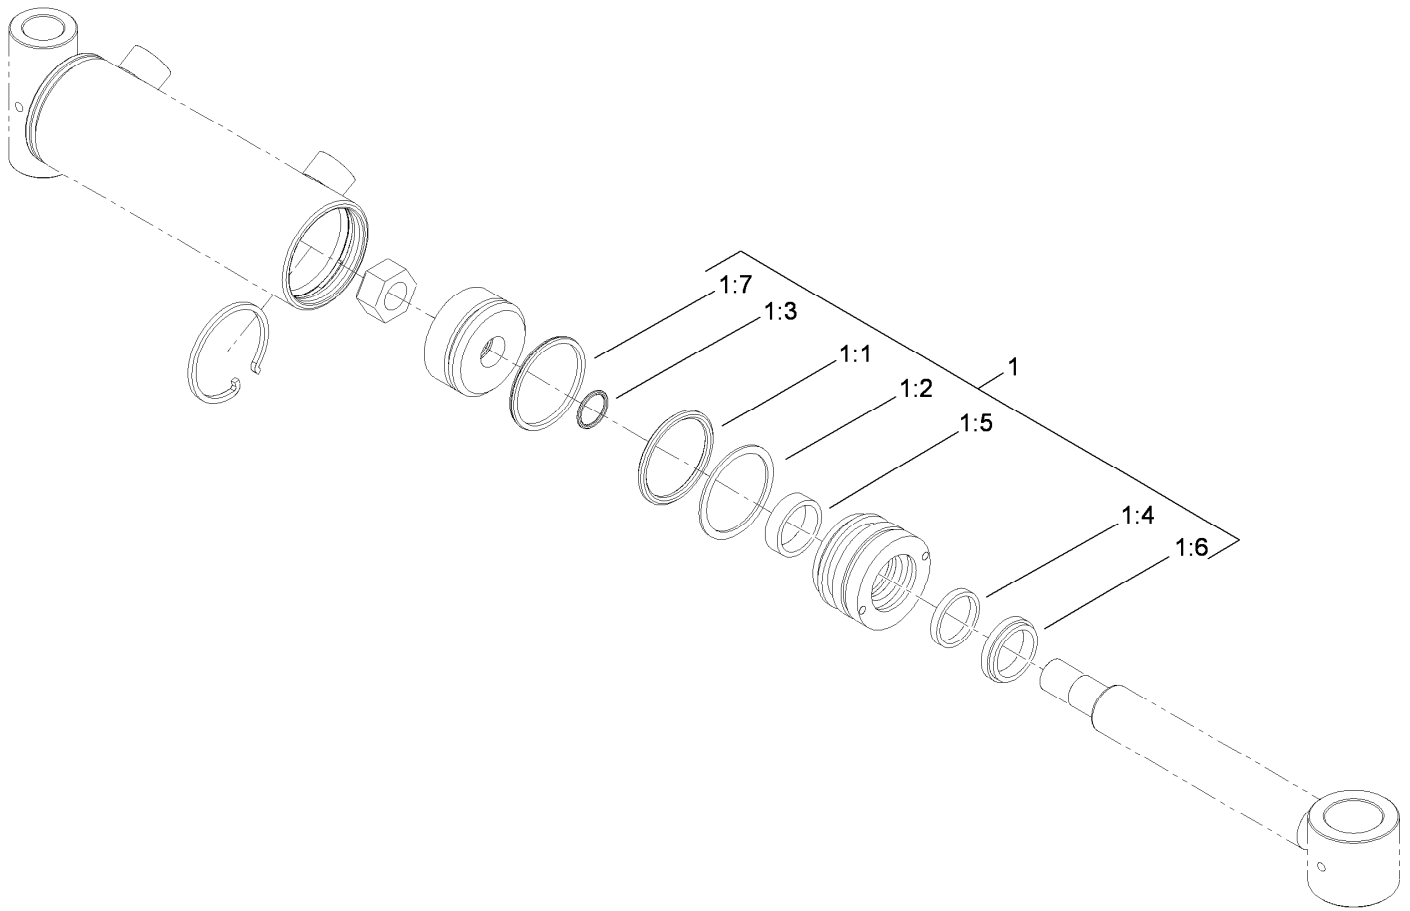

Hydraulic Cylinder Assembly No. 114-4831

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	114-5611	1	Seal Kit
1:1		1	O-Ring ●
1:2		1	Backup ●
1:3		1	Seal-Bp ●
1:4		1	Seal-Bs ●
1:5		1	Ring-Wear ●
1:6		1	Seal-Dust ●
1:7		1	O-Ring ●

 
● Not serviced separately

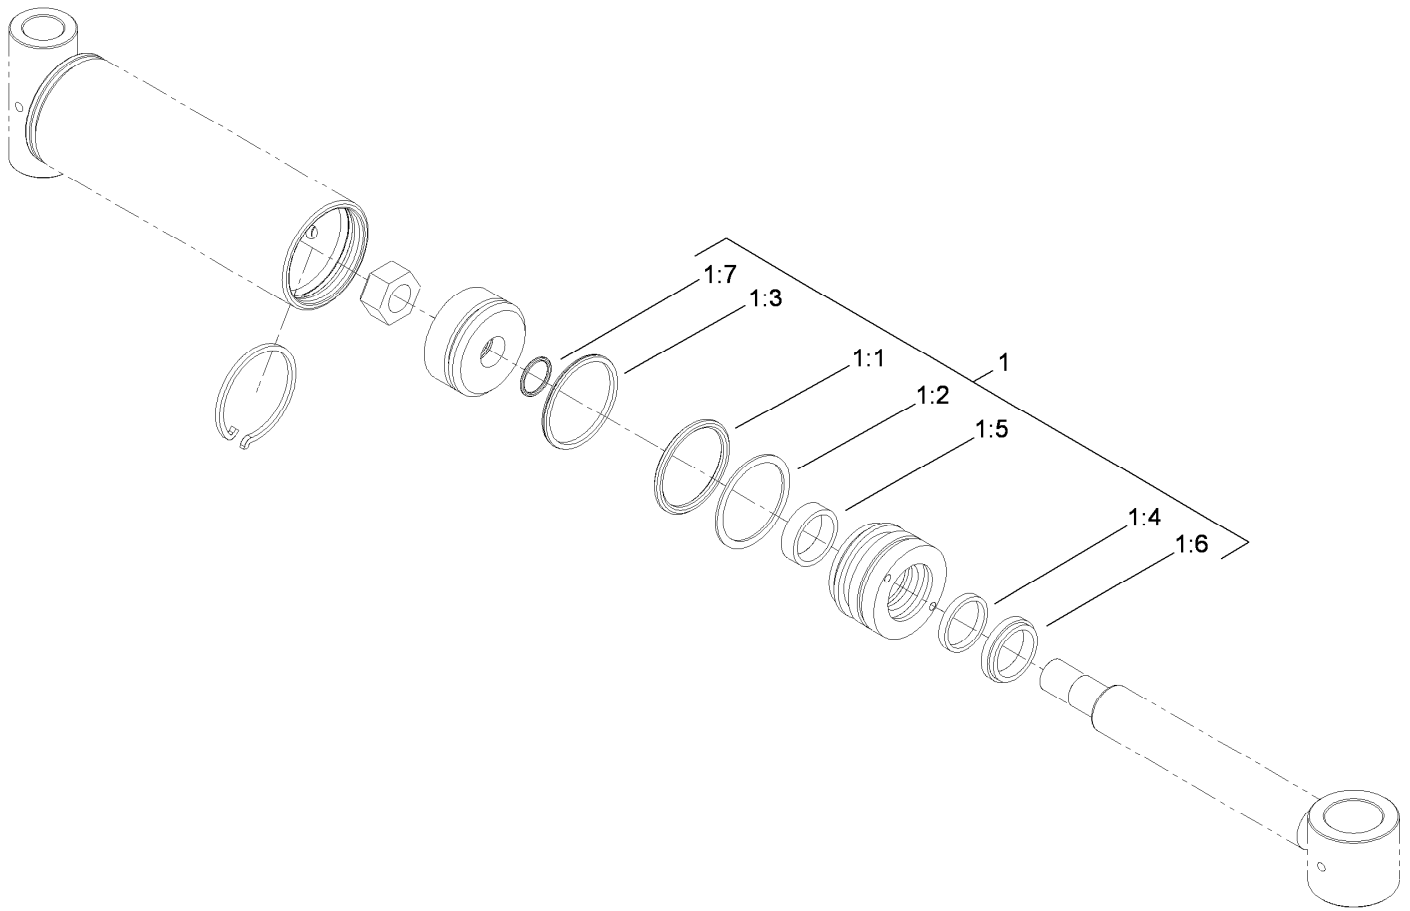

Hydraulic Cylinder Assembly No. 114-4830

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	114-5611	1	Seal Kit
1:1		1	O-Ring ●
1:2		1	Backup ●
1:3		1	Seal-Bp ●
1:4		1	Seal-Bs ●
1:5		1	Ring-Wear ●
1:6		1	Seal-Dust ●
1:7		1	O-Ring ●

 ● Not serviced separately

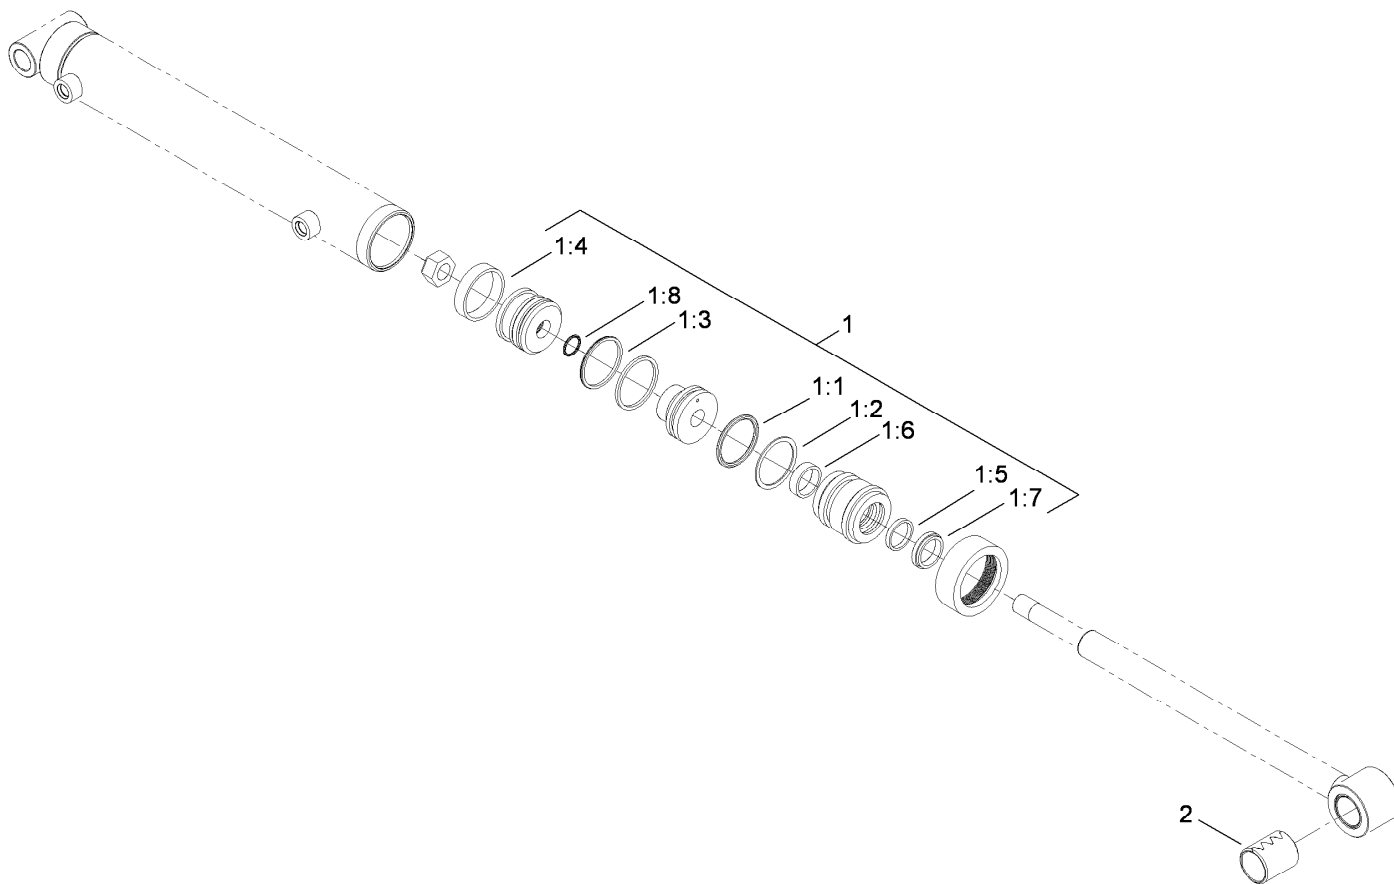


Hydraulic Cylinder Assembly No. 114-5685

Ref.	Part Number	Qty.	Description
1	114-5612	1	Seal Kit
1:1		1	O-Ring ●
1:2		1	Backup ●
1:3		1	Seal-Bp ●
1:4		1	Ring-Wear ●
1:5		1	Seal-Bs ●
1:6		1	Ring-Wear ●
1:7		1	Seal-Dust ●
1:8		1	O-Ring ●
2	117-9407	1	Bushing-Connex

● Not serviced separately

 Wing Connection and Impact Arm Assembly

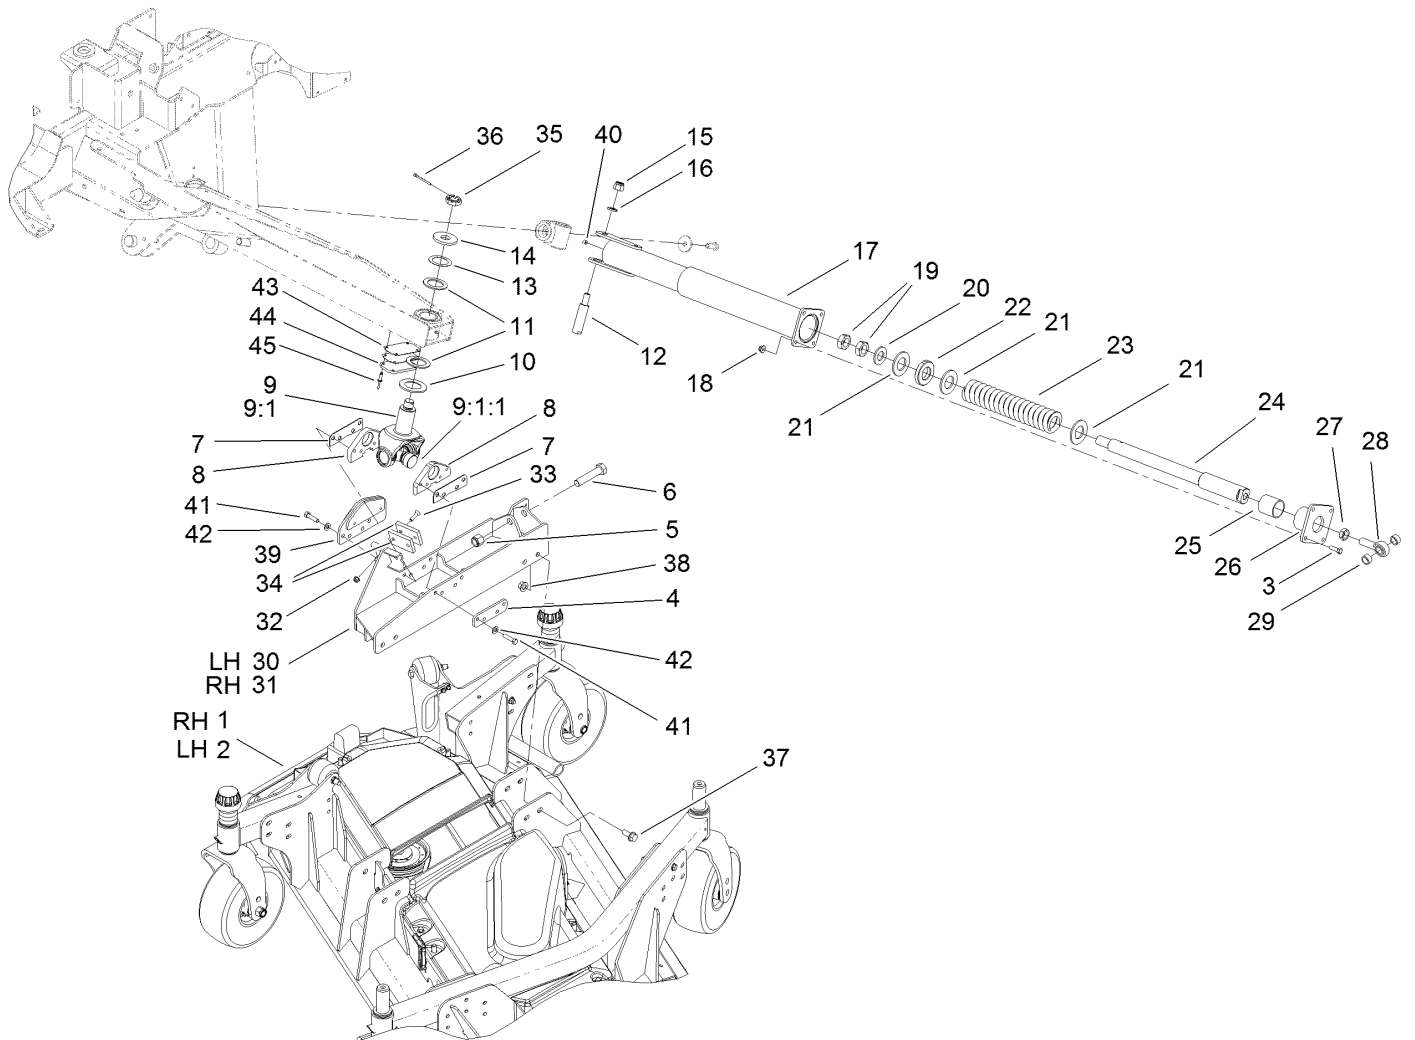


Wing Connection and Impact Arm Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Right Deck ASM ● ■	23	114-5993	2	Spring-Compression
2		1	Left Deck ASM ■	24	117-9404	2	Shaft-Spring
3	323-7	8	Screw-HH	25	114-5989	2	Bushing-Plain
4	117-9419	2	Plate-Spacer	26	114-5677-03	2	Housing
5	3296-51	2	Nut-Lock, NI	27	3220-7	2	Nut-Jam
6	328-5	2	Screw-HH	28	105-2806	2	End-Rod
7	104-0731	4	Shim	29	74-3730	4	Spacer-Spindle, Rear
8	115-8870-03	4	Mount-Base	30	114-0925-01	1	Connection-Deck, LH
9	114-5640-03	2	Joint Yoke ASM	31	114-0926-01	1	Connection-Deck, RH
9:1		1	Yoke-Joint ■	32	104-8300	4	Nut-HF, NI
9:1:1	104-4299	1	Cross And Bearing Kit	33	32108-103	4	Screw-FH
10	104-0720	2	Spacer	34	69-9290	4	Pad-Bumper
11	104-0721	4	Washer-Thrust	35	99-3139	2	Nut-Slotted
12	104-2281	2	Shaft-Pivot	36	3272-25	2	Pin-Cotter
13	114-5641	2	Washer-Thrust	37	3234-38	16	Screw-HHF
14	104-0719	2	Washer-Hardened	38	99-5107	16	Nut-Lock
15	3296-53	2	Nut-Lock, NI	39	119-4525-01	2	Stop
16	3253-8	2	Washer-Lock	40	285-17	2	Plug-Pipe
17	112-7330-03	2	Arm-Impact, Rear	41	323-43	16	Screw-HH
18	104-8301	8	Nut-HF, NI	42	100-4852	16	Washer-Hardened
19	3220-9	4	Nut-Jam	43	119-4522	4	Shim-Stop
20	3256-62	2	Washer-Flat	44	119-4521	2	Pad-Stop
21	114-5986	6	Washer-Plain	45	3269-35	8	Rivet-Blind
22	114-5992	2	Bearing-Plastic				

● Not illustrated

■ Not serviced separately

 
Hood and Bumper Assembly

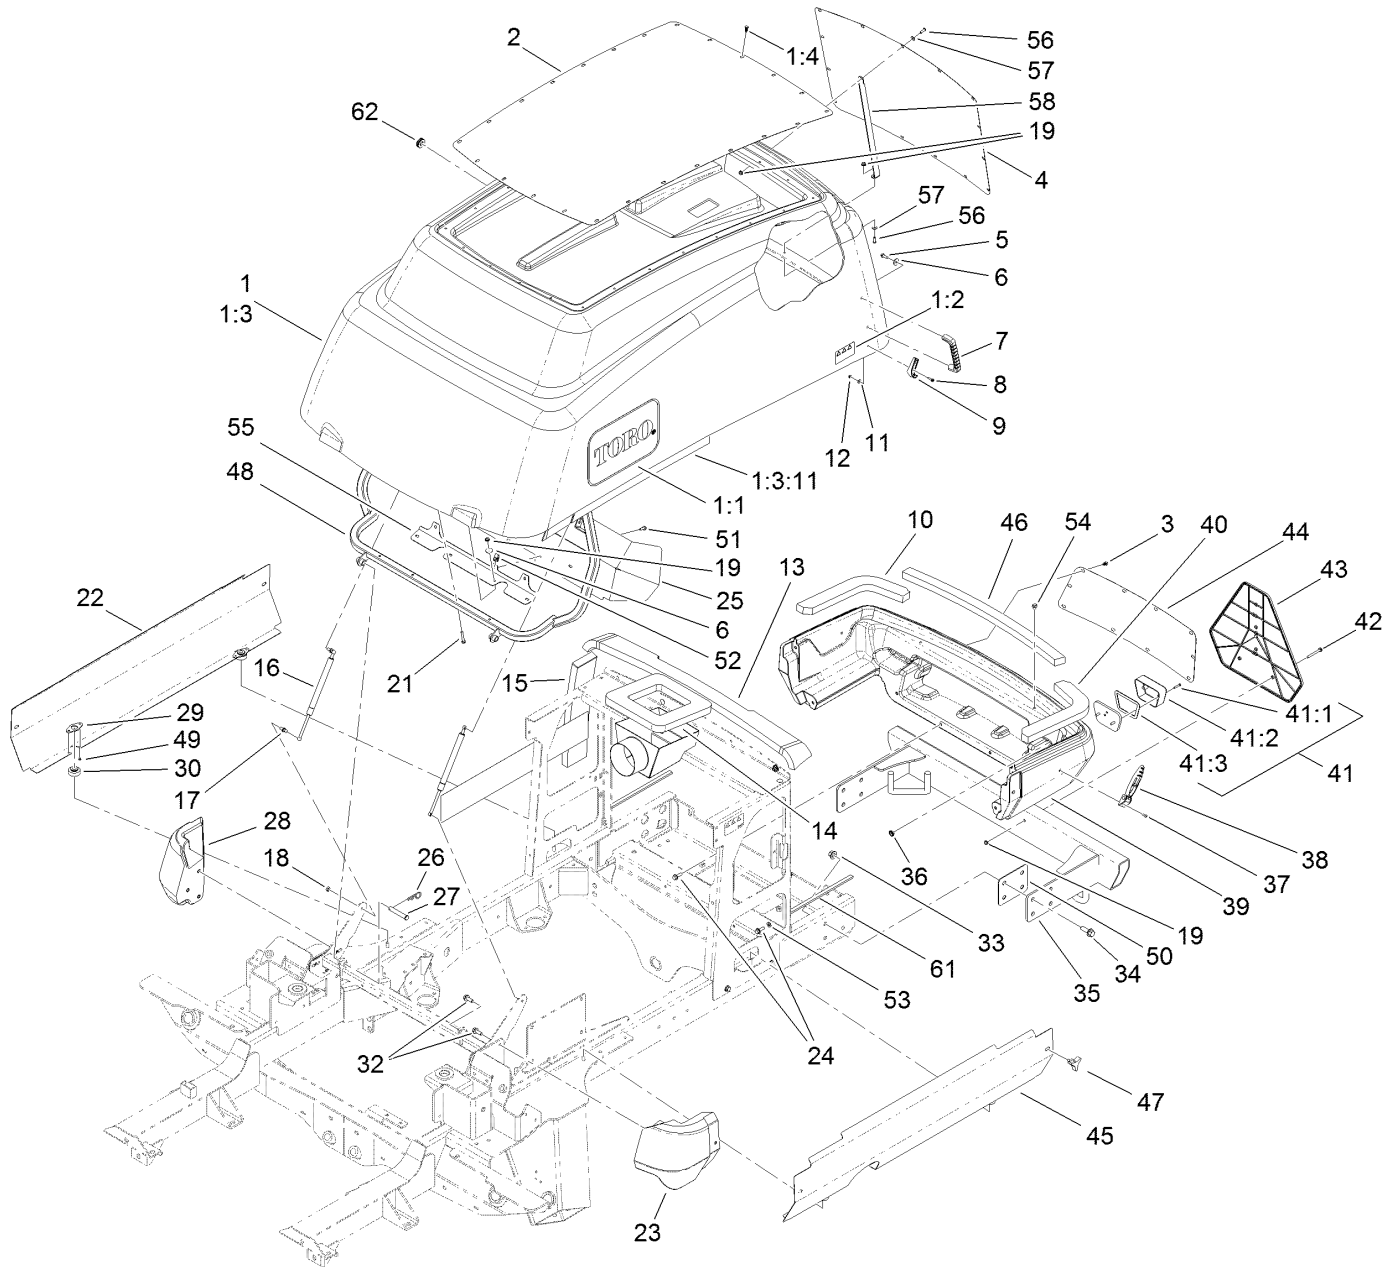

Hood and Bumper Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	117-9405	1	Hood ASM	32	3234-42	6	Screw-HHF
1:1	114-0990	2	Decal	33	99-5107	8	Nut-Lock
1:2	106-6754	2	Decal-Danger	34	100-6116	8	Screw-HHF
1:3		1	Hood ASM ●	35	115-5457-03	1	Bumper
1:3:11	114-5527	1	Tape-Heat Shield	36	3290-506	4	Palnut
1:4	117-2382	38	Plug-Plastic	37	3234-4	2	Screw-HHF
2	114-0076-03	1	Screen-Hood, Top	38	103-2898	2	Latch-Rubber
3	117-2382	48	Plug-Plastic	39	119-8251	1	Shroud ASM-Lower, Rear
4	114-0077-03	1	Screen-Hood, Back	40	114-0188	1	Foam-Rear, LH
5	46-8091	4	Screw-HWH	41	104-6662	2	Stop And Tail Lamp ASM
6	87-6630	12	Washer-Plain	41:1	32144-93	4	Screw-PPHTF
7	65-5100	2	Handle-Door	41:2	87-6300	2	Lens-Light, Tail
8	3274-39	4	Screw-HSBH	41:3	87-6310	2	Gasket-Light, Tail
9	103-2897	2	Latch-Catch	42	114-8410	2	Screw-HHF
10	114-0187	1	Foam-Rear, RH	43	92-7760	1	Emblem-Vehicle, Slow Moving
11	3256-14	4	Washer-Flat	44	114-4897-03	1	Screen-Shroud, Lower
12	3296-12	4	Nut-Lock, NI	45	114-5592-03	1	Panel-Side, LH
13	114-0185	1	Foam-Hood, Top	46	114-0183	1	Foam-Hood, Rear
14	114-0186	1	Foam-Hood, Air Box	47	92-9674	4	Knob
15	114-0184	2	Foam-Hood, Side	48	114-5548-03	1	Frame-Hood
16	114-5532	2	Cylinder-Gas	49	1-803035	8	Rivet-Pop
17	103-5752	4	Stud-Ball	50	115-5458-03	1	Shim-Bumper
18	32153-3	4	Nut-Hex, Side Deform	51	3234-4	3	Screw-HHF
19	104-7201	12	Nut-HF, NI	52	107069	3	Clip
21	321-10	8	Screw-HH	53	3256-23	4	Washer-Plain
22	114-4890-03	1	Panel-Side	54	32180-030	2	Clip-Tie
23	117-5456	1	Shroud-Front, LH	55	115-5497-03	1	Plate-Support
24	3234-29	8	Screw-HHF	56	99-7335	2	Screw
25	115-5498-03	1	Shield-Heat	57	3256-1	2	Washer-Flat
26	92-2762	2	Pin-Hair	58	115-5522-03	1	Strap-Hood
27	283-55	2	Pin-Clevis	61	107-8676	2	Seal-Foam
28	117-5457	1	Shroud-Front, RH	62	104-1453	1	Grommet
29	114-5619	4	Plate-Grommet				
30	114-4869	4	Grommet				

 
● Not serviced separately

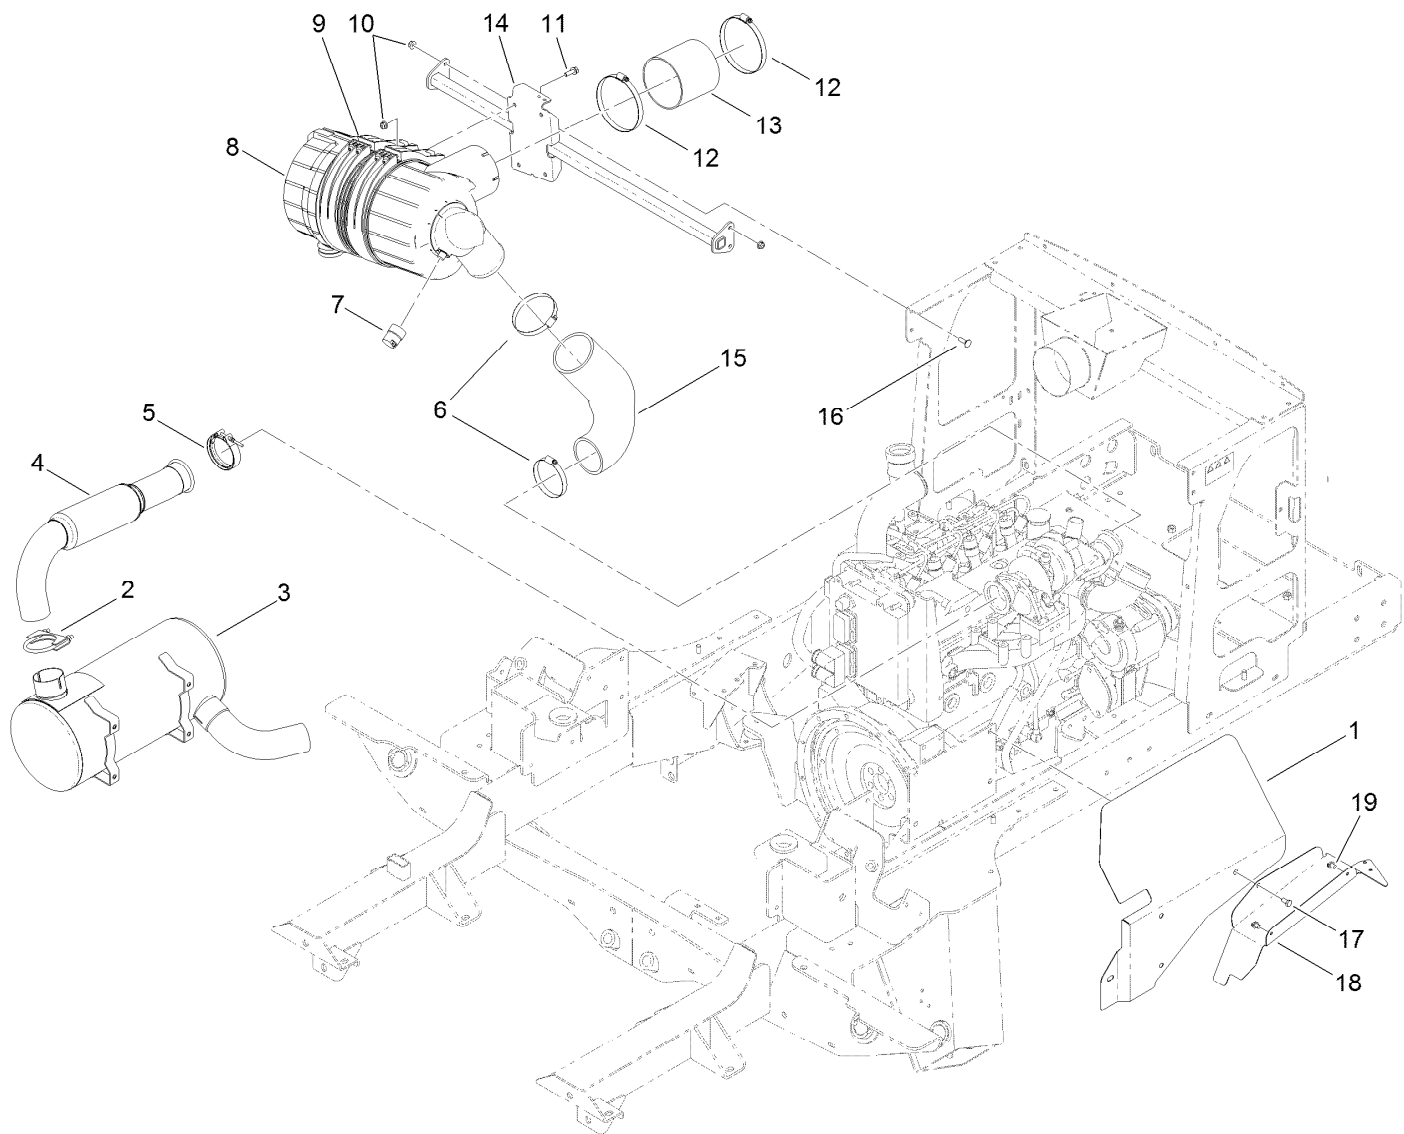

Air Cleaner and Muffler Assembly

Ref.	Part Number	Qty.	Description
1	117-9417-03	1	Shield-Heat
2	112-7310	1	Clamp-Muffler
3	114-5589	1	Muffler
4	114-5588	1	Tube-Exhaust
5	112-7323	1	Clamp-Exhaust
6	114-4938	2	Clamp-Worm
7	69-1940	1	Indicator-Electrical
8	112-7329	1	Air Cleaner ASM
9	112-7340	2	Band-Mounting, Air Cleaner
10	104-8300	8	Nut-HF, NI


Ref.	Part Number	Qty.	Description
11	3234-29	4	Screw-HHF
12	2412-46	2	Clamp
13	112-7371	1	Hose-Air
14	112-7348-03	1	Mount-Cleaner, Air
15	125-5323	1	Hose-Intake, Air
16	3230-23	4	Bolt-CARR
17	33104-016	4	Screw-HHF
18	117-9448-03	1	Shield-Heat
19	32180-030	2	Clip-Tie

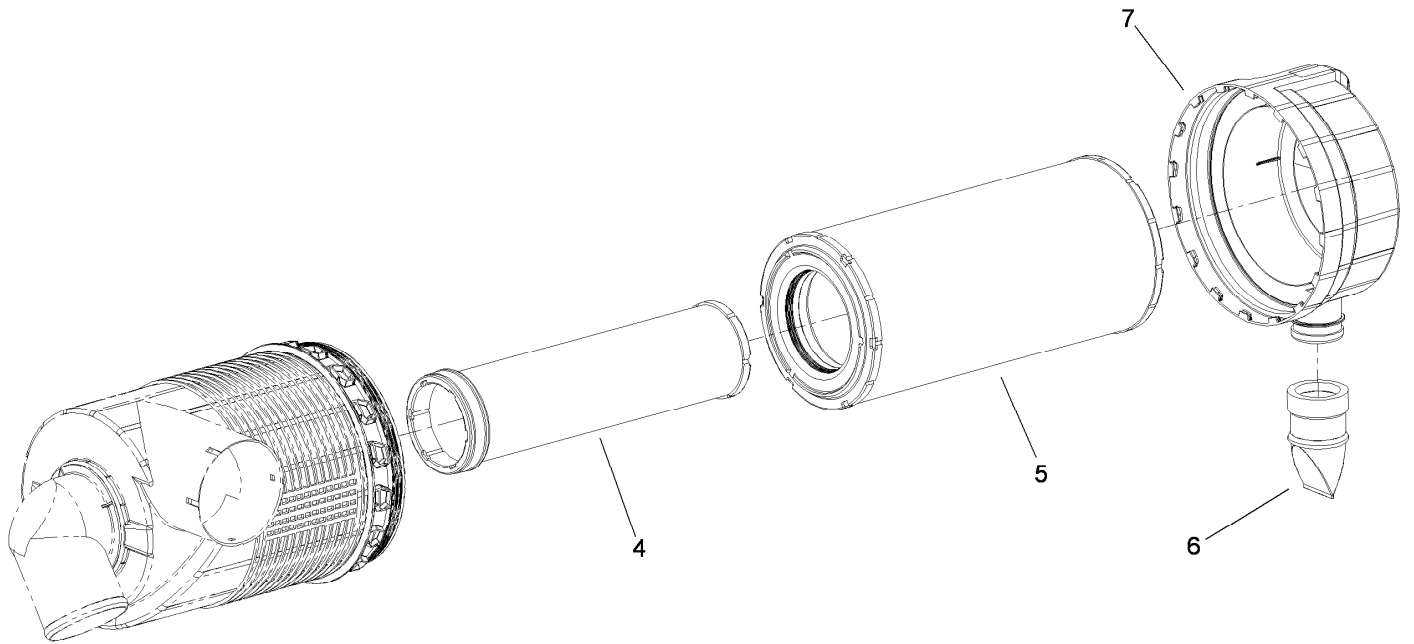 

Air Cleaner Assembly No. 112-7329

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	115-8877	1	Filter-Air, Engine (Safety)
5	115-8887	1	Filter-Air, Engine (Primary)
6	114-5624	1	Valve-Vacuator
7	114-5625	1	Cover ASM

 
Radiator and Fan Shroud Assembly

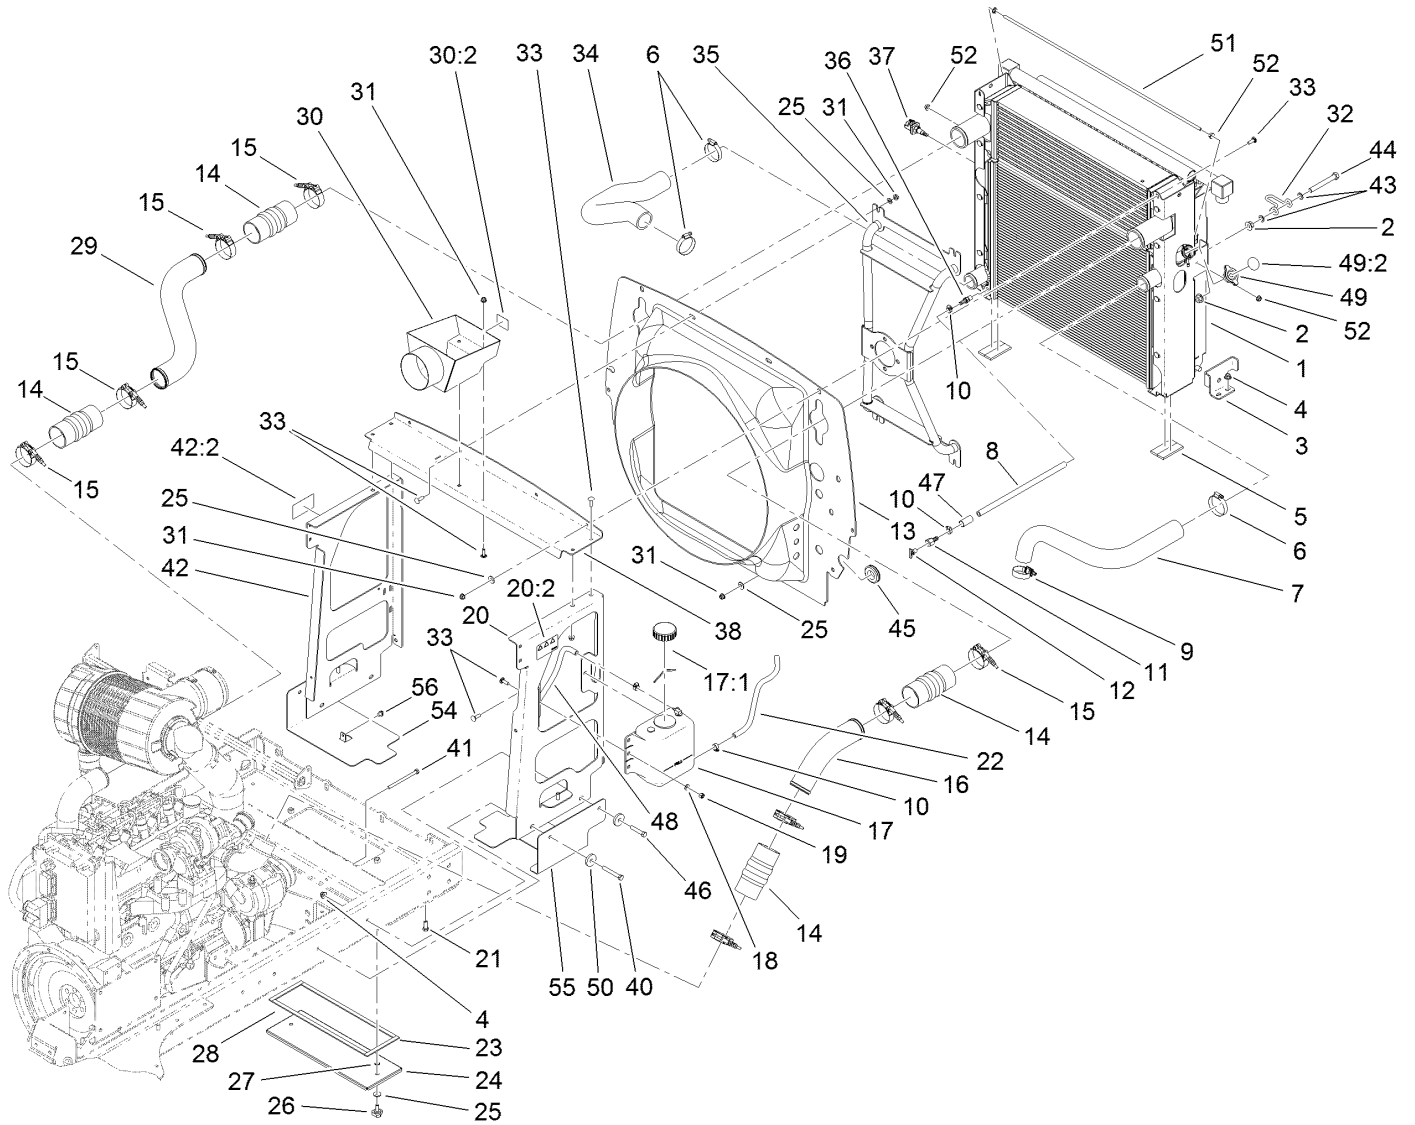

Radiator and Fan Shroud Assembly (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Radiator ASM ●	29	112-7282	1	Tube-Cac, Cold (Rigid)
2	32128-49	4	Nut-HHF	30	117-5468	1	Air Box ASM
3	115-5433-01	2	Plate-Support, Cooler	30:2	93-7275	1	Decal-Fluid, Starting
4	104-8301	8	Nut-HF, NI	31	104-8300	14	Nut-HF, NI
5	52-5260	4	Pad-Rubber	32	104-5429	2	Clamp-Form, Wire
6	2412-130	3	Clamp-Hose	33	3230-2	14	Bolt-CARR
7	112-7285	1	Hose-Upper, Radiator	34	112-7284	1	Hose-Lower, Radiator
8	94-5625	1	Hose	35	125-5255-03	1	Bracket-Motor, Fan
9	2412-111	1	Clamp-Hose, W/Liner	36	108-0342	1	Fitting-Straight
10	2412-108	5	Clamp-Worm	37	110-8828	1	Sensor-Level, Coolant
11	354-94	1	Fitting-Female, Barbed	38	114-0155-03	1	Support-Radiator, Top
12	93-5528	1	Fitting-Cock, Drain	40	323-14	2	Screw-HH
13	121-3870	1	Shroud-Fan	41	322-38	2	Screw-HH
14	112-7283	4	Tube-Cac, Flexible	42	115-5437	1	RH Radiator Support ASM
15	114-0031	8	Clamp, T-Bolt	42:2	106-6754	1	Decal-Danger
16	112-7281	1	Tube-Cac, Hot (Rigid)	43	41-8440	4	Washer
17	120-5571	1	Coolant Reservoir ASM	44	325-17	2	Screw-HH
17:1	87-7050	1	Cap-Reservoir	45	108-3723	2	Grommet
18	3256-23	2	Washer-Plain	46	323-11	2	Screw-HH
19	3296-29	2	Nut-Lock, NI	47	114-5530	1	Sleeve-Hose
20	115-5438	1	LH Radiator Support ASM	48	109-0309	1	Hose-Fuel
20:2	106-6754	1	Decal-Danger	49	115-5440	1	Radiator Cap ASM
21	323-6	4	Screw-HH	49:2	106-6755	1	Decal-Cap, Radiator
22	106-1126	1	Hose-Fuel	50	1-543610	4	Washer-Flat
23	105-0778	2	Strip-Foam	51	115-5496	1	Rod-Support
24	104-2287-03	1	Cover-Frame	52	32128-20	4	Nut-HF
25	3256-3	10	Washer-Flat	54	119-8254-01	1	Bracket-Diffuser, RH
26	95-9648	2	Knob	55	119-8255-01	1	Bracket-Diffuser, LH
27	32151-72	2	Ring-Retaining	56	32180-030	1	Clip-Tie
28	105-0777	2	Strip-Foam				

 ● Not serviced separately

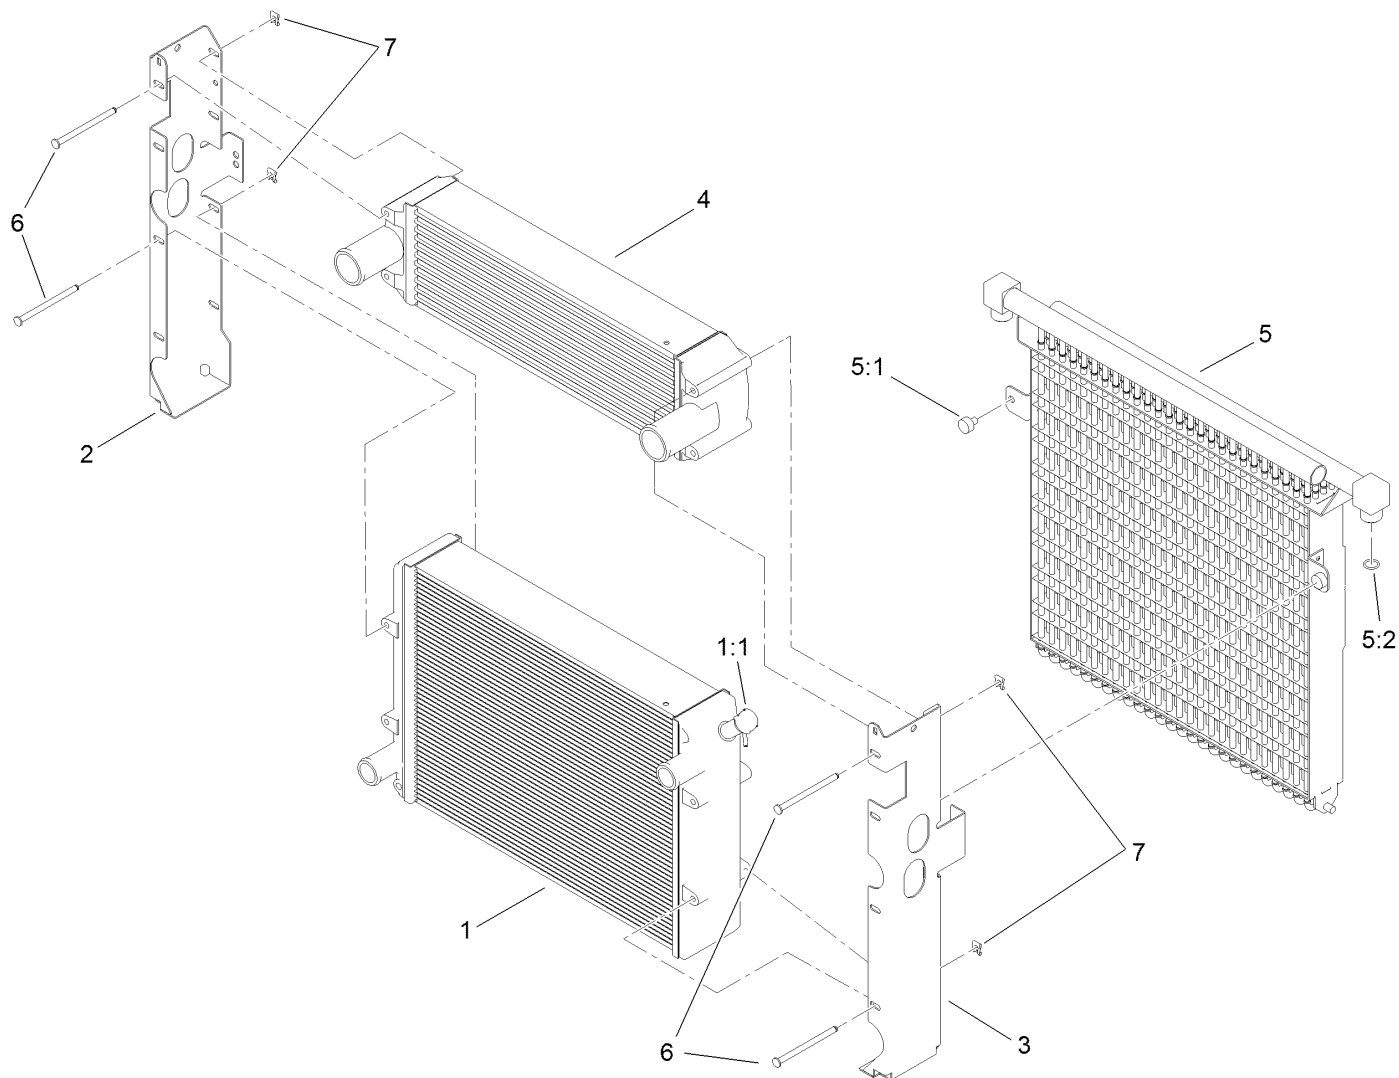

Radiator Assembly

Ref.	Part Number	Qty.	Description
1	114-5542	1	Radiator
1:1	93-5957	1	Cap-Radiator
2	114-5540	1	Bracket-Cooler, RH
3	114-5541	1	Bracket-Cooler, LH
4	114-5543	1	Cooler-Charge, Air
5	114-5544	1	Cooler-Oil
5:1	115-5495	2	Bumper-Rubber
5:2	340-65	2	O-Ring
6	114-5545	8	Pin
7	114-5546	8	Clip-Pin

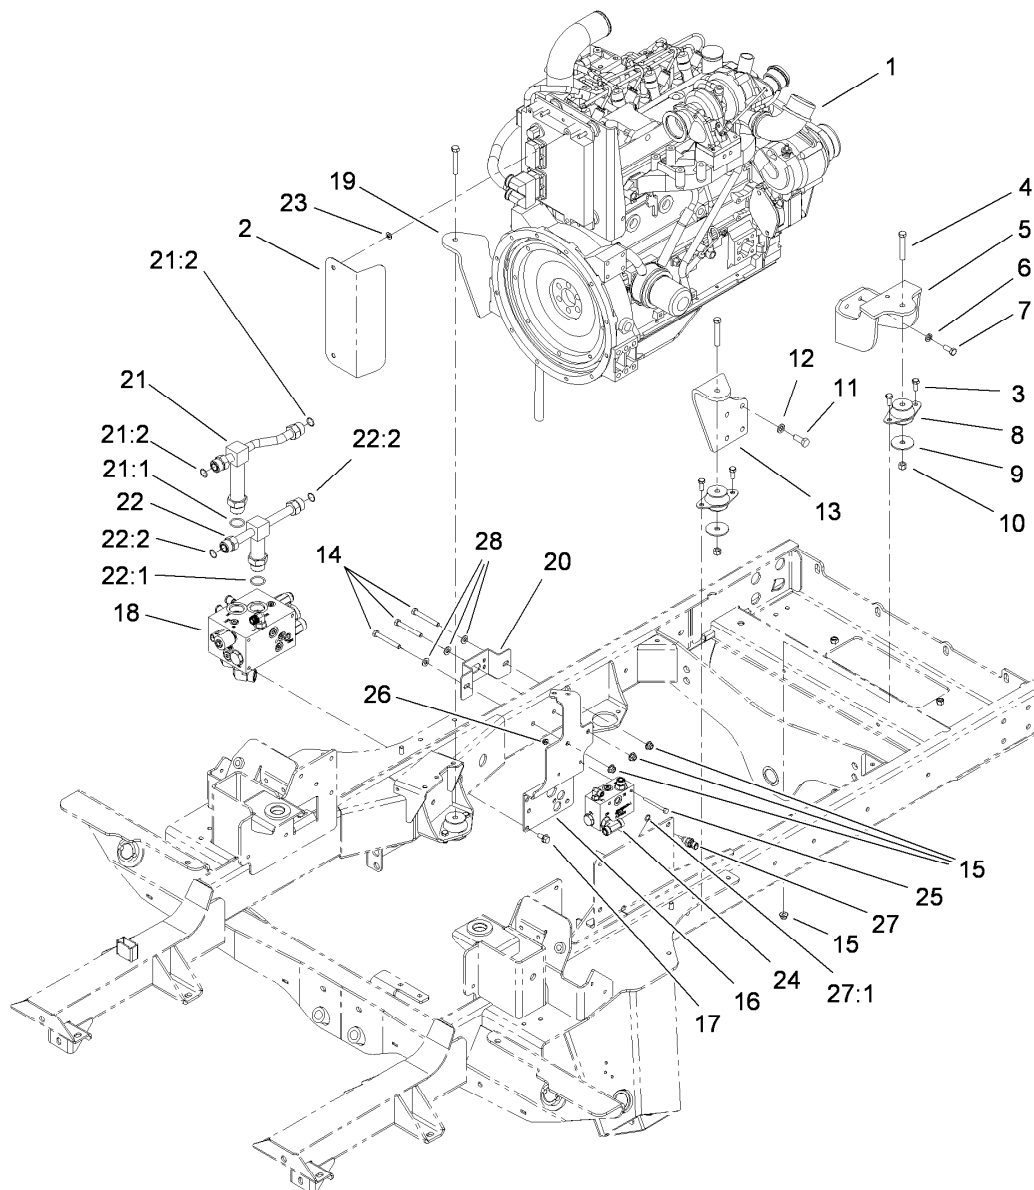 


Engine and Mount Assembly

Ref.	Part Number	Qty.	Description
1		1	Engine-Cummins ●
2	114-5591-03	1	Shield-Heat
3	323-5	7	Screw-HH
4	324-11	4	Screw-HH
5	110-6018-03	2	Mount-Engine, Rear
6	3253-6	8	Washer-Lock
7	33115-025	8	Screw-HH
8	53-9681	4	Mount-Engine
9	87-5100	4	Washer-Snubbing
10	3296-48	4	Nut-Hex
11	33116-030	8	Screw-HH
12	3253-7	8	Washer-Lock
13	110-6029-03	1	Mount-Front, LH (Engine Isolator)
14	323-14	3	Screw-HH
15	104-8301	11	Nut-HF, NI
16	112-7422-03	1	Plate-Mount, 4Wd Valve
17	3234-1	4	Screw-HHF


Ref.	Part Number	Qty.	Description
18		1	4Wd Manifold ASM ●
19	110-6028-03	1	Mount-Front, RH (Engine Isolator)
20	114-5560	1	Plate-Mount, Bulkhead
21	114-0878	1	Fitting-Special
21:1	237-146	1	O-Ring
21:2	237-58	2	O-Ring
22	114-0877	1	Fitting-Special
22:1	237-146	1	O-Ring
22:2	237-58	2	O-Ring
23	3256-23	2	Washer-Plain
24		1	Flush Manifold ASM ●
25	321-14	2	Screw-HH
26	104-7201	2	Nut-HF, NI
27	110-8829	1	Sender-Temperature
27:1	237-42	1	O-Ring
28	3256-24	3	Washer-Plain

 ● Not serviced separately

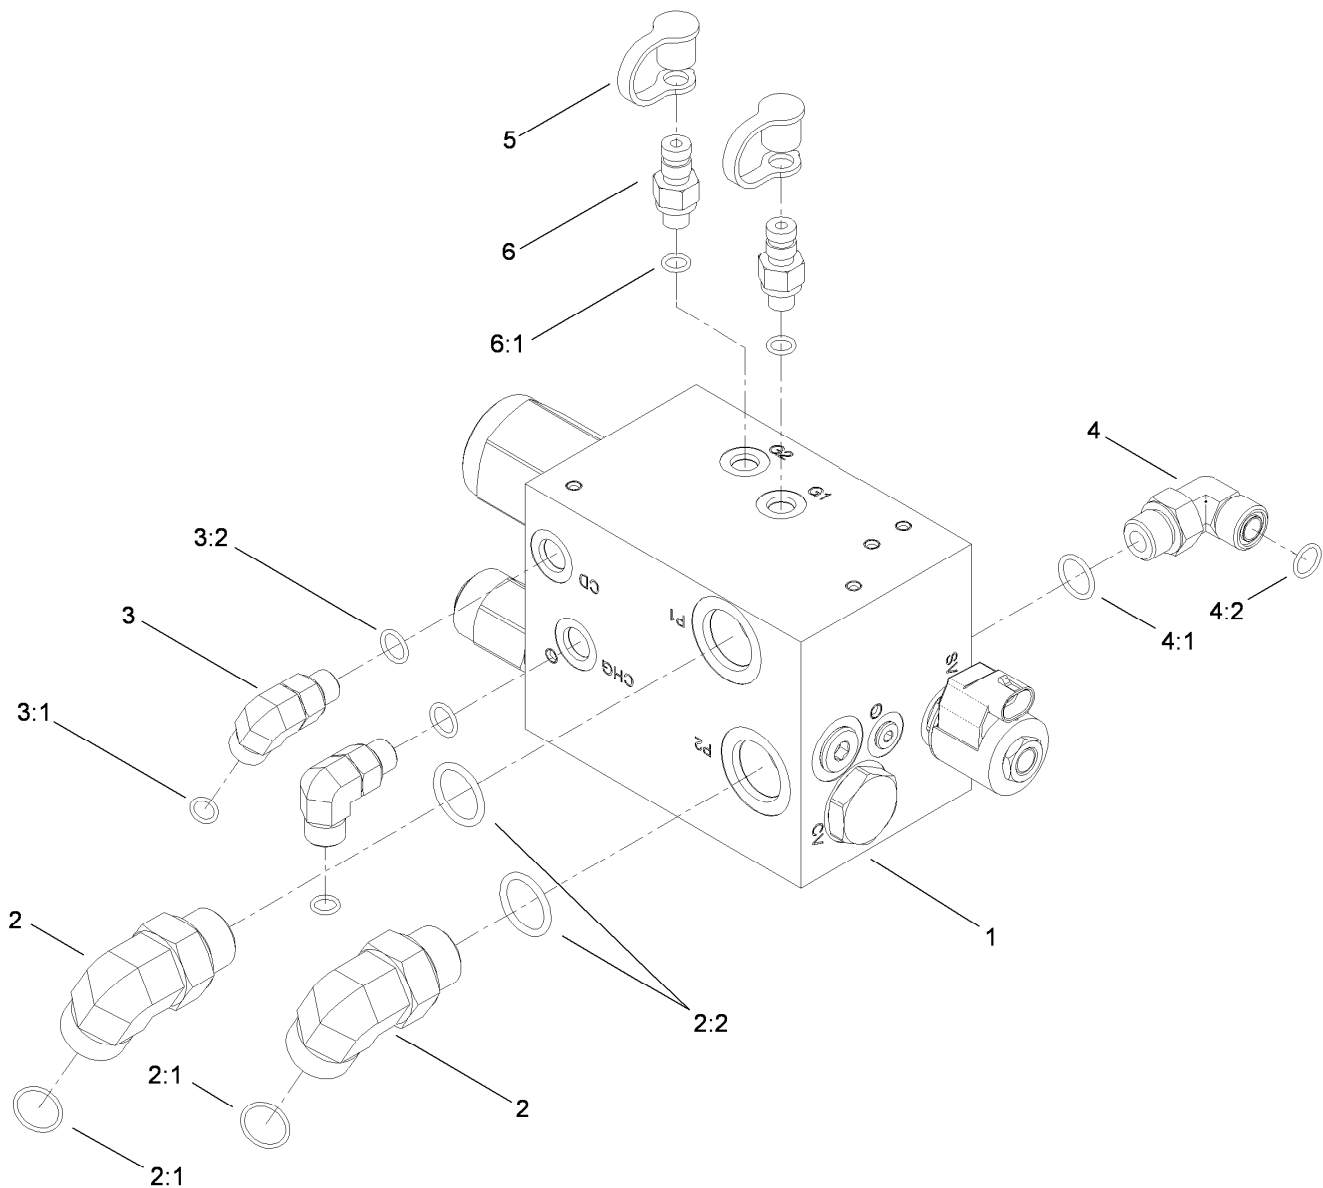

4 Wheel Drive Hydraulic Manifold Assembly


Ref.	Part Number	Qty.	Description
1	110-6063	1	Manifold-4Wd
2	340-142	2	Fitting-Elbow, 90 DEG
2:1	237-58	1	O-Ring
2:2	237-81	1	O-Ring
3	340-77	2	Fitting-Elbow, 90 DEG
3:1	237-22	1	O-Ring
3:2	237-42	1	O-Ring
4	340-98	1	Fitting-Elbow, 90 DEG
4:1	237-79	1	O-Ring
4:2	237-30	1	O-Ring
5	354-79	2	Cap-Dust
6	354-77	2	Fitting-Quick
6:1	237-78	1	O-Ring

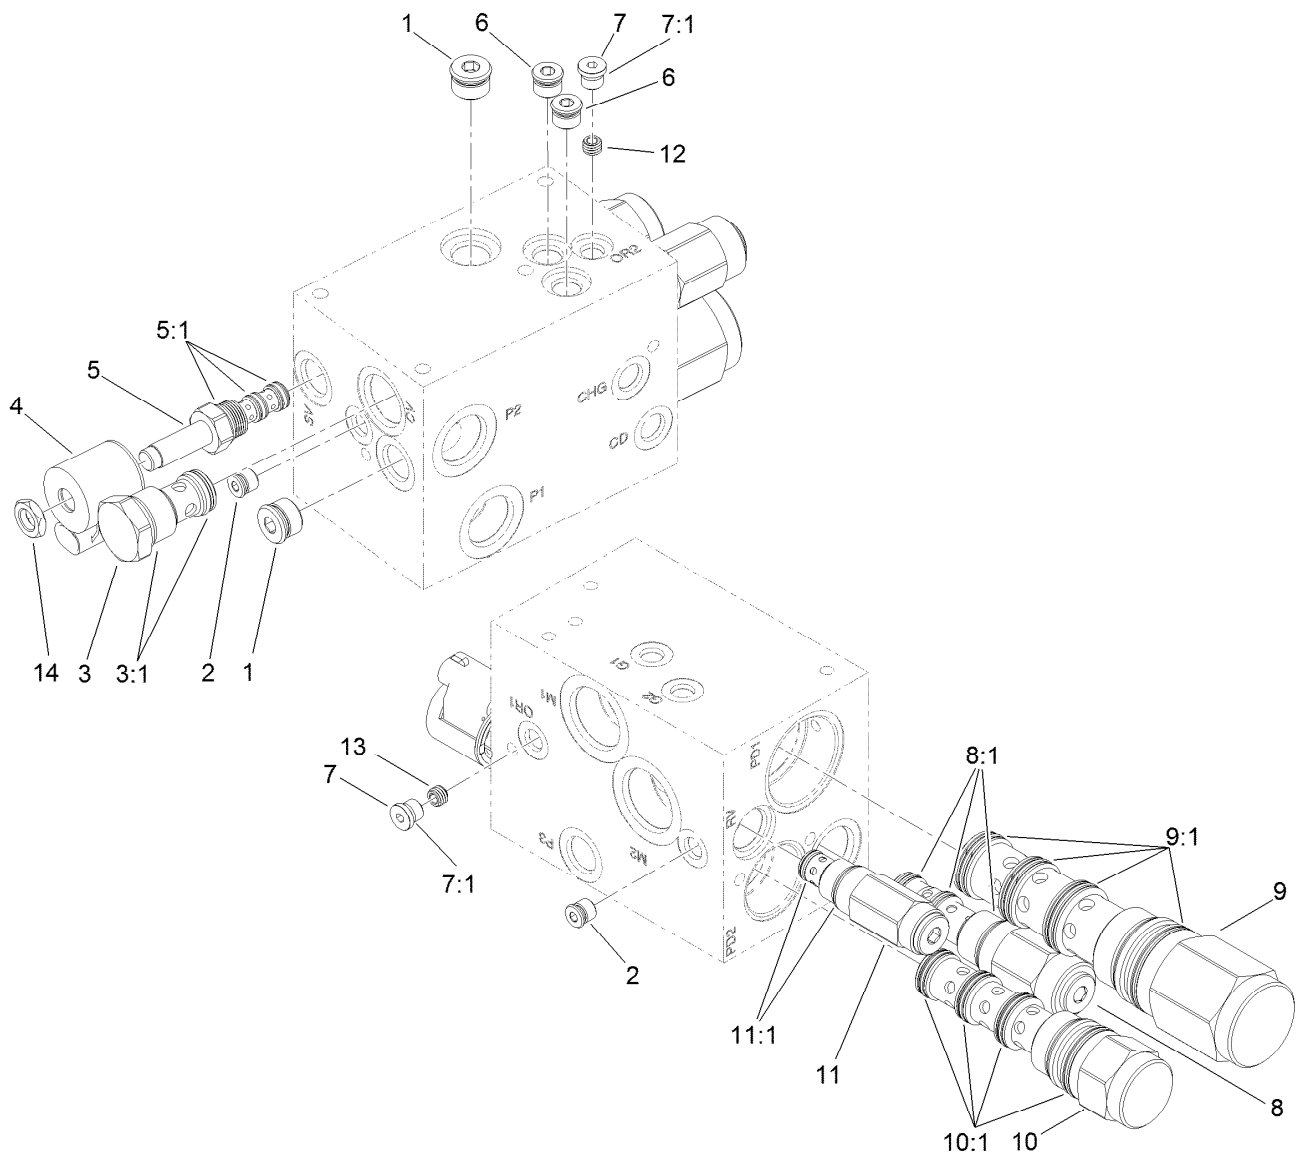 

4 Wheel Drive Hydraulic Manifold Assembly No. 110-6063


Ref.	Part Number	Qty.	Description
1	106-1027	2	Plug
2	106-1025	2	Plug-HYD
3	110-0468	1	Valve-Check, 5 PSI
3:1	110-0470	1	Seal Kit
4	105-9333	1	Coil-12Vdc
5	106-1995	1	Valve-3 Way
5:1	110-8773	1	Seal Kit
6	106-1026	2	Plug-HYD
7	353-990	2	Plug ASM
7:1	237-78	1	O-Ring
8	110-6069	1	Valve-Pressure, Red/Rel

Ref.	Part Number	Qty.	Description
8:1	110-6068	1	Seal Kit
9	112-7394	1	Directional-Pilot
9:1	115-5415	1	Seal Kit
10	110-0491	1	Valve-Directional
10:1	106-6775	1	Seal Kit
11	119-7724	1	Valve-Relief, Free Rev
11:1	110-6316	1	Seal Kit
12	107-1987	1	Orifice-0.040
13	110-5973	1	Orifice-0.030
14	110-2634	1	Nut-Coil

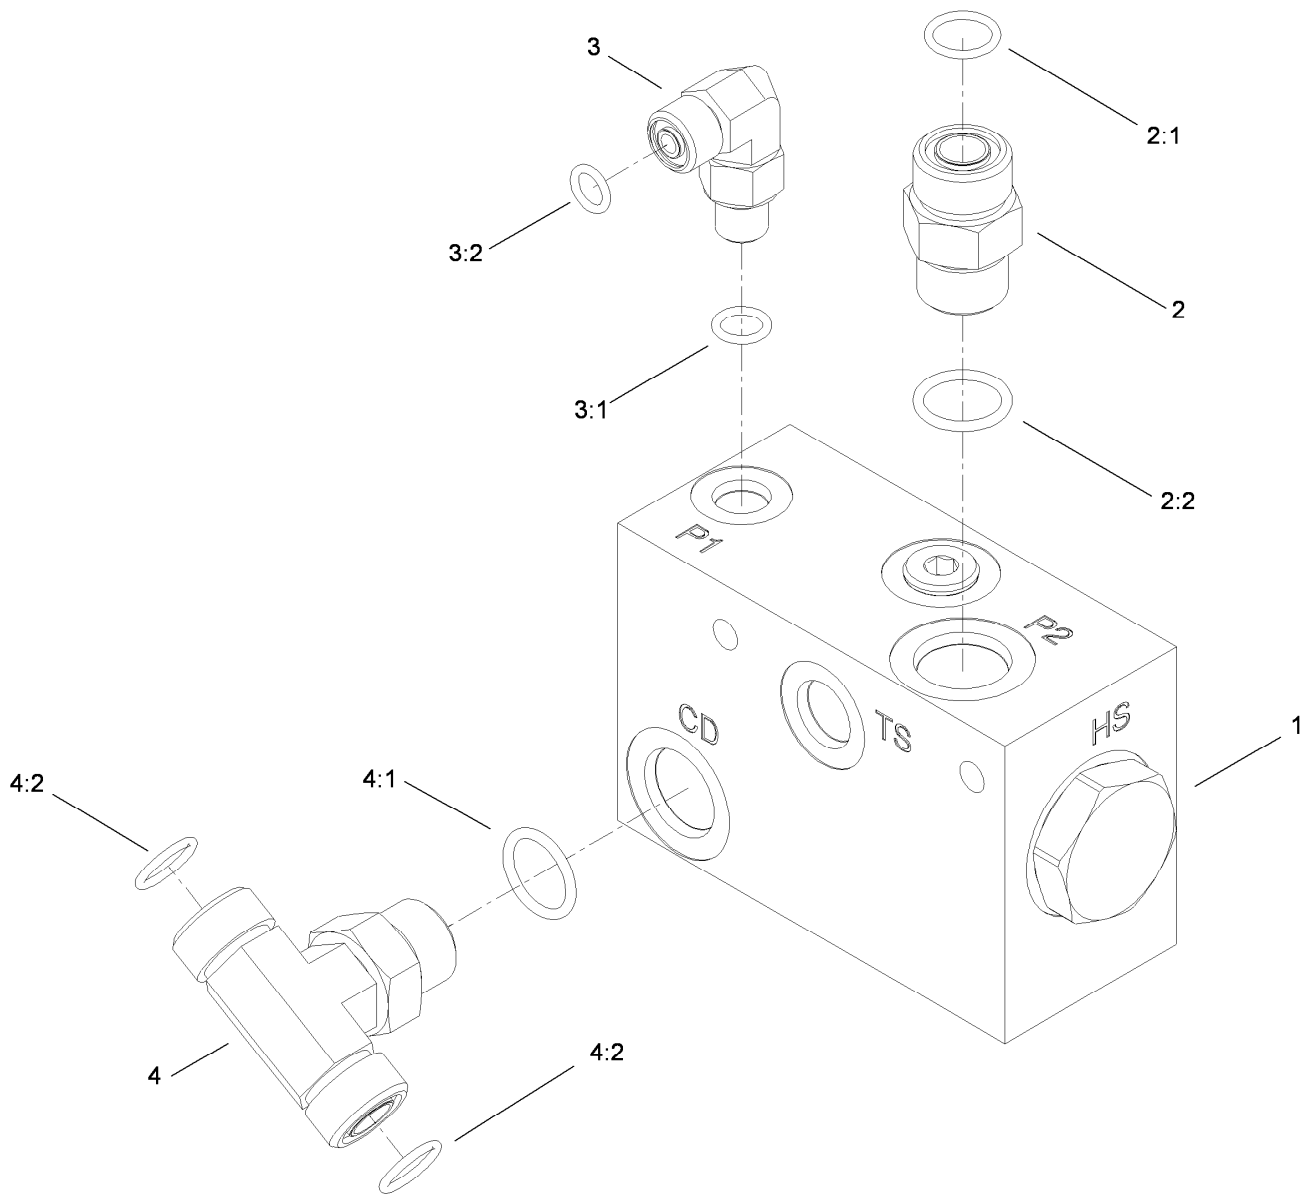 


Flush Manifold Assembly

Ref.	Part Number	Qty.	Description
1	120-9869	1	Manifold-Flush
2	340-4	1	Fitting-Straight
2:1	237-30	1	O-Ring
2:2	237-79	1	O-Ring
3	340-132	1	Fitting-Elbow, 90 DEG
3:1	237-78	1	O-Ring
3:2	237-21	1	O-Ring
4	340-157	1	Fitting-HYD, Tee
4:1	237-79	1	O-Ring
4:2	237-30	2	O-Ring

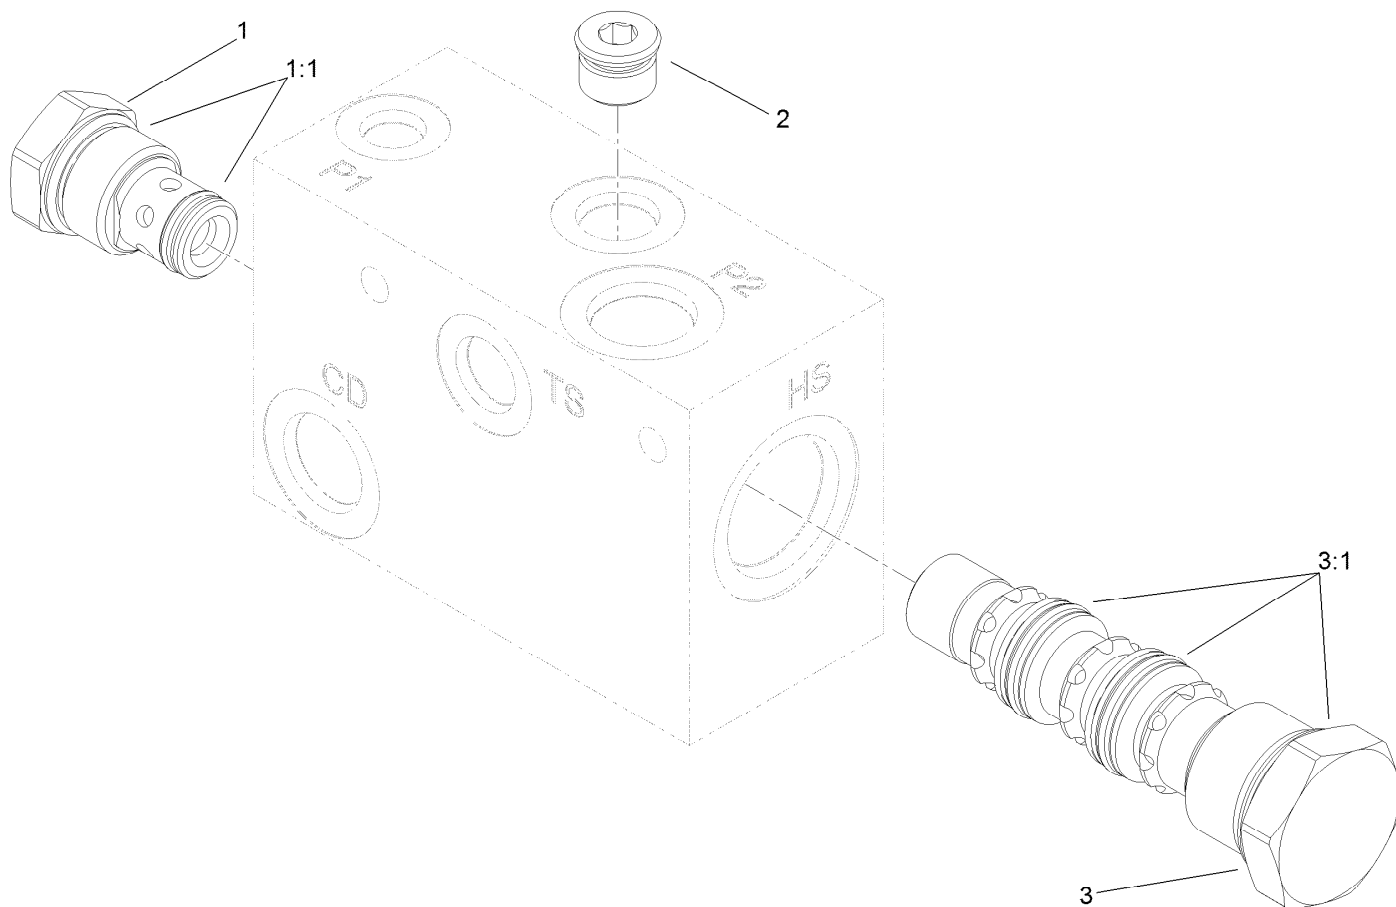 

Flush Valve Assembly No. 120-9869


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	110-0469	1	Valve-Check, 180 PSI
1:1	105-9159	1	Seal Kit
2	106-1026	1	Plug-HYD
3	120-9868	1	Valve-Shuttle, Hot Oil
3:1	120-7597	1	Seal Kit

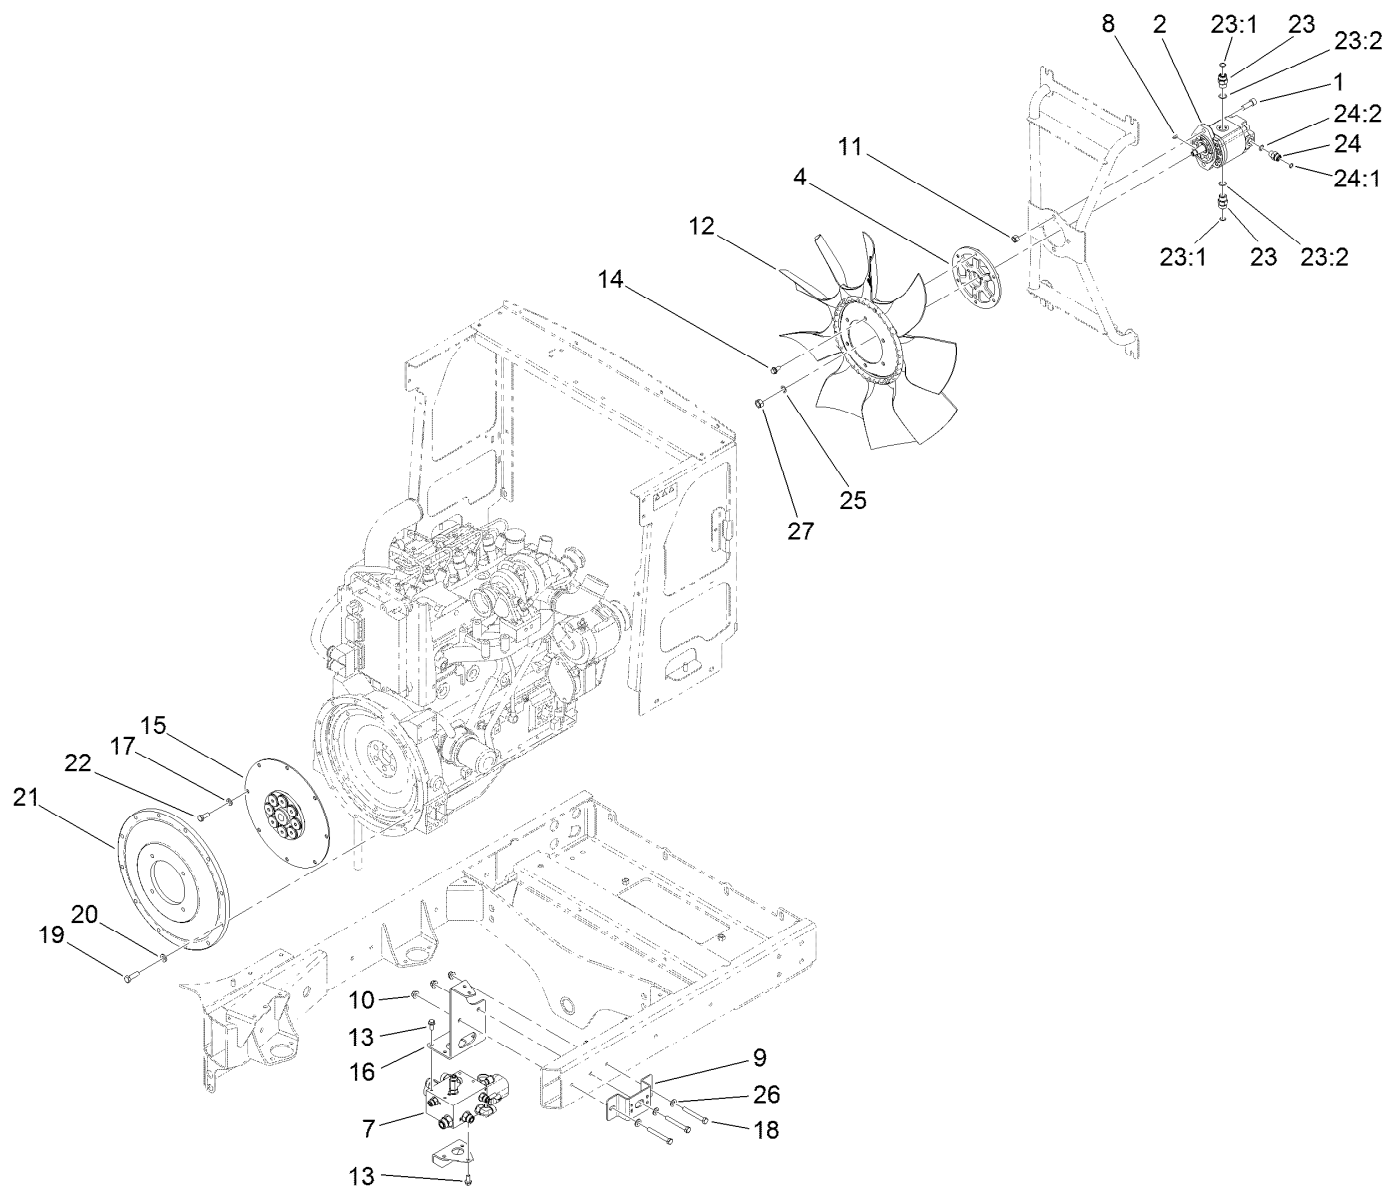 

Fan and Coupling Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	3274-49	2	Screw-HSH	18	323-14	3	Screw-HH
2	112-7400	1	Fan Motor ASM	19	33115-035	12	Screw-HH
4	114-4848-03	1	Hub-Fan	20	100-4852	12	Washer-Hardened
7		1	Steer/Fan Manifold ASM ●	21	121-3856	1	Housing-Coupling, Flywheel
8	3257-3	1	Key-Woodruff	22	33115-025	8	Screw-HH
9	114-5560	1	Plate-Mount, Bulkhead	23	340-4	2	Fitting-Straight
10	104-8301	3	Nut-HF, NI	23:1	237-30	1	O-Ring
11	3296-48	2	Nut-Hex	23:2	237-79	1	O-Ring
12	110-5980	1	Fan	24	340-2	1	Fitting-Straight
13	110-5053	7	Screw-HHF	24:1	237-22	1	O-Ring
14	3234-47	6	Screw-HHF	24:2	237-42	1	O-Ring
15	110-6046	1	Flywheel Coupling ASM	25	112-6957	1	Washer-Hardened
16	112-7423-03	1	Plate-Mount, Fan/Steer Valve	26	3256-24	3	Washer-Plain
17	107-1413	8	Washer-Hardened	27	110-8815	1	Nut-Hex

 
● Not serviced separately

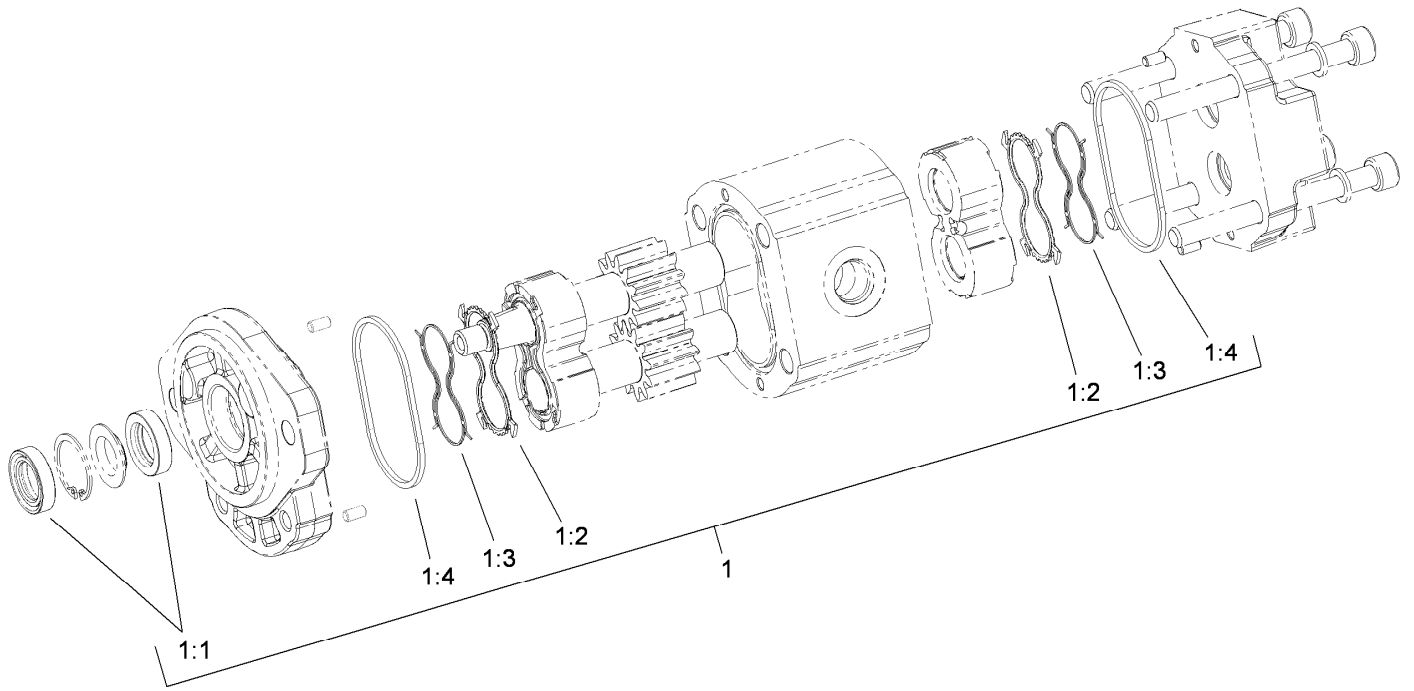

Hydraulic Fan Motor Assembly No. 112-7400

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	115-4110	1	Seal Kit
1:1		2	Seal-Shaft ●
1:2		2	Seal-Plate, Balancing ●
1:3		2	Seal-Anti Extrusion ●
1:4		2	O-Ring (Housing) ●

 
● Not serviced separately

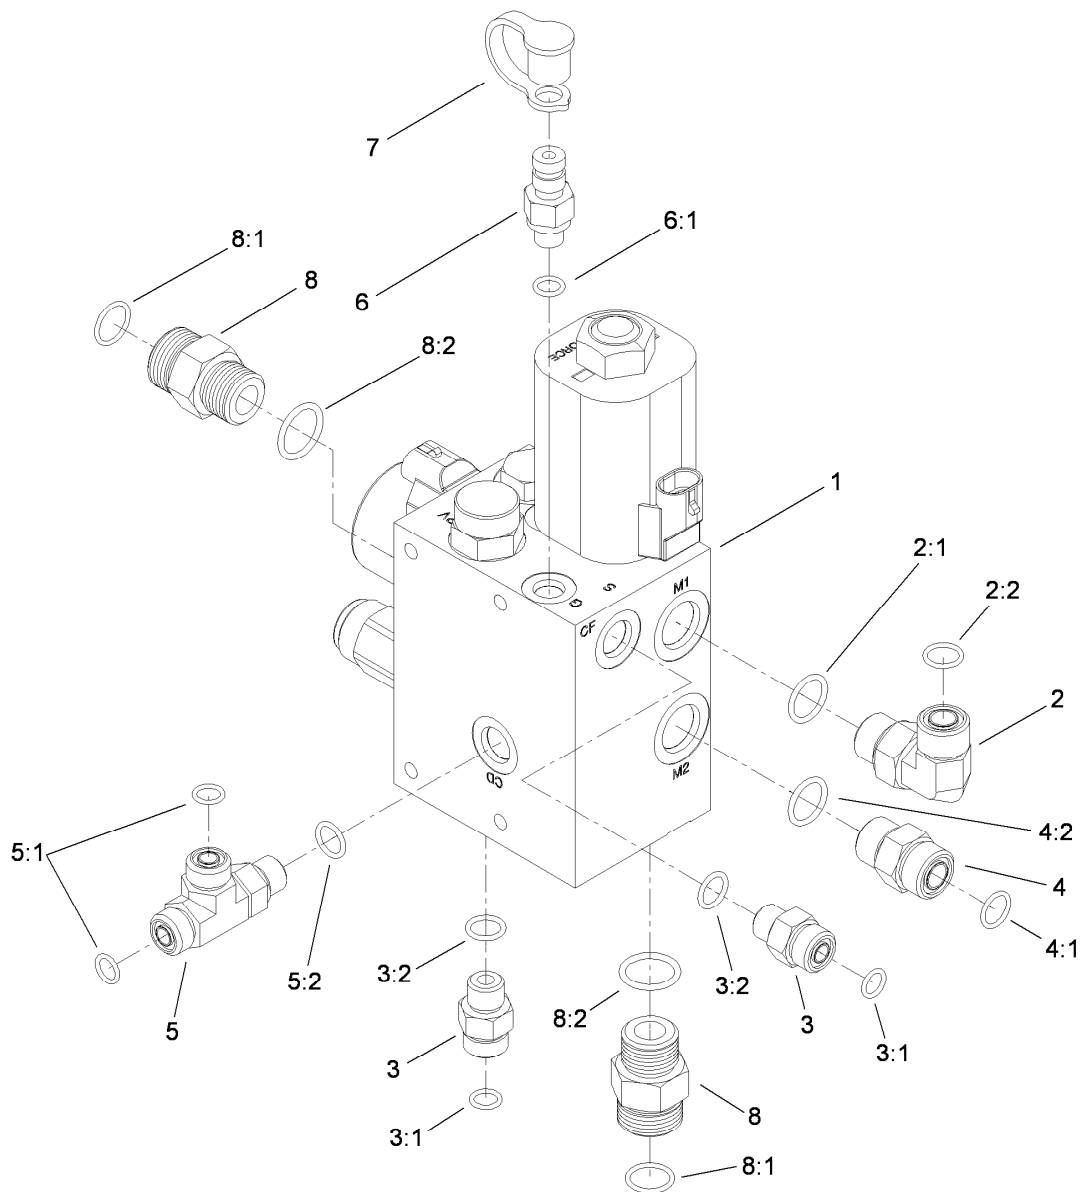

Steer/Fan Manifold Assembly

Ref.	Part Number	Qty.	Description
1	110-6065	1	Manifold-Steer / Fan
2	340-98	1	Fitting-Elbow, 90 DEG
2:1	237-79	1	O-Ring
2:2	237-30	1	O-Ring
3	340-2	2	Fitting-Straight
3:1	237-22	1	O-Ring
3:2	237-42	1	O-Ring
4	340-4	1	Fitting-Straight
4:1	237-30	1	O-Ring
4:2	237-79	1	O-Ring

Ref.	Part Number	Qty.	Description
5	340-86	1	Fitting-Tee
5:1	237-22	2	O-Ring
5:2	237-42	1	O-Ring
6	354-77	1	Fitting-Quick
6:1	237-78	1	O-Ring
7	354-79	1	Cap-Dust
8	340-7	2	Fitting-Straight
8:1	237-65	1	O-Ring
8:2	237-80	1	O-Ring

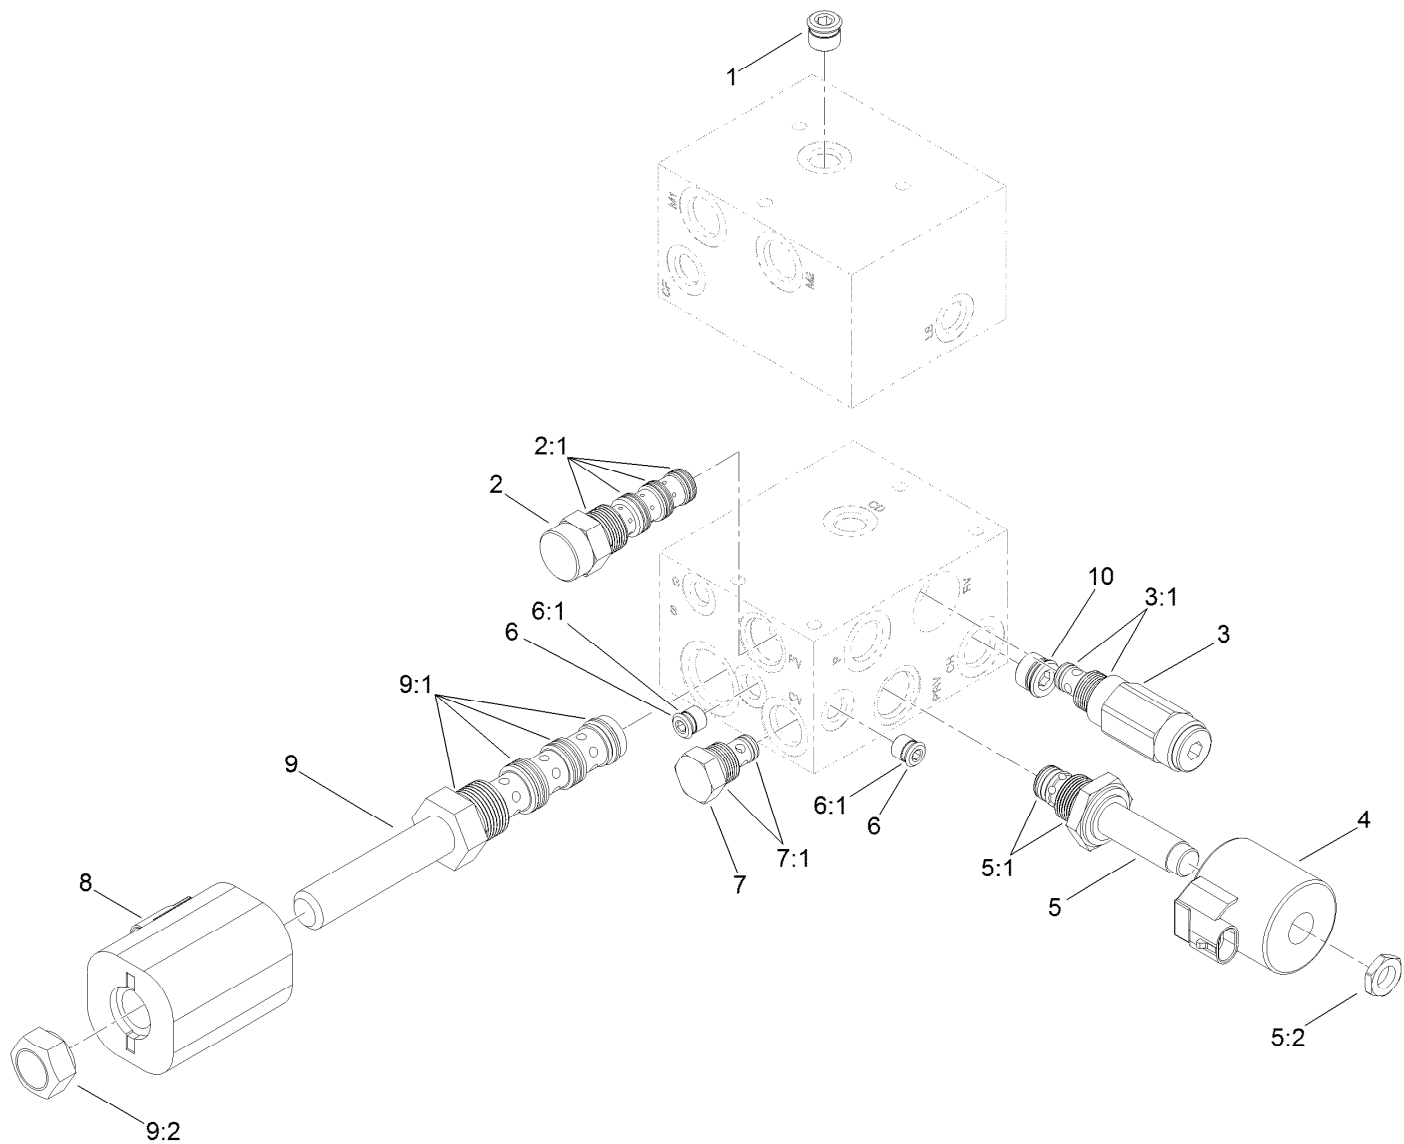 


Hydraulic Manifold Assembly No. 110-6065

Ref.	Part Number	Qty.	Description
1	106-1026	1	Plug-HYD
2	115-5409	1	Compensator ASM
2:1	110-8908	1	Spool Valve Seal Kit
3	114-5514	1	Valve-Relief, 2000 PSI
3:1	105-9156	1	Seal Kit
4	110-2630	1	Coil-12Vdc
5	115-3022	1	Relief-Proportional
5:1	110-6316	1	Seal Kit
5:2	119-7715	1	Nut-Coil

Ref.	Part Number	Qty.	Description
6	353-990	2	Plug ASM
6:1	237-78	1	O-Ring
7	105-9321	1	Check Valve ASM
7:1	105-9156	1	Seal Kit
8	114-5084	1	Coil-Solenoid
9	115-5410	1	Valve-Solenoid
9:1	110-6111	1	Seal Kit
9:2	114-5085	1	Nut-E Coil
10	106-1027	1	Plug

 
Hydraulic Tank Assembly

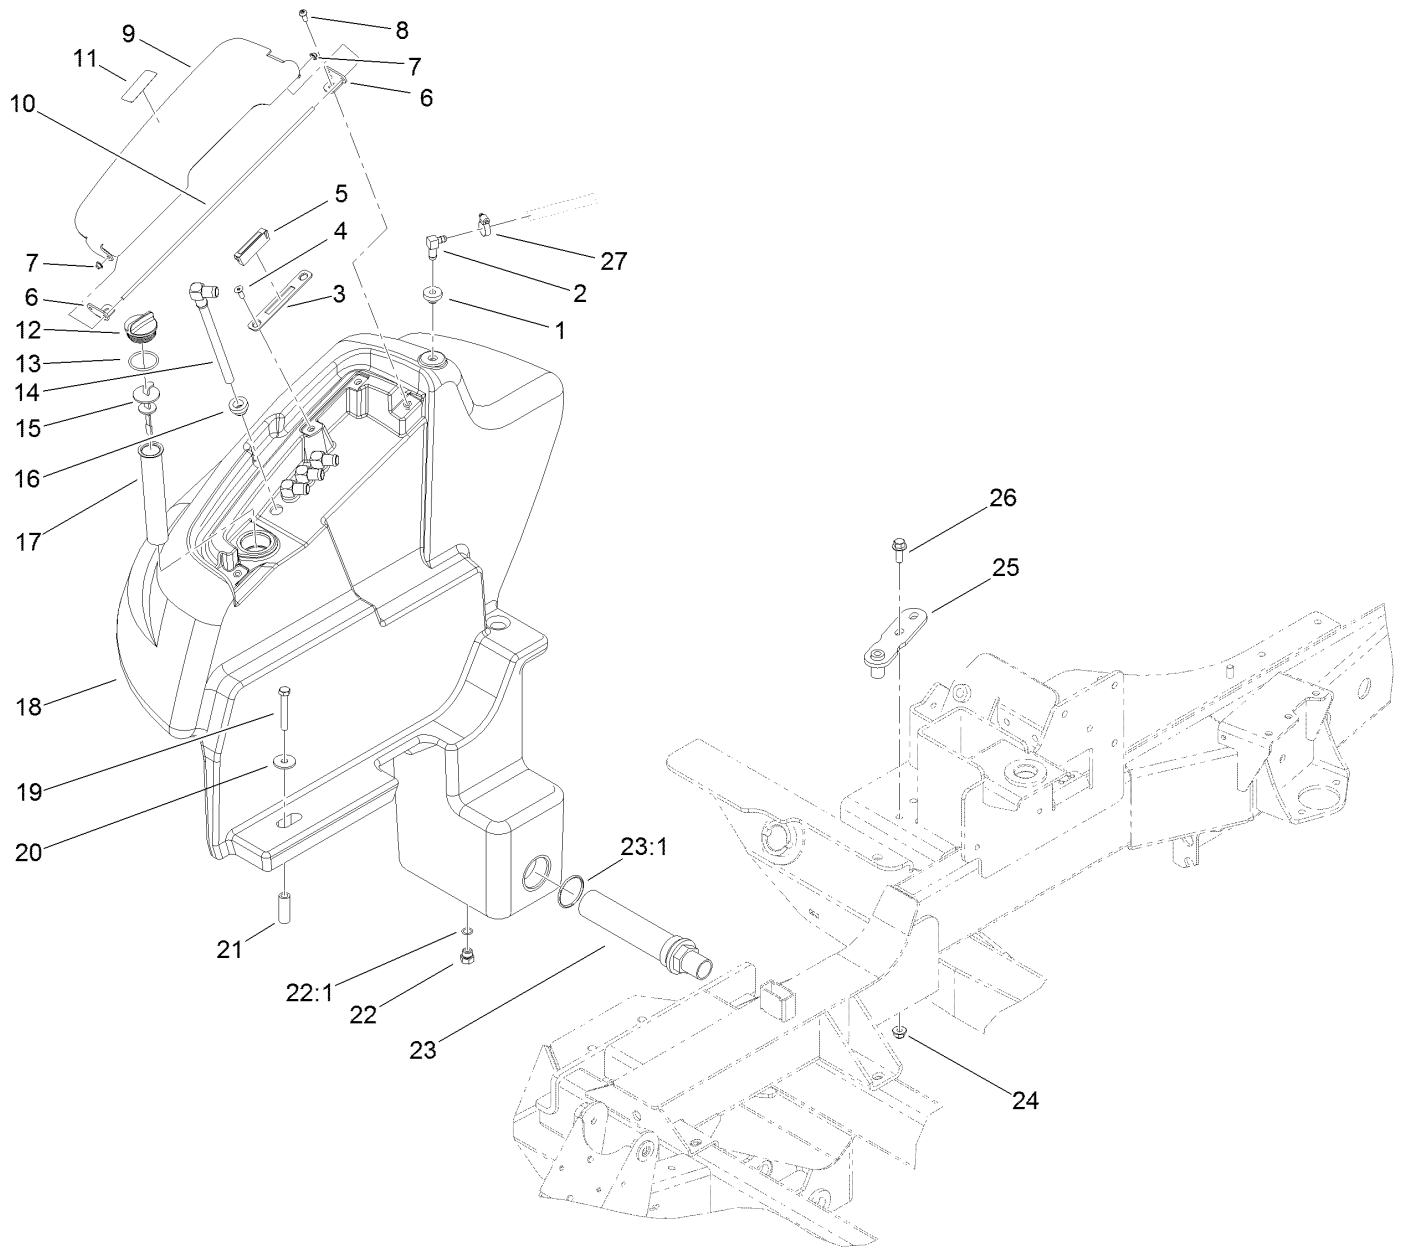

Hydraulic Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	46-6560	1	Bushing	16	104-0790	4	Bushing
2	46-6550	1	Fitting-Elbow, 90 DEG	17	92-1705	1	Filter-Screen
3	114-0941	1	Plate-Latch	18	119-7726	1	Hydraulic Tank ASM
4	3274-47	2	Screw-HSFH	19	323-12	1	Screw-HH
5	58-4250	1	Catch-Magnetic	20	63-8410	1	Washer
6	114-0940	2	Bracket-Hinge	21	95-6448	1	Spacer
7	108-3629	2	Nut-Push	22	353-508	1	Plug-HH
8	3274-31	2	Screw-HSBH	22:1	237-42	1	O-Ring
9	114-0939-03	1	Cover-Tank, HYD	23	105-0131	1	Strainer-Tank, Oil
10	114-0904	1	Rod	23:1	340-136	1	O-Ring
11	93-6686	1	Decal-Oil, HYD	24	104-8301	2	Nut-HF, NI
12	93-7498	1	Plug-Plastic	25	114-0094	1	Hold Down-Tank
13	94-8166	1	O-Ring	26	3234-42	2	Screw-HHF
14	114-0002	4	Pipe-Stand	27	2412-108	1	Clamp-Worm
15	105-2812	1	Dipstick				

 
Hydraulic Pump Assembly

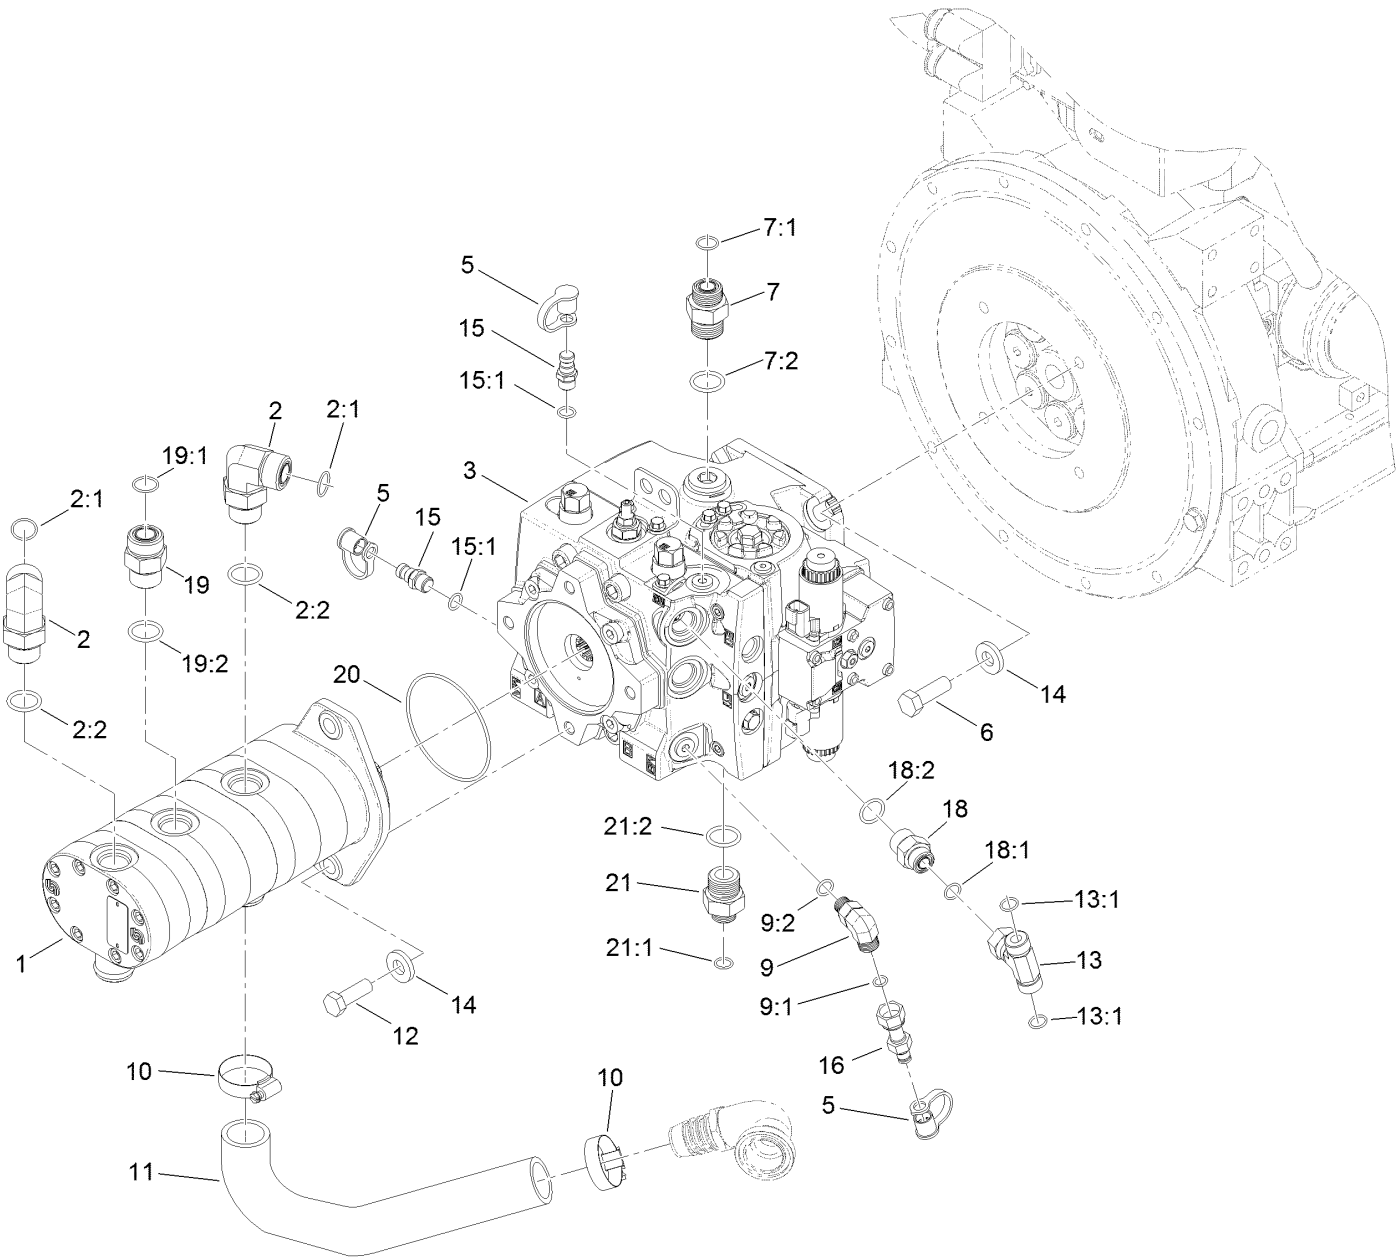

Hydraulic Pump Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	114-4840	1	Triple Gear Pump ASM	13	93-6810	1	Fitting-Tee
2	340-142	2	Fitting-Elbow, 90 DEG	13:1	237-30	2	O-Ring
2:1	237-58	1	O-Ring	14	107-3395	2	Washer-Hardened
2:2	237-81	1	O-Ring	15	59-7410	2	Fitting-Diagnostic
3	121-3900	1	Piston Pump ASM	15:1	237-42	1	O-Ring
5	354-79	3	Cap-Dust	16	86-5480	1	Nipple-Test
6	AU426-824	4	Screw-HH	18	340-6	1	Fitting-Straight
7	340-8	1	Fitting-Straight	18:1	237-30	1	O-Ring
7:1	237-65	1	O-Ring	18:2	237-80	1	O-Ring
7:2	237-81	1	O-Ring	19	340-9	1	Fitting-STR
9	340-77	1	Fitting-Elbow, 90 DEG	19:1	237-58	1	O-Ring
9:1	237-22	1	O-Ring	19:2	237-81	1	O-Ring
9:2	237-42	1	O-Ring	20	107-9447	1	O-Ring
10	2412-111	2	Clamp-Hose, W/Liner	21	100-4240	1	Fitting-STR
11	114-5506	1	Hose-Formed	21:1	237-30	1	O-Ring
12	121-1525	2	Screw-HH	21:2	237-81	1	O-Ring

 
Triple Pump Assembly No. 114-4840

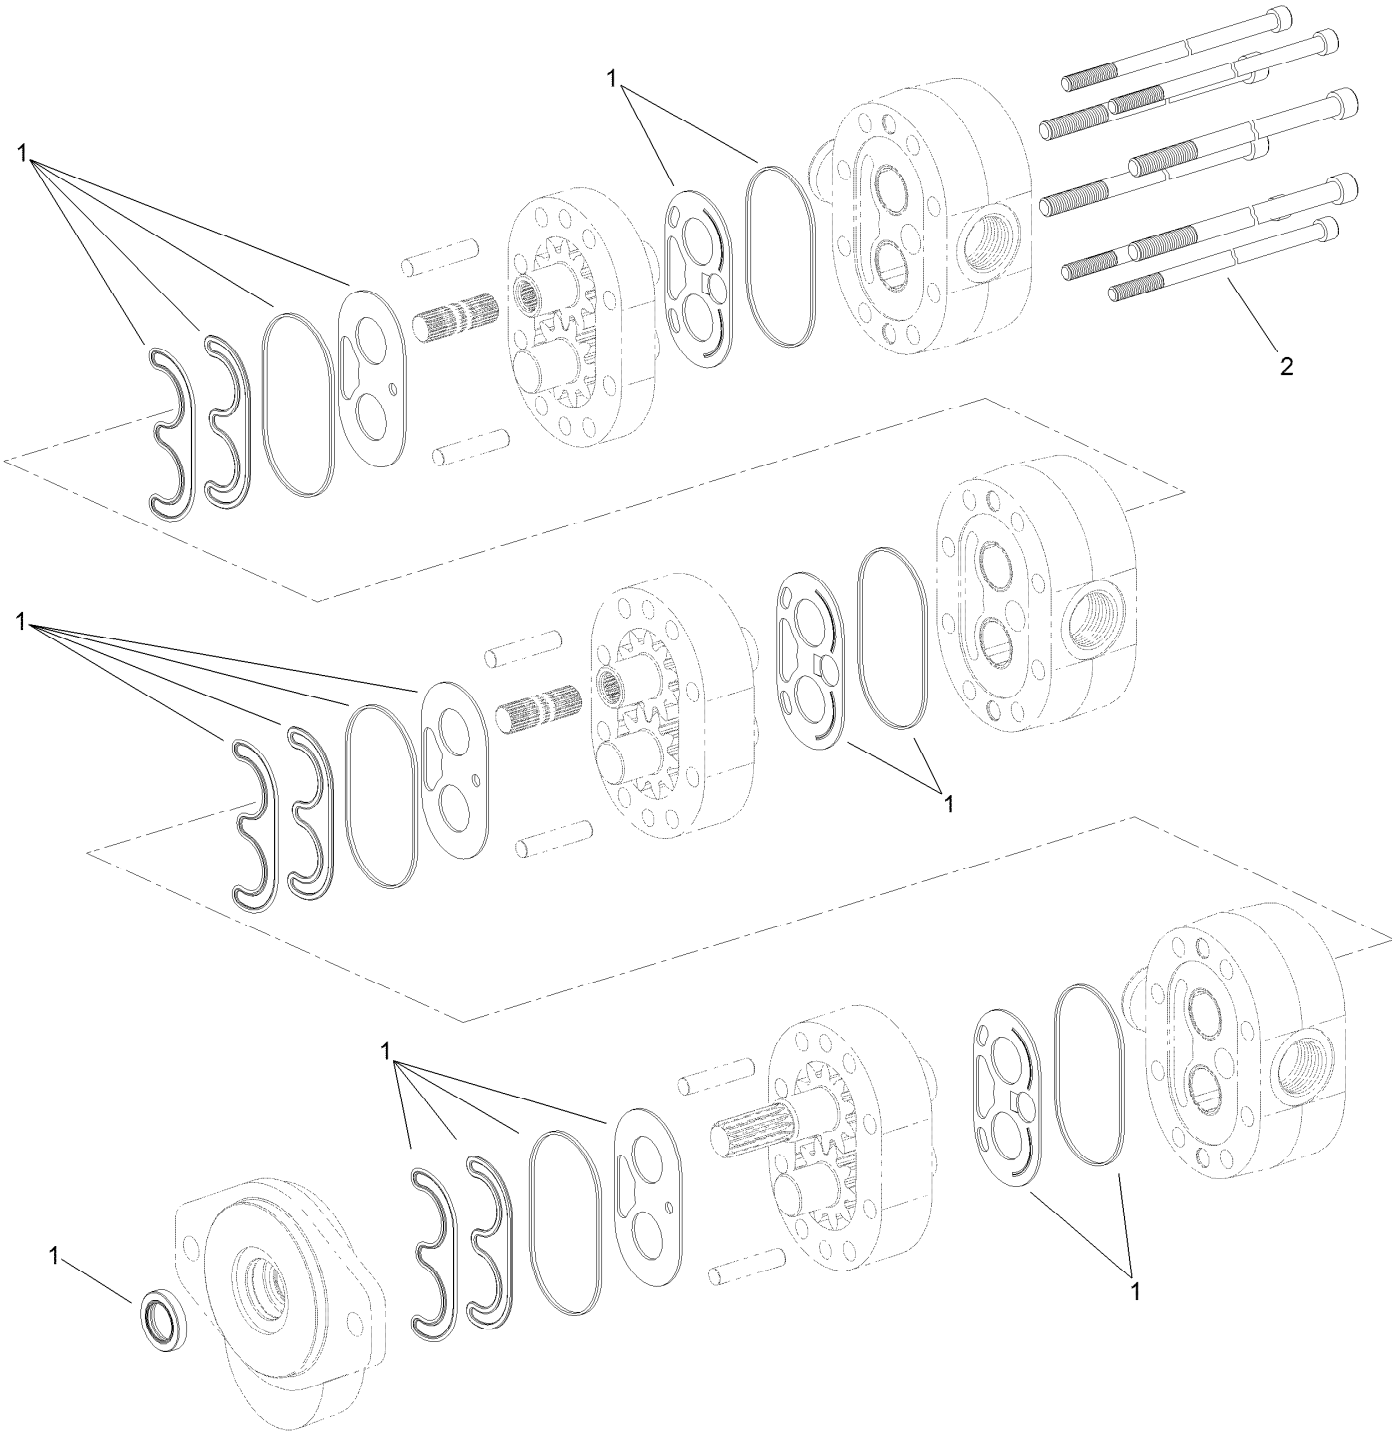

Triple Pump Assembly No. 114-4840 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	117-1109	1	Seal Kit
2	127-3620	8	Screw-Cap, Socket Head

 
Piston Pump Assembly No. 121-3900

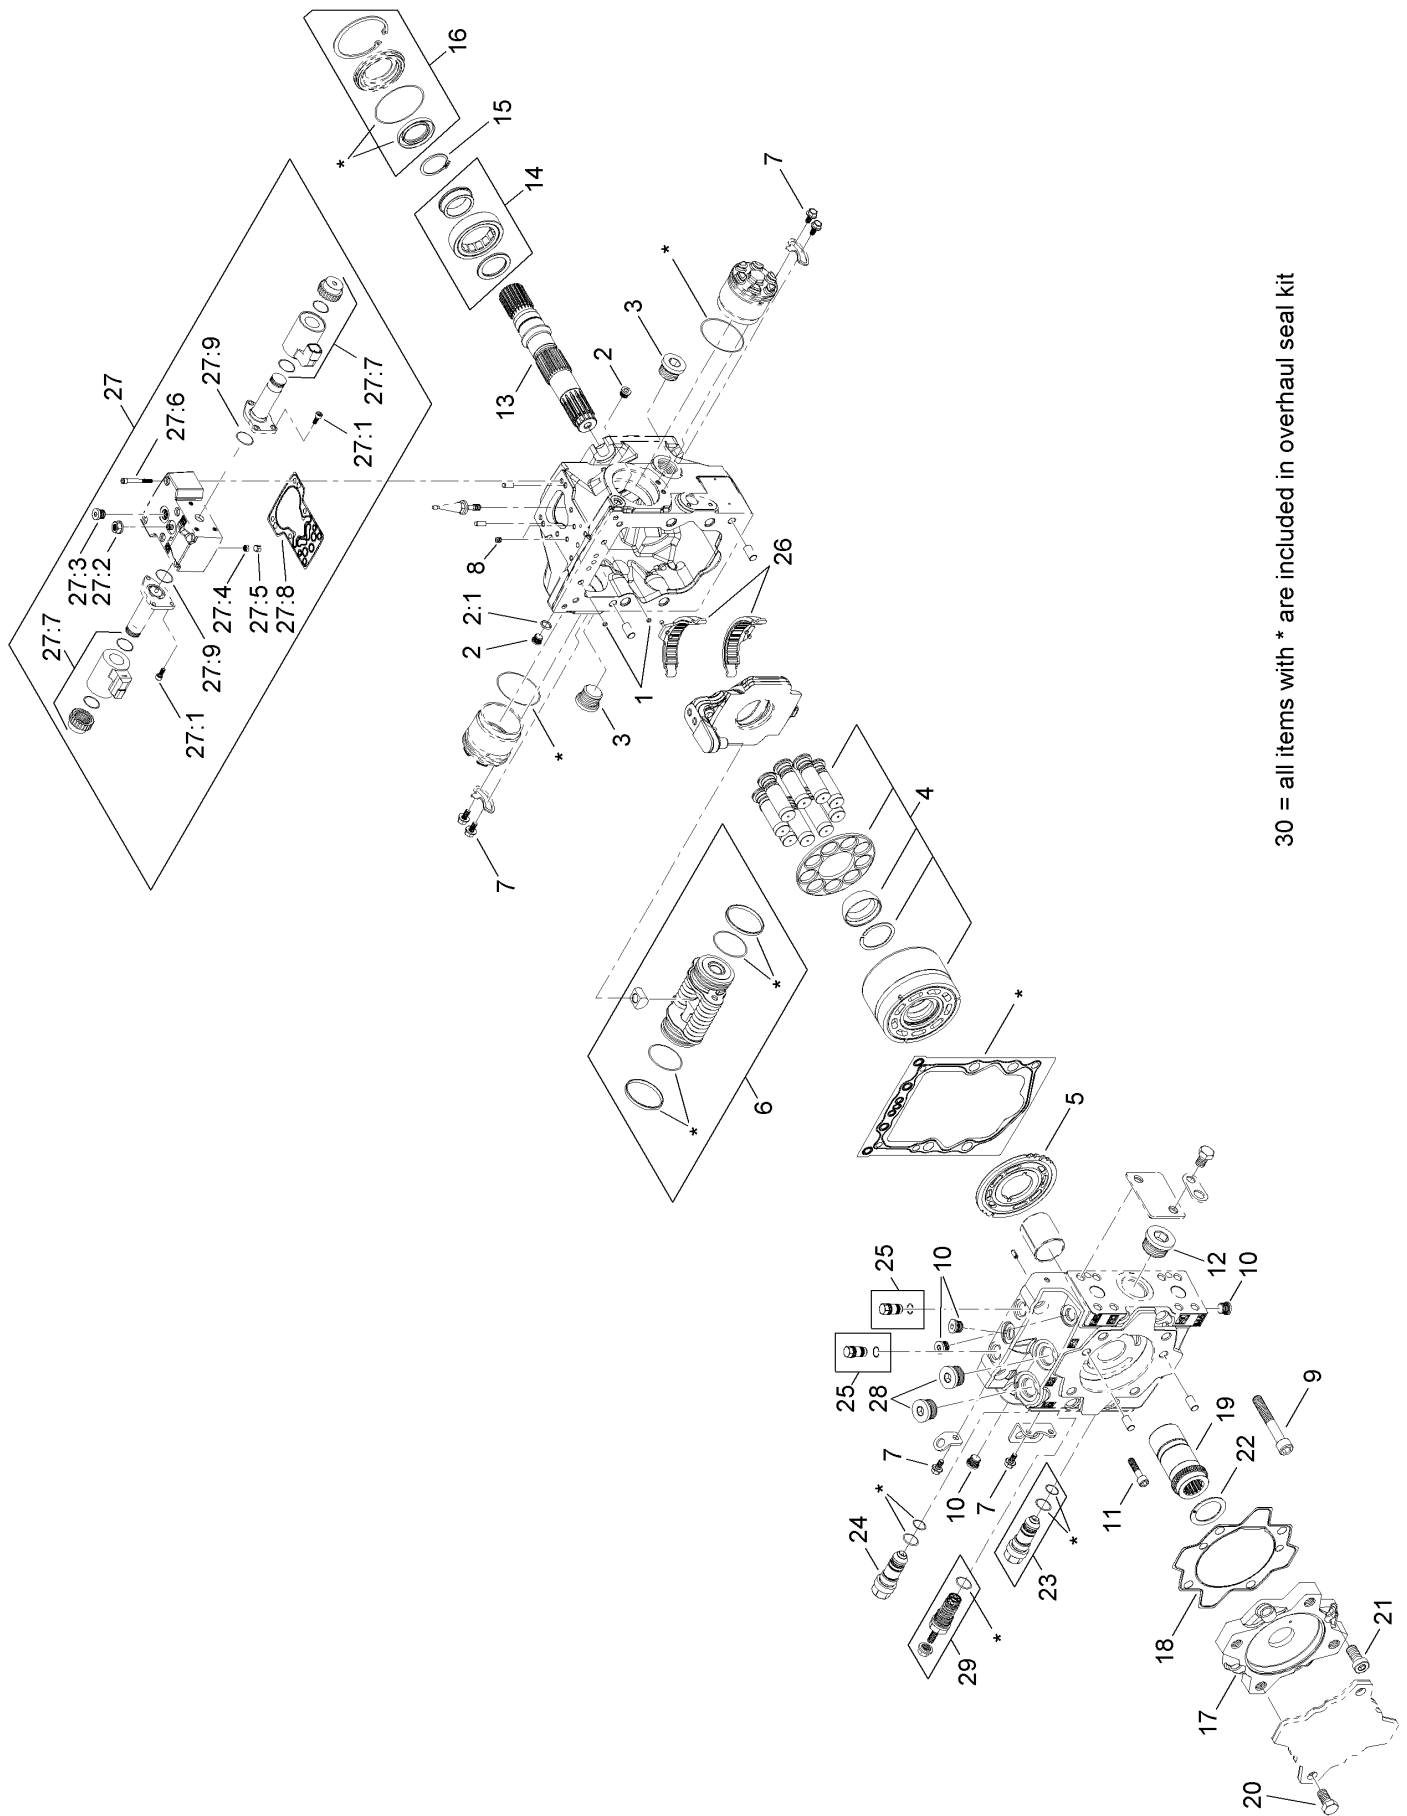

Piston Pump Assembly No. 121-3900 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-5266	2	Screen	20	125-5281	4	Screw
2	75-0170	2	Plug-Thread, Straight	21	125-5282	4	Screw
2:1	92-8777	1	O-Ring	22	125-5287	1	Plate-Thrust
3	107-4352	2	Plug	23	125-5290	1	Valve-Relief, High Pressure
4	125-5267	1	Cylinder Block Kit	24	125-5291	1	Valve-Relief, High Pressure
5	125-5268	1	Valve Plate, CW	25	125-5292	2	Pressure Limiter Plug ASM
6	125-5271	1	Servo Piston ASM	26	125-5293	1	Swashplate Bearing Kit
7	125-5270	6	Screw	27	125-5295	1	Control Kit (12 Volt)
8	125-5276	2	Orifice (0.8)	27:1	125-5272	6	Screw
9	125-5277	4	Screw	27:2	125-5273	1	Nut-Seal
10	125-5300	4	Plug ASM	27:3	125-5302	1	Plug
11	125-5275	2	Screw	27:4	125-5266	1	Screen
12	125-5301	1	Plug	27:5	125-5269	1	Ring-Locking
13	125-5278	1	Shaft	27:6	125-5274	6	Screw
14	125-5279	1	Bearing-Roller	27:7	125-5294	2	Coil Kit
15	125-5280	1	Ring-Retaining	27:8	125-5283	1	Gasket-Control
16	125-5296	1	Shaft Seal Kit	27:9	125-5288	2	O-Ring
17	125-5284	1	Adapter	28	125-5303	2	Plug ASM
18	125-5285	1	Seal-Adapter	29	125-5297	1	Charge Relief Kit
19	125-5286	1	Coupling	30	125-5299	1	Overhaul Seal Kit

 
Traction Hydraulic Plumbing Assembly

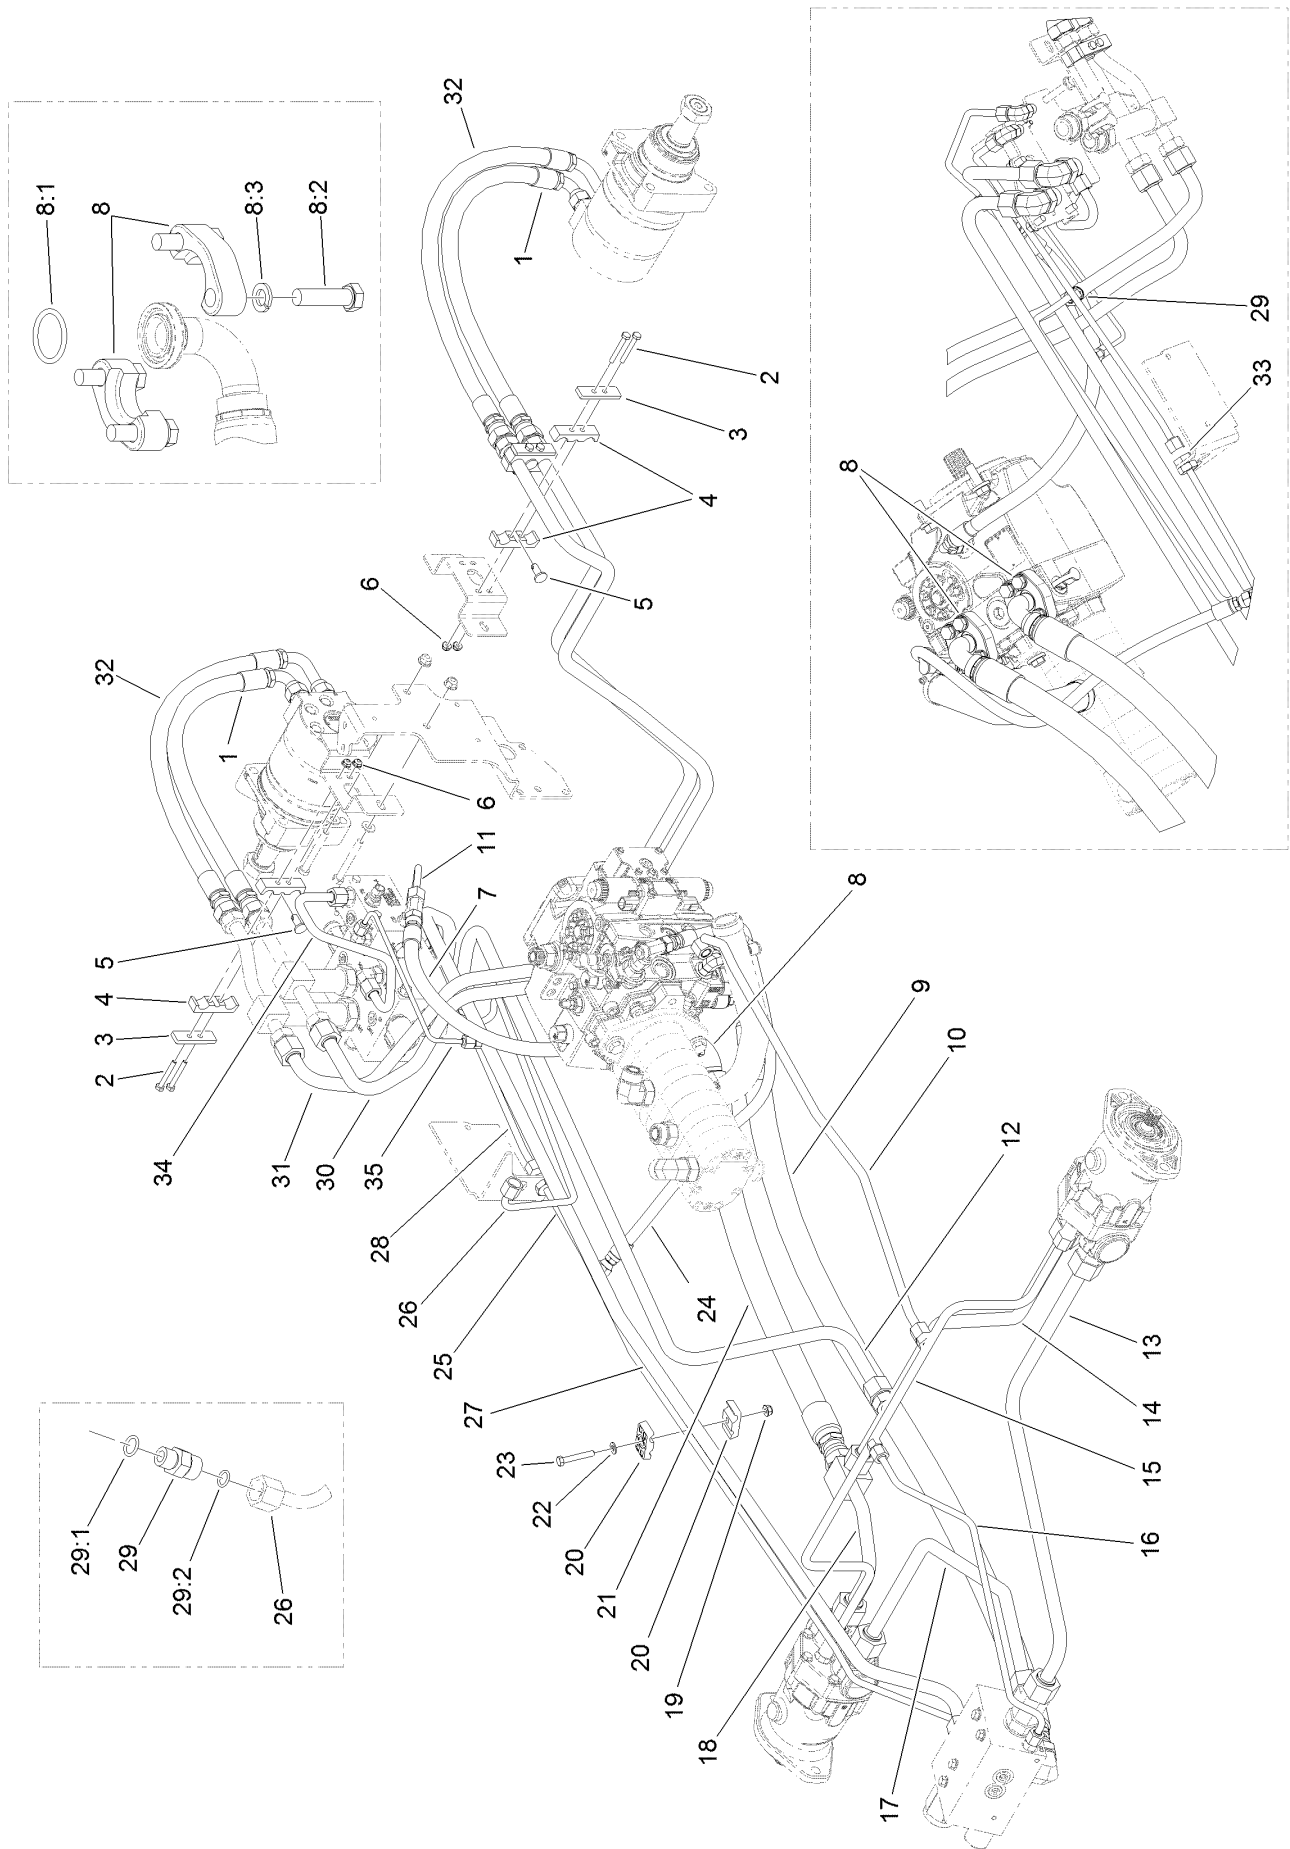

Traction Hydraulic Plumbing Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	120-9878	2	Hose-Hydraulic, HP	18:1	340-65	1	O-Ring ●
2	321-11	6	Screw-HH	18:2	237-58	1	O-Ring ●
3	114-0989	3	Plate-Cover	19	104-8300	1	Nut-HF, NI
4	99-3641	6	Clamp-Tube	20	56-7978	2	Clamp-Tube
5	98-5055	3	Pin-Weld	21	121-3901	1	Hose-Hydraulic, HP
6	104-7201	8	Nut-HF, NI	22	3256-23	1	Washer-Plain
7	94-4714	1	Hose-Hydraulic	23	322-10	1	Screw-HH
8	121-3903	2	Flange Kit	24	108-6514	1	Hose-Hydraulic
8:1	121-3904	1	O-Ring	25	121-3914	1	Tube-Hydraulic
8:2	33116-045	4	Screw-HH	26	114-4918	1	Tube-Hydraulic
8:3	48-8070	4	Washer-Lock	27	121-3869	1	Tube-Hydraulic
9	121-3902	1	Hose-Hydraulic, HP	27:1	237-21	1	O-Ring ●
10	114-4843	1	Tube-Hydraulic	28	114-4905	1	Tube-Hydraulic
11	117-5460	1	Tube-Hydraulic	29	92-9258	1	Adapter-Check
12	114-4819	1	Tube-Hydraulic	29:1	237-22	1	O-Ring
13	114-4844	1	Tube-Hydraulic	29:2	237-42	1	O-Ring
14	114-4847	1	Tube-Hydraulic	30	114-0025	1	Tube-Hydraulic
14:1	237-58	1	O-Ring ●	30:1	237-58	1	O-Ring ●
15	114-4842	1	Tube-Hydraulic	31	114-0026	1	Tube-Hydraulic
15:1	237-22	1	O-Ring ●	31:1	237-58	1	O-Ring ●
15:2	237-30	1	O-Ring ●	32	120-9879	2	Hose-Hydraulic, HP
16	114-4834	1	Tube-Hydraulic	33	340-70	1	Nut-Lock
17	114-4845	1	Tube-Hydraulic	34	115-8875	1	Tube-Hydraulic
18	114-4846	1	Tube-Hydraulic	35	121-3859	1	Tube-Hydraulic

 ● Not illustrated

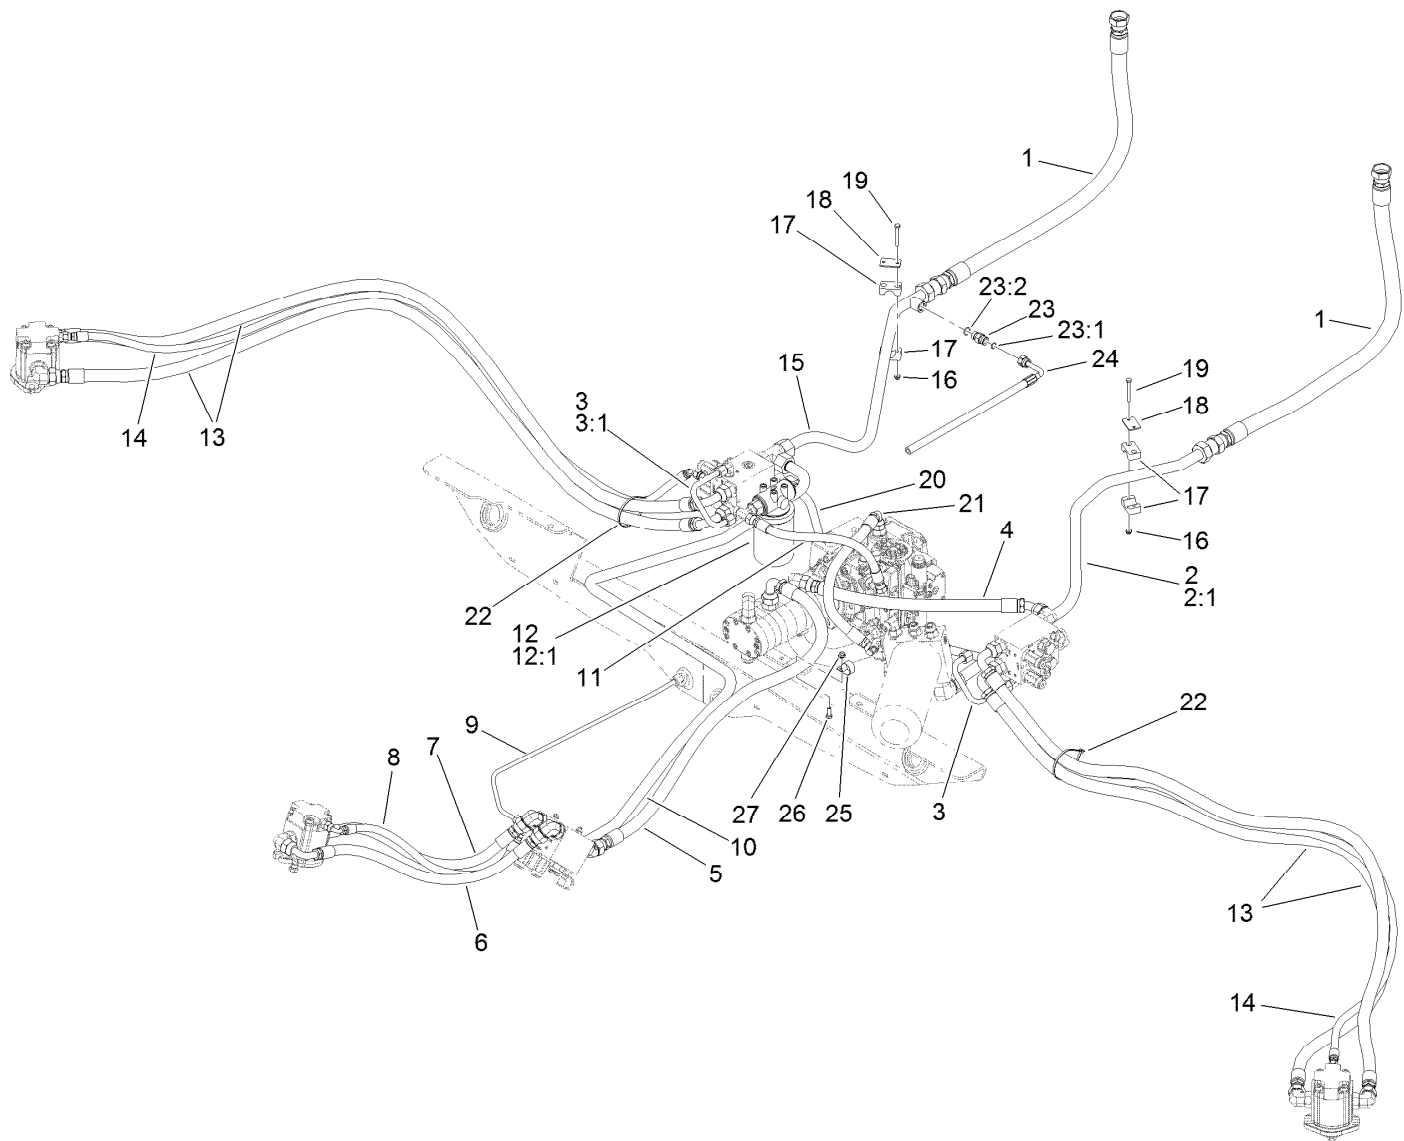


Power-Take-Off Hydraulic Plumbing Assembly

Ref.	Part Number	Qty.	Description
1	114-4904	2	Hose-Hydraulic, HP
2	114-0016	1	Tube-Hydraulic
2:1	340-65	1	O-Ring ●
3	114-0173	2	Tube-Hydraulic
3:1	237-22	1	O-Ring ●
4	115-8869	1	Hose-Hydraulic
5	120-9865	1	Hose-Hydraulic
6	115-5518	1	Hose-Hydraulic, HP
7	115-5517	1	Hose-Hydraulic, HP
8	114-5500	1	Hose-HYD
9	114-4820	1	Tube-Hydraulic
10	114-4839	1	Tube-Hydraulic
11	114-5501	1	Hose-Hydraulic
12	93-2242	1	Oil Filter ASM
12:1	75-1310	1	Filter-HYD
13	114-0985	4	Hose-Hydraulic

Ref.	Part Number	Qty.	Description
14	114-0945	2	Hose-Hydraulic
15	119-7725	1	Tube-Hydraulic
16	104-7201	4	Nut-HF, NI
17	114-4901	2	Clamp
18	114-4902	2	Plate-Cover
19	321-18	4	Screw-HH
20	110-6067	1	Tube-Hydraulic
21	99-4217	1	Hose-Hydraulic
22	3290-379	2	Tie-Cable
23	98-4735	1	Valve-Check, HYD
23:1	237-30	1	O-Ring
23:2	237-79	1	O-Ring
24	120-9864	1	Hose-Hydraulic
25	2412-104	1	Clamp-R
26	322-5	1	Screw-HH
27	104-8300	1	Nut-HF, NI

 
● Not illustrated

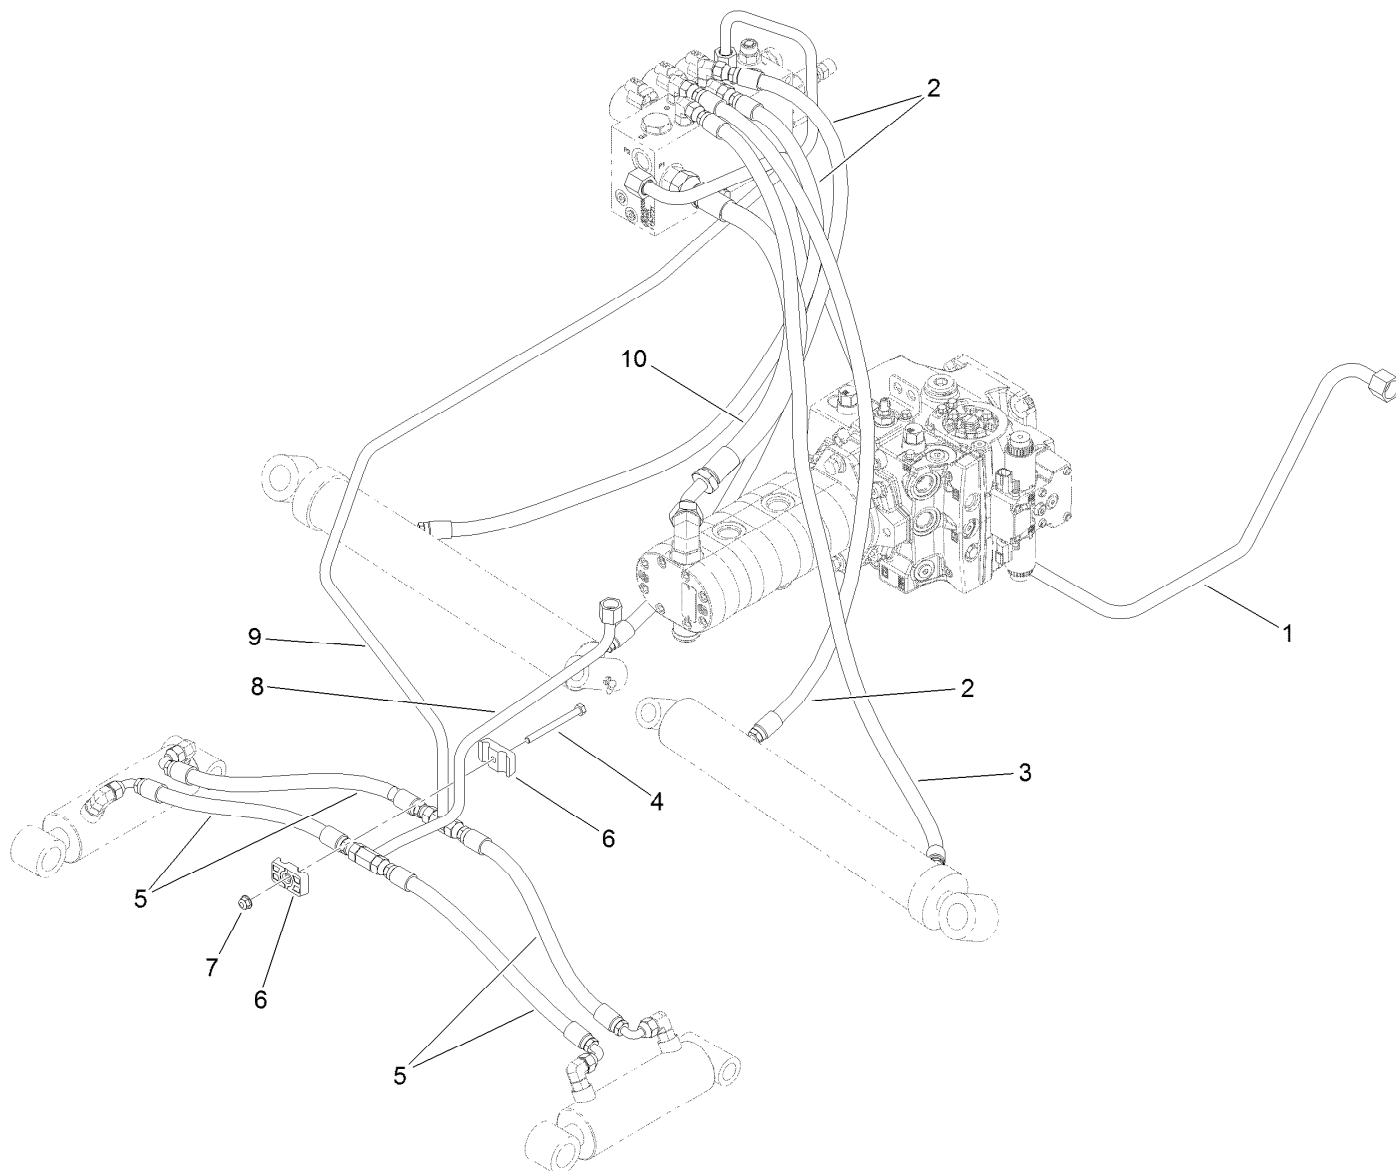

Lift Arms Hydraulic Plumbing Assembly

Ref.	Part Number	Qty.	Description
1	121-3908	1	Tube-Hydraulic
2	114-4817	3	Hose-Hydraulic, HP
3	114-4818	1	Hose-Hydraulic, HP
4	322-22	1	Screw-HH
5	92-5694	4	Hose-Hydraulic
6	56-7976	2	Clamp-Tube
7	104-8300	1	Nut-HF, NI
8	114-4824	1	Tube-Hydraulic
8:1	237-22	2	O-Ring ●
9	117-9408	1	Tube-Hydraulic
9:1	237-22	2	O-Ring ●
10	117-9411	1	Hose-Hydraulic, HP

 ● Not illustrated

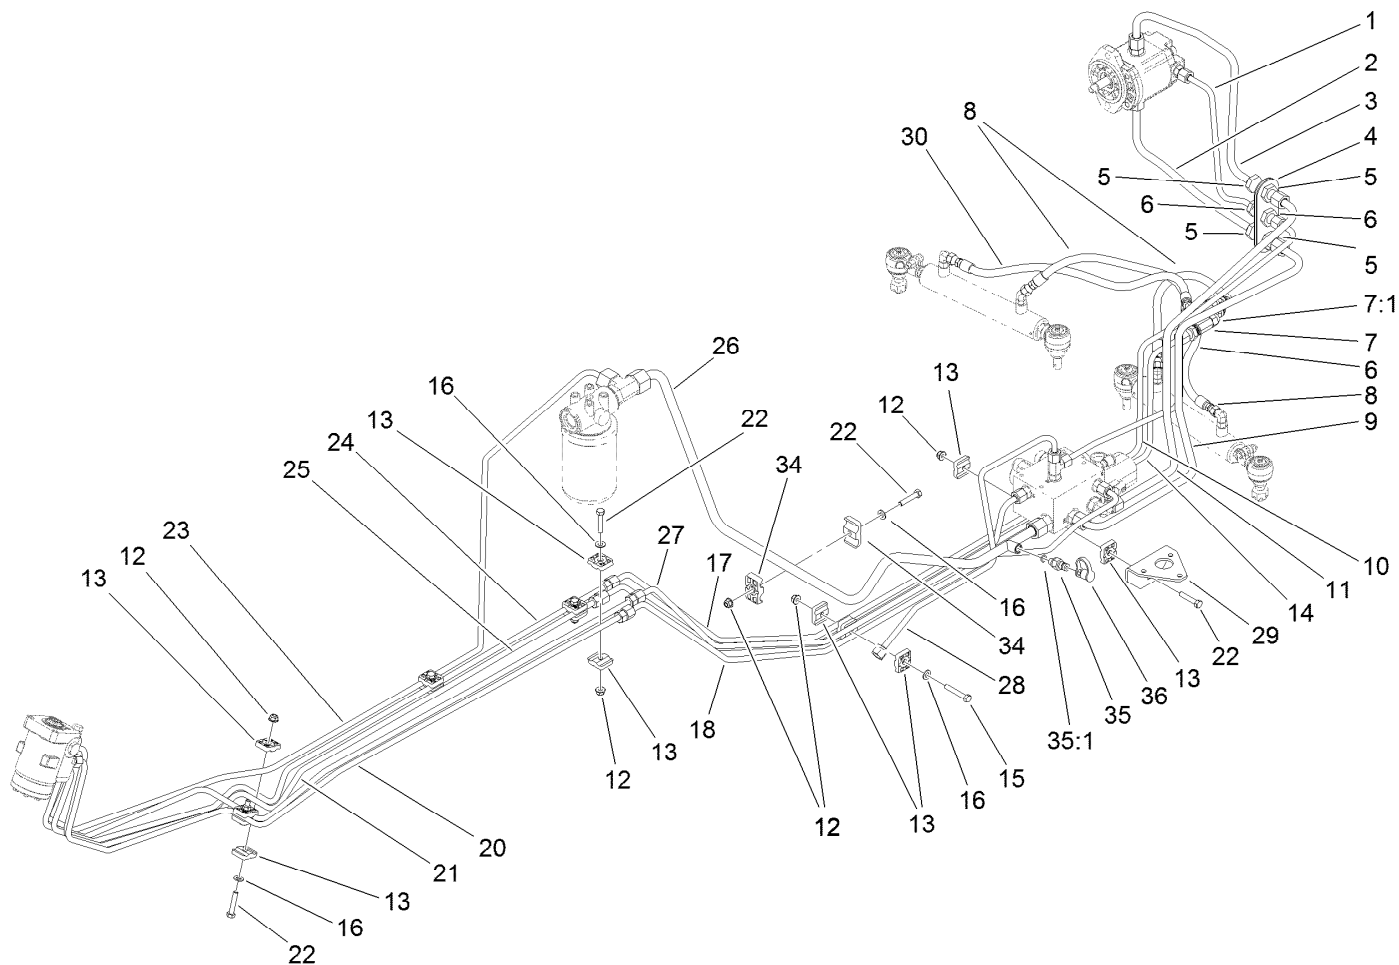


Steering Hydraulic Plumbing Assembly

Ref.	Part Number	Qty.	Description
1	125-5315	1	Hydraulic Tube ASM
2	125-5314	1	Hydraulic Tube ASM
3	125-5313	1	Hydraulic Tube ASM
4	114-0063	2	Shim-Support
5	340-127	4	Nut-Bulkhead
6	340-70	4	Nut-Lock
7	340-68	2	Fitting-Tee, Bulkhead
7:1	237-22	3	O-Ring
8	114-4922	3	HYD Hose ASM
9	114-0910	1	HYD Tube ASM
10	114-0911	1	HYD Tube ASM
11	114-0909	1	HYD Tube ASM
12	104-8300	8	Nut-HF, NI
13	56-7973	16	Clamp-Tube
14	114-4915	1	HYD Tube ASM
15	322-10	1	Screw-HH
16	3256-23	7	Washer-Plain
17	121-3911	1	Hydraulic Tube ASM
18	115-5435	1	HYD Tube ASM

Ref.	Part Number	Qty.	Description
20	114-0145	1	HYD Tube ASM
20:1	237-22	1	O-Ring ●
21	114-0071	1	HYD Tube ASM
21:1	237-22	1	O-Ring ●
22	322-8	7	Screw-HH
23	114-0144	1	HYD Tube ASM
23:1	237-22	1	O-Ring ●
24	114-0070	1	HYD Tube ASM
24:1	237-22	1	O-Ring ●
25	114-0147	1	HYD Tube ASM
26	121-3907	1	Hydraulic Tube ASM
27	114-4916	1	HYD Tube ASM
28	121-3910	1	Hydraulic Tube ASM
29	114-0066-03	1	Plate-Mount, Tube
30	114-4934	1	HYD Hose ASM
34	56-7971	2	Clamp-Tube
35	354-77	1	Fitting-Quick
35:1	237-78	1	O-Ring
36	354-79	1	Cap-Dust

 
● Not illustrated

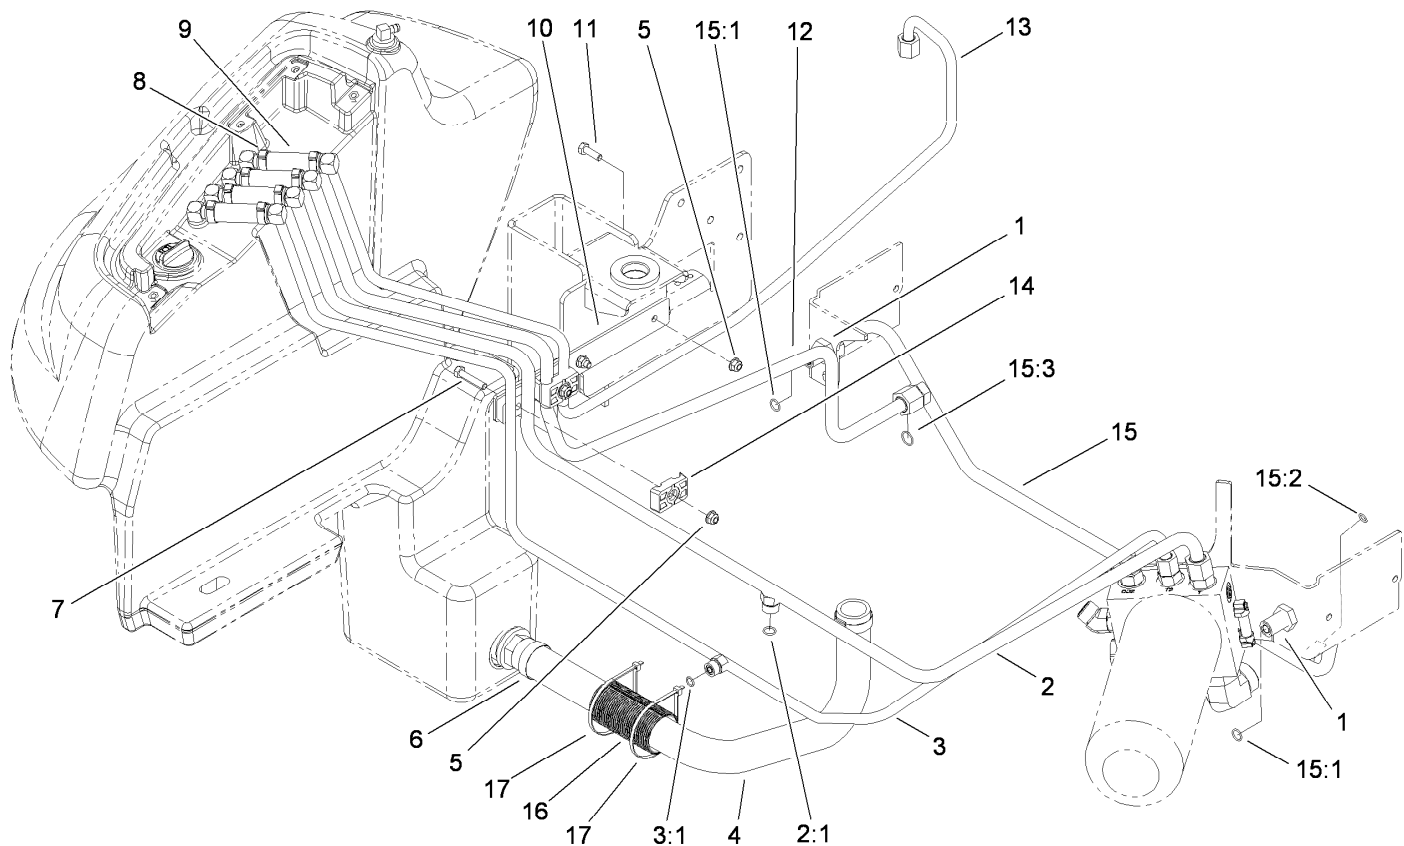

Hydraulic Tank Plumbing Assembly

Ref.	Part Number	Qty.	Description
1	340-127	2	Nut-Bulkhead
2	114-4821	1	Tube-Hydraulic
2:1	237-30	1	O-Ring
3	114-4822	1	Tube-Hydraulic
3:1	237-22	1	O-Ring
4	114-5507	1	Hose-Formed
5	104-8300	4	Nut-HF, NI
6	2412-111	2	Clamp-Hose, W/Liner
7	322-8	2	Screw-HH
8	2412-36	8	Clamp-Hose
9	114-4920	4	Hose


Ref.	Part Number	Qty.	Description
10	114-4919-03	1	Plate-Mount, Tube
11	322-5	2	Screw-HH
12	114-0172	1	Tube-Hydraulic
13	117-9409	1	Tube-Hydraulic
14	56-7977	4	Clamp-Tube
15	121-3909	1	Tube-Hydraulic
15:1	237-30	2	O-Ring
15:2	237-22	1	O-Ring
15:3	237-65	1	O-Ring
16	115-5523	1	Guard-Hose
17	3290-379	2	Tie-Cable

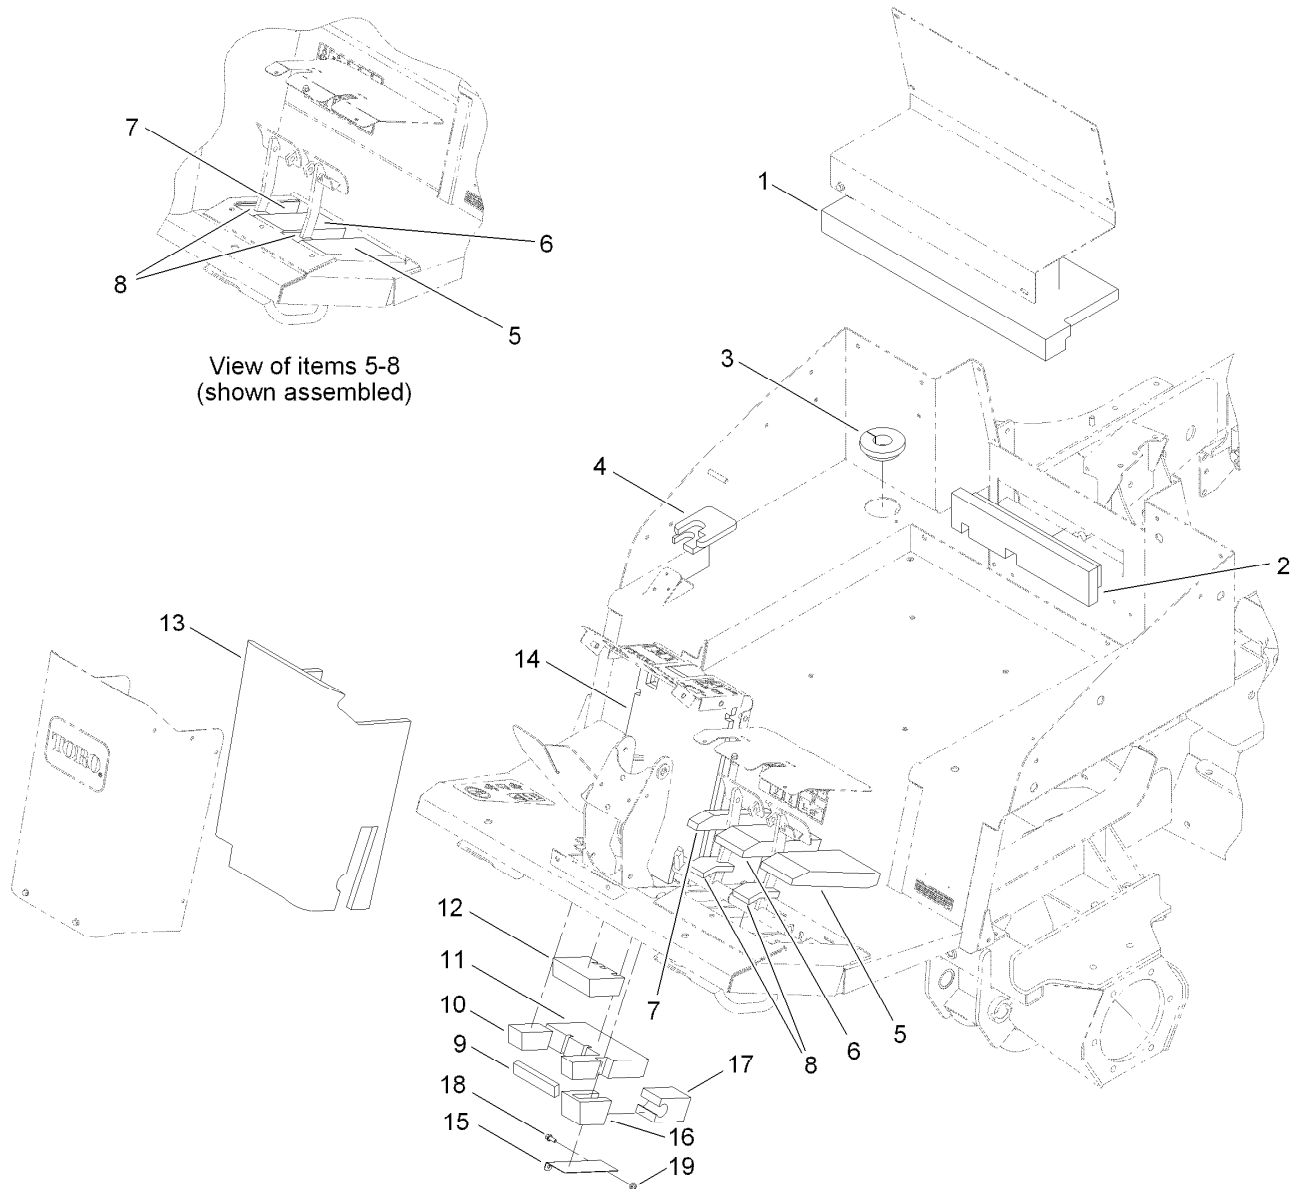 

Acoustic Foam Assembly

Ref.	Part Number	Qty.	Description
1	121-3925	1	Foam-Battery, Cover
2	115-8801	1	Foam-Battery, Plug
3	115-8802	1	Foam-Plug, Round
4	115-8803	1	Foam-Plug, Rectangular
5	115-8804	1	Foam-Brake, LH
6	115-8805	1	Foam-Brake, Center
7	115-8806	1	Foam-Brake, RH
8	115-8807	2	Foam-Plug, Brake
9	115-8808	1	Foam-Strip, Front
10	115-8809	1	Foam-Plug, RH


Ref.	Part Number	Qty.	Description
11	115-8810	1	Foam-Steering, Rear
12	115-8811	1	Foam-Steering, Front
13	115-8812	1	Foam-Column, Front
14	115-8813	1	Foam-Column, Rear
15	115-8841-01	1	Bracket-Foam, Pawl
16	115-8814	1	Foam-Pawl, Brake
17	115-8815	1	Foam-Plug, Brake
18	3234-33	2	Screw-HHF
19	104-7201	2	Nut-HF, NI

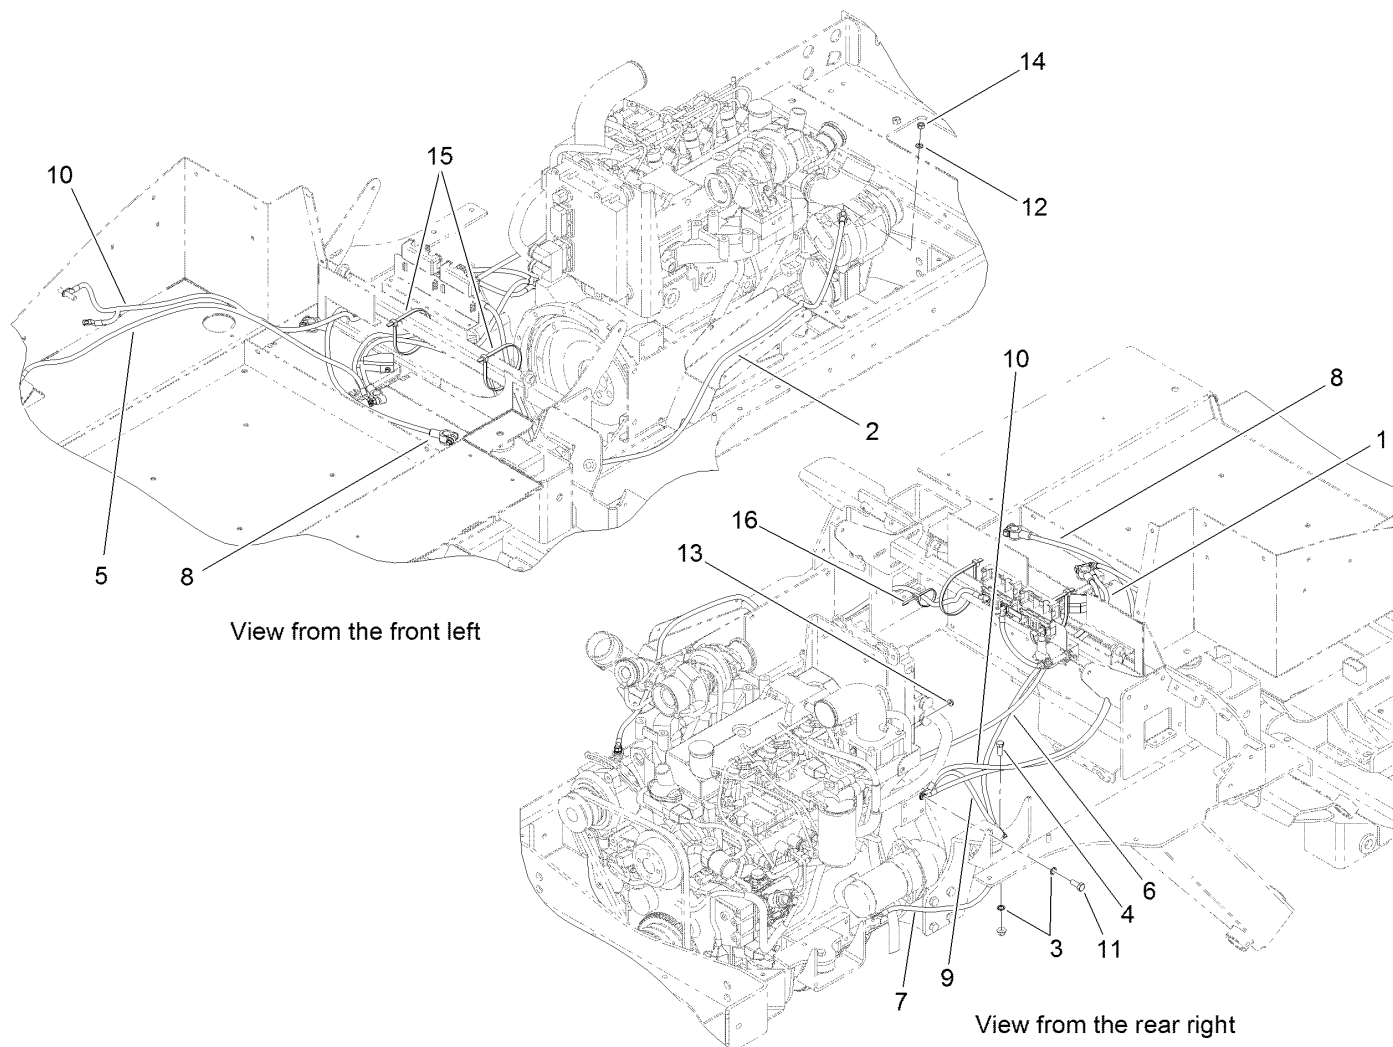 

Battery Cable Routing and Assembly

Ref.	Part Number	Qty.	Description
1	114-3304	1	Cable-Battery, Positive
2	114-3305	1	Cable-Battery, Positive
3	3254-6	2	Washer-Lock, Internal
4	323-6	1	Screw-HH
5	114-3308	1	Cable-Battery, Positive
6	114-3309	1	Cable-Battery, Positive
7	114-3310	1	Cable-Battery, Positive
8	114-3311	1	Cable-Battery, Negative


Ref.	Part Number	Qty.	Description
9	114-3312	1	Cable-Battery, Negative
10	114-3313	1	Cable-Battery, Negative
11	33115-025	1	Screw-HH
12	3255-8	1	Washer-Lock
13	98-5845	1	Nut-Hex
14	33014-00	1	Nut-Hex
15	3334-945	2	Tie-Cable
16	3290-378	1	Tie-Cable

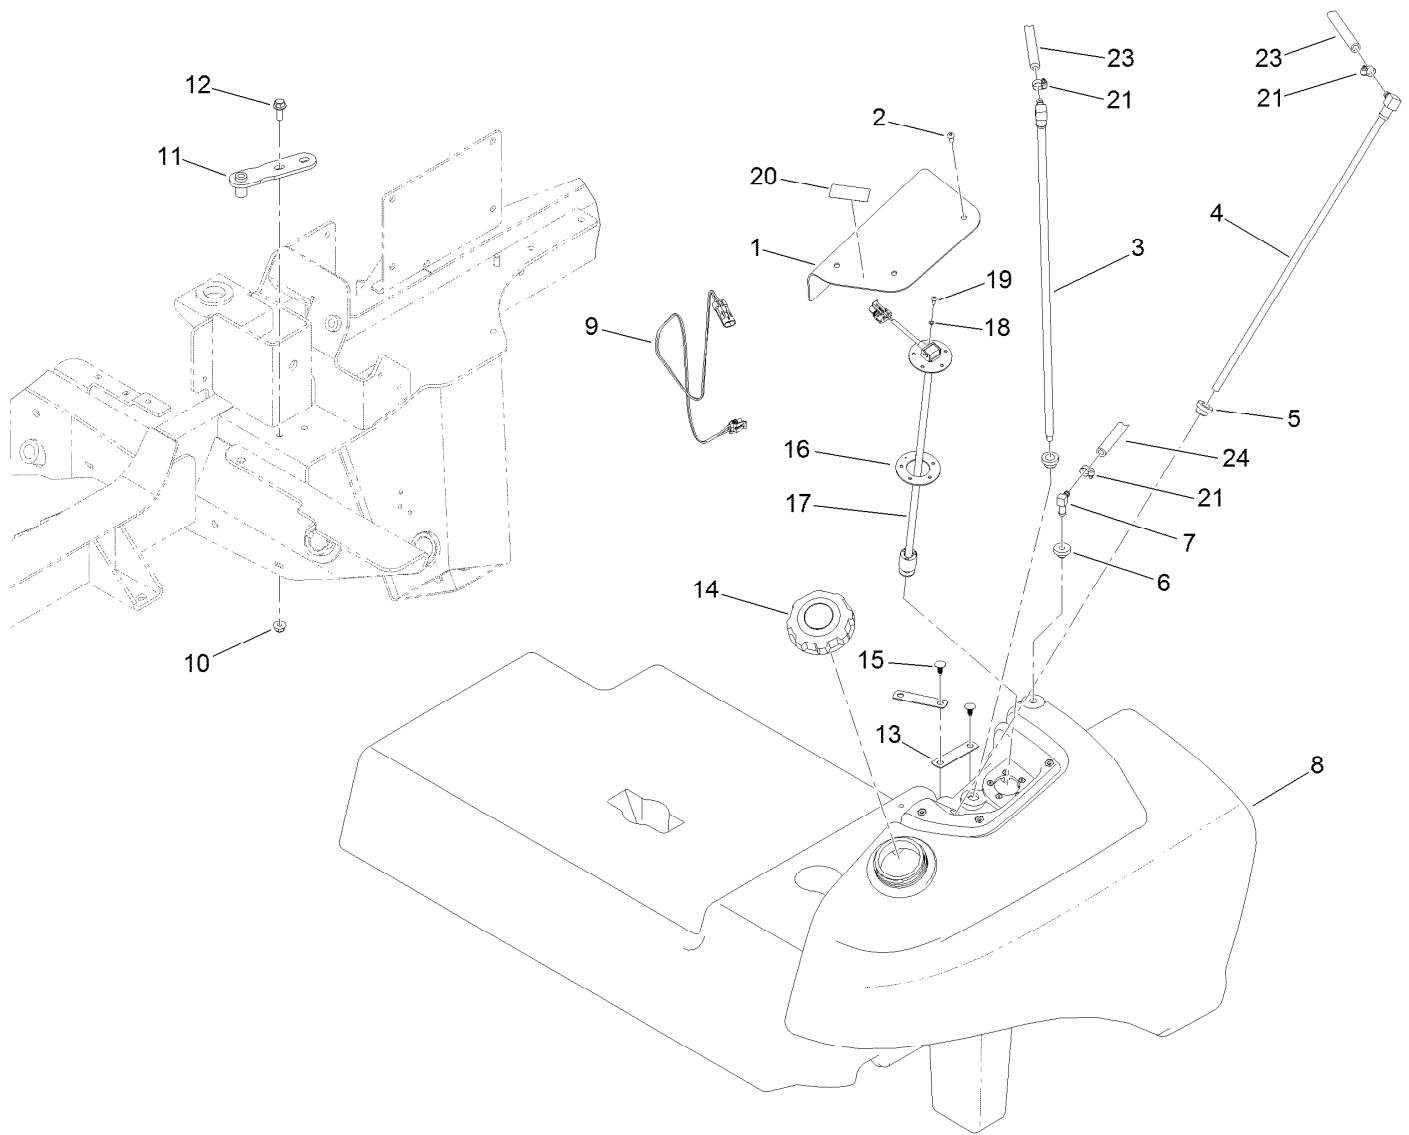 

Fuel Tank Assembly

Ref.	Part Number	Qty.	Description
1	114-4939-03	1	Cover-Fitting, Fuel
2	3274-31	3	Screw-HSBH
3	119-7748	1	Pipe-Stand, Fuel
4	114-0943	1	Pipe-Stand, Return
5	104-0790	2	Bushing
6	46-6550	1	Fitting-Elbow, 90 DEG
7	46-6560	1	Bushing
8	131-2284	1	Fuel Tank ASM
9	122-0577	1	Harness-Wire, Extension
10	104-8301	2	Nut-HF, NI
11	114-0094	1	Hold Down-Tank
12	3234-42	2	Screw-HHF


Ref.	Part Number	Qty.	Description
13	94-6821	2	Clamp-Wire
14	119-8266	1	Cap-Fuel (Biodiesel)
15	117-2382	4	Plug-Plastic
16	121-1707	1	Gasket-Fuel, Viton
17	121-1688	1	Gauge-Fuel
18	3253-15	5	Washer-Lock
19	32122-24	5	Screw-PTH
20	114-9600	1	Decal-Low Sulfur
21	2412-108	3	Clamp-Worm
23	114-5916	2	Hose-Fuel
24	110-4110	2	Hose-Fuel

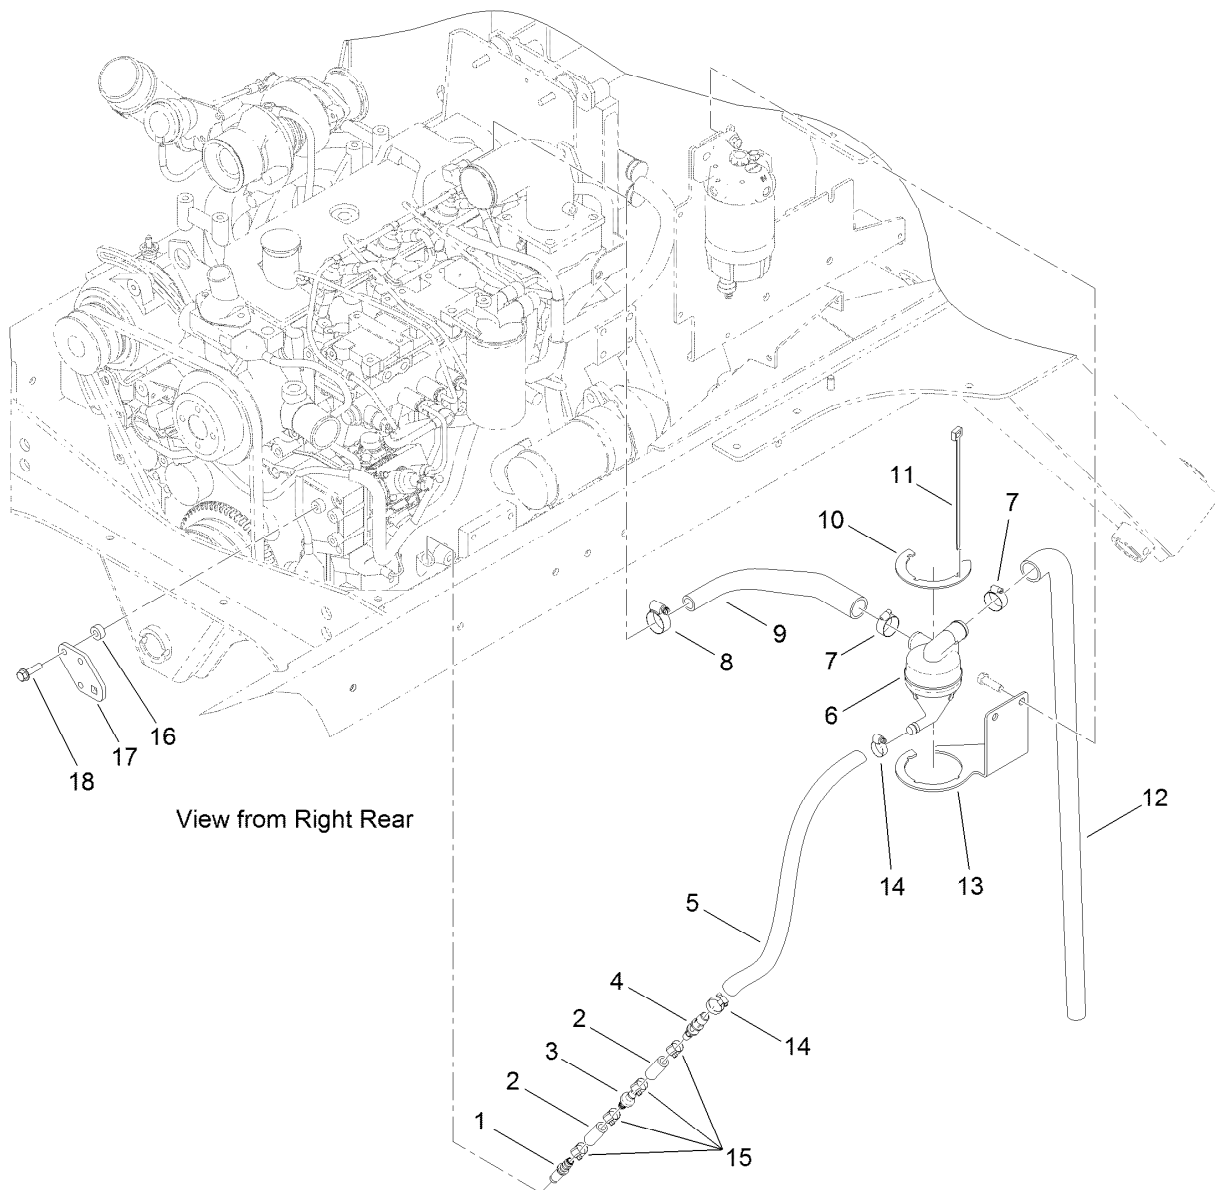 

Engine Breather Assembly

Ref.	Part Number	Qty.	Description
1	117-2789	1	Fitting-Barb
2	115-3392	2	Hose-Fuel
3	115-3397	1	Valve-Check
4	115-3398	1	Adapter-Straight, Hose Barb
5	87-3740	1	Hose-Breather
6	115-3399	1	Breather-Cyclone
7	2412-34	2	Clamp-Hose
8	2412-129	1	Clamp-Hose
9	115-3395	1	Hose-Formed, Breather Inlet


Ref.	Part Number	Qty.	Description
10	115-8879	1	Plate-Latch
11	3290-378	3	Tie-Cable
12	117-9406	1	Hose-Formed, Breather
13	115-3393-03	1	Plate-Mount, Breather
14	2412-36	2	Clamp-Hose
15	2412-108	6	Clamp-Worm
16	121-1759	3	Spacer
17	114-4947	1	Plate-Mount, Pad
18	33104-030	3	Screw-HHF

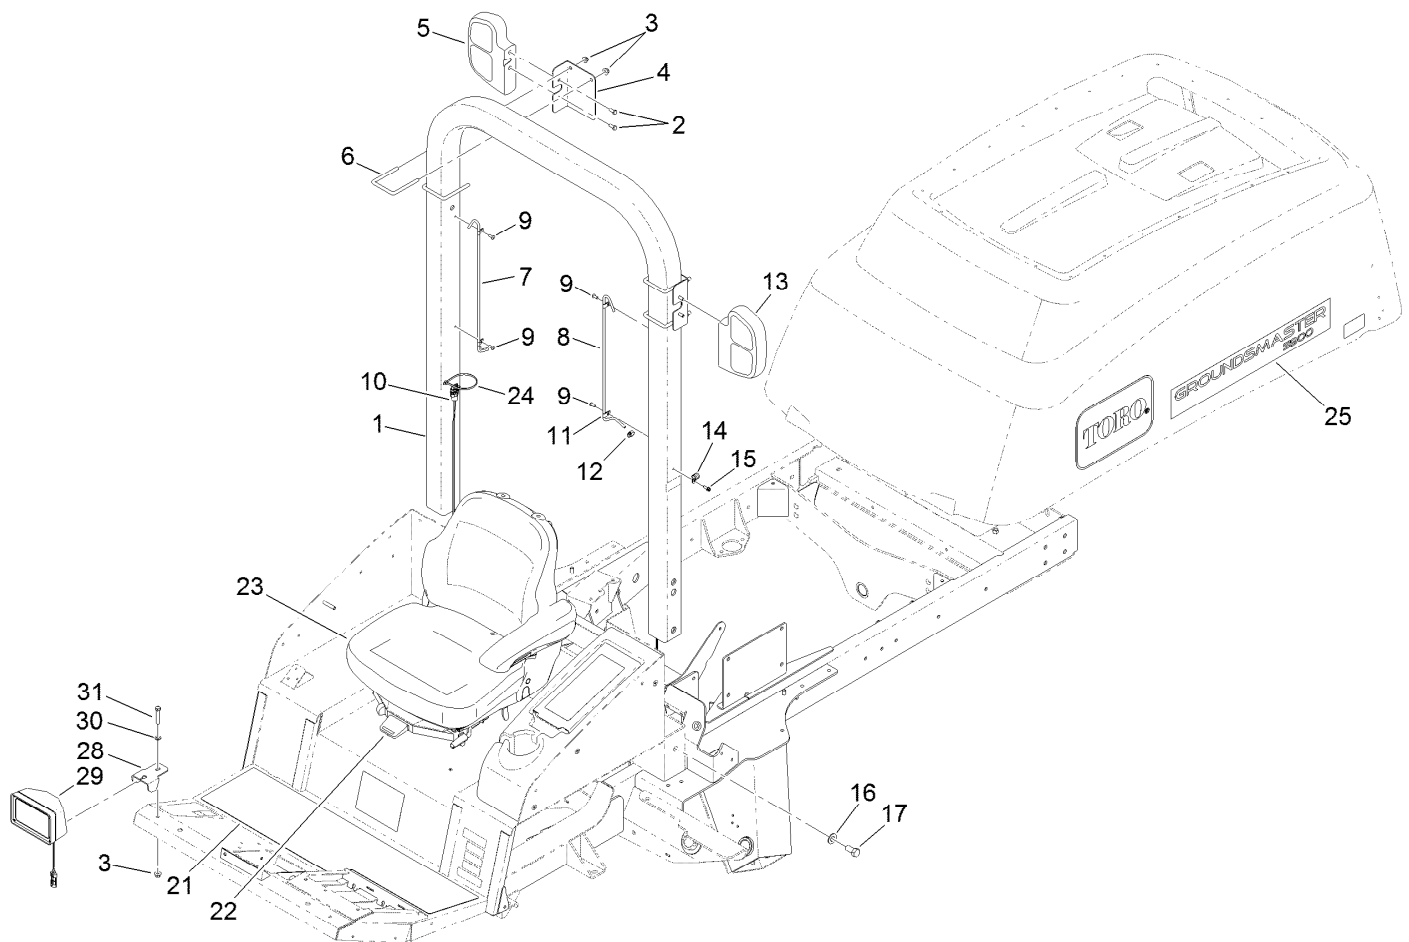 

Roll-Over Protection System Assembly For ROPS Model Only


Ref.	Part Number	Qty.	Description
1	114-5505	1	ROPS ASM
2	33114-020	4	Screw-HH
3	104-8301	10	Nut-HF, NI
4	114-5601-03	2	Bracket-Flasher
5	108-8007	1	Tail Light Flasher ASM
6	100-7067	4	U-Bolt (4 Inch)
7	114-0938	1	Tube-Vent
8	114-0937	1	Tube-Vent
9	3290-412	4	Rivet-Blind
10	120-6305	1	Harness-Wire, Flashers
11	2412-72	4	Clip-Closed, Insulated
12	2412-108	2	Clamp-Worm
13	108-8008	1	Tail Light Flasher ASM

Ref.	Part Number	Qty.	Description
14	2412-134	2	Clamp-R
15	49-2040	2	Screw-HWHTF
16	3256-27	4	Washer-Flat
17	327-3	4	Screw-HH
21	114-0835	1	Tread-Foot, Abrasive
22	108-1488	1	Seat Suspension ASM
23	117-5676	1	Premium Seat ASM
24	3290-379	7	Tie-Cable
25	110-6008	2	Decal-Hood
28	125-5305-01	2	Bracket-Headlight
29	114-5928	2	Headlight ASM
30	3256-45	2	Washer-Flat
31	323-10	2	Screw-HH

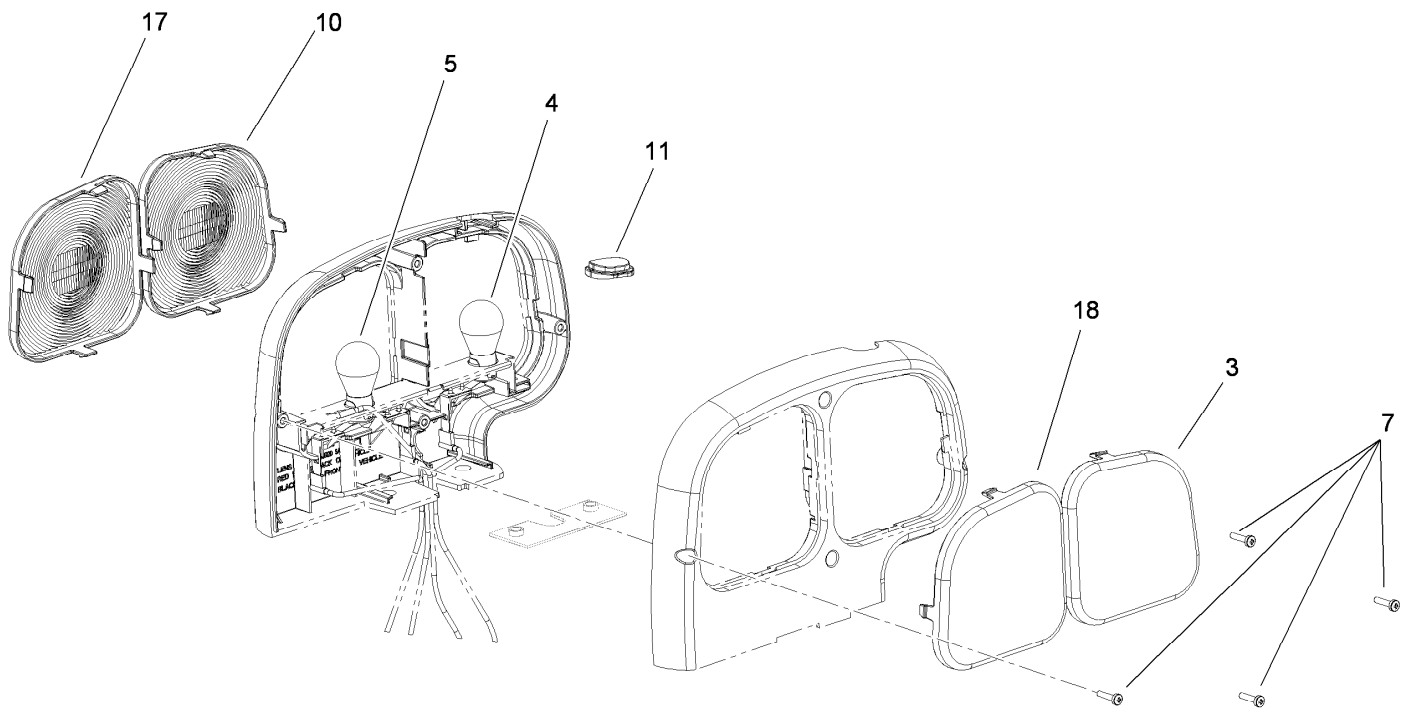 


Right Hand Tail Light Assembly No. 108-8007

Ref.	Part Number	Qty.	Description
3	108-8056	1	Lens-Amber, Base
4	7228	1	Bulb-1156
5	108-8054	1	Bulb-1157
7	108-8053	4	Screw
10	108-8057	1	Lens-Amber, Cover
11	108-8055	1	Lens-Amber, Window
17	108-8060	1	Lens-Red, Base
18	108-8059	1	Lens-Black, Cover

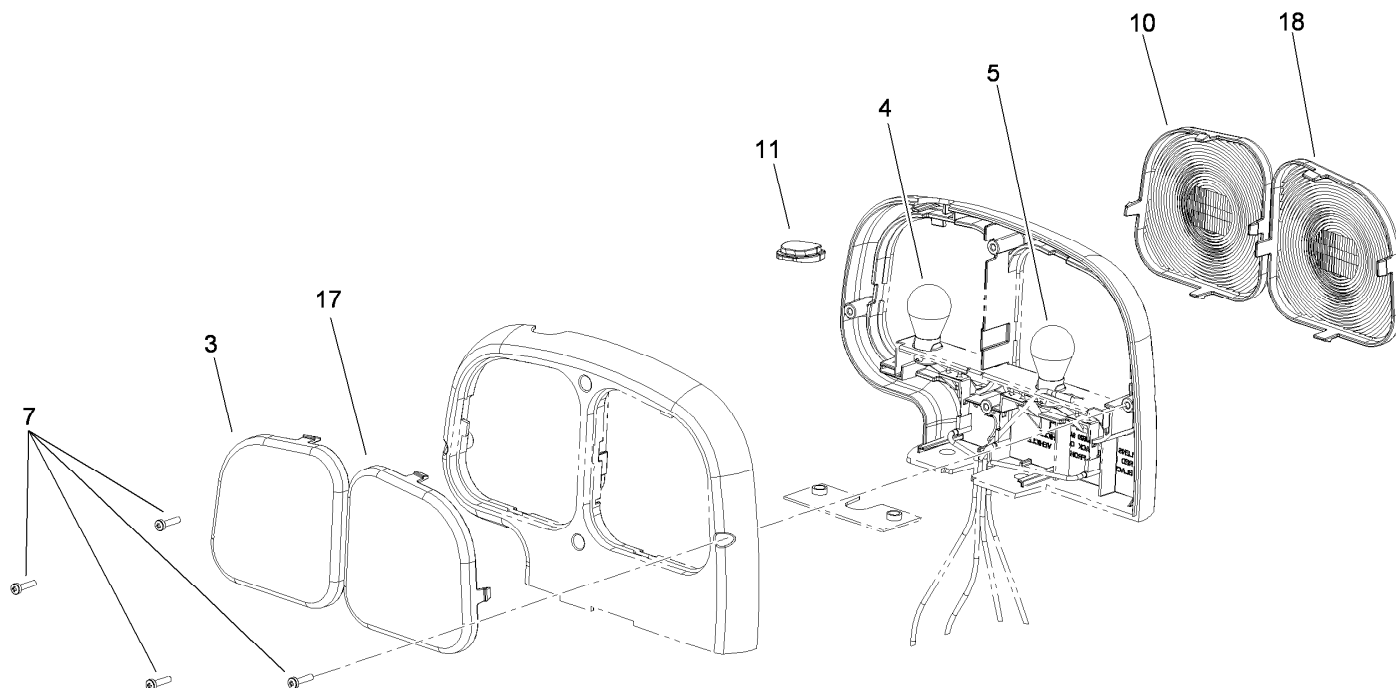 

Left Hand Tail Light Assembly No. 108-8008

Ref.	Part Number	Qty.	Description
3	108-8056	1	Lens-Amber, Base
4	7228	1	Bulb-1156
5	108-8054	1	Bulb-1157
7	108-8053	4	Screw
10	108-8057	1	Lens-Amber, Cover
11	108-8055	1	Lens-Amber, Window
17	108-8061	1	Lens-Red, Cover
18	108-8058	1	Lens-Black, Base

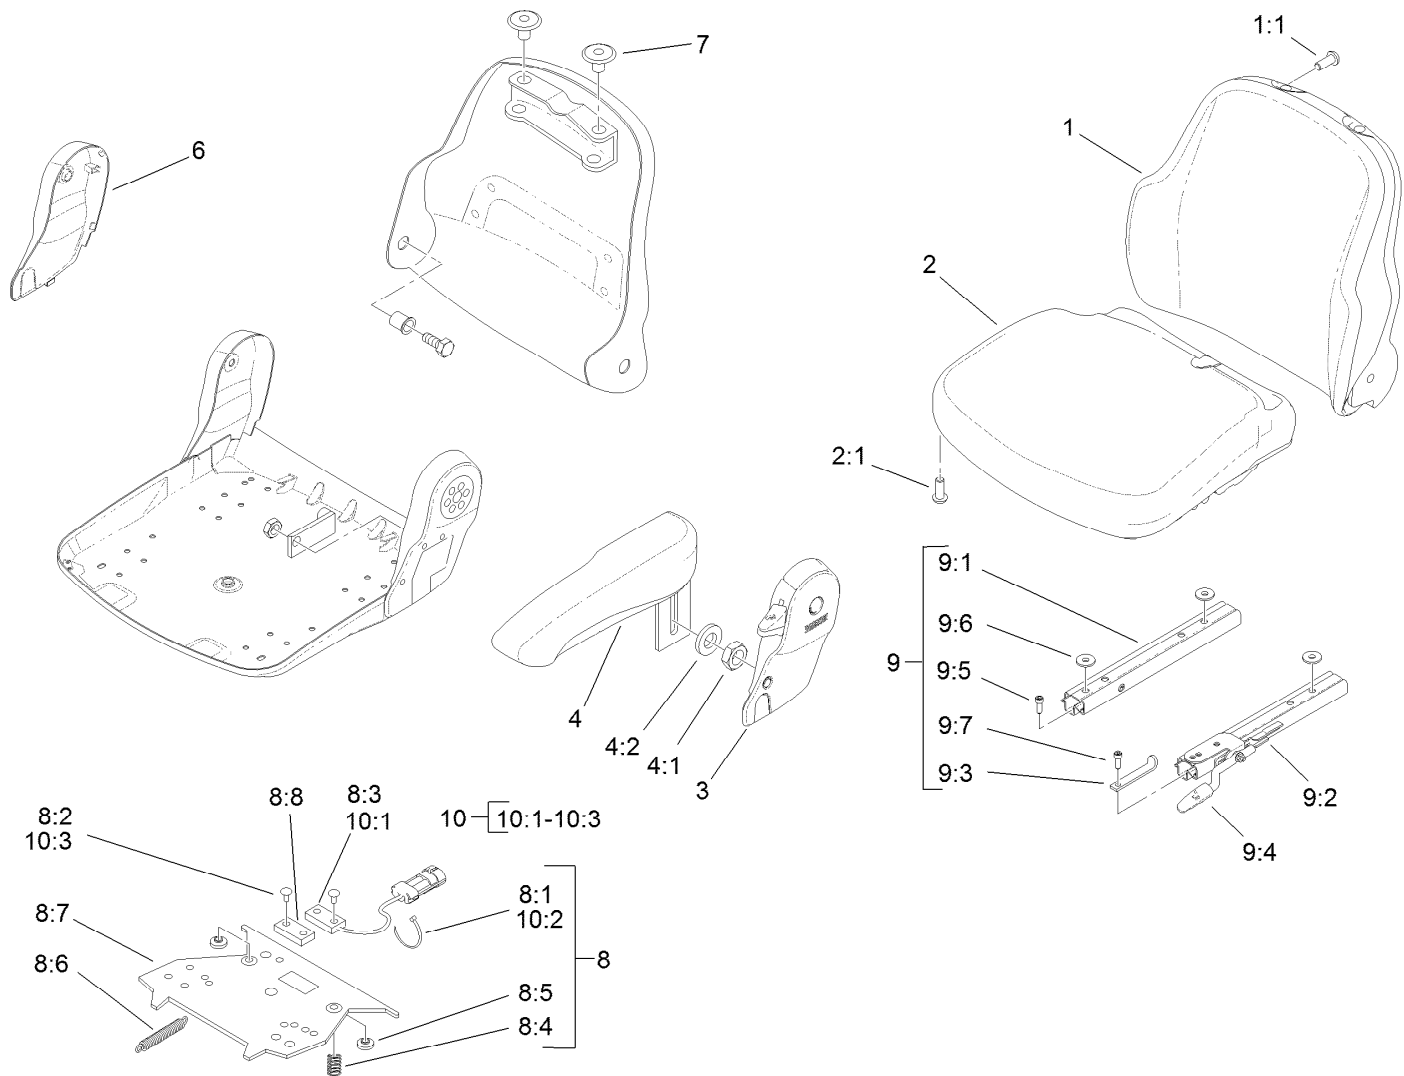 


Vinyl Premium Seat Assembly No. 117-5676

Ref.	Part Number	Qty.	Description
1	108-8016	1	Backrest Cushion ASM
1:1	119-7742	4	Screw-Cushion
2	108-8017	1	Seat Cushion ASM
2:1	119-7742	3	Screw-Cushion
3	108-8018	1	Cover-Armrest
4	108-8019	1	LH Armrest ASM
4:1	82-9650	1	Nut
4:2	107-1198	1	Washer
6	108-8021	1	Cover-Armrest
7	108-8022	2	Cover-Black
8	108-8024	1	Switch Kit
8:1		3	Wire Tie ●
8:2		4	Rivet ●
8:3		1	Sensor-Seat Switch ●
8:4		2	Spring-Compression ●
8:5		2	Bumper-Pressure Plate ●


Ref.	Part Number	Qty.	Description
8:6		1	Spring-Extension ●
8:7		1	Plate-Mounting ●
8:8		1	Magnet ●
9	108-8025	1	Adjustment Rail Set
9:1		1	Rail-Adjustment, RH ●
9:2		1	Rail-Adjustment, LH ●
9:3		1	Stop-Rail ●
9:4		1	Handle ●
9:5		3	Screw ●
9:6		3	Washer ●
9:7		1	Screw ●
10	110-6189	1	Switch Kit
10:1		1	Switch ●
10:2		3	Wire Tie ●
10:3		2	Rivet ●

 ● Not serviced separately

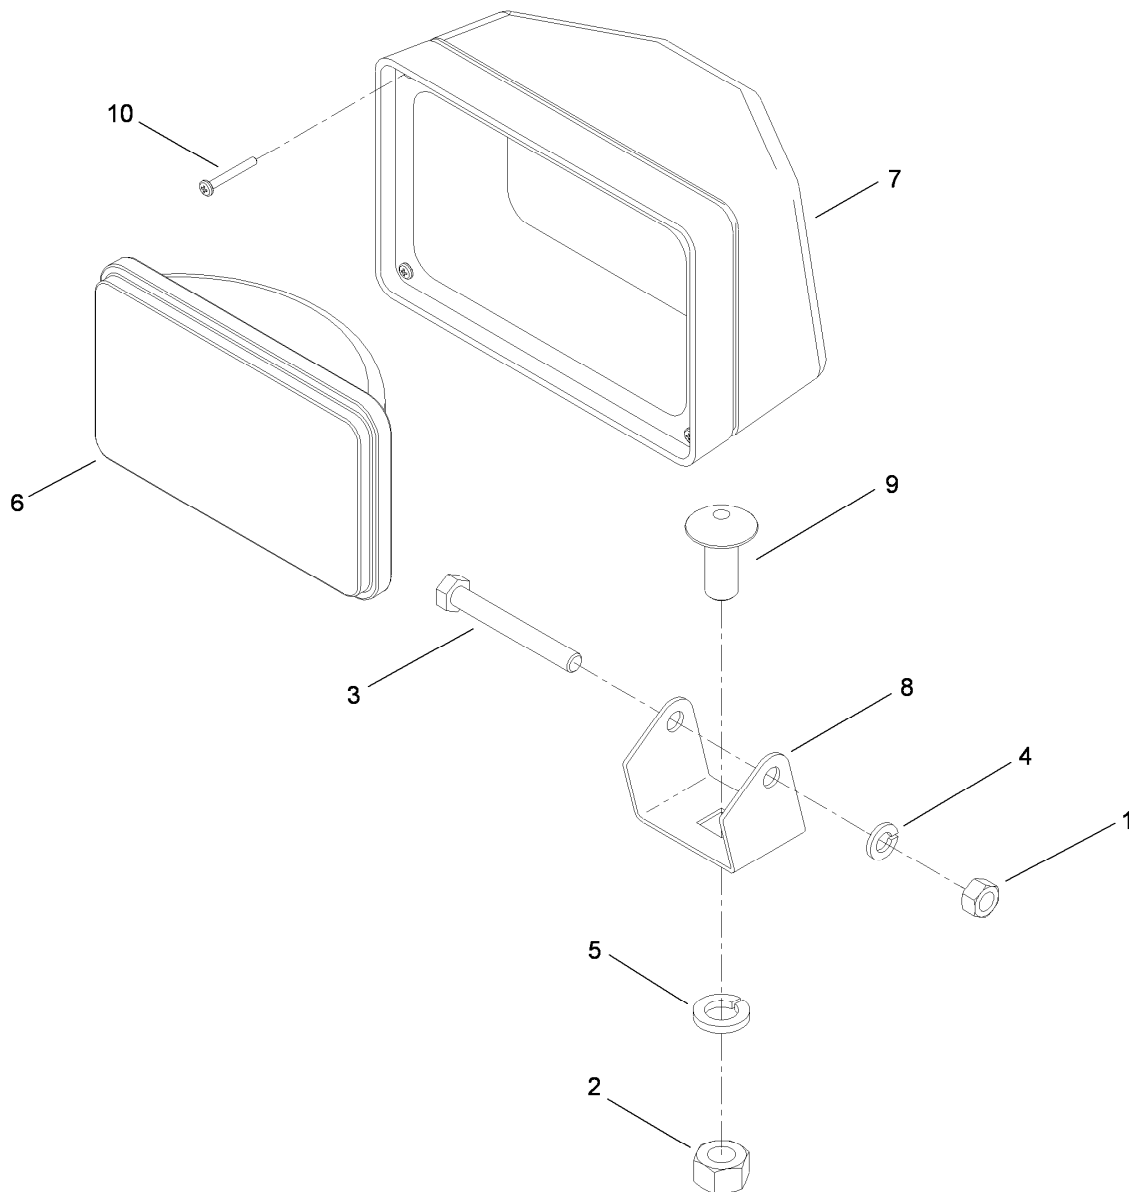

Head Light Assembly No. 114-5928

Ref.	Part Number	Qty.	Description
1	3217-6	1	Nut-Hex
2	3217-9	1	Nut-HH
3	322-12	1	Screw-HH
4	3253-4	1	Washer-Lock
5	3253-7	1	Washer-Lock
6	92-6595	1	Lamp-Beam, Sealed
7	92-6596	1	Bezel
8	92-6597	1	Bracket-Mounting
9	92-6598	1	Bolt-Carriage, Drilled
10	92-6599	4	Screw

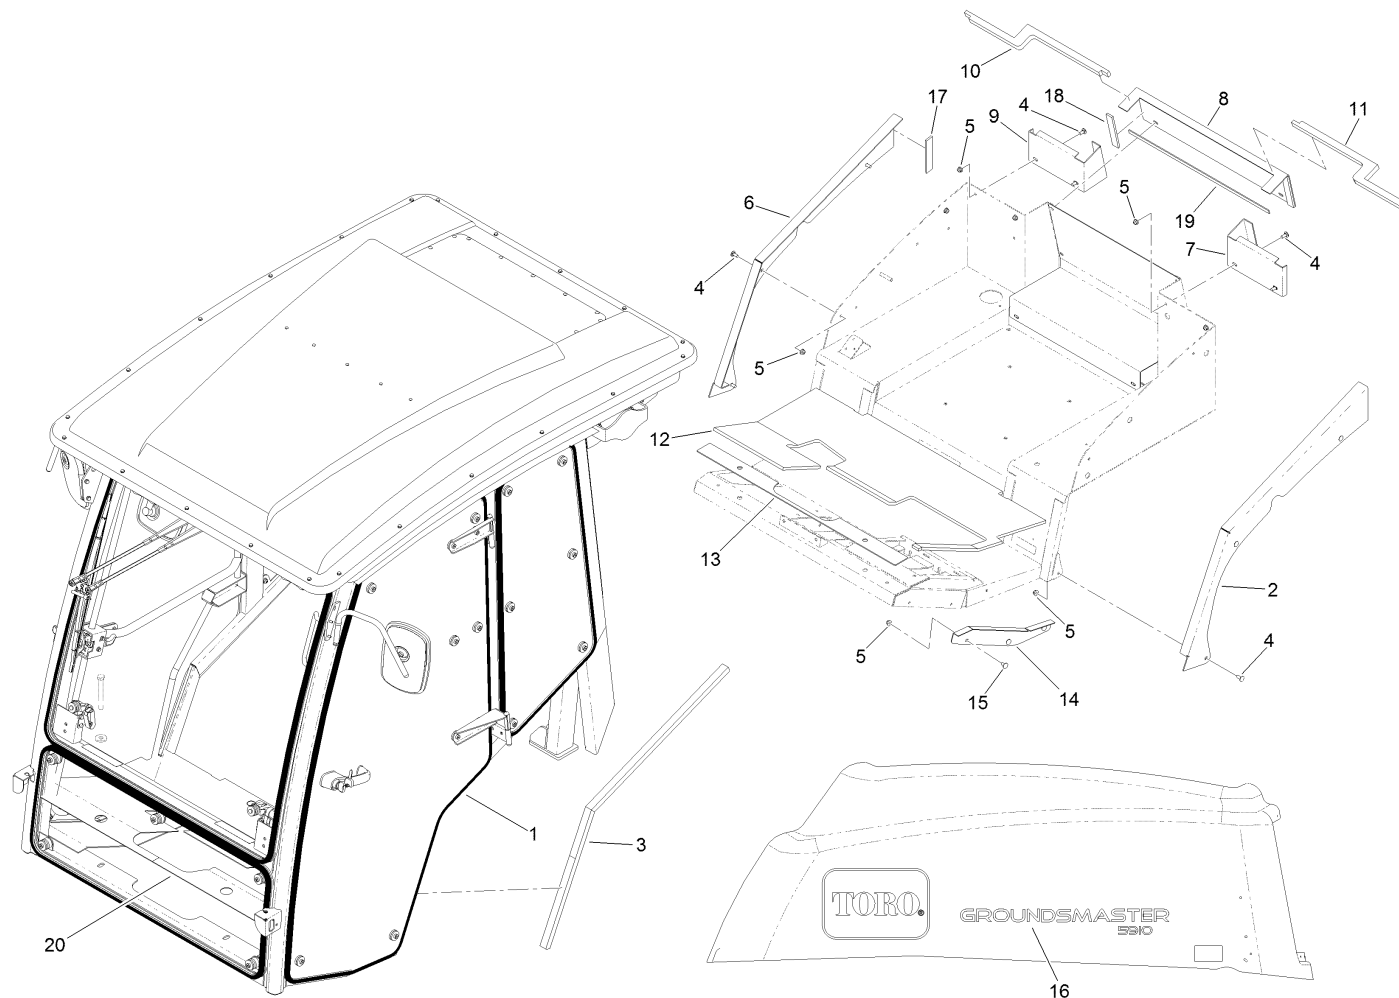 


Cab Mounting Assembly For Cab Model Only

Ref.	Part Number	Qty.	Description
1		1	Cab ASM ●
2	125-7545-03	1	Panel-Transition, LH
3	130-5977	2	Foam-Seal, Side Panel
4	3230-23	10	Bolt-CARR
5	104-8300	13	Nut-HF, NI
6	125-7544-03	1	Panel-Transition, RH
7	125-7547-03	1	Panel-Rear, LH
8	125-7548-03	1	Panel-Rear, Center
9	125-7546-03	1	Panel-Rear, RH
10	130-0534	1	Foam-Seal, Rear RH

Ref.	Part Number	Qty.	Description
11	130-0535	1	Foam-Seal, Rear LH
12	130-5991	1	Foam-Floor
13	130-5605	1	Gasket-Front
14	130-5606-03	1	Bracket-Mount, Floor Foam
15	3230-18	3	Screw-CARR
16	115-5448	2	Decal-Hood
17	130-5722	2	Seal-Trim
18	130-5723	2	Seal-Trim
19	130-5724	1	Seal-Trim
20	130-5990	1	Tread-Floor


● Not serviced separately

 Compressor Mount and Cab Fluids Assembly For Cab Model Only

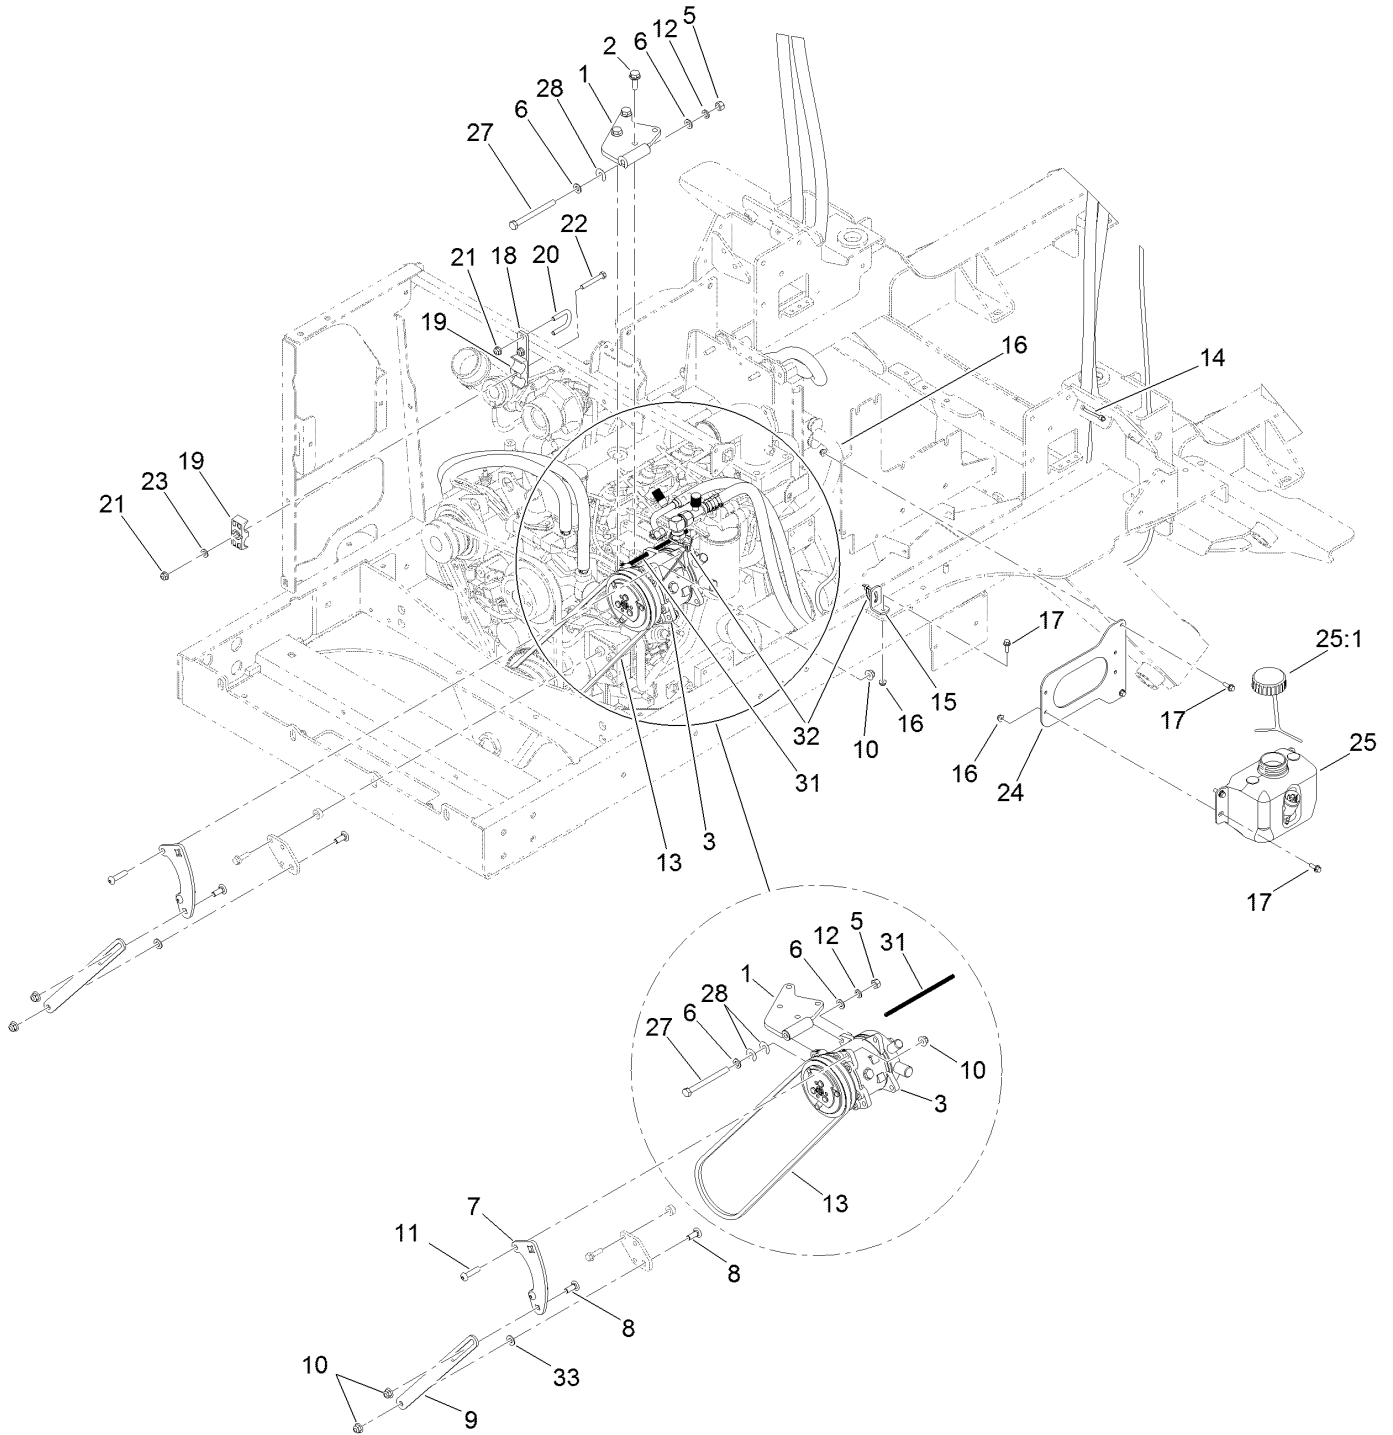


Compressor Mount and Cab Fluids Assembly For Cab Model Only (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-2286-03	1	Plate-Pivot	17	3234-4	7	Screw-HHF
2	33105-030	4	Screw-HHF	18	114-5616	1	Plate-Mount, Heater Hoses
3	119-0103	1	Compressor	19	56-7974	2	Clamp-Tube
5	33025-00	1	Nut-Lock, NI	20	114-0004	1	U-Bolt
6	33095-00	2	Washer-Flat	21	104-8300	3	Nut-HF, NI
7	114-4948	1	Plate-Mount, Compressor	22	322-11	1	Screw-HH
8	3231-22	1	Screw-CARR	23	3256-23	1	Washer-Plain
9	114-4949-03	1	Arm-Tensioner	24	125-5256	1	Plate-Tank Mount
10	104-8301	4	Nut-HF, NI	25	125-5257	1	Tank-Fluid, Washer
11	95-3857	2	Screw-HSBH	25:1	125-5258	1	Lid-Tank, Washer Fluid
12	48-9590	1	Washer-Lock	27	33115-110	1	Screw-HH
13	105-3693	1	Belt-Fan	28	119-7734	2	Shim
14	3290-379	2	Tie-Cable	31	115-8882	1	Conduit-Convoluted
15	84-5330	1	Bracket-Prop, Hood	32	3290-378	2	Tie-Cable
16	104-7201	7	Nut-HF, NI	33	3256-24	1	Washer-Plain

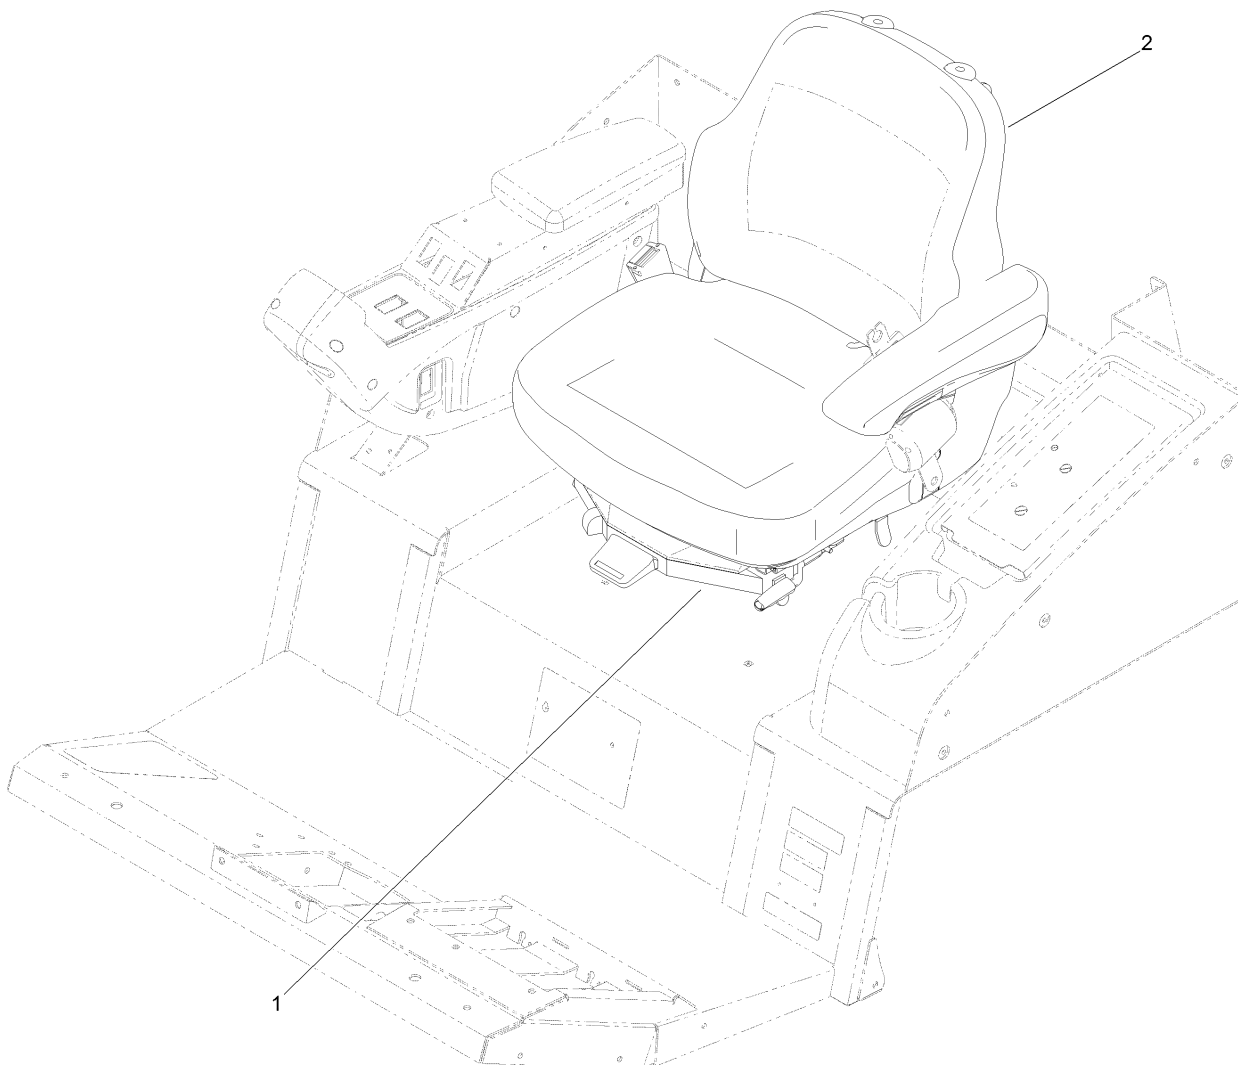 

Cab Seat Assembly For Cab Model Only

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	108-1488	1	Seat Suspension ASM
2	117-9429	1	Matrix Cloth Seat ASM

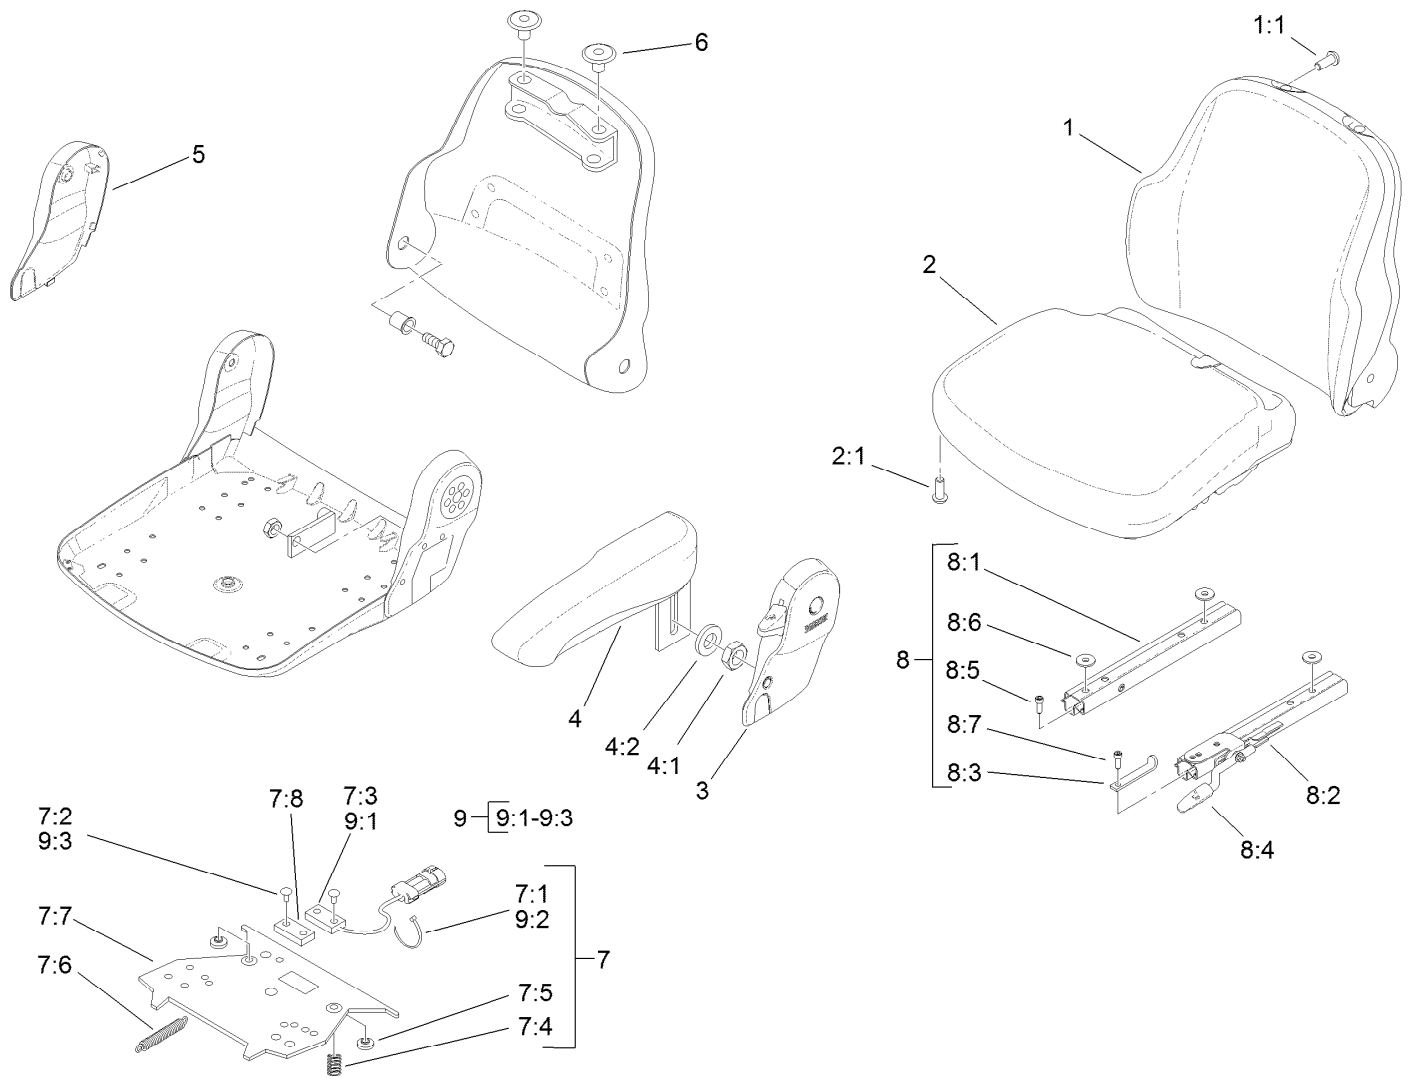 


Cloth Premium Seat Assembly No. 117-9429

Ref.	Part Number	Qty.	Description
1	117-9415	1	Backrest Cushion ASM Matrix Cloth
1:1	119-7742	4	Screw-Cushion
2	117-9416	1	Seat Cushion ASM Matrix Cloth
2:1	119-7742	3	Screw-Cushion
3	108-8018	1	Cover-Armrest
4	108-8019	1	LH Armrest ASM
4:1	82-9650	1	Nut
4:2	107-1198	1	Washer
5	108-8021	1	Cover-Armrest
6	108-8022	2	Cover-Black
7	108-8024	1	Switch Kit
7:1		3	Wire Tie ●
7:2		4	Rivet ●
7:3		1	Sensor-Seat Switch ●
7:4		2	Spring-Compression ●

Ref.	Part Number	Qty.	Description
7:5		2	Bumper-Pressure Plate ●
7:6		1	Spring-Extension ●
7:7		1	Plate-Mounting ●
7:8		1	Magnet ●
8	108-8025	1	Adjustment Rail Set
8:1		1	Rail-Adjustment, RH ●
8:2		1	Rail-Adjustment, LH ●
8:3		1	Stop-Rail ●
8:4		1	Handle ●
8:5		3	Screw ●
8:6		3	Washer ●
8:7		1	Screw ●
9	110-6189	1	Switch Kit
9:1		1	Switch ●
9:2		3	Wire Tie ●
9:3		2	Rivet ●

● Not serviced separately

 Cab Frame, Mirror and Decal Assembly For Cab Model Only

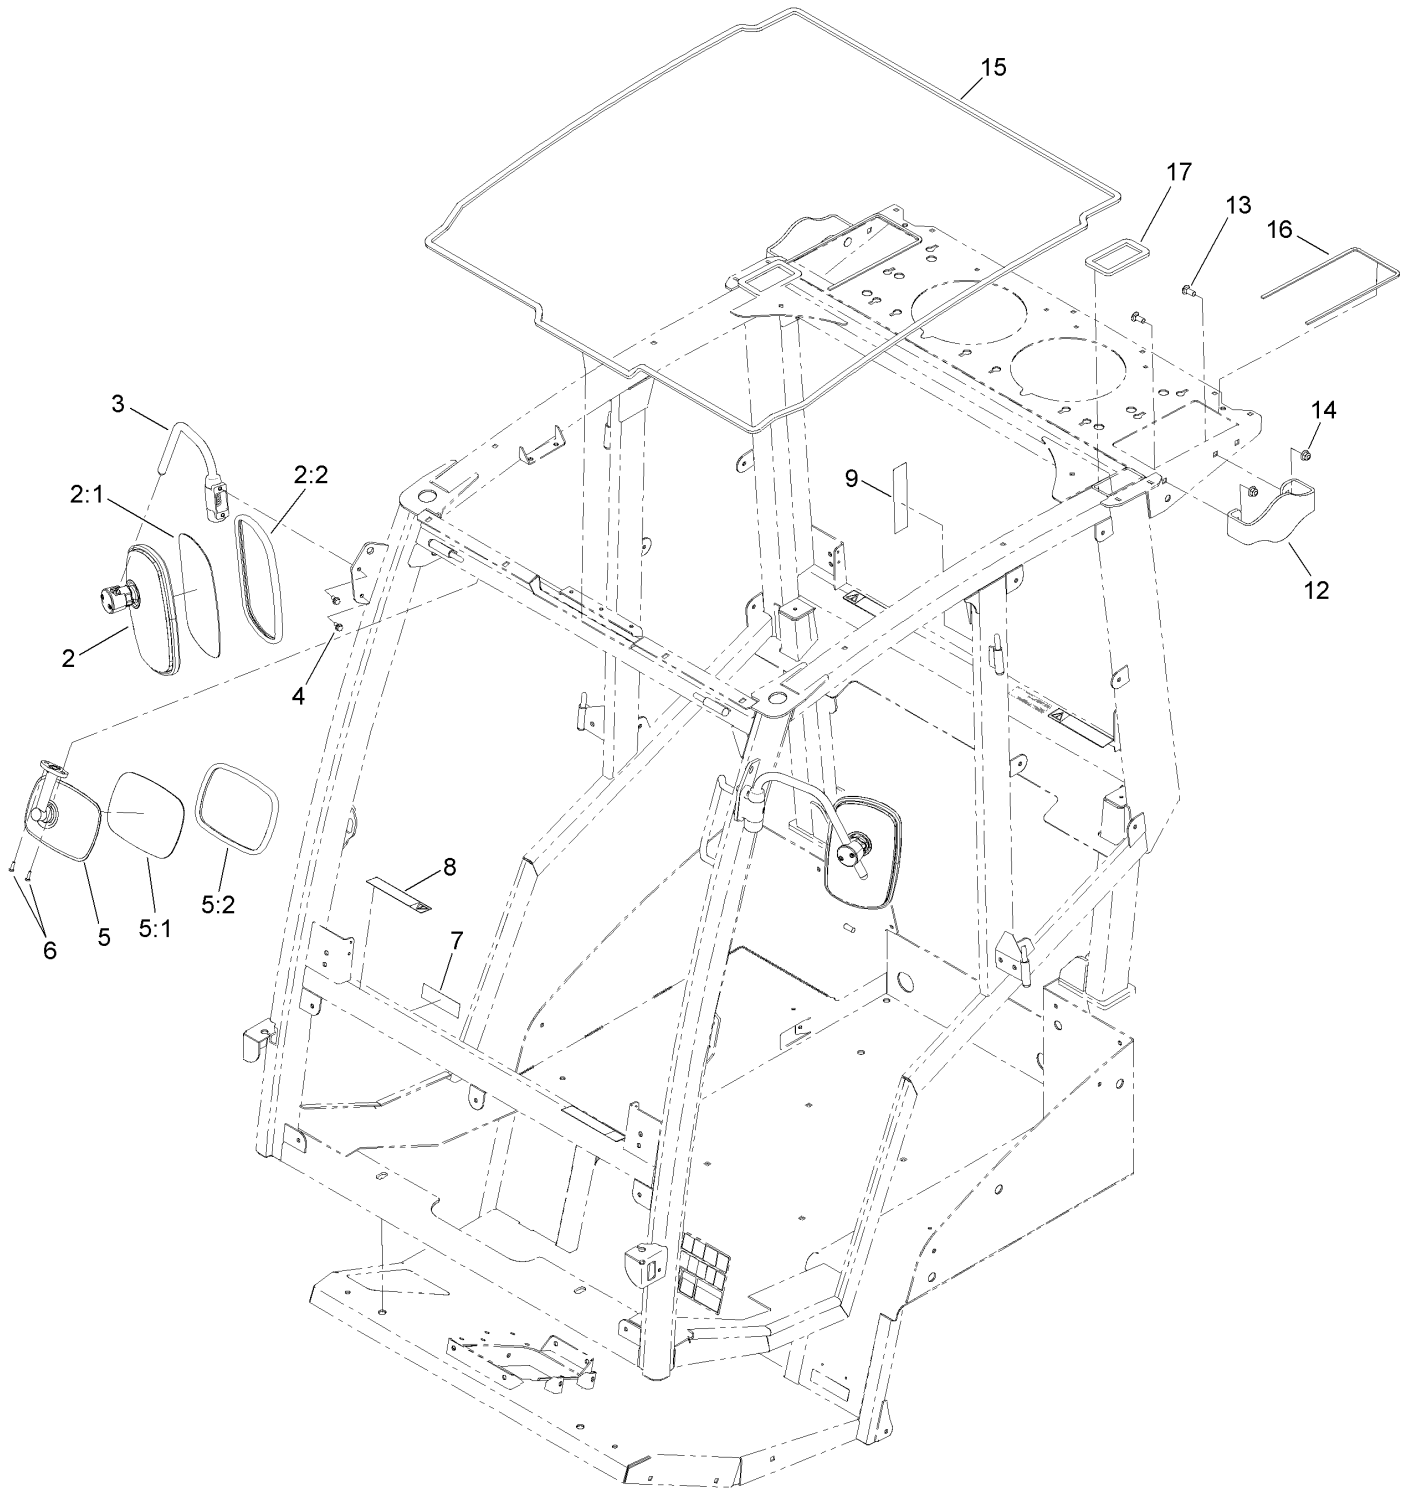


Cab Frame, Mirror and Decal Assembly For Cab Model Only (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	121-8341	2	Side Mirror ASM	7	130-5356	1	Decal-Traction Pedal
2:1		1	Mirror-Glass ●	8	130-0611	4	Decal-Window, Pin
2:2		1	Gasket ●	9	130-0594	1	Decal-Warning
3	121-8275	2	Arm-Mirror, Side	12	130-5791-03	2	Deck-Stop
4	33103-016	4	Screw-HHF	13	3231-12	4	Bolt-CARR
5	121-8343	1	Interior Mirror ASM	14	104-8301	4	Nut-HF, NI
5:1		1	Mirror ●	15	130-0586	1	Seal-Foam, Frame Roof
5:2		1	Gasket ●	16	130-0587	2	Seal-Foam, Roof Air Filter
6	32144-32	2	Screw-PPH	17	130-5855	2	Seal-Tube, Rear

● Not serviced separately

 
Winshield Wiper, Filter and Air Conditioning Assembly For Cab Model Only

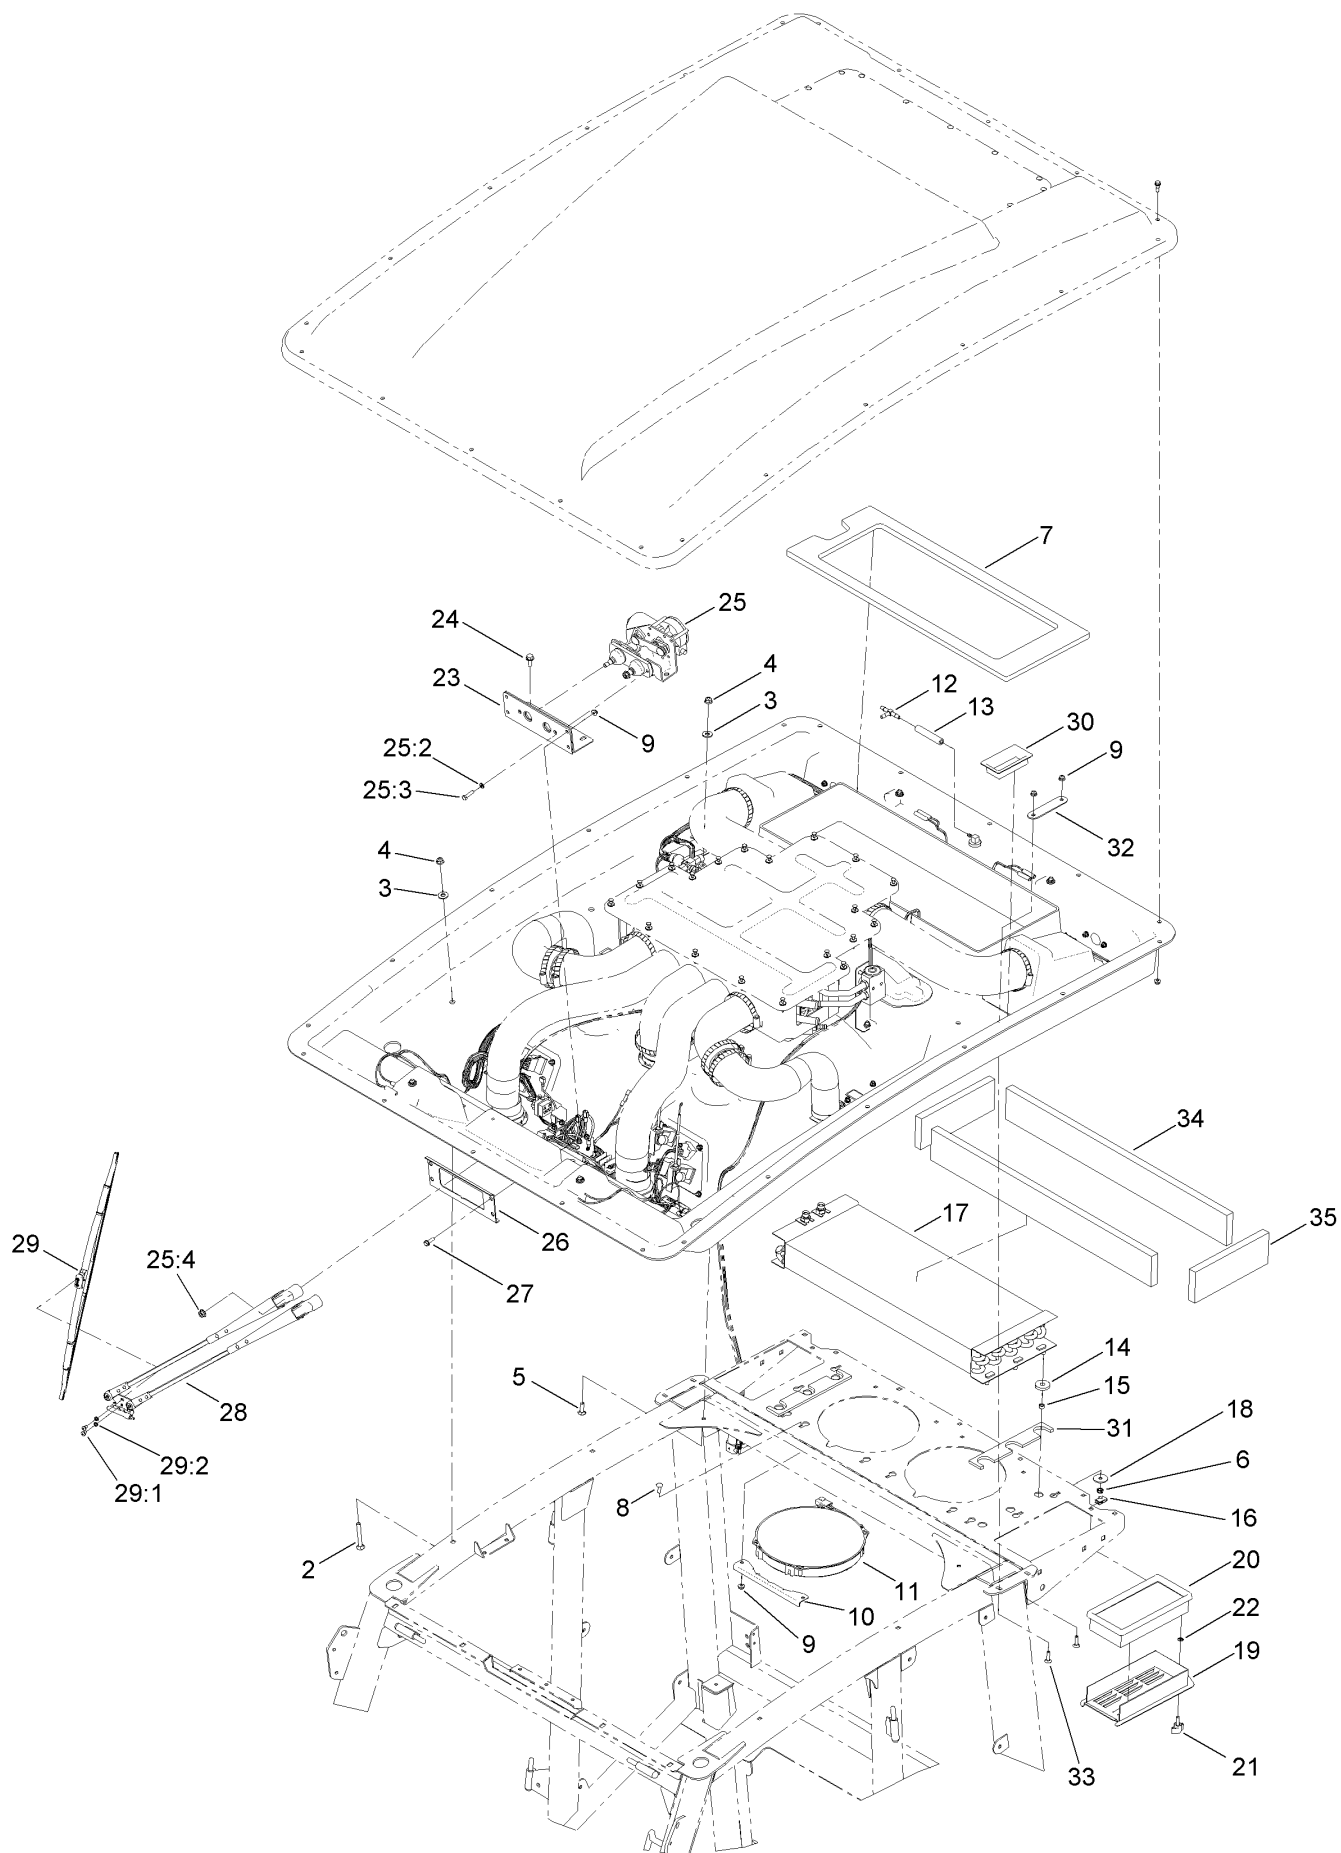

Winshield Wiper, Filter and Air Conditioning Assembly For Cab Model Only (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	3230-9	4	Screw-CARR	22	106-8737	2	Nut-Retainer
3	3256-3	17	Washer-Flat	23	130-5871	1	Bracket-Wiper
4	104-8300	17	Nut-HF, NI	24	32144-11	3	Screw-HWH
5	3230-22	13	Screw-CARR	25	125-7452	1	Wiper Motor ASM
6	107069	2	Clip	25:2	3253-3	1	Washer-Lock
7	130-5647	1	Gasket-Foam, Condenser	25:3	33113-025	1	Screw-HH
8	1-807512	8	Bolt-CARR	25:4	112-2844	2	Nut-HF
9	104-7201	16	Nut-HF, NI	26	130-6068-03	1	Plate-Washer, Wiper Motor
10	125-9621	4	Bracket-Mount, Fan	27	32105-15	4	Screw-HWH
11	121-8459	2	Fan-Condenser	28	125-7453	1	Arm-Wiper
12	99-5005	1	Fitting-Tee, Barbed	29	125-7454	1	Blade-Wiper
13	110-0047	1	Hose-Fuel	29:1	47-2830	2	Screw
14	125-9982	6	Bushing-Flange	29:2	43-5920	2	Washer-Lock, Spring
15	106-8489	6	Bushing-Sleeve	30	130-5661	2	Tube-Sleeve
16	3256-57	6	Washer-Flat	31	130-5931	2	Seal-Condenser
17	121-8447	1	Core-Condenser	32	130-5854	2	Brace-Seal
18	3296-47	6	Nut-Lock,NI	33	3229-30	4	Screw-CARR
19	125-9825-03	2	Cover-Air, Fresh	34	130-5649	2	Seal-Foam, Long
20	121-8457	2	Filter-Air	35	130-5650	2	Seal-Foam, Short
21	98-8332	2	Knob				

 Window and Door Assembly For Cab Model Only

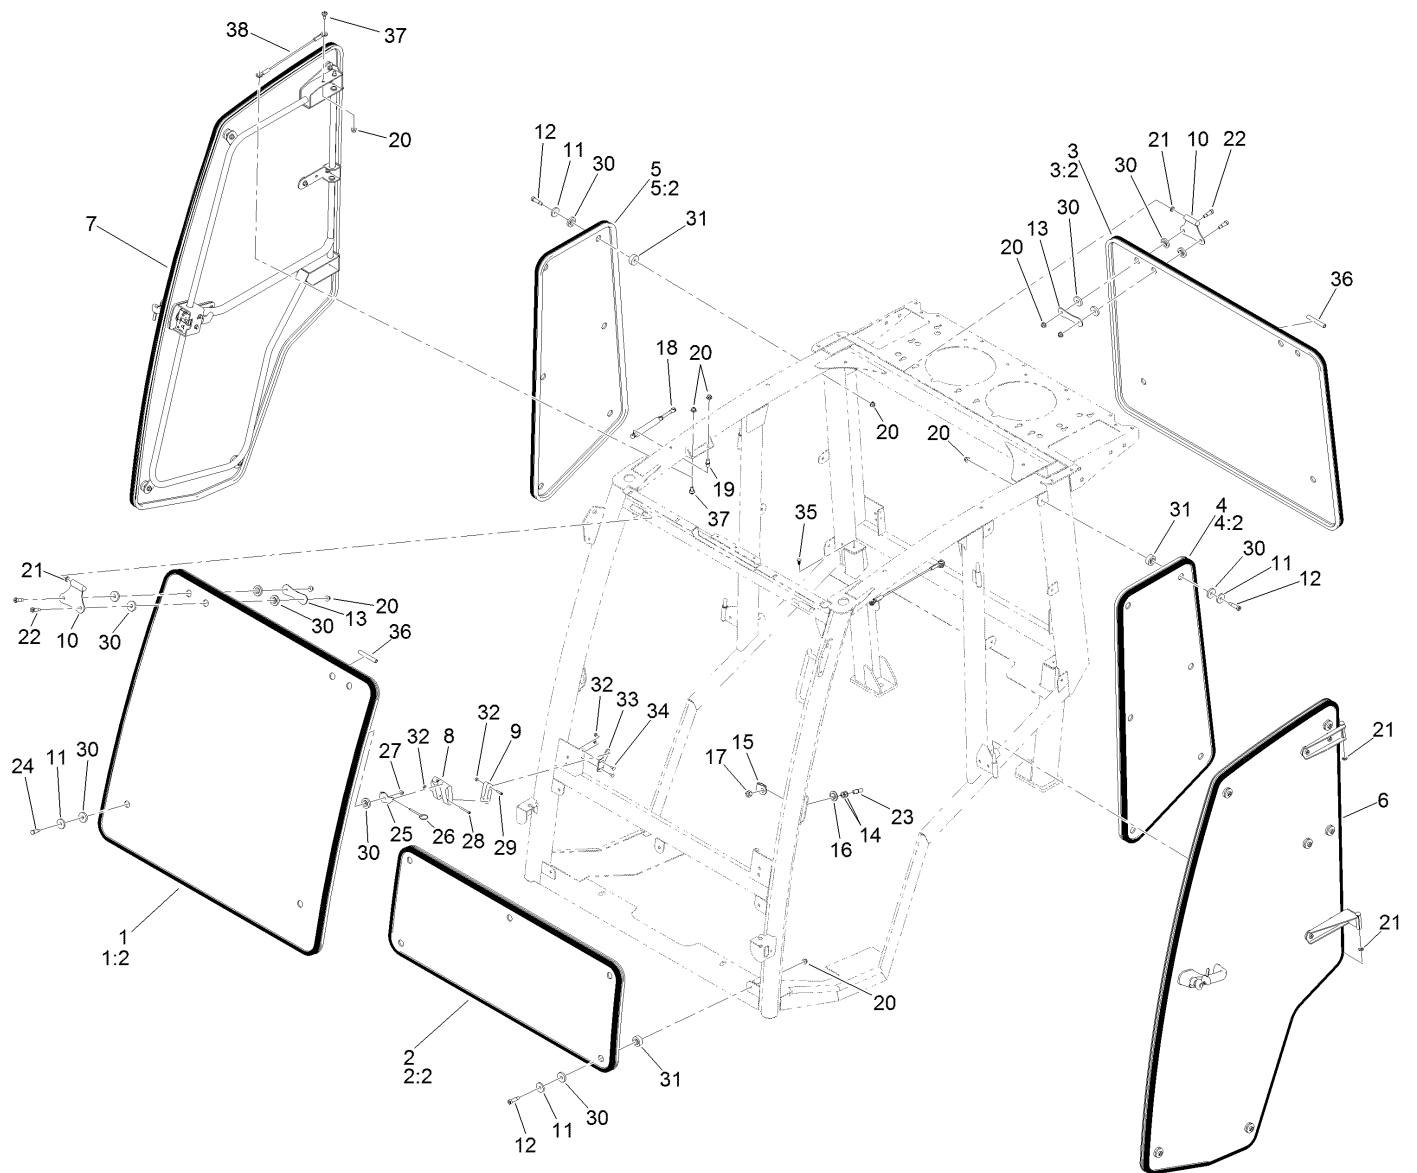


Window and Door Assembly For Cab Model Only (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-5680	1	Upper Front Window ASM	18	130-6083	2	Spring-Gas, Door
1:2	121-8212	1	Seal-Trim	19	98-3104	2	Stud-Ball
2	130-5681	1	Lower Front Window ASM	20	104-8300	31	Nut-HF, NI
2:2	121-8211	1	Trim-Window, Front	21	121-8441	8	Washer-Spacer
3	130-5690	1	Rear Window ASM	22	125-9520	8	Screw-Shoulder, HSH
3:2	121-8213	1	Trim-Window, Rear	23	125-9993	2	Striker-Stud
4	130-6187	1	LH Side Window ASM	24	119-9812	4	Bolt-Shoulder
4:2	130-0502	1	Trim-Window, Stationary	25	125-9987	4	Mount-Latch
5	130-6186	1	RH Side Window ASM	26	127-9850	4	Pin-Release, Quick
5:2	130-0502	1	Trim-Window, Stationary	27	104-7201	4	Nut-HF, NI
6		1	LH Door ASM ●	28	3274-59	4	Screw-HSH
7		1	RH Door ASM ●	29	3274-14	4	Screw-HSH
8	125-9792	4	Handle-Window	30	125-9982	41	Bushing-Flange
9	125-9793	4	Link-Window	31	125-9537	17	Bushing-Flange
10	121-8535-03	4	Hinge-Window	32	120-9681	16	Nut-Lock, NI
11	130-5815	21	Washer-Backup	33	130-0590	4	Mount-Tab
12	125-9521	17	Screw-Shldr HSH	34	1-807513	8	Bolt-CARR
13	127-9933-03	4	*obs* Plate-Backer	35	114-4899	2	Rivet-Push
14	73-0040	4	Washer-Thrust	36	130-5578	2	Tubing-Seal, Rubber
15	121-8393	2	Guard-Striker	37	120-9471	4	Bolt-Shoulder
16	125-9992	2	Adjuster-Stud	38	130-5726	2	Lanyard
17	106-0327	2	Nut-Hex				

● Not serviced separately

 
Left Hand Door Assembly For Cab Model Only

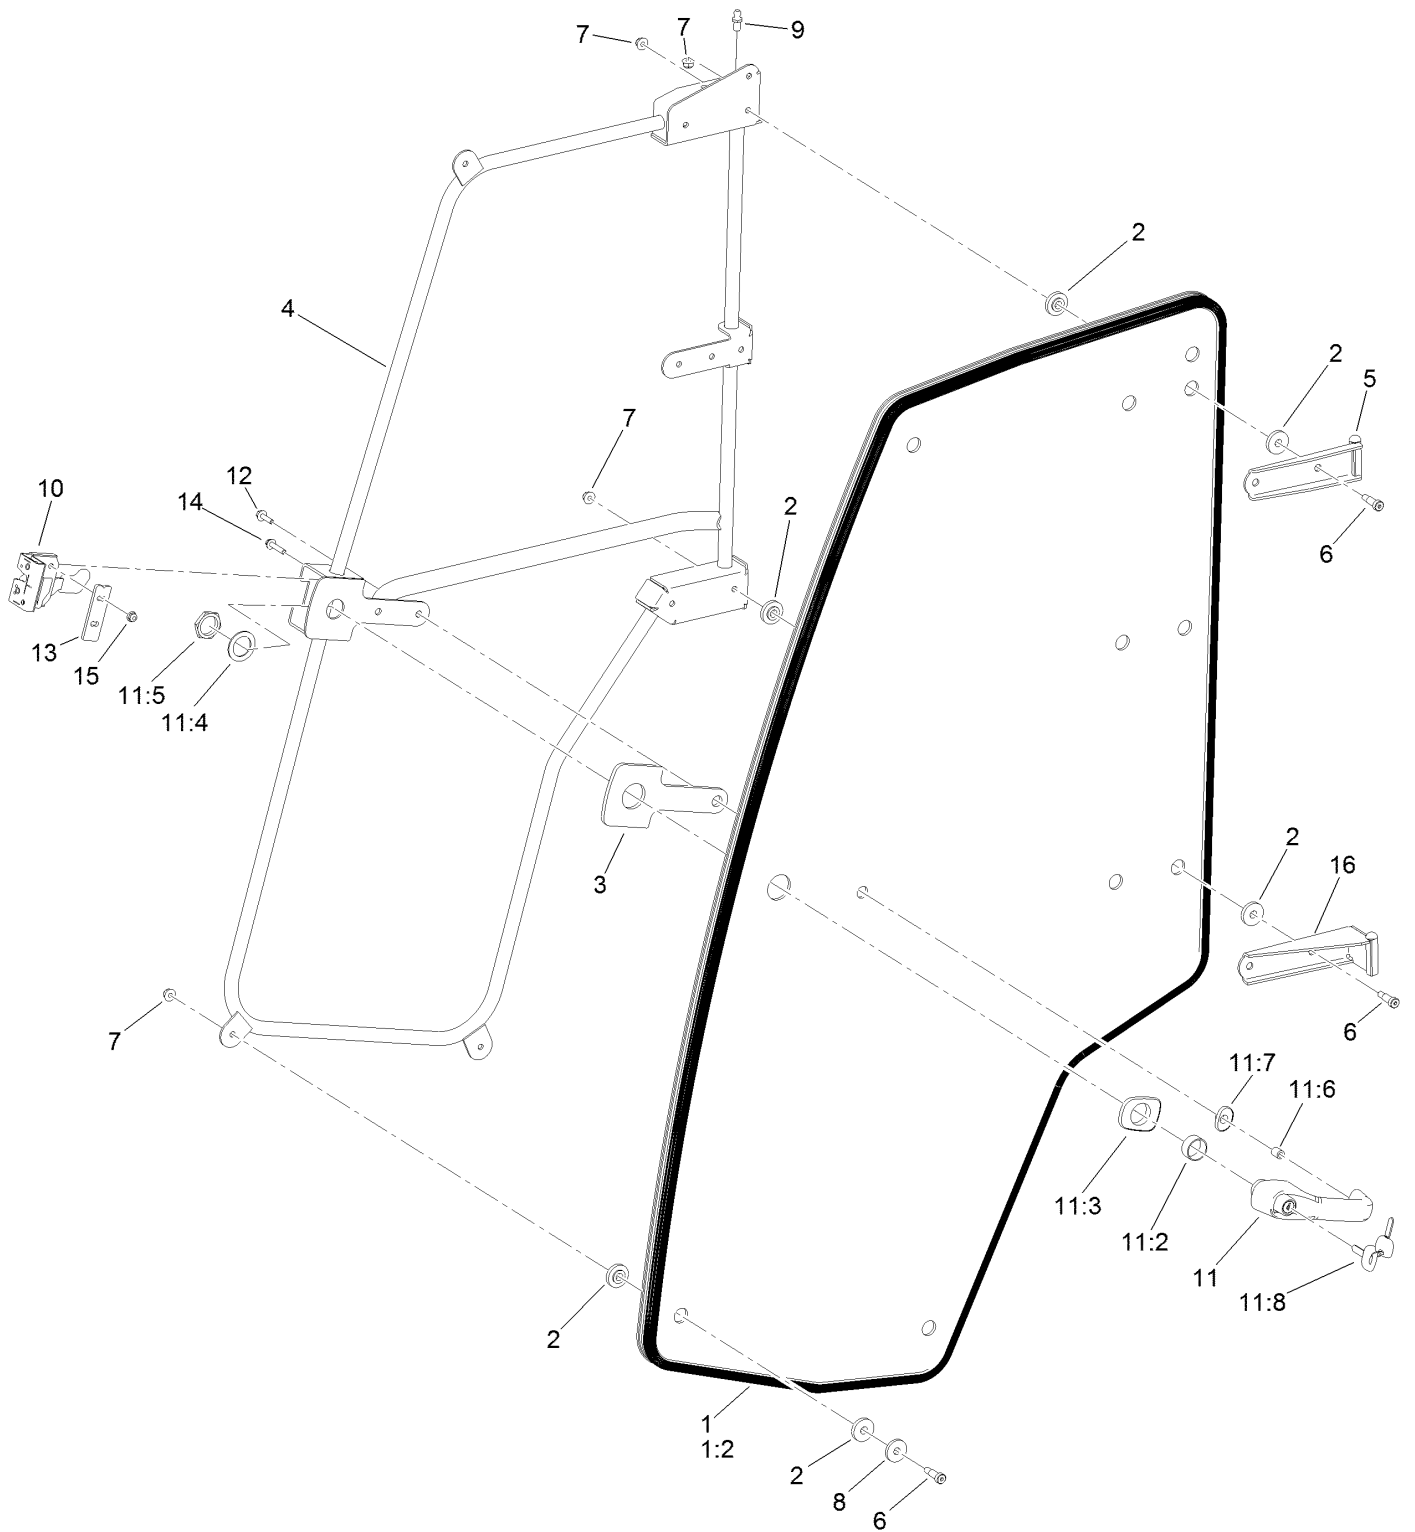

Left Hand Door Assembly For Cab Model Only (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-6185	1	LH Door ASM	11:2	121-8628	1	Cylinder-Mounting, Key
1:2	121-8317	1	Trim-Window, Door	11:3	121-8322	1	Grommet-Mounting, Large
2	125-9982	20	Bushing-Flange	11:4	121-8327	1	Washer
3	121-8331	1	Gasket-Handle	11:5	121-8328	1	Nut
4	125-7358-03	1	Frame-Door, LH	11:6	121-8627	1	Cylinder-Mounting, End
5	130-0525-03	1	Hinge-Door, Top (LH)	11:7	121-8323	1	Grommet-Mounting, Small
6	125-9520	10	Screw-Shoulder, HSH	11:8	125-9531	1	Key-Set
7	104-8300	11	Nut-HF, NI	12	33103-025	1	Screw-HHF
8	130-5815	6	Washer-Backup	13	121-8395	1	Plate-Support, Latch
9	98-3104	1	Stud-Ball	14	3234-21	2	Screw-HHF
10	121-8391	1	Latch-LH	15	104-7201	2	Nut-HF, NI
11	121-8630	1	Handle ASM	16	130-0526-03	1	Hinge-Door, Bottom (LH)

 
Right Hand Door Assembly For Cab Model Only

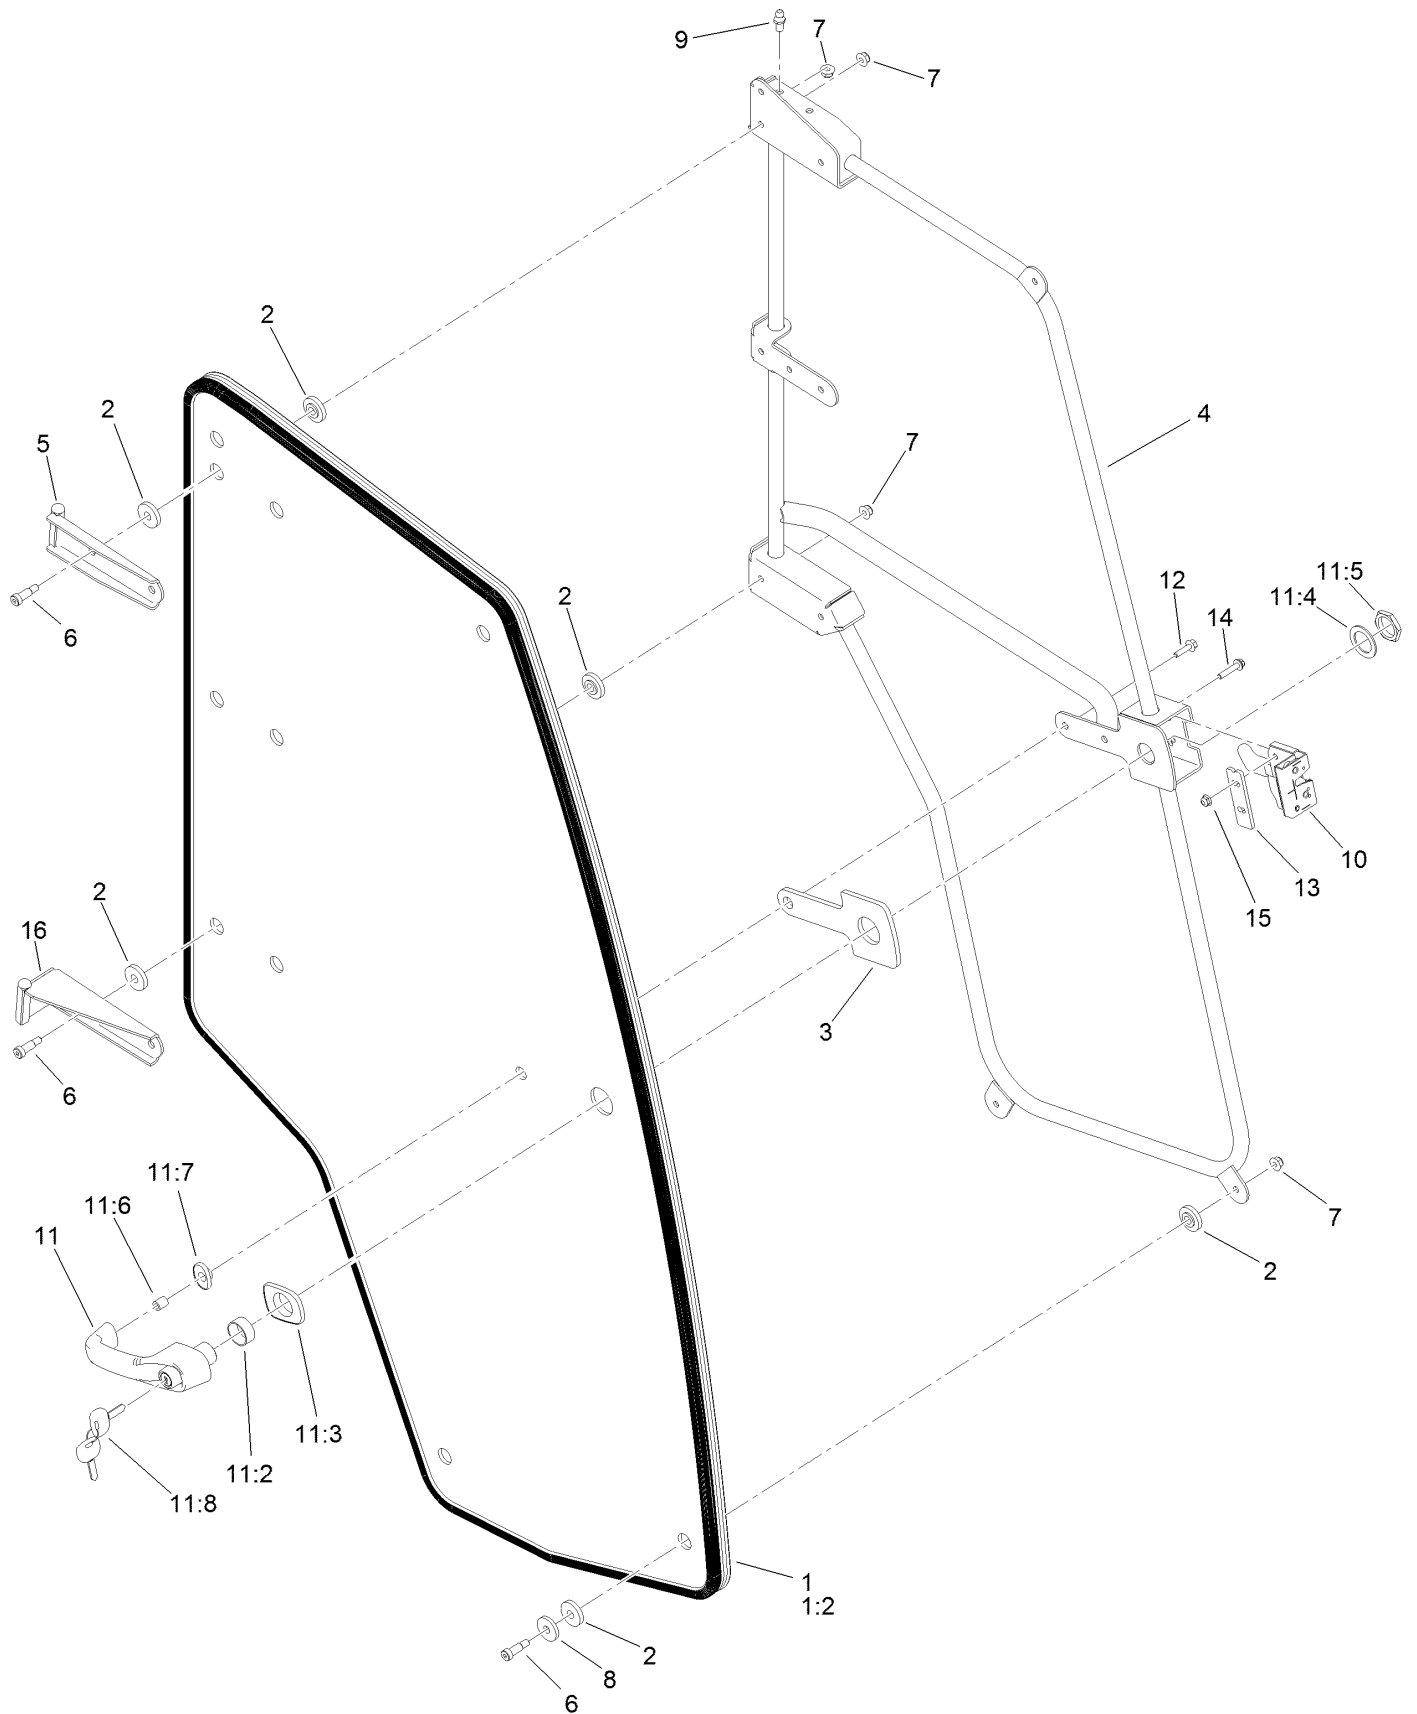

Right Hand Door Assembly For Cab Model Only (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-6184	1	RH Door ASM	11:2	121-8628	1	Cylinder-Mounting, Key
1:2	121-8317	1	Trim-Window, Door	11:3	121-8322	1	Grommet-Mounting, Large
2	125-9982	20	Bushing-Flange	11:4	121-8327	1	Washer
3	121-8331	1	Gasket-Handle	11:5	121-8328	1	Nut
4	125-7359-03	1	Frame-Door, RH	11:6	121-8627	1	Cylinder-Mounting, End
5	130-0529-03	1	Hinge-Door, Top (RH)	11:7	121-8323	1	Grommet-Mounting, Small
6	125-9520	10	Screw-Shoulder, HSH	11:8	125-9531	1	Key-Set
7	104-8300	11	Nut-HF, NI	12	33103-025	1	Screw-HHF
8	130-5815	6	Washer-Backup	13	121-8395	1	Plate-Support, Latch
9	98-3104	1	Stud-Ball	14	3234-21	2	Screw-HHF
10	121-8390	1	Latch-RH	15	104-7201	2	Nut-HF, NI
11	121-8630	1	Handle ASM	16	130-0530-03	1	Hinge-Door, Bottom (RH)

 
Left Side Hose Assembly For Cab Model Only

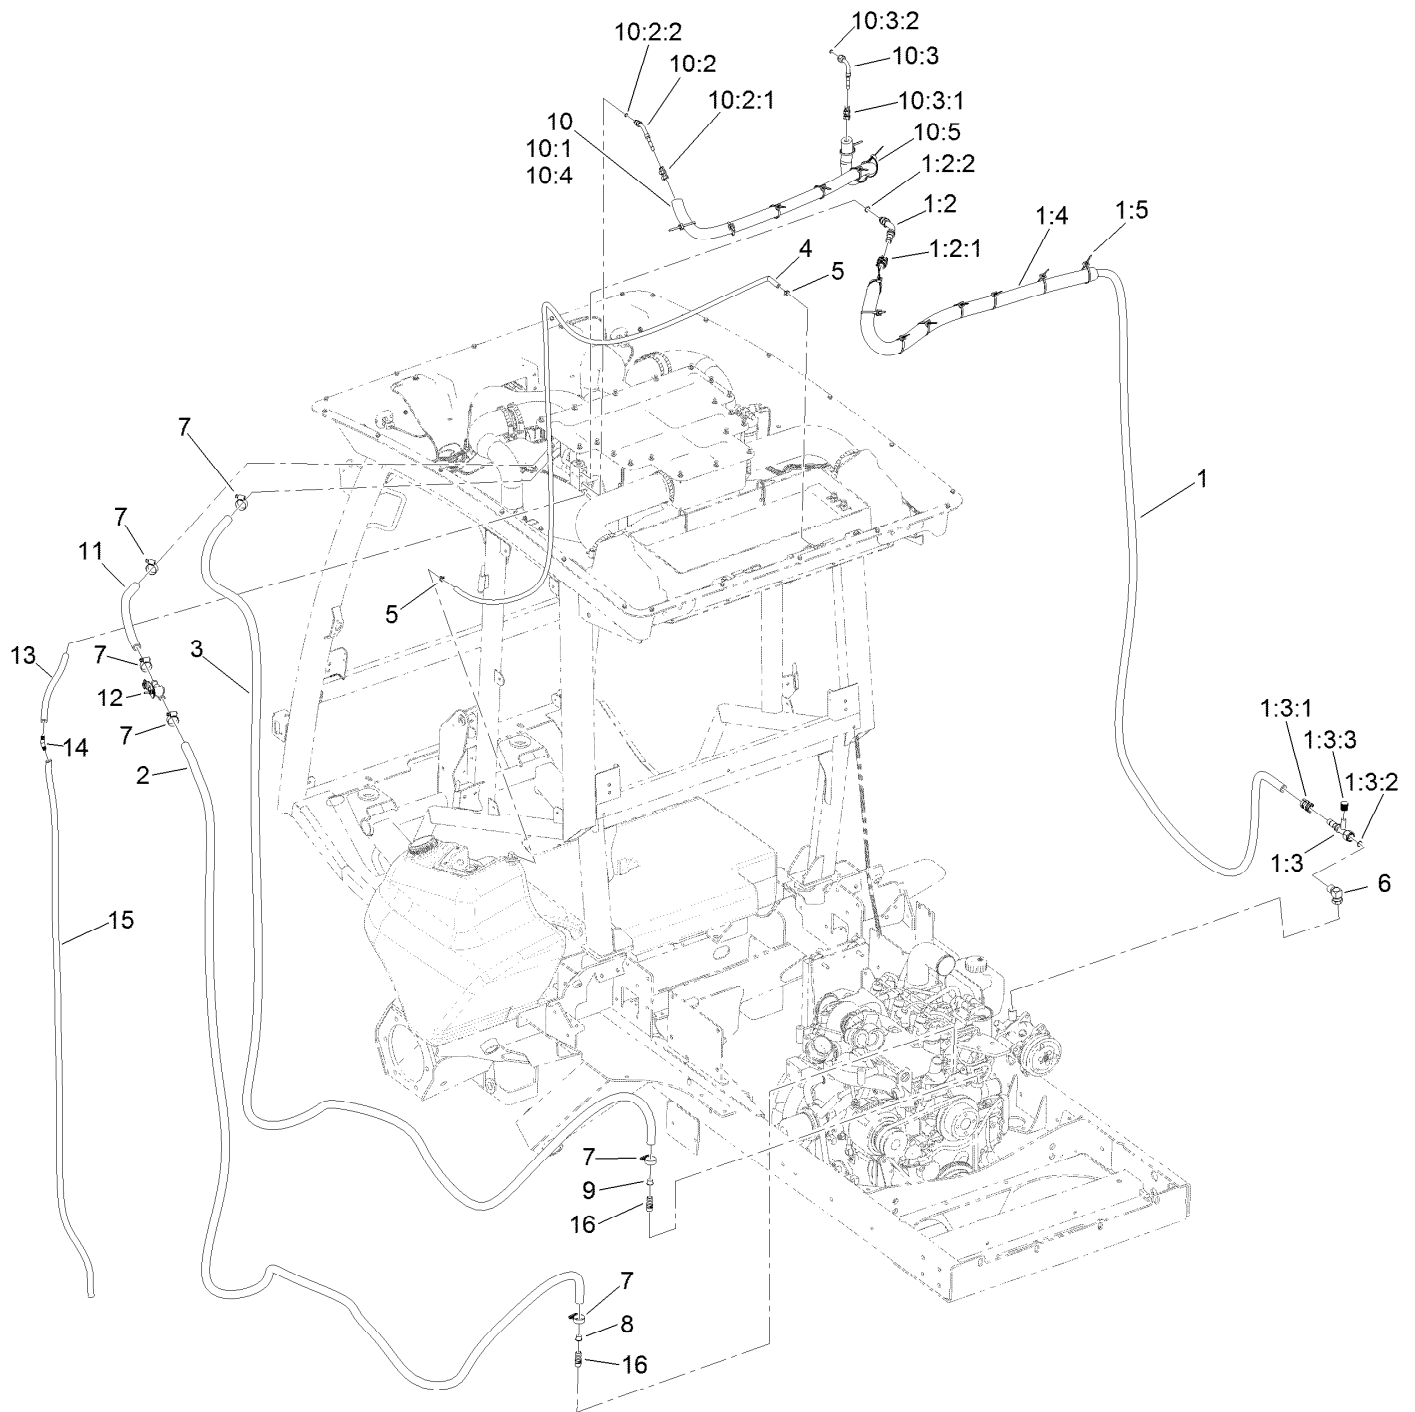

Left Side Hose Assembly For Cab Model Only (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-5620	1	A/C Hose ASM	9	130-0582	1	Plug-Tapered (Green)
1:2	130-5754	1	Fitting-Male, 45 DEG	10	125-9702	1	Hose ASM
1:2:1	130-5775	1	Fitting Kit	10:1	130-0417	1	Hose
1:2:2	117-2780	1	O-Ring	10:2	130-5753	1	Fitting-45 DEG
1:3	130-5755	1	Fitting-Female, Straight	10:2:1	130-5772	1	Fitting Kit
1:3:1	130-5775	1	Fitting Kit	10:2:2	117-2778	1	O-Ring
1:3:2	117-2780	1	O-Ring	10:3	130-5751	1	Fitting-Female, 90 DEG
1:3:3	117-2784	1	Cap-Side, Low	10:3:1	130-5772	1	Fitting Kit
1:4	130-5959	1	Cover-Foam	10:3:2	117-2778	1	O-Ring
1:5	3290-378	8	Tie-Cable	10:4	130-5958	1	Cover-Foam
2	130-5622	1	Hose-Heater	10:5	3290-378	8	Tie-Cable
3	130-5946	1	Hose-Heater	11	125-9706	1	Hose-Heater
4	130-5813	1	Hose-Fuel	12	120-4947	1	Valve-Heater
5	2412-98	2	Clamp-Hose	13	125-9865	1	Hose-Drain
6	119-0128	1	Fitting-Elbow, 90 DEG	14	130-0578	1	Fitting-Barb, 90 DEG
7	2412-129	6	Clamp-Hose	15	125-9866	1	Hose-Drain
8	130-0581	1	Plug-Tapered (Red)	16	117-9410	2	Fitting-Straight

 
Right Side Hose Assembly For Cab Model Only

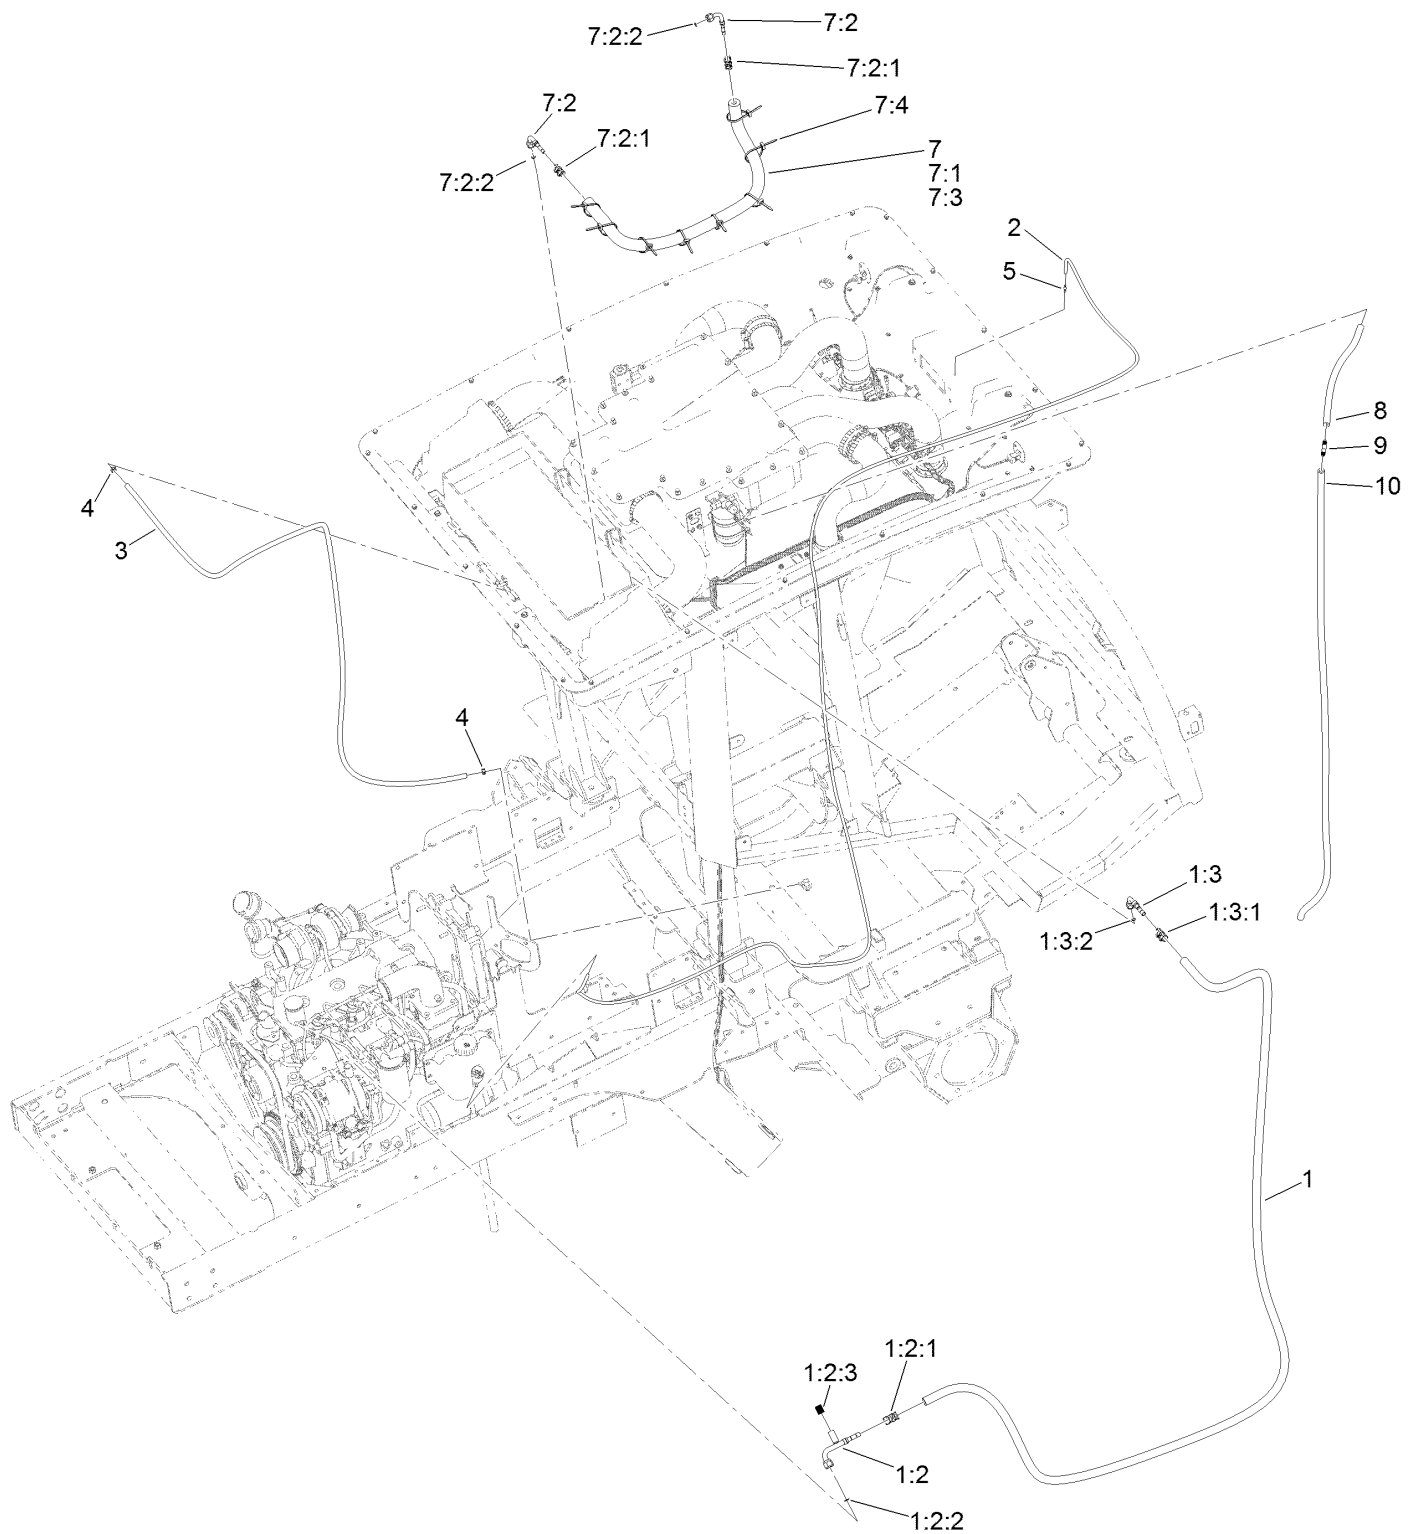

Right Side Hose Assembly For Cab Model Only (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-5621	1	A/C Hose ASM	5	127-9905	1	Fitting-Hose, Barb
1:2	130-5758	1	Fitting-Female, 90 DEG	7	125-9703	1	Hose ASM
1:2:1	130-5773	1	Fitting Kit	7:1	130-0417	1	Hose
1:2:2	117-2779	1	O-Ring	7:2	130-5751	2	Fitting-Female, 90 DEG
1:2:3	117-2783	1	Cap-Side, High	7:2:1	130-5772	1	Fitting Kit
1:3	130-5752	1	Fitting-Female, 90 DEG	7:2:2	117-2778	1	O-Ring
1:3:1	130-5773	1	Fitting Kit	7:3	130-5958	1	Cover-Foam
1:3:2	117-2778	1	O-Ring	7:4	3290-378	8	Tie-Cable
2	130-5624	1	Hose-Fluid, Wiper	8	125-9865	1	Hose-Drain
3	130-5813	1	Hose-Fuel	9	130-0578	1	Fitting-Barb, 90 DEG
4	2412-98	2	Clamp-Hose	10	125-9866	1	Hose-Drain

 
Mixing Box and Vent Hose Assembly For Cab Model Only

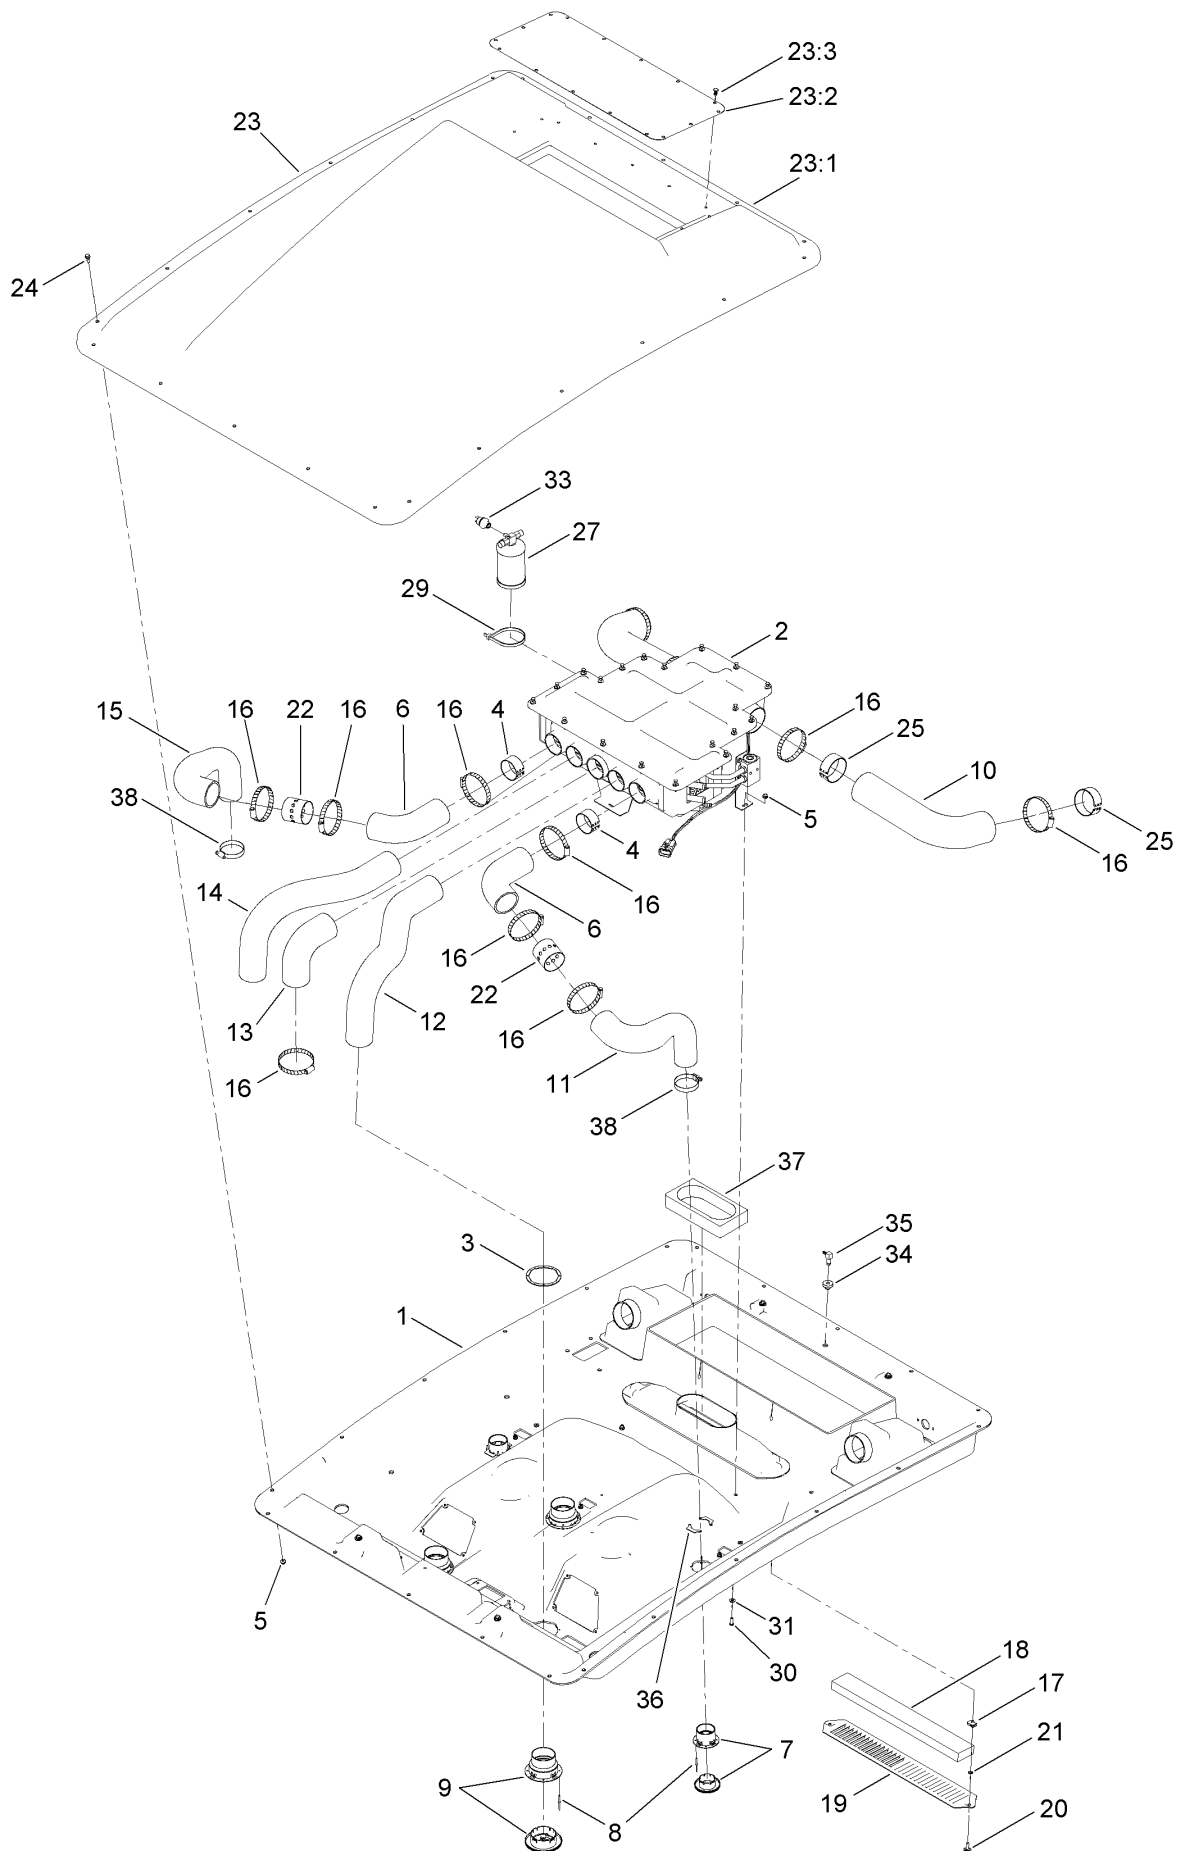

Mixing Box and Vent Hose Assembly For Cab Model Only (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-8470	1	Headliner	20	125-7438	2	Knob-Screw, Thumb
2	121-8495	1	Box-Mixing, Heater A/C	21	106-8737	2	Nut-Retainer
3	130-0558	3	Backplate-Rivet	22	130-5927	2	Adapter-Bleed
4	130-5938	2	Tube-Support	23	130-0459	1	Roof ASM
5	104-7201	24	Nut-HF, NI	23:1	125-9607	1	Roof
6	130-5860	2	Hose-Vent	23:2	121-8472-03	1	Screen-Roof
7	130-0455	2	Louver-Round, Snap-In	23:3	114-4899	16	Rivet-Push
8	125-7503	20	Rivet-Pop	24	119-4161	22	Bolt-Shoulder
9	130-0465	3	Louver-Round, Snap-In (4 Inch)	25	130-5939	4	Tube-Support
10	121-8473	2	Hose-Intake, Fresh Air	27	119-4502	1	Drier-Receiver
11	130-5861	1	Hose-Vent, Outer (LH)	29	3334-945	2	Tie-Cable
12	121-8477	1	Hose-Vent, Defrost (LH)	30	3274-69	2	Screw-HSBH
13	130-0437	1	Hose-Vent, Center	31	3256-1	2	Washer-Flat
14	121-8478	1	Hose-Vent, Defrost (RH)	33	119-4501	1	Switch-Function, Dual
15	130-5862	1	Hose-Vent, Outer (RH)	34	46-6560	1	Bushing
16	2412-110	11	Clamp-Band/Screw	35	104-5228	1	Fitting-Elbow, 90 DEG
17	107069	2	Clip	36	130-0445	4	Backplate-Rivet
18	125-9532	1	Filter-Cab, Inside	37	130-0444	1	Foam-Inlet, Airbox
19	125-9604-03	1	Plate-Cover, Recirculation	38	2412-130	2	Clamp-Hose

 Headliner Wire Harness and Control Assembly For Cab Model Only

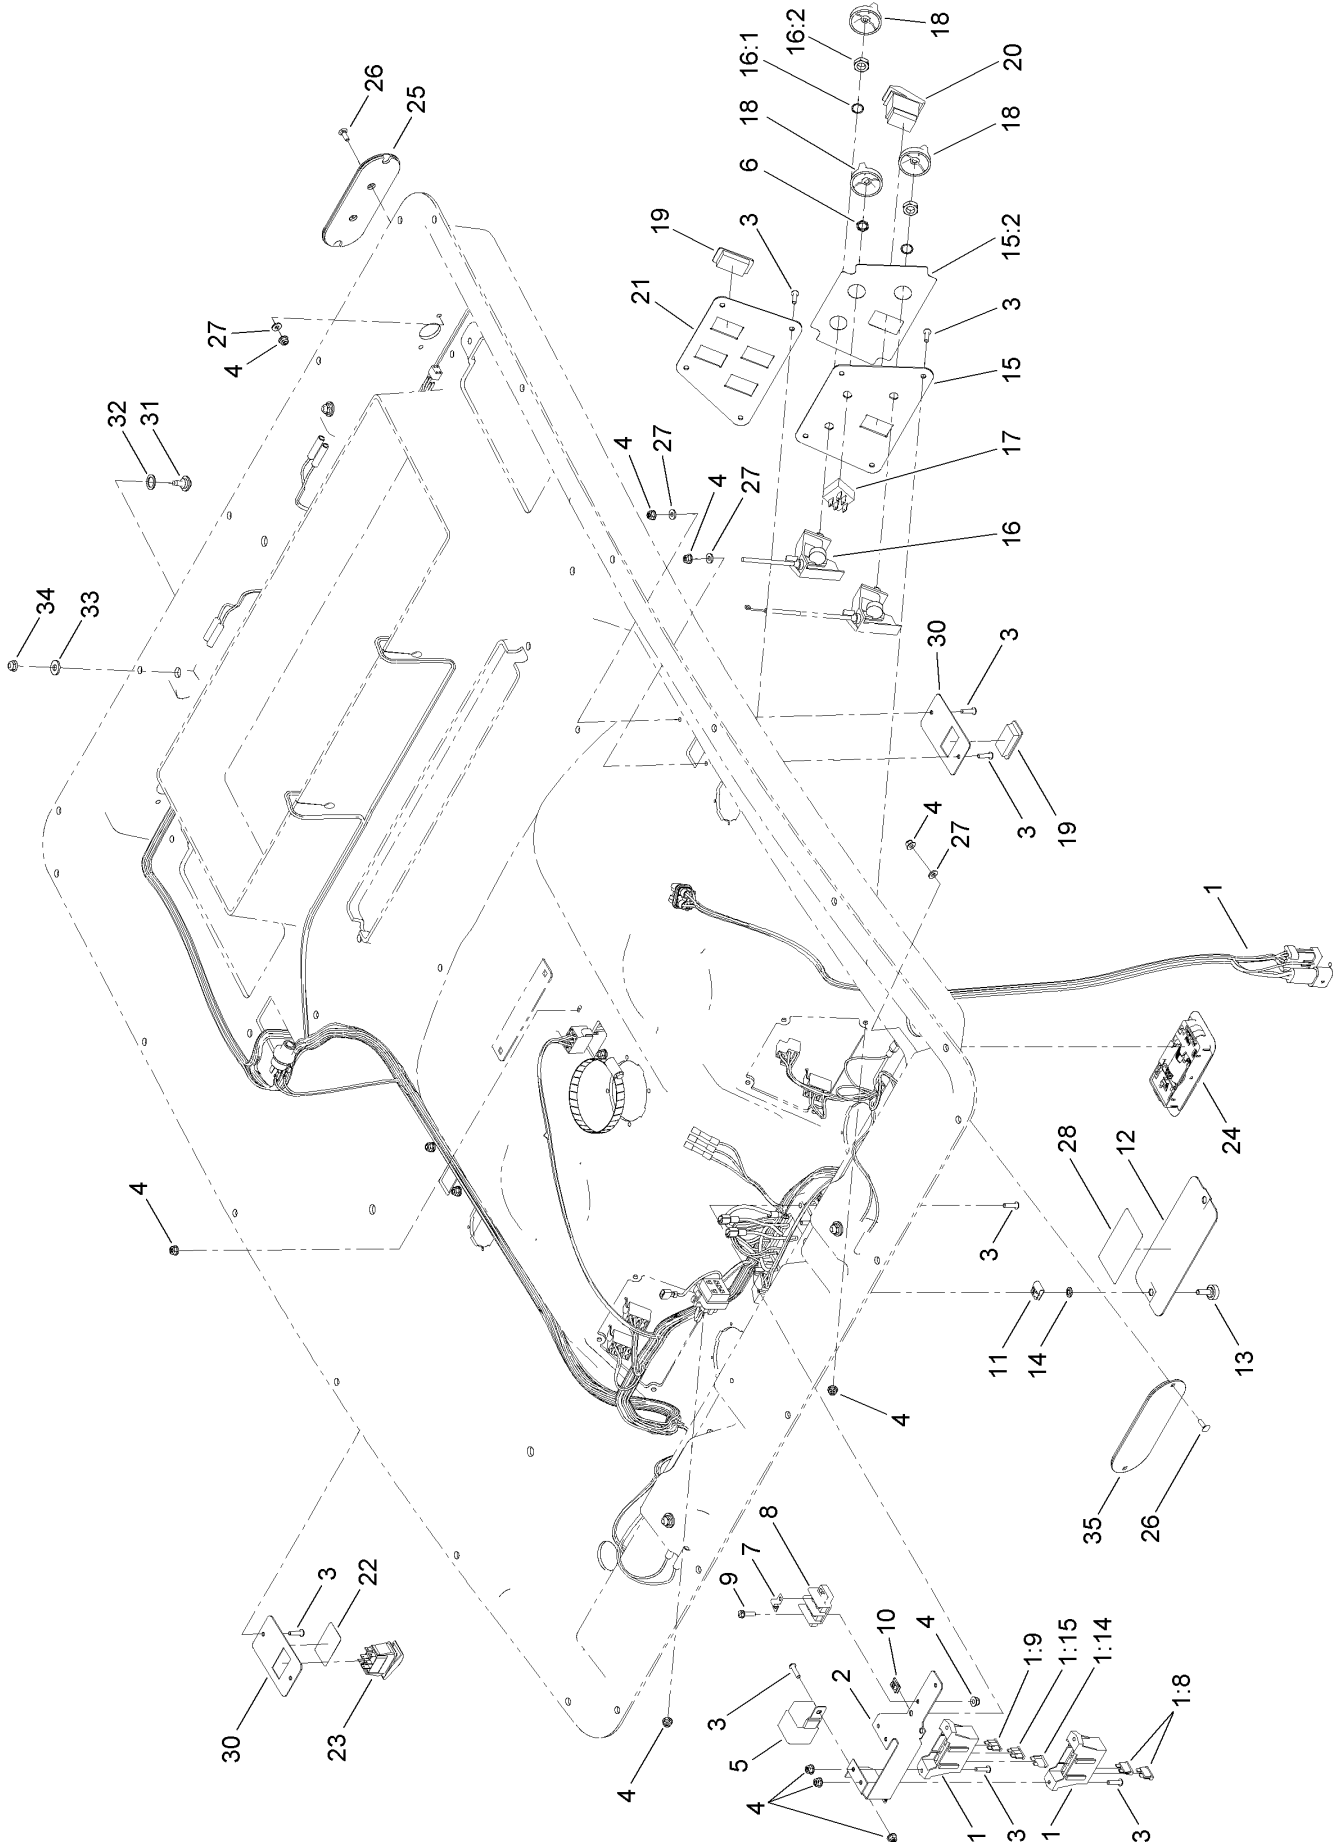


Headliner Wire Harness and Control Assembly For Cab Model Only (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-4387	1	Harness-Wire, Headliner	16:1	3254-20	1	Washer-Lock, Int
1:8	109355	2	Fuse-Blade, 15 Amp	16:2	3220-4	1	Nut-Jam
1:9	109103	1	Fuse-Blade, 30 Amp	17	122-0150	1	Switch, Rotary
1:14	109101	1	Fuse-Blade, 20 Amp	18	125-9510	3	Knob-Control
1:15	109102	1	Fuse-Blade, 25 Amp	19	99-7420	6	Plug-Hole
2	125-9606-03	1	Bracket-Fuse Block	20	95-8999	1	Switch-Rocker, On-None-On
3	104-2408	23	Screw-HSBH	21	125-9691-03	1	Panel-Switch, Lights
4	120-4578	29	Nut-HF	22	125-9688	1	Decal-Washer
5	99-7430	1	Relay-Mini	23	119-8355	1	Switch-Rocker
6	130-0588	1	Nut-Switch	24	125-7437	1	Light-Dome
7	42863	1	Strip-Jumper	25	130-5867	2	Cover-Light, Rear
8	42862	1	Block-Terminal, Ground	26	3229-34	8	Screw-CARR
9	32105-13	2	Screw-HWH	27	3256-14	13	Washer-Flat
10	107-1013	4	Nut-Speed	28	130-0458	1	Decal-Panel, Fuse
11	609900	2	Nut-Speed	30	130-0436-03	3	Panel-Switch
12	125-9603-03	1	Plate-Cover, Fuse	31	92-9698	4	Screw-Shoulder
13	125-7438	2	Knob-Screw, Thumb	32	94-8196	4	Washer-Nylon
14	106-8737	2	Nut-Retainer	33	3256-2	4	Washer-Flat
15	121-8481	1	Panel-Air/Heat	34	104-7201	4	Nut-HF, NI
15:2	121-8378	1	Decal, Air/Heat	35	130-5868	2	Cover-Light, Front
16	125-9677	1	Control-Rotary, Linear				

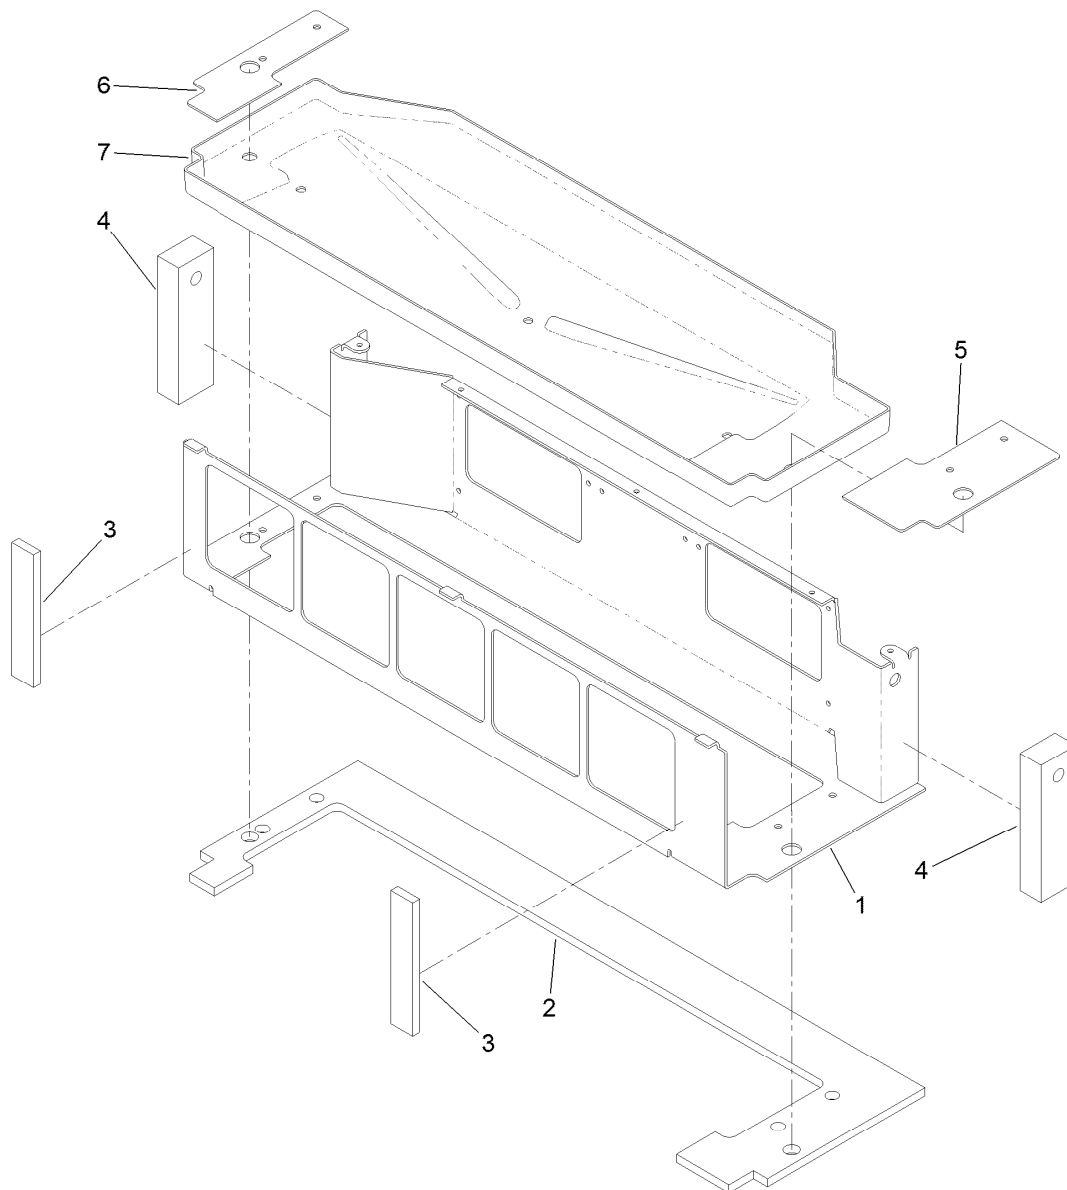 


Mixing Box Mounting Bracket and Water Tray Assembly For Cab Model Only

Ref.	Part Number	Qty.	Description
1	130-5655-03	1	Bracket-Mount
2	130-5659	1	Seal-Foam
3	130-5808	2	Seal-Foam, Front
4	130-0602	2	Seal-End
5	130-5653	1	Gasket-Mount, LH Bracket
6	130-5654	1	Gasket-Mount, RH Bracket
7	130-5660	1	Tray-Water

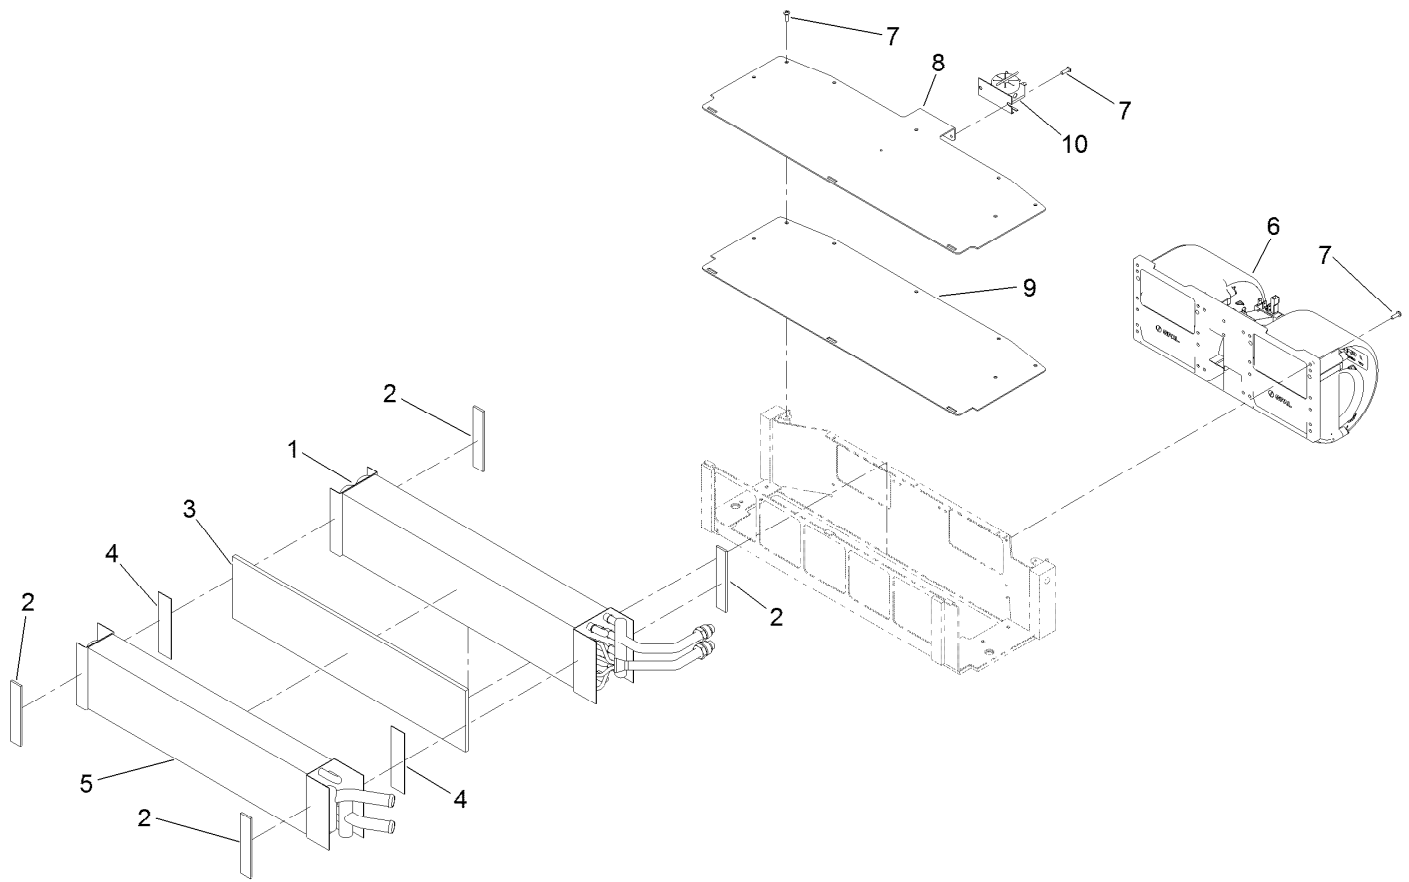 


Blower Fan and Evaporator Core Assembly For Cab Model Only

Ref.	Part Number	Qty.	Description
1	130-5392	1	Core-Evaporator
2	130-5658	4	Gasket-Coil
3	130-5807	1	Foam
4	130-5806	2	Tape, Double-Sided
5	127-9915	1	Core-Heater
6	121-8451	1	Fan-Blower
7	363-8245	13	Screw-TAP
8	130-5656-03	1	Cover, Bracket-Mount
9	130-5652	1	Gasket-Mount, Cover Bracket
10	121-8385	1	Thermostat-Switch, Freeze

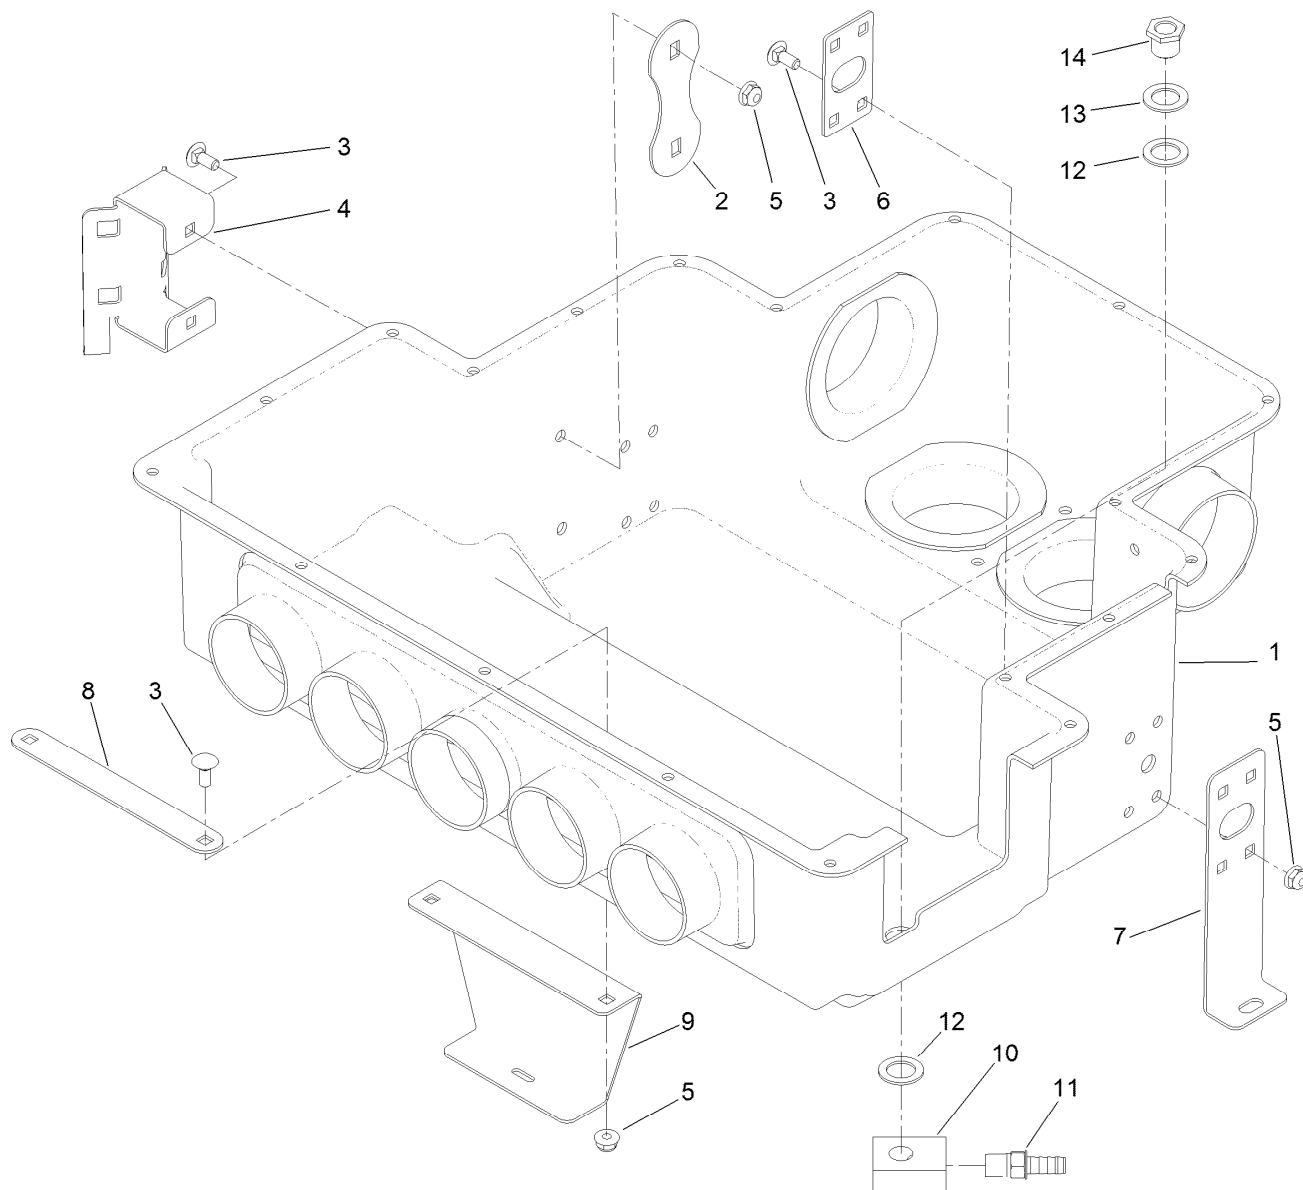 

Heat / Air Conditioner Housing Assembly For Cab Model Only


Ref.	Part Number	Qty.	Description
1	130-5830	1	Housing-Heat/AC
2	121-8491	1	Plate-Support
3	3229-11	12	Screw-CARR
4	121-8490	1	Bracket-Mount, Drier
5	104-7201	12	Nut-HF, NI
6	130-5834	2	Bracket-Support
7	130-5821	2	Bracket-Airbox, Side
8	125-7504	1	Plate-Backer, Center
9	130-0554	1	Bracket-Airbox, Center
10	130-5601	2	Drain-Lower
11	108-0342	2	Fitting-Straight
12	121-6840	4	Washer-Rubber
13	107-3041	2	Washer-Flat
14	130-0293	2	Drain-Upper

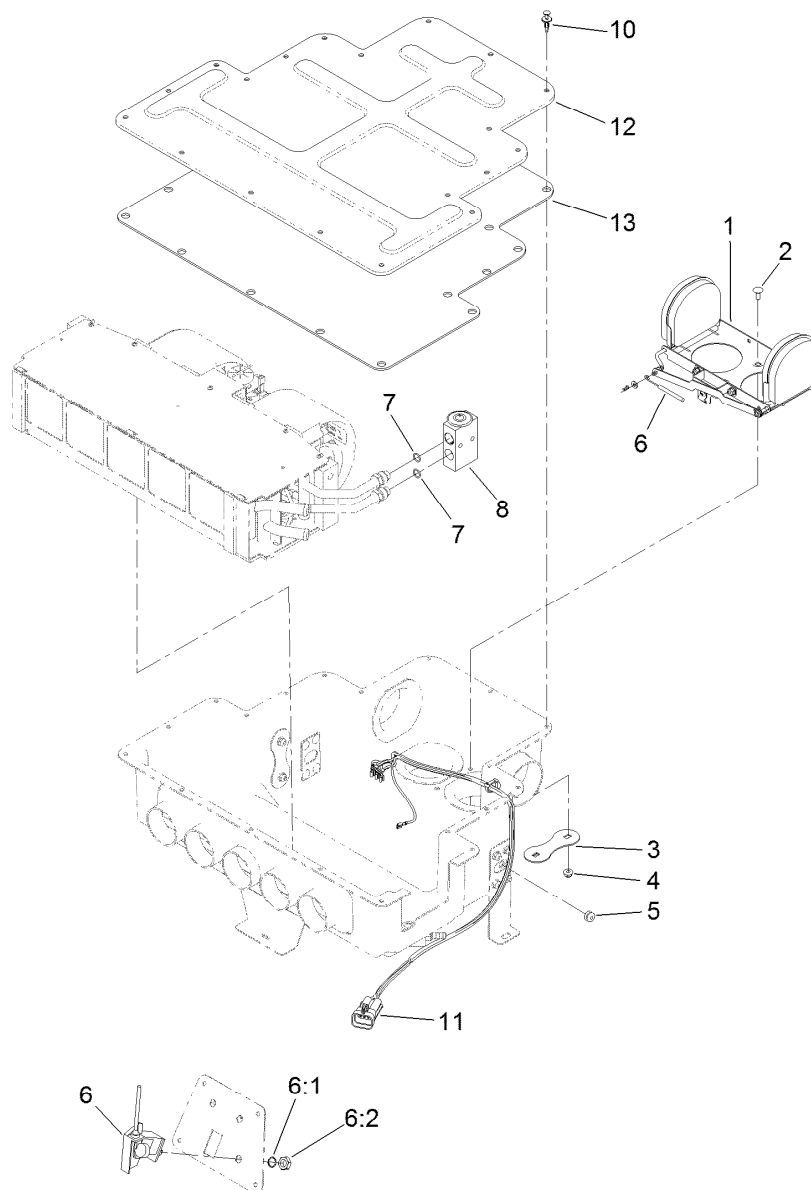 

Air Diverter and Expansion Valve Assembly For Cab Model Only

Ref.	Part Number	Qty.	Description
1	121-8369	1	Air Diverter ASM
2	3229-11	2	Screw-CARR
3	121-8491	1	Plate-Support
4	104-7201	2	Nut-HF, NI
5	125-7528	1	Grommet-Cable
6	125-9678	1	Control-Rotary, Linear
6:1	3254-20	1	Washer-Lock, Int
6:2	3220-4	1	Nut-Jam
7	125-9524	2	O-Ring
8	121-8384	1	Valve-Expansion
10	125-9622	19	Rivet-Blind
11	122-0153	1	Harness-Wire, Heat/AC Blower
12	121-8449	1	Housing-Ventilation, Upper
13	130-5614	1	Insulation-Cover

 
Air Diverter Assembly No. 121-8369 For Cab Model Only

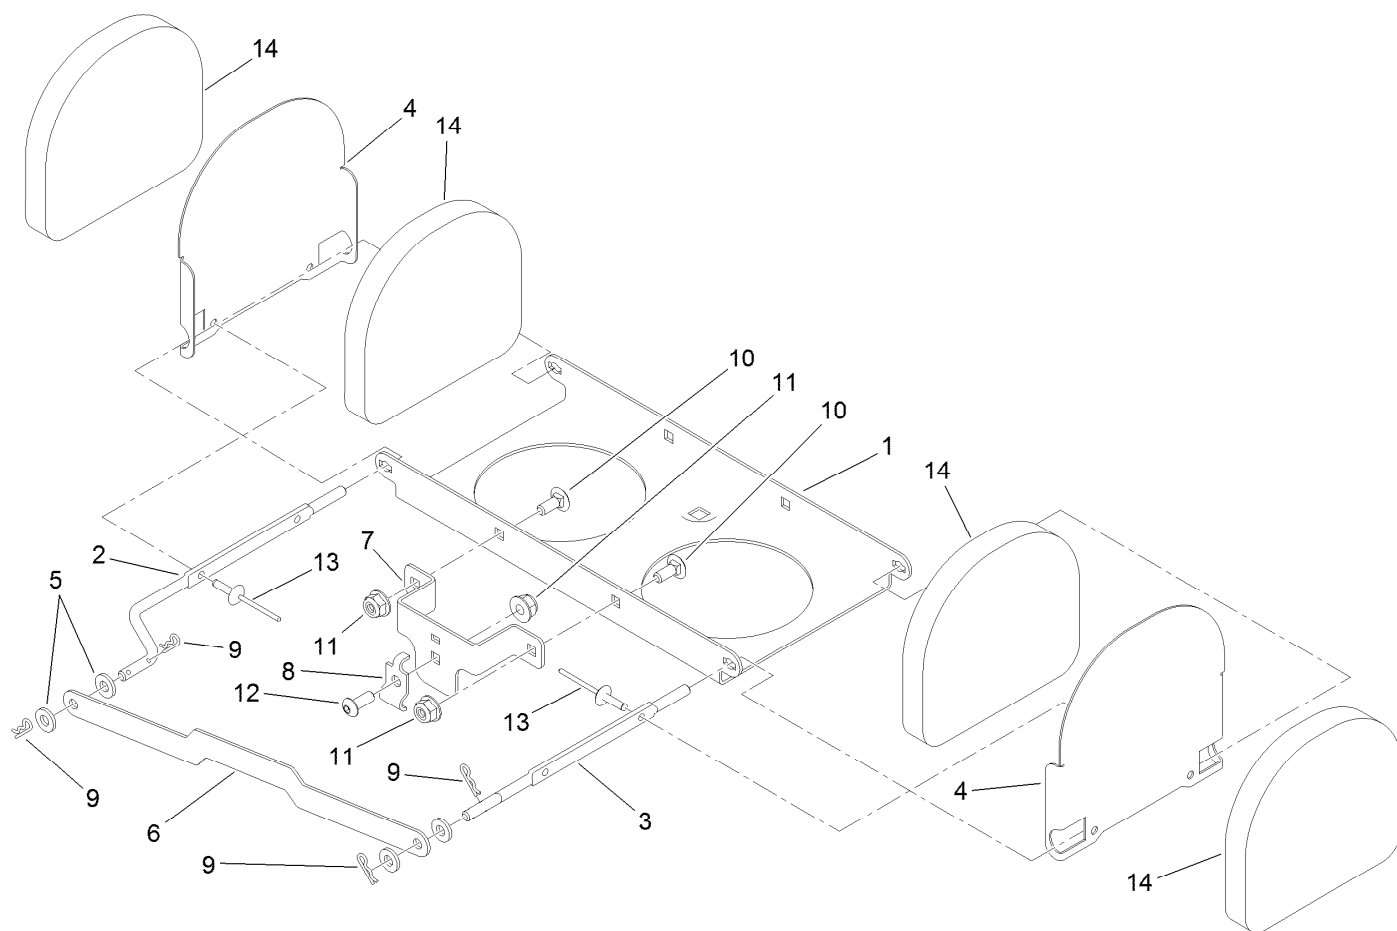

Air Diverter Assembly No. 121-8369


For Cab Model Only (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-9697	1	Base-Mount	8	121-8256	1	Clamp-Conduit
2	121-8381	1	Shaft-Baffle, RH	9	108-2992	4	Pin-Hair
3	121-8382	1	Shaft-Baffle, LH	10	1-807513	2	Bolt-CARR
4	125-9698	2	Baffle-Air	11	120-4578	3	Nut-HF
5	3256-51	4	Washer-Flat	12	115-9830	1	Screw-HSBH
6	125-9696	1	Link-Baffle	13	3290-271	4	Rivet-Pop
7	121-8374	1	Mount-Cable	14	125-9699	4	Damper-Foam

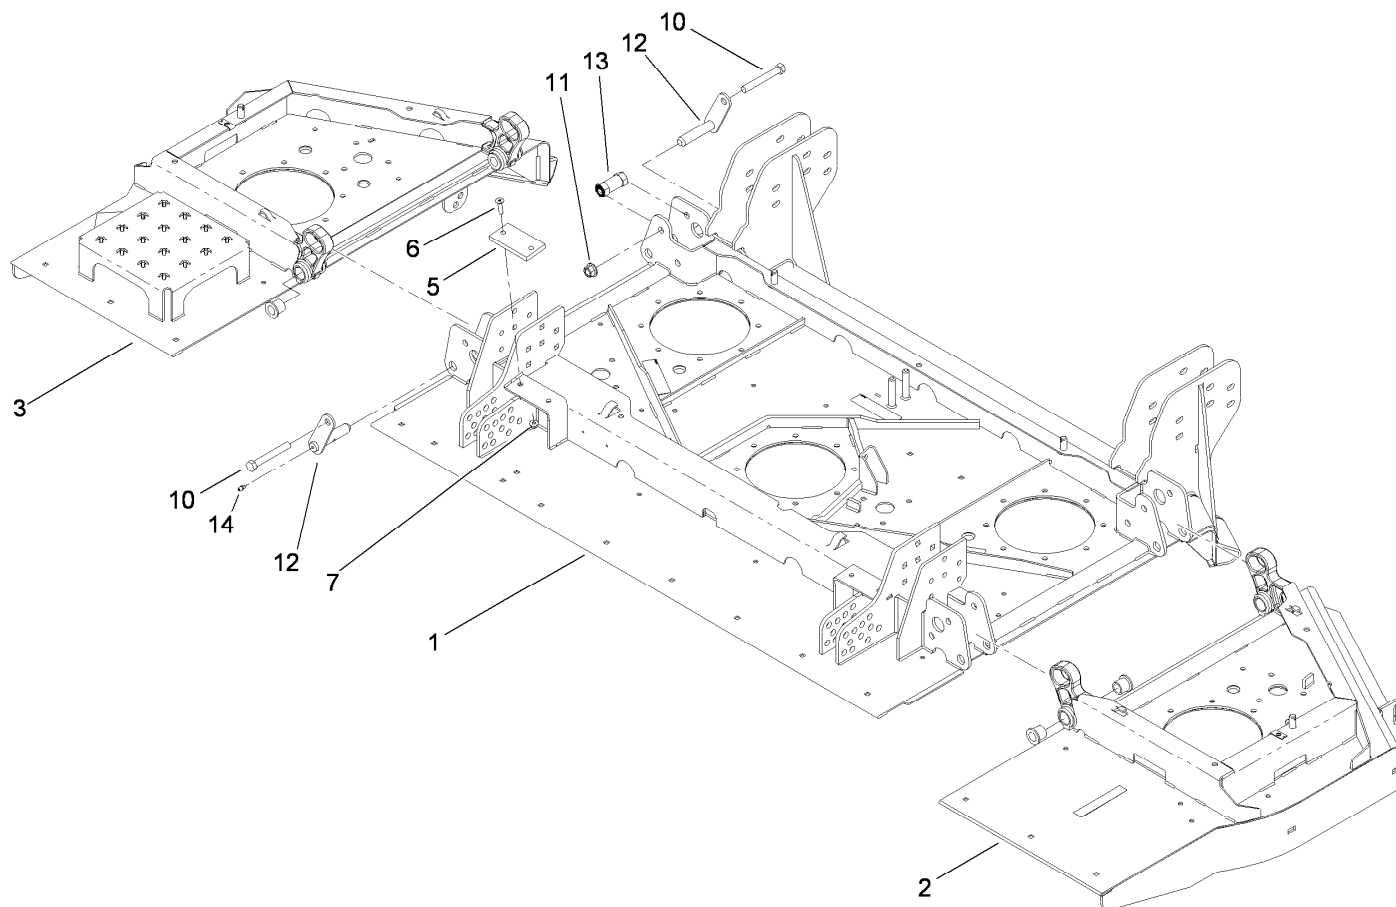 


Center Deck and Winglet Assembly

Ref.	Part Number	Qty.	Description
1	110-5911	1	Center Front Deck And Decal ASM
2	110-5914	1	Right Front Deck And Decal ASM
3	110-5917	1	Left Front Deck And Decal ASM
5	69-9300	2	Pad-Bumper
6	32108-103	4	Screw-FH
7	104-8300	4	Nut-HF, NI
10	325-35	4	Screw-HH
11	99-5107	4	Nut-Lock
12	114-0714	4	Hinge Pin ASM
13	115-3367	4	Eccentric
14	302-5	4	Fitting-Grease

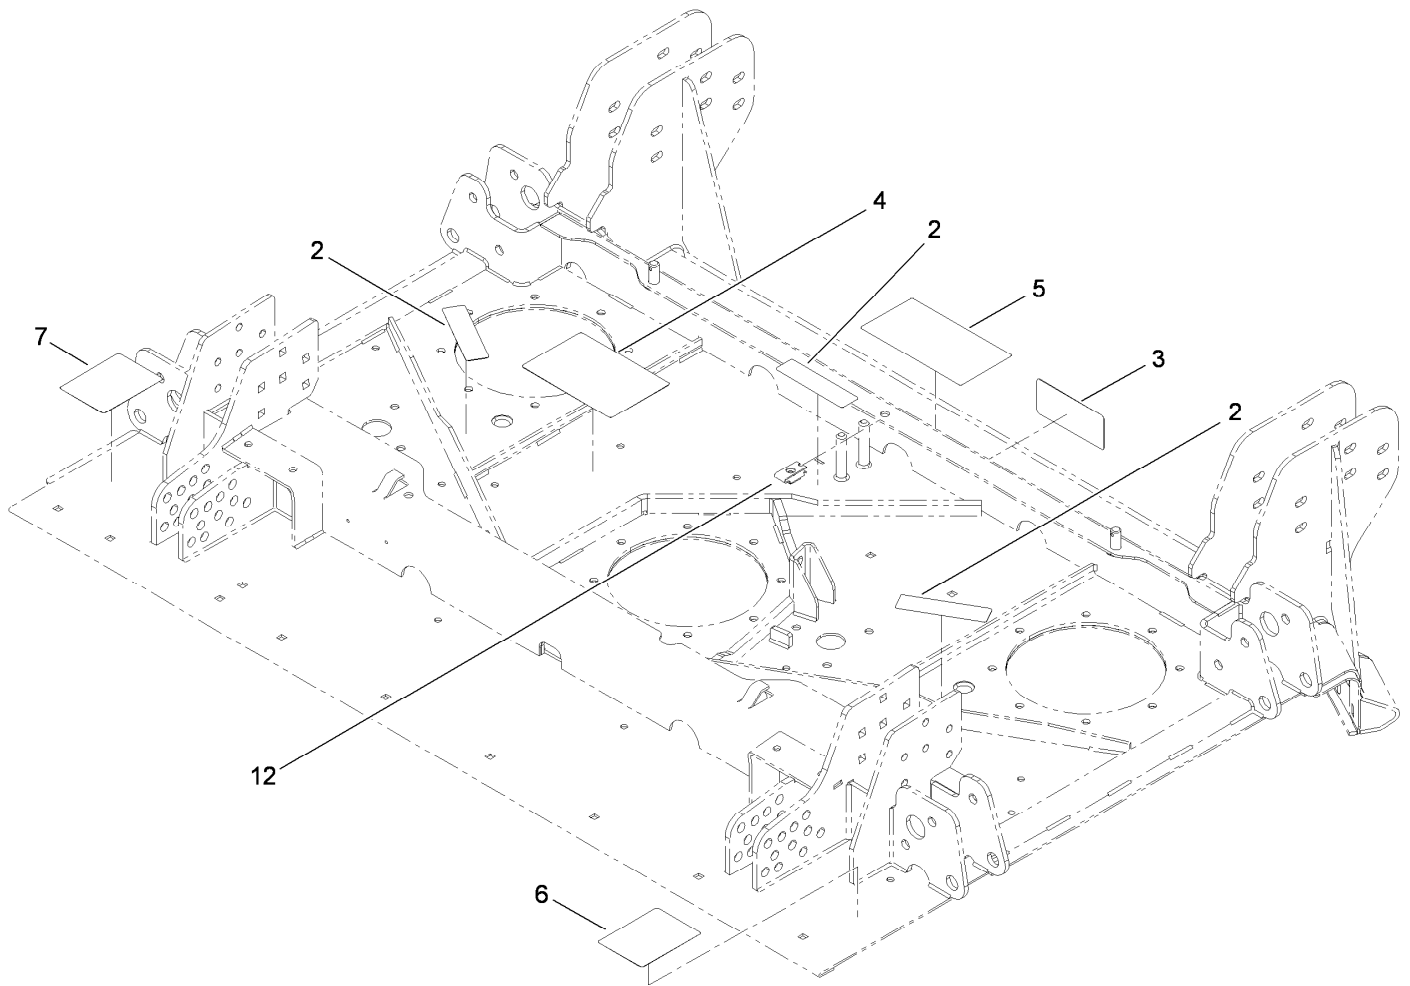 


Center Front Deck and Decal Assembly No. 110-5911

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	117-4979	3	Decal-Warning
3	93-7818	1	Decal-Torque, Blade Bolt
4	114-0922	1	Decal-Belt Routing
5	114-0975	1	Decal-HOC
6	114-0864	1	Decal-Rear HOC, RH
7	114-0865	1	Decal-Rear HOC, LH
12	110-3510	1	Nut-Retainer

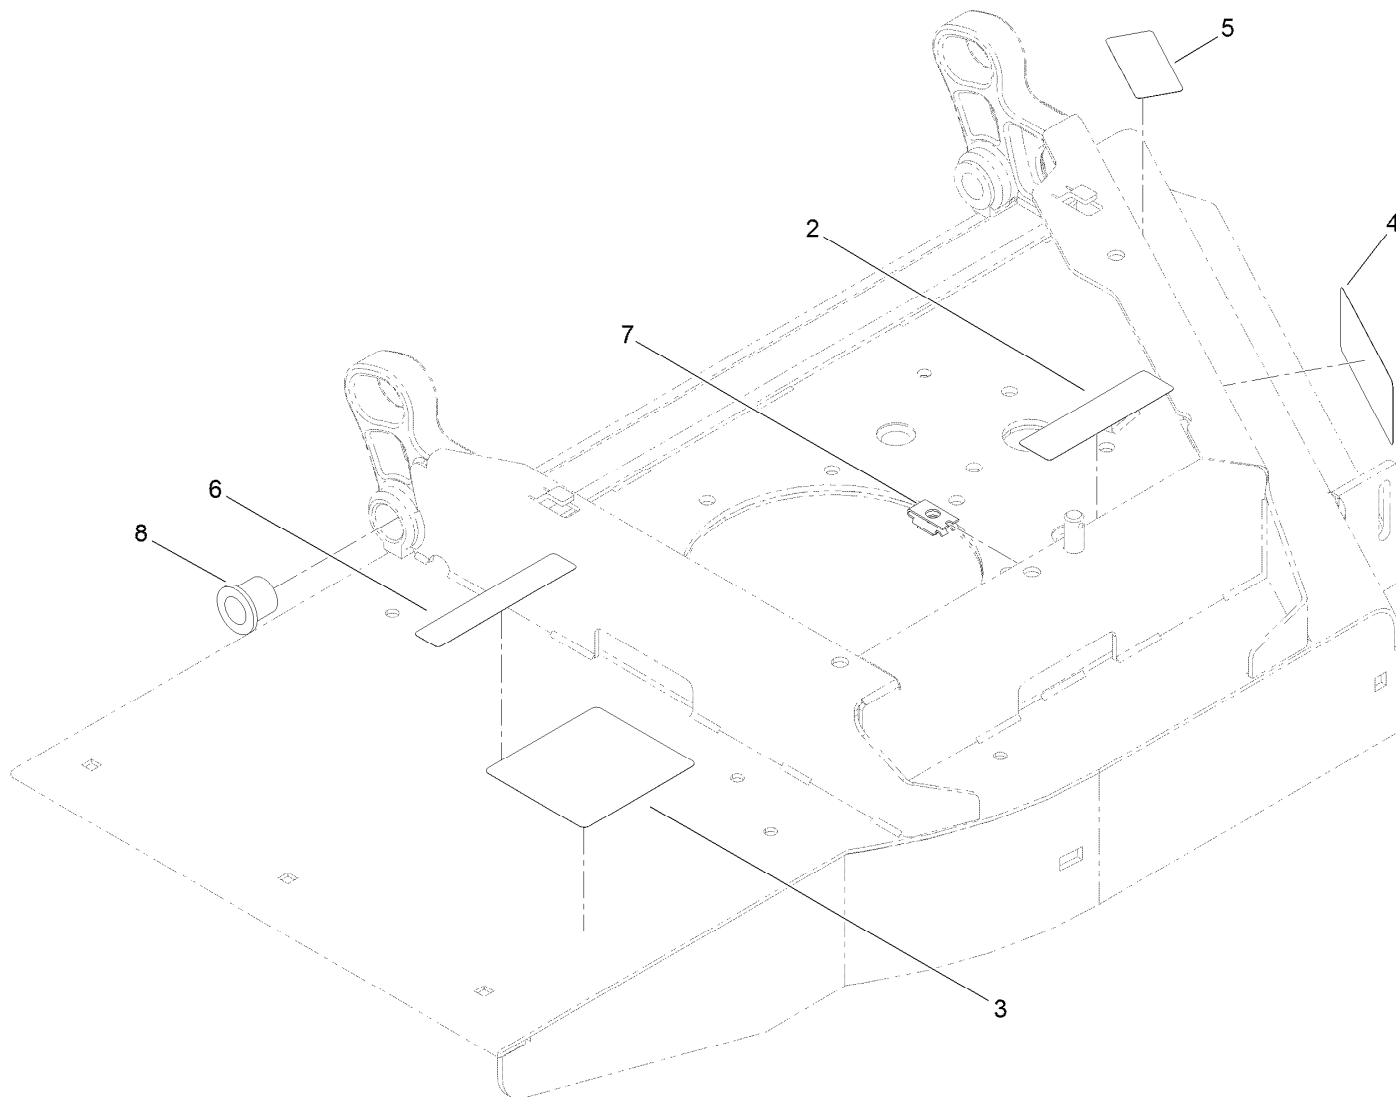 


Right Front Deck and Decal Assembly No. 110-5914

Ref.	Part Number	Qty.	Description
2	117-4979	1	Decal-Warning
3	120-6604	1	Decal-Danger
4	93-7818	1	Decal-Torque, Blade Bolt
5	93-6674	1	Decal-Warning
6	93-6687	1	Decal-No Step
7	110-3510	1	Nut-Retainer
8	92-3162	4	Bushing

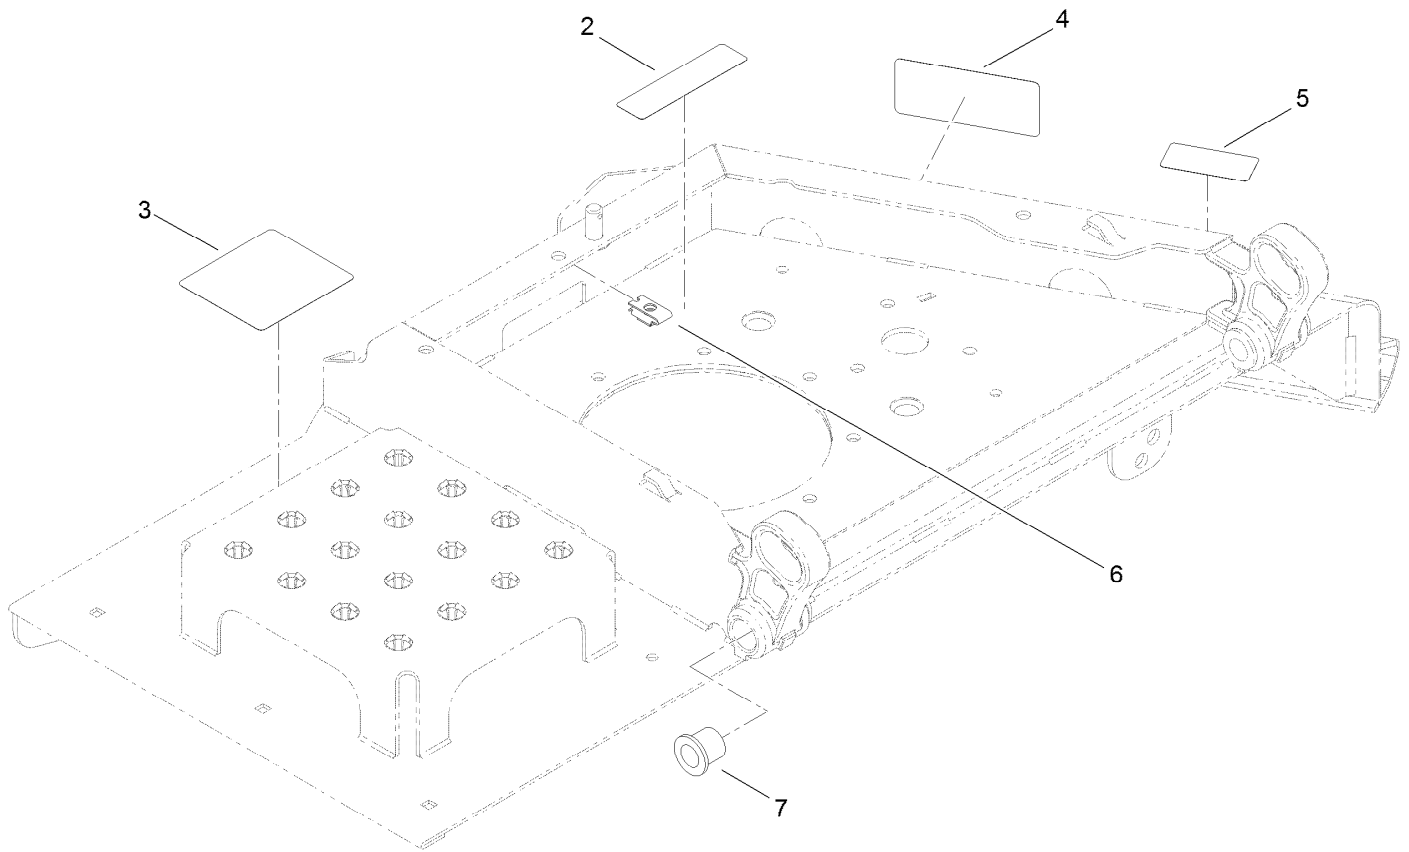 

Left Front Deck and Decal Assembly No. 110-5917


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	117-4979	1	Decal-Warning
3	120-6604	1	Decal-Danger
4	93-7818	1	Decal-Torque, Blade Bolt
5	93-6674	1	Decal-Warning
6	110-3510	1	Nut-Retainer
7	92-3162	4	Bushing

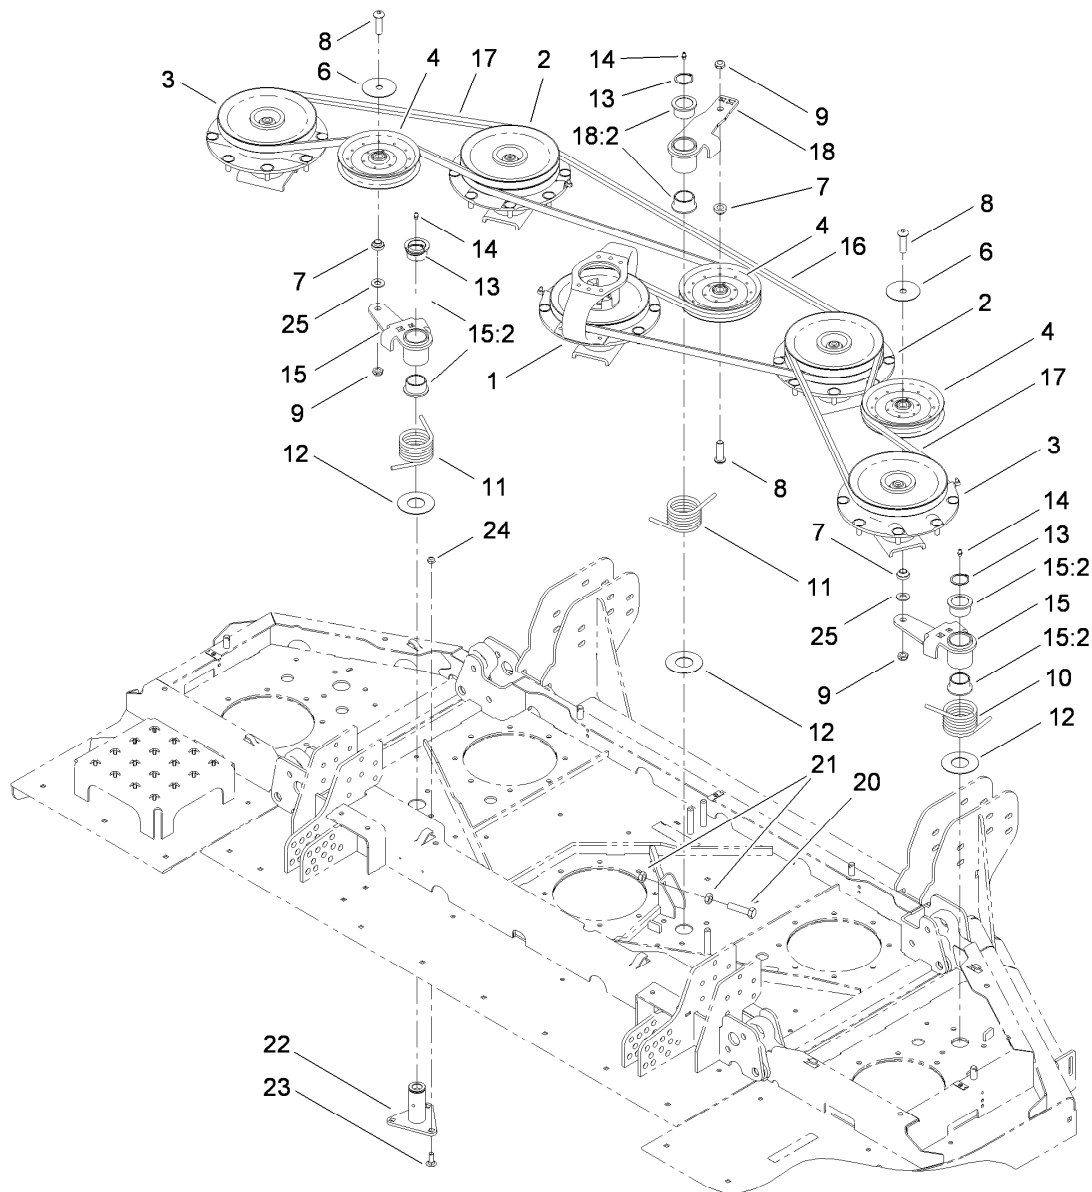 

Center Deck Belt and Pulley Assembly

Ref.	Part Number	Qty.	Description
1	119-4547	1	Driving Spindle ASM
2	119-4548	2	Double Driven Spindle ASM
3	119-4549	2	High-Driven Spindle ASM
4	110-9596	3	Pulley-Idler
6	100-3102	2	Washer-Flat
7	108-1924	3	Spacer-Idler
8	108-1993	3	Screw-HSBH
9	3296-45	3	Nut-Hex
10	108-1921	1	Spring-Torsion
11	112-7395	2	Spring-Torsion
12	108-1926	3	Washer
13	32120-84	3	Ring-Snap, External
14	302-5	3	Fitting-Grease


Ref.	Part Number	Qty.	Description
15	117-9176	2	Idler Arm ASM
15:2	93-4510	2	Bushing-Caster
16	112-7376	1	Belt-V, B
17	112-7377	2	Belt-V, B
18	114-0100	1	High Idler Arm ASM
18:2	93-4510	2	Bushing-Caster
20	01-182-0816	1	Bolt-HH
21	3218-5	2	Nut-Jam
22	114-0997	3	Pivot-Idler
23	3231-2	9	Bolt-CARR
24	3296-59	9	Nut-Lock, NI
25	3256-26	2	Washer-Flat

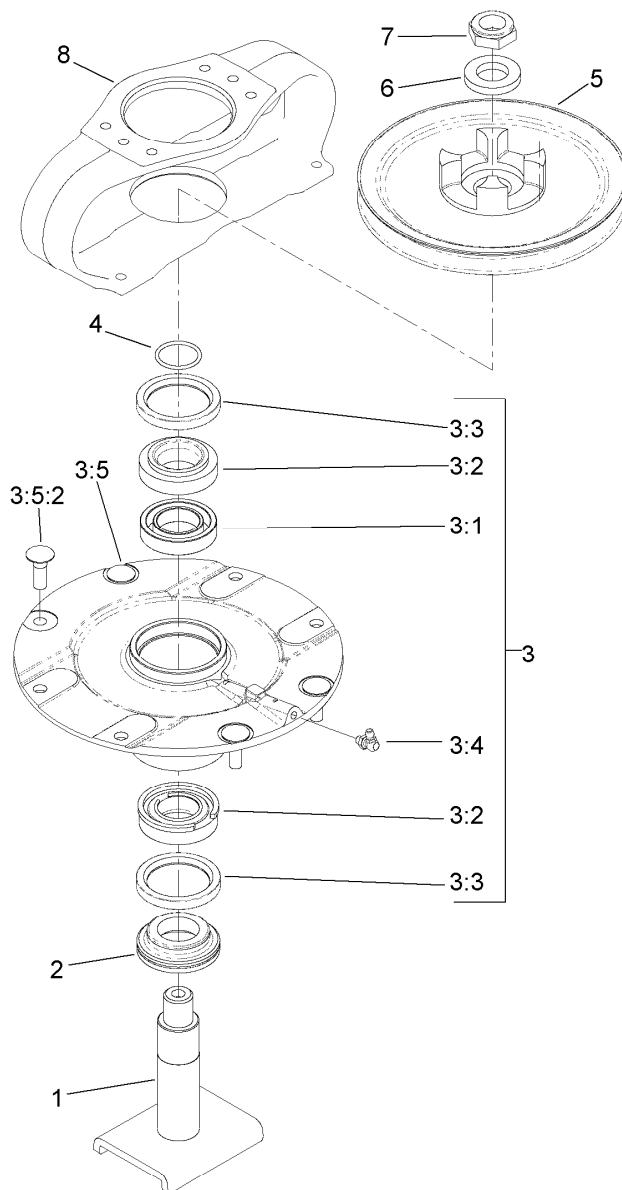 

Driving Spindle Assembly No. 119-4547

Ref.	Part Number	Qty.	Description
1	104-3554	1	Shaft-Spindle
2	69-6950	1	Spacer-Shaft, Spindle
3	119-4546	1	Spindle Housing ASM
3:1	120-5577	1	Bearing Spacer Set
3:2	110-8297	1	Bearing ASM
3:3	253-154	2	Seal-Oil
3:4	302-60	1	Fitting-Grease
3:5		1	Spindle Assembly ●
3:5:2	114-8195	4	Bolt-Neck, Ribbed
4	106-7159	1	O-Ring
5	104-3545	1	Pulley-Driving
6	120-5576	1	Washer-Hardened
7	3296-60	1	Nut-Lock, NI
8	104-3544	1	Mount-Motor, Drive

 
● Not serviced separately

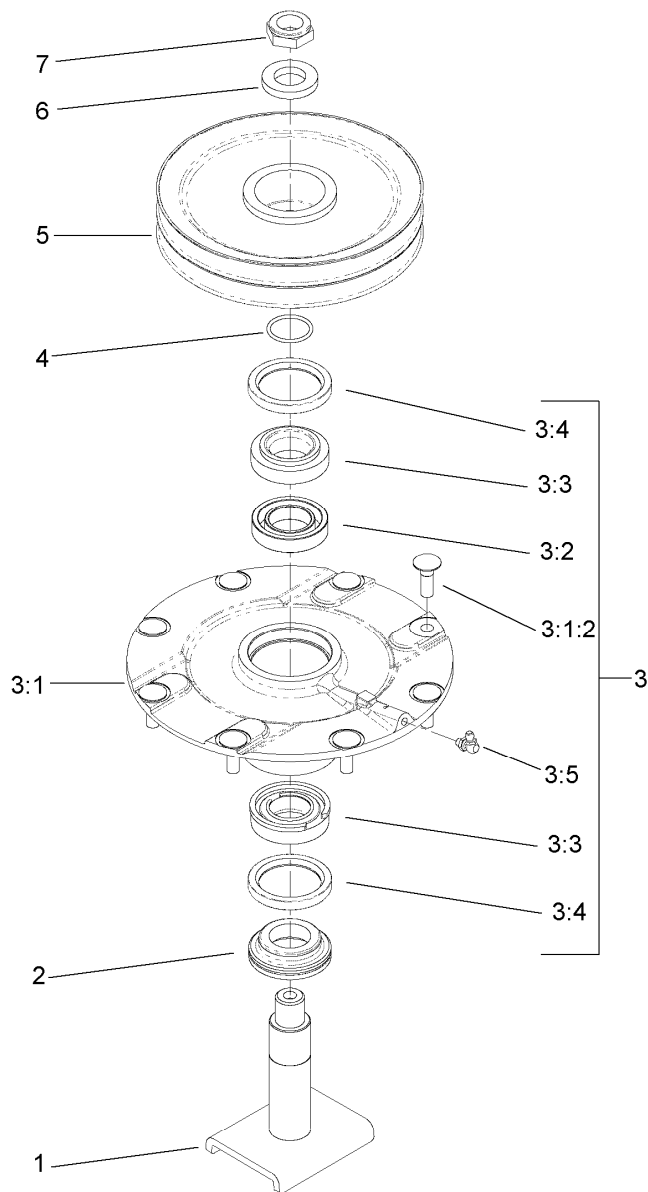

Double Driven Spindle Assembly No. 119-4548

Ref.	Part Number	Qty.	Description
1	104-3554	1	Shaft-Spindle
2	69-6950	1	Spacer-Shaft, Spindle
3	119-4775	1	Spindle Housing ASM
3:1		1	Spindle ASM ●
3:1:2	114-8195	8	Bolt-Neck, Ribbed
3:2	120-5577	1	Bearing Spacer Set
3:3	110-8297	1	Bearing ASM
3:4	253-154	2	Seal-Oil
3:5	302-60	1	Fitting-Grease
4	106-7159	1	O-Ring
5	104-3547	1	Pulley-Driven, Double
6	120-5576	1	Washer-Hardened
7	3296-60	1	Nut-Lock, NI

 
● Not serviced separately

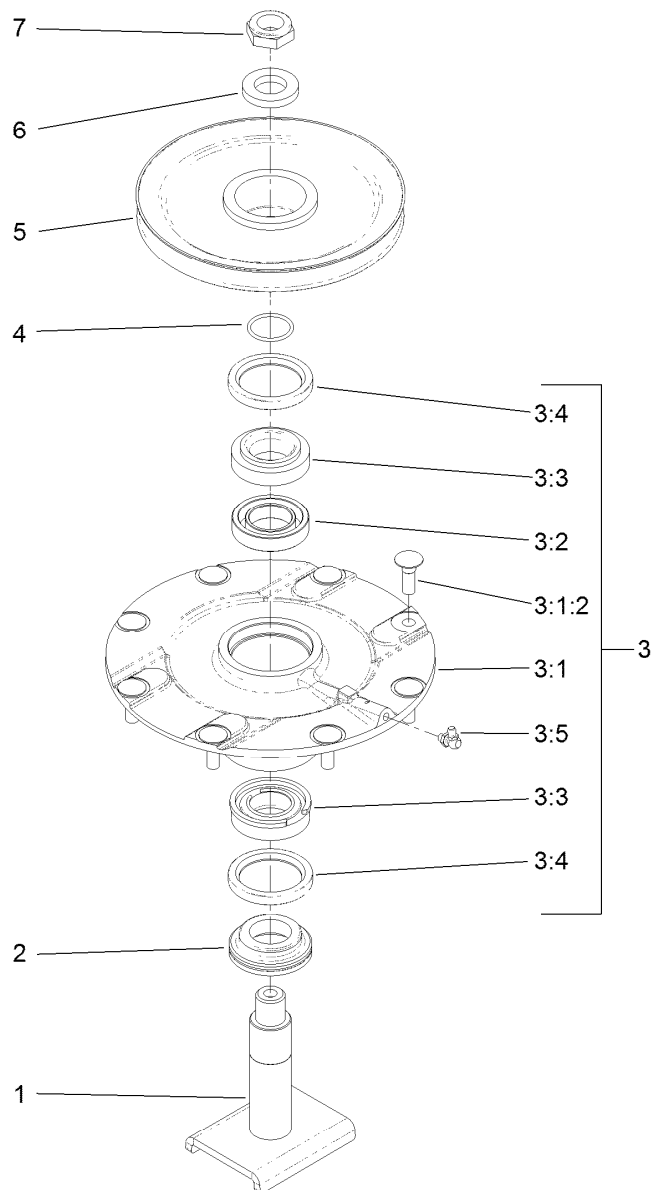

High Driven Spindle Assembly No. 119-4549

Ref.	Part Number	Qty.	Description
1	104-3554	1	Shaft-Spindle
2	69-6950	1	Spacer-Shaft, Spindle
3	119-4775	1	Spindle Housing ASM
3:1		1	Spindle ASM ●
3:1:2	114-8195	8	Bolt-Neck, Ribbed
3:2	120-5577	1	Bearing Spacer Set
3:3	110-8297	1	Bearing ASM
3:4	253-154	2	Seal-Oil
3:5	302-60	1	Fitting-Grease
4	106-7159	1	O-Ring
5	104-3548	1	Pulley-Driven, High
6	120-5576	1	Washer-Hardened
7	3296-60	1	Nut-Lock, NI

 
● Not serviced separately

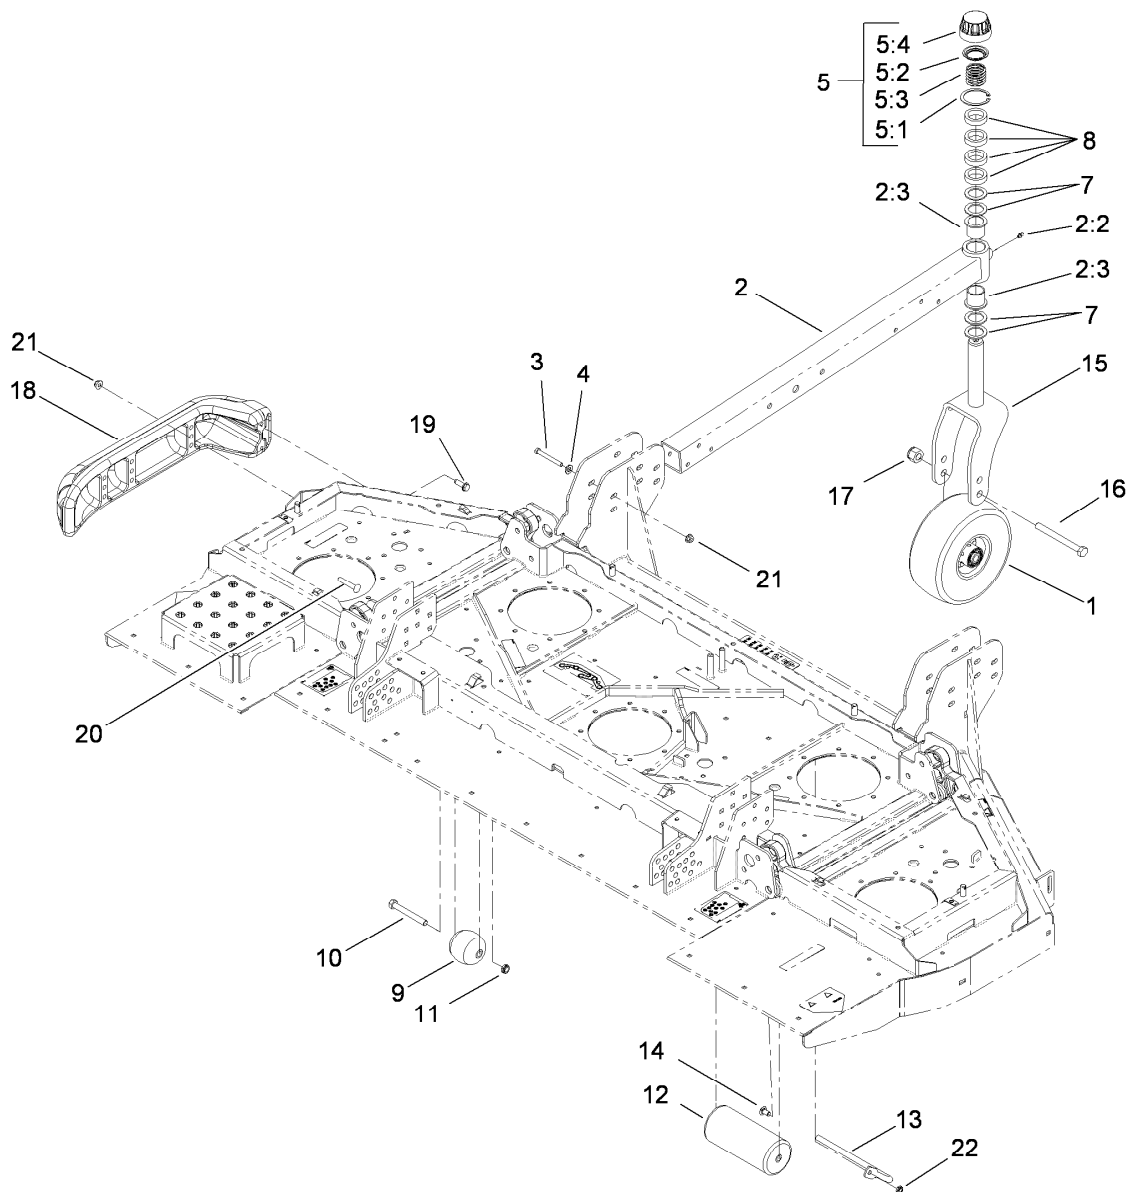

Center Deck Roller, Skid and Caster Wheel Assembly


Ref.	Part Number	Qty.	Description
1	93-4240	2	10 Inch Wheel ASM
2	114-4885	2	Front Castor Arm ASM
2:2	302-5	1	Fitting-Grease
2:3	69-6470	2	Bushing-Caster
3	323-42	12	Screw-HH
4	3256-24	12	Washer-Plain
5	92-9727	2	HOC Cap ASM
5:1	92-5581	1	Ring-Rtng,Snap,Int,Flat
5:2	92-5583	1	Washer-Cap
5:3	92-9726	1	Spring-Compression
5:4	92-8861	1	Cap-HOC
7	69-6860	8	Washer-Thrust
8	69-1510	8	Spacer
9	29-4820	2	Roller

Ref.	Part Number	Qty.	Description
10	325-17	2	Screw-HH
11	3296-45	2	Nut-Hex
12	68-6710	1	Roller
13	68-6840	1	Shaft-Roller
14	3231-21	1	Screw-CARR
15	110-5999-01	2	Castor Fork ASM
16	327-24	2	Screw-HH
17	3296-53	2	Nut-Lock, NI
18	112-1479	2	Skid-Bumper, Deck
19	9136144	2	Screw-HWHTF
20	3231-33	4	Screw-CARR
21	104-8301	16	Nut-HF, NI
22	3296-59	1	Nut-Lock, NI

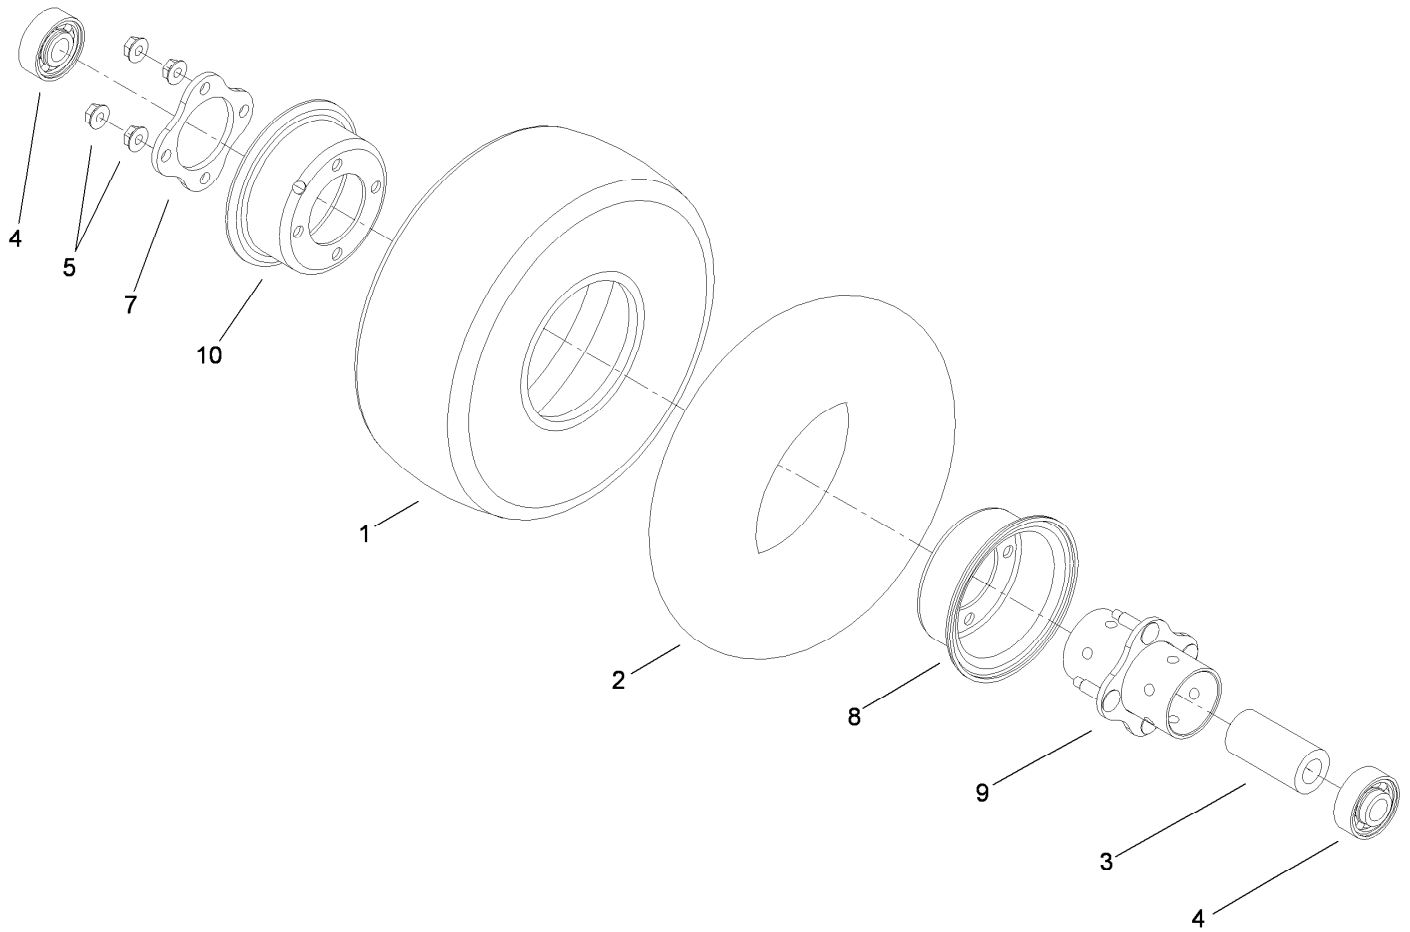 

10 Inch Wheel Assembly No. 93-4240


Ref.	Part Number	Qty.	Description
1	93-4243	1	Tire
2	93-4244	1	Tube-Inner (W/Valve)
3	93-4241	1	Spacer-Bearing, Inner
4	120-3366	2	Bearing
5	32128-16	4	Nut-HHF
7	93-4242	1	Plate
8	93-4239	1	Rim-Wheel, Half
9	93-5980	1	Hub
10	95-2741	1	Rim-Wheel, Half

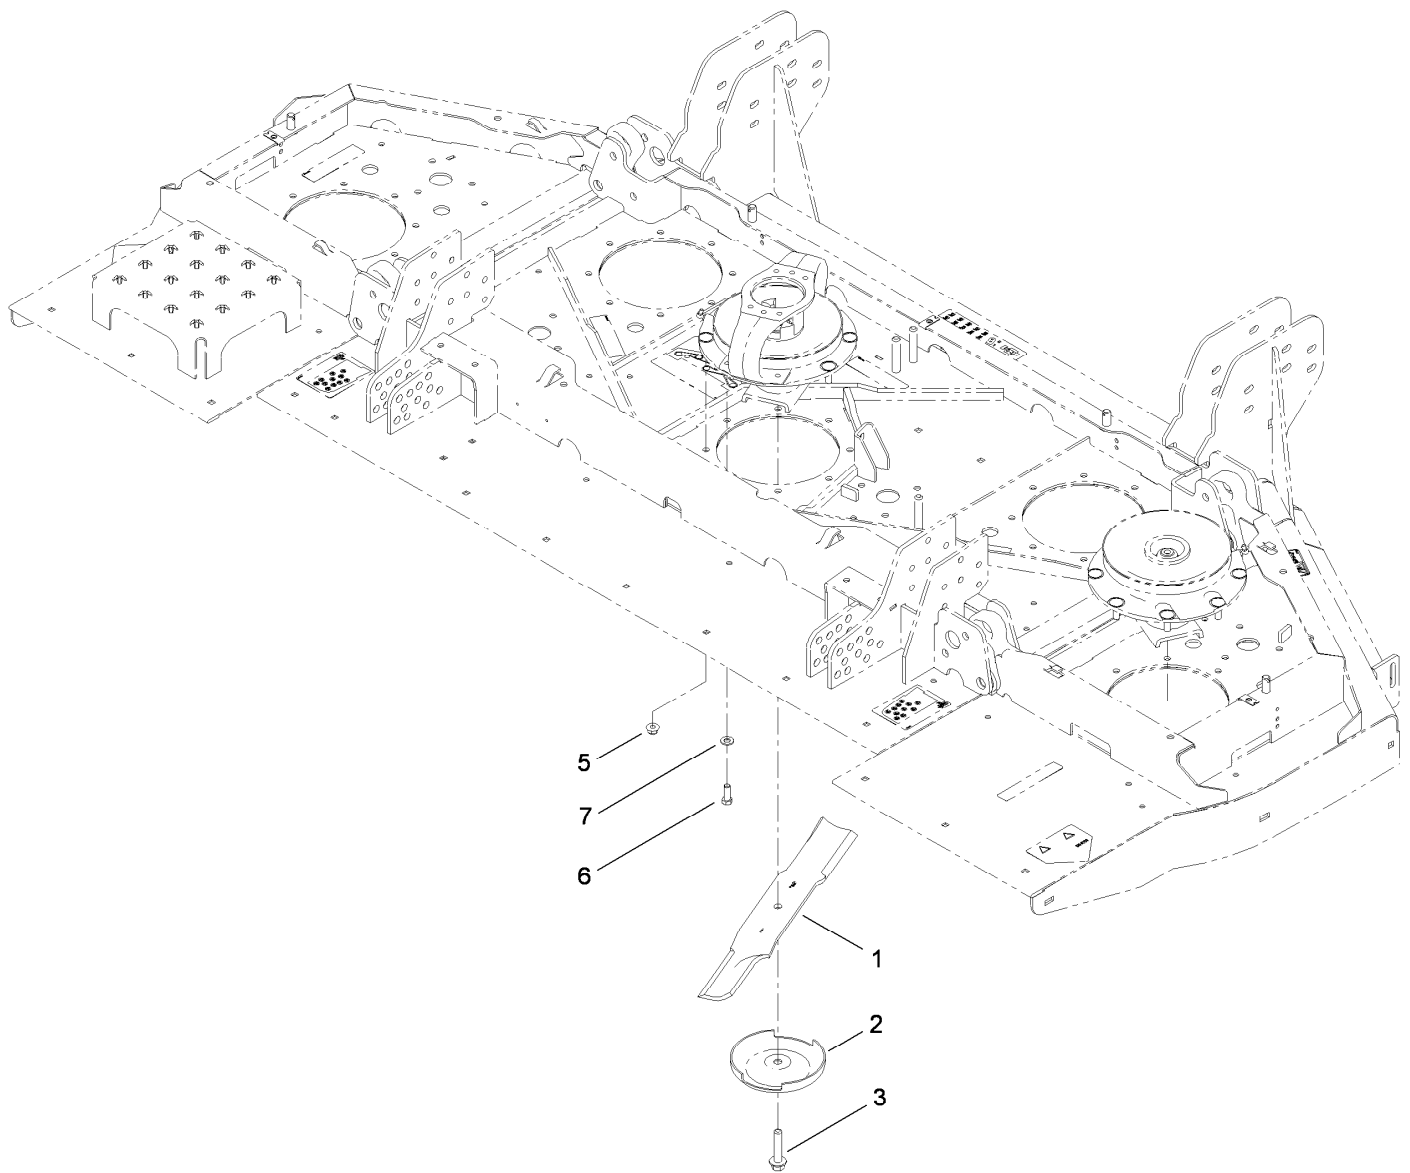 

Center Deck Spindle and Blade Assembly


Ref.	Part Number	Qty.	Description
1	110-5946-03	5	Blade-Rotary
1	110-5948-03	5	Blade-Rotary, Atomic ●
2	72-9361	5	Cup-Scalp, Anti
3	92-5816	5	Bolt-Blade
5	104-8301	36	Nut-HF, NI
6	323-6	4	Screw-HH
7	3256-24	4	Washer-Plain

 ● Not illustrated

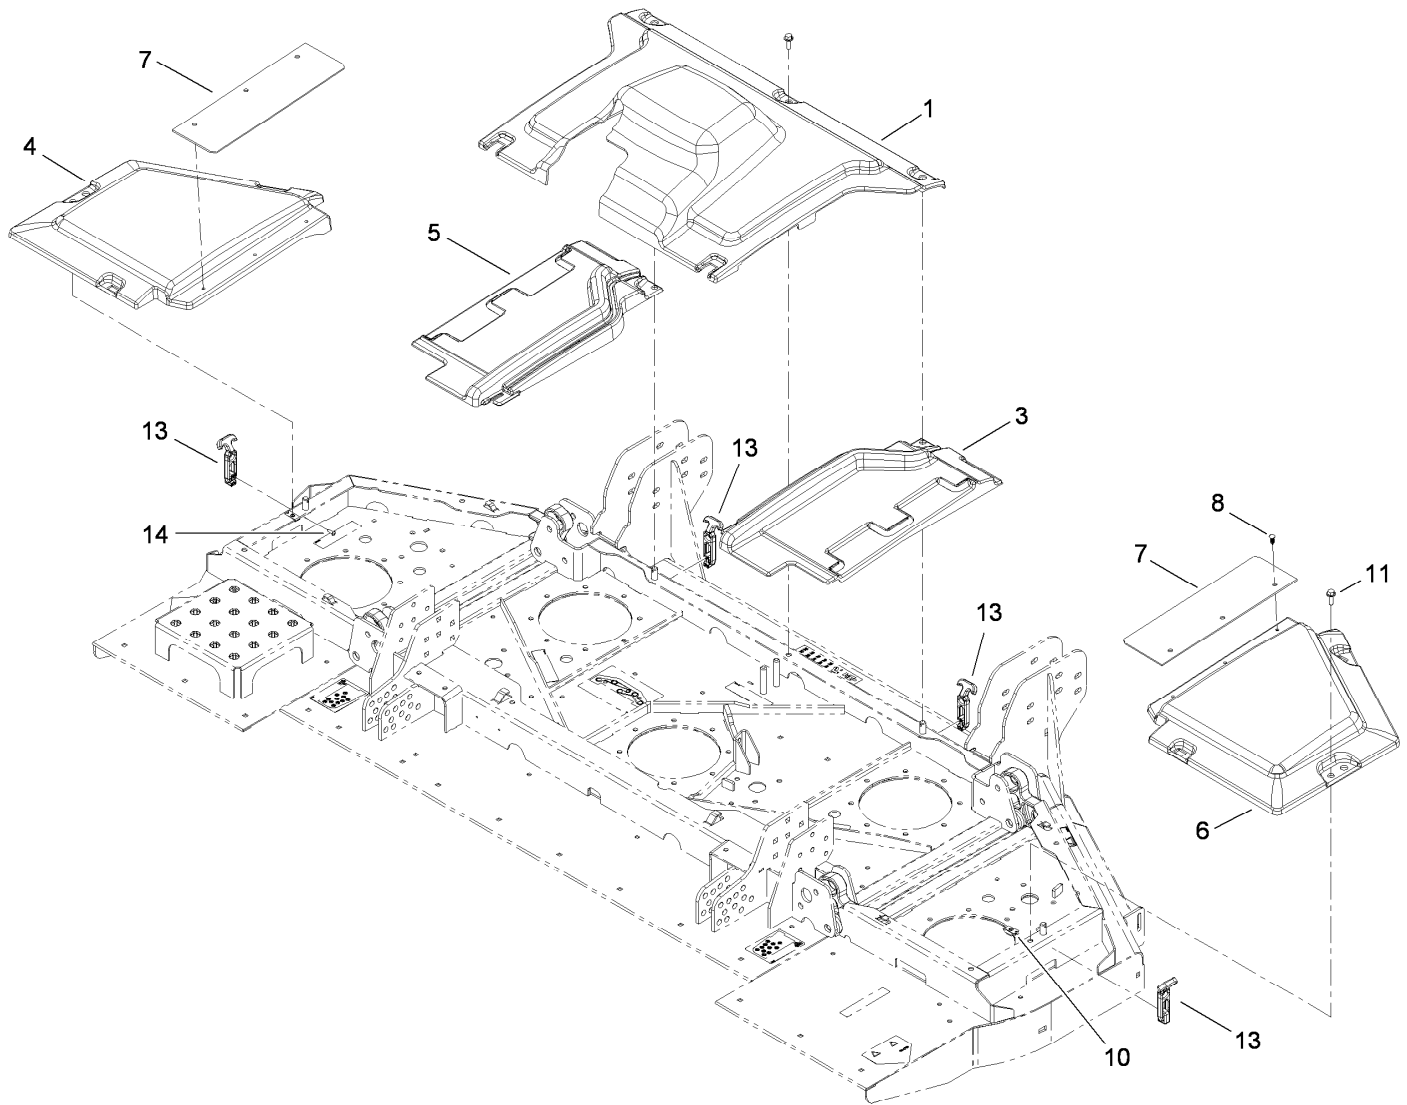

Center Deck Belt Cover Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	114-5630	1	Cover-Center, Front Deck
3	114-5632	1	Cover-Front Deck, RH Transition
4	114-5629	1	Cover-Front Deck, LH
5	114-5631	1	Cover-Front Deck, LH Transition
6	114-5628	1	Cover-Front Deck, RH
7	115-5424	2	Shield-Deck, Flexible
8	117-2382	6	Plug-Plastic
10	110-3510	3	Nut-Retainer
11	3234-29	3	Screw-HHF
13	103-4080	4	Latch-Rubber
14	3274-39	8	Screw-HSBH

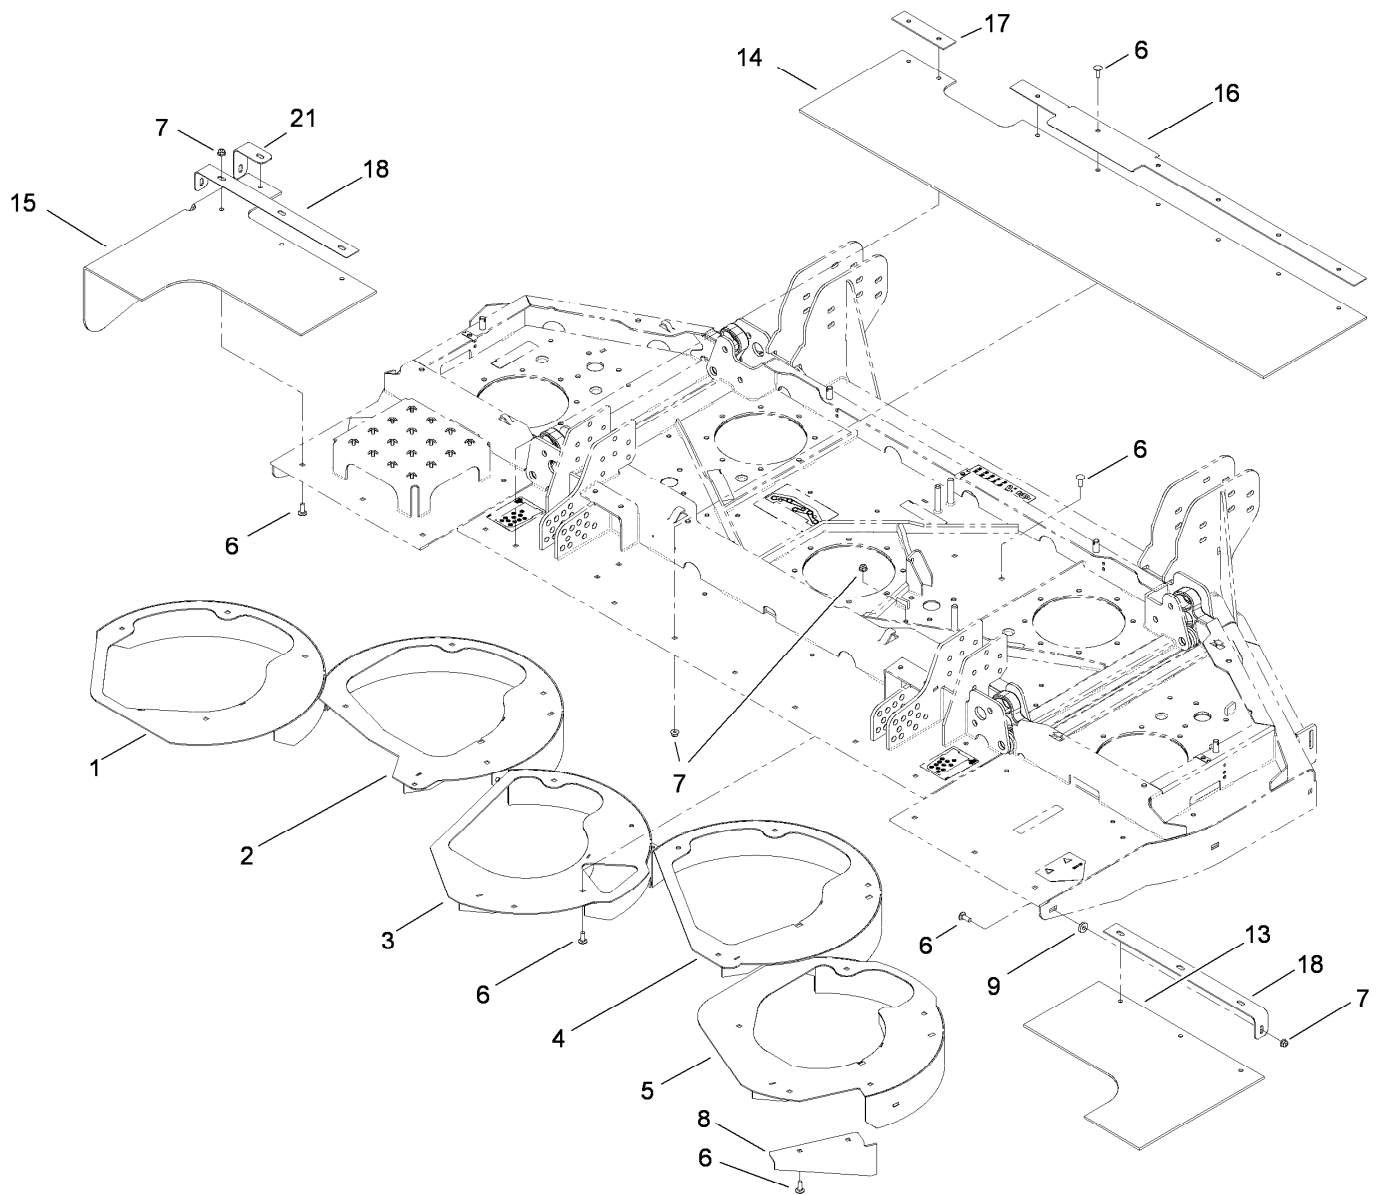 

Center Deck Chamber Assembly


Ref.	Part Number	Qty.	Description
1	115-2100-01	1	Chamber-Outer, LH
2	115-2101-01	1	Chamber-Inner, LH
3	115-2102-01	1	Chamber-Center
4	115-2103-01	1	Chamber-Inner, RH
5	115-2104-01	1	Chamber-Outer, RH
6	3230-10	43	Bolt-CARR
7	104-8300	43	Nut-HF, NI
8	115-2147-01	1	Baffle-Deflector

Ref.	Part Number	Qty.	Description
9	104-7658	1	Spacer
13	114-0891	1	Flap-Rubber, Right Winglet
14	114-0890	1	Flap-Rubber, Center
15	115-3389	1	Flap-Rubber, Left Winglet
16	114-0884-03	1	Bar-Flap Holddown, Center
17	115-3390-03	1	Bar-Flap Holddown, Center
18	114-0885-03	2	Bar-Flap Holddown, Outer
21	115-5444-03	1	Strap-Deflector

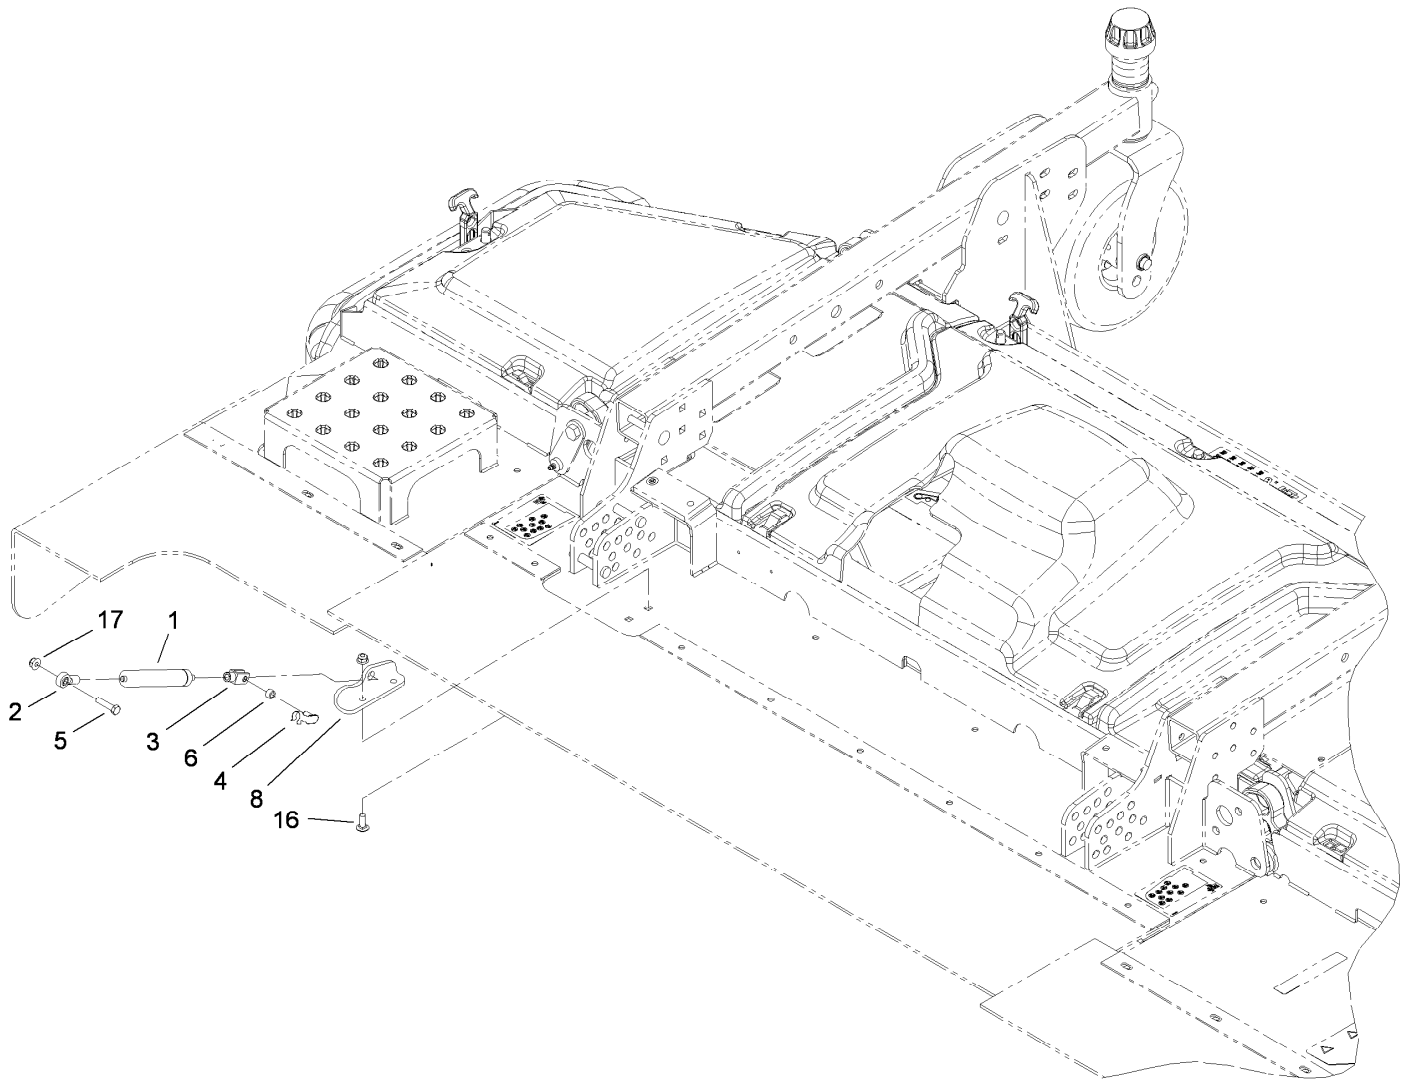 

Center Deck Transport Damper Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	105-3249	1	Damper
2	104-8331	1	End-Rod, Spherical
3	115-5455	1	End-Rod, Clevis
4	115-5454	1	Pin-Spring
5	322-17	1	Screw-HH
6	115-2142	1	Spacer
8	115-5452-01	1	Mount-Damper
16	3230-10	2	Bolt-CARR
17	104-8300	3	Nut-HF, NI

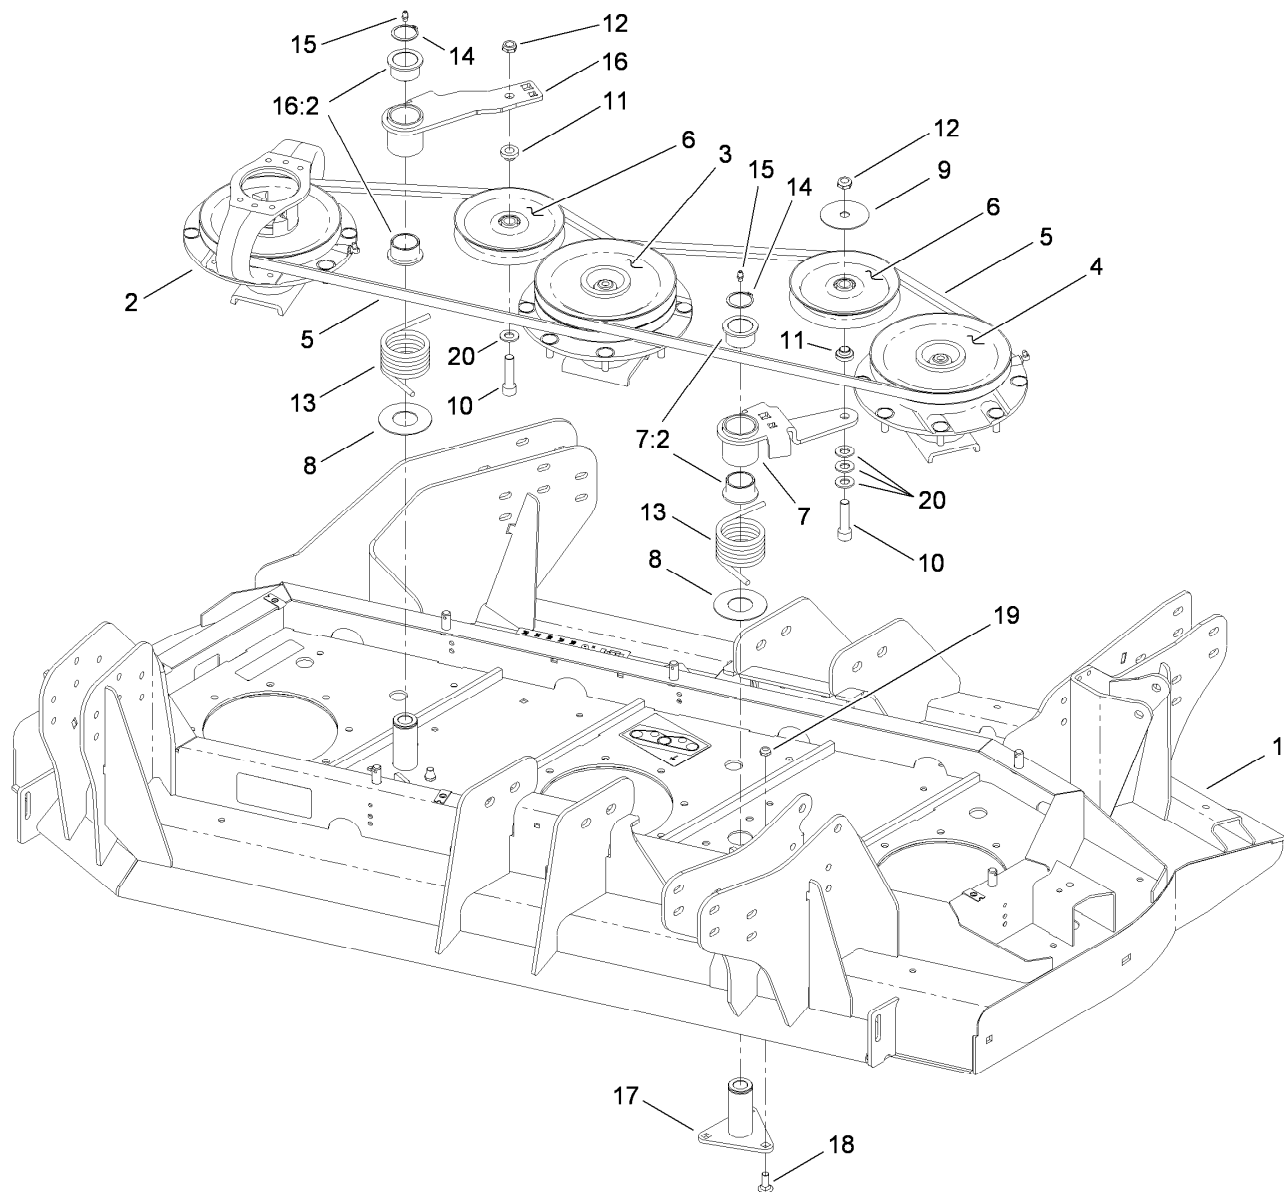 

Right Deck Belt and Pulley Assembly


Ref.	Part Number	Qty.	Description
1	110-5921	1	Right Deck And Decal ASM
2	119-4547	1	Driving Spindle ASM
3	119-4548	1	Double Driven Spindle ASM
4	119-4549	1	High-Driven Spindle ASM
5	112-7377	2	Belt-V, B
6	01-268-0160	2	Pulley-Idler
7	117-9176	1	Idler Arm ASM
7:2	93-4510	2	Bushing-Caster
8	108-1926	2	Washer
9	100-3102	1	Washer-Flat
10	3274-5	2	Screw-HSH

Ref.	Part Number	Qty.	Description
11	108-1924	2	Spacer-Idler
12	3296-45	2	Nut-Hex
13	108-1921	2	Spring-Torsion
14	32120-84	2	Ring-Snap, External
15	302-5	2	Fitting-Grease
16	108-1930	1	Idler Arm ASM
16:2	93-4510	2	Bushing-Caster
17	114-0997	2	Pivot-Idler
18	3231-2	6	Bolt-CARR
19	3296-59	6	Nut-Lock, NI
20	3256-26	4	Washer-Flat

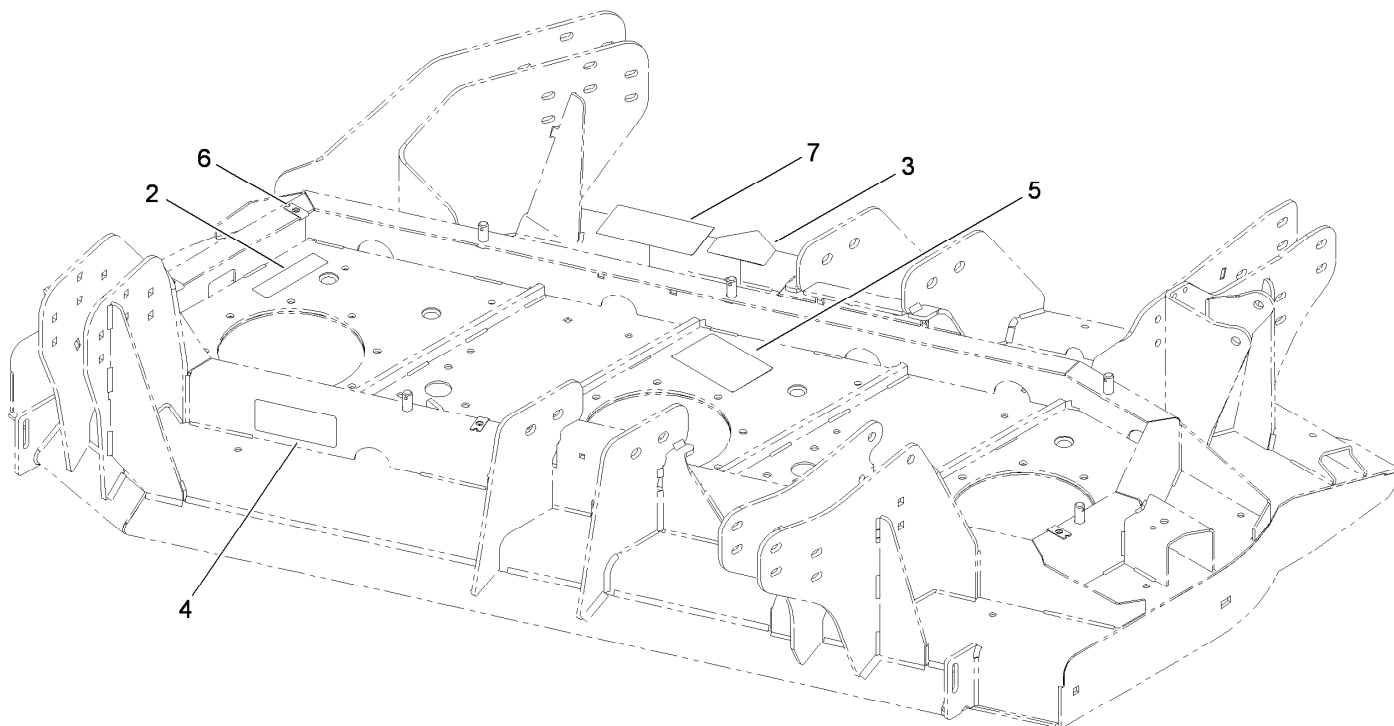 

Right Deck Decal Assembly No. 110-5921


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	117-4979	3	Decal-Warning
3	120-6604	1	Decal-Danger
4	93-7818	1	Decal-Torque, Blade Bolt
5	114-0974	1	Decal-Belt Routing, Deck (RH)
6	110-3510	4	Nut-Retainer
7	114-0975	1	Decal-HOC

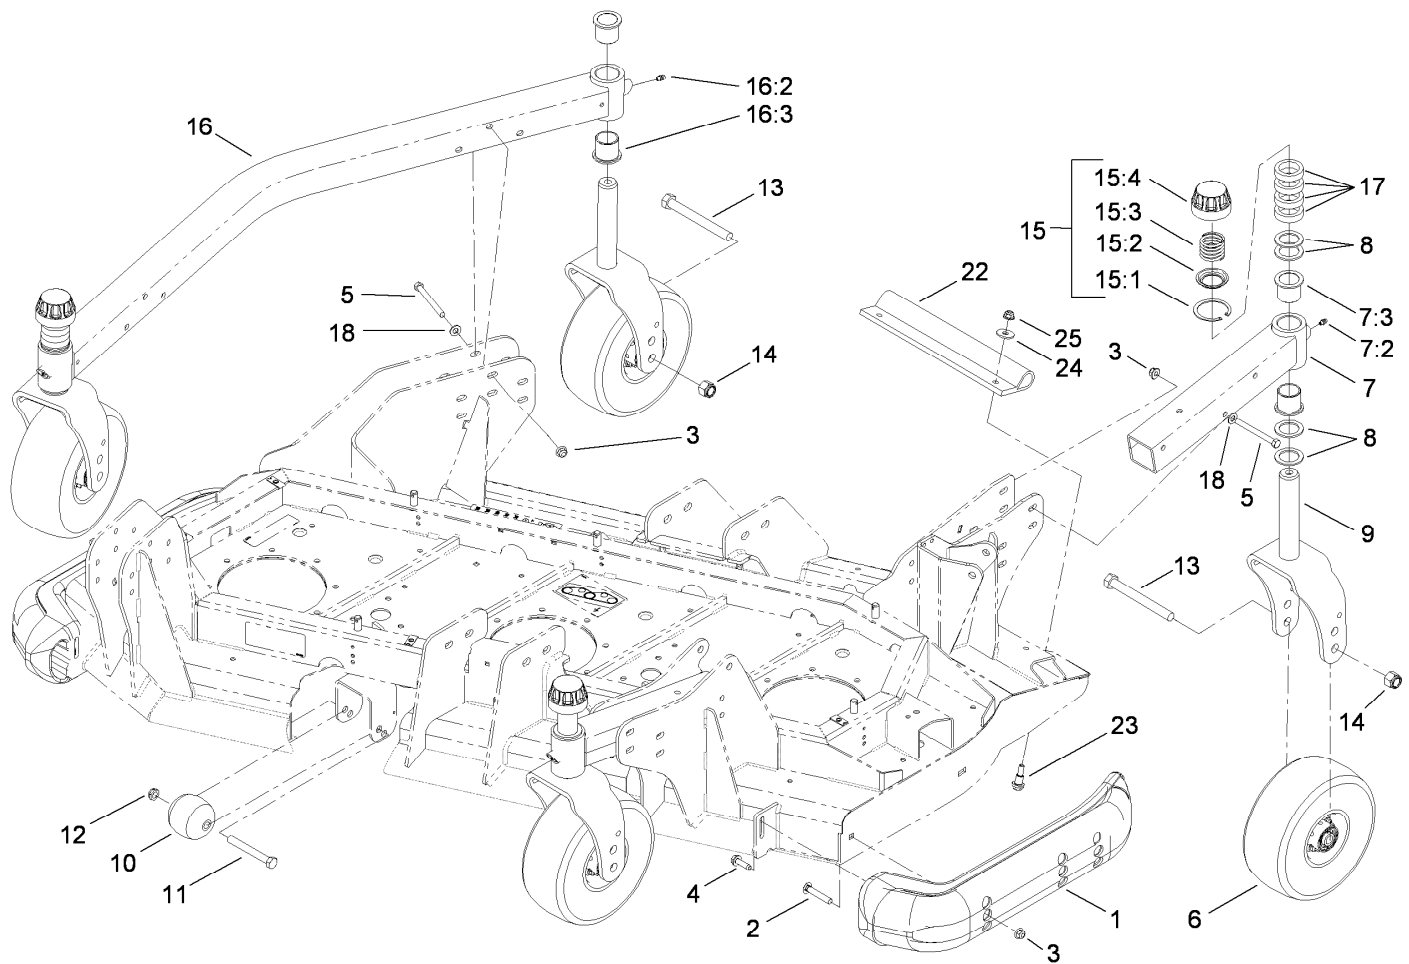 

Right Deck Roller, Skid and Caster Wheel Assembly

Ref.	Part Number	Qty.	Description
1	112-1479	2	Skid-Bumper, Deck
2	3231-33	4	Screw-CARR
3	104-8301	16	Nut-HF, NI
4	9136144	2	Screw-HWHTF
5	323-42	12	Screw-HH
6	93-4240	4	10 Inch Wheel ASM
7	110-6040	2	Castor Arm ASM
7:2	302-5	1	Fitting-Grease
7:3	69-6470	2	Bushing-Caster
8	69-6860	16	Washer-Thrust
9	110-5999-01	4	Castor Fork ASM
10	29-4820	2	Roller
11	325-17	2	Screw-HH
12	3296-45	2	Nut-Hex
13	327-24	4	Screw-HH


Ref.	Part Number	Qty.	Description
14	3296-53	4	Nut-Lock, NI
15	92-9727	4	HOC Cap ASM
15:1	92-5581	1	Ring-Rtng, Snap, Int, Flat
15:2	92-5583	1	Washer-Cap
15:3	92-9726	1	Spring-Compression
15:4	92-8861	1	Cap-HOC
16	114-0953	1	HOC Castor Arm ASM
16:2	302-5	2	Fitting-Grease
16:3	69-6470	4	Bushing-Caster
17	69-1510	16	Spacer
18	3256-24	12	Washer-Plain
22	117-2768	1	Flap-Rubber
23	104-0858	2	Bolt-Shoulder
24	103995	2	Washer
25	104-7201	2	Nut-HF, NI

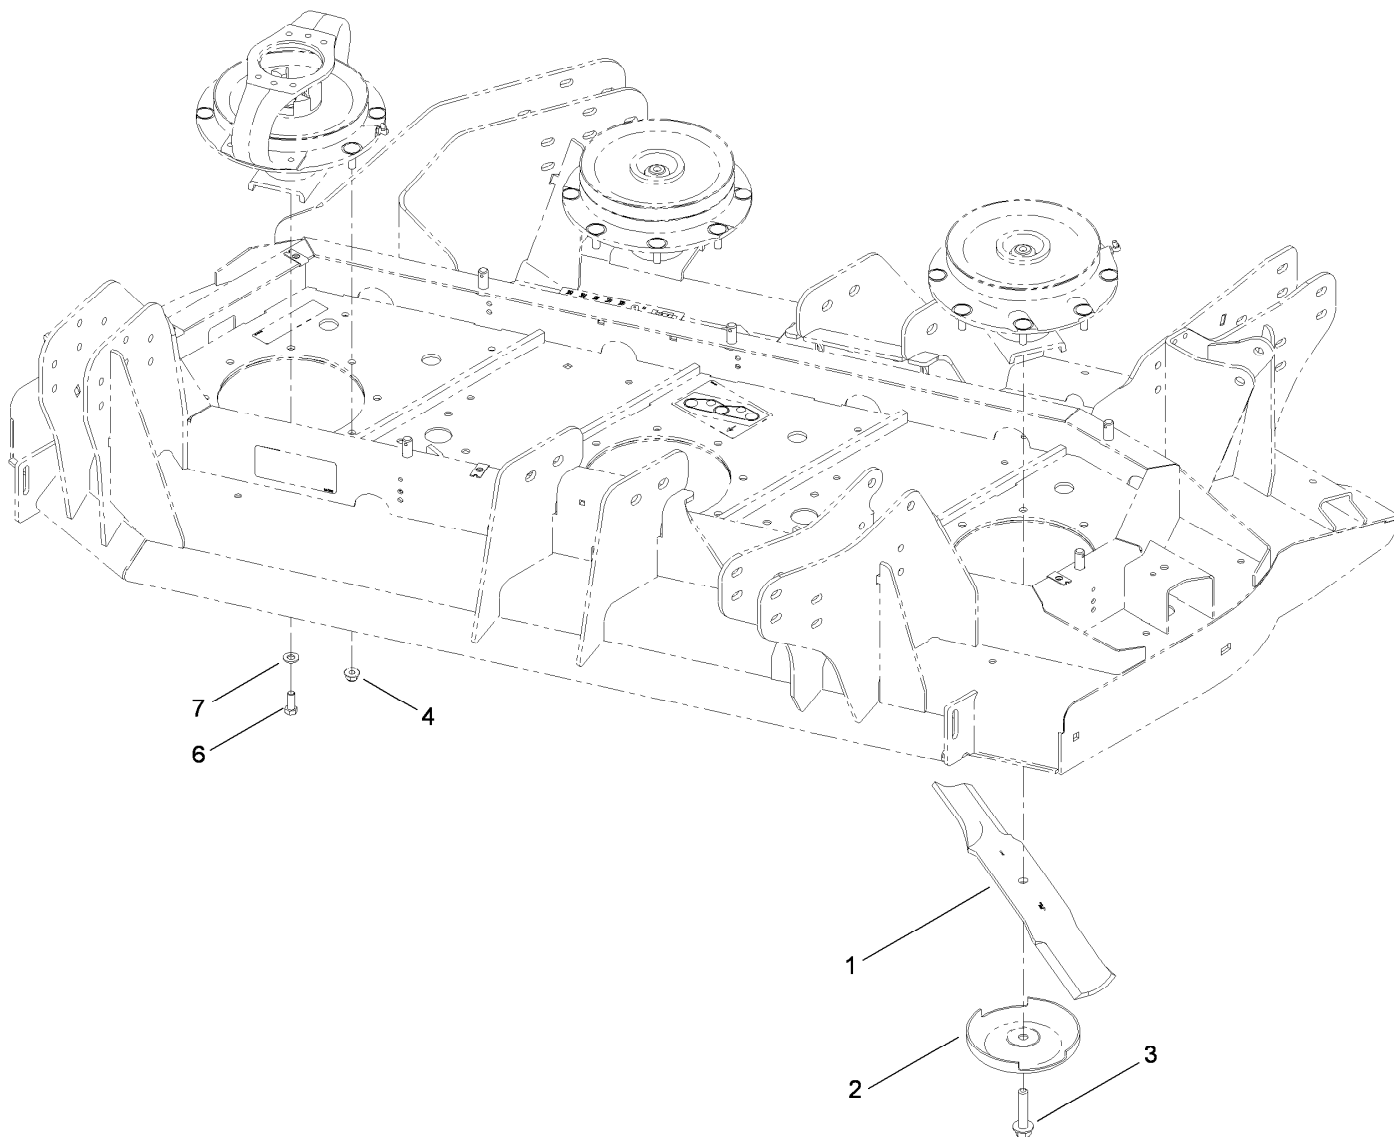 

Right Deck Spindle and Blade Assembly


Ref.	Part Number	Qty.	Description
1	110-5946-03	3	Blade-Rotary
1	110-5948-03	3	Blade-Rotary, Atomic ●
2	72-9361	3	Cup-Scalp, Anti
3	92-5816	3	Bolt-Blade
4	104-8301	20	Nut-HF, NI
6	323-6	4	Screw-HH
7	3256-24	4	Washer-Plain

 ● Not illustrated

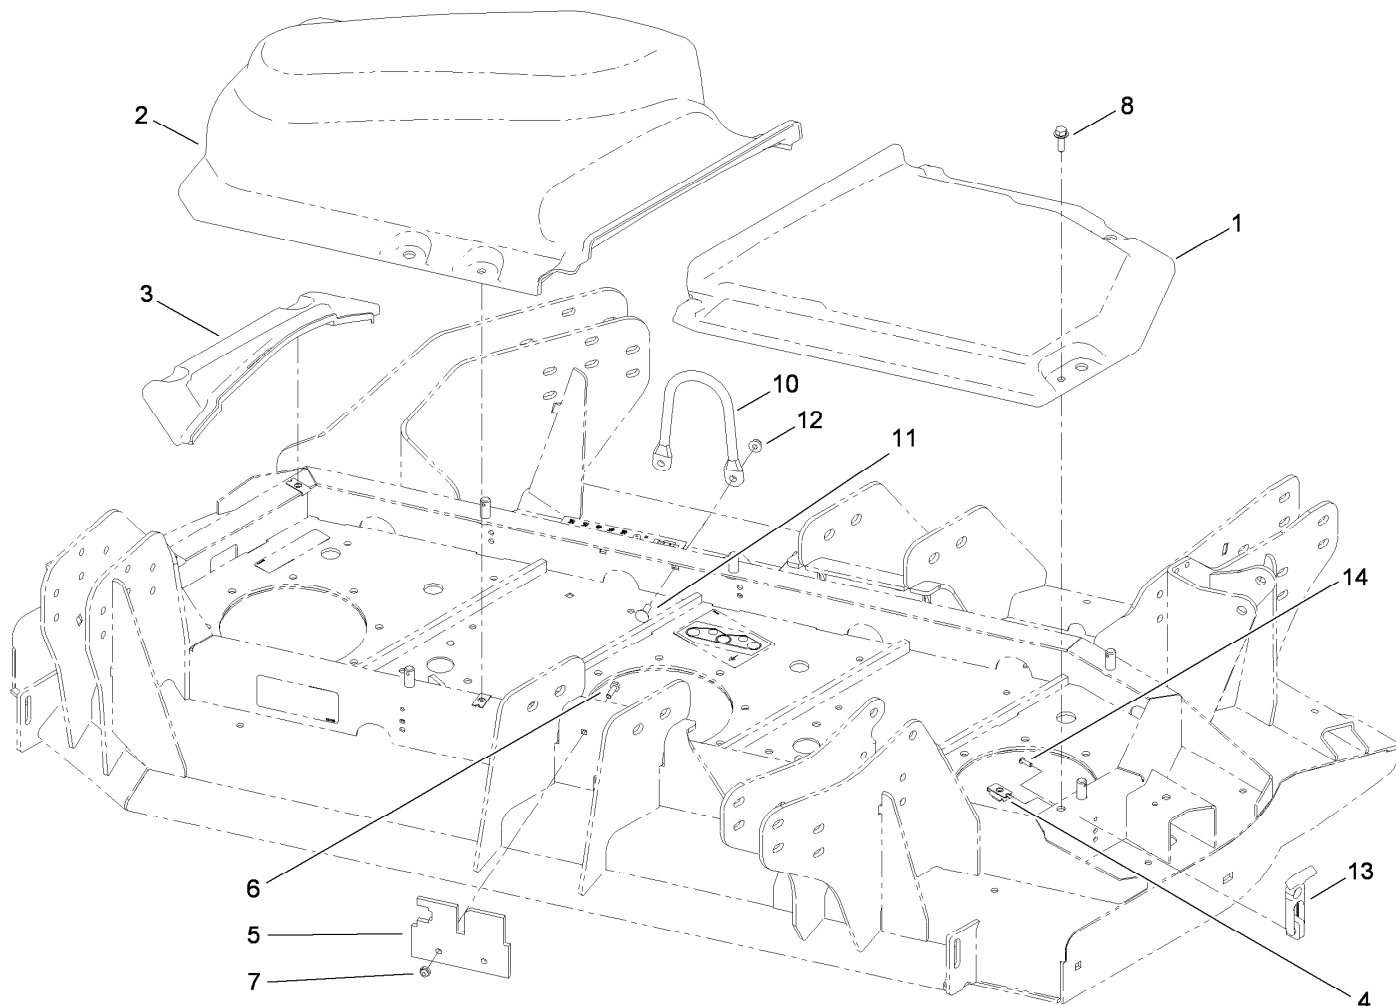


Right Deck Belt Cover Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	114-5635	1	Cover-Deck, RH Wing (Inside)
2	114-5636	1	Cover-Deck, RH Wing (Outside)
3	114-5638	1	Cover-Deck, RH Wing (Fixed)
4	110-3510	4	Nut-Retainer
5	115-3363	1	Deflector-Debris, Side Deck
6	321-5	2	Screw-HH
7	104-7201	2	Nut-HF, NI
8	3234-29	4	Screw-HHF
10	115-3362	1	Guide-Hose
11	3230-10	2	Bolt-CARR
12	104-8300	2	Nut-HF, NI
13	103-4080	4	Latch-Rubber
14	3274-39	8	Screw-HSBH

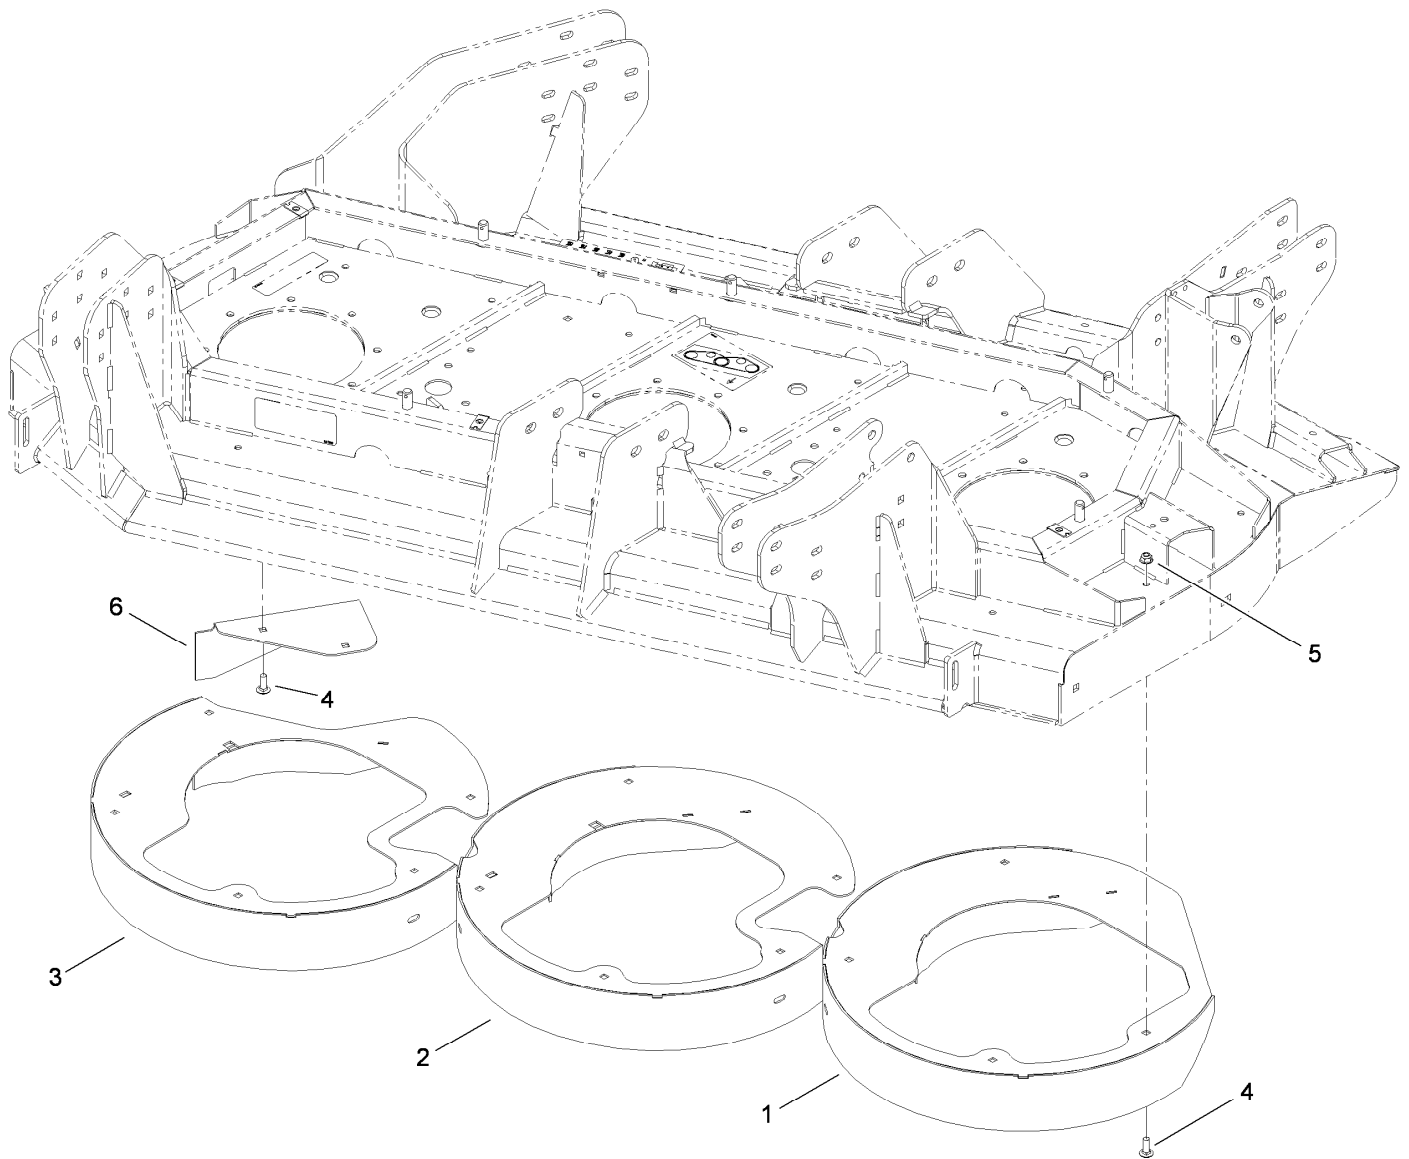 


Right Deck Chamber Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	115-2125-01	1	Chamber-Inner, Right Deck
2	115-2126-01	1	Chamber-Center, Right Deck
3	115-2127-01	1	Chamber-Outer, Right Deck
4	3230-10	16	Bolt-CARR
5	104-8300	16	Nut-HF, NI
6	115-2146-01	1	Baffle-Deflector

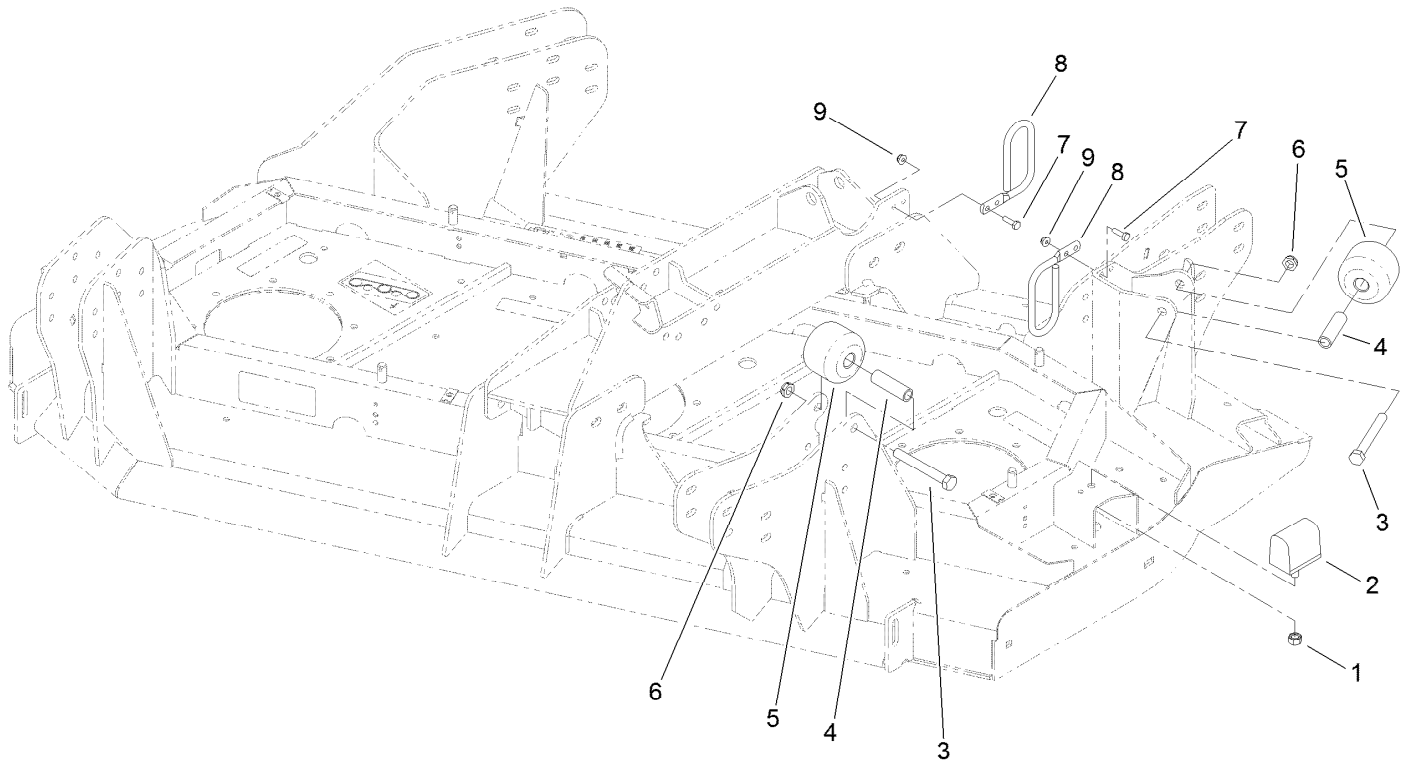 

Right Deck Stop and Hose Guide Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	48-9520	1	Nut
2	87-3470	1	Bumper
3	325-17	2	Screw-HH
4	115-2144	2	Tube-Spacer
5	115-3366	2	Roller
6	3296-45	2	Nut-Hex
7	321-5	4	Screw-HH
8	114-5918	2	Support-Hose
9	104-7201	4	Nut-HF, NI

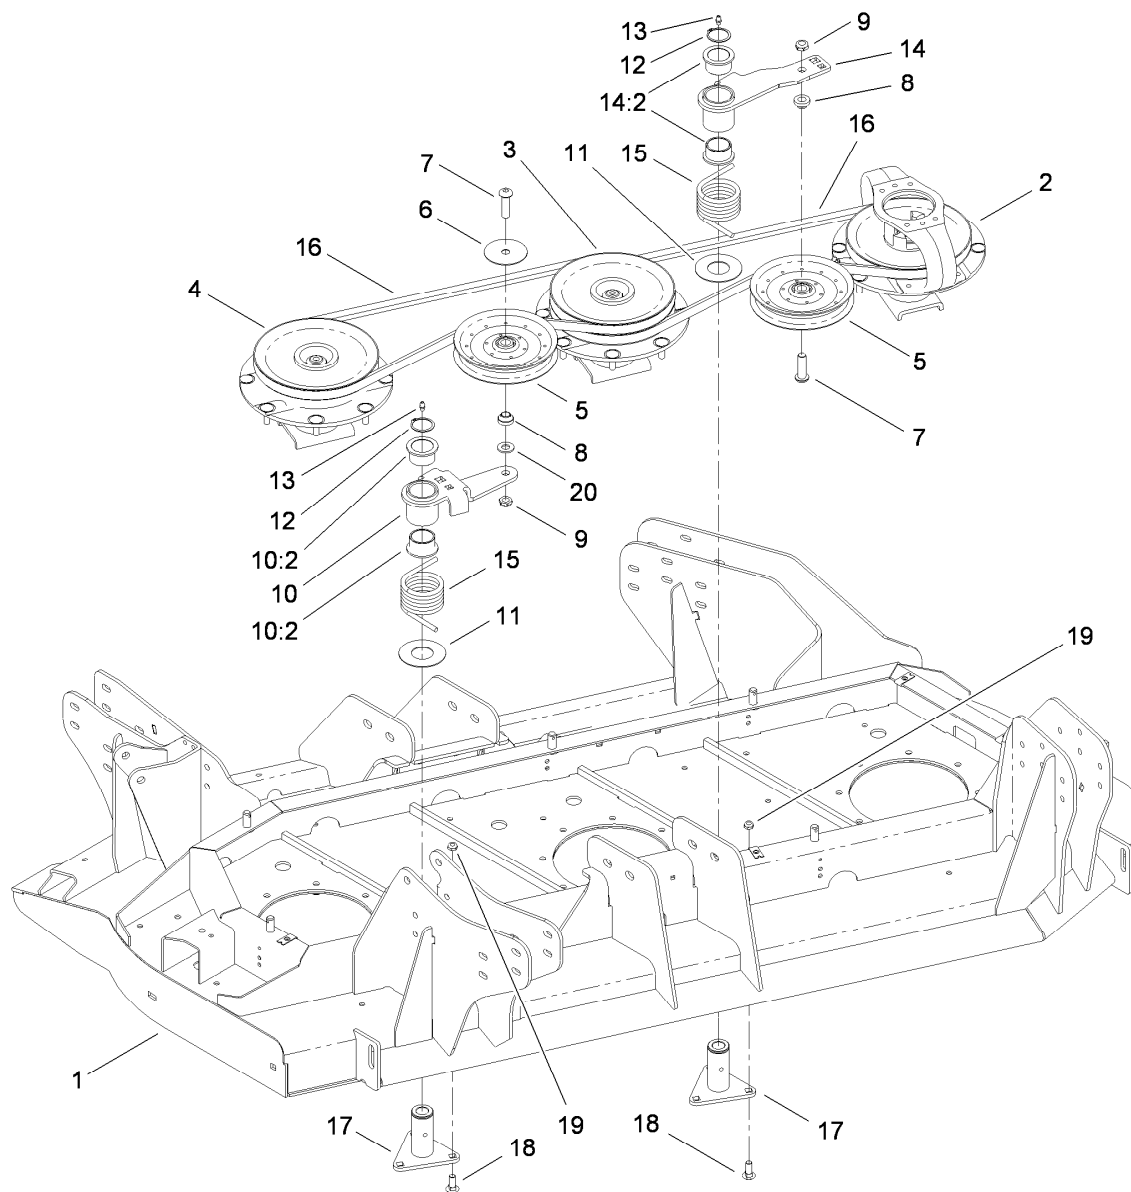 

Left Deck Belt and Pulley Assembly


Ref.	Part Number	Qty.	Description
1	110-5931	1	Left Deck And Decal ASM
2	119-4547	1	Driving Spindle ASM
3	119-4548	1	Double Driven Spindle ASM
4	119-4549	1	High-Driven Spindle ASM
5	110-9596	2	Pulley-Idler
6	100-3102	1	Washer-Flat
7	108-1993	2	Screw-HSBH
8	108-1924	2	Spacer-Idler
9	3296-45	2	Nut-Hex
10	117-9176	1	Idler Arm ASM
10:2	93-4510	2	Bushing-Caster

Ref.	Part Number	Qty.	Description
11	108-1926	2	Washer
12	32120-84	2	Ring-Snap, External
13	302-5	2	Fitting-Grease
14	108-1930	1	Idler Arm ASM
14:2	93-4510	2	Bushing-Caster
15	108-1921	2	Spring-Torsion
16	112-7377	2	Belt-V, B
17	114-0997	2	Pivot-Idler
18	3231-2	6	Bolt-CARR
19	3296-59	6	Nut-Lock, NI
20	3256-26	1	Washer-Flat

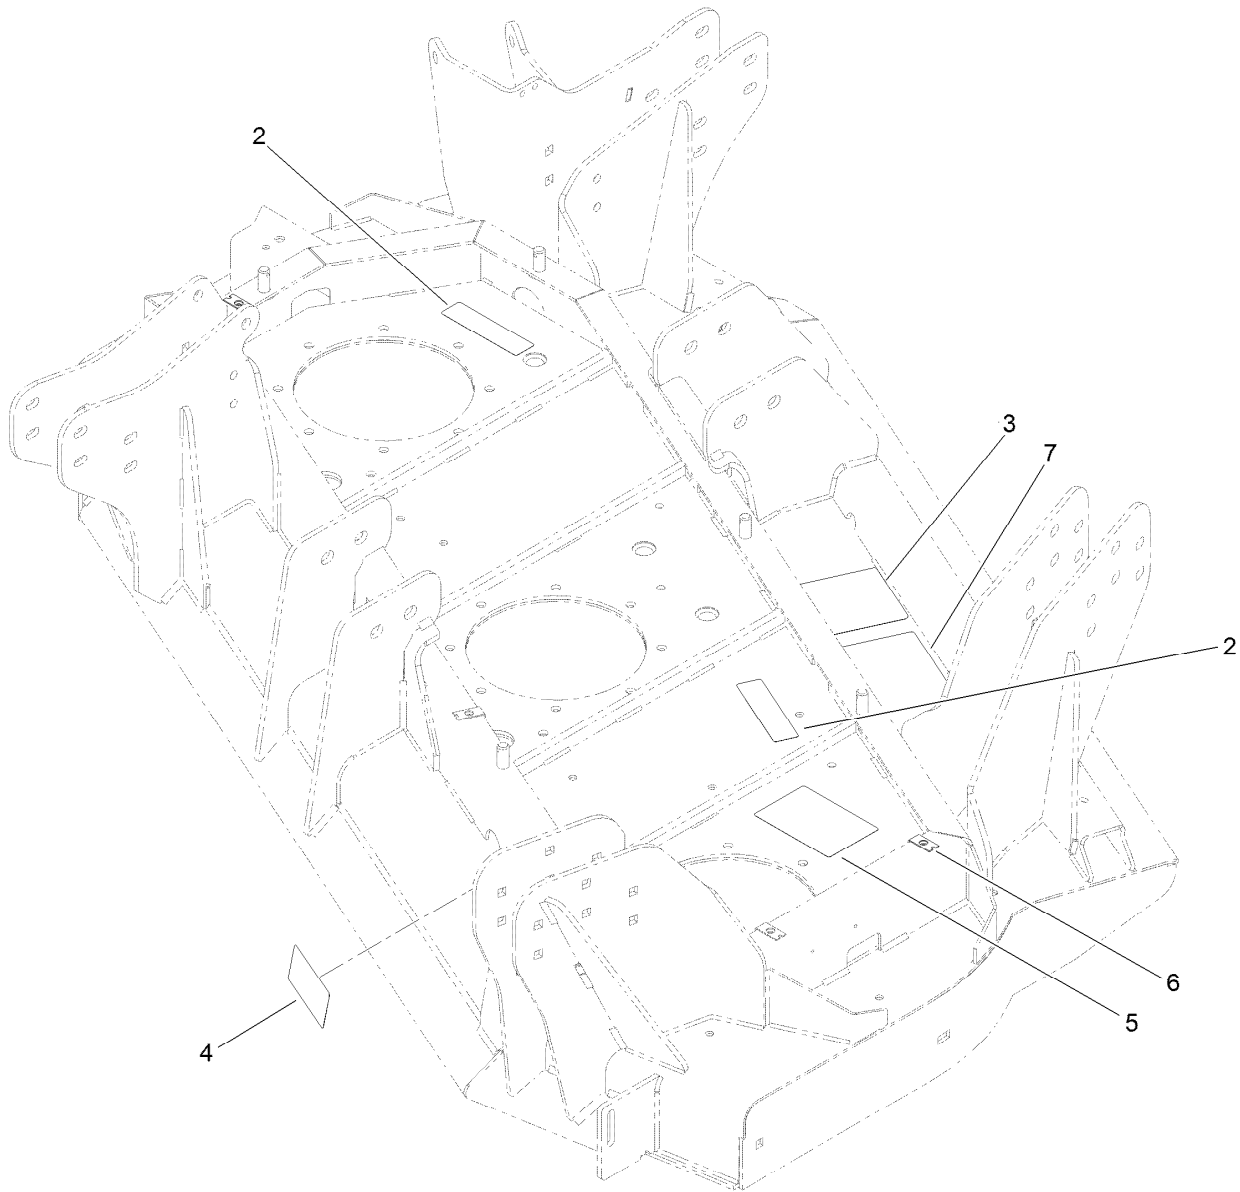 

Left Deck Decal Assembly No. 110-5931


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	117-4979	3	Decal-Warning
3	120-6604	1	Decal-Danger
4	93-7818	1	Decal-Torque, Blade Bolt
5	114-4883	1	Decal-Belt Routing, Deck (LH)
6	110-3510	4	Nut-Retainer
7	114-0975	1	Decal-HOC

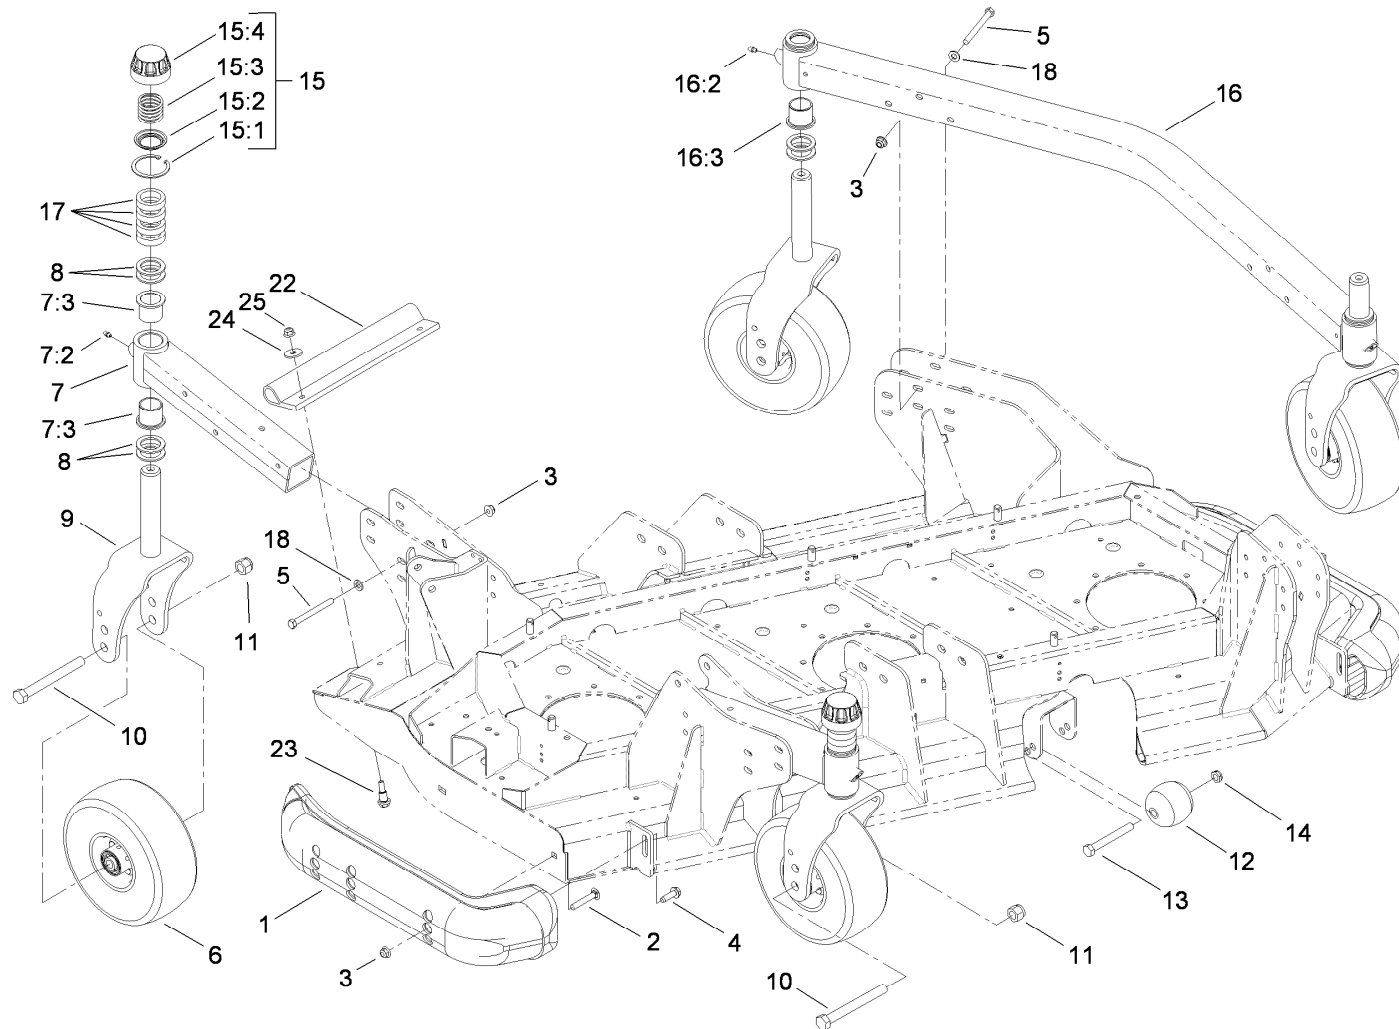 

Left Deck Roller, Skid and Caster Wheel Assembly

Ref.	Part Number	Qty.	Description
1	112-1479	2	Skid-Bumper, Deck
2	3231-33	4	Screw-CARR
3	104-8301	16	Nut-HF, NI
4	9136144	2	Screw-HWHTF
5	323-42	12	Screw-HH
6	93-4240	4	10 Inch Wheel ASM
7	110-6040	2	Castor Arm ASM
7:2	302-5	1	Fitting-Grease
7:3	69-6470	2	Bushing-Caster
8	69-6860	16	Washer-Thrust
9	110-5999-01	4	Castor Fork ASM
10	327-24	4	Screw-HH
11	3296-53	4	Nut-Lock, NI
12	29-4820	2	Roller
13	325-17	2	Screw-HH


Ref.	Part Number	Qty.	Description
14	3296-45	2	Nut-Hex
15	92-9727	4	HOC Cap ASM
15:1	92-5581	1	Ring-Rtng, Snap, Int, Flat
15:2	92-5583	1	Washer-Cap
15:3	92-9726	1	Spring-Compression
15:4	92-8861	1	Cap-HOC
16	114-0953	1	HOC Castor Arm ASM
16:2	302-5	2	Fitting-Grease
16:3	69-6470	4	Bushing-Caster
17	69-1510	16	Spacer
18	3256-24	12	Washer-Plain
22	117-2768	1	Flap-Rubber
23	104-0858	2	Bolt-Shoulder
24	103995	2	Washer
25	104-7201	2	Nut-HF, NI

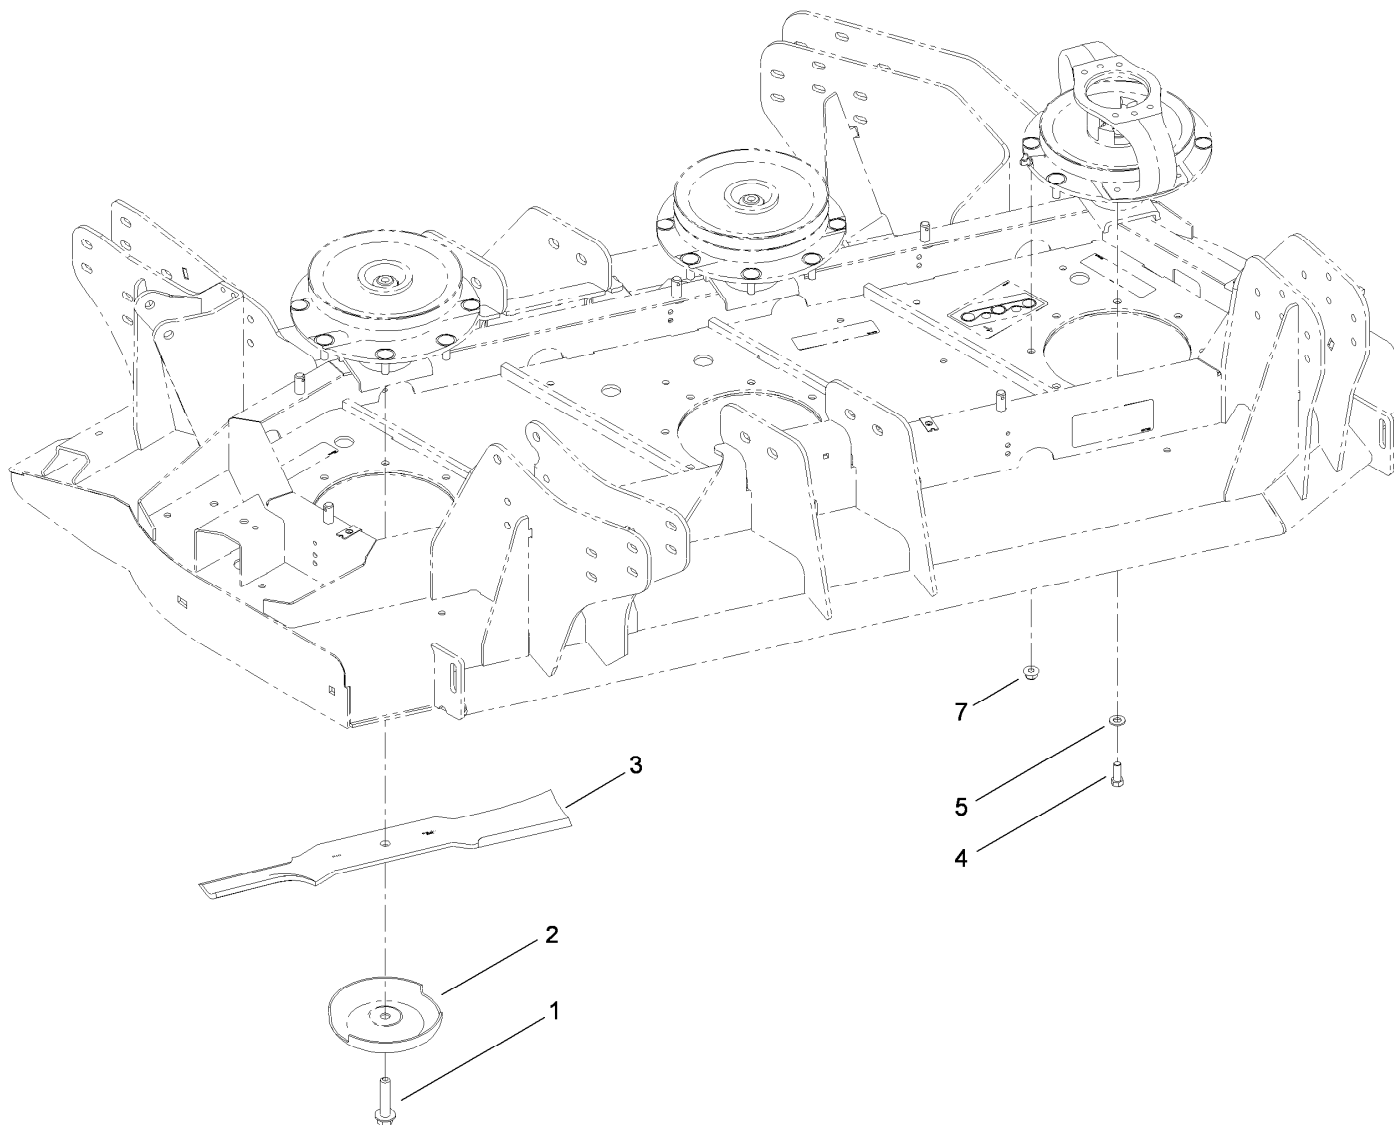 

Left Deck Spindle and Blade Assembly


Ref.	Part Number	Qty.	Description
1	92-5816	3	Bolt-Blade
2	72-9361	3	Cup-Scalp, Anti
3	110-5946-03	3	Blade-Rotary
3	110-5948-03	3	Blade-Rotary, Atomic ●
4	323-6	4	Screw-HH
5	3256-24	4	Washer-Plain
7	104-8301	20	Nut-HF, NI

 ● Not illustrated

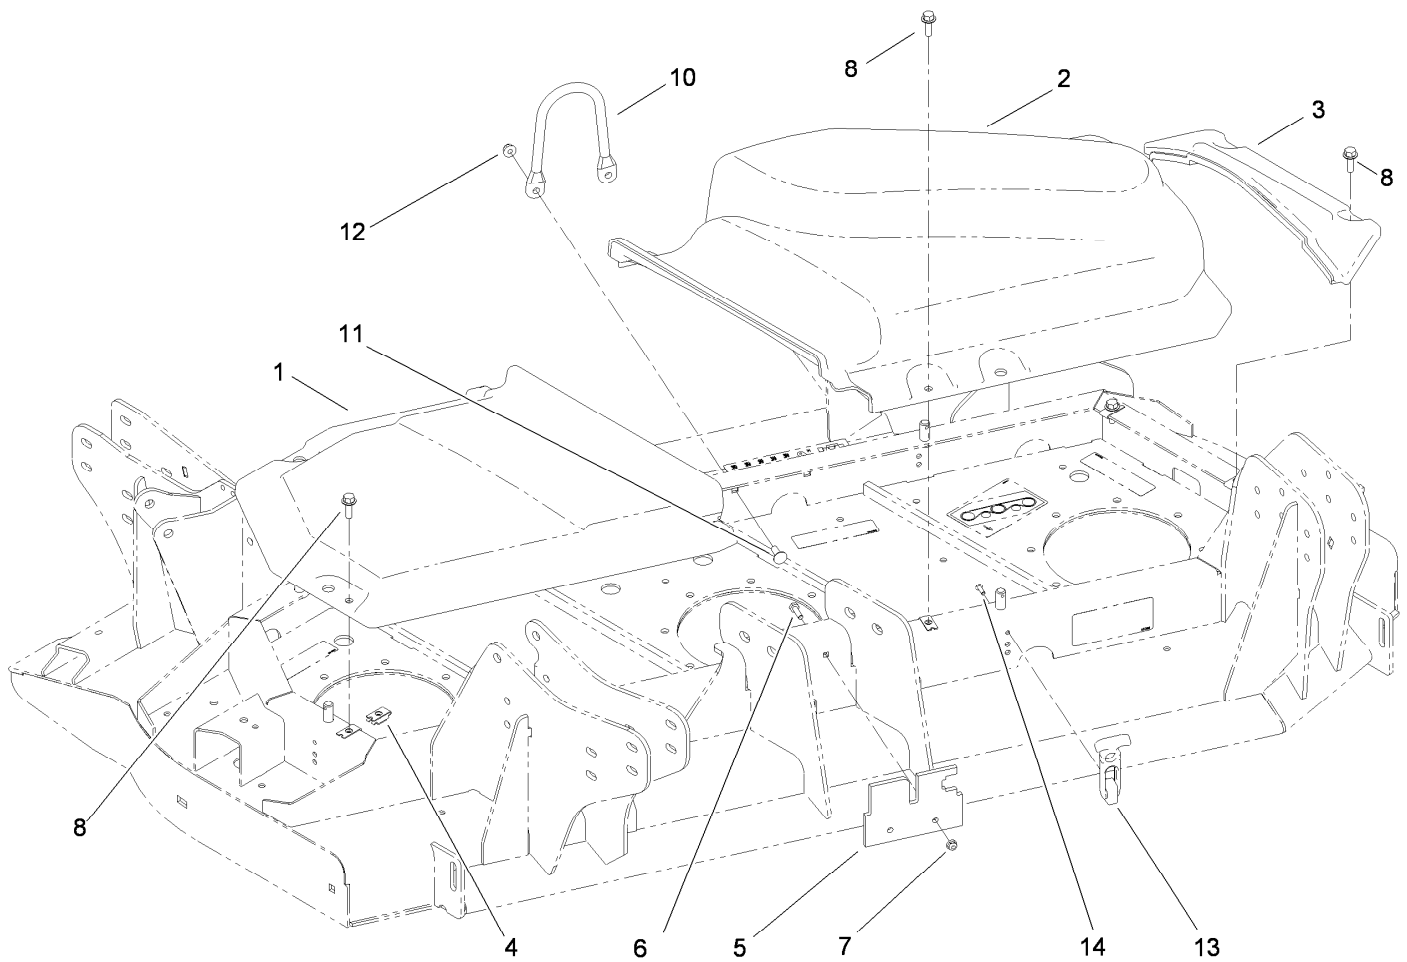


Left Deck Belt Cover Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	114-5633	1	Cover-Deck, LH Wing (Inside)
2	114-5634	1	Cover-Deck, LH Wing (Outside)
3	114-5637	1	Cover-Deck, LH Wing (Fixed)
4	110-3510	4	Nut-Retainer
5	115-3363	1	Deflector-Debris, Side Deck
6	321-5	2	Screw-HH
7	104-7201	2	Nut-HF, NI
8	3234-29	4	Screw-HHF
10	115-3362	1	Guide-Hose
11	3230-10	2	Bolt-CARR
12	104-8300	2	Nut-HF, NI
13	103-4080	4	Latch-Rubber
14	3274-39	8	Screw-HSBH

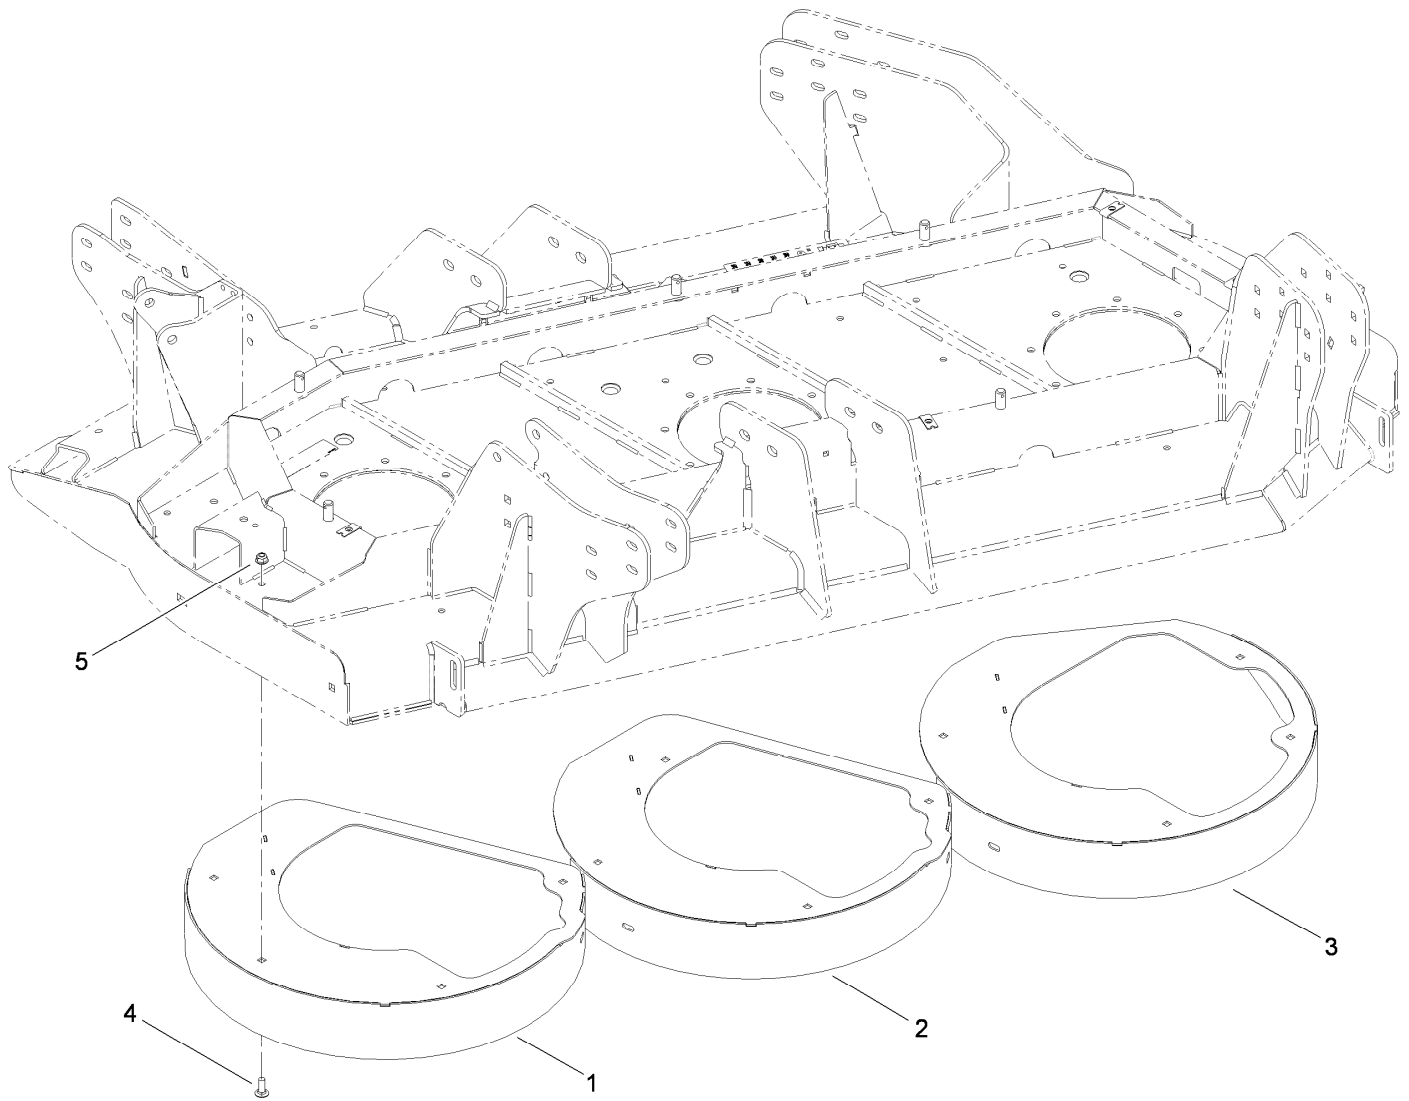 


Left Deck Chamber Assembly

Ref.	Part Number	Qty.	Description
1	115-2107-01	1	Chamber-Inner, Left Deck
2	115-2106-01	1	Chamber-Center, Left Deck
3	115-2105-01	1	Chamber-Outer, Left Deck
4	3230-10	12	Bolt-CARR
5	104-8300	12	Nut-HF, NI

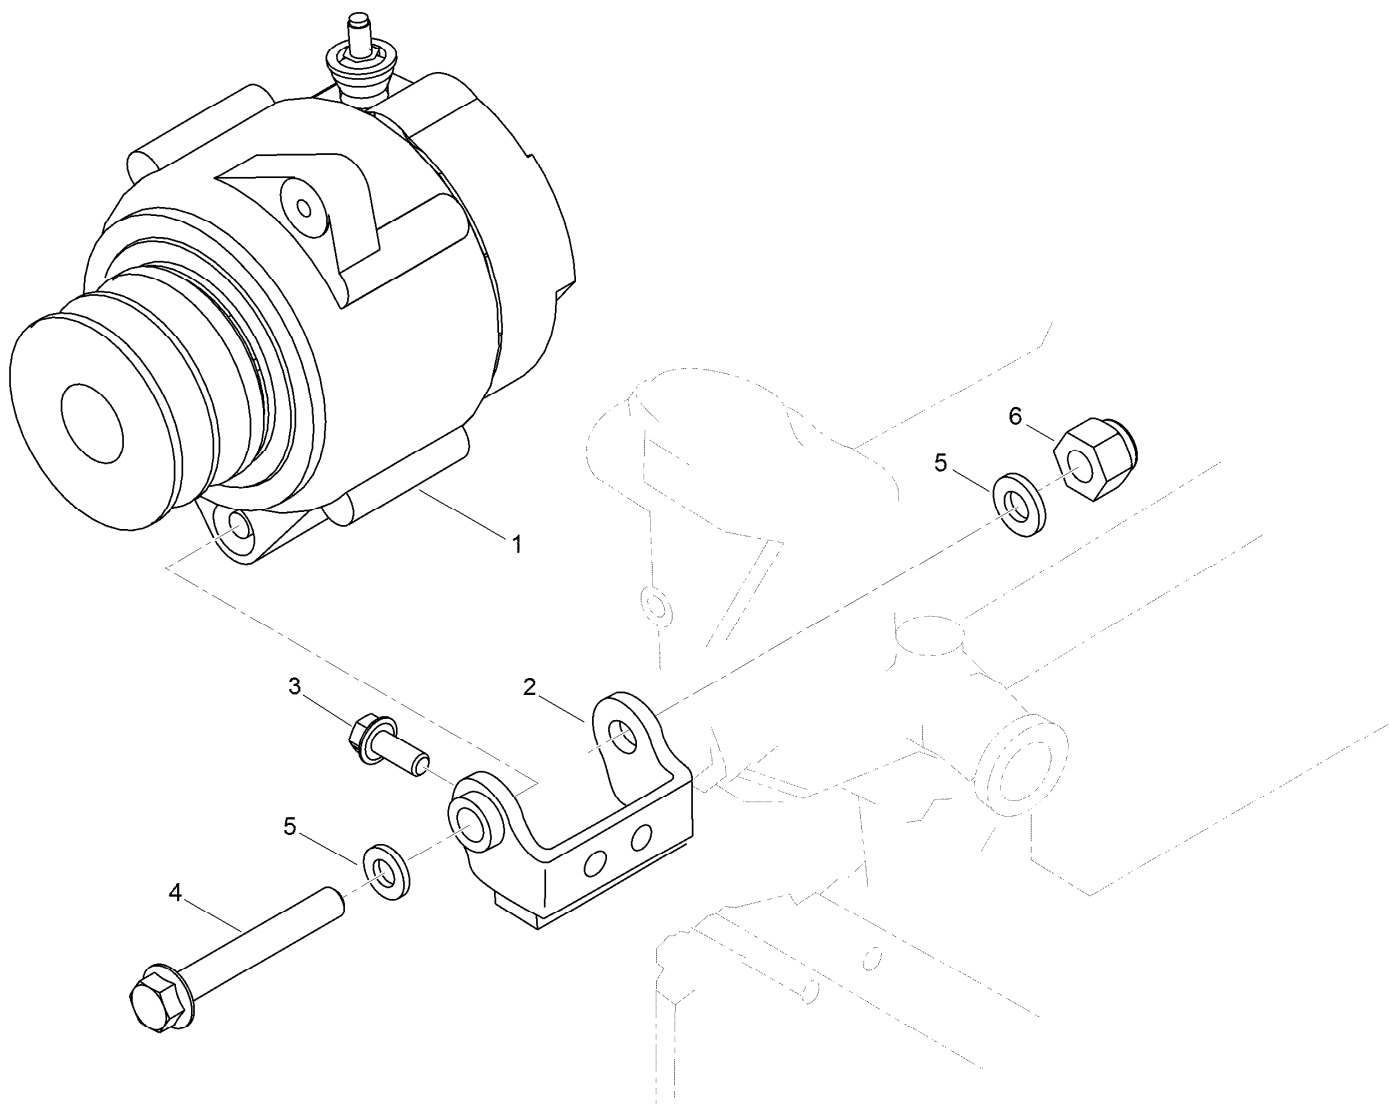 


Engine Alternator Assembly

Ref.	Part Number	Qty.	Description
1	117-5419	1	Alternator
2	115-8851	1	Bracket-Alternator
3	117-5401	2	Screw-Flange, HH
4	117-5400	1	Screw-Flange, HH
5	117-5403	2	Washer-Bevel
6	117-5402	1	Nut-HH

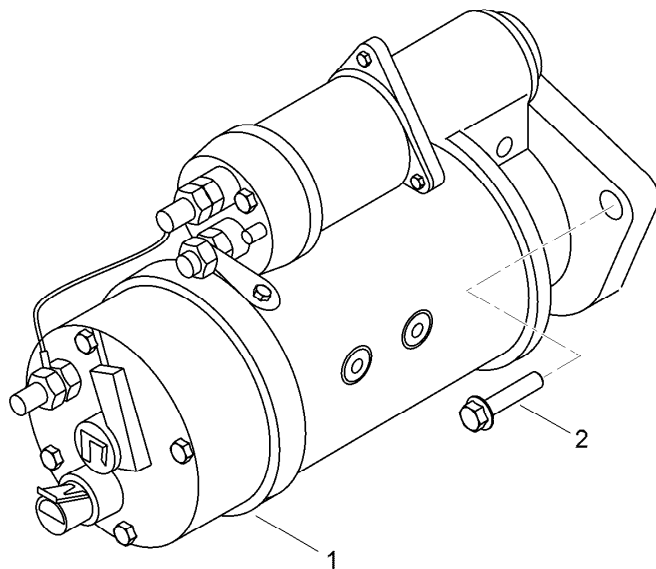 


Engine Starter Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	115-8861	1	Starter
2	117-5404	2	Screw-Mounting, Starter

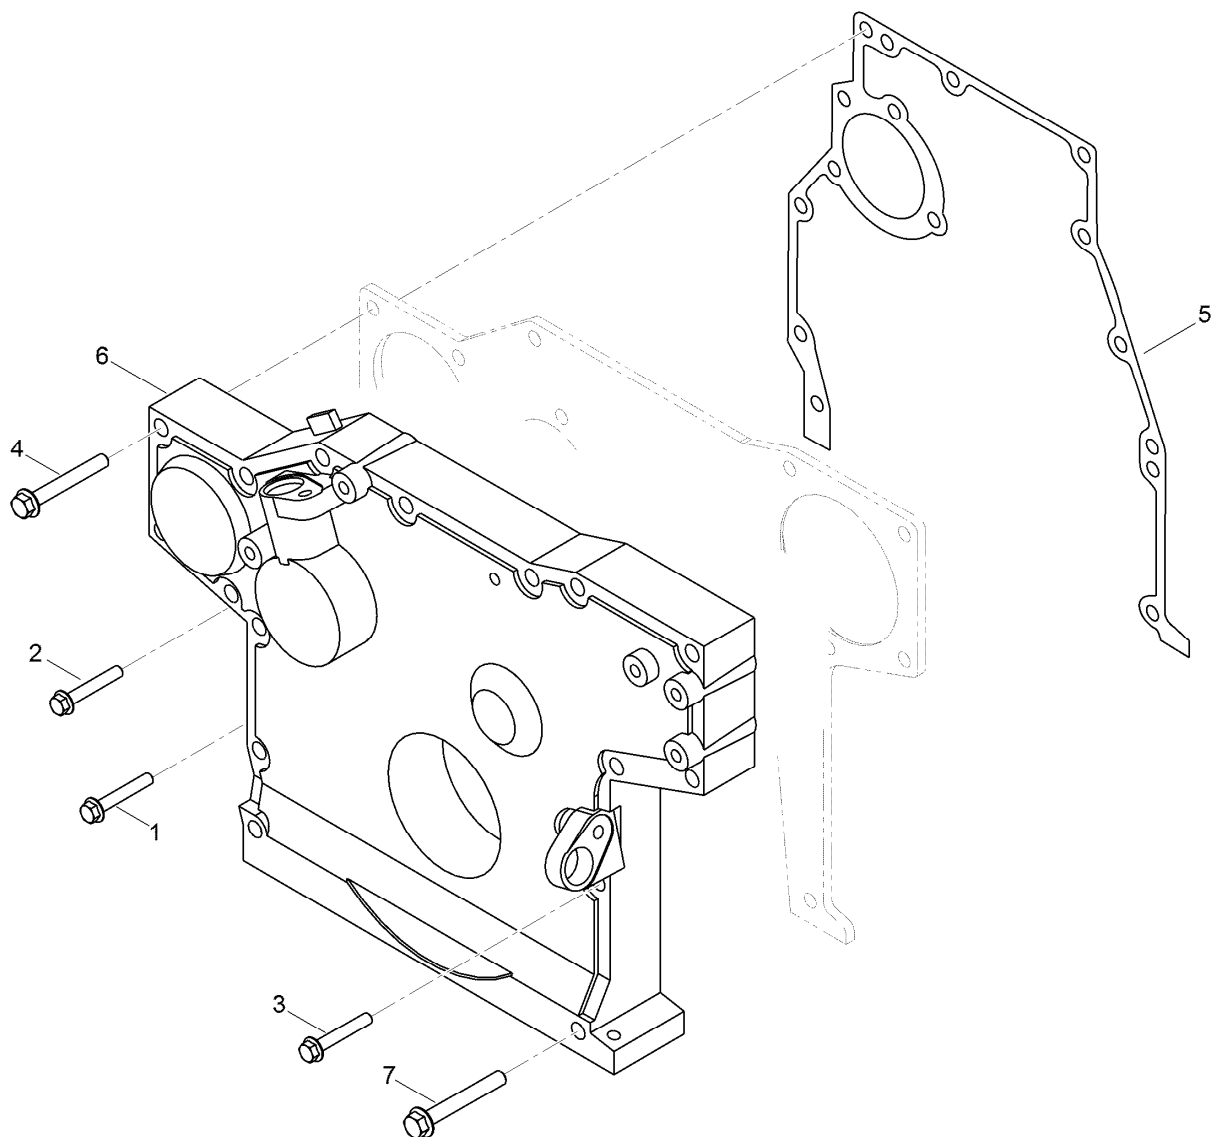 

Engine Gear Case Front Cover Assembly


Ref.	Part Number	Qty.	Description
1	117-5405	2	Screw-Flange, HH
2	117-5406	2	Screw-Flange, HH
3	117-5407	6	Screw-Flange, HH
4	117-5408	8	Screw-Flange, HH
5	117-5423	1	Gasket-Cover, Front
6	117-5421	1	Cover-Front
7	117-5409	2	Screw-Flange, HH

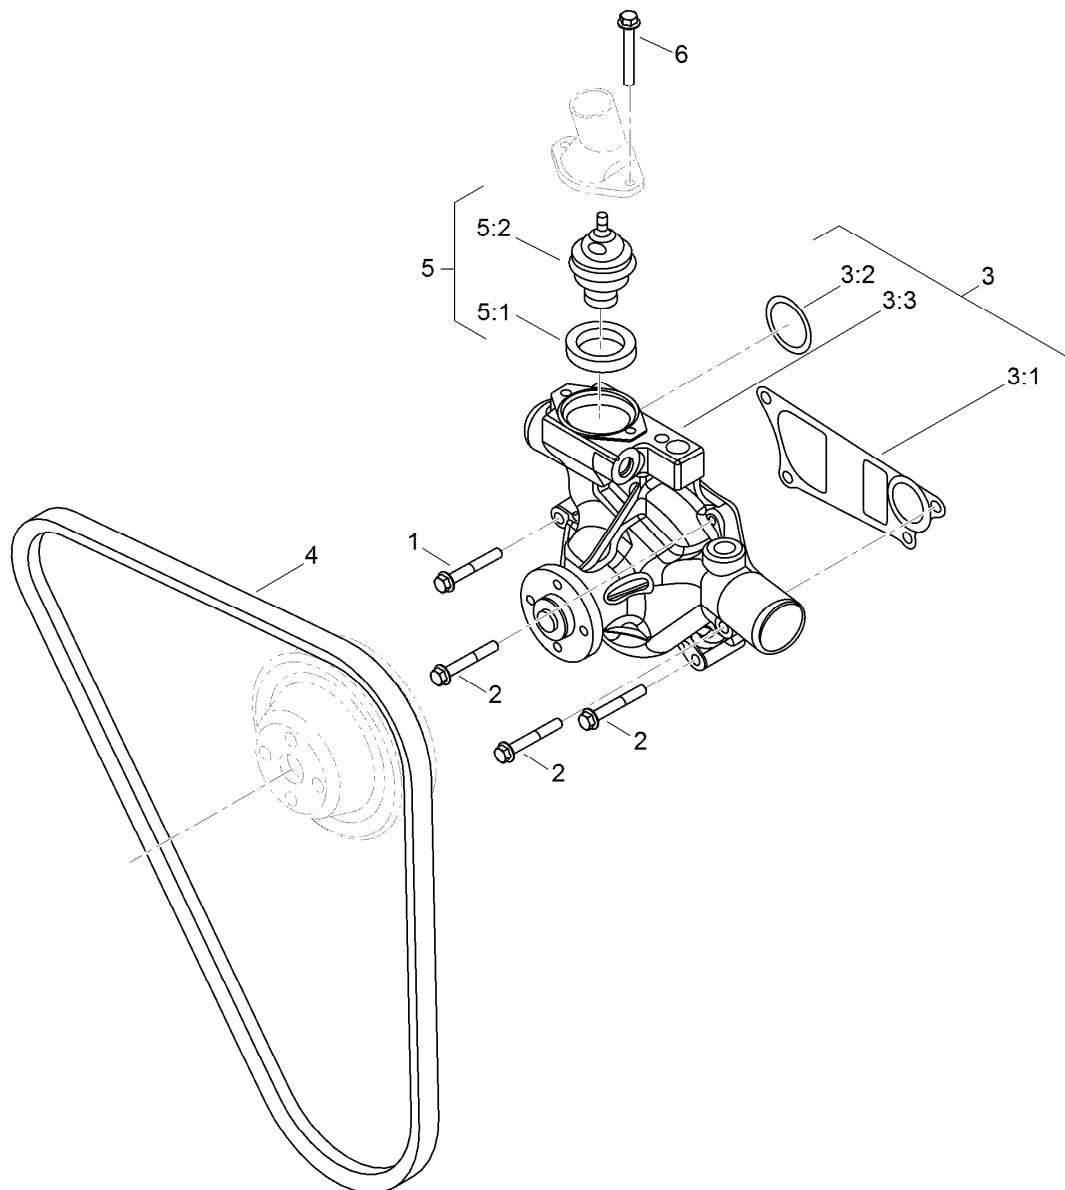 

Engine Water Pump and Thermostat Assembly


Ref.	Part Number	Qty.	Description
1	117-5412	1	Screw-Flange, HH
2	117-5407	3	Screw-Flange, HH
3	117-5426	1	Water Pump Kit
3:1	115-8857	1	Gasket-Pump, Water
3:2	117-5411	1	O Ring-Seal
3:3		1	Water Pump ●
4	117-5420	1	Belt-V, Ribbed
5	115-8860	1	Thermostat Kit
5:1	117-5414	1	Gasket-Connection
5:2		1	Thermostat ●
6	117-5406	2	Screw-Flange, HH

 ● Not serviced separately

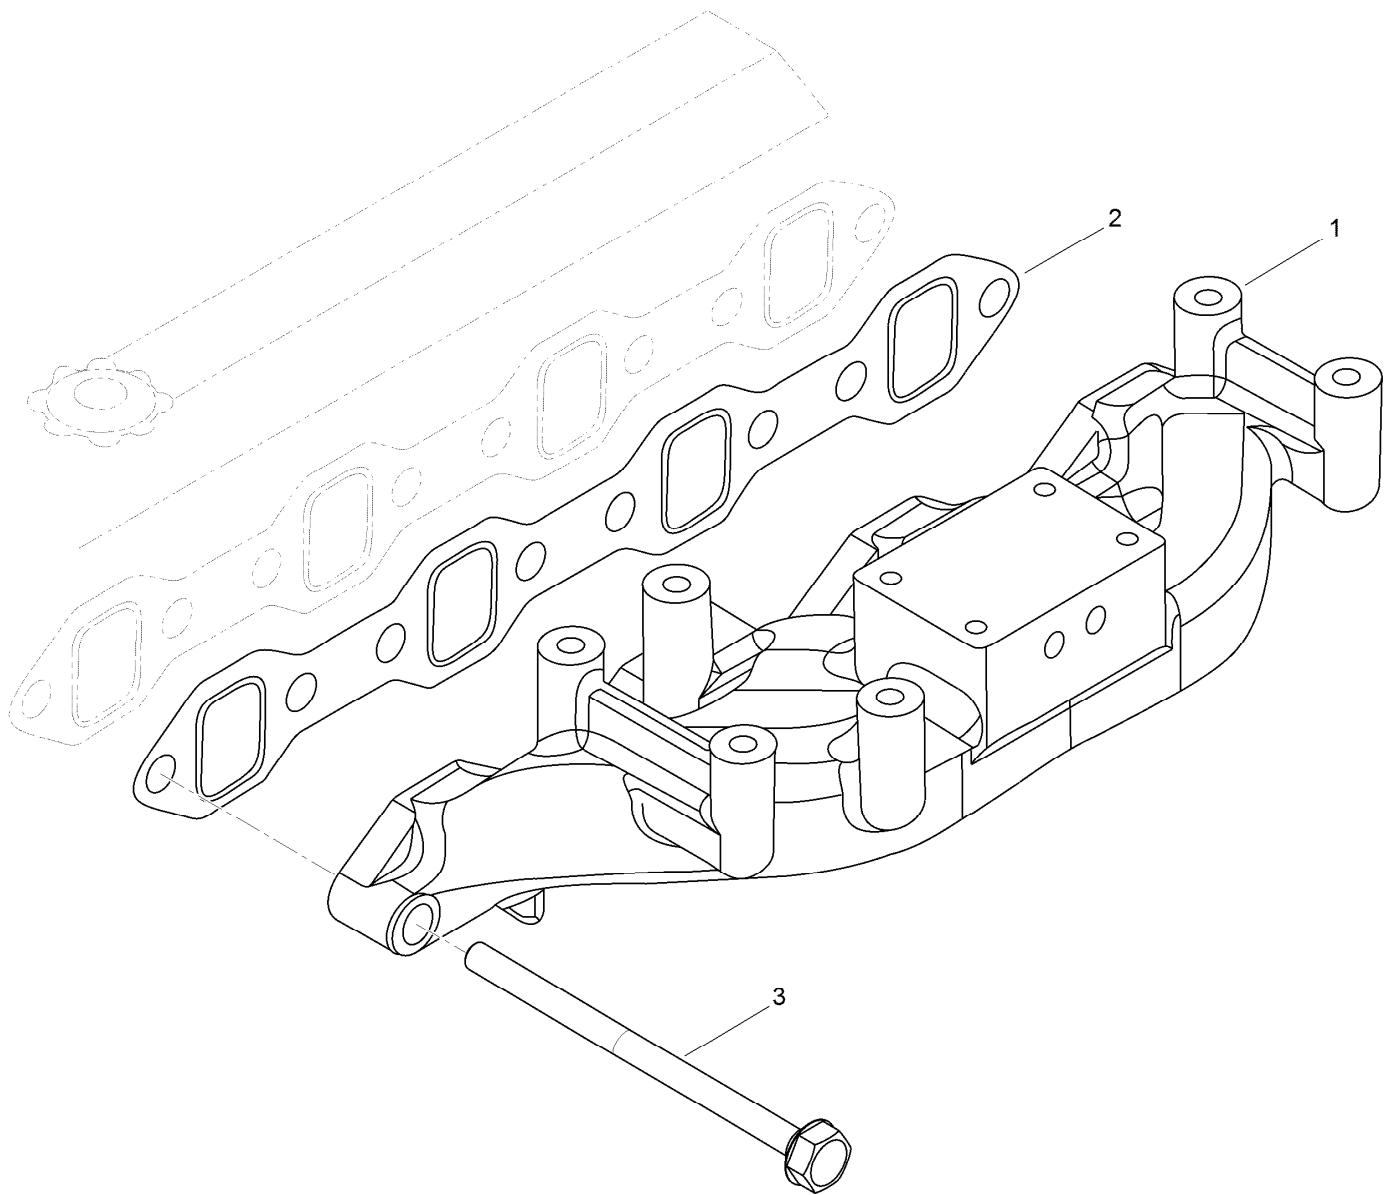


Engine Exhaust Manifold Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	117-5425	1	Manifold-Exhaust
2	115-8855	1	Gasket-Manifold, Exhaust
3	117-5410	8	Screw-Flange, HH

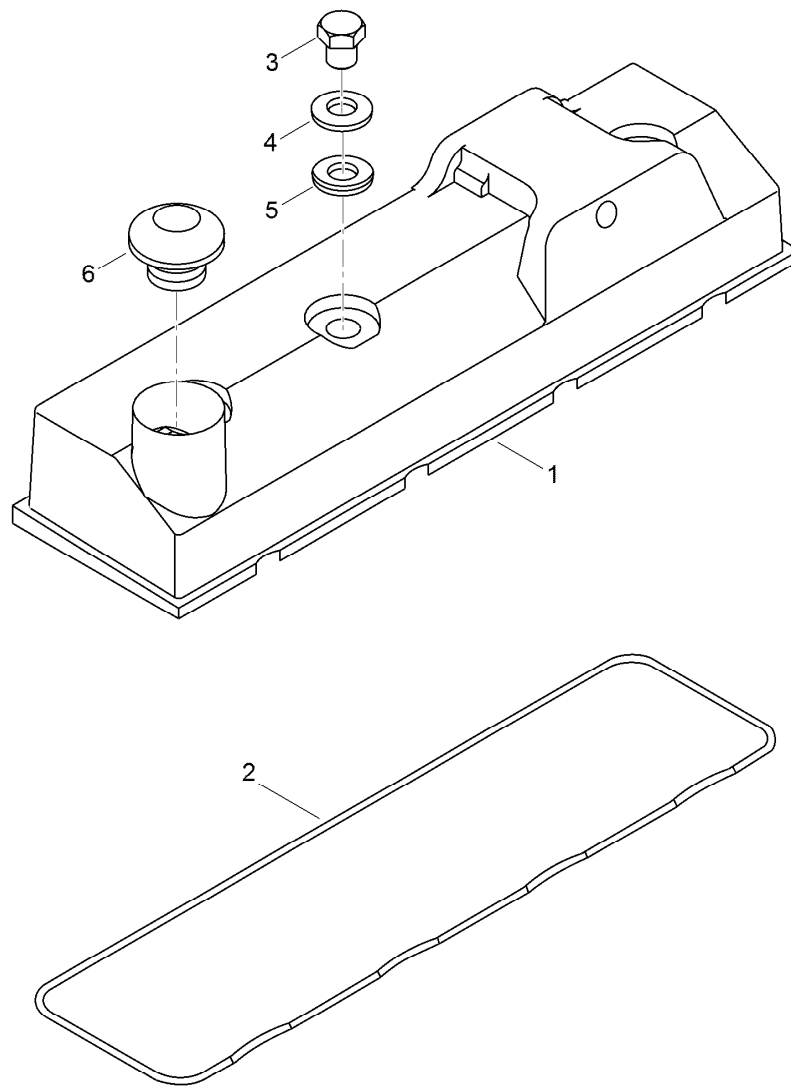 


Engine Valve Cover Assembly

Ref.	Part Number	Qty.	Description
1	117-5427	1	Cover-Valve
2	117-5428	1	O Ring-Seal
3	117-5417	3	Nut-Lock
4	117-5415	3	Washer-Plain
5	117-5416	3	Isolator-Noise
6	117-5429	1	Cap-Filler

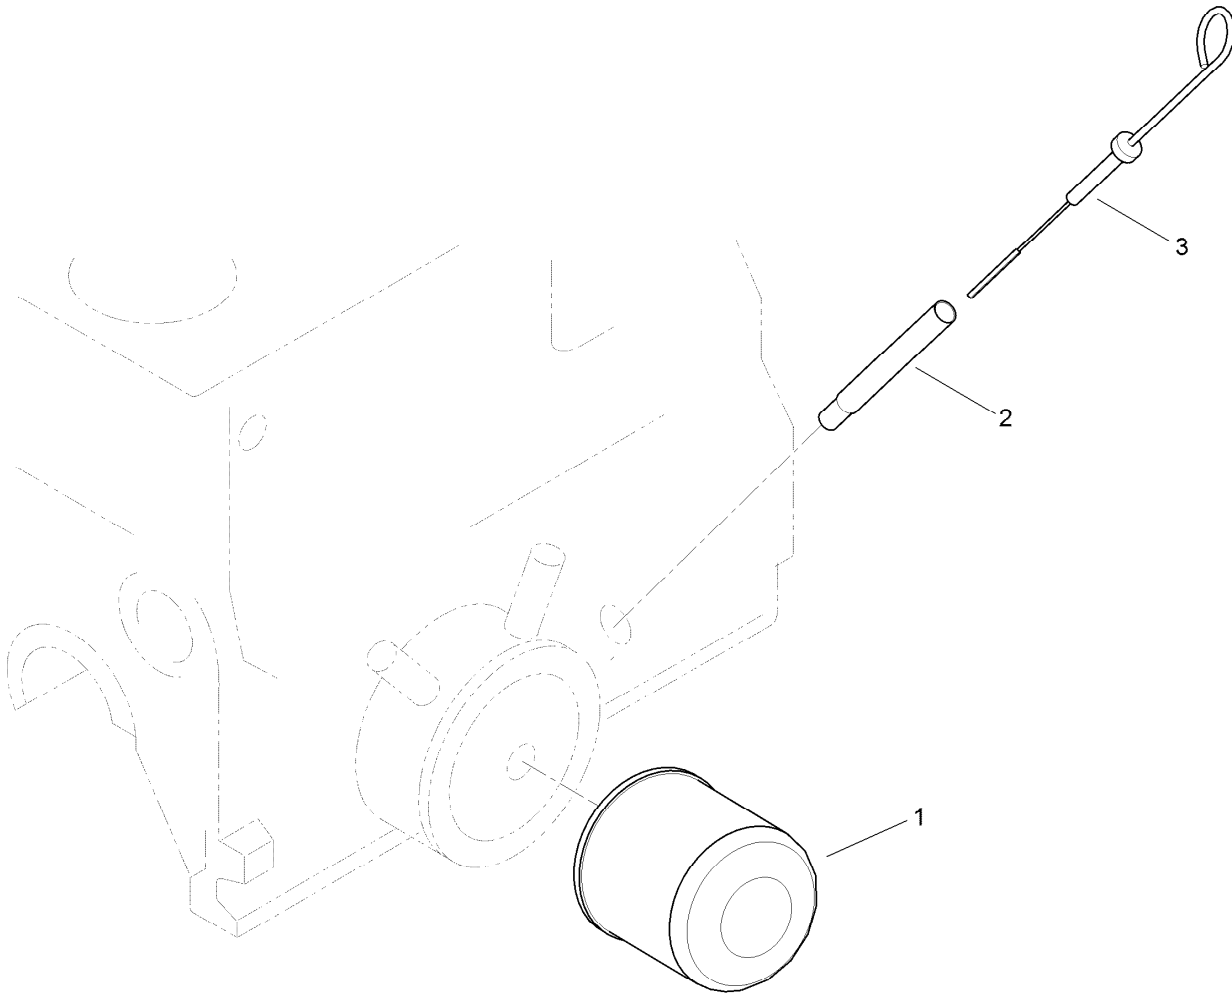 

Engine Oil Filter and Dipstick Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	115-8868	1	Filter-Oil, Engine
2	117-5424	1	Tube-Dipstick
3	117-5422	1	Dipstick

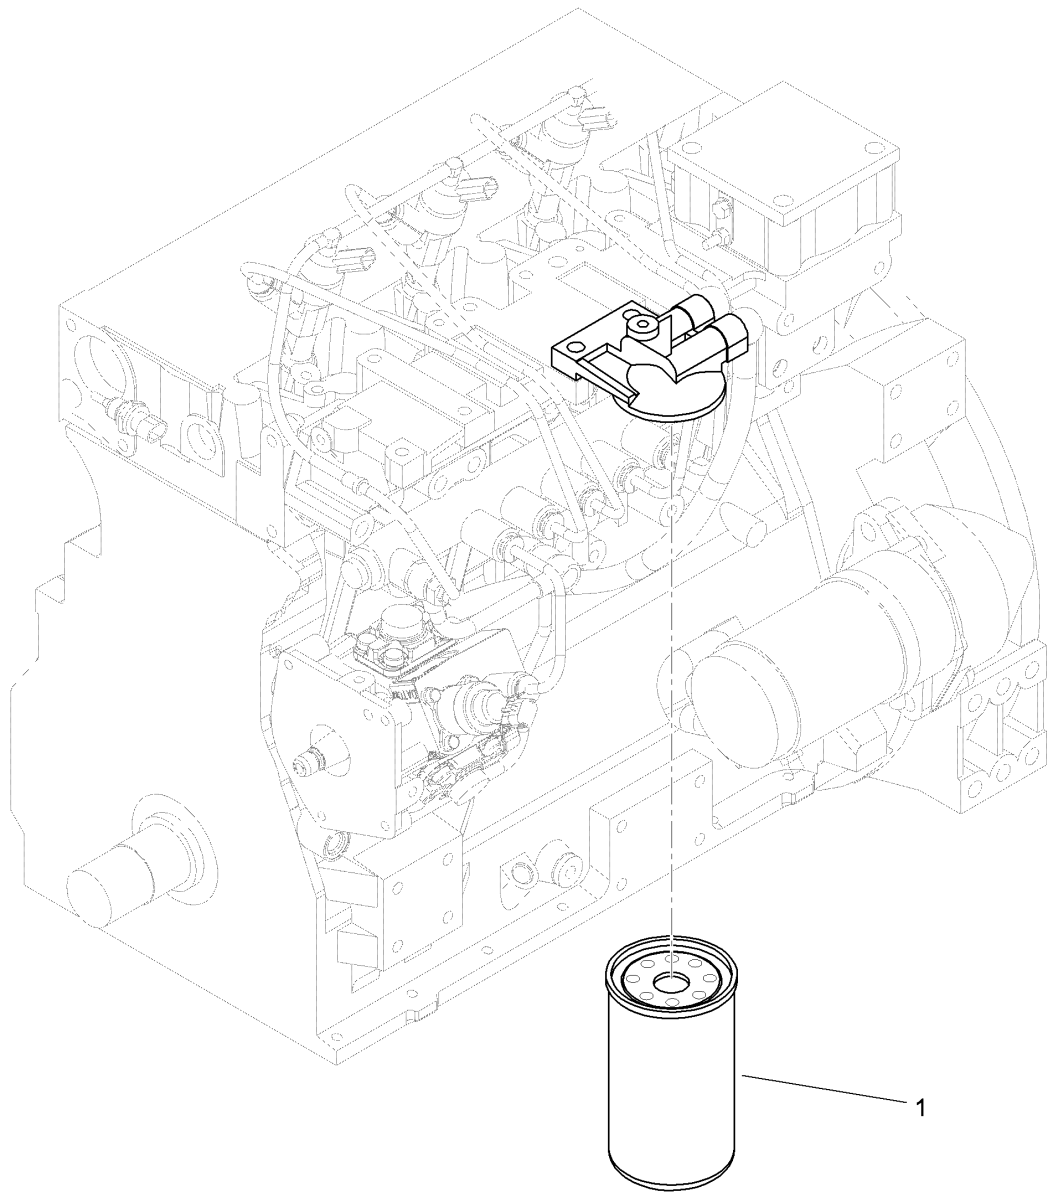 

Engine Fuel Filter Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	117-2792	1	Filter-Fuel

Attachments and Accessories

For 31598 Groundsmaster 5900/5910 Rotary Mower

Product Name	Model/Part
12 Volt Battery	106-5190
Premium All Season Hydraulic Fluid (55 Gallon Drum)	108-1177
Premium All Season Hydraulic Fluid (5 Gallon Pail)	108-1178
Premium Heavy Duty All Season Gear Lube (Pail)	108-1188
Premium All Purpose Grease (Tube)	108-1190
Premium Heavy Duty All Season Gear Lube (Quart)	108-1591
Atomic Blade Kit	114-0897
Fuel/Water Separator Element	115-5471
Engine Oil Filter	115-8868
Filter-Engine, Air Safety	115-8877
Filter-Engine, Air Primary	115-8887
Standard Blade Kit	115-8896
Blade and Belt Kit	115-8898
Fuel Filter	117-2792
Tall Grass Kit	117-2795
Extension Kit for 2-Post ROPS	117-9430
Windscreen Kit	117-9440
CE Kit (For 2010 models and Up)	117-9449
Vinyl Backrest Extension Kit	119-7718
Beacon Kit	119-8256
Flat Blade Kit	119-8268
Registration Plate and Light Kit	120-7570
Breather Kit	120-9895
Cab Interior Air Filter	121-3891
Cab Exterior Air Filter	121-3892
Premium Engine Oil 15w40 (55 Gallon Drum)	121-6394
Premium Engine Oil 15w40 (5 Gallon Pail)	121-6395
MVP Filter Kit	30041
Universal Sunshade	30349
Leaf Mulching Kit	31581
Light Kit	31582
Center Replacement Deck	31591
Right Replacement Deck	31592
Left Replacement Deck	31593
Hydraulic Filter	75-1310
Hydraulic Filter	86-6110
Fuse Block	92-2641
10in Foam Filled Castor Wheel	93-5973

For 31598TE Groundsmaster 5900/5910 Rotary Mower

Product Name	Model/Part
12 Volt Battery	106-5190
Premium All Season Hydraulic Fluid (55 Gallon Drum)	108-1177
Premium All Season Hydraulic Fluid (5 Gallon Pail)	108-1178

Attachments and Accessories (continued)

Premium Heavy Duty All Season Gear Lube (Pail)	108-1188
Premium All Purpose Grease (Tube)	108-1190
Premium Heavy Duty All Season Gear Lube (Quart)	108-1591
Atomic Blade Kit	114-0897
Fuel/Water Separator Element	115-5471
Engine Oil Filter	115-8868
Filter-Engine, Air Safety	115-8877
Filter-Engine, Air Primary	115-8887
Standard Blade Kit	115-8896
Blade and Belt Kit	115-8898
Fuel Filter	117-2792
Tall Grass Kit	117-2795
Extension Kit for 2-Post ROPS	117-9430
Windscreen Kit	117-9440
CE Kit (For 2010 models and Up)	117-9449
Vinyl Backrest Extension Kit	119-7718
Beacon Kit	119-8256
Flat Blade Kit	119-8268
Registration Plate and Light Kit	120-7570
Breather Kit	120-9895
Cab Interior Air Filter	121-3891
Cab Exterior Air Filter	121-3892
Premium Engine Oil 15w40 (55 Gallon Drum)	121-6394
Premium Engine Oil 15w40 (5 Gallon Pail)	121-6395
MVP Filter Kit	30041
Universal Sunshade	30349
Leaf Mulching Kit	31581
Light Kit	31582
Center Replacement Deck	31591
Right Replacement Deck	31592
Left Replacement Deck	31593
Hydraulic Filter	75-1310
Hydraulic Filter	86-6110
Fuse Block	92-2641
10in Foam Filled Castor Wheel	93-5973

For 31599 Groundsmaster 5900/5910 Rotary Mower

Product Name	Model/Part
12 Volt Battery	106-5190
Premium All Season Hydraulic Fluid (55 Gallon Drum)	108-1177
Premium All Season Hydraulic Fluid (5 Gallon Pail)	108-1178
Premium Heavy Duty All Season Gear Lube (Pail)	108-1188
Premium All Purpose Grease (Tube)	108-1190
Premium Heavy Duty All Season Gear Lube (Quart)	108-1591
Atomic Blade Kit	114-0897
Work Light Kit	114-5610
Fuel/Water Separator Element	115-5471
Engine Oil Filter	115-8868

Attachments and Accessories (continued)

Filter-Engine, Air Safety	115-8877
Filter-Engine, Air Primary	115-8887
Standard Blade Kit	115-8896
Blade and Belt Kit	115-8898
Fuel Filter	117-2792
Tall Grass Kit	117-2795
CE Kit (For 2010 models and Up)	117-9449
Backrest Extension Kit	119-7719
Beacon Kit	119-8256
Flat Blade Kit	119-8268
Registration Plate and Light Kit	120-7570
Breather Kit	120-9895
Cab Interior Air Filter	121-3891
Cab Exterior Air Filter	121-3892
Premium Engine Oil 15w40 (55 Gallon Drum)	121-6394
Premium Engine Oil 15w40 (5 Gallon Pail)	121-6395
MVP Filter Kit	30041
Leaf Mulching Kit	31581
Light Kit	31582
Center Replacement Deck	31591
Right Replacement Deck	31592
Left Replacement Deck	31593
Hydraulic Filter	75-1310
Hydraulic Filter	86-6110
Fuse Block	92-2641
10in Foam Filled Castor Wheel	93-5973

For 31599TE Groundsmaster 5900/5910 Rotary Mower

Product Name	Model/Part
TÜV Kit - Speed Decal 20kph	02980
TÜV Kit - German Vehicle Serial Plate	02983
Cutting Unit Cover Kit, Groundsmaster 5900 Series Rotary Mower	02985
12 Volt Battery	106-5190
Premium All Season Hydraulic Fluid (55 Gallon Drum)	108-1177
Premium All Season Hydraulic Fluid (5 Gallon Pail)	108-1178
Premium Heavy Duty All Season Gear Lube (Pail)	108-1188
Premium All Purpose Grease (Tube)	108-1190
Premium Heavy Duty All Season Gear Lube (Quart)	108-1591
Warning Triangle	111-4250
Atomic Blade Kit	114-0897
Work Light Kit	114-5610
Fuel/Water Separator Element	115-5471
Engine Oil Filter	115-8868
Filter-Engine, Air Safety	115-8877
Filter-Engine, Air Primary	115-8887
Standard Blade Kit	115-8896
Blade and Belt Kit	115-8898
Fuel Filter	117-2792

Attachments and Accessories (continued)

Tall Grass Kit.....	117-2795
CE Kit (For 2010 models and Up)	117-9449
Backrest Extension Kit.....	119-7719
Beacon Kit	119-8256
Flat Blade Kit	119-8268
Wire Harness and Tail Light Fuse	120-6332
Registration Plate and Light Kit.....	120-7570
Breather Kit.....	120-9895
Cab Interior Air Filter.....	121-3891
Cab Exterior Air Filter.....	121-3892
Premium Engine Oil 15w40 (55 Gallon Drum)	121-6394
Premium Engine Oil 15w40 (5 Gallon Pail)	121-6395
MVP Filter Kit.....	30041
Leaf Mulching Kit	31581
Light Kit.....	31582
Center Replacement Deck.....	31591
Right Replacement Deck	31592
Left Replacement Deck	31593
Hydraulic Filter.....	75-1310
Hydraulic Filter.....	86-6110
Fuse Block	92-2641
10in Foam Filled Castor Wheel.....	93-5973

Notes:

Notes:

Notes:



Count on it.