




MODEL NO. 57356 — 3000001 & UP
MODEL NO. 57357 — 3000001 & UP

PARTS CATALOG

1142 LAWN TRACTOR

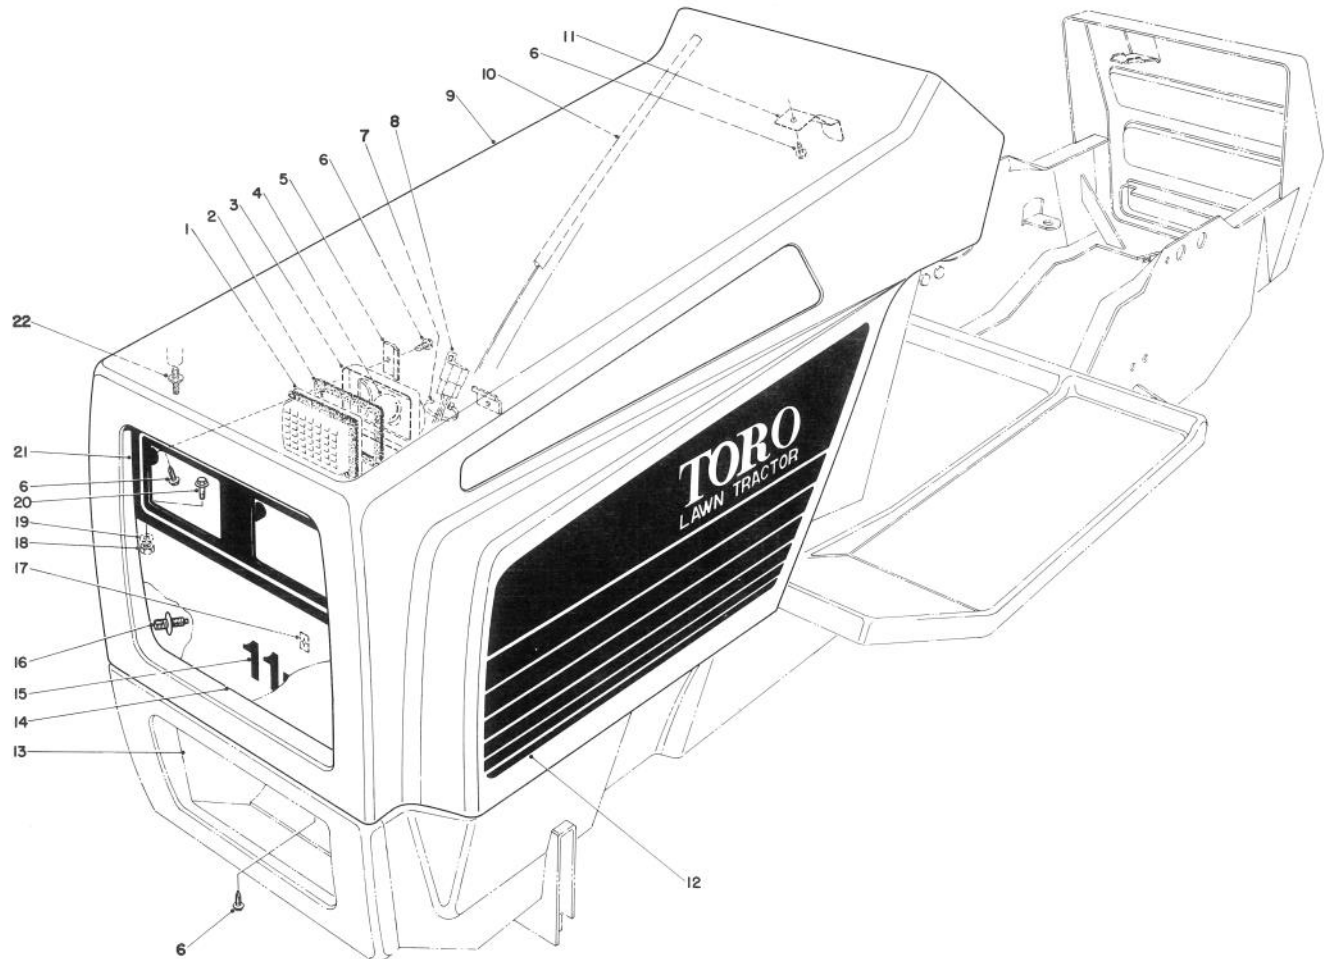


HOOD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	219-14	Lens	2
2	219-13	Lens Gasket	4
3	38-2580	Reflector Assembly	2
4		Bulb GE #1156	2
5	28-0050	Clamp Headlight	3
6	32104-76	Self Tapping Screw	12
7	3290-378	Cable Tie	1
8	218-493	Connector Body	1
9	8-6679	Hood (Incl. Ref. #15 & 21)	1
10	28-3810	Rubber Extrusion Seal	2
11	27-9130	Spring Latch	1
12	47-5170	Decal — Hood L.H.	1
*	47-5180	Decal — Hood R.H.	1

Ref. No.	Part No.	Description	No. Used
13	28-0010	Grille Lower	1
14	36-2090	Grille Headlight	1
15	36-2660	Name Plate — Grille	1
16	27-9120	Stud Hinge Bracket	4
17	3290-299	Tinnerman Nut	2
18	32153-1	Locknut	2
19	3256-21	Washer	2
20	3290-144	Hex Hd. Machine Screw	2
21	28-0040	Panel Headlight	1
22	39-6800	Stud Hood Duct	4
*	8-3579	Headlight Assy. (Incl. Ref. #1-4)	2


*Not Illustrated

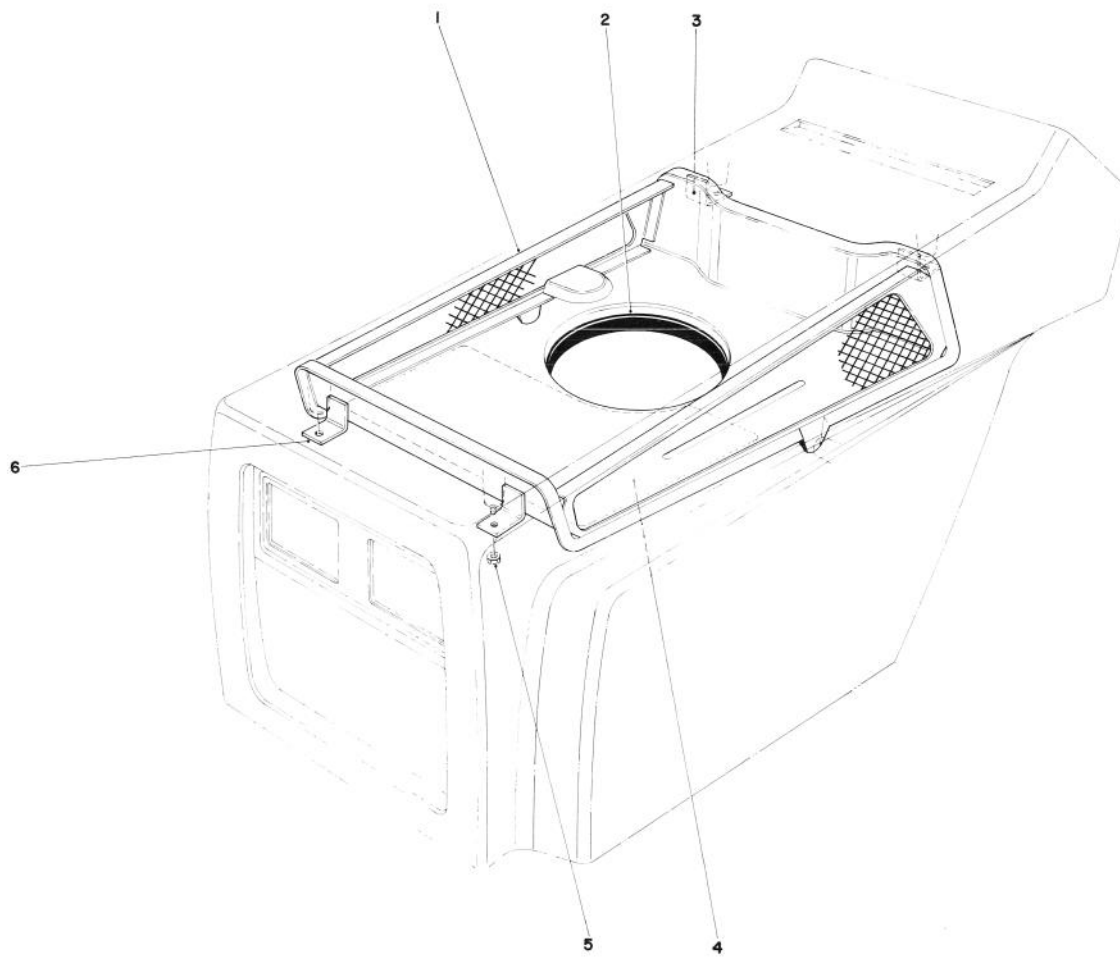

HOOD DUCT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	39-5090	Duct Hood	1
2	36-8160	Seal Engine	1
3	39-8880	Bracket — Duct Support Rear	2

Ref. No.	Part No.	Description	No. Used
4	36-5190	Decal — Service	1
5	32152-4	Locknut	4
6	39-5340	Bracket Duct Support	2

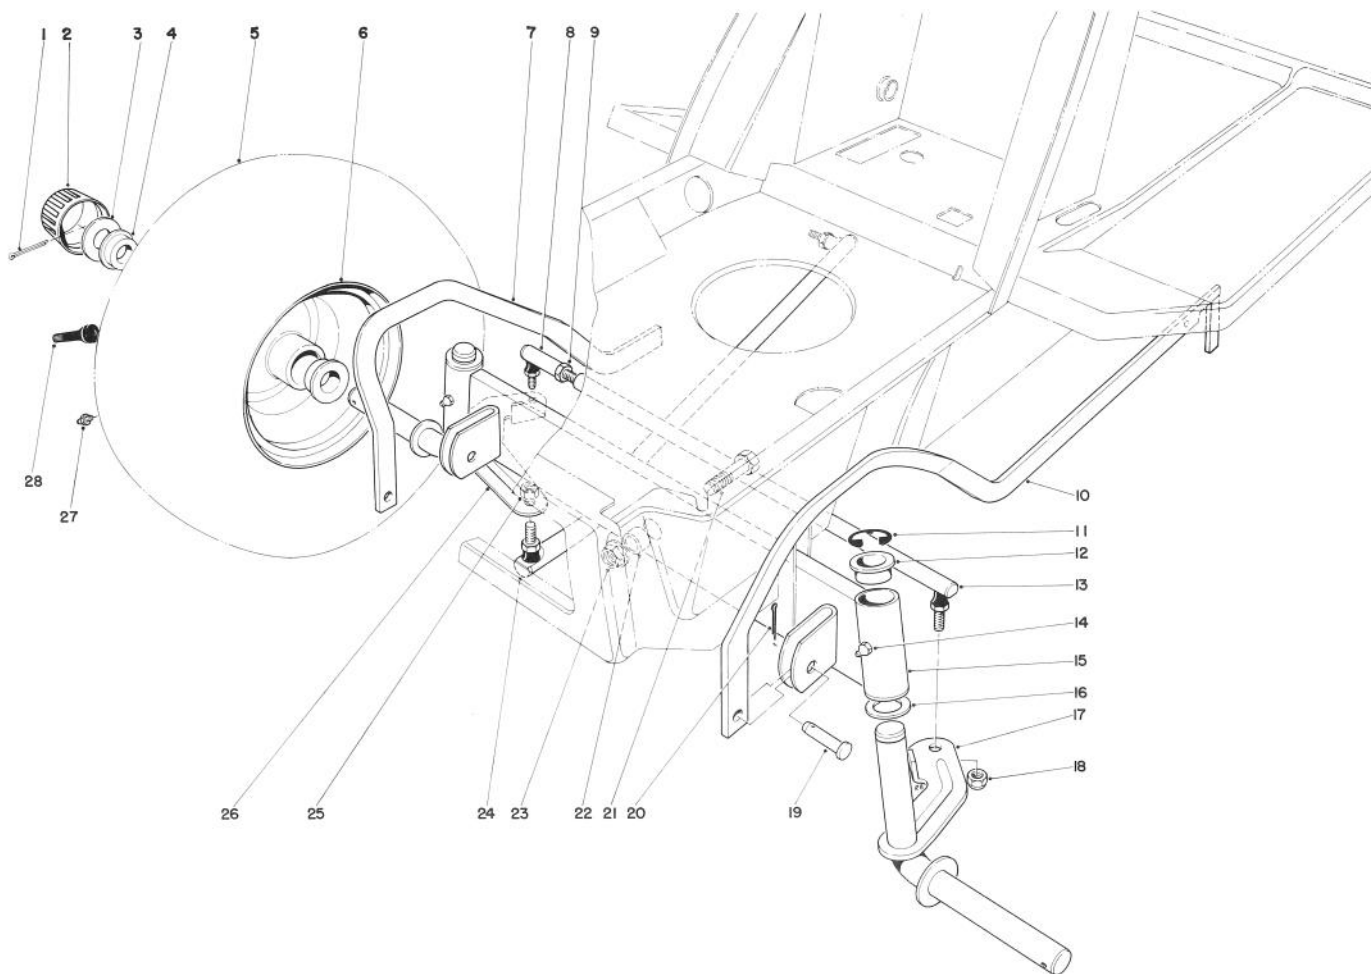


FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3272-12	Cotter Pin	2
2	28-0060	Hub Cap	2
3	28-2480	Washer	2
4	251-210	Ball Bearing	4
5	231-99	Tire	2
6	242-65	Rim	2
7	40-1610	Scissors Link — Front R.H.	1
8	2411-32	Ball Joint	1
9	3220-2	Jam Nut	1
10	40-1620	Scissors Link — Front L.H.	1
11	32151-48	E-Ring	2
12	27-9080	Flange Bearing	4
13	47-5160	Tie Rod Steering	1
14	302-49	Grease Fitting	2
15	36-3420	Front Axle (Incl. Ref. #10)	1

Ref. No.	Part No.	Description	No. Used
16	3-6498	Thrust Washer	2
17	33-3170	Spindle L.H.	1
18	3296-20	Locknut	2
19	283-2	Clevis Pin	2
20	3272-6	Cotter Pin	2
21	325-6	Capscrew	1
22	28-0380	Spacer Front Axle	1
23	32128-23	Flange Nut	1
24	39-1910	Steering Arm	1
25	3296-5	Locknut	1
26	33-3180	Spindle R.H.	1
27	302-22	Grease Fitting	2
28	232-27	Valve Stem w/Cap	2
*	232-39	Tube (Optional)	2

*Not Illustrated

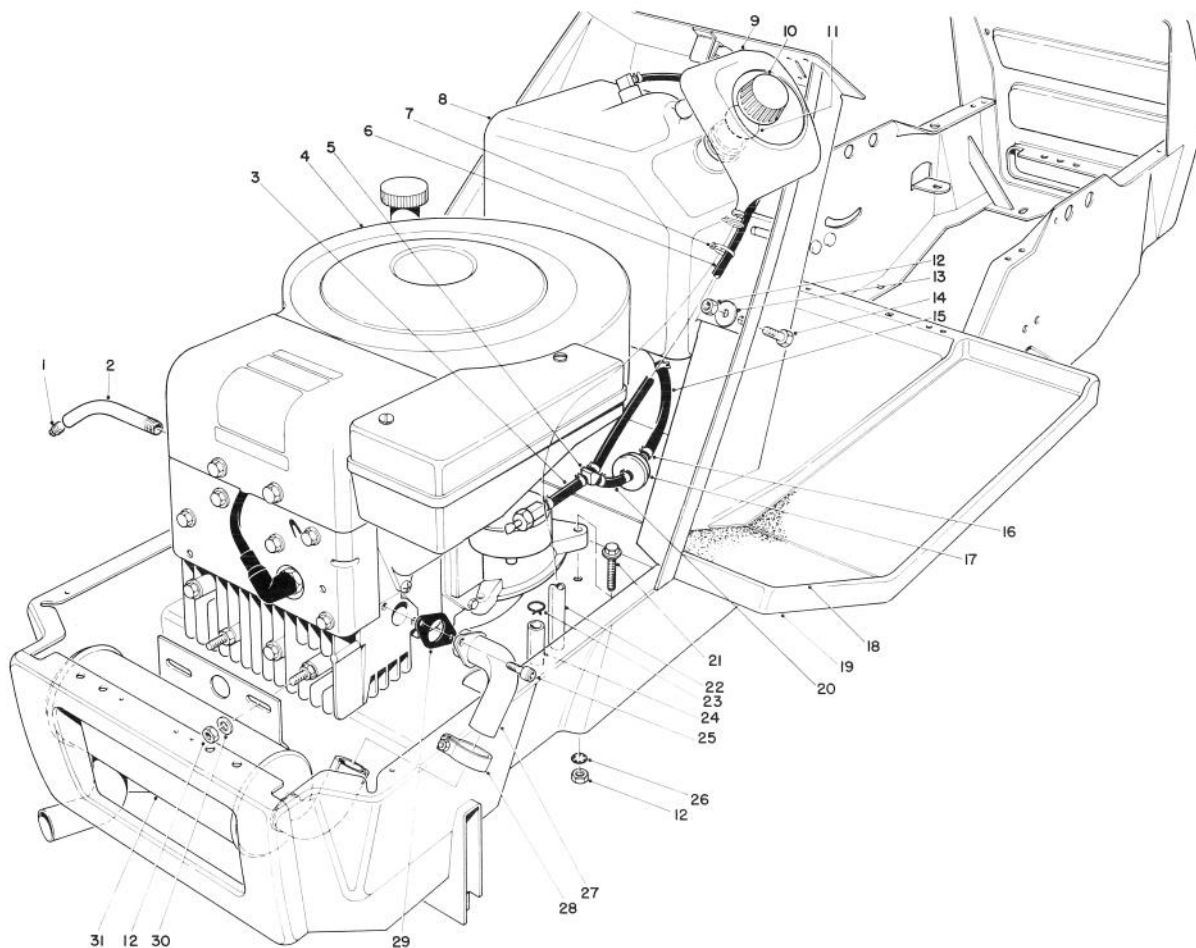


ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	281-1	Pipe Plug	1
2	28-8650	Drain Tube Oil	1
3	47-2970	Hose — Gas	1
4	221-747	Engine	1
5	353-778	Fitting — Barbed Y	1
6	47-2990	Hose — Gas Return	1
7	3290-381	Cable Tie	1
8	44-8240	Gas Tank Assy. (Incl. Ref. #9)	1
9		Funnel — Overflow	1
10	28-9680	Gas Cap Assy. (Incl. Ref. #11)	1
11	28-9670	Gasket — Gas Cap	1
12	32152-1	Locknut	10
13	5-1350	Washer	4
14	322-3	Capscrew	4
15	47-2980	Hose — Gas	1
16	2210-185	Clamp — Hose	8
17	42-5240	Fuel Filter	1
18	27-9050	Foot Tread L.H.	1

Ref. No.	Part No.	Description	No. Used
*	27-9040	Foot Tread R.H.	1
19	44-8130	Frame	1
20	47-2960	Hose — Gas	1
21	322-7	Capscrew	4
22	39-4030	Hose — Funnel	1
23	2412-62	Clamp — Hose	2
24	39-4040	Hose — Carburetor Drain	1
25	3274-53	Hex Socket Hd. Capscrew	2
26	3254-2	Lockwasher	4
27	28-0290	Exhaust Pipe	1
28	23-7760	Clamp — Exhaust Pipe	1
29†		Exhaust Gasket	1
30	3256-23	Washer	2
31	28-0300	Muffler	1
*	3290-378	Cable Tie	2
*	36-7890	Muffler — Spark Arrester (Optional)	1
*	11-4619	Loose Parts	1

*Not Illustrated


†Obtain from local Briggs & Stratton dealer.

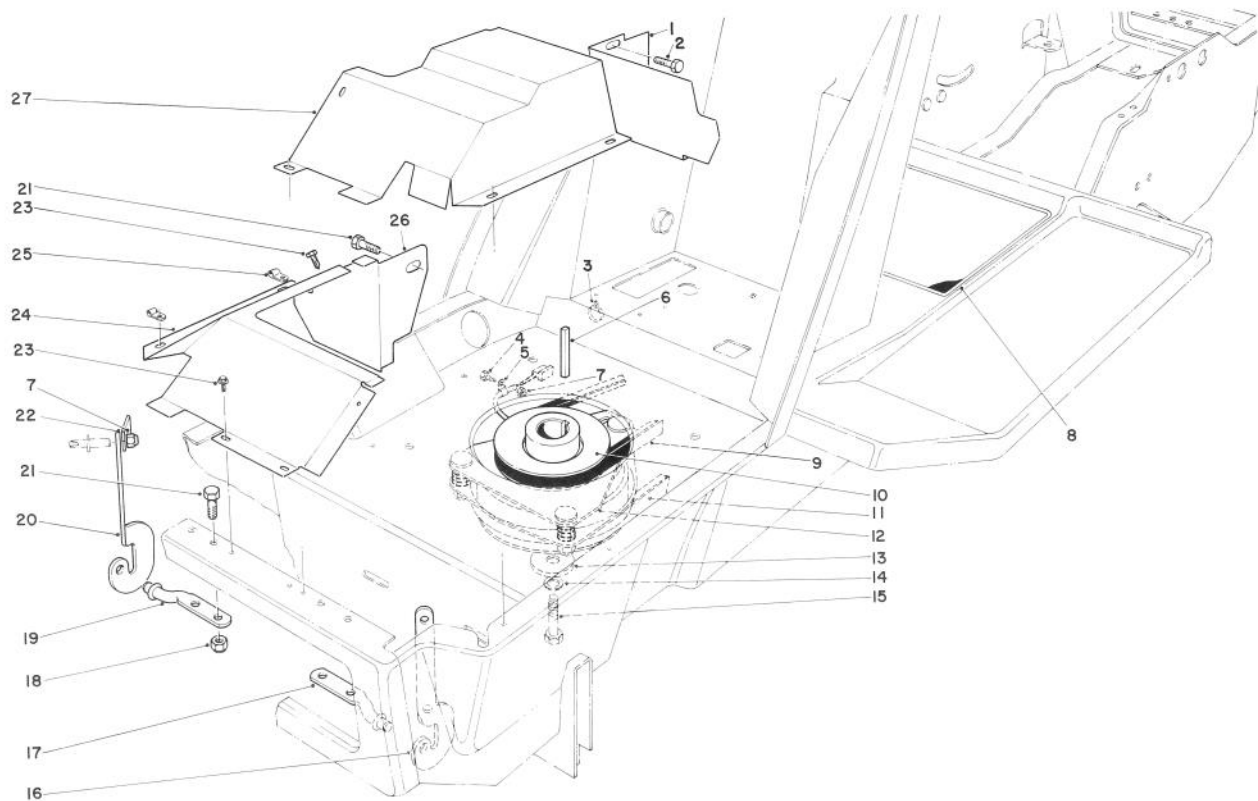

CLUTCH & PULLEY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	28-3990	Support — Exhaust Shield	1
2	321-3	Capscrew	1
3	3290-410	Push Mount Tie	1
4	321-4	Capscrew	1
5	2412-66	Clamp	1
6	5-1336	Square Key	1
7	32152-4	Locknut	5
8	44-5850	Decal — Operation	1
9	28-2650	V-belt — Traction	1
10	44-5940	Pulley — Ground Drive	1
11	36-2920	V-belt — Deck	1
12	44-0770	Clutch Assembly — Deck	1
13	44-8160	Washer	1
14	3253-22	Lockwasher	1


Ref. No.	Part No.	Description	No. Used
15	3212-24	Capscrew	1
16	28-0120	Bracket — Hinge L.H.	1
17	28-0110	Hinge Pin — Hood L.H.	1
18	32152-1	Locknut	4
19	28-0100	Hinge Pin — Hood R.H.	1
20	28-0130	Bracket — Hinge R.H.	1
21	322-2	Capscrew	5
22	37-0170	Bracket — Screen Support	2
23	32104-76	Screw — Self Tapping	12
24	33-0840	Heat Shield	1
25	2412-51	Clamp	2
26	28-3980	Support — Heat Shield	1
27	33-0820	Heat Shield	1

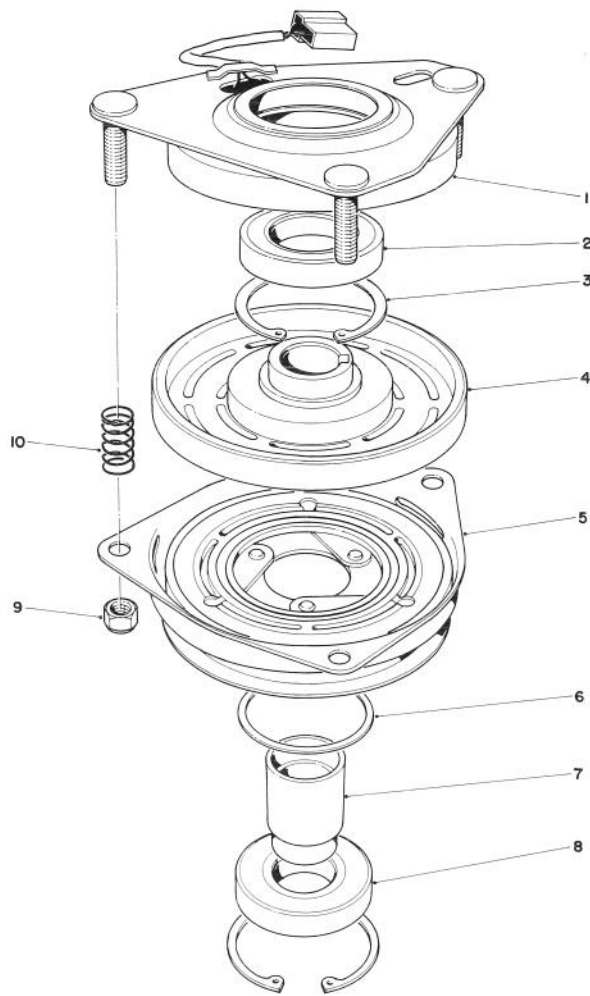

CLUTCH ASSEMBLY NO. 44-0770


Ref. No.	Part No.	Description	No. Used
1	44-8350	Field Assembly (Incl. Ref. #2 & 3)	1
2	251-292	Bearing — Field	1
3	44-8310	Retaining Ring	2
4	44-8360	Field Coil, Rotor & Bearing Assembly (Incl. Ref. #1)	1

Ref. No.	Part No.	Description	No. Used
5	44-8370	Armature & Pulley Assembly (Incl. Ref. #3, 6, 7 & 8)	1
6	44-8330	Spacer — Pulley Bearing	1
7	44-8340	Bearing Collar	1
8	251-291	Bearing — Pulley	1
9	3296-6	Locknut	3
10	44-8320	Spring	3

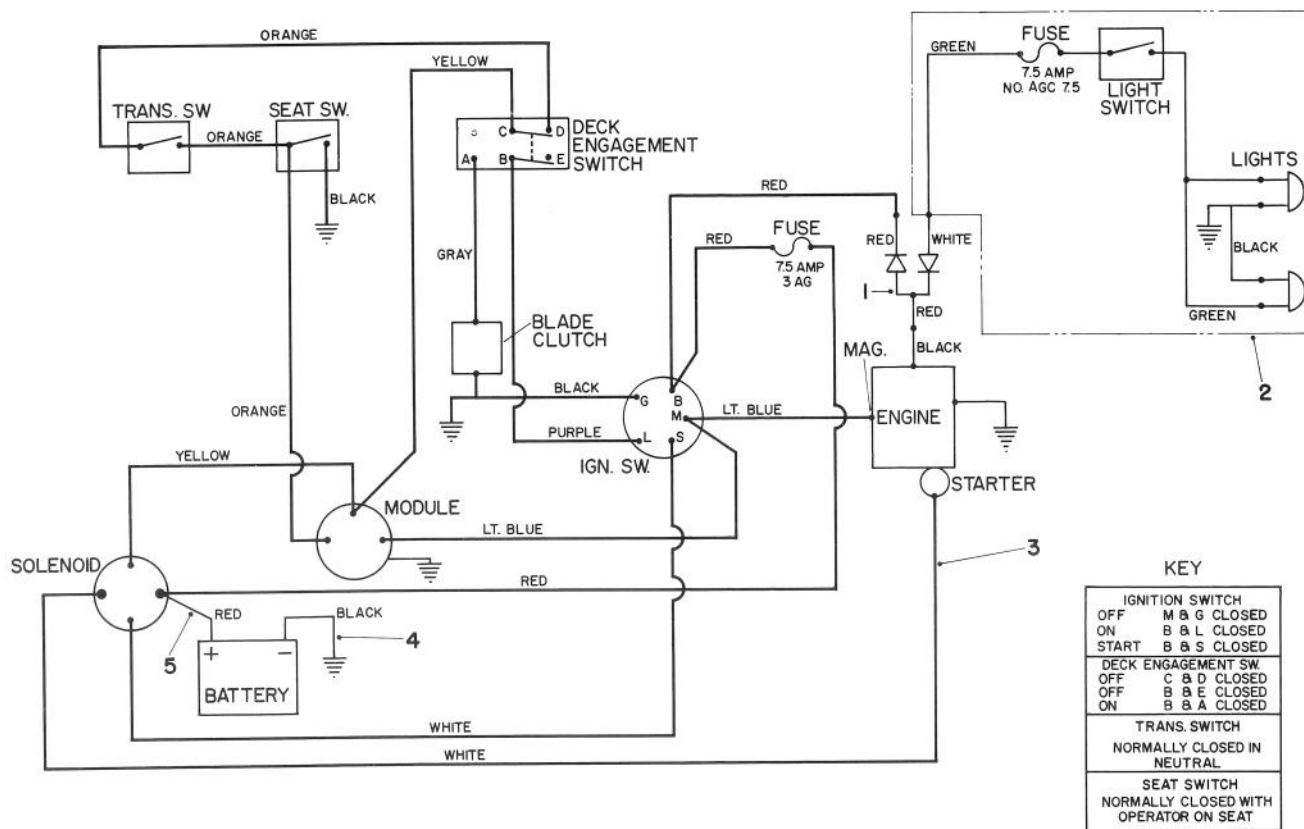

ELECTRICAL DIAGRAM


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	44-0750	Wire Harness — Diode	1	4	44-8110	Wire Assembly (Battery to Ground)	1
2	38-1030	Wire Harness — Lights	1	5	28-3890	Wire Assembly (Battery to Solenoid)	1
3	44-0740	Wire Harness	1				

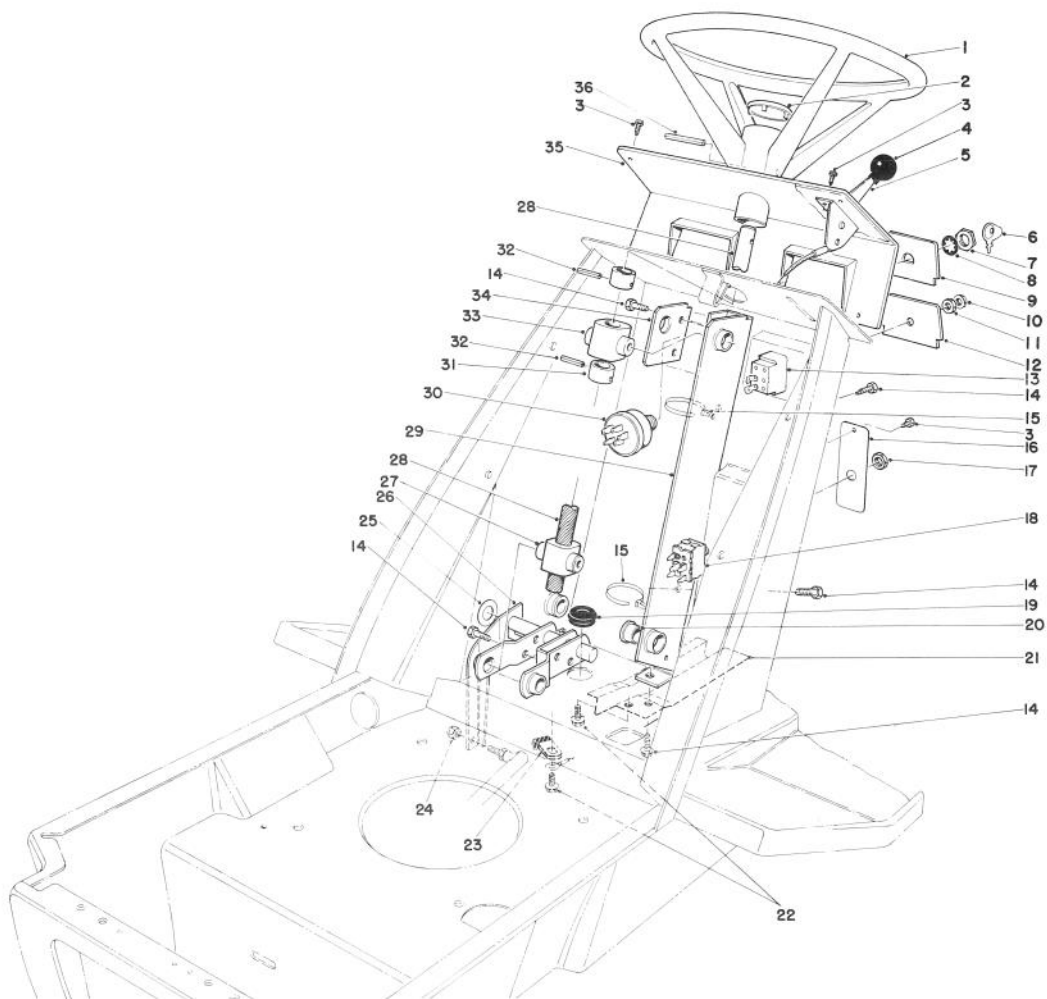

STEERING WHEEL & DASH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	38-0830	Steering Wheel	1
2	38-1080	Cap — Steering Wheel	1
3	32104-76	Screw — Self Tapping	8
4	233-25	Knob	1
5	38-0990	Throttle Control (Incl. Ref. #4)	1
6	218-412	Key	2
7	218-461	Nut	1
8	3254-5	Lockwasher	1
9	28-2690	Insert — Dash Panel (Ignition)	1
10	218-497	Beveled Facenut	1
11	218-498	Locknut	1
12	28-2510	Insert — Dash Panel (Lights)	1
13	28-4110	Light Switch (Incl. Ref. #10 & 11)	1
14	32144-11	Self Tapping Screw	7
15	3290-410	Push Mount Tie (Incl. with Wire Harness)	3
16	44-5710	Plate — Clutch Switch	1
17	218-500	Nut	1


Ref. No.	Part No.	Description	No. Used
18	37-2610	Switch — Clutch (Incl. Ref. #17)	1
19	237-100	Grommet	1
20	27-9080	Flange Bearing	2
21	36-1570	Shield — Wire Harness	1
22	32144-10	Screw — Thread Forming	2
23	18-2970	Clamp	1
24	3296-5	Locknut	1
25	11-6240	Washer	1
26	36-3470	Steering Link	1
27	37-0140	Follower — Steering Shaft	1
28	38-5310	Shaft — Steering	1
29	36-2040	Bracket Steering	1
30	23-0660	Ignition Switch (Incl. Ref. #6-8)	1
31	28-3940	Collar — Steering Shaft	2
32	32121-31	Roll Pin	2
33	37-0150	Bearing — Steering Shaft	1
34	28-0390	Bearing — Support Steering	1
35	28-2460	Panel — Dash	1
36	32121-78	Roll Pin	1

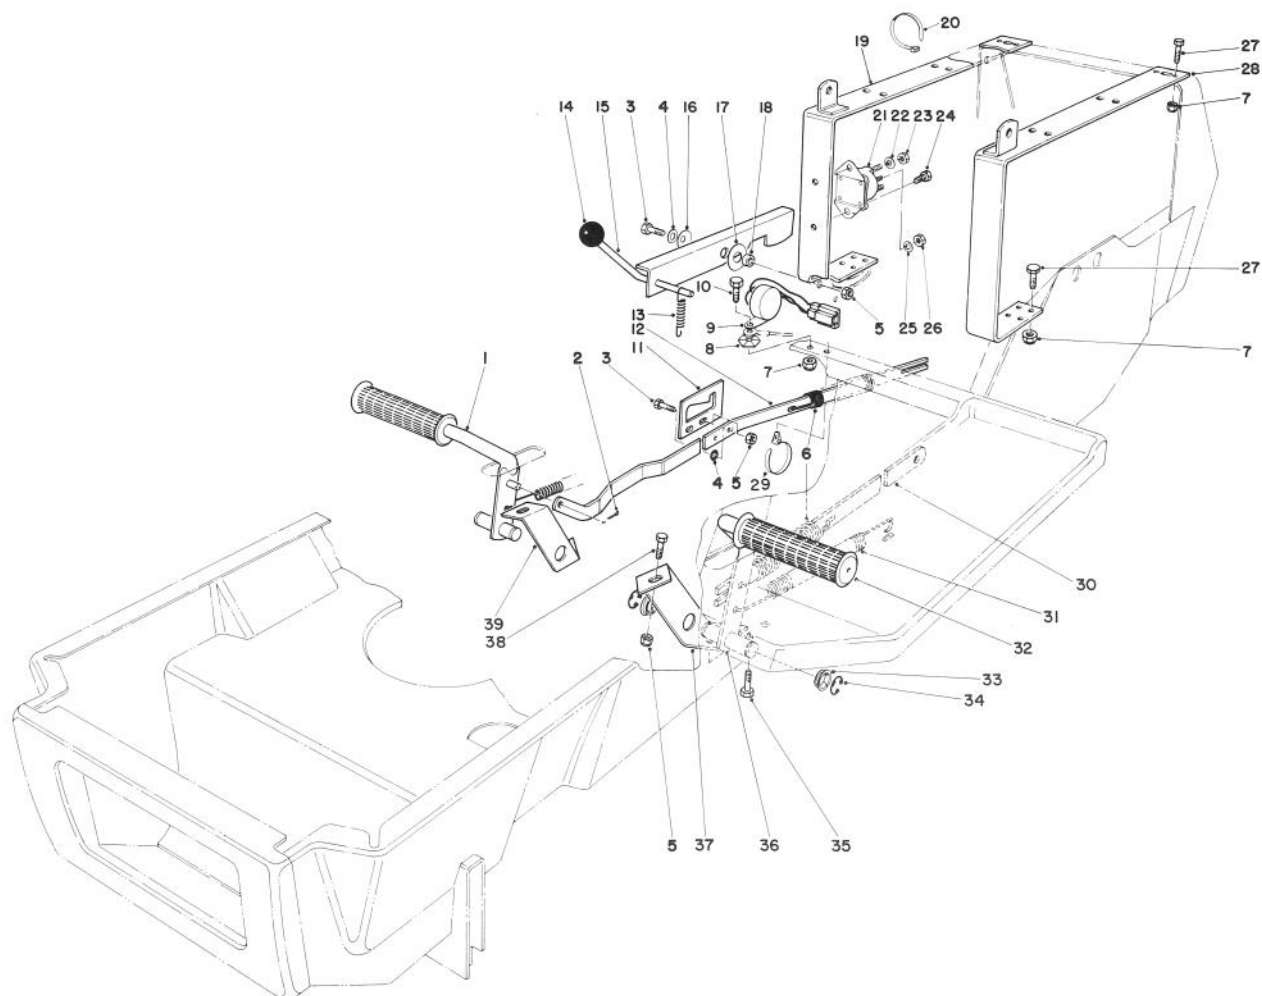

BRAKE & CLUTCH PEDAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	28-2530	Brake Pedal	1
2	3272-10	Cotter Pin	1
3	322-3	Capscrew	3
4	3256-23	Washer	3
5	32152-1	Locknut	5
6	27-8950	Spring — Extension	2
7	32152-4	Locknut	9
8	3290-257	Pyramidal Washer	1
9	28-7890	Module — Interlock	1
10	321-4	Capscrew	1
11	28-9370	Latch Plate — Brake Rod	1
12	28-9350	Link — Brake Rod	1
13	8-9900	Spring — Control Rod	1
14	233-42	Knob	1
15	28-2570	Parking Brake Lever	1
16	3290-413	Belleville Washer	1
17	28-2450	Washer	1
18	28-2440	Spacer	1
19	38-0940	Strap — Rear Body R.H.	1
20	3290-378	Cable Tie	1


Ref. No.	Part No.	Description	No. Used
21	28-4210	Solenoid	1
22	3253-4	Lockwasher	2
23	3218-13	Nut	2
24	32144-10	Screw Thread Forming	2
25	3219-14	Nut	2
26	3253-17	Lockwasher	2
27	321-3	Capscrew	8
28	38-0950	Strap — Rear Body L.H.	1
29	3290-410	Pushmount Tie	1
30	28-0430	Link Clutch Rod	1
31	27-8890	Spring — Return	2
32	28-2470	Pad — Foot	2
33	256-258	Nyliner	4
34	32120-19	E-Ring	4
35	32144-11	Self Tapping Screw	4
36	28-2520	Clutch Pedal	1
37	28-0420	Support Pedal	1
38	322-2	Capscrew	2
39	28-0410	Support Pedal R.H.	1

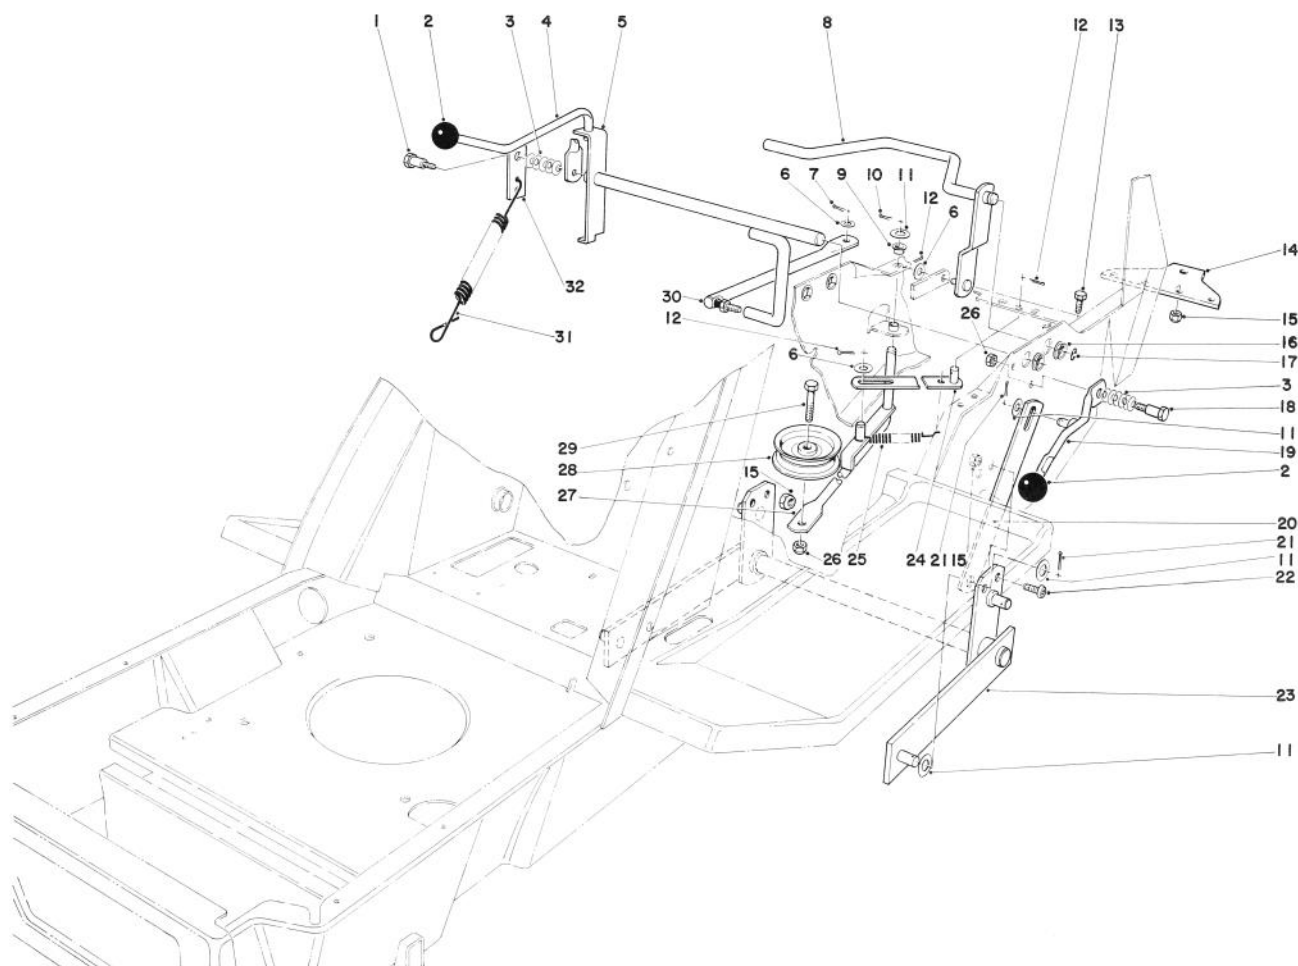

SHIFT & CLUTCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	28-0540	Shoulder Bolt	1
2	233-48	Knob	2
3	3290-413	Belleville Washer	11
4	28-2190	Shift Lever	1
5	28-2590	Shift Lever	1
6	3256-23	Washer	3
7	3272-6	Cotter Pin	1
8	27-9090	Clutch Actuator	1
9	256-257	Flanged Nyliner	2
10	3272-11	Cotter Pin	1
11	3256-26	Washer	4
12	3272-10	Cotter Pin	3
13	3234-5	Capscrew	4
14	28-2250	Plate Hitch	1
15	32152-1	Locknut	8
16	256-258	Nyliner	4

Ref. No.	Part No.	Description	No. Used
17	32120-19	E-Ring	2
18	5-4015	Shoulder Bolt	1
19	36-1780	Height of Cut Handle	1
20	36-1300	Link Height of Cut	1
21	3272-7	Cotter Pin	3
22	3274-55	Button Soc. Hd. Capscrew	4
23	36-1860	Pivot Bar	1
24	28-2270	Spring Retainer	1
25	28-2340	Spring Deck Tension	1
26	32152-2	Locknut	2
27	28-0500	Idler Arm	1
28	36-1020	Pulley Idler	1
29	323-10	Hex Hd. Capscrew	1
30	28-2210	Shift Arm	1
31	36-4850	Spring Extension	1
32	36-4860	Bracket Counterbalance Spring	1

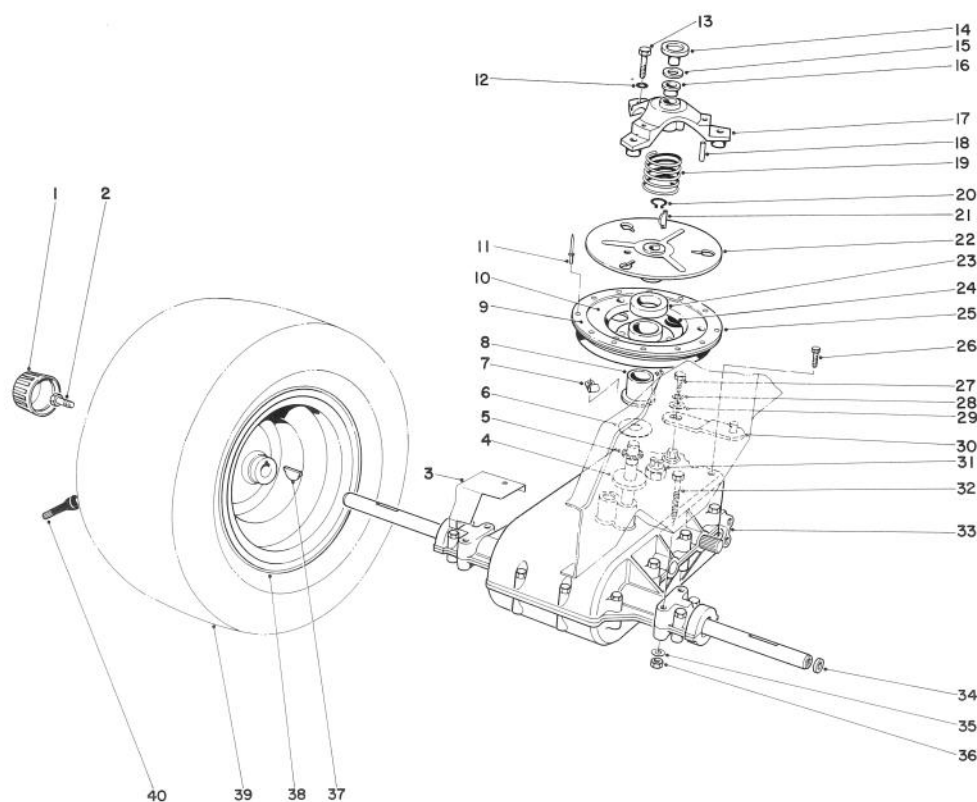


TRANSAXLE & CLUTCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	28-0060	Hub Cap	2	22	27-9030	Clutch Plate	1
2	36-4030	Capscrew	2	23	28-4220	Felt Washer	1
3	29-6940	Shield — Grass	1	24	2410-40	Plug	3
4	39-4770	Spacer	1	25	11-0119	Sheave Assembly (Incl. Ref. #8-11)	1
5	252-58	Thrust Bearing	1	26	32144-11	Self Tapping Screw	2
6	27-8820	Thrust Washer	1	27	329-2	Capscrew	1
7	18-2970	Clamp	1	28	3253-3	Lockwasher	1
8		Bushing	1	29	3256-22	Washer	1
9	27-8800	Clutch Pad	1	30	28-2380	Shift Bracket	1
10	40-4630	Retainer Ring	1	31	28-4250	Switch — Neutral	1
11	3269-3	Rivet	12	32	322-11	Capscrew	4
12	3254-8	Lockwasher	3	33	42-5160	Transaxle	1
13	321-5	Capscrew	3	34	37-4700	Spacer — Wheel	1
14	36-2130	Cap Clutch	1	35	3256-23	Washer	4
15	252-94	Thrust Race	1	36	32152-1	Locknut	4
16	256-259	Bushing	1	37	3257-40	Hi Pro Key	2
17	28-2560	Clutch Cover (Incl. Ref. #16 & 18)	1	38	47-5150	Rim	2
18	252-92	Needle — Roller	3	39	231-98	Tire	2
19	36-2220	Spring Compression	1	40	232-27	Valve Stem & Cap	2
20	32120-64	Retaining Ring	1	*	232-41	Tube Optional	2
21	3257-30	Key	1				

*Not Illustrated


PEERLESS TRANSAXLE MODEL 801C

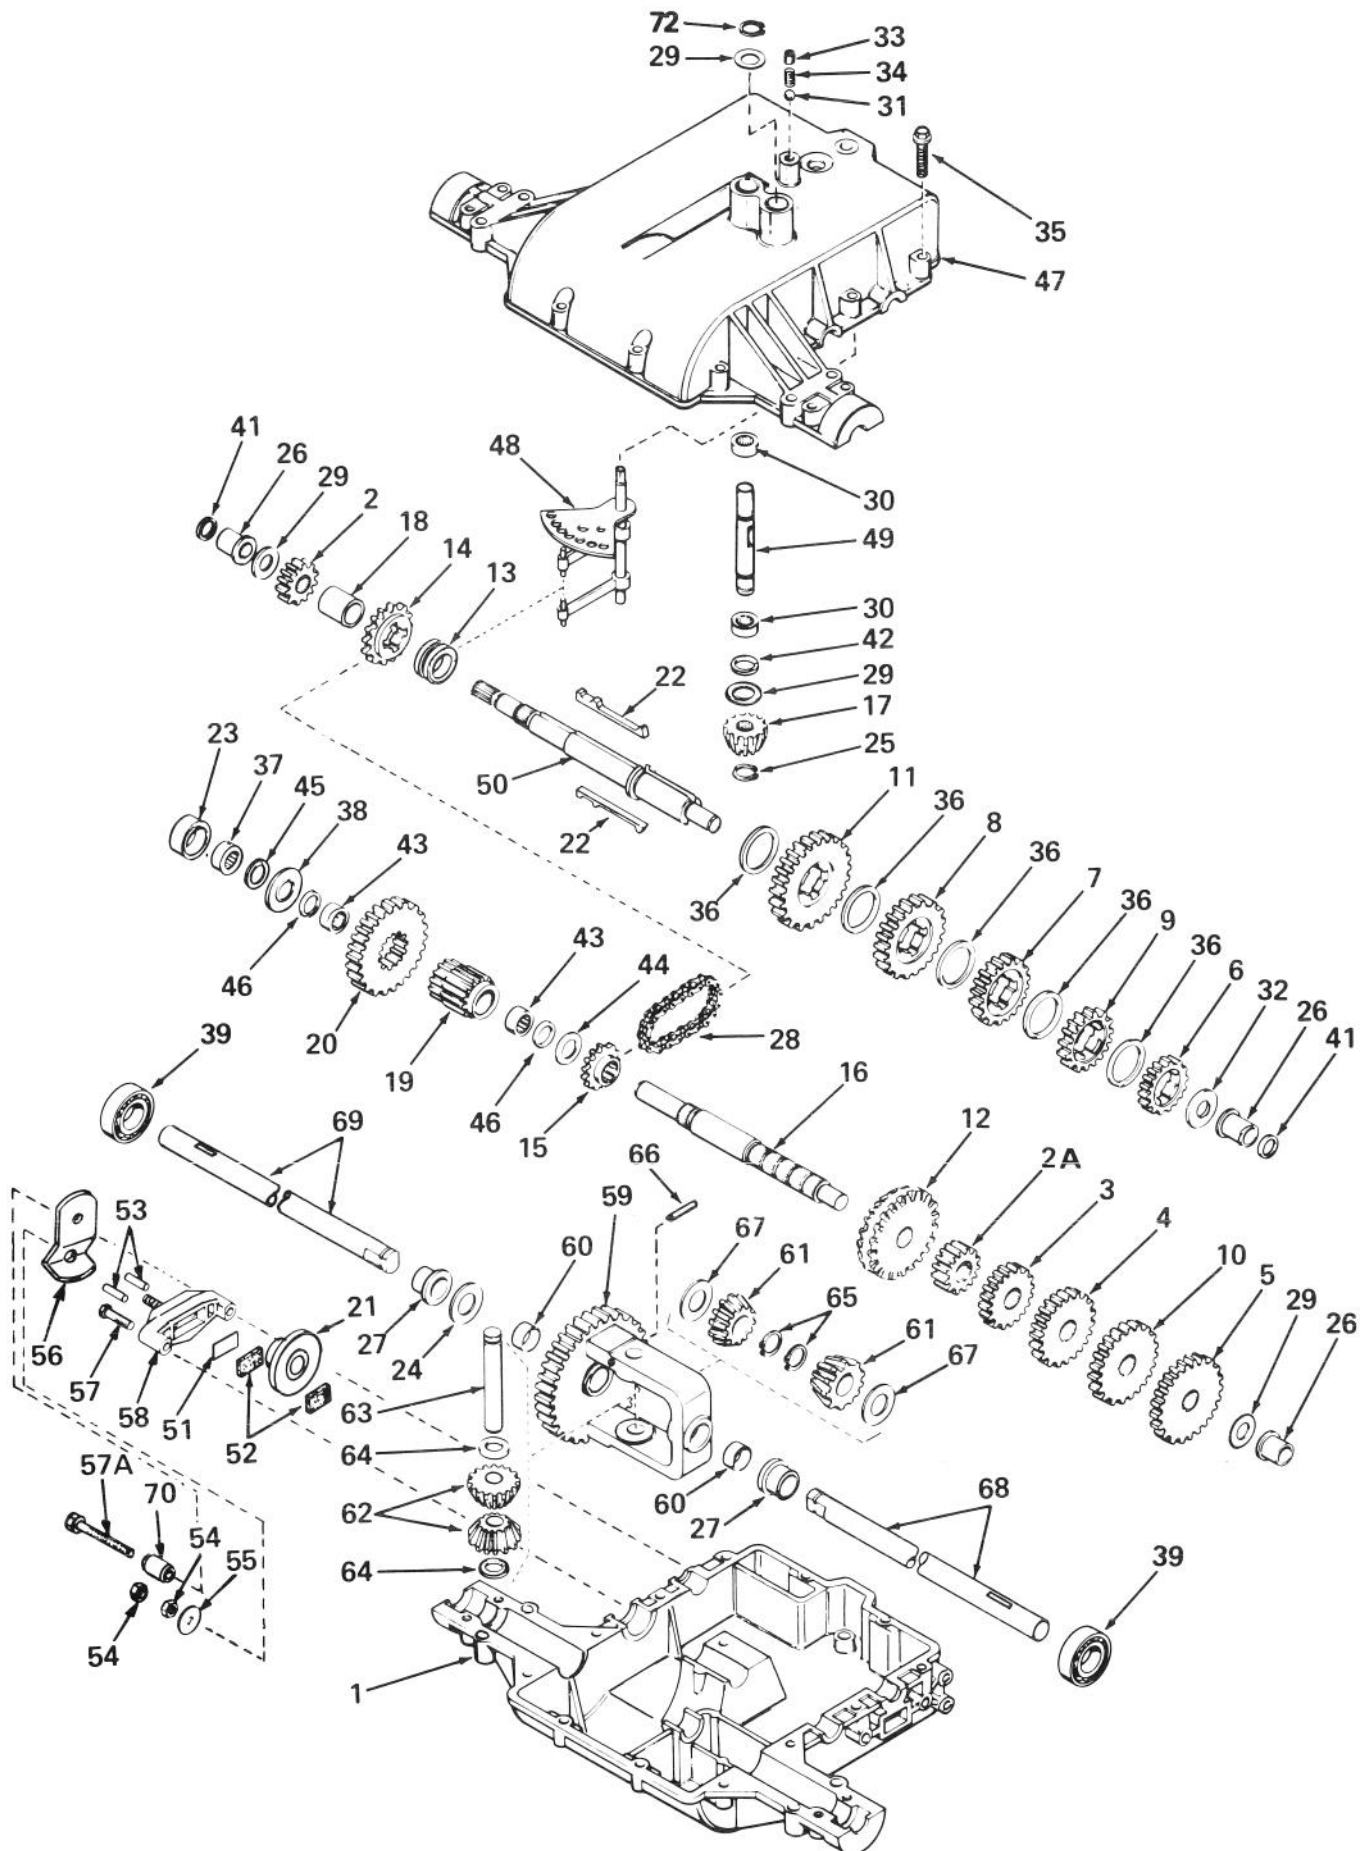

PEERLESS TRANSAXLE MODEL 801C

Ref. No.	Part No.	Description	No. Used
1	770071	Case, Transaxle	1
2	778136	Gear, Spur (15 teeth)	1
2A	778145	Gear, Spur (12 teeth)	1
3	778126A	Gear, Spur (20 teeth)	1
4	778127A	Gear, Spur (25 teeth)	1
5	778129A	Gear, Spur (30 teeth)	1
6	778121A	Gear, Spur (20 teeth)	1
7	778123A	Gear, Spur (25 teeth)	1
8	778124A	Gear, Spur (30 teeth)	1
9	778122A	Gear, Spur (22 teeth)	1
10	778128A	Gear, Spur (28 teeth)	1
11	778146	Gear, Spur (37 teeth)	1
12	778137	Gear, Bevel (42 teeth)	1
13	784266	Collar, Shift	1
14	786083	Sprocket (18 teeth)	1
15	786082	Sprocket (9 teeth)	1
16	776181	Shaft, Counter	1
17	778113A	Bevel Pinion, Input	1
18	786074	Spacer	1
19	778138	Pinion, Output	1
20	778139	Gear, Output	1
21	790003	Disk, Brake	1
22	792089A	Key	1
23	786075	Spacer	1
24	780001	Washer	1
25	788040	Ring, Retaining	1
26	780105	Bushing, Flanged	1
27	780118	Bushing, Flanged	1
28	786081	Chain, Roller (No. 41 chain, 24 links)	1
29	780072	Washer, Thrust	1
30	780086	Bearing, Needle	1
31	792077	Ball, Steel	1
32	780109	Washer, Thrust	1
33	792078	Screw, Set	1
34	792079	Spring	1
35	792073	Screw, Hex Hd. Thread Forming	1
36	780108	Washer, Thrust	1


Ref. No.	Part No.	Description	No. Used
37	780111	Bearing, Needle	1
38	780113	Washer, Flat	1
39	780119	Bearing, Ball	1
41	788051	Ring, Square Cut	1
42	792001	Ring, Square Cut	1
43	780112	Bearing, Needle	1
44	780114	Washer, Flat	1
45	788052	Ring, Square Cut	1
46	788053	Ring, Square Cut	1
47	772078A	Cover, Transaxle	1
48	784290	Rod & Fork Assy., Shift	1
49	776182A	Shaft, Input	1
50	776183	Shaft, Brake	1
51	790007	Plate, Brake Pad	1
52	790006	Pad, Brake	1
53	786026	Pin, Dowel	1
54	792075	Locknut	1
55	792076	Washer, Flat	1
56	790022	Lever, Brake	1
57	792073	Screw, Hex Hd. Thread Forming	1
57A	792085	Screw, Hex Hd. Thread Forming	1
58	790020	Holder, Brake Pad	1
59	778053A	Gear Assy., Differential (Incl. 2 of No. 60)	1
60	780064	Bushing	1
61	778067	Gear, Bevel	1
62	778068	Pinion, Bevel	1
63	786034	Pin, Drive	1
64	780065	Washer, Thrust	1
65	792018	Ring, Retaining	1
66	792040	Pin, Roll	1
67	780001	Washer, Thrust	1
68	774364A	Axle (14-7/8" long)	1
69	774363A	Axle (13" long)	1
70	786067	Spacer	1
72	792035	Ring, Retaining	1

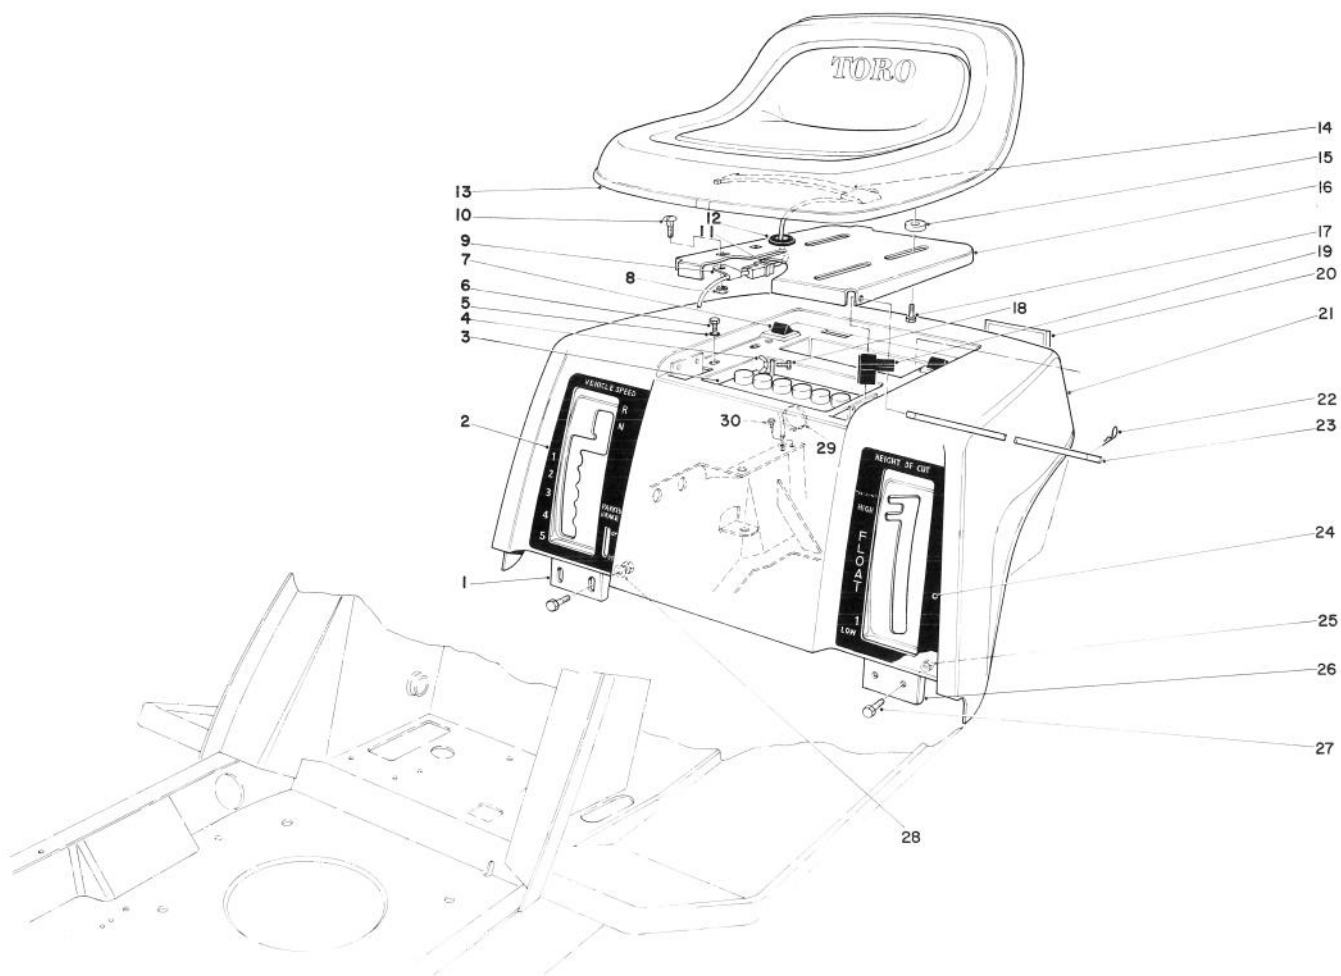

REAR BODY & SEAT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	28-0370	Plate Detent	1
2	36-2940	Decal – Transmission	1
3	29-9870	Battery	1
4	32103-22	Wing Nut	2
5	5-1350	Washer	4
6	32144-11	Hex Hd. Self Tapping Screw	4
7	28-9440	Seat Bumper	2
8	32149-2	Locknut	2
9	2412-66	Clamp	2
10	3229-11	Carriage Bolt	2
11		Female Connector	1
12	237-100	Grommet	1
13	38-0840	Seat	1
14	38-1420	Seat Switch	1
15	26-4840	Spacer	4


Ref. No.	Part No.	Description	No. Used
16	36-1490	Seat Support	1
17	3234-5	Capscrew	4
18	321-3	Capscrew	2
19	28-8080	Boot Terminal	1
20	218-491	Reflector	2
21	8-3229	Rear Body (Incl. Ref. #2 & 24)	1
22	3290-307	Hair Pin Cotter	2
23	28-2400	Pivot Rod Seat	1
24	36-2950	Decal – Height of Cut	1
25	32152-1	Locknut	4
26	36-1950	Quadrant Height of Cut	1
27	322-2	Capscrew	4
28	3256-23	Washer	2
29	3290-378	Cable Tie	1
30	32104-76	Self Tapping Screw	1

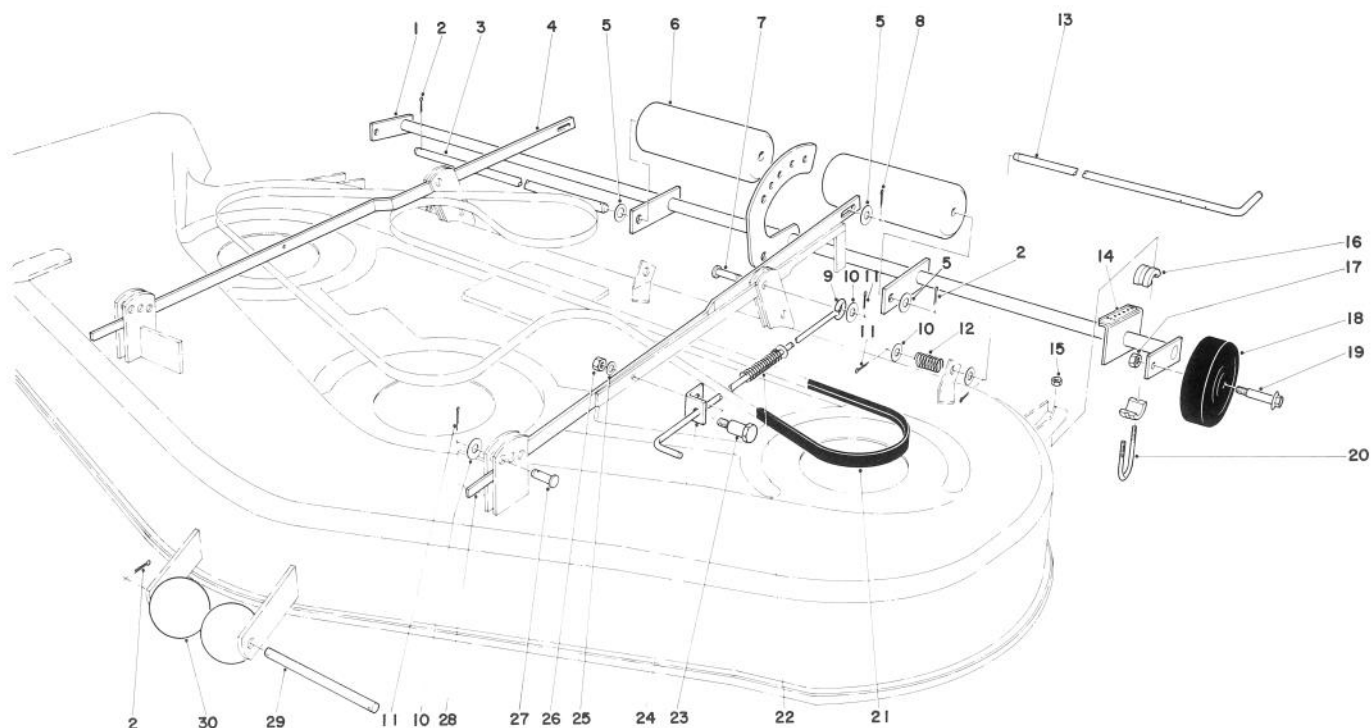

MOWER LIFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	38-1380	Deck Wheel Shaft	1
2	3272-11	Cotter Pin	4
3	36-1360	Roller Shaft	1
4	36-3450	Scissors Link Rear R.H.	1
5	3256-26	Flat Washer	4
6	36-1740	Roller Deck	2
7	283-10	Clevis Pin	2
8	3272-7	Cotter Pin	2
9	38-0890	Pin Tension	2
10	3256-24	Washer	6
11	3272-6	Cotter Pin	6
12	3-3251	Spring Compression	1
13	36-1710	Rod Wheel Latch	1
14	38-1340	Decal — Height of Cut	1
15	32152-4	Nut	4

Ref. No.	Part No.	Description	No. Used
16	36-1310	Bearing Deck Shaft	4
17	32146-6	Hex Nut	2
18	29-6010	Wheel	2
19	3-2652	Wheel Bolt	2
20	298-11	U-Bolt	2
21	36-2930	V-Belt	1
22	38-0860	Spring-Deck	2
23	38-0930	Shoulder Bolt	2
24	38-0820	Bracket — Belt Tension	2
25	3256-23	Washer	2
26	32152-1	Locknut	2
27	283-2	Clevis Pin	2
28	36-3460	Scissors Link Rear L.H.	1
29	7-0277	Shaft	1
30	29-4820	Roller	2

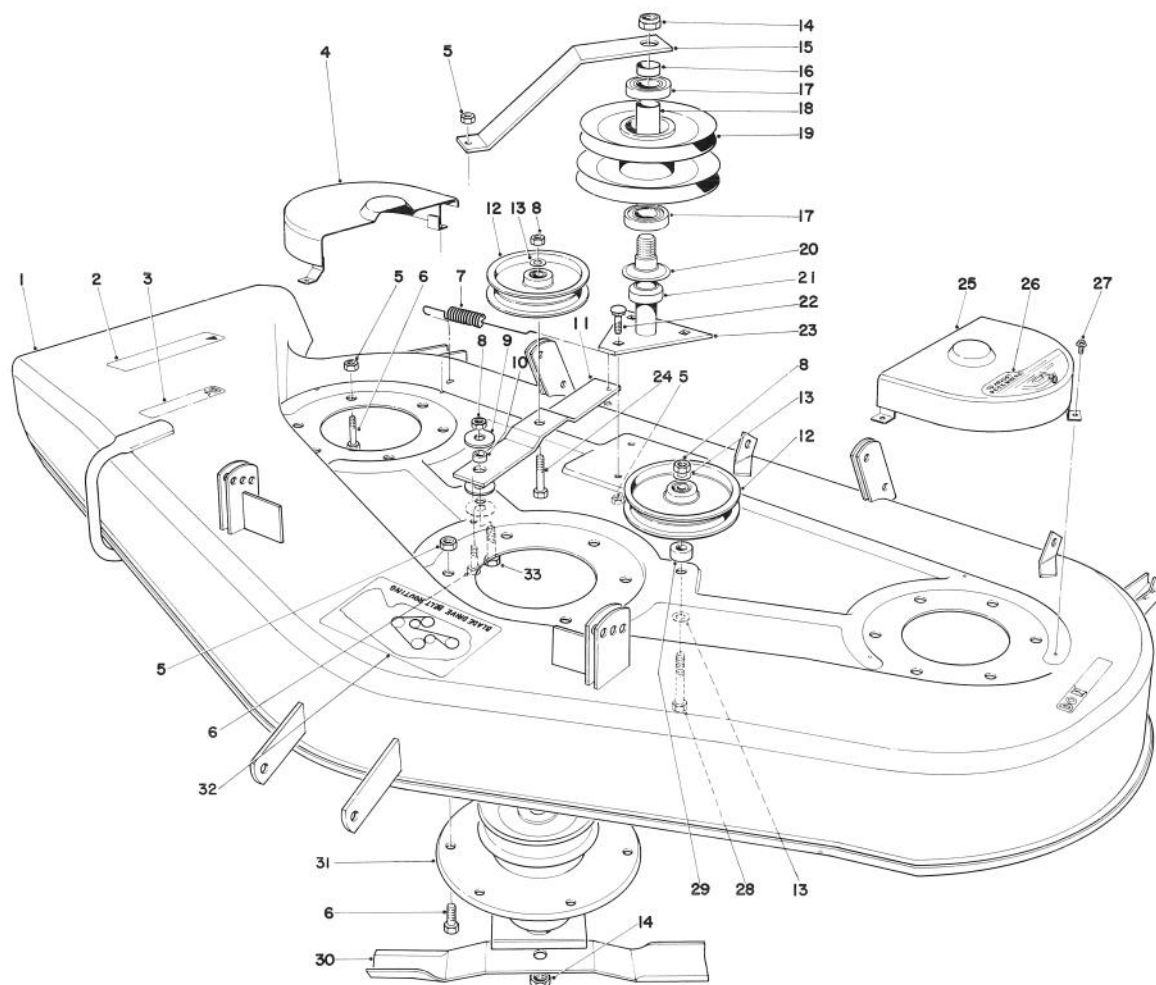


CUTTING DECK

Ref. No.	Part No.	Description	No. Used
1	39-5750	Deck	1
2	36-3410	Decal — Caution	1
3	36-3400	Decal — Warning	2
4	37-9330	Belt Cover R.H.	1
5	32152-1	Nut	22
6	322-3	Capscrew	19
7	36-8040	Spring Extension	1
8	32152-2	Nut	3
9	36-8020	Washer	3
10	36-1430	Spacer Idler Bracket	1
11	36-1400	Idler Pulley Bracket	1
12	36-3220	Idler Pulley	2
13	3256-3	Washer	3
14	3296-33	Hex Nut	4
15	36-1460	Support Spindle	1
16	37-0180	Spacer	1
17	37-0200	Bearing	2

Ref. No.	Part No.	Description	No. Used
18	37-0190	Spacer	1
19	37-0210	Pulley & Bearing Assembly	1
20	38-0470	Dust Cover	1
21	38-3180	Spacer	1
22	3230-1	Carriage Bolt	3
23	37-0220	Shaft Saddle Assembly	1
24	323-9	Capscrew	1
25	37-9340	Belt Cover L.H.	1
26	38-1390	Decal — Wheel Adjustment	1
27	32104-76	Self Tapping Screw	6
28	323-11	Hex Hd. Capscrew	1
29	36-8030	Spacer	1
30	36-1790	Blade	3
31	39-5890	Spindle Assembly	1
32	36-5360	Decal — Belt Routing	1
33	323-6	Capscrew	1
*	8-7489	Loose Parts Bag	1


*Not Illustrated

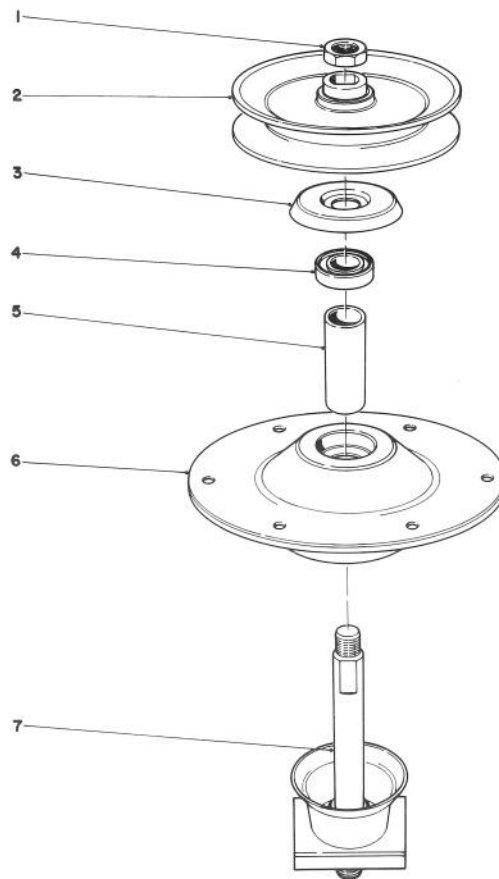

SPINDLE ASSEMBLY (39-5890)

Ref. No.	Part No.	Description	No. Used
1	32146-19	Locknut	3
2	37-9390	Pulley	3
3	39-7690	Dust Cover	3
4	39-7680	Bearing	3


Ref. No.	Part No.	Description	No. Used
5	39-7670	Spacer	3
6	39-7700	Housing /With Bearing	3
7	37-9480	Shaft & Saddle Assembly	3

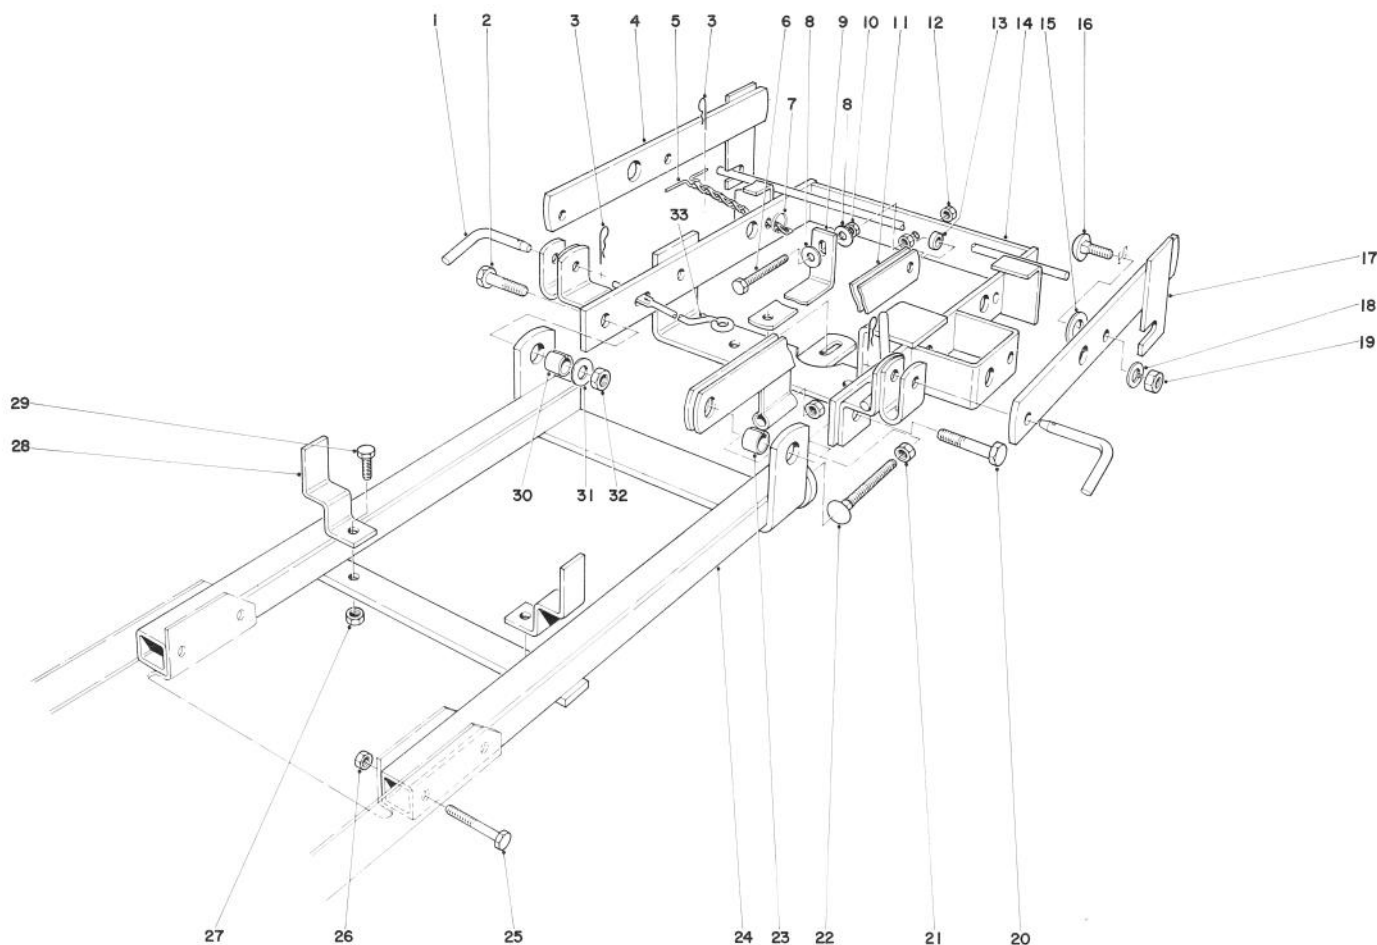

36" SNOWTHROWER ATTACHMENT MODEL 59136

Ref. No.	Part No.	Description	No. Used
1	40-1330	Pin-Roller, Locating	2
2	325-7	Hex Head Capscrew	1
3	3290-225	Hair Pin Cotter	3
4	40-1340	Mounting Bracket — R.H.	1
5	40-1300	Chain & Toggle	1
6	323-15	Hex Head Capscrew	1
7	40-1310	Spring Clip	1
8	3256-4	Washer	2
9	40-1220	Bracket — Belt Adjust	1
10	3218-3	Jam Nut	2
11	40-0940	Lift Extension	1
12	3217-7	Nut	1
13	40-0980	Spacer	1
14	40-1200	Mounting Frame — Upper	1
15	40-1320	Washer — Flat	2
16	3233-23	Carriage Bolt	2
17	40-1350	Mounting Bracket — L.H.	1


Ref. No.	Part No.	Description	No. Used
18	3253-8	Lockwasher	2
19	3217-11	Nut	2
20	325-9	Hex Head Capscrew	1
21	3218-5	Nut — Jam	2
22	40-1590	Carriage Bolt	1
23	40-1360	Spacer — Bearing	1
24	40-0930	Mounting Frame	1
25	322-9	Hex Head Capscrew	4
26	32152-1	Locknut	4
27	32152-2	Locknut	2
28	40-0990	Stop — Position	2
29	323-6	Hex Head Capscrew	2
30	40-1370	Spacer — Idler Pulley	1
31	3256-26	Washer	2
32	32152-3	Locknut	2
33	40-1290	Wire — Belt Guide	1

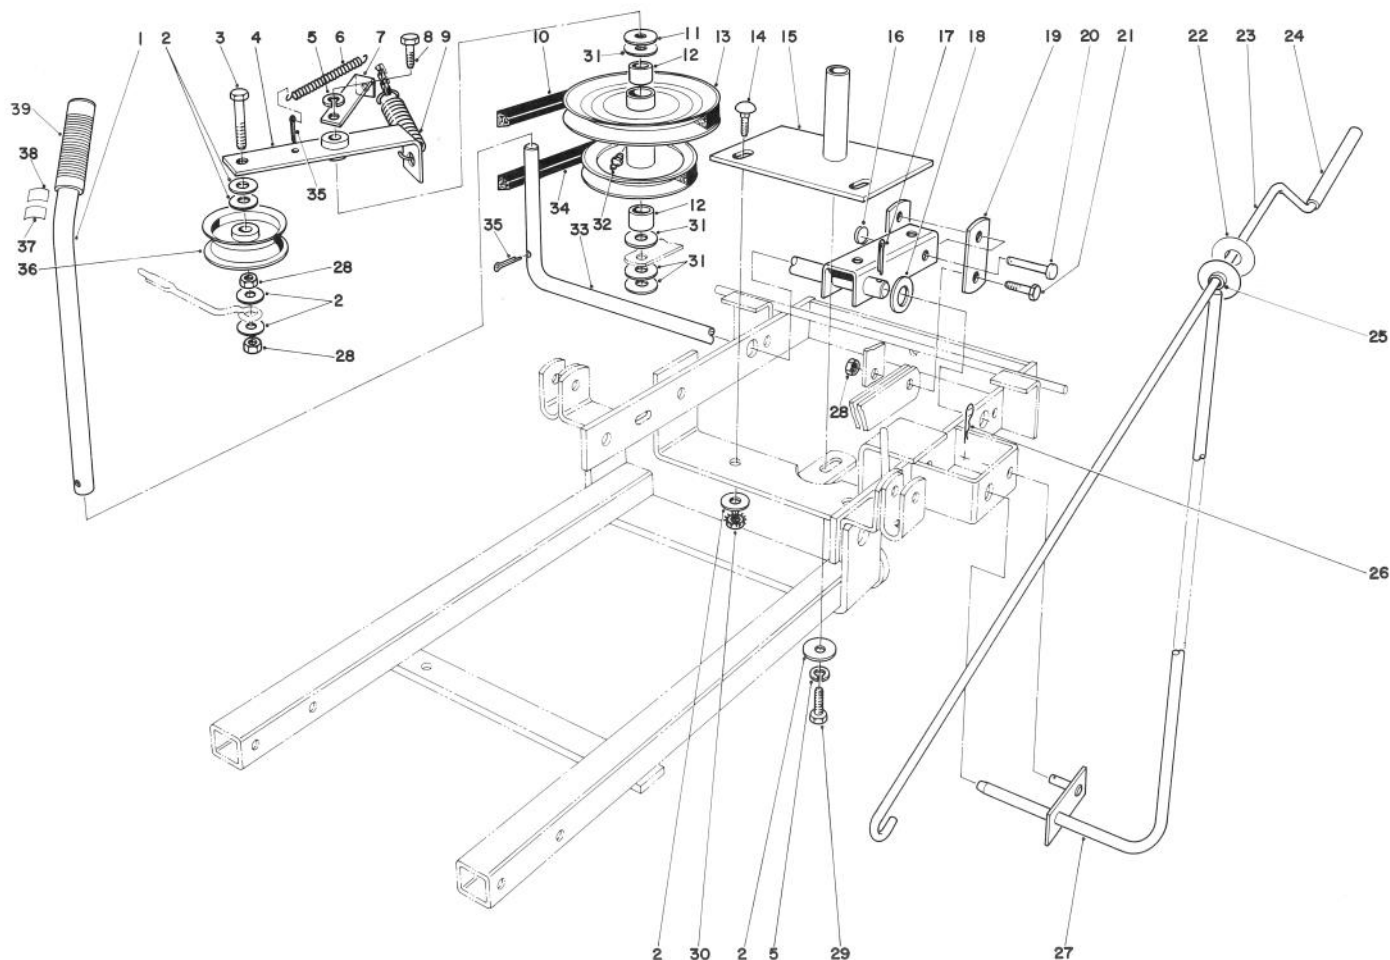

36" SNOWTHROWER ATTACHMENT MODEL 59136 (Optional) (Continued)

Ref. No.	Part No.	Description	No. Used
1	40-1010	Lift Handle	1
2	3256-4	Washer	7
3	323-12	Hex Head Capscrew	1
4	40-1250	Idler Arm	1
5	3253-21	Lockwasher	2
6	40-1280	Spring — Detent	1
7	40-1270	Bracket — Spring Anchor	1
8	323-4	Hex Head Capscrew	1
9	40-0730	Spring	1
10	40-1380	V-Belt	1
11	40-0740	Washer	1
12	40-1230	Roller Bearings	2
13	40-1240	Pulley Housing	1
14	3231-2	Carriage Bolt	2
15	40-1210	Mounting Bracket — Pulley	1
16	40-1310	Spring Clip	1
17	3272-12	Cotter Pin	1
18	40-0970	Spacer	1
19	40-0960	Strap — Lift Link	2

Ref. No.	Part No.	Description	No. Used
20	40-0950	Pin — Clevis, Handle	1
21	323-7	Hex Head Capscrew	1
22	40-1410	Decal — Spout Rotation	1
23	40-1110	Rod — Deflector Control	1
24	40-1100	Grip — Handle	1
25	40-1080	Nylon Bushing	1
26	3290-343	Hair Pin Cotter	1
27	40-1090	Crank Rod Support (Incl. Ref. #22 & 25)	1
28	32152-2	Locknut	3
29	323-6	Hex Head Capscrew	1
30	32149-10	Locknut	2
31	3-1000	Washer	4
32	302-5	Grease Fitting	1
33	40-1000	Lift Bar	1
34	40-1390	V-Belt	1
35	3272-21	Cotter Pin	2
36	40-1260	Idler Pulley	1
37	40-1020	Decal — Lift Control	1
38	40-1030	Decal — Raise & Lower	1
39	235-21	Grip Handle	1

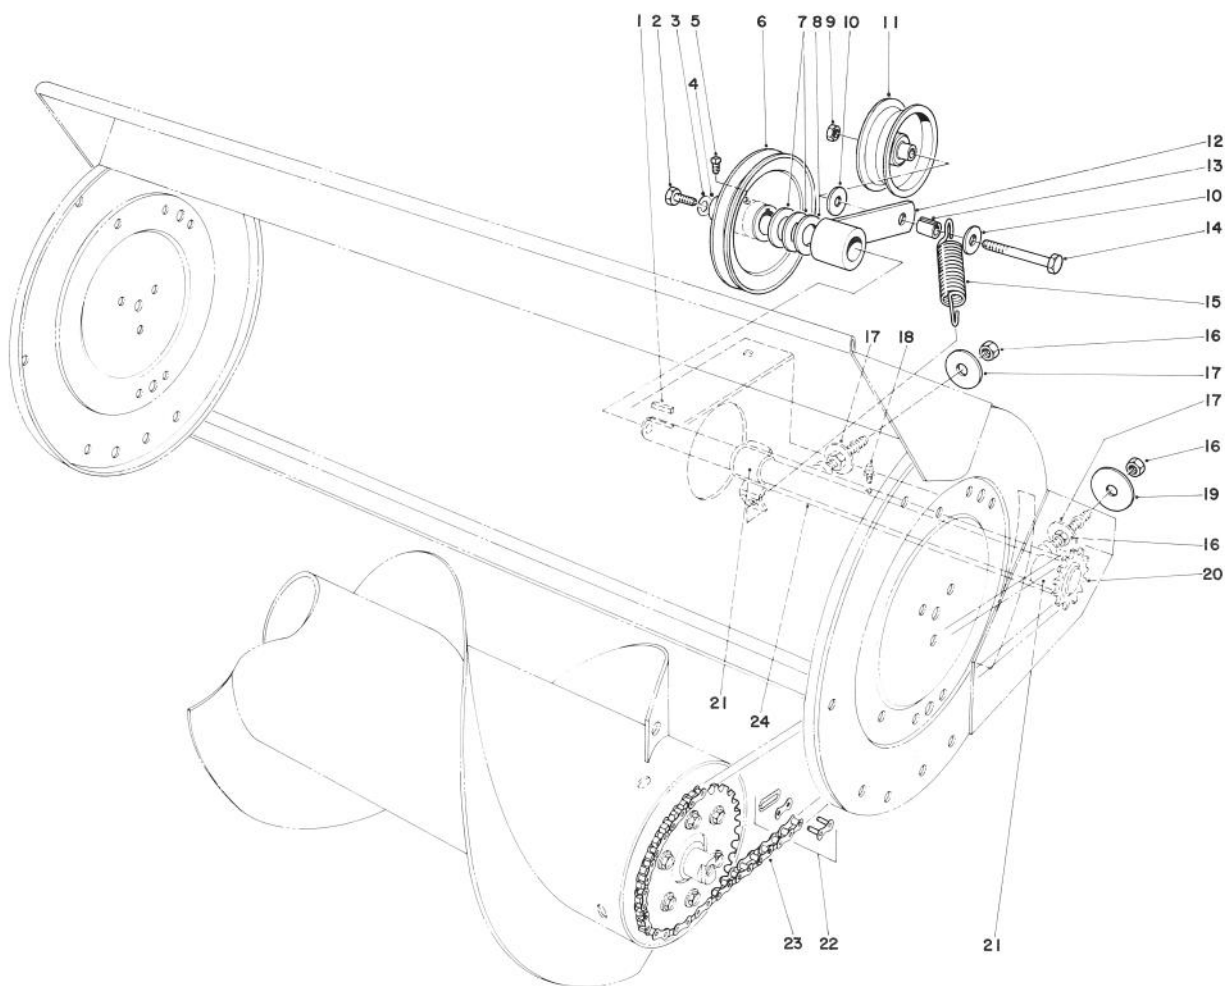


36" SNOWTHROWER ATTACHMENT MODEL 59136 (Optional) (Continued)

Ref. No.	Part No.	Description	No. Used
1	21-5070	Key	1
2	323-4	Hex Head Capscrew	1
3	3253-21	Lockwasher	1
4	3256-3	Washer	1
5	3242-2	Set Screw	2
6	40-0860	Pulley	1
7	3-1000	Washer	2
8	40-0740	Washer	1
9	32152-2	Locknut	1
10	3256-4	Washer	2
11	40-1260	Idler Pulley	1
12	40-0710	Idler Arm	1
13	40-0980	Spacer	1

Ref. No.	Part No.	Description	No. Used
14	323-12	Hex Head Capscrew	1
15	40-0730	Spring	1
16	3217-9	Nut	4
17	3256-5	Washer	3
18	302-5	Grease Fitting	1
19	40-0720	Flat Washer	1
20	40-0770	Shaft & Sprocket	1
21	40-0750	Bushing — Jackshaft	2
22*	2710-6	Repair Kit — Roller Chain	1
23	40-0700	Roller Chain — Endless	1
24	40-0760	Jackshaft Housing (Incl. Ref. #18)	1


*Repair only

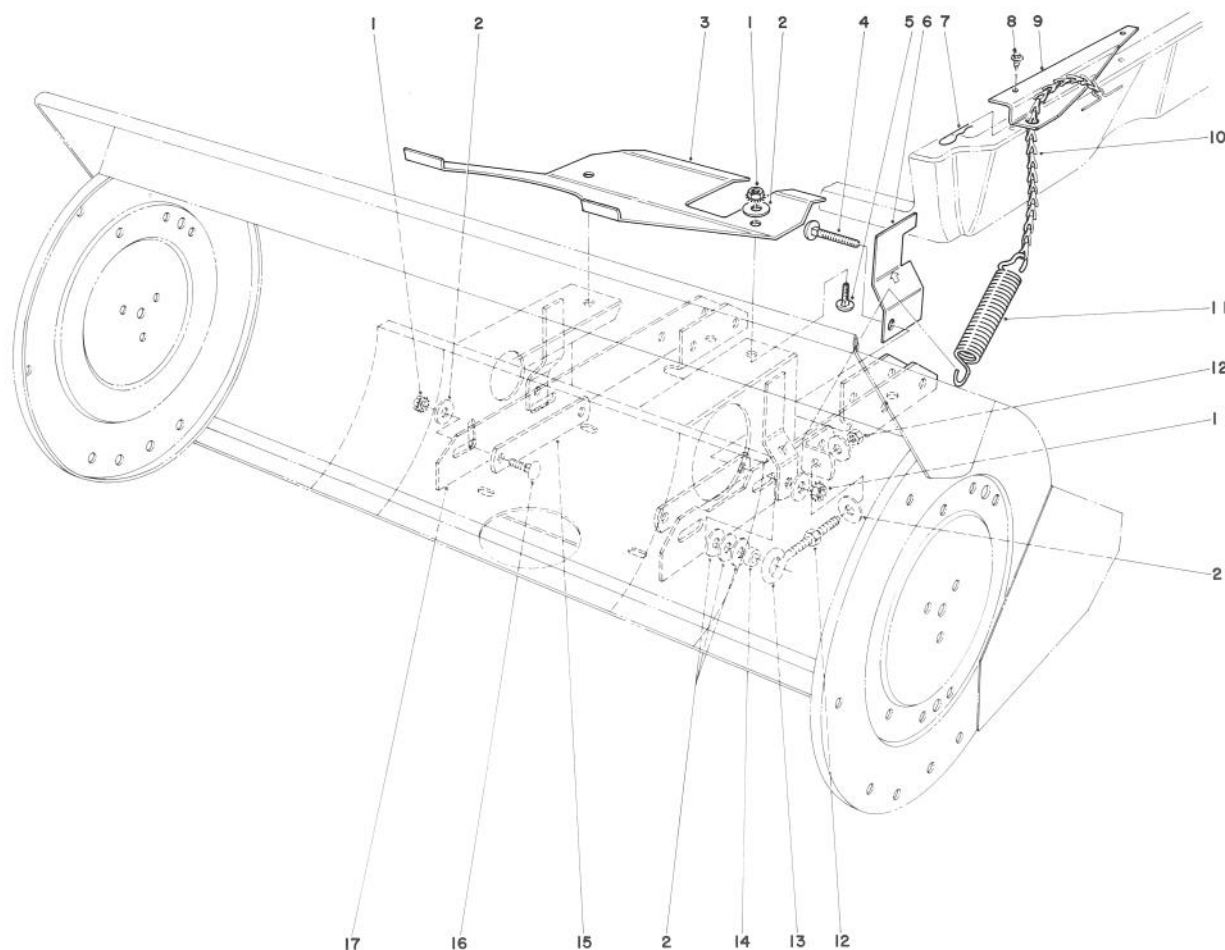

36" SNOWTHROWER ATTACHMENT MODEL 59136 (Optional) (Continued)

Ref. No.	Part No.	Description	No. Used
1	32149-10	Locknut	6
2	3256-4	Washer	16
3	40-0920	Guard — Drive Pulley	1
4	3231-7	Carriage Bolt	2
5	3231-21	Carriage Bolt	2
6	40-0900	Bracket — Belt Adjust Guide	1
7	3290-343	Hair Pin Cotter	1
8	32104-76	Screw — Self Tapping	2
9	40-0680	Plate — Lift Spring Anchor	1

Ref. No.	Part No.	Description	No. Used
10	40-0660	Chain & Toggle	1
11	40-0670	Spring — Idler Arm	1
12	3217-7	Nut	4
13	40-0880	Eye Bolt	2
14	40-0980	Spacer	2
15	40-0890	Strap — Header Channel	2
16	3231-2	Carriage Bolt	2
17	40-0910	Pivot Bracket	1

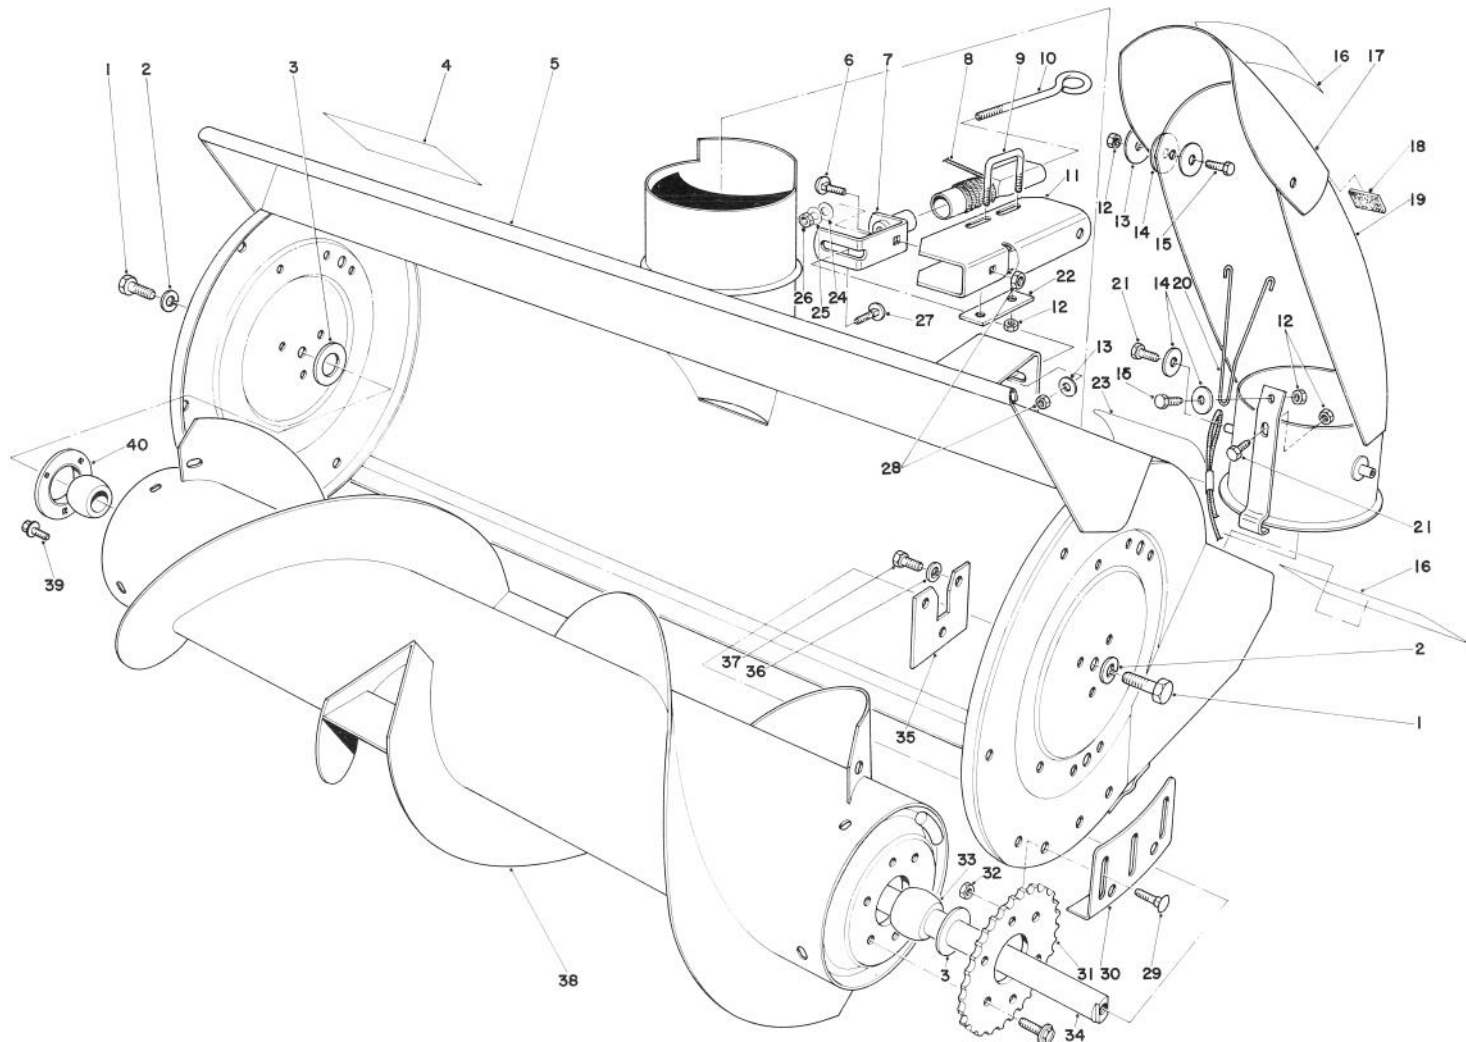


36" SNOWTHROWER ATTACHMENT MODEL 59136 (Optional) (Continued)

Ref. No.	Part No.	Description	No. Used
1	325-5	Hex Head Capscrew	2
2	3253-7	Lockwasher	2
3	40-0780	Washer — Auger Shaft	2
4	27-4600	Decal	1
5	40-1400	Header (Incl. Ref. #16 & 23)	1
6	3231-21	Carriage Bolt	1
7	40-1170	Bracket & Tube	1
8	40-1180	Cable & Tube	1
9	40-1160	U-Bolt	1
10	40-1150	Eye Bolt	1
11	40-1190	Shroud — Stack Drive	1
12	32153-4	Locknut	6
13	3-6916	Washer	6
14	40-1130	Washer	3
15	321-3	Hex Head Capscrew	3
16	29-6350	Decal — Auger Warning	2
17	40-1060	Deflector (Incl. Ref. #16)	1
18	40-1050	Molding — Deflector	1
19	40-1070	Deflector Elbow	1
20	40-1040	Hook — Lift Spring	1
21	321-2	Hex Head Capscrew	2
22	40-1140	Strap — Friction	1
23	29-6380	Decal — Hazards Caution	1
24	3256-4	Washer	1

Ref. No.	Part No.	Description	No. Used
25	40-1120	Spring Washer	1
26	32152-2	Locknut	1
27	3231-2	Carriage Bolt	1
28	32149-10	Locknut	2
29	3-5861	Carriage Bolt	6
30	40-0870	Skidshoe	2
31	40-0840	Sprocket — Auger Drive	1
32	32149-1	Locknut	6
33	40-0790	Bearing — Auger Shaft	2
34	40-0810	Shaft — Auger	1
35	40-0820	Plate — Auger Mounting	1
36	3253-4	Lockwasher	3
37	322-2	Hex Head Capscrew	3
38	40-0850	Auger Assembly	1
39	32104-58	Screw — Self Tapping	9
40	40-0800	Flangette	1
*	40-0690	Exhaust Pipe Extension	1
*	32140-42	Screw — Self Tapping (For use with exhaust pipe extension)	1
†	40-0830	Scraper Blade	1
†	3229-22	Carriage Bolt (For use with scraper blade)	7
†	32149-2	Locknut (For use with scraper blade)	7

*Not Illustrated

†Optional Equipment

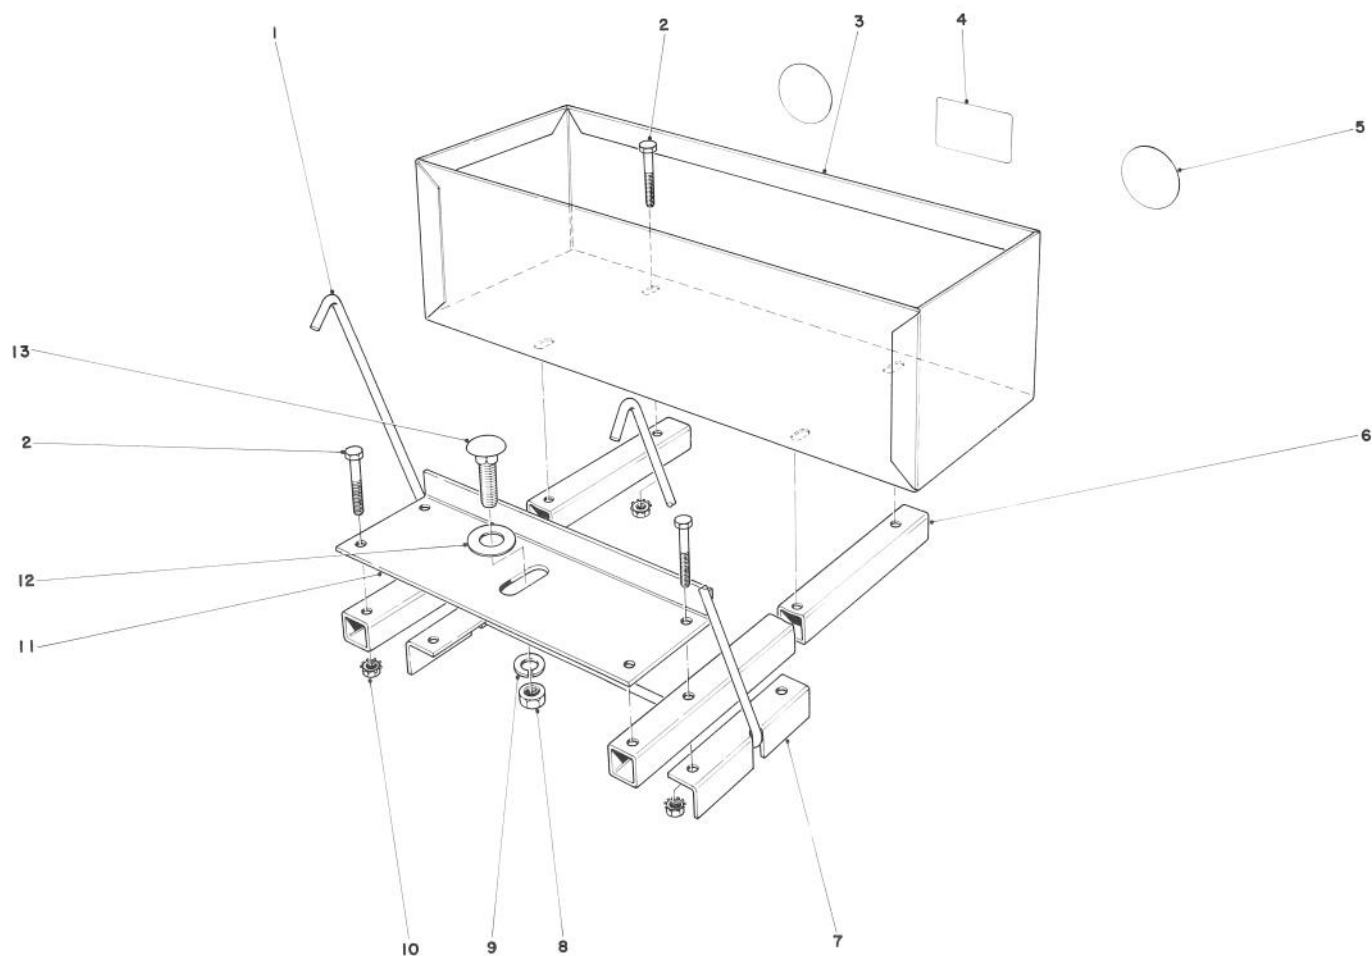


36" SNOWTHROWER WEIGHT BOX ASSEMBLY MODEL 59138 (Optional)

Ref. No.	Part No.	Description	No. Used
1	40-0640	Bracket — Support	1
2	322-9	Hex Head Capscrew	8
3	40-0600	Weight Box	1
4	40-0650	Decal — Weight Box	1
5	40-0590	Reflector	2
6	40-0620	Tube — Mounting	2
7	40-0630	Bracket — Mounting	2

Ref. No.	Part No.	Description	No. Used
8	3217-23	Nut	1
9	3253-7	Lockwasher	1
10	32149-1	Locknut	8
11	40-0610	Bracket — Mounting	1
12	3-1000	Washer	1
13	3233-2	Carriage Bolt	1

ENGINE BRIGGS & STRATTON MODEL 252707-0637-01

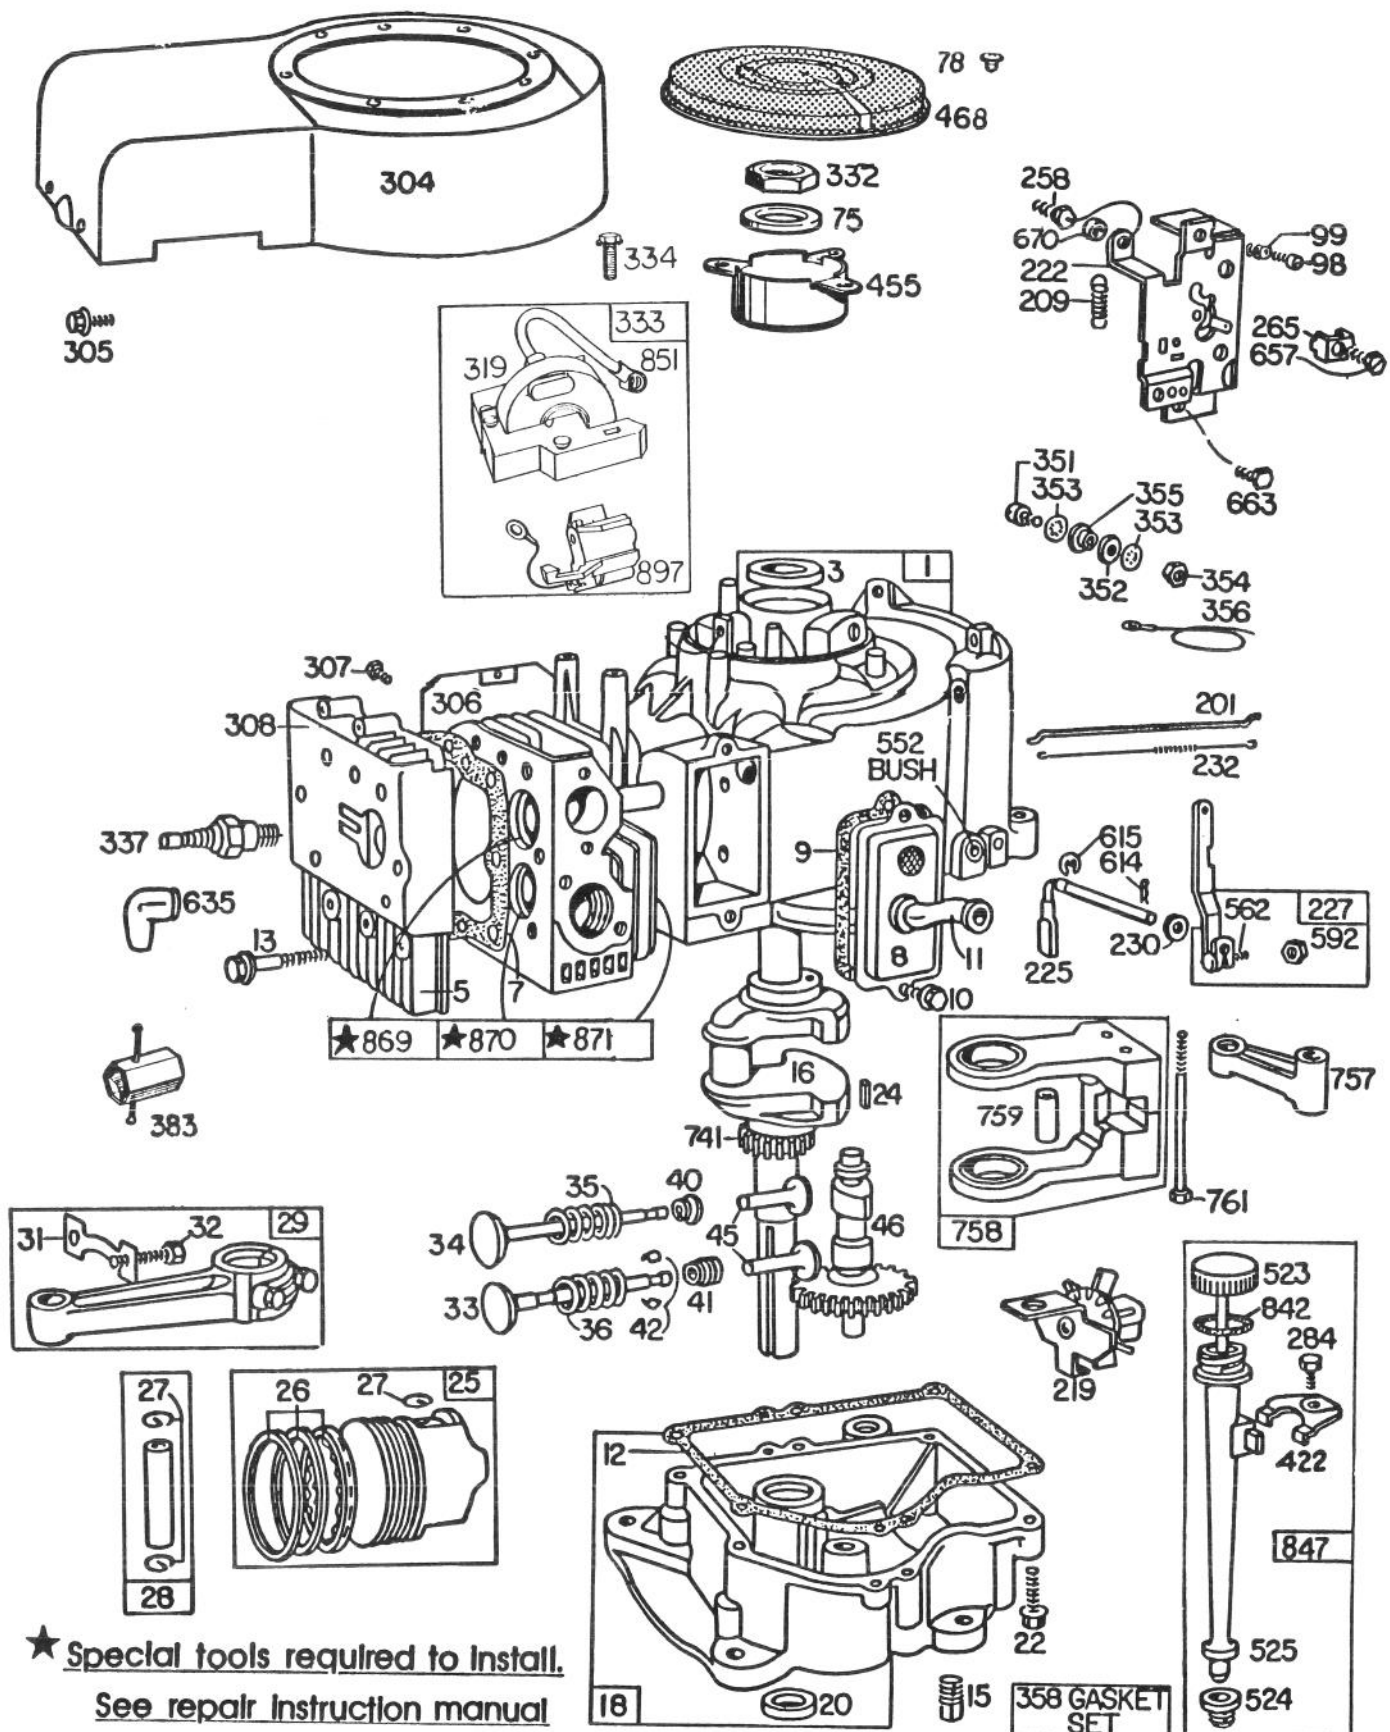


ENGINE BRIGGS & STRATTON MODEL 252707-0637-01

Ref. No.	Part No.	Description	No. Used
1	396324	Cylinder Assembly	1
3	391086	Seal — Oil	1
5	212300	Head — Cylinder	1
7	*271075	Gasket — Cylinder Head	1
8	391406	Breather Assembly	1
9	*27803	Gasket — Valve Cover	1
10	93394	Screw — Sem	1
11	280100	Tube — Breather	1
12	*270808	Gasket — Crankcase Cover — 1/64" thick	1
	*270915	Gasket — Crankcase Cover — .005" thick	1
	*270916	Gasket — Crankcase Cover — .009" thick	1
13	93723	Screw — Cylinder Hd. (3" long)	1
	93781	Note: Stud — Cylinder Hd.	
	22963	Washer	1
15	91084	Plug — Oil Drain	1
16	392299	Crankshaft	1
18	391784	Sump — Oil	1
20	291675	Seal — Oil	1
22	93585	Screw — Sump Mtg. Sem	1
24	222698	Key — Flywheel	1
25	391285	Piston Assy. — Std.	1
	391287	Piston Assy. — .010" O.S.	1
	391288	Piston Assy. — .020" O.S.	1
	391289	Piston Assy. — .030" O.S.	1
		PISTON RING SETS:	
		Note: For Chrome Ring Set — Standard Size — Order No. 392331.	
26	391780	Ring Set — Piston — Std.	1
	391781	Ring Set — Piston — .010" O.S.	1
	391782	Ring Set — Piston — .020" O.S.	1
	391783	Ring Set — Piston — .030" O.S.	1
27	260924	Lock — Piston Pin	1
28	299691	Pin Assy. — Piston — Std.	1
	391286	Pin Assy. — Piston — .005" O.S.	1
29	391775	Rod Assy. — Connecting	1
31	222299	Lock — Conn. Rod Screw	1
32	92909	Screw — Conn. Rod	1
33	261185	Valve — Exhaust	1
34	261462	Valve — Intake	1
35	65906	Spring — Intake Valve	1
36	26828	Spring — Exhaust Valve	1
40	221596	Retainer — Intake Valve	1
41	292260	Rotocoil — Exhaust Valve	1
42	93630	Retainer — Exhaust Valve Rotocoil	2
45	261183	Tappet — Valve	1
46	212296	Gear — Cam	1
75	220865	Washer — Spring	1
78	93808	Screw — Sem	1
98	91920	Screw, Mach., Fill. Hd. 8-32 x 5/8"	1
99	26157	Spring — Throttle Adjustment	1
201	261198	Link — Governor	1
209	261306	Spring — Governor	1
219	391764	Oil Slinger, Gov. Gear and Bracket Assembly	1
222	390662	Plate — Gov. Control	1
225	231058	Crank — Gov. (1/4" dia.)	1

Ref. No.	Part No.	Description	No. Used
227	391733	Lever Assy. — Governor (For 1/4" dia. Crank)	1
230	222450	Washer — Gov. Crank (1/4" I.D.)	1
232	261197	Spring — Governor Link	1
258	93686	Screw — Control Bracket Mtg.	1
265	22378	Clamp — Casing	1
284	93804	Screw — Clamp Mtg.	1
304	391556	Housing — Blower	1
305	93158	Screw — Blower Housing Mounting Sem	1
306	222744	Shield — Cylinder	1
307	93163	Screw — Cylinder Shield Mtg. Sem	1
308	222725	Cover — Cylinder Head	1
319	395326	Armature Assy. (Less Trigger Coil)	1
332	92284	Nut — Hex	1
333	395492	Armature Group	1
334	93381	Screw — Armature Mtg. Sem	1
337	293918	Plug — Spark (1-1/2" high — 37-42 M.M.)	
		Note: Spark Plugs use Ignition Cable Terminal No. 221798	
351	93735	Screw — Terminal (Truss Hd.)	1
352	66068	Washer — Insulating	1
353	92791	Washer — Lock — Shakeproof	1
354	90576	Nut — Hex. — 8-32	2
355	66554	Collar — Insulating	1
356	299500	Wire — Ground	1
358	393411	Gasket Set	1
383	89838	Wrench — Spark Plug	1
422	222502	Clamp — Oil Filler Tube	1
455	222561	Cup — Screen Mounting	1
468	222562	Screen — Flush Rotating	1
523	391841	Cap & Dipstick — Oil Filler	1
524	68838	Seal — Filler Tube	1
525	280134	Tube — Oil Filler	1
552	231055	Bushing — Gov. Crank (1/4" I.D.)	1
562	92613	Bolt — Governor Lever	1
592	231082	Nut — Hex., 10-24	1
614	93306	Cotter — Hair Pin	1
615	93307	Retainer — E-Ring	1
635	66538	Elbow — Spark Plug	1
657	93469	Screw — Sem	1
663	93572	Screw	1
670	231039	Spacer — Control Bracket Mtg.	1
741	261196	Gear — Timing	1
757	212359	Link — Counterweight	1
758	391373	Counterweight Assy.	1
759	298909	Pin — Counterweight	1
761	93875	Screw — Counterweight	1
842	270920	Seal — Oil Filler Cap	1
847	392067	Fill Group — Oil	1
851	221798	Terminal — Ignition Cable	1
869	261463	Seat — Intake Valve (Std.)	1
870	210940	Seat — Exhaust Valve (Std.)	1
871	230655	Guide — Exhaust Valve	1
†883	270917	Gasket — Exhaust Pipe	1
897	394970	Trigger Coil	1

* Included in Gasket Set — Part No. 393411.

† See Ref. #29 Page 6.

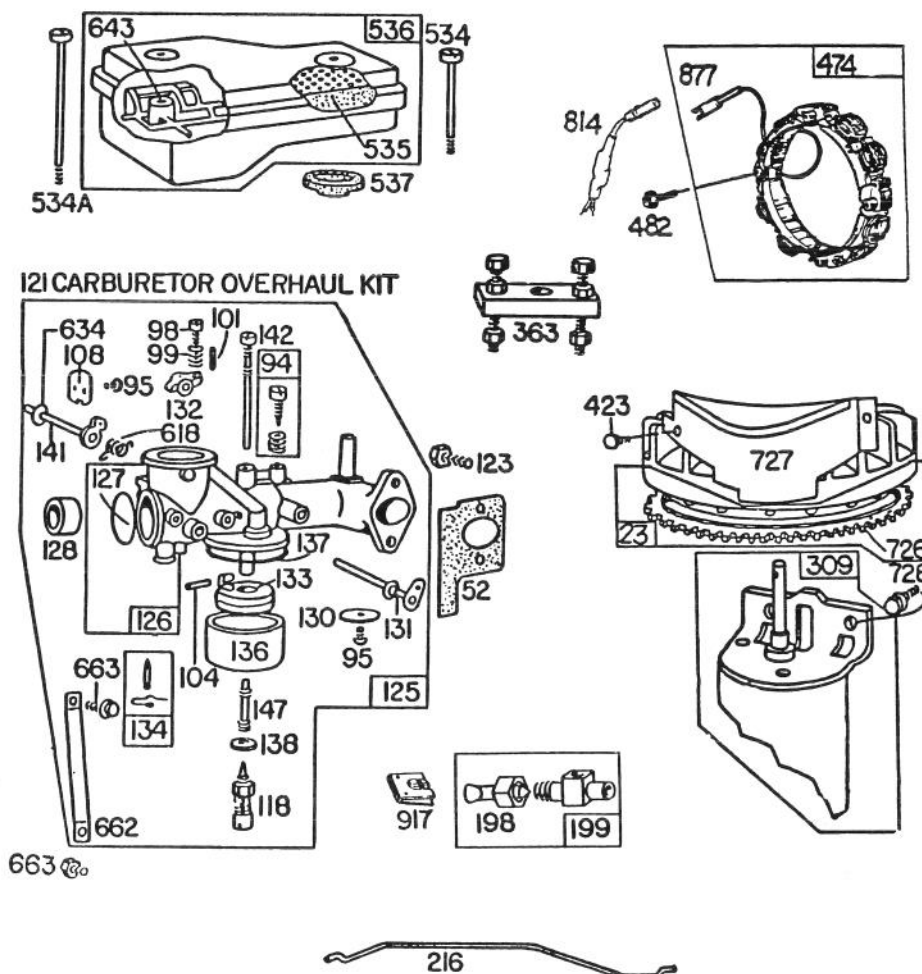


BRIGGS & STRATTON MODEL 252707-0637-01 (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
23	391988	Flywheel and Ring Gear Assy. — Magneto	1	142	†299740	Nozzle — Carburetor	1
52	*270872	Gasket — Carburetor Mounting	1	147	†230932	Screw — Nozzle	1
94	†292681	Valve Assy. — Carburetor Idle	1	198	293934	Valve — Fuel Shut-Off	1
95	93499	Screw — Throttle and Choke Valve Mtg. Sem	1	199	390303	Connector — Fuel Pipe	1
98	91920	Screw — Machine, Fill. Hd. 8-32 x 5/8"	1	216	261274	Link — Choke	1
99	26157	Spring — Throttle Adjustment	1	309		Motor — Starting (12 Volt)	1
101	93043	Pin — Throttle Stop	1	363	19203	Puller — Flywheel	1
104	†230896	Pin — Float Hinge	1	423	93984	Screw — Sem	1
108	222010	Valve Choke	1	474	392595	Stator — Alternator (Tri-Circuit)	1
118	†391233	Valve — Needle	1	482	93621	Screw — Sem	1
121	299852	Carburetor Overhaul Kit	1	534	93622	Screw — Air Cleaner	1
123	93357	Screw — Carburetor Mtg.	1	534A	93323	Screw — Air Cleaner	1
125	393410	Carburetor Assembly (Choke-A-Matic)	1	535	270843	Element — Air Cleaner	1
126	391787	Body Assembly Carburetor	1	536	391786	Cleaner Assembly — Air	1
127	†221997	Plug — Welch	1	537	270853	Gasket — Air Cleaner	1
128	211960	Venturi — Carburetor	1	618	261116	Spring — Choke Return	1
130	222858	Valve — Throttle	1	634	270382	Washer — Choke Shaft	1
131	391512	Shaft and Lever — Throttle	1	643	280118	Support — Air Cleaner Element	1
132	211712	Stop — Throttle	1	662	222311	Bracket — Carburetor	1
133	299707	Float — Carburetor	1	663	93572	Screw	1
134	†299096	Valve — Fuel Inlet	1	726	392134	Gear — Ring (Includes mounting parts)	1
136	221995	Bowl — Float	1	727	395405	Cover and Shield — Starter	1
137	†270511	Gasket — Float Bowl	1	728	93523	Screw — Sem	1
138	†222014	Washer — Float Bowl	1	814	392606	Wire Assembly — Alternator	1
141	390684	Shaft and Lever — Choke	1	877	393537	Connector Assy. (Tri-Circuit)	1
				917	223271	Valve Handle — Fuel Shut-Off	1

* Included in Gasket Set — Part No. 393411.

† Included in Carburetor Overhaul Kit — Part No. 299852.

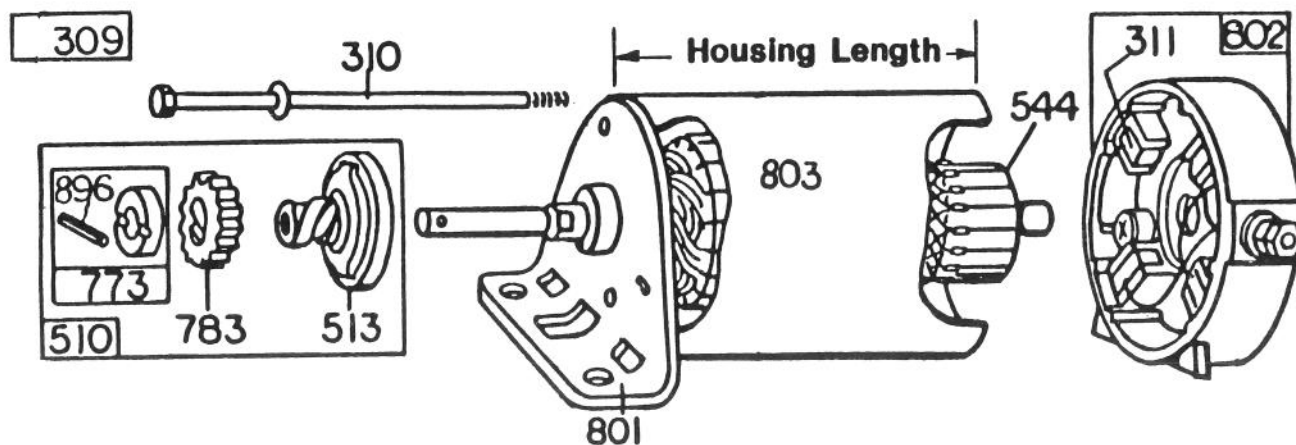

BRIGGS & STRATTON MODEL 252707-0637-01 (Continued)

Ref. No.	Part No.	Description	No. Used
309	394805	Motor and Drive Assembly	1
310	94003	Thru Bolt	2
311	395538	Brush Assembly	4
510	391461	Drive Assy. (Incl. Ref. #513, 773, 783, 896)	1
513	391135	Clutch Assembly	1
544	392747	Armature Assembly	1

Ref. No.	Part No.	Description	No. Used
773	391462	Retainer & Pin	1
783	280104	Gear	1
801	394856	End Cap Assy. — Drive	1
802	395537	End Cap Assy. — Commutator (Incl. Ref. #311)	1
803	392744	Housing Assembly	1
896	93754	Roll Pin	1

IDENTIFICATION AND ORDERING

Model and Serial Numbers

The Rider has two identification numbers: a model number and a serial number. The two numbers are stamped on a decal which is located on the right hand side of frame ahead of brake pedal. In any correspondence concerning the Rider, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial numbers of the Rider.
2. Part number, description, and quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

The Toro Promise

A One Year Limited Warranty

The Toro Company promises to repair your TORO Product if defective in materials or workmanship. The following time periods from the date of purchase apply:

Residential Product 1 Year
Residential Products Used Commercially . . . 45 Days

The costs of parts and labor are included, but the customer pays the transportation costs. Just return any residential product to an Authorized TORO Service Dealer or TORO Distributor.

Should you feel your TORO is defective and wish to rely on The Toro Promise, the following procedure is recommended:

1. Contact any Authorized TORO Service Dealer, TORO Master Service Dealer, or TORO Distributor (the Yellow Pages of your telephone directory is a good reference source).
2. He will either instruct you to return the product to him or recommend another Authorized TORO Service outlet which might be more convenient.
3. Bring the product along with your original sales slip, or other evidence of purchase date, to the service dealer.
4. The servicing dealer will inspect the unit, advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without extra charge to you.

If for any reason you are dissatisfied with the dealer's analysis of the defect or the service performed, you may contact us.

Write:

TORO Customer Service Department
8111 Lyndale Avenue South
Minneapolis, Minnesota 55420

The above remedy of product defects through repair by an Authorized TORO Service Dealer is the purchaser's sole remedy for any defect.

THERE IS NO OTHER EXPRESS WARRANTY. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY.

Some states do not allow limitation on how long implied warranty lasts, so the above limitation may not apply to you.

This warranty applies only to parts or components which are defective and does not cover repairs necessary due to normal wear, misuse, accidents, or lack of proper maintenance. Regular, routine maintenance of the unit to keep it in proper operating condition is the responsibility of the owner.

All warranty repairs reimbursable under The Toro Promise must be performed by an Authorized TORO Service Dealer using Toro approved replacement parts.

Repairs or attempted repairs by anyone other than an Authorized TORO Service Account are not reimbursable under The Toro Promise. In addition, these unauthorized repair attempts may result in additional malfunctions, the correction of which is not covered by warranty.

The Toro Company is not liable for indirect, incidental or consequential damages in connection with the use of the product including any cost or expense of providing substitute equipment or service during periods of malfunction or non-use.

Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their TORO Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason

you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.