


MODEL NO. 58237 — 3000001 & UP


PARTS CATALOG

5 hp TILLER

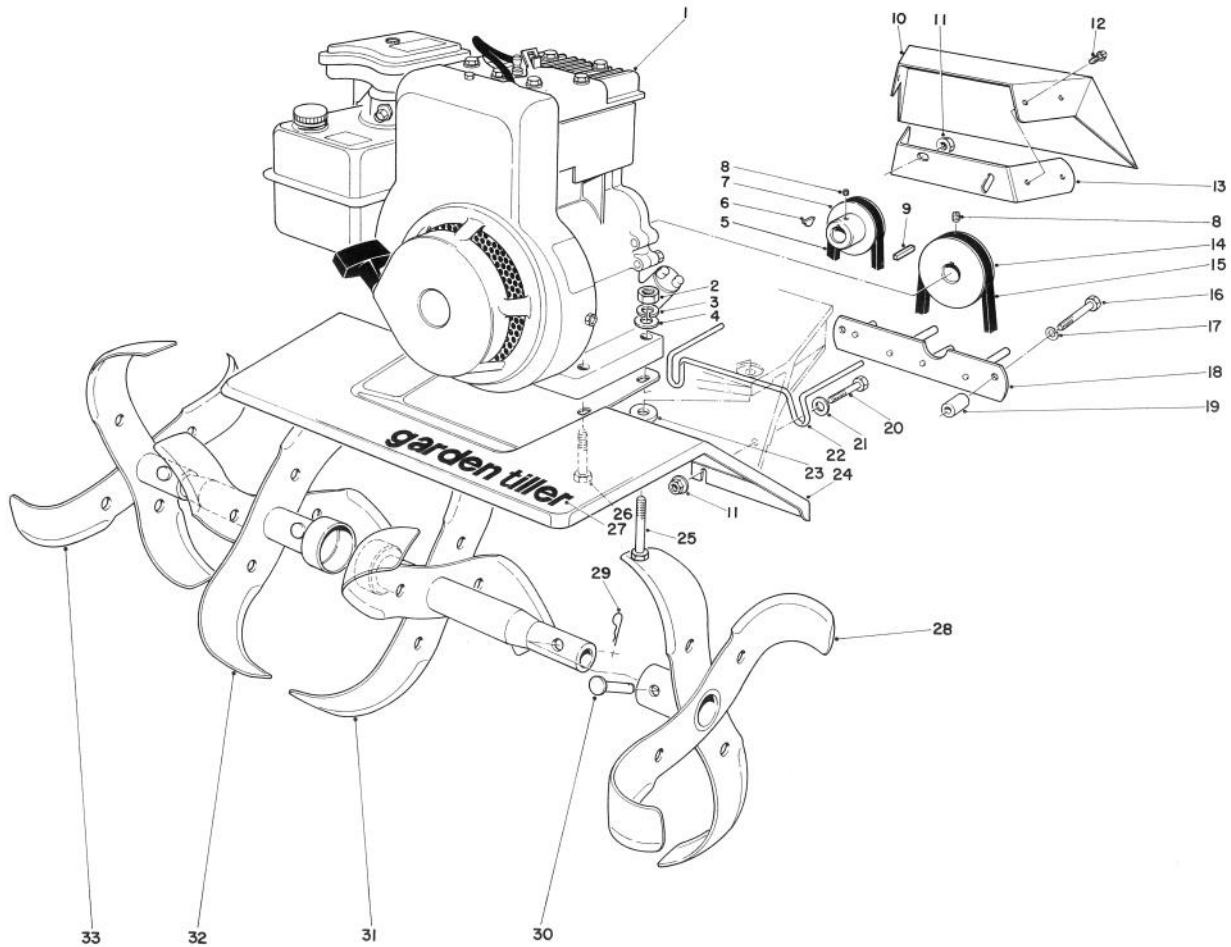

TINE AND ENGINE ASSEMBLY


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	221-529	Engine	1	16	321-18	Capscrew	2
2	3217-6	Nut	4	17	3253-3	Lockwasher	2
3	3253-4	Lockwasher	4	18	26-3770	Belt Guide	1
4	3256-23	Plain Washer	1	19	26-3220	Spacer	2
5	28-8660	V-Belt (Rev.)	1	20	321-8	Capscrew	2
6	3257-37	Woodruff Key	1	21	3256-22	Washer	2
7	26-3570	Pulley — Engine (Rev.)	1	22	26-4030	Belt Guide — Worm Shaft	1
8	3245-32	Hex Socket Set Screw	4	23	7-0081	Spacer	4
9	7-0036	Key	1	24	26-3660	Tine Shroud	1
10	26-3670	Pulley Cover	1	25	322-12	Capscrew	1
11	32128-10	Flanged Locknut	4	26	322-11	Capscrew	3
12	32104-76	Self Tapping Screw	4	27	17-8340	Decal — Garden Tiller	1
13	26-3650	Strap — Belt Shield	1	28	20-8840	Slasher Tine L.H. Outer	1
14	27-5830	Pulley — Engine (Fwd.)	1	29	3290-250	Hair Pin Cotter	4
15	28-8630	V-Belt (Fwd.)	1	30	7-2116	Tine Pin	4

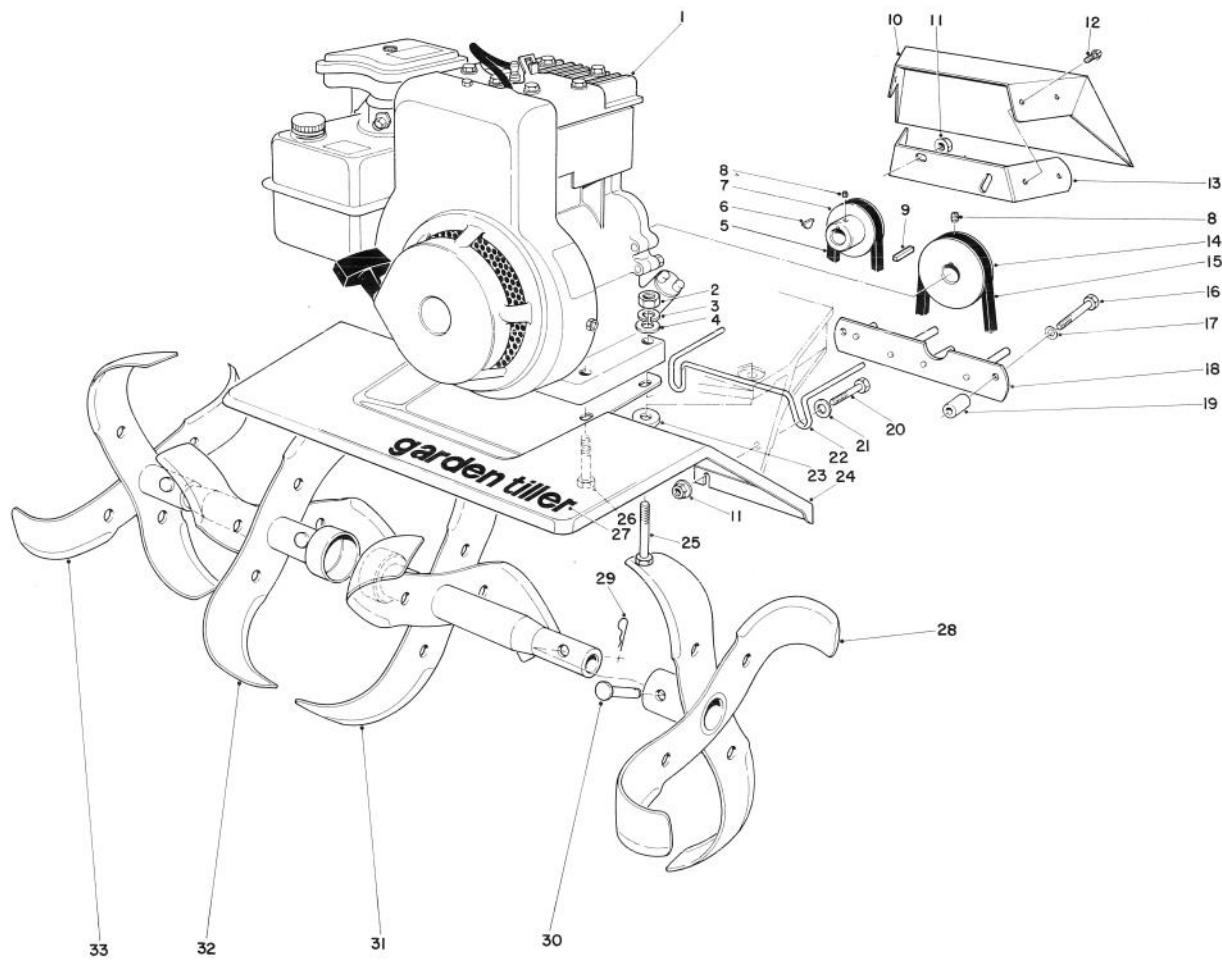

TINE AND ENGINE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
31	20-8830	Slasher Tine L.H. Inner	1
32	20-8810	Slasher Tine R.H. Inner	1


Ref. No.	Part No.	Description	No. Used
33	20-8820	Slasher Tine R.H. Outer	1

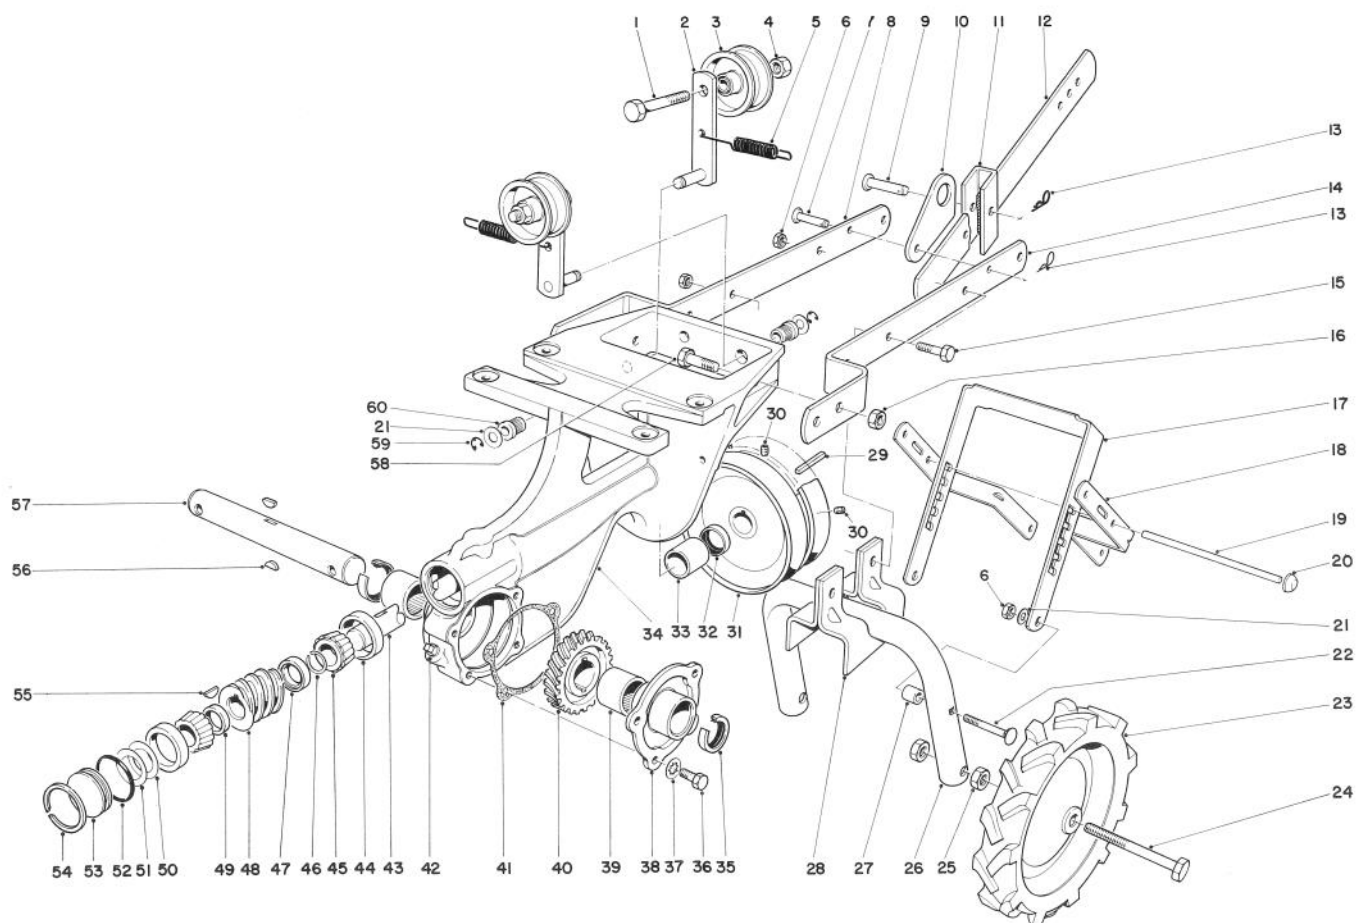

CHASSIS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	328-8	Capscrew	2
2	26-7100	Idler Arm	2
3	7-0056	Pulley	2
4	32152-2	Locknut	2
5	26-3730	Spring — Extension	2
6	32152-1	Nut	5
7	283-14	Pin	1
8	26-3120	Drawbar R.H.	1
9	283-23	Pin	1
10	26-3750	Latch — Depth Gauge	1
11	26-3740	Bracket — Depth Gauge	1
12	26-3760	Depth Gauge	1
13	3290-250	Hair Pin Cotter	2
14	26-5850	Drawbar L.H.	1
15	322-7	Capscrew	3
16	32149-10	Nut	4
17	26-3180	Lever — Wheel Adjustment	1
18	26-3130	Support Handle	2
19	26-3230	Shaft — Wheel Adjustment	1
20	3290-390	Push-On	2
21	3256-23	Washer	4
22	3230-7	Carriage Bolt	2
23	26-3610	Wheel	2


Ref. No.	Part No.	Description	No. Used
24	26-3600	Wheel Bolt	2
25	32153-5	Locknut	4
26	26-3140	Axle Yoke	1
27	5-1537	Spacer	2
28	26-3150	Saddle Yoke	2
29	7-0036	Key	1
30	3241-5	Set Screw	2
31	27-5840	Pulley — Worm Shaft	1
32	253-84	Oil Seal	1
33	256-167	Bushing	1
34	26-2280	Chassis	1
35	7-0045	Oil Seal	2
36	3235-18	Hex Hd. Capscrew	4
37	3254-8	Lockwasher	4
38	7-0048	Cover	1
39	252-88	Needle Bearing	2
40	7-0047	Worm Wheel	1
41	7-0020	Gasket	1
42	281-1	Pipe Plug	1
43	7-0012	Shaft Worm	1
44	254-79	Bearing Cup	2
45	254-78	Bearing Cone	2
46	7-0013	Snap Ring	1

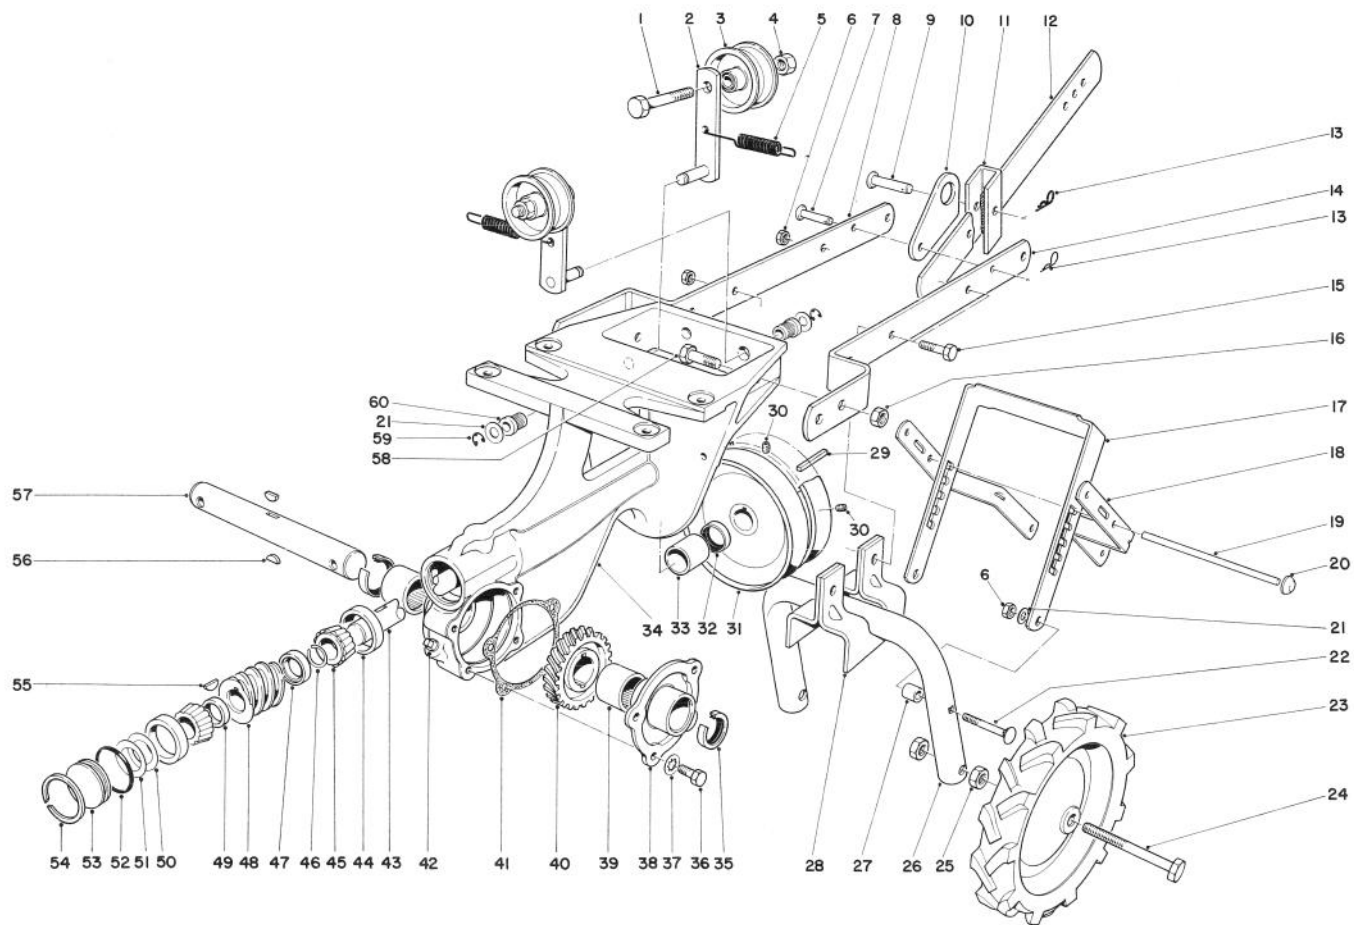

CHASSIS ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
47	26-5800	Spacer Rear	1
48	7-0016	Worm Gear	1
49	7-0015	Spacer Front	1
50	23-7690	Shim (.010)	A/R
51	23-7700	Shim (.020)	A/R
52	237-71	"O" Ring	1
53	23-7710	Plug Tiller	1

Ref. No.	Part No.	Description	No. Used
54	7-0018	Snap Ring	1
55	3257-23	Woodruff Key	1
56	3257-33	Woodruff Key	2
57	7-0046	Worm Wheel Shaft	1
58	323-7	Capscrew	4
59	32120-35	Snap Ring	2
60	7-0023	Idler Bearing	2

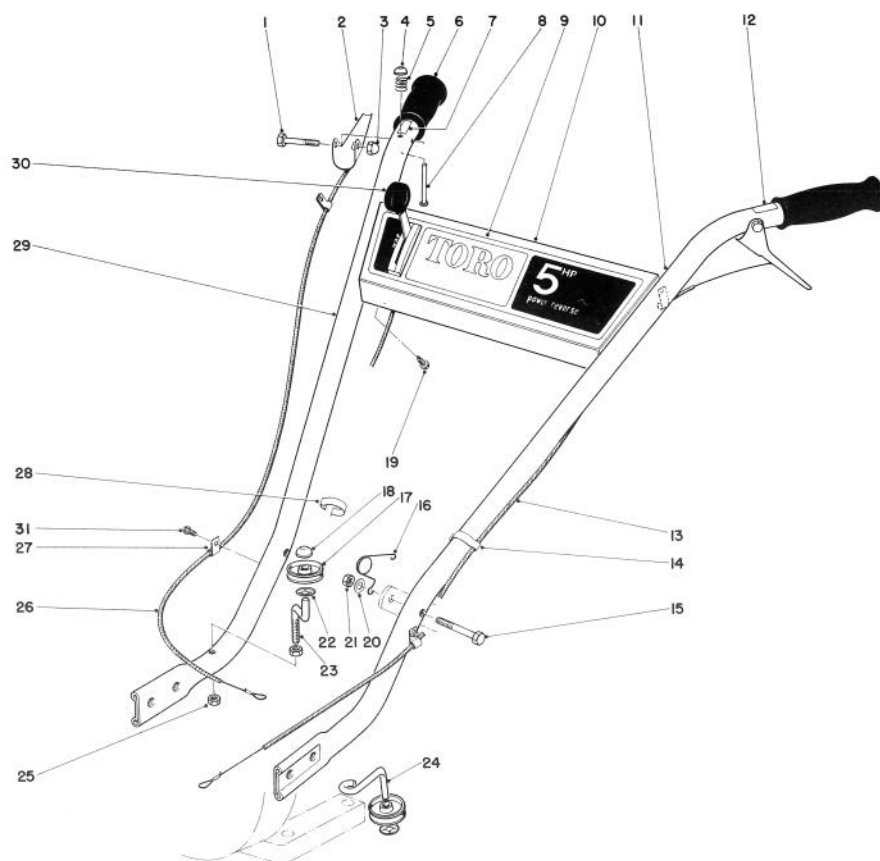


HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	321-10	Capscrew	2
2	26-3630	Lift — Bail	2
3	32111-7	Nut — Acorn	2
4	32111-9	Cap Push-On	1
5	5-4723	Spring	1
6	235-21	Hand Grip	2
7	26-3710	Decal — Fwd.	1
8	26-3640	Pin Lock In	1
9	28-1450	Decal — Escutcheon	1
10	17-9300	Escutcheon Panel	1
11	26-3420	Handle L.H.	1
12	26-3720	Decal Rev.	1
13	26-3460	Cable Assembly Rev.	1
14	2412-47	Boden Clip	1
15	322-10	Capscrew	2
16	26-3690	Spring — Torsion	2

Ref. No.	Part No.	Description	No. Used
17	26-3490	Pulley Cable	2
18	3290-396	Push-On, Cap Type	1
19	32104-76	Self Tapping Screw	4
20	3256-23	Plain Washer	2
21	32152-1	Nut	2
22	3290-395	Retainer — Push On	2
23	26-3470	Spindle — Fwd.	1
24	26-3480	Spindle — Rev.	1
25	32128-28	Nut	2
26	26-3450	Cable Assembly Fwd.	1
27	2412-21	Clamp	4
28	26-5890	Boden Clip	1
29	26-3440	Handle R.H.	1
30	26-3590	Throttle Control	1
31	32140-29	Self Tapping Screw	4
*	8-5489	Loose Parts	1

* Not Illustrated

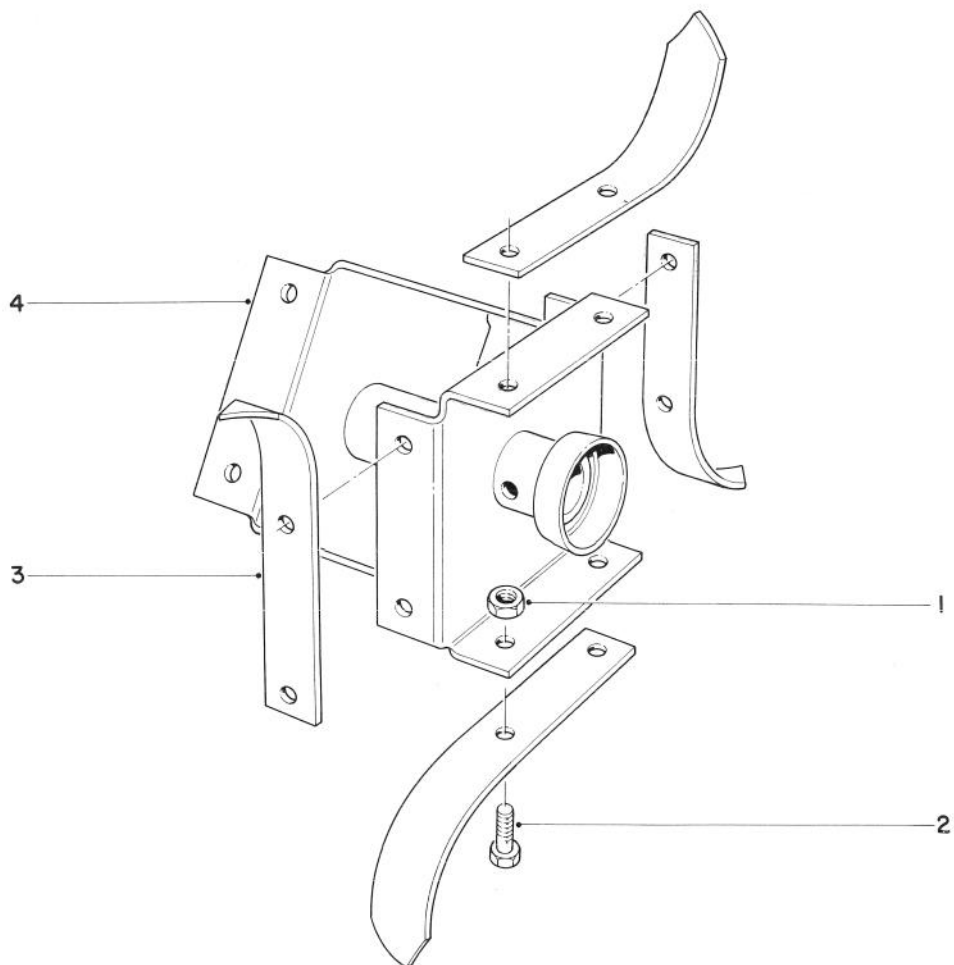


PICK TINE KIT MODEL NO. 17-8200 (Optional)

Ref. No.	Part No.	Description	No. Used
1	32152-2	Nut	32
2	323-4	Capscrew	32
3	17-8260	Pick Tine	16

Ref. No.	Part No.	Description	No. Used
4	18-8920	Axle Welded R.H.	1
*	17-8270	Axle Welded L.H.	1


*Not Illustrated

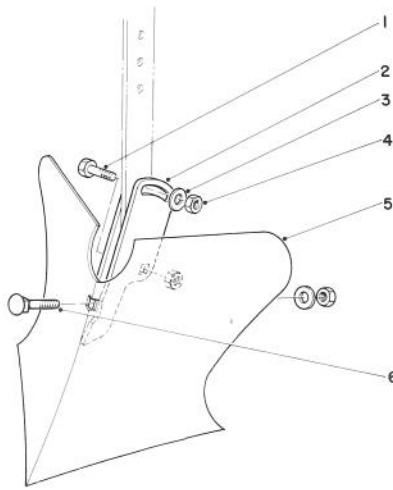

8" FURROWING TOOL MODEL NO. 59008 (Optional)

Ref. No.	Part No.	Description	No. Used
1	323-7	Capscrew	2
2	7-1512	Clamp	2
3	3256-4	Washer	2

Ref. No.	Part No.	Description	No. Used
4	3217-7	Nut	3
5	7-1491	Shovel	1
6	3236-10	Carriage Bolt	1

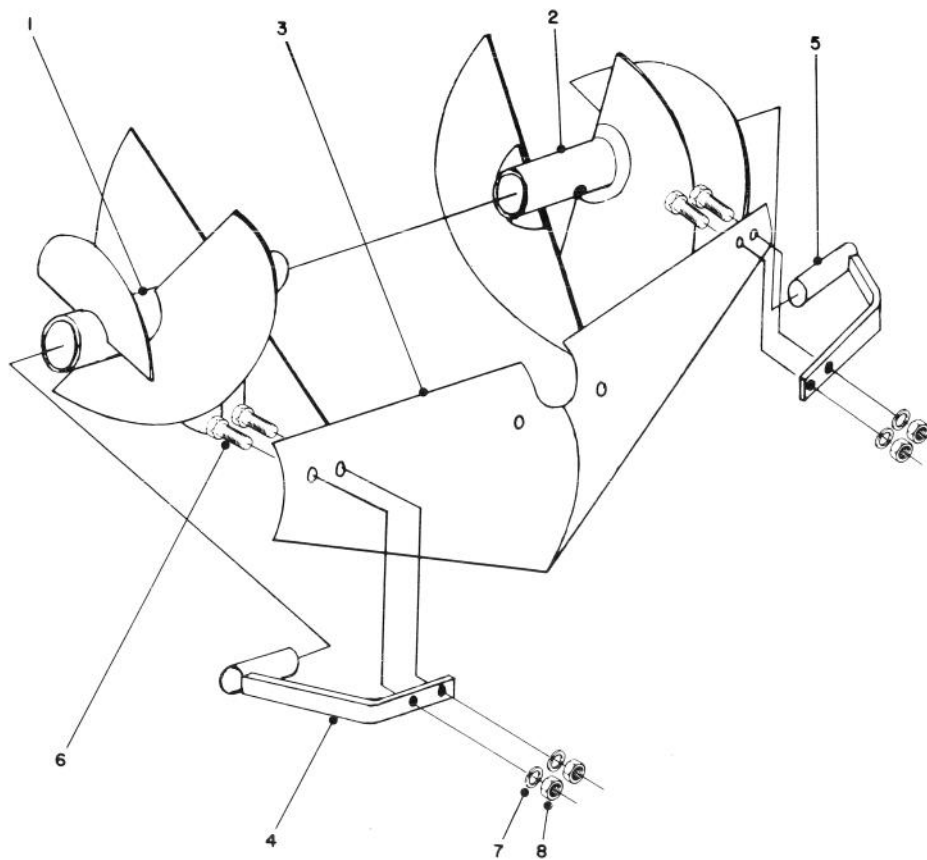


TIL-ROW ATTACHMENT MODEL NO. 59063 (Optional)

Ref. No.	Part No.	Description	No. Used
1	JT-1L	Cultivator Blade L.H.	1
2	JT-1R	Cultivator Blade R.H.	1
3	JT-3	Bedder Plate	1
4	JT-2L	Bedder Bracket L.H.	1

When ordering repair parts be sure to specify Model B.

Ref. No.	Part No.	Description	No. Used
5	JT-2R	Bedder Bracket R.H.	1
6		Bolt 1/4 - 20 x 3/4	4
7		Lockwasher 1/4	4
8		Nut 1/4 - 20	4

NOTE: Obtain repair parts from: Til-Row Inc.
14206 Industry
Houston, Texas 77405

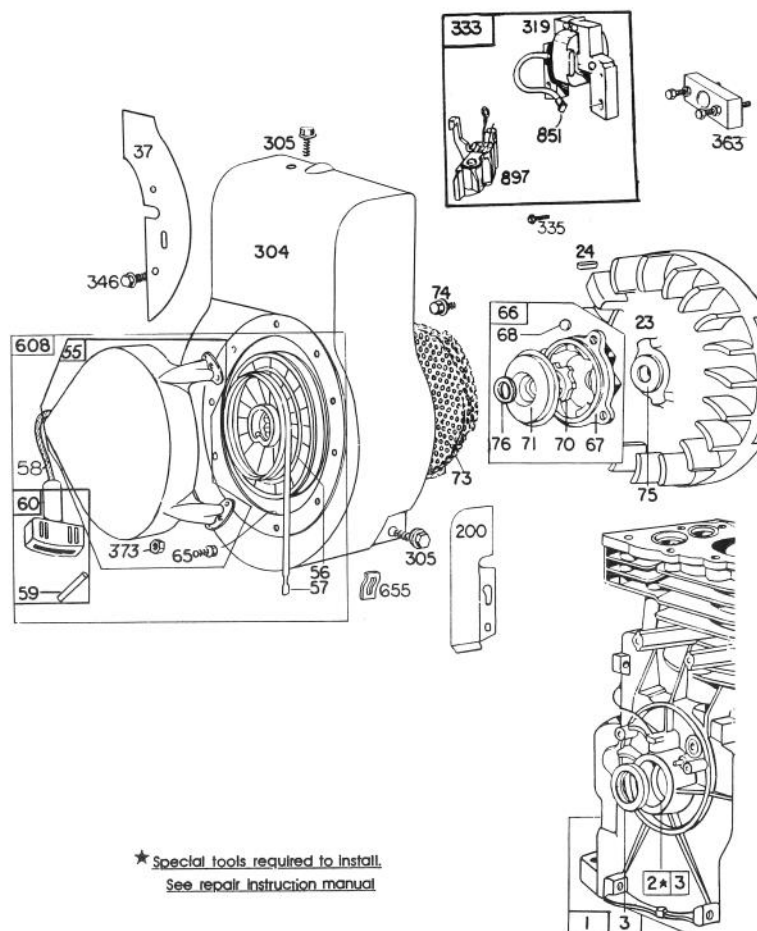


BRIGGS & STRATTON ENGINE MODEL NO. 130292-1642-01

Ref. No.	Part No.	Description	No. Used
1	395990	Cylinder Assembly	1
2	297565	Bushing — Cylinder	
		Note: Requires Special Tools For Installation.	
3	299819	Seal — Oil	1
23	297229	Flywheel Magneto	1
24	222698	Key — Flywheel	1
37	222443	Guard — Flywheel	1
55	299431	Housing — Rewind Starter	1
56	295871	Pulley — Rewind Starter (Includes 63" Long Rope)	1
57	294303	Spring — Rewind Starter	1
58	66884	Rope — Rewind Starter — 63" Long	1
59	230228	Pin — Starter Grip	1
60	393152	Grip — Starter Rope	1
65	93067	Screw — Stamped Steel Housing Mounting	1
66	394558	Clutch Assy. — Rewind Starter	1
67	394897	Housing — Starter Clutch	1
68	63770	Ball — Clutch	1
70	298436	Ratchet — Rewind Starter	1

Ref. No.	Part No.	Description	No. Used
71	221653	Washer — Clutch Retainer	1
73	221923	Screen — Starter Pulley	1
74	93490	Screw	1
75	220865	Washer — Spring	1
76	68238	Washer — Ratchet Sealing	1
200	221480	Guide — Air	1
304	299410	Housing — Blower	1
305	93158	Screw — Blower Housing Mounting	1
319	395490	Armature Assy. (Less Trigger Coil)	1
333	395491	Armature — Magneto	1
335	93414	Screw — Armature Mtg.	1
346	93705	Screw	1
363	19069	Flywheel Puller (Optional Accessory)	1
373	92987	Nut — Hex	1
608	390463	Starter Assy. — Rewind	1
655	222598	Anchor — Spring	1
851	221798	Cable Terminal — Ignition	1
897	394970	Trigger Coil	1

BRIGGS & STRATTON ENGINE MODEL NO. 130292-1642-01

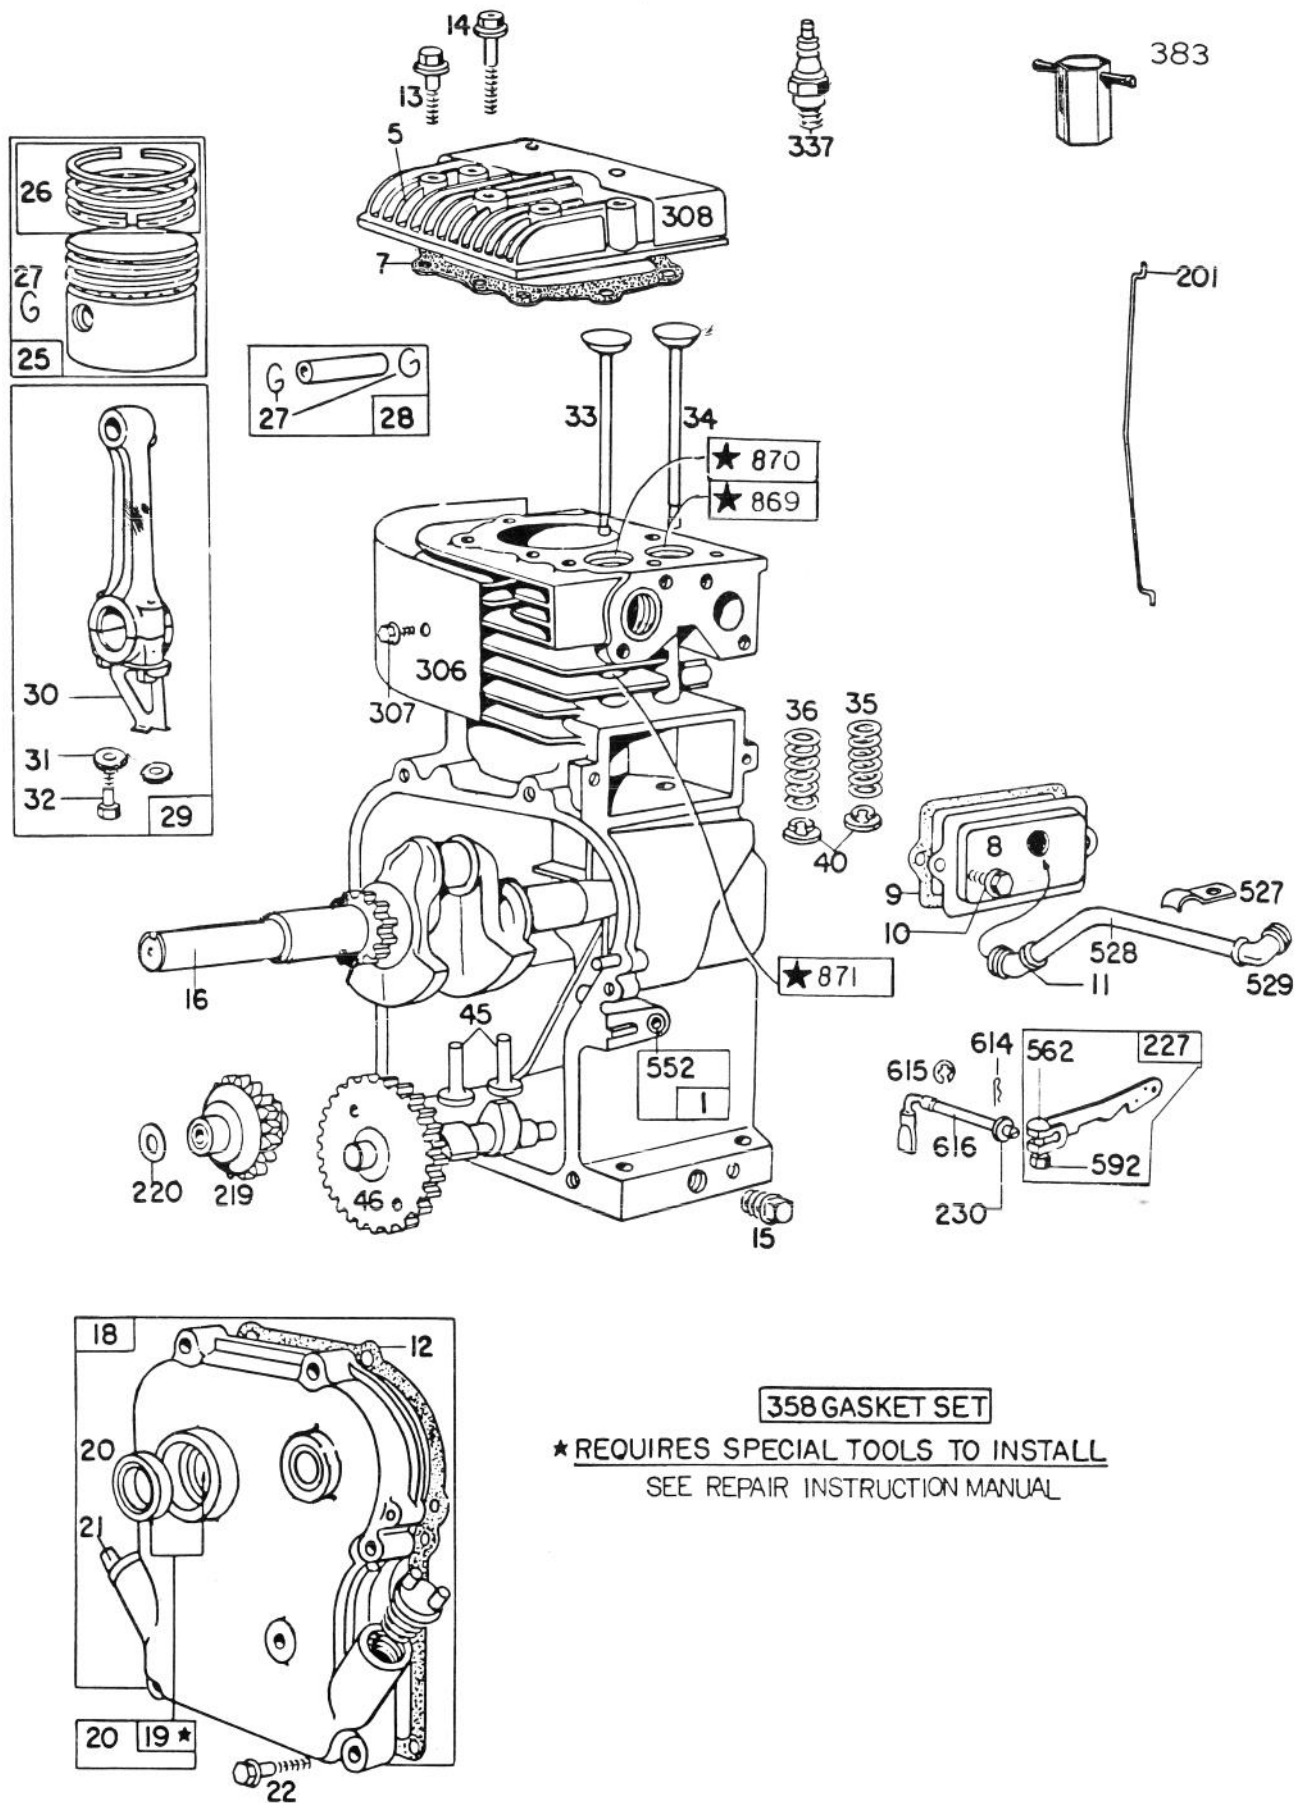


BRIGGS & STRATTON ENGINE MODEL NO. 130292-1642-01

Ref. No.	Part No.	Description	No. Used
1	395990	Cylinder Assembly	1
5	211542	Head — Cylinder	1
7	*270383	Gasket — Cylinder Head	1
8	294178	Breather — Valve Chamber	1
9	*27549	Gasket — Valve Cover	1
10	93394	Screw — Breather Mtg.	1
11	66578	Grommet — Breather Tube	1
12	270080	Gasket — Crankcase — .015" thick (Std.)	1
	*270125	Gasket — Crankcase — .005" thick	1
	*270126	Gasket — Crankcase — .009" thick	1
13	93368	Screw — Cylinder Head (2-3/32" long)	1
14	93369	Screw — Cylinder Head (2-15/32" long)	1
15	91249	Plug — Pipe, 1/4" Std., Square Head	1
16	260938	Crankshaft	1
18	298183	Cover Assy. — Crankcase	1
19	297603	Bushing — Crankcase Cover Note: Requires special tools for installation.	1
20	294606 391484	Seal — Oil Note: Seal — Oil Used on the Auxiliary P.T.O. Shaft	1
21	66768	Plug — Oil Filler	1
22	93032	Screw — Crankcase Cover Mounting	1
	93656	Note: Stud,	1
	90832	Lockwasher — Used to mount Crankcase Cover	1
25	298904	Piston Assy. — Std.	1
	298905	Piston Assy. — .010" O.S.	1
	298906	Piston Assy. — .020" O.S.	1
	298907	Piston Assy. — .030" O.S. PISTON RING SETS: Note: For Chrome Piston Ring Set — Std. Size — Order Part No. 299742.	1
26	298982	Ring Set — Std. Piston	1

Ref. No.	Part No.	Description	No. Used
26	298983	Ring Set — .010" O.S. Piston	1
	298984	Ring Set — .020" O.S. Piston	1
	298985	Ring Set — .030" O.S. Piston	1
27	26026	Lock — Piston Pin	1
28	298909	Pin Assy. — Piston — Std.	1
	298908	Pin Assy. — Piston — .005" O.S.	1
29	299430	Rod Assy. — Connecting Note: For Connecting Rod with .020" undersize Crank- pin Bore — Order No. 390459.	1
30	221890	Dipper — Connecting Rod	1
31	222282	Washer (one for each screw)	1
32	92296	Screw — Conn. Rod	1
33	211119	Valve — Exhaust	1
34	261044	Valve — Intake	1
35	260552	Spring — Intake Valve	1
36	26478	Spring — Exhaust Valve	1
40	93312	Retainer — Valve Spring	1
45	260642	Tappet — Valve	1
46	211284	Gear — Cam	1
201	261558	Link — Governor	1
219	391737	Gear — Governor	1
220	221551	Washer — Thrust	1
227	393920	Lever Assy. — Governor	1
230	222450	Washer — Governor Lever (1/4" I.D.)	1
306	221511	Shield — Cylinder	1
307	93042	Screw — Cylinder Shield Mtg.	1
308	221512	Cover — Cylinder Head	1
337	293918	Plug — Spark — 1-1/2" High — 37 M.M. (Resistor Type)	1
358	297615	Gasket Set	1
383	89838	Wrench — Spark Plug	1
527	221514	Clamp — Breather Tube	1
528	230722	Tube — Breather	1
529	67838	Grommet — Breather Tube	1
552	231079	Bushing — Governor Crank (1/4" I.D.)	1
562	92613	Bolt — Governor Lever	1
592	231082	Nut — Hex. — 10-24	1
614	93306	Cotter — Hair Pin	1
615	93307	Retainer — E-Ring	1
616	231077	Crank — Governor	1
869	211787	Seat — Intake Valve (Std.)	1
870	211172	Seat — Exhaust Valve (Std.)	1
871	63709	Guide — Exhaust Valve	1

* Included in Gasket Set — Part No. 297615.

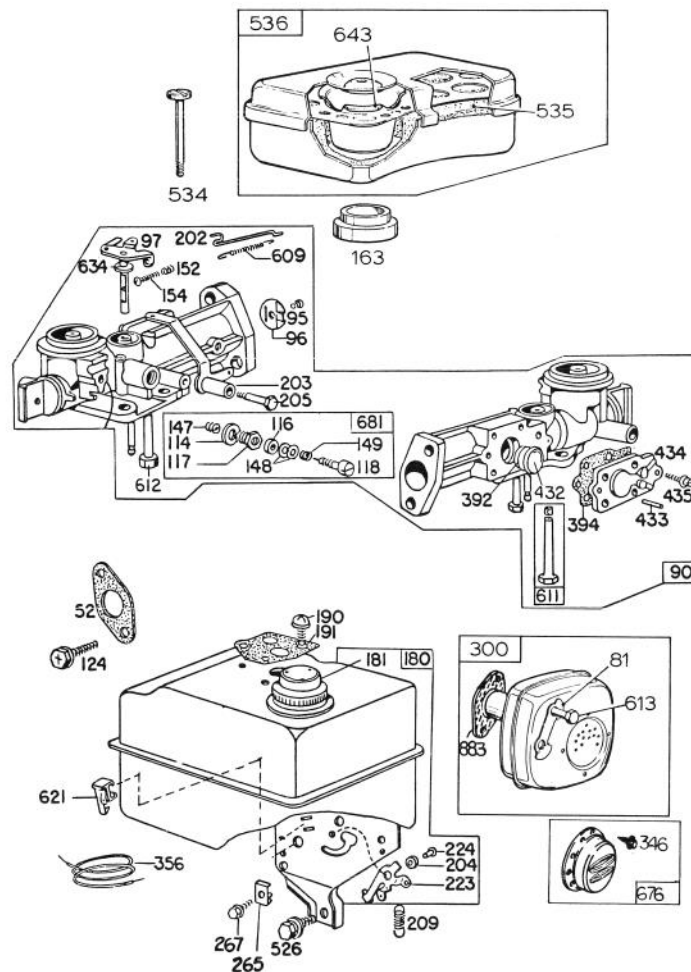

BRIGGS & STRATTON ENGINE MODEL NO. 130292-1642-01

Ref. No.	Part No.	Description	No. Used
52	*27355	Gasket — Carburetor Mtg.	2
81	222263	Lock — Screw	1
90	299437	Carburetor Assembly	1
95	93499	Screw — Throttle Valve to Shaft Sem	1
96	211203	Throttle — Carburetor	1
97	299212	Shaft and Lever — Throttle	1
114	66594	Gasket — Needle Valve Nut	1
116	65978	Packing — Needle Valve	1
117	230590	Nut — Needle Valve	1
118	23433	Valve — Needle	1
124	93357	Screw — Hex. Head	1
147	230591	Seat — Needle Valve	1
148	22235	Washer — Needle Valve	2
149	26336	Spring — Needle Valve	1
152	260575	Spring — Throttle Adjustment	1
154	93527	Screw — Machine, Rd. Hd. — 5-40 x 5/8"	1
163	27660	Gasket — Air Cleaner Mtg.	1
180	297600	Tank Assembly — Fuel	1
181	392304	Cap — Fuel Tank	1
190	93440	Screw — Fuel Tank Mounting Sem	1
191	*27911	Gasket — Fuel Tank Mtg.	2
202	260678	Link — Throttle	1
203	393919	Crank — Bell	1
204	222962	Bushing — Governor Lever (Flat)	1
205	93838	Screw — Shoulder	1
209	260695	Spring — Governor	1
223	221517	Lever — Governor Control	1

Ref. No.	Part No.	Description	No. Used
224	93491	Rivet — Governor Control Lever Mounting	1
265	221535	Clamp — Casing	1
267	93496	Screw — Sem	1
300	393615	Muffler — Exhaust	1
346	93705	Screw	1
356	299500	Wire — Ground	1
392	260455	Spring — Fuel Pump Diaphragm	1
394	270026	Diaphragm	1
432	221377	Cap — Spring	1
433	93265	Pin — Diaphragm Cover	1
434	210959	Cover — Diaphragm	1
435	93141	Screw — Diaphragm Cover	1
526	93343	Screw — Tank Bracket Mounting Sem	1
534	93322	Screw — Air Cleaner	1
535	27987	Element — Air Cleaner	1
536	297036	Cleaner Assembly — Air	1
609	260694	Spring — Throttle Link	1
611	391813	Fuel Pipe and Clip Assy.	1
612	296811	Pipe — Fuel	1
613	93935	Screw — Hex. Hd. Shoulder	1
621	297472	Switch — Stop	1
634	270167	Washer, Throttle Shaft (Felt)	1
643	280374	Cup — Air Cleaner	1
676	395700	Deflector — Exhaust (Direct Outlet)	1
681	299060	Needle Valve Kit	1
883	270918	Gasket — Muffler	1

*Included in Gasket Set — Part No. 297615.