


MODEL NO. 62933-4000001 & UP

PARTS CATALOG


#### **5 H.P. BLOWER**

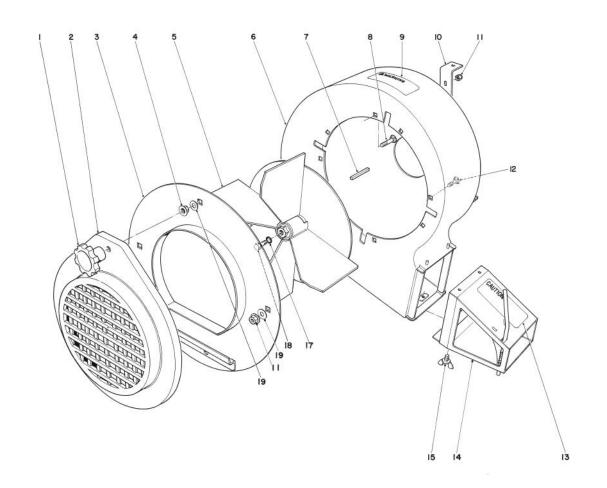

### **BLOWER ASSEMBLY**

Ref. No.	Part No.	Description	No. Used
1	19-4050	Knob, Handle Release	1
1	20-5780	Blower Intake	1
3	20-5450	Blower Cover	1
4	32128-13	Flange Nut	1
5	37-9230	Fan	1
6	20-5890	Blower Housing	1
7	7-0036	Key	1
8	3230-3	Carriage Bolt	1
9	37-9260	Decal — Warning	1
10	39-4660	Mounting Bracket	1

	Ref. No.	Part No.	Description	No. Used
	11	32152-1	Locknut	5
	12	3230-19	Carriage Bolt	3
	13	20-7900	Decal - Exhaust	1
	14	20-6570	Blower, Exhaust	
		100000000000000000000000000000000000000	(Incl. Ref. #13)	1
	15	3288-6	Screw Wing	1
Ì	17	3253-4	Lockwasher	1
	18	40-6990	Screw - Special	1
	19	3256-25	Flat Washer	3

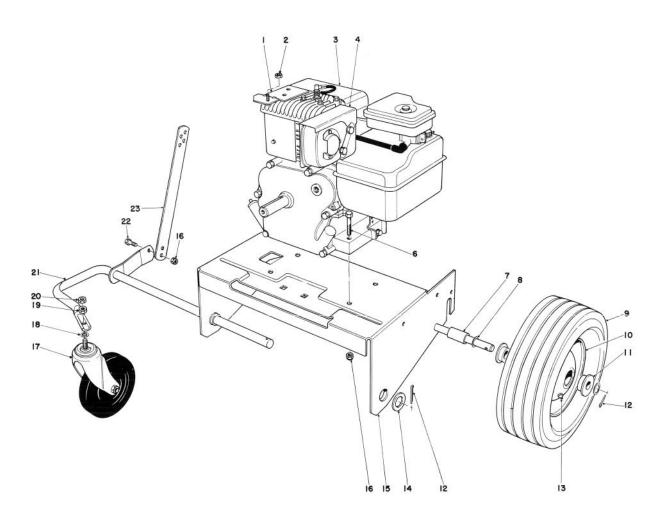


## **ENGINE AND BASE ASSEMBLY**

Ref. No.	Part No.	Description	No. Used
1	39-4680	Mounting Bracket	1
2	3296-47	Locknut	1
3	221-643	Engine	1
4	39-4690	Heat Shield — Muffler	1
6	322-7	Capscrew	4
7	20-5410	Axle Spacer	2
8	7-3590	Washer, Special	4
9	234-22	Tire	2
10	20-3350	Wheel & Tire Assembly	
		(Incl. Ref. #9, 11 & 13)	2
11	256-241	Bushing	2
12	3272-17	Cotter Pin	3

Ref, No.	Part No.	Description	No. Used
13	302-5	Grease Fitting	2
14	3256-29	Plain Washer	1
15	20-5570	Engine Plate	1
16	32152-1	Locknut	5
17	23-3320	Caster Wheel	1
18	3254-4	Lockwasher	1
19	3217-9	Nut	1
20	32152-3	Locknut	1
21	23-3370	Front Wheel Support	1
22	322-3	Capscrew	1
23	37-9460	Bar Height Adjustment	1
*	8-6499	Loose Parts	1


<sup>\*</sup>Not Illustrated

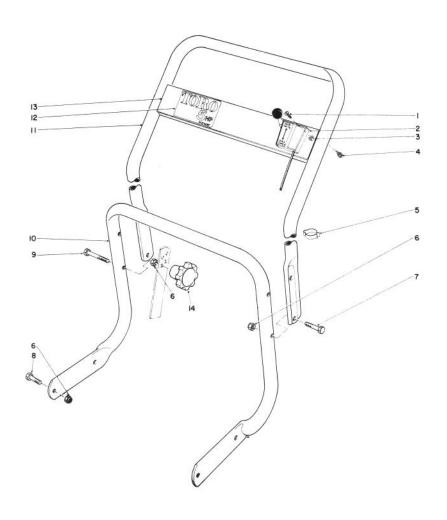

## HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3250-1	Screw	2
2	23-3390	Throttle Control	1
3	3217-25	Nut	2 4
4	32104-76	Self Tapping Screw	4
5	2412-47	Clip	1
6	32152-1	Locknut	8
7	322-9	Capscrew	3


Ref. No.	Part No.	Description	No. Used
8	322-3	Capscrew	4
9	322-10	Capscrew	1
10	20-5810	Lower Handle	1
11	37-9240	Handle	1
12	20-7230	Decal – Escutcheon Plate	1
13	20-5770	Escutcheon Plate	1
14	19-4050	Knob	1
	8		

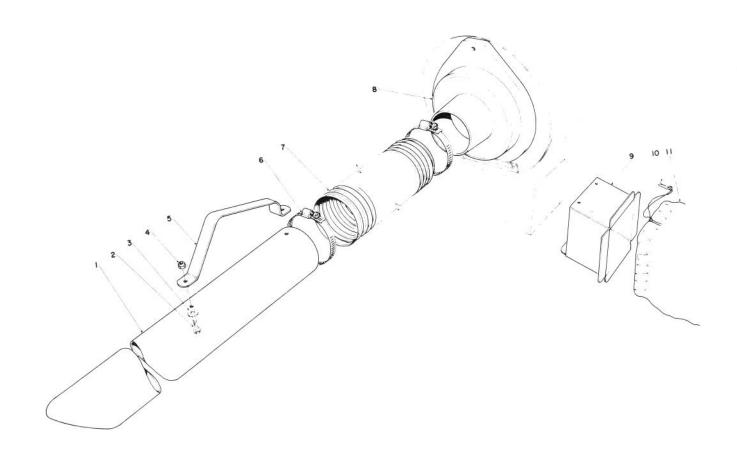

# **BLOWER BAGGING KIT MODEL NO. 59084 (Optional)**

Ref. No.	Part No.	Description	No. Used
1	20-5750	Nozzle	1
2	321-3	Capscrew	2
2	20-5690	Special Washer	2 2 2
4	32149-2	Locknut	2
5	20-6200	Handle	1 2
6	2412-46	Hose Clamp	2


Ref. No.	Part No.	Description	No. Used
7	20-6650	Hose – Vacuum	1
8	20-5740	Adaptor	1
9	20-7300	Housing	1
10	3-2781	Bag Cord Fastener	1
11	8-4719	Bag	1

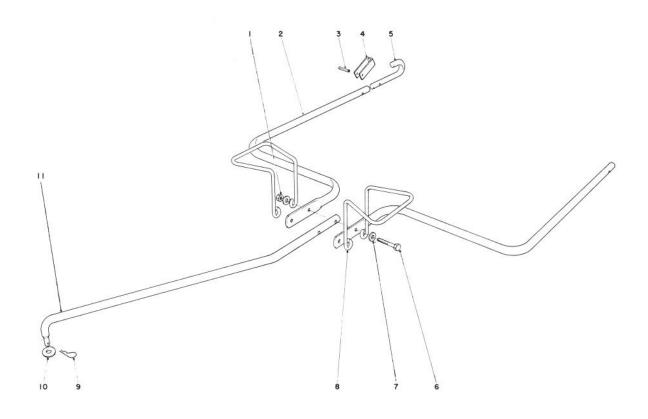

# HITCH KIT MODEL NO. 59087 (Optional)

Ref. No.	Part No.	Description	No. Used
1	32152-4	Lock Nut	2
2	20-8010	Hitch Arm	2
3	32121-18	Pin Slotted Roll	2 2 2 2 2 2
4	20-8030	Hitch Lock	2
5	20-8850	Hook Hitch Arm	2
6	321-15	Capscrew	2


Ref. No.	Part No.	Description	No. Used
7	3256-2	Flat Washer	4
8	23-5190	Support Bag	2
9	3290-250	Hair Pin Cotter	1
10	3290-377	Push Nut	1
11	23-5360	Hitch Pole	1

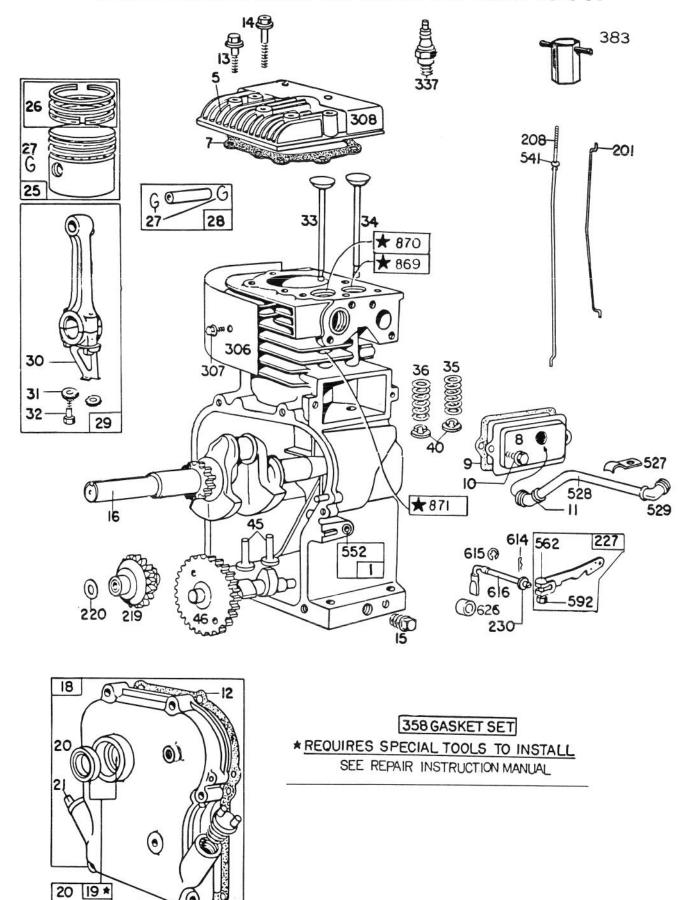

Part No.	Description	No. Used
395990	Cylinder Assembly	1
211542	Head - Cylinder	1
*270383	Gasket - Cylinder Head	1
294178	Breather - Valve Chamber	1
*27549	Gasket - Valve Cover	1
93394	Screw - Breather Mtg.	1
66578	Grommet - Breather Tube	1
*270080	Gasket - Crankcase -	
	.015" thick (Std.)	1
*270125	Gasket — Crankcase —	
	.005" thick	1
*270126	Gasket — Crankcase —	
	.009" thick	1
93368	Screw – Cylinder Head	
	(2-3/32" long)	1
	Note: 391608 Bracket - Mtg.	
	Furnished by equipment	
	manufacturer	
93369	Screw – Cylinder Head	
	(2-15/32" long)	1
91249	Plug - Pipe, 1/4" Std.,	
	Square Head	1
260938	Crankshaft	1
297602	Cover Assy. – Crankcase	1
297603	Bushing — Crankcase Cover	1
	Note: Requires special tools	
	for installation.	
294606	Seal - Oil	1
66768	Plug - Oil Filler	1
93032	Screw - Crankcase Cover	
	Mounting	1
298904	Piston Assy, Standard	1
298905	Piston Assy010" O.S.	1
298906	Piston Assy020" O.S.	1
298907	Piston Assy030" O.S.	1
	*	
	PISTON RING SETS: Note: For Chrome Piston Ring	
200002		1
		1
		1
	177	1
		1
		1
250505	Till Assy. — Fiston — Standard	'
255555		
	395990 211542 *270383 294178 *27549 93394 66578 *270125 *270126 93368 93369 91249 260938 297602 297603 294606 66768 93032 298904 298905 298906	Cylinder Assembly


Ref. No.	Part No.	Description	No. Used
	298908	Pin Assy. – Piston – .005" O.S.	1
29	299430	Rod Assy Connecting	1
- 1		Note: For Connecting Rod	
		with .020" undersize	
		Crankpin Bore - Order	
		No. 390459.	
30	221890	Dipper - Connecting Rod	1
31	222282	Washer (One for each screw)	1
32	92296	Screw - Connecting Rod	1
33	211119	Valve Exhaust	1
34	261044	Valve – Intake	1
35	260552	Spring – Intake Valve	1
36	26478	Spring – Exhaust Valve	1
40	93312	Retainer – Valve Spring	1
45	260642	Tappet — Valve	1
46	211117	Gear — Cam	1
201	261558	Link – Governor	1
208	230737	Rod – Control	1
219	391737	Gear — Governor	1
220	221551	Washer – Thrust	1
227	393920	Lever Assy. – Governor	1
	222450	Washer — Governor	,
230	222450	Lever (1/4" I.D.)	1
200	001511	Lance III and	1
306	221511	Shield — Cylinder	,
307	93042	Screw – Cylinder Shield	1
	004540	Mounting	1
308	221512	Cover – Cylinder Head	1
337	293918	Plug — Spark	
		(1-1/2" Resistor Type)	1
358	297615	Gasket Set	1
383	89838	Wrench - Spark Plug	1
527	221514	Clamp — Breather Tube	1
528	230722	Tube — Breather	1
529		Grommet - Breather Tube	1
541		Washer	1
552	231079	Bushing – Governor	1
562	92613	Bolt – Governor Lever	1
592	231082	Nut - Hex 10-24	1
614	93306	Cotter - Hair Pin	1
615	93307	Retainer – E-Ring	1
616	231077	Crank — Governor	1
626	230749	Spacer – Governor Crank	1
869	211787	Seat — Intake Valve (Std.)	1
870	211172	Seat — Exhaust Valve (Std.)	1
871	63709	Guide – Exhaust Valve	1

<sup>\*</sup>Included in Gasket Set - Part No. 297615.

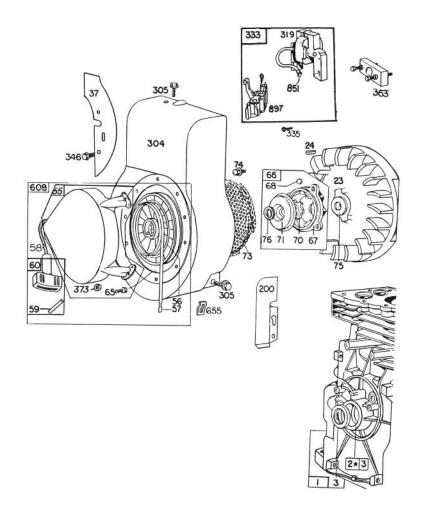

Ref. No.	Part No.	Description	No. Used
1	395990	Cylinder Assembly	1
2	297565	Bushing – Cylinder	1
		Note: Requires special tools	
		for installation.	
3	299819	Seal — Oil	1
23	297229	Flywheel — Magneto	1
24	222698	Key – Flywheel	1
37	222443	Guard – Flywheel	1
55	299431	Housing – Rewind Starter	1
56	295871	Pulley — Rewind Starter	
		(Includes 63" long rope)	1
57	294303	Spring – Rewind Starter	1
58	66884	Rope – Rewind Starter –	
		63" long	1
59	230228	Pin – Starter Grip	1
60	393152	Grip – Starter Rope	1
65	93067	Screw - Stamped Steel	
		Housing Mtg.	1
66	394558	Clutch Assy. – Rewind Starter	1
67	394897	Housing — Starter Clutch	1
68	63770	Ball — Clutch	1

Ref. No.	Part No.	Description						Description			
70	298436	Ratchet — Rewind Starter	1								
71	221653	Washer - Clutch Retainer	1								
73	221923	Screen - Starter Pulley	1								
74	93490	Screw	1								
75	220865	Washer — Spring	1								
76	68238	Washer - Ratchet Sealing	1								
200	221480	Guide – Air	1								
304	299410	Housing — Blower	1								
305	93158	Screw - Blower Housing Mtg.									
319	395490	Armature Assy.									
		(Less Trigger Coil)	1								
333	395491	Armature - Magneto	1								
335	93414	Screw - Armature Mtg.	1								
346	93705	Screw	1								
363	19069	Flywheel Puller									
		(Optional Accessory)	1								
373	92987	Nut - Hex.	1								
608	390463	Starter Assy. – Rewind	1								
655	222598	Anchor – Spring	1								
851	221798	Cable Terminal — Ignition	1								
897	394970	Trigger Coil	1								

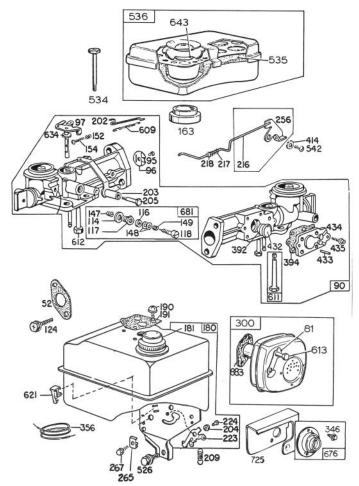

Ref. No.	Part No.	Description		
52	* 27355	Gasket - Carburetor Mtg.	2	
81	222263	Lock - Screw	1	
90	299576	Carburetor Assembly	1	
95	93499	Screw - Throttle Valve to Shaft	1	
96	211203	Throttle — Carburetor	1	
97	299212	Shaft and Lever - Throttle	1	
114	66594	Gasket - Needle Valve Nut	1	
116	65978	Packing - Needle Valve	1	
117	230590	Nut - Needle Valve	1	
118		Valve - Needle	1	
124		Screw - Hex. Head	1	
147		Seat - Needle Valve	1	
148		Washer - Needle Valve	1 2 1	
149		Spring - Needle Valve	1	
152		Spring - Throttle Adjustment	1	
154	93527	Screw - Machine, Rd. Hd		
101	00027	5-40 x 5/8"	1	
163	27660	Gasket - Air Cleaner Mounting	1	
180	297600	Tank Assembly – Fuel	1 1 1 1 2 1	
181	297863	Cap - Fuel Tank	1	
190		Screw - Fuel Tank Mounting	1	
191	*27911	Gasket - Fuel Tank Mounting	2	
202		Link - Throttle	1	
203	393919	Crank — Bell	1	
204	222962	Bushing - Governor	100	
201	222002	Lever (Flat)	1	
205	93838	Screw - Shoulder	1	
209	260695	Spring – Governor	1	
216		Link - Choke (Incl. Bell Crank)	1	
	260189	Spring – Choke Link	1	
	221198	Washer – Choke Link	1	
223		Lever Governor Control	1	
224	93491	Rivet - Governor Control	S.	
		Lever Mounting	1	

256         299859         Crank — Bell (Includes Choke Link)         1           265         221535         Clamp — Casing         1           267         93496         Screw         1           300         393615         Muffler — Exhaust         1           346         93705         Screw         1           356         299500         Wire — Ground         1           392         260455         Spring — Fuel Pump Diaphragm         1           394         270026         Diaphragm         1	Ref. No.	Part No.	Description	No. Used
414         220982         Washer         1           432         221377         Cap — Spring         1           433         93265         Pin — Diaphragm Cover         1           434         210959         Cover — Diaphragm         1           435         93141         Screw — Diaphragm Cover         1           526         93343         Screw — Diaphragm Cover         1           534         93322         Screw — Tank Bracket Mtg.         1           535         27987         Element — Air Cleaner         1           536         297036         Cleaner Assembly — Air         1           542         92265         Screw         1           609         260694         Spring — Throttle Link         1           611         391813         Fuel Pipe and Clip Assembly         1           612         296811         Pipe — Fuel         1           631         93935         Screw — Hex. Hd. Shoulder         1           621         297472         Switch — Stop         1           634         270167         Washer         1           Cup — Air Cleaner         1         1           Cup — Air Cleaner         1	256 265 267 300 346 356 392 394 414 432 433 434 435 526 534 535 536 542 609 611 612 613 621 634 643 676	299859 221535 93496 393615 93705 299500 260455 270026 220982 221377 93265 210959 93141 93343 93322 27987 297036 92265 260694 391813 296811 93935 297472 270167 280374 395700	Crank — Bell (Includes Choke Link) Clamp — Casing Screw Muffler — Exhaust Screw Wire — Ground Spring — Fuel Pump Diaphragm Diaphragm Washer Cap — Spring Pin — Diaphragm Cover Cover — Diaphragm Cover Screw — Tank Bracket Mtg. Screw — Tank Bracket Mtg. Screw — Air Cleaner Element — Air Cleaner Element — Air Cleaner Cleaner Assembly — Air Screw Spring — Throttle Link Fuel Pipe and Clip Assembly Pipe — Fuel Screw — Hex. Hd. Shoulder Switch — Stop Washer, Throttle Shaft (Felt) Cup — Air Cleaner Deflector — Exhaust (Direct Outlet) Needle Valve Kit Shield — Heat Note: Furnished by the equipment manufacturer.	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1

<sup>\*</sup>Included in Gasket Set - Part No. 297615.

## The Toro Promise

#### A ONE YEAR LIMITED WARRANTY

The Toro Company promises to repair any TORO Product if defective in materials or workmanship. The following time periods from the date of purchase apply:

Residential Product . . . . . . . . . . . . . . . . 1 Year Residential Products Used Commercially . . . . 45 Days

The costs of parts and labor are included, but the customer pays the transportation costs. Just return any residential product to an Authorized TORO Service Dealer or TORO Distributor.

Should you feel your TORO Product is defective and wish to rely on The Toro Promise, the following procedure is recommended:

- Contact any Authorized TORO Service Dealer, TORO Master Service Dealer, or TORO Distributor (the Yellow Pages of your telephone directory is a good reference source).
- He will either instruct you to return the product to him or recommend another Authorized TORO Service outlet which might be more convenient.
- Bring the product along with your original sales slip, or other evidence of purchase date, to the service dealer.
- 4. The servicing dealer will inspect the unit, advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without extra charge to you.

If for any reason you are dissatisfied with the dealer's analysis of the defect or the service performed, you may contact us.

Write:

TORO Consumer Service Department 8111 Lyndale Avenue South Minneapolis, Minnesota 55420

The above remedy of product defects through repair by an Authorized TORO Service Dealer is the purchaser's sole remedy for any defect.

THERE IS NO OTHER EXPRESS WARRANTY. ALL IMPLIED WARRANTIES OF MERCHANT-ABILITY AND FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This warranty applies only to parts or components which are defective and does not cover repairs necessary due to normal wear, misuse, accidents, or lack of proper maintenance. Regular, routine maintenance of the unit to keep it in proper operating condition is the responsibility of the owner.

All warranty repairs reimbursable under The Toro Promise must be performed by an Authorized TORO Service Dealer using Toro approved replacement parts. Repairs or attempted repairs by anyone other than an Authorized TORO Service Account are not reimbursable under The Toro Promise. In addition, these unauthorized repair attempts may result in additional malfunctions, the correction of which is not covered by warranty.

THE TORO COMPANY IS NOT LIABLE FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE USE OF THE PRODUCT INCLUDING ANY COST OR EXPENSE OF PROVIDING SUBSTITUTE EQUIPMENT OR SERVICE DURING PERIODS OF MALFUNCTION OR NON-USE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

#### COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their TORO Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact

the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

International Group Service Department One Corporate Center 7401 Metro Boulevard Minneapolis, Minnesota 55435 U.S.A.

#### **PRODUCT CHANGES**

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change apparently has been made in your unit, which is not reflected in your manual, see your TORO distributor or his Authorized TORO Service Dealer for information and part numbers.

#### IMPORTANT ORDERING INSTRUCTIONS

#### Model and Serial Numbers

The Blower has two identification numbers: a model number and a serial number. The two numbers are stamped on a decal which is located on left front corner of engine plate. In any correspondence concerning the Blower, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

- 1. Model and serial numbers of the Blower.
- 2. Part number, description, and quantity of part(s) desired.

**NOTE:** Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

### Keep Your TORO All Toro



#### Insist on Genuine Toro Parts

#### MAINTENANCE RECORD

Date	Hours Used	Oil Change	Lubrication	Summer Storage	Fall Service	Spark Plug Gap
****	1					-
	+					
	-					
						<u> </u>
	+					-
	-					
	-					
No.						

### **MAINTENANCE RECORD**

Date	Hours Used	Oil Change	Lubrication	Summer Storage	Fall Service	Spark Plug Ga
	+					
	1					
	+					
<u> </u>						
	-					
	-					
7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7						
					- 32	