



Mid-Size Mower

ProLine Pistol Grip Gear 15hp with 48in Side Discharge Mower

Model No. 30530—230000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Engine and Fuel System Assembly	3	Ignition and Electrical Assembly	
Transmission and Drive Pulley Assembly	4	Kohler CV15T–41608	18
Wheel Drive Assembly	6	Blower Housing and Baffle Assembly	
Upper Handle Assembly	8	Kohler CV15T–41608	19
Handle Assembly No. 106–2719	9	Starter Assembly	
Front Caster and Blade Brake Assembly	10	Kohler CV15T–41608	20
Spindle Assembly	12	Fuel System Assembly	
Idler Pulley Assembly	13	Kohler CV15T–41608	21
Deck Assembly	14	Engine Control Assembly	
Crankcase Assembly		Kohler CV15T–41608	22
Kohler CV15T–41608	15	Air Cleaner Assembly	
Oil Pan and Lubrication Assembly		Kohler CV15T–41608	23
Kohler CV15T–41608	16	Exhaust Assembly	
Cylinder Head, Valve and Breather Assembly		Kohler CV15T–41608	24
Kohler CV15T–41608	17		


Accessories

Description	Model / Part No.	Description	Model / Part No.
Recycler Kit	30142	Atomic Blade	104–8595
Soft Bagger	30198	High Lift Blade	102–2507

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

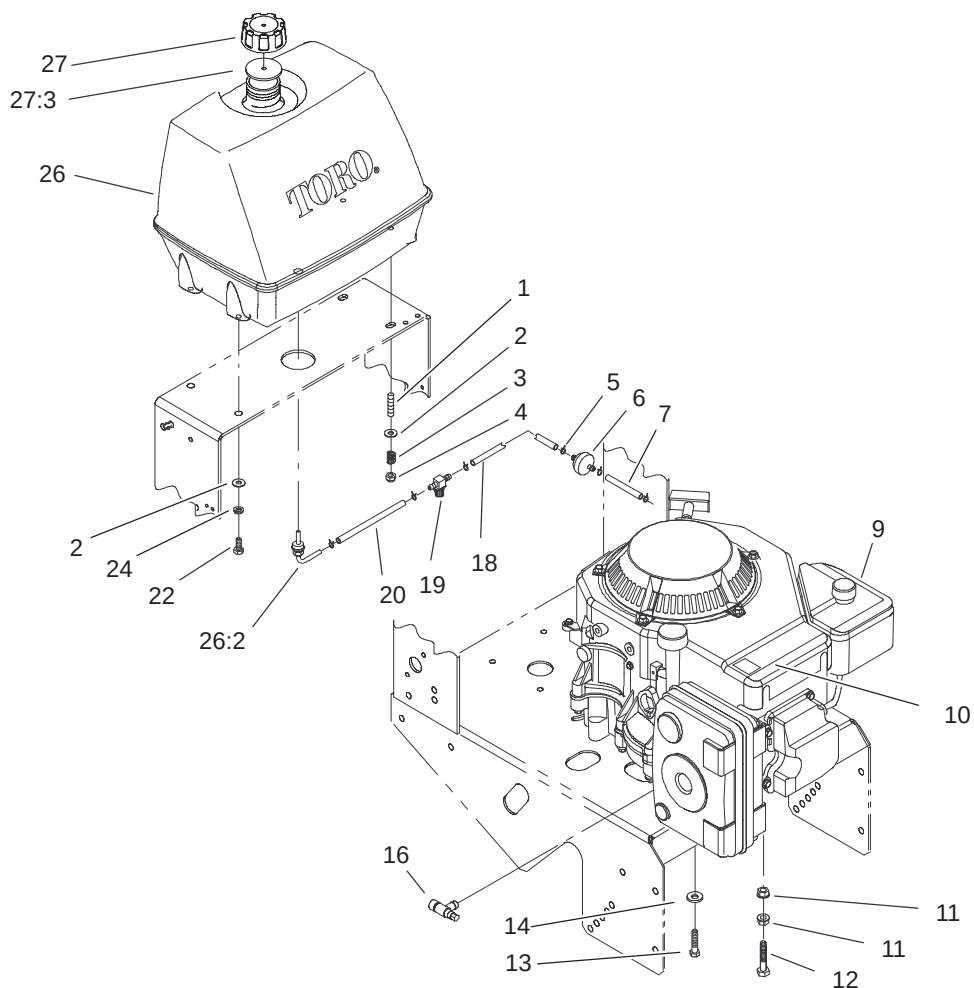

Sheet No.: 2


Engine and Fuel System Assembly

Ref. No.	Part No.	Qty.	Description
1	1-633023	2	Stud
2	3256-23	4	Washer-Flat
3	1-633349	2	Spring-Tank, Fuel
4	3296-47	2	Nut-Lock, NI
5	1-303077	6	Clamp
6	1-303197	1	Filter-Fuel
7	47-2983	1	Hose-Fuel
☆9		1	Engine-Kohler, Cv15t-41608
10	63-8440	1	Decal-Surface, Hot
11	3290-357	2	Nut-HHF
12	323-13	1	Screw-HH
13	322-7	4	Screw-HH
14	1-303334	4	Washer-Spring
16	103-1965	1	Valve-Drain, Oil
18	1-603776	1	Hose-Line, Fuel
19	1-603770	1	Valve-Fuel
20	1-603955	1	Hose-Fuel
22	322-3	2	Screw-HH
24	1-805005	2	Washer-Lock
26	106-0730	1	Fuel Tank ASM
26:2	103-2605	1	Fitting-Fuel, Bulkhead
27	88-3980	1	Gas Cap ASM
27:3	88-4010	1	Gasket-Cap, Gas
*99	1-303335	1	Tie-Plastic

Ref. No.	Part No.	Qty.	Description

☆ Not serviced separately

* Not illustrated

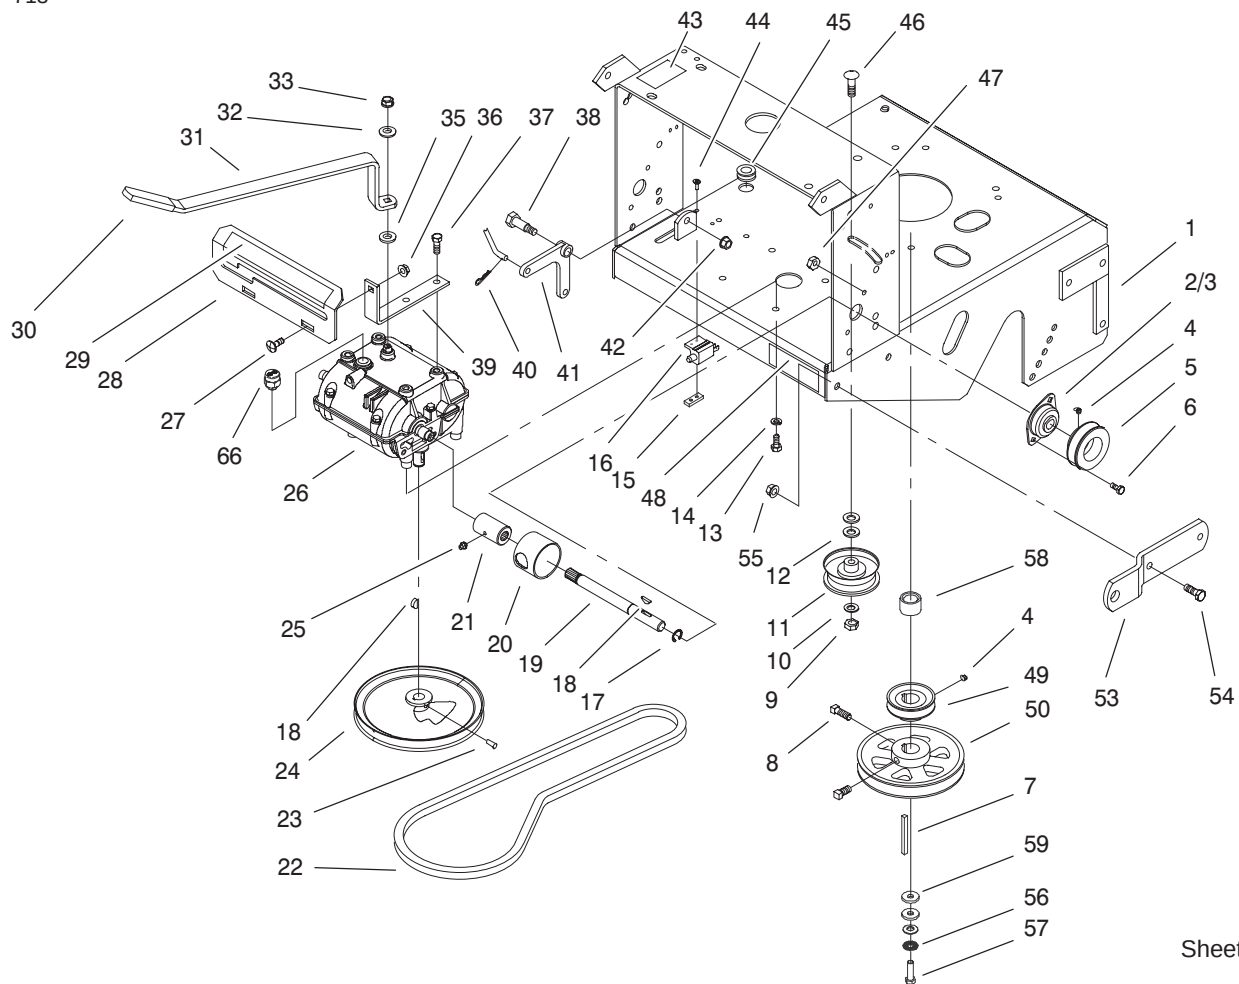


Sheet No.: 3

Transmission and Drive Pulley Assembly

Ref. No.	Part No.	Qty.	Description
1	103-2923-01	1	Deck-Rear
2	1-323252	2	Bearing-Shaft
3	1-323254	2	Flange-Output
4	1-803310	3	Screw-Set
5	1-323257-03	2	Sheave-Transmission
6	321-3	4	Screw-HH
7	103-4177	1	Key-Machine
8	3242-4	2	Screw-Set, SQH
9	3296-39	1	Nut-Lock, NI
10	3256-24	1	Washer-Flat
11	1-323285	1	Idler-Drive, Transmission
12	3256-5	2	Washer-Flat
13	322-3	4	Screw-HH
14	1-805005	4	Washer-Lock
15	1-633181	1	Plate-Tapped
16	1-513051	1	Switch-Open, Normally
17	32151-62	2	Ring-Retaining
18	3257-5	3	Key-Woodruff
19	1-323502	2	Shaft-Transmission
20	51-4220	2	Guard-Coupler
21	1-323680	2	Coupler
22	1-323630	1	V-Belt
23	3245-41	2	Screw-HSH
24	1-323278	1	Sheave-Transmission

Ref. No.	Part No.	Qty.	Description
25	302-19	2	Fitting-Grease
26	1-323500	1	Transmission
27	3230-1	2	Bolt-CARR
28	1-323387-03	1	Plate-Shift
29	105-4104	1	Decal-Speed, Ground
30	1-303020	1	Grip-Lever
31	98-3274-03	1	Lever-Shift
32	98-5975	1	Washer-Belleville
33	3296-6	1	Nut-Lock, NI
35	1-323379	1	Washer
36	32128-20	2	Nut-HF
37	9264964	4	Screw
38	1-603403	1	Bolt-Shoulder
39	1-323389-03	2	Bracket-Plate, Shift
40	1-806003	1	Pin-Hair
41	1-303186	1	Bellcrank
42	3290-357	1	Nut-HHF
43	95-2814	1	Decal-Shut Off, Fuel
44	3290-500	2	Screw-PPH
45	1-543296	1	Grommet
46	3231-6	1	Screw-CARR
47	3296-42	4	Nut-Lock, NI
48	98-0776	1	Decal-Caution
49	103-1666	1	Sheave-Transmission
50	103-1667	1	Sheave
53	1-323318-01	2	Hitch-Sulky

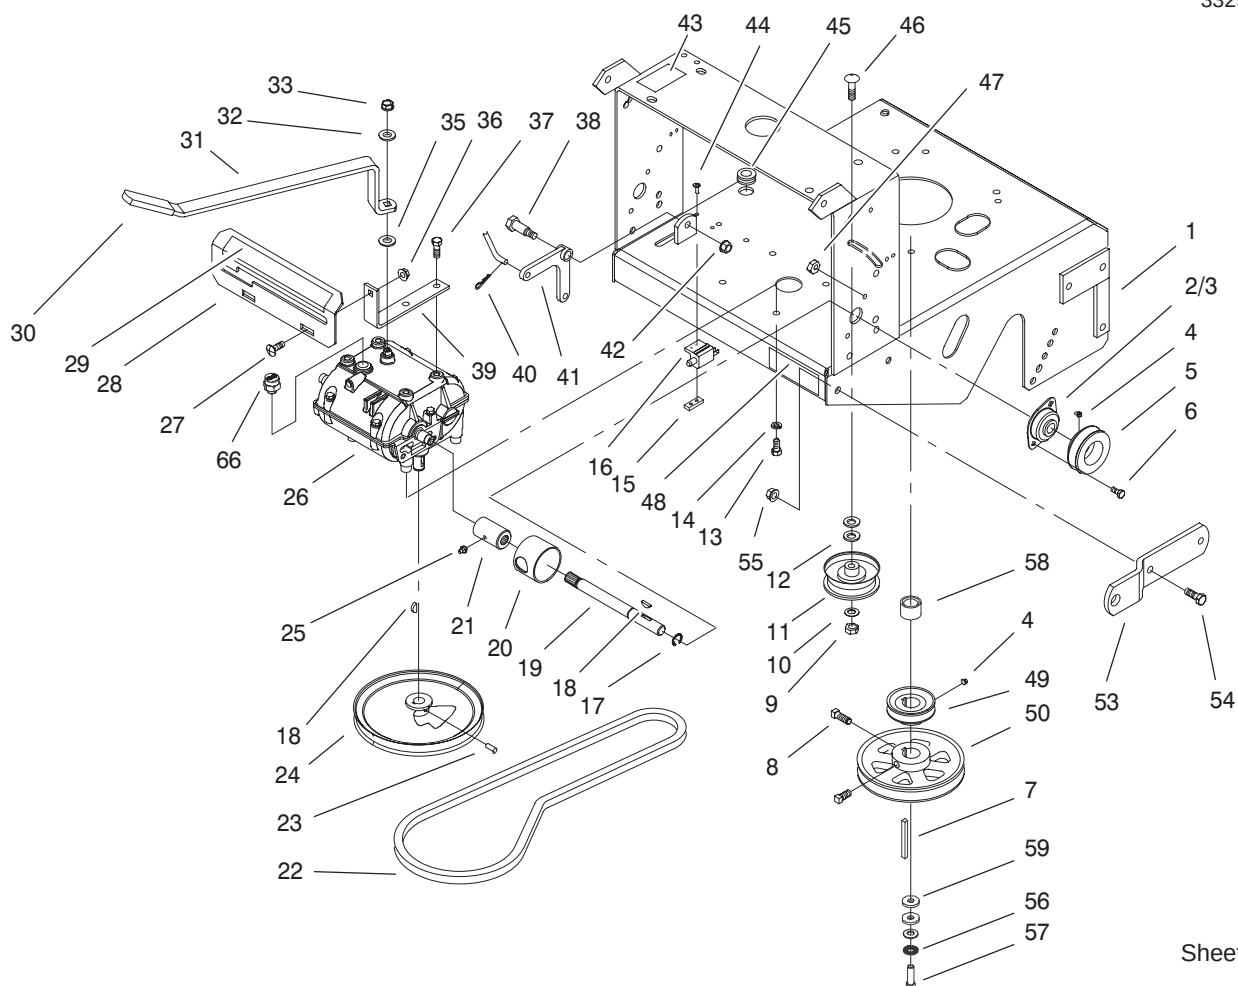


Sheet No.: 3

Transmission and Drive Pulley Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
54	323-6	4	Screw-HH
55	3290-357	4	Nut-HHF
56	1-603610	1	Washer-Spring
57	3212-6	1	Screw-HH
58	1-633453	1	Spacer-Clutch
59	1-373034	2	Washer
66	1-303282	1	Switch-Start, Neutral

Ref. No.	Part No.	Qty.	Description

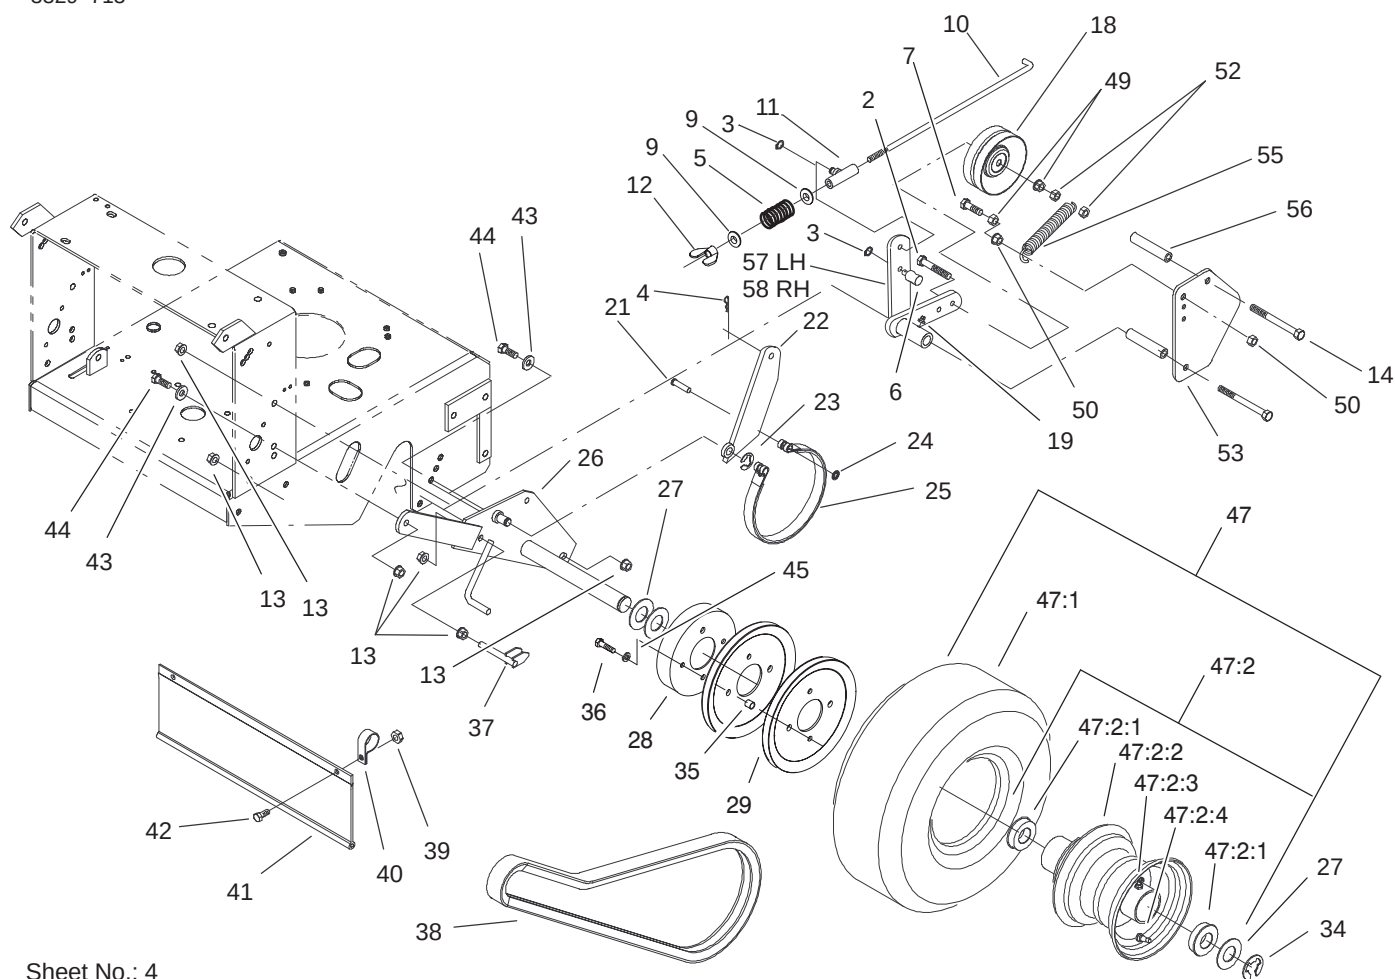


Sheet No.: 4

Wheel Drive Assembly

Ref. No.	Part No.	Qty.	Description
2	99-8664	2	Screw-HH
3	32151-47	6	Ring-Retaining
4	1-806003	4	Pin-Hair
5	1-323245	2	Spring-Compression
6	103-1864	2	Swivel-Lever, Drive
7	322-6	2	Screw-HH
9	3256-23	4	Washer-Flat
10	1-323548	2	Linkage-Brake
11	1-322125	2	Swivel-Brake
12	1-513959	2	Wingnut-Nylock
13	3290-357	14	Nut-HHF
14	323-39	4	Screw-HH
18	1-323277	2	Idler-Wheel, Drive
19	302-19	2	Fitting-Grease
21	1-323307	2	Pin-Clevis
22	103-1611-03	2	Arm-Brake
23	32120-47	2	Ring-Retaining, External
24	1-803051	2	Nut-Push
25	1-323262	2	Band-Brake
26	1-322117-03	1	Axle
27	1-523157	6	Washer-Spacer
27	1-543436	8	Washer-Spacer
28	1-323261	2	Drum-Brake
29	1-323253	4	Sheave-Wheel, Drive
34	1-808519	2	Ring-Snap

Ref. No.	Part No.	Qty.	Description
35	1-323260	8	Spacer-Sheave, Wheel
36	322-6	8	Screw-HH
37	1-412358	2	Scraper
38	1-323631	2	V-Belt
39	3296-29	4	Nut-Lock, NI
40	2412-104	2	R-Clamp
41	98-3259	1	Shield-Trailing
42	322-3	2	Screw-HH
43	98-5975	4	Washer-Belleville
44	323-6	4	Screw-HH
45	1-373034	8	Washer
☆47		2	Wheel And Tire ASM
47:1	1-323720	1	Tire-Turfmaster
47:2	1-323328	1	Wheel And Hub ASM
47:2:1	1-323329	2	Bearing-Flanged
☆47:2:2		1	Rim ASM
☆47:2:3		1	Fitting-Grease
☆47:2:4		1	Stem-Valve
49	3290-357	2	Nut-HHF
50	32128-20	2	Nut-HF
52	3296-39	8	Nut-Lock, NI
53	1-323287-01	2	Shield-Wheel, Drive
55	1-603402	2	Spring-Extension
56	1-323283	4	Spacer-Shield
57	103-1615-03	1	Arm-Idler, LH

☆ Not serviced separately

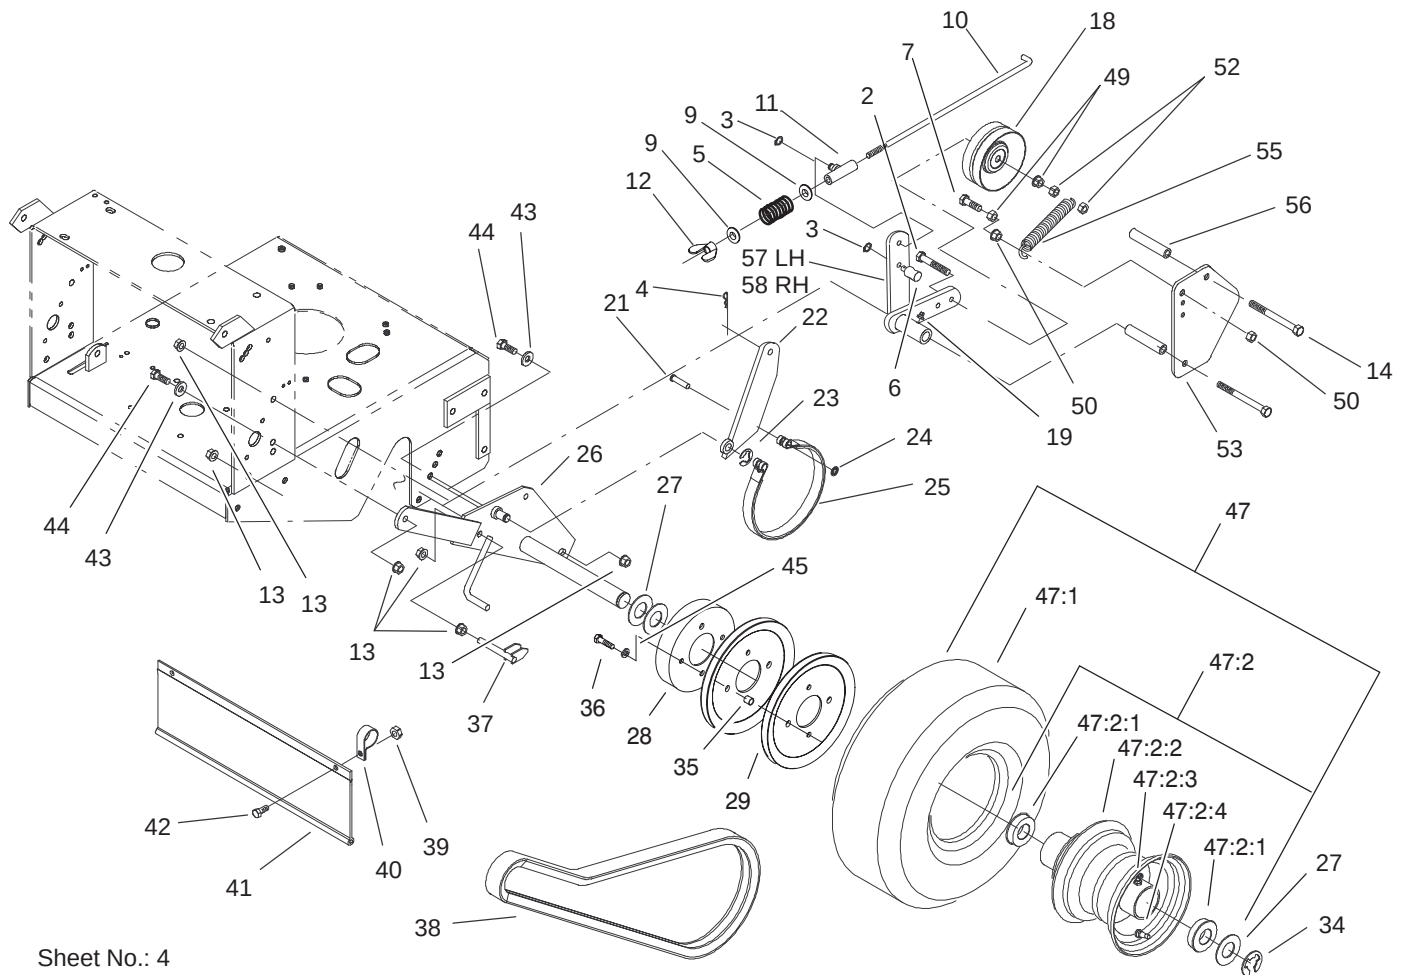


Sheet No.: 4

Wheel Drive Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
58	103-1616-03	1	Arm-Idler, RH

Ref. No.	Part No.	Qty.	Description

3329-713

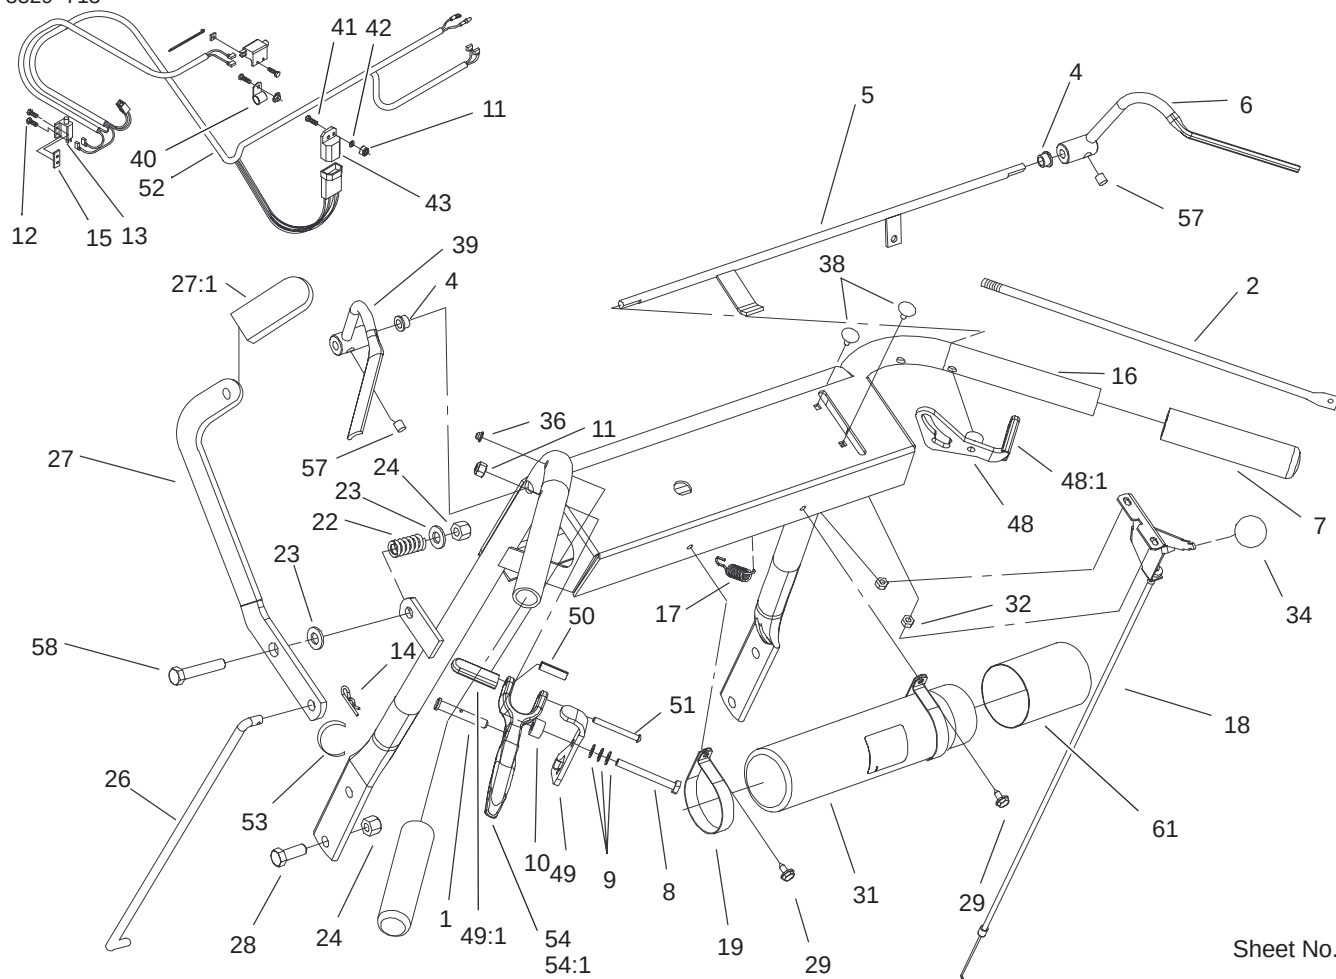


Sheet No.: 5

Upper Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	1-808286	2	Pin-Clevis
2	1-323359	2	Linkage-Wheel, Drive
4	1-303365	2	Bushing-Nylon
5	106-2717-03	1	Operator Presence Control Rod ASM
6	1-412185-03	1	Lever-RH
7	1-303097	2	Grip-Handle
8	321-18	2	Screw-HH
9	1-303435	6	Washer-Spring
10	1-323549	2	Spacer
11	3296-42	3	Nut-Lock, NI
12	3290-500	2	Screw-PPH
13	1-513051	1	Switch-Open, Normally
14	1-806003	2	Pin-Hair
15	1-633181	1	Plate-Tapped
16	106-2719	1	Handle ASM
17	1-303363	1	Spring-Extension
18	1-323322	1	Cable-Control, Throttle
19	2412-120	2	R-Clamp
22	1-303160	1	Spring-Compression
23	3256-4	2	Washer-Flat
24	3296-39	5	Nut-Lock, NI
26	1-323298	1	Linkage-Blade, Upper
27	1-322157	1	Lever ASM

Ref. No.	Part No.	Qty.	Description
27:1	1-303020	1	Grip-Lever
28	323-6	4	Screw-HH
29	32104-76	2	Screw
31	104-7050	1	Housing-Manual
32	3296-2	2	Nut-Lock
34	1-513592	1	Knob-Ball
36	1-803001	2	Nut
38	1-807513	2	Bolt-CARR
39	1-412183-03	1	Lever-LH
40	1-323229	2	Clip-Loom
41	321-4	1	Screw-HH
42	3256-22	1	Washer-Flat
43	1-323430	1	Module-Interlock
48	1-324280	1	RH Thumb Latch ASM
48:1	1-303019	1	Grip-Latch
49	1-324279	1	LH Thumb Latch ASM
49:1	1-303019	1	Grip-Latch
50	1-806340	2	Pin-Roll
51	1-808250	2	Pin-Clevis
52	103-1640	1	Harness-Wire
53	1-303088	1	Clip-Cable
54	1-302006	2	Drive Lever ASM
54:1	1-303021	1	Grip-Lever, Drive
57	1-803322	2	Screw-Set
58	323-10	1	Screw-HH
61	104-7048	1	Cap-Housing

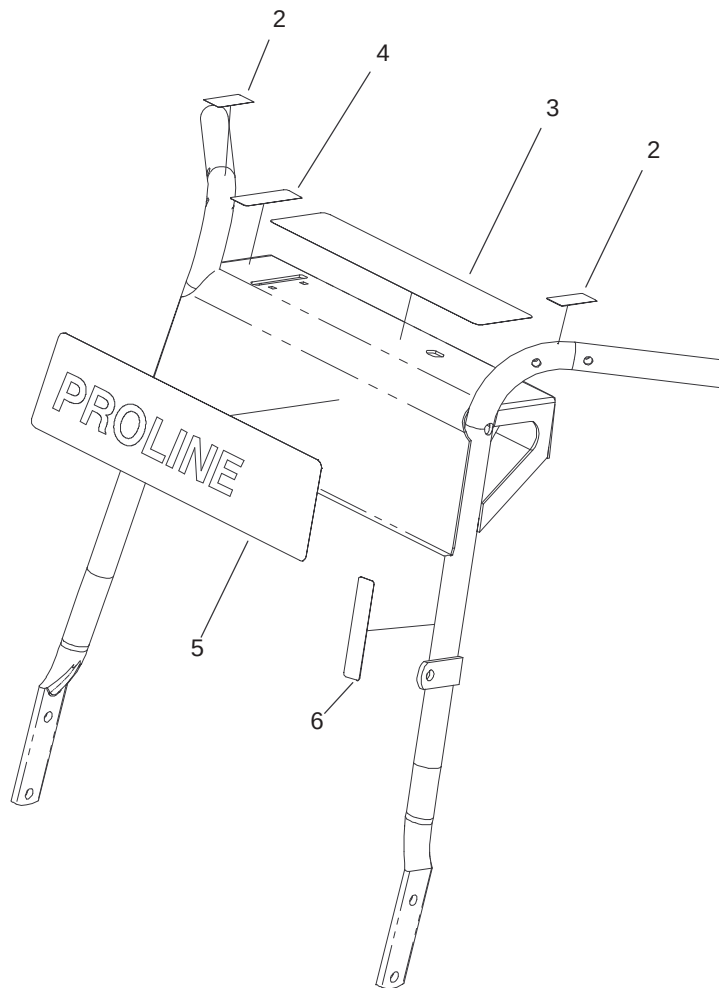


Sheet No.: A1

Handle Assembly No. 106-2719

Ref. No.	Part No.	Qty.	Description
2	105-4111	2	Decal-Lock, Neutral
3	106-2736	1	Decal-Warning
4	106-2734	1	Decal-Throttle
5	106-0750	1	Decal
6	95-5537	1	Decal-Engage, Deck

Ref. No.	Part No.	Qty.	Description

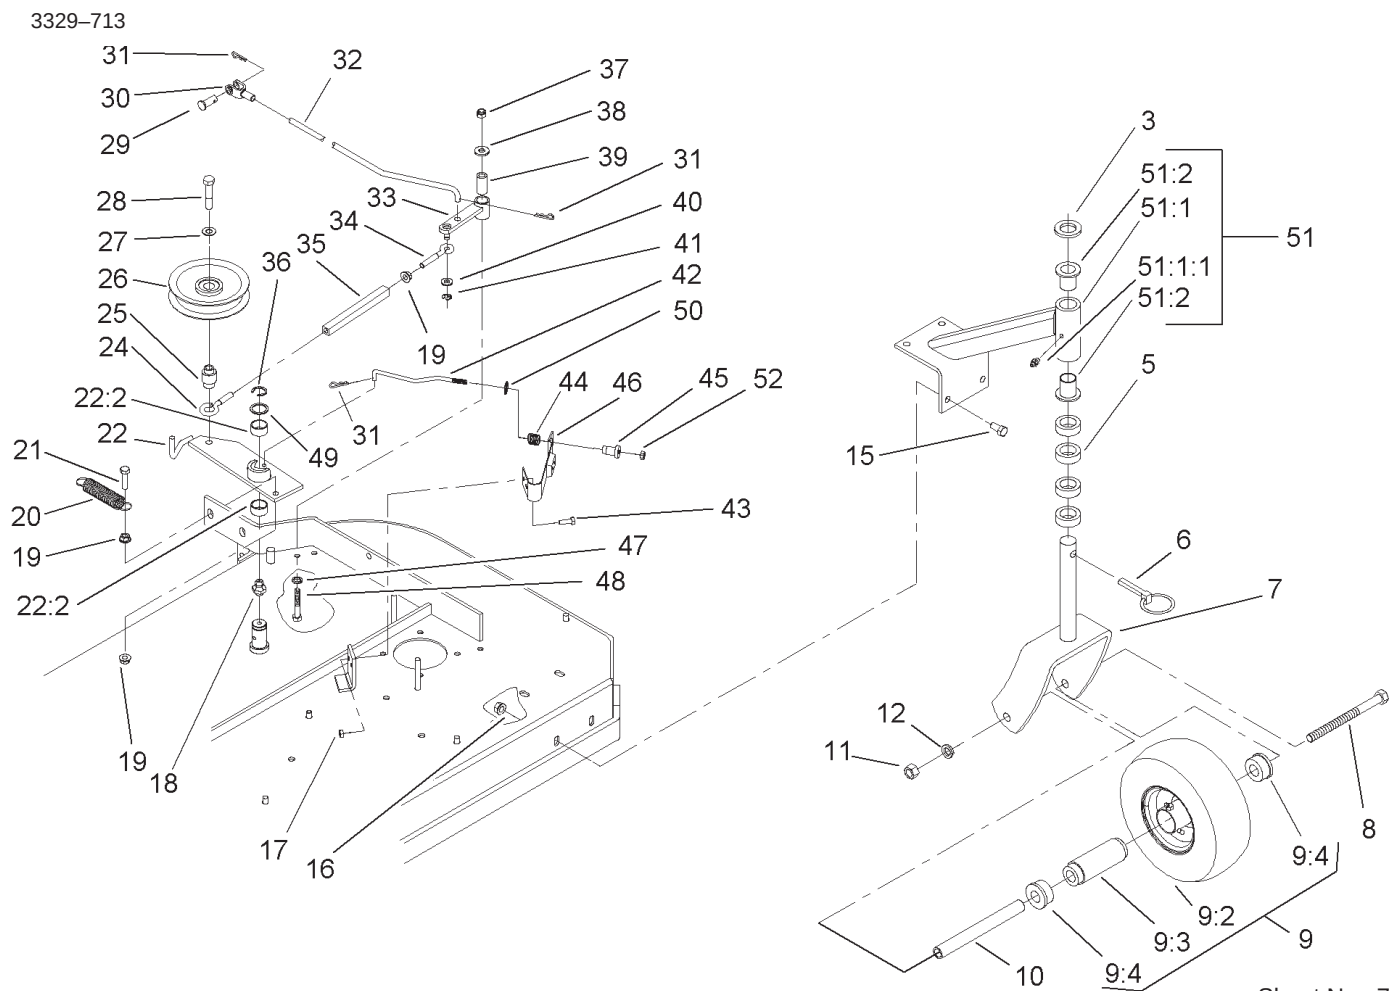


Sheet No.: 7

Front Caster and Blade Brake Assembly

Ref. No.	Part No.	Qty.	Description
3	1-513338	2	Washer-Flat
5	1-303314	8	Spacer-Caster
6	1-809020	2	Pin
7	1-322145-01	2	Fork
8	325-20	2	Screw-HH
9	1-513648	2	Wheel And Tire ASM
9:2	1-513808	1	Tire
9:3	1-513809	1	Bearing
9:4	1-513810	2	Bushing
10	1-513547	2	Spacer
11	3217-9	2	Nut-Hex
12	3253-7	2	Washer-Lock
15	323-4	8	Screw-HH
16	3290-357	8	Nut-HHF
17	3296-42	2	Nut-Lock, NI
18	302-19	1	Fitting-Grease
19	32128-20	3	Nut-HF
20	1-323071	1	Spring-Extension
21	322-6	2	Screw-HH
22	103-3600	1	Idler Arm ASM
22:2	1-323729	2	Sleeve-Bearing
24	1-303348	1	Eyebolt-Thread, LH
25	1-303434	1	Bushing-Engagement
26	1-603843	1	Pulley-Idler
27	98-5975	1	Washer-Belleville
28	702809	1	Screw-Cap

Ref. No.	Part No.	Qty.	Description
29	1-808280	1	Pin-Clevis
30	1-303105	1	Yoke-Adjustable
31	1-806003	3	Pin-Hair
32	1-323303	1	Linkage-Arm
33	1-322235	1	Arm-Assist
34	1-303238	1	Eyebolt-Thread, RH
35	1-303236	1	Body-Turnbuckle
36	32151-103	1	Ring-Snap
37	3296-29	1	Nut-Lock, NI
38	3256-3	1	Washer-Flat
39	1-403179	1	Tube-Pivot
40	3256-23	1	Washer-Flat
41	32120-35	1	E-Ring
42	1-323714	1	Rod-Brake
43	321-4	2	Screw-HH
44	1-323747	1	Spring-Compression
45	1-323746	1	Spacer-Flanged
46	1-324372	1	Pad/Spring ASM
47	1-303334	1	Washer-Spring
48	322-10	1	Screw-HH
49	1-303352	1	Washer-Spindle
50	1-323748	1	Ring-Push On
51	1-302203	2	Support ASM
★51:1		1	Support-Caster
51:1:1	302-52	1	Fitting-Grease
51:2	1-303514	2	Bearing-Flanged

★ Not serviced separately

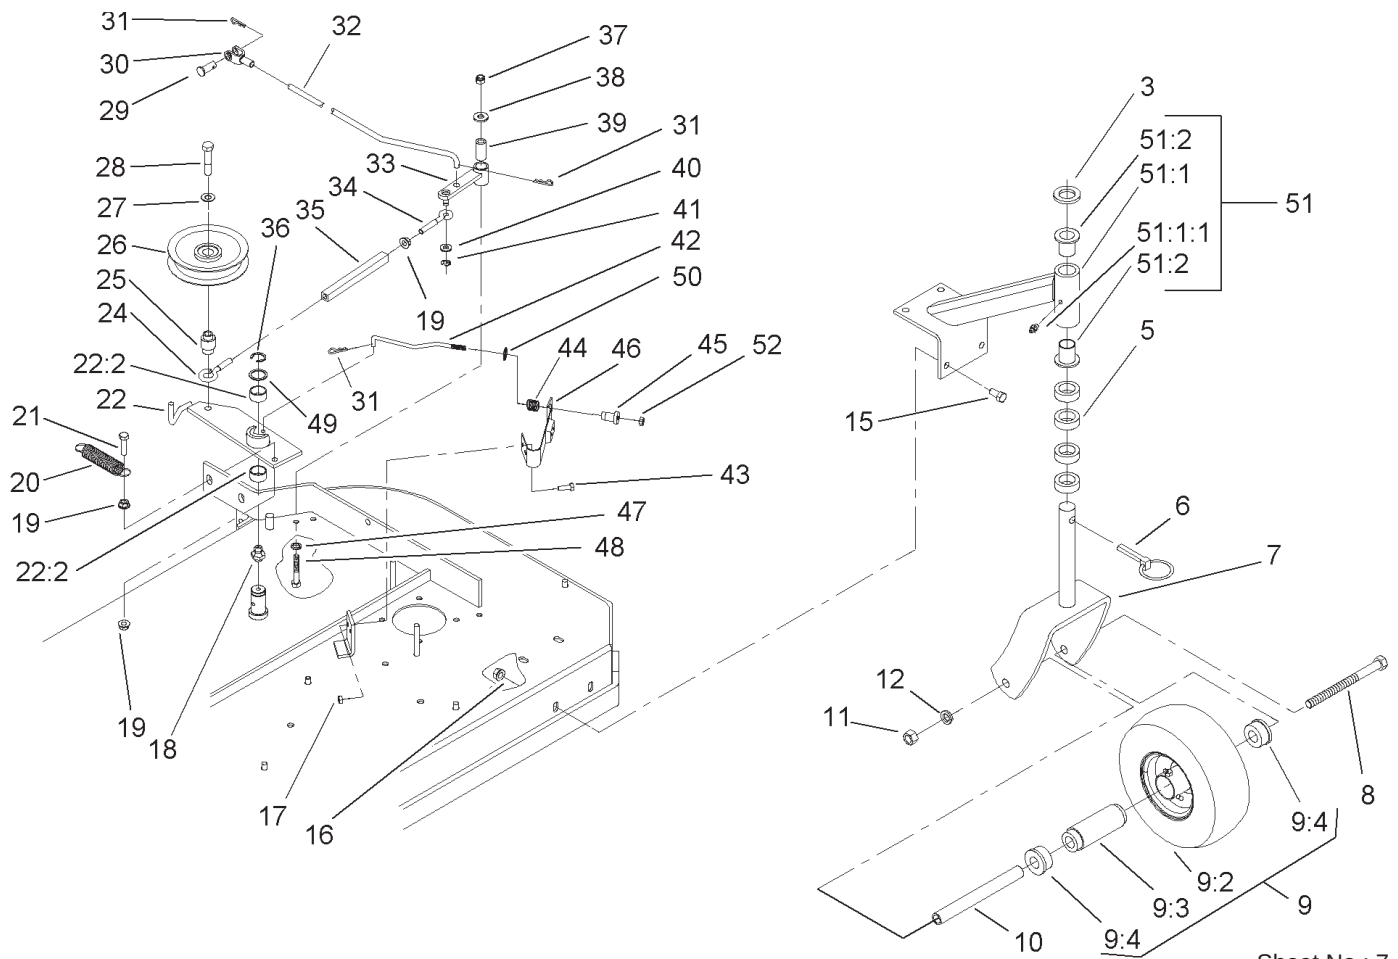


Sheet No.: 7

Front Caster and Blade Brake Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
52	3296-56	1	Nut-Lock, NI

Ref. No.	Part No.	Qty.	Description

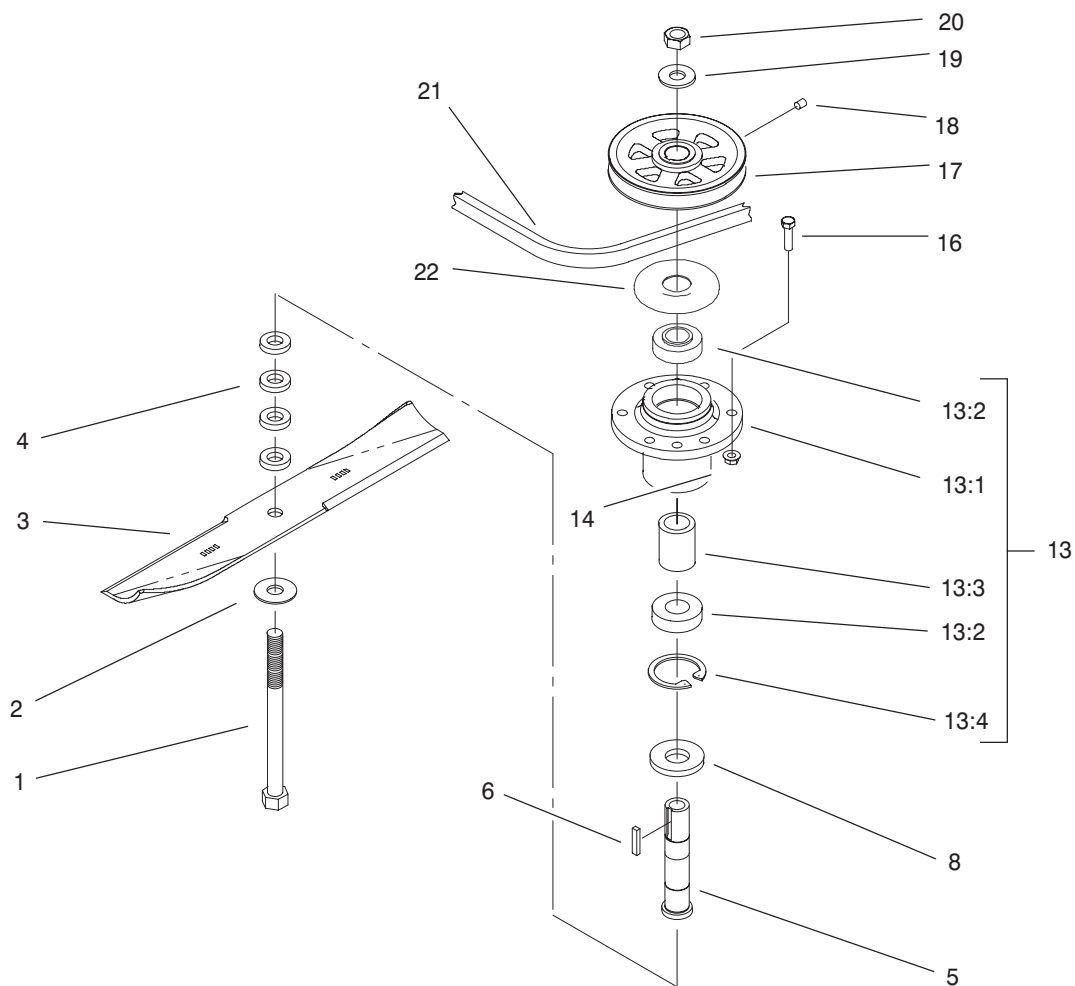


Sheet No.: 8

Spindle Assembly

Ref. No.	Part No.	Qty.	Description
1	1-800861	3	Screw-Cap, HH
2	1-513208	3	Washer-Spring
3	103-2527	3	Blade-Notched
3	103-2507	3	Blade-Lift, Low
4	1-323539	12	Spacer-Drive, Blade
5	1-323529	3	Tube-Spindle, Short
6	1-807267	3	Key
8	103-2535	3	Spacer-Guard, Bottom
13	103-2533	3	Cutter Housing ASM
13:1	1-323532	1	Housing-Spindle
13:2	103-2477	2	Bearing-Ball
13:3	103-2534	1	Spacer-Bearing
13:4	32120-8	1	Ring-Snap
14	3296-39	18	Nut-Lock, NI
16	323-7	18	Screw-HH
17	1-403183	3	Sheave
18	1-803310	3	Screw-Set
19	1-323339	3	Washer-Retainer, Sheave
20	3219-6	3	Nut-Hex
21	1-403171	1	Belt-Drive, Blade
22	103-1330	3	Guard-Bearing, Top

Ref. No.	Part No.	Qty.	Description

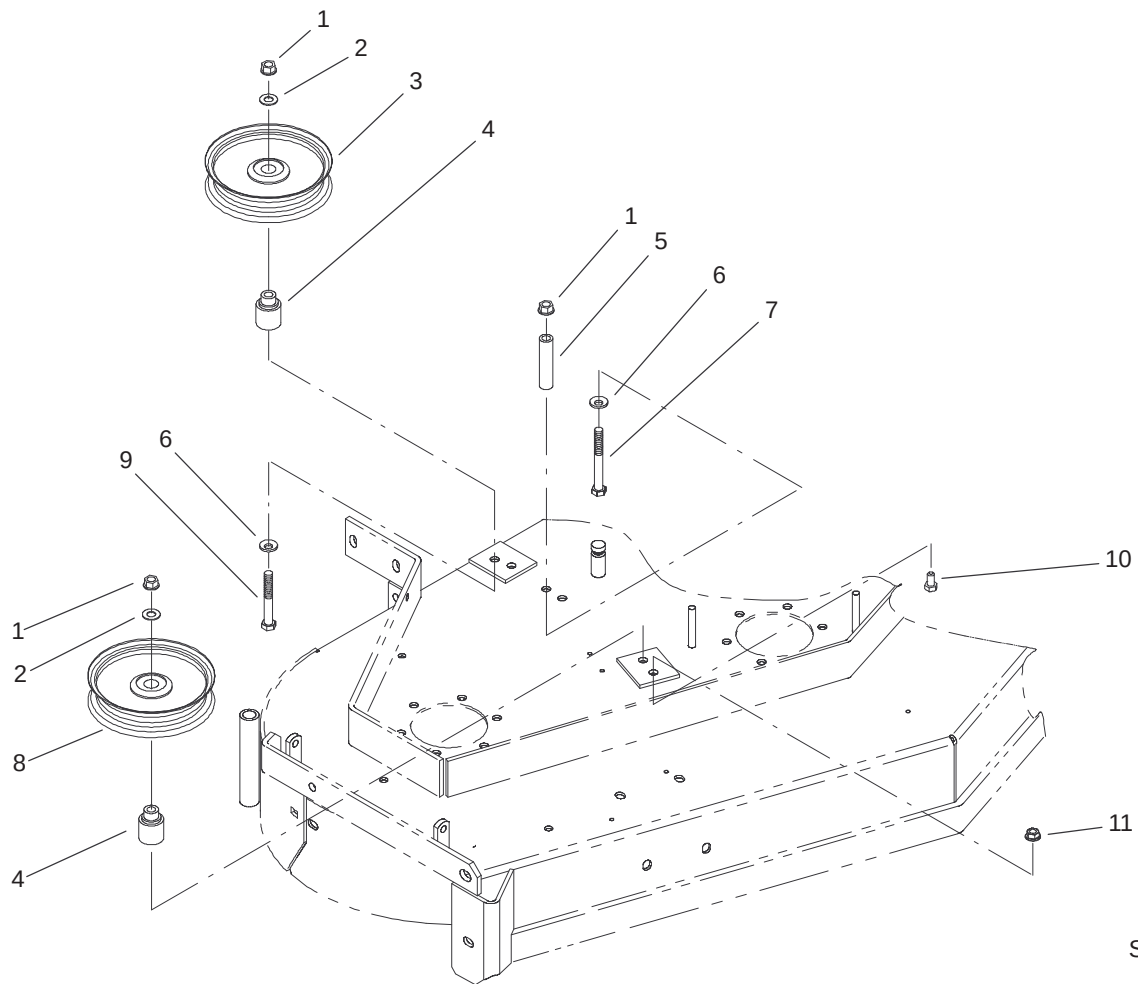


Sheet No.: 9

Idler Pulley Assembly

Ref. No.	Part No.	Qty.	Description
1	3290-357	3	Nut-HHF
2	3256-24	2	Washer-Flat
3	1-403186	1	Idler-Pulley, Flat
4	1-403184	2	Bushing-Idler
5	1-403188	1	Spacer
6	98-5975	3	Washer-Belleville
7	323-20	1	Screw-HH
8	1-613098	1	Pulley-Idler
9	323-13	2	Screw-HH
10	322-2	7	Screw-HH
11	32128-20	2	Nut-HF

Ref. No.	Part No.	Qty.	Description

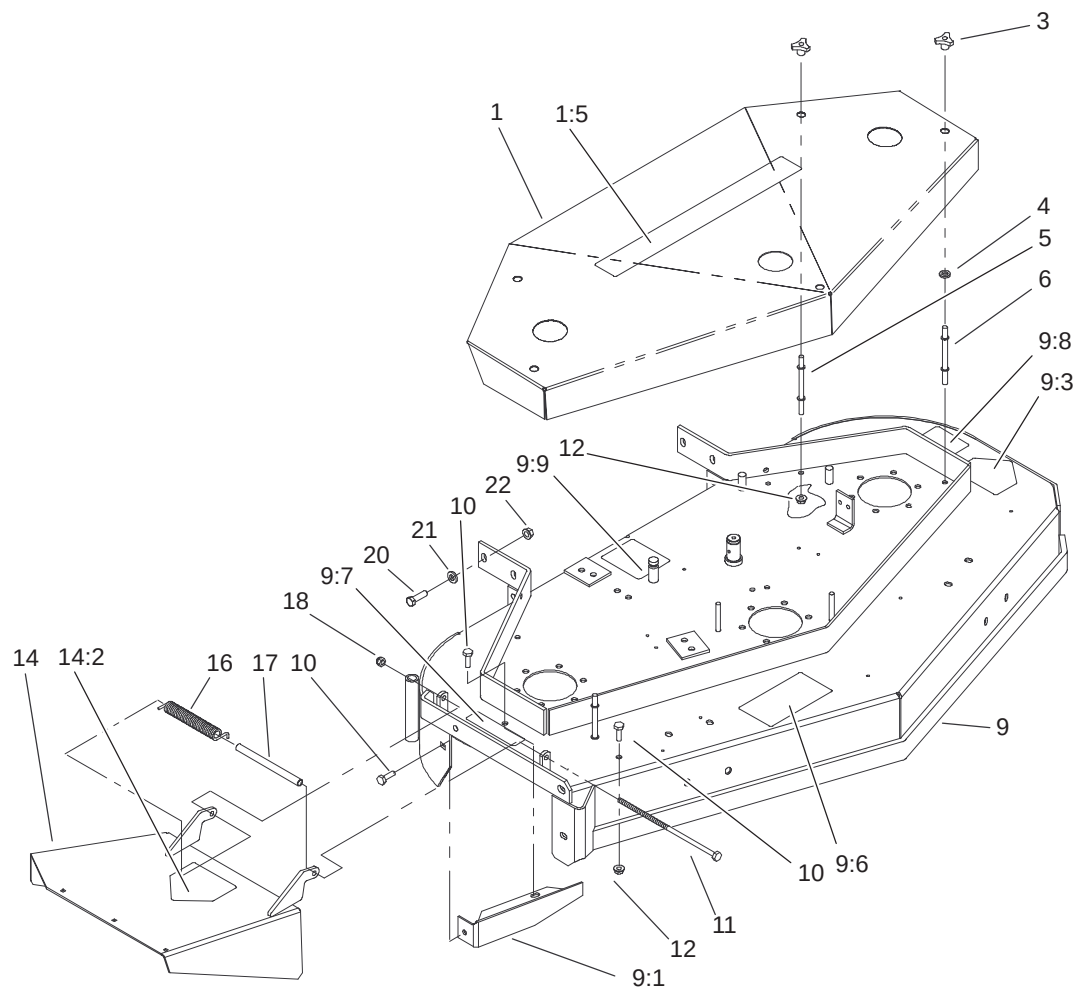


Sheet No.:10

Deck Assembly

Ref. No.	Part No.	Qty.	Description
1	1-404246	1	Shield-Belt
1:5	106-0712	1	Decal
3	1-323385	5	Knob-3 Prong
4	1-323417	5	Washer
5	1-303536	3	Stud-Shield, Belt (Long)
6	1-303537	2	Stud-Shield, Belt (Short)
9	1-404270	1	Deck
9:1	1-402107-01	1	Baffle-Dogleg
9:3	1-403005	1	Decal-Danger
9:6	66-1340	1	Decal-Danger
9:7	67-5360	1	Decal-Danger
9:8	98-5130	1	Decal-Torque, Bolt
9:9	99-3943	1	Decal-Routing, Belt
10	322-2	7	Screw-HH
11	1-800291	1	Screw-HH
12	32128-20	11	Nut-HF
14	1-404245	1	Chute
14:2	54-9220	1	Decal-Danger
16	98-3280	1	Spring-Deflector
17	1-323636	1	Spacer-Spring
18	3296-29	1	Nut-Lock, NI
20	323-8	6	Screw-HH
21	98-5975	6	Washer-Belleville
22	3290-357	6	Nut-HHF


Ref. No.	Part No.	Qty.	Description

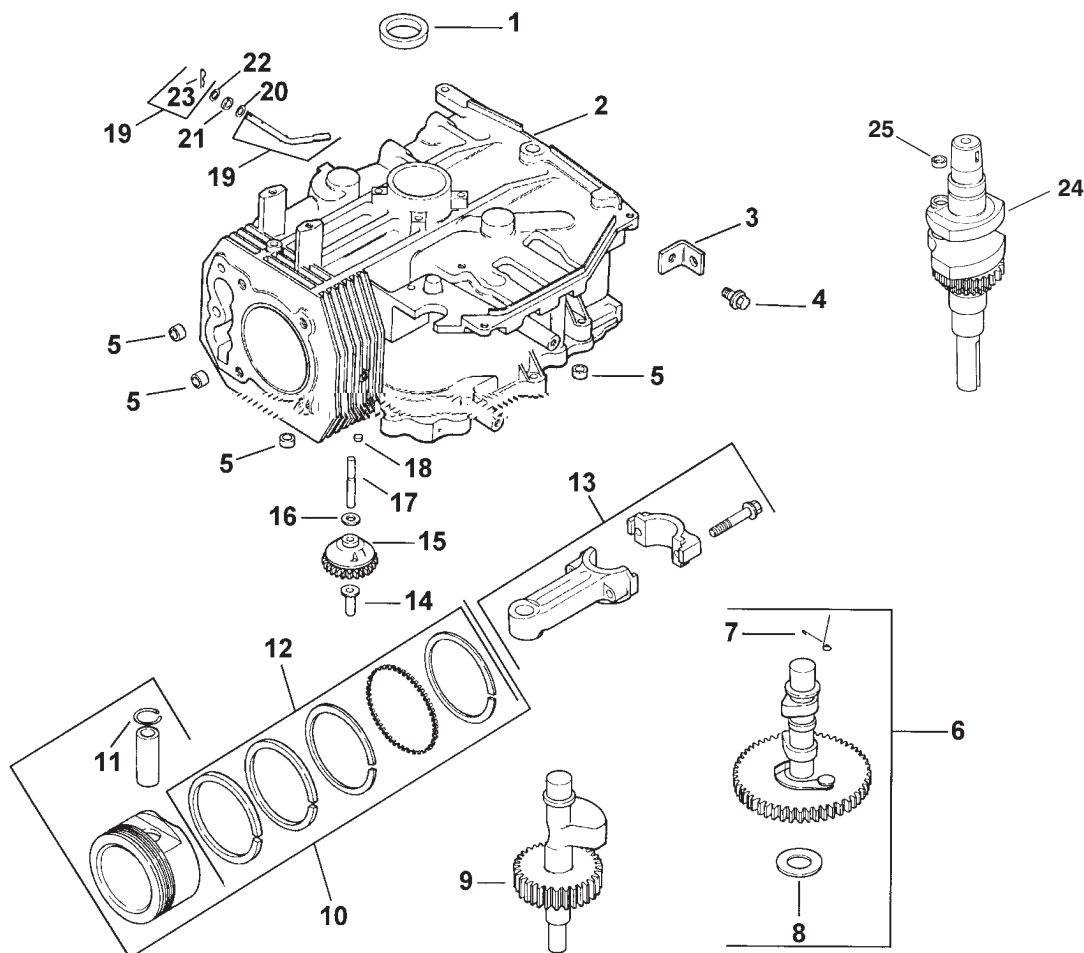

Crankcase Assembly Kohler CV15T-41608

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	12 032 03-S	1	Seal-Crankshaft	13	12 067 05-S	1	Rod-Connecting, STD
2	12 522 18-S	1	Shortblock	13	12 067 06-S	1	Rod-Connecting .25
3	12 445 02-S	1	Strap-Lifting	14	12 380 01-S	1	Pin-Governor
4	M-839025-S	1	Screw-HF M8x1.25x25				Regulating
5	24 380 13-S	4	Dowel-Locating	15	12 043 05-S	1	Gear-Governor
6	12 755 49-S	1	Kit-Camshaft (Incl. 7-8)	16	M-631005-S	1	Washer-Plain, 6mm
7	12 089 31-S	1	Spring-Actuating	17	12 144 02-S	1	Shaft-Governor Gear
8	12 422 07-S	A/R	Shim-Camshaft, White	18	52 139 09-S	1	Plug-Cup
8	12 422 08-S	1	Shim-Camshaft, Blue	19	12 755 64-S	1	Kit-Governor Cross
8	12 422 09-S	A/R	Shim-Camshaft, Red				Shaft (Incl. 23)
8	12 422 10-S	A/R	Shim-Camshaft, Yellow	20	X-25-102-S	1	Washer-Plain, 1/4
8	12 422 11-S	A/R	Shim-Camshaft, Green	21	12 032 01-S	1	Seal-Governor Cross
8	12 422 12-S	A/R	Shim-Camshaft, Gray				Shaft
8	12 422 13-S	A/R	Shim-Camshaft, Black	22	M-631015-S	1	Washer-Plain, 6mm
9	12 144 27-S	1	Shaft-Balance	23	12 154 05-S	1	Clip-Hitch Pin
10	12 874 07-S	1	Piston w/Ring Set STD	24	12 014 30-S	1	Crankshaft ASM
			(Incl. 11,12)				(Incl. 25)
10	12 874 08-S	1	Set-Piston w/Ring .25	25	12 139 01-S	1	Plug-Cup
10	12 874 09-S	1	Set-Piston w/Ring .50	*	12 755 93-S	1	Set-Gasket
10	12 874 11-S	1	Set-Piston w/Ring .08				
11	12 018 02-S	2	Retainer-Piston Pin				
12	12 108 07-S	1	Ring Set STD				
12	12 108 08-S	1	Ring Set .25				
12	12 108 09-S	1	Ring Set .50				

* Not illustrated
Order Parts from Kohler

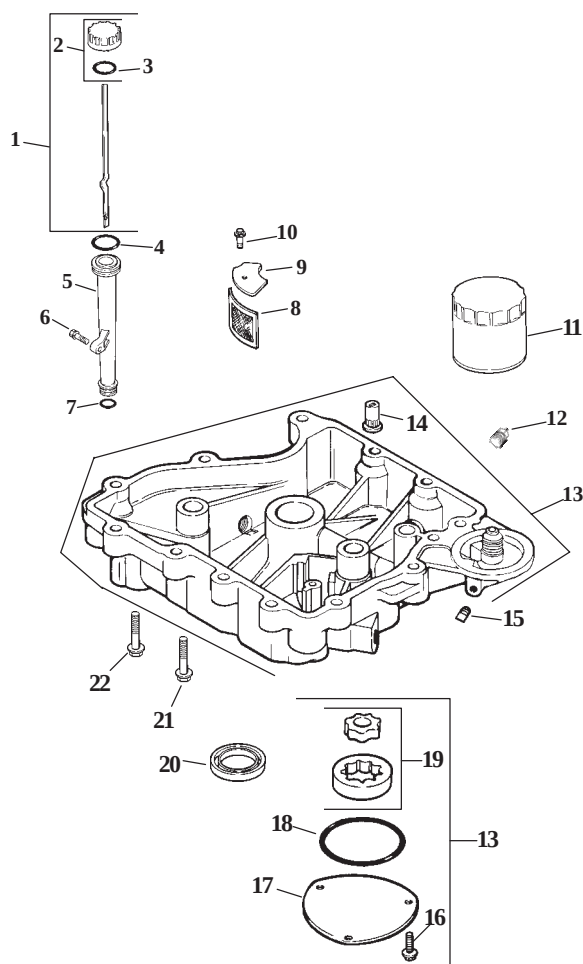


Oil Pan and Lubrication Assembly Kohler CV15T-41608

Ref. No.	Part No.	Qty.	Description
1	12 038 01-S	1	Dipstick ASM(Incl. 2-3)
2	25 755 13-S	1	Kit-Oil Fill Cap (Incl. 3)
3	12 153 03-S	1	O Ring-Dipstick
4	12 153 02-S	1	O Ring-Upper Oil Fill Tube
5	12 123 04-S	1	Tube-Oil Fill
6	M-545020-S	1	Screw-HF, M5x0.8x20
7	12 153 01-S	1	O Ring-Lower Oil Fill Tube
8	25 162 07-S	1	Screen-Oil Pickup
9	12 096 03-S	1	Cover-Oil Pickup Screen
10	M-545016-S	1	Screw-HF, M5x0.8x16
11	52 050 02-S	1	Filter-Oil
12	25 139 57-S	1	Plug-Pipe, 3/8 SH
13	12 199 50-S	1	Oil Pan ASM (Incl.14, 16-19)
14	25 462 09-S	1	Valve-Oil Pressure Relief
15	25 139 52-S	1	Plug-Pipe,1/8
16	M-545016-S	3	Screw-HF, M5x0.8x16
17	12 096 34-S	1	Cover-Oil Pump
18	12 153 06-S	1	O Ring-Oil Pump Cover

Ref. No.	Part No.	Qty.	Description
19	12 393 01-S	1	Pump-Oil
20	12 032 03-S	1	Seal-Oil (PTO End)
21	24 086 16-S	11	Screw-HF, M8x1.25x45
22	24 086 17-S	1	Screw-HF, M8x1.25x45

Order Parts From Kohler

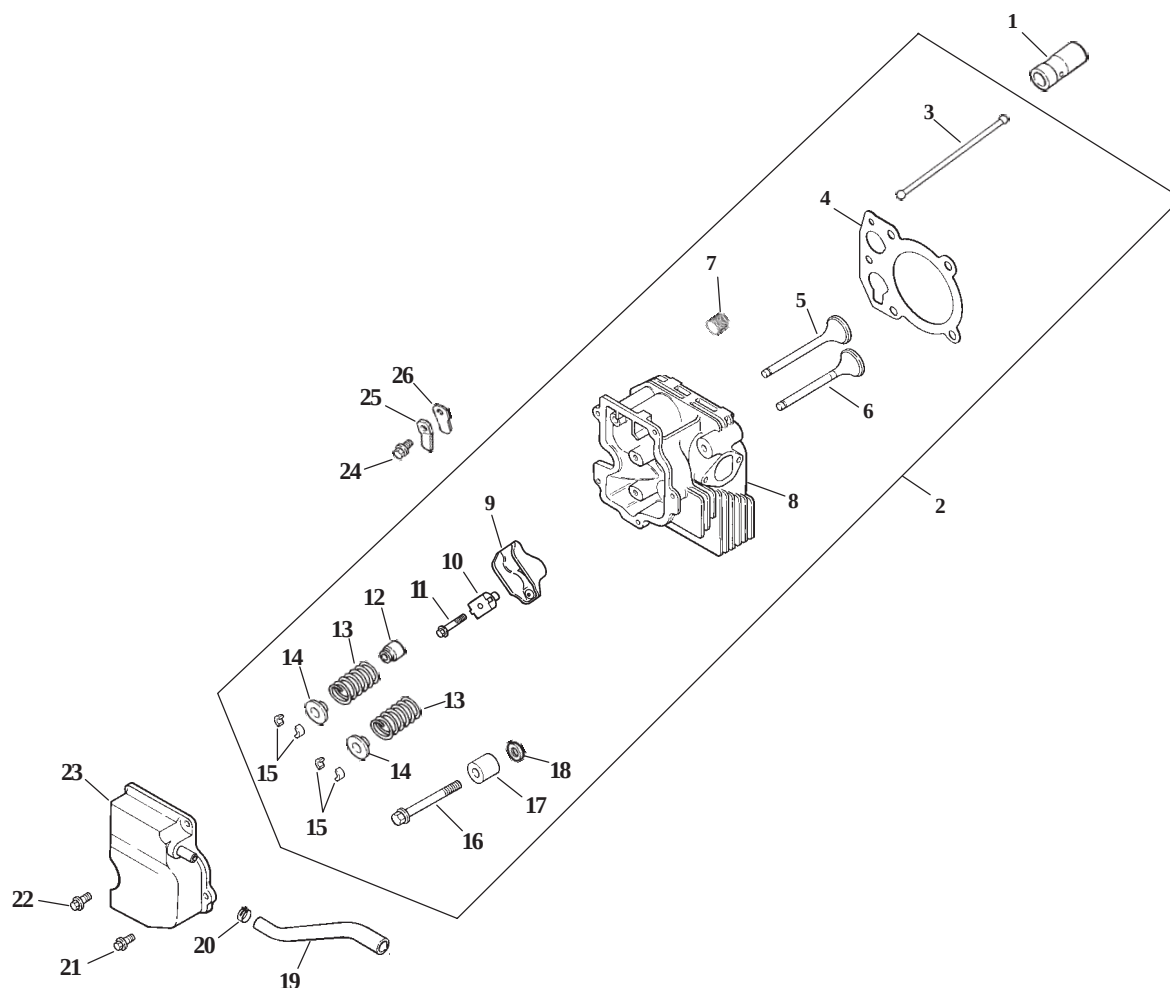


Cylinder Head, Valve and Breather Assembly Kohler CV15T-41608

Ref. No.	Part No.	Qty.	Description
1	12 351 01-S	2	Lifter-Valve
2	12 755 81-S	1	Kit-Cylinder Head (Incl. 3-13, 18-21, 25, Carburator Gasket 12 041 01-S(2), Exhaust Manifold Gasket 12 041 03-S, Air Cleaner Gasket 12 041 02-S)
3	12 411 01-S	2	Rod-Push
4	12 041 10-S	1	Gasket-Cylinder Head
5	12 017 01-S	1	Valve-Intake STD
5	12 017 02-S	1	Valve-Intake .25
6	12 016 01-S	1	Valve-Exhaust STD
6	12 016 02-S	1	Valve-Exhaust, .25
7	25 139 60-S	1	Plug-Pipe, HSH 1/8
8	12 318 19-S	1	Head - Cylinder
9	25 186 01-S	2	Arm-Rocker
10	12 599 03-S	2	Pivot-Rocker Arm
11	M-640034-S	2	Screw-HF M6x1.0x34
12	24 032 05-S	1	Seal-Valve Stem
13	12 089 01-S	2	Spring-Valve
14	12 173 01-S	2	Cap-Valve Spring
15	12 755 03-S	2	Kit-Retainer

Ref. No.	Part No.	Qty.	Description
16	12 086 15-S	5	Screw-HF M10x1.5x81
17	12 112 13-S	1	Spacer-Head Bolt Exhaust Port
18	12 468 05-S	1	Washer-Plain 13/32
19	12 326 03-S	1	Hose-Breather
20	25 237 14-S	2	Clamp-Hose
21	M-645020-S	3	Screw-HF M6x1.0x20
22	M-640034-S	2	Screw-HF M6x1.0x34
23	12 096 07-S	1	Cover-Valve w/Nipple
24	M-545010-S	1	Screw-HF M5x0.8x10
25	12 018 01-S	1	Retainer-Breather Reed
26	12 402 02-S	1	Reed-Breather


Order Parts from Kohler

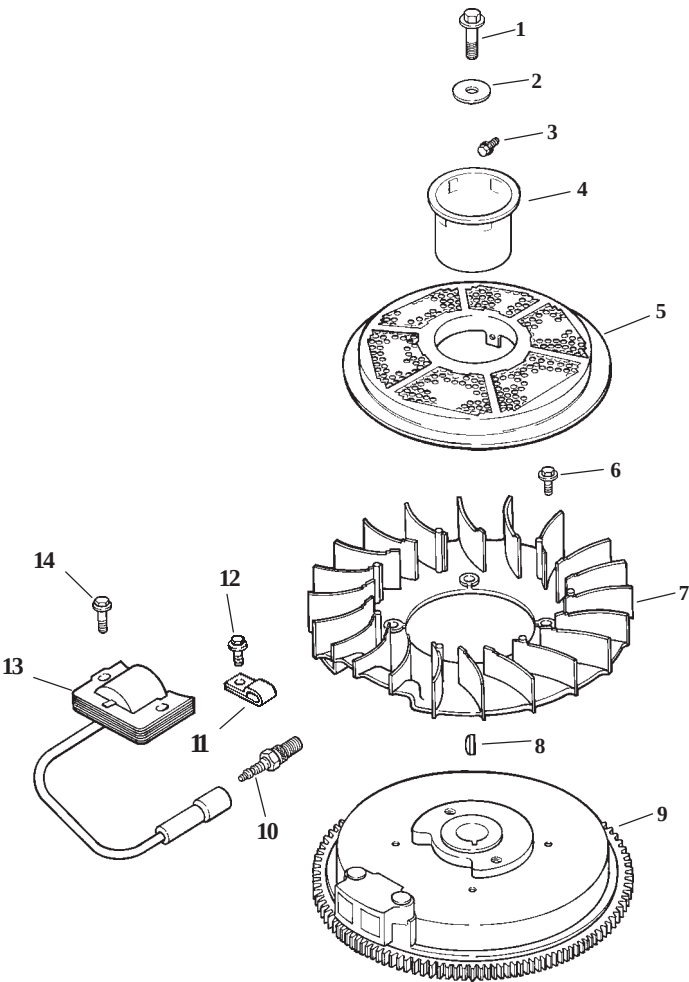

Ignition and Electrical Assembly
Kohler CV15T-41608

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	12 086 14-S	1	Screw-HF,M10x1.5x46	11	X-728-1-S	2	Clip-Cable
2	12 468 03-S	1	Washer-Plain, 3/8	10	M-639016-S	2	Screw-HF, M6x1.0x16
3	M-545010-S	3	Screw-HF,M5x0.8x10	11	41 155 03-S	1	Connector
4	12 109 07-S	1	Cup-Drive, Starter	12	M-545010-S	2	Screw-HF, M5x0.8x10
5	12 162 09-S	1	Screen-Grass	13	12 584 05-S	1	Module-Ignition
6	25 086 47-S	4	Bolt-Shoulder	13	M-548025-S	2	Screw-HH M5x0.8x25
7	12 157 03-S	4	Fan	14	M-545020-S	2	Screw-HF, M5x0.8x20
8	X-42-15-S	1	Key	*	25 518 05-S	1	Lead-Black, Rectifier/ Regulator,(5"-14Gauge Uninsulated Push On Tab Terminals)
9	12 025 31-S	1	Flywheel				
8	12 403 01-S	1	Rectifier-Unregulated, 15 amp				
9	X-22-11-S	2	Washer - Lock	*	12 454 03-S	1	Tie-Wire
10	12 132 06-S	1	Spark Plug				


* Not illustrated
Order Parts From Kohler

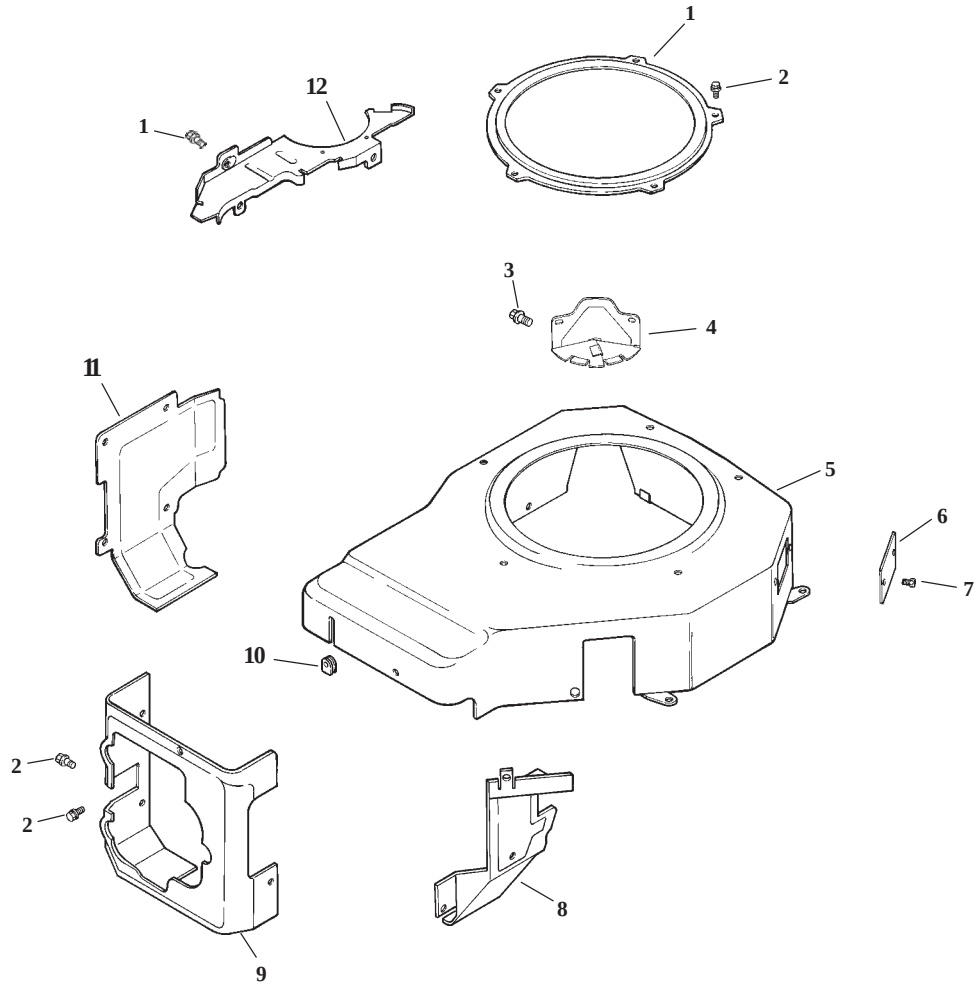

Blower Housing and Baffle Assembly
Kohler CV15T-41608

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	12 314 10 S	1	Guard-Grass Screen				
2	M-545010-S	9	Screw-HF, M5x0.8x10				
3	M-550010-S	6	Screw-HF, M5x0.8x10				
4	12 096 29-S	1	Cover-Starter				
5	12 027 53-S	1	Housing-Blower				
6	12 096 27-S	1	Cover-Rectifier/ Regulator				
7	M-6390 16-S	2	Screw-HF, M6x1.0x16				
8	12 063 10-S	1	Baffle-Intake, Side				
9	12 063 08-S	1	Baffle-Cylinder Head				
10	12 313 03-S	1	Grommet-Spark Plug leads				
11	12 063 19-S	1	Baffle-Cylinder				
12	12 146 07-S	1	Plate-Blower Housing				
*	12 113 112-S	1	Decal-Horsepower				


* Not illustrated
Order Parts From Kohler

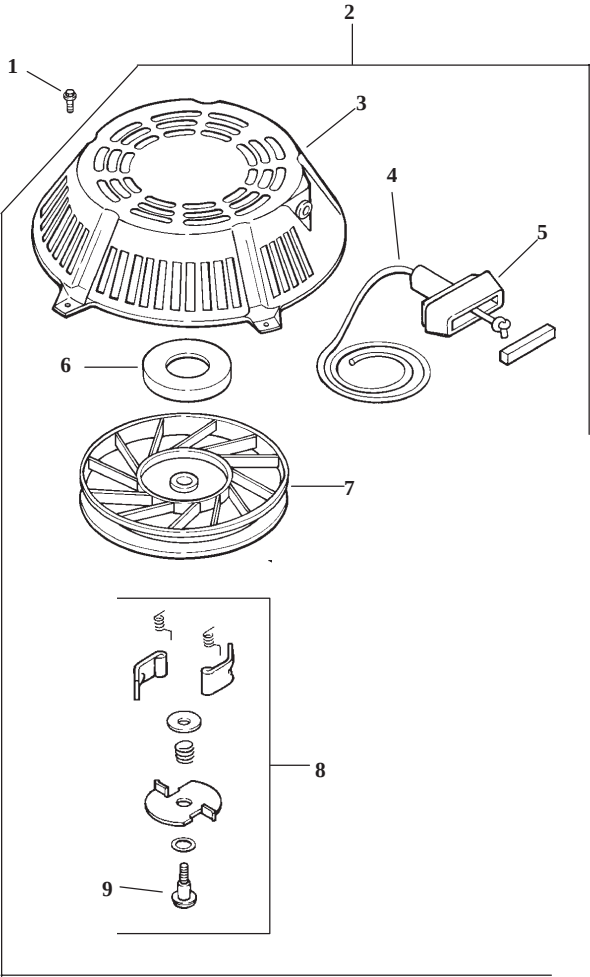

Starter Assembly
Kohler CV15T-41608

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	M-550010-S	5	Screw-HF, M5x0.8x10				
2	12 165 01-S	1	Starter ASM				
			Retractable (Incl. 3-9)				
3	12 081 01-S	1	Housing-Starter				
4	12 160 01-S	1	Rope-Starter				
5	25 166 01-S	1	Handle-Recoil				
6	12 089 06-S	1	Spring & Keeper				
7	12 093 01-S	1	Pulley				
8	12 757 06-S	1	Kit-Dog Repair				
			(incl. 9)				
9	41 086 09-S	1	Screw-Posidrive				
*	12 113 07-S	1	Decal-Starting				


* Not illustrated
Order Parts From Kohler

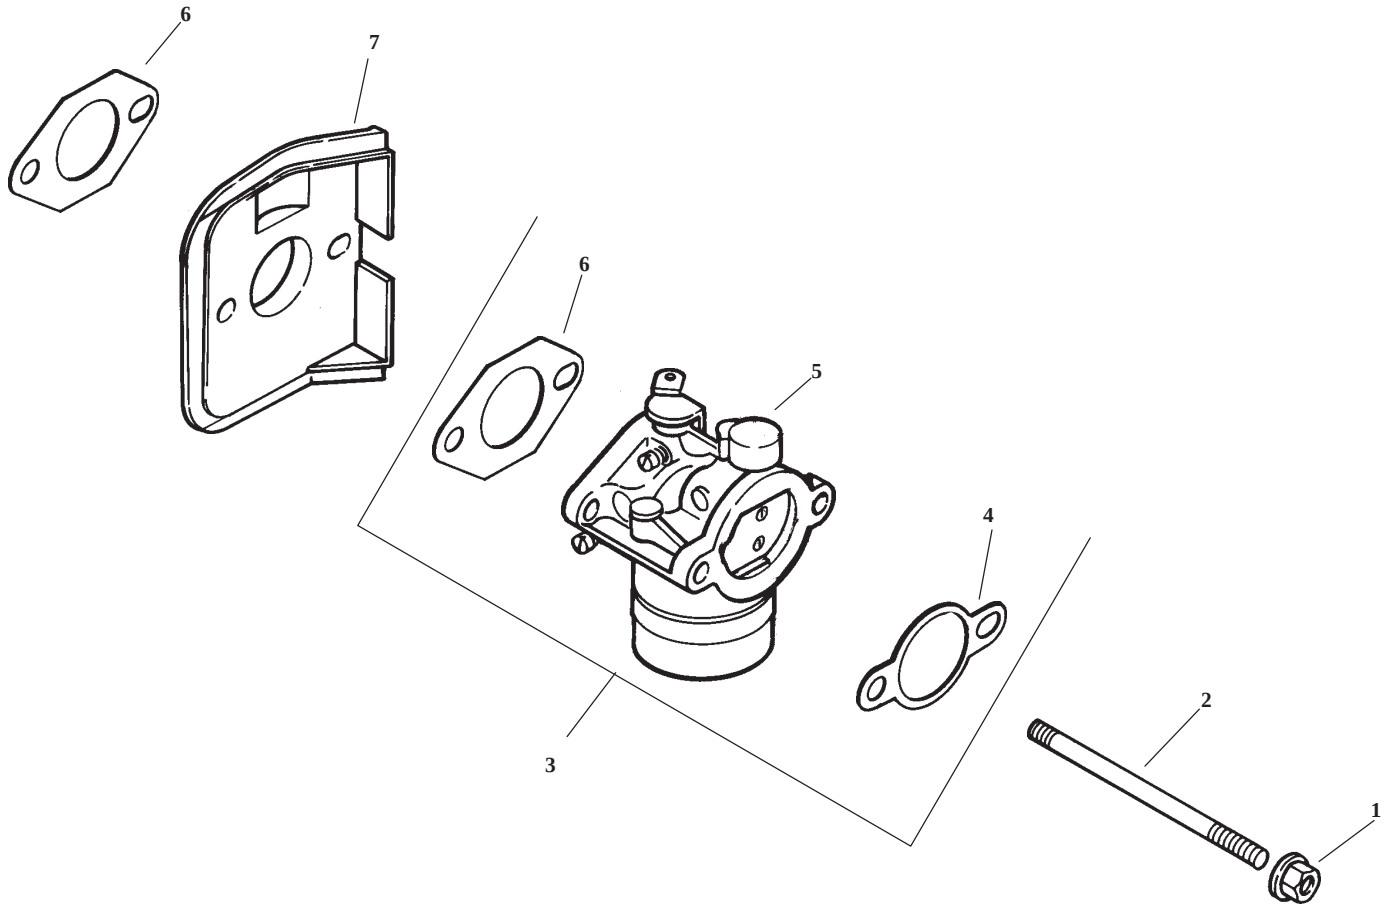

Fuel System Assembly **Kohler CV15T-41608**

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	M-641060-S	2	Nut-HF M6x1.0				
2	M-629116-S	2	Stud M6x1.0x116				
3	12 853 80-S	1	Kit-Carburetor				
			w/Gaskets (Incl. 4-6)				
4	12 041 02-S	1	Gasket-Air Cleaner				
5	12 053 80	1	Carburetor ASM (For				
			Information Only Not				
			Available Separately)				
			(Service With Kits				
			12 757 02-S Float Kit				
			12 757 03-S Carb.				
			Repair Kit and				
			12 757 08-S Choke				
			Repair Kit)				
6	12 041 01-S	2	Gasket-Carburetor				
7	12 265 04-S	1	Deflector-Heat				
8	47 154 01-S	1	Clip-Cable				
*	12 757 02-S	1	Kit-Float				
*	12 757 08-S	1	Kit-Choke Repair				
*	12 757 03-S	1	Kit-Carburetor Repair				
*	12 755 92-S	1	Kit-High Altitude with				
			Gaskets				

* Not illustrated
Order Parts From Kohler

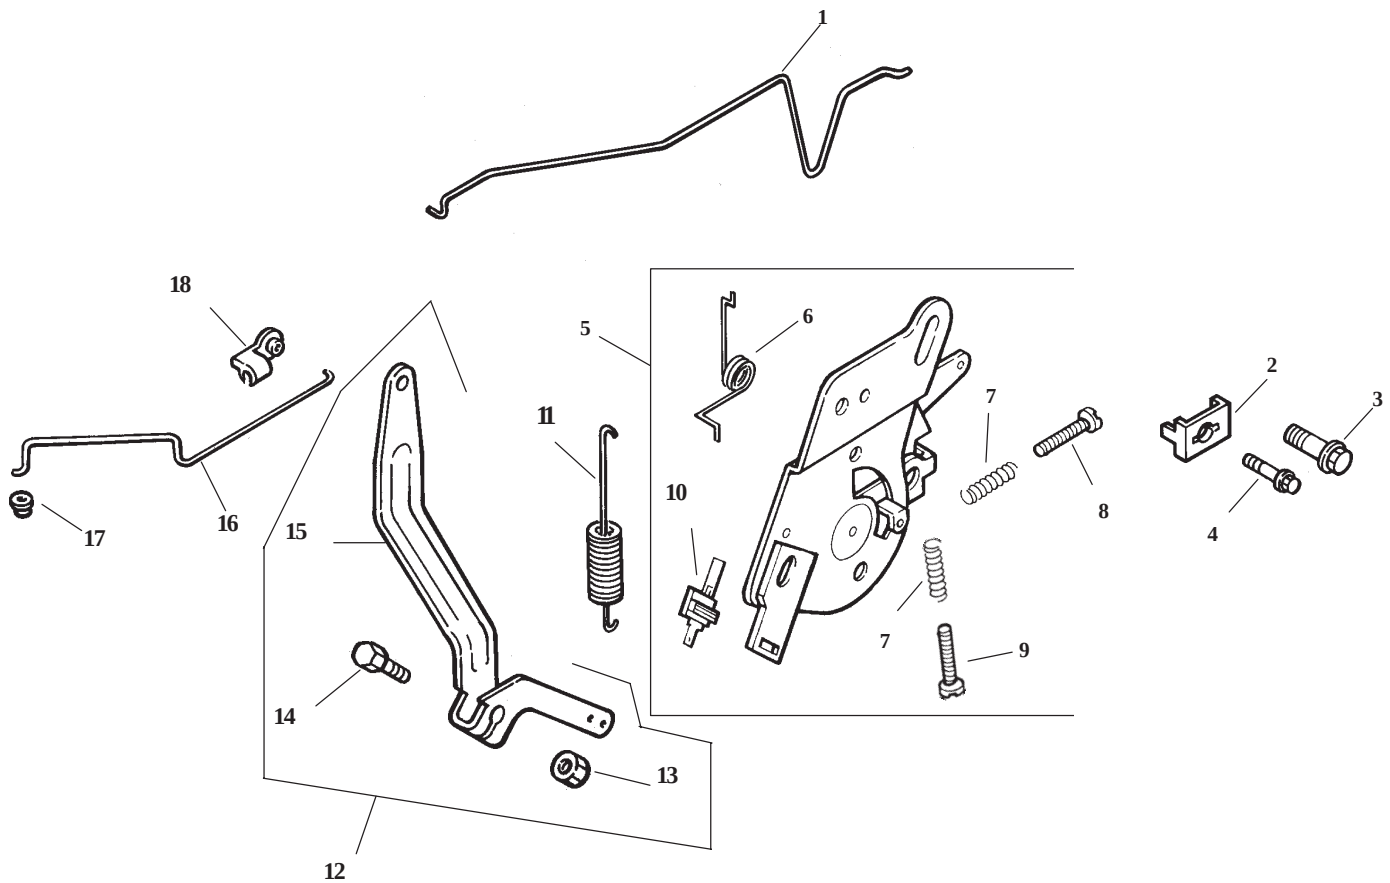


Engine Control Assembly Kohler CV15T-41608

Ref. No.	Part No.	Qty.	Description
1	12 079 07-S	1	Linkage-Choke
2	12 237 01-S	1	Clamp-Cable
3	M-664020-S	2	Screw-Lobed Socket M6x1.0x20
4	M-545016-S	1	Screw-HF M5x .08x16
5	12 536 06-S	1	Control-Speed ASM
6	12 089 23-S	1	Spring-Choke Return (Incl. 6-10)
7	12 089 11-S	2	Spring-Speed Control
8	12 086 38-S	1	Screw-Pan Hd with Loctite
9	M-443020-S	1	Screw-SPH, M4x0.7x20
10	25 452 14	1	Terminal-Kill Switch
11	12 089 19-S	1	Spring-Governor
12	12 755 83-S	1	Kit - Governor Lever (Incl. 13-15)
13	12 100 07-S	1	Nut-HF
14	52 211 04-S	1	Bolt-Round HD
15	12 090 28-S	1	Lever-Governor
16	12 079 01-S	1	Linkage-Throttle
17	25 158 08-S	1	Bushing-Linkage Retaining

Ref. No.	Part No.	Qty.	Description
18	25 158 11-S	1	Bushing-Throttle Linkage


Order Parts From Kohler

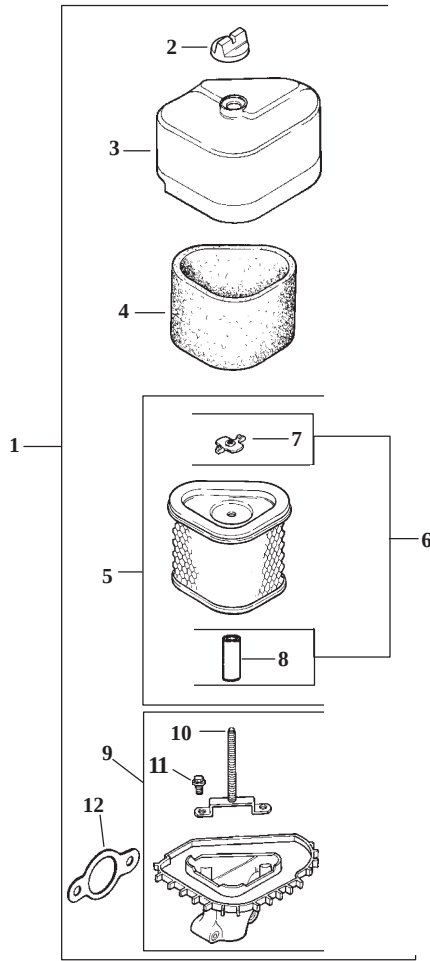

Air Cleaner Assembly Kohler CV15T-41608

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	12 743 02-S	1	Kit-Air Cleaner (Incl. 2-12)				
2	25 341 03-S	1	Knob-Air Cleaner Cover				
3	12 096 38-S	1	Cover-Air Cleaner				
4	12 083 12-S	1	Element-Precleaner				
5	12 083 10-S	1	Element-Air Cleaner (Incl. 6-8)				
6	12 743 12-S	1	Kit-Seal (Incl. 7-8)				
7	12 100 08-S	1	Nut-Wing				
8	12 032 11-S	1	Seal				
9	12 094 07-S	1	Base-Air Cleaner (Incl. 10,11)				
10	12 072 04-S	1	Stud-M6x1.0x66				
11	12 086 01-S	2	Screw-#10 Hi-Lo Thread Forming				
12	12 041 02-S	1	Gasket-Air Cleaner				
*	12 113 04-S	1	Decal-Air Cleaner				

* Not illustrated
Order Parts From Kohler

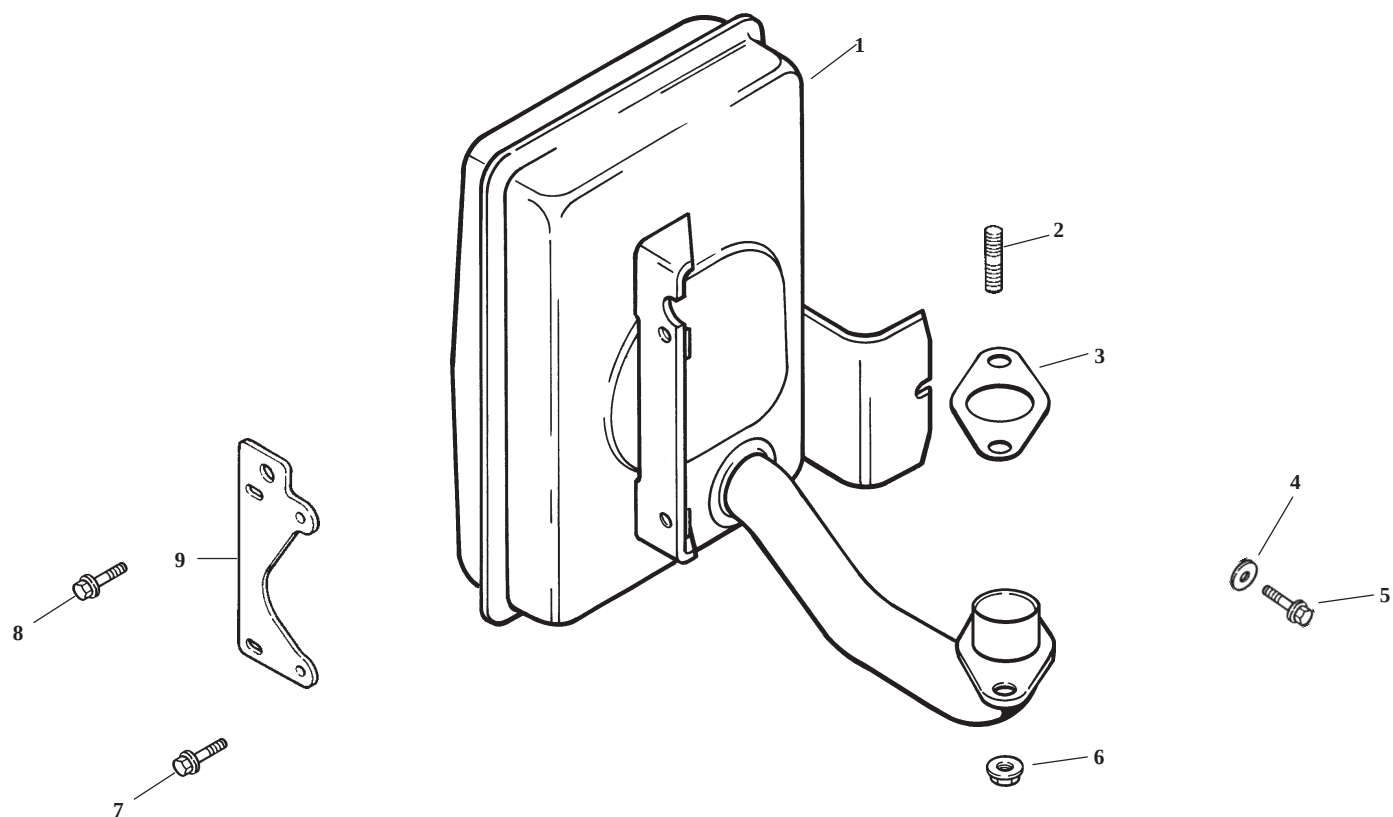

Exhaust Assembly
Kohler CV15T-41608

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	12 068 44-S	1	Muffler				
2	25 072 04-S	2	Stud M8x1.25x33				
3	12 041 03-S	1	Gasket-Exhaust				
			Manifold				
4	X-25-78-S	1	Washer-Plain,1/4				
5	M-545016-S	1	Screw-HF, M5x0.8x16				
6	M-841080-S	2	Nut-HF, M8x1.25				
7	M-645016-S	2	Screw-HF, M6x1.0x16				
8	M-645025-S	2	Screw-HF, M6x1.0x25				
9	12 126 71-S	1	Bracket-Muffler				
*	12 112 20-S	2	Spacer				

* Not illustrated
Obtain Parts From Kohler

Maintenance Record

[illegible]

Maintenance Record

[illegible]

Maintenance Record

[illegible]

