



Z587L

Z Master[®] with 60in TURBO FORCE Side Discharge Mower

Model No. 74250—240000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Front Frame Assembly	4	Lever Assembly No. 106–3242	27
Castor and Wheel Assembly	5	Cylinder/Crankcase Assembly	
Main Frame Assembly	6	Kawasaki FD750D–AS03	28
Brake and Wheel Hub Assembly	7	Piston/Crankshaft Assembly	
Steering Control Assembly	8	Kawasaki FD750D–AS03	29
Hydraulic System Assembly	9	Valve/Camshaft Assembly	
Seat and Roll–Over–Protection–System		Kawasaki FD750D–AS03	30
Assembly	11	Lubrication Equipment Assembly	
Seat Assembly No. 107–1867	12	Kawasaki FD750D–AS03	31
Deck Mounting Assembly	13	Cooling Equipment Assembly	
Drive Idler Assembly	14	Kawasaki FD750D–AS03	32
Z–Stand Assembly	15	Electric Equipment Assembly	
Engine, Clutch, Air Cleaner and		Kawasaki FD750D–AS03	33
Muffler Assembly	16	Control Equipment Assembly	
Cooling System Assembly	17	Kawasaki FD750D–AS03	34
Hood Assembly	18	Carburetor Assembly	
Cooling Mounting Frame Assembly	19	Kawasaki FD750D–AS03	35
Fuel Tank Assembly	20	Air Filter/Muffler Assembly	
Electrical Components Assembly	21	Kawasaki FD750D–AS03	36
60in Deck Assembly	23	Fuel Tank/Fuel Valve Assembly	
Spindle Assembly No. 106–3217	24	Kawasaki FD750D–AS03	37
Deck Assembly No. 107–1624	25	Starter Assembly	
Rubber Deflector Assembly No. 106–3249 ...	26	Kawasaki FD750D–AS03	38

 
Accessories

Description	Model / Part No.	Description	Model / Part No.
Mid Flow Blade	105–7715–03	Lo Flow Blade	105–7716–03
Lo Flow Blade	105–7716–03	Atomic Blade	105–7777–03

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

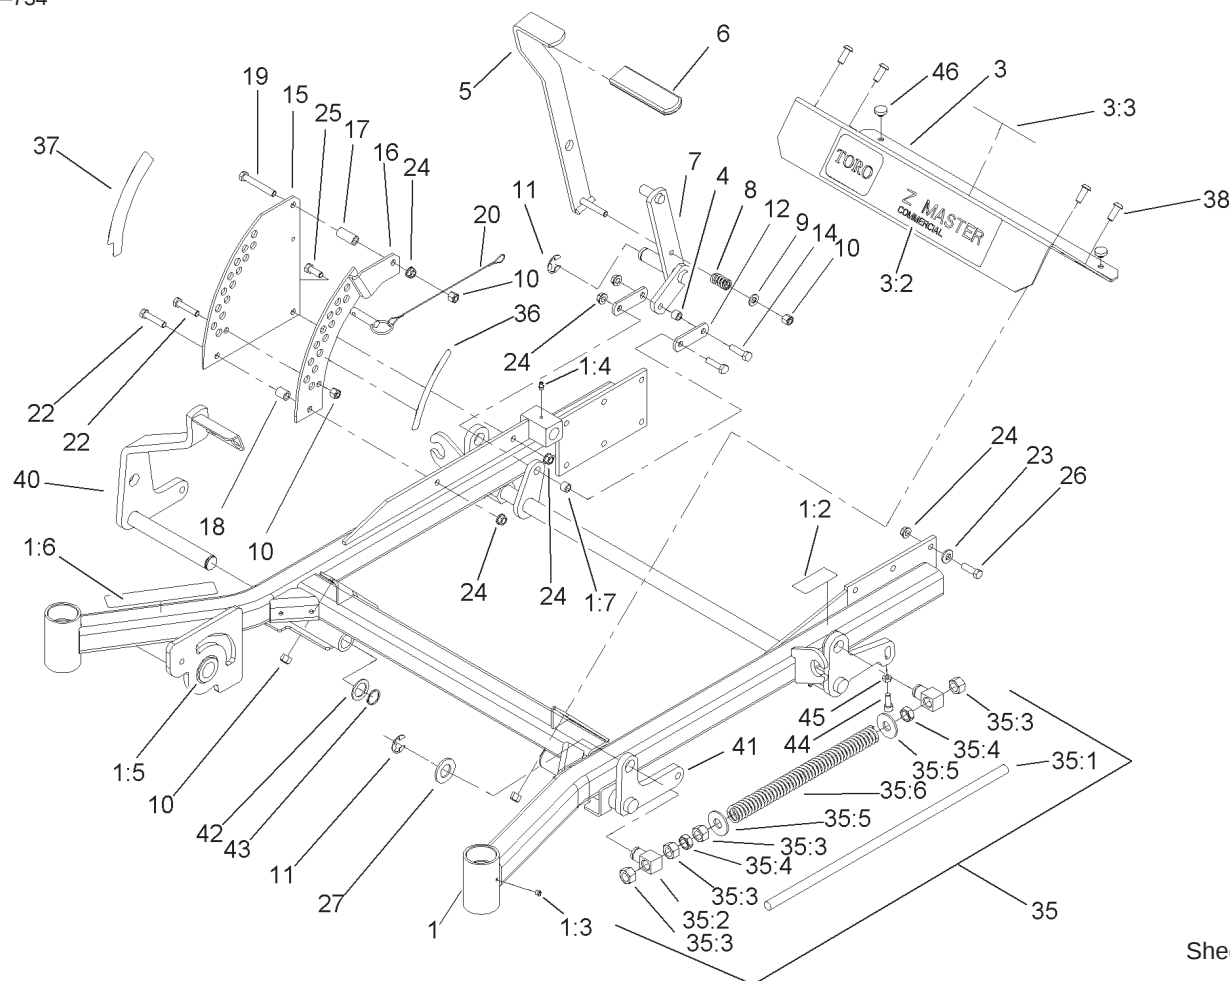


Sheet No.:2

Front Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	106-8998	1	Frame ASM
1:2	107-1857	1	Decal-Brake, Parking
1:3	1-811010	2	Plug
1:4	302-19	5	Fitting-Grease
1:5	94-1291	2	Bushing
1:6	104-7759	1	Decal-Warning
1:7	103-1918	1	Bushing
3	106-9981	1	Front Floorpan ASM
3:2	106-7451	1	Decal
3:3	107-2112	1	Decal-Warning
4	103-1918	1	Bushing
5	103-2083-03	1	Lever-Lift
6	1-633295	1	Grip-Lever, Lift
7	103-2064-03	1	Arm-Lift, Deck
8	1-633325	1	Spring-Compression
9	3256-24	1	Washer-Flat
10	3296-39	9	Nut-Lock, NI
11	32151-103	5	Ring-Snap
12	1-633068	2	Arm-Lift, Deck
14	323-29	2	Screw-HH
15	1-633889-01	1	Plate-Lift, Deck
16	1-632899-01	1	Plate-Lift, Deck
17	1-633082	1	Bushing-Lever, Lift
18	1-633080	1	Bushing-Lever, Lift
19	323-13	1	Screw-HH
20	106-9951	1	Hitch Pin ASM

Ref. No.	Part No.	Qty.	Description
22	323-9	2	Screw-HH
23	98-5975	12	Washer-Belleville
24	3290-357	15	Nut-HHF
25	323-6	1	Screw-HH
26	323-7	12	Screw-HH
27	3256-29	4	Washer-Flat
★35		2	Front Frame Spring ASM
35:1	1-633096	1	Rod-Lift, Deck
35:2	1-633441	2	Swivel-Deck Mount, Rear
35:3	3217-11	4	Nut-Hex
35:4	3218-6	2	Nut-Jam
35:5	3256-7	2	Washer-Flat
35:6	1-633064	1	Spring-Support, Deck
36	107-1861	1	Decal-Height, Deck
37	107-1860	1	Decal-Height, Deck
38	3274-94	4	Screw-HSBH
40	106-8983-01	1	RH Deck Lift ASM
41	106-8984-01	1	LH Deck Lift ASM
42	1-523157	2	Washer-Spacer
43	32151-29	2	Ring-Retaining
44	3274-18	2	Screw-HSH
45	3218-2	2	Nut-Jam
46	1-513658	2	Bumper

 ★ Not serviced separately

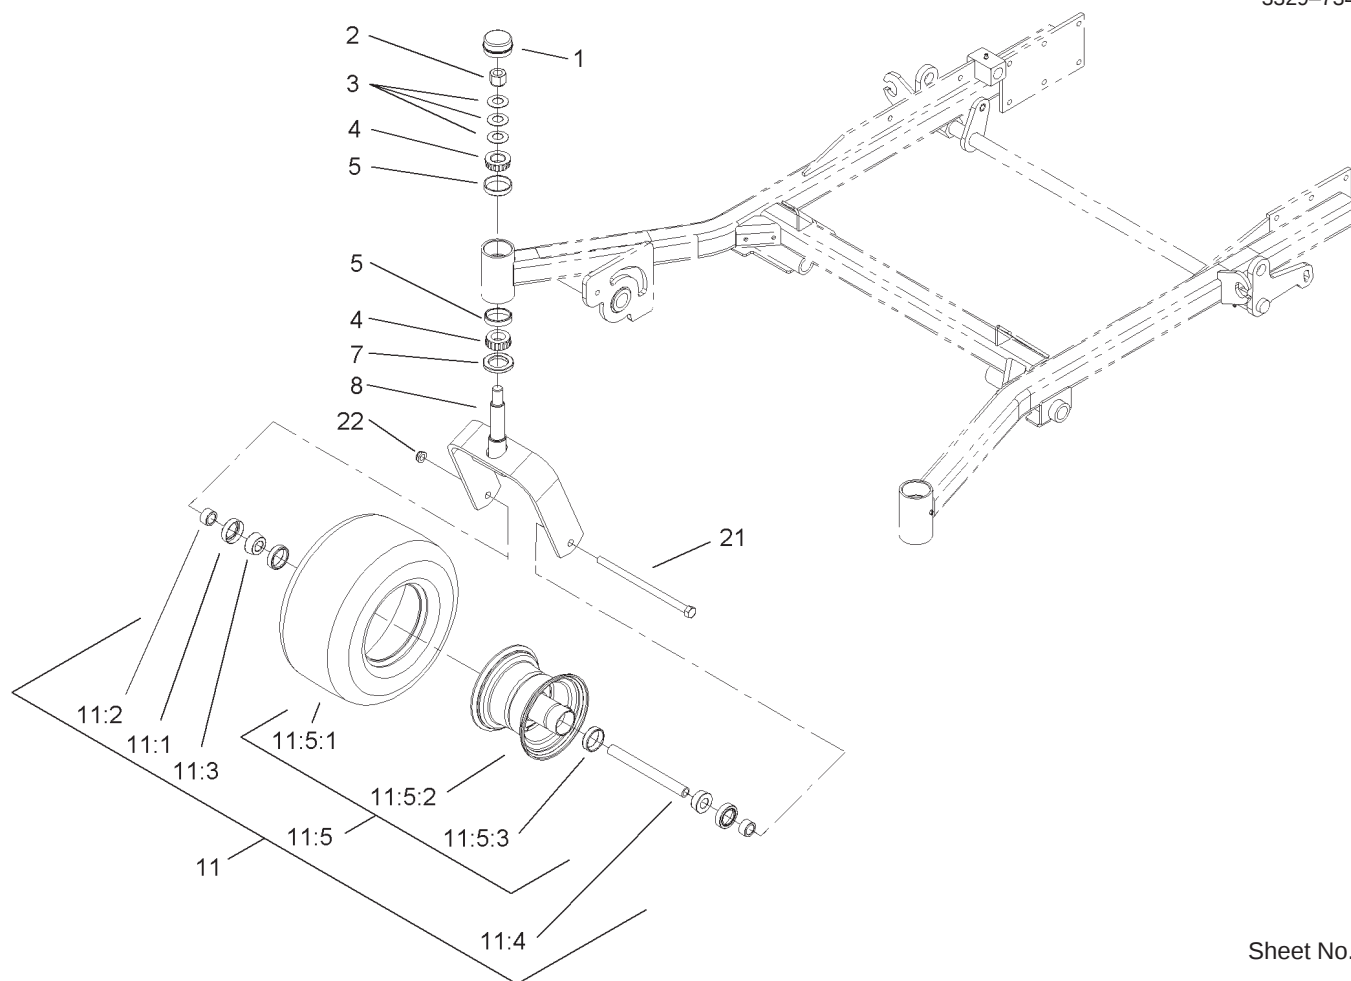


Sheet No.:3

Castor and Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	1-543513	2	Cap-Grease
2	3296-51	2	Nut-Lock, NI
3	1-633508	6	Washer-Bellville
4	254-94	4	Bearing-Cone, Taper
5	254-72	4	Bearing-Cup, Tapered
7	1-543511	2	Seal-Grease
8	103-1474-01	2	Fork-Caster
11	1-644251	2	Caster Wheel ASM
11:1	1-633580	2	Seal-Bearing
11:2	1-633581	2	Spacer-Bearing
11:3	1-633585	2	Bearing-Cone, Taper
11:4	1-633959	1	Spacer-Caster, Front
☆11:5		1	Wheel And Tire ASM
11:5:1	1-523009	1	Tire
11:5:2	1-633987	1	Wheel
11:5:3	1-633584	2	Bearing-Cup
21	325-39	2	Screw-HH
22	3296-45	2	Nut-Lock, NI

 ☆ Not serviced separately

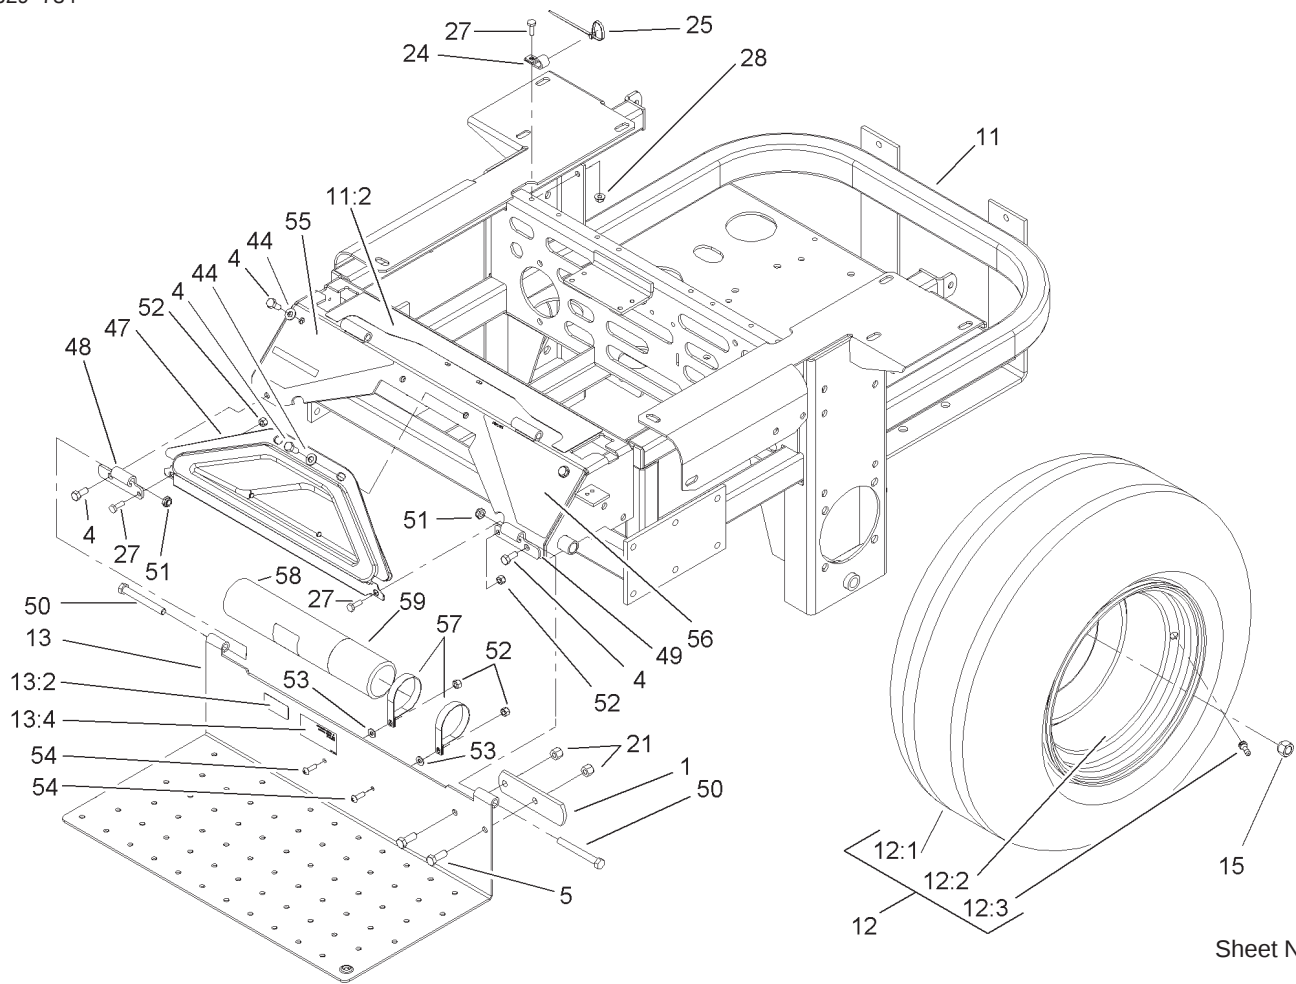


Sheet No.:4

Main Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	1-633964-03	1	Stop-Brake, Park
4	322-43	6	Screw-HH
5	323-6	2	Screw-HH
11	106-6599	1	Main Frame ASM
11:2	103-2433	1	Decal-Console, Top
12	1-633970	2	Wheel And Tire ASM
12:1	1-633993	1	Tire
12:2	1-633992	1	Wheel
12:3	232-27	1	Stem-Valve
13	107-1858	1	Rear Floorpan ASM
13:2	98-4387	1	Decal-Protection, Ear
13:4	107-1864	1	Decal-Location, Manual
15	242-50	8	Nut-Lug
21	3296-39	2	Nut-Lock, NI
24	1-513762	1	Clip-Loom
25	1-303335	1	Tie-Plastic
27	321-4	3	Screw-HH
28	32128-33	1	Nut-HF
44	3256-70	6	Washer-Flat
47	106-7498	1	Pocket
48	106-7488-03	1	Hinge-Floorpan, LH
50	323-20	2	Screw-HH
51	3296-59	2	Nut-Lock, NI
52	3296-42	4	Nut-Lock, NI
53	3256-63	2	Washer-Flat


Ref. No.	Part No.	Qty.	Description
54	3258-166	2	Screw
55	106-9989	1	Decal-Warning
56	106-7492	1	Decal-Danger
57	107-1865	2	R-Clamp
58	104-7050	1	Housing-Manual
59	104-7048	1	Cap-Housing

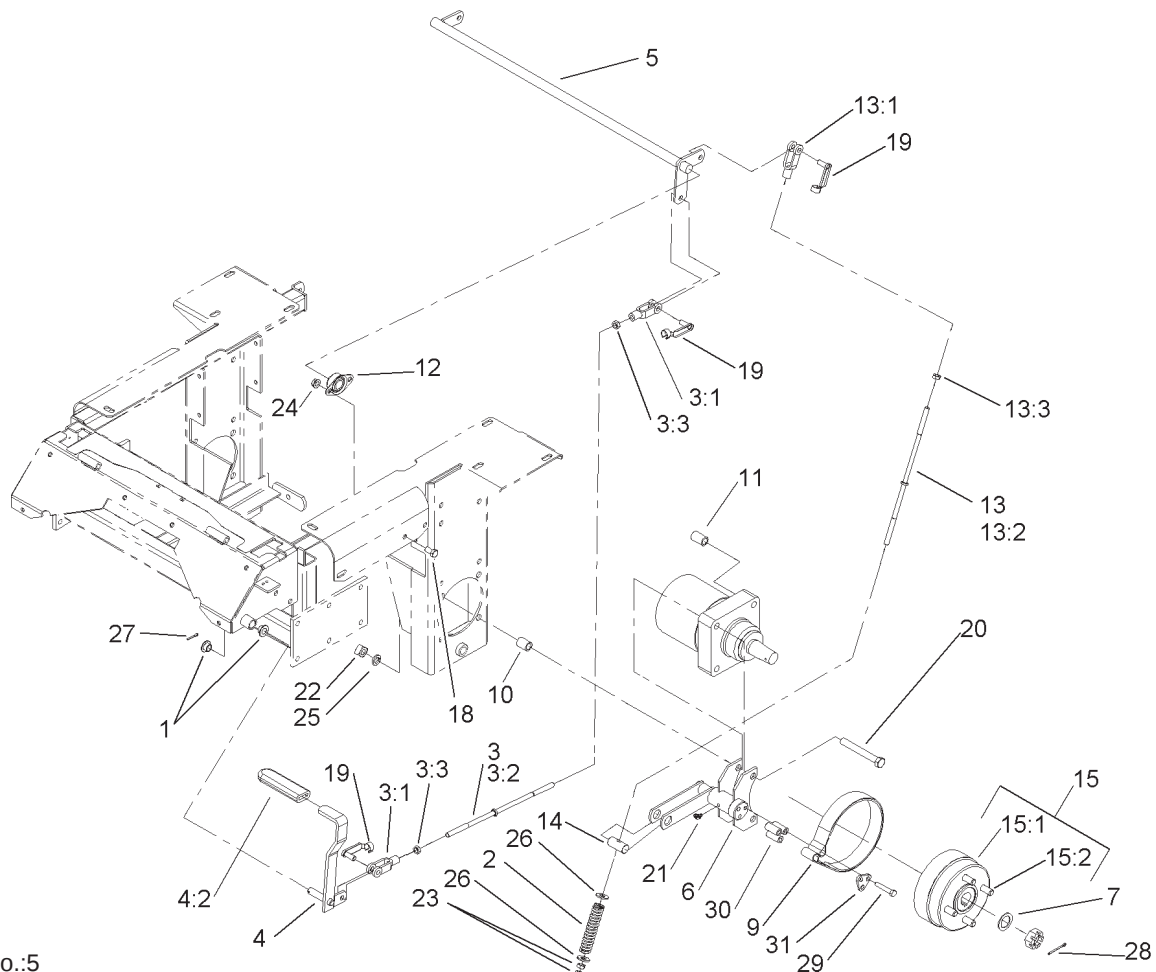 

Sheet No.:5

Brake and Wheel Hub Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	1-513140	2	Bearing-Control	19	103-2399	4	Pin-Spring, Clevis
2	1-633454	2	Spring-Brake	20	325-17	8	Screw-HH
3	103-4332	1	Brake Rod And Yoke ASM	21	1481	2	Fitting-Grease
3:1	1-633131	2	Yoke-Linkage, Brake	22	103-0131	8	Nut-Square
3:2	1-633477	1	Rod-Brake	23	3219-3	4	Nut-HH
3:3	3219-3	2	Nut-HH	24	3290-357	4	Nut-HHF
4	1-634500	1	Brake Lever ASM	25	3253-7	8	Washer-Lock
4:2	1-633268	1	Grip-Lever, Brake	26	3256-4	4	Washer-Flat
5	1-632217-03	1	Shaft-Brake	27	3272-10	1	Pin-Cotter
6	103-0352-03	2	Bracket-Brake	28	1-806800	2	Pin-Cotter
7	1-523157	2	Washer-Spacer	29	322-9	6	Screw-HH
9	103-0355	2	Band-Brake	30	103-0384	6	Spacer
10	1-633380	4	Spacer-Wheel, Short	31	103-0374	2	Retainer-Band, Brake
11	1-633382	4	Spacer-Wheel, Long				
12	1-633102	2	Bearing-Flange, Side				
13	103-4333	2	Brake Rod And Yoke ASM				
13:1	1-633131	1	Yoke-Linkage, Brake				
13:2	1-633477	1	Rod-Brake				
13:3	3219-3	1	Nut-HH				
14	1-633144	2	Pin-Trunion				
15	103-0590	2	Hub-Wheel				
15:1	103-0589	1	Wheel Hub ASM				
15:2	1-633926	4	Stud-Wheel				
18	323-4	4	Screw-HH				

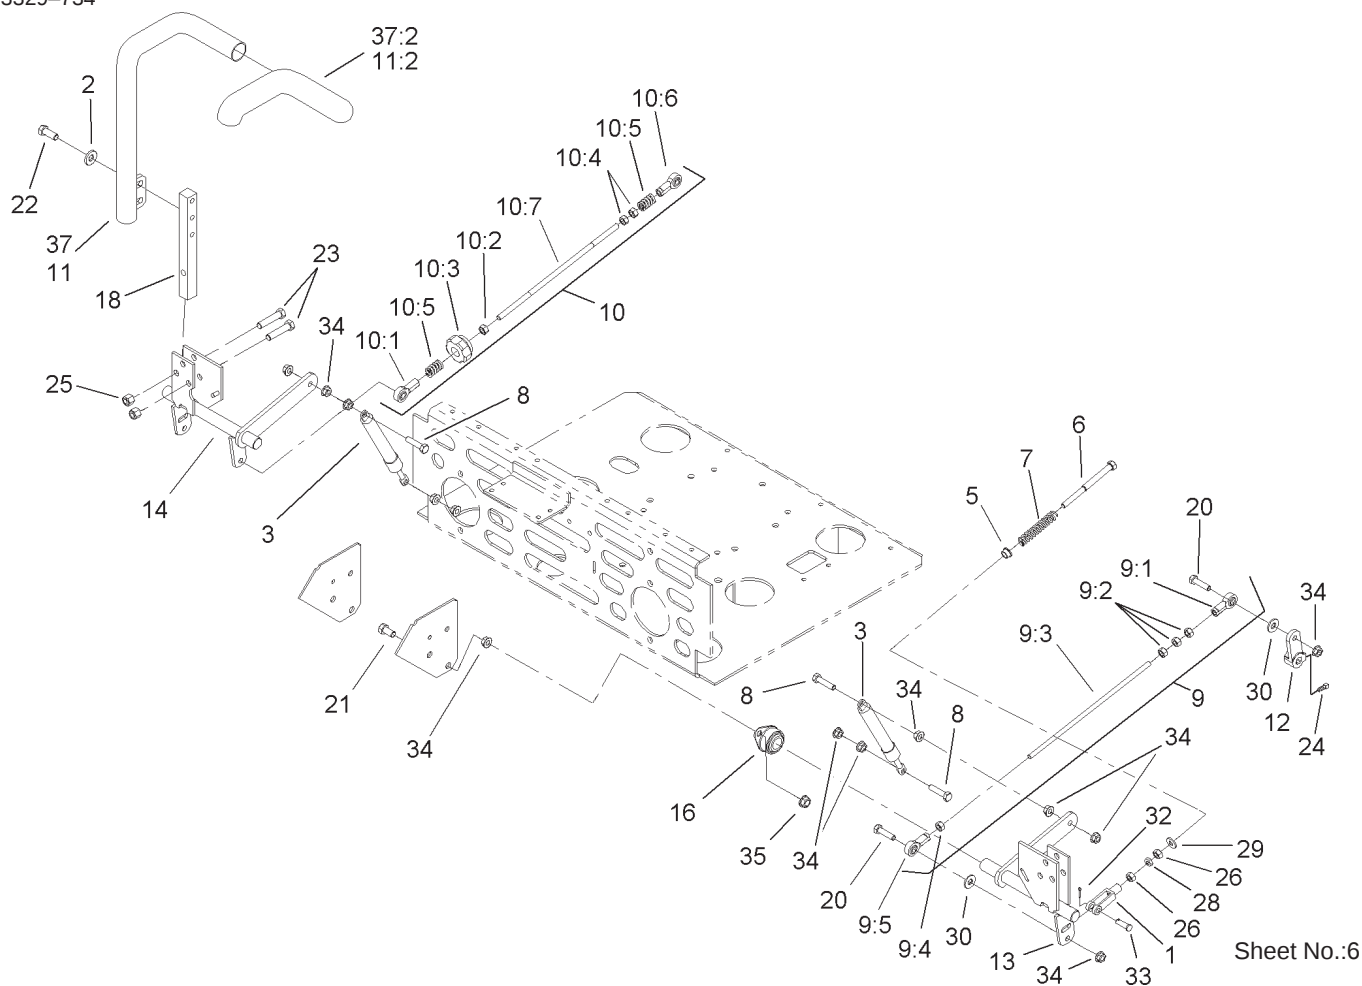 


Steering Control Assembly

Ref. No.	Part No.	Qty.	Description
1	1-303105	2	Yoke-Adjustable
2	98-5975	4	Washer-Belleville
3	103-4079	2	Damper-Motion Control
5	1-603735	2	Bushing-Flanged
6	1-603737	2	Bolt-Return, Neutral
7	1-603807	2	Spring-Return, Neutral
8	1-403180	4	Screw-HH
★9		1	Tracking Rod ASM
9:1	1-543017	1	Balljoint-RH
9:2	3219-2	3	Nut-Hex
9:3	103-3064	1	Link-Rod, Tracking
9:4	1-804524	1	Nut
9:5	1-633152	1	Balljoint-Thread, LH
★10		1	Tracking Rod ASM
10:1	1-543017	1	Balljoint-RH
10:2	3219-2	1	Nut-Hex
10:3	103-3060	1	Knob-Tracking
10:4	1-804524	2	Nut
10:5	1-323245	2	Spring-Compression
10:6	1-633152	1	Balljoint-Thread, LH
10:7	103-3064	1	Link-Rod, Tracking
11	106-9982	1	LH Lever ASM
11:2	106-9987	1	Grip-Control, Motion
12	1-632208	2	Arm-Control, Pump

Ref. No.	Part No.	Qty.	Description
13	103-4781	1	Control-Motion, LH
14	103-4782	1	Control-Motion, RH
16	1-633102	4	Bearing-Flange, Side
18	103-0407	2	Arm-Shaft, Control
20	322-6	4	Screw-HH
21	323-4	8	Screw-HH
22	323-6	4	Screw-HH
23	323-9	6	Screw-HH
24	1-803022	2	Screw-Set
25	3296-39	6	Nut-Lock, NI
26	3219-2	4	Nut-Hex
28	3220-2	2	Nut
29	3256-2	2	Washer-Flat
30	3256-3	4	Washer-Flat
32	3272-5	2	Pin-Cotter
33	1-808280	2	Pin-Clevis
34	32128-20	16	Nut-HF
35	3290-357	8	Nut-HHF
37	106-9983	1	RH Lever ASM
37:2	106-9987	1	Grip-Control, Motion

 ★ Not serviced separately

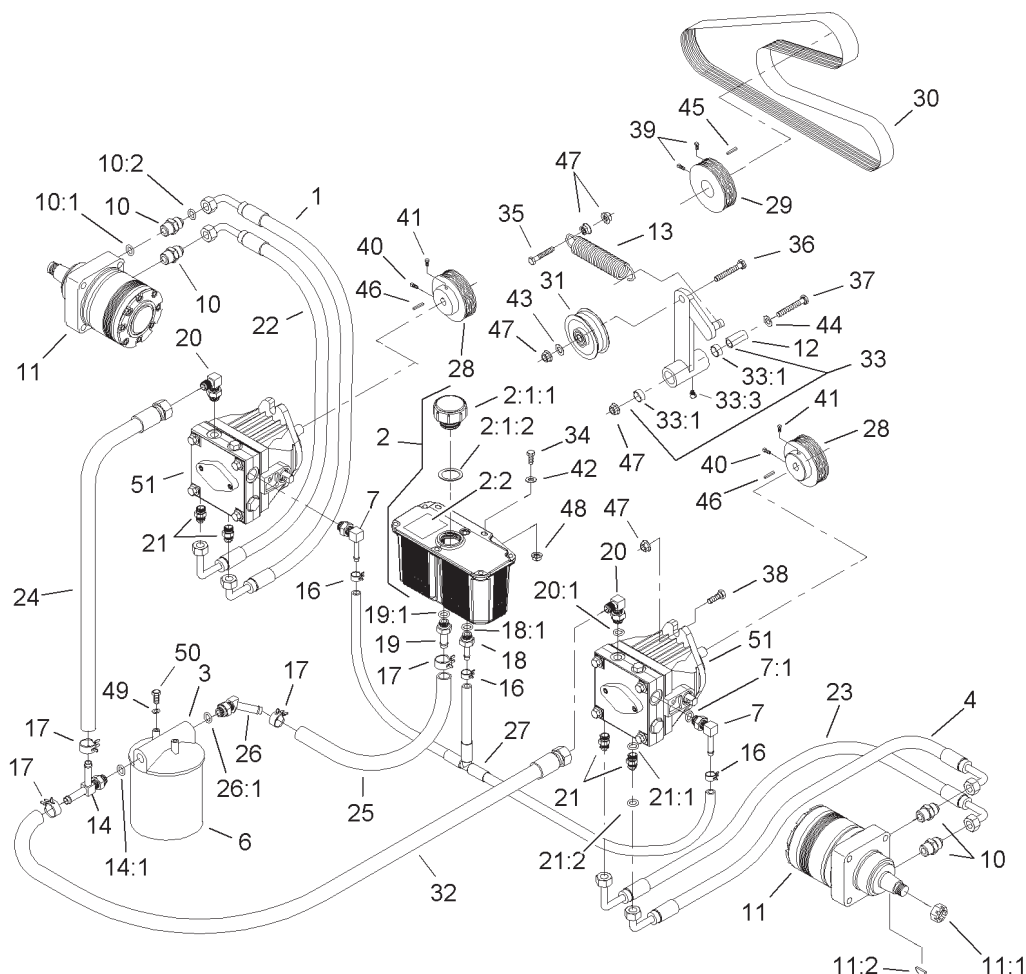


Sheet No.:7

Hydraulic System Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	103-3736	1	HYD Hose ASM	18	103-1801	1	Adapter-Straight
2	103-1947	1	HYD Reservoir ASM	18:1	237-42	1	O-Ring
2:1:1	103-1948	1	Cap-Reservoir, HYD	19	103-1912	1	Adapter-Straight
2:1:2	103-1949	1	Gasket-Cap	19:1	237-42	1	O-Ring
2:2	1-523552	1	Decal-Tank, HYD	20	103-1802	2	Fitting-HYD, 90°
3	104-7836	1	Head-Filter	20:1	237-42	1	O-Ring
4	103-3733	1	HYD Hose ASM	21	1-603990	4	Fitting-Straight
6	1-633752	1	Filter-HYD, Winter	21:1	237-79	1	O-Ring
6	1-633750	1	Filter-HYD	21:2	1-603992	1	O-Ring
7	103-1799	2	Elbow-90°	22	103-3737	1	HYD Hose ASM
7:1	237-42	1	O-Ring	23	103-3735	1	HYD Hose ASM
10	1-603991	4	Fitting-Straight	24	103-1826	1	HYD Hose ASM
10:1	237-80	1	O-Ring	25	103-1808	1	Hose-HYD
10:2	1-603992	1	O-Ring	26	103-1807	1	Elbow-45°
11	1-523328	2	Motor-Wheel	26:1	237-42	1	O-Ring
11:1	1-809036	1	Nut-HH	27	103-1806	1	HYD Hose ASM
11:2	3257-42	1	Key-Woodruff	28	1-633568	2	Sheave
*11:99	103-2748	1	Drive Link Kit	29	1-633567	1	Sheave
*11:99	1-000139	1	Bearing Kit	30	1-633749	1	Belt-Drive, Pump
*11:99	1-000099	1	Seal Kit	31	1-633167	1	Sheave-Idler
12	1-603384	1	Bushing-Pivot, Idler	32	103-1827	1	HYD Hose ASM
13	103-3330	1	Spring-Extension	33	1-634277	1	Bearing Arm ASM
14	103-1828	1	Adapter-Run, Tee	33:1	1-513034	2	Sleeve-Bearing
14:1	237-42	1	O-Ring	33:3	302-40	1	Fitting-Grease
16	103-1716	3	Clamp-Hose	34	321-6	2	Screw-HH
17	103-1988	4	Clamp-Hose	35	323-8	1	Screw-HH

 * Not illustrated

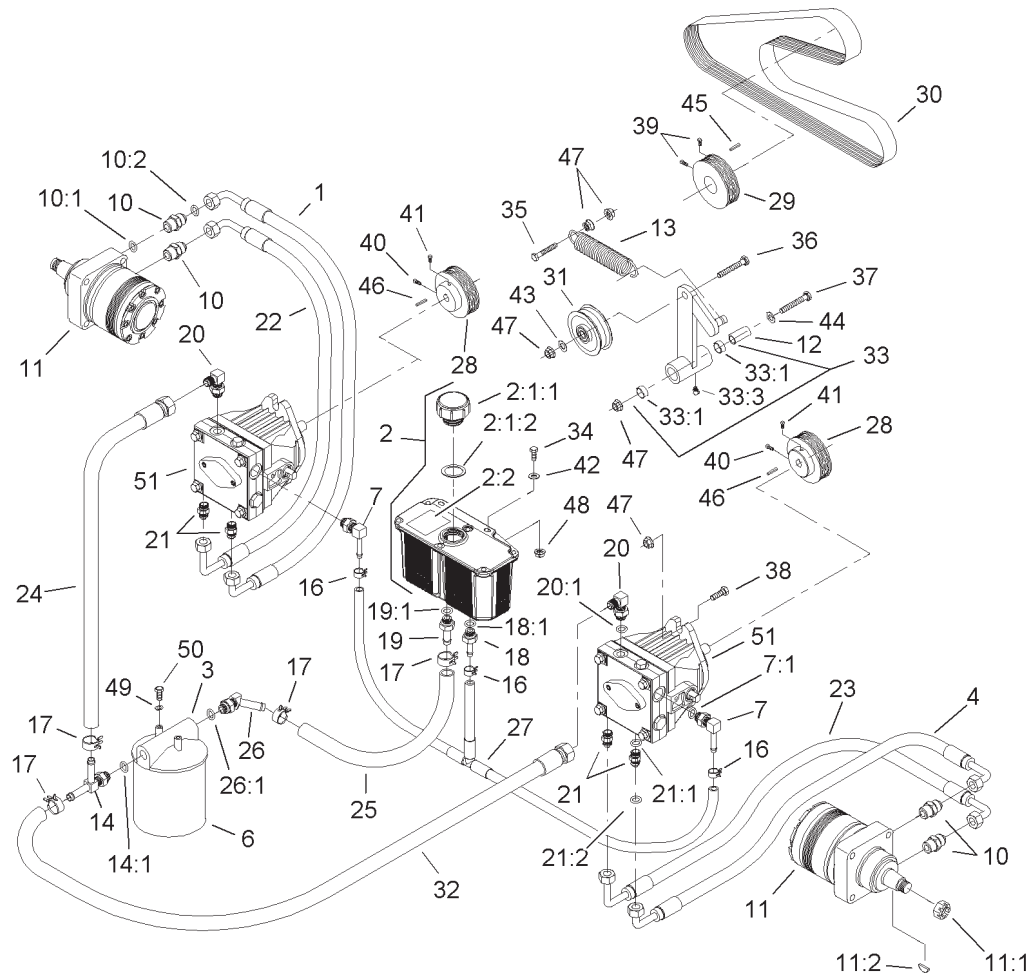


Sheet No.:7

Hydraulic System Assembly (Continued)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
36	323-9	1	Screw-HH				
37	1-800805	1	Screw-HH				
38	323-7	4	Screw-HH				
39	1-803022	2	Screw-Set				
40	30-1710	2	Screw				
41	1-803050	2	Screw-Set				
42	3256-22	2	Washer-Flat				
43	3256-3	1	Washer-Flat				
44	3256-4	1	Washer-Flat				
45	13-2840	1	Key-Square				
46	1-807272	2	Key				
47	3290-357	8	Nut-HHF				
48	32128-33	2	Nut-HF				
49	1-805004	2	Washer-Lock				
50	321-3	2	Screw-HH				
51	103-2675	2	Pump-HYD				
*51:1	103-2664	1	Input Shaft Kit				
*51:2	94-6922	1	Bearing-Thrust				
*51:3	103-2666	1	Cylinder Block Kit				
*51:4	105-6185	1	Plate-Valve				
*51:5	105-6184	1	Seal Overhaul Kit				
*51:7	106-2053	1	Shock Valve Kit				

 
* Not illustrated

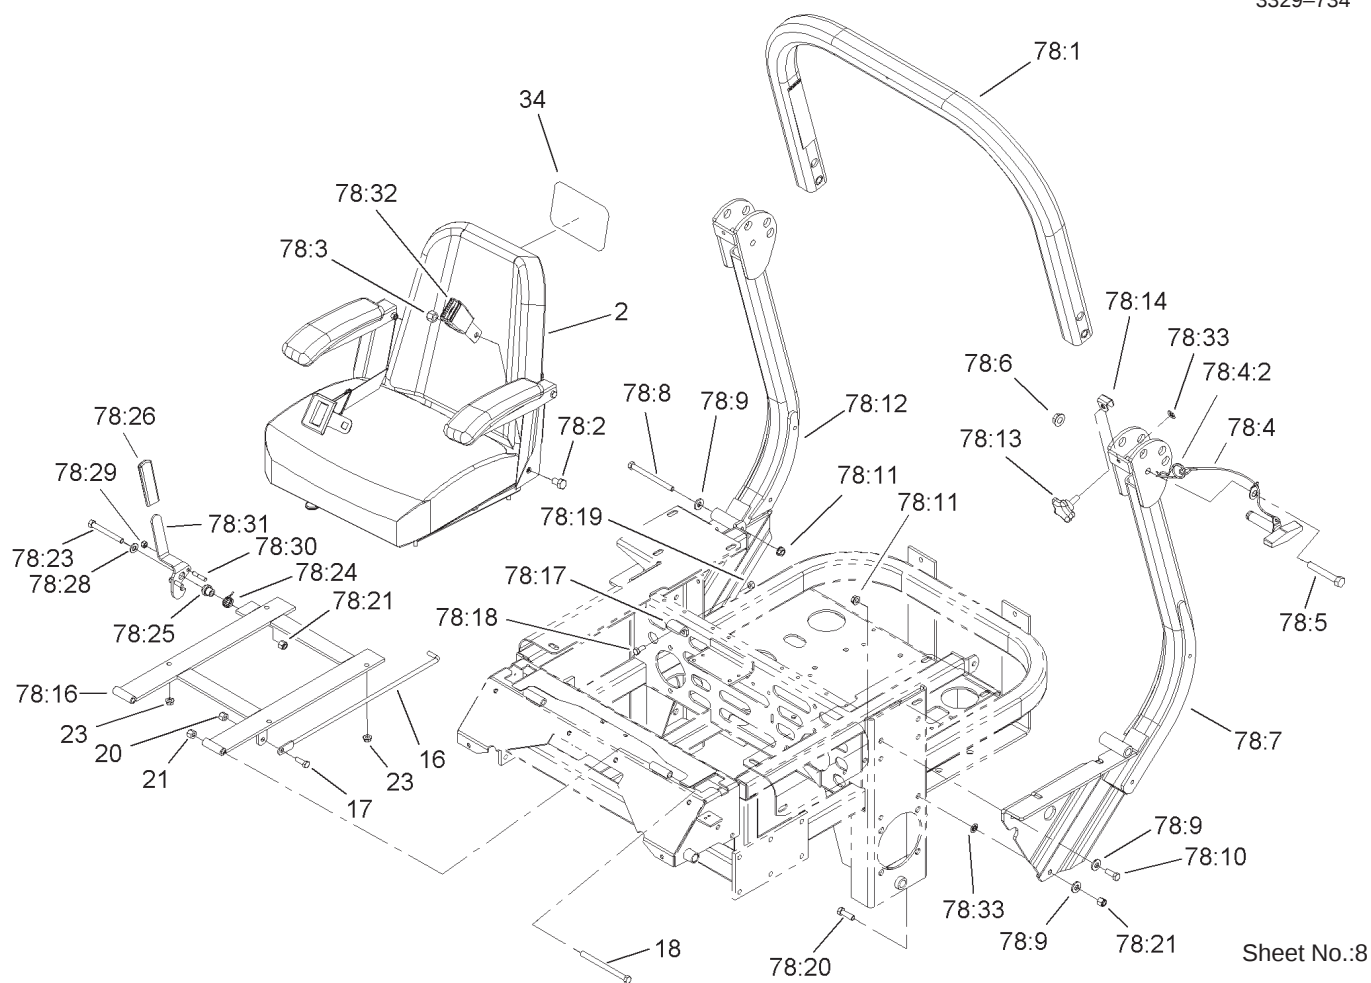

Seat and Roll-Over-Protection-System Assembly

Ref. No.	Part No.	Qty.	Description
2	107-1867	1	Seat ASM
16	1-633293	1	Rod-Holdup, Seat
17	322-5	1	Screw-HH
18	323-39	2	Screw-HH
20	3296-29	3	Nut-Lock, NI
21	3296-39	5	Nut-Lock, NI
23	32128-20	4	Nut-HF
78	107-0038	1	Rops
☆78:1		1	Upper Tube ASM
78:2	3212-4	2	Screw-HH
78:3	3296-7	2	Nut-Lock NI
78:4	107-3060	2	Pin Latch ASM
78:4:2	107-3155	1	Hairpin
78:5	325-13	2	Screw-HH
78:6	32128-23	2	Nut-HF
☆78:7		1	LH Rops ASM
78:8	323-23	2	Screw-HH
78:9	98-5975	8	Washer-Belleville
78:10	323-6	4	Screw-HH
78:11	3290-357	6	Nut-HHF
☆78:12		1	RH Rops ASM
78:13	106-0887	2	Knob
78:14	107-3124	2	Clip
78:16	107-3052-03	1	Frame-Support, Seat
78:17	107-3058	1	Catch-Latch, Seat
78:18	322-3	2	Screw-HH

 ☆ Not serviced separately

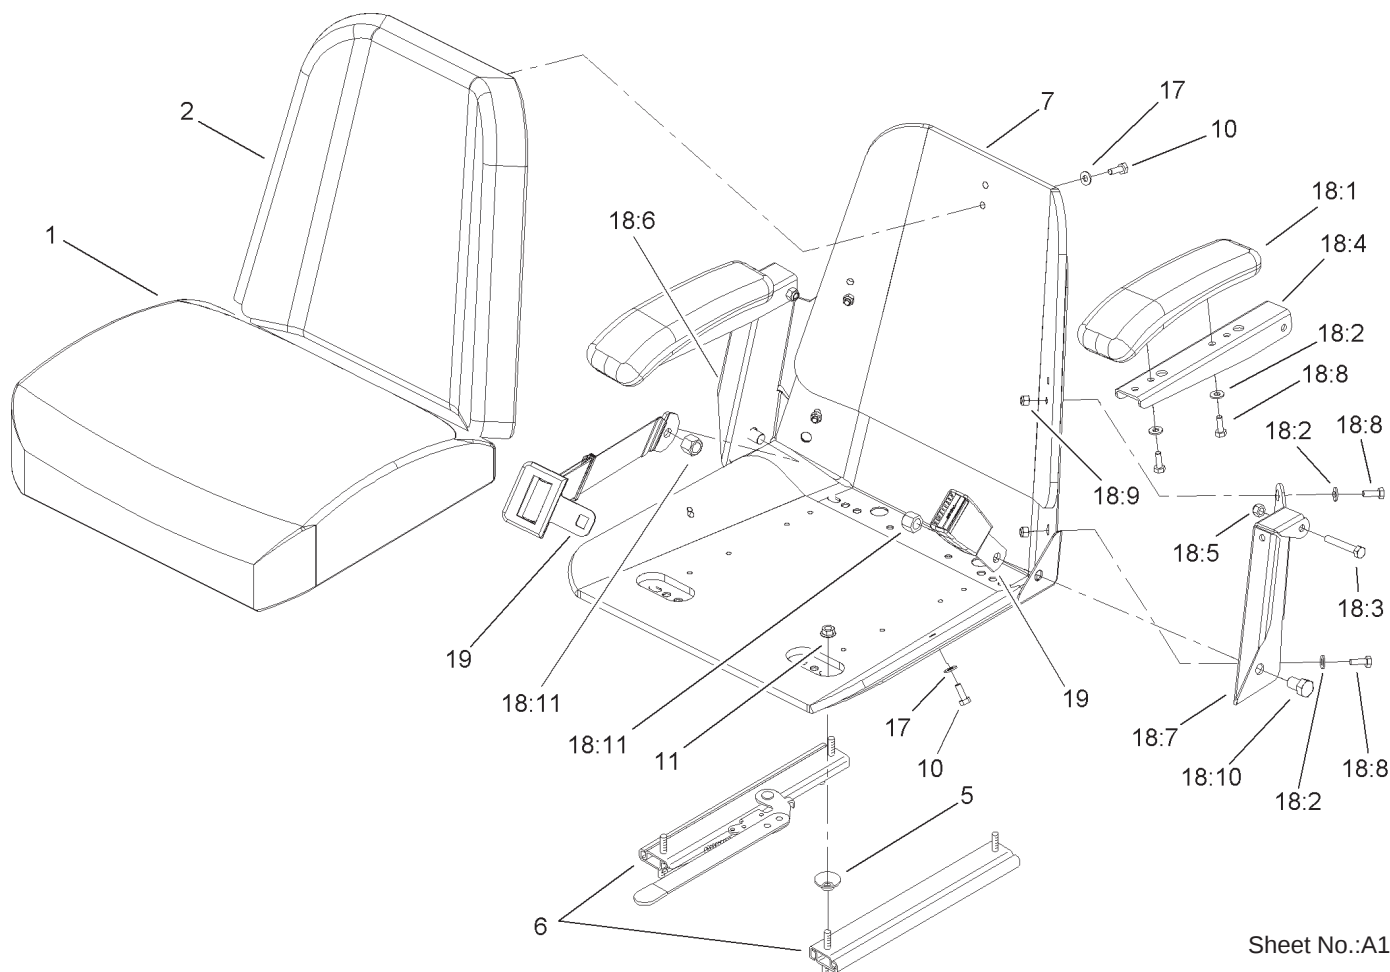


Sheet No.:A1

Seat Assembly No. 107-1867

Ref. No.	Part No.	Qty.	Description
1	103-0290	1	Cushion-Seat, Bottom
2	104-7754	1	Cushion-Seat, Back
5	1-543401	4	Spacer-Track
6	1-643255	1	Track-Seat
7	1-633859	1	Frame-Seat
10	321-30	11	Screw-HH
11	32128-20	4	Nut-HF
17	3256-22	11	Washer-Flat
18	105-3620	1	Armrest Kit
18:1	1-633710	2	Cushion-Armrest
18:2	3256-22	4	Washer-Flat
18:3	322-10	2	Screw-HH
18:4	105-3623	2	Channel-Armrest
18:5	32153-3	2	Nut-Lock
18:6	105-3621	1	Bracket-Armrest, RH
18:7	105-3622	1	Bracket-Armrest, LH
18:8	321-30	6	Screw-HH
18:9	3296-42	4	Nut-Lock, NI
18:10	325-2	2	Screw-HH
18:11	3296-23	2	Nut-Lock, NI
19	103-4317	1	Belt-Seat

Ref. No.	Part No.	Qty.	Description

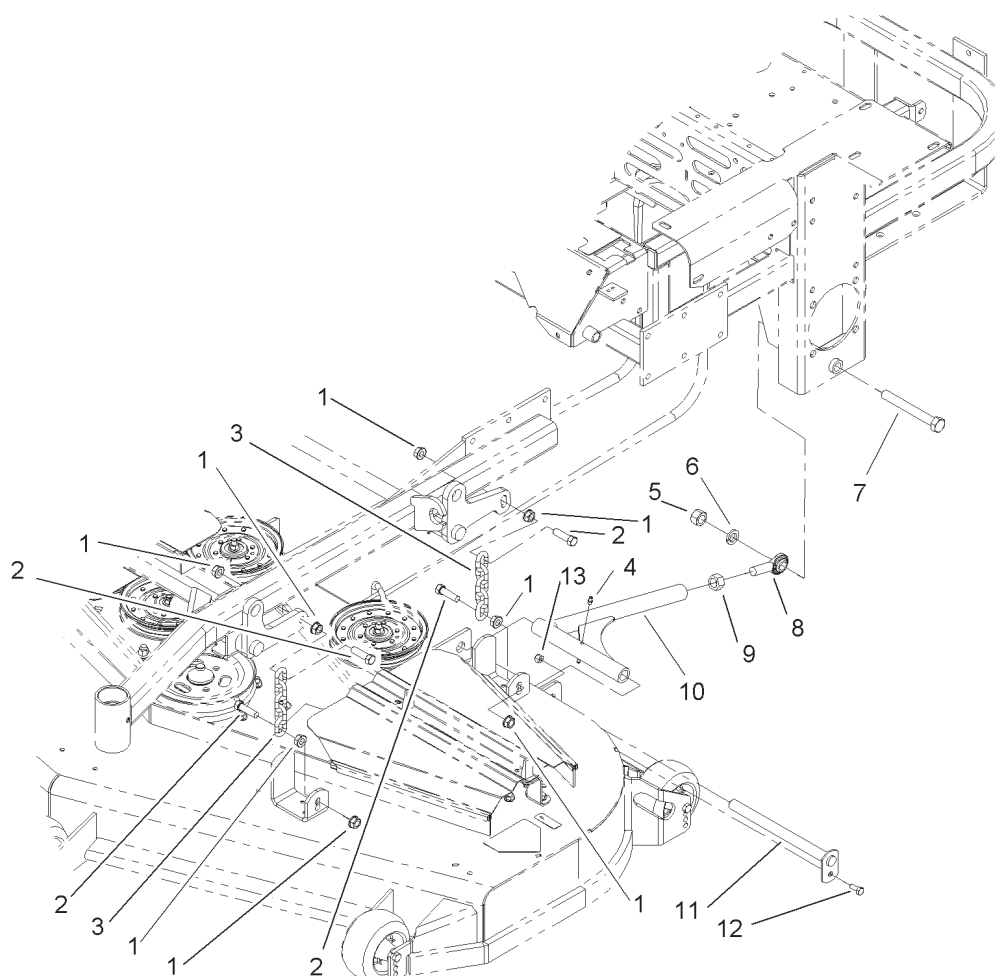 


Sheet No.:9

Deck Mounting Assembly

Ref. No.	Part No.	Qty.	Description
1	32128-37	16	Nut-HF
2	1-800811	8	Screw-Cap, HH
3	1-633447	4	Chain-Lift, Deck
4	302-19	4	Fitting-Grease
5	3217-11	2	Nut-Hex
6	3253-8	2	Washer-Lock
7	327-11	2	Screw-HH
8	1-633029	2	Balljoint-Spherical
9	3219-6	2	Nut-Hex
10	103-1072-01	2	Strut
11	1-632199-01	2	Pin-Strut
12	322-3	2	Screw-HH
13	3296-29	2	Nut-Lock, NI

Ref. No.	Part No.	Qty.	Description

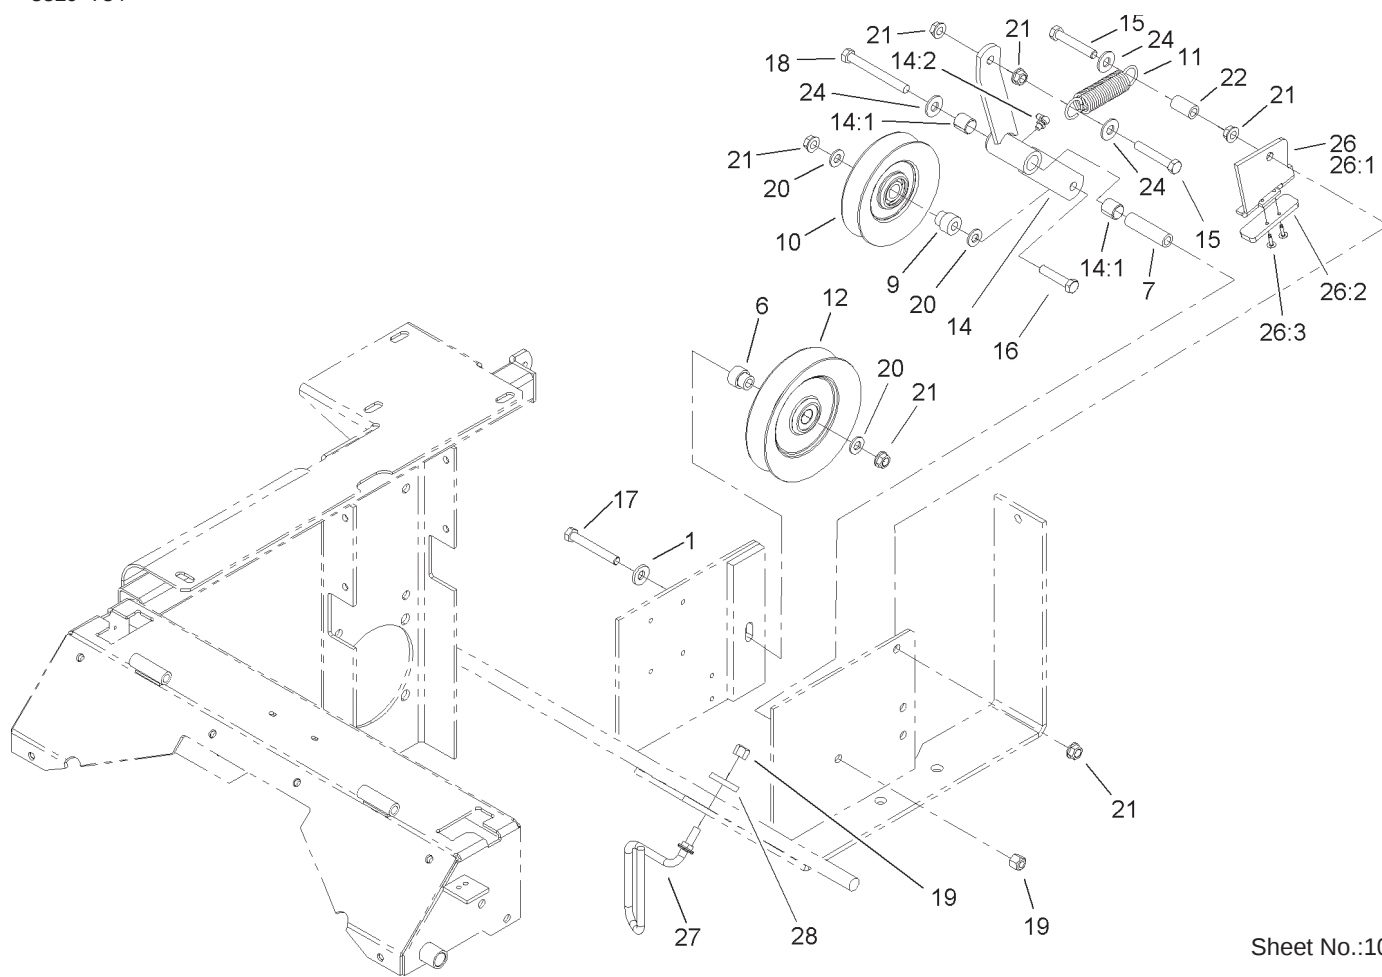 


Sheet No.:10

Drive Idler Assembly

Ref. No.	Part No.	Qty.	Description
1	98-5975	1	Washer-Belleville
6	103-2627	1	Bushing-Idler
7	1-603384	1	Bushing-Pivot, Idler
9	1-603496	1	Bushing-Idler
10	99-4638	1	Idler
11	1-603402	1	Spring-Extension
12	1-633166	1	Pulley-Idler
14	103-3147	1	Arm ASM
14:1	1-513034	2	Sleeve-Bearing
14:2	302-40	1	Fitting-Grease
15	323-12	2	Screw-HH
16	323-9	1	Screw-HH
17	323-13	1	Screw-HH
18	1-800805	1	Screw-HH
19	3296-39	2	Nut-Lock, NI
20	3256-24	3	Washer-Flat
21	3290-357	6	Nut-HHF
22	1-603401	1	Spacer-Fender
24	3256-4	3	Washer-Flat
☆26		1	Travel Limiter ASM
26:1	106-3228-03	1	Plate-Limiter, Pulley
26:2	106-3229	1	Pad-Bumber
26:3	3269-24	2	Rivet
27	105-7772	1	Guide-Belt
28	112843	1	Washer

Ref. No.	Part No.	Qty.	Description

 
☆ Not serviced separately

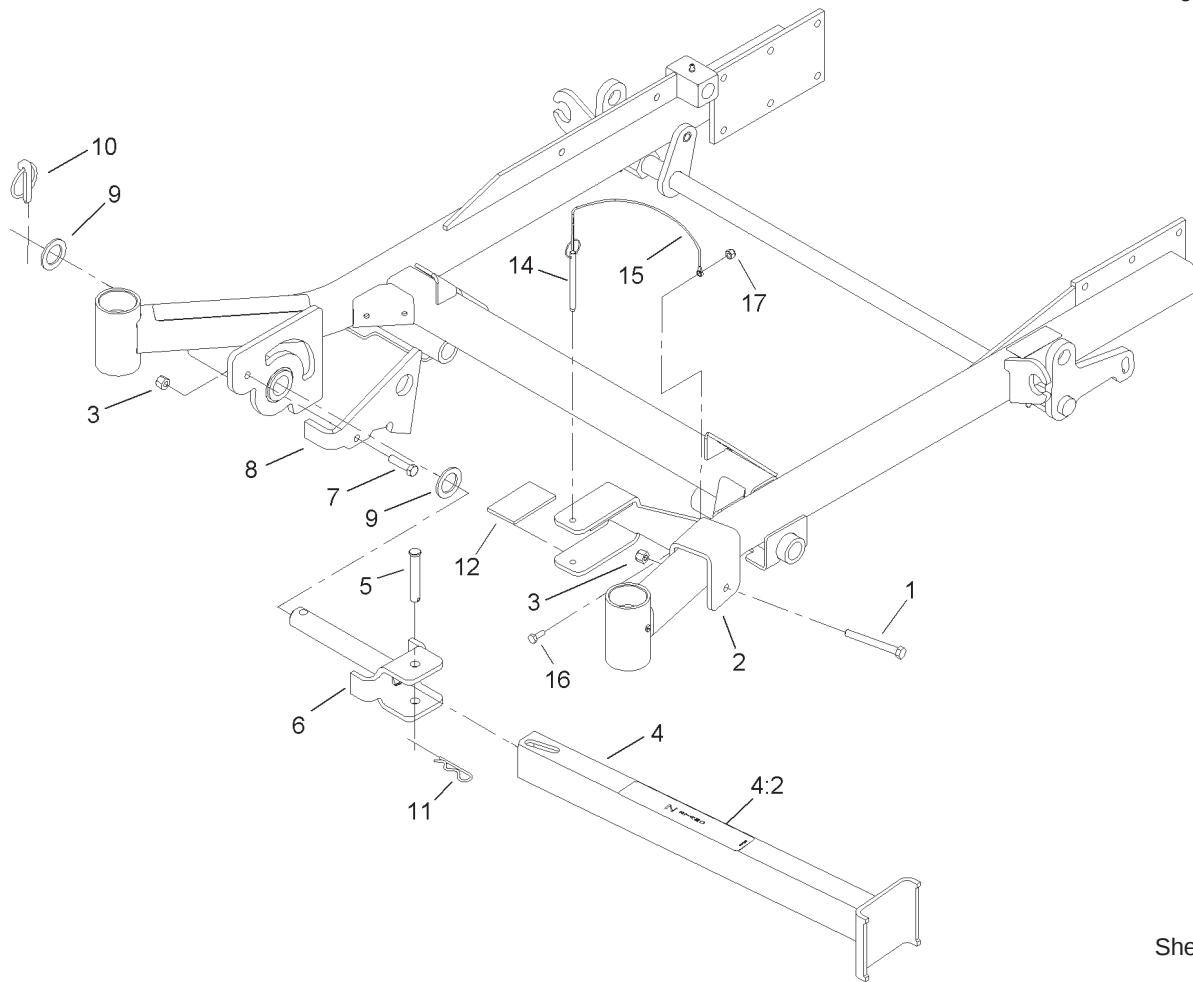

Sheet No.:11

Z-Stand Assembly

Ref. No.	Part No.	Qty.	Description
1	323-20	1	Screw-HH
2	100-6542-01	1	Bracket-Cradle
3	3296-39	2	Nut-Lock, NI
4	107-1874	1	Leg ASM
4:2	106-7464	1	Decal
5	283-55	1	Pin-Clevis
6	100-9692-01	1	Pivot Pin ASM
7	323-8	1	Screw-HH
8	100-9686-01	1	Bracket-Latch
9	3-6781	2	Washer-Thrust
10	283-71	1	Pin-Lynch
11	3290-355	1	Pin-Hair
12	100-6547	2	Cushion-Rubber
14	105-1647	1	Pin-Hitch, Cotterless
15	100-9385	1	Lanyard-Nylon
16	321-4	1	Screw-HH
17	3296-42	1	Nut-Lock, NI

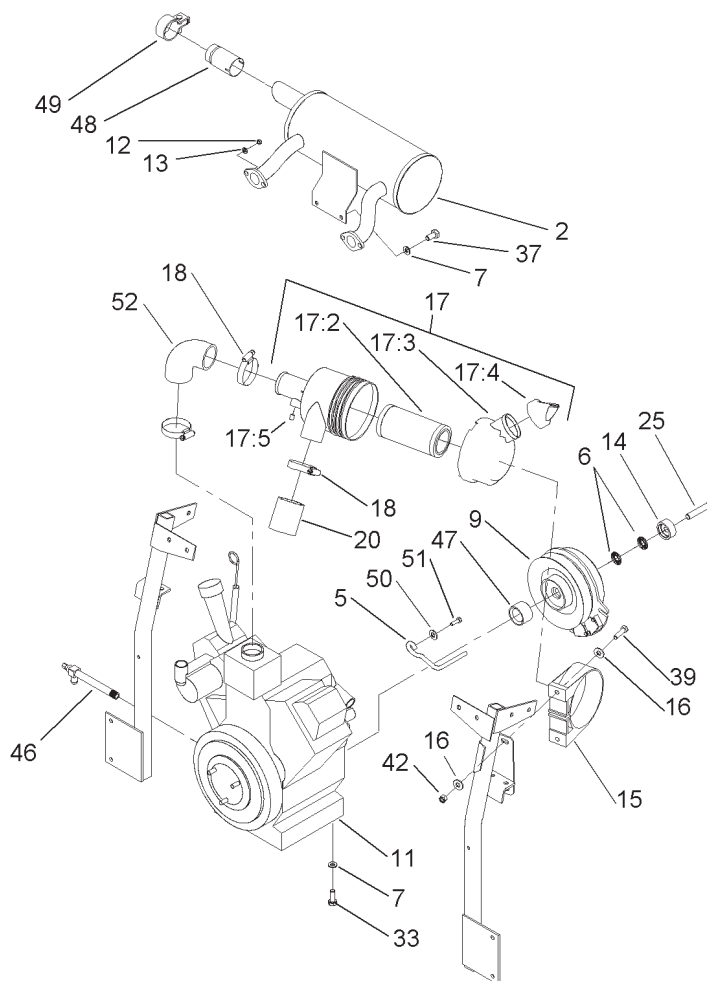 


Sheet No.:14

Engine, Clutch, Air Cleaner and Muffler Assembly

Ref. No.	Part No.	Qty.	Description
2	103-2759	1	Muffler
5	52-4780	1	Rod-Belt
6	1-603610	2	Washer-Spring
7	1-303334	6	Washer-Spring
9	103-2453	1	Clutch
☆11	103-0112	1	Engine-Kawasaki, Fd750d-As03
12	33013-00	4	Nut-Hex
13	1-805004	4	Washer-Lock
14	103-0152	1	Keeper-Clutch
15	95-5806	1	Bracket-Mounting
16	3256-3	4	Washer-Flat
17	95-5805	1	Air Cleaner ASM
17:2	93-2195	1	Filter
17:3	94-3652	1	Cover ASM
17:4	94-1414	1	Valve-Vacuator
17:5	285-17	1	Plug-Pipe
18	1-643009	2	Clamp-Hose
20	1-643084	1	Hose-Inlet, Air
25	48-7570	1	Screw-HH
33	33115-025	4	Screw-HH
37	33115-020	2	Screw-HH
39	322-6	3	Screw-HH
42	3296-29	2	Nut-Lock, NI
46	103-3068	1	Valve-Drain, Oil
47	103-0114	1	Spacer-Clutch

Ref. No.	Part No.	Qty.	Description
48	103-1511	1	Arrestor-Spark
49	103-1512	1	Clamp-Muffler
50	3256-24	1	Washer-Flat
51	48-7630	1	Screw
52	1-643083	1	Hose-Aircleaner

 
☆ Not serviced separately

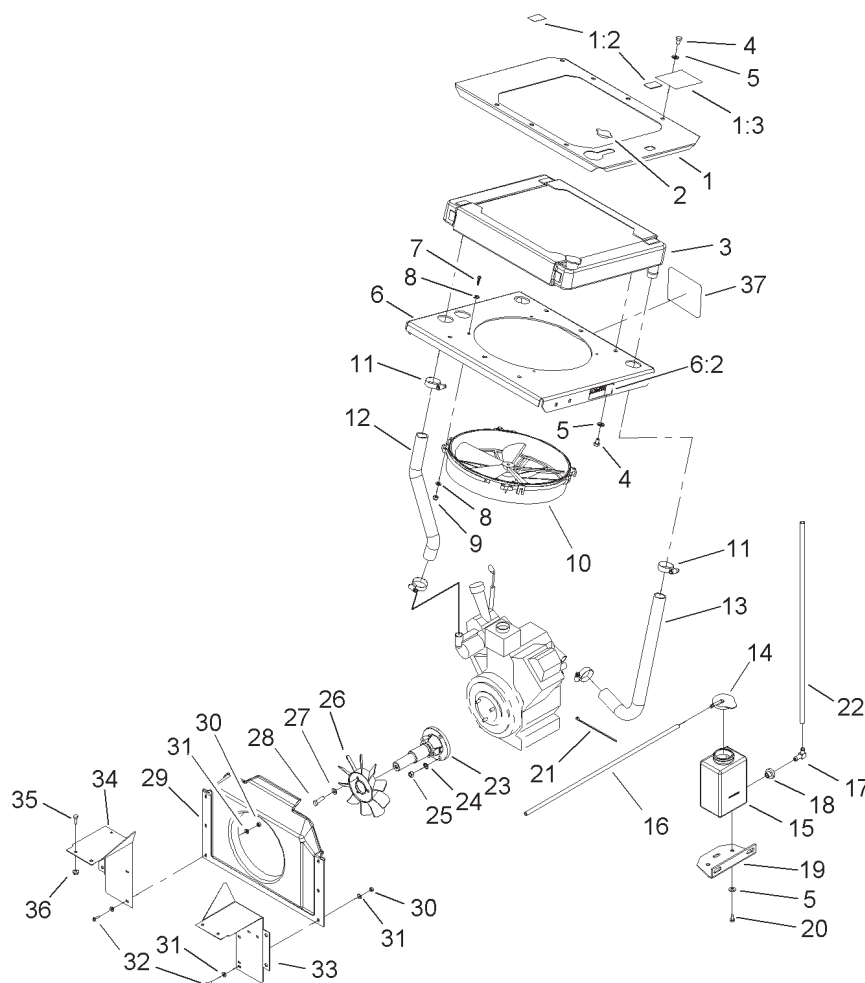

Sheet No.:15

Cooling System Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	104-7843	1	Radiator Trim Plate ASM	22	1-643129	1	Hose
1:2	65-2690	2	Decal-Surface, Hot	23	1-633851	1	Extension-Crankshaft
1:3	104-2449	1	Decal-Coolant	24	3255-8	3	Washer-Lock
2	1-643161	1	Cap-Radiator	25	33014-00	3	Nut-Hex
3	103-1046	1	Radiator-Mount	26	1-633869	1	Fan-Pump, Cooling
4	322-1	12	Screw-HH	27	3256-22	3	Washer-Flat
5	3256-23	14	Washer-Flat	28	1-809095	3	Screw-HSH
6	100-4301	1	Fan Mounting Plate ASM	29	103-0098	1	Shroud-Fan, HYD
6:2	1-643253	2	Decal-Fan, Radiator	30	3296-2	6	Nut-Lock
7	1-803067	4	Screw	31	3256-14	12	Washer-Flat
8	3256-16	8	Washer-Flat	32	3290-500	6	Screw-PPH
9	1-804254	4	Nut	33	103-0895-03	1	Shield-LH
10	1-633831	1	Fan	34	1-633794-03	1	Shield-RH
11	1-633989	4	Clamp-Hose	35	321-4	6	Screw-HH
12	103-0074	1	Hose-Inlet, Radiator	36	32128-33	6	Nut-HF
13	103-0075	1	Hose-Outlet, Radiator	37	103-3270	1	Decal
14	1-643164	1	Cap-Tank, Overflow				
15	1-643163	1	Tank-Overflow				
16	1-643131	1	Hose				
17	1-643259	1	Fitting-Elbow				
18	1-513645	1	Bushing-Valve, Fuel				
19	103-2603-03	1	Bracket-Bottle				
20	321-2	2	Screw-HH				
21	1-303287	3	Tie-Plastic				

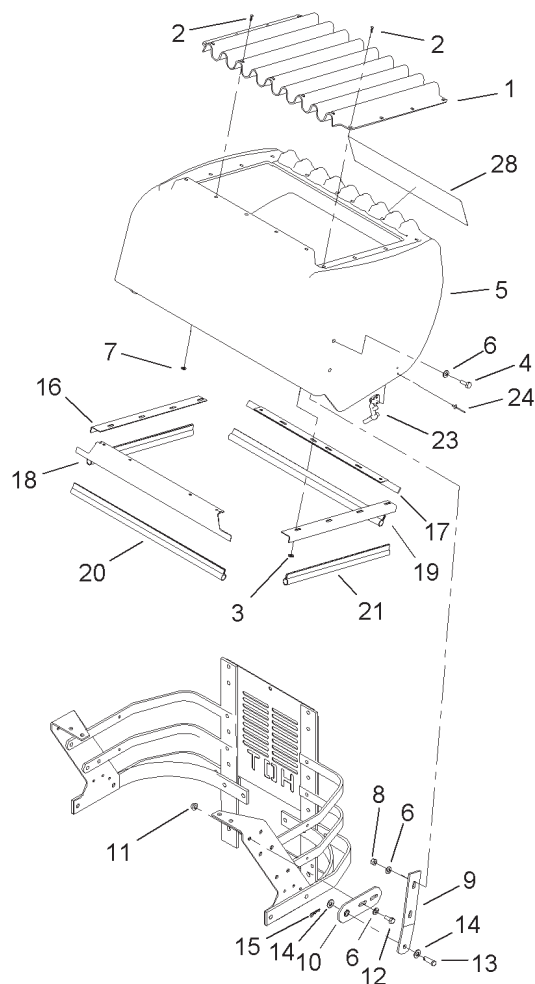 


Sheet No.:16

Hood Assembly

Ref. No.	Part No.	Qty.	Description
1	1-633864-03	1	Screen-Radiator
2	1-803072	17	Rivet
3	3256-14	12	Washer-Flat
4	322-4	4	Screw-HH
5	104-5136	1	Hood
6	3256-23	10	Washer-Flat
7	1-303435	5	Washer-Spring
8	3296-29	4	Nut-Lock, NI
9	1-633885-03	2	Plate-Hinge, Hood
10	1-632986-03	2	Shackle-Hinge
11	32128-20	25	Nut-HF
12	322-3	16	Screw-HH
13	1-808285	2	Pin-Clevis
14	3256-24	6	Washer-Flat
15	1-806003	2	Pin-Hair
16	1-643106-03	1	Angle-Radiator, RH
17	1-643108-03	1	Angle-Radiator, Bottom
18	1-643107-03	1	Angle-Radiator, Top
19	1-643105-03	1	Angle-Radiator, LH
20	1-643187	2	Seal-Trim
21	1-643186	2	Seal-Trim
23	1-643188	2	Latch-Rubber
24	923786	4	Rivet-Pop
28	106-7456	1	Decal

Ref. No.	Part No.	Qty.	Description

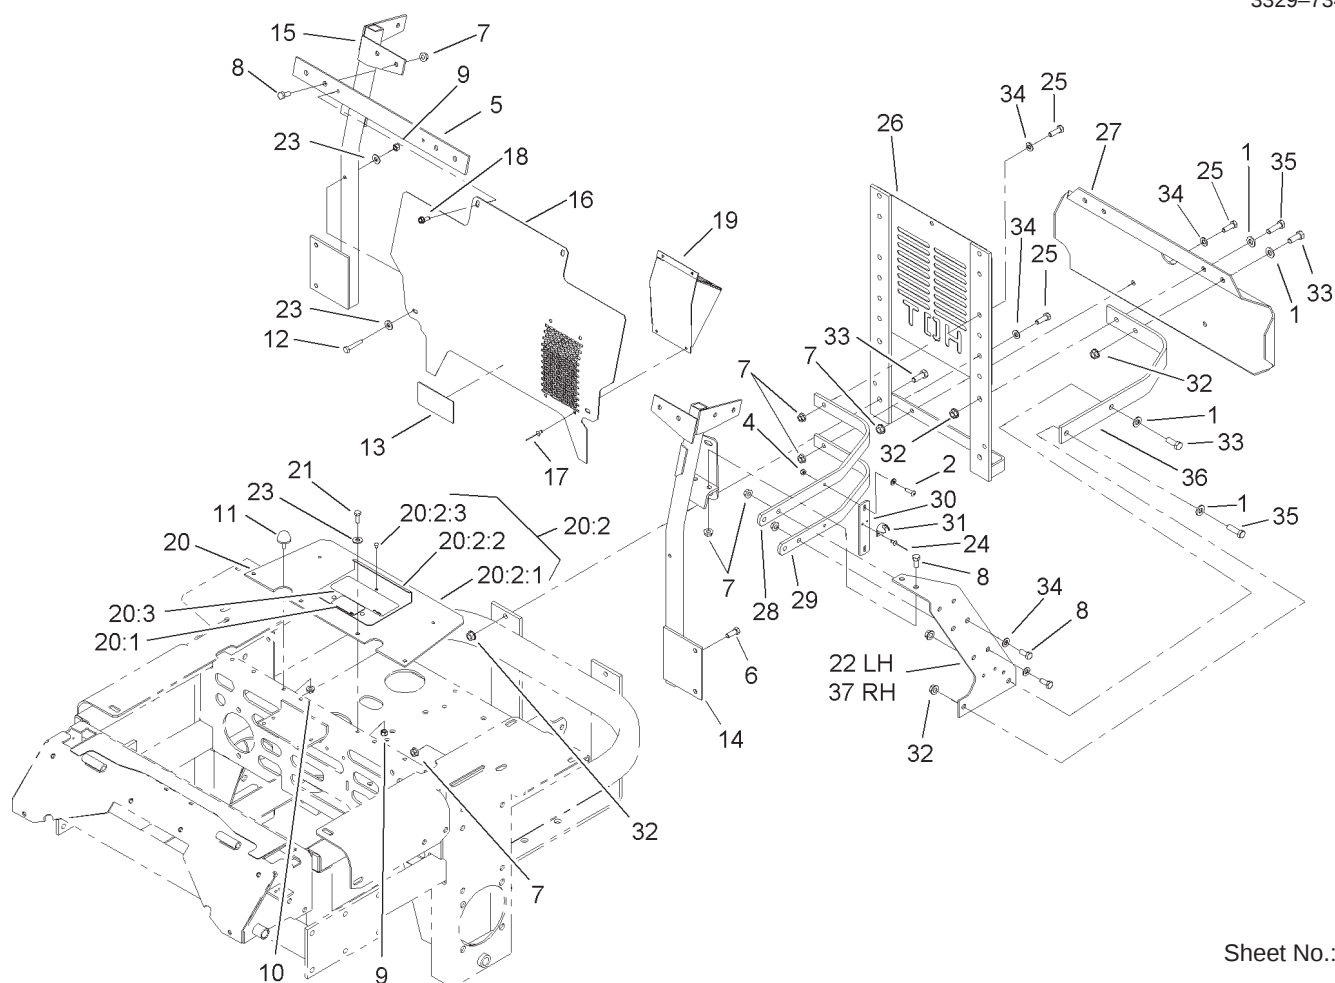 


Sheet No.:17

Cooling Mounting Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	3256-24	6	Washer-Flat
2	1-803075	4	Screw-Head, Truss
4	3296-2	4	Nut-Lock
5	1-633878-03	1	Crossbar
6	322-4	4	Screw-HH
7	32128-20	12	Nut-HF
8	322-3	8	Screw-HH
9	3296-42	6	Nut-Lock, NI
10	32128-33	2	Nut-HF
11	1-523420	2	Bumper
12	321-9	2	Screw-HH
13	1-643339	1	Decal-Routing, Belt
14	103-0107-03	1	Brace-Radiator, LH
15	1-632985-03	1	Brace-Radiator, RH
16	103-2870-03	1	Deflector-Air
17	3269-3	4	Rivet-Pop
18	49-2040	2	Screw-Tapping
19	103-0110-03	1	Plenum-Intake, Air
20	1-644276	1	Shield ASM
20:1	1-633462	1	Decal-Important
20:2	1-634308	1	Shield/Lift ASM
20:2:1	103-1308	1	Shield-Engine
20:2:2	1-633300-03	1	Lift-Shield
20:2:3	1-803035	3	Rivet-Pop
20:3	103-0368	1	Decal-Devices, Rotating

Ref. No.	Part No.	Qty.	Description
21	321-4	4	Screw-HH
22	103-0896-03	1	Plate-Side, LH
23	3256-2	6	Washer-Flat
24	923786	4	Rivet-Pop
25	322-5	9	Screw-HH
26	1-632873-03	1	Mount-Radiator, Rear
27	1-633886-03	1	Guard-Bumper
28	1-633897-03	2	Rib-Top
29	1-633898-03	2	Rib-Bottom
30	1-633877-03	2	Bar-Hook, Latch
31	1-643189	2	Keeper-Latch, Rubber
32	3290-357	10	Nut-HHF
33	323-6	6	Screw-HH
34	3256-23	11	Washer-Flat
35	323-7	4	Screw-HH
36	1-633896-03	2	Bar-Mount Frame, Radiator
37	103-0897-03	1	Plate-Side, RH

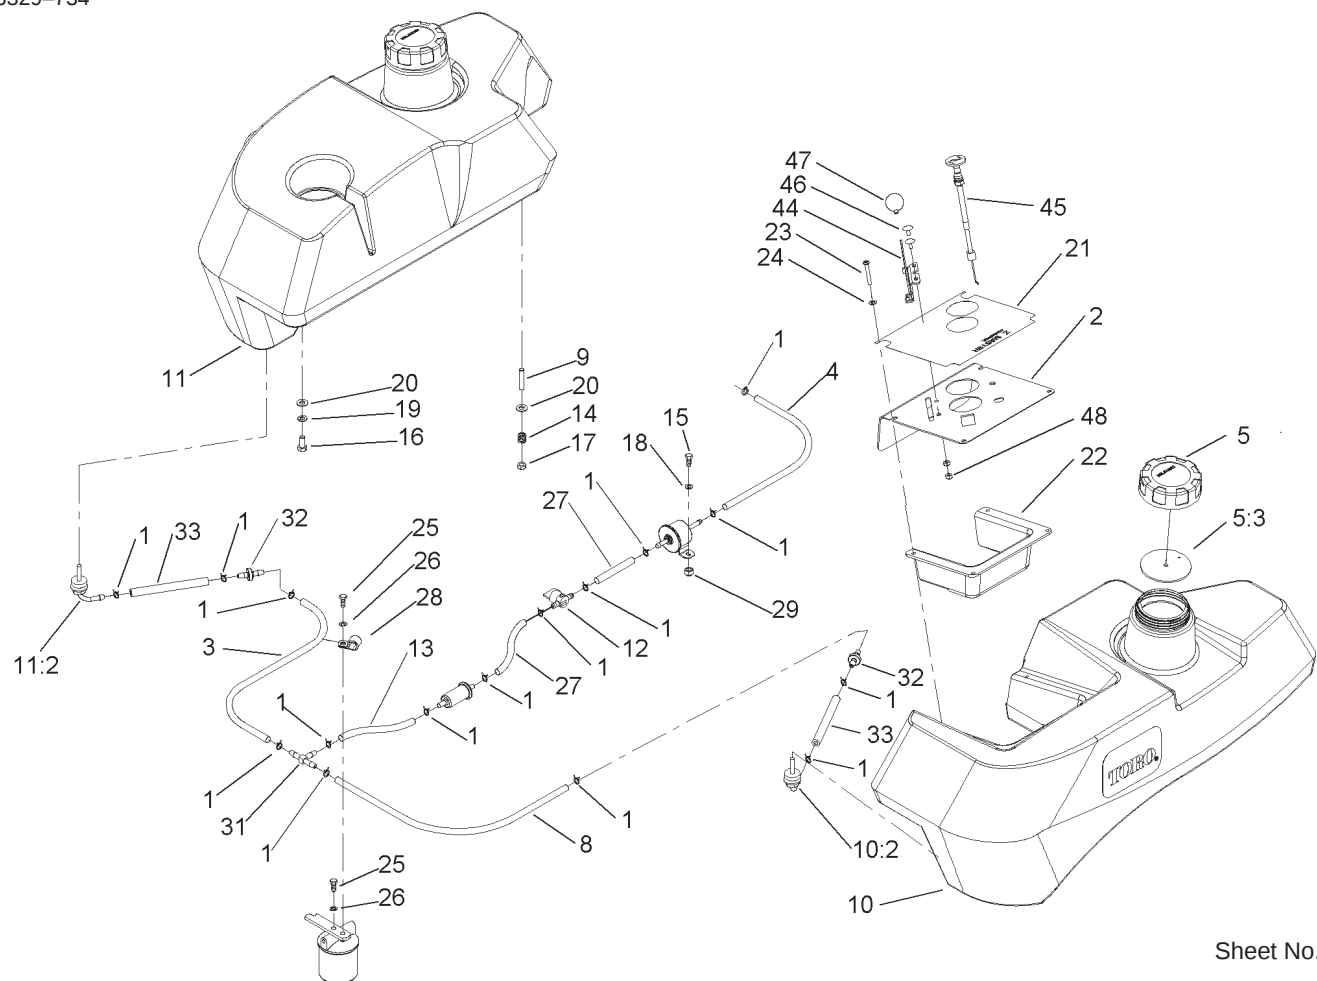 


Sheet No.:24

Fuel Tank Assembly

Ref. No.	Part No.	Qty.	Description
1	1-303077	17	Clamp
2	106-7475-03	1	Panel-Control
3	1-543526	1	Hose-Fuel
4	103-1335	1	Hose-Fuel
5	88-3980	2	Gas Cap ASM
5:3	88-4010	1	Gasket-Cap, Gas
8	80-7360	1	Hose-Fuel
9	1-633023	6	Stud
10	106-9980	1	LH Fuel Tank ASM
10:2	103-2605	1	Fitting-Fuel, Bulkhead
11	106-9979	1	RH Fuel Tank ASM
11:2	103-2605	1	Fitting-Fuel, Bulkhead
12	1-603770	1	Valve-Fuel
13	47-2965	1	Hose-Fuel
14	1-633349	6	Spring-Tank, Fuel
15	321-4	2	Screw-HH
16	322-3	2	Screw-HH
17	3296-47	6	Nut-Lock, NI
18	3256-2	2	Washer-Flat
19	1-805005	2	Washer-Lock
20	3256-23	8	Washer-Flat
21	106-9968	1	Decal-Panel, Control
22	99-4940	1	Shield-Panel, Control
23	1-803071	4	Screw
24	1-303435	4	Washer-Spring
25	321-3	2	Screw-HH

Ref. No.	Part No.	Qty.	Description
26	1-805004	2	Washer-Lock
27	47-2965	2	Hose-Fuel
28	1-513762	1	Clip-Loom
29	32128-33	2	Nut-HF
31	99-5005	1	Fitting-Tee, Barbed
32	99-5000	2	Valve-Check, Fuel
33	99-7190	2	Hose-Fuel
44	1-633696	1	Cable-Throttle
45	106-9962	1	Control-Choke, Push/Pull
46	1-807513	2	Bolt-CARR
47	1-513592	1	Knob-Ball
48	3296-2	2	Nut-Lock
*49	1-303335	4	Tie-Plastic

 
* Not illustrated

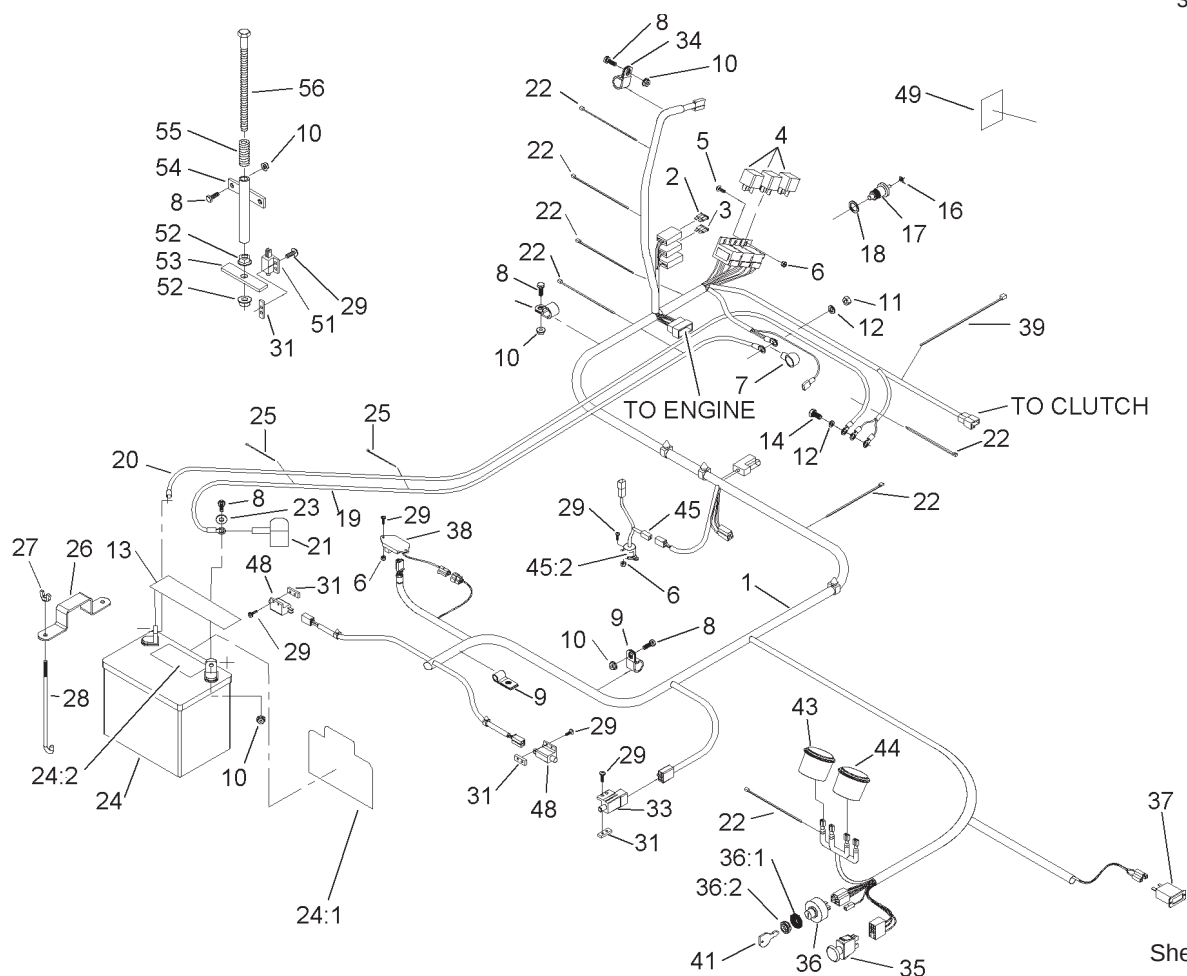

Sheet No.:29

Electrical Components Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	106-7496	1	Harness-Wire	24:2	104-4164	1	Decal-Battery
2	1-816001	1	Fuse-Type, Blade	25	1-303287	2	Tie-Plastic
3	1-816003	1	Fuse-Blade Type, 30 Amp	26	1-633652-03	1	Strap-Holddown
4	1-643275	3	Relay	27	1-543792	2	Wingnut
5	1-803071	2	Screw	28	1-633651	2	Bolt-Holddown
6	3296-2	6	Nut-Lock	29	3290-500	12	Screw-PPH
7	1-543393	1	Insulator-Solenoid	31	1-633181	4	Plate-Tapped
8	321-4	7	Screw-HH	33	1-633111	1	Switch
9	1-633396	3	Clip-Loom	34	1-513762	1	Clip-Loom
10	32128-33	7	Nut-HF	35	1-633673	1	Switch-Delta
11	33014-00	1	Nut-Hex	36	88-9830	1	Key Switch ASM
12	3256-23	2	Washer-Flat	36:1	3254-5	1	Washer-Tooth
13	105-3646	1	Decal-Warning, Battery	36:2	218-461	1	Nut-HH
14	33114-016	1	Screw-HH	37	1-513374	1	Meter-Hour
16	1-643145	1	Tab	38	100-6186	1	Module-Delay, Seat
17	103-0283	1	Sender-Temperature	39	1-643115	1	Tie-Plastic
18	1-643153	1	Washer-Aluminum	41	63-8360	2	Key-Ignition
19	1-523279	1	Wire-Battery, Positive	43	1-643037	1	Gauge-Voltmeter
20	1-633307	1	Wire-Ground	44	1-643021	1	Gauge-Temperature
21	1-543391	1	Insulator-Battery	45	1-644427	1	Tilt Switch ASM
22	1-303335	12	Tie-Plastic	45:2	1-643401	1	Decal-Switch, Mercury
23	3256-2	2	Washer-Flat	48	1-513051	2	Switch-Open, Normally
24	105-1692	1	Battery	49	103-1027	1	Decal-Relay
24:1	104-4163	1	Decal-Battery				

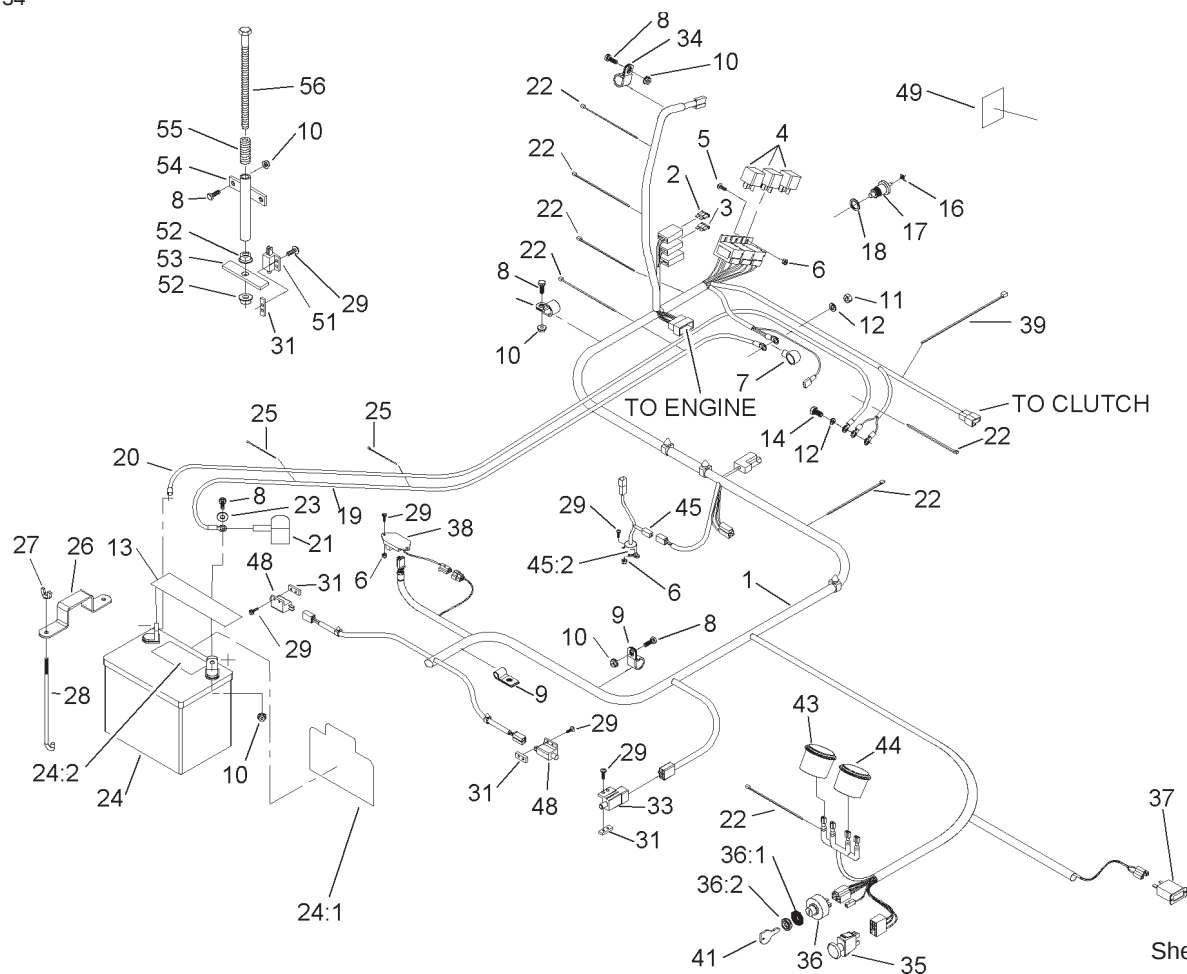 


Sheet No.:29

Electrical Components Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
51	1-513152	1	Switch-,Closed, Normally
52	32128-20	2	Nut-HF
53	1-513180	1	Plate-Switch, Seat
54	1-522424-03	1	Mount-Spring, Seat
55	1-523415	1	Spring-Switch, Seat
56	1-800282	1	Screw-HH


Ref. No.	Part No.	Qty.	Description

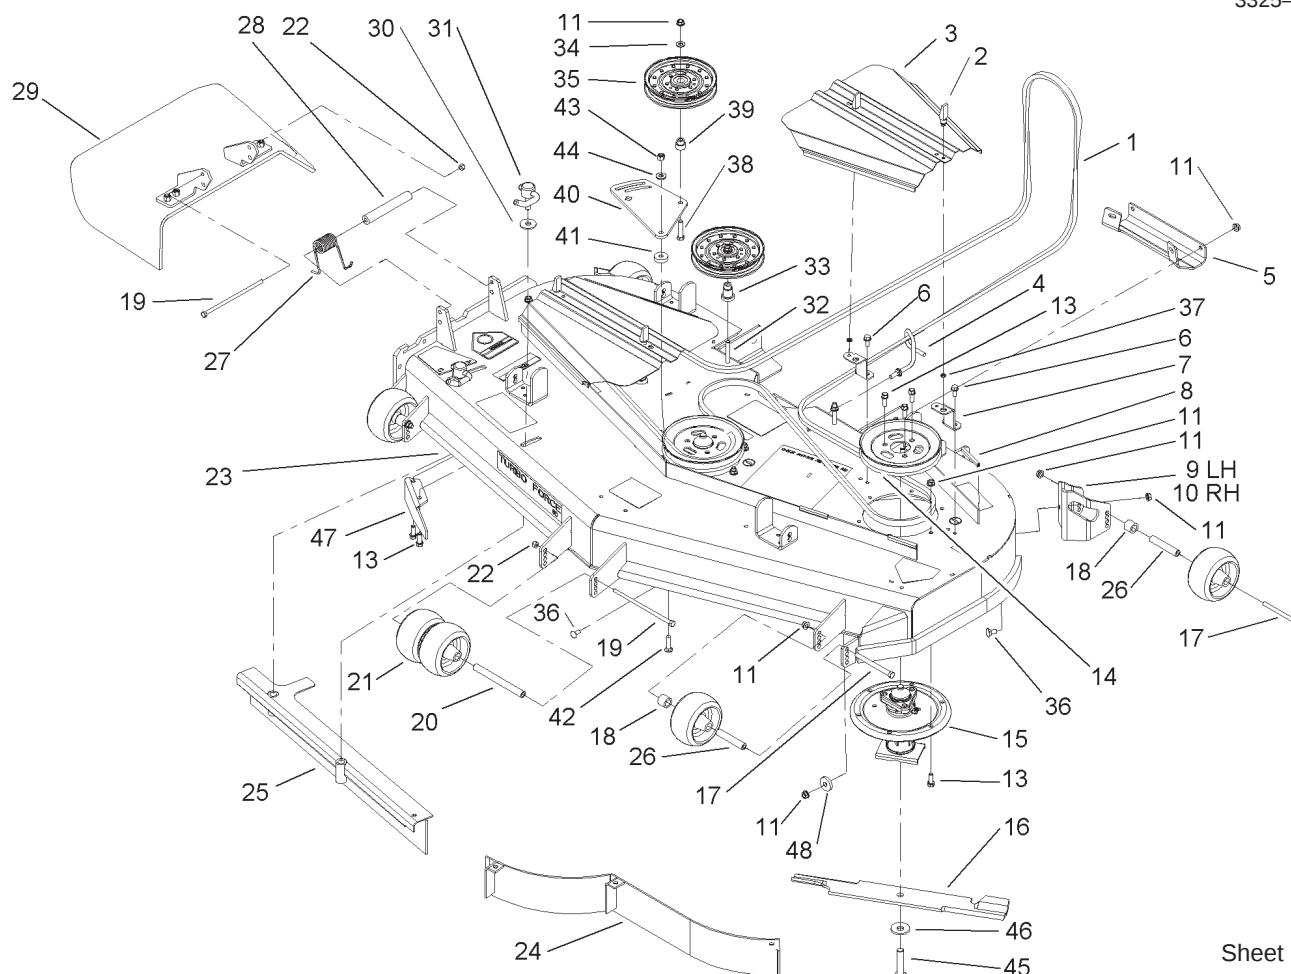 

Sheet No.:0

60in Deck Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	105-8783	1	Belt	27	104-8554	1	Spring-Torsion
2	74-5950	4	Latch-Swell	28	105-4622	1	Spacer
3	105-8786-01	2	Cover-Belt	29	106-3249	1	Rubber Deflector ASM
4	106-3220	1	Guide-Wire	30	105-7697	2	Washer-Plastic
5	105-8792-01	1	Plate-Skid	31	106-3242	2	Lever ASM
6	32144-70	4	Screw-HH	32	323-12	2	Screw-HH
7	105-8787-01	4	Bracket-Cover	33	106-3214	2	Support-Pulley
8	105-7699	8	Seal-Strip	34	3256-24	3	Washer-Flat
9	106-7354-01	1	Plate-Roller, LH	35	1-633109	3	Idler-Flat
10	106-7355-01	1	Plate-Roller, RH	36	3231-1	10	Screw-CARR
11	3290-357	42	Nut-HHF	37	99-3058	4	Washer
13	95-1726	33	Screw-Taptite	38	323-9	1	Screw-HH
14	105-7734	3	Pulley	39	1-603496	1	Bushing-Idler
15	106-3217	3	Spindle ASM	40	105-7787-01	1	Plate-Idler
16	105-7718	3	Blade-Rotary, High Flow	41	105-7788	2	Spacer
17	323-23	4	Screw-HH	42	3231-4	2	Screw-CARR
18	98-7913	4	Tube-Spacer	43	3296-39	2	Nut-Lock, NI
19	322-50	2	Screw-HH	44	98-5975	1	Washer-Belleville
20	98-5967	1	Spacer	45	103-0862	3	Screw-Cap
21	1-603299	6	Roller-Anti Scalp	46	103-0865	3	Washer-Blade Bolt, Heavy
22	3296-29	2	Nut-Lock, NI	47	106-3216-01	1	Baffle-Discharge
23	107-1624	1	Deck ASM	48	112843	1	Washer
24	105-7657-01	1	Baffle ASM				
25	105-7669-01	1	Baffle ASM				
26	98-7912	4	Tube-Spanner				

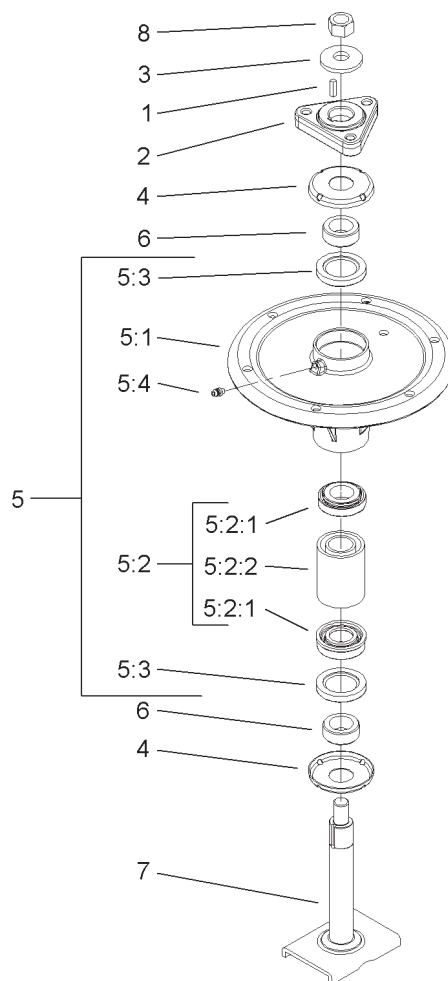 


Sheet No.:A1

Spindle Assembly No. 106-3217

Ref. No.	Part No.	Qty.	Description
1	10-8040	1	Key-Square
2	106-3277	1	Hub-Pulley
3	103-0865	1	Washer-Blade Bolt, Heavy
4	106-3204	2	Shield-Bearing
5	107-1627	1	Spindle Bearing ASM
5:1	106-3211	1	Housing-Spindle
5:2	106-3207	1	Bearing ASM
5:2:1	27-0960	1	Bearing ASM
5:2:2	106-3206	1	Spacer-Set, Matched
5:3	253-133	2	Seal-Oil
5:4	302-5	1	Fitting-Grease
6	106-3218	2	Spacer-Seal
7	106-3233	1	Spindle Shaft ASM
8	3219-6	1	Nut-Hex

Ref. No.	Part No.	Qty.	Description

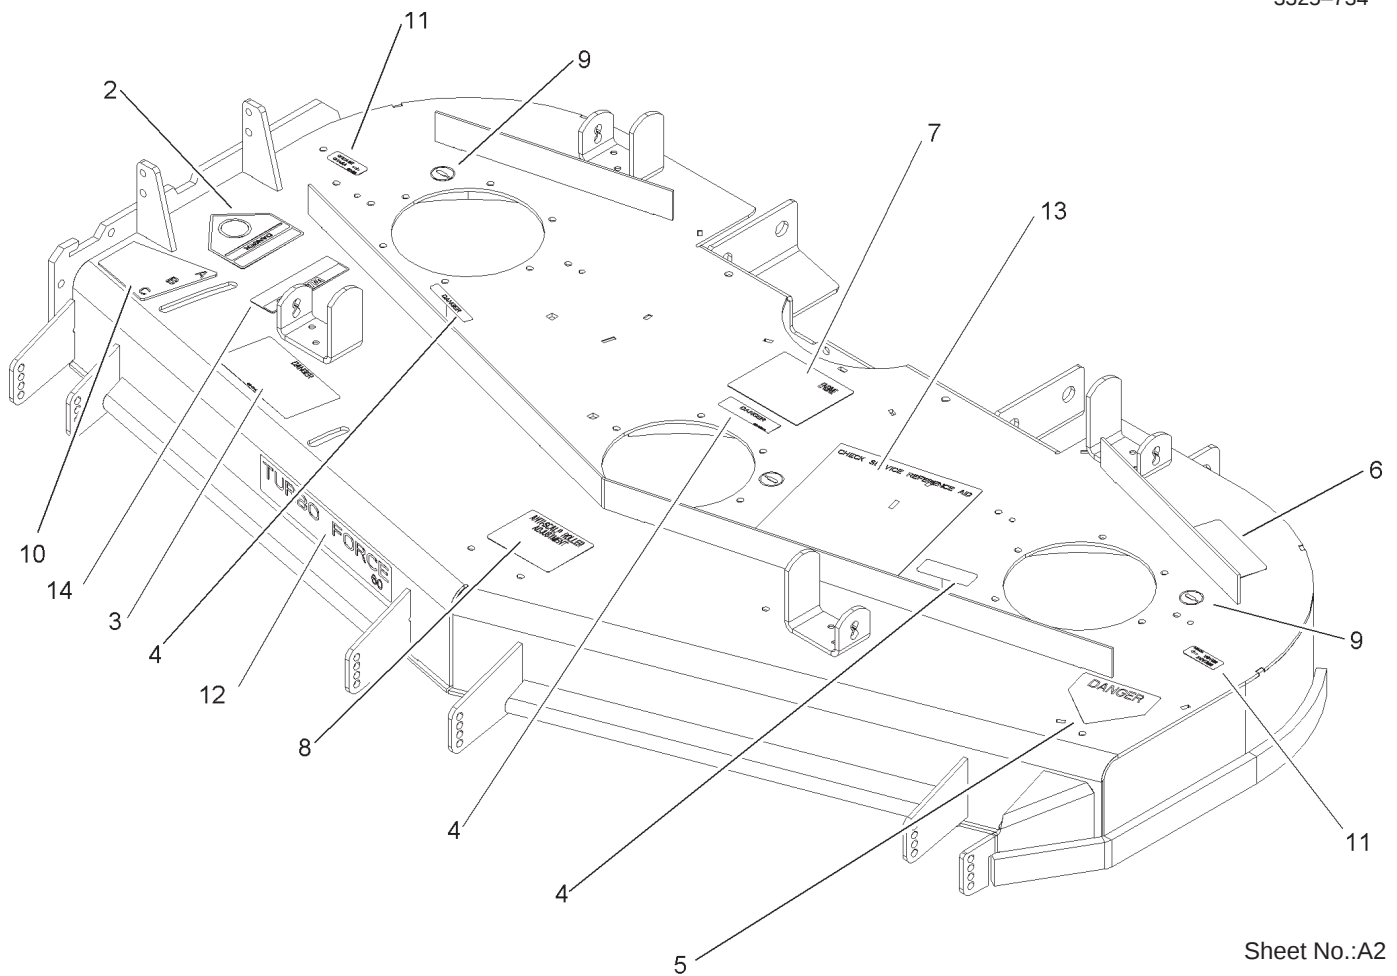 


Sheet No.:A2

Deck Assembly No. 107-1624

Ref. No.	Part No.	Qty.	Description
2	54-9220	1	Decal-Danger
3	66-1340	1	Decal-Danger
4	98-5954	3	Decal-Missing, Cover
5	43-8480	1	Decal-Danger
6	68-8340	1	Decal-Torque
7	105-7797	1	Decal-Routing, Belt
8	105-7798	1	Decal-Anti Scalp
9	58-6520	3	Decal-Grease
10	107-1622	1	Decal-Adjustment, Baffle
11	107-1613	2	Decal-Grease
12	107-1619	1	Decal-Turbo Force 60
13	107-1621	1	Decal-Service, Check
14	104-8569	1	Decal-Warning

Ref. No.	Part No.	Qty.	Description

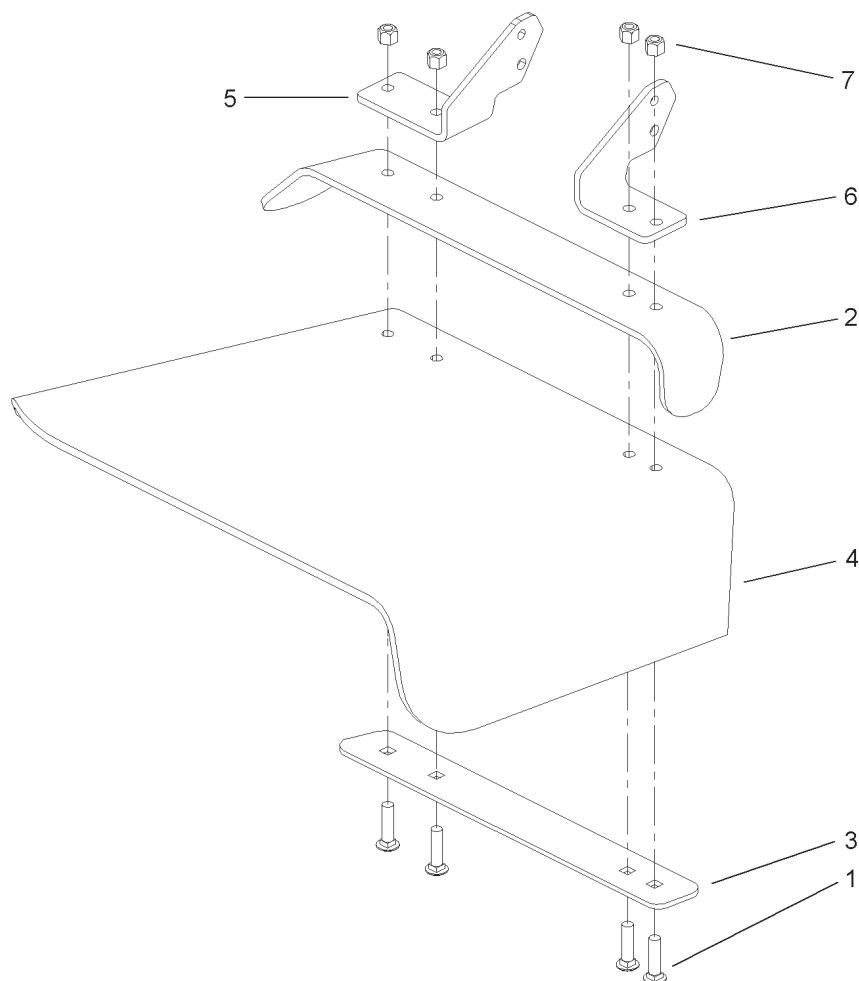 

Sheet No.:A3

Rubber Deflector Assembly No. 106-3249

Ref. No.	Part No.	Qty.	Description
1	3231-4	4	Screw-CARR
2	106-3246-01	1	Deflector
3	106-3248-03	1	Strap-Discharge
4	107-1617	1	Deflector-Rubber
5	106-3252-01	1	Plate-Hinge, Rear
6	106-3253-01	1	Plate-Hinge, Front
7	3296-39	4	Nut-Lock, NI


Ref. No.	Part No.	Qty.	Description

Sheet No.:A4

Lever Assembly No. 106-3242

Ref. No.	Part No.	Qty.	Description
1	106-3239	1	Screw-Lock
2	106-3240	1	Cap-Lock
3	106-3241	1	Lever-Lock
4	3296-29	1	Nut-Lock, NI

Ref. No.	Part No.	Qty.	Description

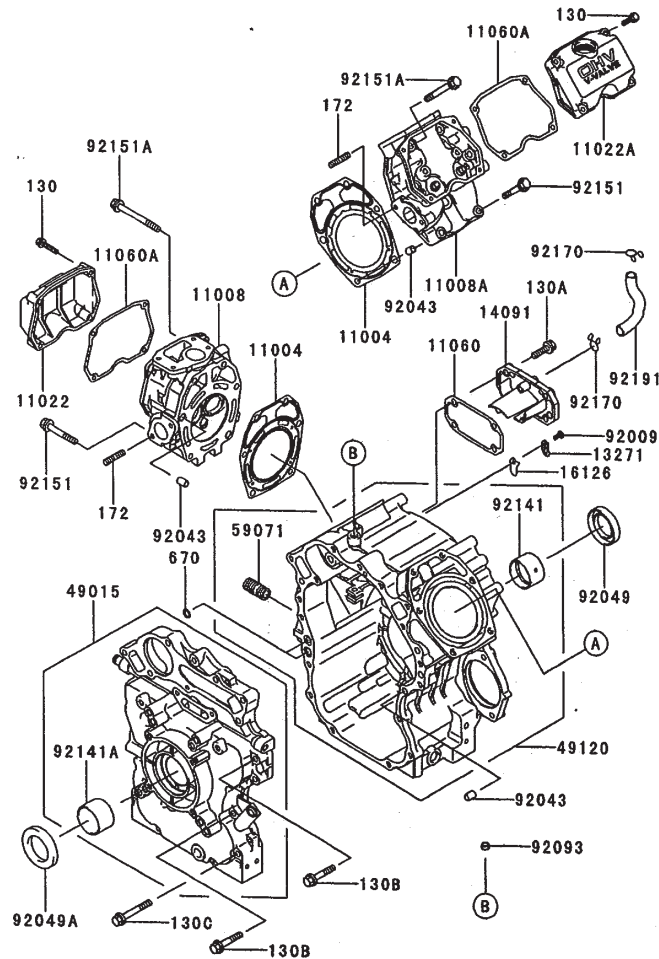 


Cylinder/Crankcase Assembly Kawasaki FD750D-AS03

Ref. No.	Part No.	Qty.	Description
11004	11004-2142	2	Gasket-Head
11008	11008-2145	1	Head-Comp-Cylinder
11008A	11008-2146	1	Head-Comp-Cylinder
11022	11022-2072	1	Case-Rocker
11022A	11022-2073	1	Case-Rocker
11060	11060-2466	1	Gasket, Breath
11060A	11060-2470	2	Gasket, Rocker, Case
13271	13271-2105	2	Plate
14091	14091-2064	1	Cover, Breath
16126	16126-2225	2	Valve, Breath
49015	49015-6232	1	Cover-Crankcase
49120	49120-6127	1	Crankcase-Comp
59071	59071-2079	1	Joint
92009	92009-2308	2	Screw
92043	92043-1037	6	Pin
92049	92049-2242	1	Seal-Oil
92049A	92049-2243	1	Seal-Oil
92093	92093-2086	1	Seal
92141	92141-2118	1	Bearing-Plane
92141A	92141-2119	1	Bearing-Plane
92151	92151-2158	4	Bolt
92151A	92151-2159	8	Bolt
92170	92170-2002	2	Clamp
92191	92191-2105	1	Tube

Ref. No.	Part No.	Qty.	Description
130	130G0630	8	Bolt-Flanged
130A	130G0830	4	Bolt-Flanged
130B	130G0845	4	Bolt-Flanged
130C	310G0860	4	Bolt-Flanged
172	172G0822	4	Bolt-Stud
670	670B2011	2	O-Ring

 Obtain Parts from Kawasaki

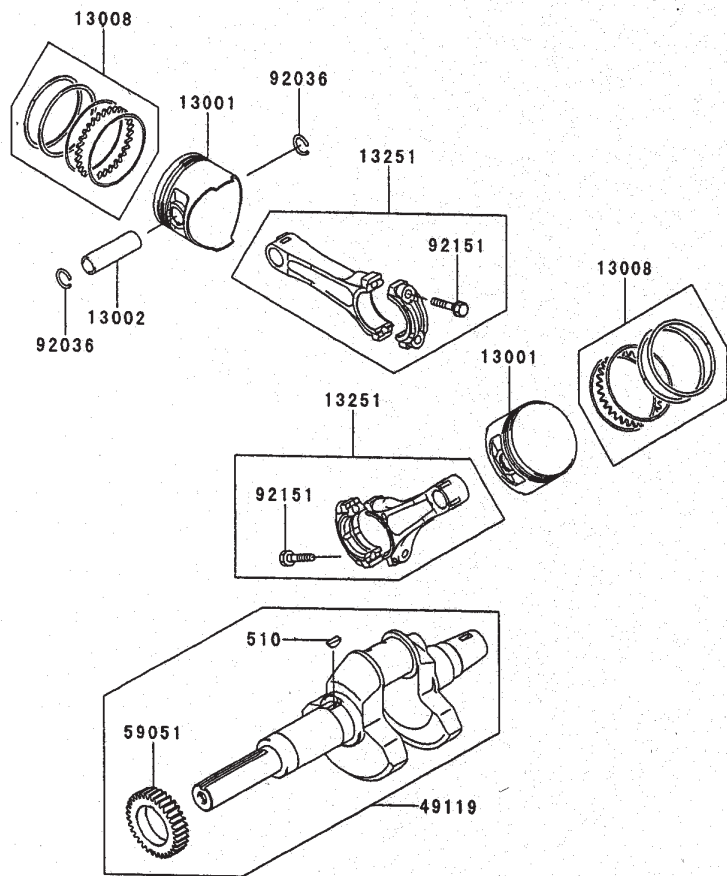

Piston/Crankshaft Assembly **Kawasaki FD750D-AS03**


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
13001	13001-2125	2	Piston-Engine				
13002	13002-2069	2	Pin-Piston				
13008	13008-6007	2	Ring-Set-Piston				
13251	13251-2058	2	Rod ASM-Connecting				
49119	49119-2198	1	Crankshaft ASM				
59051	59051-2358	1	Gear-Spur, 33T				
92036	92036-008	4	Ring-Snap				
92151	92151-2150	4	Bolt				
510	510A5100	1	Key-Woodruff				

Obtain Parts from Kawasaki

92145

Ref. No.	Part No.	Qty.	Description

 
30

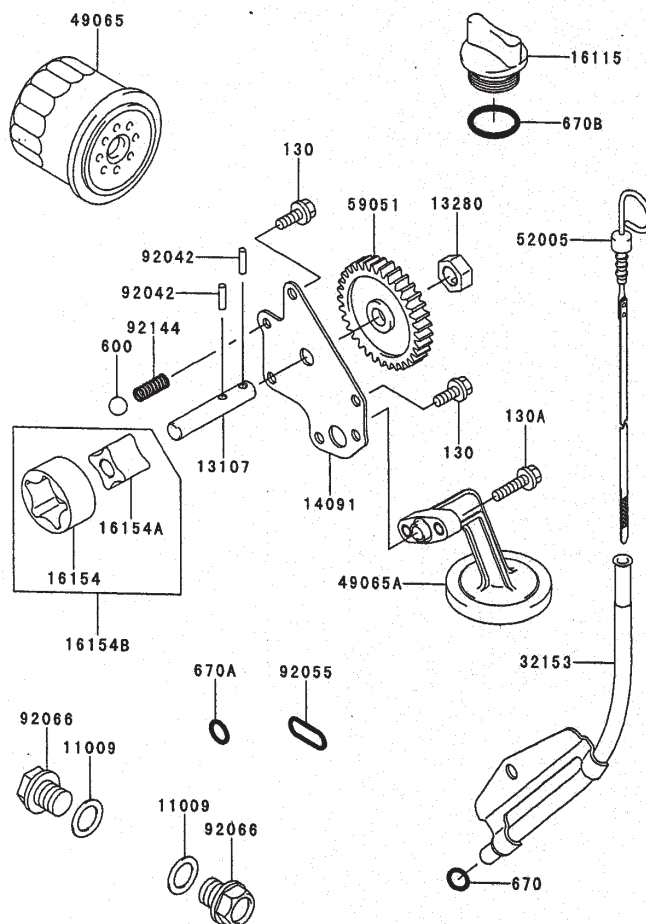

Lubrication Equipment Assembly Kawasaki FD750D-AS03

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
11009	11009-2566	2	Gasket, Drain Plug				
13107	13107-2281	1	Shaft, Oil Pump				
13280	13280-2061	1	Holder, Oil Pump				
14091	14091-2065	1	Cover, Oil Pump				
16115	16115-2126	1	Cap-Oil Filler				
16154	16154-1075	1	Rotor-Pump, Outer				
16154A	16154-1076	1	Rotor-Pump, Inner				
16154B	16154-1079	1	Rotor-Pump				
32153	32153-2076-9H	1	Pipe, Oil Gauge				
49065	49065-2071	1	Filter-Oil				
49065A	49065-2082	1	Filter				
52005	52005-2132	1	Gauge, Oil				
59051	59051-2354	1	Gear-Spur, 33T				
92042	92042-014	2	Pin				
92055	92055-2086	1	O-Ring				
92066	92066-2099	2	Plug, Drain				
92144	92144-2053	1	Spring				
130	130G0616	3	Bolt-Flanged				
130A	130G0625	2	Bolt-Flanged				
600	600A1300	1	Ball-Steel				
670	670B2010	1	O-Ring				
670A	670B2011	1	O-Ring				
670B	670B3025	1	O-Ring				

 Obtain Parts from Kawasaki

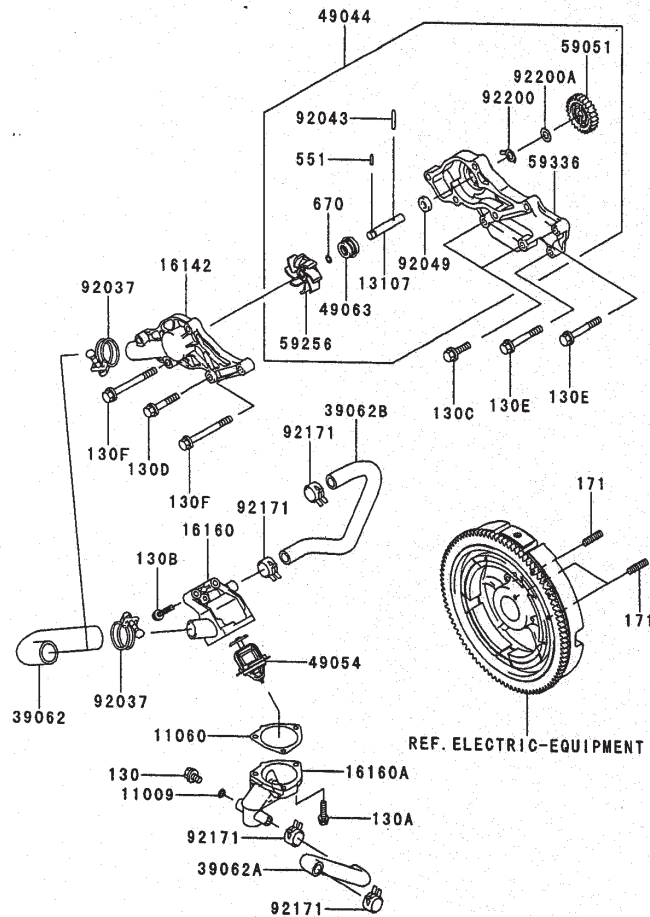


Cooling Equipment Assembly Kawasaki FD750D-AS03

Ref. No.	Part No.	Qty.	Description
11009	11009-3028	1	Gasket
11060	11060-2475	1	Gasket-Thermostat
13107	13107-2097	1	Shaft-Impeller
16142	16142-2077	1	Cover-Pump
16160	16160-2127	1	Body-Upper
16160A	16160-6002	1	Body-Valve
39062	39062-2080	1	Hose-Cooling
39062A	39062-2083	1	Hose-Cooling
39062B	39062-2084	1	Hose-Cooling
49044	49044-2063	1	Pump-Water
49054	49054-2058	1	Thermostat
49063	49063-1054	1	Seal-Mechanical
59051	59051-2355	1	Gear-Spur, 25T
59256	59256-2069	1	Impeller
59336	59336-2078	1	Case-Pump
92037	92170-1284	2	Clamp
92043	92043-2237	1	Pin
92049	92049-2111	1	Seal-Oil
92171	92171-2056	4	Clamp
92200	92200-2134	1	Washer
92200A	92200-2135	1	Washer
130	130C0812	1	Bolt-Flanged
130A	130G0625	3	Bolt-Flanged
130B	130G0635	2	Bolt-Flanged

Ref. No.	Part No.	Qty.	Description
130C	130G0830	2	Bolt-Flanged
130D	130G0845	1	Bolt-Flanged
130E	130G0860	2	Bolt-Flanged
130F	130G0880	4	Bolt-Flanged
171	171G0818	3	Bolt-Stud
551	551A0314	1	Pin-Dowel
670	670B1507	1	O-Ring

 
Obtain Parts from Kawasaki

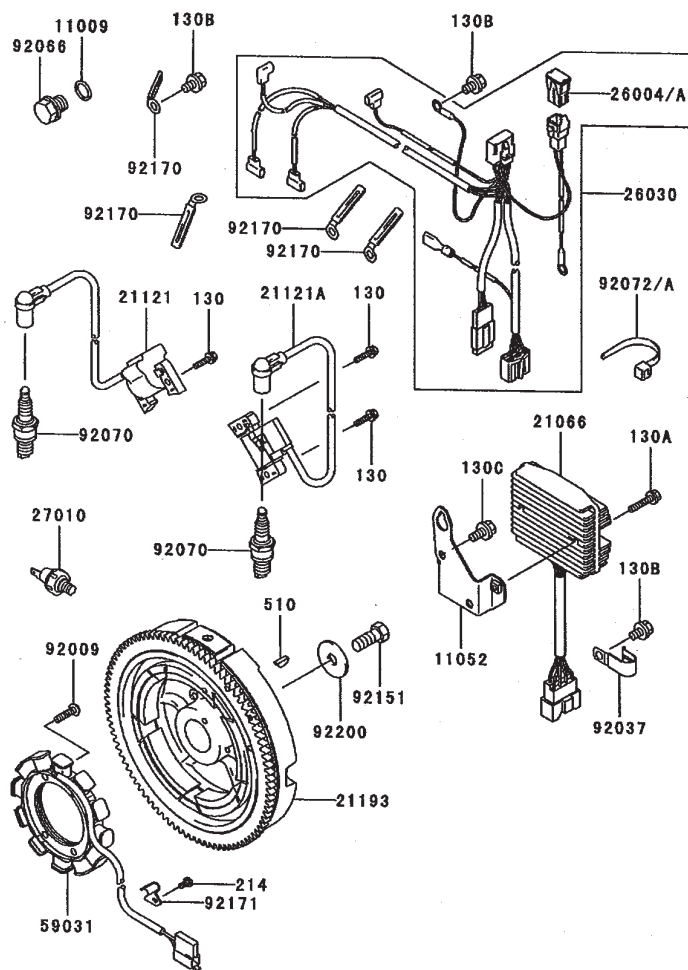

Electric Equipment Assembly Kawasaki FD750D-AS03

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
11009	11009-2766	1	Gasket	510	510A5100	1	Key-Woodruff
11052	11052-2058	1	Bracket				
21066	21066-2079	1	Regulator-Voltage				
21121	21121-2090	1	Coil-Ignition, No. 1				
21121A	21121-2091	1	Coil-Ignition, No. 2				
21193	21193-2177	1	Flywheel ASM				
26004	26004-1093	1	Fuse ASM				
26030	26030-2320	1	Harness				
27010	27010-7001	1	Switch				
59031	59031-2127	1	Coil-Charging				
92009	92009-2273	4	Screw				
92037A	92037-2101	1	Clamp				
92066	92066-2099	1	Plug-Drain				
92070	92070-2110	2	Plug-Spark, BPR2ES				
92072	92072-1195	1	Band				
92151	92151-2097	1	Bolt				
92170	92170-2060	4	Clamp				
92171	92171-2060	1	Clamp				
92200	92200-2119	1	Washer				
130	130G0520	1	Bolt-Flanged				
130A	130G0630	2	Bolt-Flanged				
130B	130G0812	3	Bolt-Flanged				
130C	130G0816	2	Bolt-Flanged				
214	214B0510	1	Screw-Pan+				

 Obtain Parts from Kawasaki

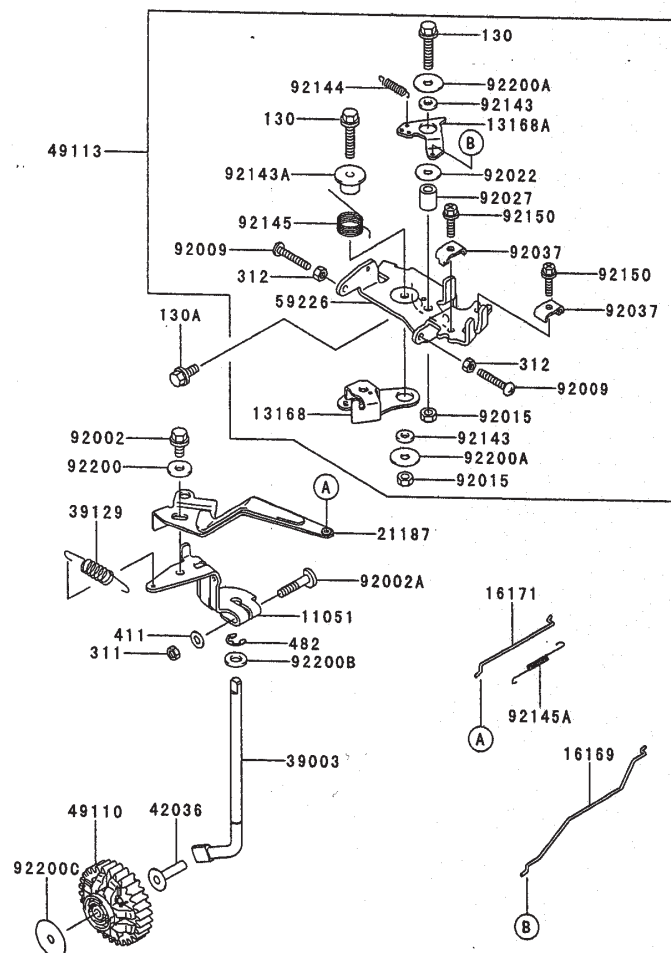


Control Equipment Assembly Kawasaki FD750D-AS03

Ref. No.	Part No.	Qty.	Description
11051	11051-2113	1	Bracket
13168	13168-2466	1	Lever-Throttle
13168A	13168-2467	1	Lever-Choke
16169	16169-2142	1	Link-Choke
16171	16171-2091	1	Link
21187	21187-2073	1	Arm ASM
39003	39003-2091	1	Arm-Pivot
39129	39129-2099	1	Spring-Governor
42036	42036-2060	1	Sleeve
49110	49110-2094	1	Governor ASM
49113	49113-2170	1	Panel-Comp-Control
59226	59226-2328	1	Panel-Control
92002	92002-1902	1	Bolt
92002A	92002-2269	1	Bolt
92009	92009-2381	2	Screw
92015	92015-2051	2	Nut
92022	92002-2372	1	Washer
92027	92027-1461	1	Collar
92037	92037-2209	2	Clamp
92143	92143-2135	2	Collar
92143A	92143-2148	1	Collar
92144	92144-2052	1	Spring
92145	92145-2058	1	Spring
92145A	92145-2095	1	Spring

Ref. No.	Part No.	Qty.	Description
92150	92150-2182	2	Bolt
92200	92200-2035	1	Washer
92200A	92200-2108	2	Washer
92200B	92200-2120	1	Washer
92200C	92200-2122	1	Washer
130	130B0630	2	Bolt-Flanged
130A	130G0614	2	Bolt-Flanged
311	311B0600	2	Nut-Hex
312	312G0500	2	Nut-Hex
411	411B0600	1	Washer
482	482J7000	1	Circlip-Type E

 Obtain Parts from Kawasaki

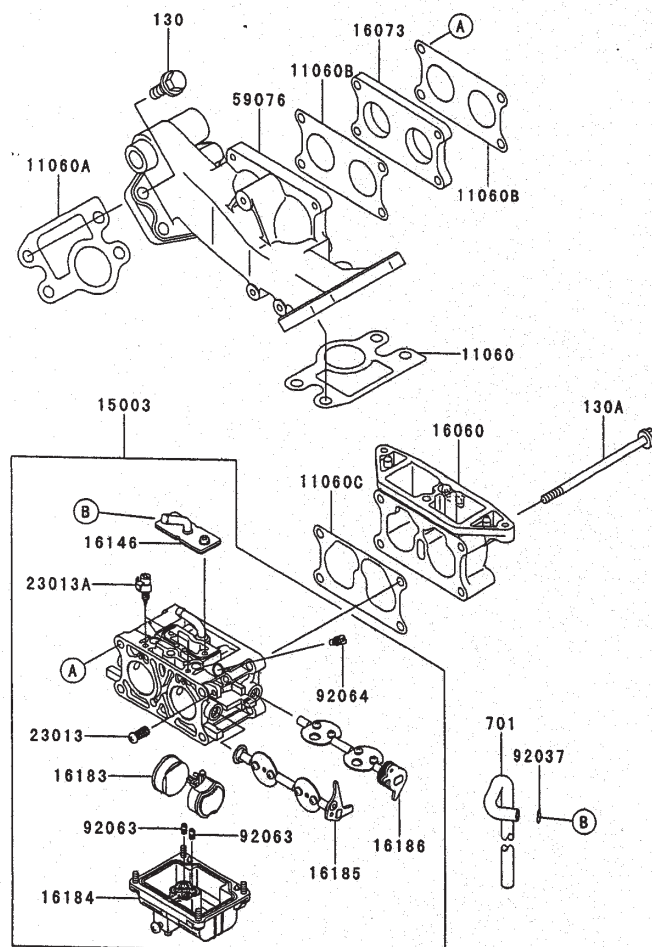

Carburetor Assembly Kawasaki FD750D-AS03


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
11060	11060-2468	1	Gasket-Intake				
11060A	11060-2469	1	Gasket-Intake				
11060B	11060-2471	2	Gasket-Intake Pipe				
11060C	11060-2473	1	Gasket-Carburetor				
15003	15003-2776	1	Carburetor ASM				
16060	16060-2194	1	Pipe-Intake				
16073	16073-2206	1	Insulator				
16146	16146-2227	1	Cover ASM				
16183	16183-2006	1	Float ASM				
16184	16184-2004	1	Float Chamber ASM				
16185	16185-2036	1	Throttle Valve ASM				
16186	16186-2036	1	Choke Valve ASM				
23013	23013-2059	1	Screw ASM				
23013A	23013-2060	1	Screw ASM				
59076	59076-2065	1	Manifold-Intake				
92037	92037-1610	1	Clamp				
92063	92063-2400	2	Jet-Main				
92064	92064-2113	2	Jet-Pilot				
130	130G0825	8	Bolt-Flanged				
130A	130T06110	4	Bolt-Flanged				
701	701Q061000	1	Tube-PVC				

Obtain Parts from Kawasaki

Ref. No.	Part No.	Qty.	Description
11051	11051-2088	1	Bracket
11060	11060-2467	2	Gasket-Muffler
11060A	11060-2474	2	Gasket-Air Filter
14073	14073-2075	1	Duct-Lower
14073A	14073-2076	1	Duct-Upper
16060	16060-2197	1	Pipe-Intake
92037	92037-1654	1	Clamp
92093	92093-2118	1	Seal
92170	92170-2075	1	Clamp
130	130G0620	3	Bolt-Flanged
317	317R0800	1	Nut-Hex
461	461F0800	1	Washer-Spring

Ref. No.	Part No.	Qty.	Description

 
36

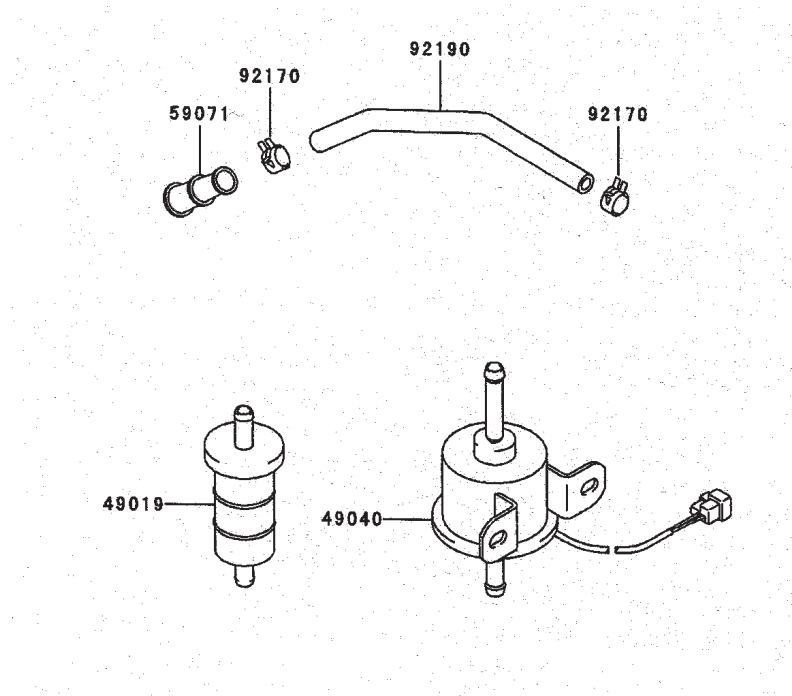

Fuel Tank/Fuel Valve Assembly Kawasaki FD750D-AS03

[illegible]

 Obtain Parts from Kawasaki

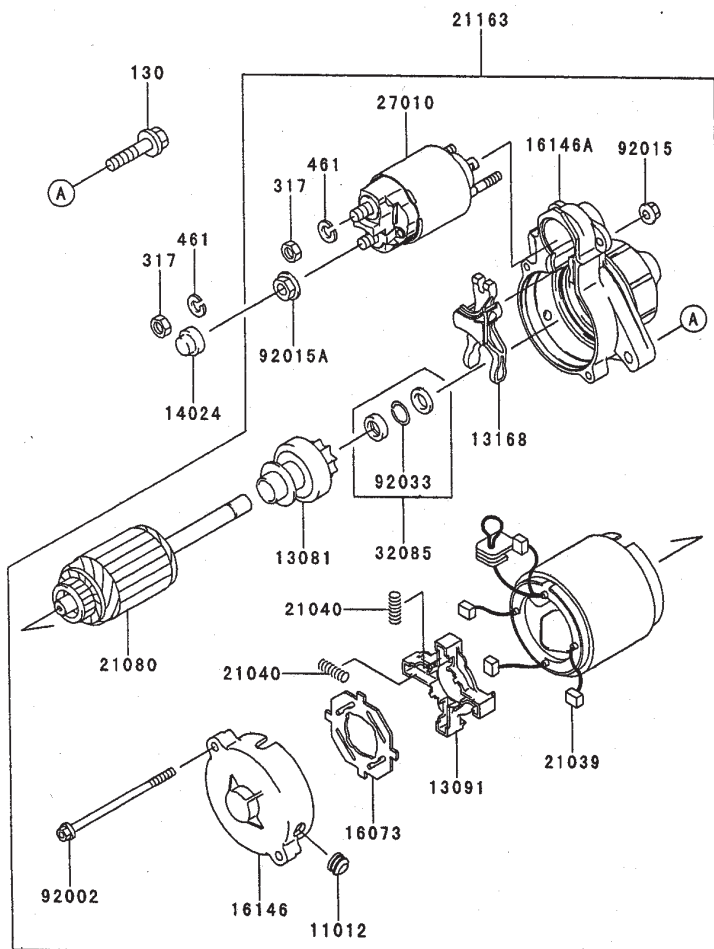

Starter Assembly Kawasaki FD750D-AS03

Ref. No.	Part No.	Qty.	Description
11012	11012-2226	1	Cap
13081	13081-2108	1	Clutch ASM
13091	13091-2068	1	Holder-Brush
13168	13168-2131	1	Lever-Shift
14024	14024-2205	1	Cover
16073	16073-2098	1	Insulator
16146	16146-2187	1	Cover ASM
16146A	16146-2225	1	Cover ASM
21039	21039-2059	4	Brush
21040	21040-2052	4	Spring-Brush
21080	21080-2054	1	Armature
21163	21163-2120	1	Starter-Electric
27010	27010-2122	1	Switch
32085	32085-2097	1	Stopper
92002	92002-2277	2	Bolt
92015	92015-2146	2	Nut
92015A	92015-2147	1	Nut
992033	92033-2081	1	Ring-Snap
130	130G0835	2	Bolt-Flanged
317	317B0800	2	Nut-Hex
461	461F0800	2	Washer-Spring

Ref. No.	Part No.	Qty.	Description

Obtain Parts from Kawasaki

Maintenance Record

[illegible]

