



# Boom Kit for Multi-Pro® 1200, 1250, and 5600 Sprayers Model No. 41027

Form No. 3329-758

## Addendum


**Note:** This addendum includes a section to be performed prior to the Installing the Extension Booms section of the Boom Kit Installation.

### Greasing the Pivot Arms

The boom pivot arms are not greased at the time of factory assembly and must be greased before use.

Grease Type: No. 2 General Purpose Lithium Base Grease.

7. Manually place grease on the support shaft and within the ball seat of the hinge plate as shown in Figure 1.
8. Grease the fitting located below the spring until grease can be seen coming out of the bottom of the pivot assembly (Fig. 1).
9. Repeat the procedure for opposite pivot arm.

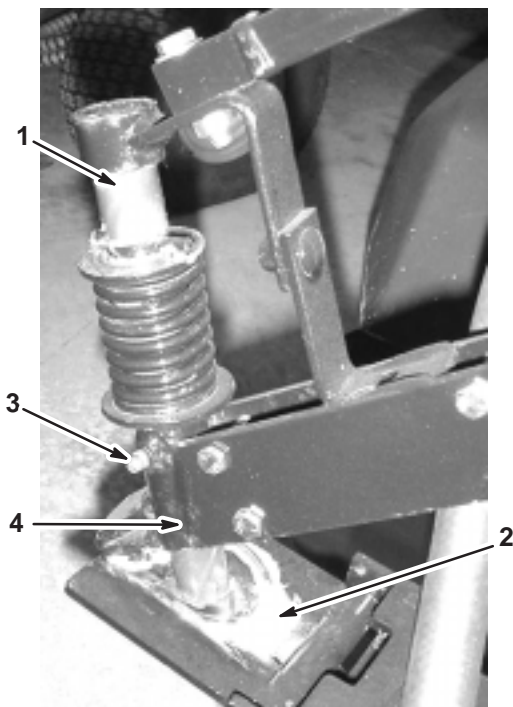

**Figure 1**

Left pivot arm shown

- |                             |                   |
|-----------------------------|-------------------|
| 1. Upper shaft              | 3. Grease fitting |
| 2. Ball seat of hinge plate | 4. Pivot assembly |