



## Sulky Fixed-Deck Mid-Size Mowers

Model No. 30109 - 230000001 and up.

## Parts Catalog

### Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

### Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

### Service Assembly Reference Numbers


Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

### Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

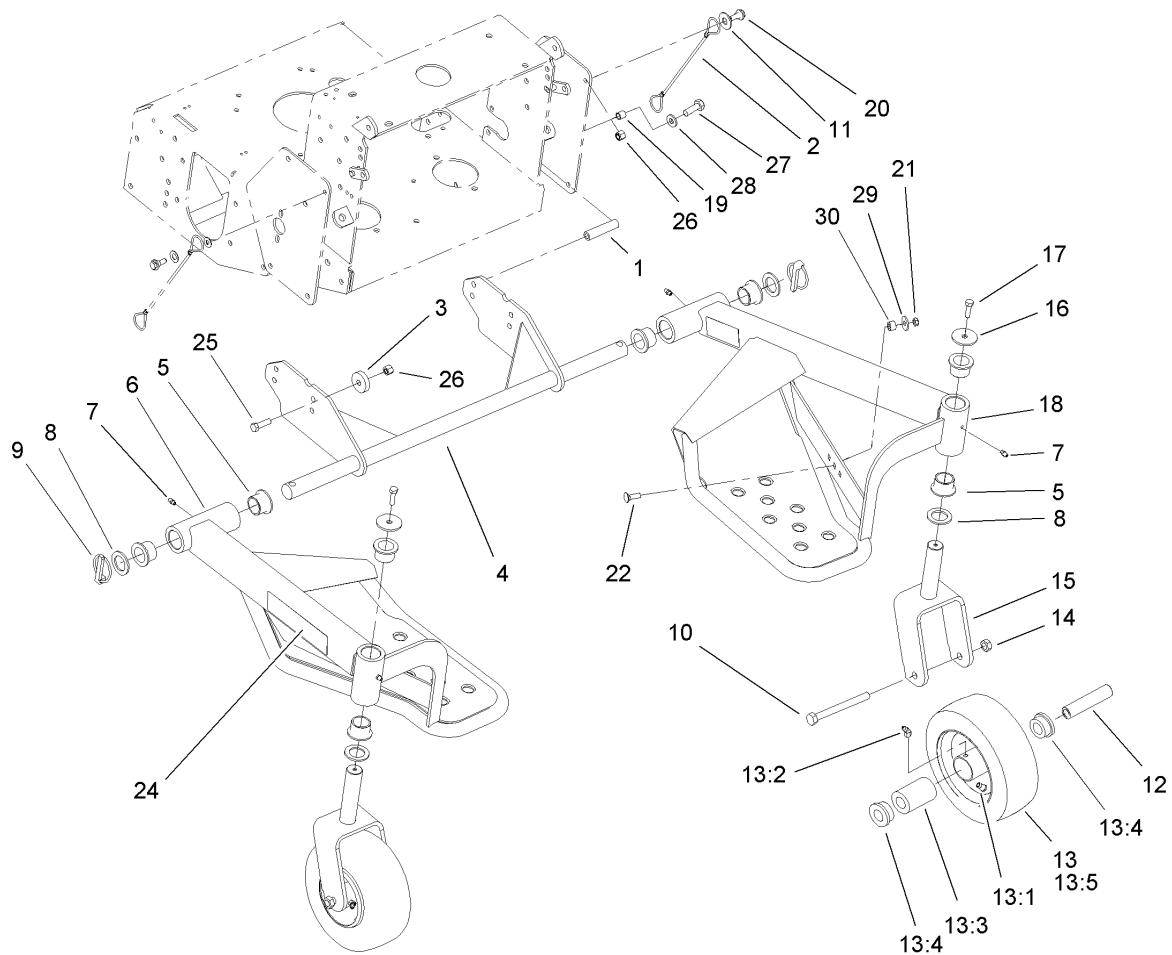

## Sulky Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-0877	4	Spacer-Shield (Used On Hydro Units Only)	19	105-4820	1	Spacer-Short (Used On Hydro Units Only)
2	93-9595	2	Lanyard	20	614672	2	Bolt-Shoulder
3	106-0861	4	Spacer (Used On Gear Drive Units Only)	21	3296-47	2	Nut-Lock, NI
4	106-0866-01	1	Axle	22	3230-2	2	Bolt-CARR
5	94-1291	8	Bushing	24	104-8477	2	Decal
6	104-8407-01	1	LH Floor Plate ASM	25	323-7	4	Screw-HH (Used On Gear Drive Units Only)
7	302-5	4	Fitting-Grease	26	3296-39	6	Nut-Lock, NI
8	3-6781	4	Washer-Thrust	27	323-23	2	Screw-HH
9	283-71	2	Pin-Lynch	28	3256-3	2	Washer-Flat
10	325-19	2	Screw-HH	29	1-603716	2	Washer-Friction
11	3256-6	2	Washer-Flat	30	98-4695	2	Spacer
12	100-6453	2	Bushing-Spanner				
13	100-6451	2	Castor Wheel ASM				
13:1	232-27	1	Stem-Valve				
13:2	302-11	1	Fitting-Lube, 45 DEG				
13:3	83-4740	1	Bearing				
13:4	62-5580	2	Bearing-Outside				
13:5	100-6452	1	Tire-Tubeless				
14	32153-5	2	Nut-Lock				
15	104-8402-01	2	Castor ASM				
16	63-7400	2	Washer-Rebound				
17	322-16	2	Screw-HH				
18	104-2743-01	1	RH Floor Plate ASM				