

Count on it.

# Parts Catalog

# Three-Wheel Drive Kit without ROPS

Groundsmaster® 3250-D Traction Unit

Model No. 04477



### **Ordering Replacement Parts**

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

#### **Understanding Reference Numbers**

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

#### **Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.


#### **Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

## **Contents**


Wheel Motor Assembly
Motor and Hub Assembly
Hydraulic Motor Assembly No. 112-0225

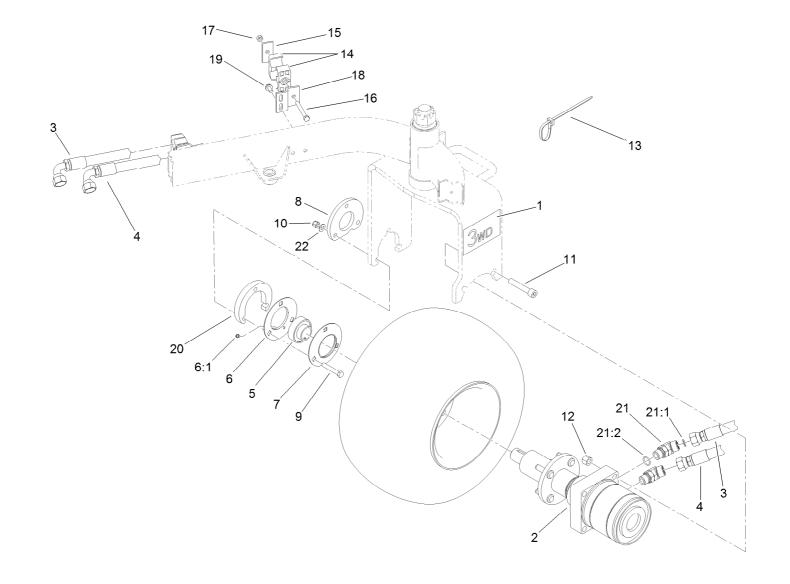

# Wheel Motor Assembly


					•		
Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	92-9752	2	Decal	13	3290-378	1	Tie-Cable
2		1	Motor And Hub ASM ●	14	56-7974	4	Clamp-Tube
3	95-0517	1	Hose ASM	15	69-9761	2	Plate-Cover
4	100-6412	1	Hose ASM	16	33114-070	2	Screw-HH
5	251-352	1	Bearing	17	33024-00	2	Nut-Lock, NI
6	85-8940	1	Flangette-Relube	18	95-0516	2	Bracket-Clamp
6:1	302-5	1	Fitting-Grease	19	32144-14	4	Screw-HWHTF
7	85-8950	1	Flangette-Standard	20	99-1487-01	1	Plate-Bearing, Adapter
8	112-0219-01	1	Spacer-Mount, 3Wd	21	340-14	2	Fitting-HYD, 45 DEG
9	323-45	3	Screw-HH	21:1	237-65	1	O-Ring
10	112-0236	3	Nut-Lock	21:2	237-80	1	O-Ring
11	3274-93	2	Screw-HSH	22	108-1438	3	Washer-Hardened
12	3296-23	2	Nut-Lock, NI				

Not serviced separately

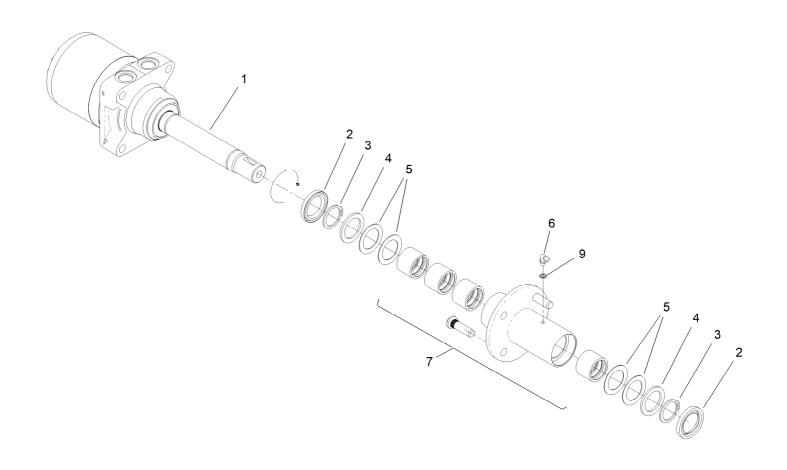

# **Motor and Hub Assembly**

Ref.	Part Number	Qty.	Description
1	112-0225	1	Motor-Hydraulic
2	92-9165	2	Seal
3	32151-10	2	Ring-Retaining
4	92-9159	2	Washer
5	92-9166	4	Washer-Thrust
6	302-40	1	Fitting-Grease, 90 DEG
7	161-4696SP	1	Hub ASM-3Wd
9	3255-7	1	Washer-Lock/EXT

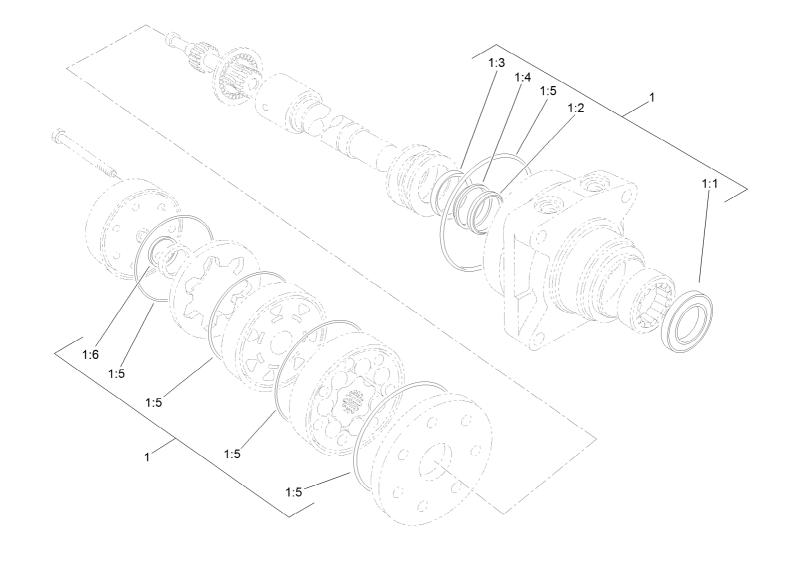

# **Hydraulic Motor Assembly No. 112-0225**

Ref.	Part Number	Qty.	Description
1	76-0800	1	Seal Kit
1:1		1	Seal-Dirt And Water ●
1:2		1	Backup-Ring ●
1:3		1	Seal-Shaft ●
1:4		1	Washer-Back Up ●
1:5		5	Seal-Square, Ring (Inner) ●
1:6		1	Seal-Commutator ●



\_\_\_\_

