



Form No. 3379-179 Rev B

Count on it.

Parts Catalog

21in Heavy-Duty Recycler®/Rear Bagger

Lawn Mower

Model No. 22296—Serial No. 314000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Housing Assembly 4

Grass Bag Assembly 6

Engine and Blade Assembly 8

Fuel Tank Assembly 10


Height-of-Cut and Wheel Assembly 12

Transmission Assembly 14

Handle Assembly 16

Attachments and Accessories 18


Housing Assembly

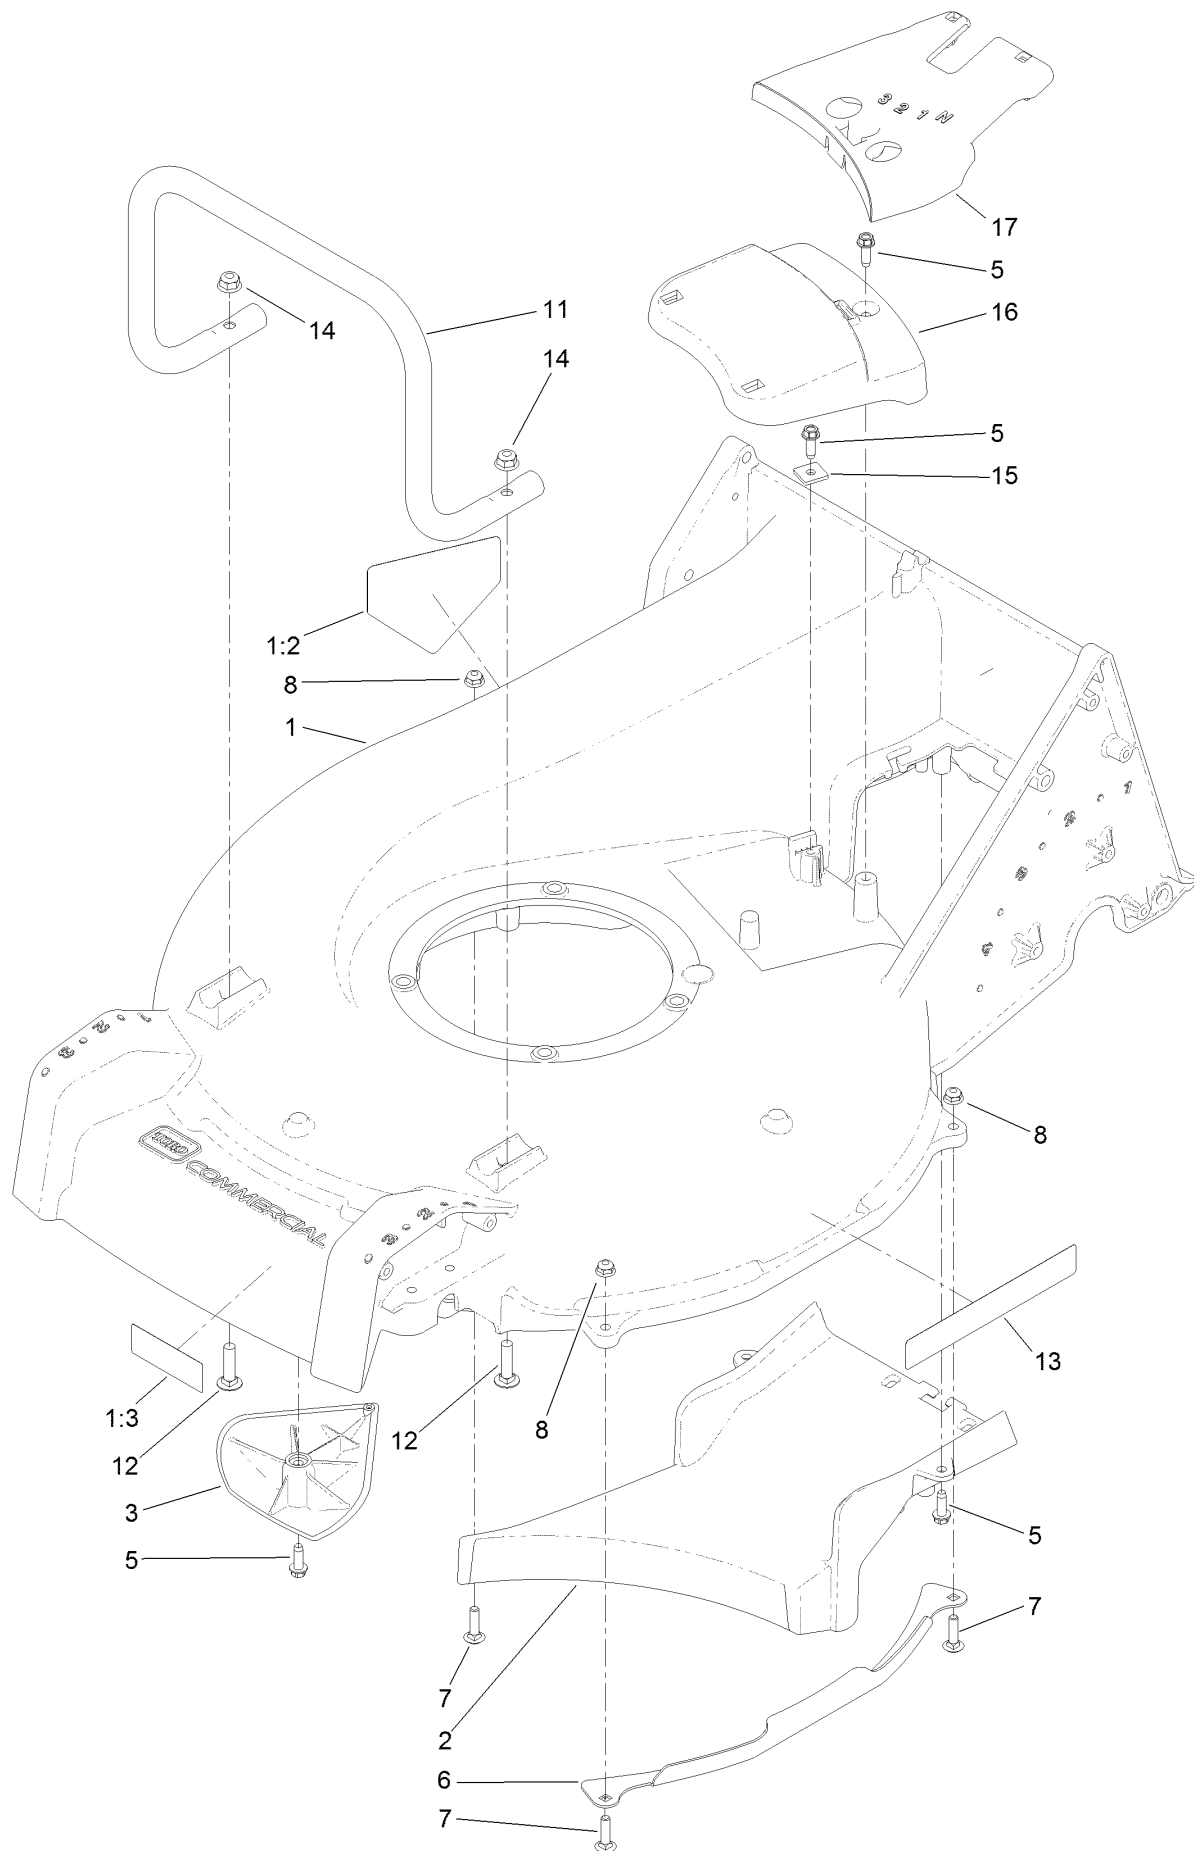

Housing Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-8400	1	Housing ASM	8	104-7201	4	Nut-HF, NI
1:2	94-8072	1	Decal-Danger	11	125-1003-03	1	Guard-Engine
1:3	68-7410	1	Decal-Blade	12	3230-3	2	Screw-CARR
2	125-1002-01	1	Floor-Chute	13	119-2368	2	Decal-Recycler
3	125-5041	2	Kicker	14	104-8300	2	Nut-HF, NI
5	49-2040	6	Screw-HWHTF	15	125-8387	1	Clamp-Cable
6	125-1047-03	2	Guard-Side, Deck	16	125-5038	1	Cover-Belt, Front
7	3229-2	4	Screw-CARR	17	125-5039	1	Cover-Belt, Rear


Grass Bag Assembly

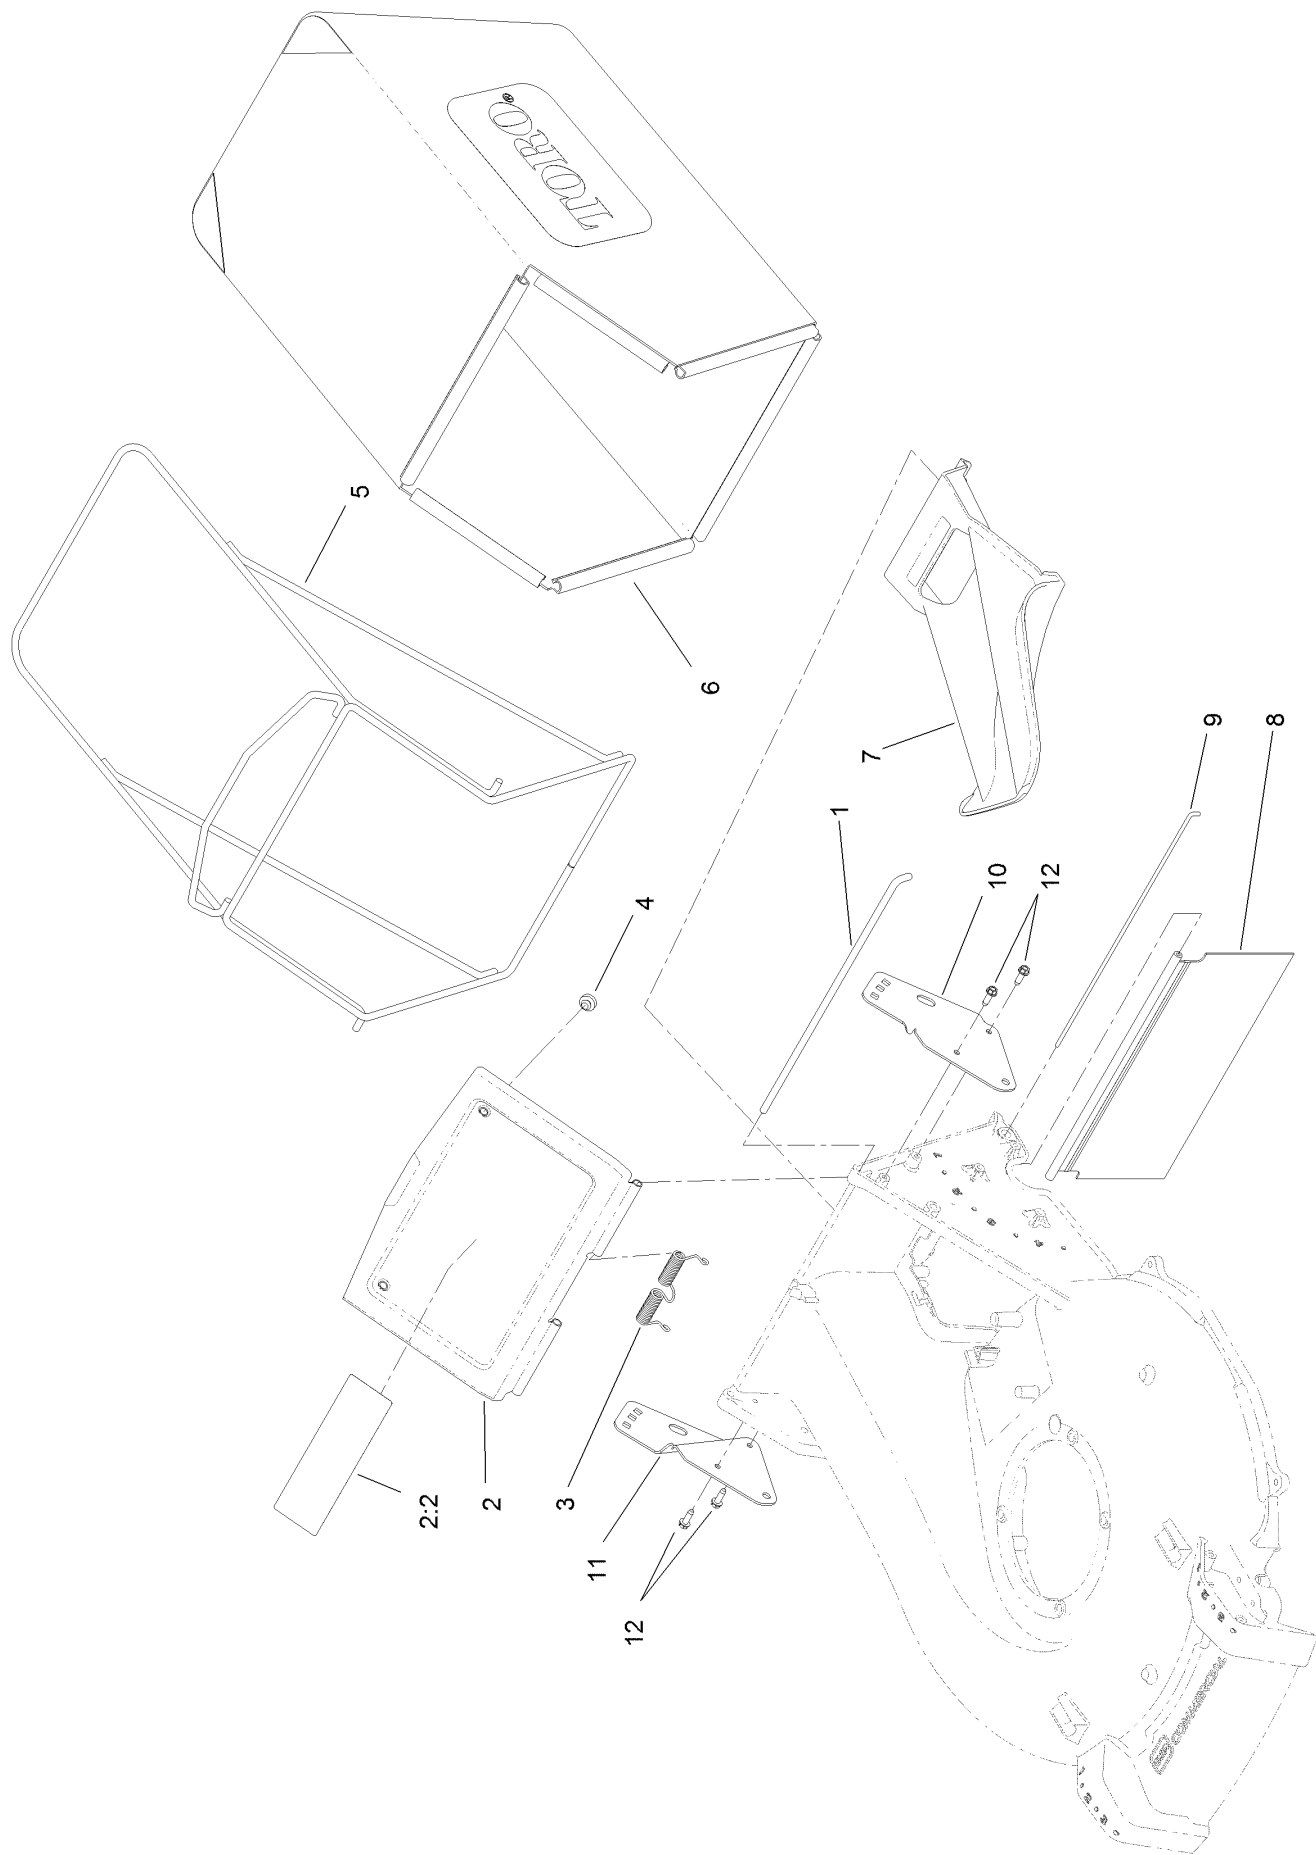

Grass Bag Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-1017	1	Rod-Door, Bag	7	125-1008	1	Plug-Mulch
2	125-8402	1	Bag Door ASM	8	125-1007	1	Shield-Trailing
2:2	116-7583	1	Decal-Warning	9	125-8413	1	Rod-Shield, Trailing
3	125-1019	1	Spring-Torsion	10	125-1013-03	1	Bracket-Mount, LH Handle
4	1-513658	2	Bumper	11	125-1014-03	1	Bracket-Mount, RH Handle
5	121-1399-03	1	Frame-Bag	12	49-2040	4	Screw-HWHTF
6	125-1030	1	Bag-Grass				

Engine and Blade Assembly

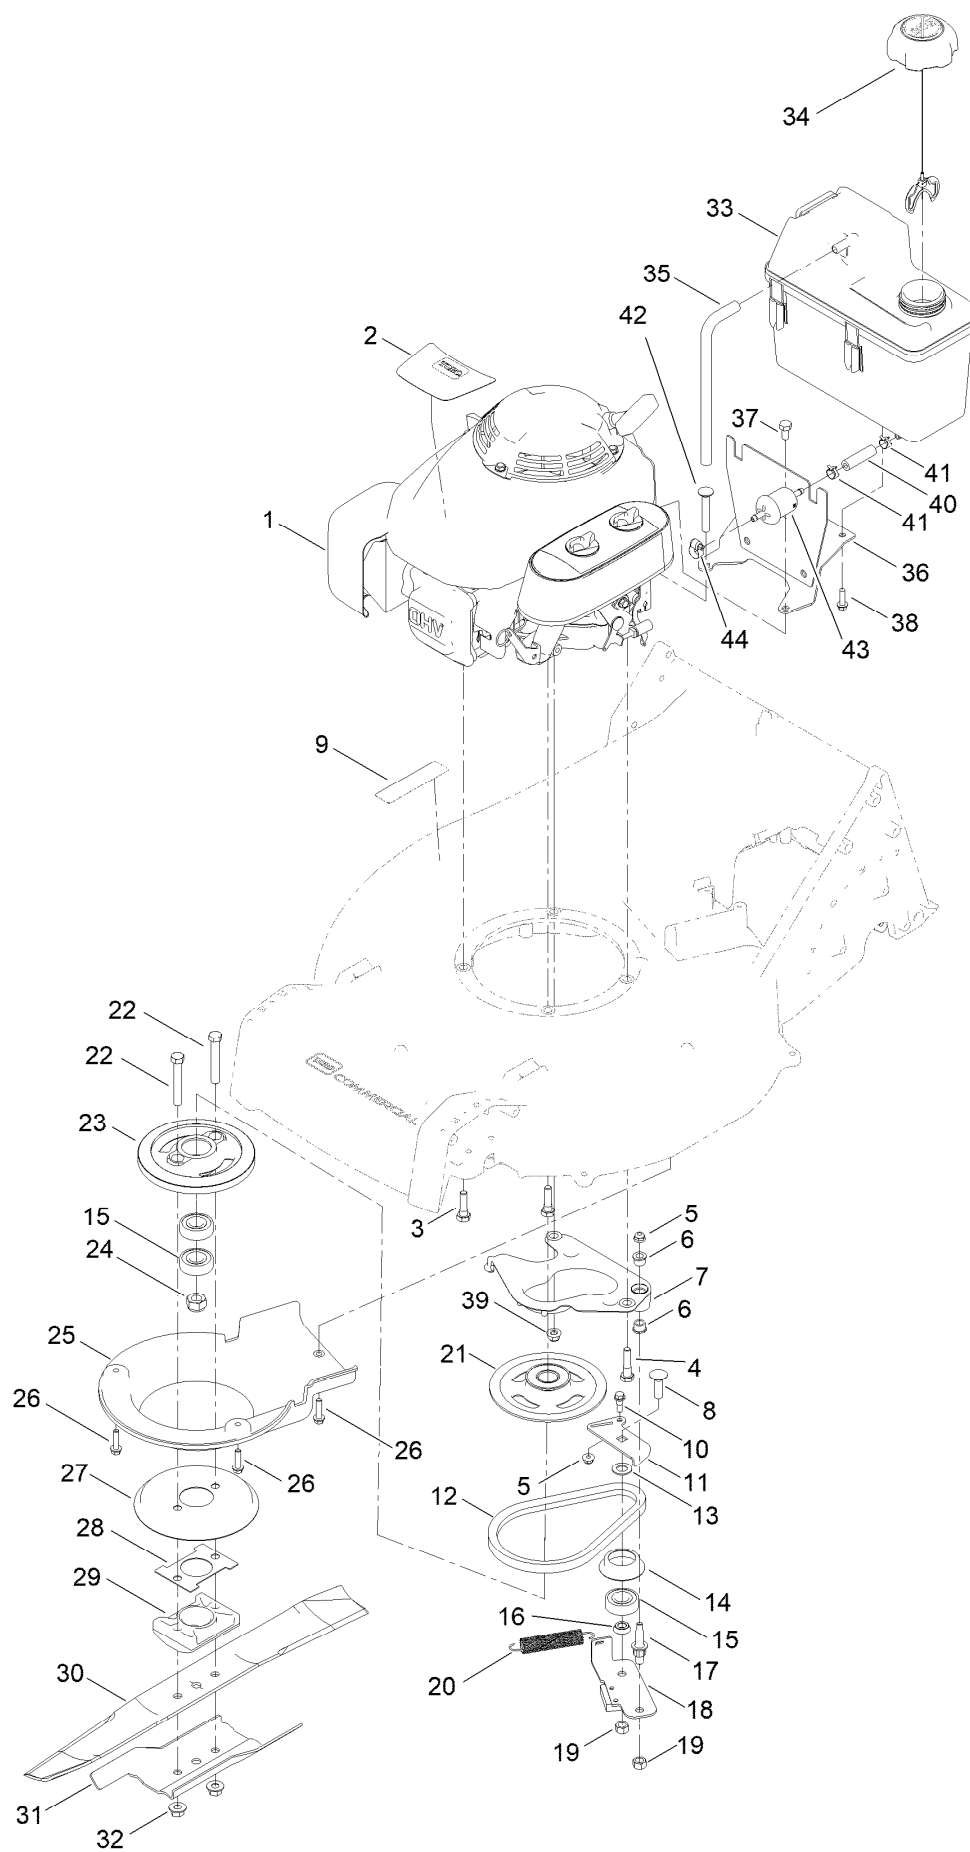

Engine and Blade Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Engine-Honda, Gxv160 Gas ●■	23	126-8108	1	Drum
2	125-8405	1	Decal-Engine, Honda	24	108-9342	1	Nut-Hex
3	125-1074	2	Screw-HH	25	125-1006	1	Cover
4	103-2678	1	Screw-Shoulder	26	32144-86	3	Screw-HWHTF
5	104-7201	2	Nut-HF, NI	27	138-3225	1	Disk
6	130-2377	2	Bushing-Flange	28	130-6404-01	1	Spacer-Driver, Blade
7	130-2375	1	Plate-Anchor	29	107-7487	1	Support-Blade
8	3231-25	1	Bolt-CARR	30	133-8183-03	1	Blade-Recycling 21In (Bagging)
9	133-8062	1	Decal-Spark Arrestor	31	125-1069-03	1	Accelerator-Blade
10	42-3560	1	Bolt-Shoulder	32	127-6852	2	Nut-Flange, Lock
11	125-8446	1	Plate-Guide, BBC	33	114-0280	1	Tank-Fuel
12	110-1790	1	Belt	34	137-4127	1	Cap-Fuel
13	605256	1	Spacer	35	115-0962	1	Hose-Vent, Canister
14	138-3217	1	Retainer-Belt	36	119-7837-03	1	Mount-Tank
15	38-7820	3	Bearing-Ball	37	3210-2	1	Screw-HH
16	107-0758	1	Spacer-Bearing	38	46-8091	2	Screw-HWH
17	130-9699	1	Bolt-Shoulder	39	104-8300	1	Nut-HF, NI
18	125-1063	1	Plate-Brake	40	119-7856	1	Hose-Fuel
19	125-5069	2	Nut-Hex	41	2412-98	2	Clamp-Hose
20	108-3792	1	Spring-Tension, Brake	42	3230-7	1	Bolt-CARR
21	117-5970	1	Pulley	43	139-0717	1	Filter-Fuel
22	3211-42	2	Screw-HH	44	2412-108	1	Clamp-Worm

● Not serviced separately

■ Obtain parts from www.honda-engines.com


This exploded view diagram illustrates the assembly of a Honda engine. The components are numbered as follows:

- 1**: A cap or plug for the oil filler.
- 2**: The oil filler cap assembly, including the cap and a gasket.
- 3**: A bolt used to secure the oil filler cap assembly.
- 4**: A bolt used to secure the oil filler cap assembly.
- 5**: A bolt used to secure the oil filler cap assembly.
- 6**: A bolt used to secure the oil filler cap assembly.
- 7**: A bolt used to secure the oil filler cap assembly.
- 8**: A bolt used to secure the oil filler cap assembly.
- 9**: A bolt used to secure the oil filler cap assembly.
- 10**: A bolt used to secure the oil filler cap assembly.
- 11**: A bolt used to secure the oil filler cap assembly.
- 12**: A bolt used to secure the oil filler cap assembly.
- 13**: A bolt used to secure the oil filler cap assembly.
- 14**: A bolt used to secure the oil filler cap assembly.
- 15**: A bolt used to secure the oil filler cap assembly.

Fuel Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	109-6776	1	Cap-Ratchet, Tethered	7	3230-7	1	Bolt-CARR
2	114-0280	1	Tank-Fuel	8	104-8300	1	Nut-HF, NI
3	119-7837-03	1	Mount-Tank	9	2412-98	2	Clamp-Hose
4	46-8091	2	Screw-HWH	10	119-7856	1	Hose-Fuel
6	3210-2	1	Screw-HH	15	115-0962	1	Hose-Vent, Canister


Height-of-Cut and Wheel Assembly

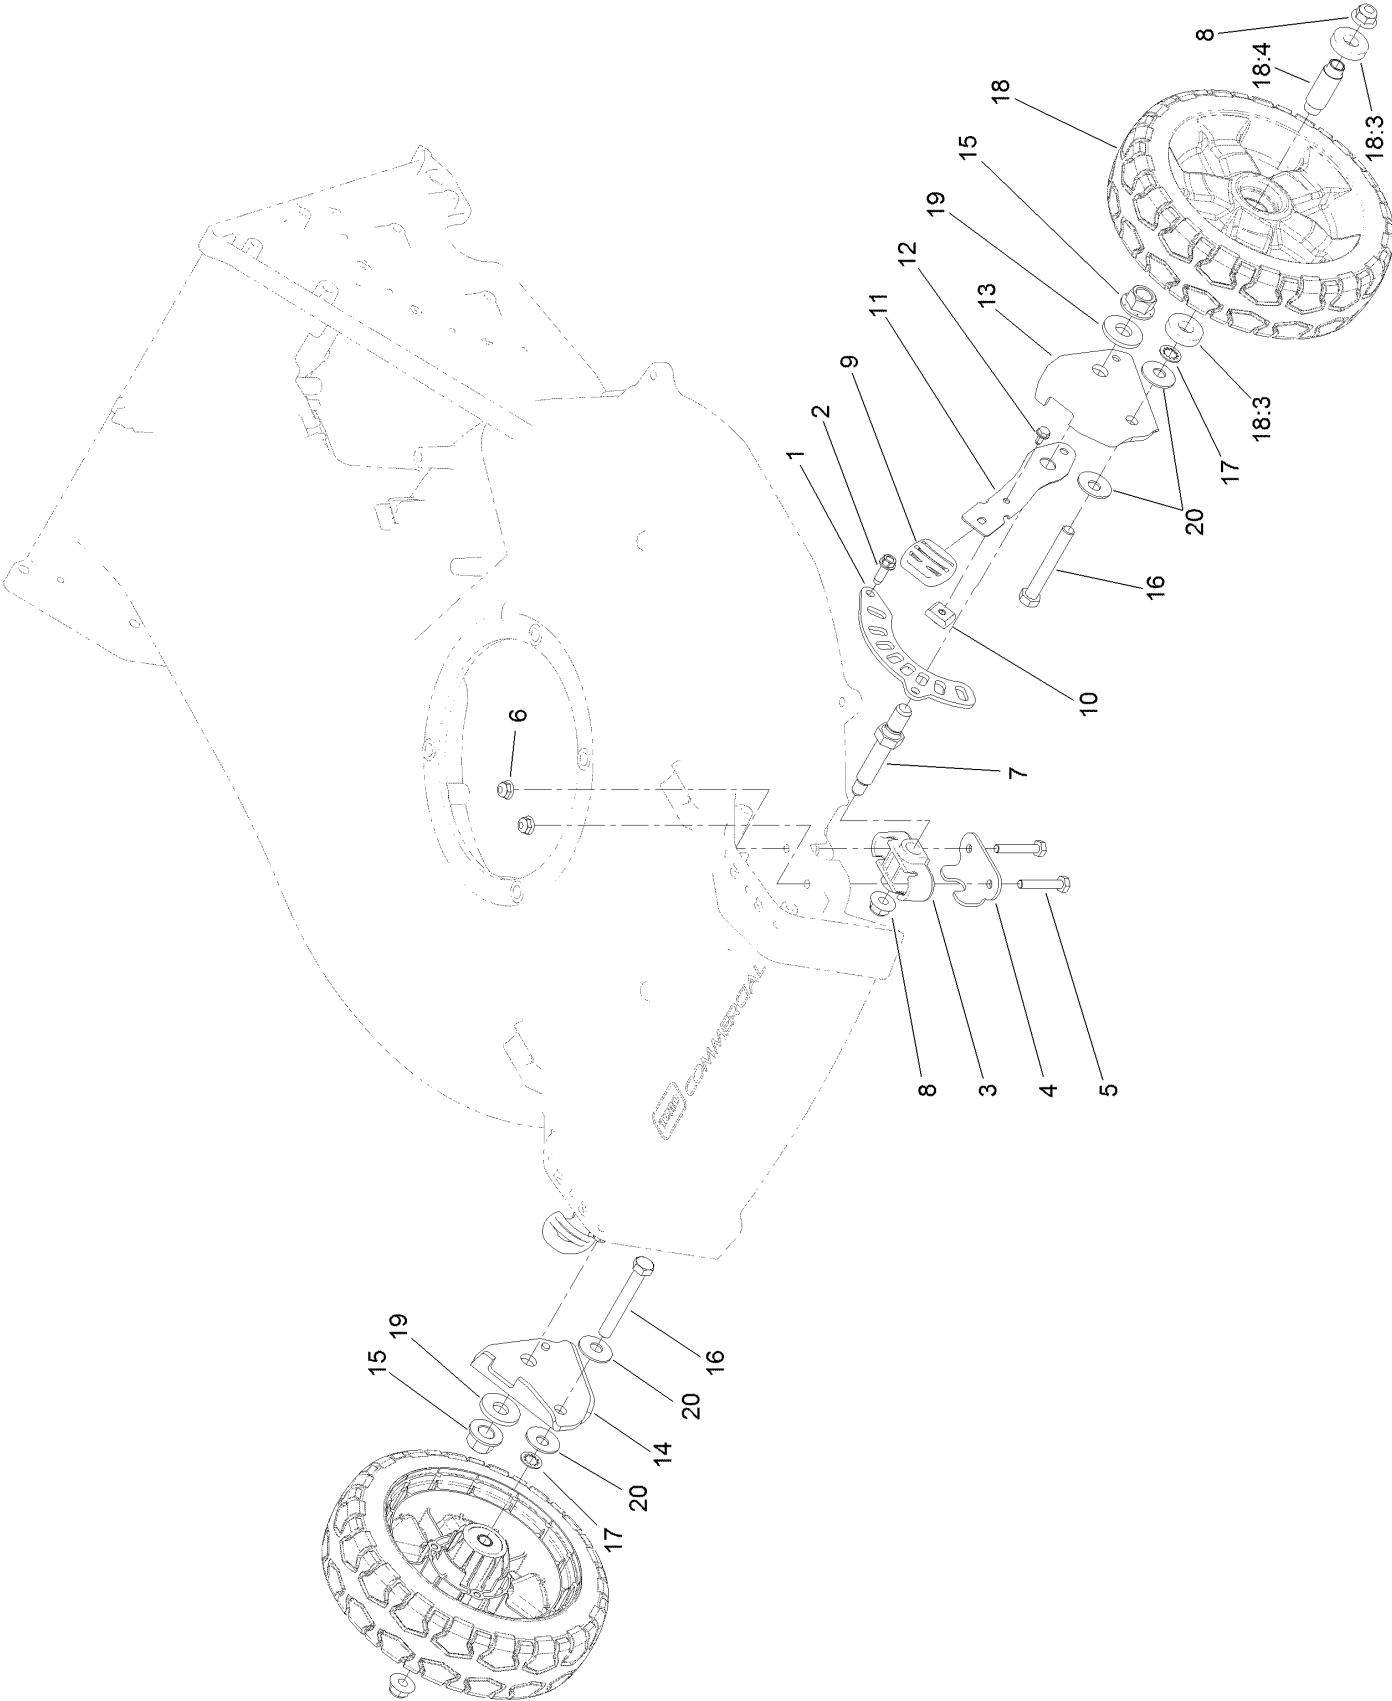

Height-of-Cut and Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-1439	2	Plate-HOC, Front	12	104-2065	2	Screw-HWH
2	49-2040	4	Screw-HWHTF	13	121-1425	1	Arm-Pivot, Front LH
3	121-1427	2	Bushing-Axle, Front HOC	14	121-1426	1	Arm-Pivot, Front RH
4	121-1442	2	Retainer-Bushing, Front Axle	15	99-5107	2	Nut-Lock
5	321-9	4	Screw-HH	16	323-13	2	Screw-HH
6	104-7201	4	Nut-HF, NI	17	3254-6	2	Washer-Lock, Internal
7	121-1428	2	Axle-Wheel	18	125-1080	2	Wheel
8	104-8301	4	Nut-HF, NI	18:3	52-2450	2	Bearing-Wheel
9	125-1093	2	Knob-Lever, HOC	18:4	125-1077	1	Spacer
10	121-1432	2	Key-Arm, Spring	19	1-513435	2	Washer-Spring
11	121-1431	2	Arm-Spring	20	3290-461	4	Washer-Spring

Transmission Assembly

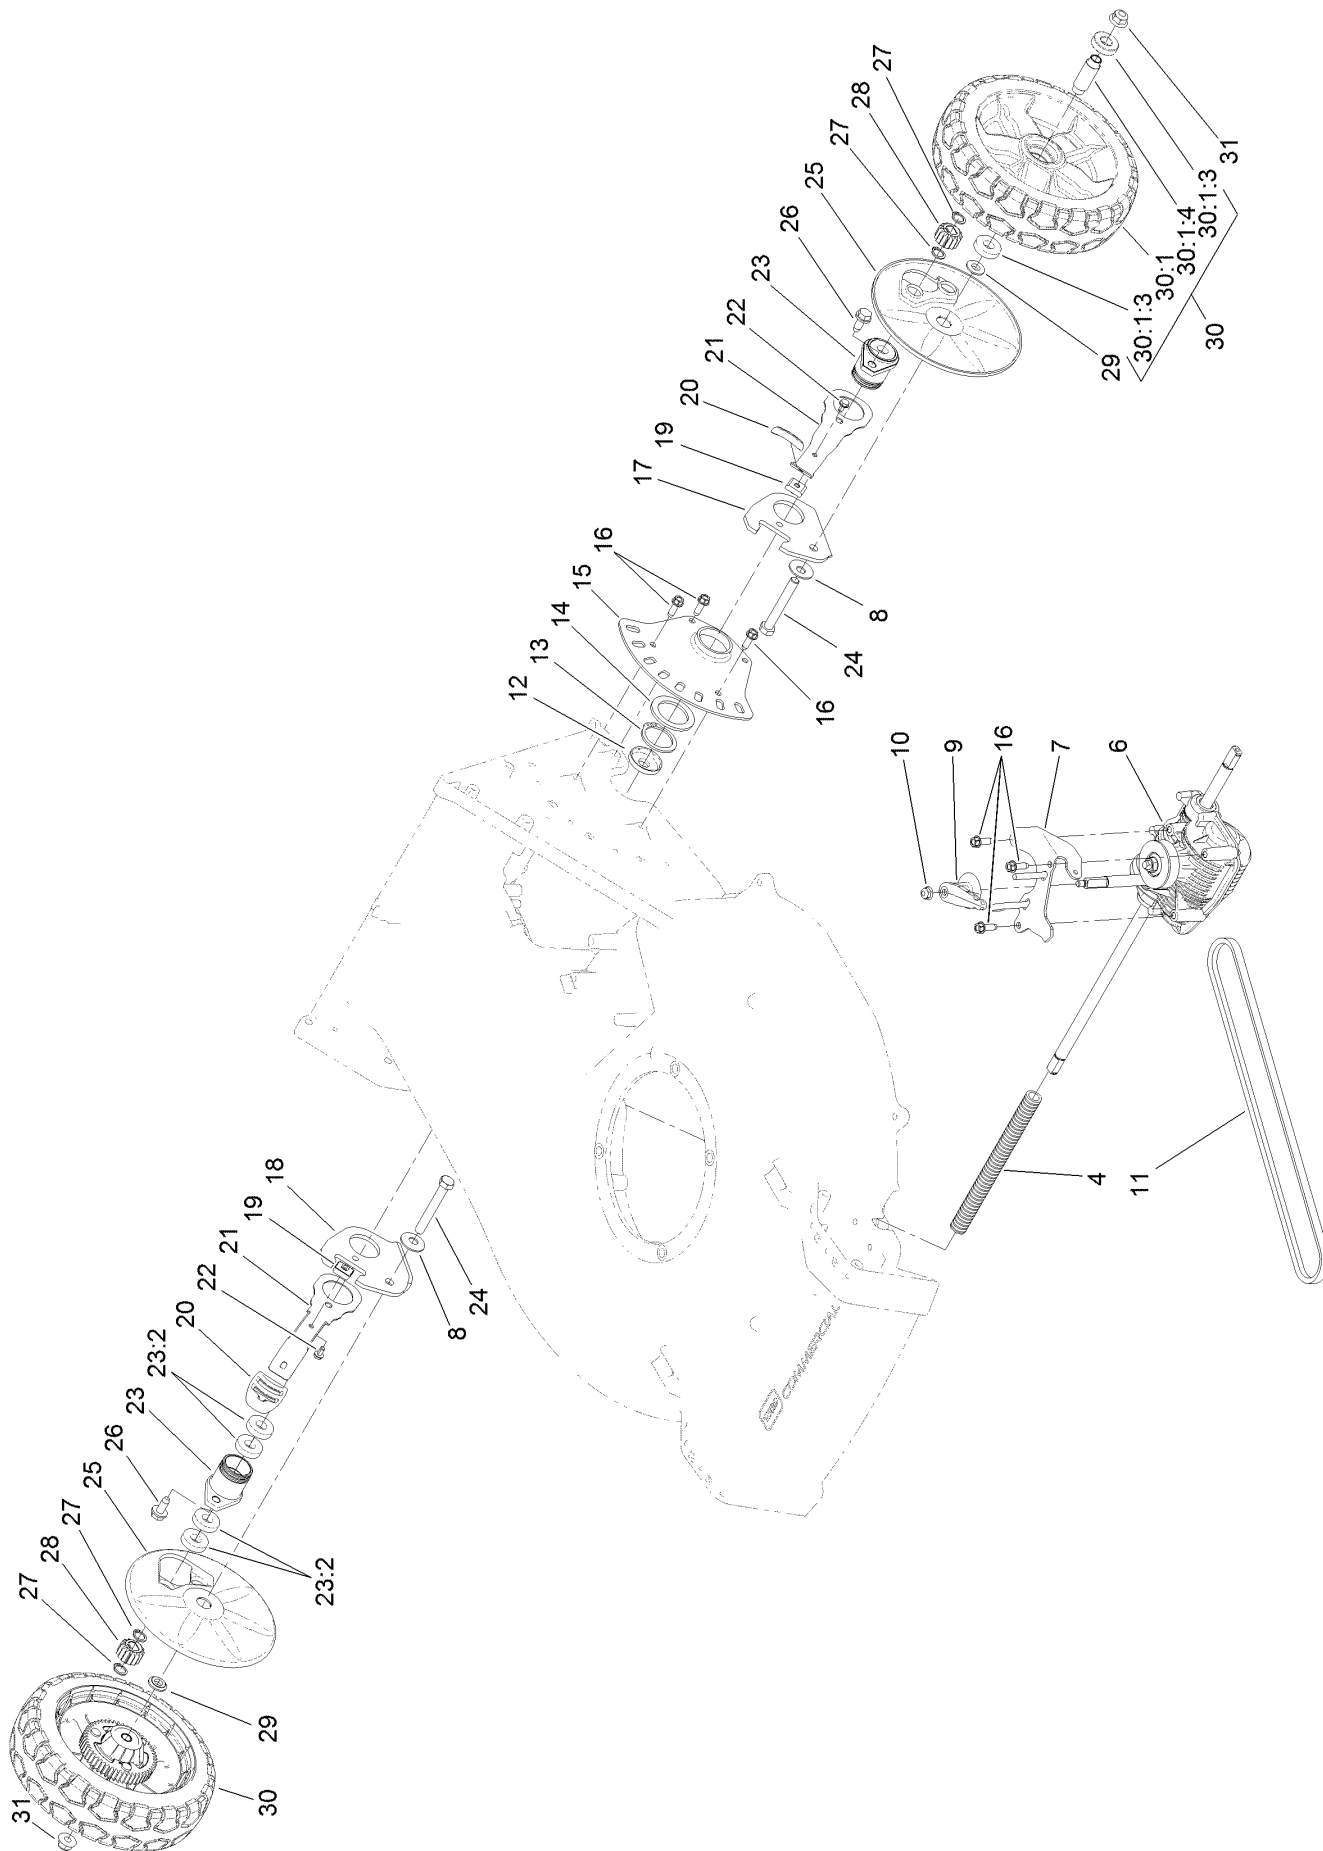


Transmission Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	117-5260	1	Cover-Shaft, Drive	21	121-1448	2	Arm-Spring, Rear
6	125-1090	1	Transmission	22	104-2065	2	Screw-HWH
7	125-5090-03	1	Guide-Belt	23	121-1424	2	Retainer ASM
8	3290-461	2	Washer-Spring	23:2	52-2450	4	Bearing-Wheel
9	125-5040	1	Lever-Shift	24	323-13	2	Screw-HH
10	104-7201	1	Nut-HF, NI	25	125-1082	2	Cover-Wheel
11	125-1011	1	Belt-V	26	32144-70	2	Screw-HWHTF
12	127-6848	2	Cover-Bearing	27	32151-61	4	Ring-Retaining
13	32151-10	2	Ring-Retaining	28	110-9417	2	Gear-Pinion, 15T
14	98-1452	2	Washer-Thrust	29	74-1671	2	Spacer-Cover, Wheel
15	121-1447	2	Plate-HOC, Rear	30	125-1081	2	Wheel ASM
16	49-2040	9	Screw-HWHTF	30:1		1	Wheel ●
17	121-1445	1	Arm-Pivot, Rear LH	30:1:3	52-2450	2	Bearing-Wheel
18	121-1446	1	Arm-Pivot, Rear RH	30:1:4	125-1077	1	Spacer
19	121-1432	2	Key-Arm, Spring	31	104-8301	2	Nut-HF, NI
20	125-1093	2	Knob-Lever, HOC				

● Not serviced separately

Handle Assembly

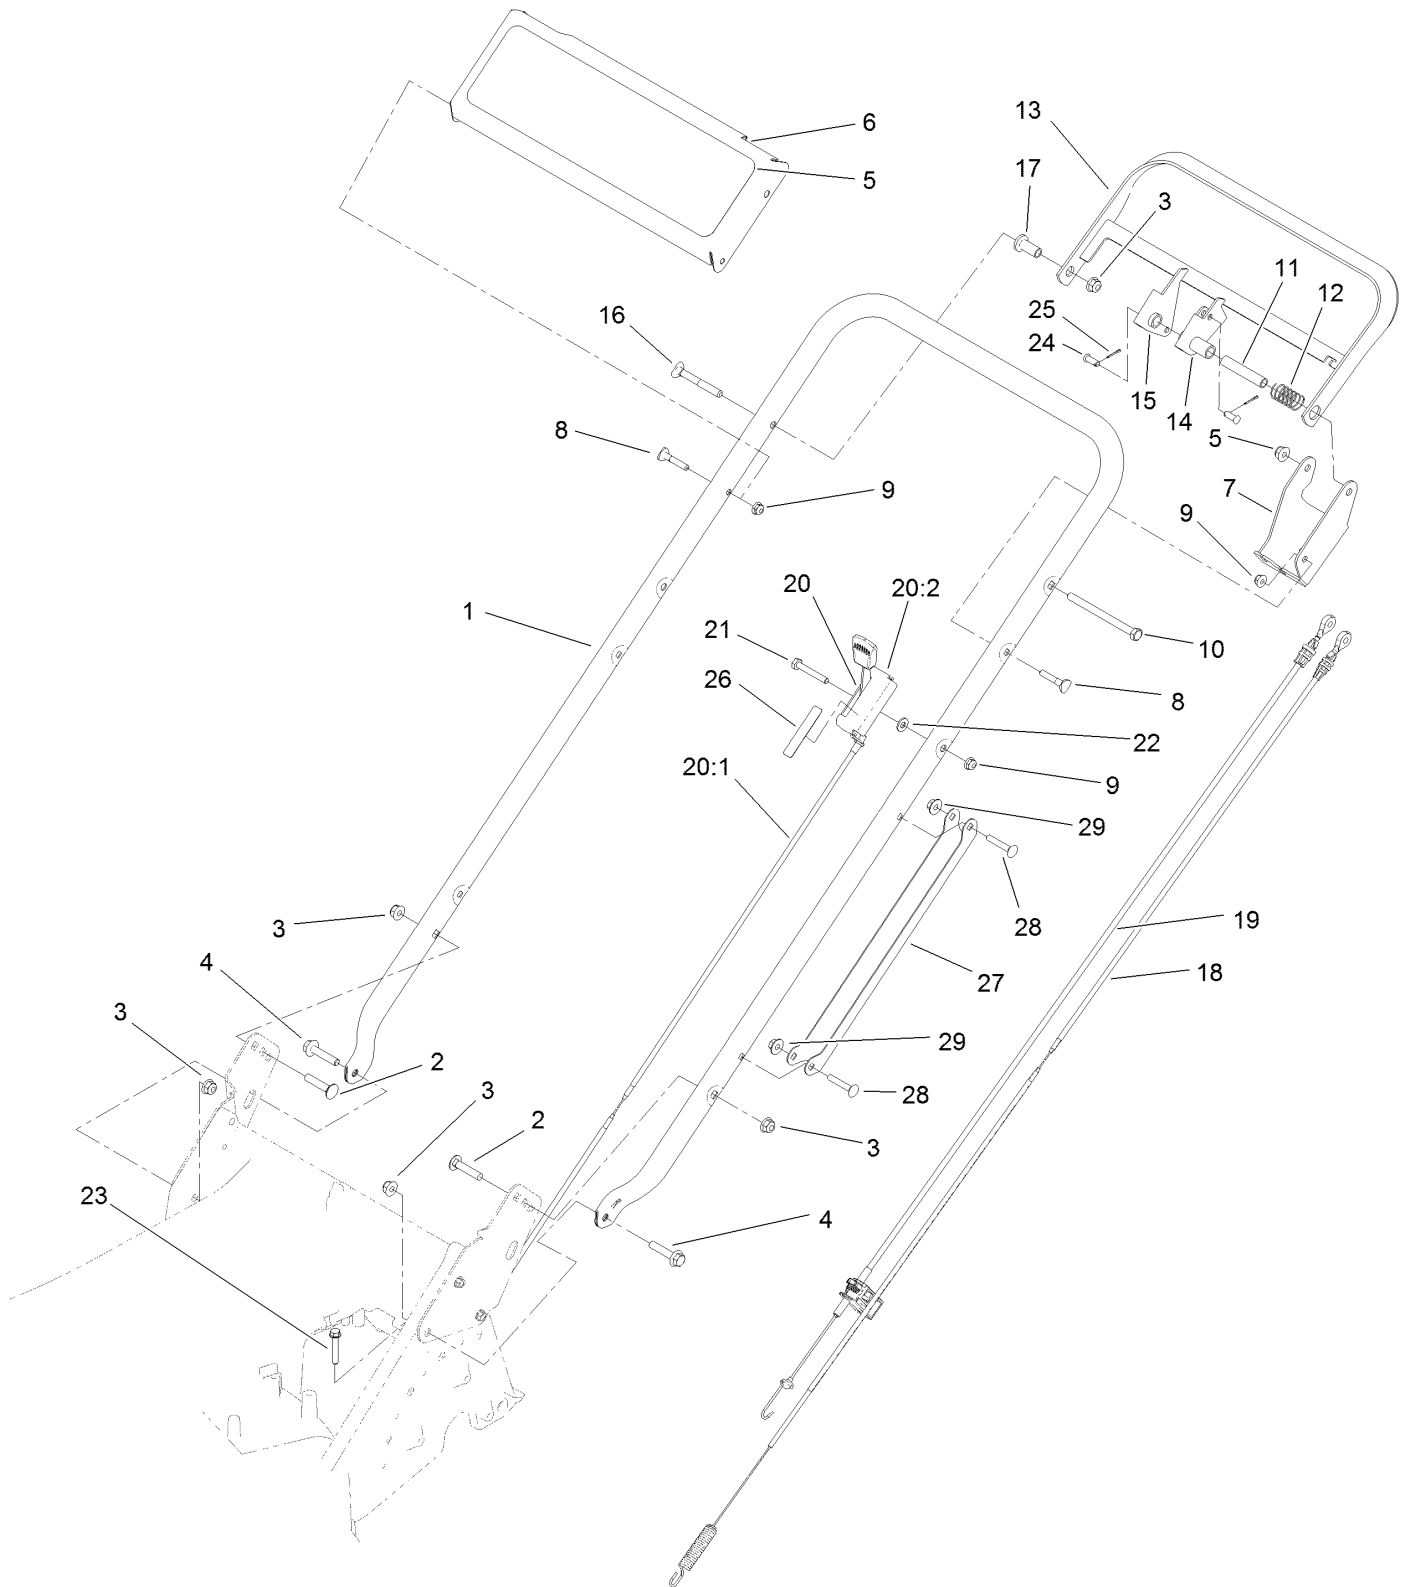

Handle Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-1016-03	1	Handle	17	125-8359	1	Spacer-Flange
2	3230-4	2	Screw-CARR	18	125-8362	1	Cable-BBC
3	104-8300	6	Nut-HF, NI	19	125-8363	1	Cable-Traction
4	115-1794	2	Screw-HHF	20	125-8374	1	Control-Throttle/Choke
5	125-8421	1	Decal-Toro, Commercial	20:1	130-6400	1	Cable-Throttle
6	125-8350-01	1	Panel-Control	20:2	130-6401	1	Control-Throttle
7	125-8358-03	1	Bracket-Control	21	321-10	1	Screw-HH
8	117-7737	2	Screw-Handle	22	3256-22	1	Washer-Flat
9	104-7201	2	Nut-HF, NI	23	94-2691	1	Screw-HWH Taptite
10	322-19	1	Screw-HH	24	84-9040	2	Pin-Cable
11	125-8424	1	Spacer	25	3272-1	2	Pin-Cotter
12	85-6750	1	Spring-Control	26	125-8407	1	Decal-Throttle, Choke
13	125-8357-03	1	Bar-Control	27	127-6897-03	1	Guard-Cable, Handle
14	125-8352	1	Lever-Control	28	108-0988	2	Screw-CARR
15	125-8354	1	Lever-Traction	29	114-3778	2	Nut-HF
16	125-8408	1	Screw-Handle				

Attachments and Accessories

For 22296 21in Heavy-Duty Recycler/Rear Bagger Lawn Mower

Product Name	Model/Part
Blade-21in	108-0954-03
Blade-Bagging, 21in	125-1072-03
Cup-Anti Scalp.....	125-8440

Notes:



Count on it.