



Spreader Base Unit

2002 and later Workman® 3000 and 4000 Series

Model No. 41253

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


AR.	as required	HWHTF.	hex washer head thread forming
ASM.	assembly	HYD.	hydraulic
CARR.	carriage	INC.	incorporated
DEG.	degrees	LH.	left hand
FH.	flat head	NI.	nylon insert
GA.	gauge	PPH.	phillips pan head
HF.	hex flange	PTH.	phillips truss head
HH.	hex head	PTO.	power take off
HHF.	hex head flange	RH.	right hand
HHFTF.	hex head flange thread forming	SFH.	slotted fillister head
HJ.	hex jam	SHH.	slotted hex head
HLH.	hex lag head	SHWH.	slotted hex washer head
HOC.	height-of-cut	SPH.	slotted pan head
HS.	hex	SQH.	square head
HSBH.	hex socket button head	SRH.	slotted round head
HSFH.	hex socket flat head	STD.	standard
HS.	hex socket head	TAP.	self tapping
HWH.	hex washer head	TTH.	torx truss head

Footnotes

- ❶ Not serviced separately

Contents


Description	Page
Frame Assembly	 3
Hopper Support Assembly	 4
Hydraulic Drive Kit Assembly	 5
Hydraulic Motor Assembly No. 105-9455	 6

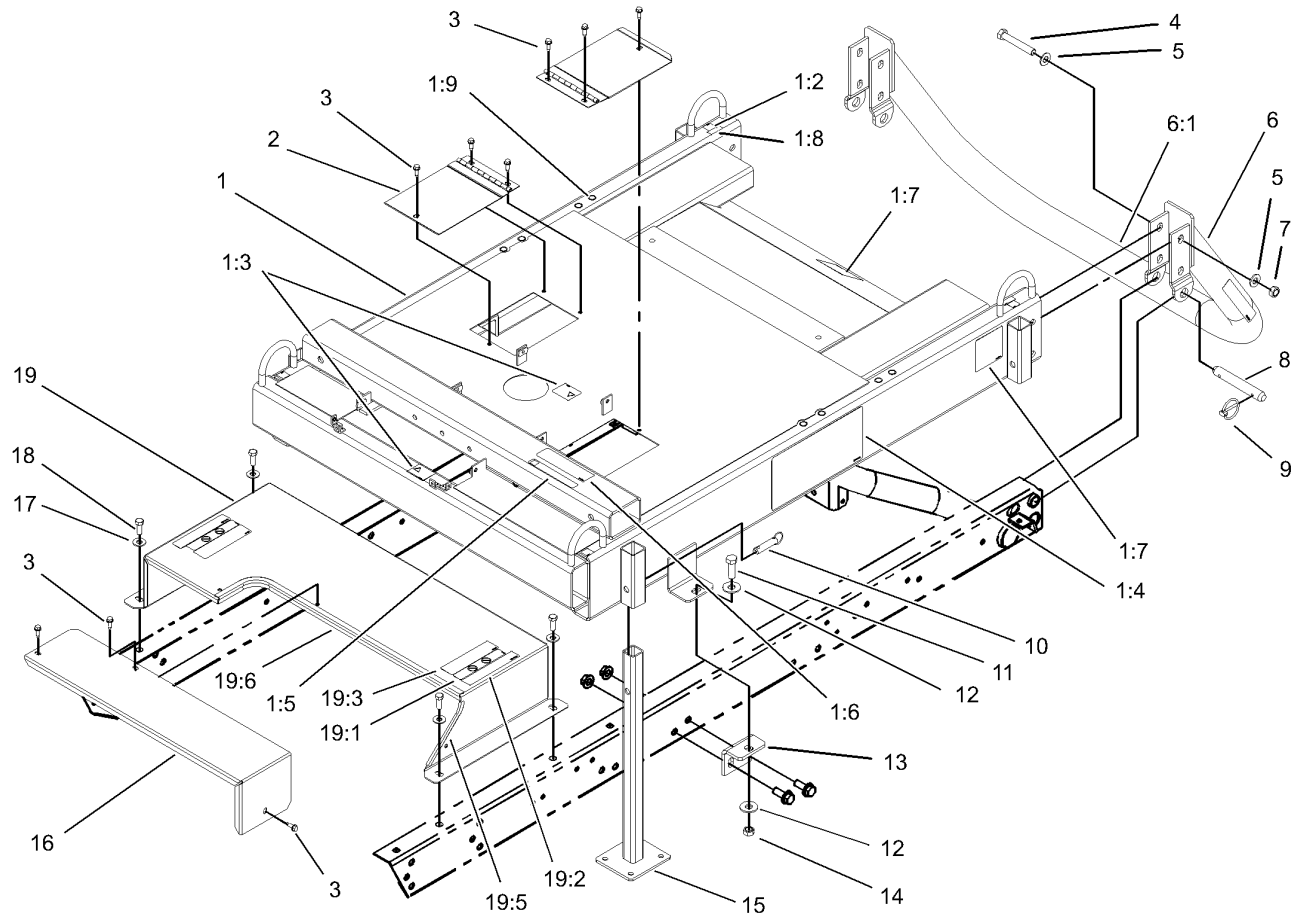

Frame Assembly


Ref	Part No.	Qty.	Description
1	106-2252	1	Frame ASM
1:2	93-9084	4	Decal-Point, Lift
1:3	93-9356	2	Decal-Warning, Belt
1:4	93-9863	2	Decal-Danger, Tipover
1:5	65-3090	1	Decal-Instruction
1:6	93-7814	1	Decal-Danger
1:7	94-1236	3	Decal-Residual Risk
1:8	93-9528	4	Decal
1:9	32148-10	8	Insert-Threaded
2	92-8211-03	2	Service Door ASM
3	32104-95	9	Screw-HWH
4	325-13	4	Screw-HH
5	3256-26	8	Washer-Flat
6	106-2255	1	Support Tube ASM
6:1	93-6689	2	Decal-No Riders
7	32153-5	4	Nut-Lock
8	92-1233	2	Pin-Clevis
9	92-1298	4	Pin-Lynch
10	100-4523	2	Pin-Hitch
11	325-6	2	Screw-HH
12	3256-6	4	Washer-Flat
13	92-2667-03	2	Bracket-Attach. Mount
14	32153-5	2	Nut-Lock
15	105-9482-03	2	Jack Stand ASM
16	93-6427-03	1	Panel-Radiator

Ref	Part No.	Qty.	Description
17	3256-4	4	Washer-Flat
18	323-6	4	Screw-HH
19	106-2275	1	Radiator Cover ASM
19:1	93-6687	2	Decal-No Step
19:2	93-6689	2	Decal-No Riders
19:3	93-7814	2	Decal-Danger
19:5	92-3627	1	Trim
19:6	42657	1	Trim-Panel, Front

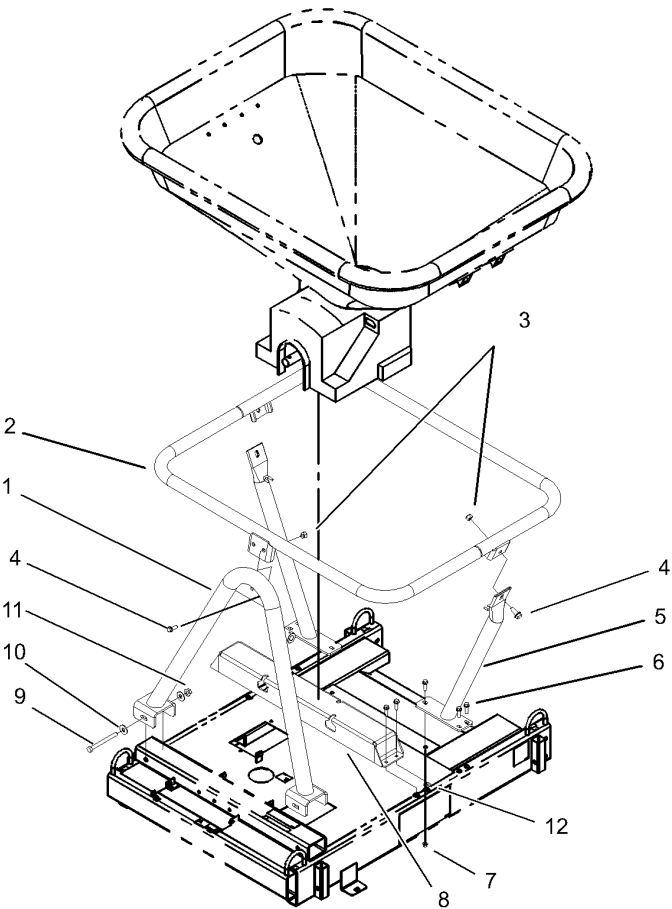

Hopper Support Assembly

Ref	Part No.	Qty.	Description				
1	105-9456-03	1	Support Tube ASM				
2	105-9459-03	1	Upper Frame ASM				
3	3296-25	4	Nut-Lock, NI				
4	3234-32	4	Screw-HHF				
5	105-8007-03	2	Support Tube ASM				
6	3234-24	10	Screw-HHF				
7	32128-40	2	Nut-Flange				
8	105-7973-03	1	Channel-Support				
9	325-19	2	Screw-HH				
10	3256-6	4	Washer-Flat				
11	32128-49	2	Nut-HHF				
12	3256-24	4	Washer-Flat				

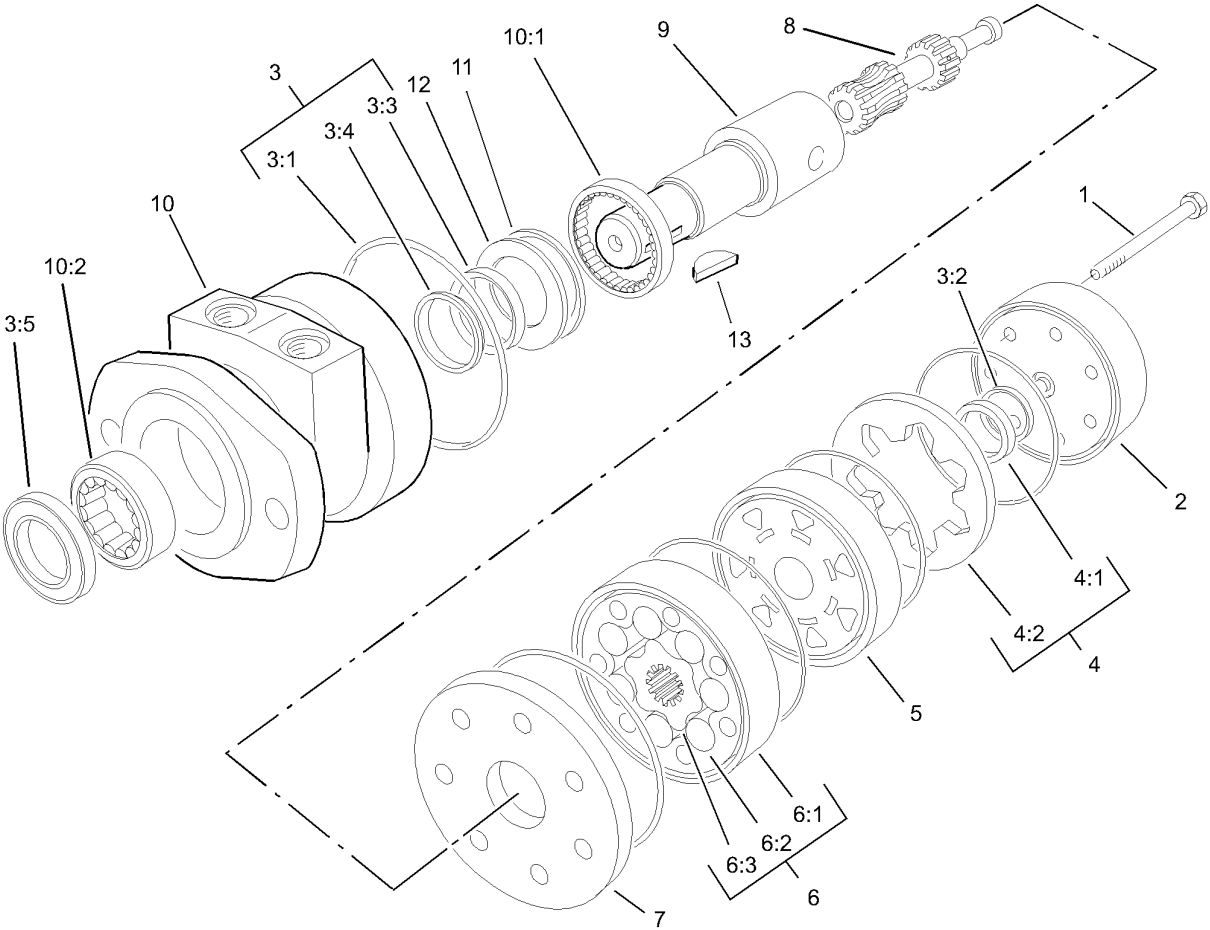

Hydraulic Motor Assembly No. 105-9455

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	322-33	5	Screw-HH	13	106-1990	1	Key-Woodruff
2	106-1981	1	Cover-End				
3	106-1989	1	Seal Kit				
3:1		6	Seal-Ring				
3:2		1	Seal-Commutator				
3:3		1	Seal-Inner				
3:4		1	Washer-Backup				
3:5		1	Seal-Dirt And Water				
4	106-1982	1	Commutator ASM				
4:1		1	Commutator				
4:2		1	Ring-Commutator				
5	106-1983	1	Manifold				
6	106-1984	1	Rotor Set				
6:1		1	Stator				
6:2		7	Vane				
6:3		1	Rotor				
7	106-1985	1	Plate-Wear				
8	106-1986	1	Link-Drive				
9	106-1987	1	Shaft-Coupling				
10	106-1988	1	Housing ASM				
10:1		1	Bearing				
10:2		1	Bearing				
11		1	Bearing-Thrust				
12		1	Washer-Thrust				

NOTES

