



1332 Power Shift[®] Snowthrower

Model No. 38087-240000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.


Contents

| Description | Page | Description | Page |
|--|------|---|------|
| Housing and Engine Frame Assembly | 3 | Carburetor Assembly Part No. 640105 | 13 |
| 32in Auger Gearcase Assembly Part No. 74-1562 | 5 | Tecumseh Engine Assembly Model No. OHSK130-223819E | 14 |
| Engine and Transmission Assembly | 6 | Tecumseh Engine Assembly Model No. OHSK130-223819E | 15 |
| Traction Gearcase Assembly Part No. 66-8030 | 7 | Tecumseh Engine Assembly Model No. OHSK130-223819E (continued) | 16 |
| Power Shift Control Assembly | 9 | Recoil Starter Part No. 590749 | 17 |
| Handle and Control Assembly | 10 | Electric Starter (110 Volt) Part No. 37105 | 18 |
| Headlamp Assembly Part No. 54-9871 | 11 | Rewind Starter Part No. 590733 (Optional) | 19 |
| Lower Traction Assembly | 12 | | |

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

| Abbreviation | Meaning | Abbreviation | Meaning |
|-----------------|-----------------------------------|----------------|-------------------------|
| AR | as required | HYD | hydraulic |
| ASM | assembly | INC | incorporated |
| CARR | carriage | LH | left hand |
| DEG | degrees | NI | nylon insert |
| FH | flat head | PPH | Phillips pan head |
| GA | gauge | PTH | Phillips truss head |
| HF | hex flange | PTO | power take off |
| HH | hex head | RH | right hand |
| HHF | hex head flange | SFH | slotted fillister head |
| HLH | hex lag head | SHH | slotted hex head |
| HJ | hex jam | SQH | square head |
| HOC | height-of-cut | SHWH | slotted hex washer head |
| HS | hex socket | SPH | slotted pan head |
| HSBH | hex socket button head | SRH | slotted round head |
| HSFH | hex socket flat head | STD | standard |
| HSH | hex socket head | TAP | self tapping |
| HWH | hex washer head | TTH | Torx truss head |
| HWHTF | hex washer head thread forming | WH | wing head |

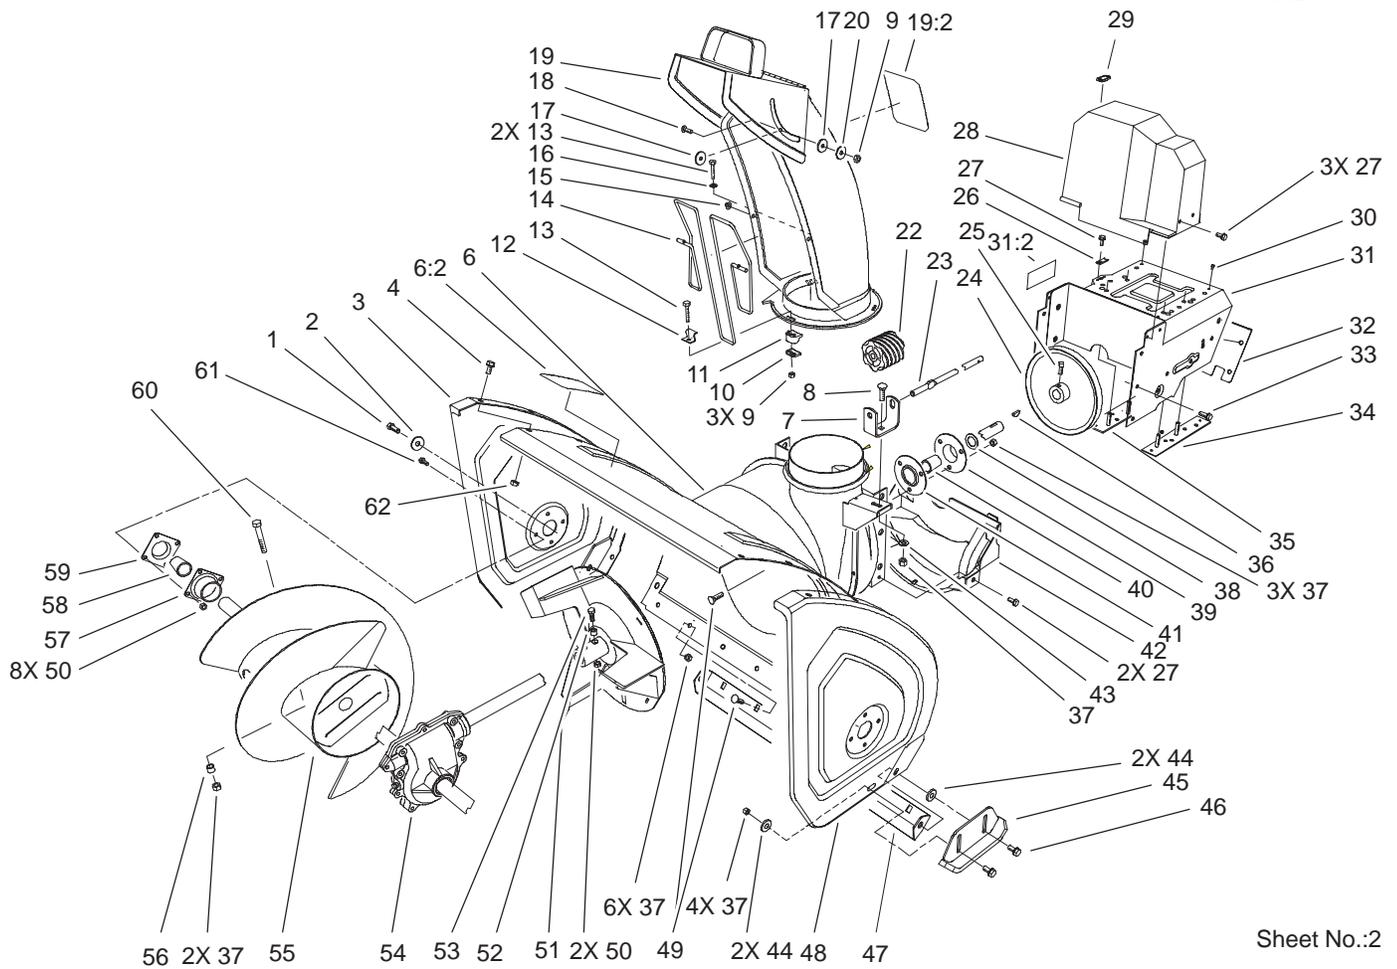


Sheet No.:2

Housing and Engine Frame Assembly

| Ref. No. | Part No. | Qty. | Description |
|----------|------------|------|-----------------------|
| 1 | 323-4 | 2 | Screw-HH |
| 2 | 3-0750 | 2 | Washer |
| 3 | 66-7821-01 | 1 | Plate-Side, RH |
| 4 | 3234-28 | 12 | Screw-HHF |
| 6 | 100-5458 | 1 | Auger Housing ASM |
| 6:2 | 94-2568 | 1 | Decal-Warning, Auger |
| 7 | 63-2180 | 1 | Bracket-Worm, Chute |
| 8 | 3230-2 | 1 | Bolt-CARR |
| 9 | 3296-2 | 4 | Nut-Lock |
| 10 | 63-2670 | 3 | Plate-Retainer, Chute |
| 11 | 62-1430 | 3 | Retainer-Chute |
| 12 | 63-3130 | 1 | Clip-Guard, Chute |
| 13 | 3274-13 | 3 | Screw-HSH |
| 14 | 63-3020 | 1 | Guard-Chute |
| 15 | 3290-326 | 2 | Nut-Push |
| 16 | 3256-14 | 1 | Washer-Flat |
| 17 | 63-2900 | 2 | Washer-Plastic |
| 18 | 32122-32 | 1 | Screw |
| 19 | 95-2662 | 1 | Chute |
| 19:2 | 94-2559 | 1 | Decal - Danger |
| 20 | 3256-61 | 1 | Washer-Flat |
| 22 | 62-0820 | 1 | Gear-Worm |
| 23 | 62-1720 | 1 | Rod-Chute, Lower |
| 24 | 62-1300 | 1 | Pulley-Impeller |
| 25 | 3242-4 | 2 | Screw-Set, SQH |
| 26 | 63-2300 | 1 | Retainer-Cable |

| Ref. No. | Part No. | Qty. | Description |
|----------|------------|------|---------------------|
| 27 | 32144-4 | 6 | Screw-HWH |
| 28 | 63-2080 | 1 | Cover-Belt, Upper |
| 29 | 63-3290 | 1 | Cover-Cable |
| 30 | 3269-23 | 4 | Rivet-Pop |
| 31 | 100-5451 | 1 | Engine Frame ASM |
| 31:2 | 94-2575 | 1 | Decal-Adjustment |
| 32 | 62-1440-01 | 1 | Cover-Frame, Engine |
| 33 | 32144-14 | 6 | Screw-HWH |
| 34 | 68-4110 | 1 | LH Frame Plate ASM |
| 35 | 68-4100 | 1 | RH Frame Plate ASM |
| 36 | 3257-23 | 1 | Key-Woodruff |
| 37 | 3296-29 | 16 | Nut-Lock, NI |
| 38 | 252-80 | 1 | Washer-Thrust |
| 39 | 26-6110 | 1 | Flange-Cup, Bearing |
| 40 | 63-3450 | 1 | Bearing-Ball |
| 41 | 26-6120 | 1 | Flange-Cup, Bearing |
| 42 | 68-8410 | 1 | Cover-Belt, Lower |
| 43 | 3256-23 | 1 | Washer-Flat |
| 44 | 52-2861 | 4 | Washer |
| 45 | 74-1440-01 | 2 | Skid ASM |
| 46 | 3234-5 | 4 | Screw |
| 47 | 66-7760-01 | 1 | Blade-Scraper |
| 48 | 66-7831-01 | 1 | Plate-Side, LH |
| 49 | 3230-23 | 11 | Screw-CARR |
| 50 | 3296-42 | 10 | Nut-Lock, NI |
| 51 | 66-7920-03 | 1 | Impeller-4 Blade |

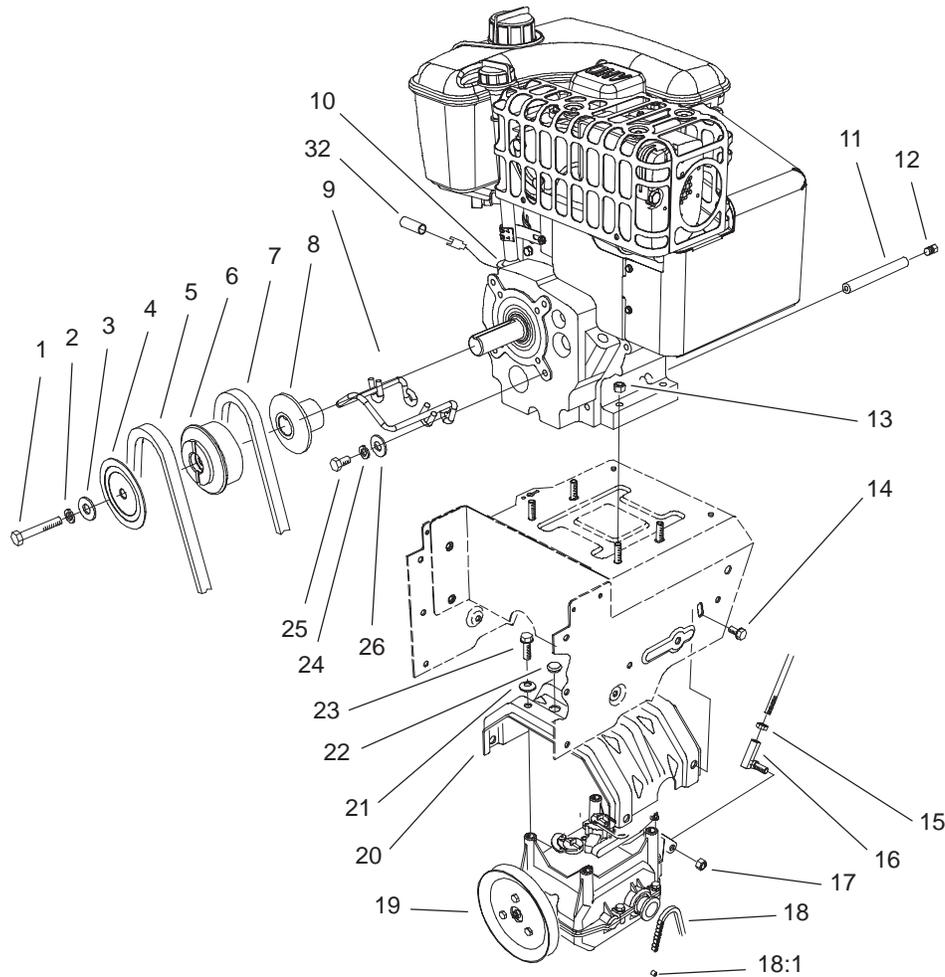


Sheet No.:3

Engine and Transmission Assembly

| Ref. No. | Part No. | Qty. | Description |
|----------|------------|------|---|
| 1 | 3212-8 | 1 | Screw-HH |
| 2 | 3253-6 | 1 | Washer-Lock |
| 3 | 3256-41 | 1 | Washer-Flat |
| 4 | 62-0940 | 1 | Sheave-Half, Impeller |
| 5 | 63-2967 | 1 | V Belt |
| 6 | 62-0930 | 1 | Pulley-Engine, Center |
| 7 | 63-2955 | 1 | V-Belt, Traction |
| 8 | 62-0920 | 1 | Sheave-Half, Traction |
| 9 | 100-3432 | 1 | Guide-Belt |
| ☆10 | | 1 | Engine-13hp Tecumseh Ohsk 130-223819e |
| 11 | 289-34 | 1 | Nipple-Pipe |
| 12 | 288-2 | 1 | Cap-Pipe |
| 13 | 32128-20 | 4 | Nut-HF |
| 14 | 3234-7 | 4 | Screw-HHF |
| 15 | 3220-3 | 1 | Nut-Jam |
| 16 | 78-2920 | 1 | Ball-Joint |
| 17 | 3296-6 | 1 | Nut-Lock, NI |
| 18 | 63-2930 | 1 | Chain |
| 18:1 | 2710-15 | 1 | Link-Offset |
| 19 | 66-8030 | 1 | Traction Gearcase ASM |
| 20 | 63-2990-03 | 1 | Transmission Frame ASM |
| 21 | 3290-461 | 4 | Washer-Spring |

| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|------------------------|
| 22 | 95-7947 | 2 | Cap-Plug |
| 23 | 11-0590 | 4 | Screw-HWH, Thd Form |
| 24 | 3253-4 | 2 | Washer-Lock |
| 25 | 3210-3 | 2 | Screw-HH |
| 26 | 3256-41 | 2 | Washer-Flat |


☆ Not serviced separately

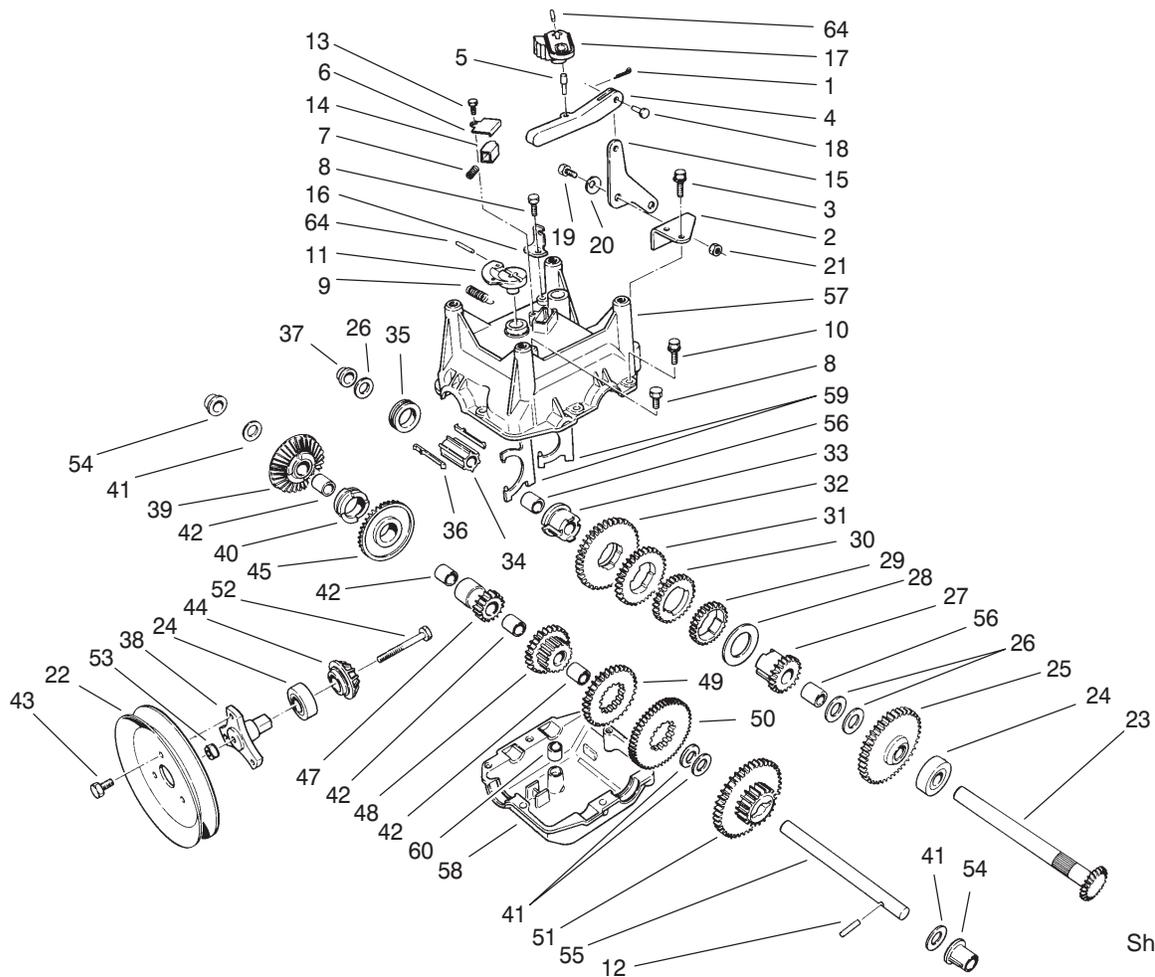

Sheet No.:A2

Traction Gearcase Assembly Part No. 66-8030


| Ref. No. | Part No. | Qty. | Description | Ref. No. | Part No. | Qty. | Description |
|----------|-----------|------|-----------------------|----------|----------|------|---------------------------|
| 1 | 3272-1 | 1 | Pin-Cotter | 27 | 62-0340 | 1 | Gear-Sleeve, 19 T |
| 2 | 62-1190 | 1 | Bracket-Bellcrank | 28 | 63-2280 | 1 | Washer-Thrust |
| 3 | 32104-95 | 2 | Screw-HWH | 29 | 62-0250 | 1 | Gear, 29 T |
| 4 | 62-0860 | 1 | Link-Shift, Gear | 30 | 62-0200 | 1 | Gear, 27 T |
| 5 | 63-2190 | 1 | Pin-Link, Gear Shift | 31 | 62-0220 | 1 | Gear, 34 T |
| 6 | 62-1690 | 1 | Cover-Detent | 32 | 62-0240 | 1 | Gear, 45 T |
| 7 | 63-2890 | 1 | Spring-Detent | 33 | 62-0320 | 1 | Sleeve-Gear |
| 8 | 32144-4 | 2 | Screw-HWH | 34 | 68-4320 | 1 | Sleeve-Shift |
| 9 | 63-2920 | 1 | Spring-Extension | 35 | 62-0430 | 1 | Collar-Shift |
| 10 | 32144-86 | 6 | Screw-HH | 36 | 62-0310 | 2 | Key-Shift |
| 11 | 62-0880 | 1 | Lever | 37 | 62-1180 | 1 | Bushing-Flange, Output |
| 12 | 32121-106 | 1 | Pin-Spring | 38 | 62-0380 | 1 | Hub-Pulley |
| 13 | 32104-71 | 1 | Screw-HWH | 39 | 67-5860 | 1 | Gear-Bevel, Rev, 36 T |
| 14 | 62-1020 | 1 | Button-Detent | 40 | 67-5880 | 1 | Collar-Shift |
| 15 | 63-2600 | 1 | Bellcrank | 41 | 257-10 | 4 | Washer-Thrust |
| 16 | 62-1740 | 1 | Bracket-Cable | 42 | 62-1160 | 4 | Bushing |
| 17 | 62-0870 | 1 | Lever-Shift, Gear | 43 | 12-3270 | 3 | Screw |
| 18 | 283-3 | 1 | Pin-Clevis | 44 | 62-0350 | 1 | Pinion-Bevel |
| 19 | 63-3410 | 1 | Screw-Shoulder | 45 | 67-5870 | 1 | Gear-Bevel, 36 T |
| 20 | 3290-477 | 1 | Washer-Curved | 47 | 62-0500 | 1 | Gear-Bevel, 15 T |
| 21 | 3296-42 | 1 | Nut-Lock, NI | 48 | 68-4310 | 1 | Gear, 26 T |
| 22 | 62-1310 | 1 | Traction-Sheave, Half | 49 | 62-0210 | 1 | Gear, 33 T |
| 23 | 62-1080 | 1 | Shaft-Output | 50 | 62-0260 | 1 | Gear, 51 T |
| 24 | 100-1048 | 2 | Bearing-Ball | 51 | 62-0360 | 1 | Gear, 19/41 T |
| 25 | 62-0370 | 1 | Gear, 41 T | 52 | 321-15 | 1 | Screw-HH |
| 26 | 252-59 | 3 | Bearing-Thrust | | | | |

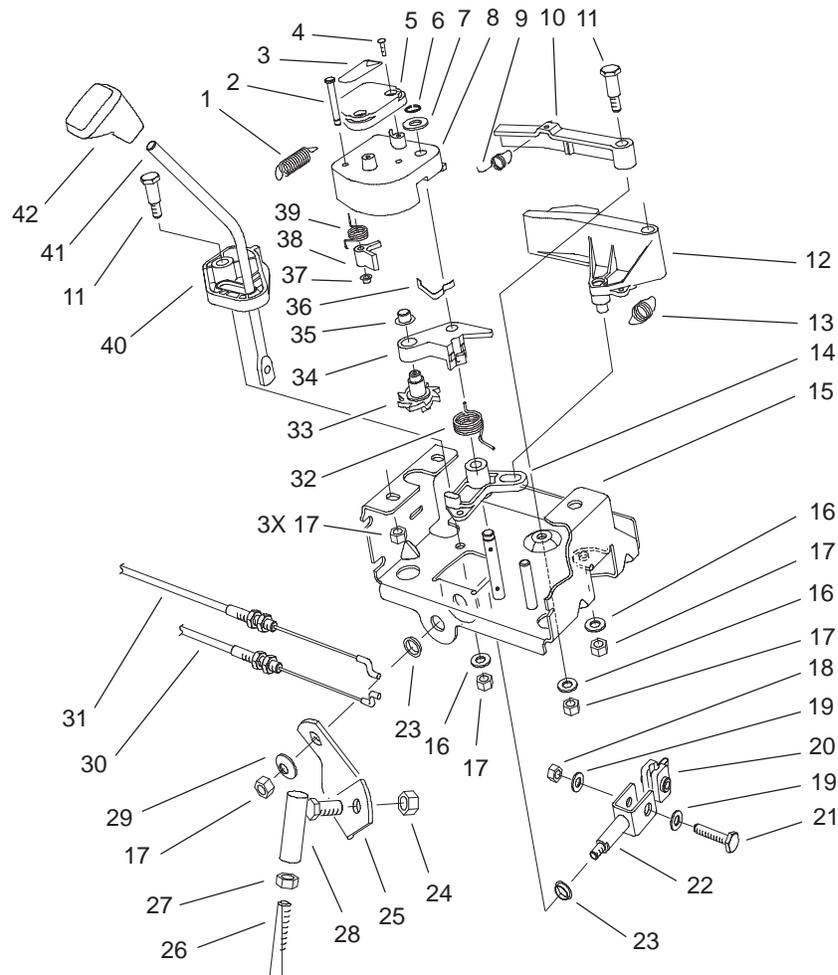

Sheet No.:4

Power Shift Control Assembly

| Ref. No. | Part No. | Qty. | Description | Ref. No. | Part No. | Qty. | Description |
|----------|------------|------|-----------------------|----------|----------|------|-----------------------|
| 1 | 63-2220 | 1 | Spring-Extension | 26 | 63-2830 | 1 | Rod-Bent Shift, Lower |
| 2 | 63-2610 | 1 | Pin-Tang | 27 | 3220-3 | 1 | Nut-Jam |
| 3 | 63-2480 | 1 | Decal-Number 2 | 28 | 78-2920 | 1 | Ball-Joint |
| 4 | 94-6961 | 2 | Screw | 29 | 3290-456 | 1 | Washer-Belleville |
| 5 | 62-1140 | 1 | Cover-Latch | 30 | 63-2210 | 1 | Cable-Gearbox |
| 6 | 32120-46 | 1 | Ring-Retaining | 31 | 63-2200 | 1 | Cable-Arm, Latch |
| 7 | 257-9 | 1 | Washer-Thrust | 32 | 63-2270 | 1 | Spring-Torsion |
| 8 | 62-1100 | 1 | Lever Latch | 33 | 62-0170 | 1 | Wheel-Index |
| 9 | 63-2240 | 1 | Spring-Extension | 34 | 62-1110 | 1 | Lever-Wheel, Index |
| 10 | 62-1700 | 1 | Lever-Lockout | 35 | 3290-320 | 1 | Retainer-Push On |
| 11 | 63-2650 | 2 | Screw-Shoulder | 36 | 62-1710 | 1 | Spring-Flat |
| 12 | 62-1130 | 1 | Lever-Reverse | 37 | 3290-422 | 1 | Nut-Push |
| 13 | 63-2230 | 1 | Spring-Extension | 38 | 62-0180 | 1 | Tang-Index |
| 14 | 62-1120 | 1 | Lever-Reverse, Switch | 39 | 62-1650 | 1 | Spring-Torsion |
| 15 | 63-2150-03 | 1 | Control Frame ASM | 40 | 62-1470 | 1 | Base-Lockout |
| 16 | 3256-23 | 3 | Washer-Flat | 41 | 67-9240 | 1 | Rod-Shift |
| 17 | 3296-29 | 7 | Nut-Lock, NI | 42 | 62-1290 | 1 | Knob-Shift |
| 18 | 3296-42 | 1 | Nut-Lock, NI | | | | |
| 19 | 3256-1 | 2 | Washer-Flat | | | | |
| 20 | 67-9250 | 1 | Retainer-Rod, Shift | | | | |
| 21 | 321-9 | 1 | Screw-HH | | | | |
| 22 | 66-7730 | 1 | Clevis ASM | | | | |
| 23 | 256-296 | 2 | Bushing | | | | |
| 24 | 3296-6 | 1 | Nut-Lock, NI | | | | |
| 25 | 63-2630 | 1 | Bracket-Shift | | | | |

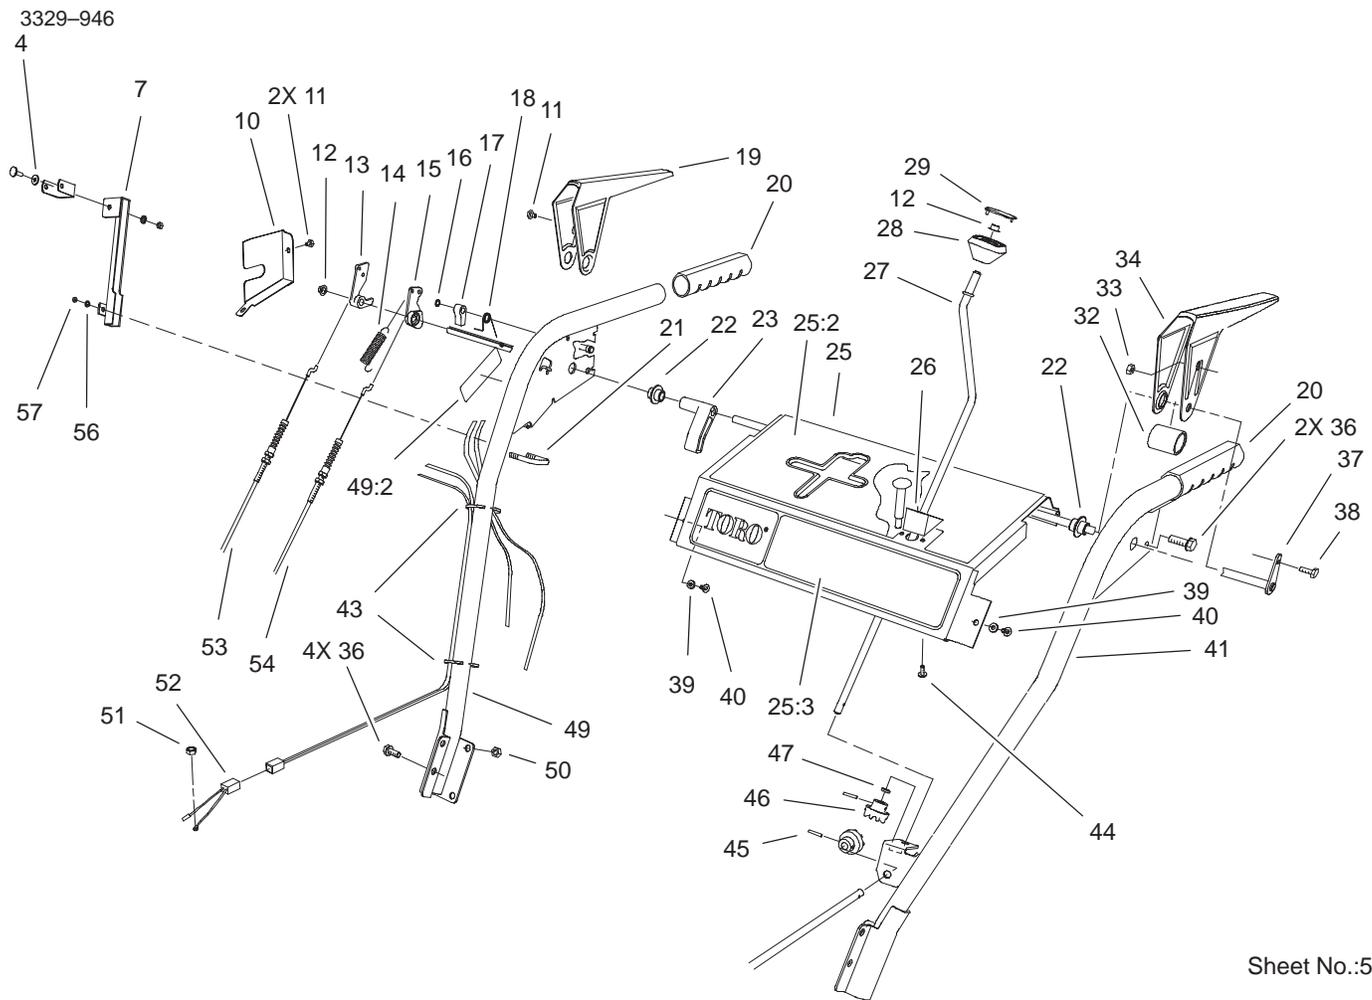


Sheet No.:5

Handle and Control Assembly

| Ref. No. | Part No. | Qty. | Description |
|----------|------------|------|---------------------------|
| 4 | 3256-26 | 1 | Washer-Flat |
| 7 | 68-7110-03 | 1 | Mount-Light |
| 10 | 63-2170-03 | 1 | Cover-Lock, Lever |
| 11 | 2210-250 | 3 | Screw-HH |
| 12 | 3290-320 | 2 | Retainer-Push On |
| 13 | 62-0300 | 1 | Tang-Locking |
| 14 | 88-0810 | 1 | Spring-Extension |
| 15 | 62-0290 | 1 | Cam-Release |
| 16 | 32151-66 | 1 | E-Ring-Retainer |
| 17 | 62-0280 | 1 | Latch-Locking |
| 18 | 63-2910 | 1 | Spring-Torsion |
| 19 | 62-1050-03 | 1 | Lever-Traction, RH |
| 20 | 66-7850 | 2 | Grip-Handle |
| 21 | 68-7140 | 1 | U-Bolt |
| 22 | 62-1070 | 2 | Bushing-Lever |
| 23 | 62-1640 | 1 | Lever-Trip |
| 25 | 100-3579 | 1 | Control Panel ASM |
| 25:2 | 99-3229 | 1 | Decal-Control |
| 25:3 | 100-3440 | 1 | Decal - Front Panel |
| 26 | 62-1490 | 1 | Plate-Guide |
| 27 | 63-2160 | 1 | Crank-Rod, Chute |
| 28 | 62-1320 | 1 | Knob-Control, Chute |
| 29 | 62-1520 | 1 | Cover-Knob |
| 32 | 63-3380 | 1 | Spacer-Lever, Traction |
| 33 | 3296-2 | 1 | Nut-Lock |

| Ref. No. | Part No. | Qty. | Description |
|----------|------------|------|--------------------|
| 34 | 62-1060-03 | 1 | Lever-Traction, LH |
| 36 | 32144-14 | 6 | Screw-HWH |
| 37 | 63-2030 | 1 | Cross Rod ASM |
| 38 | 3290-359 | 1 | Screw-HWH |
| 39 | 3256-14 | 2 | Washer-Flat |
| 40 | 32104-76 | 2 | Screw |
| 41 | 66-8091-03 | 1 | LH Handle ASM |
| 43 | 3290-378 | 2 | Tie-Cable |
| 44 | 94-6961 | 2 | Screw |
| 45 | 32121-50 | 2 | Pin-Spring |
| 46 | 62-1460 | 2 | Gear-Universal |
| 47 | 62-1230 | 1 | Washer-Rubber |
| 49 | 100-3598 | 1 | Handle ASM |
| 49:2 | 94-2575 | 1 | Decal-Adjustment |
| 50 | 3296-47 | 4 | Nut-Lock, NI |
| 51 | 3217-6 | 1 | Nut-Hex |
| 52 | 54-9810 | 1 | Wire ASM |
| 53 | 63-2700 | 1 | Cable-Impeller |
| 54 | 63-2710 | 1 | Cable-Traction |
| 56 | 3256-23 | 2 | Washer-Flat |
| 57 | 3296-29 | 2 | Nut-Lock, NI |

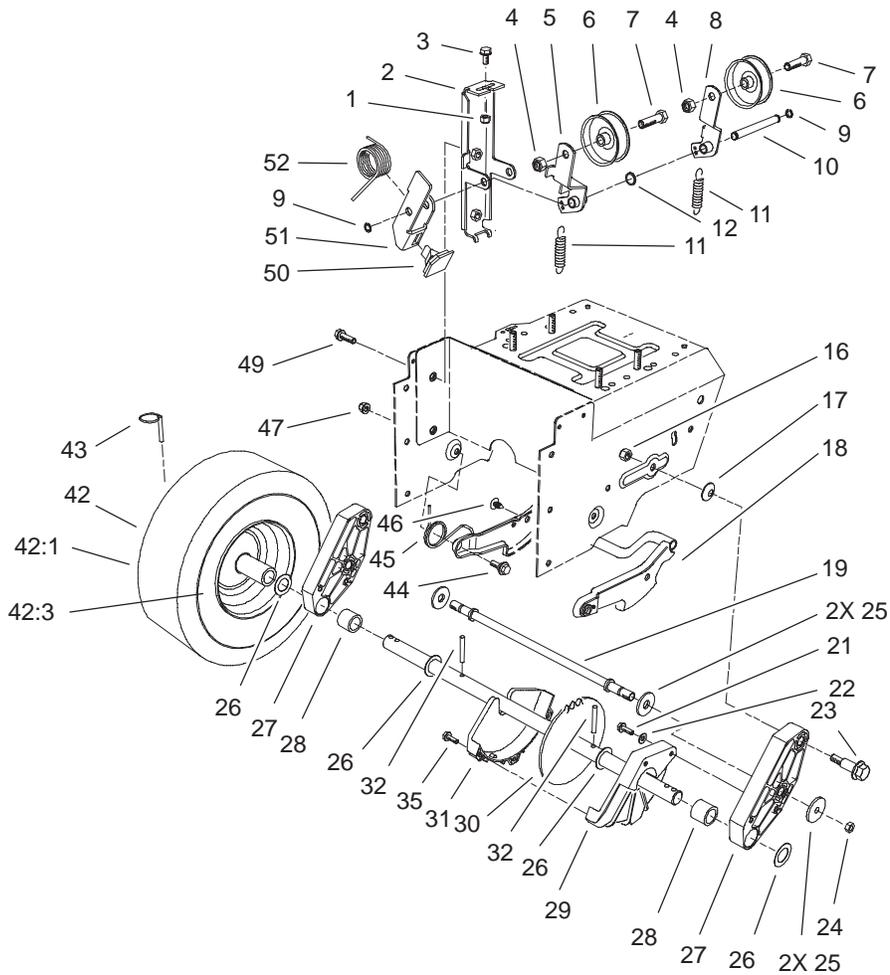


Sheet No.:6

Lower Traction Assembly

| Ref. No. | Part No. | Qty. | Description |
|----------|------------|------|------------------------|
| 1 | 3296-42 | 1 | Nut-Lock, NI |
| 2 | 63-2850 | 1 | Idler Arm Bracket ASM |
| 3 | 3234-13 | 1 | Screw-HHF |
| 4 | 3296-59 | 2 | Nut-Lock, NI |
| 5 | 93-8046 | 1 | Impeller Idler Arm ASM |
| 6 | 3-4244 | 2 | Pulley-Idler |
| 7 | 323-7 | 2 | Screw-HH |
| 8 | 93-8045 | 1 | Traction Idler Arm ASM |
| 9 | 32120-46 | 2 | Ring-Retaining |
| 10 | 62-0970 | 1 | Pin-Idler |
| 11 | 63-2870 | 2 | Spring-Extension |
| 12 | 3256-38 | 1 | Washer-Flat |
| 16 | 3296-39 | 2 | Nut-Lock, NI |
| 17 | 3290-461 | 2 | Washer-Spring |
| 18 | 62-0470-03 | 1 | Latch ASM |
| 19 | 66-7720 | 1 | Rod-Latch |
| 21 | 32144-4 | 2 | Screw-HWH |
| 22 | 3256-1 | 2 | Washer-Flat |
| 23 | 62-1330 | 2 | Bolt-Shoulder |
| 24 | 3296-23 | 2 | Nut-Lock, NI |
| 25 | 63-3340 | 4 | Washer-Support |
| 26 | 252-80 | 4 | Washer-Thrust |
| 27 | 66-7740 | 2 | Pivot Arm ASM |
| 28 | 63-2250 | 2 | Bushing-Axle |

| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-----------------------|
| 29 | 62-1010 | 1 | Guard-Chain, LH |
| 30 | 63-2112 | 1 | Axle |
| 31 | 62-1000 | 1 | Guard-Chain, RH |
| 32 | 32121-9 | 2 | Pin-Spring |
| 35 | 94-4496 | 3 | Screw-PPH |
| 42 | 67-9230 | 2 | Wheel & Tire Assembly |
| 42:1 | 231-123 | 1 | Tire |
| *42:2 | 232-48 | 1 | Inner Tube |
| 42:3 | 241-127 | 1 | Rim-Wheel |
| 43 | 3290-243 | 2 | Pin-Lynch |
| 44 | 5-2490 | 2 | Screw-Shoulder |
| 45 | 63-2740 | 1 | Spring-Latch, Torsion |
| 46 | 3290-476 | 1 | Fastener-Panel |
| 47 | 3296-47 | 2 | Nut-Lock, NI |
| 49 | 3234-7 | 2 | Screw-HHF |
| 50 | 66-8060 | 1 | Pad-Brake |
| 51 | 63-2820 | 1 | Arm-Brake |
| 52 | 100-5474 | 1 | Spring-Torsion |

* Not illustrated

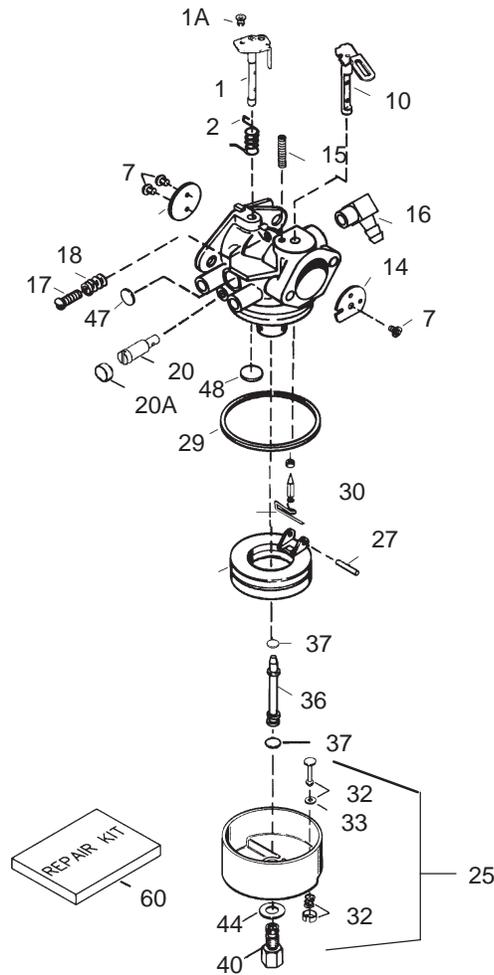

Sheet No.:

Carburetor Assembly Part No. 640105

| Ref. No. | Part No. | Qty. | Description | Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------------------------------|----------|----------|------|-------------------------------|
| 1 | 632787 | 1 | Throttle Shaft & Lever ASM | 33 | 27554 | 1 | Drain Plunger Gasket |
| 1A | 36288 | 1 | Bushing | 36 | 640005 | 1 | Main Nozzle Tube |
| 2 | 631970 | 1 | Throttle Return Spring | 37 | 632547 | 2 | O-Ring, Main Nozzle Tube |
| 6 | 640107 | 1 | Throttle Shutter | 40 | 640106 | 1 | High Speed Bowl Nut |
| 7 | 650506 | 4 | Shutter Screw | 44 | 27110A | 1 | Bowl Nut Washer |
| 10 | 632513 | 1 | Choke Shaft & Lever ASM | 47 | 630748 | 1 | Welch Plug, Idle Mixture Well |
| 14 | 632429A | 1 | Choke Shutter | 48 | 631027 | 1 | Welch Plug, Vent |
| 15 | 630735 | 1 | Choke Positioning Spring | 60 | 632760 | 1 | Repair Kit |
| 16 | 632527 | 1 | Fuel Fitting | | | | |
| 17 | 651025 | 1 | Idle Speed Screw | | | | |
| 18 | 630766 | 1 | Tension Spring | | | | |
| 20 | 640016 | 1 | Idle Restrictor Screw | | | | |
| 20A | 640053 | 1 | Idle Restrictor Screw Cap | | | | |
| 25 | 632594A | 1 | Float Bowl ASM (Incl. 32 & 33) | | | | |
| 27 | 631024 | 1 | Float Shaft | | | | |
| 28 | 632802 | 1 | Float | | | | |
| 29 | 631028 | 1 | Float Bowl O-Ring | | | | |
| 30 | 631021 | 1 | Inlet Needle, Seat, Clip (Incl. 31) | | | | |
| 31 | 631022 | 1 | Spring Clip | | | | |
| 32 | 27136 | 1 | Bowl Drain ASM | | | | |

Obtain Parts from Local Tecumseh Dealer.

Tecumseh Engine Assembly

Model No. OHSK130-223819E

| Ref. No. | Part No. | Qty. | Description | Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|--|----------|----------|------|-----------------------------------|
| 1 | 37083 | 1 | Cylinder (Incl. 2, 20, 72 & 80) | 80 | 35751 | 1 | Governor Shaft |
| 2 | 27652 | 2 | Dowel Pin | 81 | 35479 | 2 | Washer |
| 3 | 650820 | 2 | Screw, 1/4-20 x1/2" | 82 | 35321 | 1 | Governor Gear ASM |
| 14 | 28277 | 1 | Washer | 83 | 35322 | 1 | Governor Spool |
| 14A | 651057 | 1 | Washer | 84 | 29193 | 1 | Retaining Ring |
| 15 | 35685 | 1 | Governor Rod (Incl. 14 & 38) | 86 | 650833 | 7 | Screw, 1/4-20 x 1-3/16" |
| 16 | 35686A | 1 | Governor Lever (Incl. 212A) | 87 | 650832 | 1 | Screw, 1/4-20 x 1-11/16" |
| 17 | 29916 | 1 | Governor Lever Clamp | 89 | 32589 | 1 | Flywheel Key |
| 18 | 651028 | 1 | Screw -Torx T-15, 8-32 x 3/8" | 90 | 611094 | 1 | Flywheel (W/Ring Gear) |
| 19 | 35688 | 1 | Throttle Spring | 92 | 650880 | 1 | Lock Washer |
| 20 | 35319 | 1 | Oil Seal | 93 | 650881 | 1 | Flywheel Nut |
| 25 | 36460 | 1 | Blower Housing Baffle | 100 | 35135A | 1 | Solid State Ignition |
| 26 | 650561 | 2 | Screw, 1/4-20 x 5/8" | 101 | 610118 | 1 | Spark Plug Cover |
| 28 | 30322 | 1 | Lock Nut, 10-32 | 102 | 651024 | 2 | Solid State Mounting Stud |
| 30 | 36706 | 1 | Crankshaft | 103 | 651007 | 2 | Screw - Torx T-15, 10-24 x 15/16" |
| 31 | 35327 | 1 | Counterbalance Gear | 110 | 35187 | 1 | Ground Wire |
| 35 | 29826 | 1 | Screw, 10-32 x 3/4" | 110A | 37047 | 1 | Ground Wire |
| 36 | 29918 | 1 | Lock Washer | 119 | 36932 | 1 | Cylinder Head Gasket |
| 37 | 29216 | 1 | Lock Nut, 10-32 | 120 | 37491 | 1 | Cylinder Head (Incl. 151A) |
| 38 | 29642 | 3 | Retaining Ring | 125 | 36934 | 1 | Exhaust Valve (Std.) |
| 40 | 35776A | 1 | Piston, Pin & Ring Set (Std.) | 125 | 36936 | 1 | Exhaust Valve (1/32 OS) |
| 40 | 35777A | 1 | Piston, Pin & Ring Set (.010" OS) | 126 | 36935 | 1 | Intake Valve (Std.) |
| 40 | 35778A | 1 | Piston, Pin & Ring Set (.020" OS) | 127 | 650691 | 6 | Washer |
| 41 | 35773A | 1 | Piston & Pin Ass'y (Std.) (Incl. 43) | 128 | 650690 | 6 | Belleville Washer |
| 41 | 35774A | 1 | Piston & Pin Ass'y (.010" OS) (Incl. 43) | 130 | 650697A | 6 | Screw, 5/16-18 x 2-12" |
| 41 | 35775A | 1 | Piston & Pin Ass'y (.020" OS) (Incl. 43) | 135 | 34645 | 1 | Spark Plug (RN4C) |
| 42 | 35779 | 1 | Ring Set (Std.) | 150 | 33507 | 2 | Valve Spring |
| 42 | 35780 | 1 | Ring Set (.010" OS) | 151 | 33508 | 2 | Valve Spring Keeper |
| 42 | 35781 | 1 | Ring Set (.020" OS) | 151A | 35862 | 1 | Intake Valve Seal |
| 43 | 35772 | 2 | Piston Pin Retaining Ring | 153 | 35949 | 1 | Push Rod Guide |
| 45 | 36898 | 1 | Connecting Rod ASM (Incl. 47) | 154 | 650945 | 2 | Rocker Arm Stud |
| 47 | 651033 | 2 | Connecting Rod Bolt | 155 | 35950 | 2 | Rocker Arm |
| 48 | 35313 | 2 | Valve Lifter | 157 | 650947 | 2 | Jam Nut |
| 50 | 35682A | 1 | Camshaft (MCR) | 158 | 35466 | 2 | Push Rod |
| 51 | 35315A | 1 | Counterbalance Weight | 159 | 35952 | 1 | Rocker Arm Cover Gasket |
| 60 | 35316A | 1 | Blower Housing Extension | 160 | 35953A | 1 | Rocker Arm Cover |
| 65 | 30200 | 1 | Screw, 10-24 x 9/16" | 161 | 30063 | 4 | Screw - Torx T-30, 1/4-20 x 1/2" |
| 66 | 30063 | 1 | Screw - Torx, t-30, 1/4-20 x1/2" | 163 | 650890 | 2 | Lock Washer |
| 69 | 35683 | 1 | Cylinder Cover Gasket | 169 | 27896A | 2 | Valve Cover Gasket |
| 70 | 35684A | 1 | Cylinder Cover (Incl. 14,15,38,71,75) | 170 | 28423 | 1 | Breather Body |
| 71 | 35377 | 1 | Crankshaft Bushing | 171 | 28424 | 1 | Breather Element |
| 72 | 27642 | 1 | Oil Drain Plug | 172 | 28425 | 1 | Valve Cover |
| 75 | 35319 | 1 | Oil Seal | 173 | 35350 | 1 | Breather Tube |
| | | | | 174 | 650128 | 2 | Screw, 10-24 x 1/2" |
| | | | | 180 | 37101 | 1 | Blower Housing Extension |
| | | | | 181 | 30200 | 2 | Lock Nut, 10-32 |

Obtain Parts from Local Tecumseh Dealer.

Tecumseh Engine Assembly Model No. OHSK130-223819E (continued)

| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|--|
| 182 | 650517 | 2 | Screw – Torx T-30, 1/4-20 x 27/32" |
| 183 | 34583A | 1 | Choke Bracket |
| 184 | 33263 | 1 | Carburetor To Intake Pipe Gasket |
| 185 | 37085 | 1 | Intake Pipe |
| 186 | 35691 | 1 | Governor Link |
| 186B | 36653 | 1 | Choke Spring |
| 200 | 35702 | 1 | Control Bracket (Incl. 203 & 204) |
| 202 | 36482 | 1 | Compression Spring |
| 203 | 31342 | 1 | Compression Spring |
| 204 | 651029 | 1 | Screw – Torx T-10, 5-40 x 7/16" |
| 205 | 651019 | 1 | Screw – Torx T-10, 6-32 x 41/64" |
| 206 | 610973 | 1 | Terminal |
| 207 | 35692 | 1 | Choke Link |
| 209 | 650821 | 2 | Screw |
| 212 | 30773A | 1 | Bushing |
| 212A | 36288 | 1 | Bushing |
| 213 | 650930 | 1 | Screw, 10-32 x 5/8" |
| 215 | 35438 | 1 | Control Knob |
| 216 | 35679 | 1 | R.P.M. Adjusting Lever |
| 219 | 35689 | 1 | Choke Rod |
| 220 | 35440 | 1 | Choke Knob |
| 222 | 28820 | 2 | Screw, 10-32 x 1/2" |
| 223 | 650971 | 2 | Screw – Torx T-30, 5/16-18 x 7/8" |
| 224 | 33515A | 1 | Intake Pipe Gasket |
| 260 | 37092A | 1 | Blower Housing |
| 261 | 650738 | 1 | Screw, 1/4-20 x 5/8" |
| 262 | 29747B | 2 | Screw – Torx T-40, 5/16-24 x 21/32" |
| 264A | 30063 | 1 | Screw – Torx T-30, 1/4-20 x 1/2" |
| 265 | 37086 | 1 | Cylinder Head Cover |
| 266 | 650876 | 2 | Screw, 5/16-18 x 1-9/32 |
| 269 | 35762 | 2 | Exhaust Gasket |
| 270 | 37263 | 1 | Manifold |
| 270A | 35829A | 1 | Exhaust Port Liner |
| 271 | 35293 | 1 | Locking Plate (Manifold) |
| 275 | 37264 | 1 | Muffler |
| 276 | 35348 | 1 | Locking Plate |
| 277 | 650877 | 2 | Screw, 5/16-18 x 4-12" |
| 279 | 650821 | 4 | Screw, 10-32 x 1/2" |
| 280 | 37265 | 1 | Heat Shield |
| 280A | 37106 | 1 | Radiation Heat Shield |
| 281 | 33013 | 1 | Starter Bubble Cover |
| 282 | 650760 | 1 | Screw, 8-12 x 3/8" |
| 285 | 35985B | 1 | Starter Cup |
| 287 | 29752 | 4 | Nut & Lock Washer, 1/4-28 |
| 290 | 30962 | 1 | Fuel Line |

| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|--|
| 291 | 29774 | 1 | Fuel Line |
| 292 | 26460 | 4 | Fuel Line Clamp |
| 295 | 35857 | 1 | Fuel Shut-Off Valve |
| 298 | 650665 | 2 | Screw, 1/4-15 x 3/4" |
| 300 | 37099 | 1 | Fuel Tank (Incl. 292 & 301) |
| 301 | 36246 | 1 | Fuel Cap |
| 302 | 37098 | 1 | Fuel Tank Extension |
| 302A | 650821 | 3 | Screw, 10-32 x 1/2" |
| 305 | 35574 | 1 | Oil Fill Tube |
| 307 | 35499 | 1 | O-Ring |
| 308 | 35539 | 1 | Fill Tube Clip |
| 310 | 35700 | 1 | Dipstick |
| 314 | 650873 | 1 | Screw, 1/4-20 x 3/4" |
| 315 | 611104 | 1 | Alternator Coil (3/5) (Incl. 321-323) |
| 321 | 611161 | 1 | Diode |
| 322 | 611142 | 1 | Connector Body |
| 323 | 611118 | 2 | Terminal |
| 328 | 35062 | 2 | Ignition Keys |
| 329 | 610973 | 1 | Terminal |
| 335 | 37096 | 1 | Carburetor Cover |
| 335A | 37087 | 1 | Carburetor Cover |
| 338 | 650821 | 4 | Screw, 10-32 x 1/2" |
| 341 | 37093 | 1 | Fuel Tank Bracket |
| 342 | 792028 | 2 | Screw, 5/16-18 x 7/8" |
| 343 | 35079A | 1 | Key Switch Bracket |
| 343A | 651060 | 1 | Screw, 10-32 x 23/64" |
| 345 | 37097 | 1 | Heat Baffle |
| 345A | 650821 | 1 | Screw, 10-32 x 1/2" |
| 350 | 570682A | 1 | Primer Assembly |
| 351 | 32180C | 1 | Primer Line |
| 355 | 590574 | 1 | Starter Handle |
| 370C | 36501 | 1 | Primer Decal |
| 370I | 37119 | 1 | Warning Decal |
| 370J | 37226 | 1 | Throttle Decal |
| 370K | 36695 | 1 | Starter Decal |
| 380 | 640105 | 1 | Carburetor (Incl. Ref.# 184) |
| 390 | 590749 | 1 | Rewind Starter (Note: This engine could have been built with 590733 starter.) |
| 396 | 37105 | 1 | Electric Starter Motor (Optional) (110 Volt) |
| 400 | 36947B | 1 | Gasket Set |
| 420 | 730226A | 1 | SAE 5W30 4-Cycle Engine Oil (Quart) |
| | 758216 | 1 | Short Block |

Obtain Parts from Local Tecumseh Dealer.

