



Form No. 3439-527 Rev D

**Count on it.**

# Parts Catalog

## Power TRX Commercial 1432 OHXE Snowthrower

Model No. 38891—Serial No. 400000000 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

Main Frame Assembly . . . . . 4

Traction Frame Assembly . . . . . 6

Auger Drive Assembly . . . . . 8

Belt Drive Assembly . . . . . 10

Gear Case Assembly . . . . . 12

Auger Gear Case Assembly No. 136-6620 . . . . . 14

Engine Assembly . . . . . 16

Fuel Systems and Carburetor Assembly . . . . . 18

Intake and Exhaust Assembly . . . . . 20

Ignition and Electrical Assembly . . . . . 22

Crankcase Assembly . . . . . 24

Governor Assembly . . . . . 26

Piston and Head Assembly . . . . . 28

Blower Housing and Shrouds Assembly . . . . . 30

Engine Decal Assembly . . . . . 32

Chute Assembly . . . . . 34

Chute Control Assembly . . . . . 36

Traction Control Assembly . . . . . 38

 
Handle Assembly . . . . . 40

Hydrostatic Drive Assembly . . . . . 42

Track Drive Assembly . . . . . 44

Attachments and Accessories . . . . . 46


# Main Frame Assembly

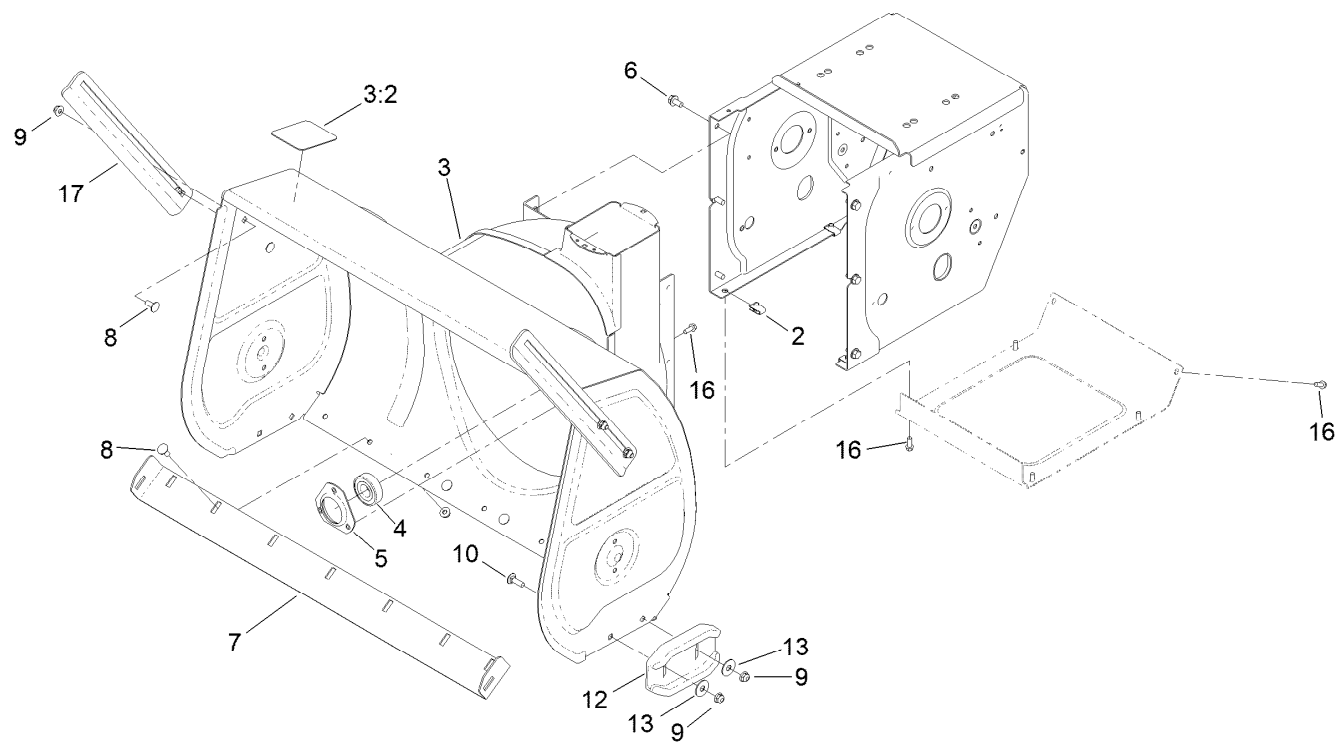

## Main Frame Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|---------------------|
| 2           | 107069             | 8           | Clip                | 8           | 137-3061           | 11          | Bolt-CARR           |
| 3           | 139-1563           | 1           | Auger Housing ASM   | 9           | 119-4041           | 15          | Nut-HF              |
| 3:2         | 121-6817           | 1           | Decal-Danger, Auger | 10          | 110-3144           | 4           | Bolt-CARR           |
| 4           | 136-6571           | 1           | Bearing-Ball        | 12          | 120-3098-03        | 2           | Skid-Cast           |
| 5           | 136-6573           | 1           | Retainer-Bearing    | 13          | 119-4150           | 4           | Washer-Flat         |
| 6           | 32144-14           | 6           | Screw-HWHTF         | 16          | 32144-85           | 11          | Screw-HWH Thd Form  |
| 7           | 136-6602-01        | 1           | Blade-Scraper       | 17          | 121-1228-03        | 2           | Breaker-Drift, Side |
 
# Traction Frame Assembly

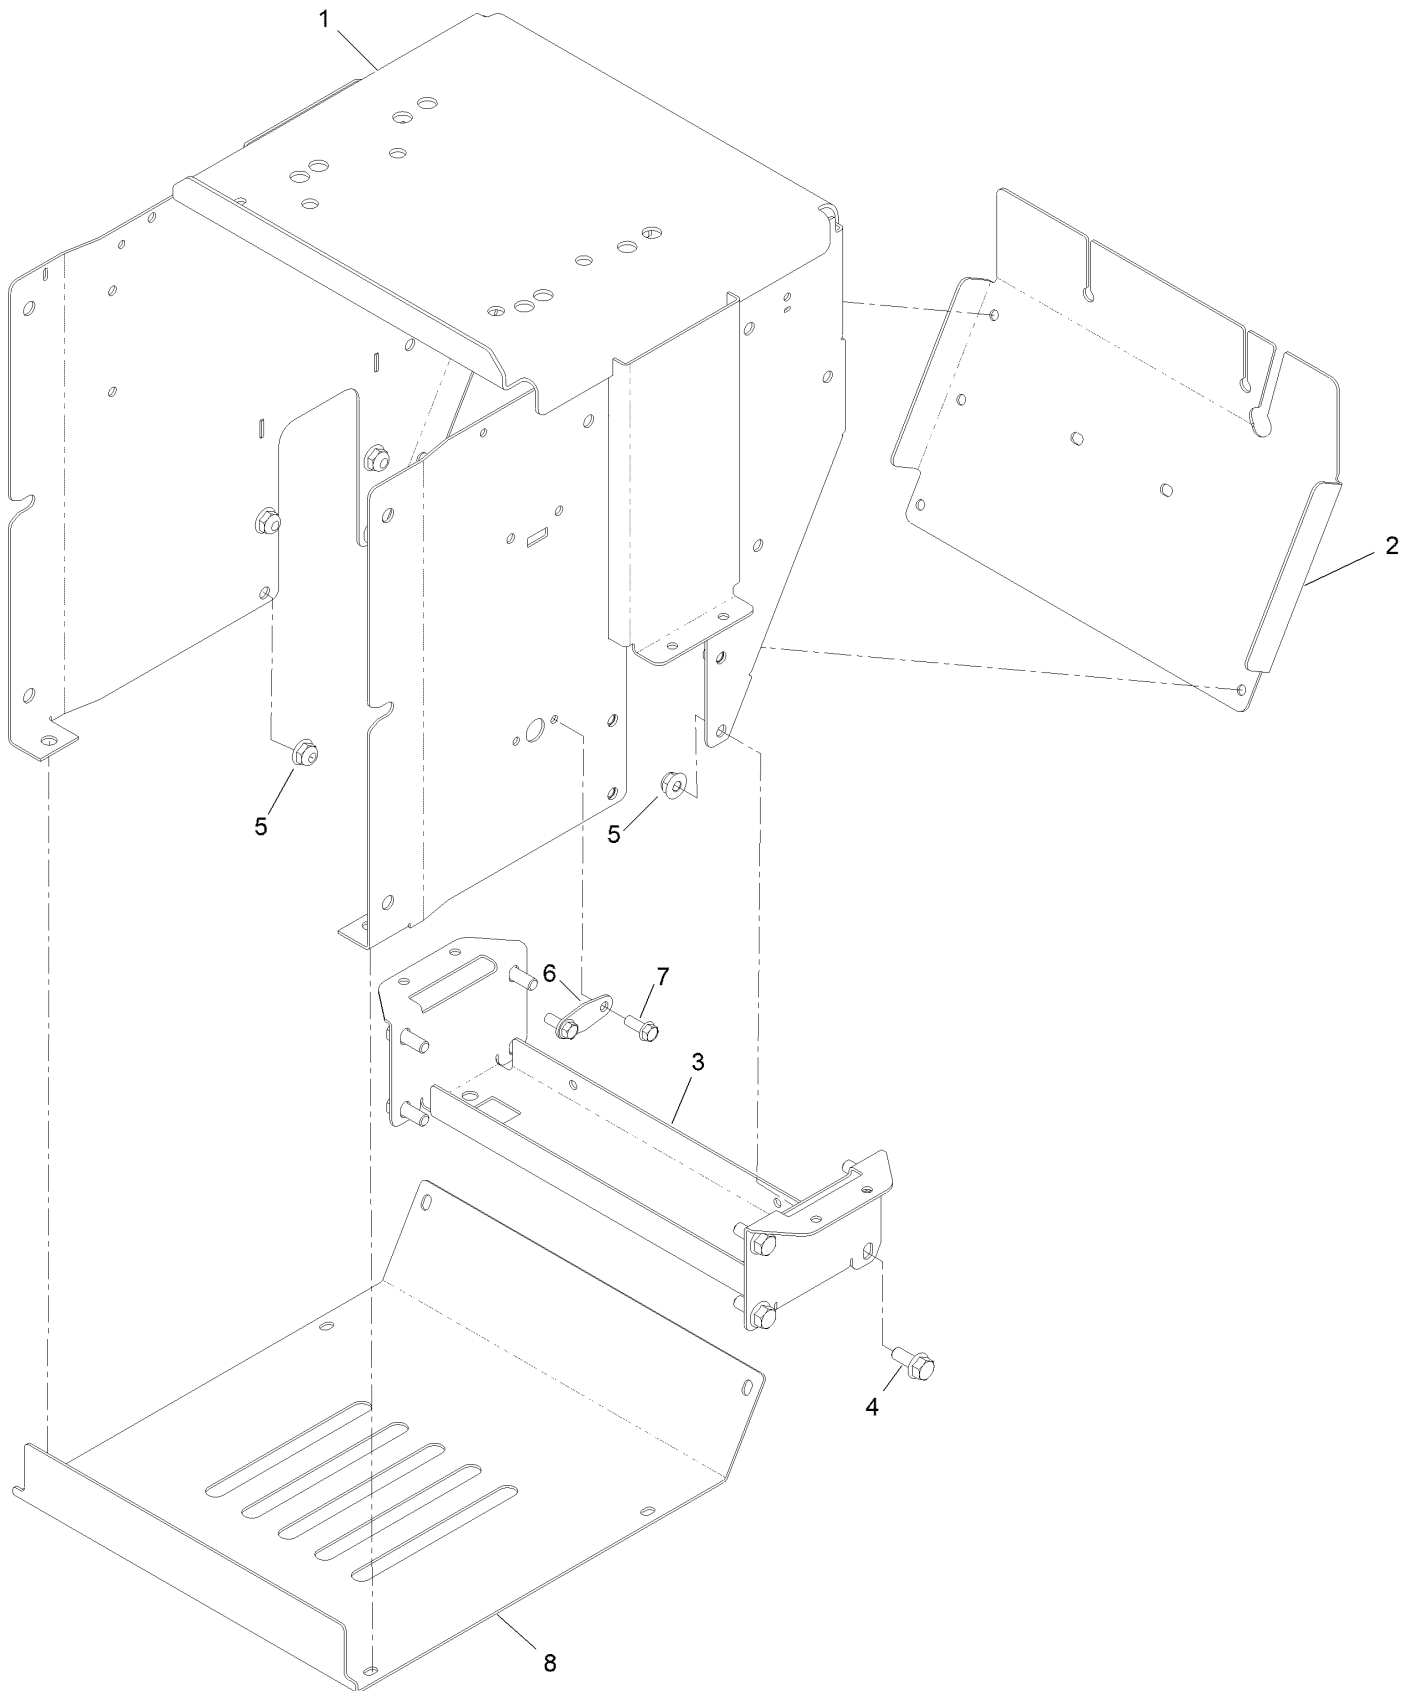


## Traction Frame Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 140-7904-01        | 1           | Frame-Traction     |
| 2           | 140-7916-01        | 1           | Cover-Rear         |
| 3           | 140-7915-01        | 1           | Brace-Frame, Lower |
| 4           | 139-2598           | 8           | Screw-HHF          |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|---------------------|
| 5           | 119-4041           | 8           | Nut-HF              |
| 6           | 140-7934-03        | 1           | Cover-Lock, Neutral |
| 7           | 32144-85           | 2           | Screw-HWH Thd Form  |
| 8           | 145-1654-01        | 1           | Cover-Bottom        |
 
# Auger Drive Assembly

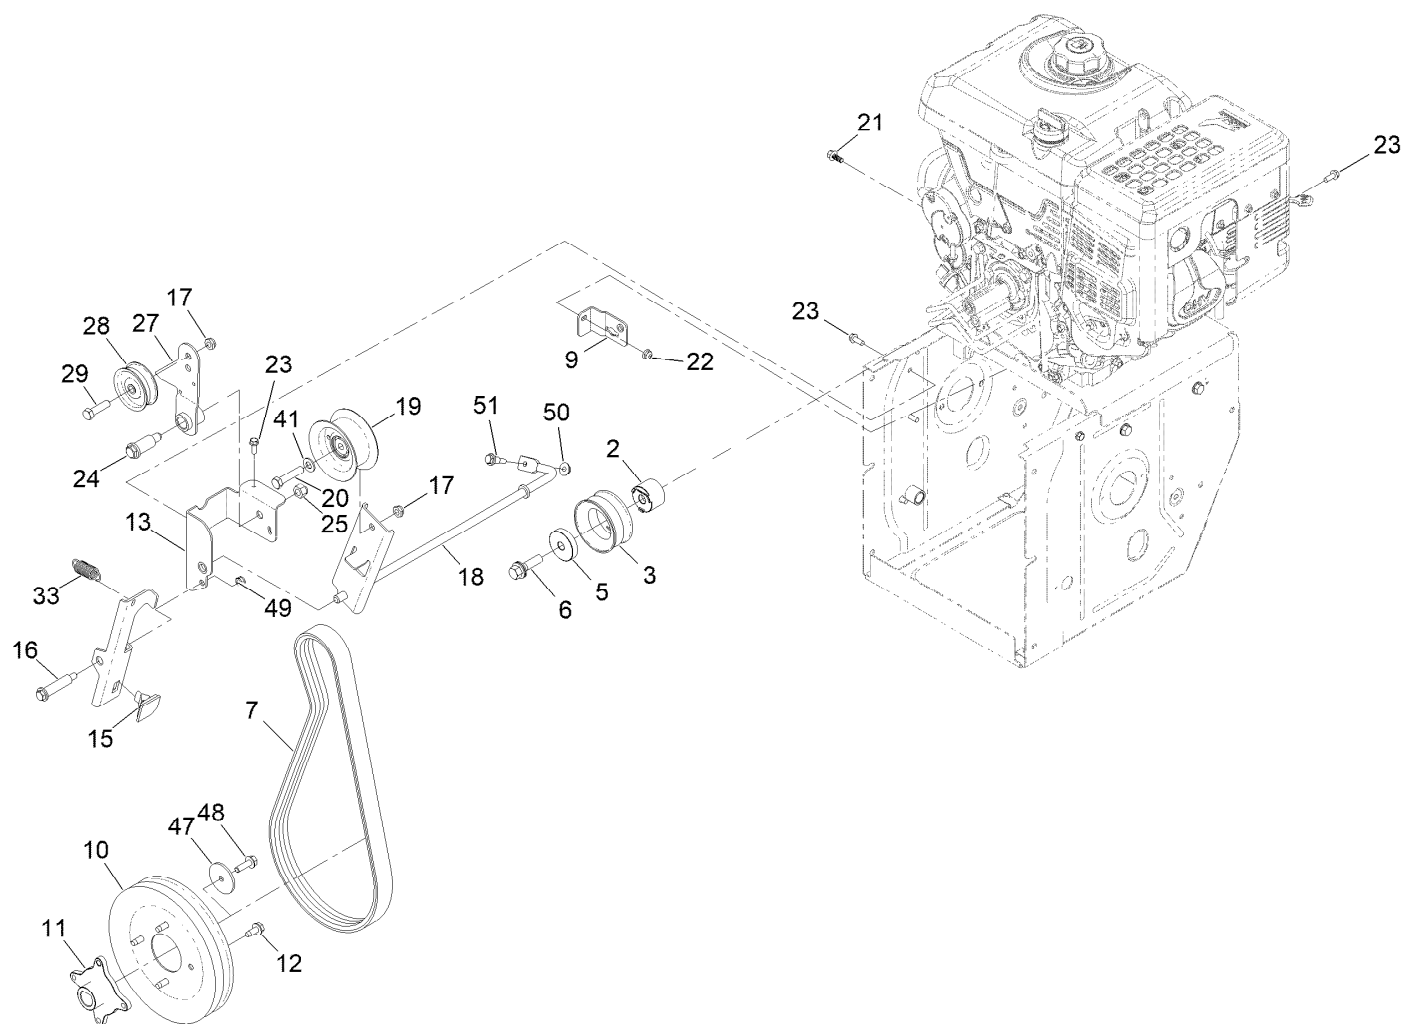




## Auger Drive Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>             | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|--------------------------------|-------------|--------------------|-------------|---------------------|
| 2           | 136-6691           | 1           | Pulley-Spacer                  | 20          | 138-0722           | 1           | Screw-HH            |
| 3           | 136-6690           | 1           | Pulley-Impeller, Double Sheave | 21          | 137-3111           | 1           | Screw-HHF           |
| 5           | 138-3662           | 1           | Support-Pulley                 | 22          | 137-3005           | 1           | Nut-HF              |
| 6           | 125-2466           | 1           | Bolt-Blade                     | 23          | 32144-85           | 9           | Screw-HWH Thd Form  |
| 7           | 136-6504           | 1           | Belt-V                         | 24          | 136-7116           | 1           | Bolt-Shoulder       |
| 9           | 136-8654-03        | 1           | Bracket-Clutch, Impeller       | 25          | 137-3095           | 1           | Nut-Hex             |
| 10          | 136-6557           | 1           | Pulley-Impeller, Double Sheave | 27          | 136-7186           | 1           | Arm-Idler, Traction |
| 11          | 136-6558           | 1           | Hub-Pulley                     | 28          | 3-4244             | 1           | Pulley-Idler        |
| 12          | 32144-70           | 4           | Screw-HWHTF                    | 29          | 137-3065           | 1           | Screw-HH            |
| 13          | 136-8671-03        | 1           | Bracket-Brake, Clutch          | 33          | 107-1045           | 1           | Spring-Extension    |
| 15          | 66-8060            | 1           | Pad-Brake                      | 41          | 115-1166           | 2           | Washer-Plain        |
| 16          | 136-7199           | 1           | Bolt-Shoulder                  | 47          | 137-3121           | 1           | Washer-Plain        |
| 17          | 121-4600           | 2           | Nut-Hex                        | 48          | 115-5142           | 1           | Screw-HHF, Patch    |
| 18          | 137-6234-03        | 1           | Arm-Clutch, Impeller           | 49          | 137-3089           | 1           | Nut-Hex             |
| 19          | 136-6531           | 1           | Pulley, Idler                  | 50          | 137-3016           | 1           | Nut-HF              |
|             |                    |             |                                | 51          | 104-0858           | 1           | Bolt-Shoulder       |

 
# Belt Drive Assembly

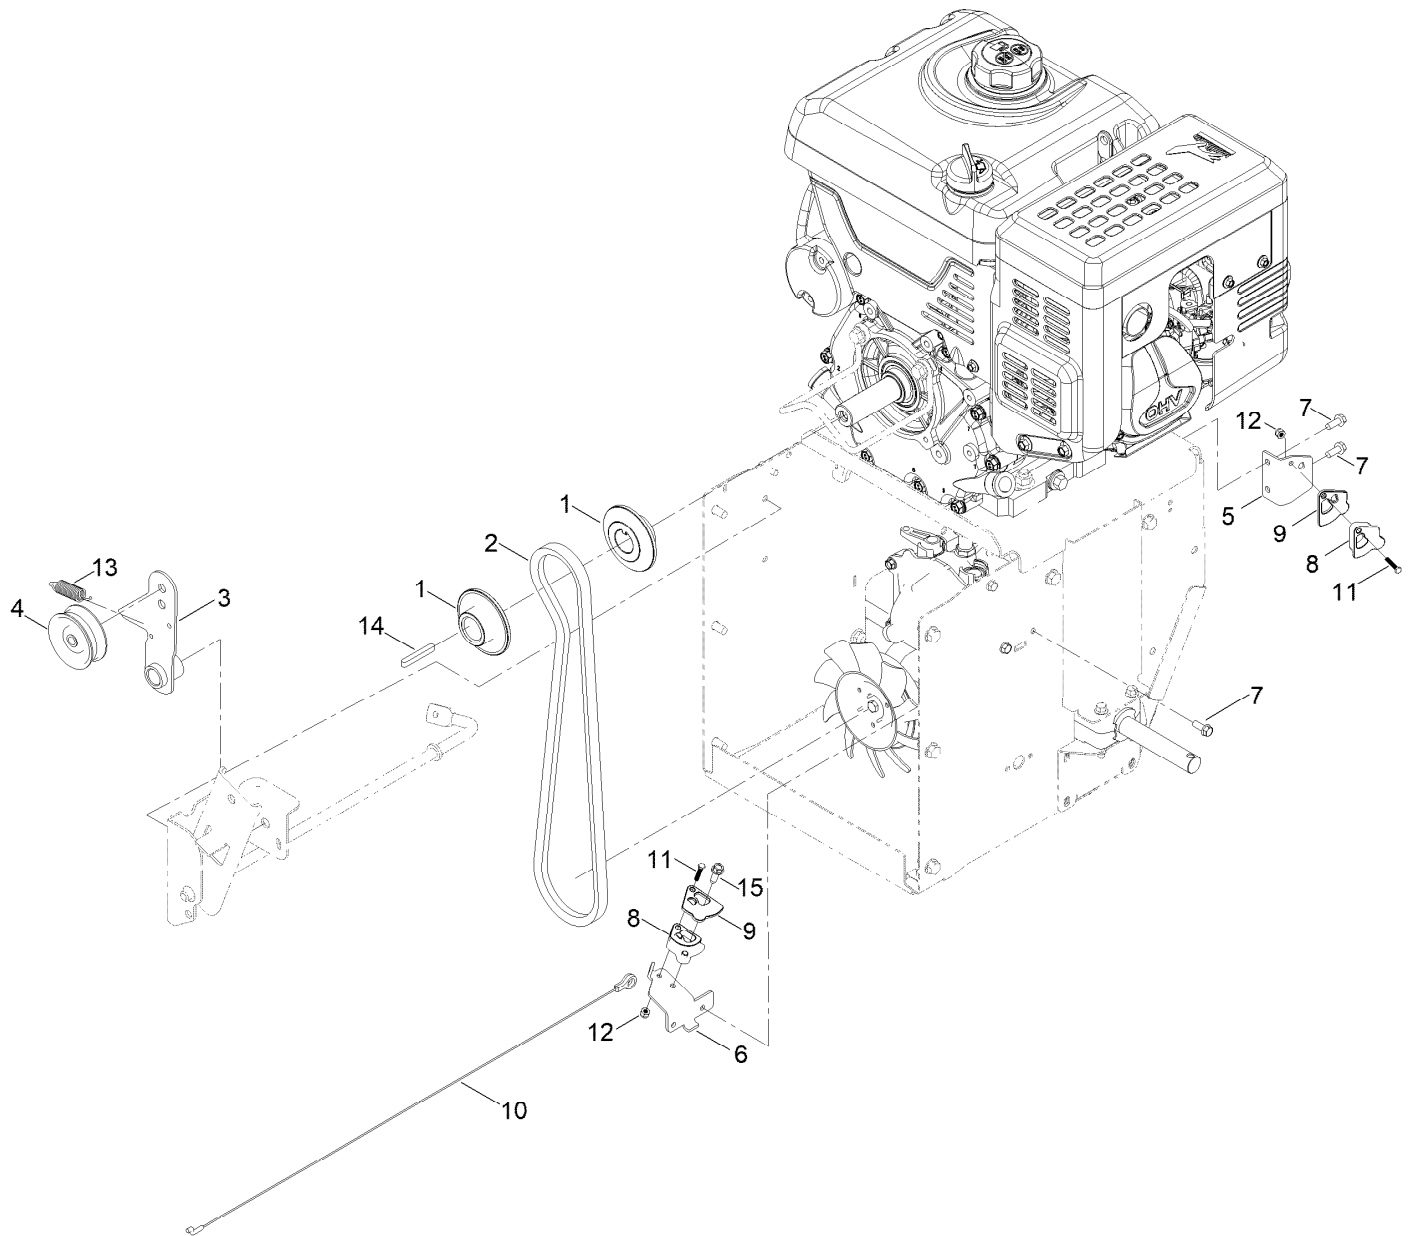

## Belt Drive Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 140-7944           | 2           | Sheave-Traction          | 9           | 139-3564           | 2           | Cap-Guide, Cable   |
| 2           | 140-7940           | 1           | Belt-Traction (A, 41.00) | 10          | 140-7924           | 1           | Cable-Traction     |
| 3           | 136-7186           | 1           | Arm-Idler, Traction      | 11          | 360-0272           | 2           | Screw              |
| 4           | 3-4244             | 1           | Pulley-Idler             | 12          | 520-0006           | 2           | Nut-Hex, Nylock    |
| 5           | 140-7895-03        | 1           | Bracket-Cable            | 13          | 80-4600            | 1           | Spring-Extension   |
| 6           | 140-7894-03        | 1           | Anchor-Cable             | 14          | 140-7941           | 1           | Key-Square         |
| 7           | 32144-85           | 4           | Screw-HWH Thd Form       | 15          | 49-2040            | 1           | Screw-HWHTF        |
| 8           | 139-3565           | 2           | Guide-Cable              |             |                    |             |                    |

 
# Gear Case Assembly

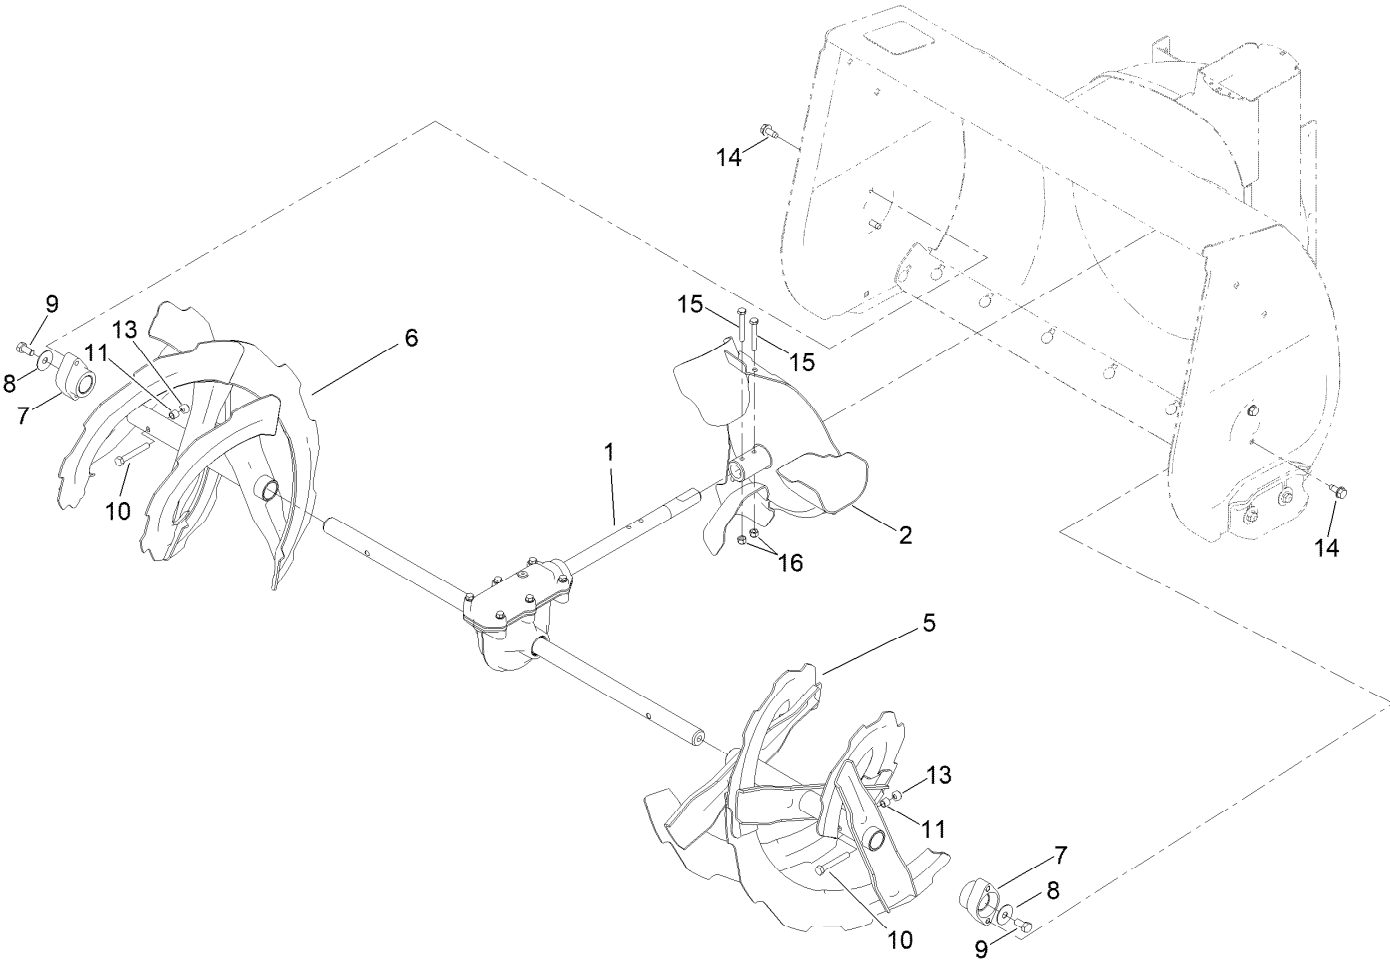

## Gear Case Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 136-6620           | 1           | Auger Gearcase ASM | 10          | 120-9738           | 2           | Screw-HH           |
| 2           | 136-6570-03        | 1           | Impeller           | 11          | 136-7148           | 2           | Spacer-Grommet     |
| 5           | 136-6597-03        | 1           | Auger-LH, 32 Inch  | 13          | 119-4038           | 2           | Nut-Hex            |
| 6           | 136-6598-03        | 1           | Auger-RH, 32 Inch  | 14          | 32144-70           | 4           | Screw-HWHTF        |
| 7           | 106-4570           | 2           | Bearing-Augur      | 15          | 137-3032           | 2           | Screw-HH           |
| 8           | 3-0750             | 2           | Washer             | 16          | 137-3088           | 2           | Nut-Hex            |
| 9           | 137-3066           | 2           | Screw-HH           |             |                    |             |                    |

 
# Auger Gear Case Assembly No. 136-6620

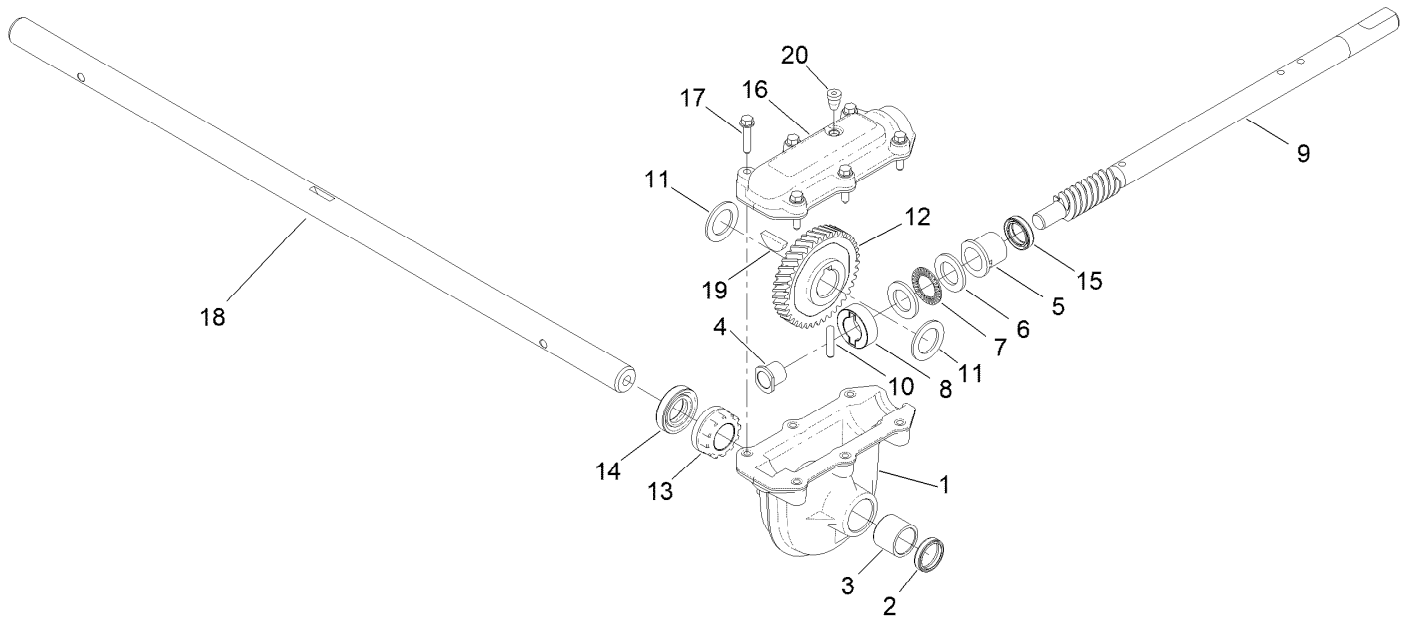

## Auger Gear Case Assembly No. 136-6620 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>               | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|----------------------------------|-------------|--------------------|-------------|----------------------|
| 1           | 136-6547           | 1           | Gearbox-Lower (Mach)             | 11          | 252-71             | 2           | Washer-Thrust        |
| 2           | 137-6173           | 1           | Seal-Oil                         | 12          | 138-0696           | 1           | Gear-Helical         |
| 3           | 112-6635           | 1           | Bushing-Sleeve                   | 13          | 136-6553           | 1           | Bushing-Auger Output |
| 4           | 136-6556           | 1           | Bushing-Impeller Shaft,<br>Front | 14          | 136-6554           | 1           | Seal-Oil             |
| 5           | 37-6560            | 1           | Bushing-Input                    | 15          | 137-6174           | 1           | Seal-Oil             |
| 6           | 252-78             | 2           | Washer-Thrust                    | 16          | 136-6546           | 1           | Cover-Gearcase       |
| 7           | 252-76             | 1           | Bearing-Thrust                   | 17          | 108-4862           | 6           | Screw-HWH Thd Roll   |
| 8           | 136-6555           | 1           | Collar-Thrust                    | 18          | 136-6617           | 1           | Shaft-Auger, 32"     |
| 9           | 137-6175           | 1           | Shaft-Impeller                   | 19          | 3257-10            | 1           | Key-Woodruff         |
| 10          | 107-8899           | 1           | Pin-Dowel                        | 20          | 138-3629           | 1           | Plug-Oil             |
 
# Engine Assembly

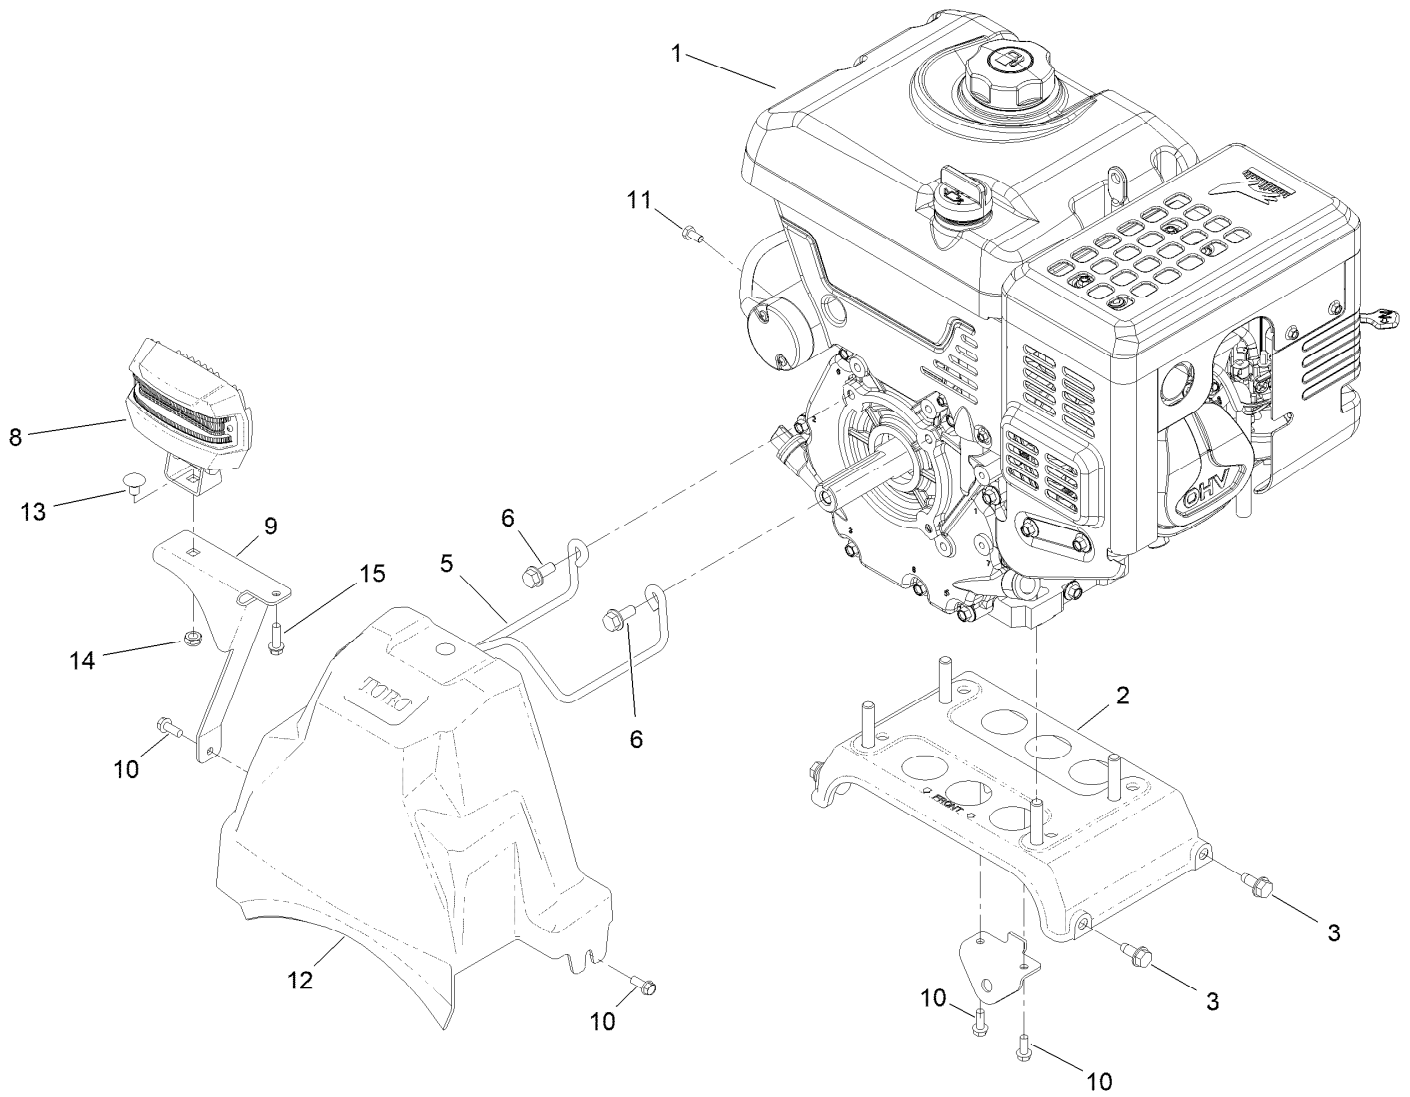




## Engine Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|---------------------|
| 1           | 136-7796           | 1           | Engine-190Fds      | 10          | 32144-85           | 2           | Screw-HWH Thd Form  |
| 2           | 137-6165           | 1           | Engine Plate ASM   | 11          | 121-4604           | 1           | Screw-HH            |
| 3           | 32144-70           | 4           | Screw-HWHTF        | 12          | 136-6606           | 1           | Cover-Belt          |
| 5           | 136-6607           | 1           | Belt Guide         | 13          | 3230-19            | 1           | Bolt-CARR           |
| 6           | 138-0690           | 2           | Screw-HHF,Patch    | 14          | 137-3089           | 1           | Nut-Hex             |
| 8           | 138-0670           | 1           | LED Light ASM      | 15          | 137-3099           | 1           | Screw-Plastite, HWH |
| 9           | 138-0683-03        | 1           | Bracket-Light      |             |                    |             |                     |
 
# Fuel Systems and Carburetor Assembly

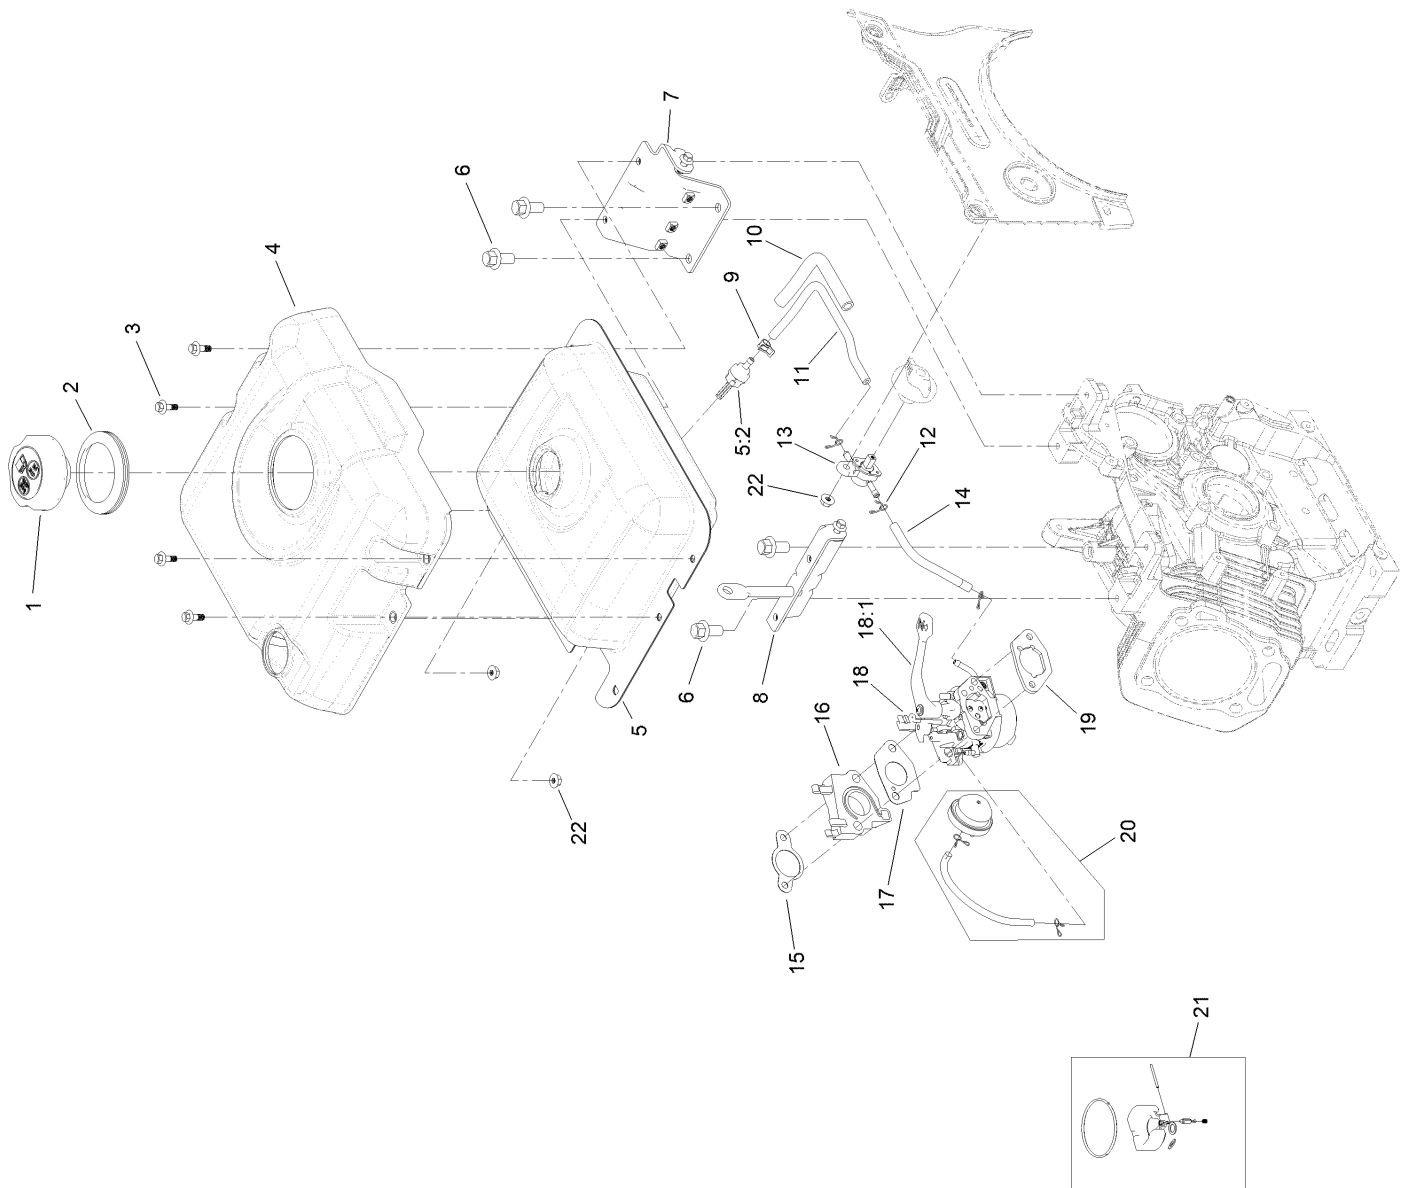


## Fuel Systems and Carburetor Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|---------------------------|
| 1           | 133-9823           | 1           | Cap-Fuel                 | 13          | 121-0258           | 1           | Valve-Fuel                |
| 2           | 121-0324           | 1           | Insert-Cover, Tank       | 14          | 139-0583           | 1           | Hose-Fuel                 |
| 3           | 121-0296           | 4           | Screw-HHF                | 15          | 139-0579           | 1           | Gasket-Carburetor         |
| 4           | 139-0574           | 1           | Cover-Tank, Fuel         | 16          | 139-0580           | 1           | Insulator-Carburetor      |
| 5           | 139-0567           | 1           | Fuel Tank And Filter ASM | 17          | 139-0581           | 1           | Gasket-Carburetor         |
| 5:2         | 127-9065           | 1           | Filter-Fuel              | 18          | 139-0594           | 1           | Carburetor ASM            |
| 6           | 139-0569           | 4           | Screw-HHF                | 18:1        | 139-0638           | 1           | Lever-Choke               |
| 7           | 139-0571           | 1           | Bracket-Tank, Right      | 19          | 121-0254           | 1           | Gasket-Coated, Rubber     |
| 8           | 139-0570           | 1           | Bracket-Tank, Left       | 20          | 127-9372           | 1           | Primer Kit                |
| 9           | 127-9120           | 1           | Clamp-Hose               | 21          | 139-0625           | 1           | Internal Carb Service Kit |
| 10          | 139-0566           | 1           | Sleeve-Abrasion          | 22          | 121-0010           | 3           | Nut-Flange                |
| 11          | 127-9064           | 1           | Hose-Fuel                | 99          | 139-0610           | 1           | High Altitude Kit ●       |
| 12          | 121-0087           | 3           | Clamp-Hose               |             |                    |             |                           |

● Not illustrated
 
# Intake and Exhaust Assembly

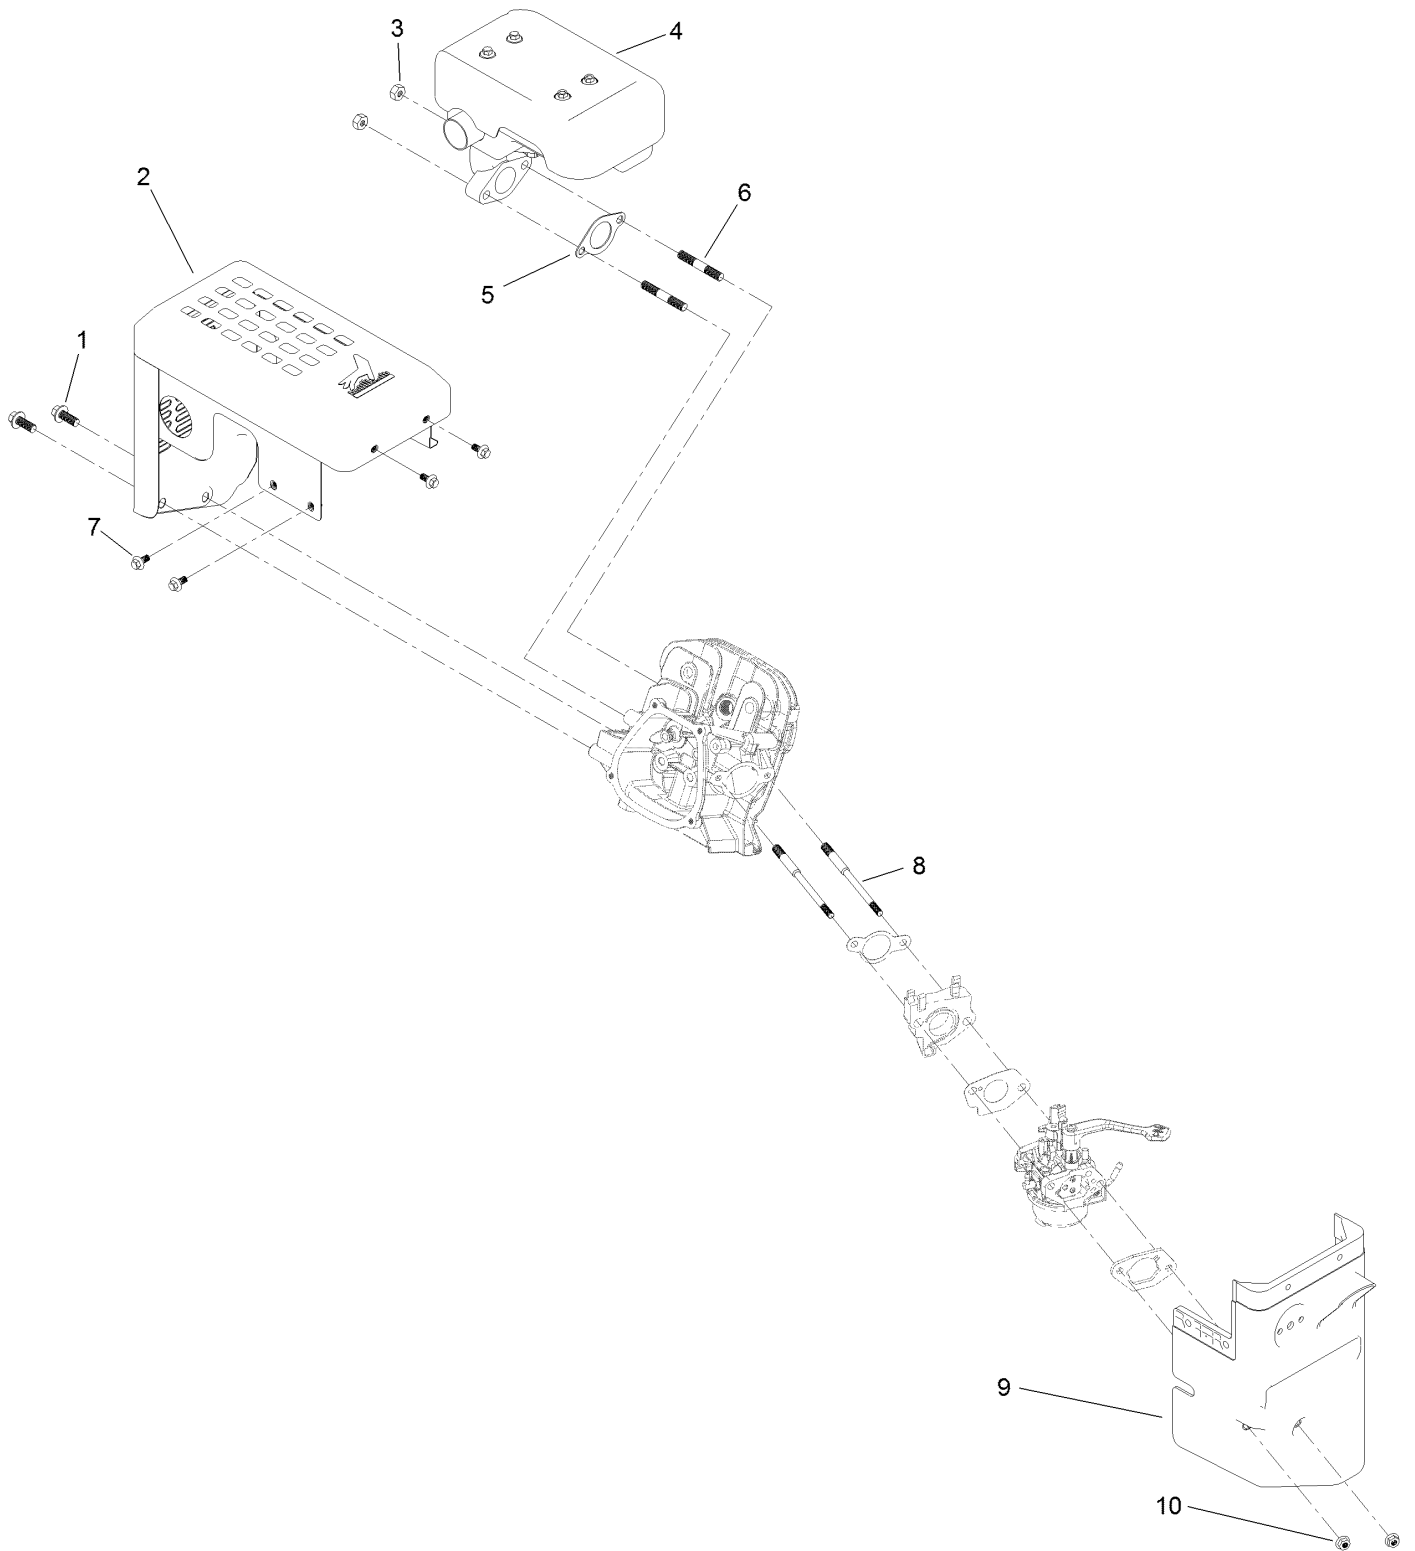


## Intake and Exhaust Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 121-0297           | 2           | Screw-HHF          |
| 2           | 139-0577           | 1           | Shield-Muffler     |
| 3           | 121-0199           | 2           | Nut-HH             |
| 4           | 139-0578           | 1           | Muffler ASM        |
| 5           | 121-0272           | 1           | Gasket-Exhaust     |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|------------------------|
| 6           | 121-0304           | 2           | Stud-Mount, Muffler    |
| 7           | 121-0294           | 4           | Screw-HHF              |
| 8           | 121-0303           | 2           | Stud-Mount, Carburetor |
| 9           | 139-0585           | 1           | Box-Heater             |
| 10          | 121-0308           | 2           | Nut-Flange             |
 
# Ignition and Electrical Assembly

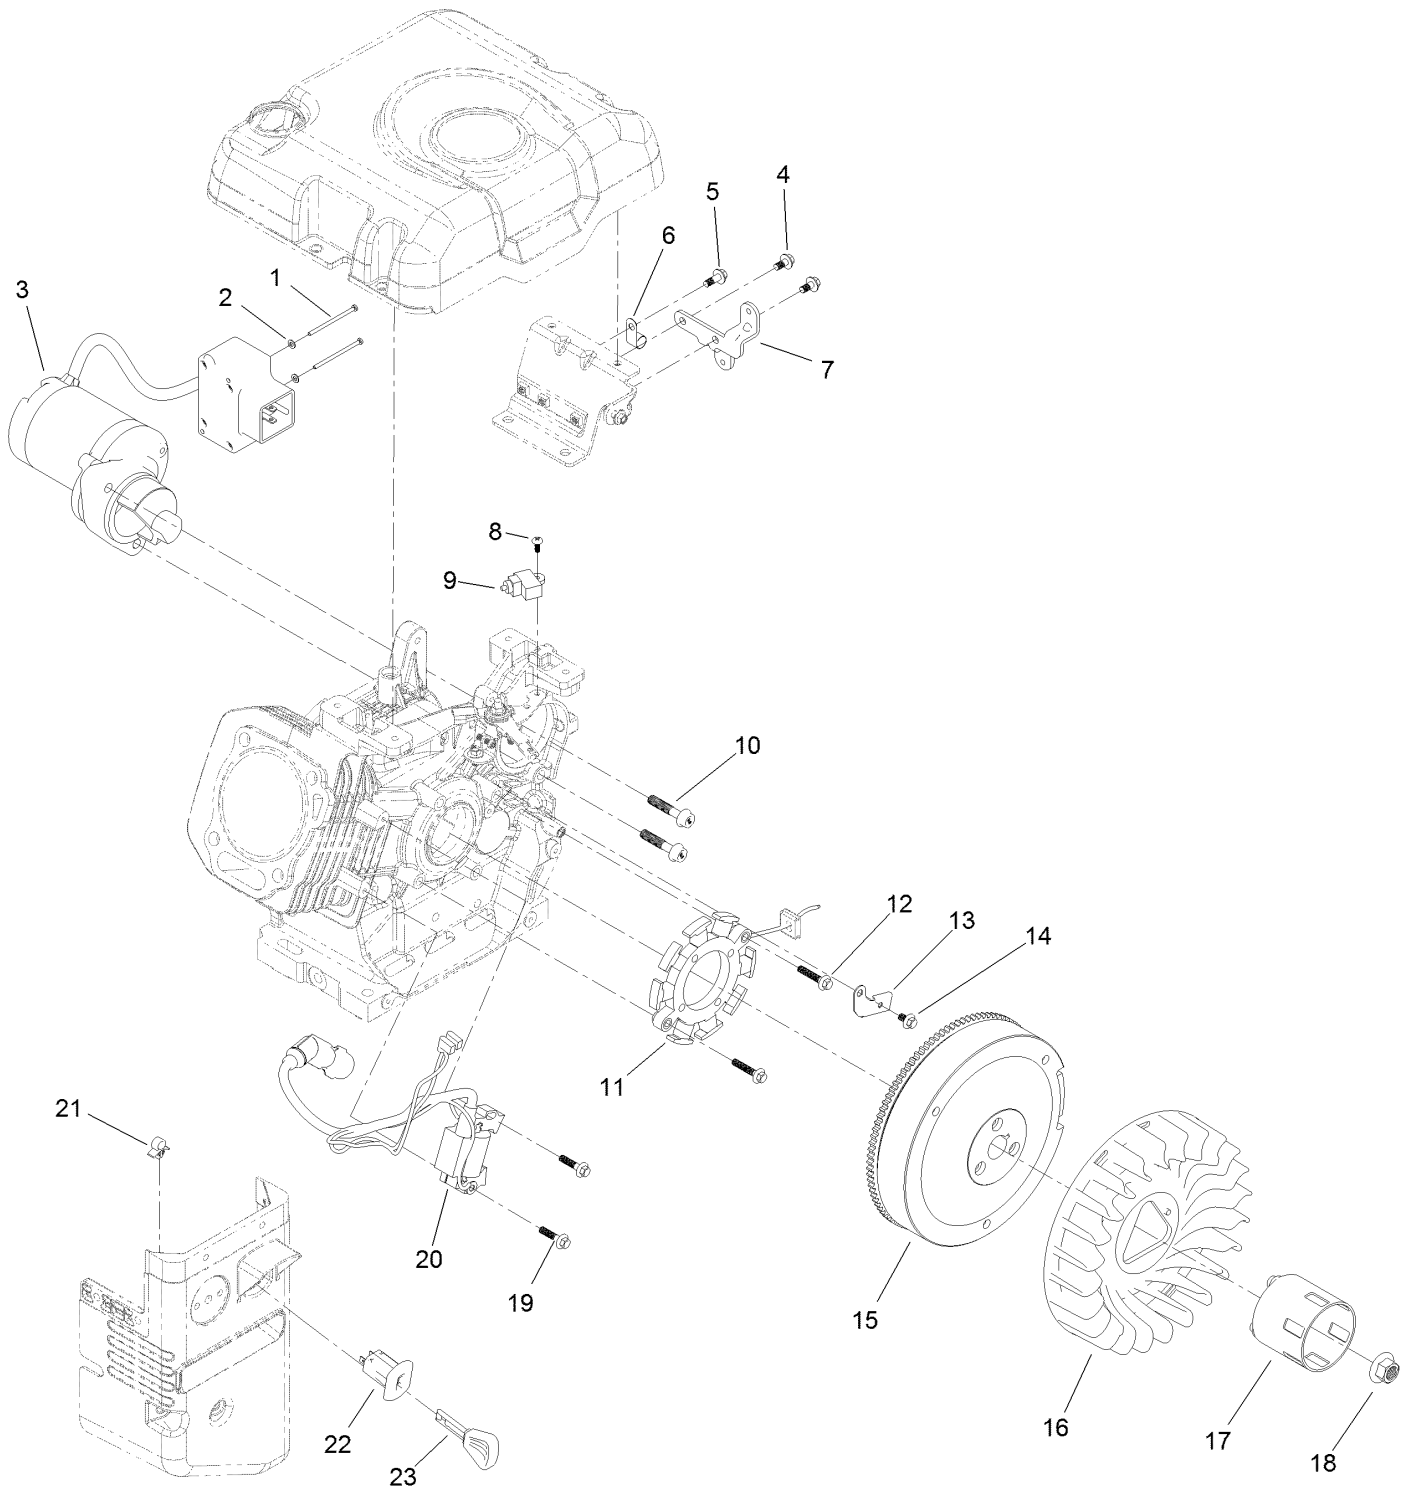


## Ignition and Electrical Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|---------------------|
| 1           | 121-0306           | 2           | Screw-Bhp           |
| 2           | 121-0312           | 2           | Washer-Plain        |
| 3           | 139-0573           | 1           | Motor-Starter       |
| 4           | 121-0294           | 2           | Screw-HHF           |
| 5           | 121-0296           | 1           | Screw-HHF           |
| 6           | 121-0017           | 1           | Clip-Harness, Wire  |
| 7           | 139-0572           | 1           | Bracket-Box, Switch |
| 8           | 120-4461           | 1           | Screw-PPH           |
| 9           | 139-0563           | 1           | Switch-Stop, Engine |
| 10          | 121-0298           | 2           | Screw-HHF           |
| 11          | 121-4108           | 1           | Stator Coil ASM     |
| 12          | 120-4223           | 2           | Screw-HHF           |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 13          | 139-0555           | 1           | Clamp-Wire, Charge |
| 14          | 121-0118           | 1           | Screw-HHF          |
| 15          | 139-0558           | 1           | Flywheel ASM       |
| 16          | 139-0559           | 1           | Fan-Cooling        |
| 17          | 139-0560           | 1           | Cup-Starter        |
| 18          | 121-0309           | 1           | Nut-Flange         |
| 19          | 121-0097           | 2           | Screw-HHF          |
| 20          | 139-0557           | 1           | Ignition Coil ASM  |
| 21          | 121-0326           | 1           | Clip               |
| 22          | 121-0283           | 1           | Switch-Key         |
| 23          | 117-7728           | 1           | Key                |
 
# Crankcase Assembly

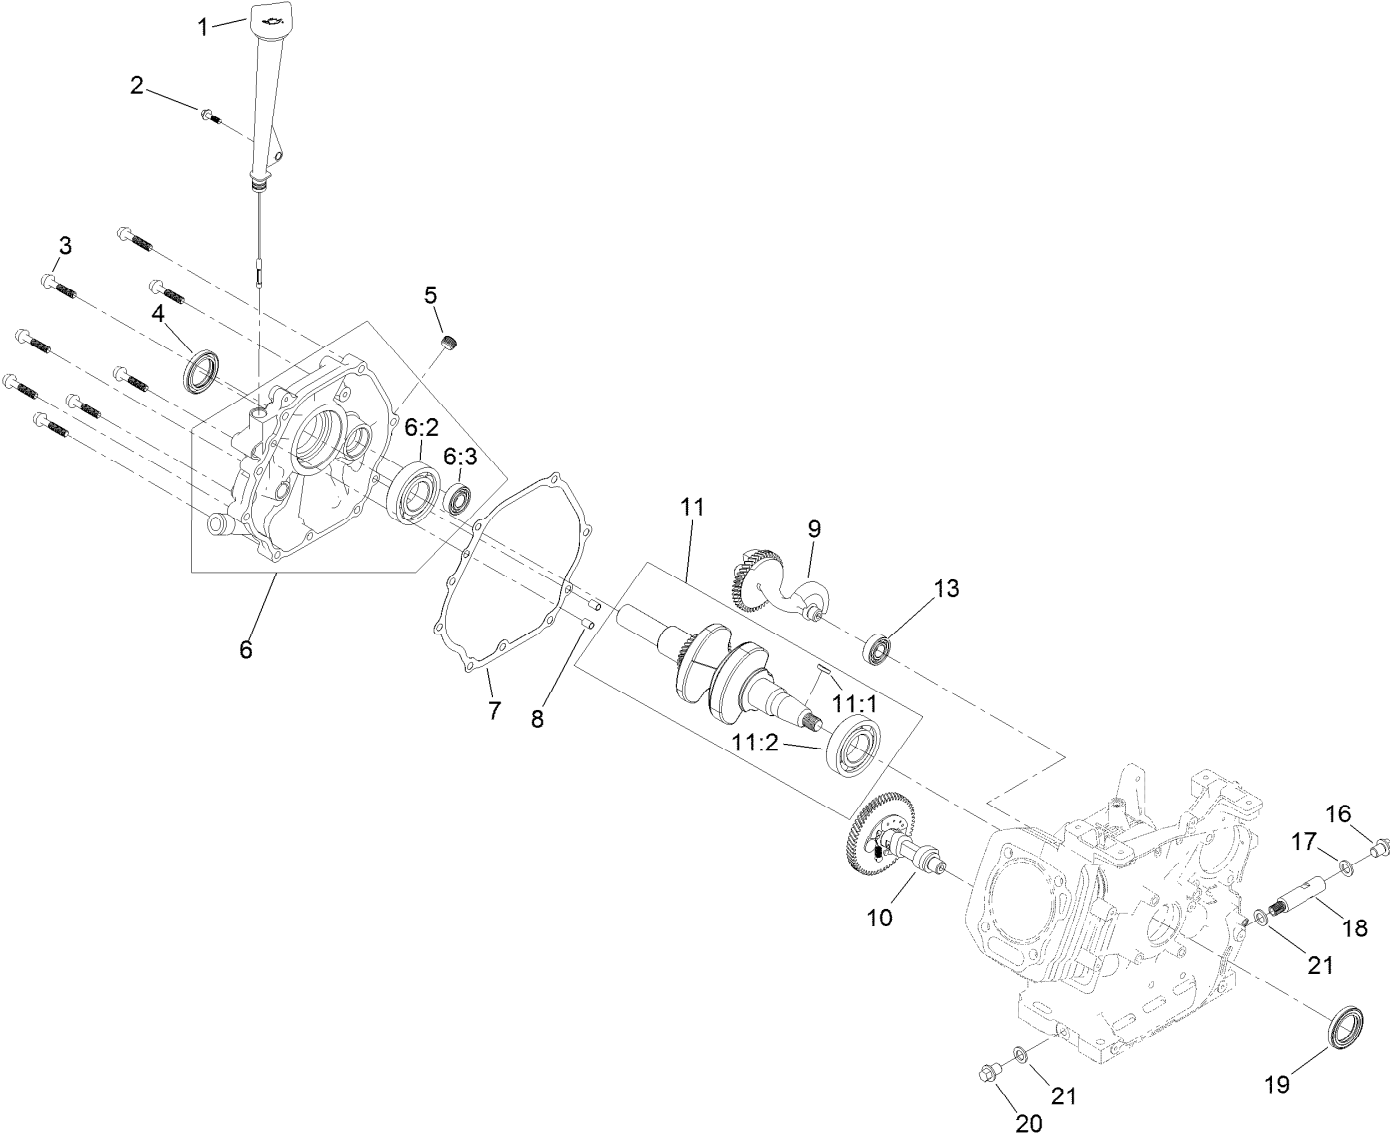




## Crankcase Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|--------------------|
| 1           | 136-7941           | 1           | Oil Fill ASM        | 10          | 136-7939           | 1           | Camshaft ASM       |
| 2           | 127-9123           | 1           | Screw-HHF           | 11          | 139-0586           | 1           | Crankshaft ASM     |
| 3           | 121-0298           | 8           | Screw-HHF           | 11:1        | 120-4320           | 1           | Key-Woodruff       |
| 4           | 136-7942           | 1           | Seal-Oil            | 11:2        | 120-4261           | 1           | Bearing-Ball       |
| 5           | 133-9805           | 1           | Plug-Drain          | 13          | 136-7949           | 1           | Bearing-Ball       |
| 6           | 139-0611           | 1           | Crankcase Cover ASM | 16          | 121-0030           | 1           | Screw-HHF          |
| 6:2         | 120-4261           | 1           | Bearing-Ball        | 17          | 121-0048           | 1           | Washer-Plain       |
| 6:3         | 136-7949           | 1           | Bearing-Ball        | 18          | 121-0229           | 1           | Tube-Drain, Oil    |
| 7           | 136-7945           | 1           | Gasket-Cover, Case  | 19          | 139-0556           | 1           | Seal-Oil           |
| 8           | 121-0314           | 2           | Pin-Dowel           | 20          | 121-0222           | 1           | Screw-HHF          |
| 9           | 139-0550           | 1           | Shaft-Balance       | 21          | 121-0310           | 2           | Washer-Plain       |

 
# Governor Assembly

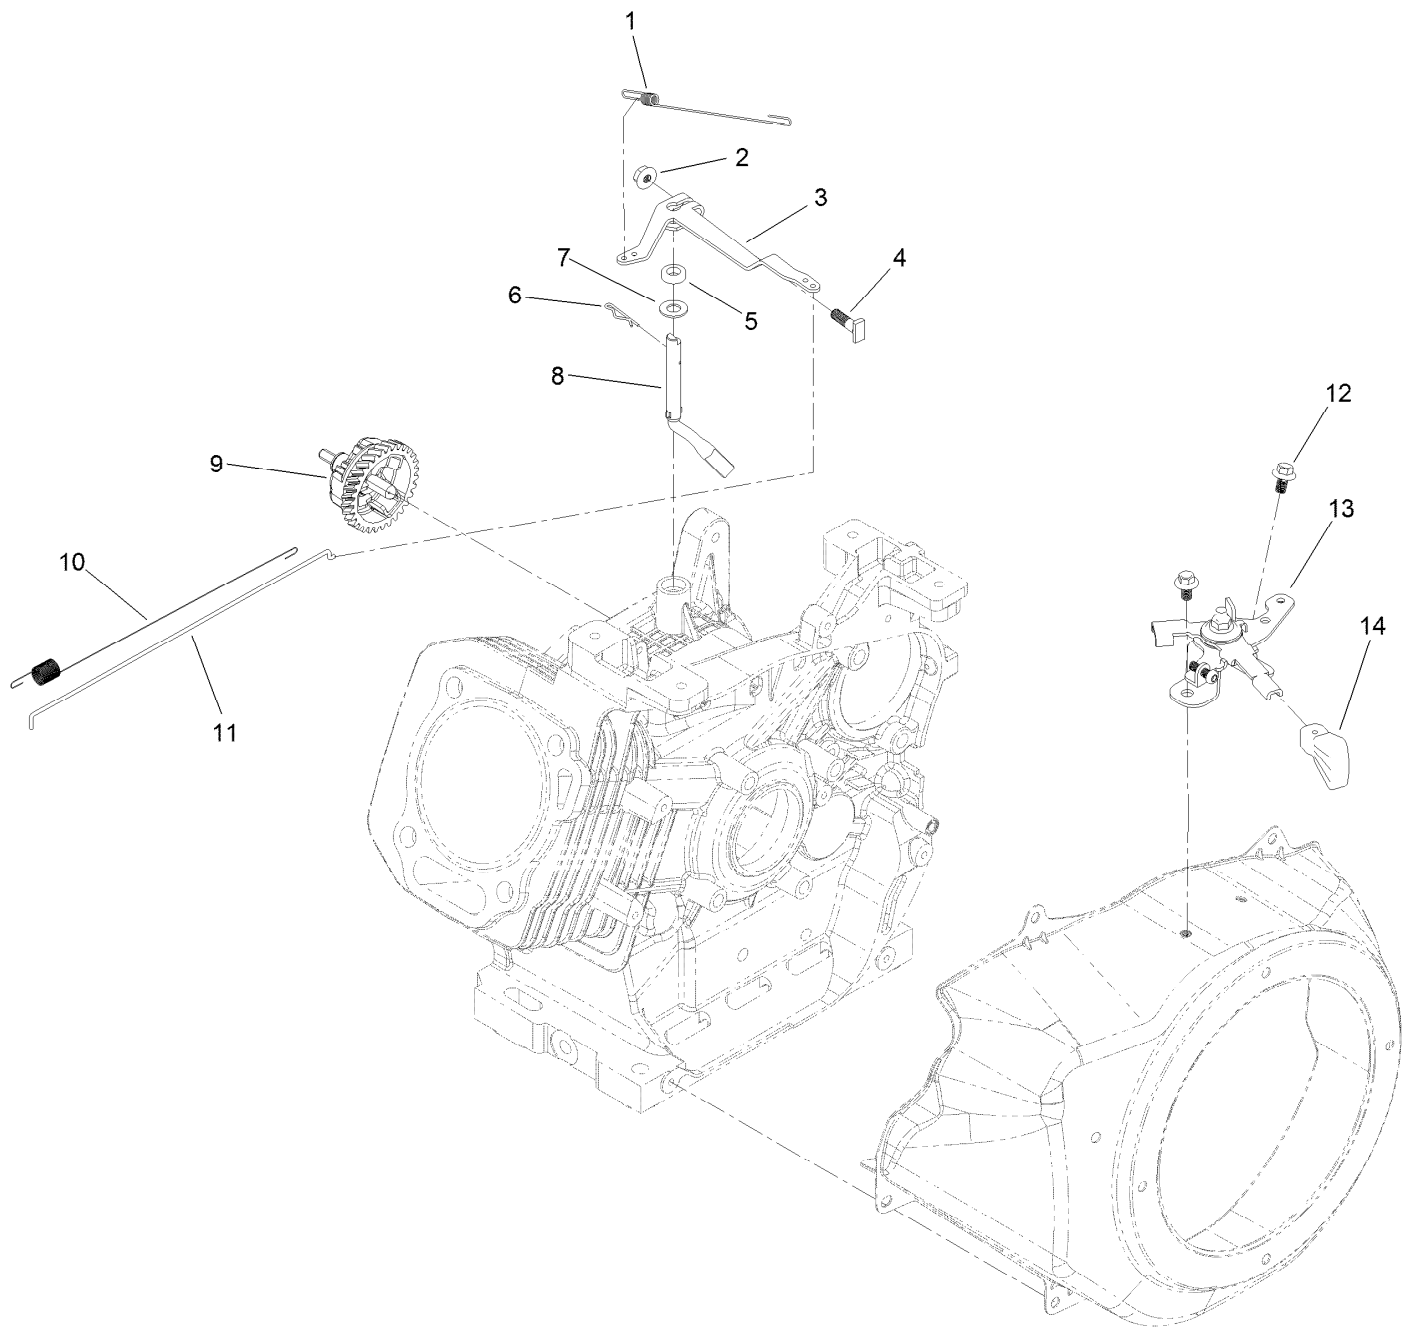

## Governor Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 139-0564           | 1           | Spring-Governor    | 8           | 139-0553           | 1           | Shaft-Governor          |
| 2           | 139-0552           | 1           | Nut-Flange         | 9           | 136-7944           | 1           | Governor Gear ASM       |
| 3           | 139-0551           | 1           | Arm-Governor       | 10          | 121-0261           | 1           | Spring-Return, Throttle |
| 4           | 120-4238           | 1           | Bolt-Arm, Governor | 11          | 139-0584           | 1           | Rod-Governor            |
| 5           | 120-4257           | 1           | Seal-Oil           | 12          | 121-0118           | 2           | Screw-HHF               |
| 6           | 120-4256           | 1           | Pin-Hair           | 13          | 139-0562           | 1           | Throttle Control ASM    |
| 7           | 121-0311           | 1           | Washer-Plain       | 14          | 121-0269           | 1           | Knob-Control, Throttle  |

 
# Piston and Head Assembly

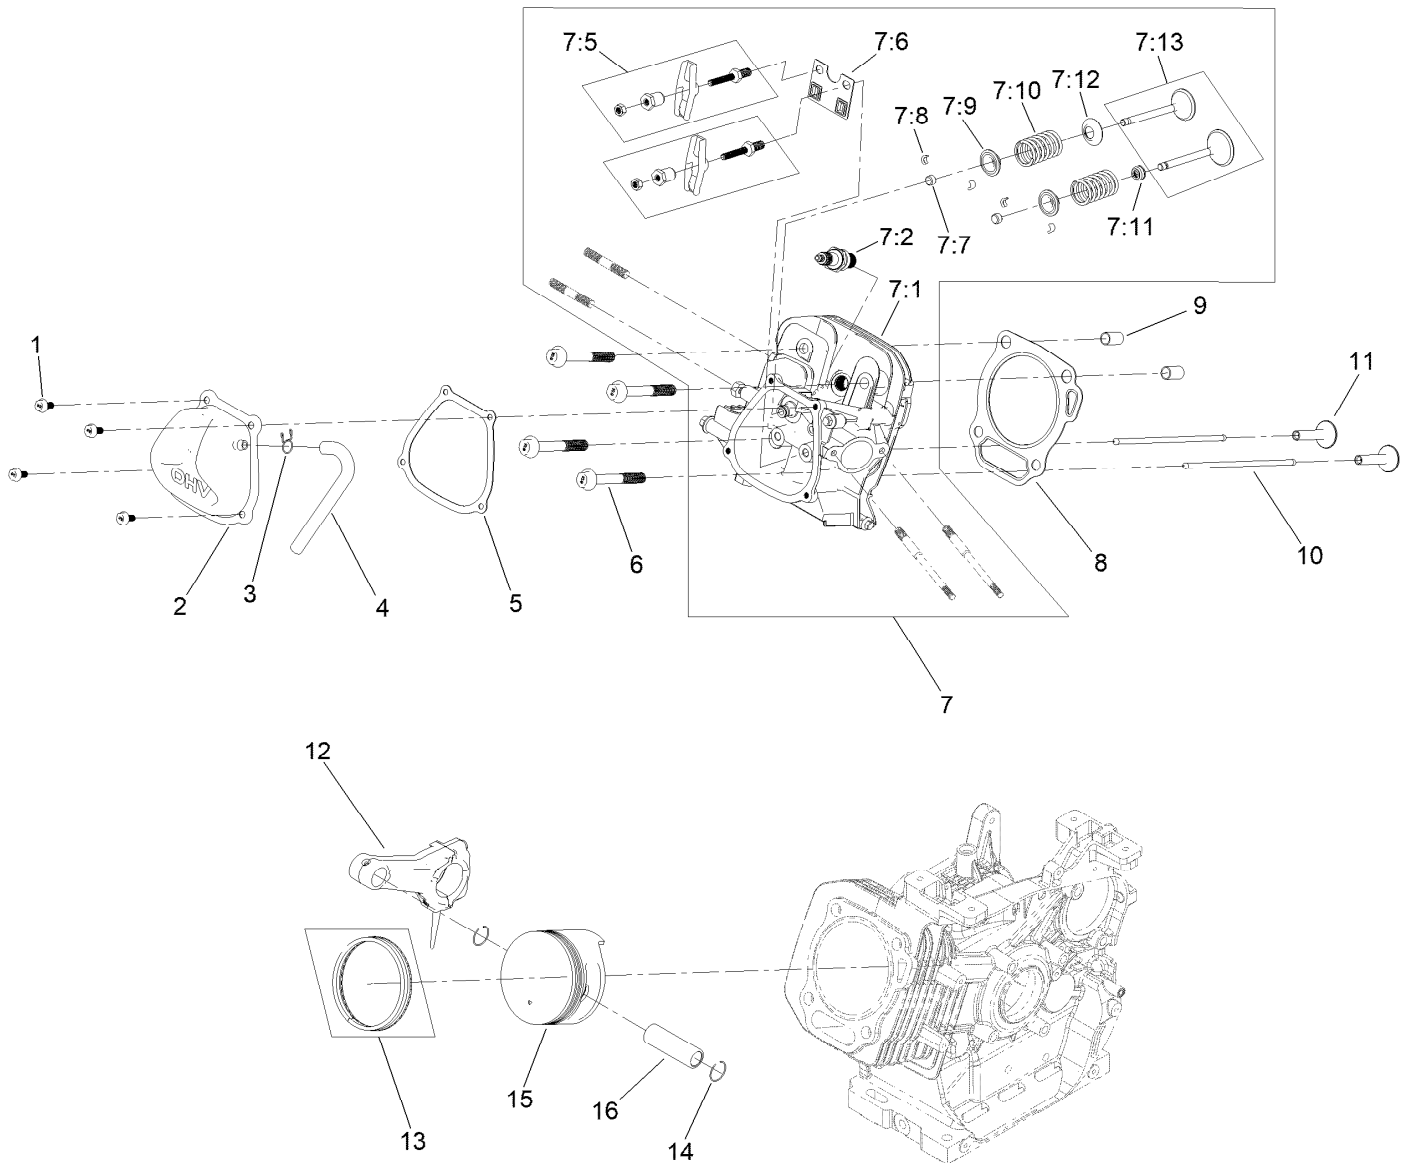

## Piston and Head Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         |
|-------------|--------------------|-------------|------------------------|-------------|--------------------|-------------|----------------------------|
| 1           | 121-0044           | 4           | Screw-HHF              | 7:10        | 120-4305           | 2           | Spring-Valve               |
| 2           | 121-0233           | 1           | Valve Cover ASM        | 7:11        | 120-4304           | 1           | Seal-Stem, Valve           |
| 3           | 127-9408           | 1           | Clamp-Hose             | 7:12        | 120-4303           | 1           | Seat-Spring, Valve         |
| 4           | 139-0629           | 1           | Tube-Breather          | 7:13        | 136-7940           | 1           | Valve Set                  |
| 5           | 121-0234           | 1           | Gasket-Cover, Valve    | 8           | 139-0590           | 1           | Gasket-Head, Cylinder      |
| 6           | 121-0302           | 4           | Screw-HHF              | 9           | 120-4200           | 2           | Pin-Dowel                  |
| 7           | 139-0595           | 1           | Complete Head ASM      | 10          | 136-7938           | 2           | Rod-Push                   |
| 7:1         | 136-7932           | 1           | Head-Cylinder          | 11          | 120-4298           | 2           | Lifter-Valve               |
| 7:2         | 81-3250            | 1           | Spark Plug             | 12          | 136-7946           | 1           | Connecting Rod ASM         |
| 7:5         | 121-0245           | 2           | Rocker Arm ASM         | 13          | 139-0592           | 1           | Ring Set                   |
| 7:6         | 121-0247           | 1           | Plate-Guide, Push Rod  | 14          | 120-4288           | 2           | Ring-Retaining, Piston Pin |
| 7:7         | 121-0244           | 2           | Rotator-Valve          | 15          | 139-0591           | 1           | Piston                     |
| 7:8         | 120-4307           | 4           | Keeper-Valve           | 16          | 120-4291           | 1           | Pin-Piston                 |
| 7:9         | 120-4306           | 2           | Retainer-Spring, Valve |             |                    |             |                            |

 
# Blower Housing and Shrouds Assembly

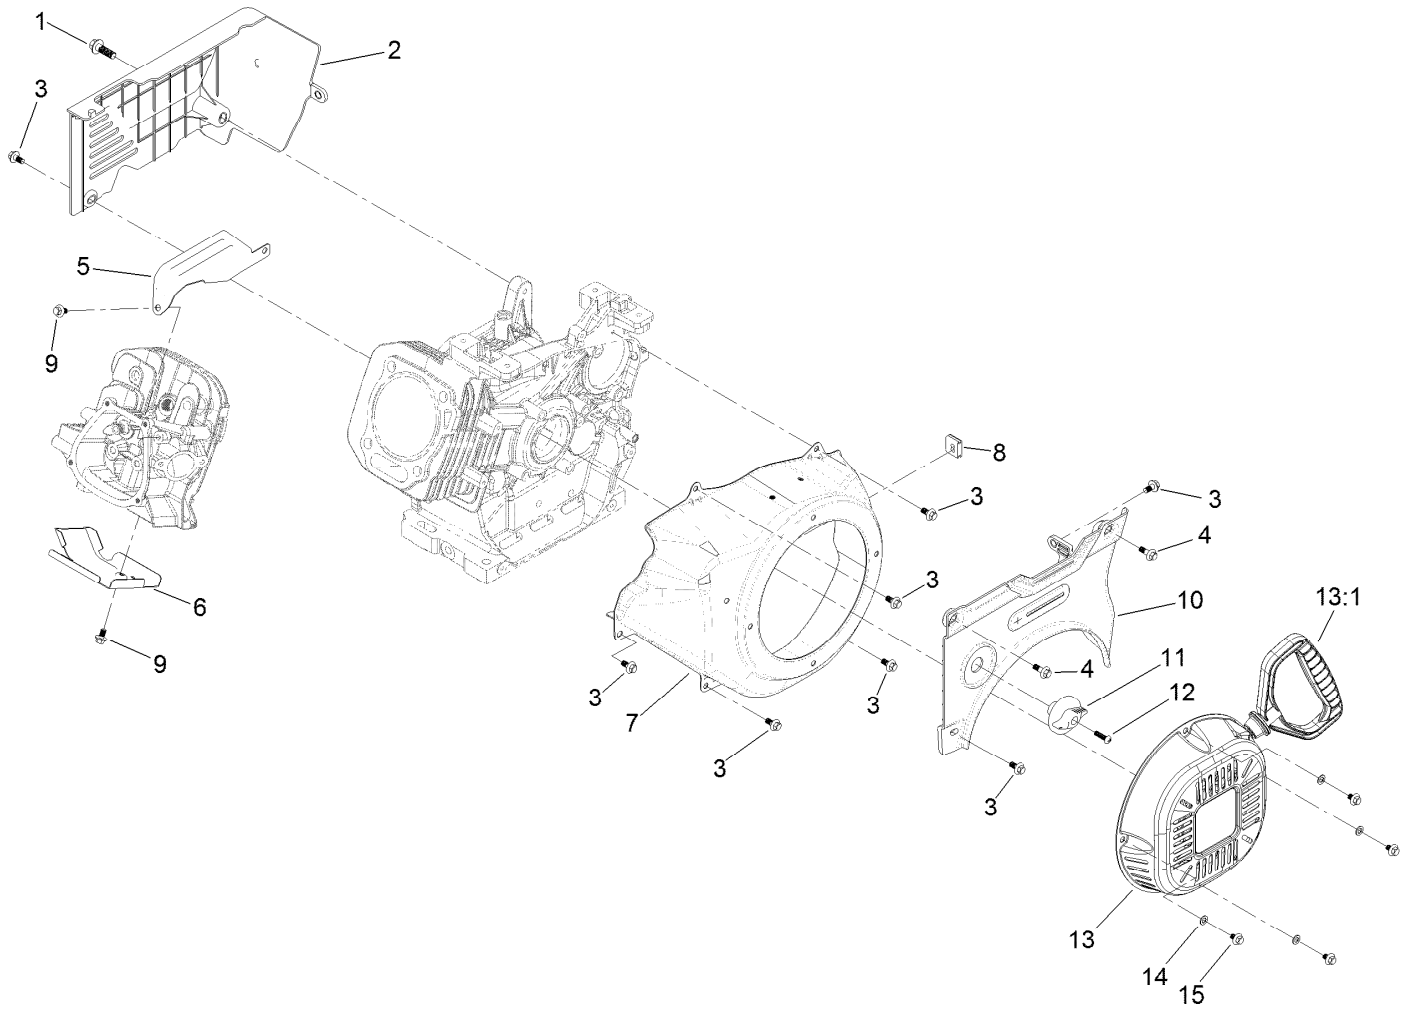

## Blower Housing and Shrouds Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|----------------------|
| 1           | 139-0575           | 1           | Screw-HHF          | 9           | 121-0118           | 2           | Screw-HHF            |
| 2           | 139-0576           | 1           | Panel-Rear         | 10          | 139-0565           | 1           | Panel-Control, Front |
| 3           | 121-0294           | 8           | Screw-HHF          | 11          | 121-0268           | 1           | Knob-Valve, Fuel     |
| 4           | 121-0296           | 2           | Screw-HHF          | 12          | 121-0305           | 1           | Screw-Bhp            |
| 5           | 136-7937           | 1           | Shroud-Head, Upper | 13          | 139-0561           | 1           | Recoil ASM           |
| 6           | 136-7933           | 1           | Shroud-Head, Lower | 13:1        | 121-0287           | 1           | Handle-Recoil        |
| 7           | 121-0307           | 1           | Shroud-Recoil      | 14          | 127-9380           | 4           | Washer-Plain         |
| 8           | 121-0325           | 1           | Grommet-Rubber     | 15          | 127-9031           | 4           | Screw-HHF            |
 
# Engine Decal Assembly

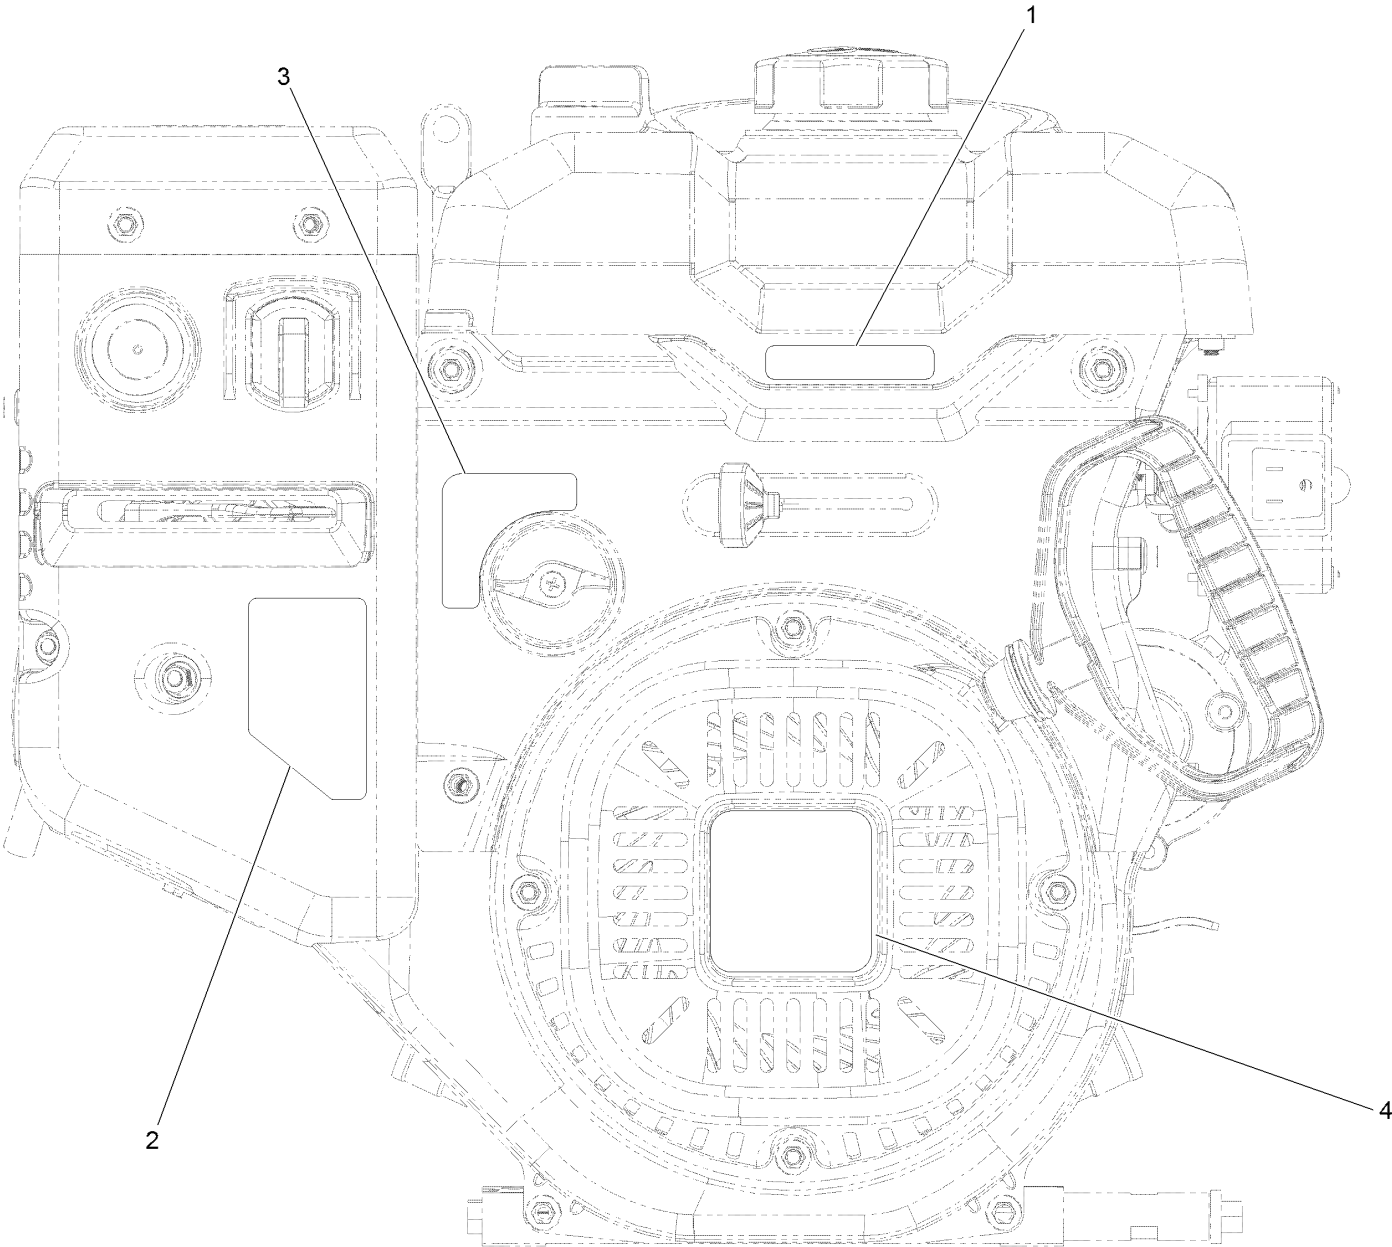




## Engine Decal Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|--------------------|
| 1           | 131-6487           | 1           | Decal-Throttle        | 3           | 136-7825           | 1           | Decal-Valve, Fuel  |
| 2           | 120-9805           | 1           | Decal-Control, Engine | 4           | 138-3622           | 1           | Decal-Recoil       |

 
# Chute Assembly

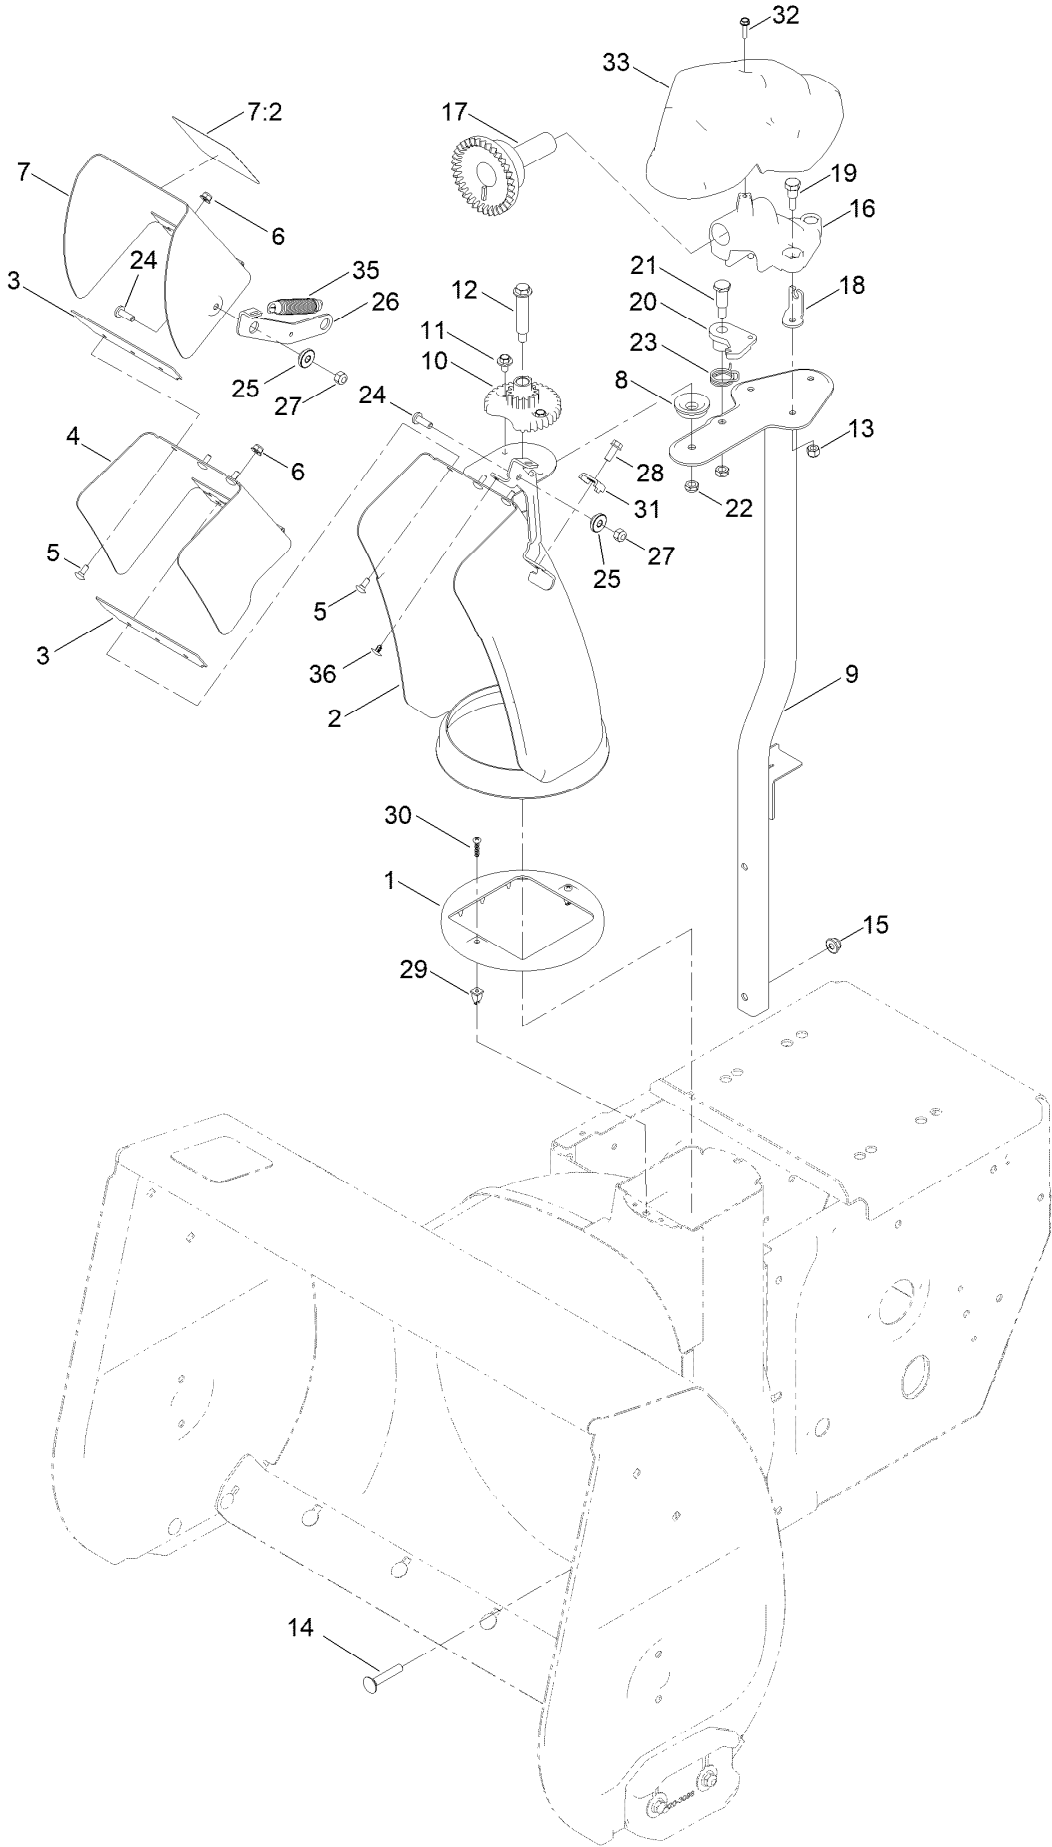

## Chute Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|---------------------|
| 1           | 136-6515           | 1           | Guide-Chute          | 18          | 136-6676           | 1           | Anchor-Cable        |
| 2           | 136-6580-01        | 1           | Lower Chute ASM      | 19          | 136-7197           | 3           | Screw-Shoulder      |
| 3           | 138-3671           | 2           | Gasket-Deflector     | 20          | 136-6525           | 1           | Latch-Chute         |
| 4           | 136-6582-01        | 1           | Middle Deflector ASM | 21          | 137-3103           | 1           | Screw-Shoulder, HH  |
| 5           | 135-1929           | 6           | Bolt-CARR            | 22          | 137-3089           | 2           | Nut-Hex             |
| 6           | 138-0719           | 6           | Nut-HF               | 23          | 108-7315           | 1           | Spring-Torsion      |
| 7           | 139-1564           | 1           | Deflector ASM        | 24          | 138-0689           | 2           | Screw-PH            |
| 7:2         | 121-6847           | 1           | Decal-Danger         | 25          | 138-0687           | 2           | Bushing-Pivot       |
| 8           | 106-4422           | 1           | Spacer-Chute         | 26          | 136-6522           | 1           | Link-Deflector      |
| 9           | 137-6245-03        | 1           | Chute Post ASM       | 27          | 137-3094           | 2           | Nut-Hex             |
| 10          | 106-4472           | 1           | Gear-Chute           | 28          | 32144-85           | 1           | Screw-HWH Thd Form  |
| 11          | 46-6810            | 2           | Screw And Washer ASM | 29          | 136-6586           | 2           | Grommet-Screw       |
| 12          | 136-7199           | 1           | Bolt-Shoulder        | 30          | 94-4496            | 2           | Screw-PPH           |
| 13          | 137-3088           | 3           | Nut-Hex              | 31          | 136-7191           | 1           | Clamp-Cable         |
| 14          | 137-3063           | 2           | Bolt-Car             | 32          | 137-3110           | 1           | Screw-Plastite, HWH |
| 15          | 119-4041           | 2           | Nut-HF               | 33          | 136-6672           | 1           | Cover-Gear, Face    |
| 16          | 136-6517           | 1           | Mount-Gear, Face     | 35          | 132-6915           | 1           | Spring-Extension    |
| 17          | 106-4471           | 1           | Gear-Face            | 36          | 138-3651           | 1           | Plug-Plastic        |

 
# Chute Control Assembly

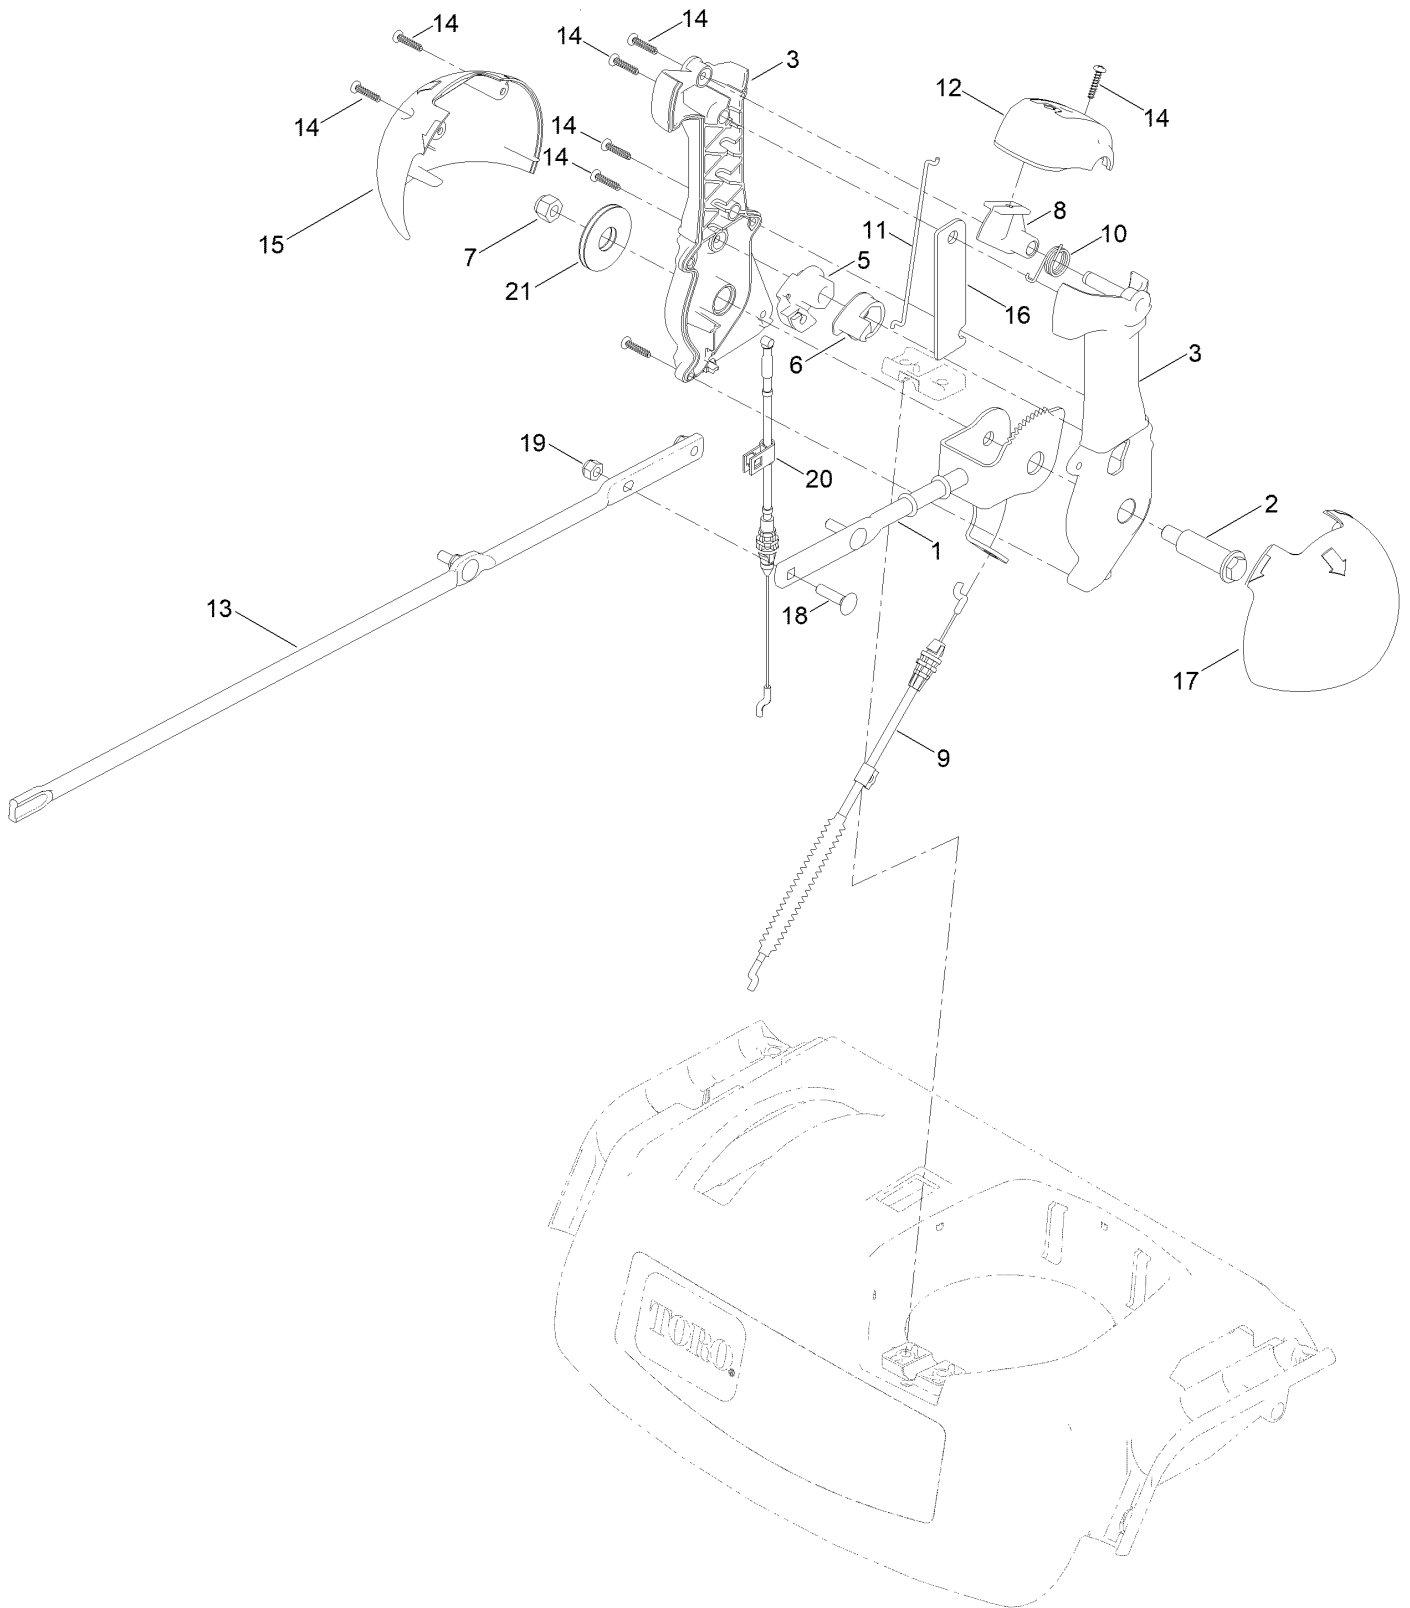

## Chute Control Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|----------------------------|
| 1           | 138-0662           | 1           | Rod-Control, Chute       | 12          | 137-6239           | 1           | Cap-Lever                  |
| 2           | 138-0659           | 1           | Screw-Shoulder, HWH      | 13          | 136-6578           | 1           | Rod-Chute, Rotation        |
| 3           | 139-1552           | 1           | Chute Control Lever ASM  | 14          | 94-4496            | 8           | Screw-PPH                  |
| 5           | 105-9988           | 1           | Lever-Cable, Deflector   | 15          | 136-6677           | 1           | Globe-Quickstick, RH       |
| 6           | 106-7310           | 1           | Pawl-Latch               | 16          | 136-6632-03        | 1           | Plate-Stiffner             |
| 7           | 137-3087           | 1           | Nut-Hex                  | 17          | 136-6678           | 1           | Globe-Quickstick, LH       |
| 8           | 137-6238           | 1           | Trigger-Latch            | 18          | 137-3056           | 3           | Bolt-CARR                  |
| 9           | 138-0730           | 1           | Cable-Control, Deflector | 19          | 137-3094           | 3           | Nut-Hex                    |
| 10          | 105-9982           | 1           | Spring-Torsion           | 20          | 139-9903           | 1           | Cable-Release, Chute       |
| 11          | 138-0688           | 1           | Link-Latch               | 21          | 138-0744           | 1           | Washer-Friction, Composite |

 
# Traction Control Assembly

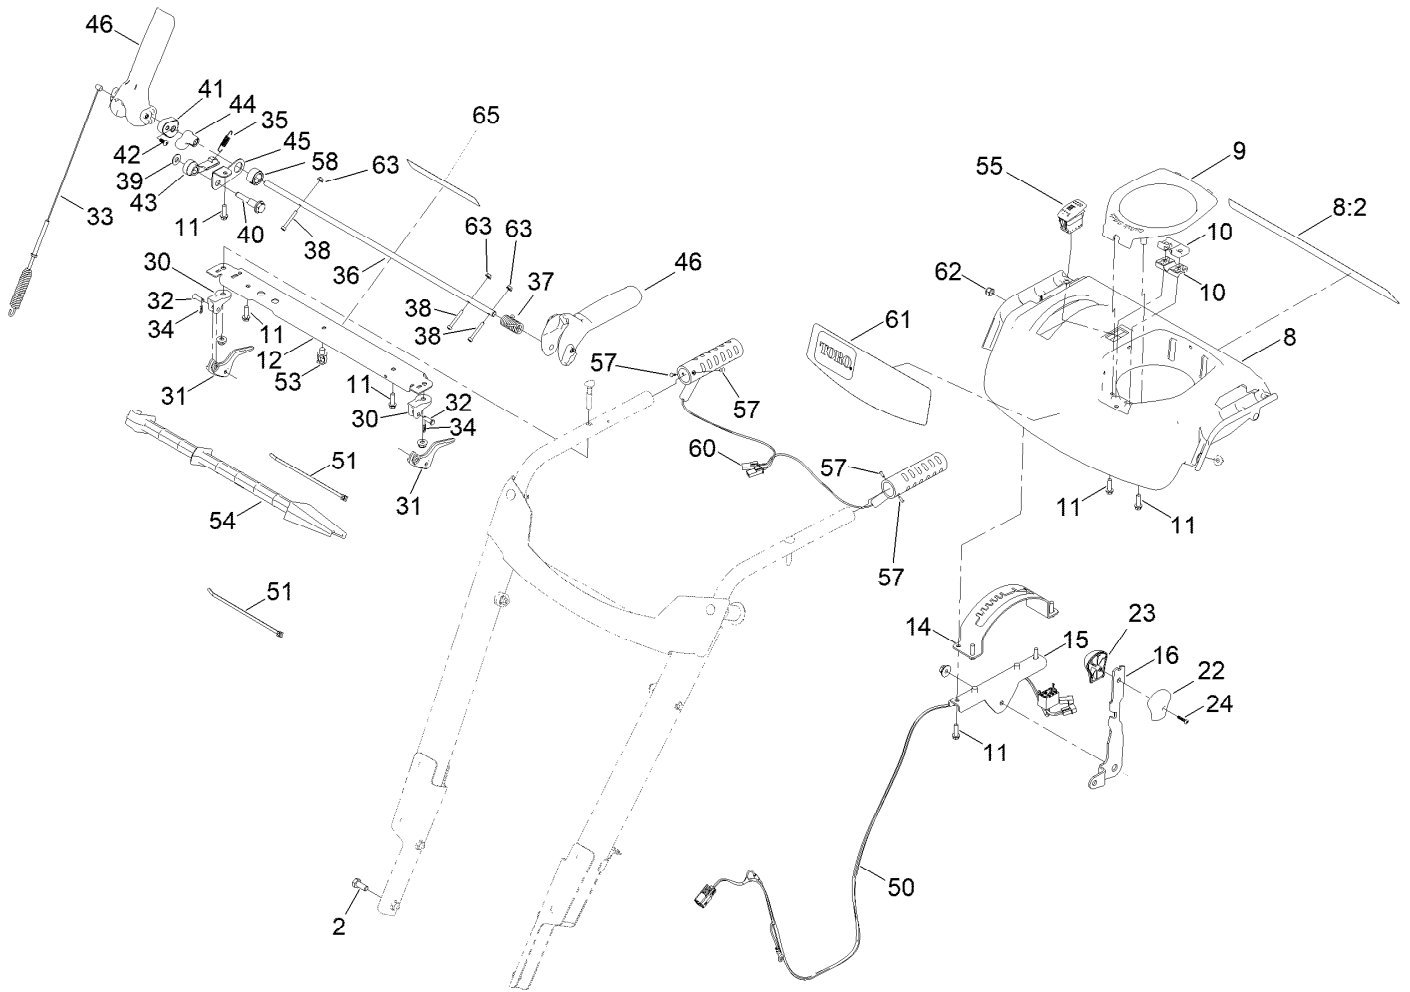

## Traction Control Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>               | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>                     |
|-------------|--------------------|-------------|----------------------------------|-------------|--------------------|-------------|----------------------------------------|
| 2           | 137-3052           | 4           | Screw-HH                         | 39          | 98-3499            | 1           | Washer-Flat                            |
| 8           | 144-1601           | 1           | Panel-Control, Assembly          | 40          | 138-0681           | 1           | Screw-Shoulder                         |
| 8:2         | 138-0650           | 1           | Decal-Safety                     | 41          | 137-6227           | 1           | Lock-Handle                            |
| 9           | 137-6178           | 1           | Cover-Quickstick                 | 42          | 137-9137           | 1           | Screw-PPH                              |
| 10          | 105-9987           | 2           | Support-Rod                      | 43          | 137-6229           | 1           | Latch-Lockout                          |
| 11          | 137-3099           | 9           | Screw-Plastite, HWH              | 44          | 138-8466           | 1           | Cam-Lockout                            |
| 12          | 137-6197-01        | 1           | Brace-Console                    | 45          | 138-3652           | 1           | Link-Lockout                           |
| 14          | 137-6187-03        | 1           | Gate-Shift                       | 46          | 137-6171           | 2           | Lever-Control                          |
| 15          | 137-6188-03        | 1           | Bracket-Shift                    | 50          | 138-3644           | 1           | Harness-Wire, LED And<br>Hand Warmers  |
| 16          | 137-6231-03        | 1           | Selector-Speed                   | 51          | 614249             | 2           | Tie-Cable                              |
| 22          | 105-9999           | 1           | Knob-Shift, LH                   | 53          | 32180-030          | 1           | Clip-Tie                               |
| 23          | 106-4423           | 1           | Knob-Shift, RH                   | 54          | 110-3408           | 1           | Stick-Cleanout                         |
| 24          | 94-4496            | 1           | Screw-PPH                        | 55          | 122-1124           | 1           | Switch-Rocker,<br>On-None-Off (Heater) |
| 30          | 105-9980           | 2           | Mount-Lever, Clutch              | 57          | 3290-271           | 4           | Rivet-Pop                              |
| 31          | 106-4505           | 2           | Lever-Clutch                     | 58          | 138-8467           | 1           | Collar-Cam                             |
| 32          | 1-808265           | 2           | Pin-Clevis                       | 60          | 127-5951           | 2           | Grip-Heated                            |
| 33          | 138-3661           | 1           | Cable-Auger                      | 61          | 144-0325           | 1           | Decal-Console                          |
| 34          | 108-2992           | 2           | Pin-Hair                         | 62          | 137-3093           | 1           | Nut-Hex                                |
| 35          | 136-7161           | 1           | Spring-Lockout, Handle           | 63          | 140-3749           | 3           | Nut-Lock Rohs                          |
| 36          | 137-6182           | 1           | Rod-Lockout                      | 65          | 144-1619           | 1           | Decal-Hydro, Trx                       |
| 37          | 138-0678           | 1           | Spring-Torsion, Handle<br>Return |             |                    |             |                                        |
| 38          | 139-3694           | 3           | Screw-HSH,Spl                    |             |                    |             |                                        |
 
# Handle Assembly

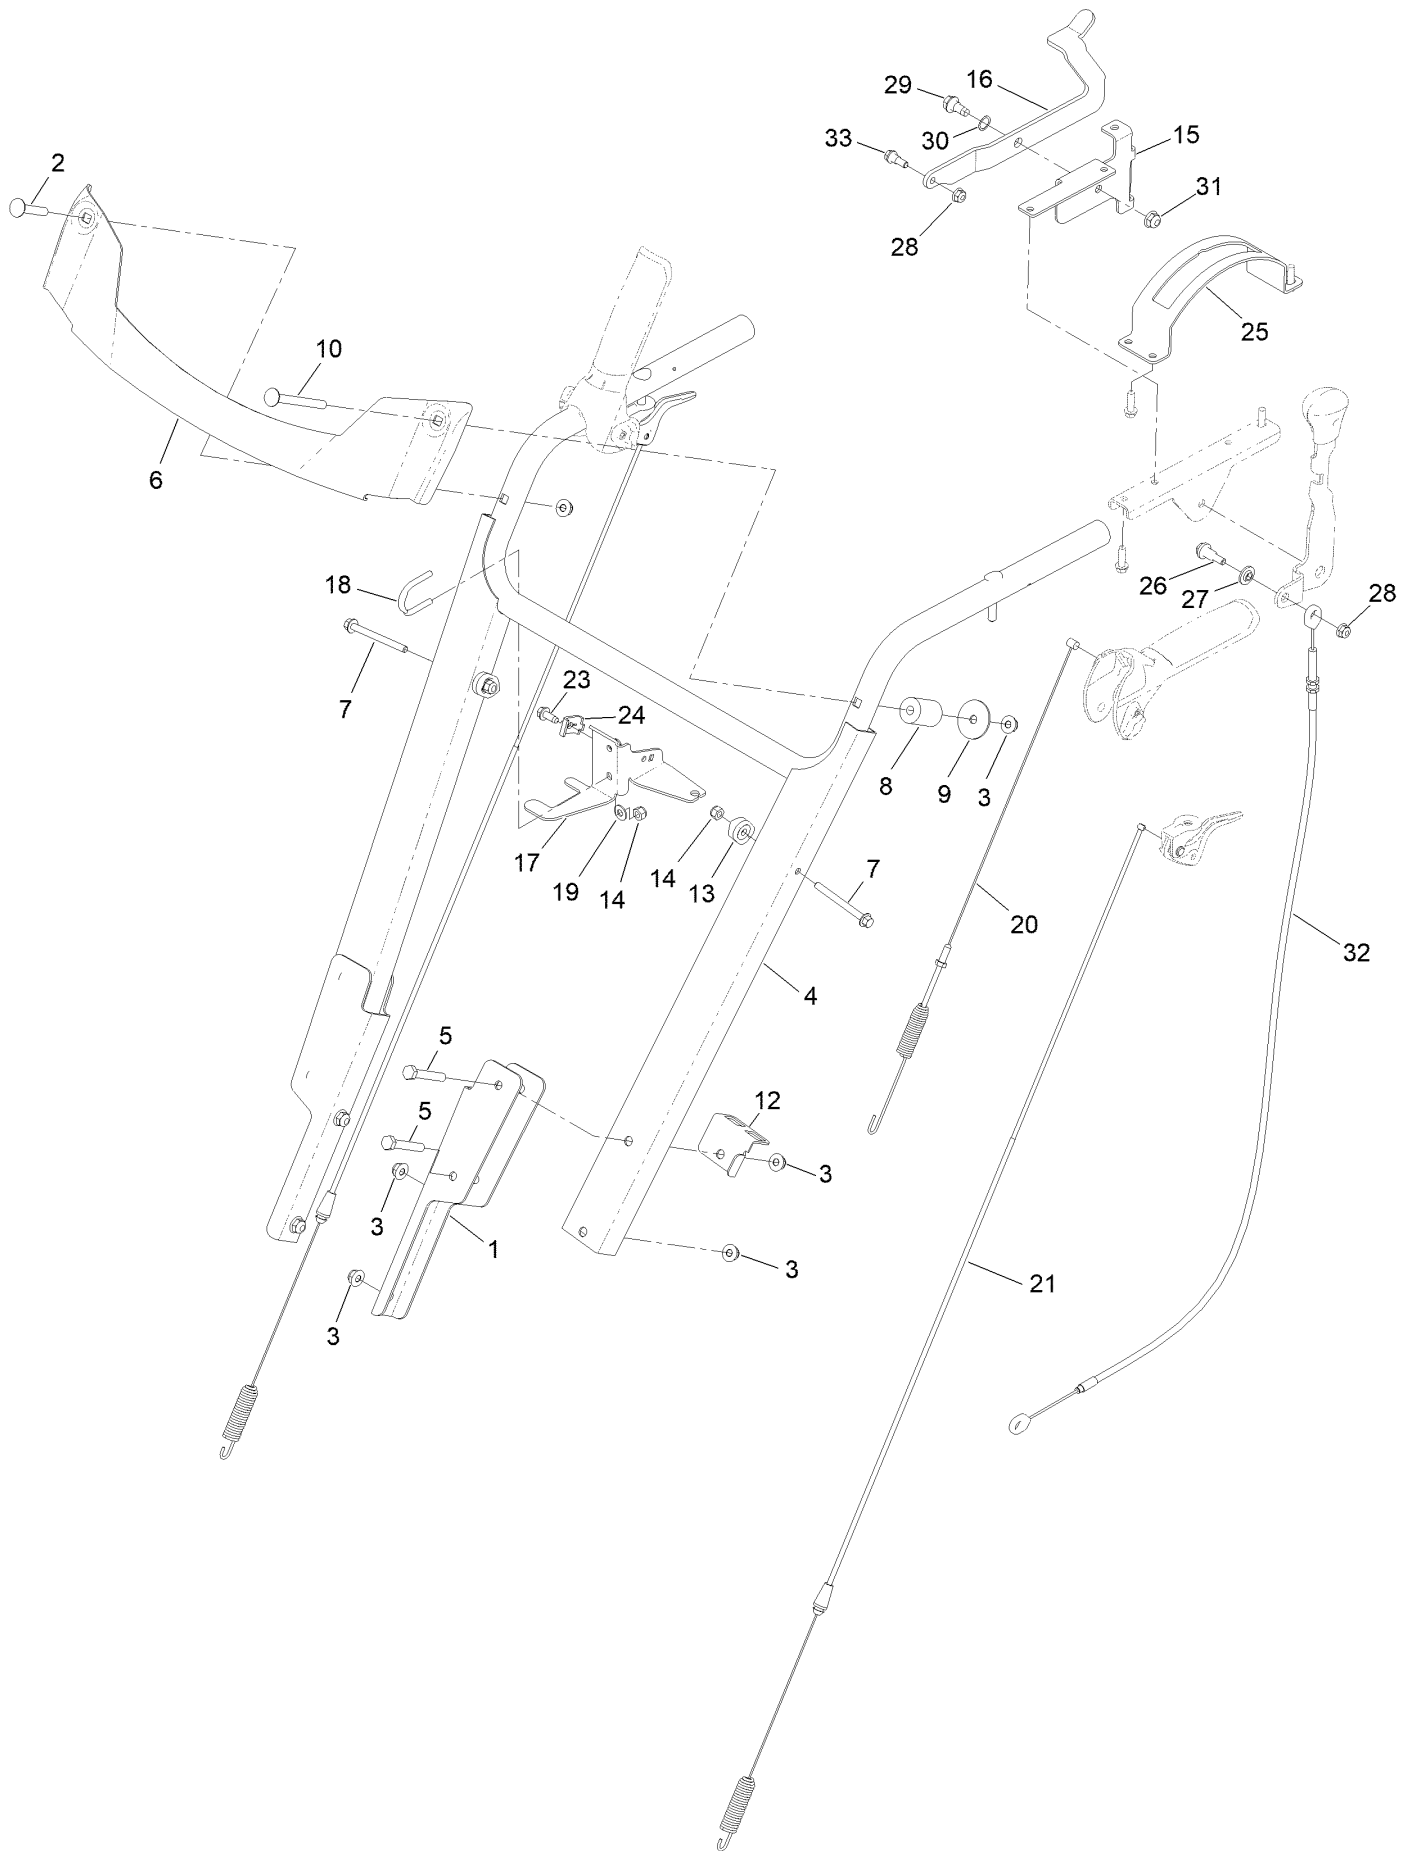




## Handle Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|------------------------|
| 1           | 137-6221-03        | 2           | Bracket-Handle, Lower   | 18          | 136-7120           | 1           | Clamp-Light            |
| 2           | 138-8402           | 1           | Bolt-CARR               | 19          | 139-1699           | 2           | Washer-Flat            |
| 3           | 138-8401           | 12          | Nut-HF                  | 20          | 140-7927           | 1           | Cable - Traction Upper |
| 4           | 137-6224-03        | 1           | HD Handle ASM           | 21          | 140-7926           | 2           | Cable-Clutch           |
| 5           | 120-9686           | 4           | Screw-HH                | 23          | 137-3043           | 1           | Screw-HWH              |
| 6           | 137-6233-01        | 1           | Trim-Metal, HD          | 24          | 136-7191           | 1           | Clamp-Cable            |
| 7           | 138-3653           | 2           | Screw-HHF               | 25          | 140-7925-03        | 1           | Gate-Shift, Speed      |
| 8           | 108-2301           | 1           | Spacer                  | 26          | 104-0858           | 1           | Bolt-Shoulder          |
| 9           | 115-1151           | 1           | Washer-Flat             | 27          | 99-6808            | 1           | Washer-Stepped         |
| 10          | 138-0741           | 1           | Screw-CARR              | 28          | 119-4040           | 2           | Nut-HF, NI             |
| 12          | 138-0724-03        | 1           | Bracket-Stick, Cleanout | 29          | 126-4424           | 1           | Screw-Shoulder         |
| 13          | 106-4509           | 2           | Clamp-Cable             | 30          | 142-2432           | 1           | Washer, Wave           |
| 14          | 137-3094           | 2           | Nut-Hex                 | 31          | 119-4041           | 1           | Nut-HF                 |
| 15          | 140-7917-03        | 1           | Bracket-Lever           | 32          | 140-7863           | 1           | Cable-Hydro, Push Pull |
| 16          | 140-7932-03        | 1           | Lever-Adjustment, Track | 33          | 42-3560            | 1           | Bolt-Shoulder          |
| 17          | 140-7931-03        | 1           | Bracket-Cable, Speed    |             |                    |             |                        |

 
# Hydrostatic Drive Assembly

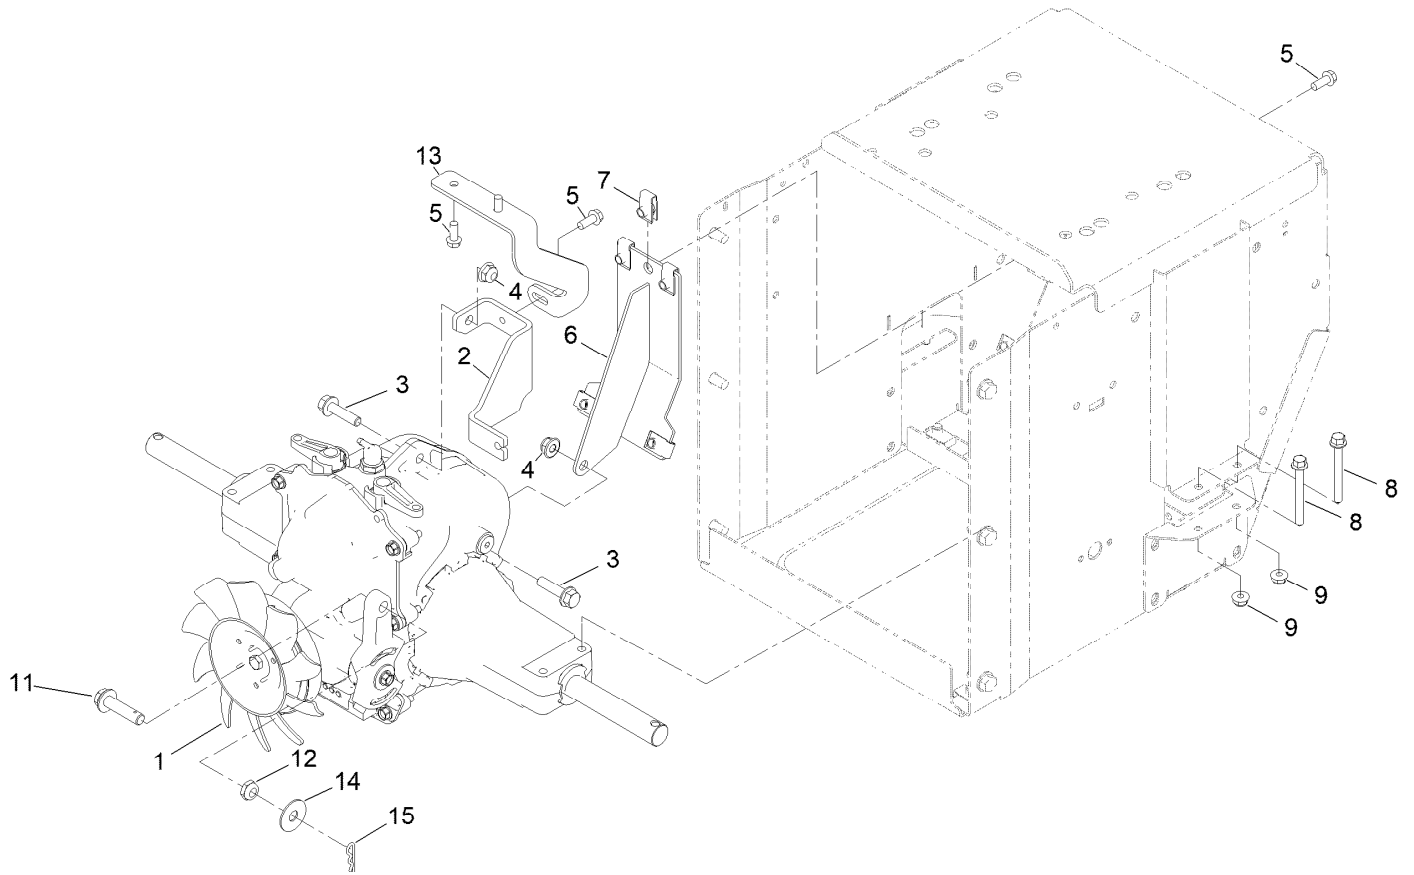

## Hydrostatic Drive Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|----------------------|
| 1           | 140-7930           | 1           | Hydro - Sst          | 8           | 138-3326           | 4           | Screw-HHF            |
| 2           | 140-7936-03        | 1           | Bracket-Hydro, Cable | 9           | 137-3005           | 4           | Nut-HF               |
| 3           | 119-4036           | 2           | Screw-HHF            | 11          | 144-1226           | 1           | Screw-HHF Spcl       |
| 4           | 119-4041           | 2           | Nut-HF               | 12          | 3296-59            | 1           | Nut-Lock, NI         |
| 5           | 32144-85           | 8           | Screw-HWH Thd Form   | 13          | 140-7937-03        | 1           | Bracket-Hydro, Upper |
| 6           | 140-7899-03        | 1           | Bracket-Hydro, Rear  | 14          | 119-4150           | 1           | Washer-Flat          |
| 7           | 107069             | 5           | Clip                 | 15          | 3290-307           | 1           | Pin-Cotter           |
 
# Track Drive Assembly

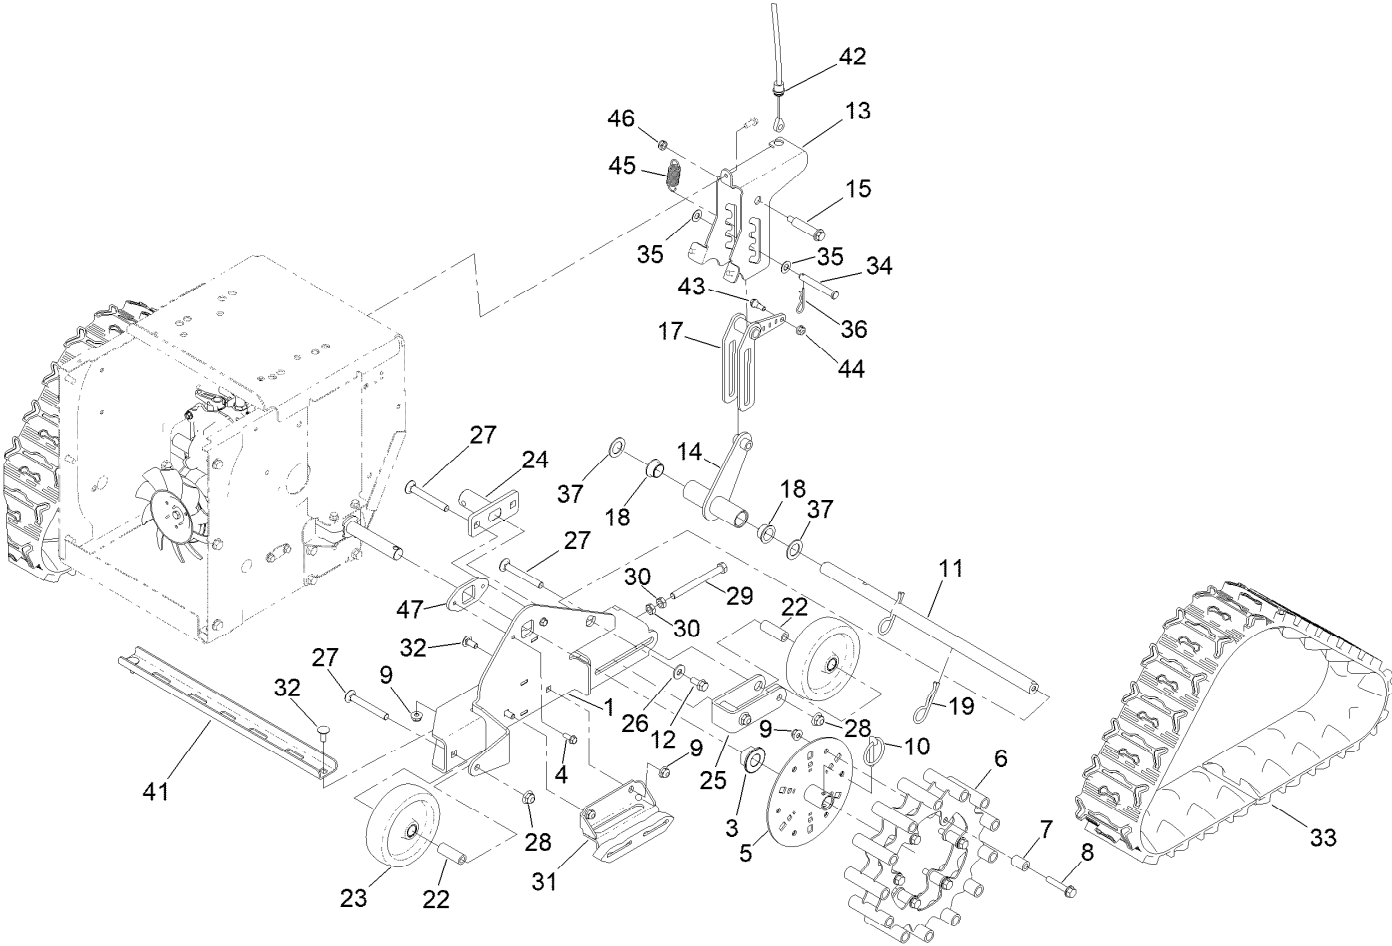

## Track Drive Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|-----------------------|
| 1           | 140-7865-03        | 1           | Support-Track, ASM LH    | 25          | 140-7879-03        | 2           | Yoke-Bogey            |
| 2           | 140-7870-03        | 1           | Support-Track, ASM RH ●  | 26          | 139-1723           | 2           | Washer-Flat           |
| 3           | 120-7162           | 2           | Bushing-Axle             | 27          | 109-6868           | 6           | Bolt-Carriage         |
| 4           | 32144-85           | 4           | Screw-HWH Thd Form       | 28          | 119-4042           | 6           | Nut-HF, NI            |
| 5           | 140-7886-03        | 2           | Hub-Drive, Weld ASM      | 29          | 140-7923           | 2           | Screw-HH              |
| 6           | 140-7889-01        | 2           | Wheel-Drive, Weld ASM    | 30          | 115-1166           | 2           | Washer-Plain          |
| 7           | 140-7864           | 12          | Tube-Support             | 31          | 140-7878           | 2           | Skid-Track, ASM       |
| 8           | 135-5779           | 12          | Screw-HHF                | 32          | 137-3061           | 6           | Bolt-CARR             |
| 9           | 119-4041           | 18          | Nut-HF                   | 33          | 140-7862           | 2           | Track-Snow            |
| 10          | 107-3039           | 2           | Pin-Lynch                | 34          | 283-52             | 1           | Pin-Clevis            |
| 11          | 140-7914-03        | 1           | Bar-Pivot                | 35          | 131-8667           | 2           | Washer-Thrust         |
| 12          | 139-2598           | 2           | Screw-HHF                | 36          | 3290-467           | 1           | Pin-Hair              |
| 13          | 140-7905-03        | 1           | Bracket-Height, Adjuster | 37          | 3-8664             | 2           | Washer-Thrust         |
| 14          | 140-7910-03        | 1           | Pivot-Link, Weld ASM     | 41          | 140-7929-01        | 1           | Brace-Front           |
| 15          | 136-7199           | 1           | Bolt-Shoulder            | 42          | 140-7928           | 1           | Cable-Adjust, Height  |
| 17          | 140-7909-03        | 1           | Latch ASM, Welded        | 43          | 42-3560            | 1           | Bolt-Shoulder         |
| 18          | 109-8054           | 2           | Bushing-Flange           | 44          | 119-4040           | 1           | Nut-HF, NI            |
| 19          | 3290-343           | 2           | Pin-Hair                 | 45          | 107-1045           | 1           | Spring-Extension      |
| 22          | 140-7876           | 6           | Bushing-Tensioner        | 46          | 137-3089           | 1           | Nut-Hex               |
| 23          | 140-7921           | 4           | Wheel-Bogey              | 47          | 140-7943-03        | 2           | Support-Bushing, Axle |
| 24          | 140-7890-03        | 2           | Tensioner, Welded        |             |                    |             |                       |

● Not illustrated

# Attachments and Accessories

## For 38891 Power TRX Commercial 1432 OHXE Snowthrower

| Product Name                                       | Model/Part |
|----------------------------------------------------|------------|
| Heated Grip Kit .....                              | 131-6460   |
| Kit-Cab.....                                       | 139-1640   |
| Toro Snow Oil 0W30 Synthetic 20-Ounce Bottle ..... | 38913      |
| Power Max HD Covers (2019) .....                   | 490-7415   |

**Notes:**



**Count on it.**