



**Count on it.**

# Parts Catalog

## **Power Max<sup>®</sup> Commercial 1432 OHXE Snowthrower**

**Model No. 38844—Serial No. 409000000 and Up**



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

Main Frame Assembly . . . . . 4

Auger Drive Assembly . . . . . 6

Gear Case Assembly . . . . . 8

Auger Gear Case Assembly No. 136-6620 . . . . . 10

Engine Assembly . . . . . 12

Fuel Systems and Carburetor Assembly . . . . . 14

Intake and Exhaust Assembly . . . . . 16

Ignition and Electrical Assembly . . . . . 18

Crankcase Assembly . . . . . 20

Governor Assembly . . . . . 22

Piston and Head Assembly . . . . . 24

Blower Housing and Shrouds Assembly . . . . . 26

Engine Decal Assembly . . . . . 28

Chute Assembly . . . . . 30

Chute Control Assembly . . . . . 32

 
Traction Control Assembly . . . . . 34

Handle Assembly . . . . . 36

Traction Drive Assembly . . . . . 38

Attachments and Accessories . . . . . 40


# Main Frame Assembly

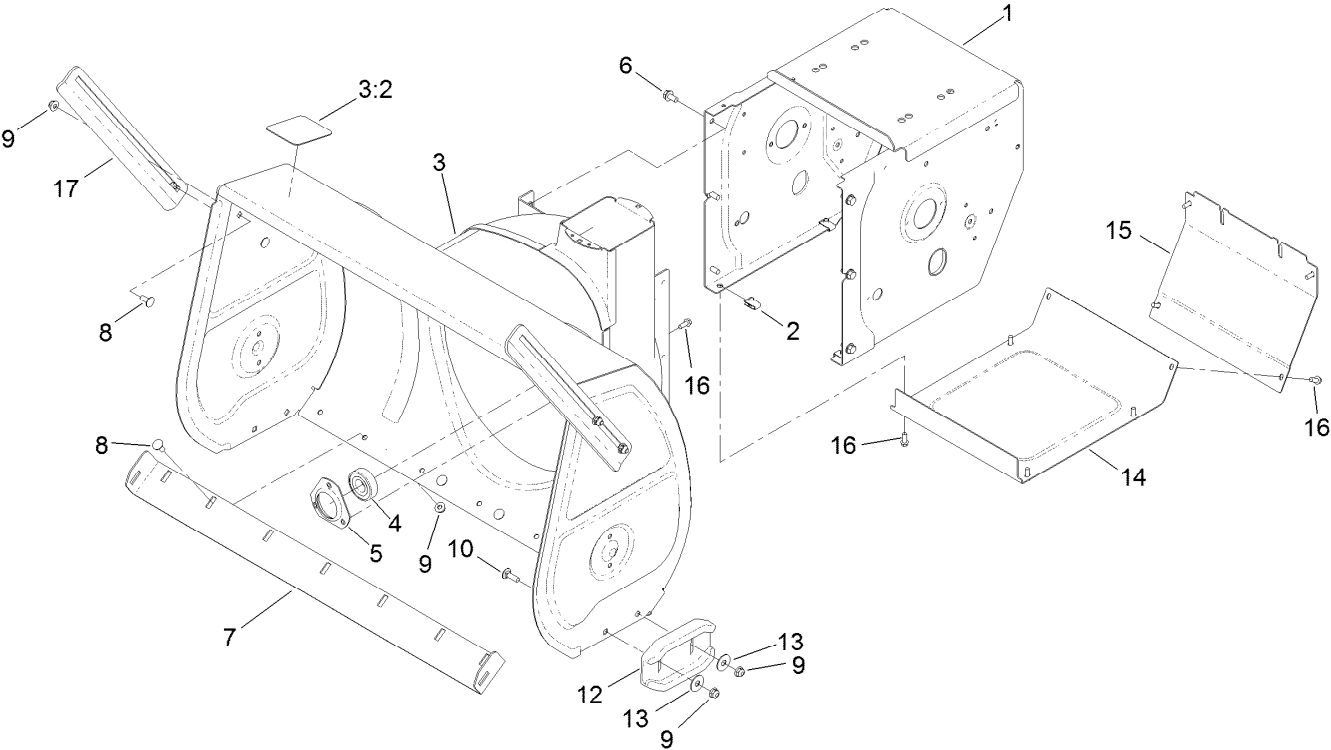

## Main Frame Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|---------------------|
| 1           | 136-6639-01        | 1           | Frame-Traction      | 9           | 119-4041           | 15          | Nut-HF              |
| 2           | 107069             | 8           | Clip                | 10          | 110-3144           | 4           | Bolt-CARR           |
| 3           | 139-1563           | 1           | Auger Housing ASM   | 12          | 120-3098-03        | 2           | Skid-Cast           |
| 3:2         | 121-6817           | 1           | Decal-Danger, Auger | 13          | 119-4150           | 4           | Washer-Flat         |
| 4           | 136-6571           | 1           | Bearing-Ball        | 14          | 136-6650-01        | 1           | Cover-Bottom        |
| 5           | 136-6573           | 1           | Retainer-Bearing    | 15          | 136-6651-01        | 1           | Cover-Rear          |
| 6           | 32144-14           | 6           | Screw-HWHTF         | 16          | 32144-85           | 11          | Screw-HWH Thd Form  |
| 7           | 136-6602-01        | 1           | Blade-Scraper       | 17          | 121-1228-03        | 2           | Breaker-Drift, Side |
| 8           | 137-3061           | 11          | Bolt-CARR           |             |                    |             |                     |

 
# Auger Drive Assembly

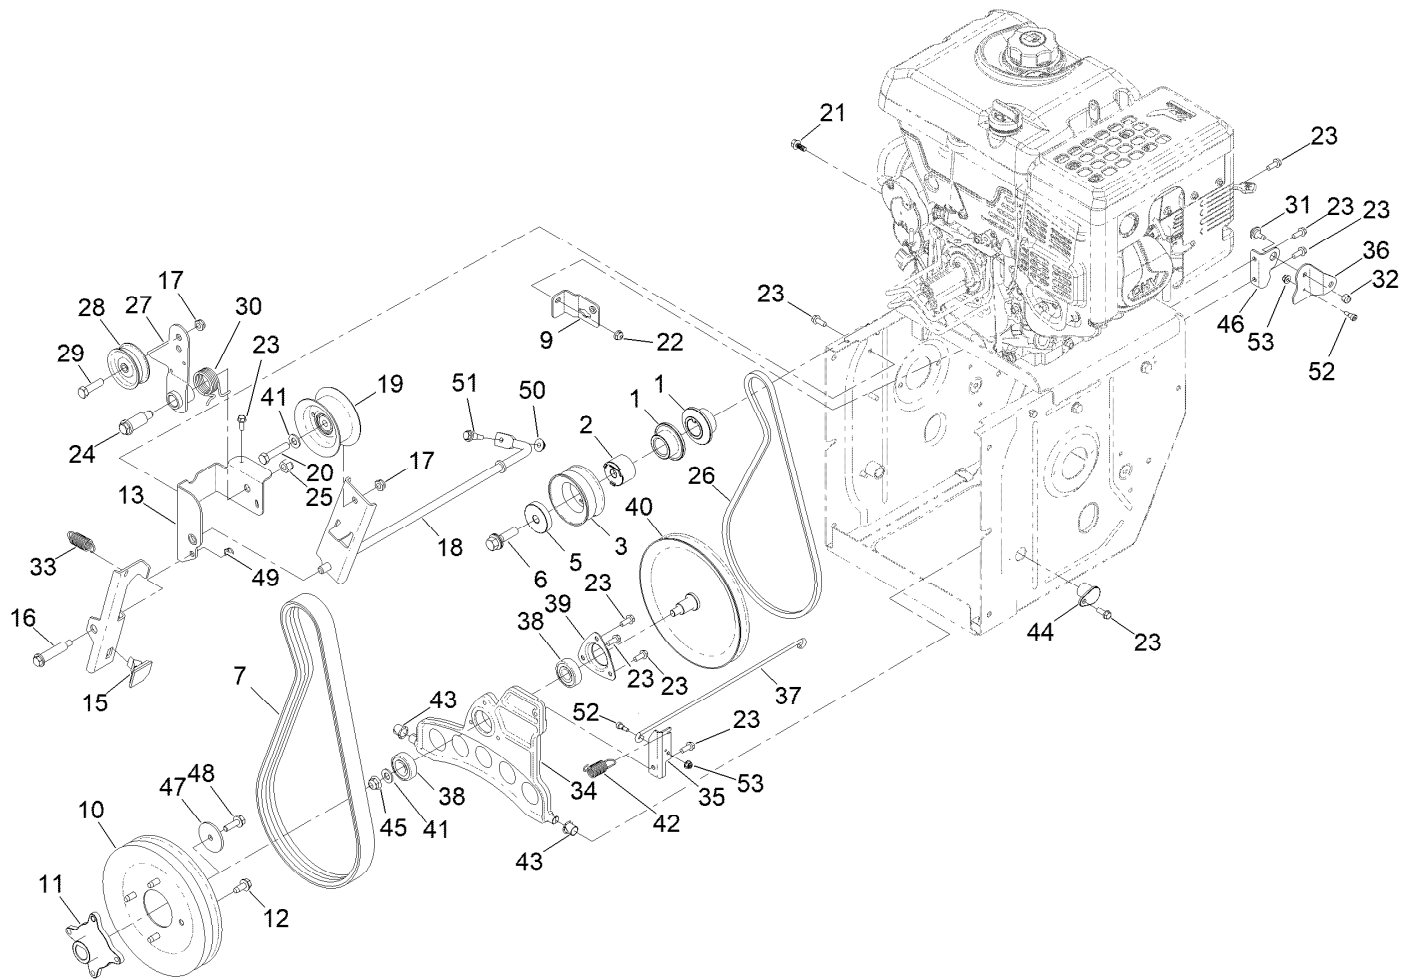

## Auger Drive Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>             | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|--------------------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 136-6564           | 2           | Pulley-Traction, Engine        | 28          | 3-4244             | 1           | Pulley-Idler            |
| 2           | 136-6691           | 1           | Pulley-Spacer                  | 29          | 137-3065           | 1           | Screw-HH                |
| 3           | 136-6690           | 1           | Pulley-Impeller, Double Sheave | 30          | 120-3060           | 1           | Spring-Torsion          |
| 5           | 138-3662           | 1           | Support-Pulley                 | 31          | 92-9698            | 1           | Screw-Shoulder          |
| 6           | 125-2466           | 1           | Bolt-Blade                     | 32          | 137-3094           | 1           | Nut-Hex                 |
| 7           | 136-6504           | 1           | Belt-V                         | 33          | 107-1045           | 1           | Spring-Extension        |
| 9           | 136-8654-03        | 1           | Bracket-Clutch, Impeller       | 34          | 136-6689           | 1           | Plate-Friction, Wheel   |
| 10          | 136-6557           | 1           | Pulley-Impeller, Double Sheave | 35          | 144-1621           | 1           | Bkt-Traction Plate      |
| 11          | 136-6558           | 1           | Hub-Pulley                     | 36          | 144-1622           | 1           | Bellcrank-Drive         |
| 12          | 32144-70           | 4           | Screw-HWHTF                    | 37          | 144-1613           | 1           | Link-Traction, HD       |
| 13          | 136-8671-03        | 1           | Bracket-Brake, Clutch          | 38          | 38-7820            | 2           | Bearing-Ball            |
| 15          | 66-8060            | 1           | Pad-Brake                      | 39          | 136-7124           | 1           | Retainer-Bearing        |
| 16          | 136-7199           | 1           | Bolt-Shoulder                  | 40          | 137-6154           | 1           | Pulley-Traction         |
| 17          | 121-4600           | 2           | Nut-Hex                        | 41          | 115-1166           | 2           | Washer-Plain            |
| 18          | 137-6234-03        | 1           | Arm-Clutch, Impeller           | 42          | 137-6189           | 1           | Spring-Extension        |
| 19          | 136-6531           | 1           | Pulley, Idler                  | 43          | 256-257            | 2           | Bushing-Nyliner         |
| 20          | 138-0722           | 1           | Screw-HH                       | 44          | 120-7156           | 2           | Bushing-Plate, Traction |
| 21          | 137-3111           | 1           | Screw-HHF                      | 45          | 119-4042           | 1           | Nut-HF, NI              |
| 22          | 137-3005           | 1           | Nut-HF                         | 46          | 136-6654           | 1           | Bracket-Bellcrank       |
| 23          | 32144-85           | 12          | Screw-HWH Thd Form             | 47          | 137-3121           | 1           | Washer-Plain            |
| 24          | 136-7116           | 1           | Bolt-Shoulder                  | 48          | 115-5142           | 1           | Screw-HHF, Patch        |
| 25          | 137-3095           | 1           | Nut-Hex                        | 49          | 137-3089           | 1           | Nut-Hex                 |
| 26          | 137-6151           | 1           | V-Belt                         | 50          | 137-3016           | 1           | Nut-HF                  |
| 27          | 136-7186           | 1           | Arm-Idler, Traction            | 51          | 104-0858           | 1           | Bolt-Shoulder           |
|             |                    |             |                                | 52          | 94-9422            | 2           | Screw-Shoulder          |
|             |                    |             |                                | 53          | 138-0719           | 2           | Nut-HF                  |

 
# Gear Case Assembly

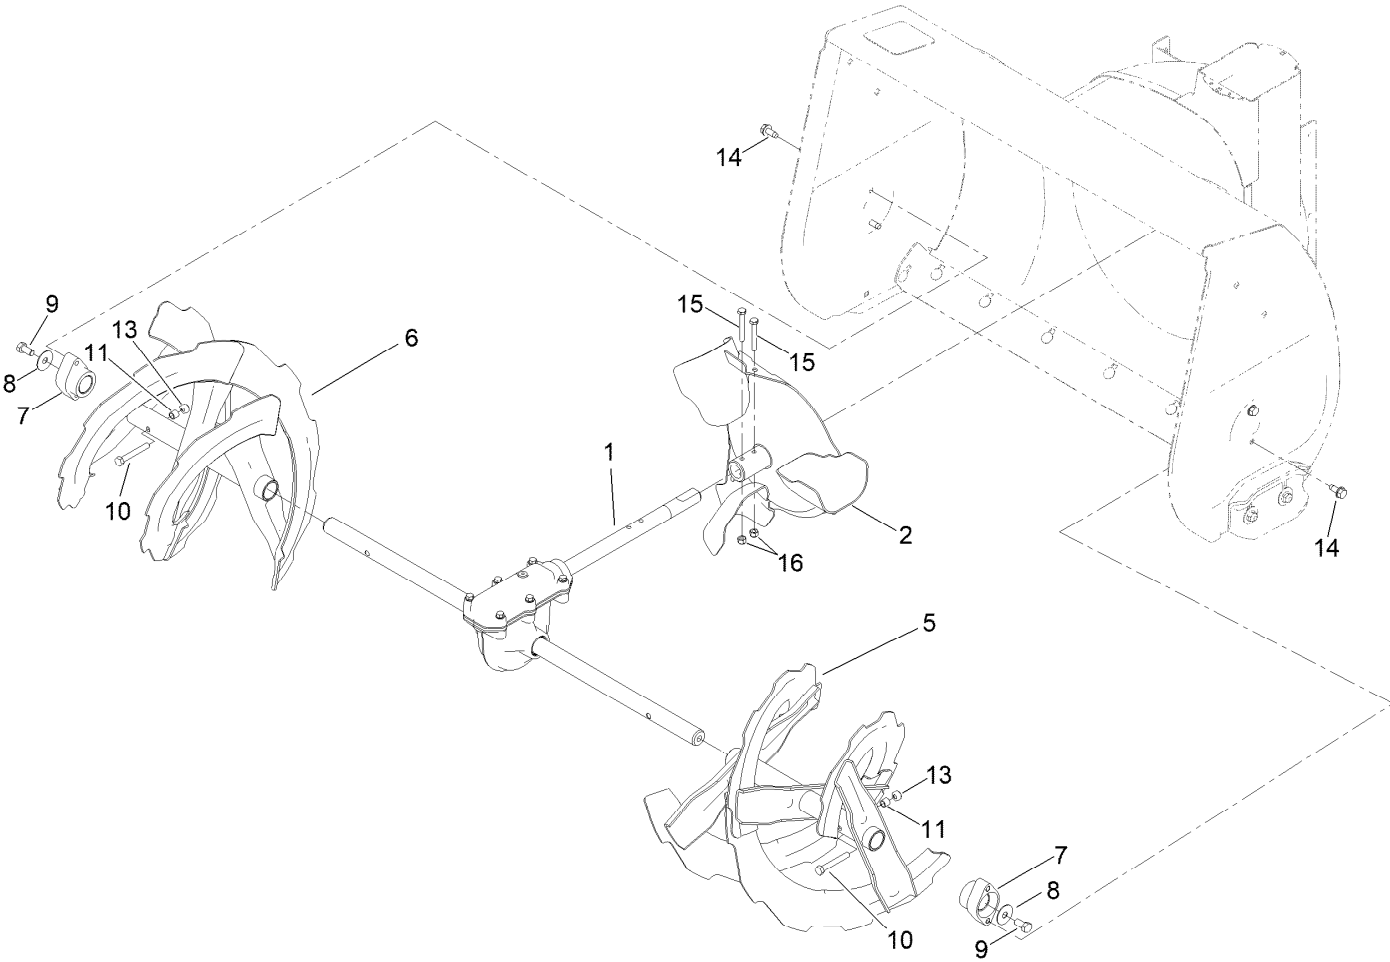

## Gear Case Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 136-6620           | 1           | Auger Gearcase ASM | 10          | 120-9738           | 2           | Screw-HH           |
| 2           | 136-6570-03        | 1           | Impeller           | 11          | 136-7148           | 2           | Spacer-Grommet     |
| 5           | 136-6597-03        | 1           | Auger-LH, 32 Inch  | 13          | 119-4038           | 2           | Nut-Hex            |
| 6           | 136-6598-03        | 1           | Auger-RH, 32 Inch  | 14          | 32144-70           | 4           | Screw-HWHTF        |
| 7           | 106-4570           | 2           | Bearing-Augur      | 15          | 137-3032           | 2           | Screw-HH           |
| 8           | 3-0750             | 2           | Washer             | 16          | 137-3088           | 2           | Nut-Hex            |
| 9           | 137-3066           | 2           | Screw-HH           |             |                    |             |                    |
 
# Auger Gear Case Assembly No. 136-6620

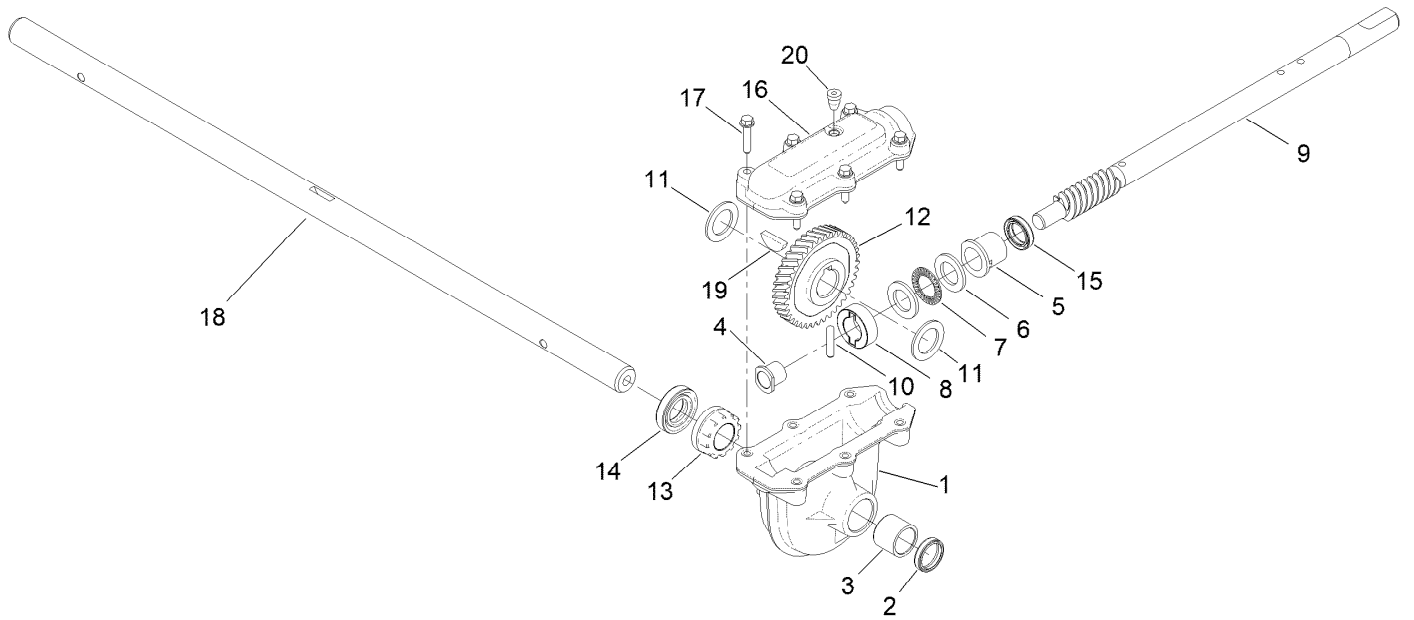


## Auger Gear Case Assembly No. 136-6620 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>               |
|-------------|--------------------|-------------|----------------------------------|
| 1           | 136-6547           | 1           | Gearbox-Lower (Mach)             |
| 2           | 137-6173           | 1           | Seal-Oil                         |
| 3           | 112-6635           | 1           | Bushing-Sleeve                   |
| 4           | 136-6556           | 1           | Bushing-Impeller Shaft,<br>Front |
| 5           | 37-6560            | 1           | Bushing-Input                    |
| 6           | 252-78             | 2           | Washer-Thrust                    |
| 7           | 252-76             | 1           | Bearing-Thrust                   |
| 8           | 136-6555           | 1           | Collar-Thrust                    |
| 9           | 137-6175           | 1           | Shaft-Impeller                   |
| 10          | 107-8899           | 1           | Pin-Dowel                        |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|----------------------|
| 11          | 252-71             | 2           | Washer-Thrust        |
| 12          | 138-0696           | 1           | Gear-Helical         |
| 13          | 136-6553           | 1           | Bushing-Auger Output |
| 14          | 136-6554           | 1           | Seal-Oil             |
| 15          | 137-6174           | 1           | Seal-Oil             |
| 16          | 136-6546           | 1           | Cover-Gearcase       |
| 17          | 108-4862           | 6           | Screw-HWH Thd Roll   |
| 18          | 136-6617           | 1           | Shaft-Auger, 32"     |
| 19          | 3257-10            | 1           | Key-Woodruff         |
| 20          | 138-3629           | 1           | Plug-Oil             |

 
# Engine Assembly

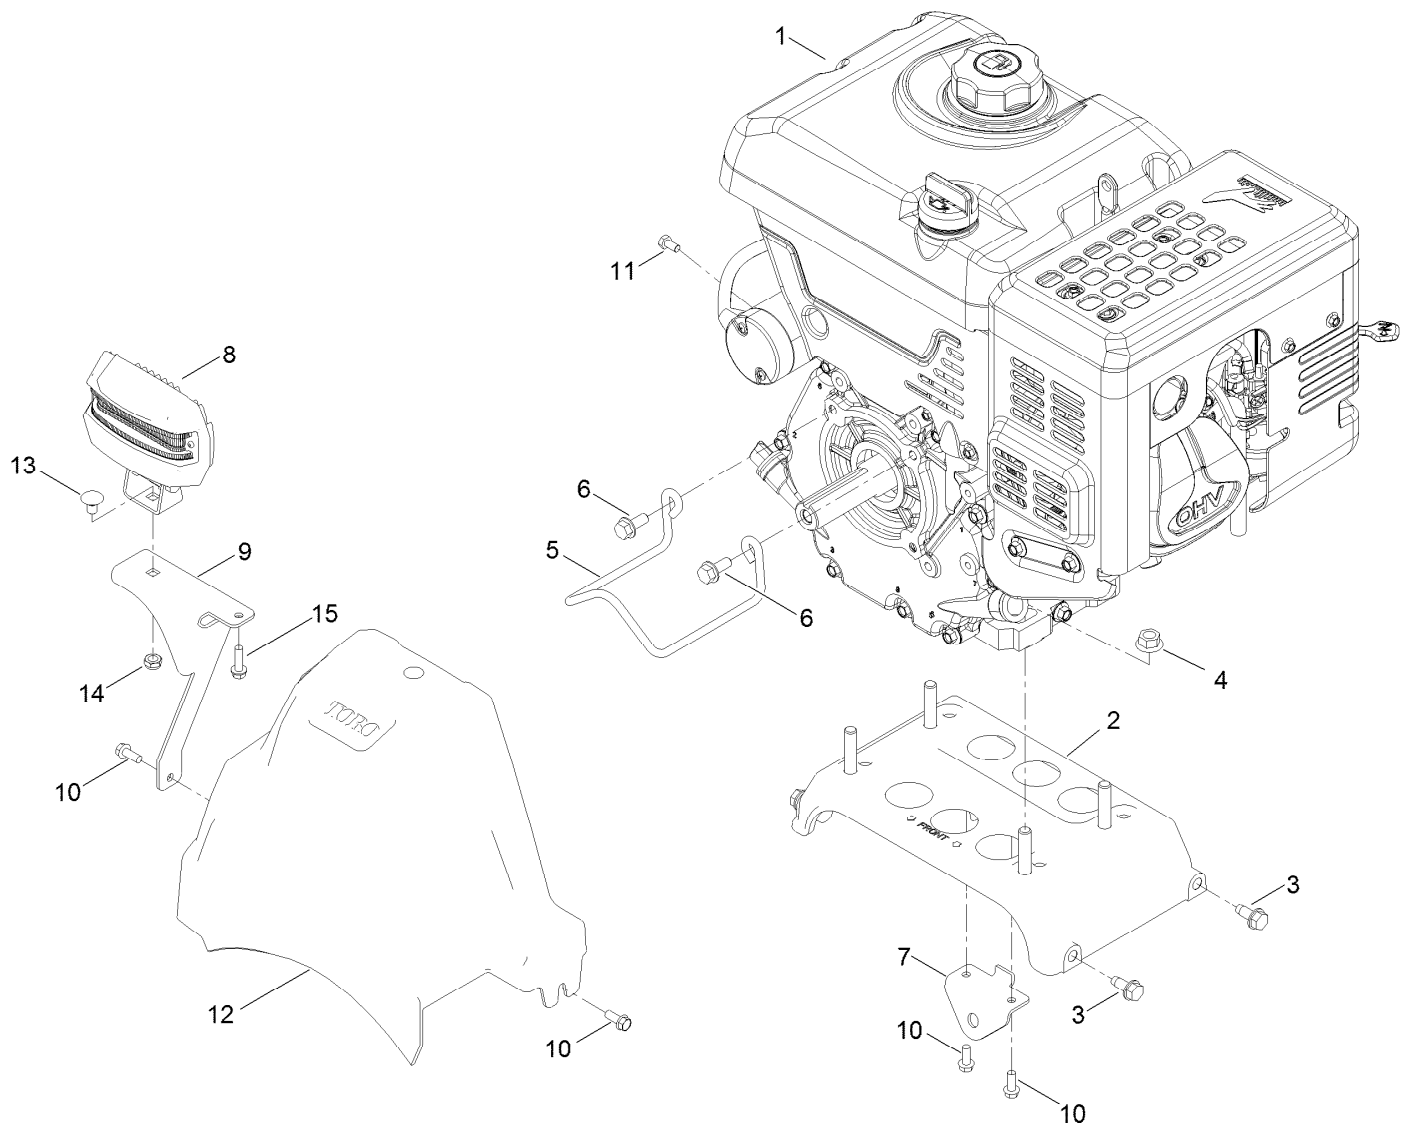

## Engine Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|---------------------------|-------------|--------------------|-------------|---------------------|
| 1           | 136-7796           | 1           | Engine-190Fds             | 9           | 138-0683-03        | 1           | Bracket-Light       |
| 2           | 137-6165           | 1           | Engine Plate ASM          | 10          | 32144-85           | 2           | Screw-HWH Thd Form  |
| 3           | 32144-70           | 4           | Screw-HWHTF               | 11          | 121-4604           | 1           | Screw-HH            |
| 4           | 136-8683           | 4           | Nut-Lock                  | 12          | 136-6606           | 1           | Cover-Belt          |
| 5           | 136-6607           | 1           | Belt Guide                | 13          | 3230-19            | 1           | Bolt-CARR           |
| 6           | 138-0690           | 2           | Screw-HHF,Patch           | 14          | 137-3089           | 1           | Nut-Hex             |
| 7           | 136-6644-03        | 1           | Bracket-Control, Traction | 15          | 137-3099           | 1           | Screw-Plastite, HWH |
| 8           | 138-0670           | 1           | LED Light ASM             |             |                    |             |                     |
 
# Fuel Systems and Carburetor Assembly

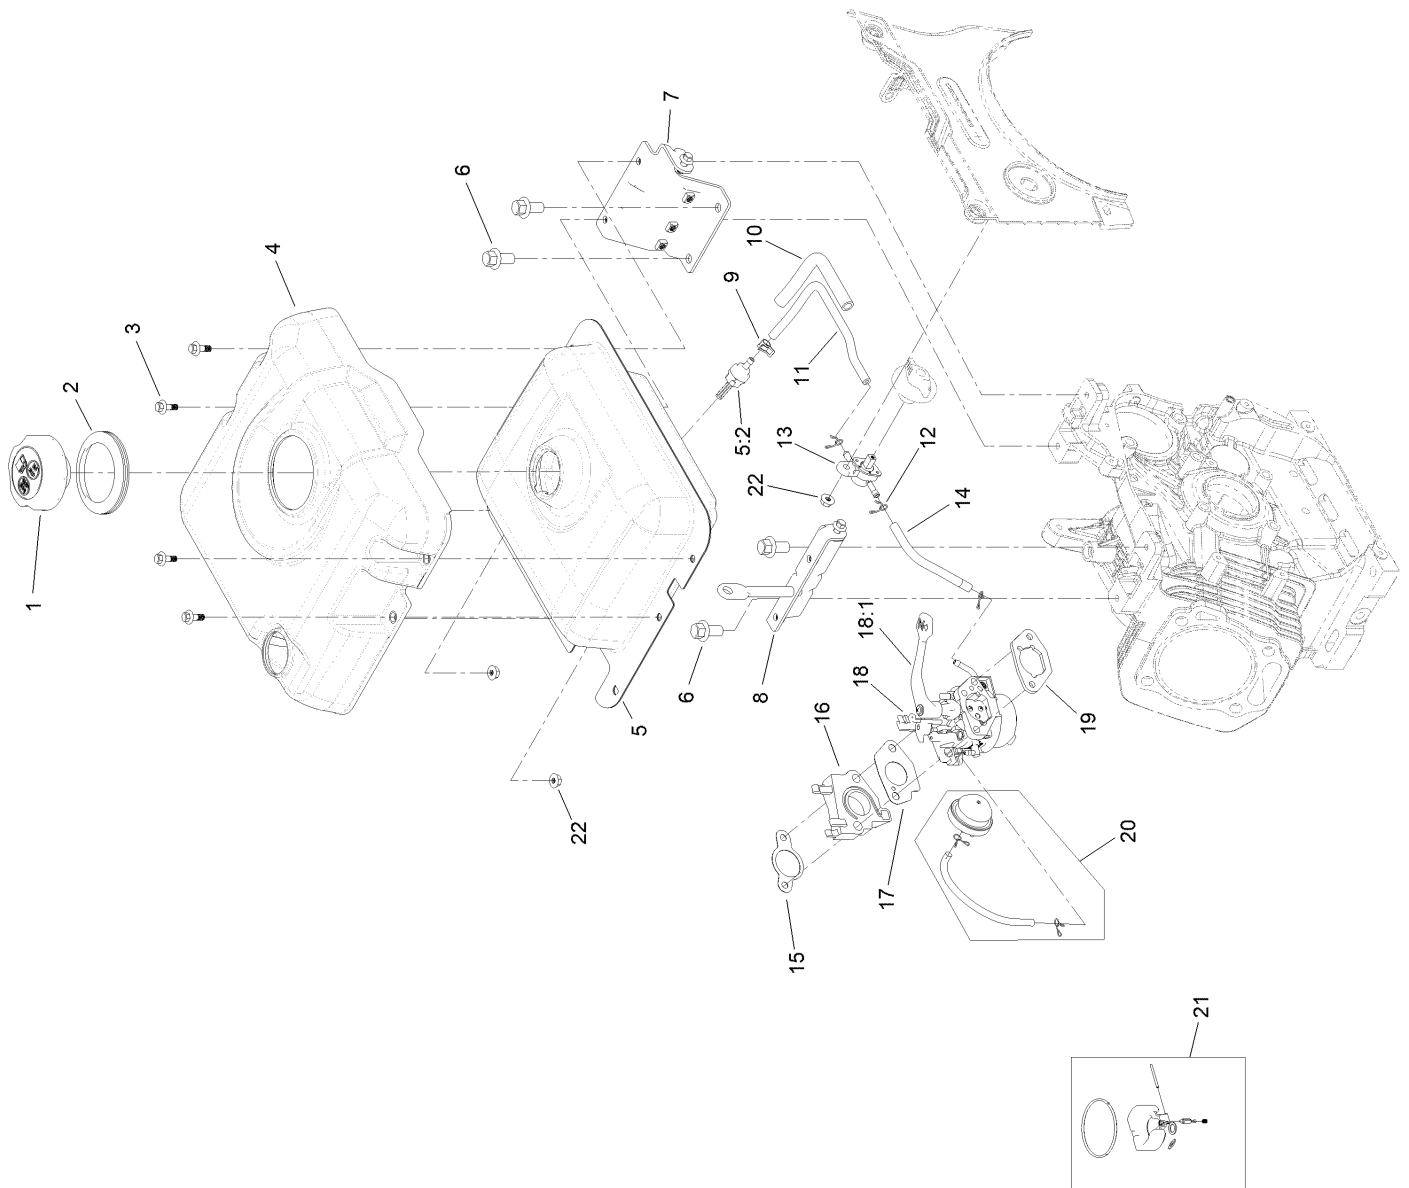


## Fuel Systems and Carburetor Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|---------------------------|
| 1           | 133-9823           | 1           | Cap-Fuel                 | 13          | 121-0258           | 1           | Valve-Fuel                |
| 2           | 121-0324           | 1           | Insert-Cover, Tank       | 14          | 139-0583           | 1           | Hose-Fuel                 |
| 3           | 121-0296           | 4           | Screw-HHF                | 15          | 139-0579           | 1           | Gasket-Carburetor         |
| 4           | 139-0574           | 1           | Cover-Tank, Fuel         | 16          | 139-0580           | 1           | Insulator-Carburetor      |
| 5           | 139-0567           | 1           | Fuel Tank And Filter ASM | 17          | 139-0581           | 1           | Gasket-Carburetor         |
| 5:2         | 127-9065           | 1           | Filter-Fuel              | 18          | 139-0594           | 1           | Carburetor ASM            |
| 6           | 139-0569           | 4           | Screw-HHF                | 18:1        | 139-0638           | 1           | Lever-Choke               |
| 7           | 139-0571           | 1           | Bracket-Tank, Right      | 19          | 121-0254           | 1           | Gasket-Coated, Rubber     |
| 8           | 139-0570           | 1           | Bracket-Tank, Left       | 20          | 127-9372           | 1           | Primer Kit                |
| 9           | 127-9120           | 1           | Clamp-Hose               | 21          | 139-0625           | 1           | Internal Carb Service Kit |
| 10          | 139-0566           | 1           | Sleeve-Abrasion          | 22          | 121-0010           | 3           | Nut-Flange                |
| 11          | 127-9064           | 1           | Hose-Fuel                | 99          | 139-0610           | 1           | High Altitude Kit ●       |
| 12          | 121-0087           | 3           | Clamp-Hose               |             |                    |             |                           |

● Not illustrated

 
# Intake and Exhaust Assembly

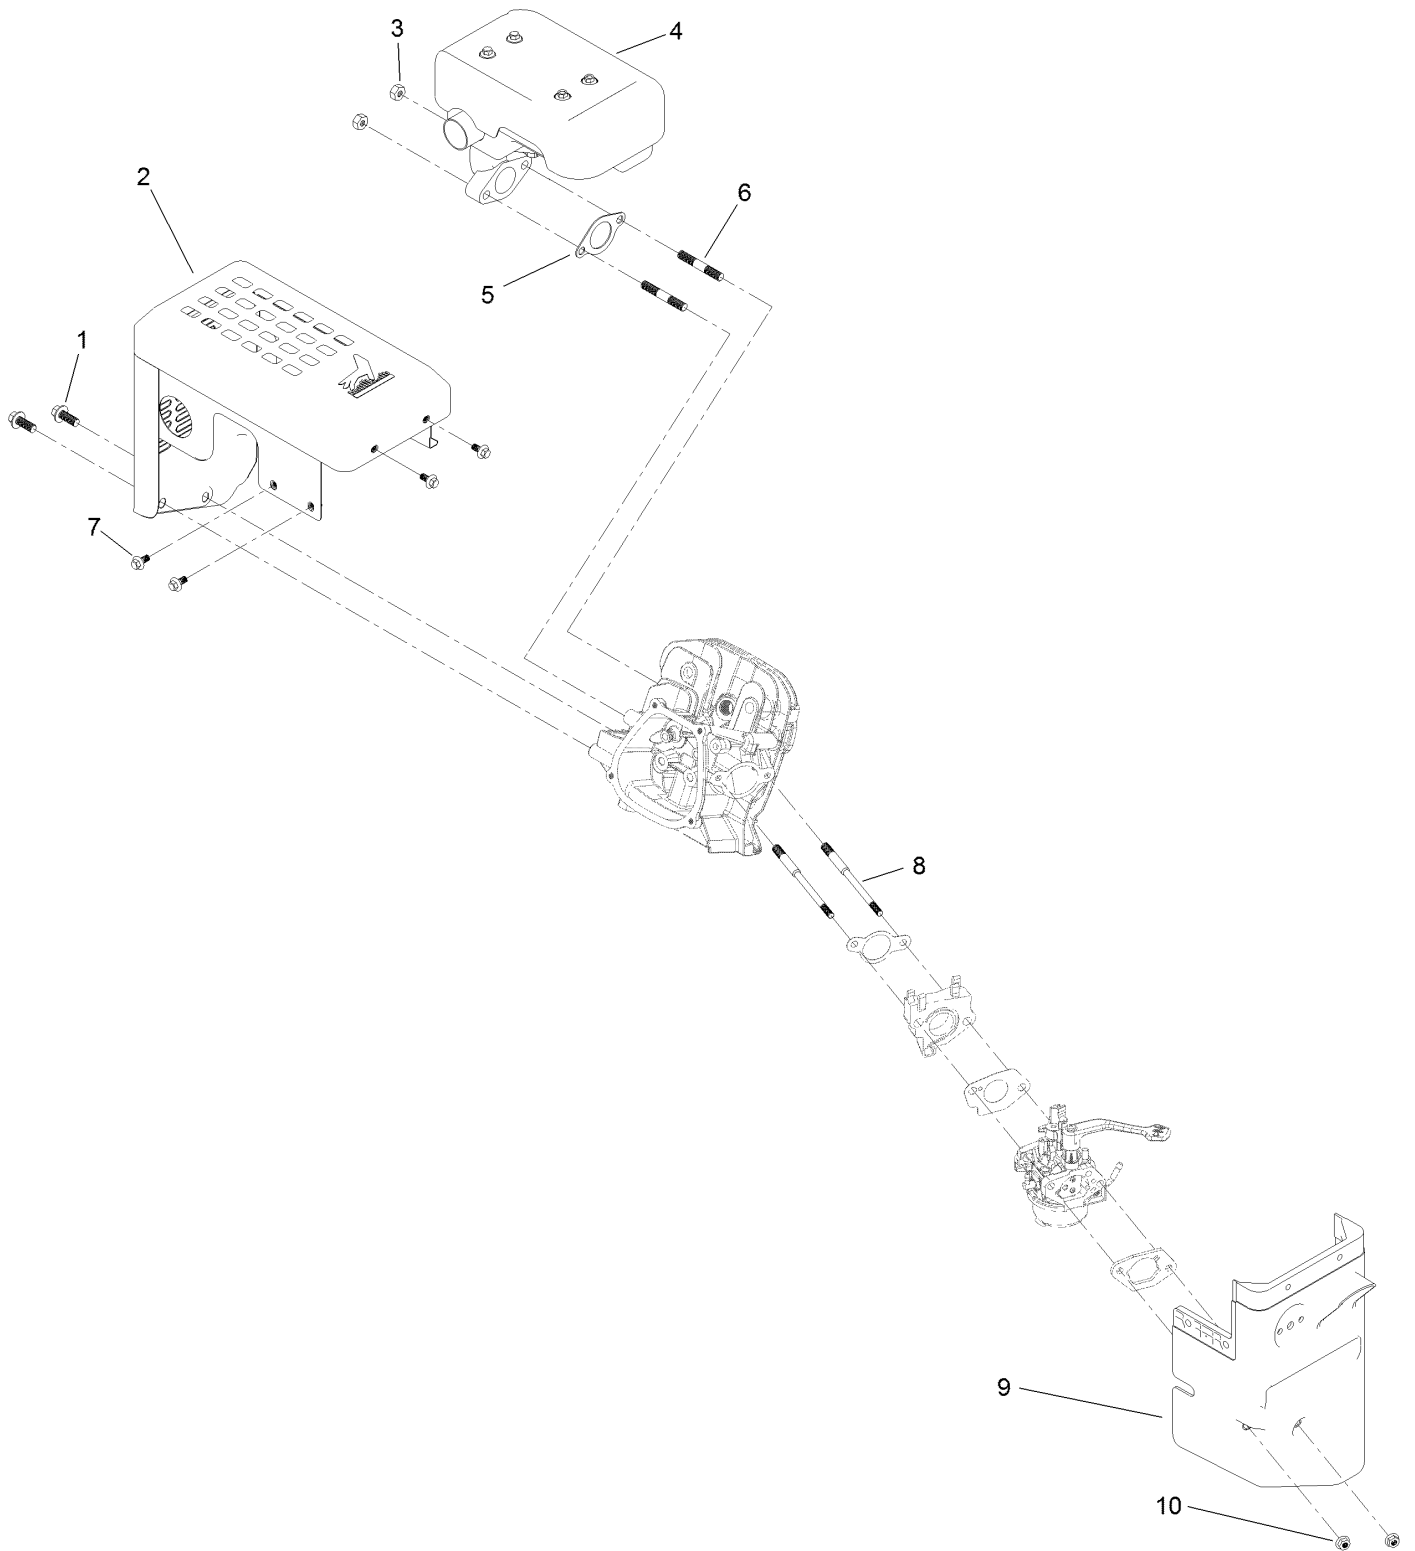

## Intake and Exhaust Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|------------------------|
| 1           | 121-0297           | 2           | Screw-HHF          | 6           | 121-0304           | 2           | Stud-Mount, Muffler    |
| 2           | 139-0577           | 1           | Shield-Muffler     | 7           | 121-0294           | 4           | Screw-HHF              |
| 3           | 121-0199           | 2           | Nut-HH             | 8           | 121-0303           | 2           | Stud-Mount, Carburetor |
| 4           | 139-0578           | 1           | Muffler ASM        | 9           | 139-0585           | 1           | Box-Heater             |
| 5           | 121-0272           | 1           | Gasket-Exhaust     | 10          | 121-0308           | 2           | Nut-Flange             |
 
# Ignition and Electrical Assembly

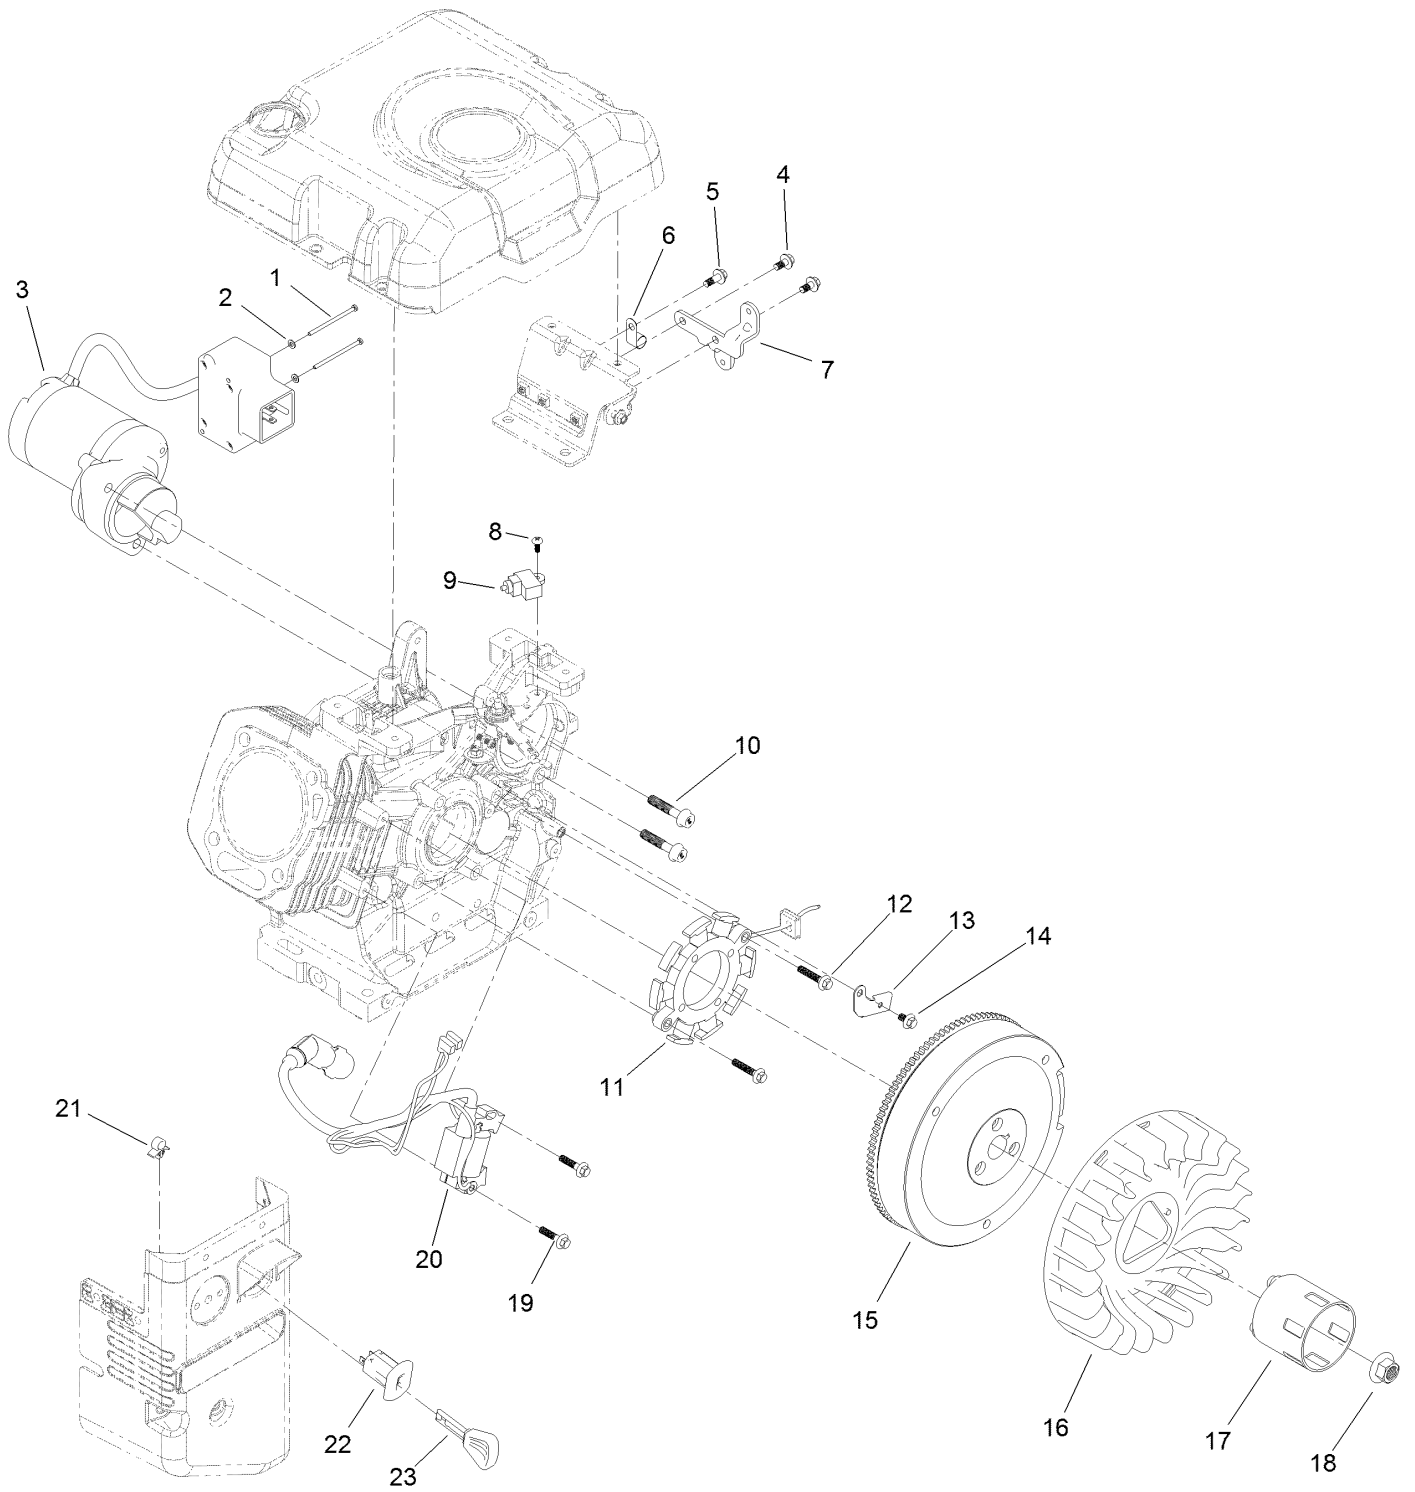


## Ignition and Electrical Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|---------------------|
| 1           | 121-0306           | 2           | Screw-Bhp           |
| 2           | 121-0312           | 2           | Washer-Plain        |
| 3           | 144-0991           | 1           | Motor-Starter       |
| 4           | 121-0294           | 2           | Screw-HHF           |
| 5           | 121-0296           | 1           | Screw-HHF           |
| 6           | 121-0017           | 1           | Clip-Harness, Wire  |
| 7           | 139-0572           | 1           | Bracket-Box, Switch |
| 8           | 120-4461           | 1           | Screw-PPH           |
| 9           | 139-0563           | 1           | Switch-Stop, Engine |
| 10          | 121-0298           | 2           | Screw-HHF           |
| 11          | 121-4108           | 1           | Stator Coil ASM     |
| 12          | 120-4223           | 2           | Screw-HHF           |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 13          | 139-0555           | 1           | Clamp-Wire, Charge |
| 14          | 121-0118           | 1           | Screw-HHF          |
| 15          | 139-0558           | 1           | Flywheel ASM       |
| 16          | 139-0559           | 1           | Fan-Cooling        |
| 17          | 139-0560           | 1           | Cup-Starter        |
| 18          | 121-0309           | 1           | Nut-Flange         |
| 19          | 121-0097           | 2           | Screw-HHF          |
| 20          | 139-0557           | 1           | Ignition Coil ASM  |
| 21          | 121-0326           | 1           | Clip               |
| 22          | 121-0283           | 1           | Switch-Key         |
| 23          | 117-7728           | 1           | Key                |

 
# Crankcase Assembly

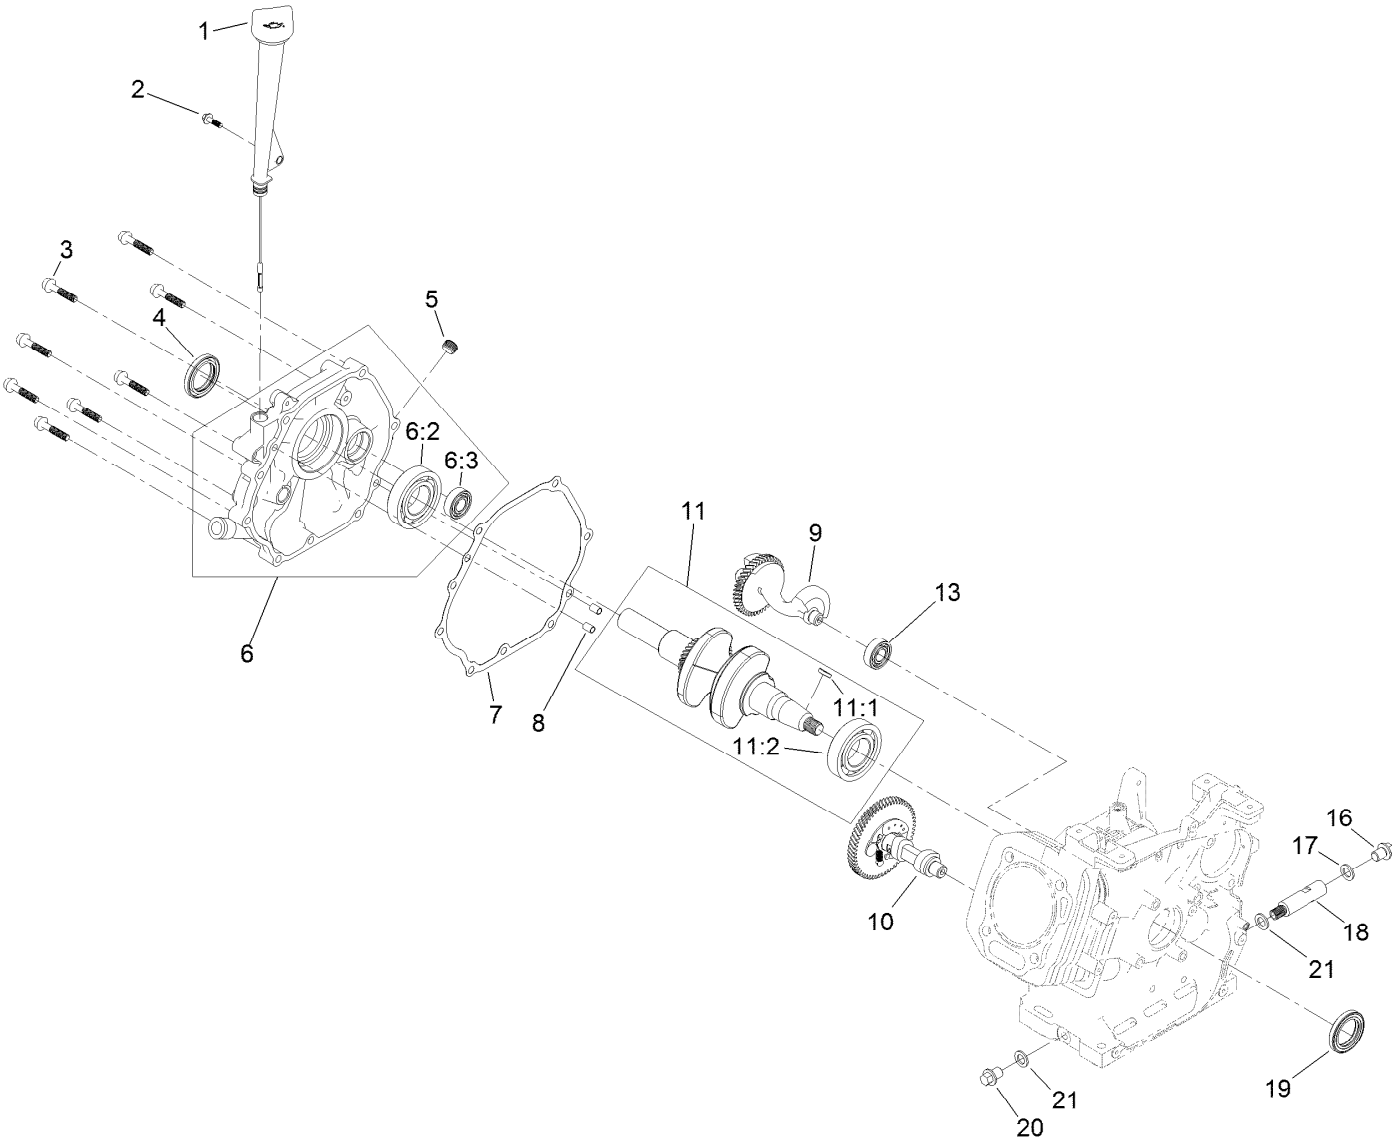

## Crankcase Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|--------------------|
| 1           | 136-7941           | 1           | Oil Fill ASM        | 10          | 136-7939           | 1           | Camshaft ASM       |
| 2           | 127-9123           | 1           | Screw-HHF           | 11          | 139-0586           | 1           | Crankshaft ASM     |
| 3           | 121-0298           | 8           | Screw-HHF           | 11:1        | 120-4320           | 1           | Key-Woodruff       |
| 4           | 136-7942           | 1           | Seal-Oil            | 11:2        | 120-4261           | 1           | Bearing-Ball       |
| 5           | 133-9805           | 1           | Plug-Drain          | 13          | 136-7949           | 1           | Bearing-Ball       |
| 6           | 139-0611           | 1           | Crankcase Cover ASM | 16          | 121-0030           | 1           | Screw-HHF          |
| 6:2         | 120-4261           | 1           | Bearing-Ball        | 17          | 121-0048           | 1           | Washer-Plain       |
| 6:3         | 136-7949           | 1           | Bearing-Ball        | 18          | 121-0229           | 1           | Tube-Drain, Oil    |
| 7           | 136-7945           | 1           | Gasket-Cover, Case  | 19          | 139-0556           | 1           | Seal-Oil           |
| 8           | 121-0314           | 2           | Pin-Dowel           | 20          | 121-0222           | 1           | Screw-HHF          |
| 9           | 139-0550           | 1           | Shaft-Balance       | 21          | 121-0310           | 2           | Washer-Plain       |

 
# Governor Assembly

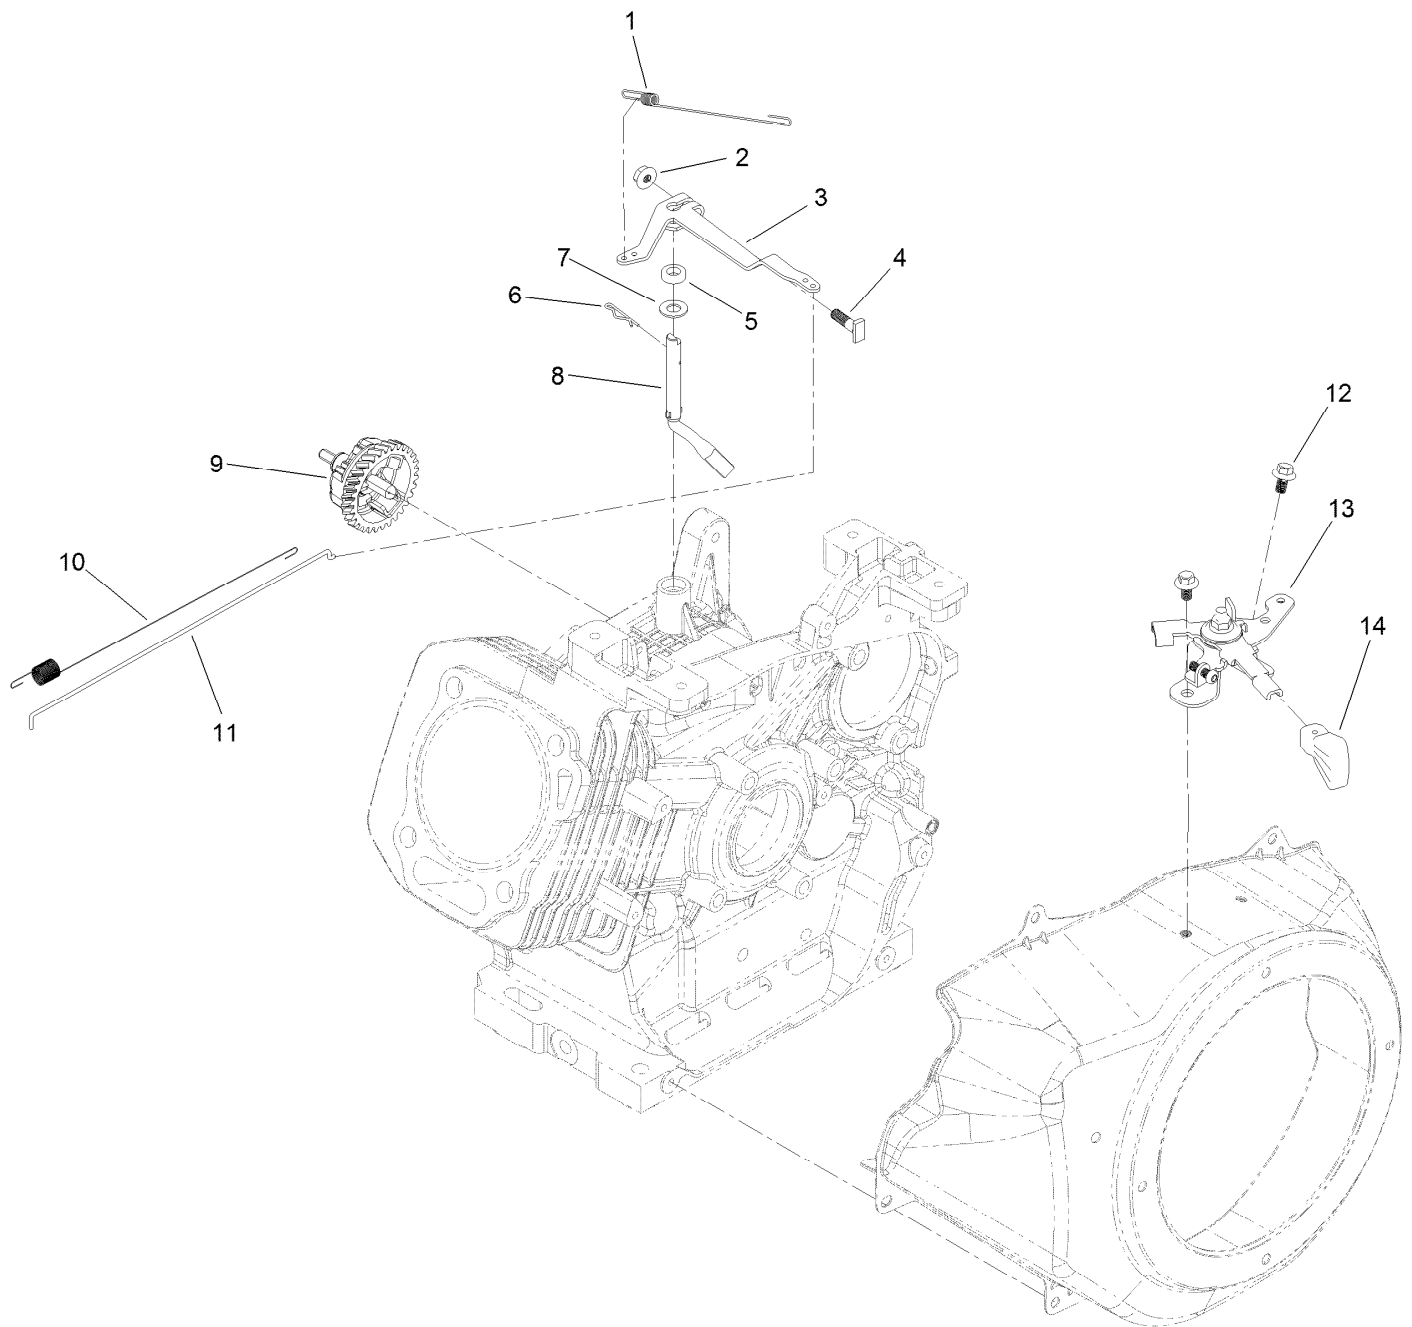

## Governor Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 139-0564           | 1           | Spring-Governor    | 8           | 139-0553           | 1           | Shaft-Governor          |
| 2           | 139-0552           | 1           | Nut-Flange         | 9           | 136-7944           | 1           | Governor Gear ASM       |
| 3           | 139-0551           | 1           | Arm-Governor       | 10          | 121-0261           | 1           | Spring-Return, Throttle |
| 4           | 120-4238           | 1           | Bolt-Arm, Governor | 11          | 139-0584           | 1           | Rod-Governor            |
| 5           | 120-4257           | 1           | Seal-Oil           | 12          | 121-0118           | 2           | Screw-HHF               |
| 6           | 120-4256           | 1           | Pin-Hair           | 13          | 139-0562           | 1           | Throttle Control ASM    |
| 7           | 121-0311           | 1           | Washer-Plain       | 14          | 121-0269           | 1           | Knob-Control, Throttle  |

 
# Piston and Head Assembly

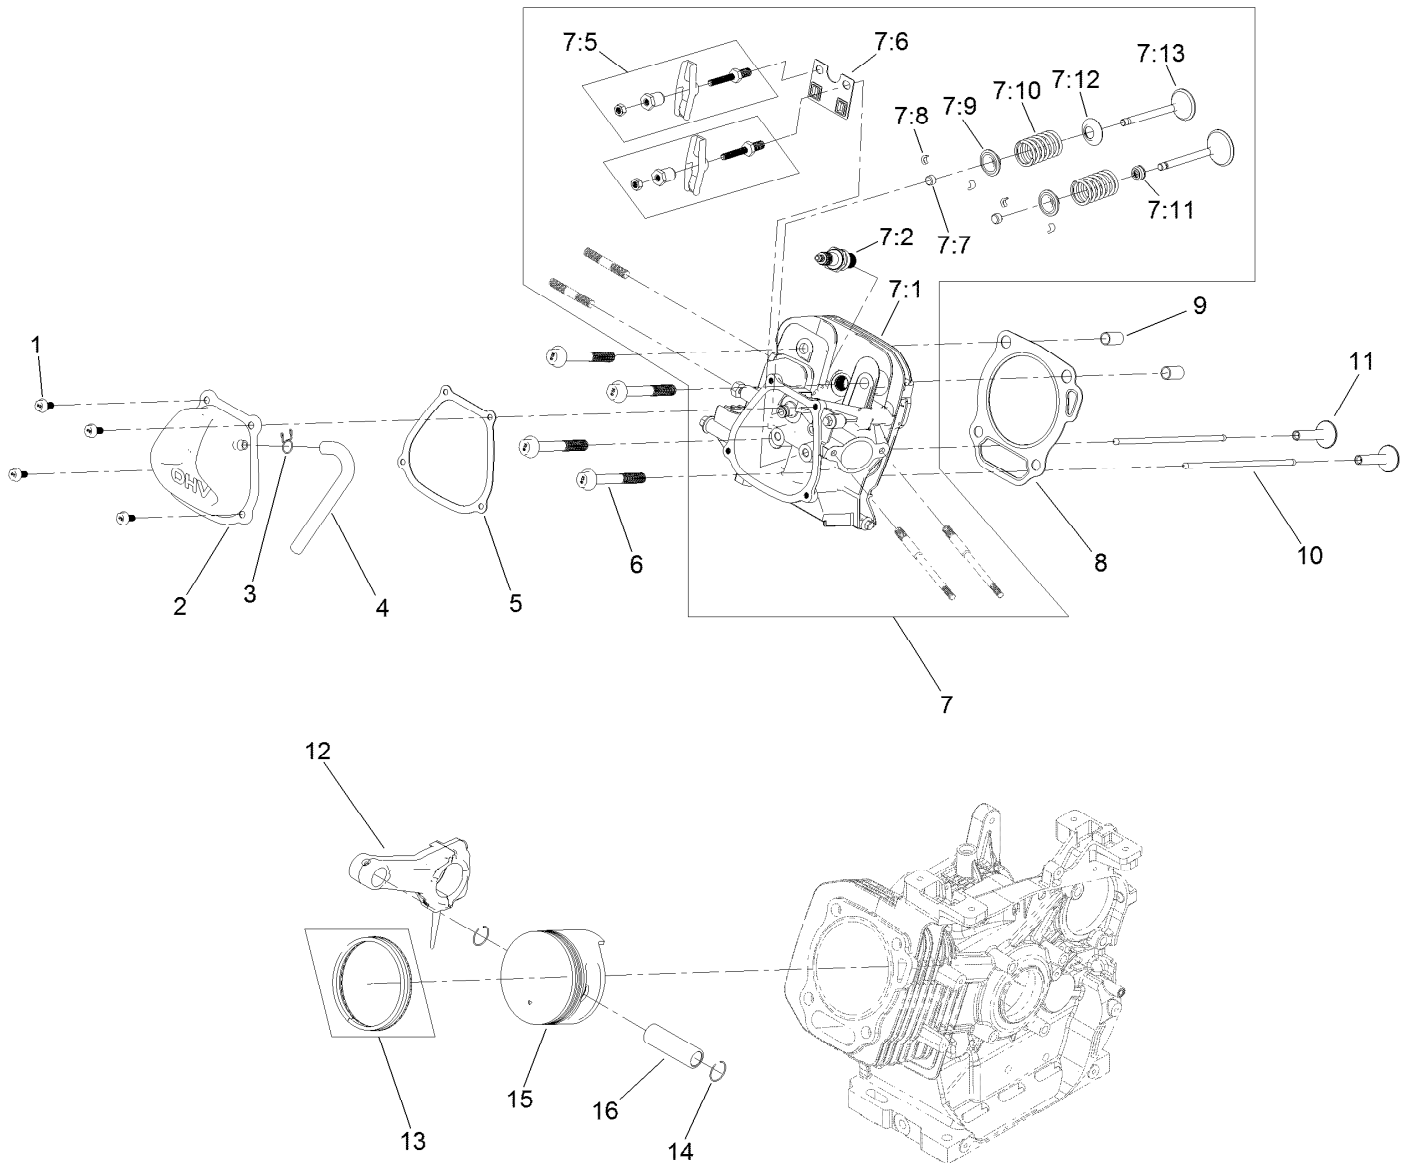

## Piston and Head Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         |
|-------------|--------------------|-------------|------------------------|-------------|--------------------|-------------|----------------------------|
| 1           | 121-0044           | 4           | Screw-HHF              | 7:10        | 120-4305           | 2           | Spring-Valve               |
| 2           | 121-0233           | 1           | Valve Cover ASM        | 7:11        | 120-4304           | 1           | Seal-Stem, Valve           |
| 3           | 127-9408           | 1           | Clamp-Hose             | 7:12        | 120-4303           | 1           | Seat-Spring, Valve         |
| 4           | 139-0629           | 1           | Tube-Breather          | 7:13        | 136-7940           | 1           | Valve Set                  |
| 5           | 121-0234           | 1           | Gasket-Cover, Valve    | 8           | 139-0590           | 1           | Gasket-Head, Cylinder      |
| 6           | 121-0302           | 4           | Screw-HHF              | 9           | 120-4200           | 2           | Pin-Dowel                  |
| 7           | 139-0595           | 1           | Complete Head ASM      | 10          | 136-7938           | 2           | Rod-Push                   |
| 7:1         | 136-7932           | 1           | Head-Cylinder          | 11          | 120-4298           | 2           | Lifter-Valve               |
| 7:2         | 81-3250            | 1           | Spark Plug             | 12          | 136-7946           | 1           | Connecting Rod ASM         |
| 7:5         | 121-0245           | 2           | Rocker Arm ASM         | 13          | 139-0592           | 1           | Ring Set                   |
| 7:6         | 121-0247           | 1           | Plate-Guide, Push Rod  | 14          | 120-4288           | 2           | Ring-Retaining, Piston Pin |
| 7:7         | 121-0244           | 2           | Rotator-Valve          | 15          | 139-0591           | 1           | Piston                     |
| 7:8         | 120-4307           | 4           | Keeper-Valve           | 16          | 120-4291           | 1           | Pin-Piston                 |
| 7:9         | 120-4306           | 2           | Retainer-Spring, Valve |             |                    |             |                            |

 
# Blower Housing and Shrouds Assembly

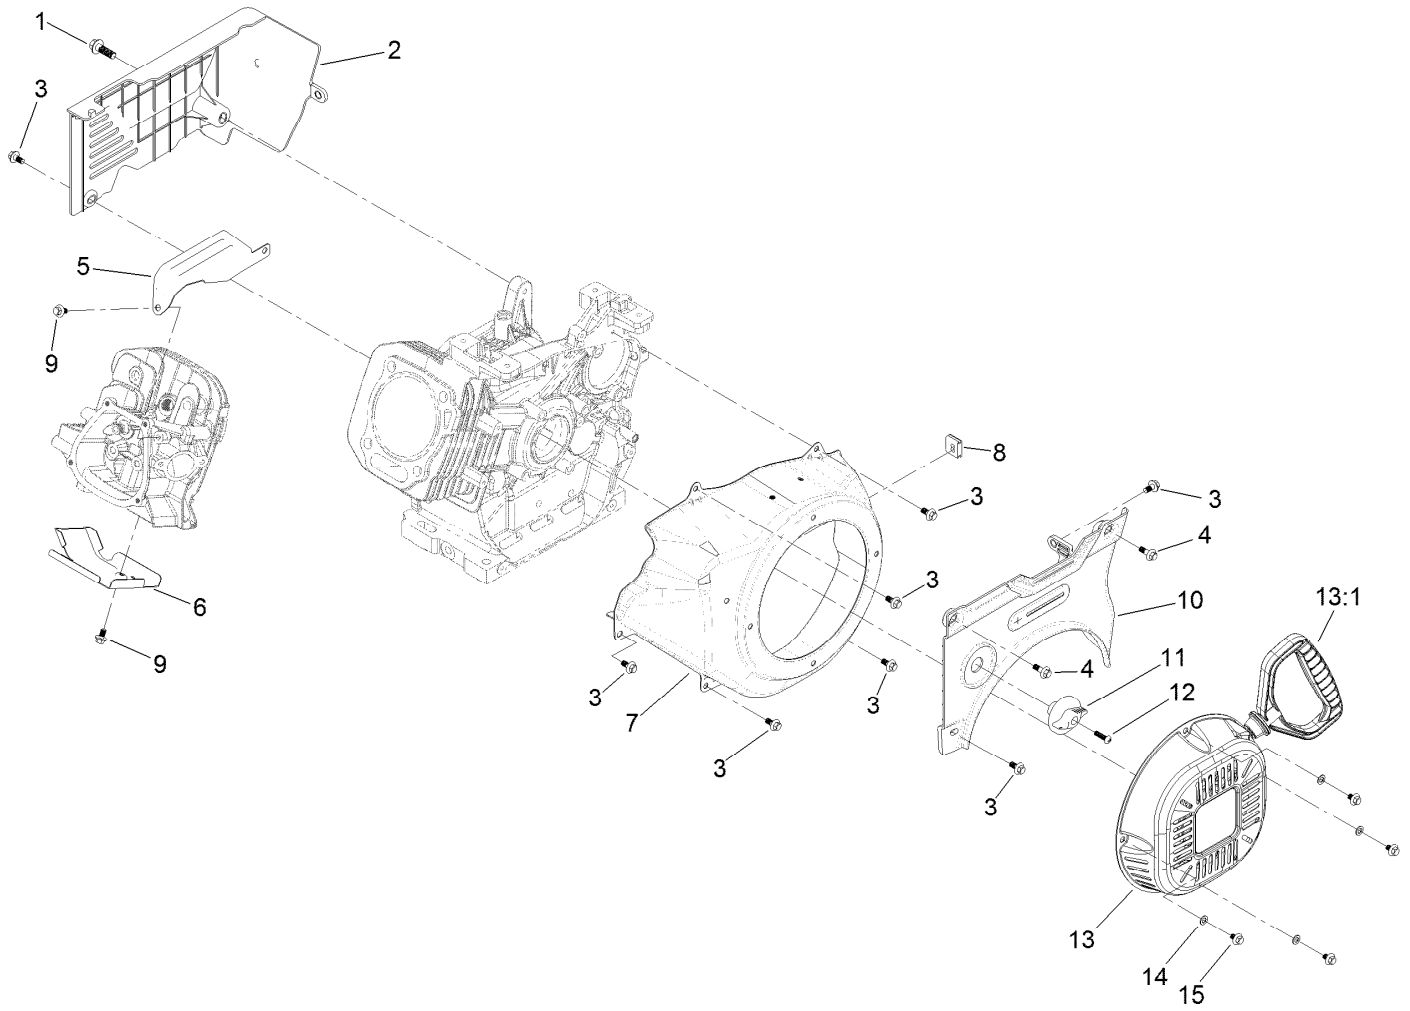

## Blower Housing and Shrouds Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|----------------------|
| 1           | 139-0575           | 1           | Screw-HHF          | 9           | 121-0118           | 2           | Screw-HHF            |
| 2           | 139-0576           | 1           | Panel-Rear         | 10          | 139-0565           | 1           | Panel-Control, Front |
| 3           | 121-0294           | 8           | Screw-HHF          | 11          | 121-0268           | 1           | Knob-Valve, Fuel     |
| 4           | 121-0296           | 2           | Screw-HHF          | 12          | 121-0305           | 1           | Screw-Bhp            |
| 5           | 136-7937           | 1           | Shroud-Head, Upper | 13          | 139-0561           | 1           | Recoil ASM           |
| 6           | 136-7933           | 1           | Shroud-Head, Lower | 13:1        | 121-0287           | 1           | Handle-Recoil        |
| 7           | 121-0307           | 1           | Shroud-Recoil      | 14          | 127-9380           | 4           | Washer-Plain         |
| 8           | 121-0325           | 1           | Grommet-Rubber     | 15          | 127-9031           | 4           | Screw-HHF            |

 
# Engine Decal Assembly

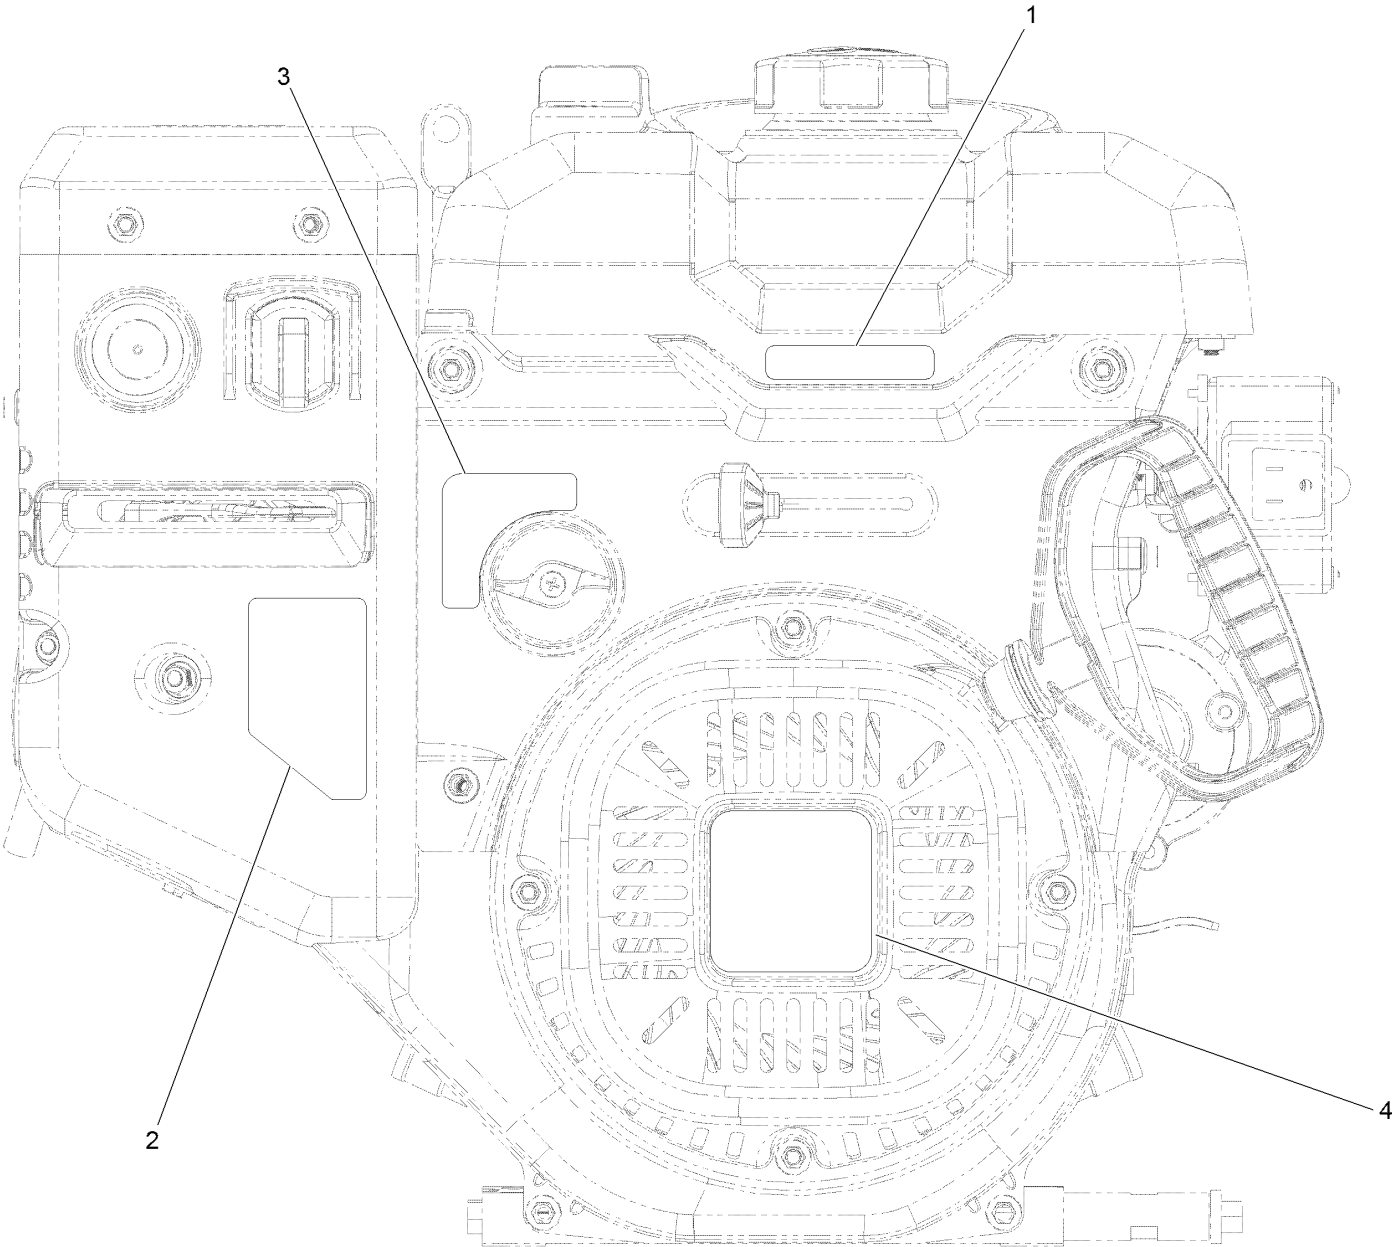

## Engine Decal Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|--------------------|
| 1           | 131-6487           | 1           | Decal-Throttle        | 3           | 136-7825           | 1           | Decal-Valve, Fuel  |
| 2           | 120-9805           | 1           | Decal-Control, Engine | 4           | 138-3622           | 1           | Decal-Recoil       |

 
# Chute Assembly

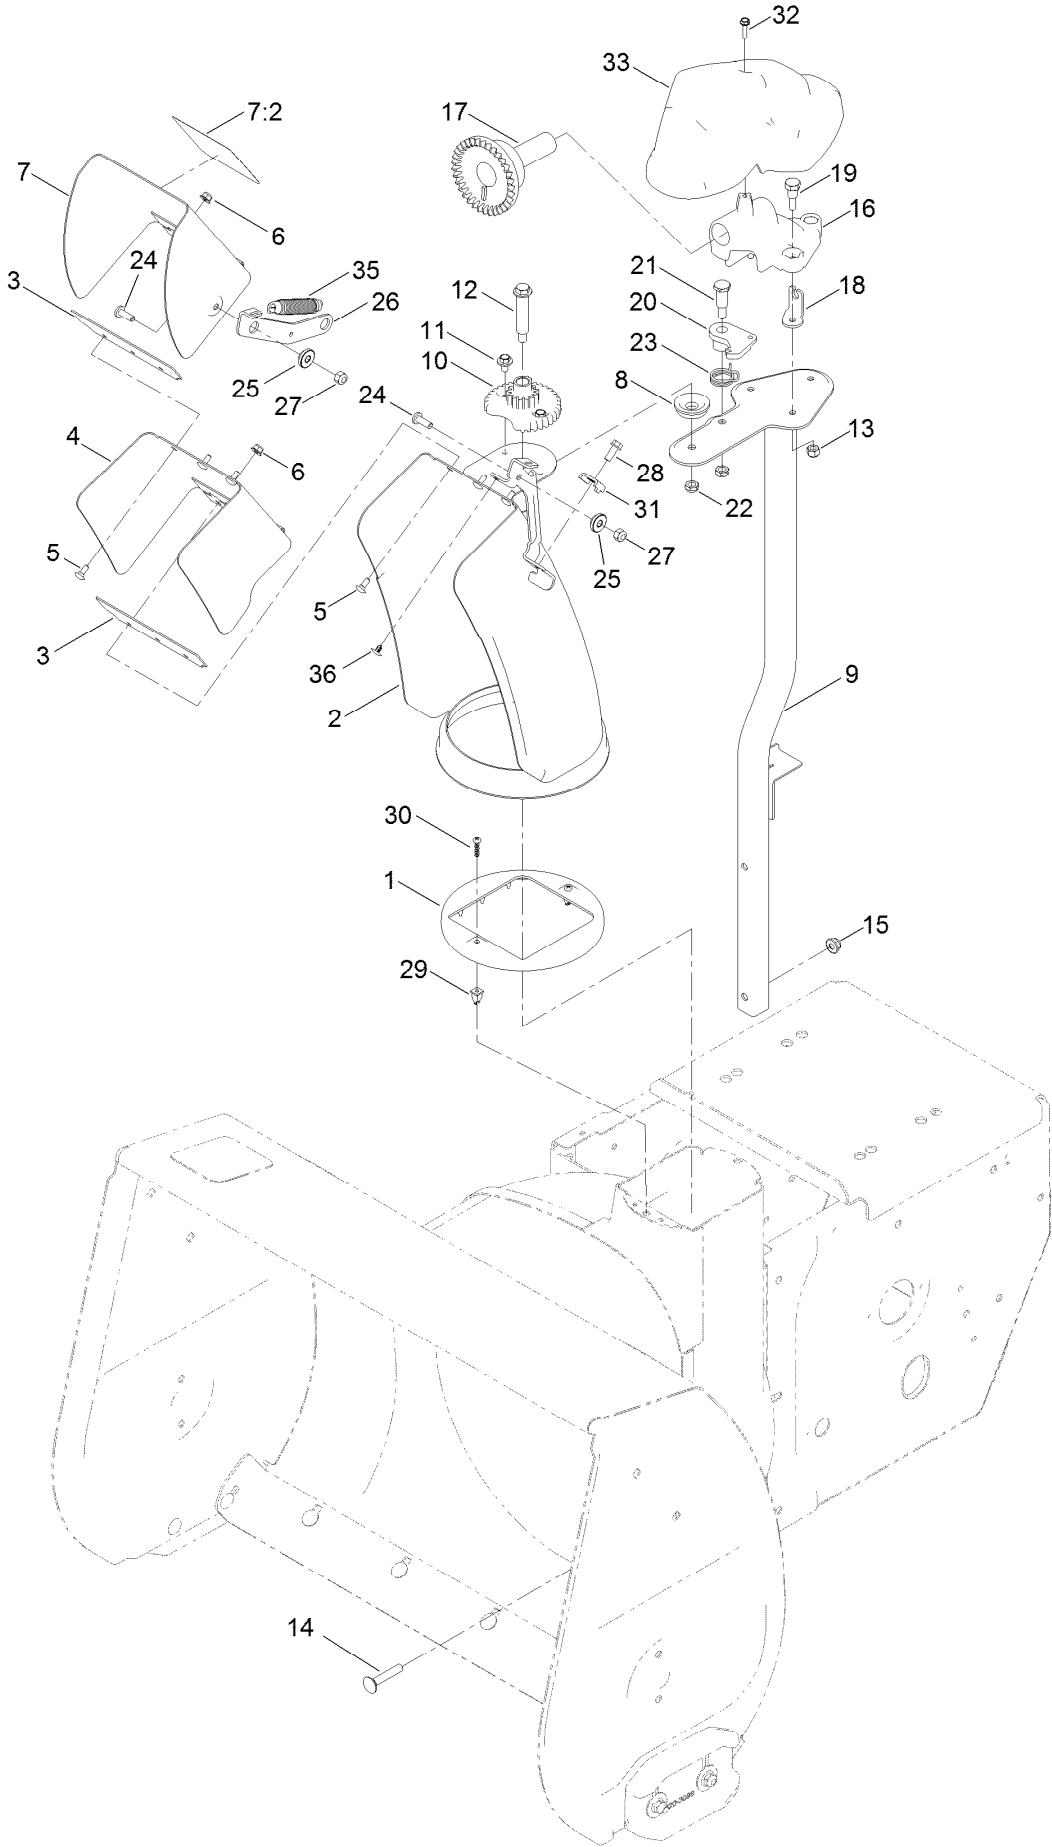

## Chute Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|---------------------|
| 1           | 136-6515           | 1           | Guide-Chute          | 18          | 136-6676           | 1           | Anchor-Cable        |
| 2           | 136-6580-01        | 1           | Lower Chute ASM      | 19          | 136-7197           | 3           | Screw-Shoulder      |
| 3           | 138-3671           | 2           | Gasket-Deflector     | 20          | 136-6525           | 1           | Latch-Chute         |
| 4           | 136-6582-01        | 1           | Middle Deflector ASM | 21          | 137-3103           | 1           | Screw-Shoulder, HH  |
| 5           | 135-1929           | 6           | Bolt-CARR            | 22          | 137-3089           | 2           | Nut-Hex             |
| 6           | 138-0719           | 6           | Nut-HF               | 23          | 108-7315           | 1           | Spring-Torsion      |
| 7           | 139-1564           | 1           | Deflector ASM        | 24          | 138-0689           | 2           | Screw-PH            |
| 7:2         | 121-6847           | 1           | Decal-Danger         | 25          | 138-0687           | 2           | Bushing-Pivot       |
| 8           | 106-4422           | 1           | Spacer-Chute         | 26          | 136-6522           | 1           | Link-Deflector      |
| 9           | 137-6245-03        | 1           | Chute Post ASM       | 27          | 137-3094           | 2           | Nut-Hex             |
| 10          | 106-4472           | 1           | Gear-Chute           | 28          | 32144-85           | 1           | Screw-HWH Thd Form  |
| 11          | 46-6810            | 2           | Screw And Washer ASM | 29          | 136-6586           | 2           | Grommet-Screw       |
| 12          | 136-7199           | 1           | Bolt-Shoulder        | 30          | 94-4496            | 2           | Screw-PPH           |
| 13          | 137-3088           | 3           | Nut-Hex              | 31          | 136-7191           | 1           | Clamp-Cable         |
| 14          | 137-3063           | 2           | Bolt-Car             | 32          | 137-3110           | 1           | Screw-Plastite, HWH |
| 15          | 119-4041           | 2           | Nut-HF               | 33          | 136-6672           | 1           | Cover-Gear, Face    |
| 16          | 136-6517           | 1           | Mount-Gear, Face     | 35          | 132-6915           | 1           | Spring-Extension    |
| 17          | 106-4471           | 1           | Gear-Face            | 36          | 138-3651           | 1           | Plug-Plastic        |

 
# Chute Control Assembly

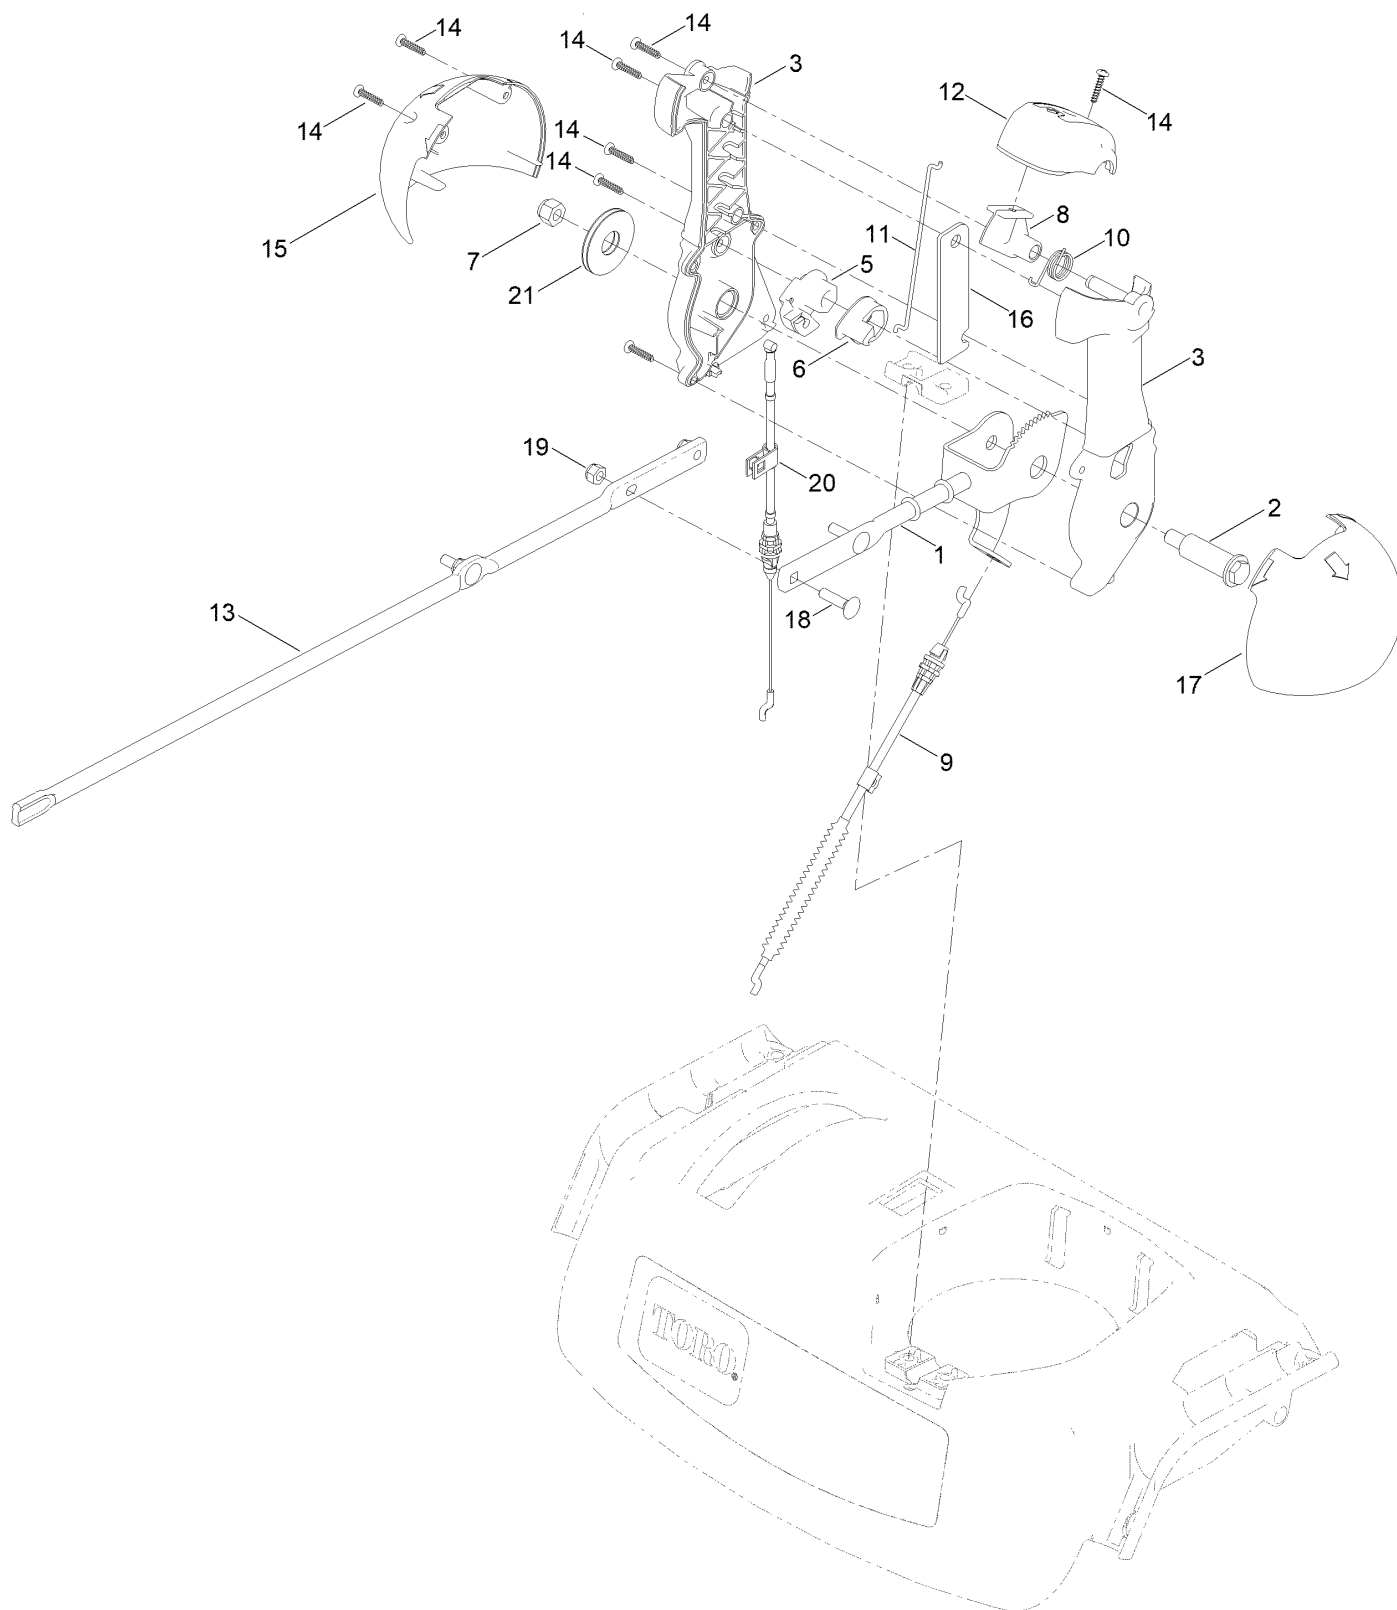

## Chute Control Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|----------------------------|
| 1           | 138-0662           | 1           | Rod-Control, Chute       | 12          | 137-6239           | 1           | Cap-Lever                  |
| 2           | 138-0659           | 1           | Screw-Shoulder, HWH      | 13          | 136-6578           | 1           | Rod-Chute, Rotation        |
| 3           | 139-1552           | 1           | Chute Control Lever ASM  | 14          | 94-4496            | 8           | Screw-PPH                  |
| 5           | 105-9988           | 1           | Lever-Cable, Deflector   | 15          | 136-6677           | 1           | Globe-Quickstick, RH       |
| 6           | 106-7310           | 1           | Pawl-Latch               | 16          | 136-6632-03        | 1           | Plate-Stiffner             |
| 7           | 137-3087           | 1           | Nut-Hex                  | 17          | 136-6678           | 1           | Globe-Quickstick, LH       |
| 8           | 137-6238           | 1           | Trigger-Latch            | 18          | 137-3056           | 3           | Bolt-CARR                  |
| 9           | 138-0730           | 1           | Cable-Control, Deflector | 19          | 137-3094           | 3           | Nut-Hex                    |
| 10          | 105-9982           | 1           | Spring-Torsion           | 20          | 139-9903           | 1           | Cable-Release, Chute       |
| 11          | 138-0688           | 1           | Link-Latch               | 21          | 138-0744           | 1           | Washer-Friction, Composite |

 
# Traction Control Assembly

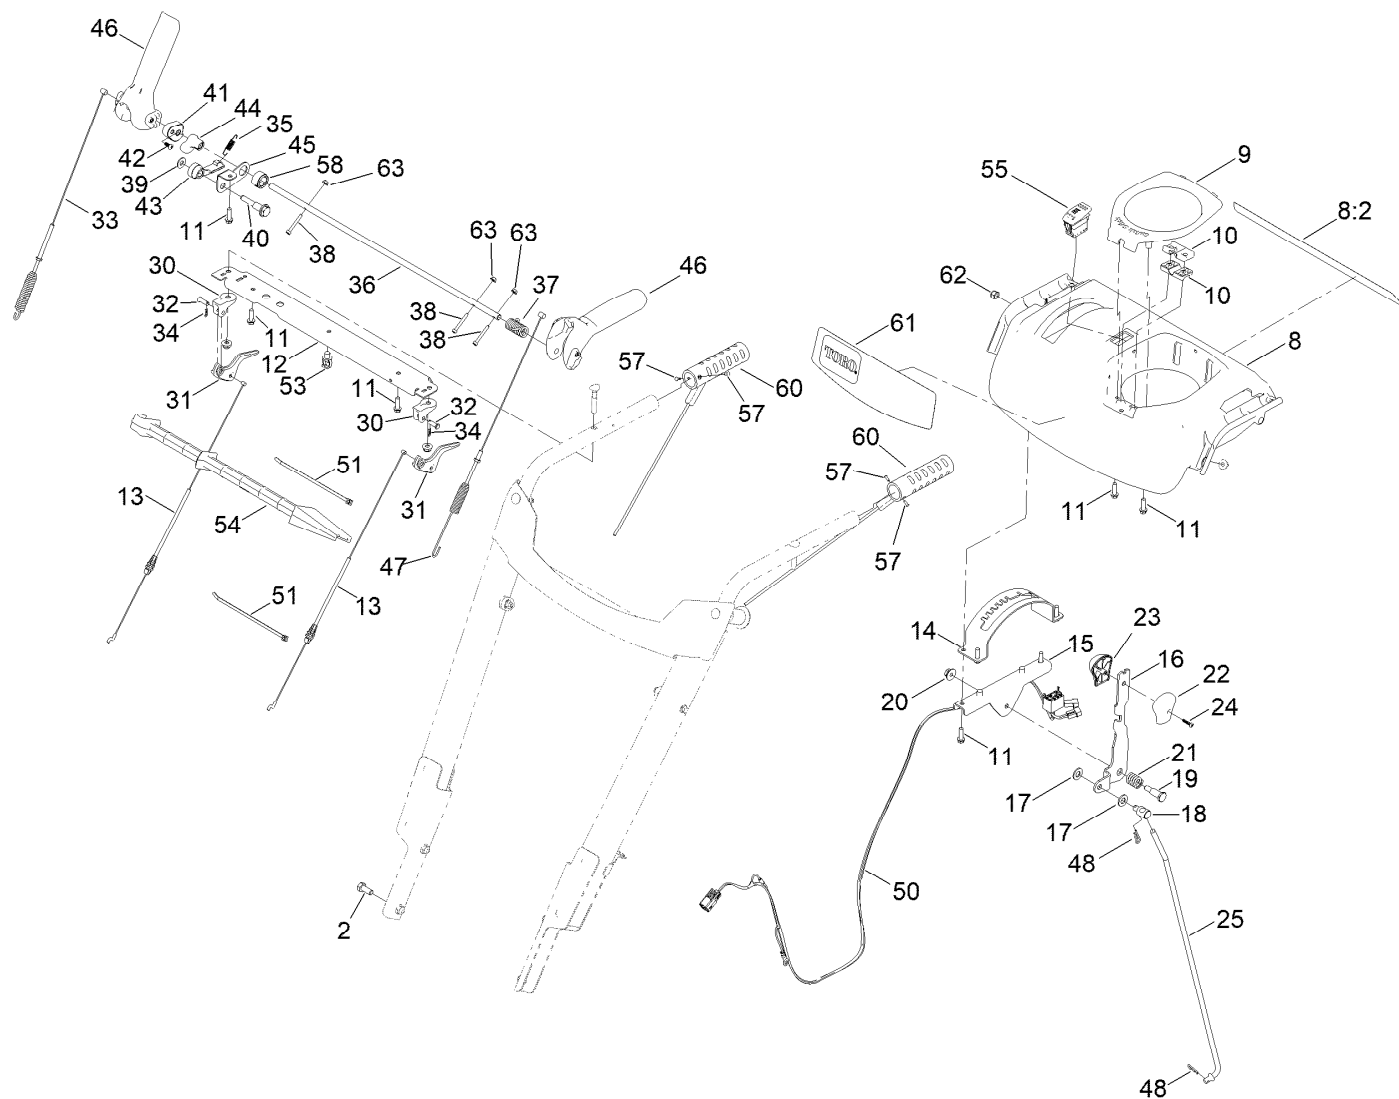

## Traction Control Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|------------------------|
| 2           | 137-3052           | 4           | Screw-HH                | 37          | 138-0678           | 1           | Spring-Torsion, Handle |
| 8           | 145-0666           | 1           | Panel-Control, Assembly |             |                    |             | Return                 |
| 8:2         | 138-0650           | 1           | Decal-Safety            | 38          | 145-0660           | 3           | Screw-HSH,Spl          |
| 9           | 137-6178           | 1           | Cover-Quickstick        | 39          | 98-3499            | 1           | Washer-Flat            |
| 10          | 105-9987           | 2           | Support-Rod             | 40          | 138-0681           | 1           | Screw-Shoulder         |
| 11          | 137-3099           | 9           | Screw-Plastite, HWH     | 41          | 144-0320           | 1           | Handle Lock            |
| 12          | 137-6197-01        | 1           | Brace-Console           | 42          | 137-9137           | 1           | Screw-PPH              |
| 13          | 138-0726           | 2           | Cable-Clutch            | 43          | 144-0321           | 1           | Latch, Lockout         |
| 14          | 137-6187-03        | 1           | Gate-Shift              | 44          | 138-8466           | 1           | Cam-Lockout            |
| 15          | 137-6188-03        | 1           | Bracket-Shift           | 45          | 138-3652           | 1           | Link-Lockout           |
| 16          | 137-6231-03        | 1           | Selector-Speed          | 46          | 137-6171           | 2           | Lever-Control          |
| 17          | 115-1166           | 2           | Washer-Plain            | 47          | 138-0728           | 1           | Cable-Traction         |
| 18          | 136-7193           | 1           | Trunnion-Rod            | 48          | 137-3083           | 2           | Pin-Hair               |
| 19          | 137-3103           | 1           | Screw-Shoulder, HH      | 50          | 138-3644           | 1           | Harness-Wire, LED And  |
| 20          | 137-3038           | 1           | Nut-HF                  |             |                    |             | Hand Warmers           |
| 21          | 136-7121           | 1           | Spring-Compression      | 51          | 614249             | 2           | Tie-Cable              |
| 22          | 105-9999           | 1           | Knob-Shift, LH          | 53          | 32180-030          | 1           | Clip-Tie               |
| 23          | 106-4423           | 1           | Knob-Shift, RH          | 54          | 110-3408           | 1           | Stick-Cleanout         |
| 24          | 94-4496            | 1           | Screw-PPH               | 55          | 122-1124           | 1           | Switch-Rocker,         |
| 25          | 137-6225           | 1           | Rod-Shift               |             |                    |             | On-None-Off (Heater)   |
| 30          | 105-9980           | 2           | Mount-Lever, Clutch     | 57          | 3290-271           | 4           | Rivet-Pop              |
| 31          | 106-4505           | 2           | Lever-Clutch            | 58          | 138-8467           | 1           | Collar-Cam             |
| 32          | 1-808265           | 2           | Pin-Clevis              | 60          | 144-1602           | 1           | Red Heated Grip        |
| 33          | 138-3661           | 1           | Cable-Auger             | 61          | 138-0657           | 1           | Decal-Console          |
| 34          | 108-2992           | 2           | Pin-Hair                | 62          | 137-3093           | 1           | Nut-Hex                |
| 35          | 136-7161           | 1           | Spring-Lockout, Handle  | 63          | 140-3749           | 3           | Nut-Lock Rohs          |
| 36          | 137-6182           | 1           | Rod-Lockout             |             |                    |             |                        |

 
# Handle Assembly

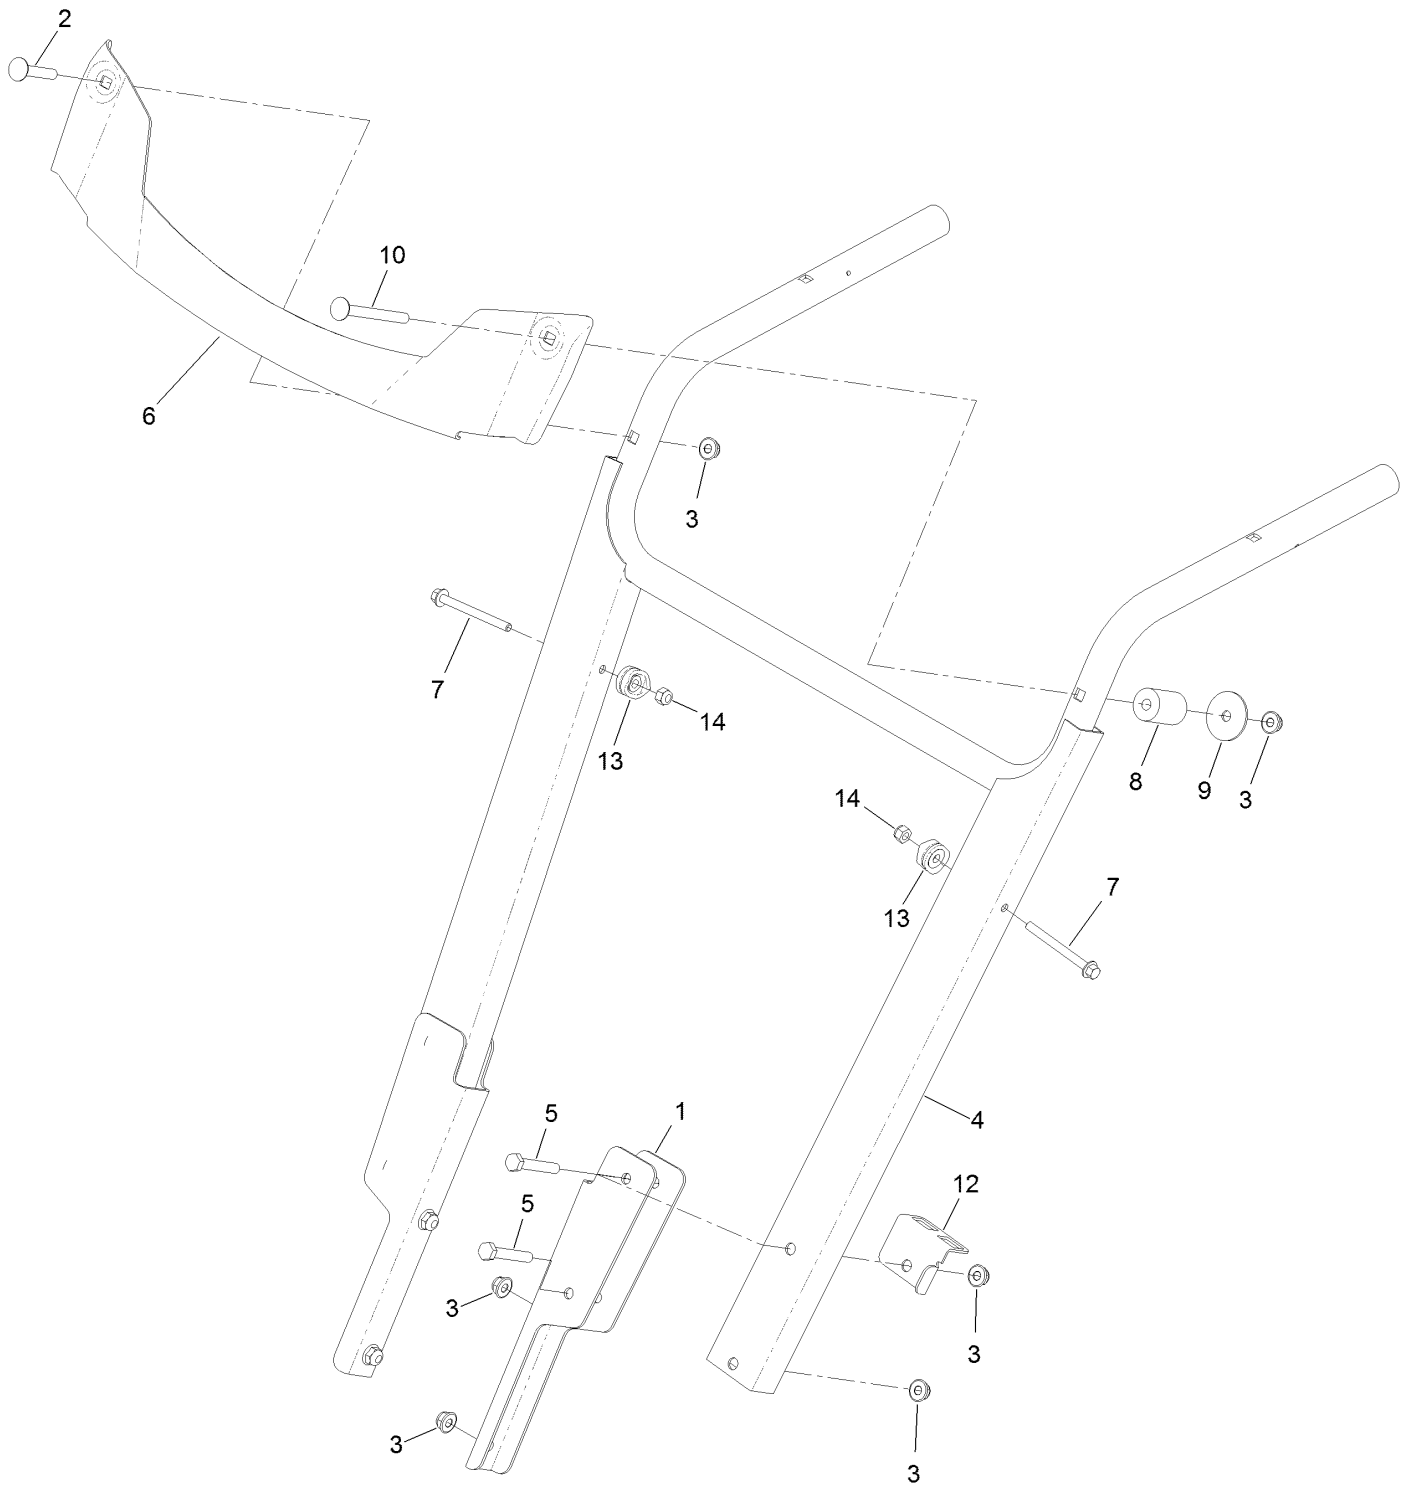

## Handle Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 137-6221-03        | 2           | Bracket-Handle, Lower | 8           | 108-2301           | 1           | Spacer                  |
| 2           | 138-8402           | 1           | Bolt-CARR             | 9           | 115-1151           | 1           | Washer-Flat             |
| 3           | 138-8401           | 12          | Nut-HF                | 10          | 138-0741           | 1           | Screw-CARR              |
| 4           | 137-6224-03        | 1           | HD Handle ASM         | 12          | 138-0724-03        | 1           | Bracket-Stick, Cleanout |
| 5           | 120-9686           | 4           | Screw-HH              | 13          | 106-4509           | 2           | Clamp-Cable             |
| 6           | 137-6233-01        | 1           | Trim-Metal, HD        | 14          | 137-3094           | 2           | Nut-Hex                 |
| 7           | 138-3653           | 2           | Screw-HHF             |             |                    |             |                         |
 
# Traction Drive Assembly

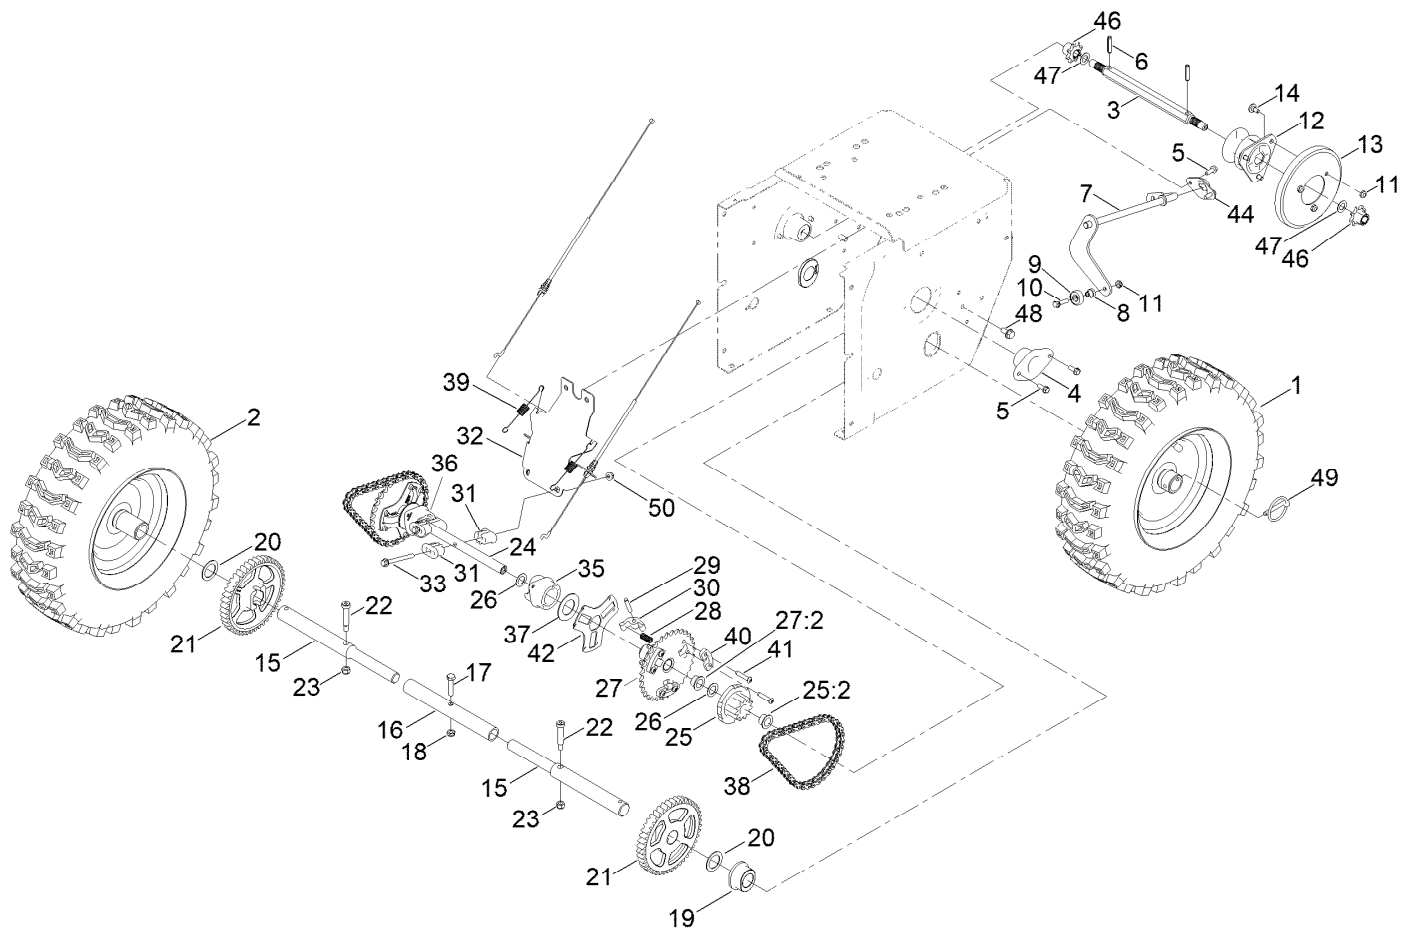

## Traction Drive Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|----------------------|
| 1           | 136-6668           | 1           | LH Wheel And Tire ASM | 25:2        | 108-2973           | 2           | Bushing-Flange       |
| 2           | 136-6667           | 1           | RH Wheel And Tire ASM | 26          | 108-0015           | 4           | Washer-Flat          |
| 3           | 125-1135           | 1           | Shaft-Hex             | 27          | 107-8895           | 2           | 32T Sprocket ASM     |
| 4           | 108-7319           | 2           | Retainer-Bearing      | 27:2        | 108-2973           | 2           | Bushing-Flange       |
| 5           | 32144-85           | 6           | Screw-HWH Thd Form    | 28          | 107-8885           | 6           | Spring-Compression   |
| 6           | 32121-9            | 2           | Pin-Roll, Slotted     | 29          | 107-8899           | 6           | Pin-Dowel            |
| 7           | 137-6162-03        | 1           | Rod-Shift             | 30          | 107-8879           | 6           | Pawl-Clutch          |
| 8           | 119-7684           | 1           | Spacer-Plate, Shift   | 31          | 107-8889           | 4           | Guide-Collar         |
| 9           | 121-6835           | 1           | Bearing-Ball          | 32          | 136-6648-03        | 1           | Brace-Shift, Collar  |
| 10          | 32144-86           | 1           | Screw-HWHTF           | 33          | 138-3653           | 2           | Screw-HHF            |
| 11          | 137-3091           | 4           | Nut-Hex               | 35          | 107-8887           | 1           | Collar-Shift, LH     |
| 12          | 119-7630           | 1           | Trunnion              | 36          | 107-8888           | 1           | Collar-Shift, RH     |
| 13          | 119-1567           | 1           | Wheel-Friction        | 37          | 107-8891           | 2           | Washer-Thrust        |
| 14          | 137-6246           | 3           | Screw-Shoulder        | 38          | 108-0016           | 2           | Chain-Roller         |
| 15          | 136-6640           | 2           | Axle                  | 39          | 107-8893           | 2           | Spring-Extension     |
| 16          | 106-7259           | 1           | Tube-Axle             | 40          | 107-8880           | 6           | Support-Pawl         |
| 17          | 137-3051           | 1           | Screw-HH              | 41          | 137-3010           | 12          | Screw-BHCS           |
| 18          | 137-3089           | 1           | Nut-Hex               | 42          | 136-7318           | 2           | Retainer-Pawl, Pin   |
| 19          | 136-6641           | 2           | Bushing-Axle          | 44          | 136-6647-03        | 1           | Retainer-Rod, Shift  |
| 20          | 138-0725           | 2           | Washer-Thrust         | 46          | 125-1134           | 2           | Gear-Pinion, 8 Tooth |
| 21          | 136-6642           | 2           | Gear-Axle             | 47          | 36-4780            | 2           | Washer-Plain         |
| 22          | 138-0720           | 2           | Bolt-Shoulder, HSH    | 48          | 32144-14           | 2           | Screw-HWHTF          |
| 23          | 137-3093           | 2           | Nut-Hex               | 49          | 138-3642           | 2           | Pin-Klik             |
| 24          | 107-8883           | 1           | Shaft-Intermediate    | 50          | 119-4040           | 2           | Nut-HF, NI           |
| 25          | 107-8894           | 2           | 11T Gear ASM          |             |                    |             |                      |

# Attachments and Accessories

## For 38844 Power Max Commercial 1432 OHXE Snowthrower

| Product Name                                       | Model/Part |
|----------------------------------------------------|------------|
| Heavy-Duty Skid Kit.....                           | 125-1104   |
| Heated Grip Kit .....                              | 131-6460   |
| Kit-Cab.....                                       | 139-1640   |
| Non-Marking Skid Kit.....                          | 38211      |
| Tire Chain Kit, 16in Tires.....                    | 38215      |
| Toro Snow Oil 0W30 Synthetic 20-Ounce Bottle ..... | 38913      |
| Power Max HD Covers (2019) .....                   | 490-7415   |

**Notes:**

**Notes:**

**Notes:**



**Count on it.**