



Ground-Following Suspension Kit Greensmaster® 3250-D

Model No. 104-9400

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers


Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

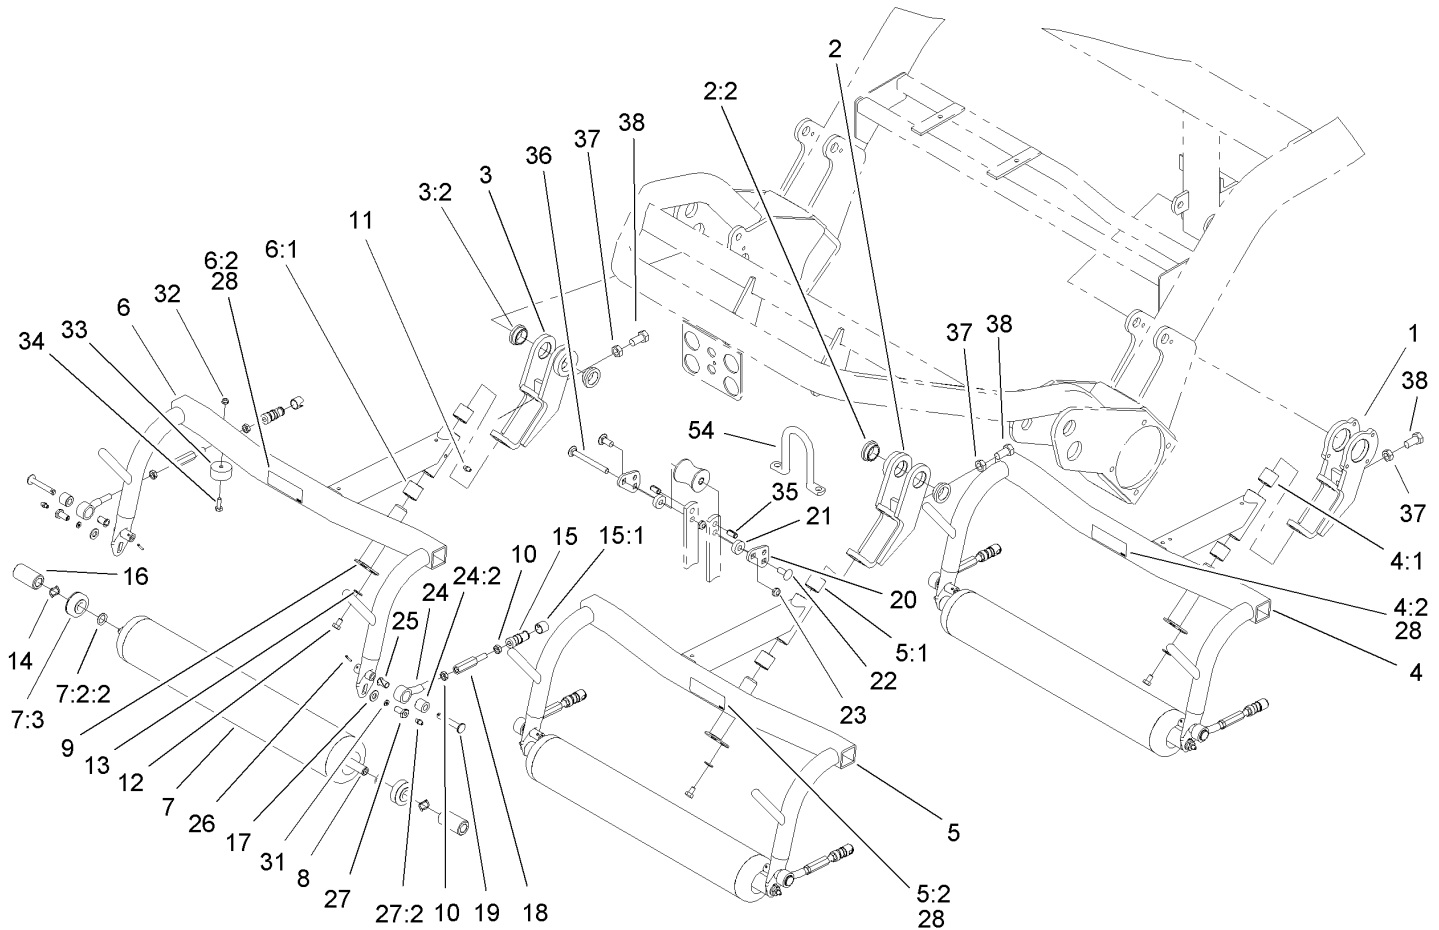

Suspension Assembly

Ref	Part No.	Qty.	Description
1	104-8280-01	1	Rear Clevis ASM
2	104-8292	1	LH Clevis ASM
2:2	94-9610	2	Bushing-Flange
3	104-8293	1	RH Clevis ASM
3:2	94-9610	2	Bushing-Flange
4	104-9434	1	Rear Pull Frame ASM
4:1	3-0348	2	Bushing
4:2	104-7728	1	Decal-Danger
5	104-9428	1	LH Pull Frame ASM
5:1	3-0348	2	Bushing
5:2	104-7728	1	Decal-Danger
6	104-9429	1	RH Pull Frame ASM
6:1	3-0348	2	Bushing
6:2	104-7728	1	Decal-Danger
7	99-4277	3	Roller ASM
7:2		2	Hub Yoke ASM (Not Serviced Separately)
7:2:2	253-83	1	Seal-Oil
7:3	251-141	2	Bearing-Ball
8	21-8470	3	Shaft-Roller
9	10-6090	3	Pin-Pivot
10	3220-3	12	Nut-Jam
11	302-5	3	Fitting-Grease
12	322-1	3	Screw-HH
13	3256-23	3	Washer-Flat
14	3290-317	6	Washer-Spring

Ref	Part No.	Qty.	Description
15	99-1460	6	Ball Joint Receiver ASM
15:1	99-1461	1	Sleeve-Joint, Ball
16	88-6830	6	Spacer-Frame, Carrier
17	3256-24	6	Washer-Flat
18	88-6870	6	Extension-Arm, Pull
19	88-6820	6	Pin-Pivot
20	104-7745	2	Tab-Lift
21	95-5963	2	Spacer - Pulley
22	3231-27	2	Screw-CARR
23	3296-59	3	Nut-Lock, NI
24	104-9436	6	Pull Arm ASM
24:2	63-9510	1	Bushing
25	52-2890	6	Bushing-Nylon
26	32121-50	6	Pin-Spring
27	104-9438	6	Roller Screw ASM
27:2	302-5	1	Fitting-Grease
28	104-7729	3	Decal-Danger (Europe)
31	3253-21	6	Washer-Lock
32	3296-56	6	Nut-Lock, NI
33	94-4548	6	Bumper-Recessed
34	321-30	6	Screw-HH
35	32121-36	2	Pin-Spring
36	3231-11	1	Screw-CARR
37	3218-5	3	Nut-Jam
38	325-4	3	Screw-HH
54	106-6938	3	Hook-Lift