



12-32XL Lawn Tractor

Model No. 71199 - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR.	as required	HYD.	hydraulic
ASM.	assembly	INC.	incorporated
CARR.	carriage	LH.	left hand
DEG.	degrees	NI.	nylon insert
FH.	flat head	PPH.	phillips pan head
GA.	gauge	PTH.	phillips truss head
HF.	hex flange	PTO.	power take off
HH.	hex head	RH.	right hand
HHF.	hex head flange	SFH.	slotted fillister head
HHFTF.	hex head flange thread forming	SHH.	slotted hex head
HJ.	hex jam	SHWH.	slotted hex washer head
HLH.	hex lag head	SPH.	slotted pan head
HOC.	height-of-cut	SQH.	square head
HS.	hex	SRH.	slotted round head
HSBH.	hex socket button head	STD.	standard
HSFH.	hex socket flat head	TAP.	self tapping
HSH.	hex socket head	TTH.	torx truss head
HWH.	hex washer head	WH.	wing head
HWHTF.	hex washer head thread forming		


Footnotes

- | | | | |
|---|---|---|---|
| ❶ | Not illustrated | ❷ | Not serviced separately |
| ❸ | Included in Engine Gasket Set-Ref. 358. | ❹ | Included in Valve Gasket Set-Ref. 1095. |
| ❺ | Included in Carburetor Overhaul Kit-Ref. 121. | ❻ | Obtain parts from your local Briggs and Stratton dealer |

Contents


Description	Page	Description	Page
Frame and Body Assembly	 3	Crankcase Assembly Briggs and Stratton Model No. 219907-0170-E1	 21
Hood and Tower Assembly	 4	Oil Filter, Tube and Pump Assembly Briggs and Stratton Model No. 219907-0170-E1	 22
Rear Body and Seat Assembly	 5	Carburetor Assembly Briggs and Stratton Model No. 219907-0170-E1	 23
Steering Assembly	 6	Governor Assembly Briggs and Stratton Model 219907-0170-E1	 24
Fixed Steering Assembly	 7	Blower Housing Assembly Briggs and Stratton Model No. 219907-0170-E1	 25
Engine System Component Assembly	 8	Starter Assembly Briggs and Stratton Model No. 219907-0170-E1	 26
Traction Clutch Assembly	 9	Gasket Assembly Briggs and Stratton Model No. 219907-0170-E1	 27
Shifter Assembly	 10	Carburetor Overhaul Kit Assembly Briggs and Stratton Model No. 219907-0170-E1	 28
5 Speed Transaxle Assembly	 11		
32in Deck Assembly	 12		
32in Deck Blade Drive/Brake Assembly	 13		
Height of Cut Assembly	 14		
Electrical Component Assembly	 15		
Engine Assembly	 16		
32in Deck and Baffle Assembly	 17		
Cylinder Assembly Briggs and Stratton Model No. 219907-0170-E1	 18		
Cylinder Head Assembly Briggs and Stratton Model No. 219907-0170-E1	 19		
Crankshaft Assembly Briggs and Stratton Model No. 219907-0170-E1	 20		

3

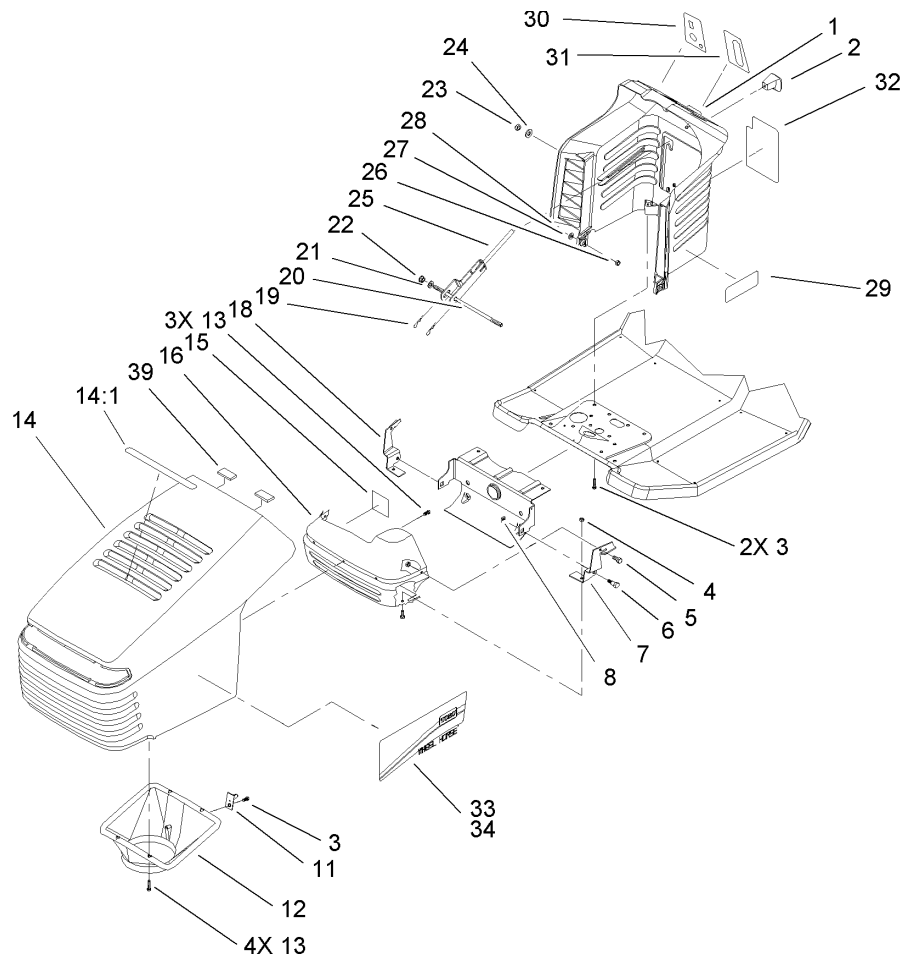

Hood and Tower Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	99-1947	1	Tower-Steering	27	3256-23	2	Washer-Flat
2	94-5565	1	Knob-Shift	28	322-3	2	Screw-HH
3	46-8091	3	Screw-HWH	29	106-6405	2	Decal-Tower
4	3296-42	4	Nut-Lock, NI	30	99-8140	1	Decal-Ignition
5	321-2	4	Screw-HH	31	92-2461	1	Decal-Throttle
6	28-0540	2	Bolt-Shoulder	32	92-2462	1	Decal-Deck, Engage
7	88-6050-03	1	Bracket-Hinge, LH	33	105-2497	1	Decal-Hood, LH
8	3290-496	2	Nut-Retainer	34	105-2496	1	Decal-Hood, RH
11	94-1984	1	Latch-Pin	39	94-1980	2	Foam-Hood
12	93-3891	1	Duct-Air, Hood				
13	46-8090	7	Screw-Plastite				
14	92-8650	1	Hood ASM				
14:1	92-5748	1	Decal-Duct, Air				
15	92-5782	3	Tape-Foil				
16	93-3864-03	1	Shield-Heat				
18	88-6040-03	1	Bracket-Hinge, RH				
19	3290-307	2	Pin-Hair				
20	100-7401	1	Rod-Tower, Pivot				
21	3256-24	2	Washer-Flat				
22	3218-3	2	Nut-Jam				
23	100-7402	2	Nut-Cap				
24	100-7403	2	Washer-Flat				
25	88-5190-03	1	Lever-Deck, Engage				
26	3296-29	2	Nut-Lock, NI				

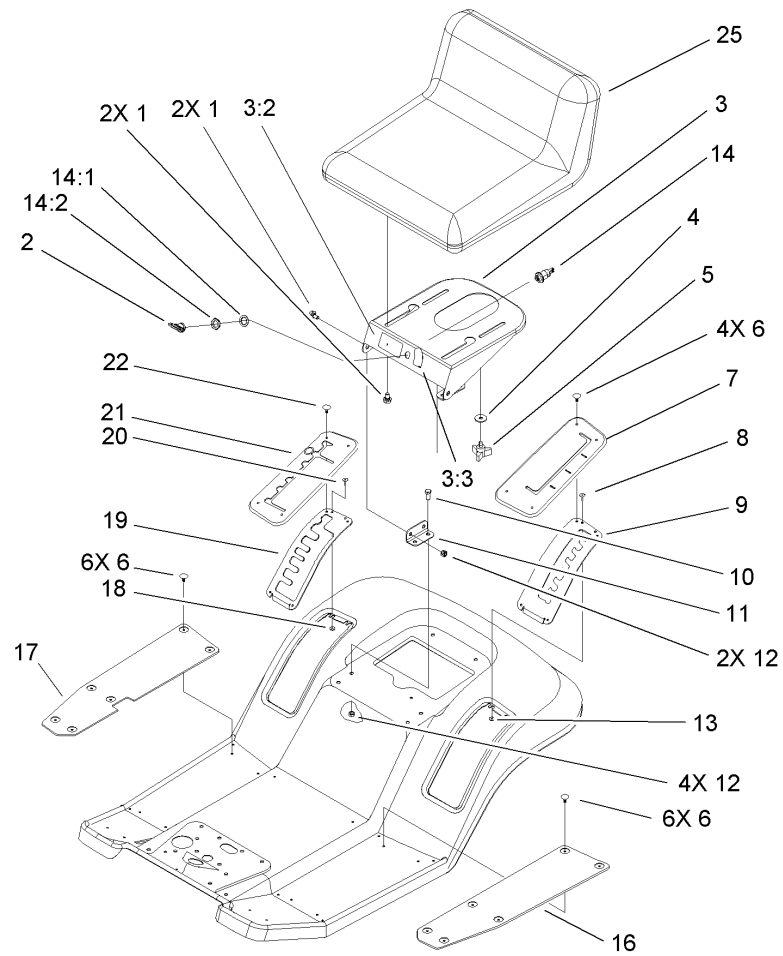

Rear Body and Seat Assembly

Ref	Part No.	Qty.	Description
1	37-8770	4	Bolt-Shoulder
2	63-8360	1	Key-Ignition
3	106-6436	1	Support ASM-Seat
3:2	99-2985	1	Danger-Decal
3:3	99-5339	1	Decal
4	5-4460	2	Washer-Pivot
5	92-9674	2	Knob
6	3290-479	16	Fastener-Panel
7	88-5170	1	Cover-HOC
8	3290-282	2	Rivet-Pop
9	88-5030-03	1	Gate-HOC
10	322-3	4	Screw-HH
11	88-4820-03	2	Bracket-Hinge, Seat
12	3296-29	6	Nut-Lock, NI
13	3269-26	2	Washer-Flat
14	46-5780	1	Switch-Starter
14:1	3254-5	1	Washer-Tooth
14:2	218-461	1	Nut-HH
16	88-5240	1	Mat-Foot, LH
17	88-5220	1	Mat-Foot, RH
18	3269-26	2	Washer-Flat
19	88-5020-03	1	Plate-Shift Gate
20	3290-282	2	Rivet-Pop
21	88-5160	1	Cover-Shift Gate


Ref	Part No.	Qty.	Description
22	3290-479	4	Fastener-Panel
25	106-6439	1	Seat-11in

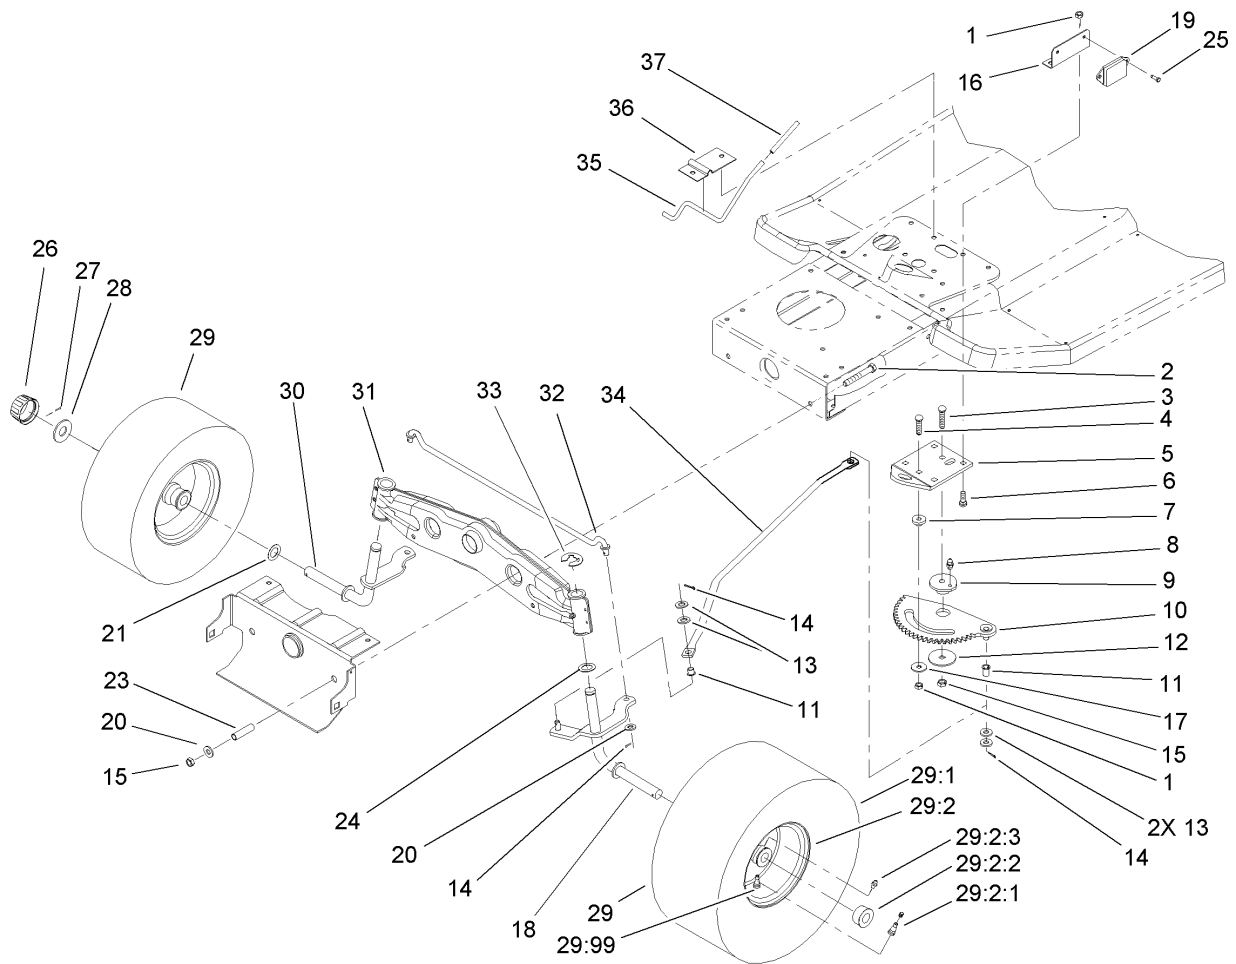

Steering Assembly


Ref	Part No.	Qty.	Description
1	3296-29	5	Nut-Lock, NI
2	323-13	2	Screw-HH
3	3231-4	1	Screw-CARR
4	3230-3	1	Screw-CARR
5	88-5130-03	1	Bracket-Rack, Steering
6	3230-2	4	Bolt-CARR
7	88-5010	1	Spacer-Rack, Steering
8	302-26	1	Fitting-Grease
9	88-4670	1	Bushing-Eccentric
10	88-5200	1	Rack-Steering
11	52-2891	2	Bushing-Link, Steering
12	111419	1	Washer-Bearing
13	3256-25	4	Washer-Flat
14	3272-10	4	Pin-Cotter
15	3296-39	3	Nut-Lock, NI
16	99-2956-03	1	Bracket-Module
17	5-4460	1	Washer-Pivot
18	92-7890-03	1	Spindle-LH
19	99-3700	1	Module
20	3256-24	4	Washer-Flat
21	3-6498	4	Washer-Thrust
23	88-5470	2	Spacer-Axle, Front
24	3-6498	4	Washer-Thrust
25	9266714	2	Screw-HWH

Ref	Part No.	Qty.	Description
26	61-9780	2	Cap-Hub
27	3272-12	2	Pin-Cotter
28	28-2480	2	Washer
29		2	Front Wheel And Tire ASM
29:1	99-2992	1	Tire
29:2	110513	1	Rim ASM
29:2:1	232-27	1	Stem-Valve
29:2:2	88-4400	2	Bearing-Wheel
29:2:3	302-5	1	Fitting-Grease
29:99	232-38	1	Tube
30	92-7889-03	1	Spindle-RH
31	94-1962-03	1	Front Axle ASM
32	88-5380	1	Tie Rod-Steering
33	32151-48	2	E-Ring
34	88-4830	1	Link-Drag
35	88-5510	1	Rod-Brake, Parking
36	88-5520-03	1	Bracket-Brake, Parking
37	88-0890	1	Grip-Brake, Parking

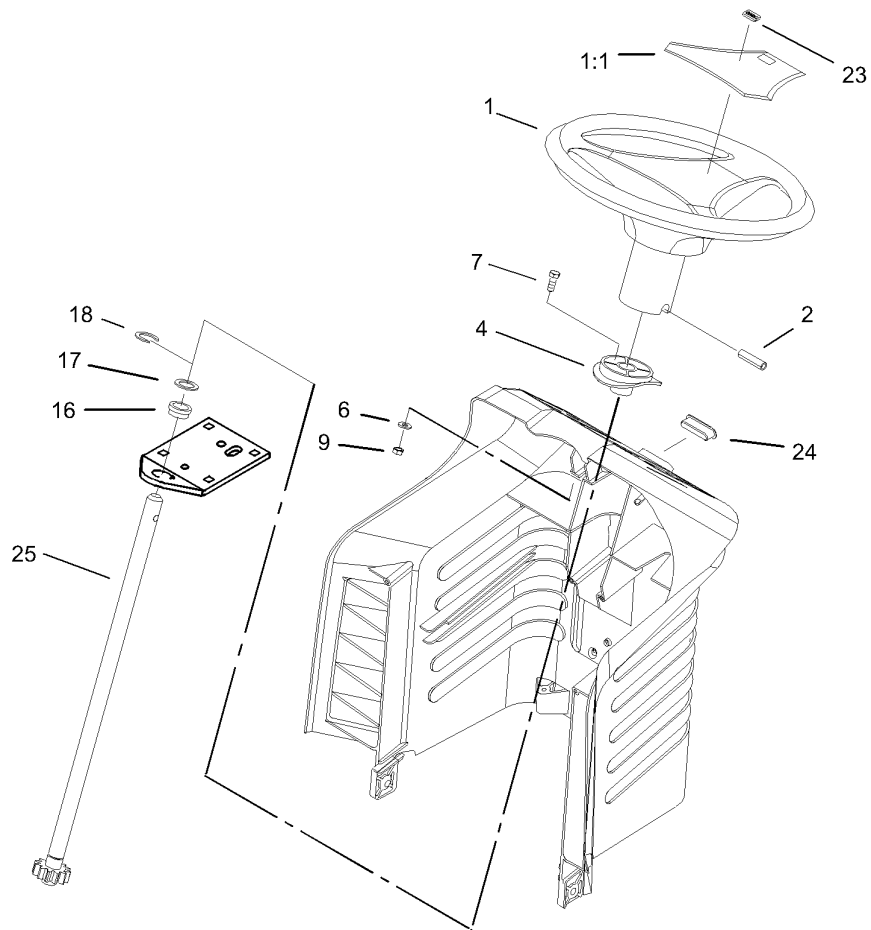

Fixed Steering Assembly


Ref	Part No.	Qty.	Description				
1	98-1467	1	Wheel-Steering				
1:1	98-1468	1	Cover-Wheel, Steering				
2	32121-111	1	Pin-Roll				
4	88-4190	1	Bushing-Sliding				
6	3256-22	2	Washer-Flat				
7	321-4	2	Screw-HH				
9	3296-42	2	Nut-Lock, NI				
16	88-5150	1	Bearing-Flange				
17	3-6498	1	Washer-Thrust				
18	32151-48	1	E-Ring				
23	98-1459	1	Decal				
24	88-4150	1	Plug				
25	88-6380	1	Shaft-Steering, Long				

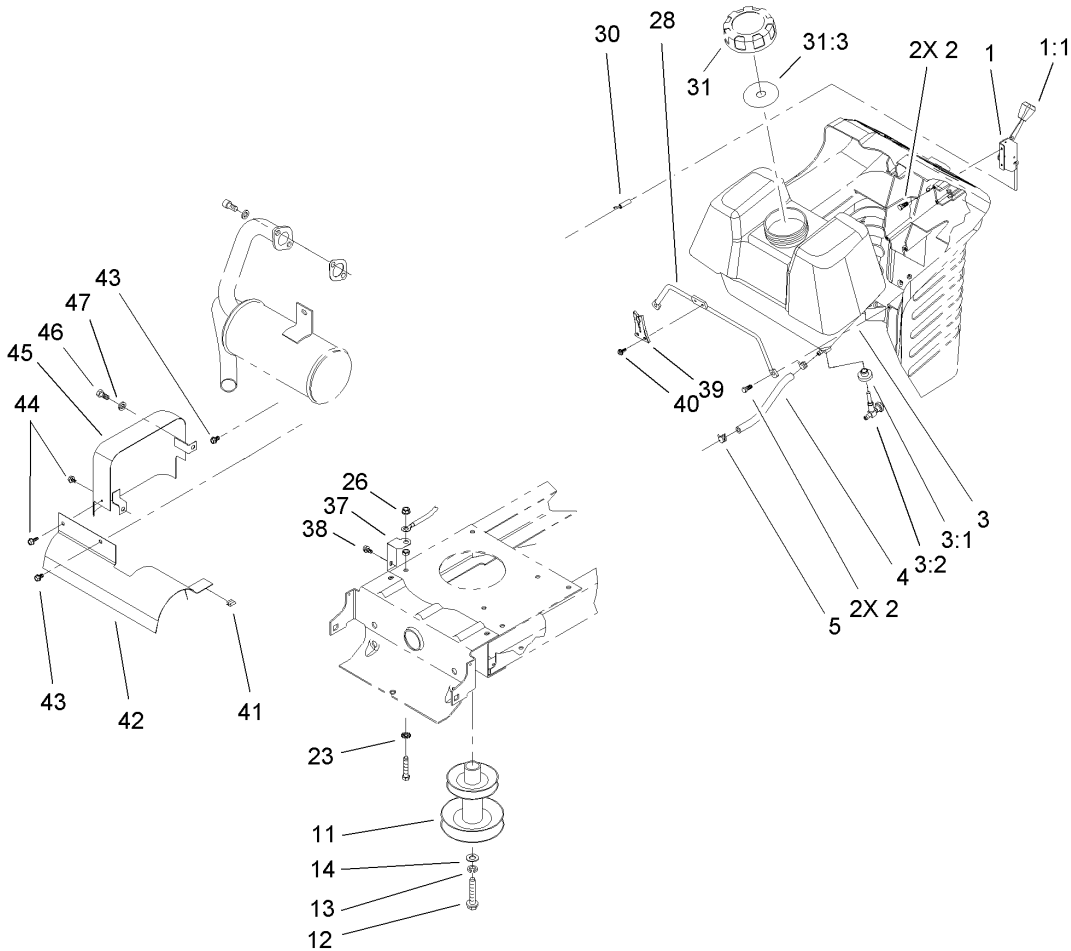

Engine System Component Assembly

Ref	Part No.	Qty.	Description
1	88-4340	1	Control-Throttle
1:1	66-0120	1	Knob
2	27-0220	4	Screw-Special
3	88-3880	1	Gas Tank ASM
3:1	46-6560	1	Bushing
3:2	104048	1	Valve-Fuel
4	47-2963	1	Hose-Fuel
5	2412-98	2	Clamp
11	88-5050	1	Pulley-Engine
12	62-3760	1	Screw-HH
13	3253-22	1	Washer-Lock
14	3256-25	1	Washer-Flat
23	3255-8	1	Washer-Lock
26	32149-1	2	Nut
28	94-1952	1	Rod-Tank, Gas
30	88-4350	1	Cable-Throttle
31	88-3980	1	Gas Cap ASM
31:3	88-4010	1	Gasket-Cap, Gas
37	93-3809	1	Bracket-Ground
38	9266714	1	Screw-HWH
39	94-1951	1	Latch-Hood
40	32144-112	2	Screw-HWH
41	93-3882	1	Clip-Tinnerman
42	105-2462-03	1	Shield-Muffler


Ref	Part No.	Qty.	Description
43	9266714	2	Screw-HWH
44	32104-76	2	Screw
45	93-8450-03	1	Exhaust Shield ASM
46	322-3	1	Screw-HH
47	3253-4	1	Washer-Lock

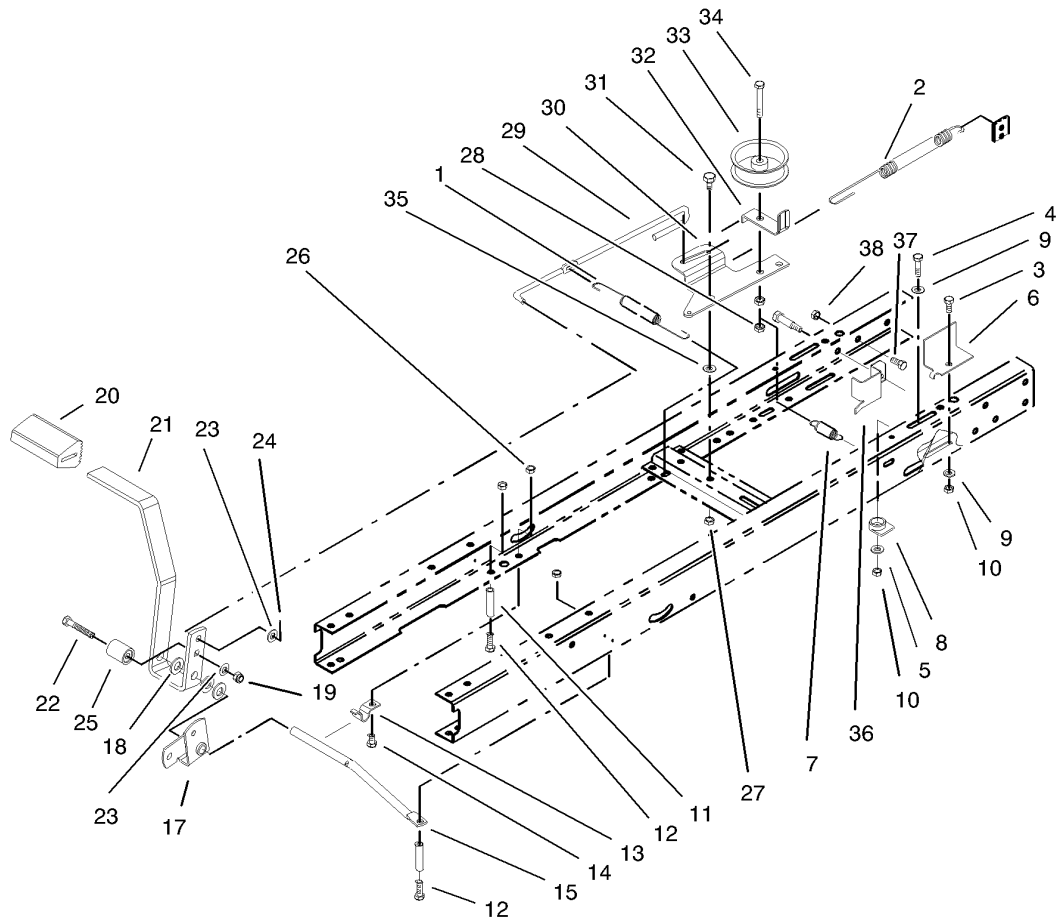

Traction Clutch Assembly


Ref	Part No.	Qty.	Description
1	27-8890	1	Spring-Return
2	94-4295	1	Spring-Brake
3	322-3	1	Screw-HH
4	322-6	1	Screw-HH
5	5-4460	1	Washer-Pivot
6	94-5433	1	Bracket-Belt, Guide
7	88-6330	1	Spring-Extension
8	84-5610	1	Guide-Cable
9	3256-23	2	Washer-Flat
10	3296-29	2	Nut-Lock, NI
11	46-5590	2	Tubing-Spacer
12	322-12	2	Screw-HH
13	88-4810	1	Clamp-Shift, Pivot
14	322-3	1	Screw-HH
15	88-5500	1	Rod-Pedal, Pivot
17	88-4800-03	1	Bellcrank
18	3256-26	3	Washer-Flat
19	3296-47	1	Nut-Lock, NI
20	65-2920	1	Pad-Pedal
21	88-5000-03	1	Pedal-Clutch/brake
22	322-9	1	Screw-HH
23	3256-23	2	Washer-Flat
24	3272-10	1	Pin-Cotter
25	99-6836	1	Spacer-Switch

Ref	Part No.	Qty.	Description
26	3296-29	3	Nut-Lock, NI
27	3296-29	1	Nut-Lock, NI
28	3296-59	2	Nut-Lock, NI
29	88-5270	1	Rod-Clutch/brake
30	88-6070	1	Arm-Idler
31	37-8770	1	Bolt-Shoulder
32	88-5560	1	Guide-Idler, Belt
33	104-4160	1	Pulley-Idler
34	323-10	1	Screw-HH
35	5-4460	1	Washer-Pivot
36	94-4926	1	Bracket-Belt, Guide
37	322-3	1	Screw-HH
38	3296-29	1	Nut-Lock, NI

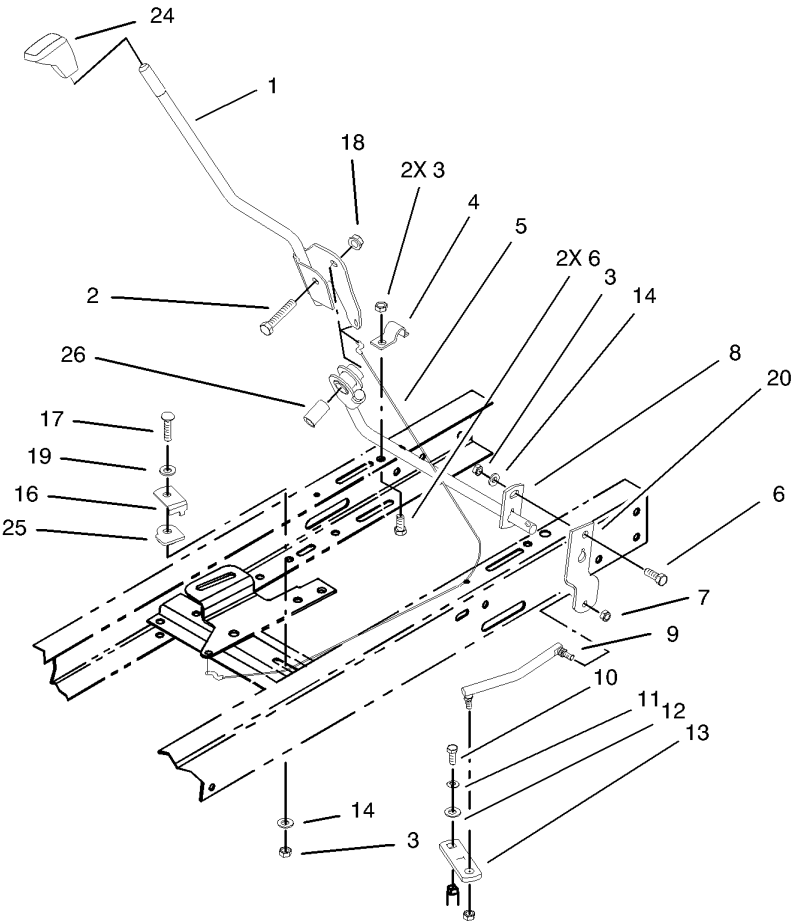


Shifter Assembly

Ref	Part No.	Qty.	Description				
1	94-1991-03	1	Lever-Shift				
2	323-10	1	Screw-HH				
3	3296-29	4	Nut-Lock, NI				
4	88-4810	2	Clamp-Shift, Pivot				
5	55-9321	1	Cable-Clutch				
6	322-3	3	Screw-HH				
7	3296-3	2	Nut-Lock, NI				
8	94-1993-03	1	Shift Pivot ASM				
9	94-5432	1	Link-Shift				
10	329-23	1	Screw-HH				
11	3253-3	1	Washer-Lock				
12	7-5461	1	Spacer				
13	88-5340	1	Lever-Shift				
14	3256-23	2	Washer-Flat				
16	88-5930	1	Keeper-Cable				
17	3230-3	1	Screw-CARR				
18	3296-39	1	Nut-Lock, NI				
19	3256-25	1	Washer-Flat				
20	94-1968	1	Lever-Shift Pivot				
24	94-5565	1	Knob-Shift				
25	84-5610	1	Guide-Cable				
26	94-1997	1	Bushing-Shift, Lever				

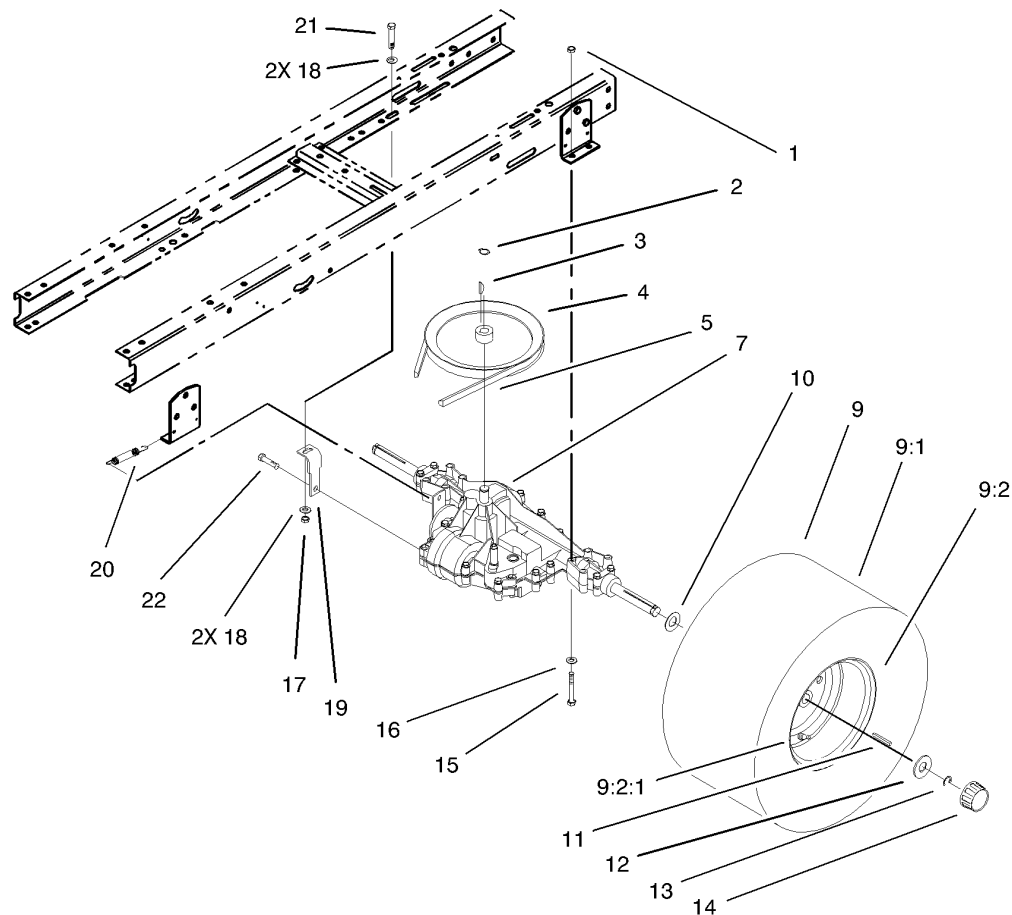


5 Speed Transaxle Assembly

Ref	Part No.	Qty.	Description				
1	3296-29	4	Nut-Lock, NI				
2	32120-64	1	Ring-Snap, External				
3	3257-23	1	Key-Woodruff				
4	88-4840	1	Pulley-Transmission				
5	94-4291	1	V-Belt, Traction				
7	94-6022	1	Transaxle				
9		2	Rear Wheel & Tire ASM				
9:1	99-2336	1	Tire				
9:2	88-4380	1	Rim ASM				
9:2:1	232-27	1	Stem-Valve				
9:99	231-91	1	Tube				
10	3-6498	2	Washer-Thrust				
11	7-0036	2	Key-Square				
12	28-2480	2	Washer				
13	32151-48	2	E-Ring				
14	61-9780	2	Cap-Hub				
15	322-12	4	Screw-HH				
16	3256-23	4	Washer-Flat				
17	3296-29	2	Nut-Lock, NI				
18	3256-23	4	Washer-Flat				
19	94-1969	2	Strap-Torque				
20	26-6701	1	Spring-Brake Return				
21	322-3	2	Screw-HH				
22	32144-14	2	Screw-HWH				

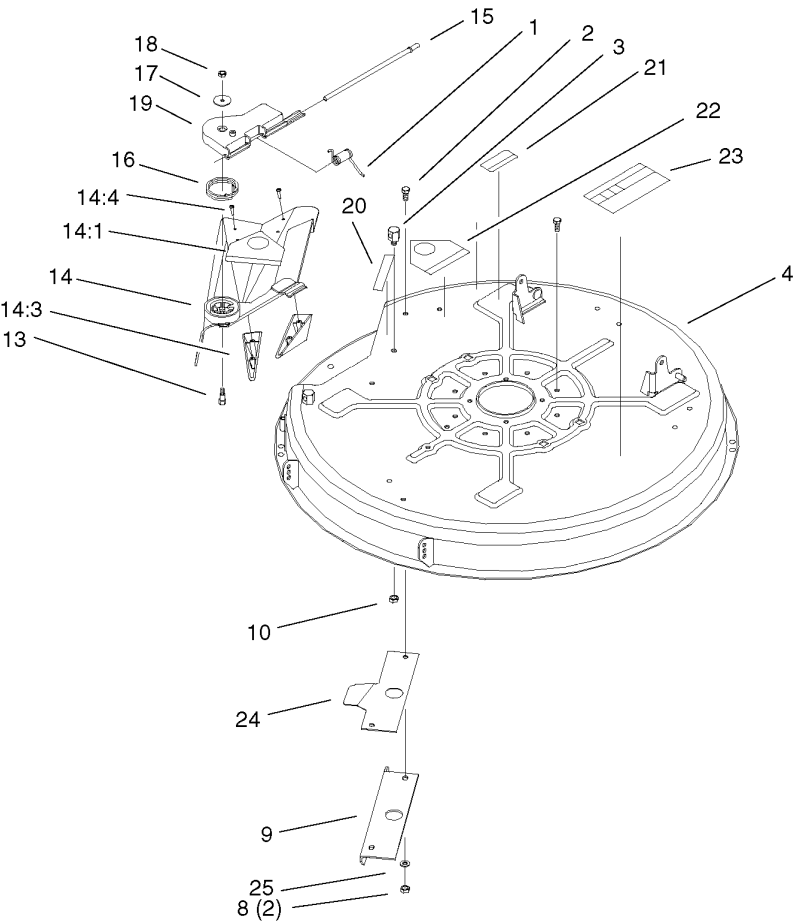

32in Deck Assembly


Ref	Part No.	Qty.	Description				
1	92-2493	1	Spring				
2	322-3	2	Screw-HH				
3	28-7350	1	Post-Pivot				
4	95-7482	1	ASM-Deck				
8	3296-29	2	Nut-Lock, NI				
9	44-5720-03	1	Baffle-Deck				
10	3296-59	1	Nut-Lock, NI				
13	92-8916	1	Bolt-Shoulder				
14	100-6200	1	ASM - Deflector, 32in				
14:1	93-1122	1	Decal-Danger				
14:3	93-7696	2	Kicker				
14:4	93-0231	4	Screw-PPH				
15	88-6150	1	Rod-Deflector Hinge				
16	88-6160	1	Spring-Torsion				
17	3256-58	1	Washer-Flat				
18	3296-42	1	Nut-Lock, NI				
19	88-4540	1	Pivot-Hinge Deflector				
20	68-3650	1	Decal-Danger, Deflector				
21	55-4300	2	Decal-Warning				
22	93-1122	1	Decal-Danger				
23	66-1340	1	Decal-Danger				
24	92-2494-03	1	Ramp-Deflector				
25	3256-23	2	Washer-Flat				

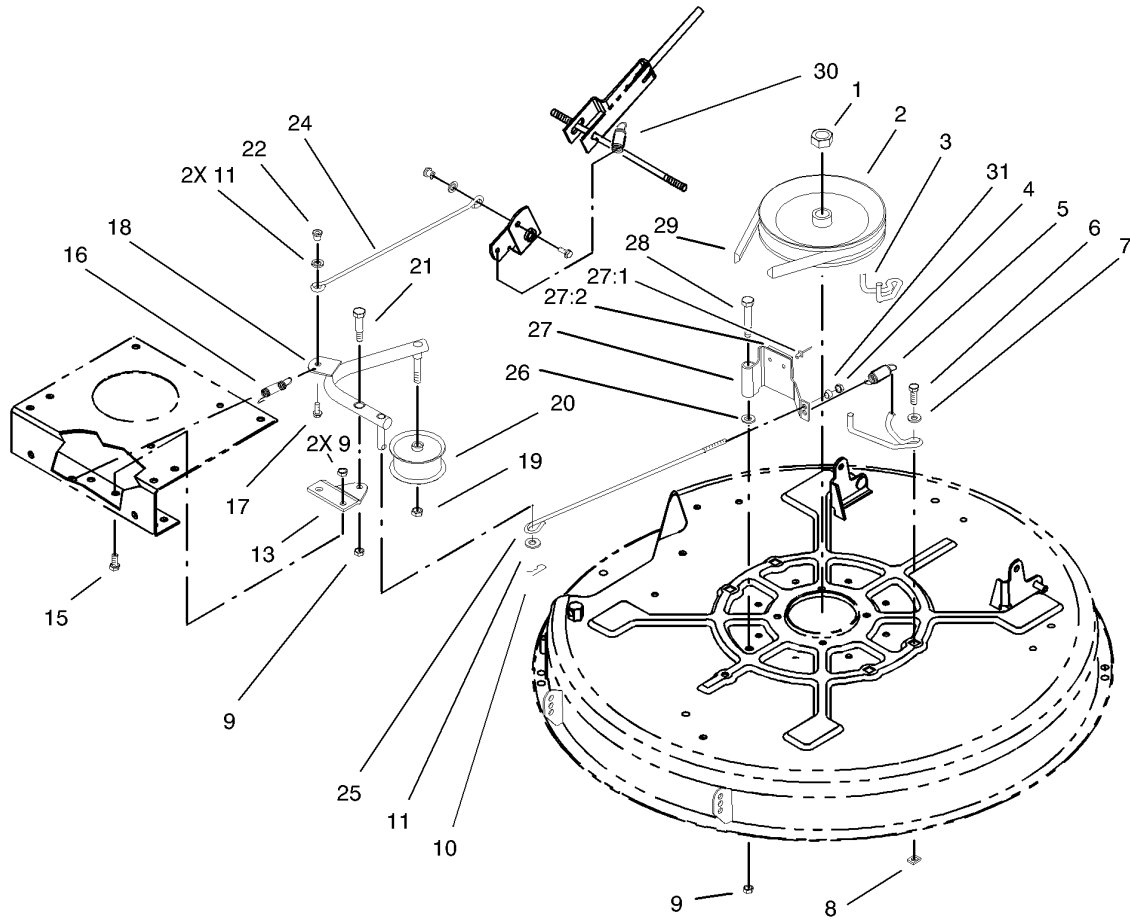

32in Deck Blade Drive/Brake Assembly


Ref	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex
2	88-5060	1	Pulley-Deck
3	88-5760	2	Guide-Deck Belt
4	3296-42	1	Nut-Lock, NI
5	88-6330	1	Spring-Extension
6	322-5	2	Screw-HH
7	5-4460	2	Washer-Pivot
8	3290-496	2	Nut-Retainer
9	3296-29	4	Nut-Lock, NI
10	3290-307	1	Pin-Hair
11	3256-24	3	Washer-Flat
13	88-5370-03	1	Plate-Idler Mounting
15	322-3	2	Screw-HH
16	26-6700	1	Spring-Brake Return
17	3234-13	2	Screw-HHF
18	88-5850-03	1	Arm-Idler
19	3296-39	1	Nut-Lock, NI
20	56-9870	1	Pulley-Idler
21	7-0030	1	Bolt-Shoulder
22	47-4990	2	Post-Linkage Mounting
24	88-5980	1	Rod-Deck Engage
25	88-5690	1	Rod-Deck Brake
26	3256-23	1	Washer-Flat
27	88-6110	1	Brake Arm ASM

Ref	Part No.	Qty.	Description
27:1	3290-282	2	Rivet-Pop
27:2	56-9830	1	Pad-Brake
28	88-4590	1	Bolt-Shoulder
29	88-6260	1	V-Belt
30	88-6420	1	Spring-Cable ASM
31	67-0710	1	Ball-Swivel, Stop

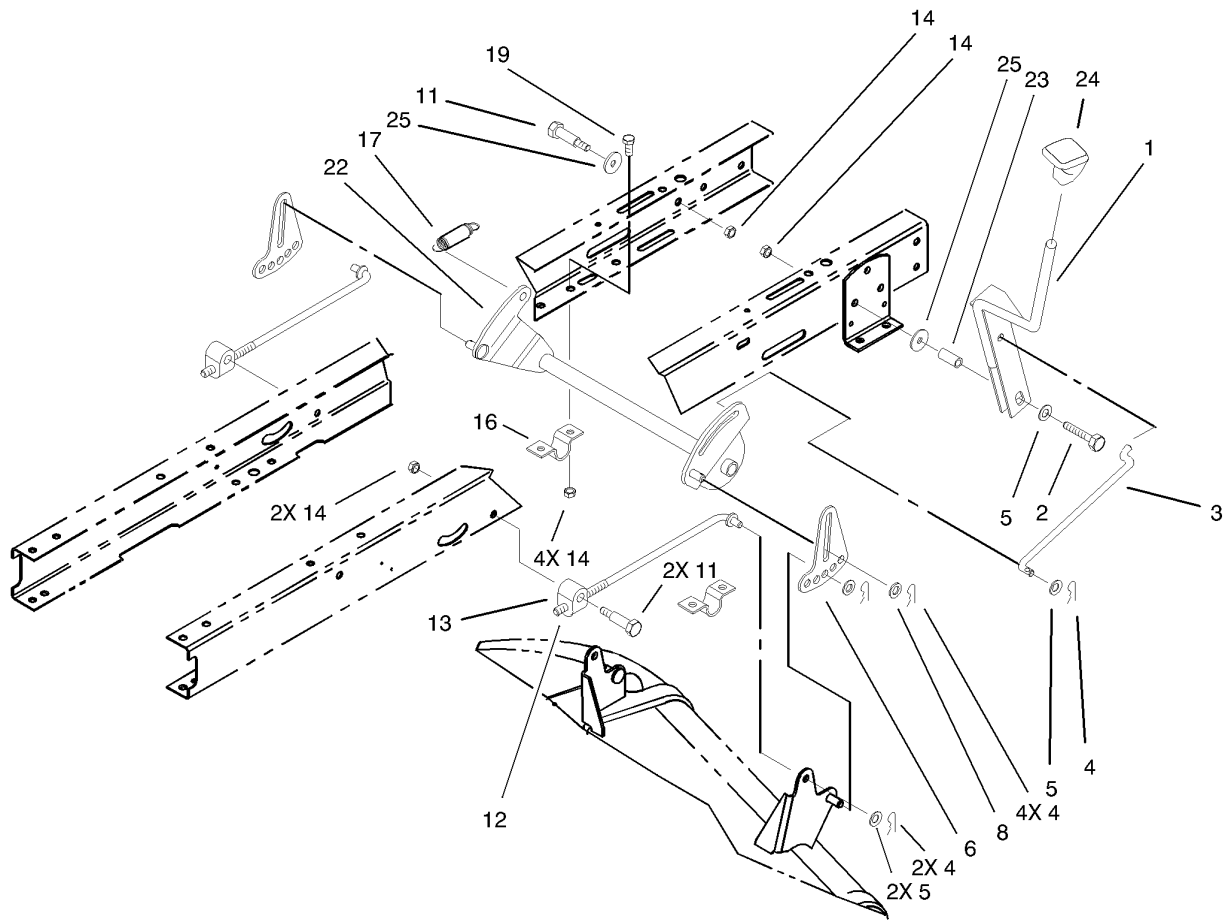

Height of Cut Assembly


Ref	Part No.	Qty.	Description				
1	93-3822-03	1	Lever				
2	322-32	1	Screw-HH				
3	88-5900	1	Link-HOC				
4	3290-307	7	Pin-Hair				
5	3256-24	4	Washer-Flat				
6	88-5570-03	2	Link-Adjusting, HOC				
8	80-6990	4	Washer-Hardened				
11	7-0030	3	Bolt-Shoulder				
12	88-5450	2	Rod-Hanger, Rear				
13	88-4230	2	Trunnion-HOC				
14	3296-29	8	Nut-Lock, NI				
16	88-4730	2	Clamp-Hoc, Pivot				
17	88-6460	1	Spring-Extension				
19	322-3	4	Screw-HH				
22	88-5110-03	1	Pivot				
23	65-7210	1	Spacer				
24	94-5565	1	Knob-Shift				
25	5-4460	2	Washer-Pivot				

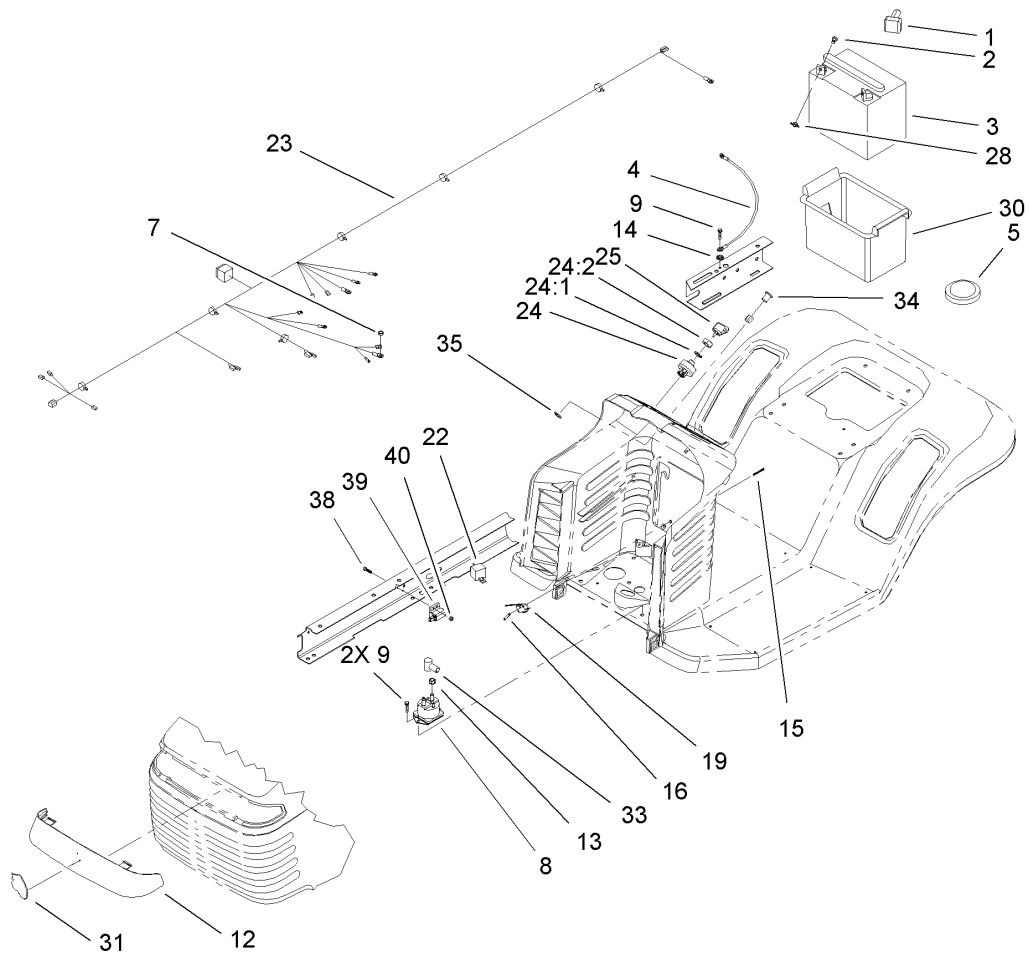

Electrical Component Assembly


Ref	Part No.	Qty.	Description
1	28-8080	1	Boot-Terminal
2	321-4	2	Screw-HH
3	104-1755	1	Battery
4	44-8110	1	Wire ASM
5	100-3524	1	Switch-Seat
7	32149-2	1	Nut
8	106-8245	1	Solenoid
9	9266714	3	Screw-HWH
12	88-3960	1	Lens-Headlight
13	32149-2	2	Nut
14	3255-7	2	Washer-Lock/ext
15	93-0539	2	Screw-HH
16	3290-354	1	Nut-Speed
19	88-9932	1	Switch-Micro
22	98-7249	1	Relay
23	106-6434	1	Wire Harness-Gear
24	88-9830	1	Key Switch ASM
24:1	3254-5	1	Washer-Tooth
24:2	218-461	1	Nut-HH
25	63-8360	1	Key-Ignition
28	32103-22	2	Nut-Wing
30	88-4040	1	Box-Battery
31	95-4248	1	Decal
33	93-3190	1	Boot-Insulator, Terminal

Ref	Part No.	Qty.	Description
34	95-7652	1	Light-Indicator
35	99-6059	1	Clip-Retainer
38	3274-14	2	Screw-HSH
39	65-7410	1	Switch-Pole, Single
40	3296-2	2	Nut-Lock

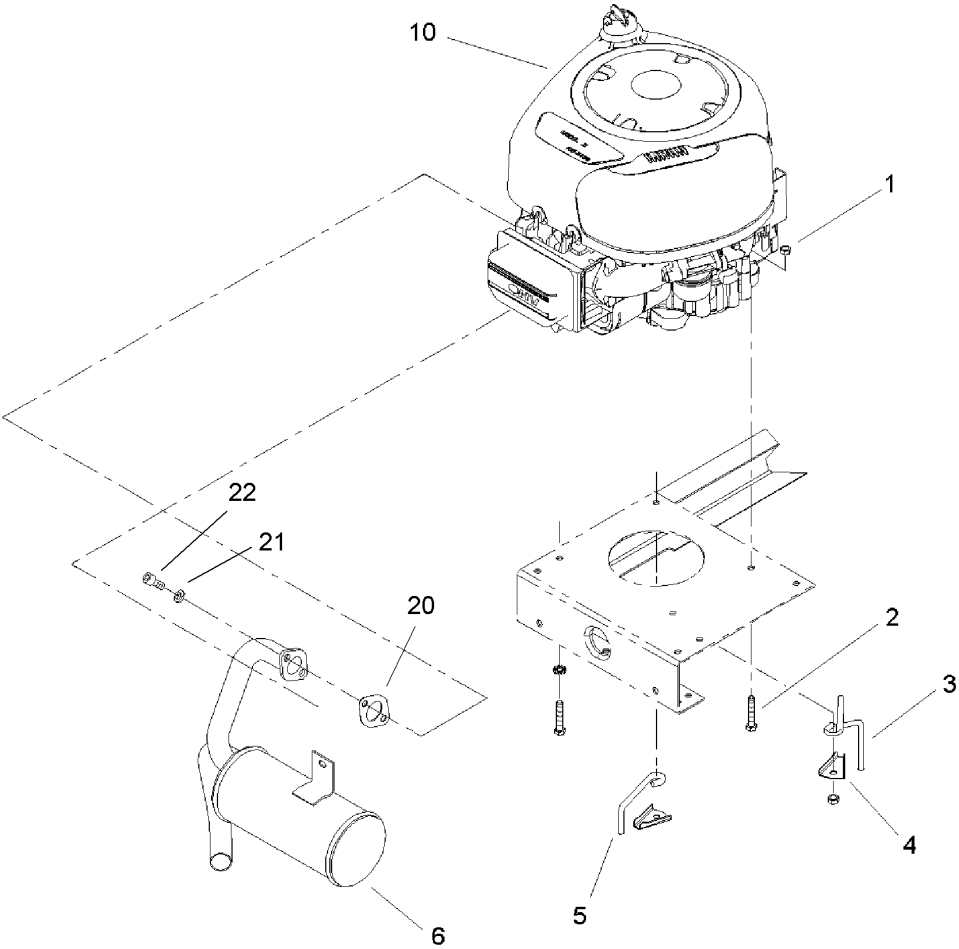

Engine Assembly


Ref	Part No.	Qty.	Description				
1	3296-29	3	Nut-Lock, NI				
2	322-9	4	Screw-HH				
3	88-6060	1	Guide-LH Belt				
4	76-3820	2	Anchor-Belt Guide				
5	88-5490	1	Guide-Belt RH				
6	105-2461	1	Muffler-Exhaust				
10		1	Engine-12 Hp Briggs And Stratton Model No. 219907-0170-E1				
20	88-4410	1	Gasket-Muffler				
21	3253-4	2	Washer-Lock				
22	3274-10	2	Screw-HSH				

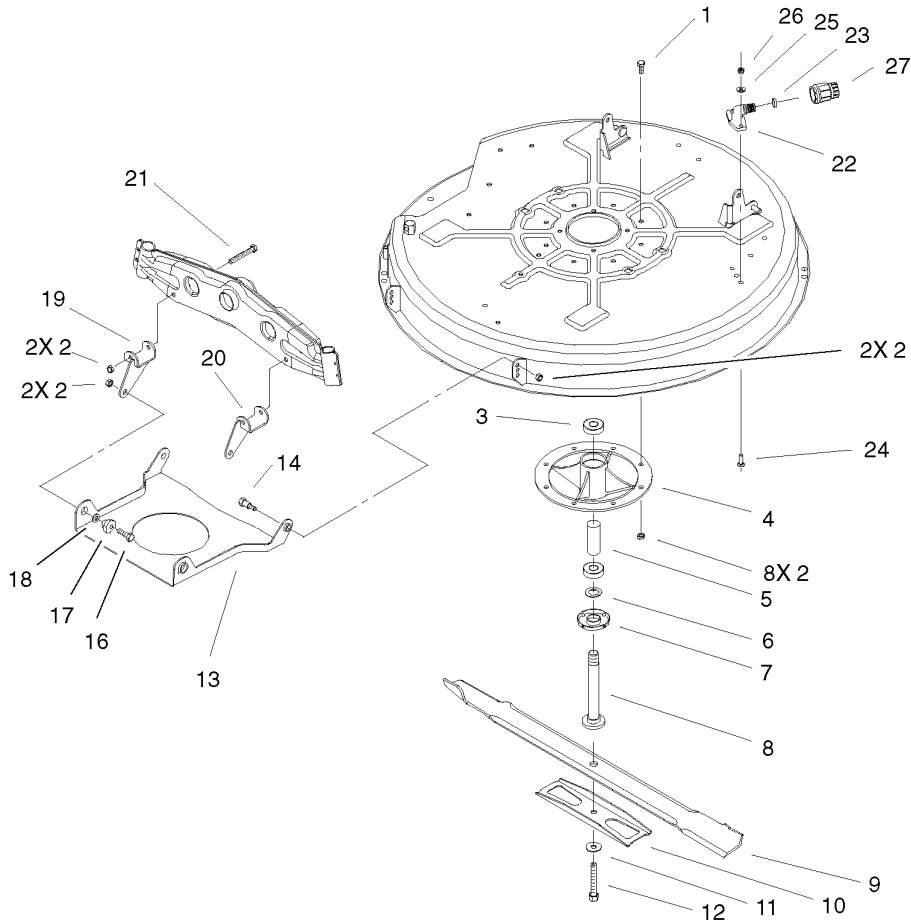

32in Deck and Baffle Assembly

Ref	Part No.	Qty.	Description
1	322-3	8	Screw-HH
2	3296-29	14	Nut-Lock, NI
3	251-297	2	Bearing
4	56-7030	1	Spindle
5	83-7020	1	Spacer-Bearing
6	80-4390	1	Spacer-Hardned
7	80-4370	1	Shield-Bearing
8	80-4350	1	Shaft-Spindle
9	33-4750-03	1	Blade
10	80-4570-03	1	Stiffener
11	3290-465	1	Washer-Belleville
12	26-0671	1	Screw-Blade
13	88-4940-03	1	Suspension-Front Pan
14	28-0540	2	Bolt-Shoulder
16	322-6	2	Screw-HH
17	106661	2	Cam
18	3256-23	2	Washer-Flat
19	88-5640-03	1	Bracket RH
20	88-5650-03	1	Bracket LH
21	322-12	2	Screw-HH
22	95-2747	1	Fitting-Washout
23	46-6290	1	O-Ring
24	3229-1	2	Screw-CARR
25	3256-1	2	Washer-Flat

Ref	Part No.	Qty.	Description
26	3296-16	2	Nut-Lock, NI
27	95-3270	1	Connector-Hose

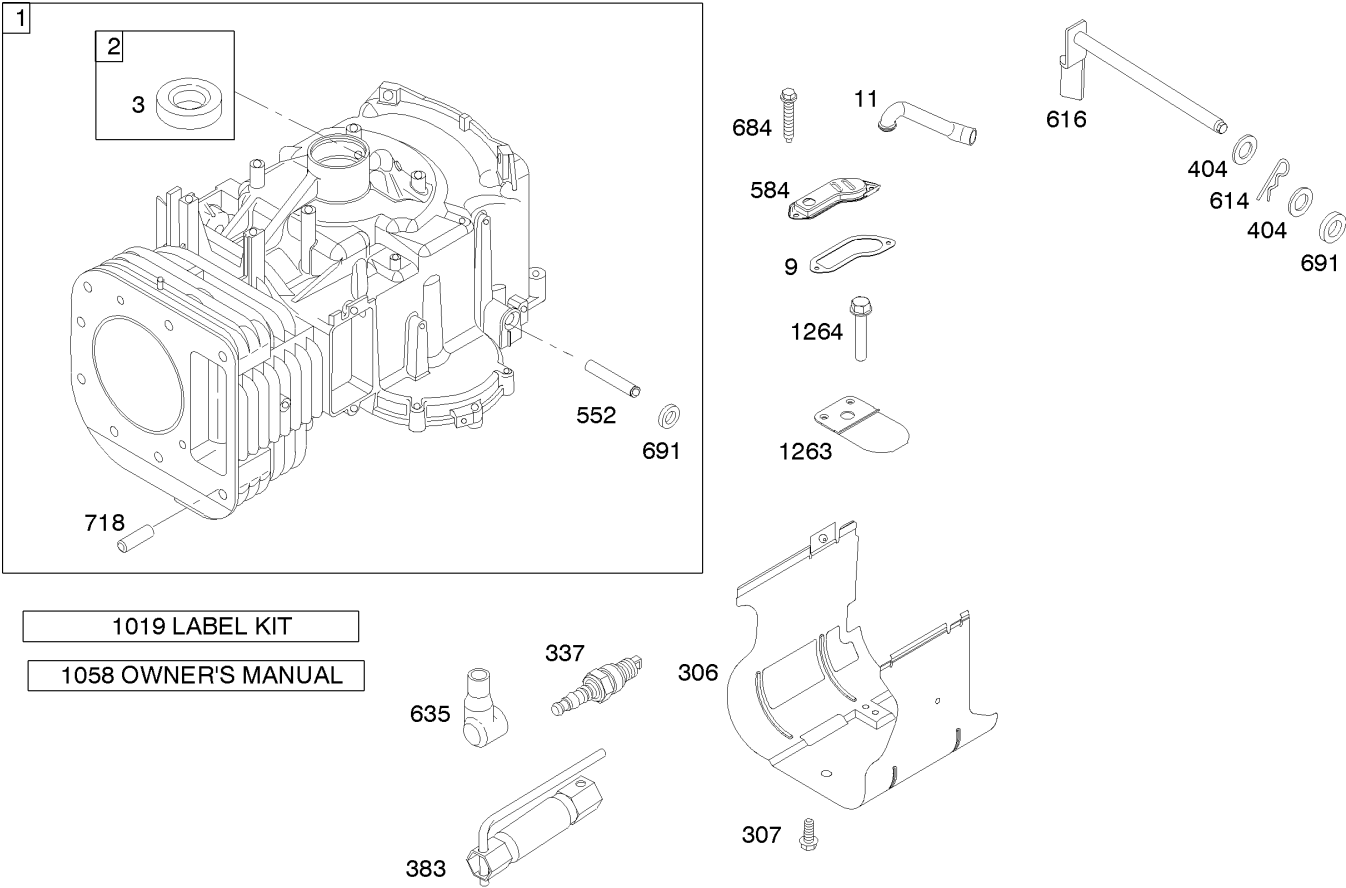


Assemblies include all parts shown in frames.

Cylinder Assembly

Briggs and Stratton Model No. 219907-0170-E1

Ref	Part No.	Qty.	Description				
1	697377	1	Cylinder Assembly				
2	399265	1	Kit-Bushing/seal (Magneto Side)				
3	391086	1	Seal-Oil (Magneto Side)				
9	697109	1	Gasket-Breather				
11	697113	1	Tube-Breather				
306	697359	1	Shield-Cylinder				
307	691003	1	Screw (Flywheel Guard)				
337	491055	1	Plug-Spark				
383	89838	1	Wrench-Spark Plug				
404	691691	1	Washer (Governor Crank)				
552	697144	1	Bushing-Governor				
584	697112	1	Cover-Breather Passage				
614	691620	1	Pin-Cotter				
616	692012	1	Crank-Governor				
635	691909	1	Boot-Spark Plug				
684	697157	1	Screw (Breather Passage Cover)				
691	692407	1	Seal-Governor Shaft				
718	690959	1	Pin-Locating				
1019	697143	1	Kit-Label				
1058	275038	1	Owner's Manual				
1263	697124	1	Reed-Breather				
1264	697104	1	Screw (Breather Reed)				

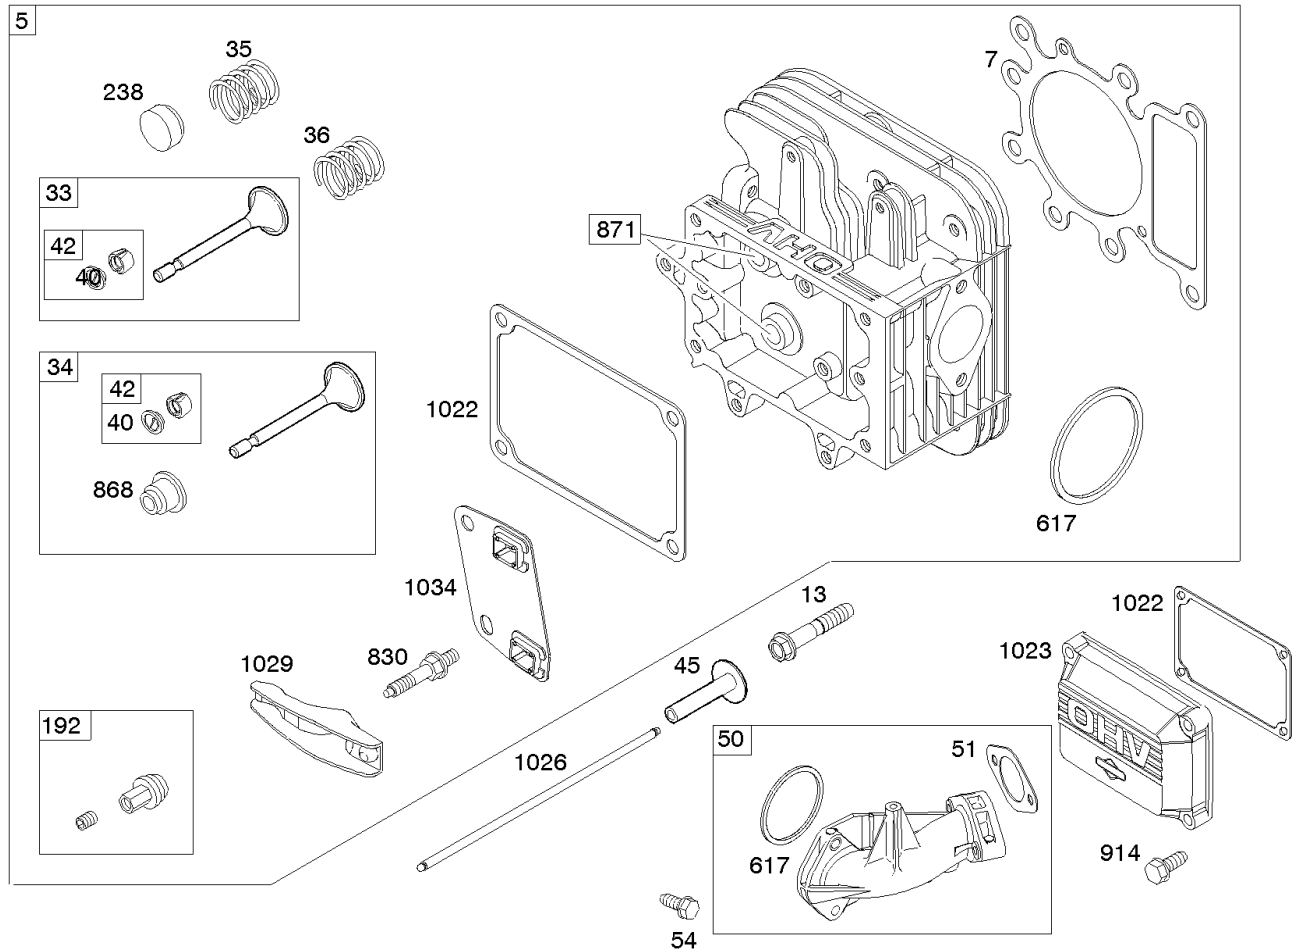


Cylinder Head Assembly

Briggs and Stratton Model No. 219907-0170-E1

Ref	Part No.	Qty.	Description
5	697396	1	Head-Cylinder
3 4 7	273280	1	Gasket-Cylinder Head
6			
13	690360	1	Screw (Cylinder Head Gasket)
33	695760	1	Valve-Exhaust
34	695761	1	Valve-Intake
35	691279	1	Spring-Valve (Exhaust)
36	691279	1	Spring-Valve (Exhaust)
40	690964	1	Retainer-Valve
42	499586	1	Keeper-Valve
45	690564	1	Tappet-Valve
50	697361	1	Manifold-Intake
3 4 51	692137	1	Gasket-Intake
5 6			
54	691148	1	Screw (Intake Manifold)
192	691986	1	Adjustor-Rocker Arm
238	691843	1	Cap-Valve
3 5 617	692138	1	Seal-O Ring (Intake Manifold)
6			
830	691095	1	Stud-Rocker Arm
3 4 868	690968	1	Seal-Valve
6			
871	690969	1	Bushing-Valve Guide
914	690960	1	Screw (Rocker Cover)
3 4 1022	272475	1	Gasket-Rocker Cover
6			

Ref	Part No.	Qty.	Description
1023	692492	1	Cover-Rocker
1026	697394	1	Rod-Push (Intake)
6	697395	1	Rod-Push (Exhaust)
1029	691751	1	Arm-Rocker
1034	690822	1	Guide-Push Rod

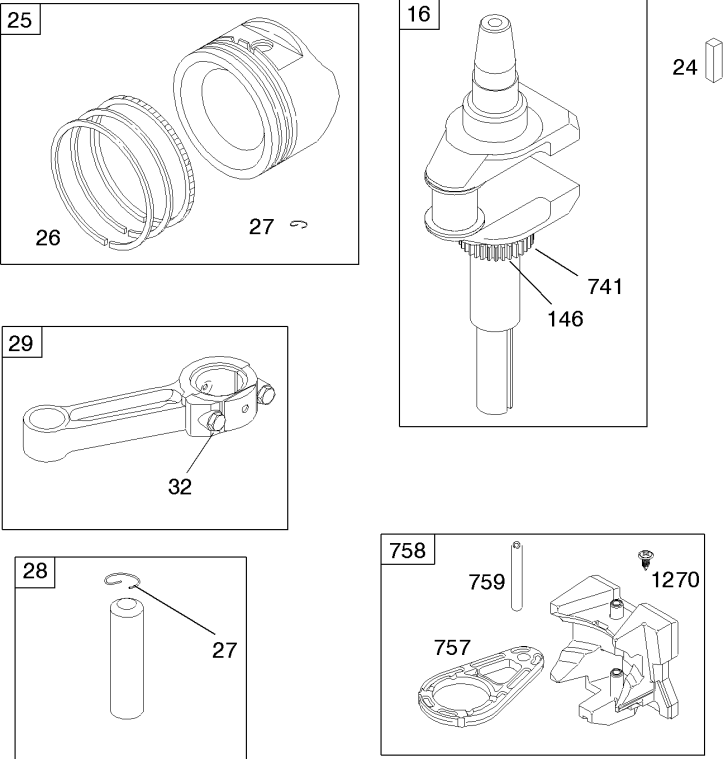


Assemblies include all parts shown in frames.

Crankshaft Assembly
Briggs and Stratton Model No. 219907-0170-E1

Ref	Part No.	Qty.	Description				
16	697390	1	Crankshaft				
24	222698	1	Key-Flywheel				
25	698371	1	Piston Assembly (Standard)				
26	698373	1	Piston Assembly (.020" Oversize)				
26	698375	1	Ring Set (Standard)				
26	698377	1	Ring Set (.020" Oversize)				
27	698469	1	Lock-Piston Pin				
28	697099	1	Pin-Piston (Standard)				
29	697364	1	Rod-Connecting (Standard))				
32	692852	1	Screw (Connecting Rod)				
146	691639	1	Key-Timing				
741	697128	1	Gear-Timing				
757	697607	1	Link-Counterweight				
758	697391	1	Counterweight				
759	697392	1	Pin-Counterweight				
1270	697156	1	Plug-Avs Counterweight				

48 SHORT BLOCK

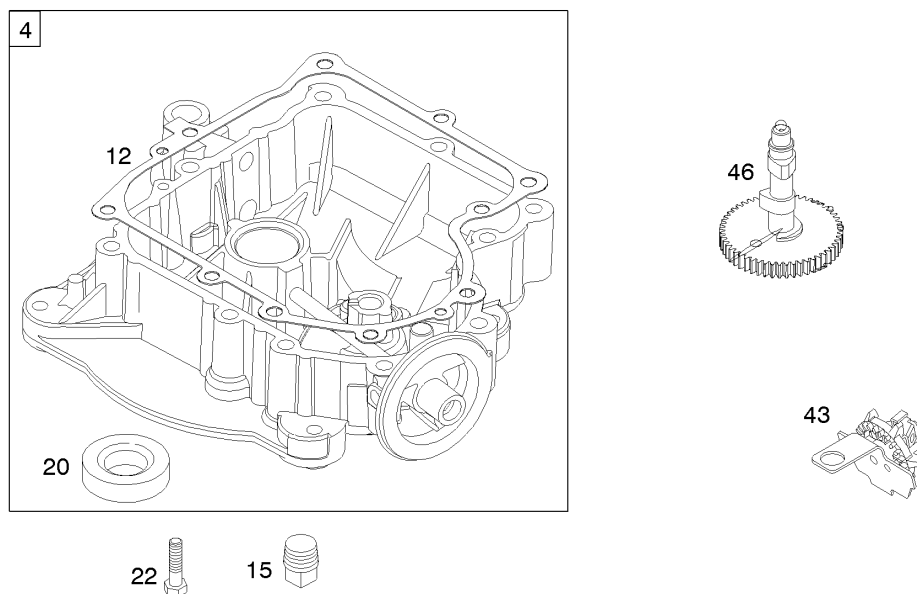


Assemblies include all parts shown in frames.

Crankcase Assembly

Briggs and Stratton Model No. 219907-0170-E1

Ref	Part No.	Qty.	Description				
④	697106	1	Sump-Engine				
③④12	697110	1	Gasket-Crankcase				
④15	690946	1	Plug-Oil Drain				
③④20	690947	1	Seal-Oil (Pto Side)				
④22	692125	1	Screw (Engine Sump)				
④43	691968	1	Governor/oil Slinger				
④46	699016	1	Camshaft				
④48	697740	1	Short Block				

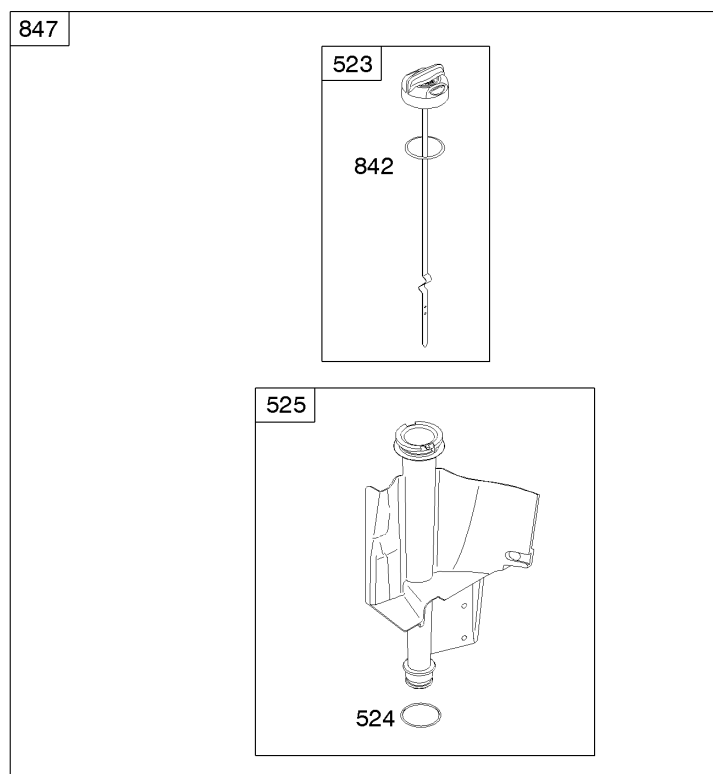


Assemblies include all parts shown in frames.

Oil Filter, Tube and Pump Assembly

Briggs and Stratton Model No. 219907-0170-E1

Ref	Part No.	Qty.	Description				
523	697086	1	Dipstick				
524	691032	1	Seal-Dipstick Tube				
525	697184	1	Tube-Dipstick				
5842	691031	1	Seal-O Ring (Dipstick Tube)				
5847	697611	1	Dipstick/tube				

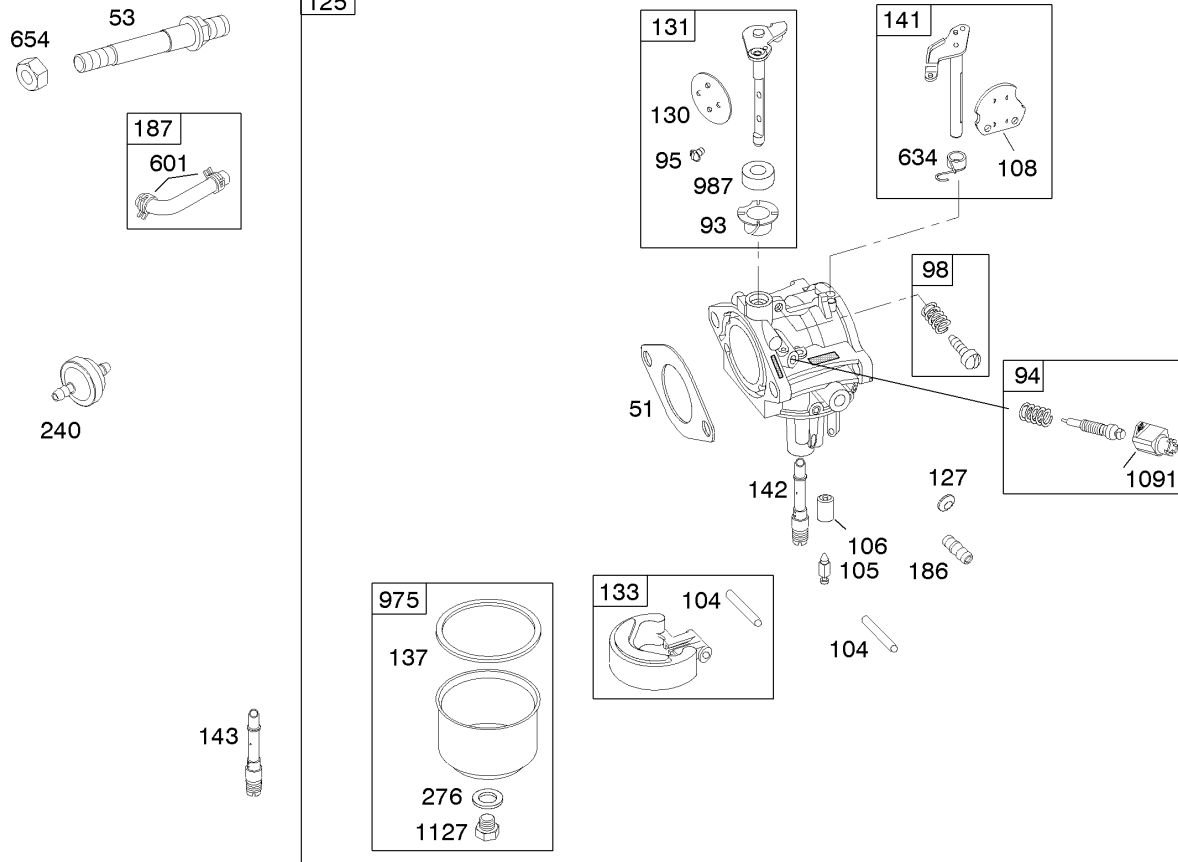


Assemblies include all parts shown in frames.

Carburetor Assembly

Briggs and Stratton Model No. 219907-0170-E1

Ref	Part No.	Qty.	Description
⑤ ④ 51	692137	0	Gasket-Intake
⑤ ⑥			
⑤ 53	690227	1	Stud (Carburetor)
⑤ ⑥ 93	60602	1	Bushing-Throttle Shaft
⑤ 94	498030	1	Kit-Idle Mixture
⑤ ⑥ 95	691636	1	Screw (Throttle Valve)
⑤ 98	495800	1	Kit-Idle Speed
⑤ ⑥ 104	690525	1	Pin-Float Hinge
⑤ ⑥ 105	231855	1	Valve-Float Needle
⑤ ⑥ 106	690577	1	Seat-Inlet
⑤ 108	691227	1	Valve-Choke (Manual Choke)
⑤ 125	790019	1	Carburetor
⑤ ⑥ 127	694524	1	Plug-Welch
⑤ 130	698774	1	Valve-Throttle
⑤ 131	790175	1	Kit-Throttle Shaft
⑤ 133	494381	1	Float-Carburetor
⑤ ⑥ 137	281165	1	Gasket-Float Bowl
⑤ 141	699027	1	Kit-Choke Shaft (Manual Choke)
⑤ ⑥ 142	790025	1	Nozzle-Carburetor
⑤ 143	790028	1	Nozzle-Carburetor (High Altitude)
⑤ 186	698174	1	Connector-Hose
⑤ 187	699331	1	Line-Fuel (Molded)
⑤ 240	394358	1	Filter-Fuel
⑤ ⑥ 276	692255	1	Washer-Sealing


Ref	Part No.	Qty.	Description
⑤ 601	95162	1	Clamp-Hose
⑤ 634	690802	1	Spring/seal Assembly
⑤ 654	690958	1	Nut (Carburetor)
⑤ 975	495933	1	Bowl-Float
⑤ ⑥ 987	691326	1	Seal-Throttle Shaft
⑤ 1091	691333	1	Cap-Limiter
⑤ 1127	691657	1	Screw (Float Bowl)

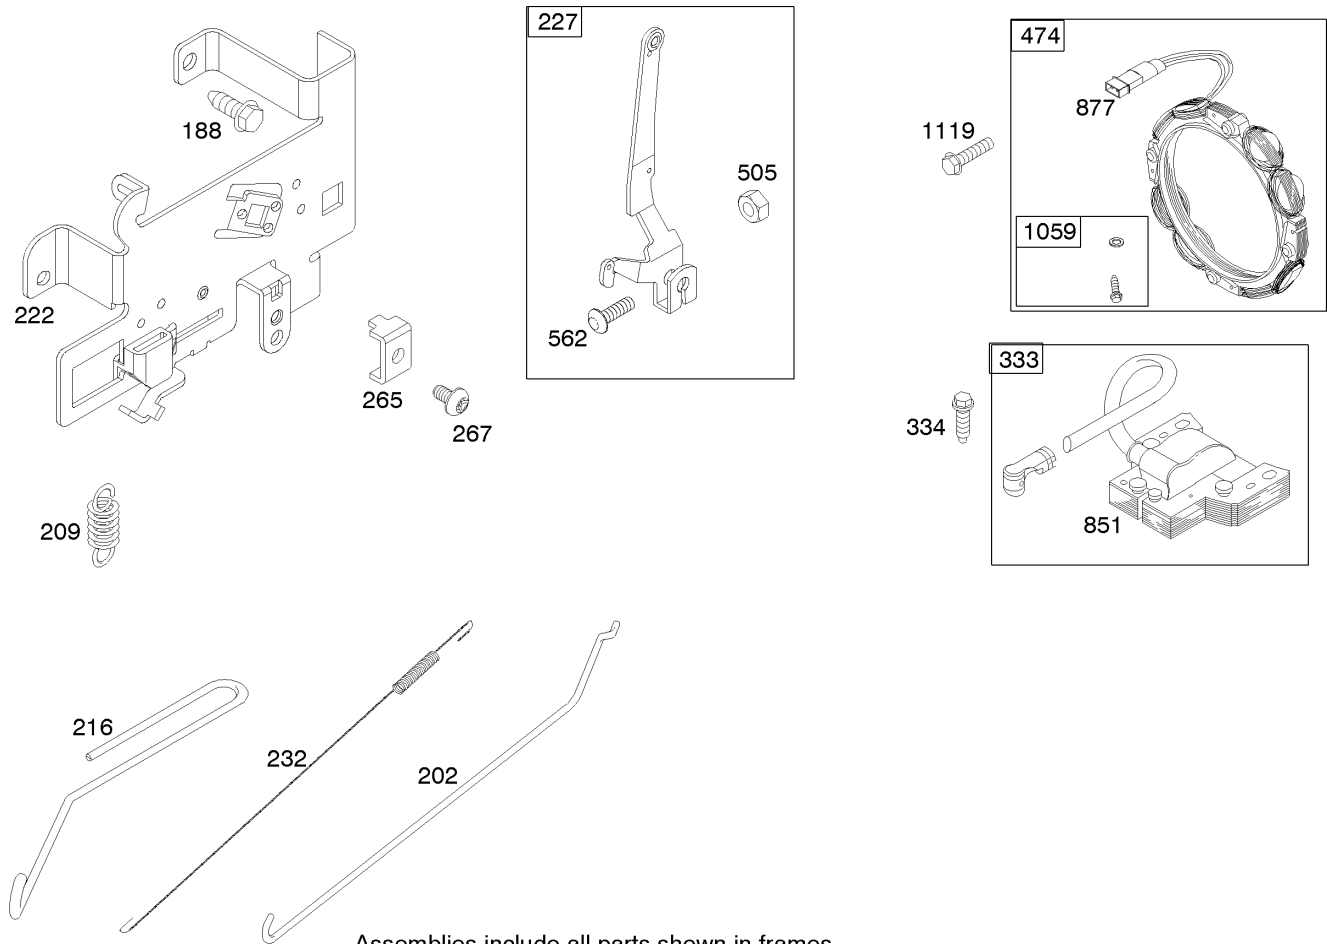

Assemblies include all parts shown in frames.

Governor Assembly
Briggs and Stratton Model 219907-0170-E1

Ref	Part No.	Qty.	Description				
188	691693	0	Screw (Control Bracket)				
202	691841	1	Link-Mechanical Governor				
209	690480	1	Spring-Governor				
216	691840	1	Link-Choke				
222	694042	1	Bracket-Control				
227	691374	1	Lever-Governor Control				
232	691842	1	Spring-Governor Link				
265	691024	1	Clamp-Casing				
267	695134	1	Screw (Casing Clamp)				
333	492341	1	Armature-Magneto				
334	691061	1	Screw (Magneto Armature)				
474	696459	1	Alternator				
505	691251	1	Nut (Governor Control Lever)				
562	691119	1	Bolt (Governor Control Lever)				
851	493880	1	Terminal-Spark Plug				
877	393456	1	Wire-Connector/alternator				
1119	691183	1	Screw (Alternator)				
1059	698516	1	Kit-Screw/washer				

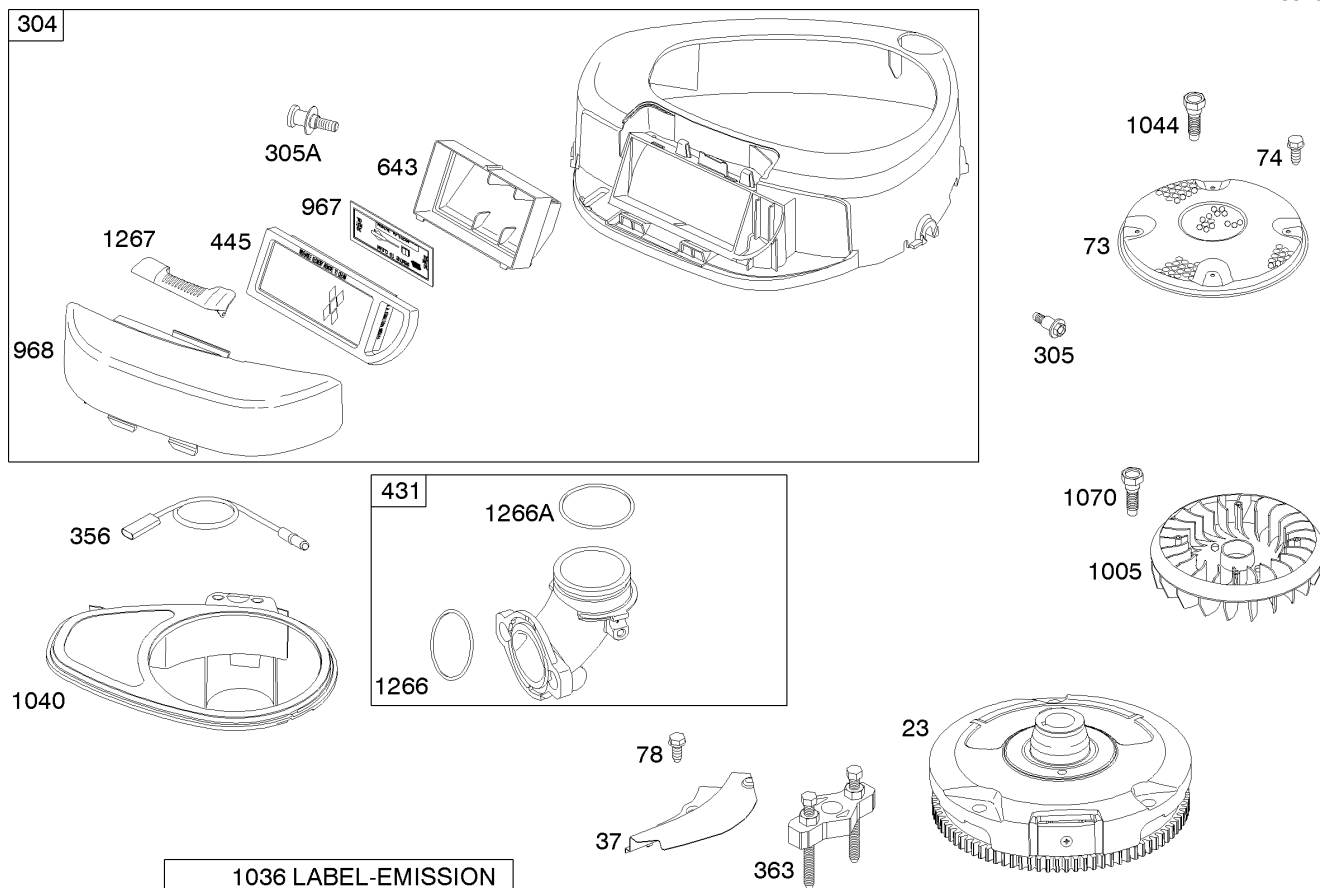


Assemblies include all parts shown in frames.

Blower Housing Assembly



Briggs and Stratton Model No. 219907-0170-E1

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
23	698281	1	Flywheel	1267	697419	1	Latch-Blower Housing
37	697352	1	Guard-Flywheel				
73	697133	1	Screen-Rotating				
74	697897	1	Screw (Rotating Screen)				
75	690582	1	Washer (Flywheel)				
78	691003	1	Screw (Flywheel Guard)				
304	698473	1	Housing-Blower				
305	697102	1	Screw (Blower Housing)				
305A	697103	1	Screw (Blower Housing)				
356	690807	1	Wire-Stop				
363	19203	1	Puller-Flywheel				
431	697122	1	Elbow-Intake				
445	698413	1	Filter-Air Cleaner Cartridge				
643	697155	1	Retainer-Air Filter				
967	697292	1	Filter-Pre Cleaner				
968	697420	1	Cover-Air Cleaner				
1005	699044	1	Fan-Flywheel				
1036	697221	1	Label-Emission				
1040	698368	1	Plate-Trim				
1044	698139	1	Screw (Crankshaft Extension)				
1070	690372	1	Screw (Drive Cap)				
1266	691917	1	Seal-O Ring (Intake Elbow)				
1266A	697123	1	Seal-O Ring (Intake Elbow)				

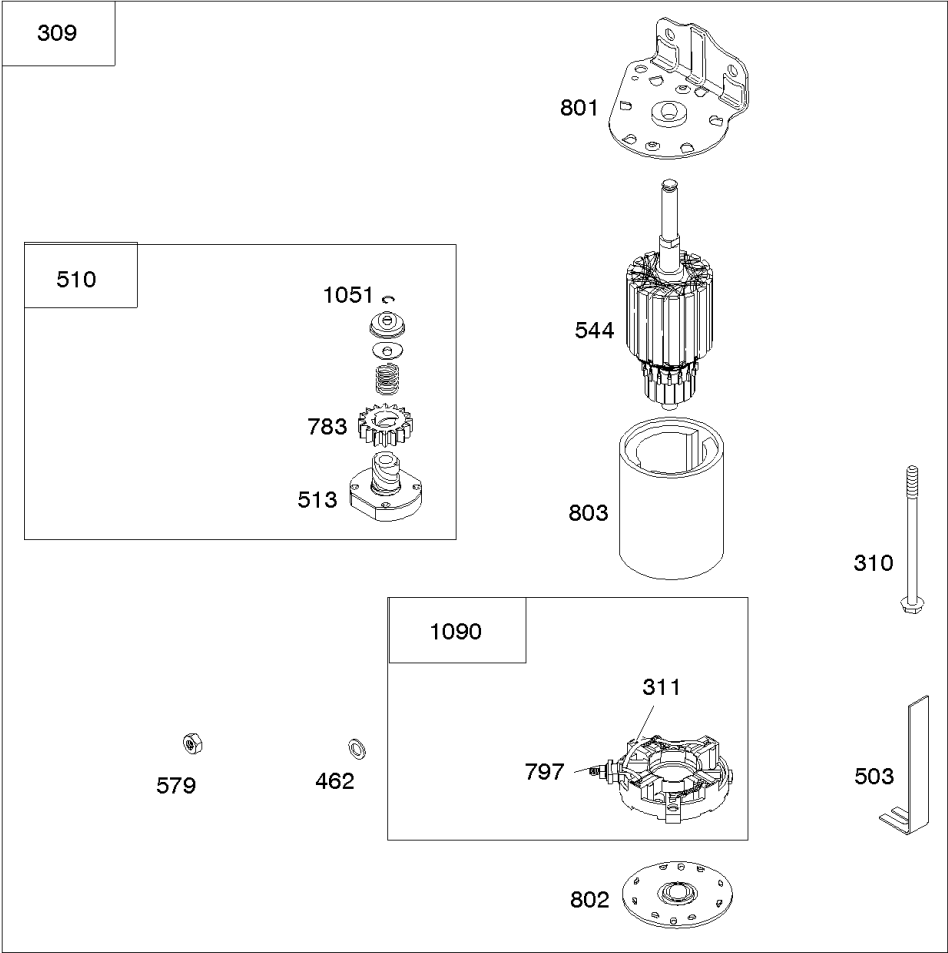

Starter Assembly
Briggs and Stratton Model No. 219907-0170-E1


Ref	Part No.	Qty.	Description				
309	693551	1	Motor-Starter				
310	690323	1	Bolt (Starter Motor)				
311	497608	1	Brush Set				
462	691261	1	Washer (Brush Retainer)				
503	691532	1	Strap-Starter				
510	693699	1	Drive-Starter				
513	692024	1	Drive Clutch				
544	692034	1	Armature-Starter				
579	691029	1	Nut (Brush Retainer)				
697	690372	1	Screw (Drive Cap)				
729	691224	1	Clip-Wire				
783	693713	1	Gear-Pinion				
797	693167	1	Nut (Brush Retainer)				
801	691283	1	Cap-Drive				
802	691286	1	Cap-End				
803	693757	1	Housing-Starter				
1051	691265	1	Ring-Retaining				
1090	691293	1	Retainer-Brush				

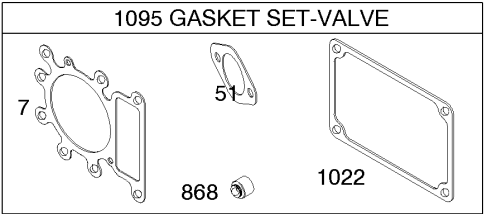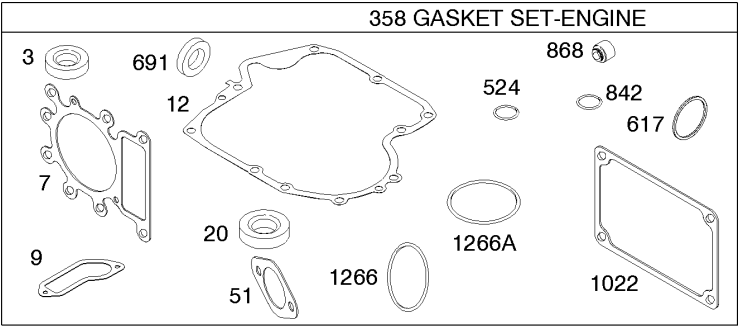

Assemblies include all parts shown in frames.

Gasket Assembly
Briggs and Stratton Model No. 219907-0170-E1

Ref	Part No.	Qty.	Description				
3 6 3	391086	1	Seal-Oil (Magneto Side)				
3 4 7 6	273280	1	Gasket-Cylinder Head				
3 6 9	697109	1	Gasket-Breather				
3 6 12	697110	1	Gasket-Crankcase				
3 6 20	690947	1	Seal-Oil (Pto Side)				
3 4 51 5 6	692137	1	Gasket-Intake				
6 358	697151	1	Gasket Set-Engine				
3 4 617 5 6	692138	1	Seal-O Ring (Intake Manifold)				
3 6 524	691032	1	Seal-Dipstick Tube				
3 6 691	692407	1	Seal-Governor Shaft				
3 6 842	691031	1	Seal-O Ring (Dipstick Tube)				
3 4 868 6	690968	1	Seal-Valve				
3 4 1022 6	272475	1	Gasket-Rocker Cover				
6 1095	691581	1	Gasket Set-Valve				
3 5 1266 6	691917	1	Seal-O Ring (Intake Elbow)				
3 5 1266A 6	697123	0	Seal-O Ring (Intake Elbow)				

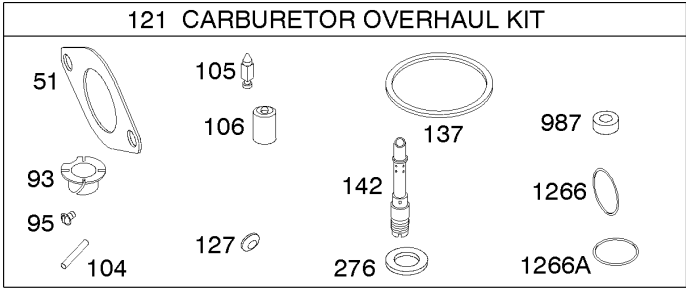

Assemblies include all parts shown in frames.

Carburetor Overhaul Kit Assembly
Briggs and Stratton Model No. 219907-0170-E1

Ref	Part No.	Qty.	Description				
51	692137	0	Gasket-Intake				
93	690602	1	Bushing-Throttle Shaft				
95	691636	1	Screw (Throttle Valve)				
104	690525	1	Pin-Float Hinge				
105	231855	1	Valve-Float Needle				
106	690577	1	Seat-Inlet				
121	790031	1	Kit-Carburetor Overhaul				
127	694524	1	Plug-Welch				
137	281165	1	Gasket-Float Bowl				
142	790025	1	Nozzle-Carburetor				
276	692255	1	Washer-Sealing				
617	692138	1	Seal-O Ring (Intake Manifold)				
987	691326	1	Seal-Throttle Shaft				
1266	691917	0	Seal-O Ring (Intake Elbow)				
1266A	697123	1	Seal-O Ring (Intake Elbow)				

NOTES

NOTES

NOTES

