



14-38HXLE Lawn Tractor

Model No. 71245 - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

 
AR.	as required	HYD.	hydraulic
ASM.	assembly	INC.	incorporated
CARR.	carriage	LH.	left hand
DEG.	degrees	NI.	nylon insert
FH.	flat head	PPH.	phillips pan head
GA.	gauge	PTH.	phillips truss head
HF.	hex flange	PTO.	power take off
HH.	hex head	RH.	right hand
HHF.	hex head flange	SFH.	slotted fillister head
HHFTF.	hex head flange thread forming	SHH.	slotted hex head
HJ.	hex jam	SHWH.	slotted hex washer head
HLH.	hex lag head	SPH.	slotted pan head
HOC.	height-of-cut	SQH.	square head
HS.	hex	SRH.	slotted round head
HSBH.	hex socket button head	STD.	standard
HSFH.	hex socket flat head	TAP.	self tapping
HSH.	hex socket head	TTH.	torx truss head
HWH.	hex washer head	WH.	wing head
HWHTF.	hex washer head thread forming		

Footnotes

- | | | | |
|---|---|---|---|
| ❶ | Not illustrated | ❷ | Not serviced separately |
| ❸ | Included in Engine Gasket Set-Ref. 358. | ❹ | Included in Valve Gasket Set-Ref. 1095. |
| ❺ | Included in Carburetor Overhaul Kit-Ref. 121. | ❻ | Included in Carburetor Gasket Set-Ref. 977. |
| ❽ | Obtain parts from your local Briggs and Stratton dealer | | |


Contents

Description	Page	Description	Page
Frame and Body Assembly	 3	Crankcase Assembly Briggs and Stratton Model 280h07-0160-e1	 21
Hood and Tower Assembly	 4	Oil Filter, Tube and Pump Assembly Briggs and Stratton Model 280h07-0160-e1	 22
Rear Body and Seat Assembly	 5	Carburetor Assembly Briggs and Stratton Model 280h07-0160-e1	 23
Steering Components Assembly	 6	Governor Assembly Briggs and Stratton Model 280h07-0160-e1	 24
Fixed Steering Assembly	 7	Blower Housing Assembly Briggs and Stratton Model 280h07-0160-e1	 25
Engine Assembly	 8	Starter Assembly Briggs and Stratton Model 280h07-0160-e1	 26
Traction Clutching Assembly	 9	Gasket Assembly Briggs and Stratton Model 280h07-0160-e1	 27
Rear Wheel and Tire Assembly	 10	Carburetor Overhaul Kit Assembly Briggs and Stratton Model 280h07-0160-e1	 28
Hydro Transaxle Assembly	 11		
Hydro Transaxle Control Assembly	 12		
38in Deck Assembly	 13		
38in Deck Blade Drive and Braking Assembly	 14		
38in Deck Engagement Assembly	 15		
Height of Cut Component Assembly	 16		
Electrical Component Assembly	 17		
Cylinder Assembly Briggs and Stratton Model 280h07-0160-e1	 18		
Cylinder Head Assembly Briggs and Stratton Model 280h07-0160-e1	 19		
Crankshaft Assembly Briggs and Stratton Model 280h07-0160-e1	 20		

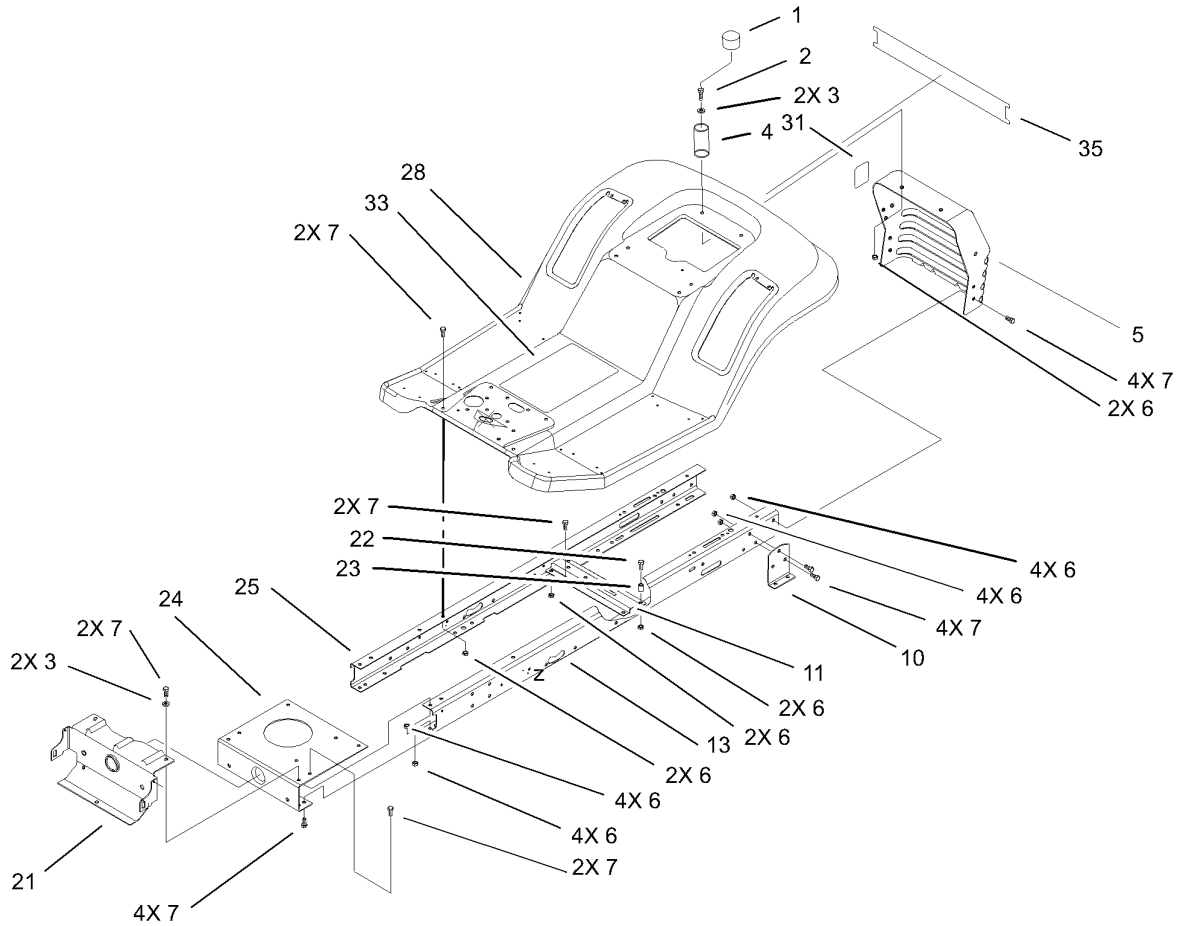


Frame and Body Assembly

Ref	Part No.	Qty.	Description				
1	701178	2	Cap-Protector				
2	322-5	2	Screw-HH				
3	3256-23	4	Washer-Flat				
4	88-6220	2	Spring-Compression				
5	99-2957-03	1	Panel-Rear, Hitch				
6	3296-29	24	Nut-Lock, NI				
7	322-3	20	Screw-HH				
10	88-5260-03	2	Bracket-Transaxle, Mounting				
11	88-4620-03	1	Bracket-Idler, Pivot				
13	99-2958-03	1	Rail-Frame, LH				
21	98-3575-03	1	Support-Front, Axle				
22	322-13	2	Screw-HH				
23	88-5470	2	Spacer-Axle, Front				
24	88-4630-03	1	Plate-Engine, Mounting				
25	99-2959-03	1	Rail-Frame, RH				
28	99-2971	1	Rear Body ASM				
31	100-7449	1	Decal-Dump, Valve				
33	93-6676	1	Decal-Instruction				
35	105-2498	1	Decal-Rear				

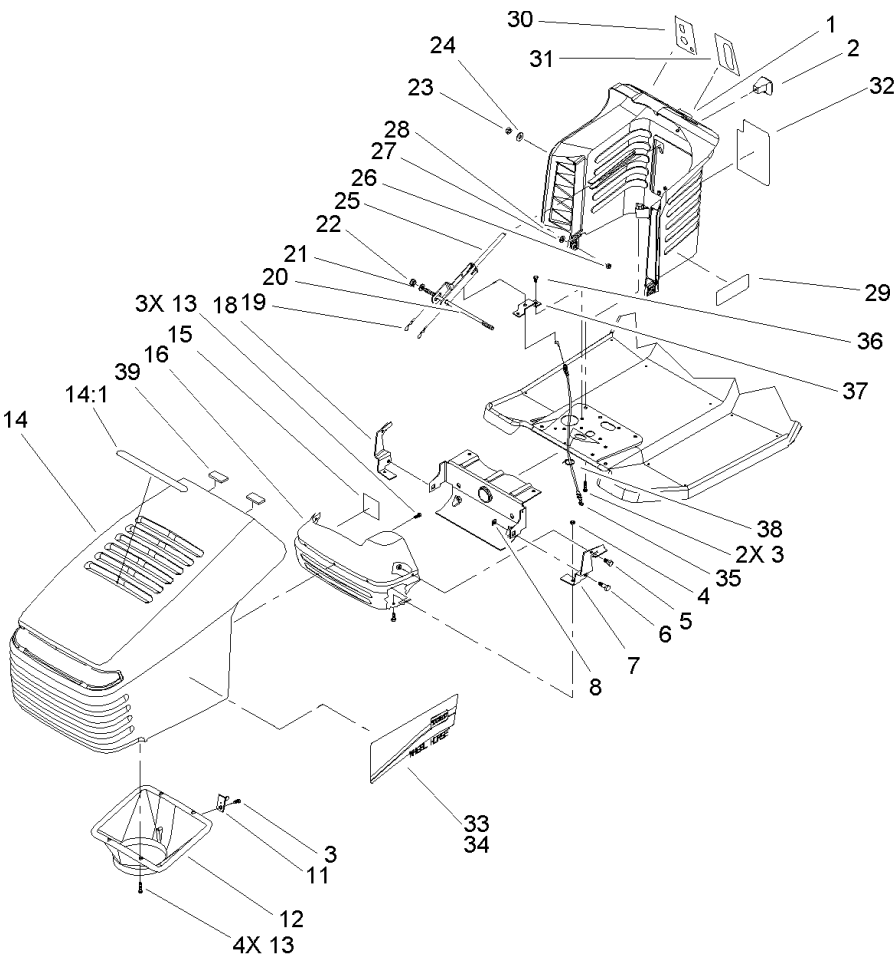 


Hood and Tower Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	99-1947	1	Tower-Steering	27	3256-23	2	Washer-Flat
2	94-5565	1	Knob-Shift	28	322-3	2	Screw-HH
3	46-8091	3	Screw-HWH	29	106-6418	2	Decal-Tower 1438
4	3296-42	4	Nut-Lock, NI	30	99-8142	1	Decal-Ignition
5	321-2	4	Screw-HH	31	92-5730	1	Decal-Throttle
6	28-0540	2	Bolt-Shoulder	32	93-6673	1	Decal-Deck, Engage
7	88-6050-03	1	Bracket-Hinge, LH	33	105-2497	1	Decal-Hood, LH
8	3290-496	2	Nut-Retainer	34	105-2496	1	Decal-Hood, RH
11	94-1984	1	Latch-Pin	35	99-6837	1	Deck Cable ASM
12	93-3891	1	Duct-Air, Hood	36	9266714	2	Screw-HWH
13	46-8090	7	Screw-Plastite	37	93-3849	1	Bracket-Cable, Upper
14	92-8650	1	Hood ASM	38	614249	1	Strap-Tie
14:1	92-5748	1	Decal-Duct, Air	39	94-1980	2	Foam-Hood
15	92-5782	3	Tape-Foil				
16	93-3864-03	1	Shield-Heat				
18	88-6040-03	1	Bracket-Hinge, RH				
19	3290-307	2	Pin-Hair				
20	100-7401	1	Rod-Tower, Pivot				
21	3256-24	2	Washer-Flat				
22	3218-3	2	Nut-Jam				
23	100-7402	2	Nut-Cap				
24	100-7403	2	Washer-Flat				
25	88-5190-03	1	Lever-Deck, Engage				
26	3296-29	2	Nut-Lock, NI				

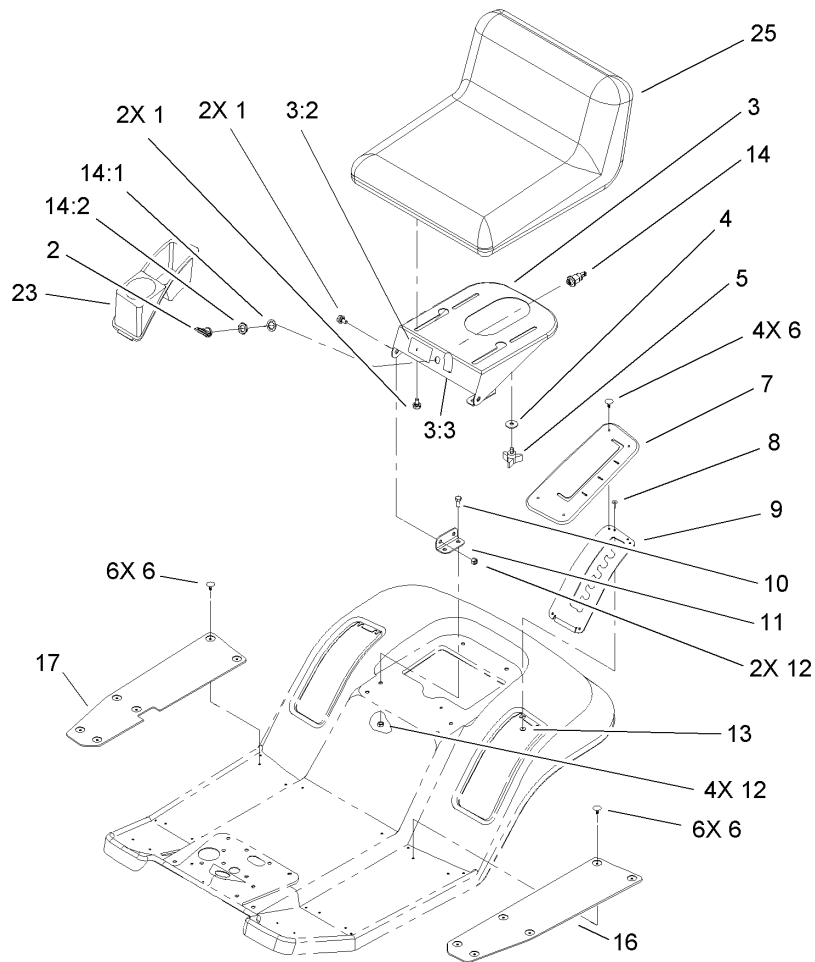 

Rear Body and Seat Assembly


Ref	Part No.	Qty.	Description				
1	37-8770	4	Bolt-Shoulder				
2	63-8360	1	Key-Ignition				
3	106-6437	1	Seat Support ASM				
3:2	99-2986	1	Decal-Danger				
3:3	99-5340	1	Decal-Switch				
4	5-4460	2	Washer-Pivot				
5	92-9674	2	Knob				
6	3290-479	16	Fastener-Panel				
7	93-7657	1	Cover-HOC				
8	3290-282	2	Rivet-Pop				
9	88-5030-03	1	Gate-HOC				
10	322-3	4	Screw-HH				
11	88-4820-03	2	Bracket-Hinge, Seat				
12	3296-29	6	Nut-Lock, NI				
13	3269-26	2	Washer-Flat				
14	46-5780	1	Switch-Starter				
14:1	3254-5	1	Washer-Tooth				
14:2	218-461	1	Nut-HH				
16	88-5240	1	Mat-Foot, LH				
17	88-5230	1	Mat-Foot, RH				
23	88-4990	1	Tray-Fender				
25	106-6440	1	Seat-13"				

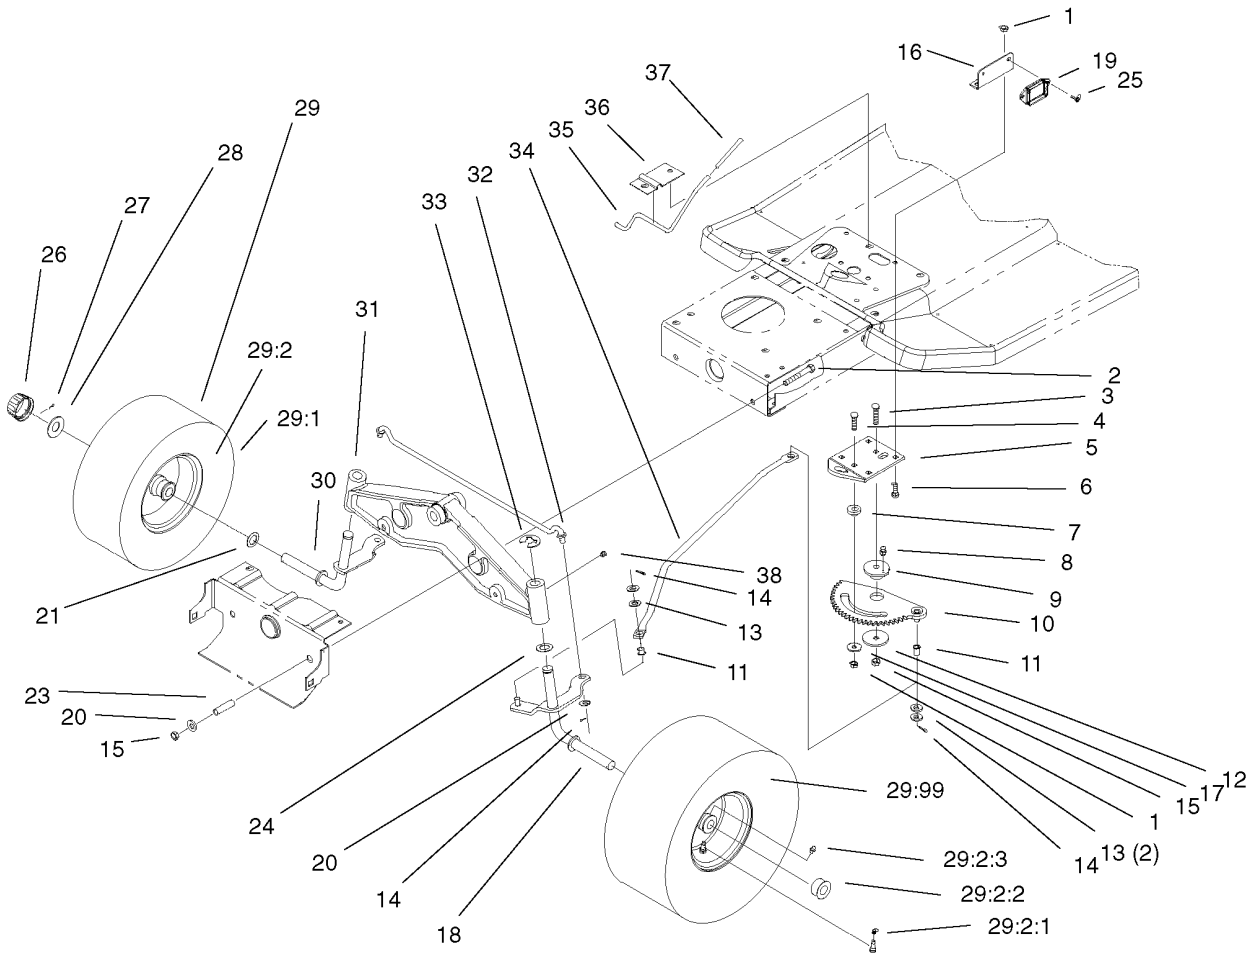 

Steering Components Assembly


Ref	Part No.	Qty.	Description
1	3296-29	5	Nut-Lock, NI
2	323-13	2	Screw-HH
3	3231-4	1	Screw-CARR
4	3230-3	1	Screw-CARR
5	88-5130-03	1	Bracket-Rack, Steering
6	3230-2	4	Bolt-CARR
7	88-5010	1	Spacer-Rack, Steering
8	302-26	1	Fitting-Grease
9	88-4670	1	Bushing-Eccentric
10	88-5200	1	Rack-Steering
11	52-2891	2	Bushing-Link, Steering
12	111419	1	Washer-Bearing
13	3256-25	4	Washer-Flat
14	3272-10	4	Pin-Cotter
15	3296-39	3	Nut-Lock, NI
16	99-2956-03	1	Bracket-Module
17	5-4460	1	Washer-Pivot
18	92-7890-03	1	Spindle-LH
19	99-3700	1	Module
20	3256-24	4	Washer-Flat
21	3-6498	4	Washer-Thrust
23	88-5470	2	Spacer-Axle, Front
24	3-6498	2	Washer-Thrust
25	9266714	2	Screw-HWH

Ref	Part No.	Qty.	Description
26	61-9780	2	Cap-Hub
27	3272-12	2	Pin-Cotter
28	28-2480	2	Washer
29		2	Wheel&tire Asm, front
29:1	99-2988	1	Tire
29:2	88-4370	1	Rim ASM
29:2:1	232-27	1	Stem-Valve
29:2:2	88-4400	2	Bearing-Wheel
29:2:3	302-5	1	Fitting-Grease
29:99	232-39	1	Tube
30	92-7889-03	1	Spindle-RH
31	99-6844-03	1	Axle-Front
32	88-5380	1	Tie Rod-Steering
33	32151-48	2	E-Ring
34	88-4830	1	Link-Drag
35	88-5510	1	Rod-Brake, Parking
36	88-5520-03	1	Bracket-Brake, Parking
37	88-0890	1	Grip-Brake, Parking
38	302-5	2	Fitting-Grease

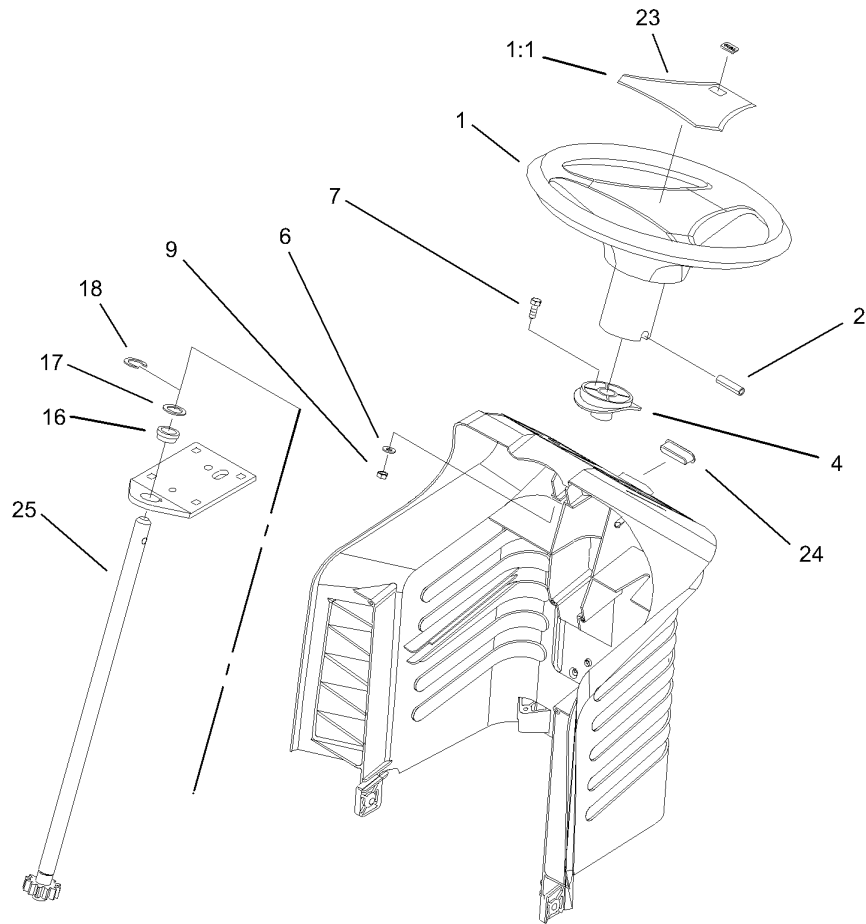 

Fixed Steering Assembly


Ref	Part No.	Qty.	Description				
1	98-1467	1	Wheel-Steering				
1:1	98-1468	1	Cover-Wheel, Steering				
2	32121-111	1	Pin-Roll				
4	88-4190	1	Bushing-Sliding				
6	3256-22	2	Washer-Flat				
7	321-4	2	Screw-HH				
9	3296-42	2	Nut-Lock, NI				
16	88-5150	1	Bearing-Flange				
17	3-6498	1	Washer-Thrust				
18	32151-48	1	E-Ring				
23	98-1459	1	Decal				
24	88-4150	1	Plug				
25	88-6380	1	Shaft-Steering, Long				

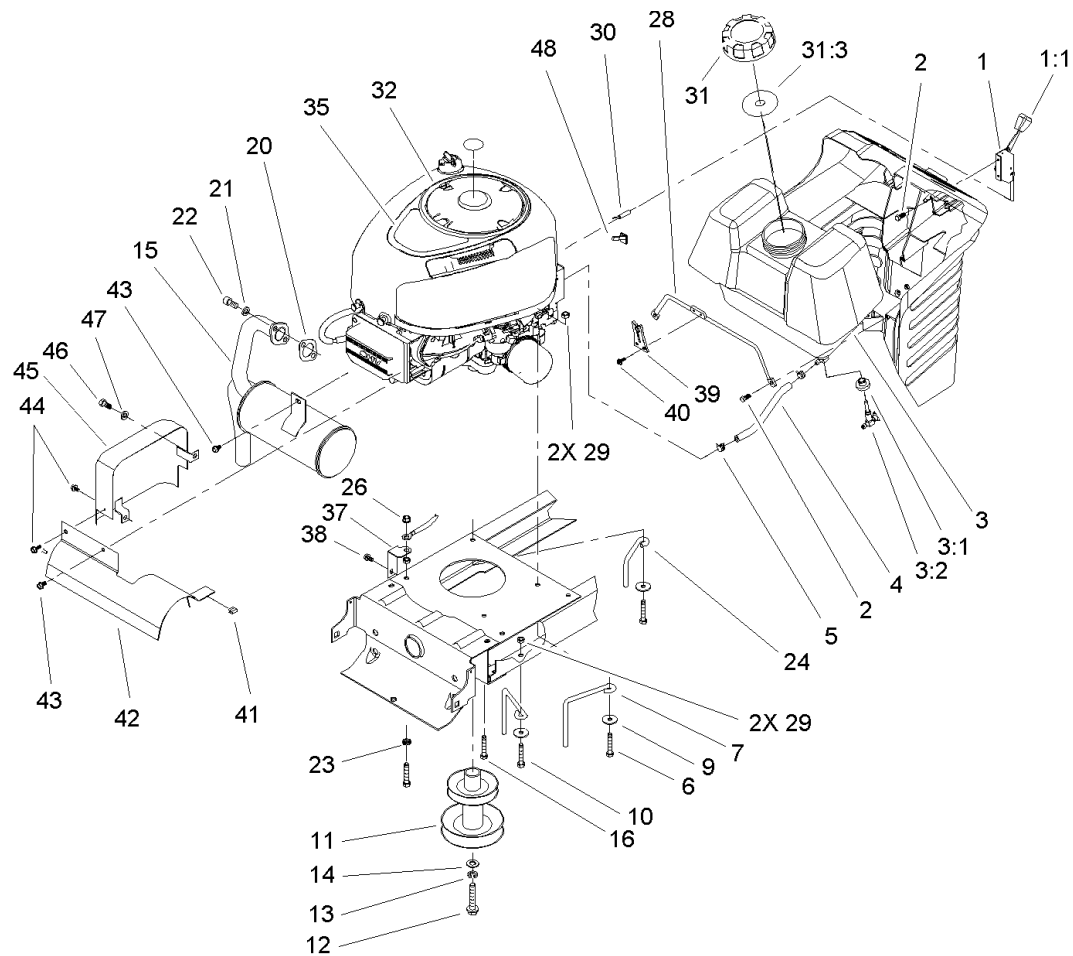 

Engine Assembly

Ref	Part No.	Qty.	Description
1	88-4340	1	Control-Throttle
1:1	66-0120	1	Knob
2	27-0220	4	Screw-Special
3	88-3880	1	Gas Tank ASM
3:1	104047	1	Bushing
3:2	104048	1	Valve-Fuel
4	47-2963	1	Hose-Fuel
5	2412-98	2	Clamp
6	322-9	3	Screw-HH
7	93-3854	3	Guide-Belt, Engine
9	5-4460	4	Washer-Pivot
10	322-5	2	Screw-HH
11	94-1963	1	Pulley-Engine ASM
12	62-3760	1	Screw-HH
13	3253-22	1	Washer-Lock
14	3256-25	1	Washer-Flat
15	94-1953	1	Muffler-Exhaust
16	9267154	1	Screw
20	88-4410	1	Gasket-Muffler
21	3253-4	2	Washer-Lock
22	3274-10	2	Screw-HSH
23	3255-8	1	Washer-Lock
24	93-3855	1	Guide-Belt, RH
26	32149-1	2	Nut


Ref	Part No.	Qty.	Description
28	94-1952	1	Rod-Tank, Gas
29	3296-29	4	Nut-Lock, NI
30	88-4350	1	Cable-Throttle
31	88-3980	1	Gas Cap ASM
31:3	88-4010	1	Gasket-Cap, Gas
32		1	Engine-17hp, Briggs And Stratton Model No. 31f777-0123-E1
35	106-6410	1	Decal-Engine
37	93-3809	1	Bracket-Ground
38	9266714	1	Screw-HWH
39	94-1951	1	Latch-Hood
40	32144-112	2	Screw-HWHTF
41	93-3882	1	Clip-Tinnerman
42	93-3880-03	1	Shield-Muffler
43	9266714	2	Screw-HWH
44	32104-76	2	Screw
45	93-8450-03	1	Exhaust Shield ASM
46	322-3	1	Screw-HH
47	3253-4	1	Washer-Lock
48	88-4490	1	Reducer-Throttle, Rpm

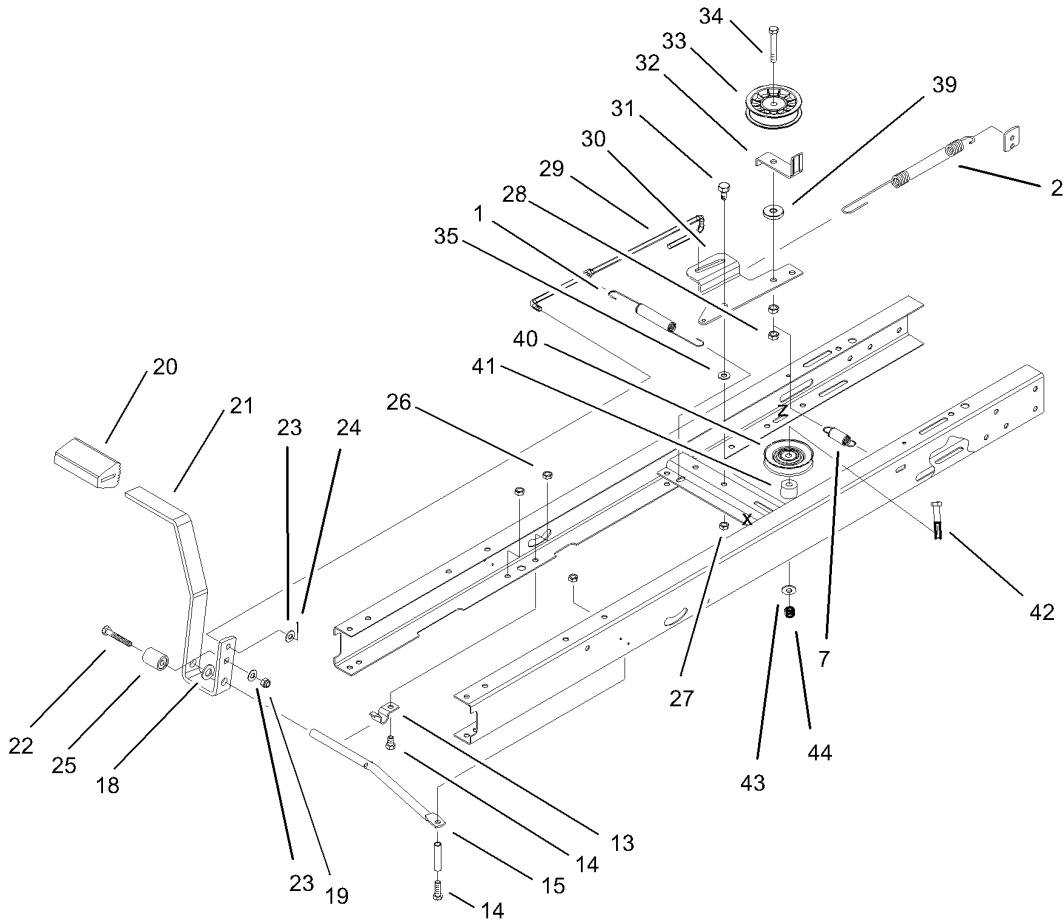 

Traction Clutching Assembly


Ref	Part No.	Qty.	Description
1	27-8890	1	Spring-Return
2	100-7422	1	Spring-Brake
7	88-6330	1	Spring-Extension
13	88-4810	1	Clamp-Shift, Pivot
14	322-3	2	Screw-HH
15	88-5500	1	Rod-Pedal, Pivot
18	3256-26	1	Washer-Flat
19	3296-47	1	Nut-Lock, NI
20	65-2920	1	Pad-Pedal
21	88-5000-03	1	Pedal-Clutch/brake
22	322-9	1	Screw-HH
23	3256-23	2	Washer-Flat
24	3272-10	1	Pin-Cotter
25	99-6836	1	Spacer-Switch
26	3296-29	2	Nut-Lock, NI
27	3296-29	1	Nut-Lock, NI
28	3296-59	2	Nut-Lock, NI
29	88-5270	1	Rod-Clutch/brake
30	88-6070	1	Arm-Idler
31	37-8770	1	Bolt-Shoulder
32	88-5560	1	Guide-Idler, Belt
33	104-4160	1	Pulley-Idler
34	323-11	1	Screw-HH
35	5-4460	1	Washer-Pivot

Ref	Part No.	Qty.	Description
39	92-4890	1	Washer-Wheel
40	92-7102	1	Pulley-Idler
41	92-5791	1	Spacer
42	323-10	1	Screw-HH
43	3256-3	1	Washer-Flat
44	3296-39	1	Nut-Lock, NI

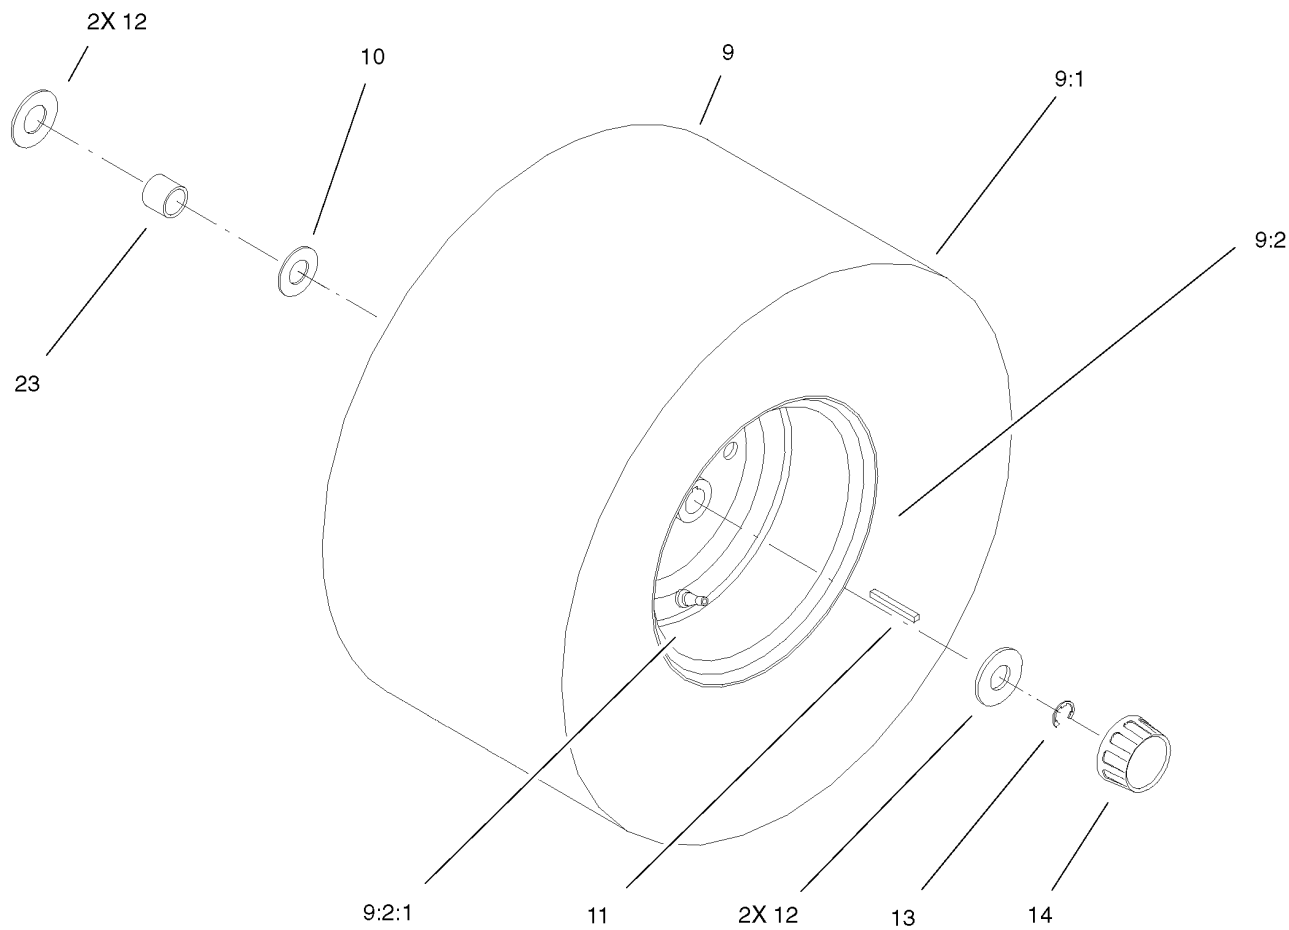 


Rear Wheel and Tire Assembly

Ref	Part No.	Qty.	Description				
9		2	Rear Wheel And Tire				
9:1	99-2996	1	Tire				
9:2	88-4390	1	Rim ASM				
9:2:1	232-27	1	Stem-Valve				
9:99	232-41	1	Tube				
10	3-6498	2	Washer-Thrust				
11	7-0036	2	Key-Square				
12	28-2480	4	Washer				
13	32151-48	2	E-Ring				
14	61-9780	2	Cap-Hub				
23	104-4161	2	Spacer-Wheel				

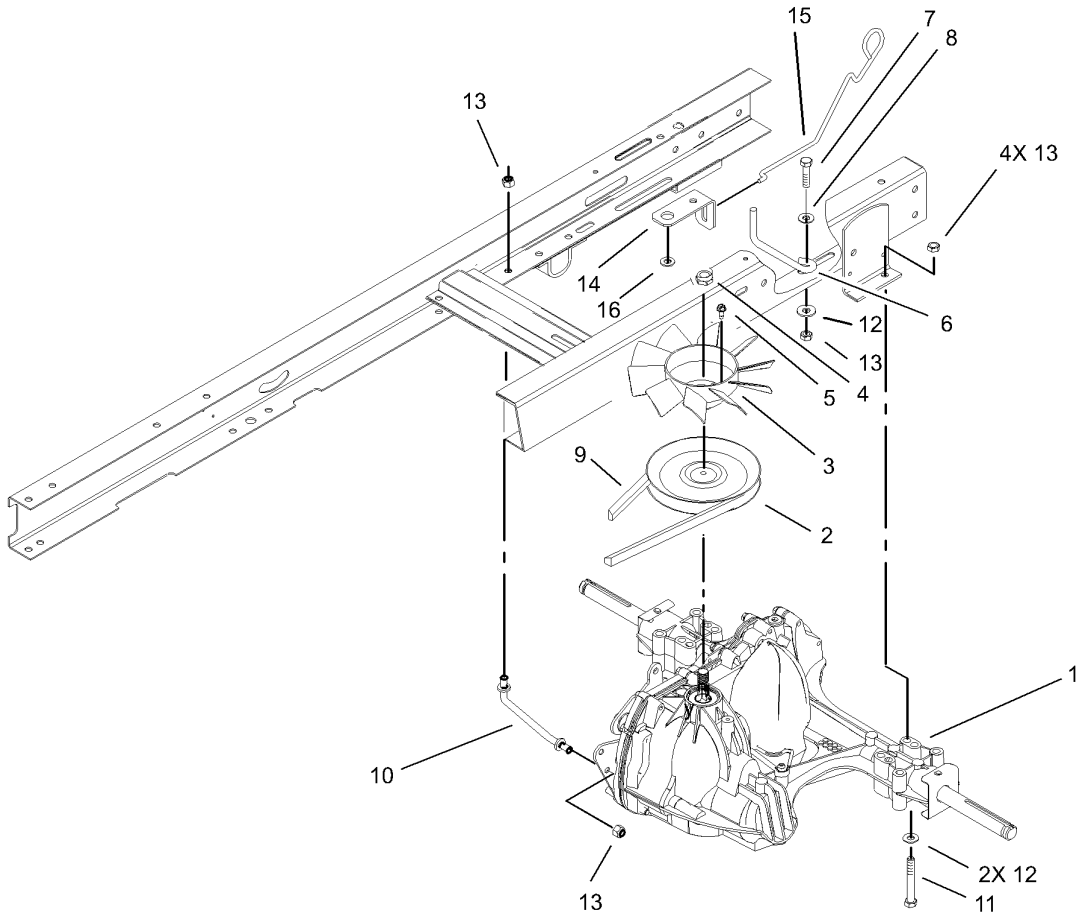 


Hydro Transaxle Assembly

Ref	Part No.	Qty.	Description				
1	104-1760	1	Transaxle ASM				
2	104-1754	1	Pulley				
3	104-2162	1	Fan				
4	3296-28	1	Nut-Lock, NI				
5	9134304	3	Screw				
6	93-3868	1	Guide-Belt, Transmission				
7	322-5	1	Screw-HH				
8	5-4460	1	Washer-Pivot				
9	88-6280	1	V-Belt				
10	100-6225	1	Strap-Torque				
11	322-13	4	Screw-HH				
12	3256-23	3	Washer-Flat				
13	3296-29	7	Nut-Lock, NI				
14	100-7406	1	Bracket-Bypass				
15	100-7407	1	Wire-Bypass				
16	3256-3	1	Washer-Flat				

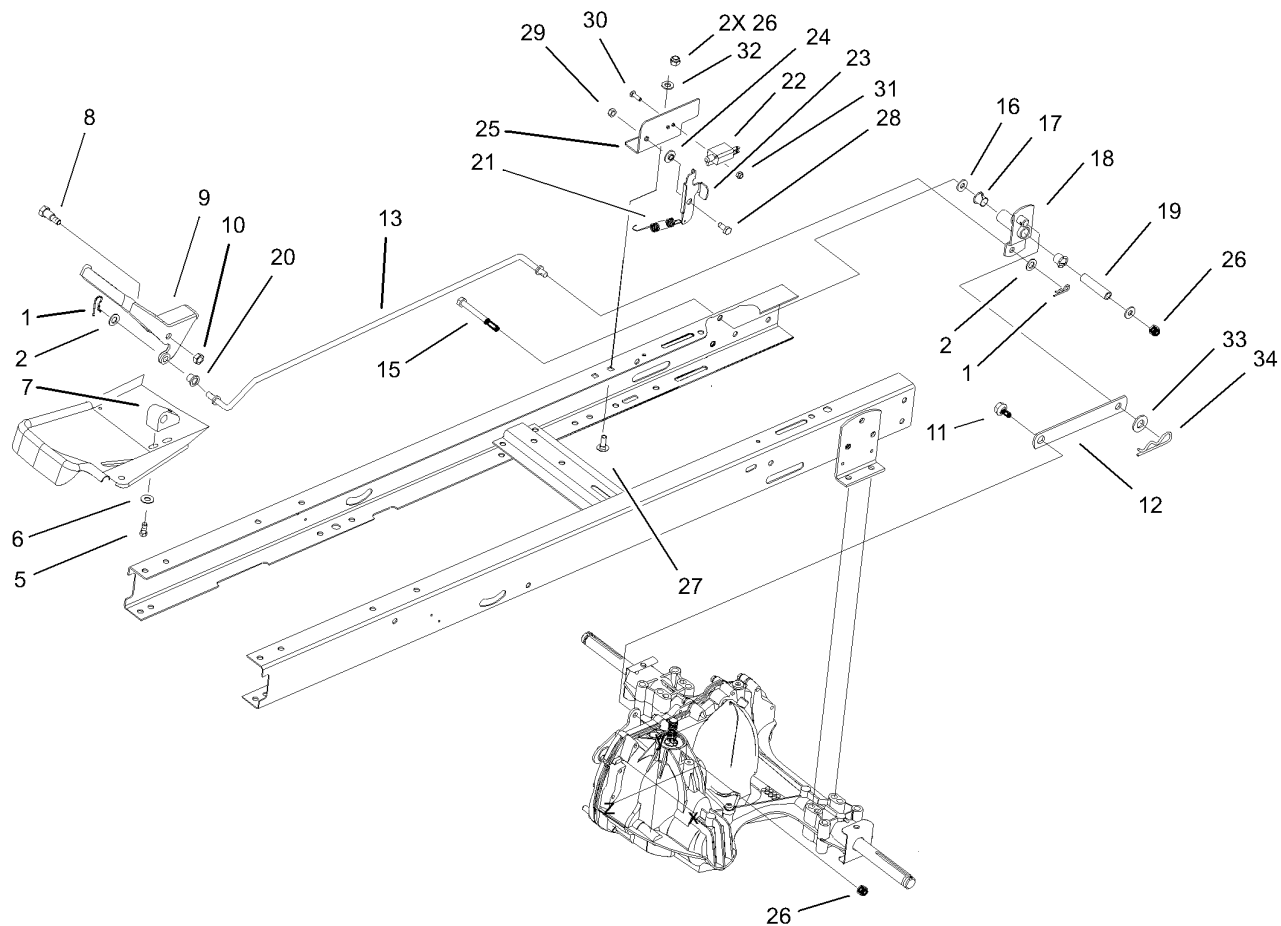 

Hydro Transaxle Control Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	3290-307	2	Pin-Hair	28	99-6810	1	Screw-HH
2	3256-38	2	Washer-Flat	29	3296-42	1	Nut-Lock, NI
5	46-8090	2	Screw-Plastite	30	3290-392	2	Screw-HHF
6	3256-22	2	Washer-Flat	31	3296-1	2	Nut-Lock, NI
7	88-4690	1	Block-Pivot	32	3256-23	2	Washer-Flat
8	23-0310	1	Bolt-Shoulder	33	3256-26	1	Washer-Flat
9	99-6120-05	1	Pedal-Control, Speed	34	9335054	1	Pin-Hair
10	3296-59	1	Nut-Lock, NI				
11	37-8770	1	Bolt-Shoulder				
12	99-6833	1	Link-Control, Speed				
13	99-6839	1	Rod-Control, Speed				
15	322-14	1	Screw-HH				
16	3256-2	2	Washer-Flat				
17	256-257	2	Bushing-Nyliner				
18	99-6835-03	1	Pivot ASM				
19	99-6832	1	Spacer-Pivot				
20	99-6121	1	Bushing				
21	99-6805	1	Spring-Extension				
22	95-1653	1	Switch-Pole, Single				
23	99-6807	1	Bracket-Pivot				
24	99-6808	1	Washer-Stepped				
25	99-6806	1	Bracket-Adjustment				
26	3296-29	4	Nut-Lock, NI				
27	3230-18	2	Screw-CARR				

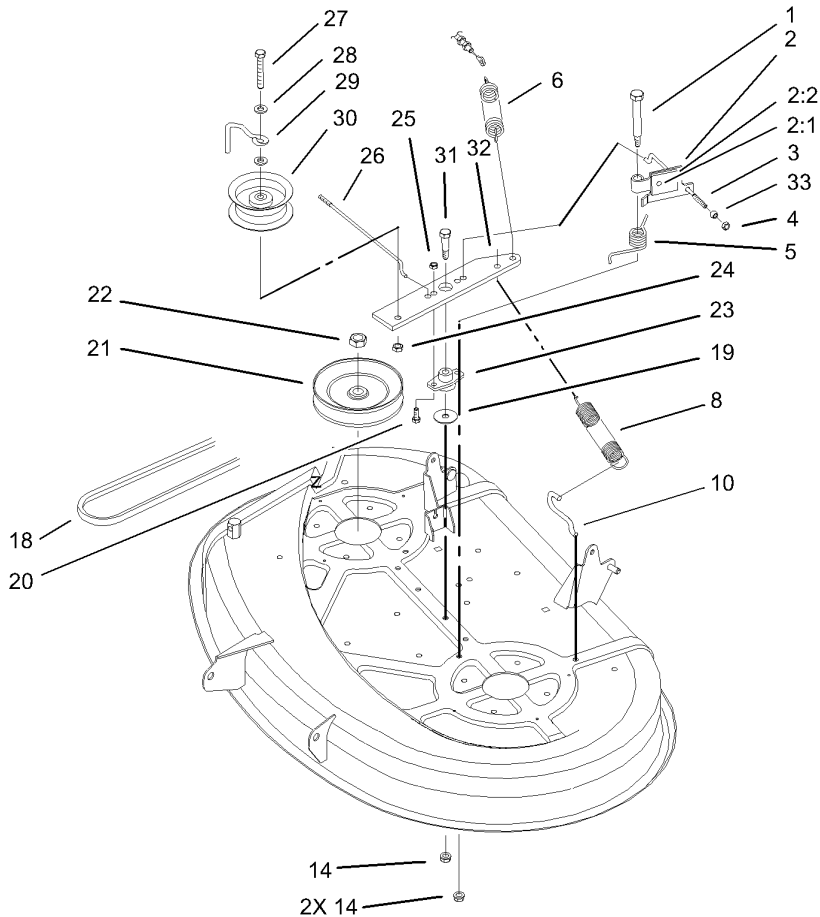 

38in Deck Blade Drive and Braking Assembly


Ref	Part No.	Qty.	Description
1	88-4590	2	Bolt-Shoulder
2	88-6100	2	Brake ASM
2:1	3290-282	2	Rivet-Pop
2:2	56-9830	1	Pad-Brake
3	88-5550	1	Rod-Brake, Deck LH
4	3296-42	2	Nut-Lock, NI
5	88-5910	2	Spring-Torsion
6	88-6130	1	Spring-Deck, Engagement
8	92-8934	1	Spring-Extension
10	88-5970	1	Hook-Return, Spring
14	3296-58	3	Nut-Lock NI
18	88-6250	1	V-Belt
19	3256-68	1	Washer-Flat
20	322-5	2	Screw-HH
21	88-5330	2	Pully-Deck
22	3219-6	2	Nut-Hex
23	88-4980	1	Bushing-Idler, Arm
24	3296-39	1	Nut-Lock, NI
25	3296-29	2	Nut-Lock, NI
26	88-5540	1	Rod-Brake, Deck RH
27	323-12	1	Screw-HH
28	3256-24	2	Washer-Flat
29	88-5070	1	Guide-Idler, Belt
30	88-5630	1	Pulley-Idler, Flat

Ref	Part No.	Qty.	Description
31	7-0030	1	Bolt-Shoulder
32	88-4870-03	1	Arm-Idler, Deck
33	67-0710	2	Ball-Swivel, Stop

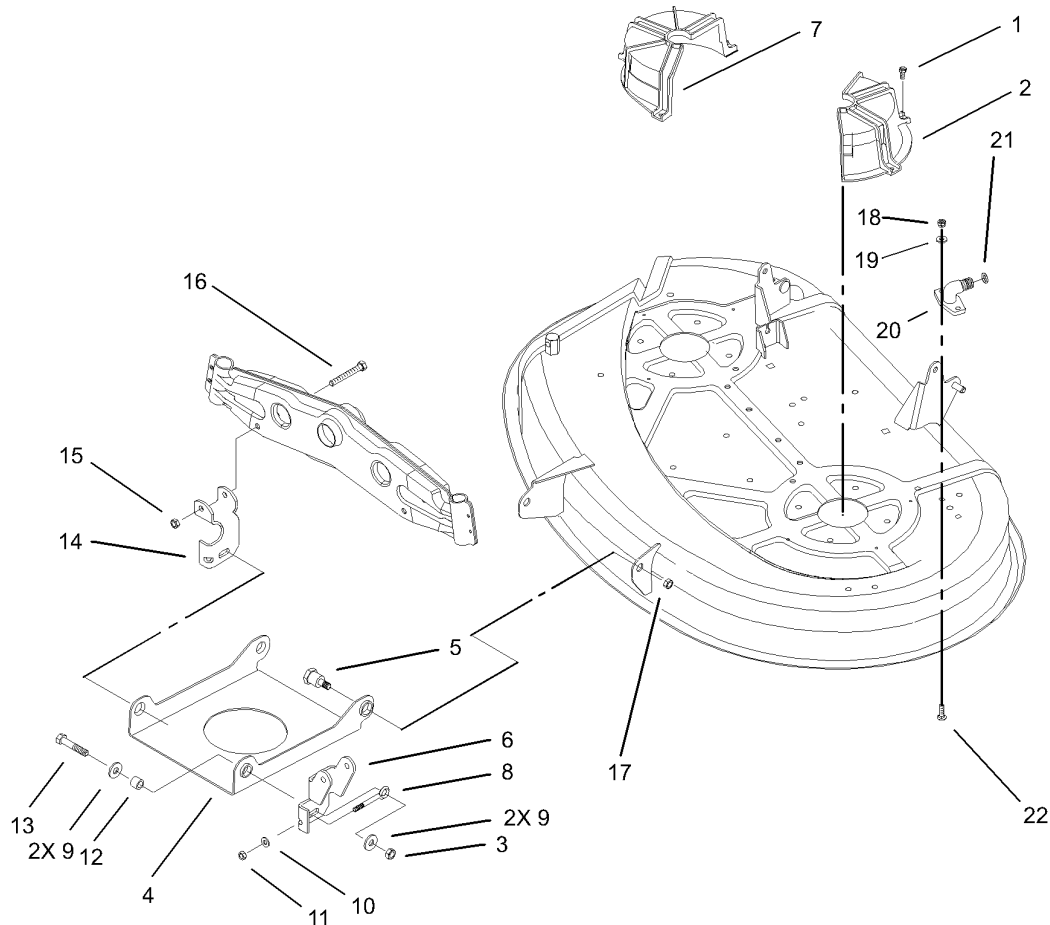 


38in Deck Engagement Assembly

Ref	Part No.	Qty.	Description				
1	32104-76	5	Screw				
2	88-4030	1	Guide-Belt, Deck LH				
3	3296-39	2	Nut-Lock, NI				
4	93-3881-03	1	Pan-Front Deck, Suspension				
5	94-5823	2	Bolt-Shoulder				
6	94-1971-03	1	Bracket-Deck Suspension, LH				
7	88-4020	1	Guide-Belt, Deck RH				
8	61-9980	2	Screw-Adjusting				
9	80-6990	4	Washer-Hardened				
10	3256-22	2	Washer-Flat				
11	3296-42	2	Nut-Lock, NI				
12	93-9847	2	Spacer				
13	323-9	2	Screw-HH				
14	94-1970-03	1	Bracket-Suspension, Deck RH				
15	3296-29	2	Nut-Lock, NI				
16	322-12	2	Screw-HH				
17	3296-23	2	Nut-Lock, NI				
18	3296-16	2	Nut-Lock, NI				
19	3256-1	2	Washer-Flat				
20	95-2747	1	Fitting-Washout				
21	46-6290	1	O-Ring				
22	3229-1	2	Screw-CARR				

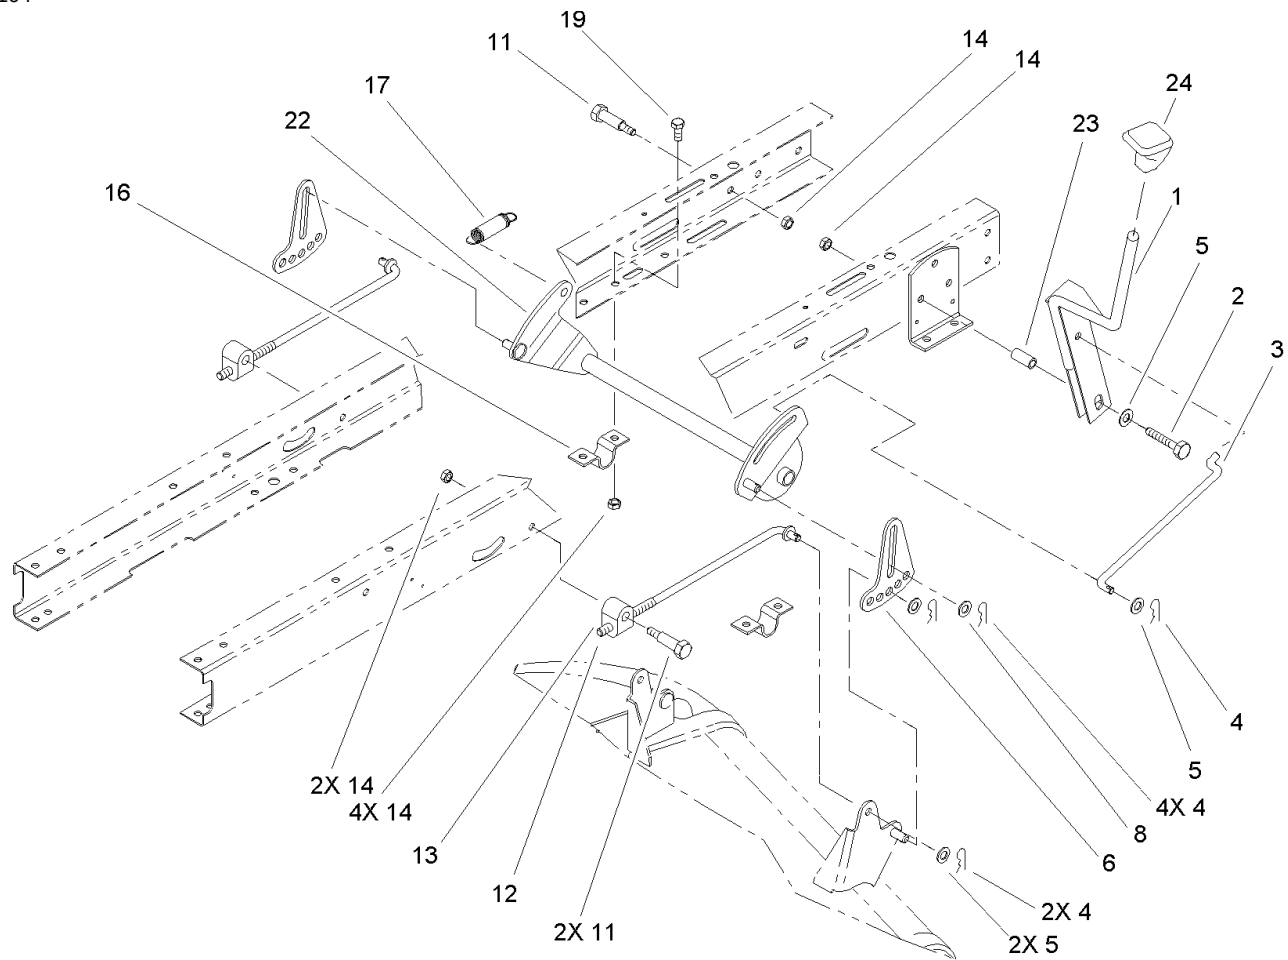 

Height of Cut Component Assembly


Ref	Part No.	Qty.	Description				
1	93-3822-03	1	Lever				
2	322-32	1	Screw-HH				
3	88-5900	1	Link-HOC				
4	3290-307	7	Pin-Hair				
5	3256-24	4	Washer-Flat				
6	88-5570-03	2	Link-Adjusting, HOC				
8	80-6990	4	Washer-Hardened				
11	7-0030	3	Bolt-Shoulder				
12	88-5450	2	Rod-Hanger, Rear				
13	88-4230	2	Trunnion-HOC				
14	3296-29	8	Nut-Lock, NI				
16	88-4730	2	Clamp-Hoc, Pivot				
17	88-6460	1	Spring-Extension				
19	322-3	4	Screw-HH				
22	88-5110-03	1	Pivot				
23	65-7210	1	Spacer				
24	94-5565	1	Knob-Shift				

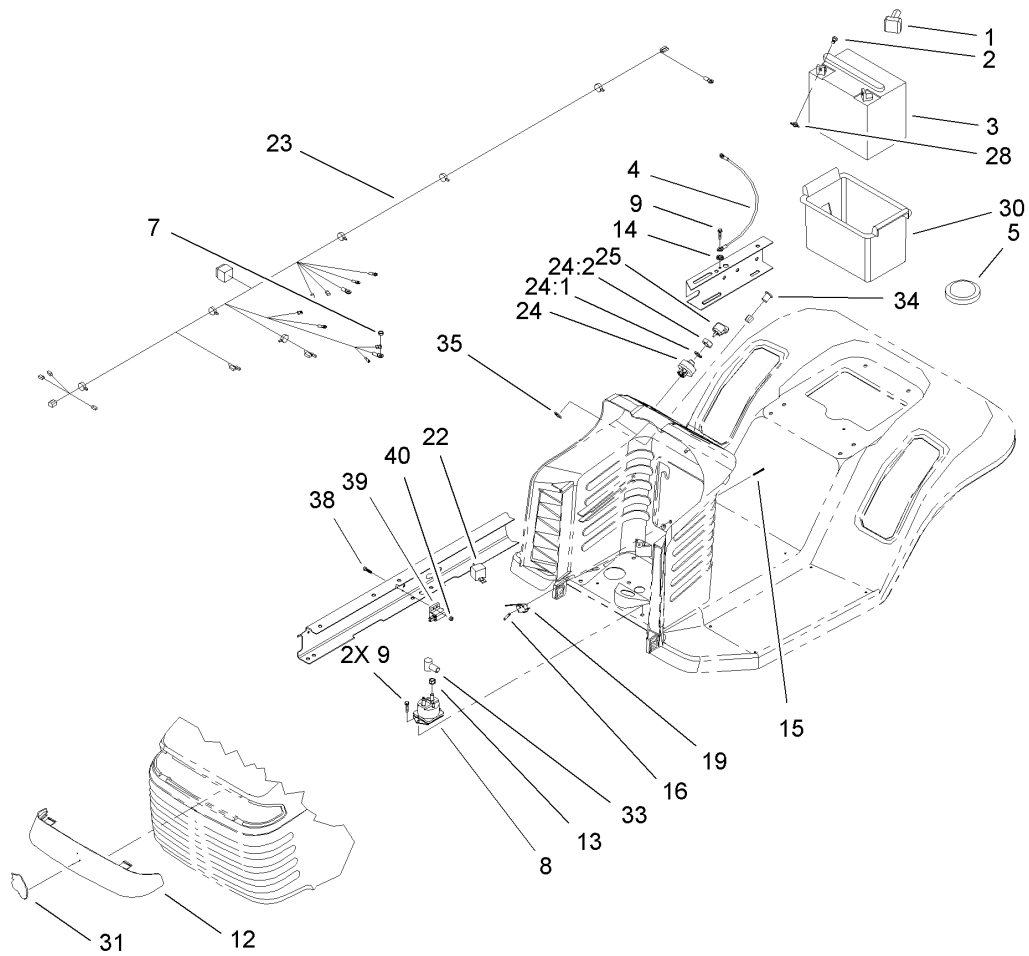 

Electrical Component Assembly

Ref	Part No.	Qty.	Description
1	28-8080	1	Boot-Terminal
2	321-4	2	Screw-HH
3	104-1755	1	Battery
4	44-8110	1	Wire ASM
5	100-3524	1	Switch-Seat
7	32149-2	1	Nut
8	106-8245	1	Solenoid
9	9266714	3	Screw-HWH
12	88-3960	1	Lens-Headlight
13	32149-2	2	Nut
14	3255-7	2	Washer-Lock/ext
15	93-0539	2	Screw-HH
16	3290-354	1	Nut-Speed
19	88-9932	1	Switch-Micro
22	98-7249	1	Relay
23	106-6435	1	Wire Harness-Hydro
24	88-9830	1	Key Switch ASM
24:1	3254-5	1	Washer-Tooth
24:2	218-461	1	Nut-HH
25	63-8360	1	Key-Ignition
28	32103-22	2	Nut-Wing
30	88-4040	1	Box-Battery
31	95-4248	1	Decal
33	93-3190	1	Boot-Insulator, Terminal

Ref	Part No.	Qty.	Description
34	95-7652	1	Light-Indicator
35	99-6059	1	Clip-Retainer
38	3274-14	2	Screw-HSH
39	65-7410	1	Switch-Pole, Single
40	3296-2	2	Nut-Lock

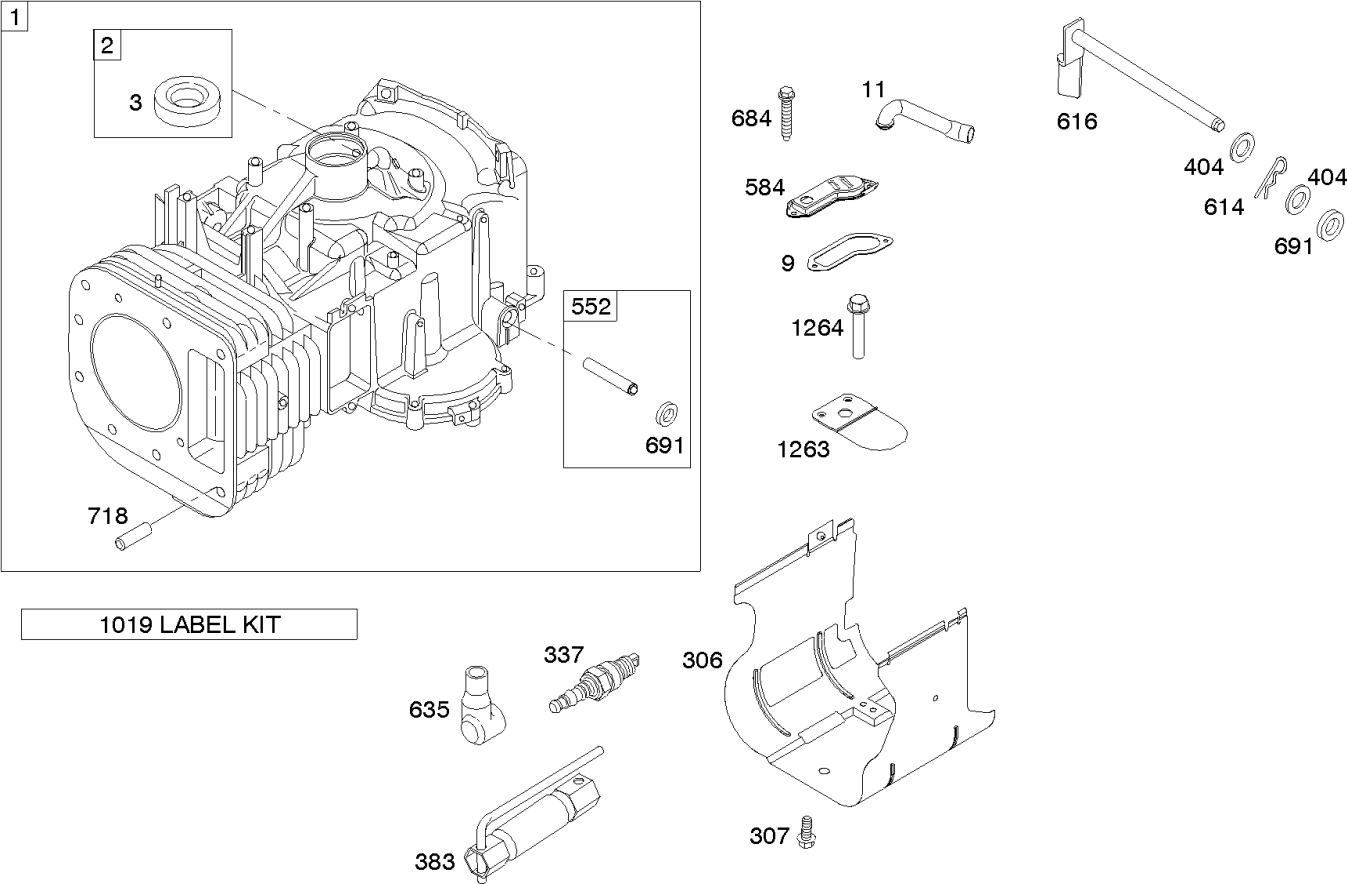 


Assemblies include all parts shown in frames.

Cylinder Assembly


Briggs and Stratton Model 280h07-0160-e1

Ref	Part No.	Qty.	Description				
1	697132	1	Cylinder Assembly				
2	399265	1	Kit-Bushing/seal (Magneto Side)				
3	391086	1	Seal-Oil (Magneto Side)				
9	697109	1	Gasket-Breather Gasket-Crankcase				
11	697113	1	Tube-Breather				
17	697761	1	Short Block				
306	697107	1	Shield-Cylinder				
307	691003	1	Screw (Cylinder Shield)				
337	691043	1	Plug-Spark				
383	89838	1	Wrench-Spark Plug				
404	691691	1	Washer (Governor Crank)				
552	697144	1	Bushing-Governor Crank				
584	697112	1	Cover-Breather Passage				
614	691620	1	Pin-Cotter				
616	692012	1	Crank-Governor				
635	691909	1	Boot-Spark Plug				
684	697157	1	Screw (Breather Passage Cover)				
691	692407	1	Seal-Governor Shaft				
718	690959	1	Pin-Locating				
1019	697143	1	Kit-Label				
1263	697124	1	Reed-Breather				
1264	697104	1	Screw (Breather Reed)				

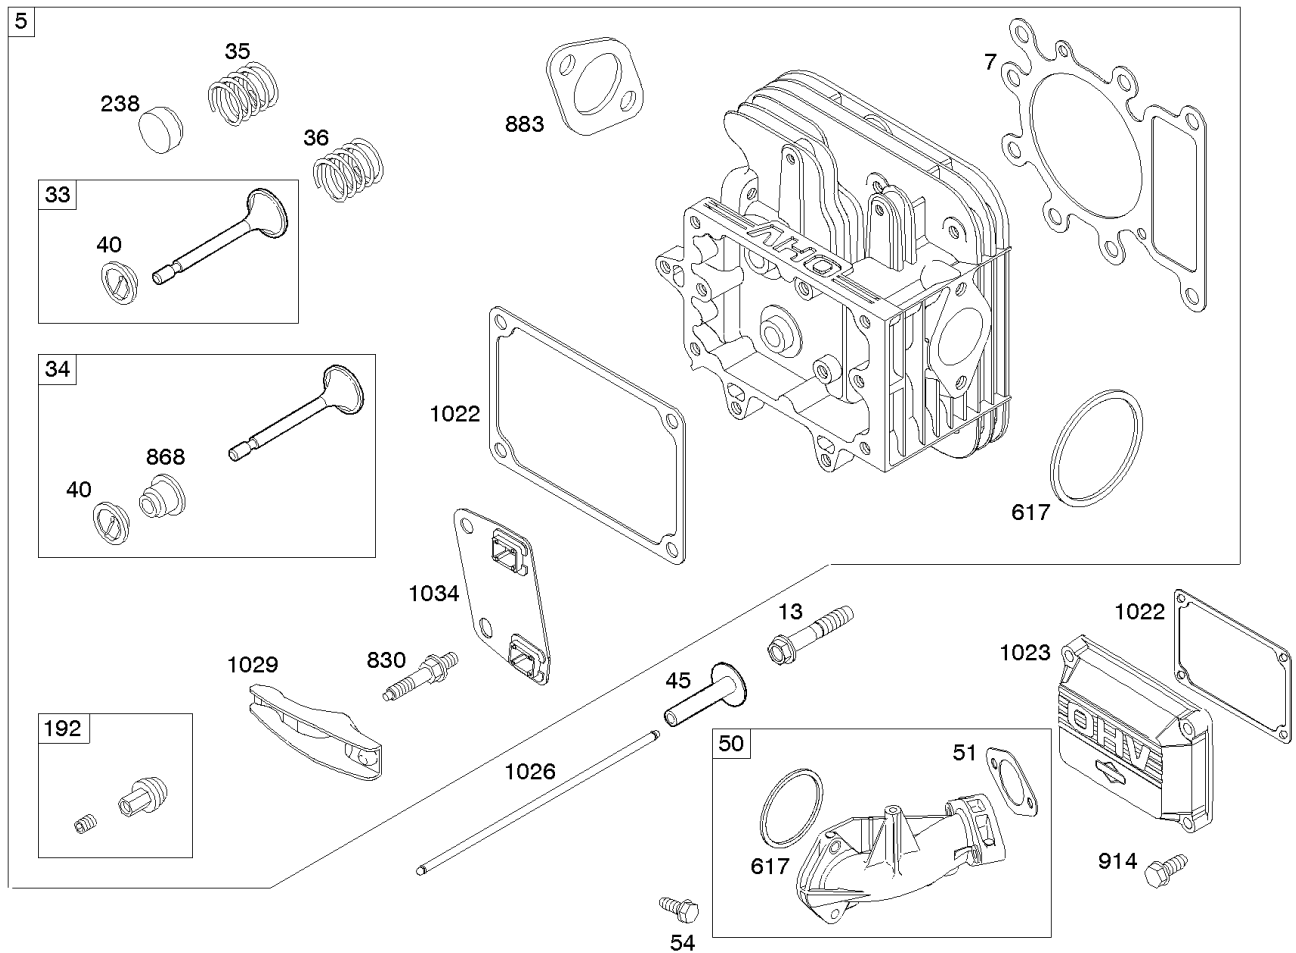 

Cylinder Head Assembly Briggs and Stratton Model 280h07-0160-e1


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
75	698148	1	Head-Cylinder	17	692011	1	Rod-Push (Exhaust)
377	273280	1	Gasket-Cylinder Head	71029	691751	1	Arm-Rocker
713	690360	1	Screw (Cylinder Head Gasket)	71034	690822	1	Guide-Push Rod
733	695760	1	Valve-Exhaust				
734	695761	1	Valve-Intake				
735	691279	1	Spring-Valve (Exhaust)				
736	691279	1	Spring-Valve (Exhaust)				
740	691752	1	Retainer-Valve				
745	690564	1	Tappet-Valve				
750	690193	1	Manifold-Intake				
3451	692137	1	Gasket-Intake				
56							
754	691148	1	Screw (Intake Manifold)				
7192	691986	1	Adjustor-Rocker Arm				
7238	691843	1	Cap-Valve				
35617	692138	1	Seal-O Ring (Intake Manifold)				
7							
7830	691095	1	Stud-Rocker Arm				
34868	690968	1	Seal-Valve				
7							
7883	692236	1	Gasket-Exhaust				
7914	690960	1	Screw (Rocker Cover)				
371022	272475	1	Gasket-Rocker Cover				
71023	692492	1	Cover-Rocker				
71026	692003	1	Rod-Push (Intake)				

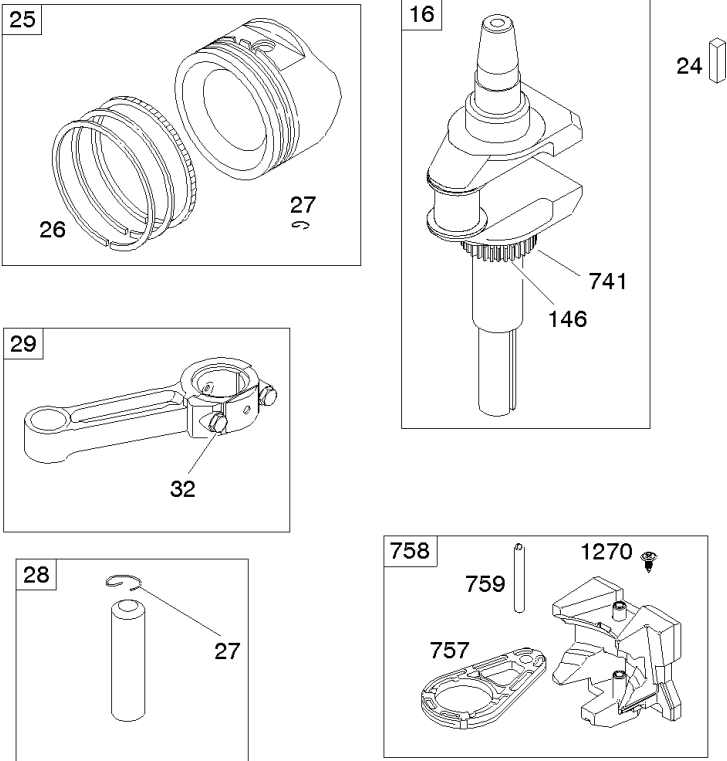 

Assemblies include all parts shown in frames.

Crankshaft Assembly
Briggs and Stratton Model 280h07-0160-e1

Ref	Part No.	Qty.	Description				
16	697127	1	Crankshaft				
24	222698	1	Key-Flywheel				
25	698371	1	Piston Assembly (Standard)				
	698393	1	Piston Assembly (.010" Oversize)				
	698394	1	Piston Assembly (.020" Oversize)				
	698395	1	Piston Assembly (.030" Oversize)				
26	697375	1	Ring Set (Standard)				
	698396	1	Ring Set (.010" Oversize)				
	698397	1	Ring Set (.020" Oversize)				
	698398	1	Ring Set (.030" Oversize)				
27	698469	1	Lock-Piston Pin				
28	697099	1	Pin-Piston (Standard)				
29	697126	1	Rod-Connecting (Standard)				
	697263	1	Rod-Connecting (.020" Undersize)				
32	692852	1	Screw (Connecting Rod)				
146	691639	1	Key-Timing				
741	697128	1	Gear-Timing				
757	697607	1	Link-Counterweight				
758	697134	1	Counterweight				
759	697392	1	Pin-Counterweight				
1270	697156	1	Plug-Avs Counterweight				

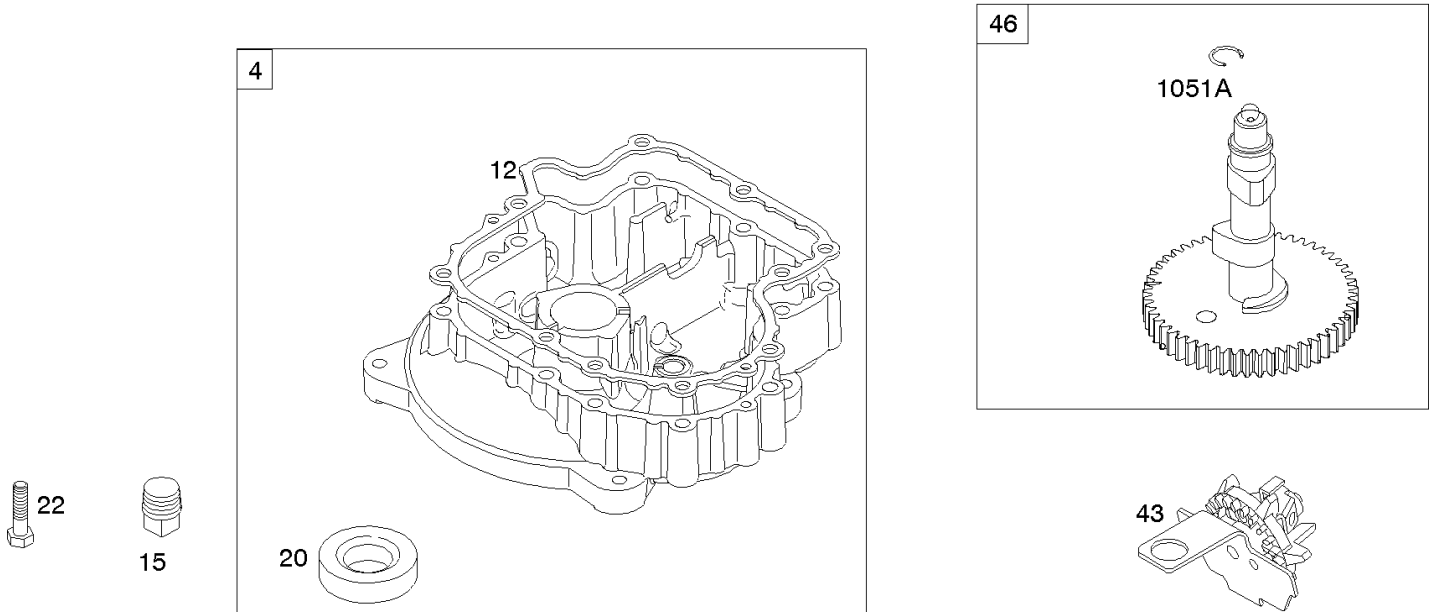 


Assemblies include all parts shown in frames.

Crankcase Assembly

Briggs and Stratton Model 280h07-0160-e1


Ref	Part No.	Qty.	Description				
74	697106	1	Sump-Engine				
8712	697110	1	Gasket-Crankcase				
715	690946	1	Plug-Oil Drain				
8720	690947	1	Oil Seal (Pto Side)				
722	692125	1	Screw (Engine Sump)				
743	691968	1	Governor/oil Slinger				
746	698577	1	Camshaft				
71051A	698802	1	Ring-Retaining				

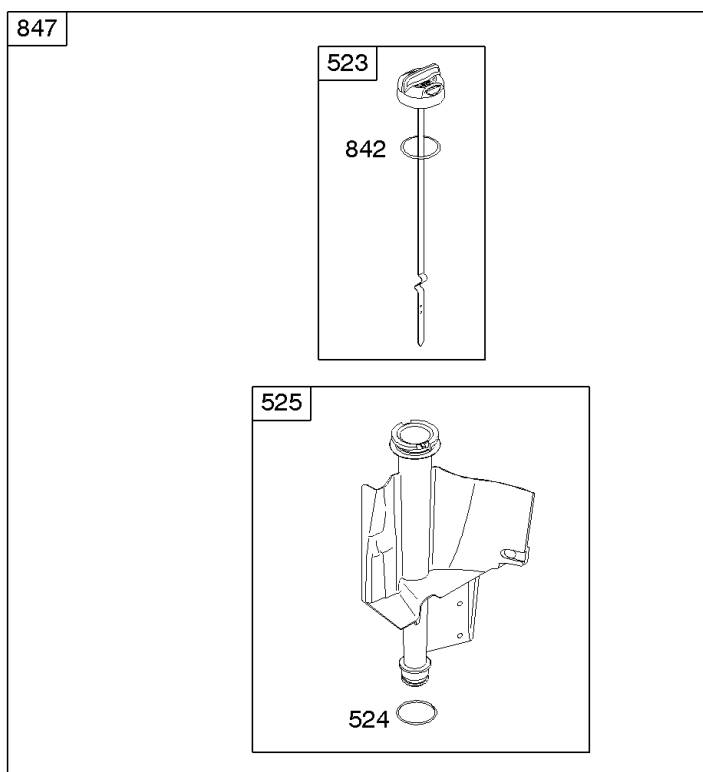 

Assemblies include all parts shown in frames.

Oil Filter, Tube and Pump Assembly Briggs and Stratton Model 280h07-0160-e1

Ref	Part No.	Qty.	Description				
7523	697086	1	Dipstick				
37524	691032	1	Seal-O Ring (Dipstick Tube)				
7525	697184	1	Tube-Dipstick				
37842	691031	1	Seal-O Ring(Dipstick)				
7847	697611	1	Dipstick/tube Assembly				

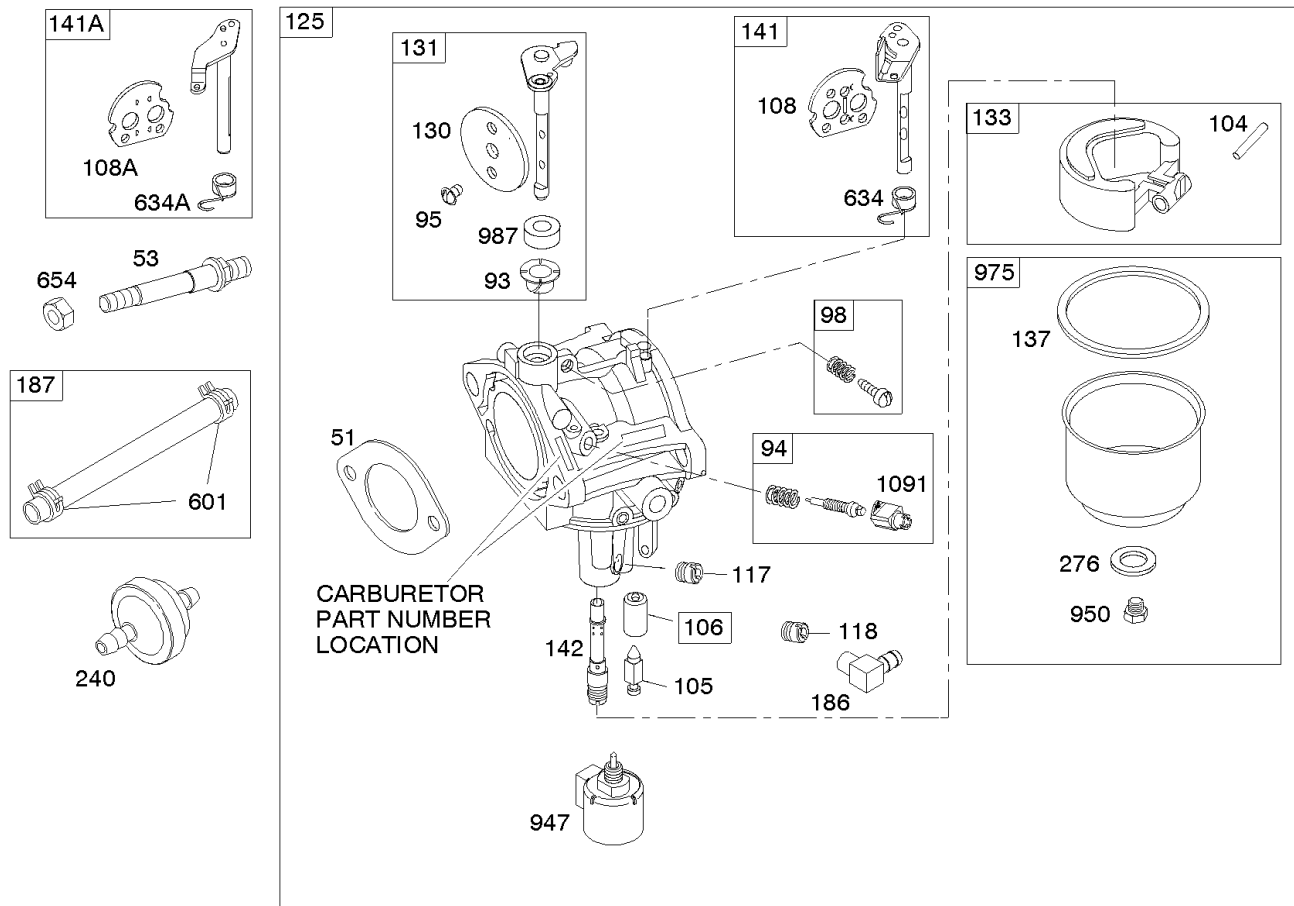 


Assemblies include all parts shown in frames.

Carburetor Assembly

Briggs and Stratton Model 280h07-0160-e1


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
51	692137	1	Gasket-Intake	187	697098	1	Line-Fuel (Cut To Required Length)
53	690227	1	Stud (Carburetor)	240	394358	1	Filter-Fuel
93	690602	1	Bushing-Throttle Shaft	276	692255	1	Sealing Washer
94	498030	1	Kit-Idle Mixture	601	95162	1	Clamp-Hose
95	691636	1	Screw (Throttle Valve)	634	690801	1	Spring/seal Assembly
98	495800	1	Kit-Idle Speed	634A	690802	1	Spring/seal Assembly
104	690525	1	Pin-Float Hinge	654	690958	1	Nut (Carburetor)
105	231855	1	Valve-Float Needle	947	694393	1	Solenoid-Fuel
106	690577	1	Seat-Inlet	950	691657	1	Screw (Float Bowl)
108	690464	1	Valve-Choke (Manual Choke)	975	495933	1	Bowl-Float
108A	692344	1	Valve-Choke (Choke A Matic)	987	691326	1	Seal-Throttle Shaft
117	694352	1	Jet-Main (Standard)	1091	691333	1	Cap-Limiter
118	697228	1	Jet-Main (High Altitude)				
125	697190	1	Carburetor				
130	691750	1	Valve-Throttle				
131	494379	1	Kit-Throttle Shaft				
133	494381	1	Float-Carburetor				
137	281165	1	Gasket-Float Bowl				
141	495097	1	Kit-Choke Shaft (Manual Choke)				
141A	495931	1	Kit-Choke Shaft (Choke A Matic)				
142	697140	1	Nozzle-Carburetor				
186	692317	1	Connector-Hose				

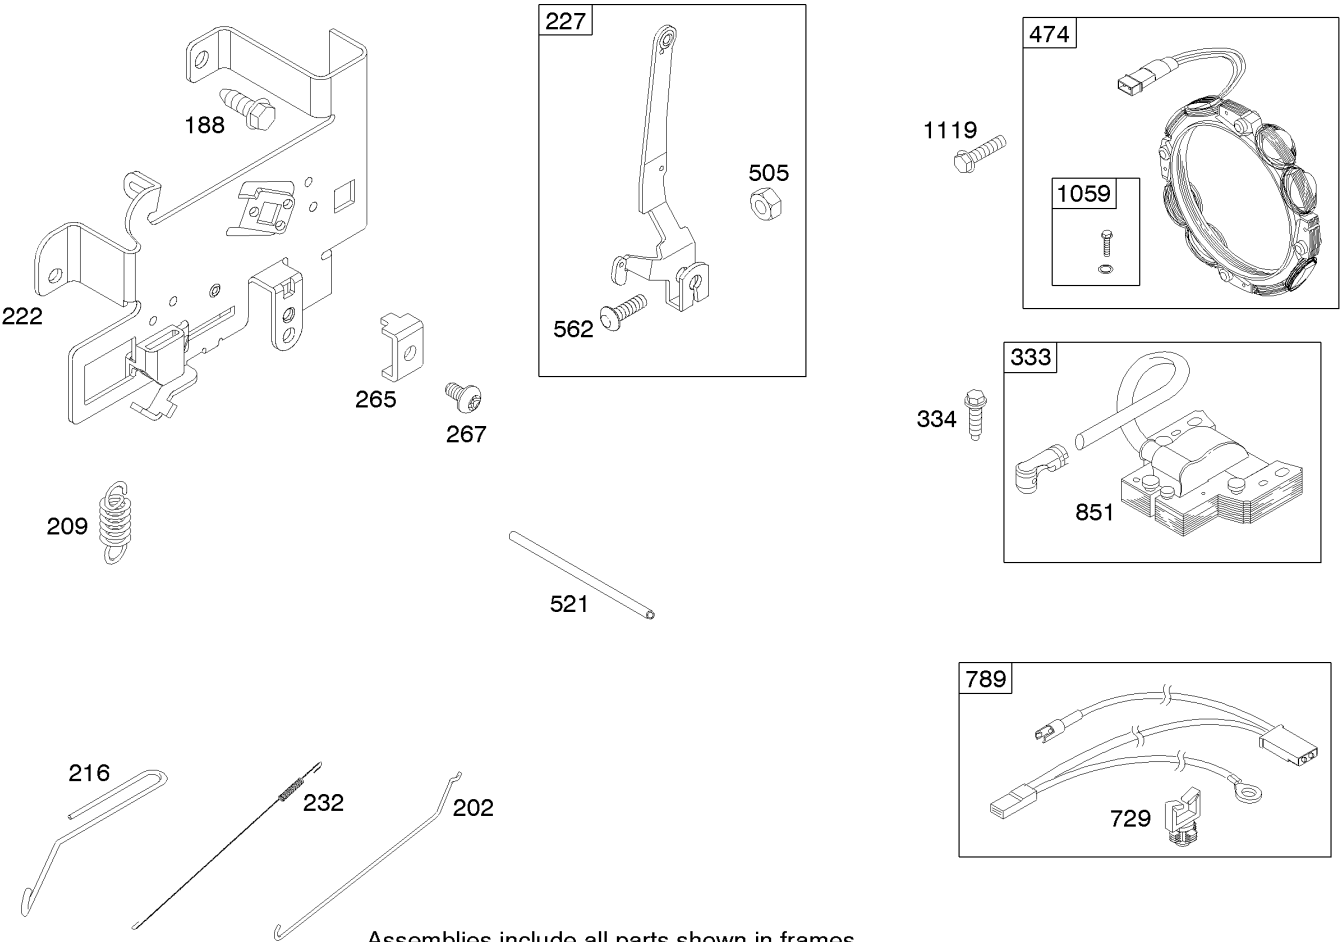 

Assemblies include all parts shown in frames.

Governor Assembly
Briggs and Stratton Model 280h07-0160-e1

Ref	Part No.	Qty.	Description				
188	691693	1	Screw (Control Bracket)				
202	691841	1	Link-Mechanical Governor				
209	692208	1	Spring-Governor				
216	691840	1	Link-Choke				
222	694042	1	Bracket-Control				
227	691374	1	Lever-Governor Control				
232	691842	1	Spring-Governor Link				
265	691024	1	Clamp-Casing				
267	695134	1	Screw (Casing Clamp)				
333	492341	1	Armature-Magneto				
334	691061	1	Screw (Magneto Armature)				
474	696459	1	Alternator				
505	691251	1	Nut (Governor Control Lever)				
521	690581	1	Shield-Cable				
562	691119	1	Bolt (Governor Control Lever)				
729	691335	1	Clip-Wire				
789	692037	1	Wiring-Harness				
851	692424	1	Terminal-Spark Plug				
1059	698516	1	Kit-Screw/wasehr				
1119	691183	1	Screw (Alternator)				

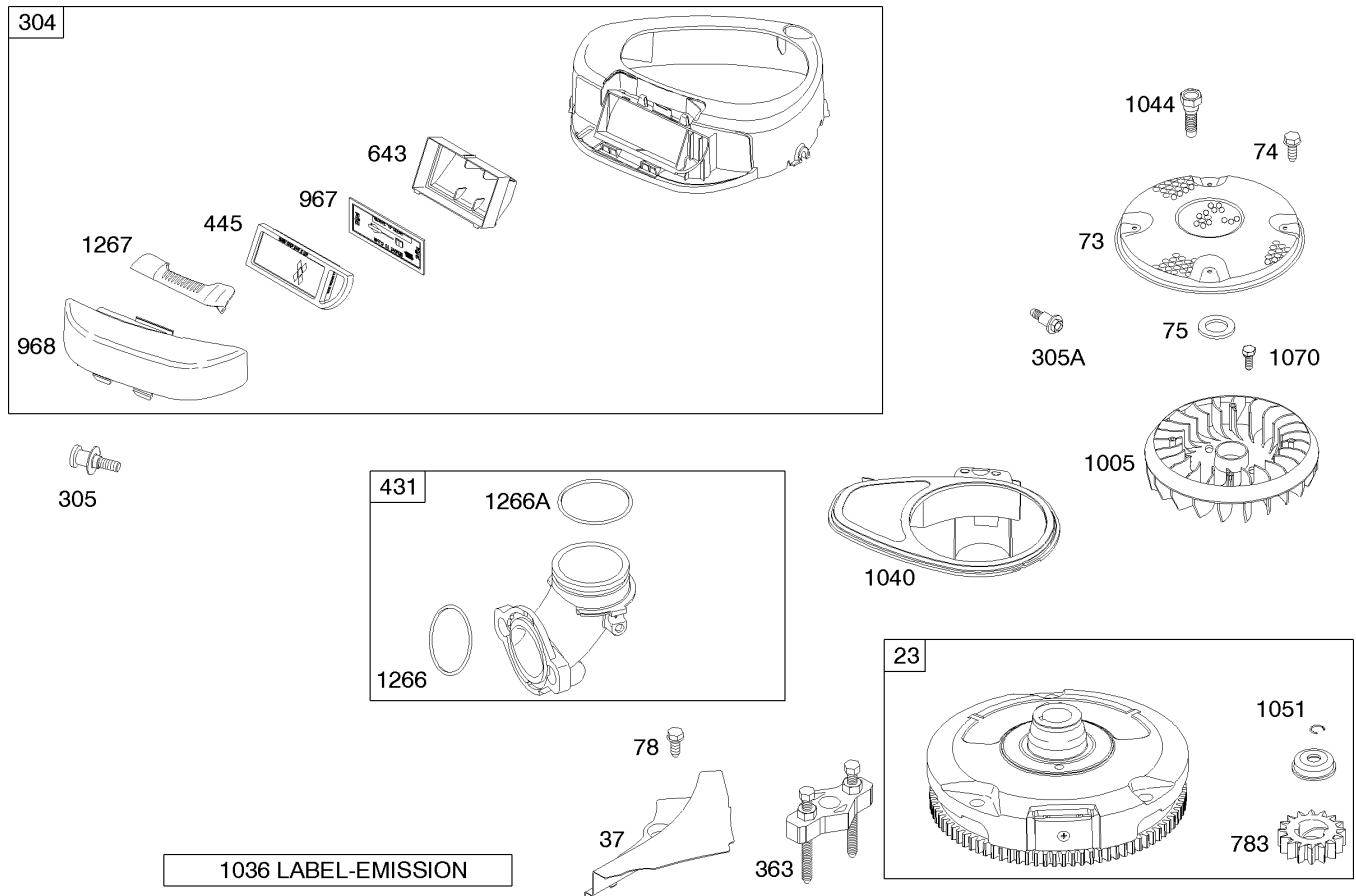 


Assemblies include all parts shown in frames.

Blower Housing Assembly



Briggs and Stratton Model 280h07-0160-e1

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
23	693557	1	Flywheel	1267	697419	1	Latch-Blower Housing
37	697352	1	Guard-Flywheel				
73	697384	1	Screen-Rotating				
74	697897	1	Screw (Rotating Screen)				
75	690582	1	Washer (Flywheel)				
78	691003	1	Screw (Cylinder Shield)				
304	698599	1	Housing-Blower				
305	697102	1	Screw (Blower Housing)				
305A	697103	1	Screw (Blower Housing)				
363	19203	1	Puller-Flywheel				
431	697122	1	Elbow-Intake				
445	698083	1	Filter-Air Cleaner Cartridge				
643	698401	1	Retainer-Air Filter				
783	693713	1	Gear-Pinion				
967	697015	1	Filter-Pre Cleaner				
968	698403	1	Cover-Air Cleaner				
1005	697853	1	Fan-Flywheel				
1036	695700	1	Label-Emission				
1040	698368	1	Plate-Trim				
1044	691658	1	Screw (Crankshaft Extension)				
1051	691265	1	Ring-Retaining				
1070	690372	1	Screw (Flywheel Fan)				
1266	691917	1	Seal-O Ring (Intake Elbow)				
1266A	697123	1	Seal-O Ring (Intake Elbow)				

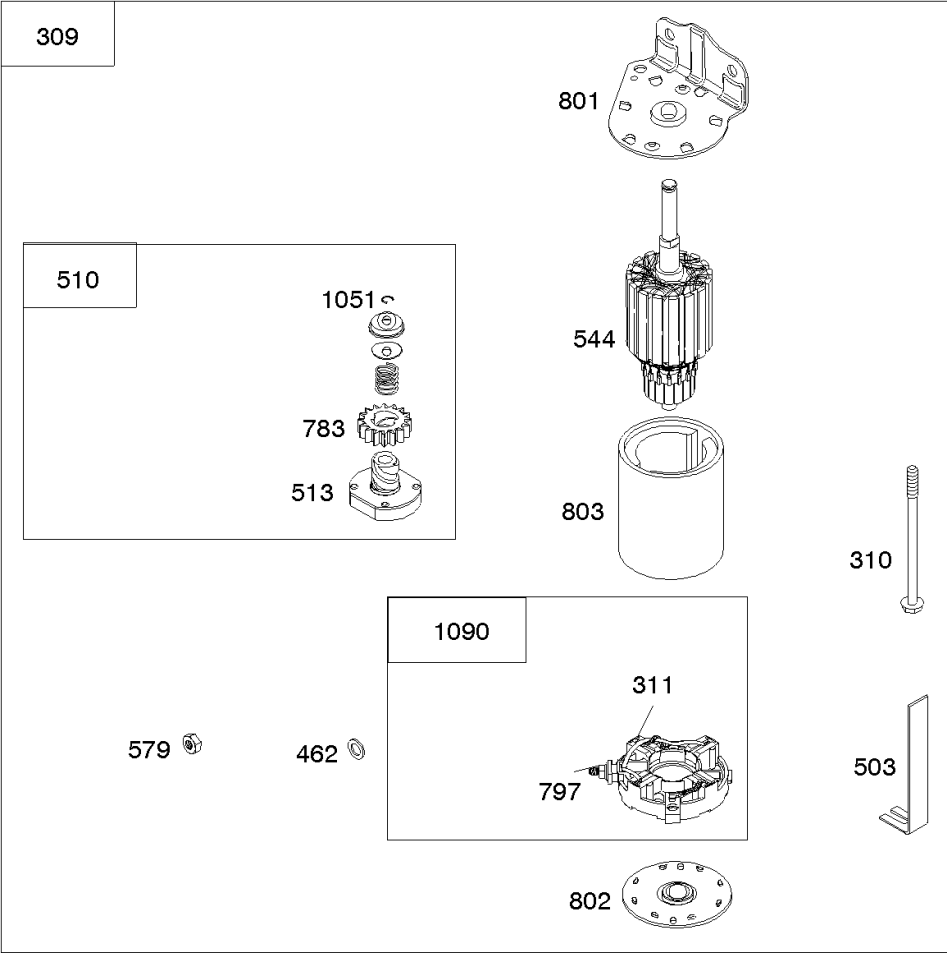 

Starter Assembly
Briggs and Stratton Model 280h07-0160-e1

Ref	Part No.	Qty.	Description				
309	693551	1	Motor-Starter				
310	690323	1	Bolt (Starter Motor)				
311	497608	1	Brush Set				
462	691261	1	Washer (Brush Retainer)				
503	691532	1	Strap-Starter				
510	693699	1	Drive-Starter				
513	692024	1	Drive Clutch				
544	692034	1	Armature-Starter				
579	691029	1	Nut (Brush Retainer)				
697	690372	1	Screw (Flywheel Fan)				
729A	691224	1	Clip-Wire				
729B	694123	1	Clip-Wire				
783	693713	1	Gear-Pinion				
797	693167	1	Nut (Brush Retainer)				
801	691283	1	Cap-Drive				
802	691286	1	Cap-End				
803	693757	1	Housing-Starter				
1051	691265	1	Ring-Retaining				
1090	691293	1	Retainer-Brush				

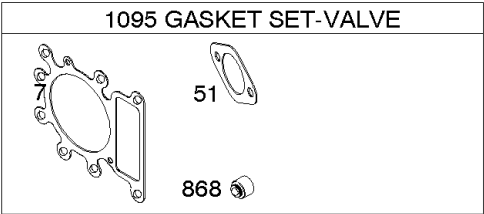 
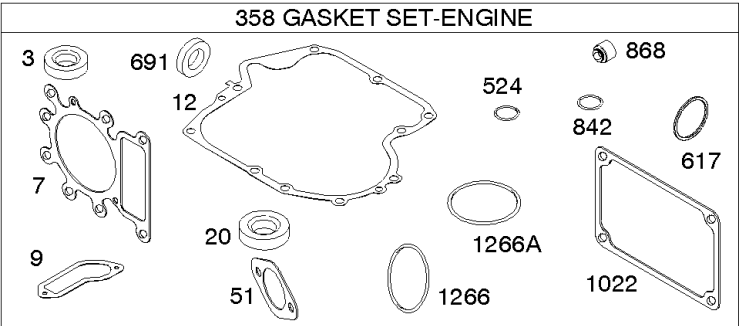 


Assemblies include all parts shown in frames.

Gasket Assembly

Briggs and Stratton Model 280h07-0160-e1

Ref	Part No.	Qty.	Description				
373	391086	1	Seal-Oil (Magneto Side)				
377	273280	1	Gasket-Cylinder Head				
379	697109	1	Gasket-Breather Gasket-Crankcase				
3712	697110	1	Gasket-Crankcase				
3720	690947	1	Oil Seal (Pto Side)				
3451	692137	1	Gasket-Intake				
36							
7358	697151	1	Gasket Set-Engine				
37524	691032	1	Seal-O Ring (Dipstick Tube)				
34617	692138	1	Seal-O Ring (Intake Manifold)				
37							
37691	692407	1	Seal-Governor Shaft				
37842	691031	1	Seal-O Ring(Dipstick)				
34868	690968	1	Seal-Valve				
7							
371022	272475	1	Gasket-Rocker Cover				
71095	691581	1	Gasket Set-Valve				
351266	691917	1	Seal-O Ring (Intake Elbow)				
7							
351266A	697123	1	Seal-O Ring (Intake Elbow)				
7							

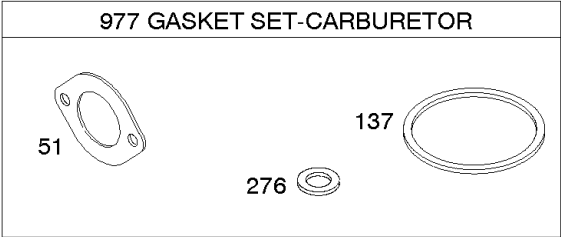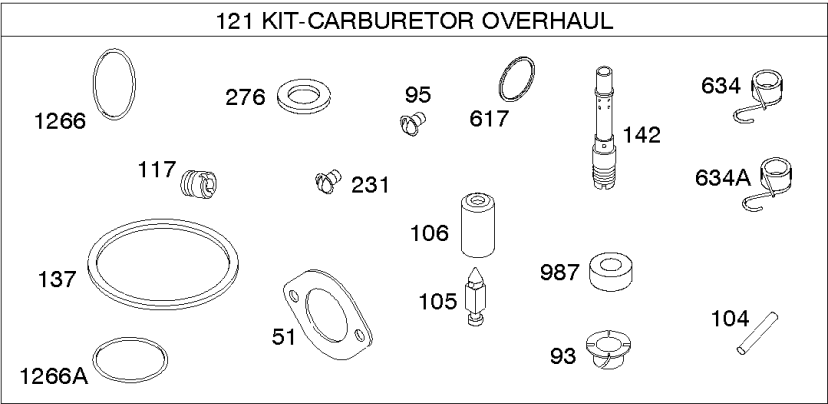  

Assemblies include all parts shown in frames.

Carburetor Overhaul Kit Assembly
Briggs and Stratton Model 280h07-0160-e1

Ref	Part No.	Qty.	Description				
5451 56	692137	1	Gasket-Intake				
5793	690602	1	Bushing-Throttle Shaft				
5795	691636	1	Screw (Throttle Valve)				
57104	690525	1	Pin-Float Hinge				
57105	231855	1	Valve-Float Needle				
57106	690577	1	Seat-Inlet				
57117	694352	1	Jet-Main (Standard)				
7121	697154	1	Kit-Carburetor Overhaul				
56137 7	281165	1	Gasket-Float Bowl				
57142	697140	1	Nozzle-Carburetor				
57231	691636	1	Screw (Throttle Valve)				
56276 7	692255	1	Sealing Washer				
55617 7	692138	1	Seal-O Ring (Intake Manifold)				
57634	690801	1	Spring/seal Assembly				
57634A	690802	1	Spring/seal Assembly				
7977	690192	1	Gasket Set-Carburetor				
57987	691326	1	Seal-Throttle Shaft				
551266 7	691917	1	Seal-O Ring (Intake Elbow)				
551266A 7	697123	1	Seal-O Ring (Intake Elbow)				

NOTES

NOTES

NOTES

