



Count on it.

Parts Catalog

Power Max® Heavy Duty 1030 OHAE Snowthrower

Model No. 38830—Serial No. 409000000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Housing Assembly 4

Auger Drive Assembly 6

Gear Case Assembly 8

Auger Gearcase Assembly No. 144-1300 10

Engine Assembly 12

Engine Assembly No. 1..... 14

Engine Assembly No. 2..... 16

Engine Assembly No. 3..... 18

Engine Decal Assembly 20

Chute Assembly 22

Chute Control Assembly 24

 
Handle Assembly 26

Traction Drive Assembly 28

Autoturn Drive Assembly..... 30

Attachments and Accessories 32


Housing Assembly

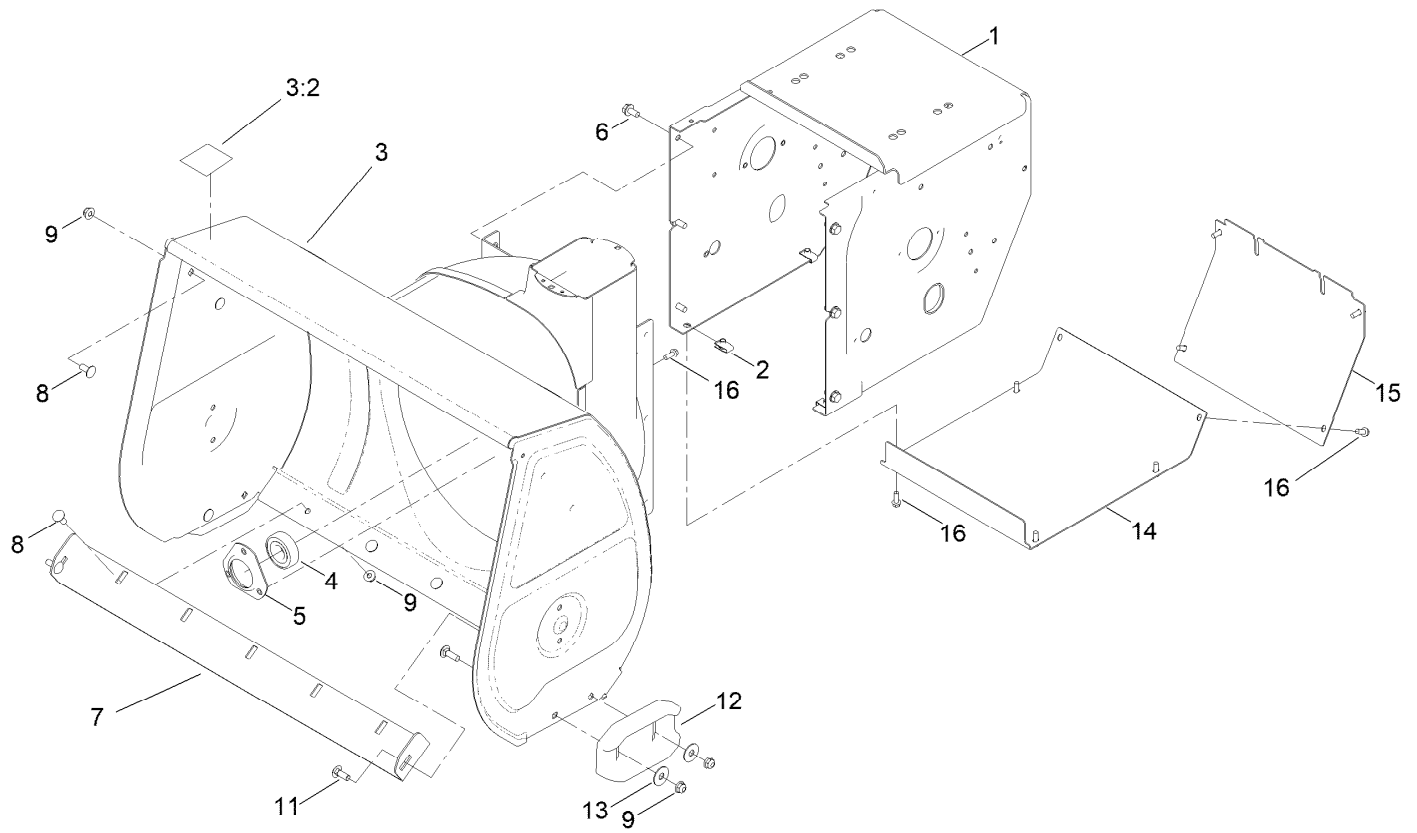

Housing Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-6639-01	1	Frame-Traction	8	137-3061	7	Bolt-CARR
2	107069	8	Clip	9	119-4041	11	Nut-HF
3	144-0349	1	Auger Housing ASM (W/Decal 30")	11	137-3059	4	Bolt-CARR
3:2	121-6817	1	Decal-Danger, Auger	12	106-4588-01	2	Skid
4	136-6571	1	Bearing-Ball	13	119-4150	4	Washer-Flat
5	136-6573	1	Retainer-Bearing	14	136-6650-01	1	Cover-Bottom
6	32144-14	6	Screw-HWHTF	15	136-6651-01	1	Cover-Rear
7	144-1312-01	1	Scraper, 30"	16	32144-85	11	Screw-HWH Thd Form

 
Auger Drive Assembly

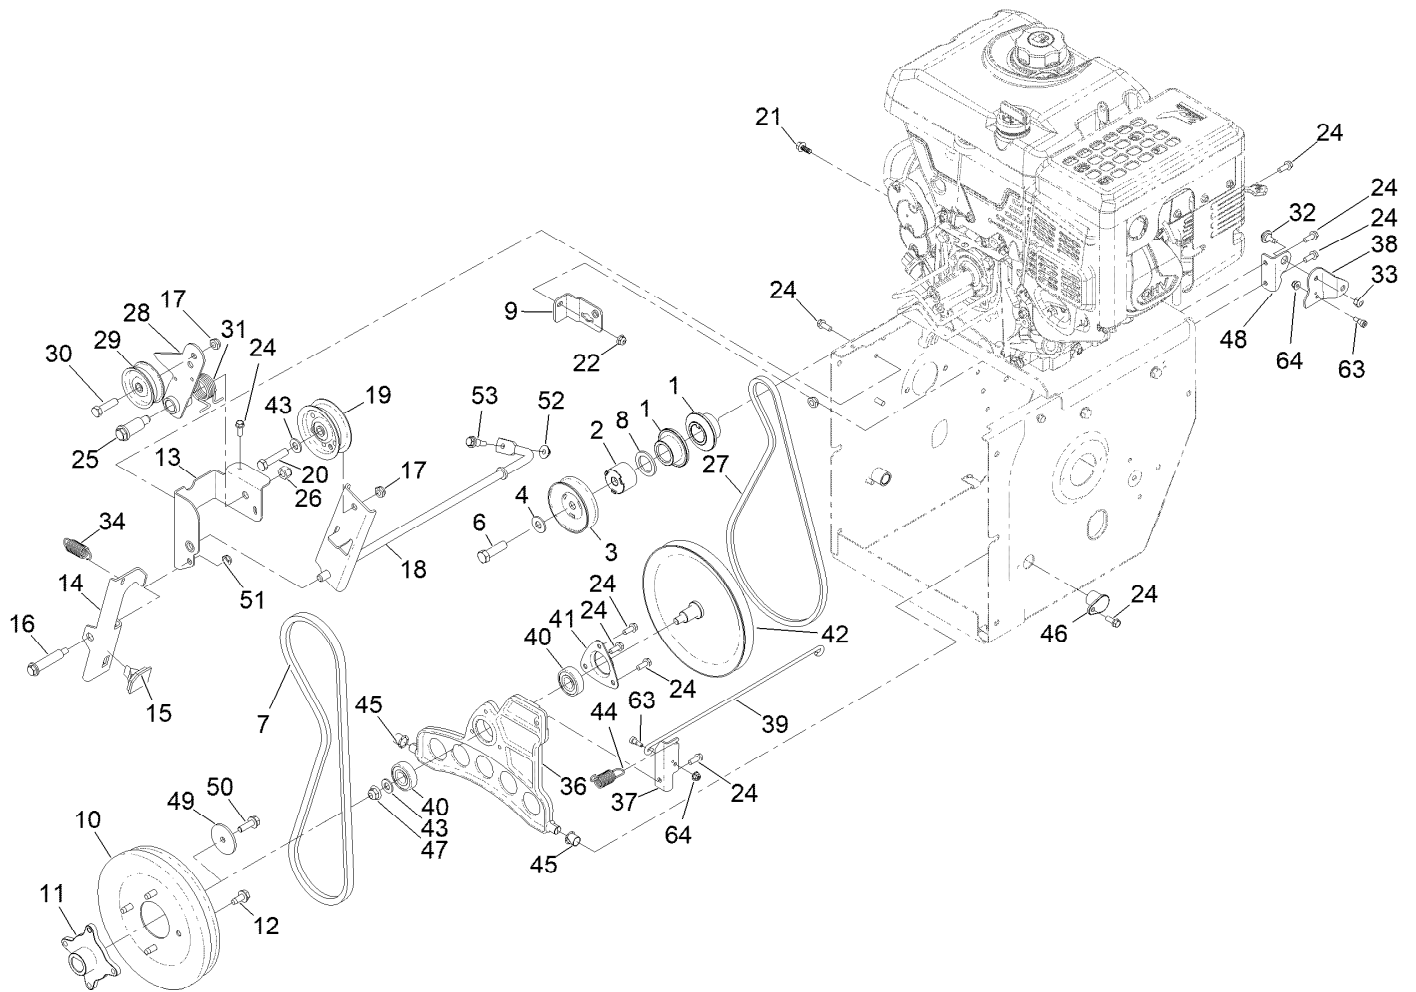

Auger Drive Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-6564	2	Pulley-Traction, Engine	29	3-4244	1	Pulley-Idler
2	136-6691	1	Pulley-Spacer	30	137-3065	1	Screw-HH
3	137-6179	1	Pulley-Impeller	31	120-3060	1	Spring-Torsion
4	137-3078	1	Washer-Plain	32	92-9698	1	Screw-Shoulder
6	138-0721	1	Screw-HH	33	137-3094	1	Nut-Hex
7	135-0708	1	Belt-V, Hitemp	34	107-1045	1	Spring-Extension
8	3-8514	1	Washer-Thrust	36	136-6689	1	Plate-Friction, Wheel
9	136-8654-03	1	Bracket-Clutch, Impeller	37	144-1621	1	Bkt-Traction Plate
10	138-0717	1	Pulley-Impeller	38	144-1622	1	Bellcrank-Drive
11	136-6558	1	Hub-Pulley	39	144-1613	1	Link-Traction, HD
12	32144-70	4	Screw-HWHTF	40	38-7820	2	Bearing-Ball
13	136-8671-03	1	Bracket-Brake, Clutch	41	136-7124	1	Retainer-Bearing
14	136-6527	1	Brake Arm	42	137-6154	1	Pulley-Traction
15	66-8060	1	Pad-Brake	43	115-1166	2	Washer-Plain
16	136-7199	1	Bolt-Shoulder	44	137-6189	1	Spring-Extension
17	121-4600	2	Nut-Hex	45	256-257	2	Bushing-Nyliner
18	137-6234-03	1	Arm-Clutch, Impeller	46	120-7156	2	Bushing-Plate, Traction
19	92-7104	1	Pulley-Idler	47	119-4042	1	Nut-HF, NI
20	138-0722	1	Screw-HH	48	136-6654	1	Bracket-Bellcrank
21	137-3111	1	Screw-HHF	49	137-3121	1	Washer-Plain
22	137-3005	1	Nut-HF	50	115-5142	1	Screw-HHF, Patch
24	32144-85	12	Screw-HWH Thd Form	51	137-3089	1	Nut-Hex
25	136-7116	1	Bolt-Shoulder	52	137-3016	1	Nut-HF
26	137-3095	1	Nut-Hex	53	104-0858	1	Bolt-Shoulder
27	137-6151	1	V-Belt	63	94-9422	2	Screw-Shoulder
28	136-7186	1	Arm-Idler, Traction	64	138-0719	2	Nut-HF

 
Gear Case Assembly

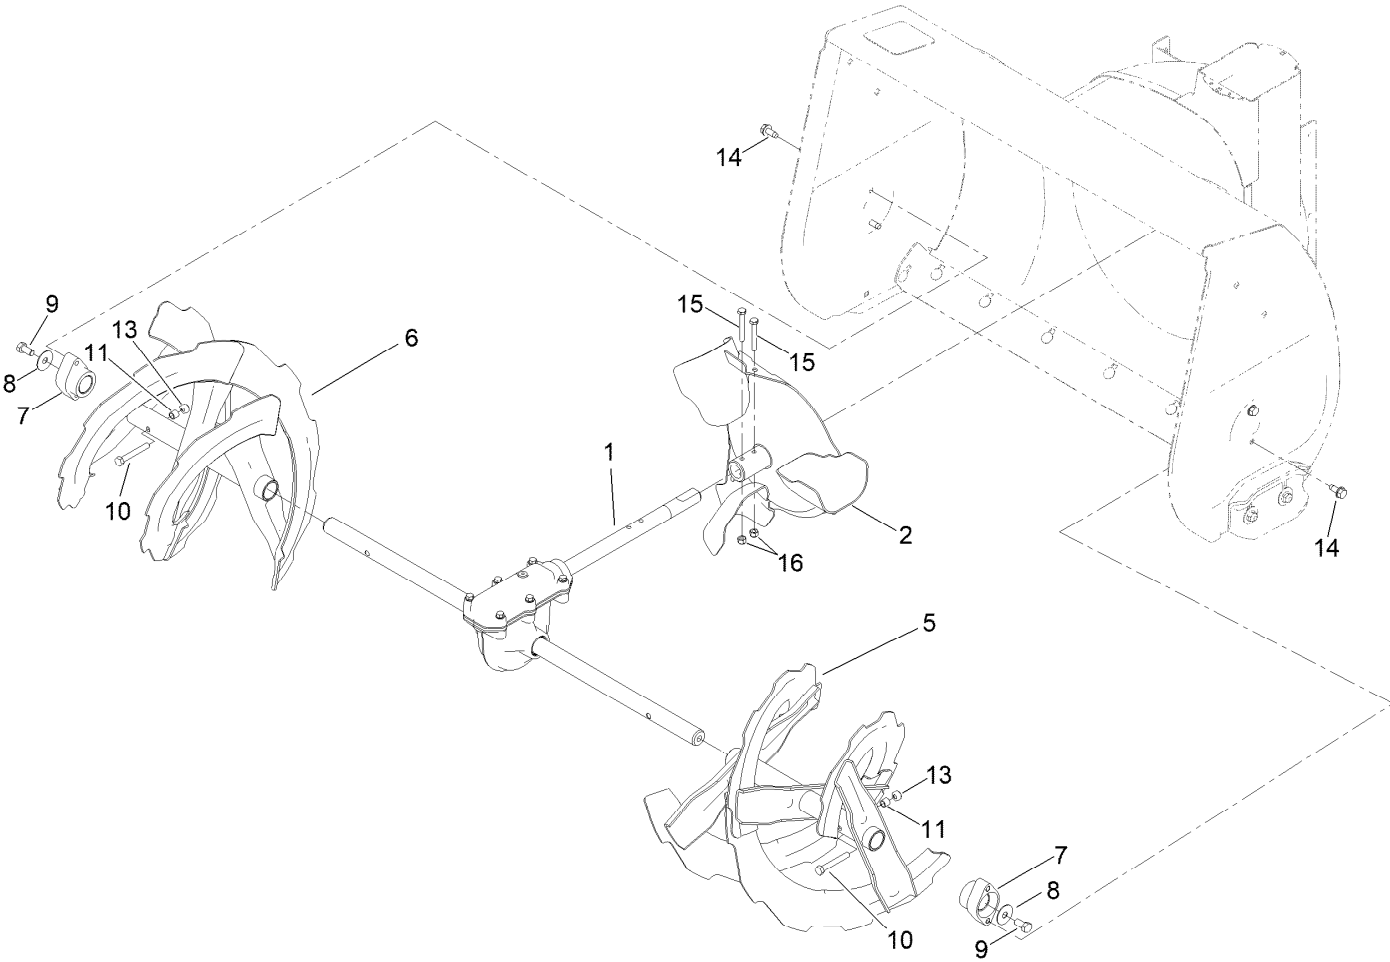

Gear Case Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	144-1300	1	Auger Gearcase ASM, 30 In	10	120-9738	2	Screw-HH
2	136-6570-03	1	Impeller	11	136-7148	2	Spacer-Grommet
5	144-1304-03	1	Auger LH, 30" [black]	13	119-4038	2	Nut-Hex
6	144-1305-03	1	Auger RH, 30" [black]	14	32144-70	4	Screw-HWHTF
7	106-4570	2	Bearing-Augur	15	137-3032	2	Screw-HH
8	3-0750	2	Washer	16	137-3088	2	Nut-Hex
9	137-3066	2	Screw-HH				

 
Auger Gearcase Assembly No. 144-1300

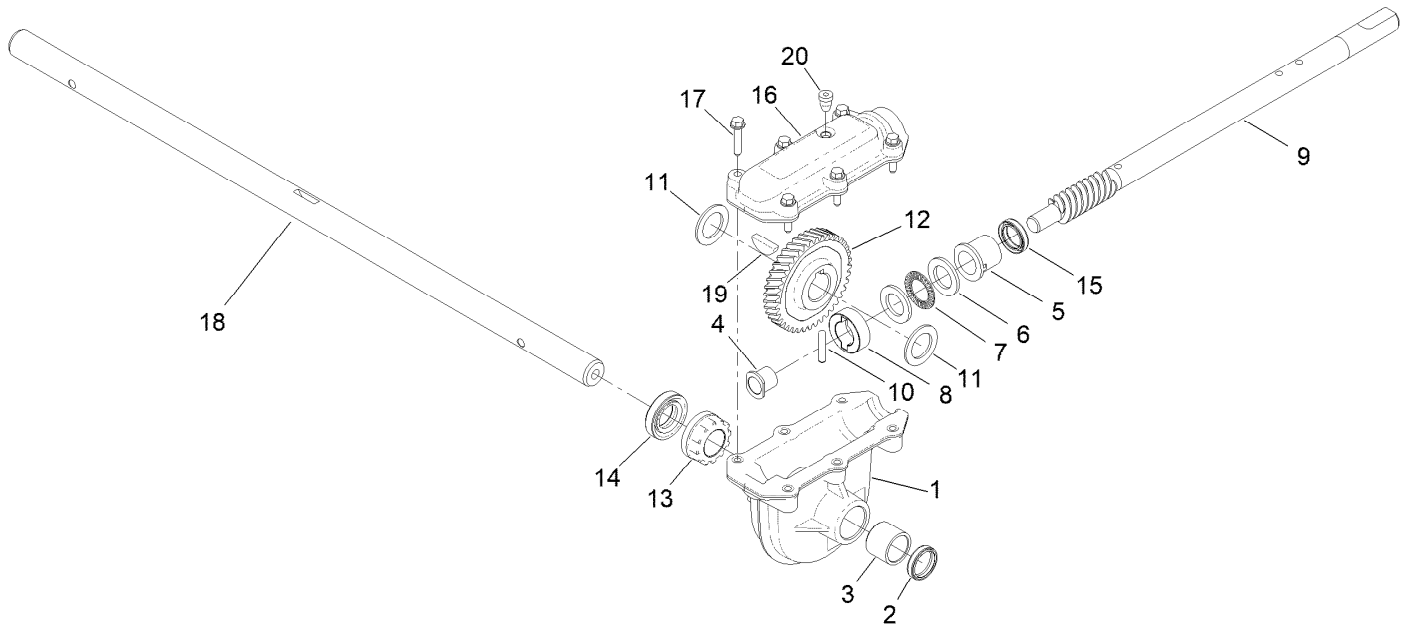

Auger Gearcase Assembly No. 144-1300 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-6547	1	Gearbox-Lower (Mach)	11	252-71	2	Washer-Thrust
2	137-6173	1	Seal-Oil	12	138-0696	1	Gear-Helical
3	112-6635	1	Bushing-Sleeve	13	136-6553	1	Bushing-Auger Output
4	136-6556	1	Bushing-Impeller Shaft, Front	14	136-6554	1	Seal-Oil
5	37-6560	1	Bushing-Input	15	137-6174	1	Seal-Oil
6	252-78	2	Washer-Thrust	16	136-6546	1	Cover-Gearcase
7	252-76	1	Bearing-Thrust	17	108-4862	6	Screw-HWH Thd Roll
8	136-6555	1	Collar-Thrust	18	144-1301	1	Shaft-Auger, 30"
9	137-6175	1	Shaft-Impeller	19	3257-10	1	Key-Woodruff
10	107-8899	1	Pin-Dowel	20	138-3629	1	Plug-Oil

 
Engine Assembly

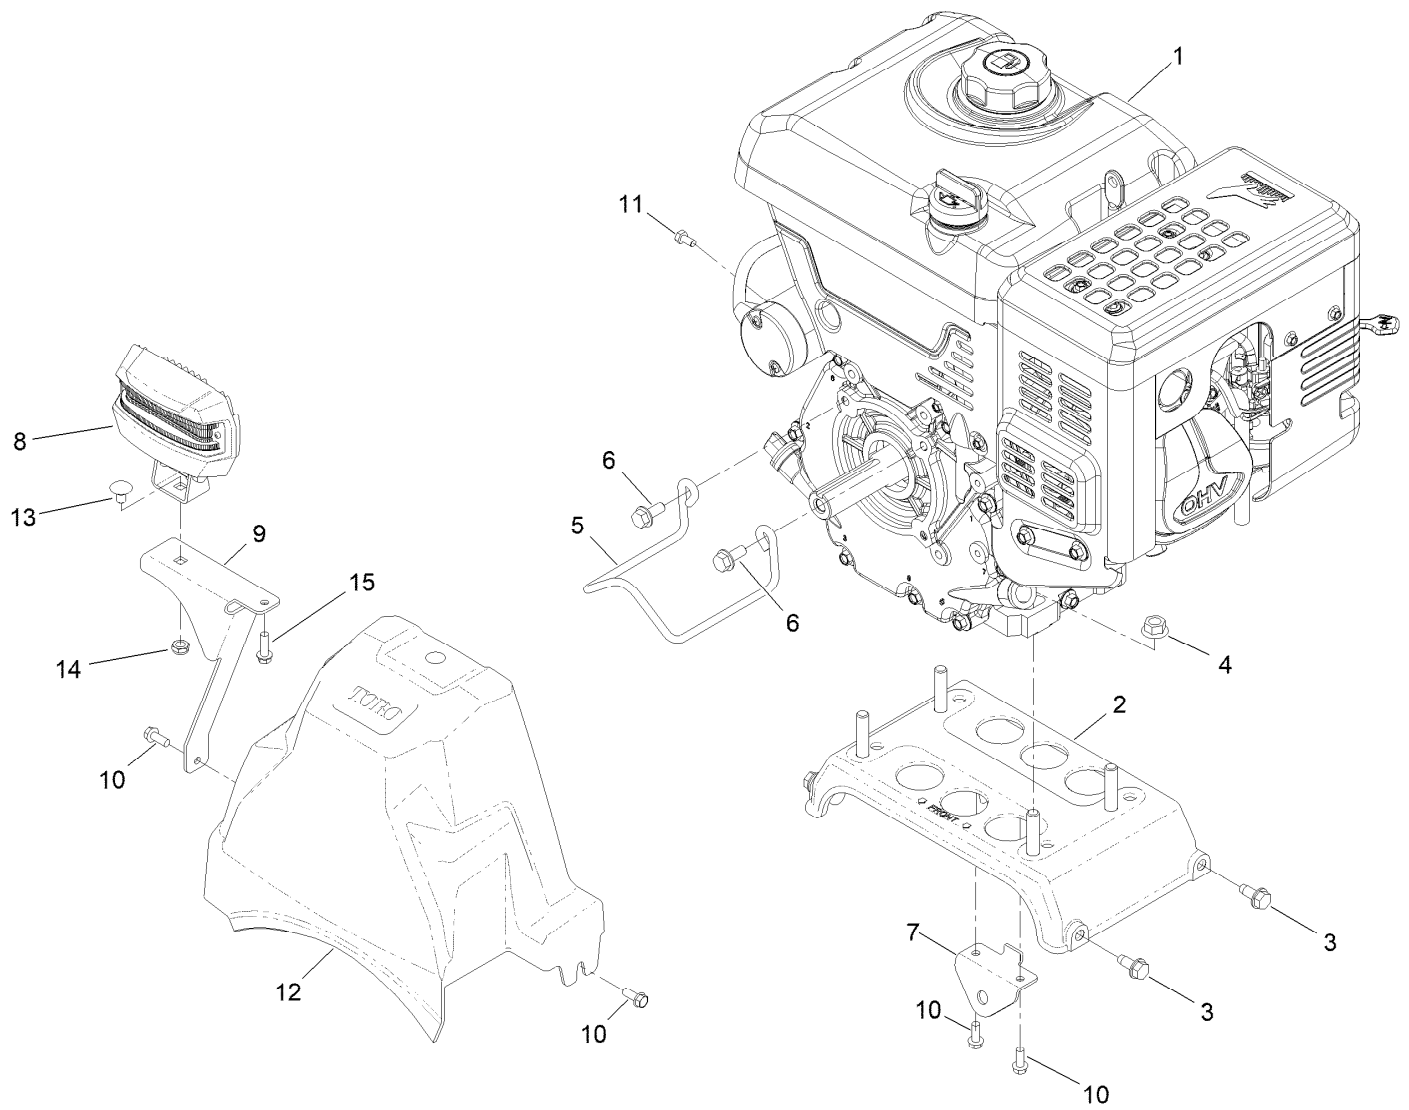

Engine Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	120-4425	1	Engine-180Fds-1	9	138-0683-03	1	Bracket-Light
2	138-0695	1	Engine Plate ASM	10	32144-85	2	Screw-HWH Thd Form
3	32144-70	4	Screw-HWHTF	11	121-4604	1	Screw-HH
4	136-8683	4	Nut-Lock	12	136-6606	1	Cover-Belt
5	136-8673	1	Guide-Belt	13	3230-19	1	Bolt-CARR
6	138-0690	2	Screw-HHF,Patch	14	137-3089	1	Nut-Hex
7	136-6644-03	1	Bracket-Control, Traction	15	137-3099	1	Screw-Plastite, HWH
8	138-0670	1	LED Light ASM				

 
Engine Assembly No. 1

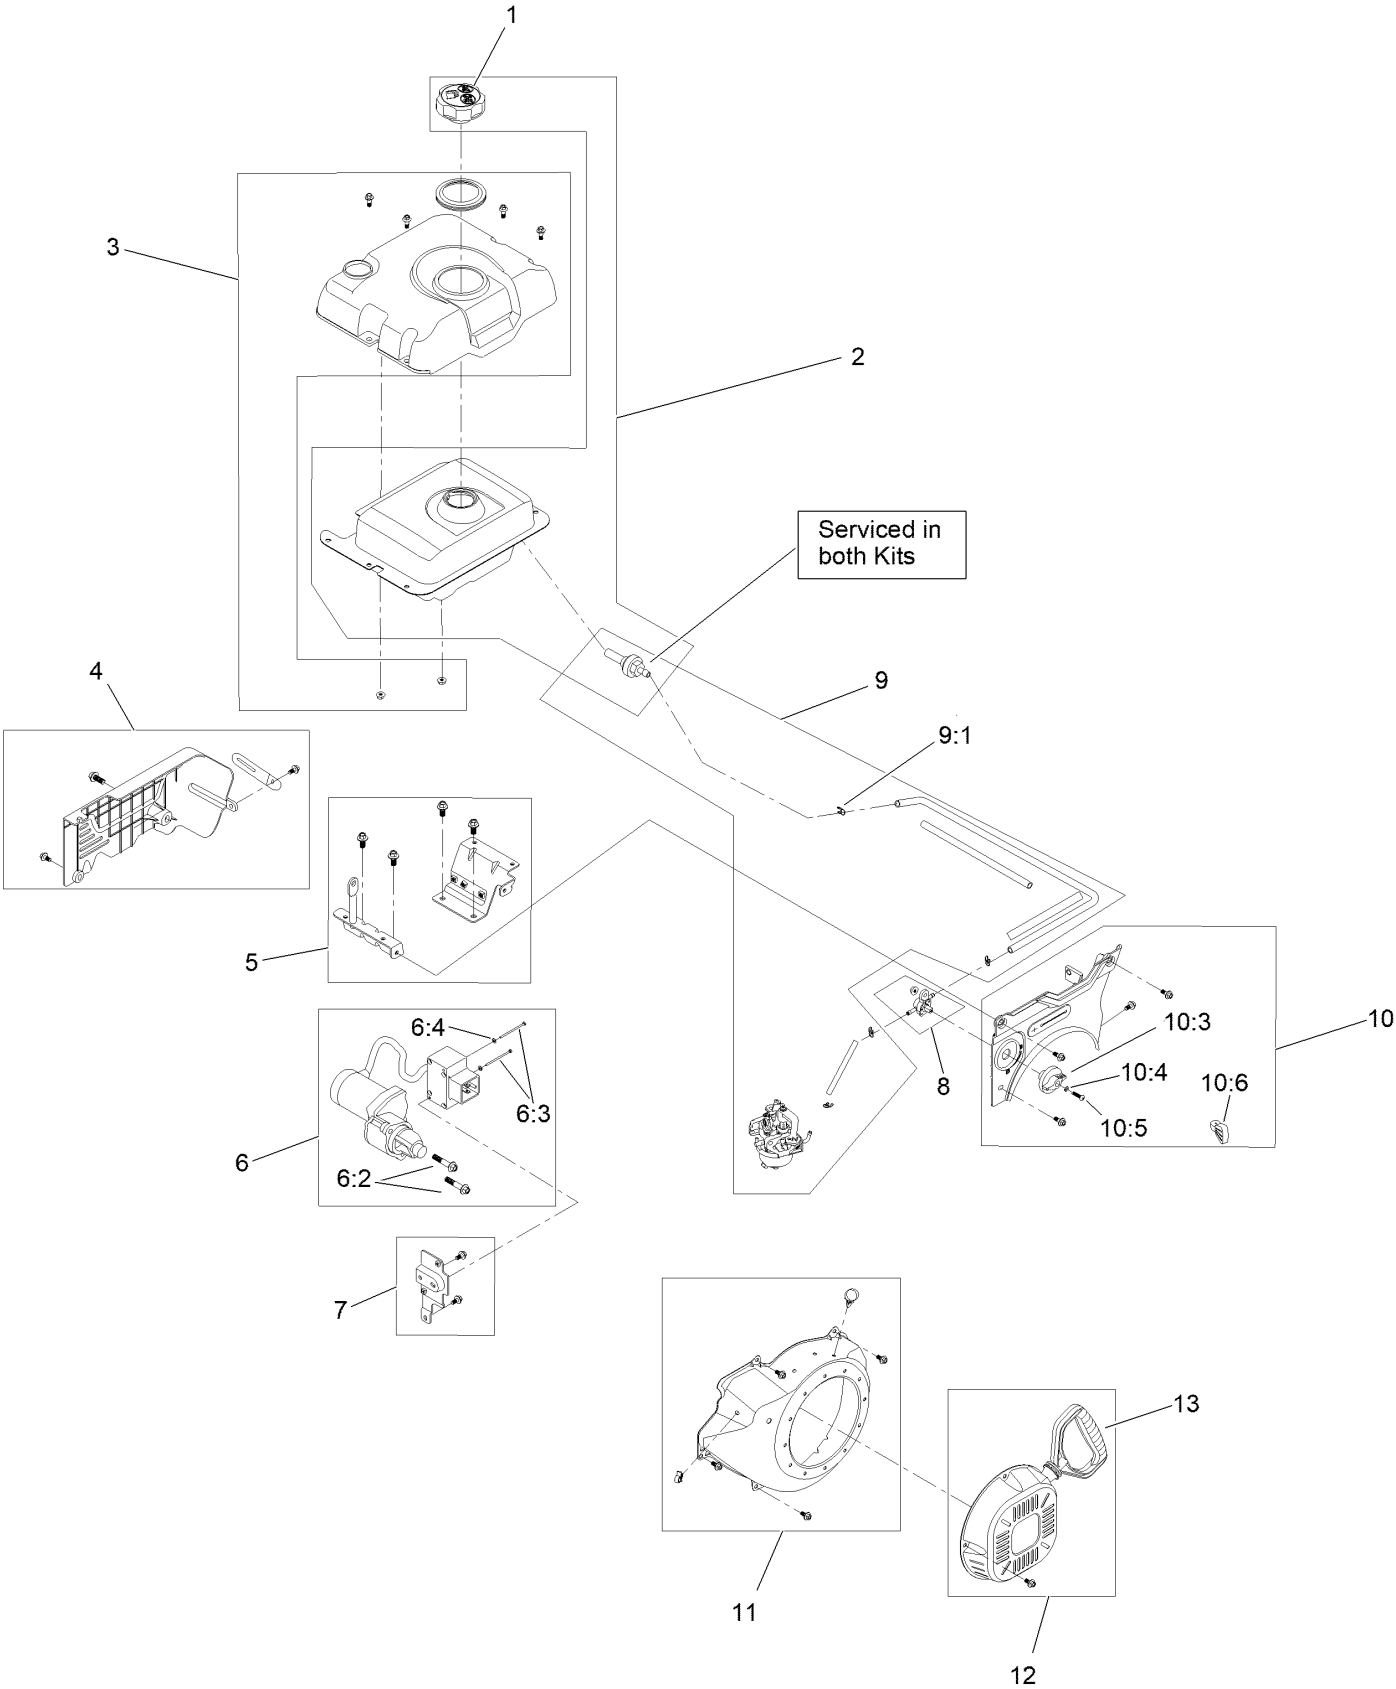

Engine Assembly No. 1 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	133-9823	1	Cap-Fuel	8	121-4109	1	Fuel Shut-Off Valve Kit
2	136-7802	1	Fuel Tank And Cap Kit	9	139-0598	1	Fuel Line Kit
3	121-0349	1	Fuel Tank Cover Kit	9:1	121-0087	4	Clamp-Hose
4	121-0347	1	Rear Panel And Hardware Kit	10	121-4105	1	Front Panel Kit
5	121-0351	1	Tank Mount Bracket Kit	10:3	121-0268	1	Knob-Valve, Fuel
6	144-0995	1	Electric Starter Kit	10:4	121-0312	1	Washer-Plain
6:2	121-0298	2	Screw-HHF	10:5	121-0305	1	Screw-Bhp
6:3	121-0306	2	Screw-Bhp	10:6	121-0269	1	Knob-Control, Throttle
6:4	121-0312	2	Washer-Plain	11	121-0274	1	Recoil Shroud Kit
7	121-4103	1	Switch Box Bracket Kit	12	121-0342	1	Recoil Kit
				13	121-0287	1	Handle-Recoil

 
Engine Assembly No. 2

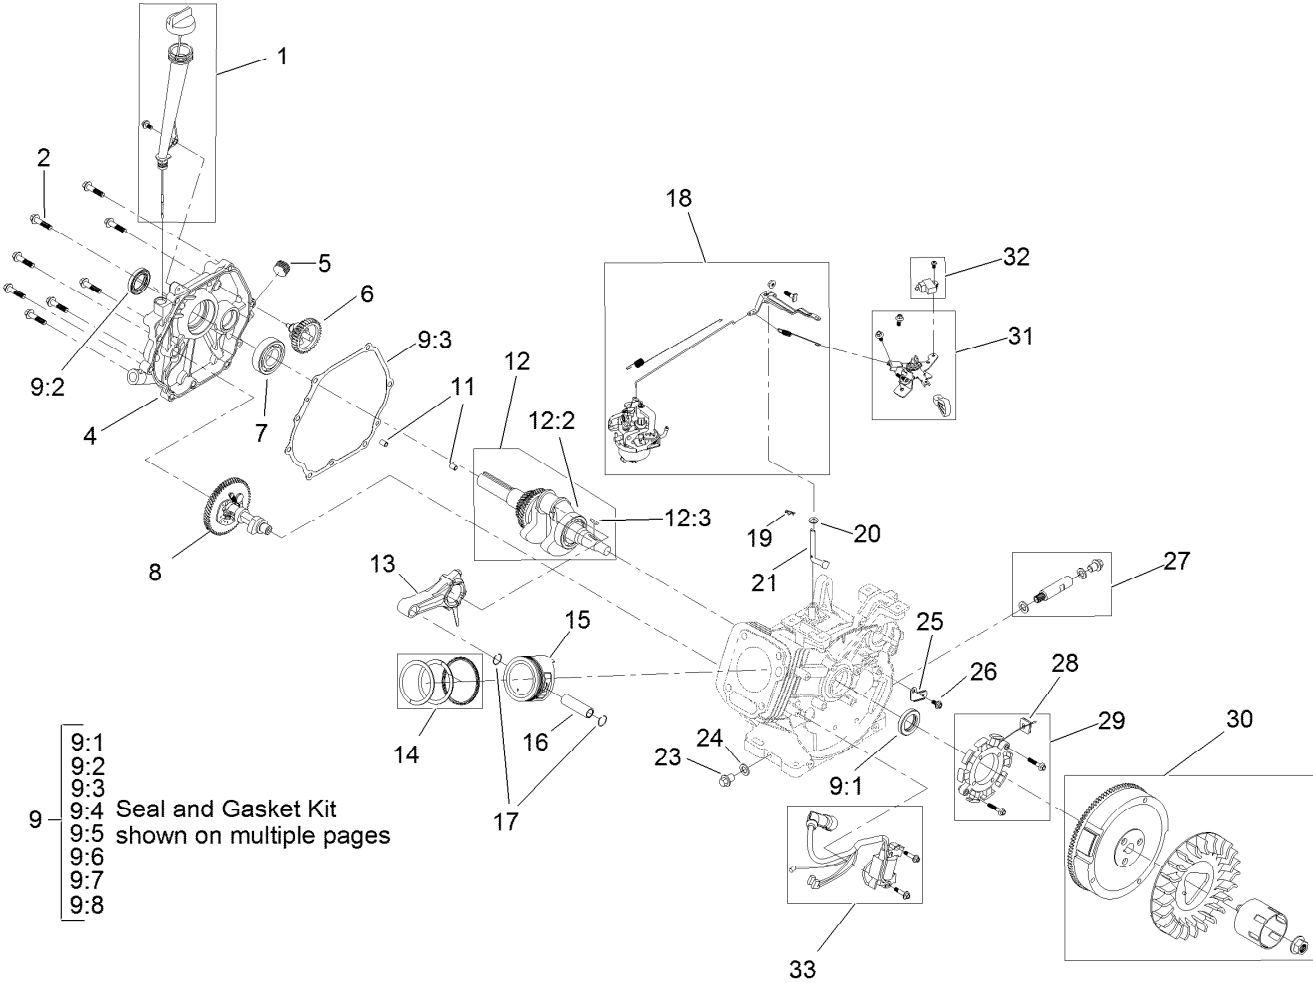

Engine Assembly No. 2 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	133-9854	1	Oil Fill Kit	13	121-0240	1	Connecting Rod ASM
2	121-0299	8	Screw-HHF	14	121-0238	1	Set-Ring, Piston
4	133-9856	1	Cover-Crankcase	15	121-0333	1	Piston
5	133-9805	1	Plug-Drain	16	121-0237	1	Pin-Piston
6	136-7782	1	Governor Gear ASM	17	121-0313	2	Clip-Pin, Piston
7	121-0315	1	Bearing-Main	18	121-0352	1	Complete Governor Kit
8	121-0243	1	Camshaft ASM	19	120-4256	1	Pin-Hair
9	121-0358	1	Seal And Gasket Kit	20	121-0311	1	Washer-Plain
9:1	121-0316	1	Seal-Oil	21	136-7783	1	Shaft-Governor
9:2	121-0317	1	Seal-Oil	23	121-0222	1	Screw-HHF
9:3	121-0228	1	Gasket-Cover, Crankcase	24	121-0310	1	Washer-Plain
9:4	121-0231	1	Gasket-Head, Cylinder	25	121-0278	1	Clamp
9:5	121-0234	1	Gasket-Cover, Valve	26	121-0118	1	Screw-HHF
9:6	121-0272	1	Gasket-Exhaust	27	121-0341	1	Drain Plug Kit
9:7	121-0252	1	Gasket-Carburetor	28	121-0325	1	Grommet-Rubber
9:8	121-0253	1	Gasket-Carburetor	29	121-0362	1	Stator Kit
11	121-0314	2	Pin-Dowel	30	121-0354	1	Fan And Flywheel Kit
12	121-0241	1	Crankshaft ASM	31	121-4107	1	Throttle Control Kit
12:2	121-0315	1	Bearing-Main	32	121-4106	1	Kill Switch Kit
12:3	120-4320	1	Key-Woodruff	33	136-7798	1	Ignition Kit

 Engine Assembly No. 3

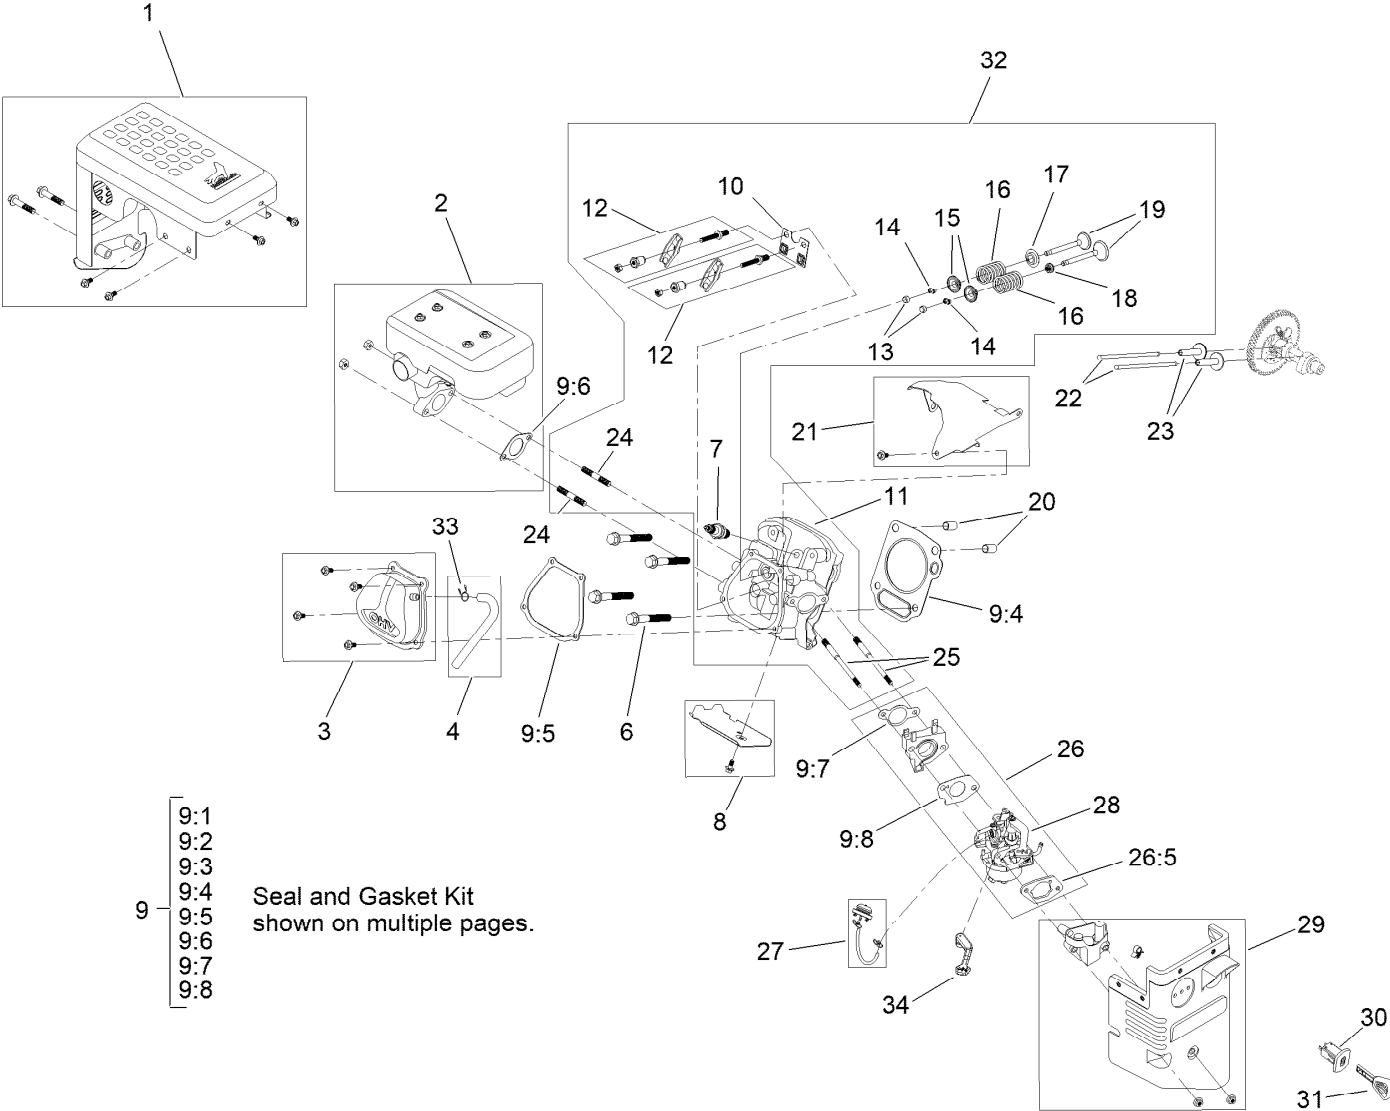

9:1
9:2
9:3
9:4
9:5
9:6
9:7
9:8


Seal and Gasket Kit
shown on multiple pages.

Engine Assembly No. 3 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-4101	1	Muffler Shield Kit	17	120-4303	1	Seat-Spring, Valve
2	127-9373	1	Muffler Kit	18	120-4304	1	Seal-Stem, Valve
3	121-0343	1	Valve Cover Kit	19	121-0328	1	Valve Kit
4	139-0629	1	Tube-Breather	20	120-4200	2	Pin-Dowel
6	121-0302	4	Screw-HHF	21	121-4102	1	Upper Heat Shroud Kit
7	119-1901	1	Plug-Spark	22	121-0246	2	Rod-Push
8	121-0348	1	Lower Heat Shroud Kit	23	120-4298	2	Lifter-Valve
9	121-0358	1	Seal And Gasket Kit	24	121-0304	2	Stud-Mount, Muffler
9:1	121-0316	1	Seal-Oil	25	121-0303	2	Stud-Mount, Carburetor
9:2	121-0317	1	Seal-Oil	26	121-0359	1	Complete Carb Service Kit
9:3	121-0228	1	Gasket-Cover, Crankcase	26:5	121-0254	1	Gasket-Coated, Rubber
9:4	121-0231	1	Gasket-Head, Cylinder	27	127-9372	1	Primer Kit
9:5	121-0234	1	Gasket-Cover, Valve	28	127-9143	1	Carb Repair Kit With Gaskets
9:6	121-0272	1	Gasket-Exhaust	29	121-0355	1	Heater Box Kit
9:7	121-0252	1	Gasket-Carburetor	30	121-0283	1	Switch-Key
9:8	121-0253	1	Gasket-Carburetor	31	117-7728	1	Key
10	121-0247	1	Plate-Guide, Push Rod	32	133-9855	1	Complete Head ASM
11	121-0230	1	Head-Cylinder	33	127-9408	1	Clamp-Hose
12	121-0245	2	Rocker Arm ASM	34	139-0638	1	Lever-Choke
13	121-0244	2	Rotator-Valve	99	121-4241	1	High Altitude Kit-Power Max HD ●
14	120-4307	4	Keeper-Valve				
15	120-4306	2	Retainer-Spring, Valve				
16	120-4305	2	Spring-Valve				

● Not illustrated

 
Engine Decal Assembly

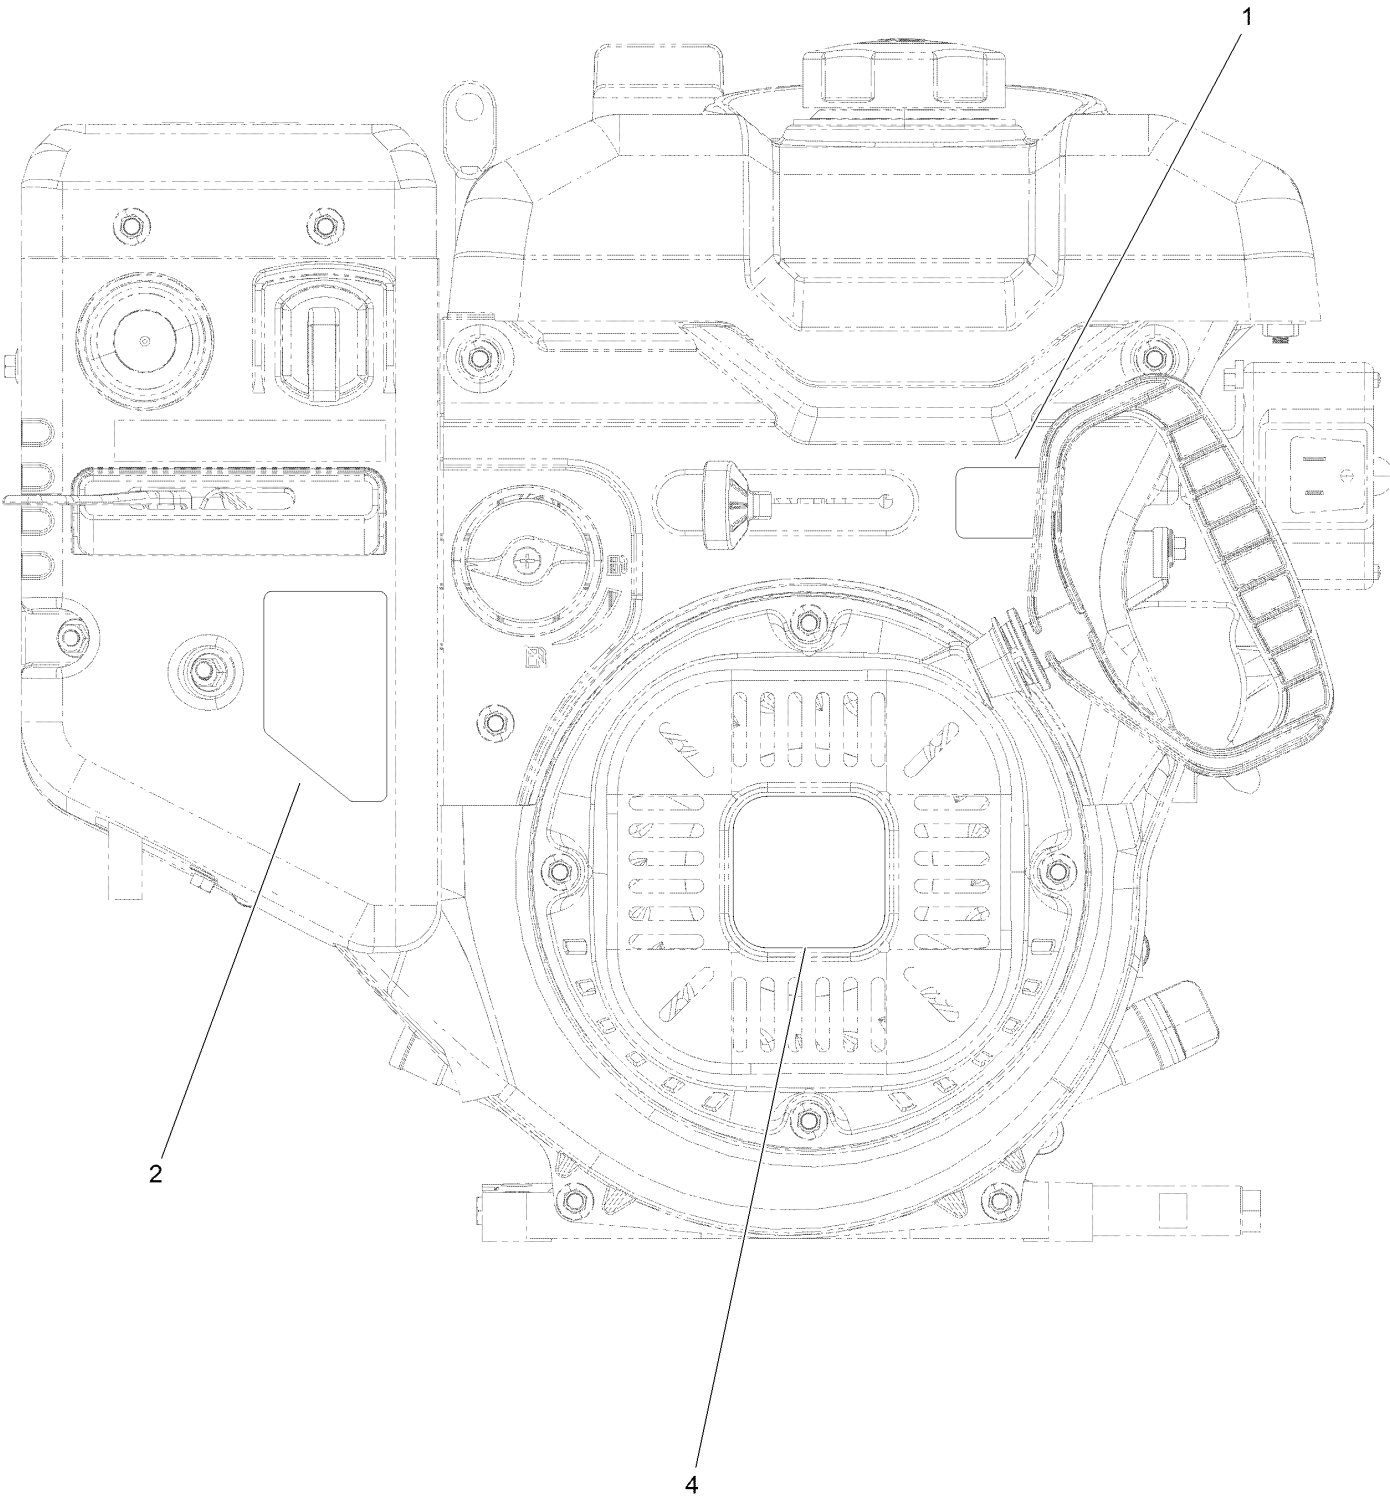

Engine Decal Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-1102	1	Decal-Throttle
2	120-9805	1	Decal-Control, Engine
4	120-9811	1	Decal-Recoil

 
Chute Assembly

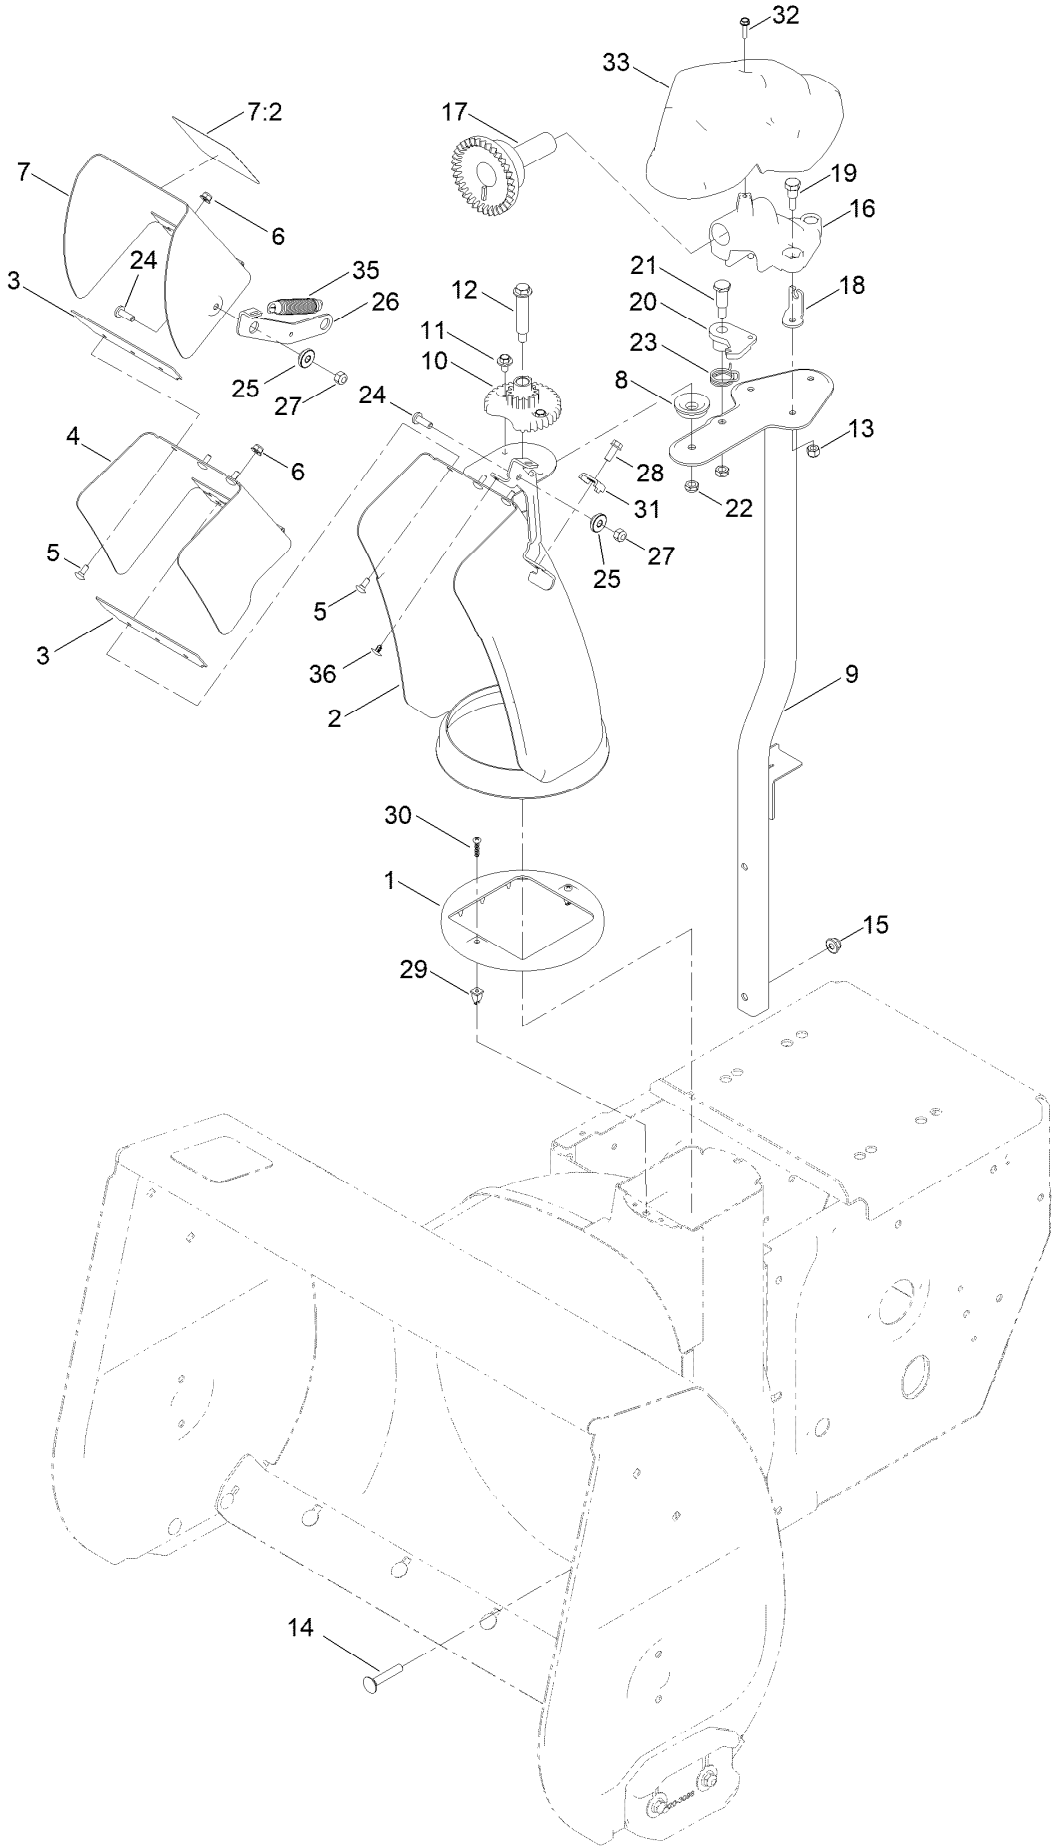

Chute Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-6515	1	Guide-Chute	18	136-6676	1	Anchor-Cable
2	136-6580-01	1	Lower Chute ASM	19	136-7197	3	Screw-Shoulder
3	138-3671	2	Gasket-Deflector	20	136-6525	1	Latch-Chute
4	136-6582-01	1	Middle Deflector ASM	21	137-3103	1	Screw-Shoulder, HH
5	135-1929	6	Bolt-CARR	22	137-3089	2	Nut-Hex
6	138-0719	6	Nut-HF	23	108-7315	1	Spring-Torsion
7	139-1564	1	Deflector ASM	24	138-0689	2	Screw-PH
7:2	121-6847	1	Decal-Danger	25	138-0687	2	Bushing-Pivot
8	106-4422	1	Spacer-Chute	26	136-6522	1	Link-Deflector
9	137-6245-03	1	Chute Post ASM	27	137-3094	2	Nut-Hex
10	106-4472	1	Gear-Chute	28	32144-85	1	Screw-HWH Thd Form
11	46-6810	2	Screw And Washer ASM	29	136-6586	2	Grommet-Screw
12	136-7199	1	Bolt-Shoulder	30	94-4496	2	Screw-PPH
13	137-3088	3	Nut-Hex	31	136-7191	1	Clamp-Cable
14	137-3063	2	Bolt-Car	32	137-3110	1	Screw-Plastite, HWH
15	119-4041	2	Nut-HF	33	136-6672	1	Cover-Gear, Face
16	136-6517	1	Mount-Gear, Face	35	132-6915	1	Spring-Extension
17	106-4471	1	Gear-Face	36	138-3651	1	Plug-Plastic

 Chute Control Assembly

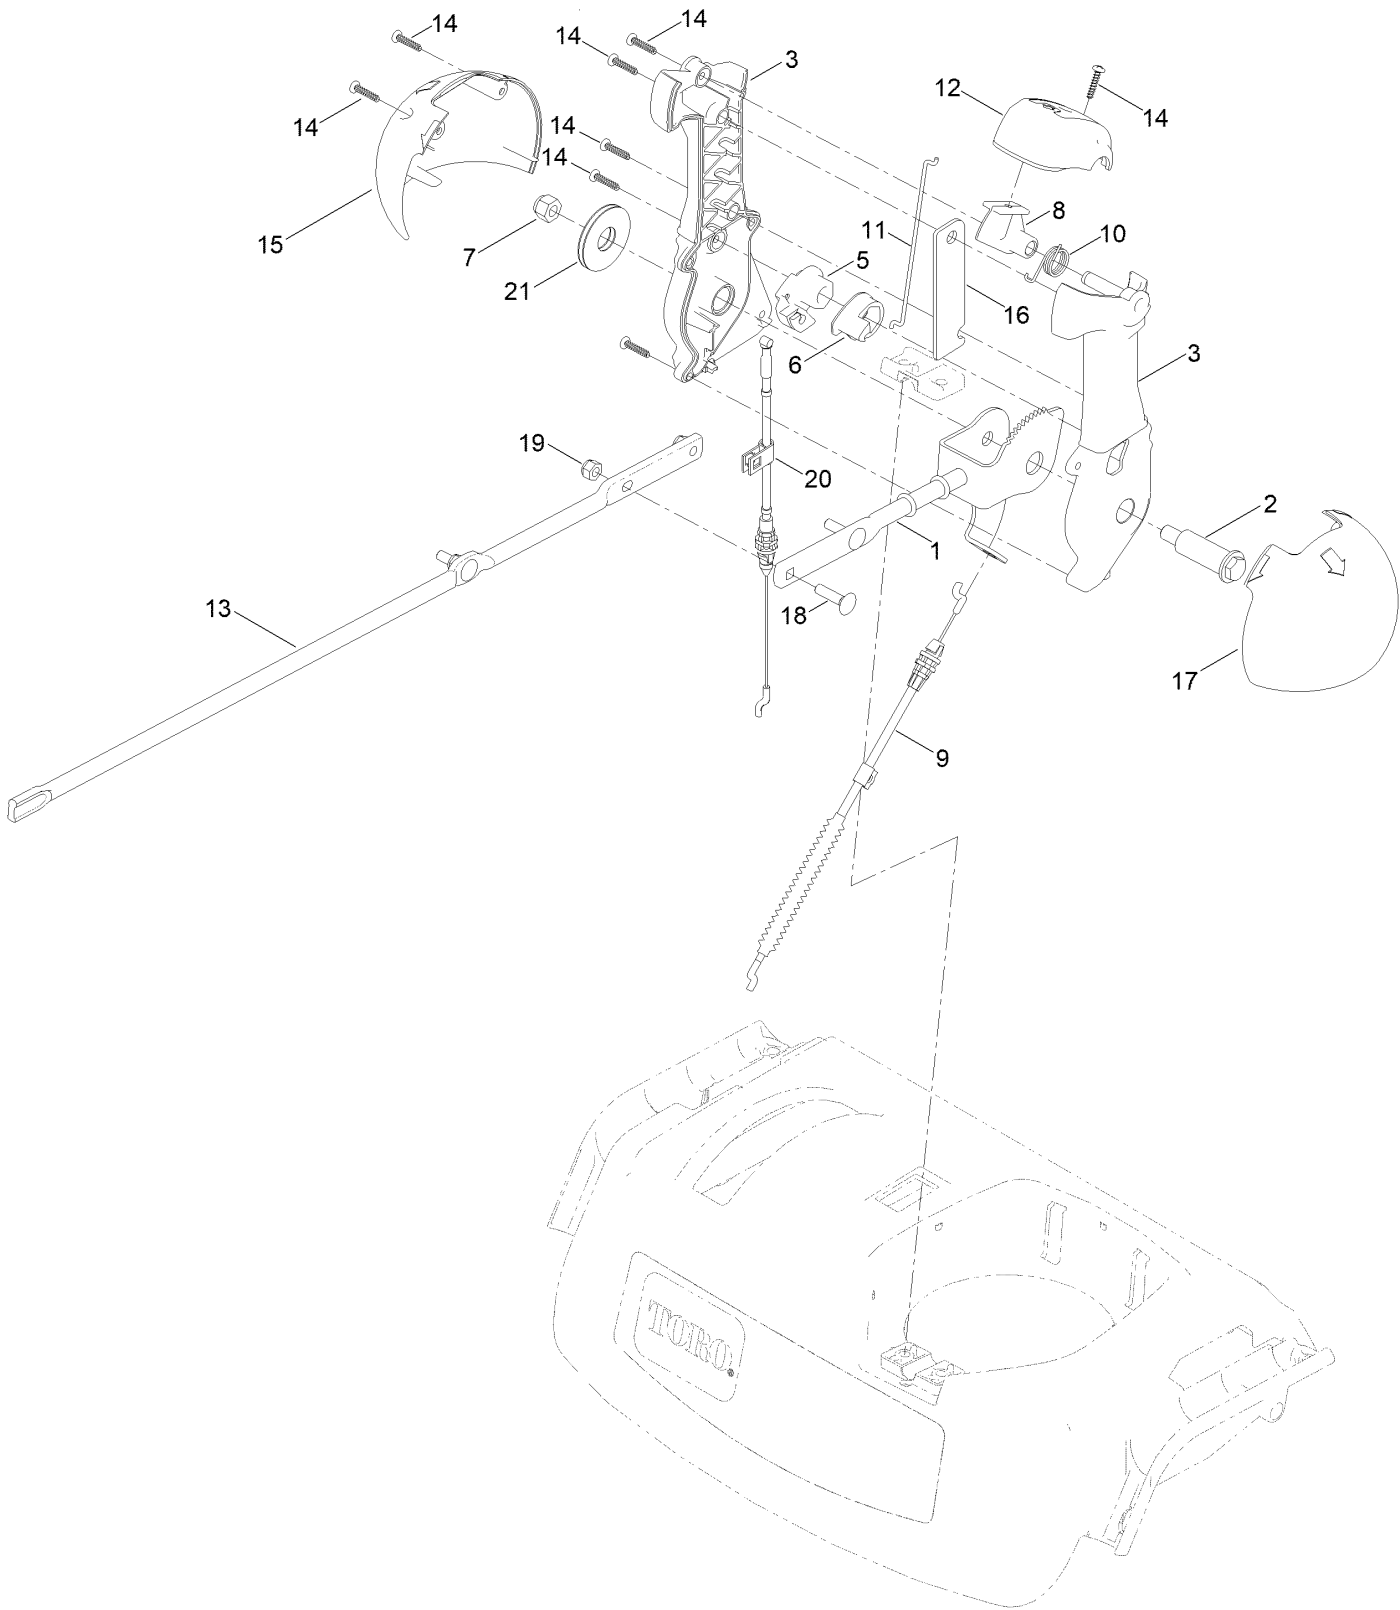

Chute Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	138-0662	1	Rod-Control, Chute	12	137-6239	1	Cap-Lever
2	138-0659	1	Screw-Shoulder, HWH	13	136-6578	1	Rod-Chute, Rotation
3	139-1552	1	Chute Control Lever ASM	14	94-4496	8	Screw-PPH
5	105-9988	1	Lever-Cable, Deflector	15	136-6677	1	Globe-Quickstick, RH
6	106-7310	1	Pawl-Latch	16	136-6632-03	1	Plate-Stiffner
7	137-3087	1	Nut-Hex	17	136-6678	1	Globe-Quickstick, LH
8	137-6238	1	Trigger-Latch	18	137-3056	3	Bolt-CARR
9	138-0730	1	Cable-Control, Deflector	19	137-3094	3	Nut-Hex
10	105-9982	1	Spring-Torsion	20	139-9903	1	Cable-Release, Chute
11	138-0688	1	Link-Latch	21	138-0744	1	Washer-Friction, Composite


This technical diagram illustrates the exploded view of a motorcycle engine assembly, showing the relationship between various components. The parts are numbered as follows:

- Engine Block and Cover (8):** The main engine housing, shown in two views (top and side).
- Cylinder Head (9):** The top cover of the cylinder.
- Pistons (10):** Two pistons shown in the top view of the engine block.
- Connecting Rods (11):** Two connecting rods shown in the top view of the engine block.
- Valves (12):** Two valves shown in the top view of the engine block.
- Valve Train Components (13-18):** Various components including valve guides, springs, and retainers.
- Camshaft (19):** The main camshaft.
- Camshaft Drive Components (20-24):** Components for driving the camshaft, including a drive gear and a timing chain.
- Timing Chain (25):** The chain connecting the camshaft drive to the camshaft.
- Timing Chain Guide (26):** A guide for the timing chain.
- Timing Chain Sprocket (27):** The sprocket on the crankshaft.
- Crankshaft (28):** The main rotating shaft.
- Crankpin Bearings (29):** Bearings for the crankpin.
- Crankshaft Seals (30):** Seals for the crankshaft.
- Oil Pan (31):** The bottom cover of the engine.
- Oil Pan Gasket (32):** The gasket between the oil pan and the engine block.
- Oil Pan Screws (33):** Screws for the oil pan.
- Oil Pan Drain Plug (34):** The plug for draining oil.
- Oil Pan Drain Plug Gasket (35):** The gasket for the drain plug.
- Oil Pan Drain Plug Screw (36):** The screw for the drain plug.
- Oil Pan Drain Plug Washer (37):** The washer for the drain plug.
- Oil Pan Drain Plug Nut (38):** The nut for the drain plug.
- Oil Pan Drain Plug Lock Washer (39):** The lock washer for the drain plug.
- Oil Pan Drain Plug Lock Nut (40):** The lock nut for the drain plug.
- Oil Pan Drain Plug Lock Washer (41):** The lock washer for the drain plug.
- Oil Pan Drain Plug Lock Nut (42):** The lock nut for the drain plug.
- Oil Pan Drain Plug Lock Washer (43):** The lock washer for the drain plug.
- Oil Pan Drain Plug Lock Nut (44):** The lock nut for the drain plug.
- Oil Pan Drain Plug Lock Washer (45):** The lock washer for the drain plug.
- Oil Pan Drain Plug Lock Nut (46):** The lock nut for the drain plug.
- Oil Pan Drain Plug Lock Washer (47):** The lock washer for the drain plug.
- Oil Pan Drain Plug Lock Nut (48):** The lock nut for the drain plug.
- Oil Pan Drain Plug Lock Washer (49):** The lock washer for the drain plug.
- Oil Pan Drain Plug Lock Nut (50):** The lock nut for the drain plug.
- Oil Pan Drain Plug Lock Washer (51):** The lock washer for the drain plug.
- Oil Pan Drain Plug Lock Nut (52):** The lock nut for the drain plug.
- Oil Pan Drain Plug Lock Washer (53):** The lock washer for the drain plug.
- Oil Pan Drain Plug Lock Nut (54):** The lock nut for the drain plug.
- Oil Pan Drain Plug Lock Washer (55):** The lock washer for the drain plug.
- Oil Pan Drain Plug Lock Nut (56):** The lock nut for the drain plug.
- Oil Pan Drain Plug Lock Washer (57):** The lock washer for the drain plug.
- Oil Pan Drain Plug Lock Nut (58):** The lock nut for the drain plug.
- Oil Pan Drain Plug Lock Washer (59):** The lock washer for the drain plug.
- Oil Pan Drain Plug Lock Nut (60):** The lock nut for the drain plug.
- Oil Pan Drain Plug Lock Washer (61):** The lock washer for the drain plug.
- Oil Pan Drain Plug Lock Nut (62):** The lock nut for the drain plug.
- Oil Pan Drain Plug Lock Washer (63):** The lock washer for the drain plug.
- Oil Pan Drain Plug Lock Nut (64):** The lock nut for the drain plug.
- Oil Pan Drain Plug Lock Washer (65):** The lock washer for the drain plug.
- Oil Pan Drain Plug Lock Nut (66):** The lock nut for the drain plug.
- Oil Pan Drain Plug Lock Washer (67):** The lock washer for the drain plug.
- Oil Pan Drain Plug Lock Nut (68):** The lock nut for the drain plug.
- Oil Pan Drain Plug Lock Washer (69):** The lock washer for the drain plug.
- Oil Pan Drain Plug Lock Nut (70):** The lock nut for the drain plug.
- Oil Pan Drain Plug Lock Washer (71):** The lock washer for the drain plug.
- Oil Pan Drain Plug Lock Nut (72):** The lock nut for the drain plug.
- Oil Pan Drain Plug Lock Washer (73):** The lock washer for the drain plug.
- Oil Pan Drain Plug Lock Nut (74):** The lock nut for the drain plug.
- Oil Pan Drain Plug Lock Washer (75):** The lock washer for the drain plug.
- Oil Pan Drain Plug Lock Nut (76):** The lock nut for the drain plug.
- Oil Pan Drain Plug Lock Washer (77):** The lock washer for the drain plug.
- Oil Pan Drain Plug Lock Nut (78):** The lock nut for the drain plug.
- Oil Pan Drain Plug Lock Washer (79):** The lock washer for the drain plug.
- Oil Pan Drain Plug Lock Nut (80):** The lock nut for the drain plug.
- Oil Pan Drain Plug Lock Washer (81):** The lock washer for the drain plug.
- Oil Pan Drain Plug Lock Nut (82):** The lock nut for the drain plug.
- Oil Pan Drain Plug Lock Washer (83):** The lock washer for the drain plug.
- Oil Pan Drain Plug Lock Nut (84):** The lock nut for the drain plug.
- Oil Pan Drain Plug Lock Washer (85):** The lock washer for the drain plug.
- Oil Pan Drain Plug Lock Nut (86):** The lock nut for the drain plug.
- Oil Pan Drain Plug Lock Washer (87):** The lock washer for the drain plug.
- Oil Pan Drain Plug Lock Nut (88):** The lock nut for the drain plug.
- Oil Pan Drain Plug Lock Washer (89):** The lock washer for the drain plug.
- Oil Pan Drain Plug Lock Nut (90):** The lock nut for the drain plug.
- Oil Pan Drain Plug Lock Washer (91):** The lock washer for the drain plug.
- Oil Pan Drain Plug Lock Nut (92):** The lock nut for the drain plug.
- Oil Pan Drain Plug Lock Washer (93):** The lock washer for the drain plug.
- Oil Pan Drain Plug Lock Nut (94):** The lock nut for the drain plug.
- Oil Pan Drain Plug Lock Washer (95):** The lock washer for the drain plug.
- Oil Pan Drain Plug Lock Nut (96):** The lock nut for the drain plug.
- Oil Pan Drain Plug Lock Washer (97):** The lock washer for the drain plug.
- Oil Pan Drain Plug Lock Nut (98):** The lock nut for the drain plug.
- Oil Pan Drain Plug Lock Washer (99):** The lock washer for the drain plug.
- Oil Pan Drain Plug Lock Nut (100):** The lock nut for the drain plug.

Handle Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-6682-03	1	Lower Handle ASM	36	137-6182	1	Rod-Lockout
2	137-3052	4	Screw-HH	37	138-0678	1	Spring-Torsion, Handle Return
3	138-8401	12	Nut-HF	38	145-0660	3	Screw-HSH,Spl
4	137-6206-03	1	Handle-Upper, LH	39	98-3499	1	Washer-Flat
5	137-6207-03	1	Handle-Upper, RH	40	138-0681	1	Screw-Shoulder
6	137-3107	8	Screw-Handle	41	144-0320	1	Handle Lock
7	137-3009	4	Washer-Cup	42	137-9137	1	Screw-PPH
8	145-0665	1	Control Panel Assembly	43	144-0321	1	Latch, Lockout
8:2	137-6249	1	Decal-Safety	44	138-8466	1	Cam-Lockout
9	137-6178	1	Cover-Quickstick	45	138-3652	1	Link-Lockout
10	105-9987	2	Support-Rod	46	137-6171	2	Lever-Control
11	137-3099	9	Screw-Plastite, HWH	47	138-0728	1	Cable-Traction
12	137-6197-01	1	Brace-Console	48	137-3083	2	Pin-Hair
14	137-6187-03	1	Gate-Shift	50	138-3644	1	Harness-Wire, LED And Hand Warmers
15	137-6188-03	1	Bracket-Shift	51	614249	2	Tie-Cable
16	137-6231-03	1	Selector-Speed	53	32180-030	1	Clip-Tie
17	115-1166	2	Washer-Plain	54	110-3408	1	Stick-Cleanout
18	136-7193	1	Trunnion-Rod	55	122-1124	1	Switch-Rocker, On-None-Off (Heater)
19	137-3103	1	Screw-Shoulder, HH	57	3290-271	4	Rivet-Pop
20	137-3038	1	Nut-HF	58	138-8467	1	Collar-Cam
21	136-7121	1	Spring-Compression	60	144-1602	1	Red Heated Grip
22	105-9999	1	Knob-Shift, LH	61	144-0309	1	Decal-Console
23	106-4423	1	Knob-Shift, RH	62	137-3093	1	Nut-Hex
24	94-4496	1	Screw-PPH	63	140-3749	3	Nut-Lock Rohs
25	137-6225	1	Rod-Shift				
33	138-3661	1	Cable-Auger				
35	136-7161	1	Spring-Lockout, Handle				

 
Traction Drive Assembly

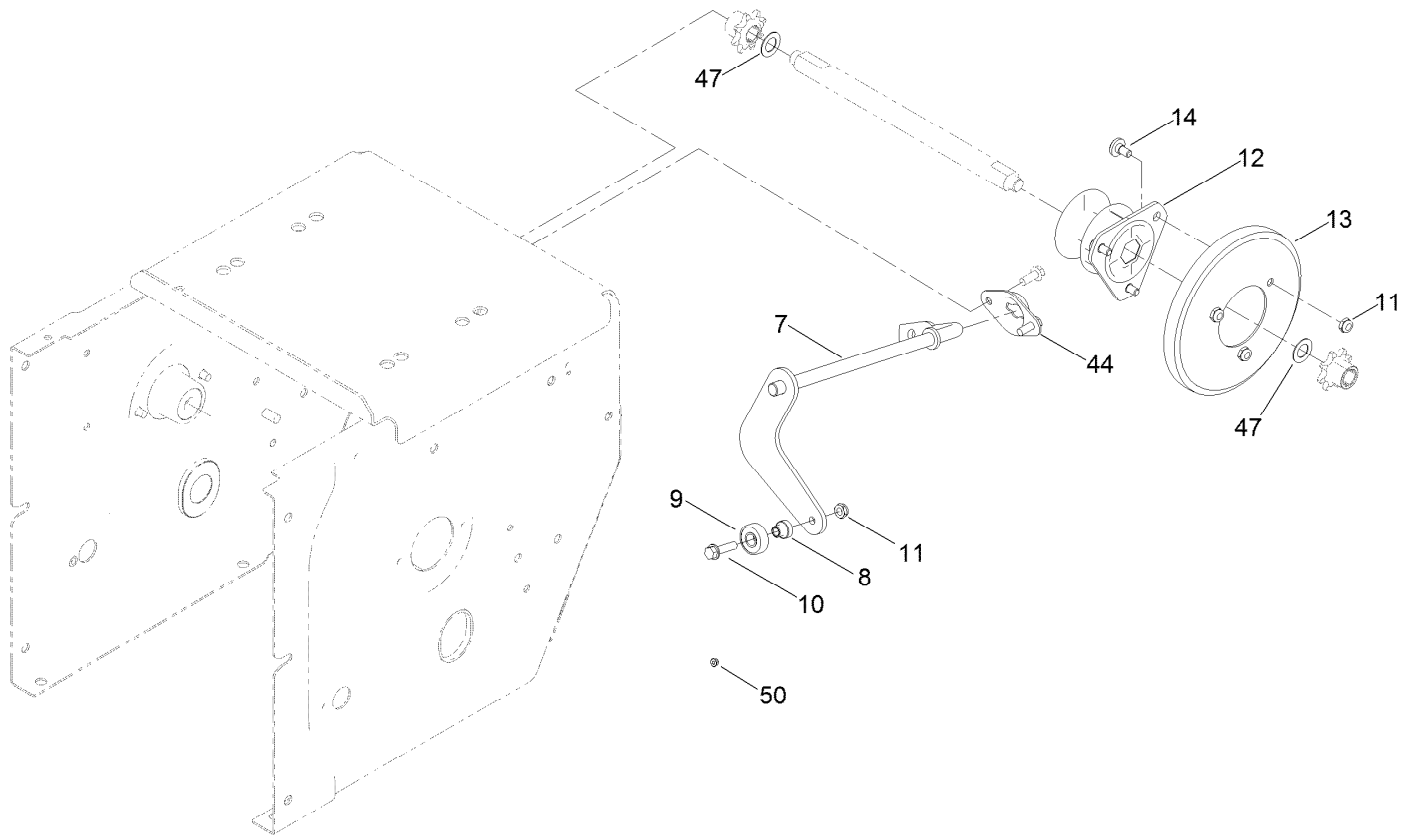

Traction Drive Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
7	137-6162-03	1	Rod-Shift	13	119-1567	1	Wheel-Friction
8	119-7684	1	Spacer-Plate, Shift	14	137-6246	3	Screw-Shoulder
9	121-6835	1	Bearing-Ball	44	136-6647-03	1	Retainer-Rod, Shift
10	32144-86	1	Screw-HWHTF	47	36-4780	2	Washer-Plain
11	137-3091	4	Nut-Hex	50	119-4040	2	Nut-HF, NI
12	119-7630	1	Trunnion				

 Autoturn Drive Assembly

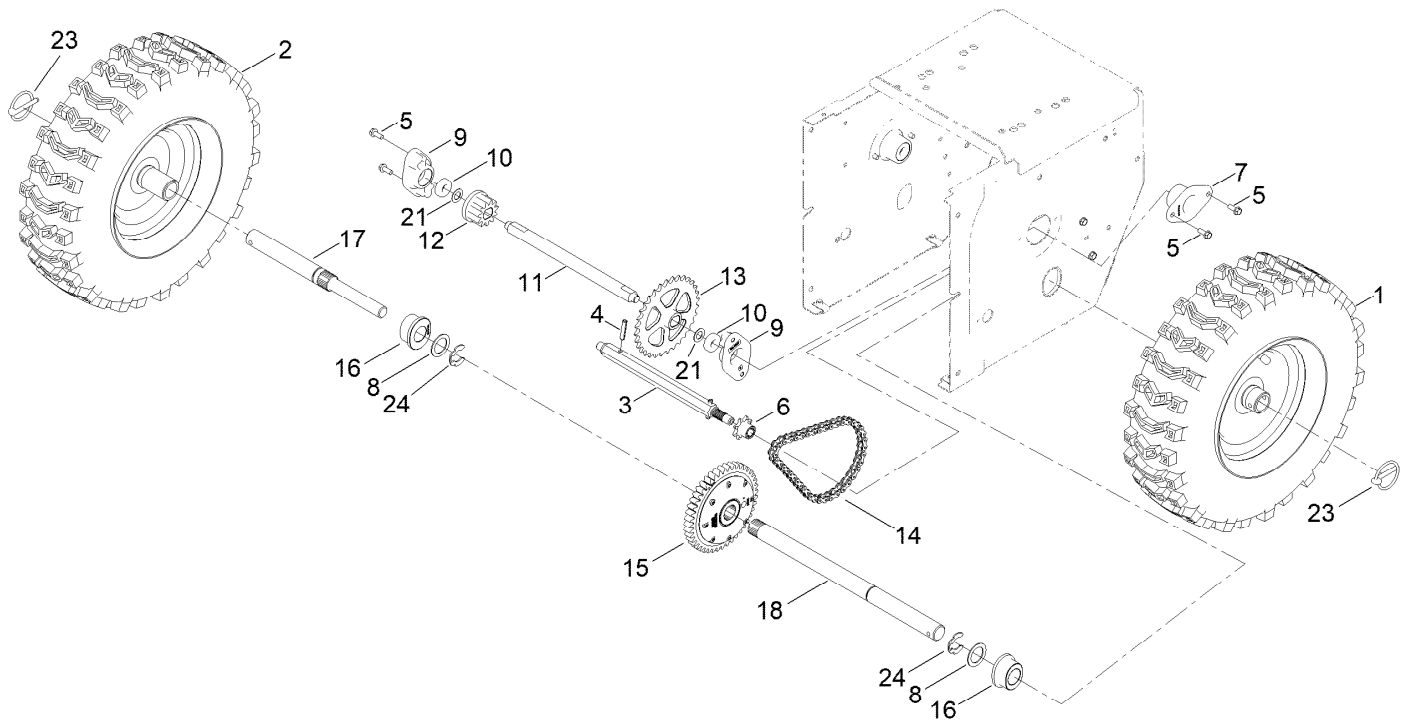

Autoturn Drive Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-6668	1	LH Wheel And Tire ASM	11	136-6692	1	Shaft-Intermediate
2	136-6667	1	RH Wheel And Tire ASM	12	136-6699	1	Tooth-Gear, 11
3	138-0745	1	Shaft-Hex	13	136-6698	1	Sprocket-32T
4	32121-9	2	Pin-Roll, Slotted	14	108-0016	1	Chain-Roller
5	32144-85	8	Screw-HWH Thd Form	15	140-3748	1	Transmission-Gt, Di300
6	125-1134	1	Gear-Pinion, 8 Tooth	16	136-6641	2	Bushing-Axle
7	108-7319	2	Retainer-Bearing	17	140-3711	1	Axle-Rt, HD
8	138-0725	2	Washer-Thrust	18	140-3736	1	Axle -Lt, HD
9	136-6697	2	Retainer-Bearing, Intermediate	21	36-4780	2	Washer-Plain
10	52-2450	2	Bearing-Wheel	23	138-3642	2	Pin-Klik
				24	32151-91	2	Ring-Retaining

Attachments and Accessories

For 38830 Power Max Heavy Duty 1030 OHAE Snowthrower

Product Name	Model/Part
High-Altitude Kit	121-4241
Heavy-Duty Skid Kit.....	125-1104
Snow Cab Kit	127-5960
Heated Grip Kit	131-6460
Engine Maintenance Kit.....	138-0704
Non-Marking Skid Kit	38211
Drift Breaker Kit	38213
Tire Chain Kit, 16in Tires.....	38215
Toro Snow Oil 0W30 Synthetic 20-Ounce Bottle	38913
Power Max HD Covers (2019)	490-7415

Notes:

Notes:

Notes:



Count on it.