



CE Kit for Dingo® Backhoe

Part No. 106-7705

Installation Instructions

Loose Parts

Note: Use the chart below to identify parts for assembly.

Description	Qty.	Use
Control panel decal, 104-9956	1	Installing the CE decal

Installing the Decal

Install the CE decal over the English decal on the backhoe. Install the decal as follows:

1. Thoroughly clean the area where you will install the decal.

2. Dampen the area with water or mildly soapy water.
3. Peel the decal from the backing and install it in place.
4. Squeegee across the surface of the decal, starting at the center of the decal and working toward the edges using overlapping strokes.

Location	US English	CE
On console	 100-4138 (US English)	 104-6072 (CE)

Switching the Hydraulic Hoses

1. Stop the engine, remove the key, install the boom pins, and allow the engine and hydraulic system to cool completely.
2. Cycle the hydraulic lever to remove pressure from the hydraulic lines.



Warning



Hydraulic fluid escaping under pressure can penetrate skin and cause injury.

- Make sure all hydraulic fluid hoses and lines are in good condition and all hydraulic connections and fittings are tight before applying pressure to the hydraulic system.
- Keep your body and hands away from pin hole leaks or nozzles that eject high pressure hydraulic fluid.
- Use cardboard or paper to find hydraulic leaks.
- Safely relieve all pressure in the hydraulic system before performing any work on the hydraulic system.
- Get immediate medical help if fluid is injected into skin.

3. Disconnect the hydraulic couplers from the traction unit.

4. Remove the 6 locknuts securing the control access panel (Fig. 1) and remove the panel.

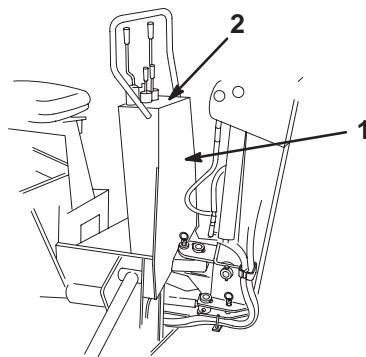


Figure 1

1. Control access panel
2. Control cover plate

5. Remove the 4 screws securing the control cover plate (Fig. 1 and 2) and remove the plate.

6. Disconnect the lower hydraulic hoses indicated in Figure 2.

Note: Some hydraulic fluid may leak when you disconnect the hoses.

7. Swap the hoses (i.e., place the right hose in the left fitting and the left hose in the right fitting) and tighten the fittings.

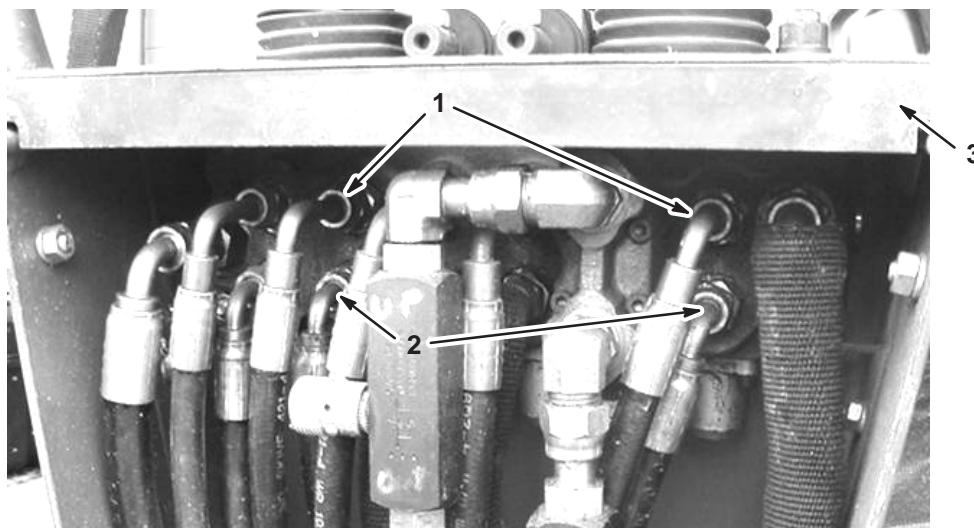


Figure 2

1. Upper hydraulic hoses
2. Lower hydraulic hoses
3. Control cover plate

8. Disconnect the upper hydraulic hoses indicated in Figure 2.

Note: Some hydraulic fluid may leak when you disconnect the hoses.

9. Swap the hoses (i.e., place the right hose in the left fitting and the left hose in the right fitting) and tighten the fittings.

10. Replace and secure the control cover plate and access panel.