



1800 Power Curve[®] Snowthrower

Model No. 38026 - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR.	as required	HYD.	hydraulic
ASM.	assembly	INC.	incorporated
CARR.	carriage	LH.	left hand
DEG.	degrees	NI.	nylon insert
FH.	flat head	PPH.	phillips pan head
GA.	gauge	PTH.	phillips truss head
HF.	hex flange	PTO.	power take off
HH.	hex head	RH.	right hand
HHF.	hex head flange	SFH.	slotted fillister head
HHFTF.	hex head flange thread forming	SHH.	slotted hex head
HJ.	hex jam	SHWH.	slotted hex washer head
HLH.	hex lag head	SPH.	slotted pan head
HOC.	height-of-cut	SQH.	square head
HS.	hex	SRH.	slotted round head
HSBH.	hex socket button head	STD.	standard
HSFH.	hex socket flat head	TAP.	self tapping
HS.	hex socket head	TTH.	torx truss head
HWH.	hex washer head	WH.	wing head
HWHTF.	hex washer head thread forming		

Contents


Description	Page
Housing and Rotor Assembly	 3
Handle Assembly	 4
Chute Assembly	 5

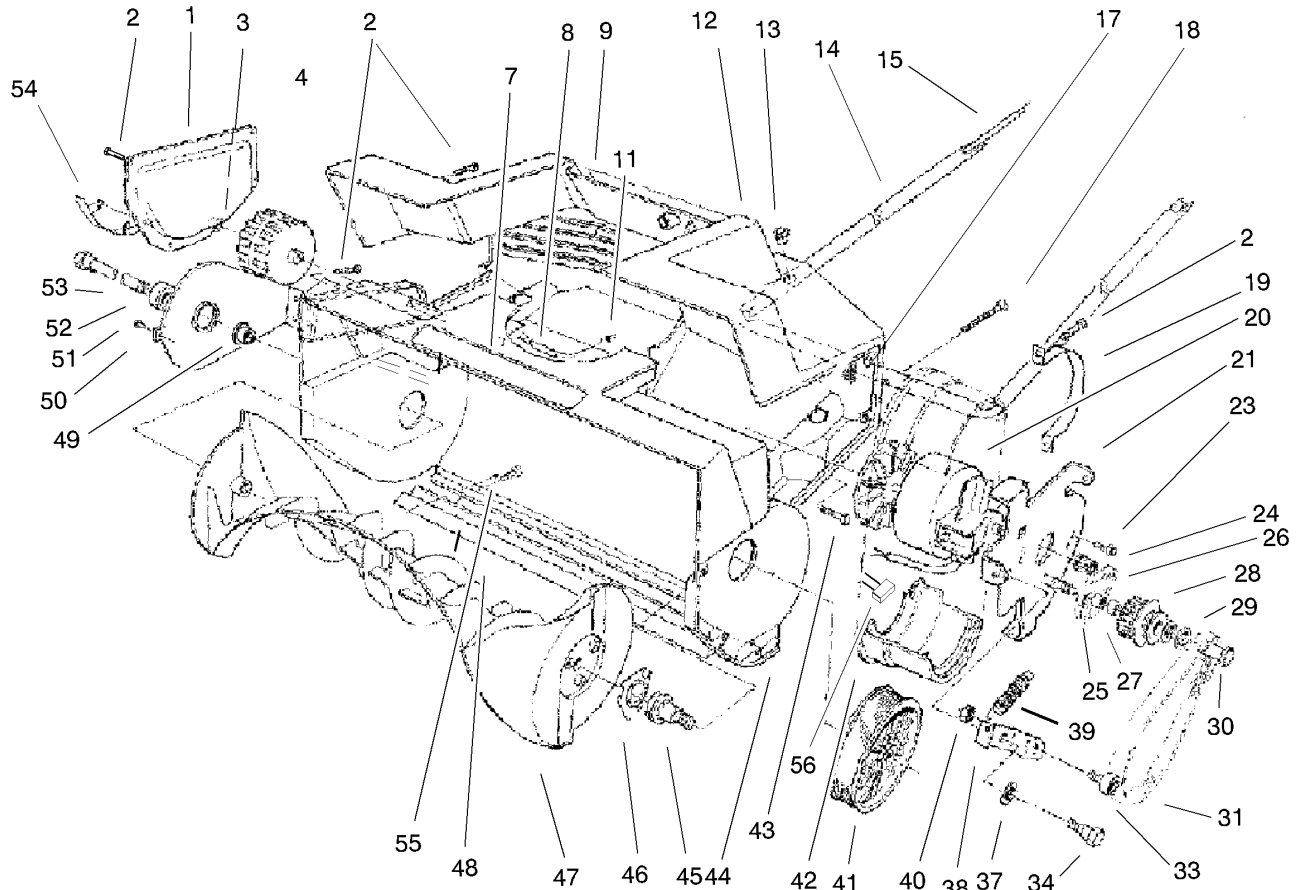

Housing and Rotor Assembly


Ref	Part No.	Qty.	Description
1	73-9370-03	2	Plate - Side
2	94-4496	19	Screw - Pan Hd. Form.
3	32112-1	2	Nut - Push
4	73-5720	2	Wheel
7	73-0370	1	Shaft - Axle
8	64-5820	1	Relief - Strain
9	107-3324	1	Decal - Danger
11	218-511	2	Connector
12	107-3327	1	Shroud - Housing
13	256-307	1	Bushing
14	104-9365-03	1	Tube - Lower Handle
15	73-3630	1	Wire Harness
17	73-1800	1	Filter - Foam
18	32144-88	4	Screw - Pan Hd.
19	73-0120	1	Strap - Motor
20	107-3321	1	Motor
21	73-8680	1	Motor Plate ASM
23	32144-100	2	Screw - Hex Washer Hd.
24	73-3660	1	Pulley - Driver
25	73-0160	1	Belt - Timing
26	73-3580	1	Washer
27		2	Bearing - Needle
28	73-3570	1	Pulley Asm - Idler (Incl. Ref. #27)
29	73-0041	2	Washer - Thrust

Ref	Part No.	Qty.	Description
30	73-3530	1	Bolt - Idler
31	61-8802	1	Belt - Drive
33	73-5730	1	Bearing Asm (Incl. Ref. #40)
34	27-0411	1	Screw - Shoulder
37	25-5641	1	Washer
38	73-3600	1	Bracket - Idler
39	73-3680	1	Spring
40	3296-47	1	Nut-Lock, NI
41	73-3550	1	Pulley - Driven
42	73-3650	2	Clamp - Motor Bracket
43	32104-97	2	Screw - Hex Hd.
44	73-3640	1	Housing - Rotor
45	73-0990	1	Shaft - Rotor Driver
46	73-0860	1	Coupler - Rotor
47	73-8590	1	Rotor
48	73-3690	1	Scraper
49	73-8580	1	Bushing
50	73-0010-03	1	Bracket - Wheel (Incl. Ref. #52)
51	3290-271	2	Rivet-Pop
52	100-1048	2	Bearing-Ball
53	73-0020	1	Shaft - Rotor
54	73-1570	2	Skid - Housing
55	106-6461	2	Screw - Pan Hd.
56	107-3322	1	Filter-Rfi

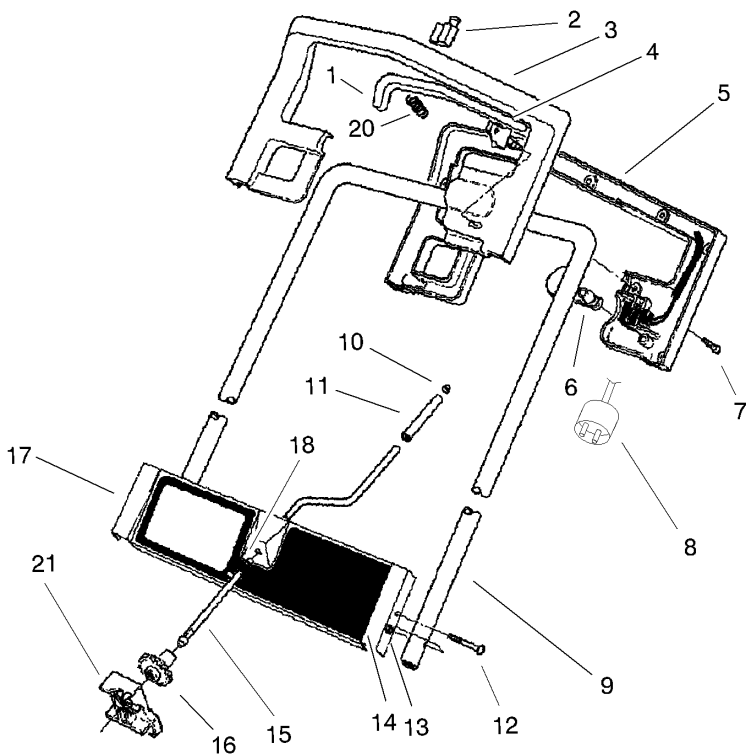

Handle Assembly

Ref	Part No.	Qty.	Description				
1	73-3510	1	Bar - Switch				
2	107-3323	1	Switch-Defond				
3	73-5700-10	1	Handle - Upper Control				
4	73-5190	1	Key				
5	73-5710	1	Handle - Lower Control				
6	73-5690	1	Tab - Lock				
7	94-4496	11	Screw - Pan Hd. Form.				
8	107-3320	1	Cord - Supply				
9	104-9364-03	1	Tube - Upper Handle				
10	32112-1	1	Nut - Push				
11	73-0251	1	Sleeve - Chute Crank				
12	33-8951	2	Screw - Hex Hd. Mach.				
13	3296-12	2	Nut - Lock				
14	105-9405	1	Decal - Escutcheon				
15	73-0240	1	Rod - Chute Crank				
16	73-0230	1	Gear - Chute Crank				
17	73-0310-03	1	Plate - Escutcheon				
18	256-306	1	Bushing - Nyliner				
20	73-3450	2	Spring				
21	73-3710	1	Brake - Gear				

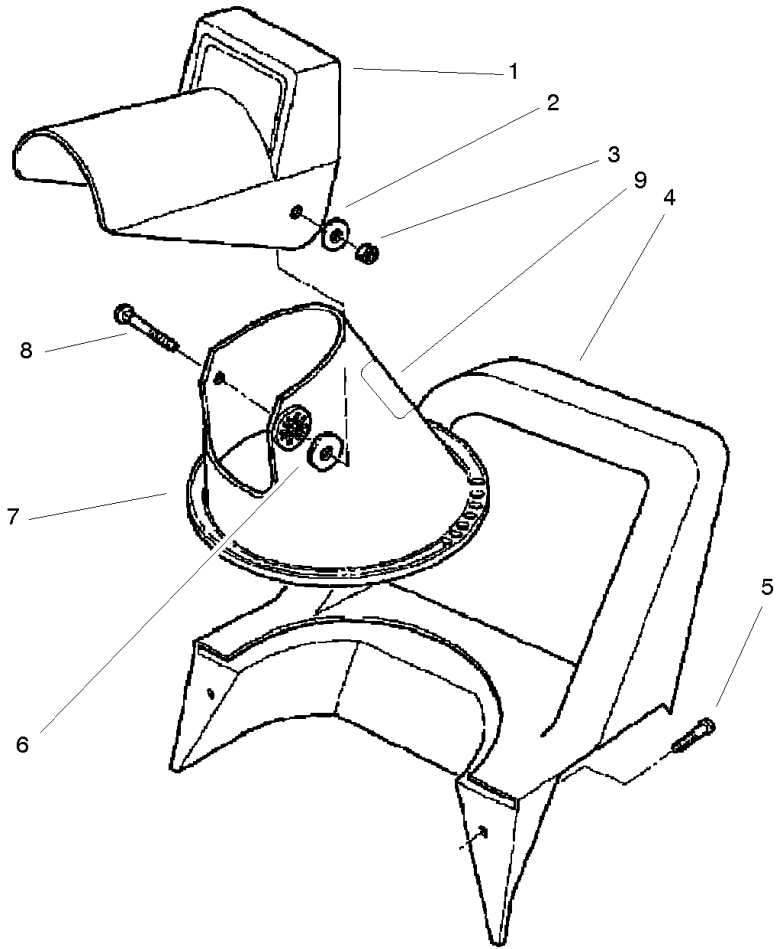

Chute Assembly

Ref	Part No.	Qty.	Description				
1	73-0190	1	Chute - Deflector				
2	3256-68	2	Washer - Flat				
3	3296-29	2	Nut-Lock, NI				
4	73-0260	1	Handle - Middle				
5	94-4496	4	Screw - Pan Hd. Form.				
6	20-4320	2	Washer-Rubber				
7	73-0180	1	Chute - Lower				
8	3230-2	2	Bolt-CARR				
9	107-3040	1	Decal-Auger Danger				

NOTES

NOTES

