



5-Blade 32in Reel Mower Reelmaster® 2000-D and 3100-D

Model No. 03212 - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Reel and Frame Assembly	 3	Guage Bar, Angle Indicator, Brush and Handle Assembly	 6
Bedbar Assembly	 4		
Roller Assembly	 5		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR.	as required	INC.	incorporated
ASM.	assembly	LH.	left hand
CARR.	carriage	NI.	nylon insert
DEG.	degrees	PPH.	phillips pan head
FH.	flat head	PTH.	phillips truss head
GA.	gauge	PTO.	power take off
HF.	hex flange	RH.	right hand
HH.	hex head	SFH.	slotted fillister head
HHF.	hex head flange	SHH.	slotted hex head
HHFTF.	hex head flange thread forming	SHWH.	slotted hex washer head
HJ.	hex jam	SPH.	slotted pan head
HLH.	hex lag head	SQH.	square head
HOC.	height-of-cut	SRH.	slotted round head
HS.	hex	STD.	standard
HSBH.	hex socket button head	TAP.	self tapping
HSFH.	hex socket flat head	TTH.	torx truss head
HSH.	hex socket head	WH.	wing head
HWH.	hex washer head		
HWHTF.	hex washer head thread forming		
HYD.	hydraulic		

Footnotes


- ❶** Not serviced separately
- ❷** Optional Equipment

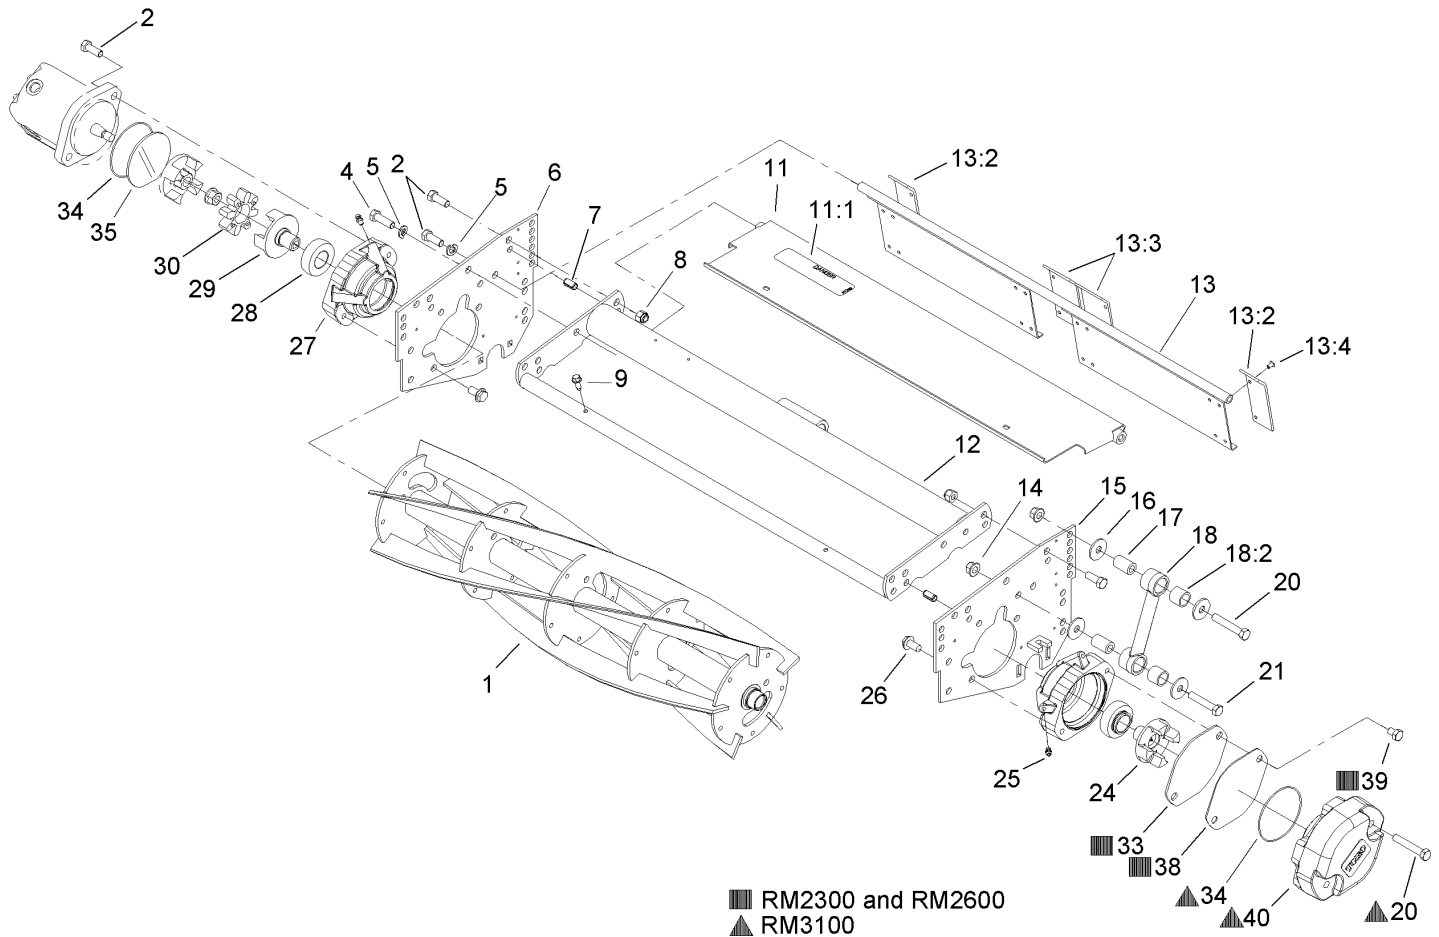

Reel and Frame Assembly

Ref	Part No.	Qty.	Description
1	99-3484	1	Reel-5 Blade
2	323-6	10	Screw-HH
4	323-7	2	Screw-HH
5	3253-5	4	Washer-Lock
6	94-3695-01	1	Plate-Side Reel, RH
7	32121-36	4	Pin-Spring
8	3296-39	6	Nut-Lock, NI
9	32144-10	2	Screw-HWH
11	94-5053	1	Front Grass Shield ASM
11:1	67-7960	1	Decal-Danger
11:1	93-6688	1	Decal-Danger, Europe
11:1	94-4584	1	Decal-Danger, Japan
12	95-8755-01	1	Frame-Reel
13	94-4969	1	Rear Grass Shield ASM
13:2	61-3280	2	Flap-Rubber
13:3	61-3290	2	Flap-Rubber, Middle
13:4	700382	12	Rivet
14	32128-36	8	Nut-HF
15	94-3697-01	1	LH Side Plate ASM
16	93-8806	16	Washer-Hardened
17	93-6981	8	Spacer
18	16-9759	4	Link ASM
18:2	94-8945	2	Bushing
20	323-11	6	Screw-HH

Ref	Part No.	Qty.	Description
21	323-10	4	Screw-HH
24	93-8826	1	Coupler-Reel, LH Thread
25	302-5	4	Fitting-Grease
26	3234-1	4	Screw-HHF
27	99-3404	2	Housing-Bearing
28	100-4926	2	Bearing-Aligning, Self
29	93-8825	1	Coupler-Reel, RH Thread
30	93-8827	1	Spider-Coupler
33	94-5979	1	Gasket
34	353-949	2	O-Ring
35	94-2703	1	Plug
38	93-6960	1	Cover-Holder, Bearing
39	323-2	2	Screw-HH
40	105-0171-03	1	Weight-End

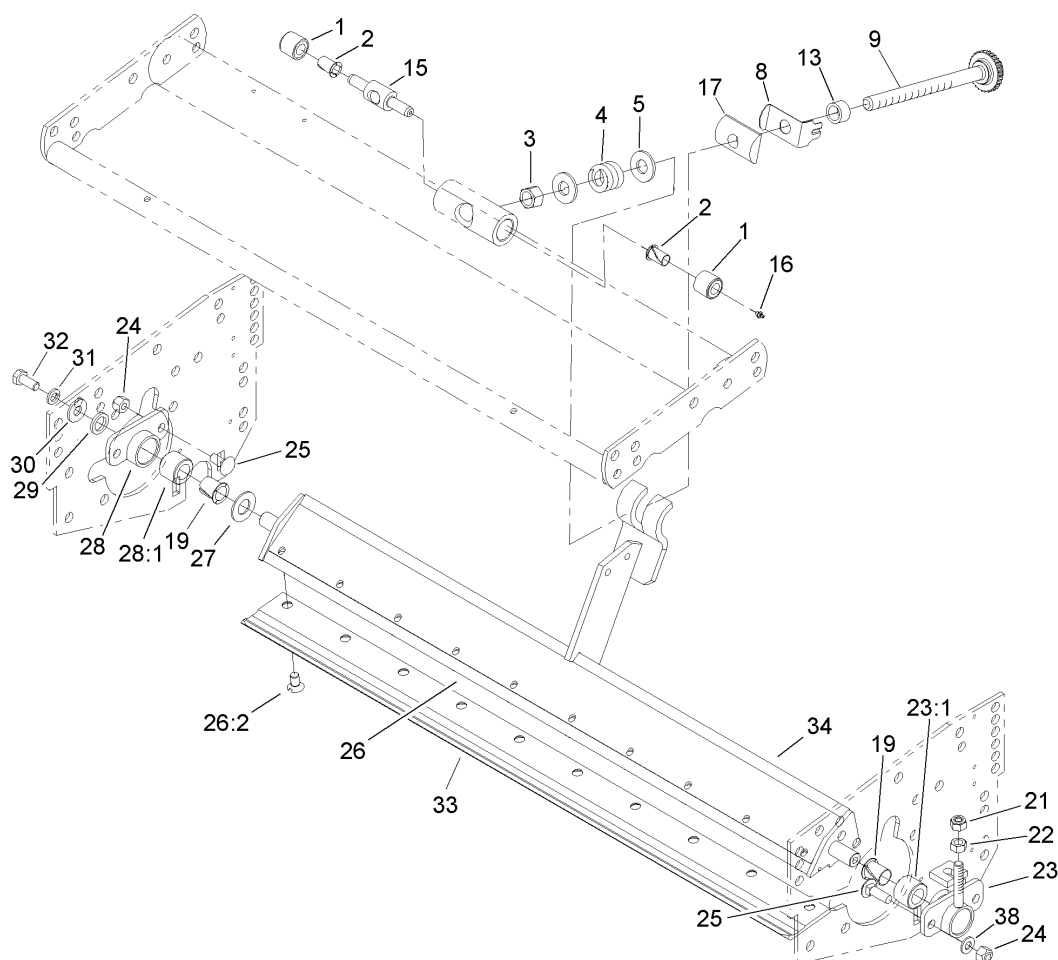


Bedbar Assembly

Ref	Part No.	Qty.	Description
1	62-5510	2	Bushing-Rubber
2	52-2890	2	Bushing-Nylon
3	3296-62	1	Nut-Lock NI
4	57-5270	1	Spring-Compression
5	29-8910	2	Washer
8	95-8752	1	Arm-Spring
9	106-7536	1	Bedbar Adjuster ASM
13	93-2959	1	Spacer-Adjuster
15	107-7409	1	Pin-Pivot, Bedbar
16	302-18	1	Fitting-Grease
17	93-2892	1	Pivot-Bedbar, Main Adj
19	56-9520	2	Bushing-Flanged
21	3296-4	1	Nut-Lock, NI
22	3219-2	1	Nut-Hex
23	16-9769	1	Bedbar Adj. Housing And Bushing ASM
23:1	56-9510	1	Bushing ASM
24	3296-29	4	Nut-Lock, NI
25	3230-2	4	Bolt-CARR
26		1	Bedbar ASM
26:2	57-4910	12	Screw
27	61-1950	1	Washer-Bedbar
28	14-4459	1	Housing-Bedbar
28:1	56-9510	1	Bushing ASM

Ref	Part No.	Qty.	Description
29	62-7120	1	Washer
30	3256-56	1	Washer-Flat
31	3253-4	1	Washer-Lock
32	322-3	1	Screw-HH
33	104-1381	1	Bedknife-Highcut
33	94-5079	1	Bedknife-Lowcut
34	95-8748-01	1	Bedbar
38	3256-74	4	Washer-Flat



Ref	Part No.	Qty.	Description
15	61-3800	2	Plate-Rear
16	61-3790	2	Plate-Hoc, Front
25	3256-38	2	Washer-Flat
50	106-9607	1	Full Roller Kit
②50:2	105-0150	2	Seal-Grease
②50:3	254-78	2	Bearing-Cone
②50:4	254-79	2	Bearing-Roller, Cup
②50:5	253-152	2	Seal-Oil

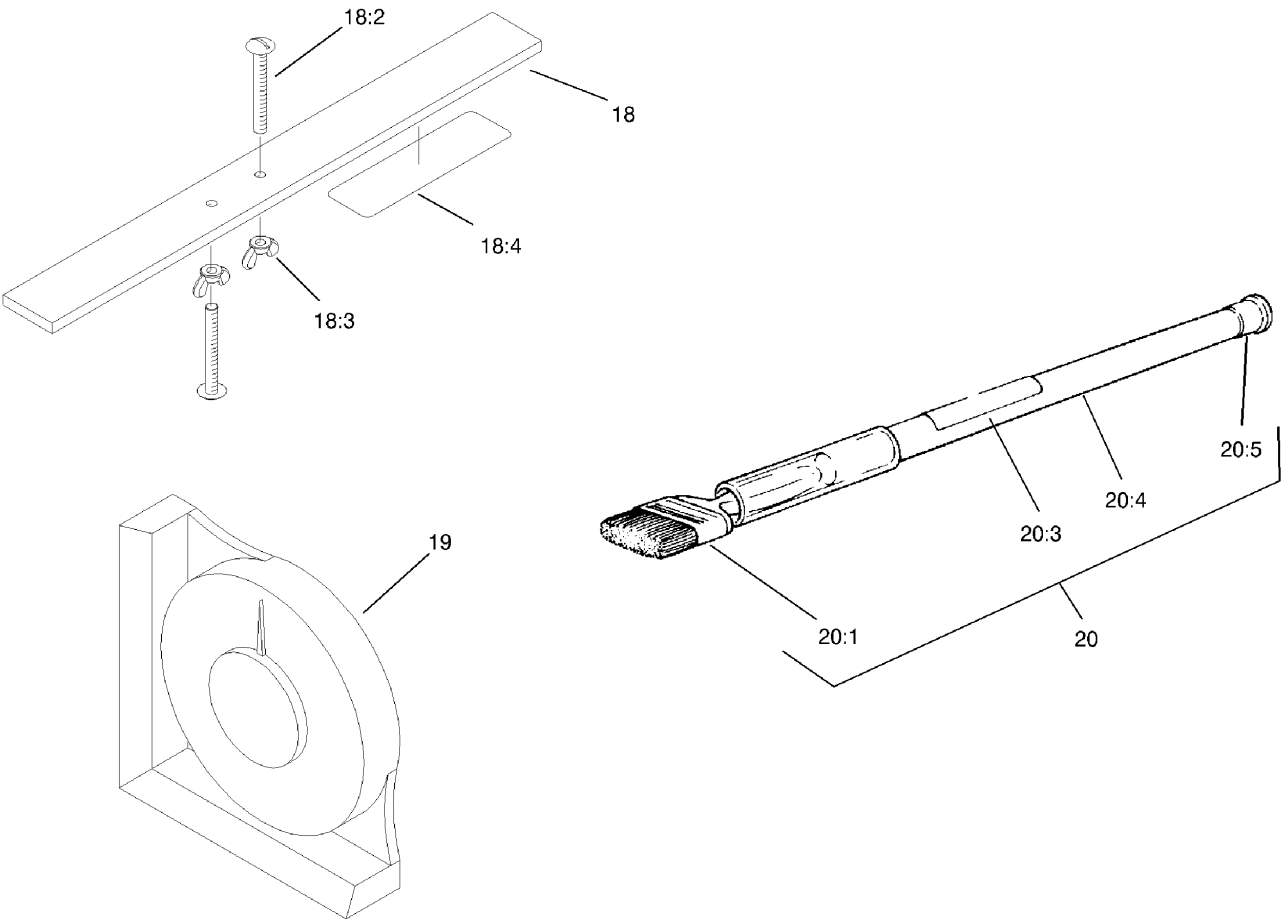

Guage Bar, Angle Indicator, Brush and Handle Assembly

Ref	Part No.	Qty.	Description				
18	98-1852	1	Gauge Bar ASM				
18:2	32122-54	2	Screw-Head, Truss				
18:3	32103-3	2	Nut-Wing				
18:4	98-7976	1	Decal-Bar, Gauge				
19	99-3503	1	Indicator-Angle				
20	29-9100	1	Brush And Handle ASM				
20:1	36-4310	1	Brush				
20:3	12-9140	1	Decal-Body, Front				
20:4	29-9080	1	Handle				
20:5	2410-18	1	Cap-Plastic				

NOTES

