



11-Blade Reel Mower Reelmaster® 5500-D and 6000-D Series

Model No. 03862 - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR.	as required	HYD.	hydraulic
ASM.	assembly	INC.	incorporated
CARR.	carriage	LH.	left hand
DEG.	degrees	NI.	nylon insert
FH.	flat head	PPH.	phillips pan head
GA.	gauge	PTH.	phillips truss head
HF.	hex flange	PTO.	power take off
HH.	hex head	RH.	right hand
HHF.	hex head flange	SFH.	slotted fillister head
HHFTF.	hex head flange thread forming	SHH.	slotted hex head
HJ.	hex jam	SHWH.	slotted hex washer head
HLH.	hex lag head	SPH.	slotted pan head
HOC.	height-of-cut	SQH.	square head
HS.	hex	SRH.	slotted round head
HSBH.	hex socket button head	STD.	standard
HSFH.	hex socket flat head	TAP.	self tapping
HSH.	hex socket head	TTH.	torx truss head
HWH.	hex washer head	WH.	wing head
HWHTF.	hex washer head thread forming		

Footnotes

- ❶

Not illustrated
- ❷


Not serviced separately
- ❸

See following pages
- ❹

Optional Equipment


Contents

Description	Page	Description	Page
Reel and Frame Assembly	 3	Optional Shoulder Roller Assembly No. 99-8675 (RM6000-D Series)	 11
Bed Bar Assembly	 5	Universal Roller Kit Assembly No. 106-9606	 12
Bedbar Pivot Service Kit Assembly No. 106-9605	 6	Gauge Bar, Angle Indicator and Brush Assembly	 13
Roller and Carrier Frame Assembly	 7		
Full Roller Assembly No. 99-5749	 8		
Wiehle Roller Assembly No. 100-9906	 9		
Optional Shoulder Roller Assembly No. 100-9911 (RM5500-D Series)	 10		

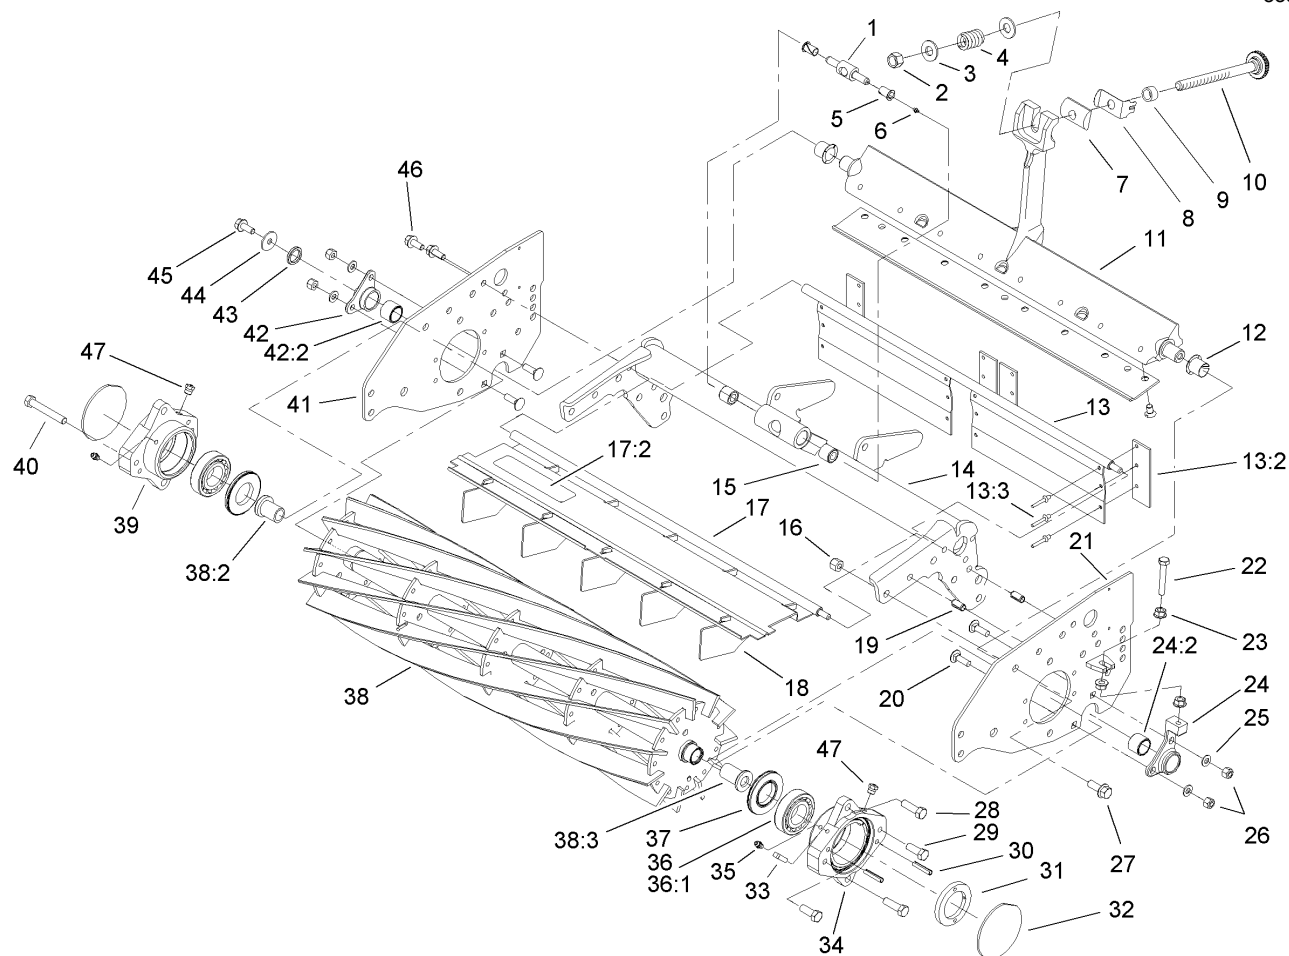


Reel and Frame Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	107-7409	1	Pin-Pivot, Bedbar	20	3230-2	4	Bolt-CARR
2	3296-62	1	Nut-Lock NI	21	100-2268-01	1	LH Sideplate ASM
3	29-8910	2	Washer	22	94-3489	1	Capscrew-HH
4	95-0772	1	Spring-Compression	23	33004-00	3	Nut-HF
5	52-2890	2	Bushing-Nylon	24	100-3381	1	LH Pivot Hub ASM
6	302-18	1	Fitting-Grease	24:2	93-7501	1	Bushing ASM
7	93-2892	1	Pivot-Bedbar, Main Adj	25	3256-74	4	Washer-Flat
8	95-8752	1	Arm-Spring	26	3296-29	4	Nut-Lock, NI
9	93-2959	1	Spacer-Adjuster	27	3234-11	8	Screw-HHF
10	106-7536	1	Bedbar Adjuster ASM	28	323-7	4	Screw-HH
11	99-8698-01	1	Bedbar	29	323-6	2	Screw-HH
12	93-7502	2	Bushing-Flanged	30	32121-69	4	Pin-Spring
13	100-2289	1	Rear Grass Shield ASM	31	95-2793	1	Nut-Adjustment, Bearing
13:2	98-3999	4	Flap-Side	32	94-2703	1	Plug
13:3	700382	12	Rivet	33	105-6758	1	Setscrew-SQH
14	100-4994-01	1	Frame-Reel	34	105-6755	1	Housing-Bearing, LH
15	62-5510	2	Bushing-Rubber	35	302-5	2	Fitting-Grease
16	3296-39	12	Nut-Lock, NI	36		2	Bearing-Packed, Grease
17	100-9900	1	Front Grass Shield ASM	36:1	93-2489	1	Bearing
17:2	93-6688	1	Decal-Danger, Europe	37	105-6757	2	Seal-Grease
17:2	94-4584	1	Decal-Danger, Japan	38	94-4338	1	11 Blade Reel ASM
17:2	67-7960	1	Decal-Danger	38:2	94-2732	1	Insert-Threaded, RH
18	100-2287	5	Deflector-Shield, Grass	38:3	94-2733	1	Insert-Threaded, LH
19	32121-36	4	Pin-Spring	39	105-6759	1	Housing-Bearing, RH

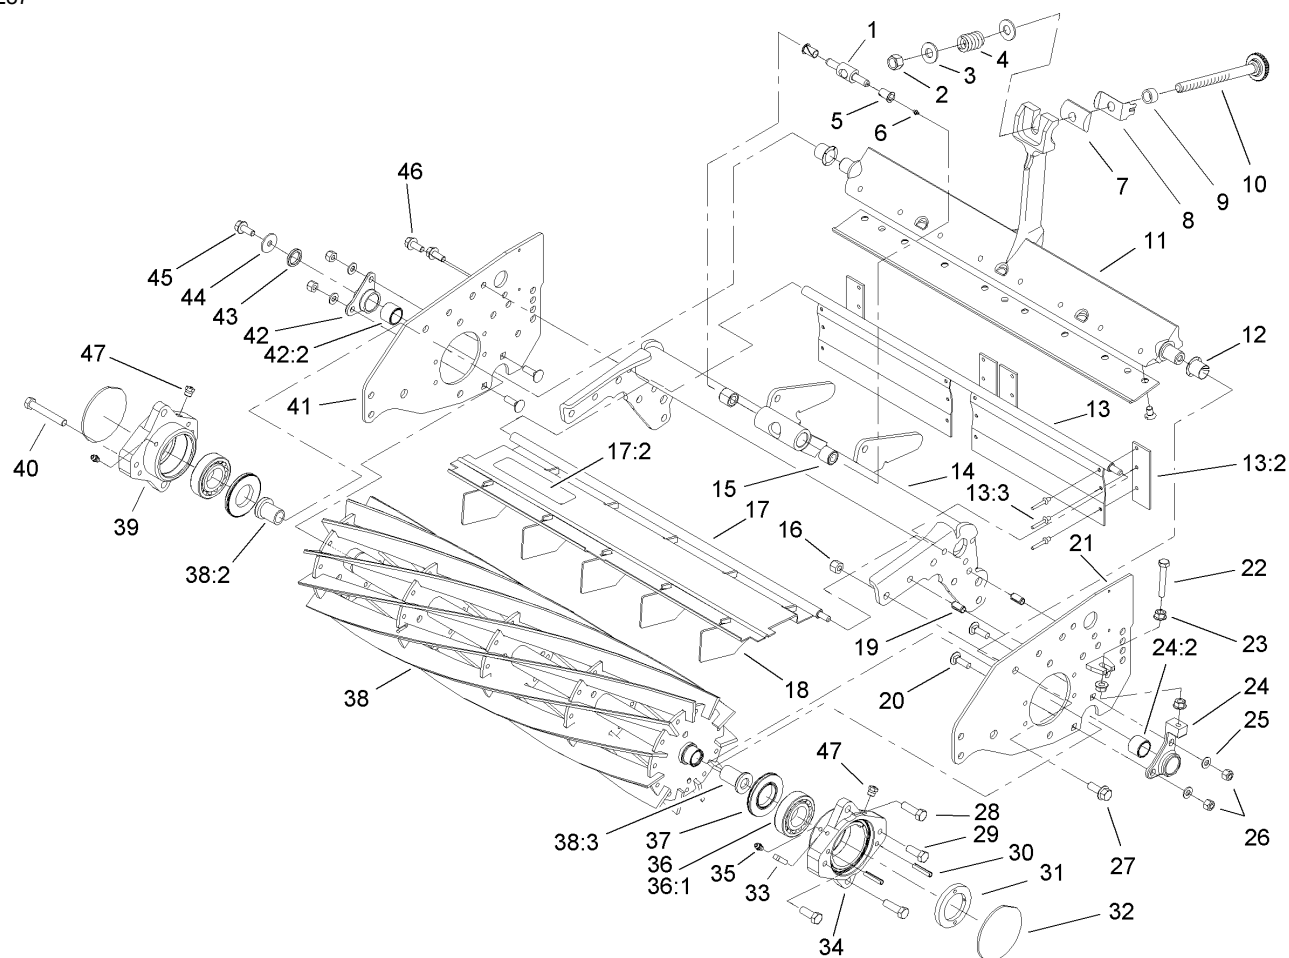


Reel and Frame Assembly (continued)

Ref	Part No.	Qty.	Description				
40	323-12	2	Screw-HH				
41	100-2267-01	1	Sideplate-RH				
42	100-3380	1	RH Pivot Hub ASM				
42:2	93-7501	1	Bushing ASM				
43	93-7510	1	Ring-Quad				
44	3256-82	1	Washer-Flat				
45	33104-020	1	Screw-HHF				
46	3234-5	2	Screw				
47	302-34	2	Fitting-Lube				
④50	106-9605	1	Bedbar Pivot Kit				

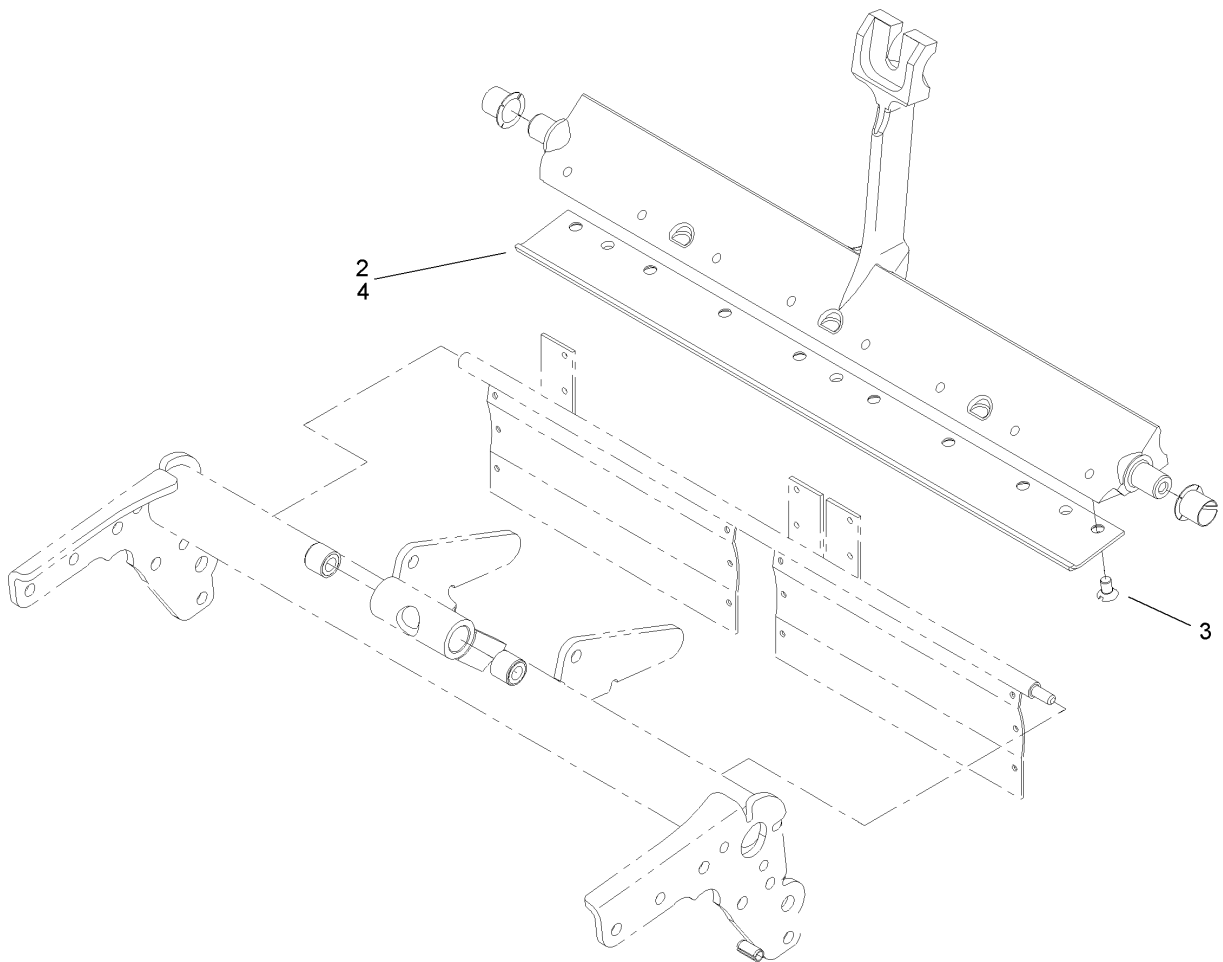


Bed Bar Assembly

Ref	Part No.	Qty.	Description
① 2	93-9774	1	Bedknife
3	57-4910	8	Screw
4	98-3994-05	1	Bedknife

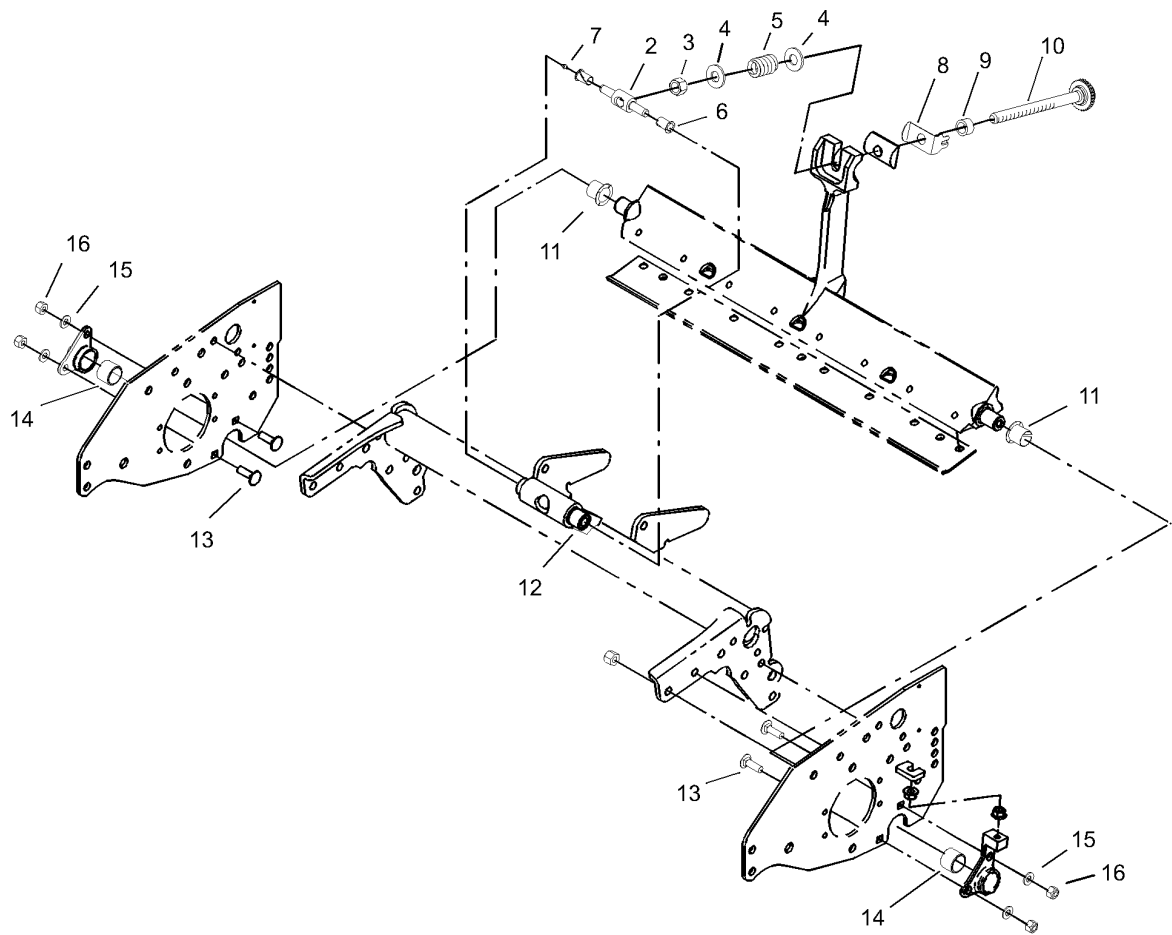

Bedbar Pivot Service Kit Assembly No. 106-9605


Ref	Part No.	Qty.	Description				
②	57-5260	1	Pivot-Bedbar				
③	3296-62	1	Nut-Lock NI				
④	29-8910	2	Washer				
⑤	95-0772	1	Spring-Compression				
⑥	52-2890	2	Bushing-Nylon				
⑦	302-18	1	Fitting-Grease				
⑧	95-8752	1	Arm-Spring				
⑨	93-2959	1	Spacer-Adjuster				
⑩	95-8877	1	Bedbar Adjuster ASM				
⑪	93-7502	2	Bushing-Flanged				
⑫	62-5510	2	Bushing-Rubber				
⑬	3230-2	4	Bolt-CARR				
⑭	93-7501	1	Bushing ASM				
⑮	3256-74	4	Washer-Flat				
⑯	3296-29	4	Nut-Lock, NI				

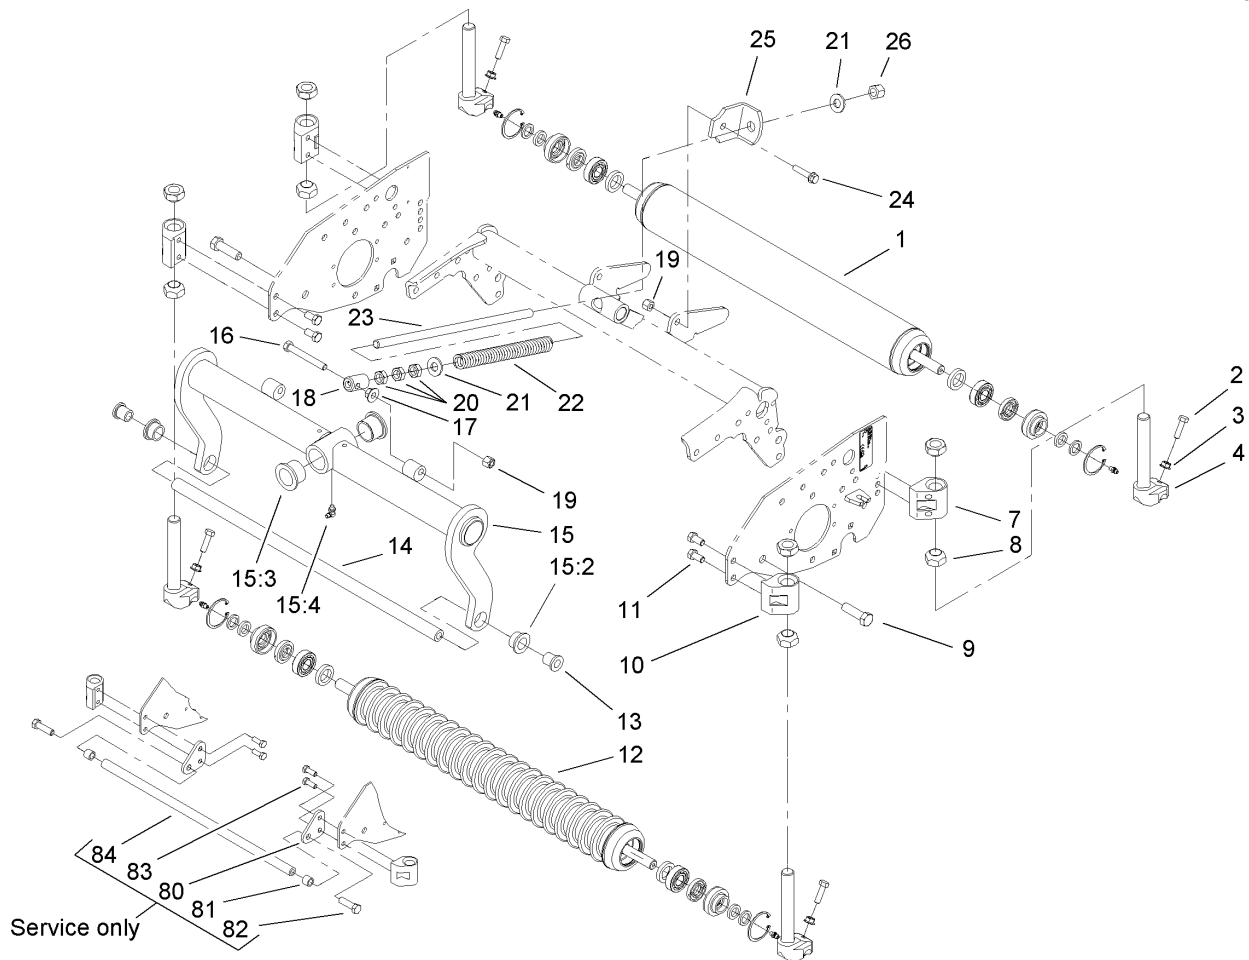

Roller and Carrier Frame Assembly


Ref	Part No.	Qty.	Description
⑤ 1	99-5749	1	Full Roller ASM
2	322-16	4	Screw-HH
3	32128-20	4	Nut-HF
4	100-2263	4	Support-Rod
7	100-2262-01	2	Bracket-Hoc, Rear
① 8	95-2790	1	Nut-Cone, Tall
8	95-2789	8	Nut-Cone
9	325-7	2	Screw-HH
10	100-2261-01	2	Bracket-Hoc, Front
11	323-4	8	Screw-HH
⑤ 12	99-8675	1	Shoulder Roller ASM
⑤ 12	100-9911	1	Shoulder Roller ASM
⑤ 12	100-9906	1	Wiehle Roller ASM
13	100-2276	2	Spacer-Frame
14	99-8693	1	Rod-Support
15	100-8011	1	Carrier Frame ASM
15:2	93-2877	2	Bushing
15:3	94-1291	2	Bushing
15:4	302-60	1	Fitting-Grease
16	99-8664	1	Screw-HH
17	32128-43	1	Nut-Flange
18	99-8662	1	Tube-Spring
19	3296-39	2	Nut-Lock, NI
20	3218-5	3	Nut-Jam

Ref	Part No.	Qty.	Description
21	87-7270	2	Washer-Thrust
22	92-7768	1	Spring-Compression
23	99-8661	1	Rod-Spring
24	3234-18	1	Screw-HHF
25	100-4992	1	Bracket-Spring
26	3296-23	1	Nut-Lock, NI
⑤ ④ 50	106-9606	1	Roller Kit
④ 80	100-9903	2	Bracket-Support
④ 81	100-9919	2	Spacer
④ 82	325-7	2	Screw-HH
④ 83	323-6	4	Screw-HH
④ 84	99-8693	1	Rod-Support

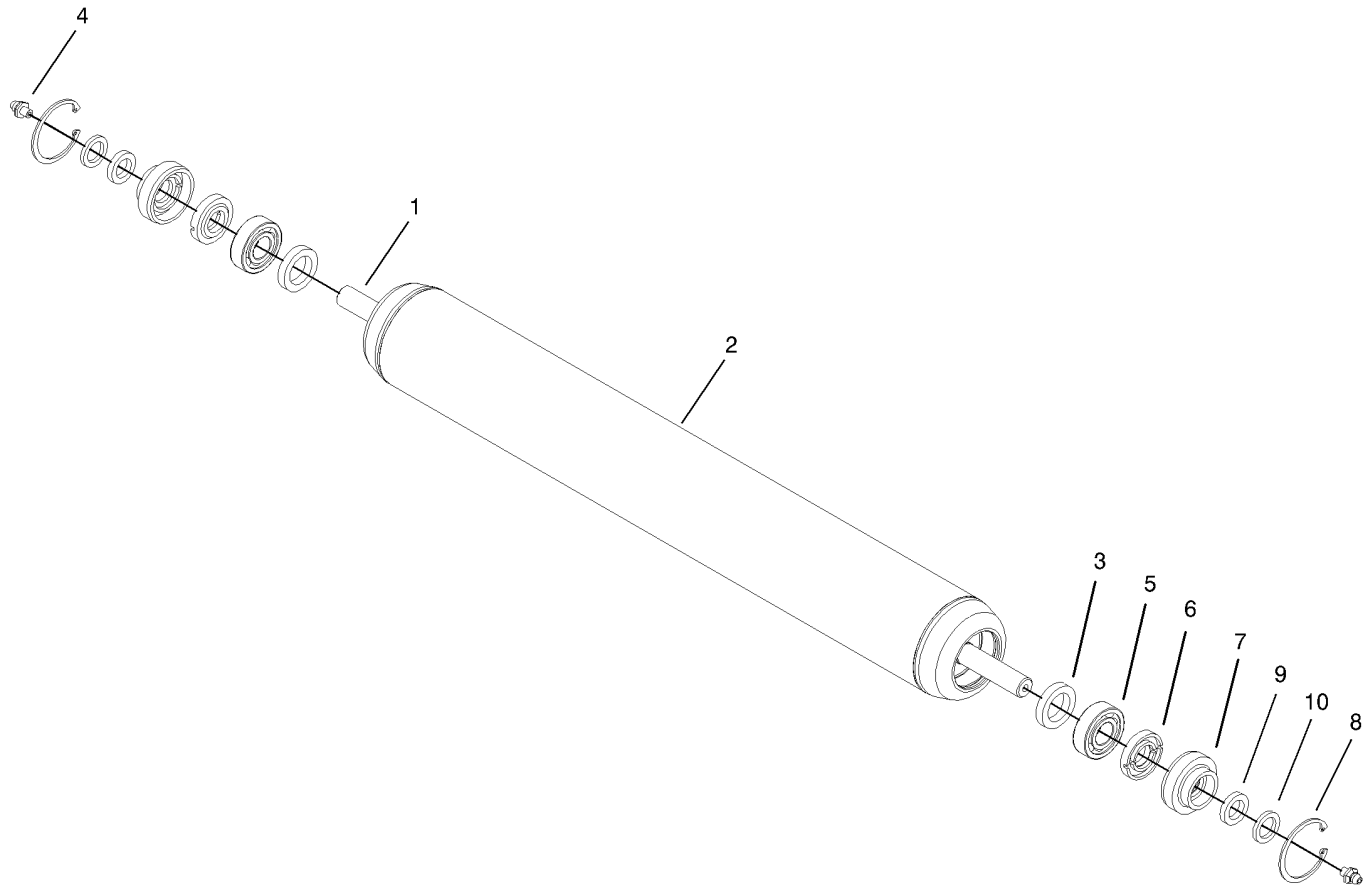


Full Roller Assembly No. 99-5749

Ref	Part No.	Qty.	Description				
1	99-5748	1	Shaft-Roller				
2	100-9943-03	1	3in Dia Roller Tube ASM				
3	93-3007	2	Seal-Oil				
4	302-5	2	Fitting-Grease				
5	109966	2	Bearing-Ball				
6	93-1251	2	Seal-Inner				
7	93-1252	2	Seal-Outer				
8	32120-62	2	Ring-Retaining				
9	253-70	2	Seal-Oil				
10	93-2931	2	Washer-Roller				

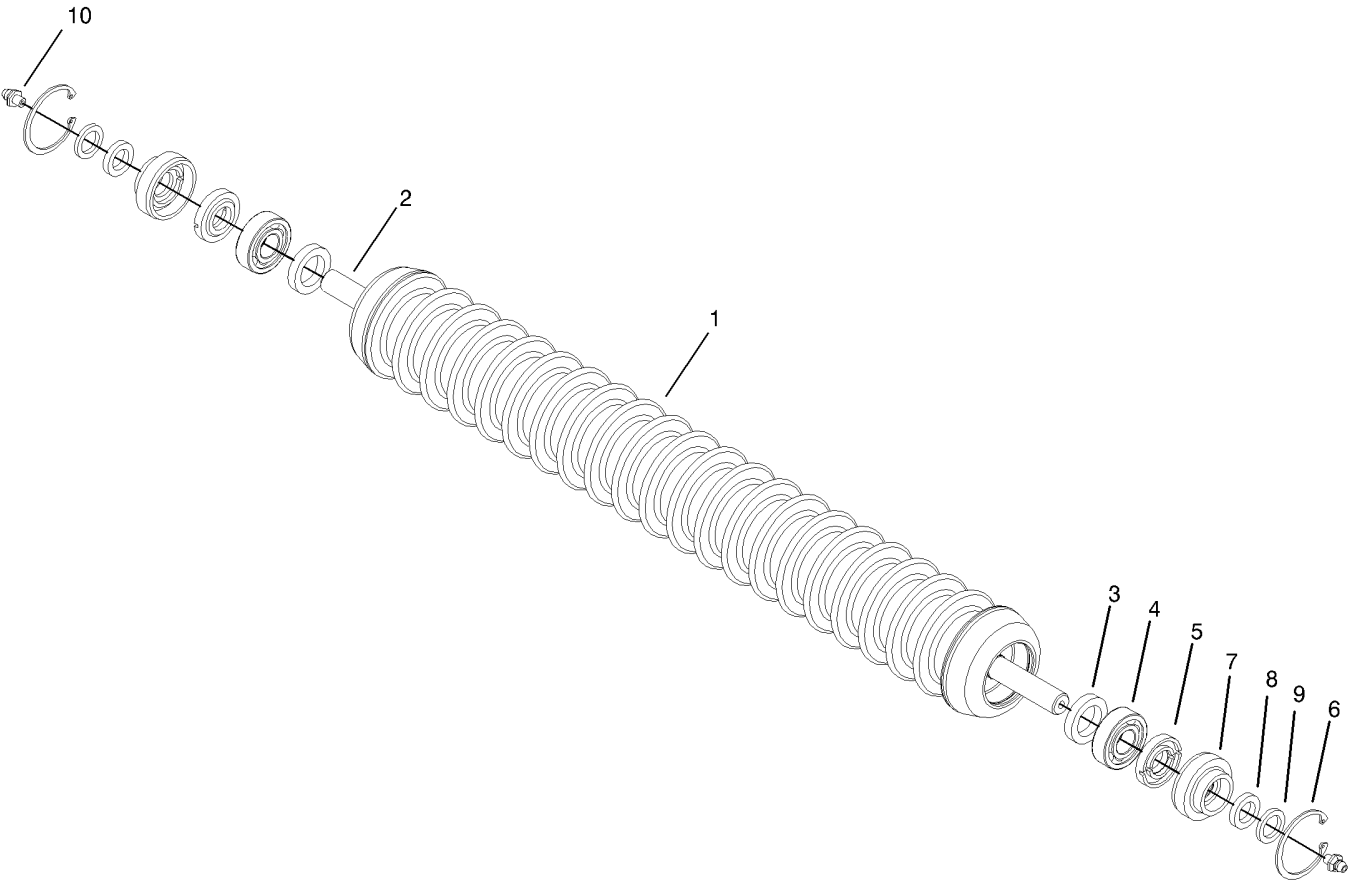


Wiehle Roller Assembly No. 100-9906

Ref	Part No.	Qty.	Description				
1	100-9905-03	1	Wiehle Roller ASM				
2	99-5748	1	Shaft-Roller				
3	93-3007	2	Seal-Oil				
4	109966	2	Bearing-Ball				
5	93-1251	2	Seal-Inner				
6	32120-62	2	Ring-Retaining				
7	93-1252	2	Seal-Outer				
8	253-70	2	Seal-Oil				
9	93-2931	2	Washer-Roller				
10	302-5	2	Fitting-Grease				

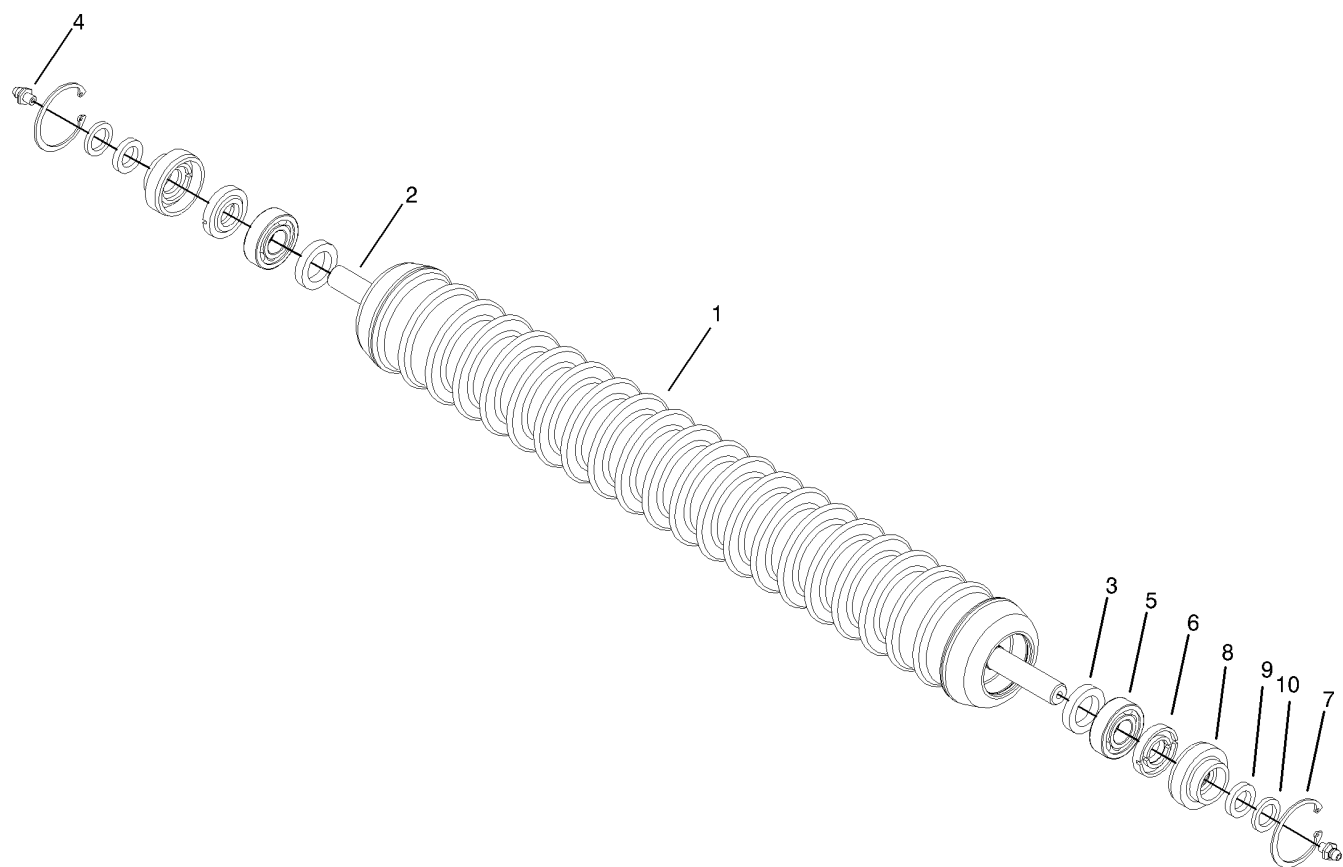


**Optional Shoulder Roller Assembly No. 100-9911
(RM5500-D Series)**

Ref	Part No.	Qty.	Description				
❶1	100-9910-03	1	Shoulder Weihle Roller ASM				
❷2	99-5748	1	Shaft-Roller				
❸3	93-3007	2	Seal-Oil				
❹4	302-5	2	Fitting-Grease				
❺5	109966	2	Bearing-Ball				
❻6	93-1251	2	Seal-Inner				
❼7	32120-62	2	Ring-Retaining				
❽8	93-1252	2	Seal-Outer				
❾9	253-70	2	Seal-Oil				
❿10	93-2931	2	Washer-Roller				

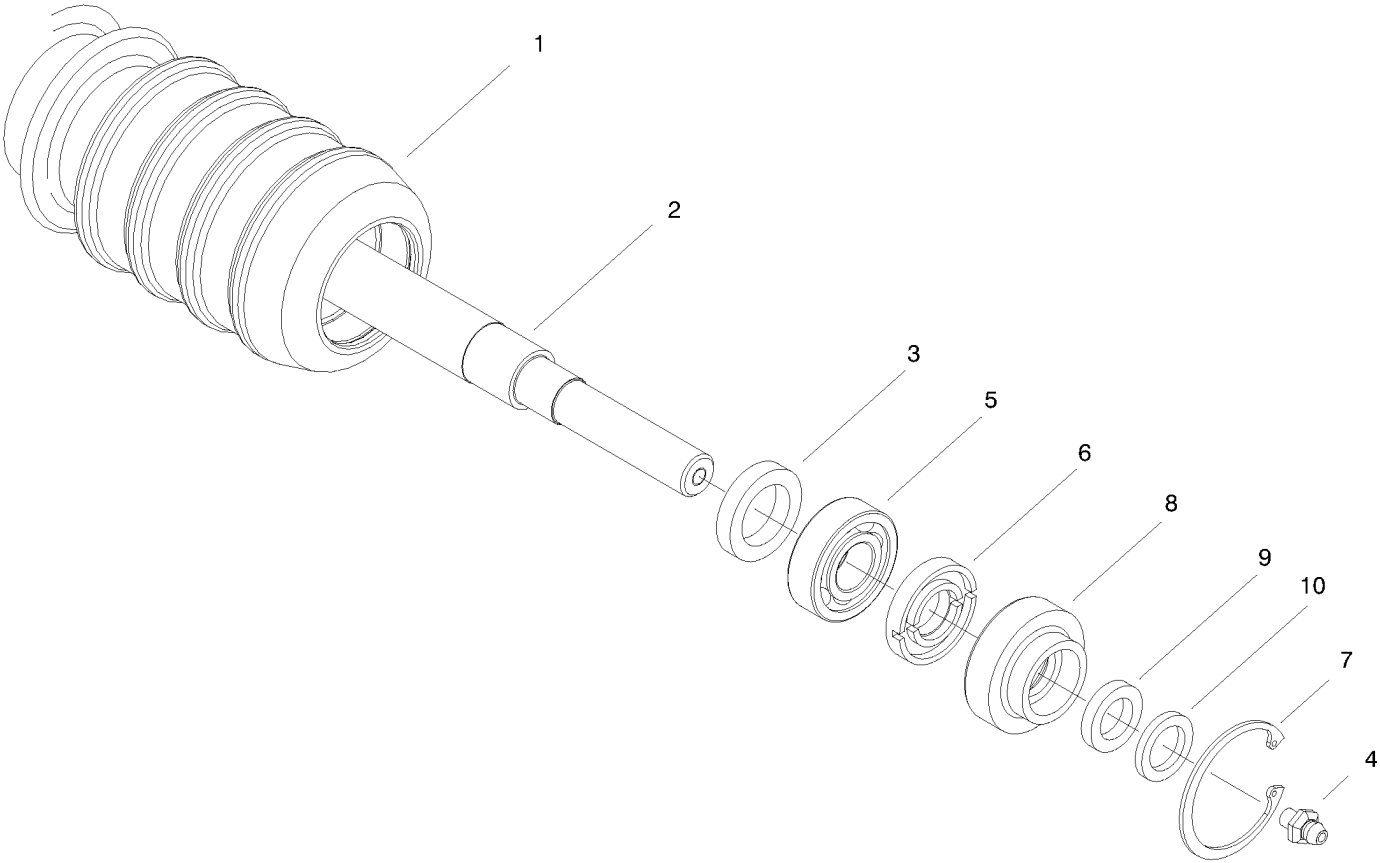


**Optional Shoulder Roller Assembly No. 99-8675
(RM6000-D Series)**

Ref	Part No.	Qty.	Description				
❶1	99-8674-03	1	Shoulder Wiehle Roller ASM				
❷2	99-5748	1	Shaft-Roller				
❸3	93-3007	2	Seal-Oil				
❹4	302-5	2	Fitting-Grease				
❺5	109966	2	Bearing-Ball				
❻6	93-1251	2	Seal-Inner				
❼7	32120-62	2	Ring-Retaining				
❽8	93-1252	2	Seal-Outer				
❾9	253-70	2	Seal-Oil				
❿10	93-2931	2	Washer-Roller				

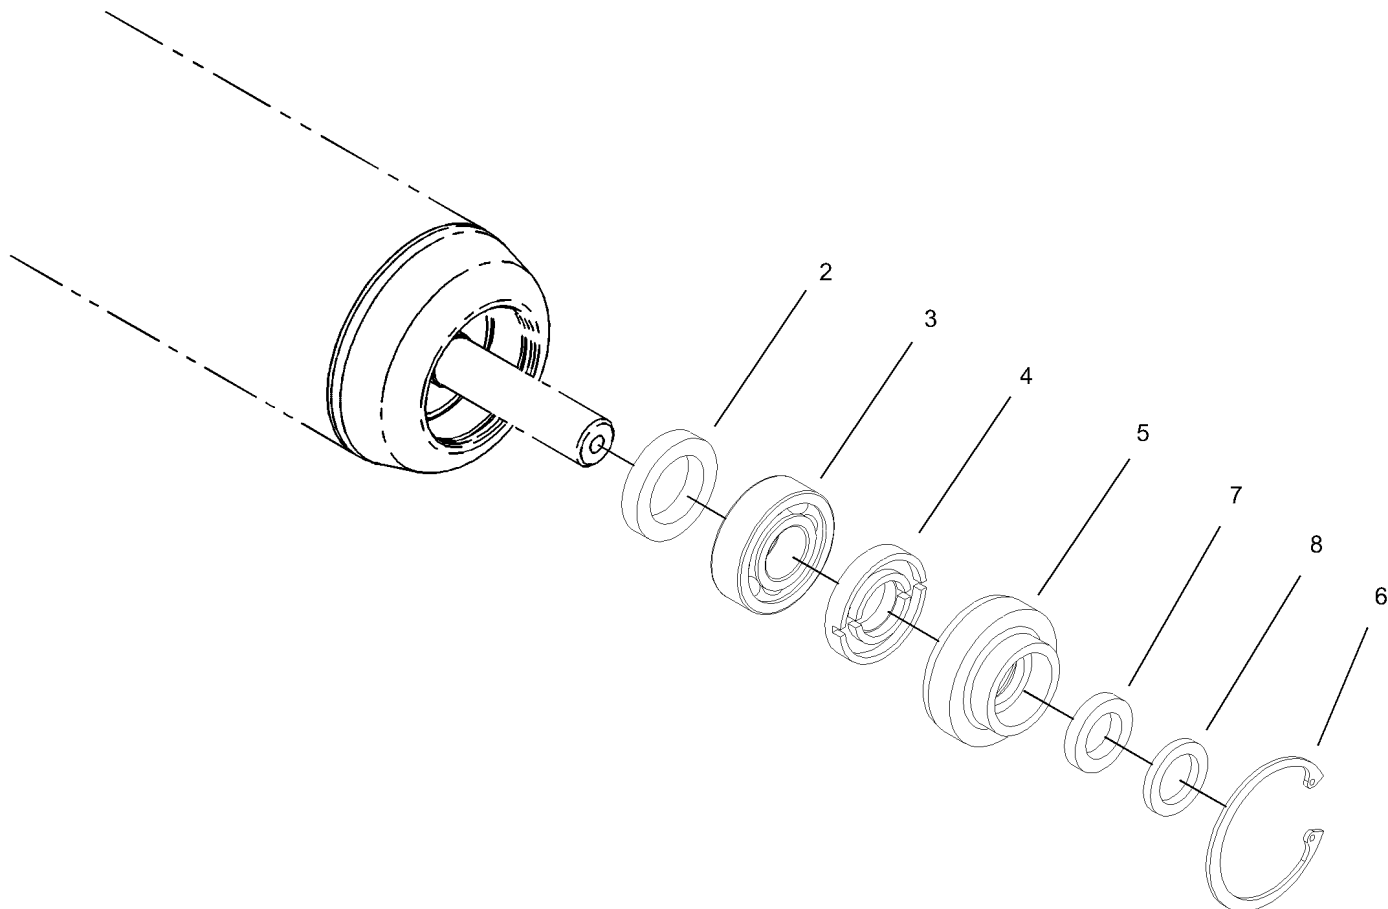

Universal Roller Kit Assembly No. 106-9606

Ref	Part No.	Qty.	Description				
42	93-3007	2	Seal-Oil				
43	109966	2	Bearing-Ball				
44	93-1251	2	Seal-Inner				
45	93-1252	2	Seal-Outer				
46	32120-62	2	Ring-Retaining				
47	253-70	2	Seal-Oil				
48	93-2931	2	Washer-Roller				

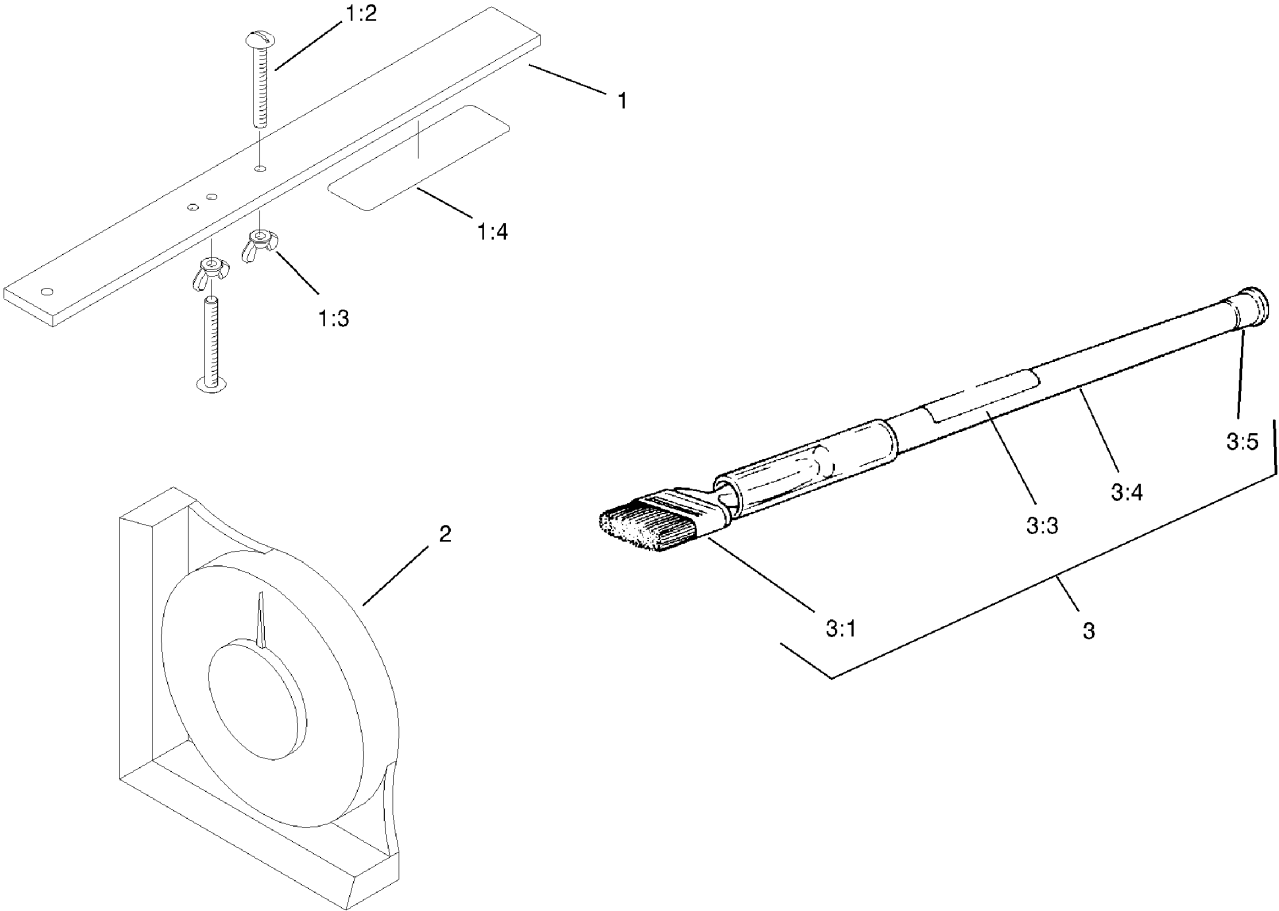

Gauge Bar, Angle Indicator and Brush Assembly

Ref	Part No.	Qty.	Description				
1	98-1852	1	Gauge Bar ASM				
1:2	32122-54	2	Screw-Head, Truss				
1:3	32103-3	2	Nut-Wing				
1:4	98-7976	1	Decal-Bar, Gauge				
2	99-3503	1	Indicator-Angle				
3	29-9100	1	Brush And Handle ASM				
3:1	36-4310	1	Brush				
3:3	12-9140	1	Decal-Body, Front				
3:4	29-9080	1	Handle				
3:5	2410-18	1	Cap-Plastic				

NOTES

NOTES

