



# Multi Pro® 5800-G Turf Sprayer

Model No. 41394—417400000 and Up

## Addendum

Maintenance Service Interval	Maintenance Procedure	Part No.	Qty	Description
After the first 8 hours	Torque the wheel-lug nuts.	-	-	-
	Check the fan/alternator belt.	-	-	-
After the first 50 hours	Change the engine oil filter.	-	-	-
	Change the engine oil (including synthetic oil).	121-6392	1	Premium Engine Oil 10w30 (55 Gallon Drum)
		121-6393	1	Premium Engine Oil 10w30 (5 Gallon Pail)
	Check the fuel lines and connections.	-	-	-
	Change the planetary-gear-drive lubricant.	108-1591	1	85W-140 Gear Lubricant (Quart)
After the first 200 hours	Pack the front wheel bearings.	-	-	-
Before each use or daily	Inspect the seat belt(s) for wear, cuts, and other damage. Replace the seat belt(s) if any component does not operate properly.	-	-	-
	Check the tire air pressure.	-	-	-
	Check the brakes.	-	-	-
	Check the tank straps.	-	-	-
	Clean the suction filter.	-	-	-
	Clean the pressure filter.	-	-	-
	Check the air cleaner.	-	-	-
	Check the engine oil.	-	-	-
	Check the coolant level.	-	-	-
	Check the hydraulic-fluid level.	-	-	-
After each use	Clean the sprayer.	-	-	-
	Condition the spray system at the end of each daily use.	-	-	-
Every 50 hours	Lubricate the pump.	108-1190	1	Premium All Purpose Grease
	Lubricate all grease fittings.	108-1190	1	Premium All Purpose Grease
	Grease the steering and suspension.	108-1190	1	Premium All Purpose Grease
	Check the battery-cable connections.	-	-	-
Every 100 hours	Lubricate the boom hinges.	108-1190	1	Premium All Purpose Grease
	Replace the air-filter element.	-	-	-



Maintenance Service Interval	Maintenance Procedure	Part No.	Qty	Description
	Torque the wheel-lug nuts.	-	-	-
	Inspect the condition and wear of the tires.	-	-	-
	Check the fan/alternator belt.	-	-	-
Every 200 hours	Change the engine oil filter. Change the filter more often when operating the machine under heavy load or in high temperatures.	-	-	-
	Change the engine oil (including synthetic oil). Change the oil more often when operating the machine under heavy load or in high temperatures.	121-6392	1	Premium Engine Oil 10w30 (55 Gallon Drum)
		121-6393	1	Premium Engine Oil 10w30 (5 Gallon Pail)
	Check front wheel toe-in.	-	-	-
	Inspect all hoses and connections for damage and proper attachment.	-	-	-
	Clean the radiator fins.	-	-	-
	Clean the flow meter (more often when using wettable powders).	-	-	-
Every 400 hours	Grease the actuator-rod bearings.	108-1190	1	Premium All Purpose Grease
	Perform yearly engine maintenance.	-	-	-
	Check the fuel lines and connections.	-	-	-
	Service the fuel filter.	-	-	-
	Drain and clean the fuel tank.	-	-	-
	Pack the front wheel bearings.	-	-	-
	Check the planetary-gear-drive lubricant.	-	-	-
	Check the coolant (as directed by the manufacturer) and change if necessary.	-	-	-
	Inspect the O-rings in the valve assemblies and replace them if necessary.	-	-	-
	Change the suction filter.	130-7096	1	Suction Filter
	Change the pressure filter.	131-3791	1	Pressure Filter
	Inspect the nylon pivot bushings.	-	-	-
	Inspect the pump diaphragms and replace if necessary (see an authorized Toro distributor).	-	-	-
	Inspect the pump check valves and replace if necessary (see an authorized Toro distributor).	-	-	-

Maintenance Service Interval	Maintenance Procedure	Part No.	Qty	Description
Every 800 hours	Change the planetary-gear-drive lubricant. or yearly, whichever comes first.	108-1591	1	85W-140 Gear Lubricant (Quart)
	If you are not using the recommended hydraulic fluid or have ever filled the reservoir with an alternative fluid, replace the hydraulic filter.	75-1310	1	Hydraulic Filter
	If you are not using the recommended hydraulic fluid or have ever filled the reservoir with an alternative fluid, change the hydraulic fluid.	108-1177	1	Premium All Season Hydraulic Fluid (55 Gallon Drum)
		108-1178	1	Premium All Season Hydraulic Fluid (5 Gallon Pail)
Every 1,000 hours	Check the PCV valve.	-	-	-
	If you are using the recommended hydraulic fluid, replace the hydraulic filter.	75-1310	1	Hydraulic Filter
Every 2,000 hours	If you are using the recommended hydraulic fluid, change the hydraulic fluid.	108-1177	1	Premium All Season Hydraulic Fluid (55 Gallon Drum)
		108-1178	1	Premium All Season Hydraulic Fluid (5 Gallon Pail)
Yearly	Calibrate the agitation-bypass valve.	-	-	-

