



Count on it.

Form No. 3470-669 Rev B

Parts Catalog

46cm

Lawn Mower

Model No. 20949—Serial No. 324000000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Deck and Bag Assembly 4

Engine and Blade Assembly 6

Suspension and Wheel Assembly 8


Handle Assembly 10

Shroud, Flywheel and Fuel Assembly 12

Crankcase Assembly 14

Carburetor, Muffler, Air Cleaner and Valve Cover Assembly 16


Deck and Bag Assembly

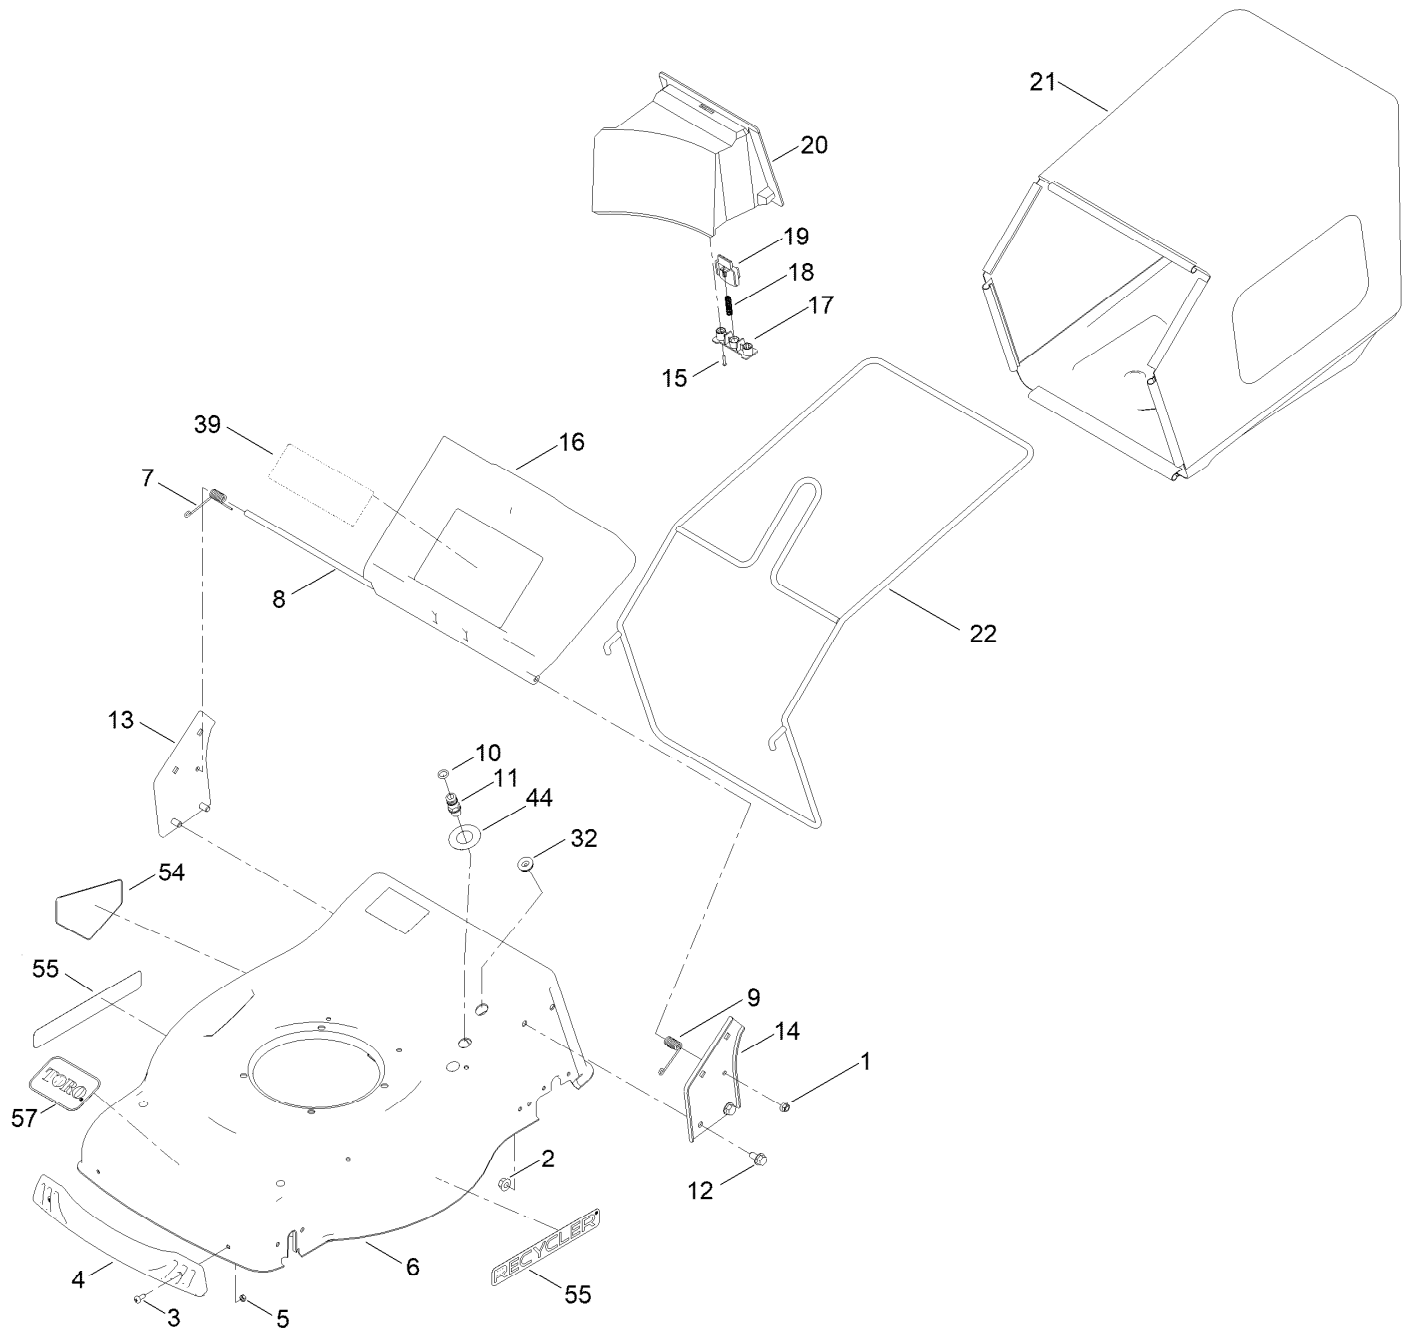

Deck and Bag Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	134-0117	2	Nut-Lock, Flange	16	134-0132	1	Deflector-Rear
2	134-0118	4	Nut-Lock, Flange	17	134-0133	1	Pressing Board-Lock Button, Mulch
3	134-0119	2	Screw-Tooth	18	134-0134	1	Spring-Button, Mulch
4	134-0120	1	Bumper-Front	19	134-0135	1	Lock-Button, Mulch
5	134-0121	2	Nut-Lock	20	134-0136	1	Plug-Mulch
6	134-0122	1	Deck	21	162-0756	1	Grass Bag Toro
7	134-0123	1	Spring-Twist, RH	22	134-0138	1	Frame-Bag, Grass
8	134-0124	1	Rod-Spring, Rear Deflector	32	134-0148	1	Sheath-Cable, Protective
9	134-0125	1	Spring-Twist, LH	39	134-0084	1	Decal-Safety
10	134-0126	1	O-Ring	44	134-3615	1	Decal-Port, Washout
11	134-0127	1	Port-Wash	54	111-9826	1	Decal-Danger
12	134-0128	4	Bolt-HH, Flange	55	140-4184	2	Decal
13	134-0129	1	Bracket-Handle, RH	57	140-4183	1	Decal
14	134-0130	1	Bracket-Handle, LH				
15	134-0131	2	Screw-Self Driving				


Engine and Blade Assembly

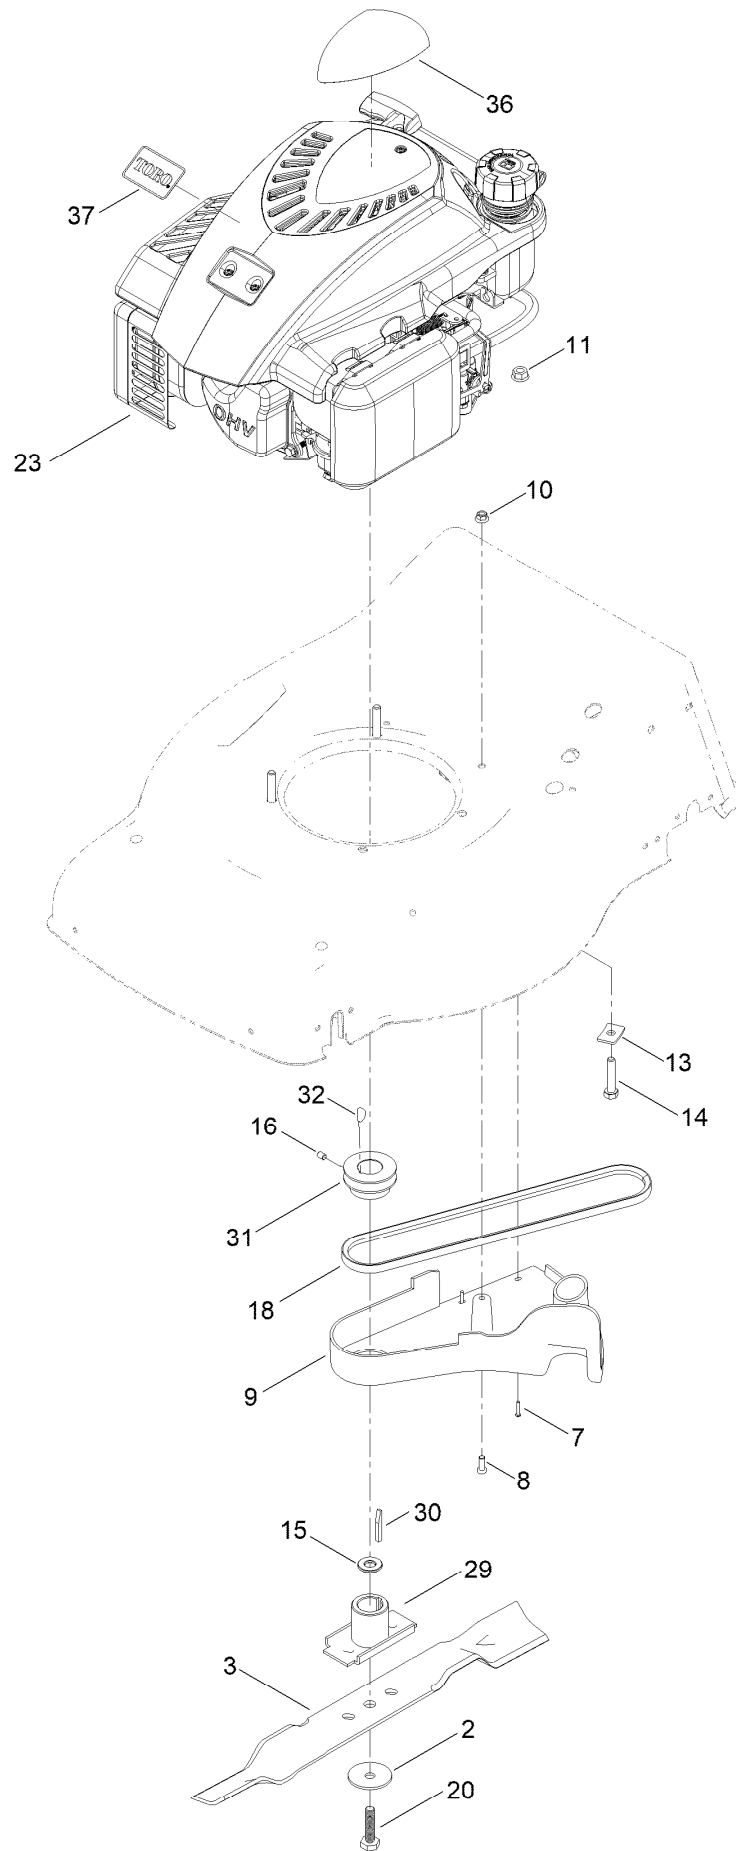

Engine and Blade Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	134-2016	1	Washer-Dished	16	134-0161	1	Screw-Grub
3	162-1117	1	Blade - 46CM	18	134-0163	1	Belt-Triangle
7	134-0155	2	Screw-Self Driving	20	134-0164	1	Bolt-Blade
8	134-0156	1	Screw-Tooth	23	147-7103	1	Engine-1P65Fc, Recoil
9	134-0157	1	Cover-Pulley, Belt	29	134-0171	1	Support-Blade
10	134-0117	1	Nut-Lock, Flange	30	134-0172	1	Key-Flat
11	134-0118	3	Nut-Lock, Flange	31	134-0173	1	Pulley-Drive
13	134-0158	3	Washer-Square	32	134-0174	1	Key-Woodruff
14	134-2011	3	Bolt-Blade	36	162-0738	1	Decal - Engine
15	134-0160	1	Sheath-Blade	37	121-2396	1	Decal

Suspension and Wheel Assembly

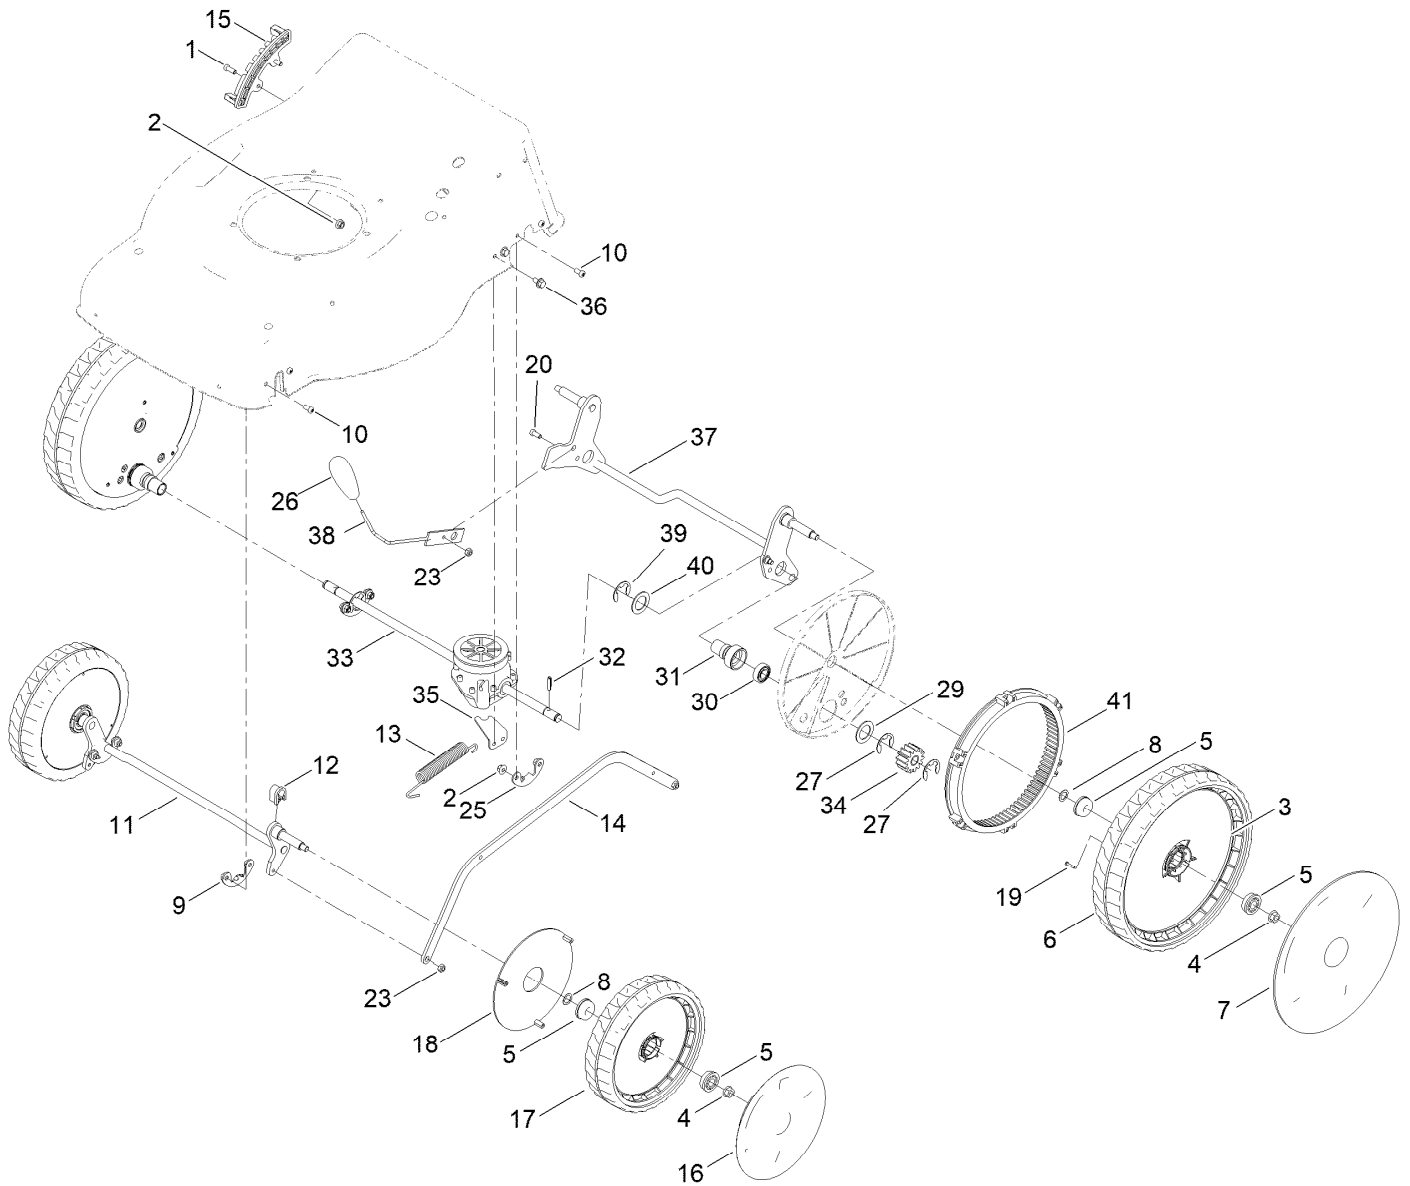


Suspension and Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	134-0156	2	Screw-Tooth	20	134-0189	1	Screw-Pan, Cross
2	134-0117	6	Nut-Lock, Flange	23	134-0190	3	Nut-Lock
3	162-0755	2	Cap-Hub 7"	25	134-0191	2	Ring-Fixed
4	134-0118	4	Nut-Lock, Flange	26	134-0192	1	Handle-Lever, HOC
5	134-0176	8	Bearing	27	134-0197	4	Washer-Spring
6	134-8650	2	Wheel ASM	28	134-0198	1	Gear Output ASM-RH ●
7	134-0178	2	Cover-Wheel, Dustproof	29	134-0199	2	Washer-Flat
8	134-0179	4	Washer-Wave	30	134-0200	2	Bearing
9	134-0180	2	Clamp-Axle, Fixed	31	134-0201	2	Sheath-Bearing
10	134-0181	8	Screw-Tooth	32	134-0202	2	Pin-Cylindrical
11	134-0182	1	Front Wheel Axis ASM	33	134-0203	1	Gearbox
12	134-0183	2	Ring-Fixed	34	134-0204	1	Gear Output ASM-LH
13	134-0184	1	Spring-Tension	35	134-0205	1	Bracket-Location
14	134-0185	1	Bracket-Connecting, HOC	36	134-0206	2	Bolt-HH, Flange
15	134-0186	1	Board-Adjuster, HOC	37	134-0207	1	Rear Axle Shaft ASM
16	162-0754	2	Cap-Hub 8"	38	134-0208	1	Handle ASM
17	134-0188	2	Wheel ASM (8)	39	134-0209	2	Washer-Spring
18	134-0212	2	Cover-Wheel, Dustproof	40	134-0210	1	Washer
19	134-0131	6	Screw-Self Driving	41	134-0211	2	Gear Ring

● Not illustrated


Handle Assembly

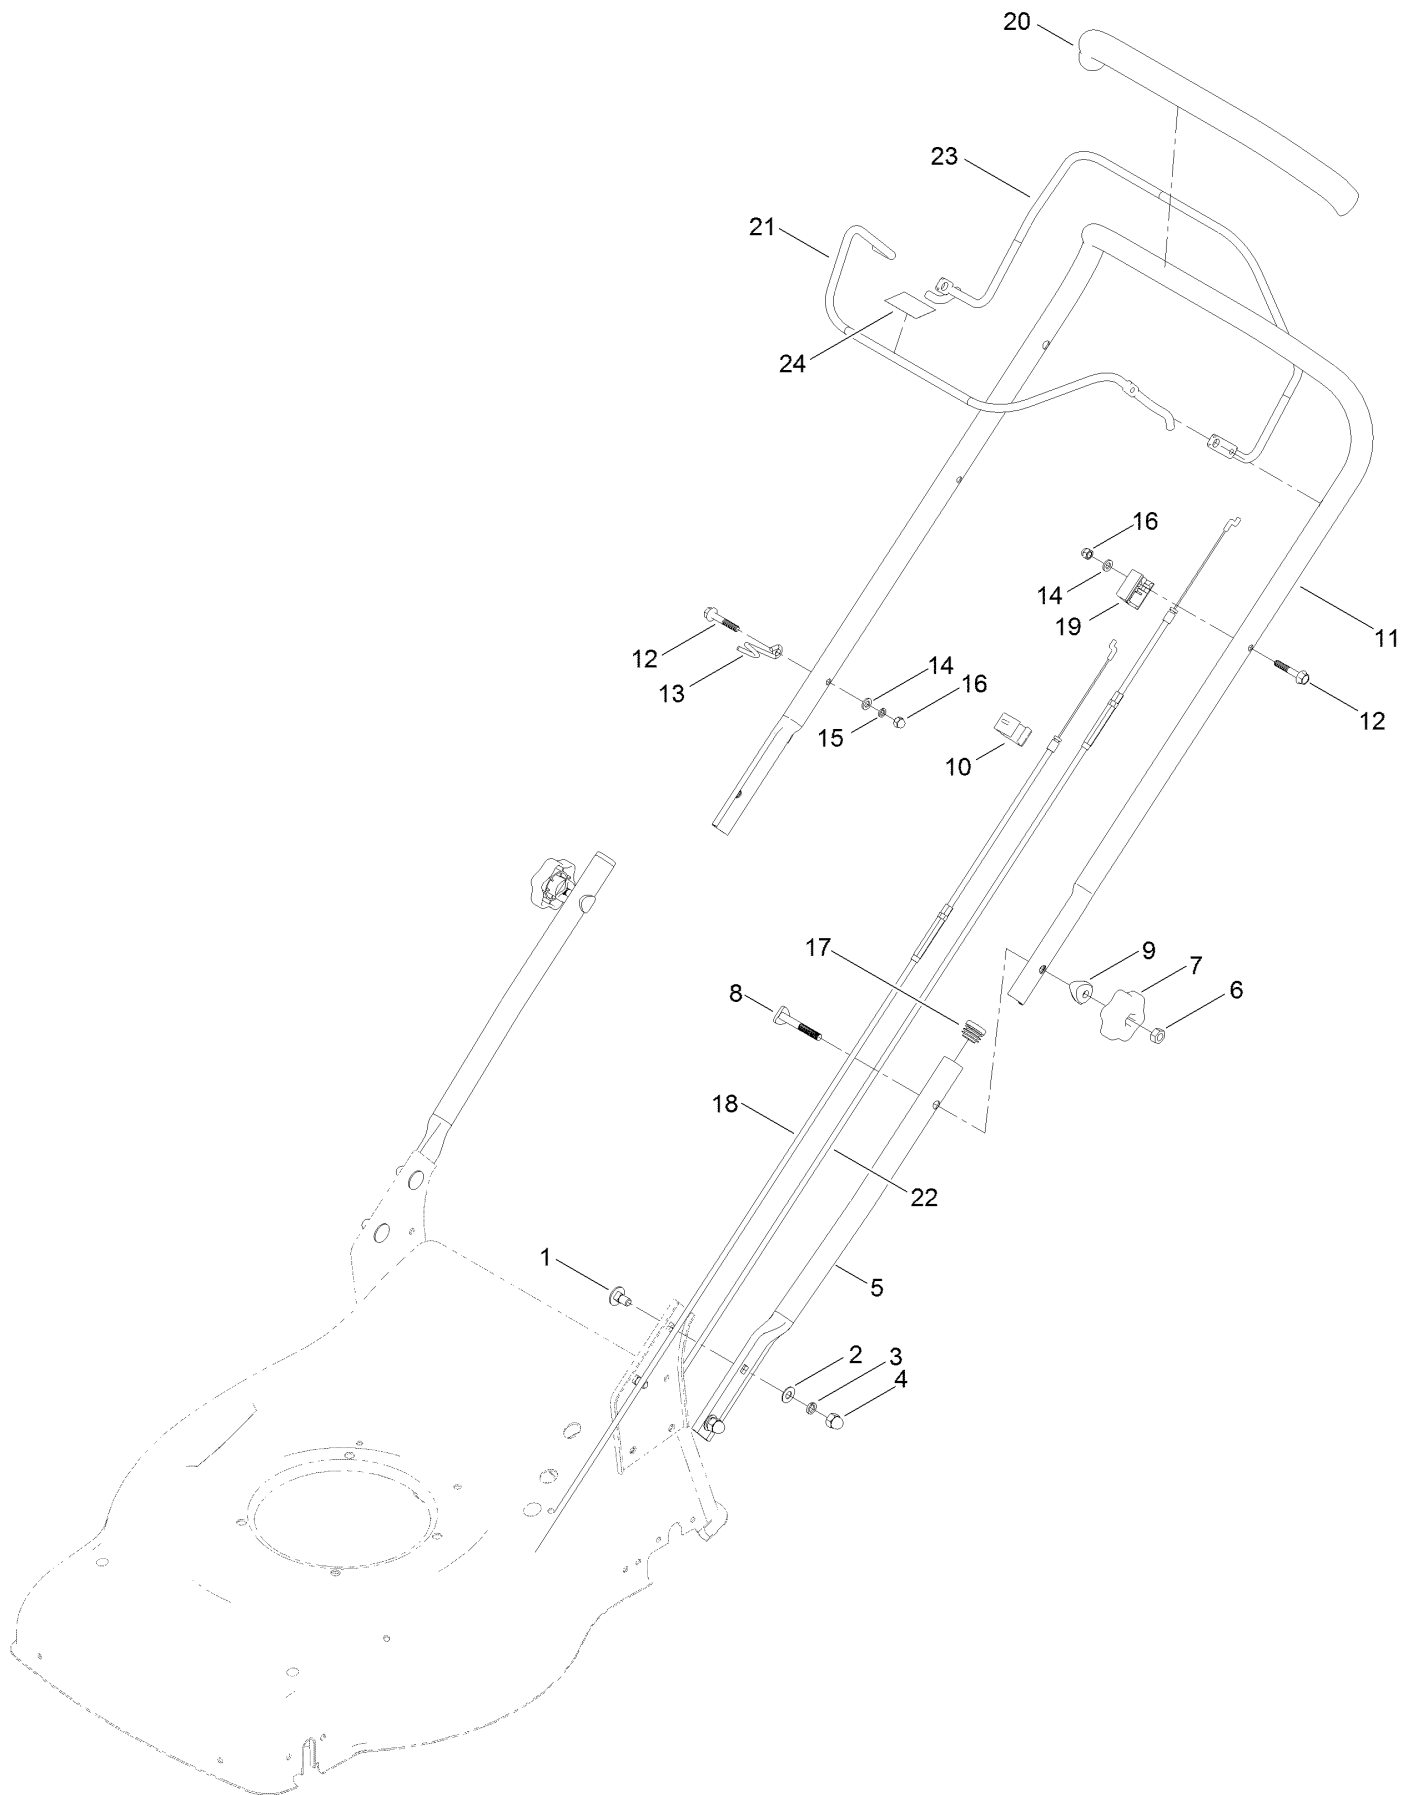

Handle Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	134-0219	4	Bolt	13	134-0231	1	Hook-Cable
2	09475	4	Washer	14	09472	2	Washer-Plain
3	03469	4	Washer-Spring	15	09474	1	Washer-Spring
4	134-0222	4	Nut-Lid	16	134-0234	2	Nut-Lid
5	134-0223	2	Handlebar-Lower	17	134-0235	2	Plug-Tube
6	134-0224	2	Nut-Hex	18	134-0236	1	Cable-Brake, Engine
7	134-0225	2	Knob-Rotary	19	134-0237	1	Cable-Block, Fixed
8	134-0226	2	Bolt-Flat Head	20	134-0238	1	Grip-Handle
9	134-0227	2	Washer-Curve	21	134-0239	1	Lever-Engine
10	134-0228	1	Cable Clamp	22	134-0240	1	Cable-Clutch
11	134-0229	1	Handlebar-Upper	23	134-0241	1	Lever-Clutch, Gearbox
12	134-0230	2	Bolt-HH, Flange	24	H295159	1	Decal-Stop


Shroud, Flywheel and Fuel Assembly

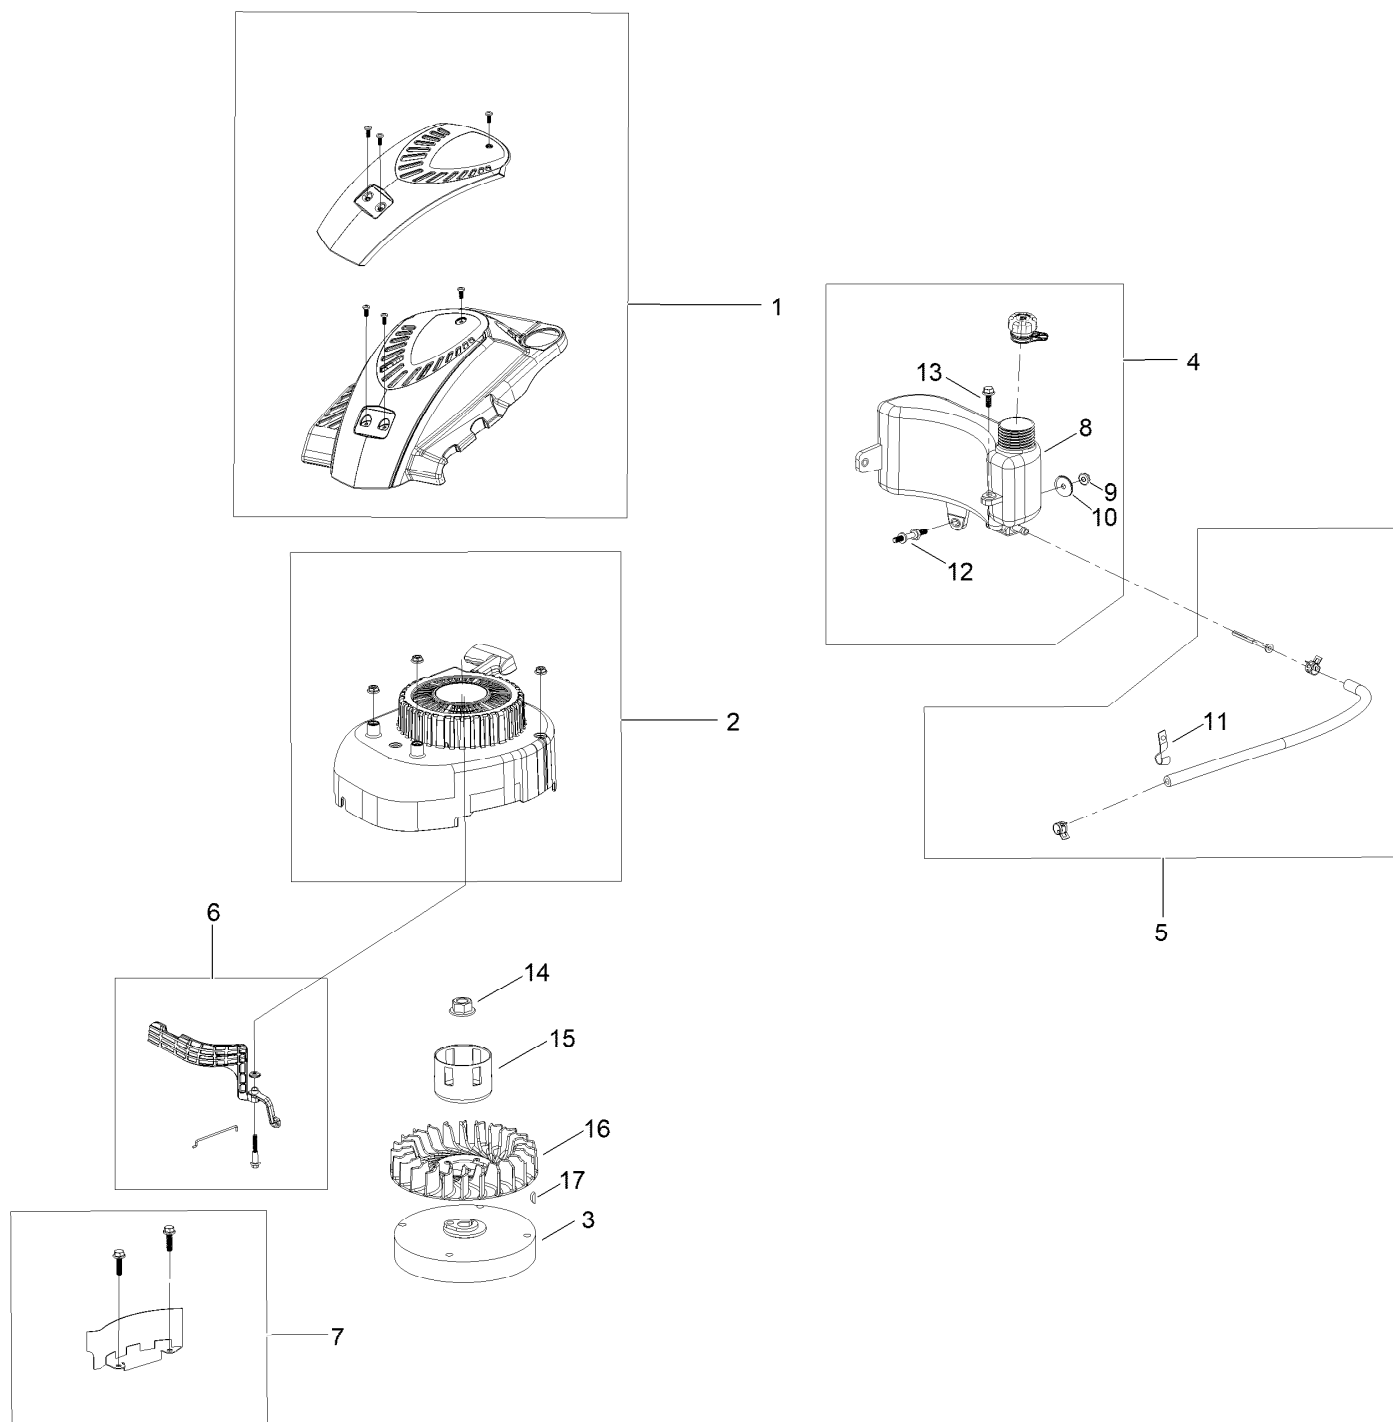

Shroud, Flywheel and Fuel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-1990	1	Shroud ASM	9	121-0010	1	Nut-Flange
2	121-4160	1	Recoil And Blower Shroud Kit	10	121-0203	1	Washer-Flat
3	147-7106	1	Flywheel	11	121-0017	1	Clip-Harness, Wire
4	144-1019	1	Cap-Fuel	12	121-0016	1	Bolt-Stud
5	121-4167	1	Fuel Line Kit	13	121-0007	1	Bolt-Flange
6	121-4168	1	Air Vane Kit	14	121-0047	1	Nut-Flange
7	119-1994	1	Flywheel Shield Kit	15	121-0035	1	Cup-Starter
8	121-4164	1	Tank-Fuel	16	120-4480	1	Fan
				17	120-4320	1	Key-Woodruff


Crankcase Assembly

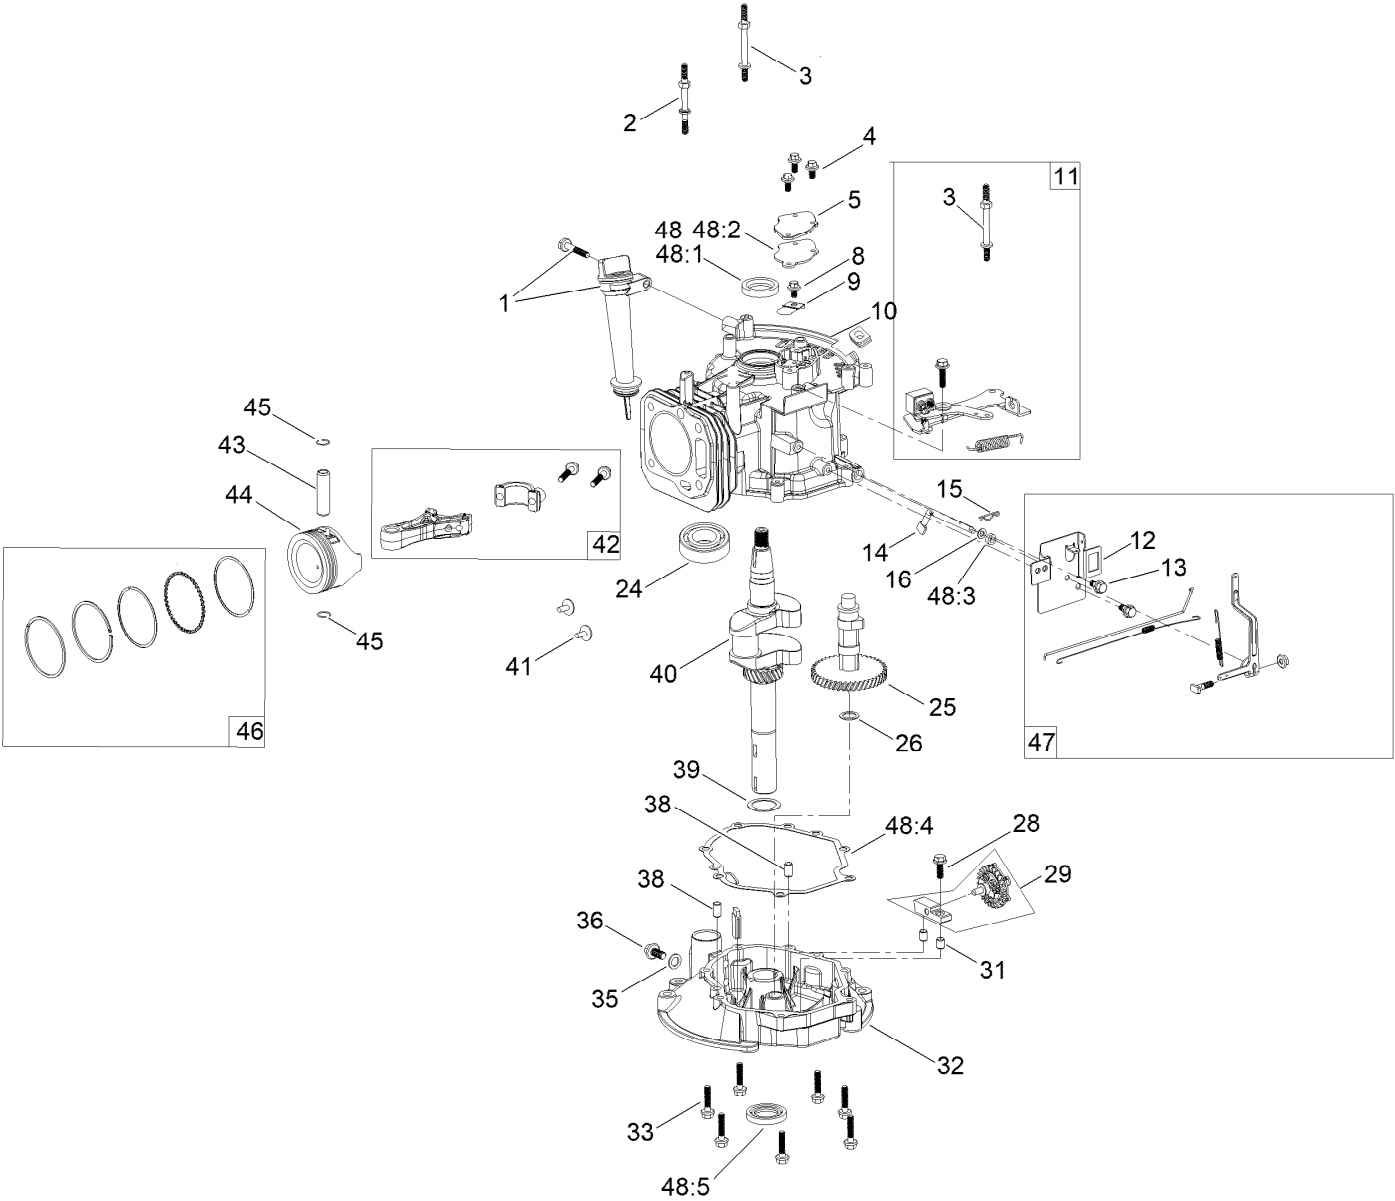

Crankcase Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-4279	1	Dipstick And Fill Tube Kit	32	121-0031	1	Cover-Crankcase
2	121-0058	1	Bolt-Stud	33	121-0040	7	Bolt-Flange
3	121-0059	2	Bolt-Stud	35	121-0048	1	Washer-Plain
4	121-0044	3	Screw-HHF	36	121-0030	1	Screw-HHF
5	121-0032	1	Cover-Pump, Oil	38	121-0054	2	Pin-Dowel
8	121-0041	1	Bolt-Flange	39	136-7863	1	Washer-Flat
9	120-4263	1	Valve-Reed	40	147-7105	1	Crankshaft ASM
10	121-0371	1	Crankcase	41	120-4477	2	Tappet-Valve
11	119-1991	1	Brake ASM Recoil Kit	42	120-4469	1	Connecting Rod ASM
12	121-0026	1	Control ASM	43	120-4467	1	Pin-Piston
13	120-4216	2	Screw-HHF	44	121-4173	1	Piston
14	136-7865	1	Arm-Governor	45	121-0052	2	Clip-Pin, Wrist
15	120-4256	1	Pin-Hair	46	121-4171	1	Piston Ring Set
16	136-7866	1	Washer-Flat	47	119-1968	1	Governor Arm Kit
24	121-0056	1	Bearing-Ball	48	127-9144	1	Seal And Gasket Kit
25	121-4174	1	Camshaft ASM	48:1	121-0019	1	Seal-Oil
26	121-0051	1	Washer-Flat	48:2	121-0020	1	Gasket-Breather
28	121-0007	1	Bolt-Flange	48:3	121-0021	1	Seal-Oil
29	136-7903	1	Governor Gear ASM	48:4	120-4459	1	Gasket-Cover, Case
31	121-0055	2	Pin-Dowel	48:5	121-0022	1	Seal-Oil

Carburetor, Muffler, Air Cleaner and Valve Cover Assembly

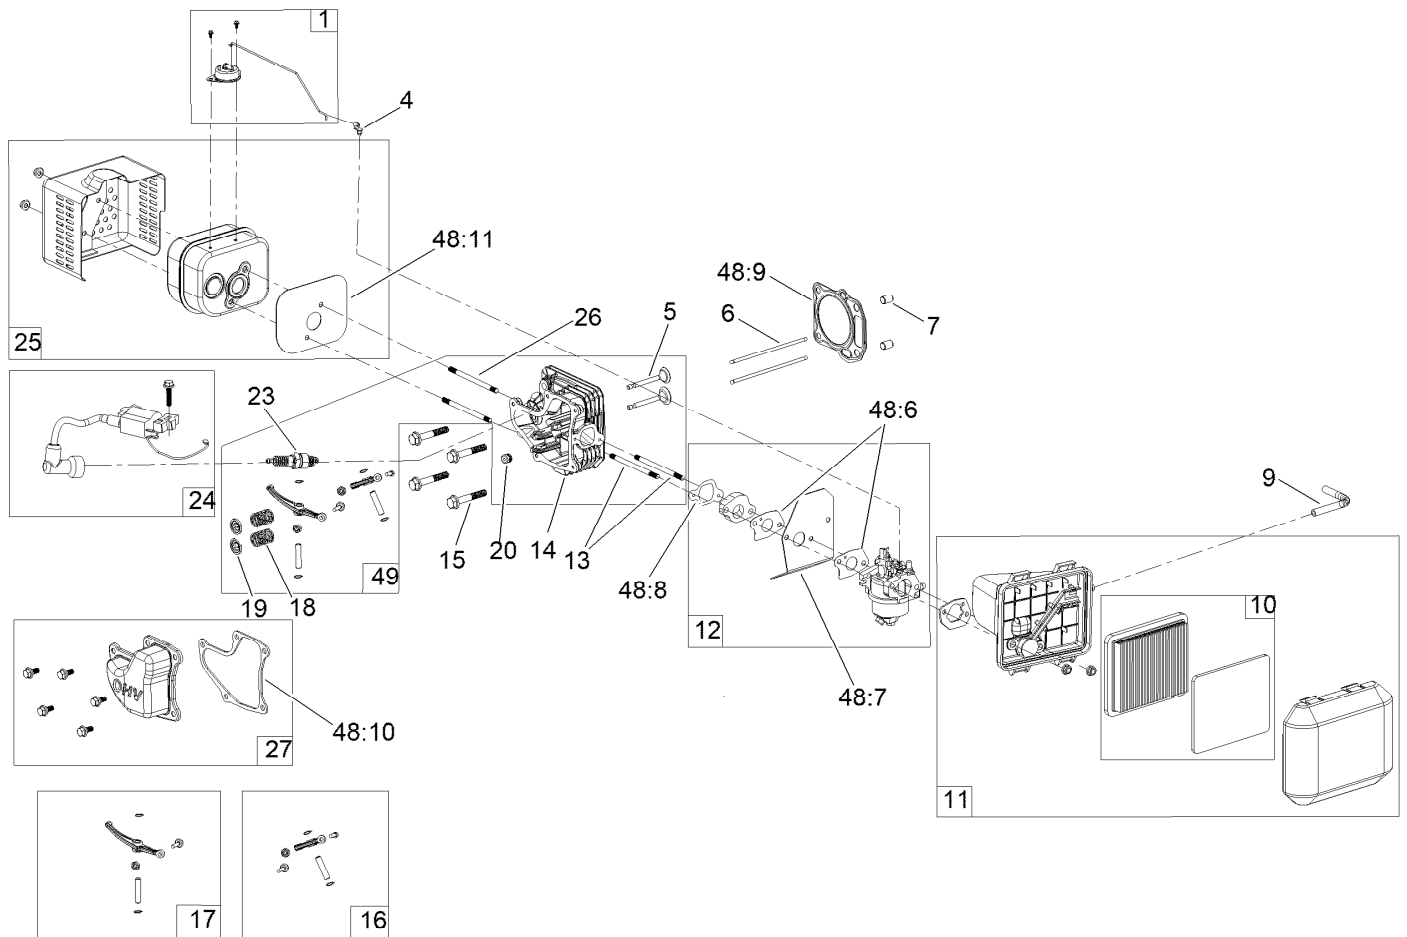

Carburetor, Muffler, Air Cleaner and Valve Cover Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-4175	1	Thermal Control Kit	23	121-4199	1	Spark Plug
4	120-4451	1	Lock-Throttle	24	136-7912	1	Ignition ASM
5	121-4192	1	Valve Set	25	121-4277	1	Muffler And Shield Kit
6	121-4193	2	Rod-Push	26	121-0045	2	Stud-Exhaust
7	121-0053	2	Pin-Dowel	27	121-4188	1	Valve Cover Kit
9	119-1902	1	Tube-Breather	48	127-9144	1	Seal And Gasket Kit ●
10	119-1909	1	Air Filter And Prefilter Kit	48:6	121-4184	2	Gasket-Carburetor
11	121-4177	1	Air Cleaner ASM Kit	48:7	120-4446	1	Insulator-Carburetor
12	136-7907	1	Carb Replacement Kit	48:8	121-4183	1	Gasket-Intake
13	121-0367	2	Stud-Intake	48:9	121-4197	1	Gasket-Head
14	121-4194	1	Head-Cylinder	48:10	121-4190	1	Gasket-Valve Cover
15	121-0043	4	Bolt-Flange	48:11	121-0034	1	Gasket-Exhaust
16	136-7869	1	Intake Rocker Arm ASM	49	136-7915	1	Complete Head ASM ●
17	136-7868	1	Exhaust Rocker Arm ASM	50	127-9146	1	Internal Carb Kit With Gaskets ●
18	120-4473	2	Spring-Valve				
19	120-4474	2	Retainer-Valve, Spring	99	121-4242	1	High Altitude Kit ●
20	121-4202	1	Seal-Stem, Valve				

● Not illustrated

Notes:

Notes:



Count on it.