



Form No. 3476-247 Rev A

Count on it.

Parts Catalog

96in Air Cool Z Master[®] Professional Riding Mower

Model No. 74090—Serial No. 418324029 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

 
In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Frame Assembly	4
Mainframe Assembly No. 142-2671	6
ROPS Assembly	8
Roll-Over Protection System Assembly No. 116-0231	10
Caster Fork and Wheel Assembly	12
Hydraulic Drive Assembly	14
RH Hydro Assembly No. 135-7910	16
LH Hydro Assembly No. 135-7909	18
Pump Idler Assembly No. 116-1255	20
Rear Wheel Assembly	22
Park Brake Assembly	24
Fuel System Assembly	26
Fuel Tank Assembly No. 135-0643	28
Seat Mounting Assembly	30
Seat Assembly No. 147-4984	32
Motion Control Assembly	34
Fender, Console and Control Assembly	36
RH Console Assembly No. 115-7400	38
LH Console Assembly No. 115-7401	40
Electrical Assembly	42
Electrical Harness Assembly No. 142-8168	44
Deck Lift Assembly	46
Power Unit Assembly No. 146-5089	48
Engine Assembly	50
Hood and Oil Cooler Assembly	52
Frame Decal Assembly	54
Deck and Discharge Tunnel Assembly	56
Discharge Tunnel Assembly	58
LH Deck Assembly	60
LH Wing Deck Decal Assembly No. 146-3903	62
Rear Caster Wheel Assembly	64
Caster Fork and Wheel Assembly	66
RH Deck Assembly	68
RH Wing Deck Decal Assembly No. 146-3904	70
Center Deck Belt Drive Assembly	72
Idler Assembly No. 126-9435	74
Idler Assembly No. 126-9438	76
Deck Idler Assembly No. 126-1720	78
Center Deck Hydraulic and Electrical Assembly	80
Center Deck Fold Assembly	82
Center Deck Cutting Assembly	84
Attachments and Accessories	86


Frame Assembly

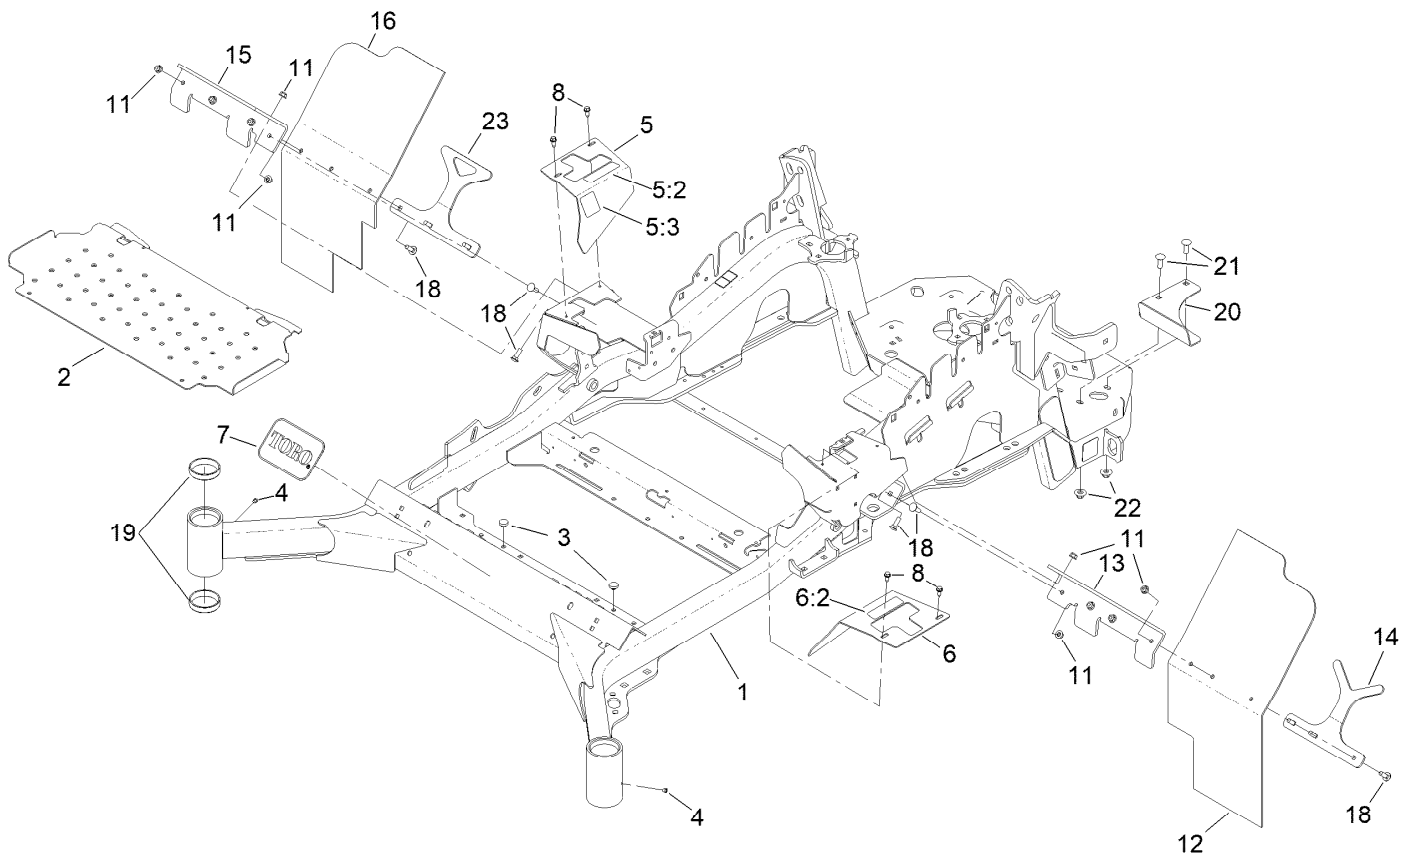

Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-2671	1	Mainframe ASM	11	104-8300	10	Nut-HF, NI
2	142-2872-01	1	Floor Pan	12	135-4947	1	Mud Flap
3	1-513658	2	Bumper	13	135-4950-03	1	Bracket-Mud Flap, LH
4	1-811010	2	Plug	14	135-4952-03	1	Support-Mud Flap, Rear
5	116-5899	1	RH Motion Control Cover ASM	15	135-4955-03	1	Bracket-Mud Flap, RH
5:2	99-8936	1	Decal-Control, Motion	16	135-4957	1	Mud Flap
5:3	116-5988	1	Decal-Park Brake, CE	18	3230-2	10	Bolt-CARR
6	116-0580	1	LH Motion Control Cover ASM	19	1-543508	4	Cup-Bearing
6:2	99-8936	1	Decal-Control, Motion	20	142-2927-01	1	Shield-Heat
7	68-3640	1	Decal	21	3231-22	2	Screw-CARR
8	32144-10	4	Screw-HWH	22	109-6658	2	Nut-Flange, NI
				23	142-3344-03	1	Support-Mud Flap RH

 Mainframe Assembly No. 142-2671

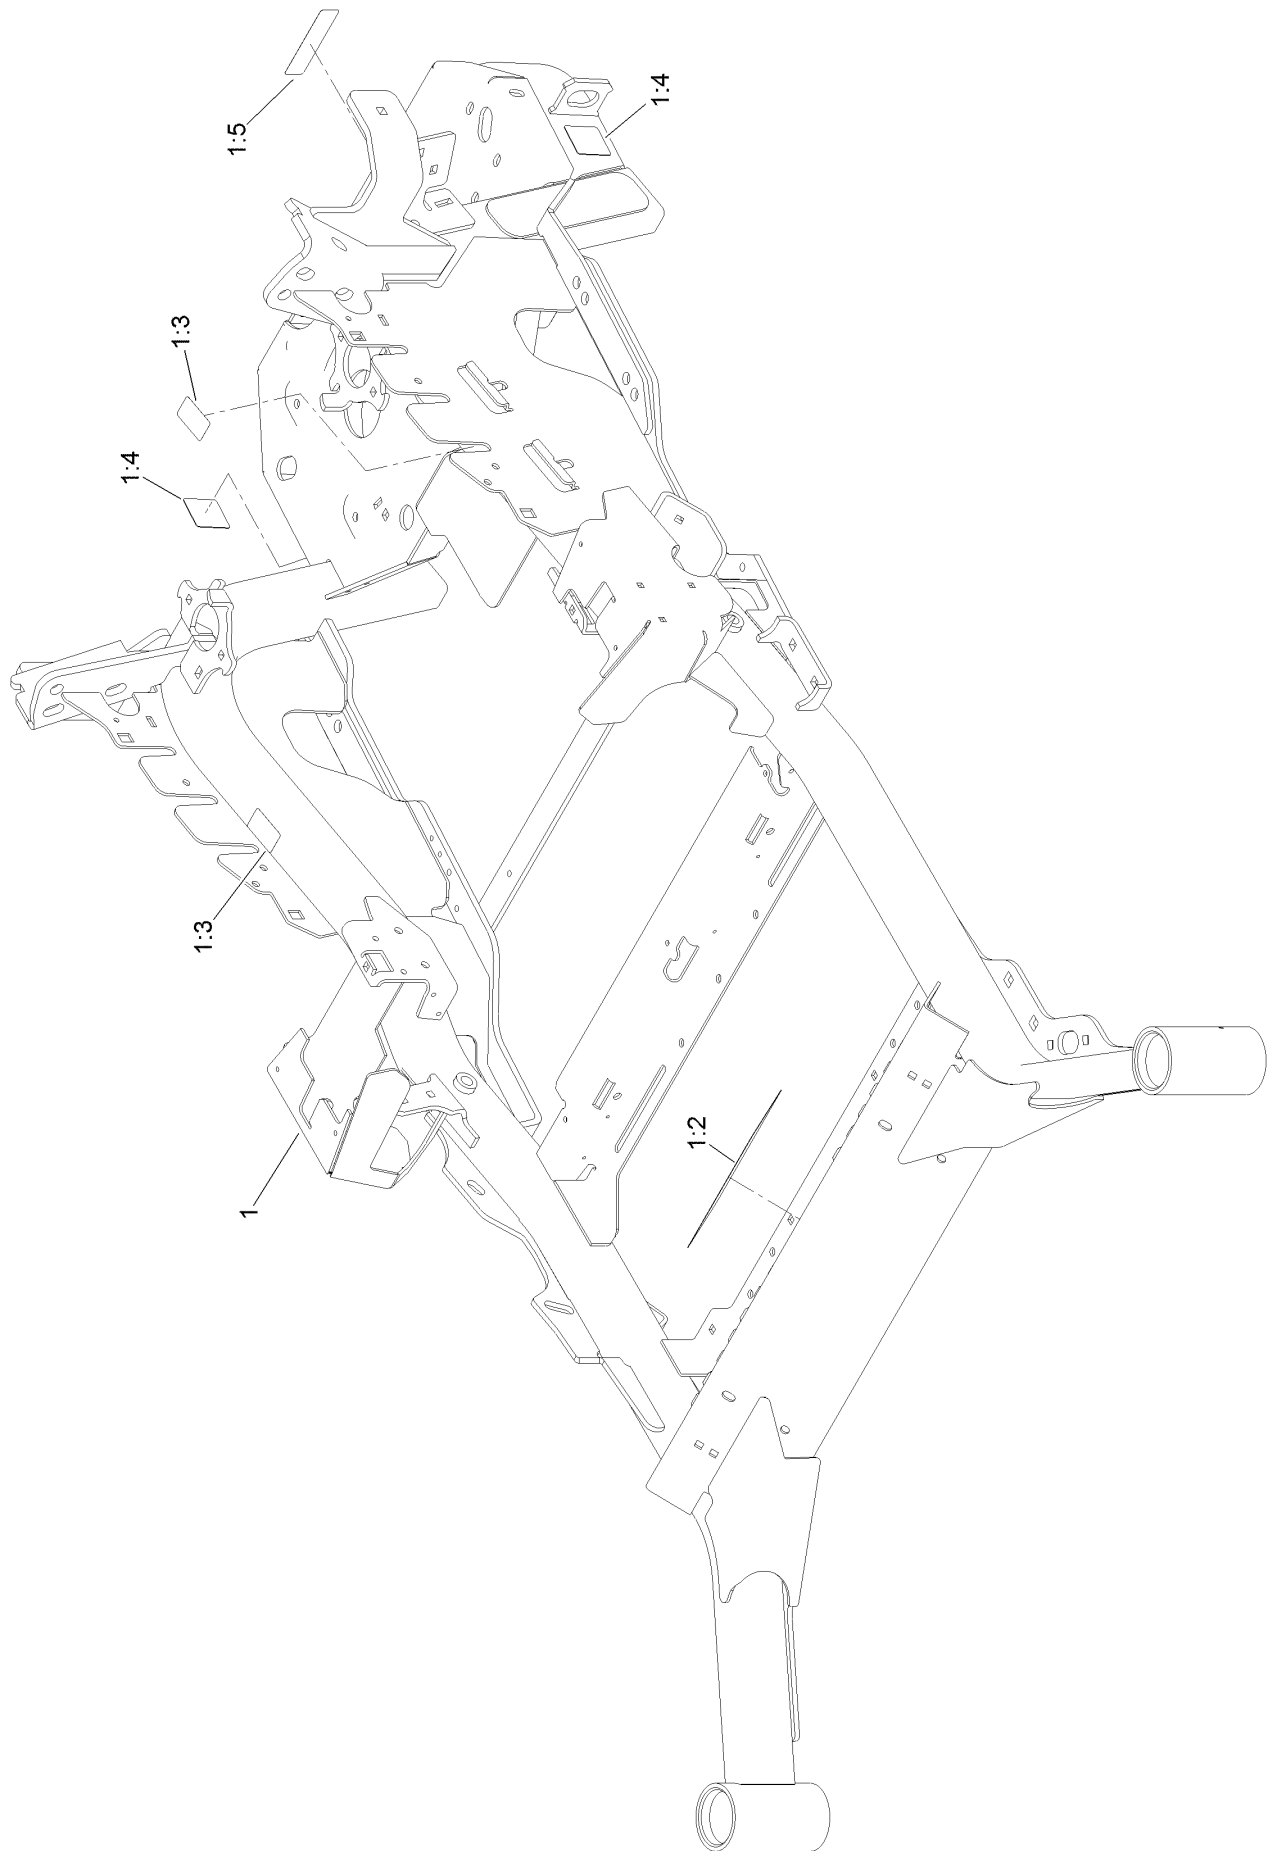


Mainframe Assembly No. 142-2671 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Mainframe ASM ●
1:2	132-0871	1	Decal-Danger
1:3	106-5517	2	Decal-Warning

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1:4	106-2655	2	Decal-Hazard, Pinched Finger
1:5	133-8062	1	Decal-Spark Arrestor

● Not serviced separately

 
ROPS Assembly

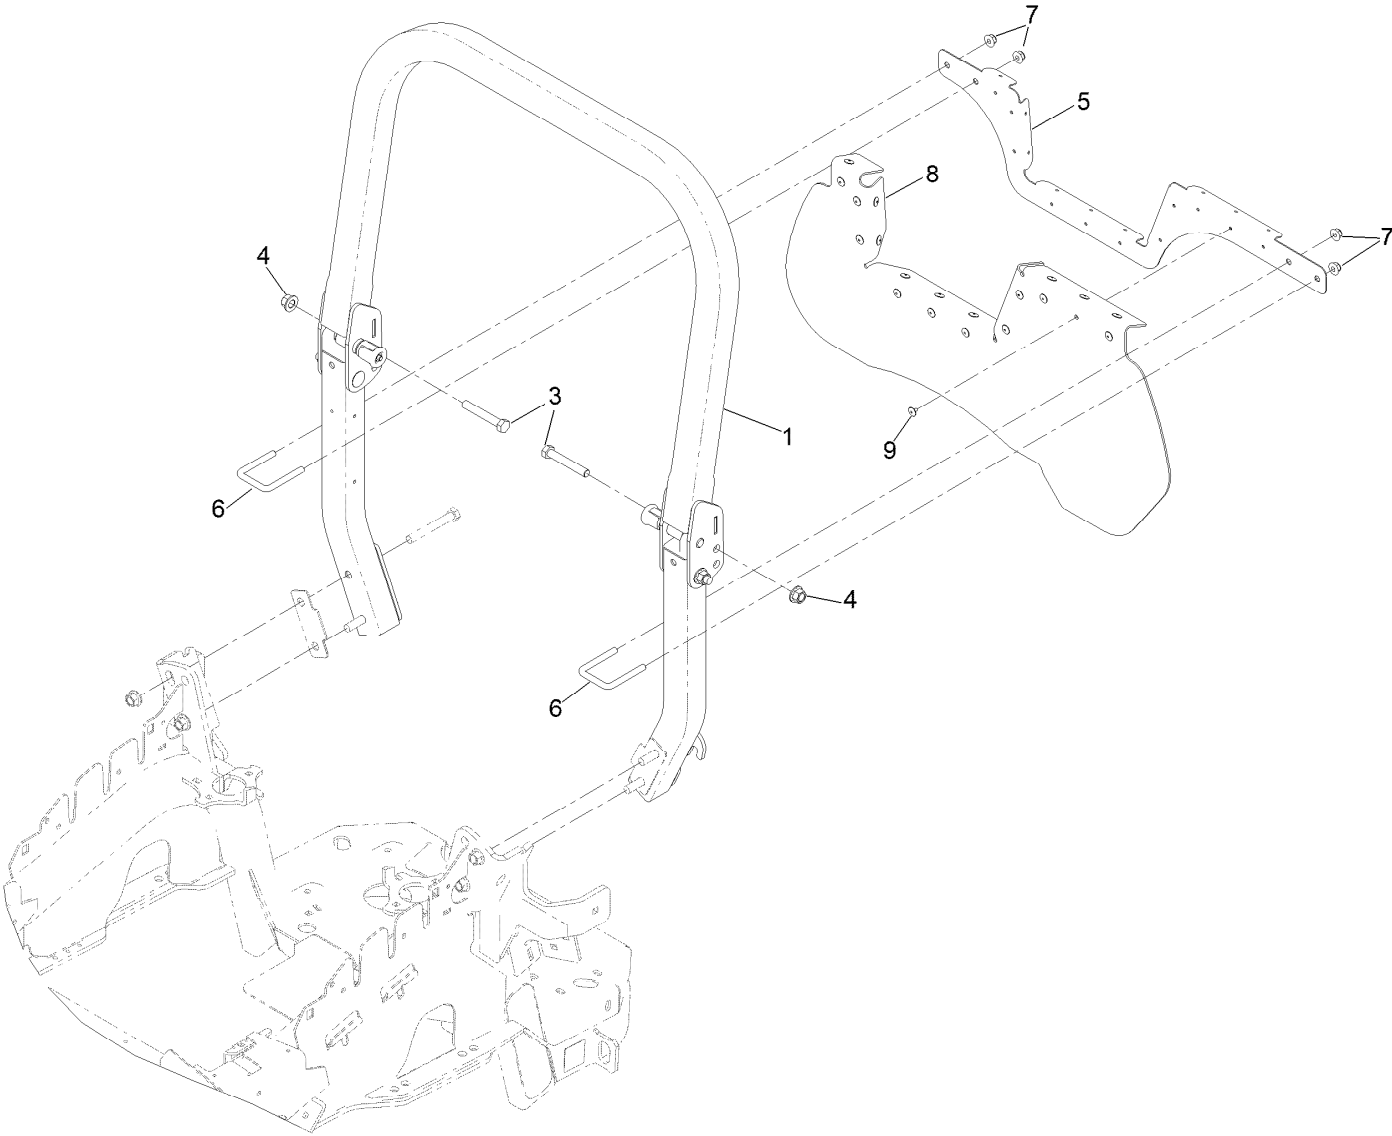

ROPS Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	116-0231	1	ROPS ASM	6	104-9082	2	U-Bolt
3	325-13	2	Screw-HH	7	104-8301	4	Nut-HF, NI
4	99-5107	2	Nut-Lock	8	142-3626	1	Air Dam, Hood
5	142-3625-03	1	Bracket, Air Dam	9	132-5064	22	Rivet-Pop

 Roll-Over Protection System Assembly No. 116-0231

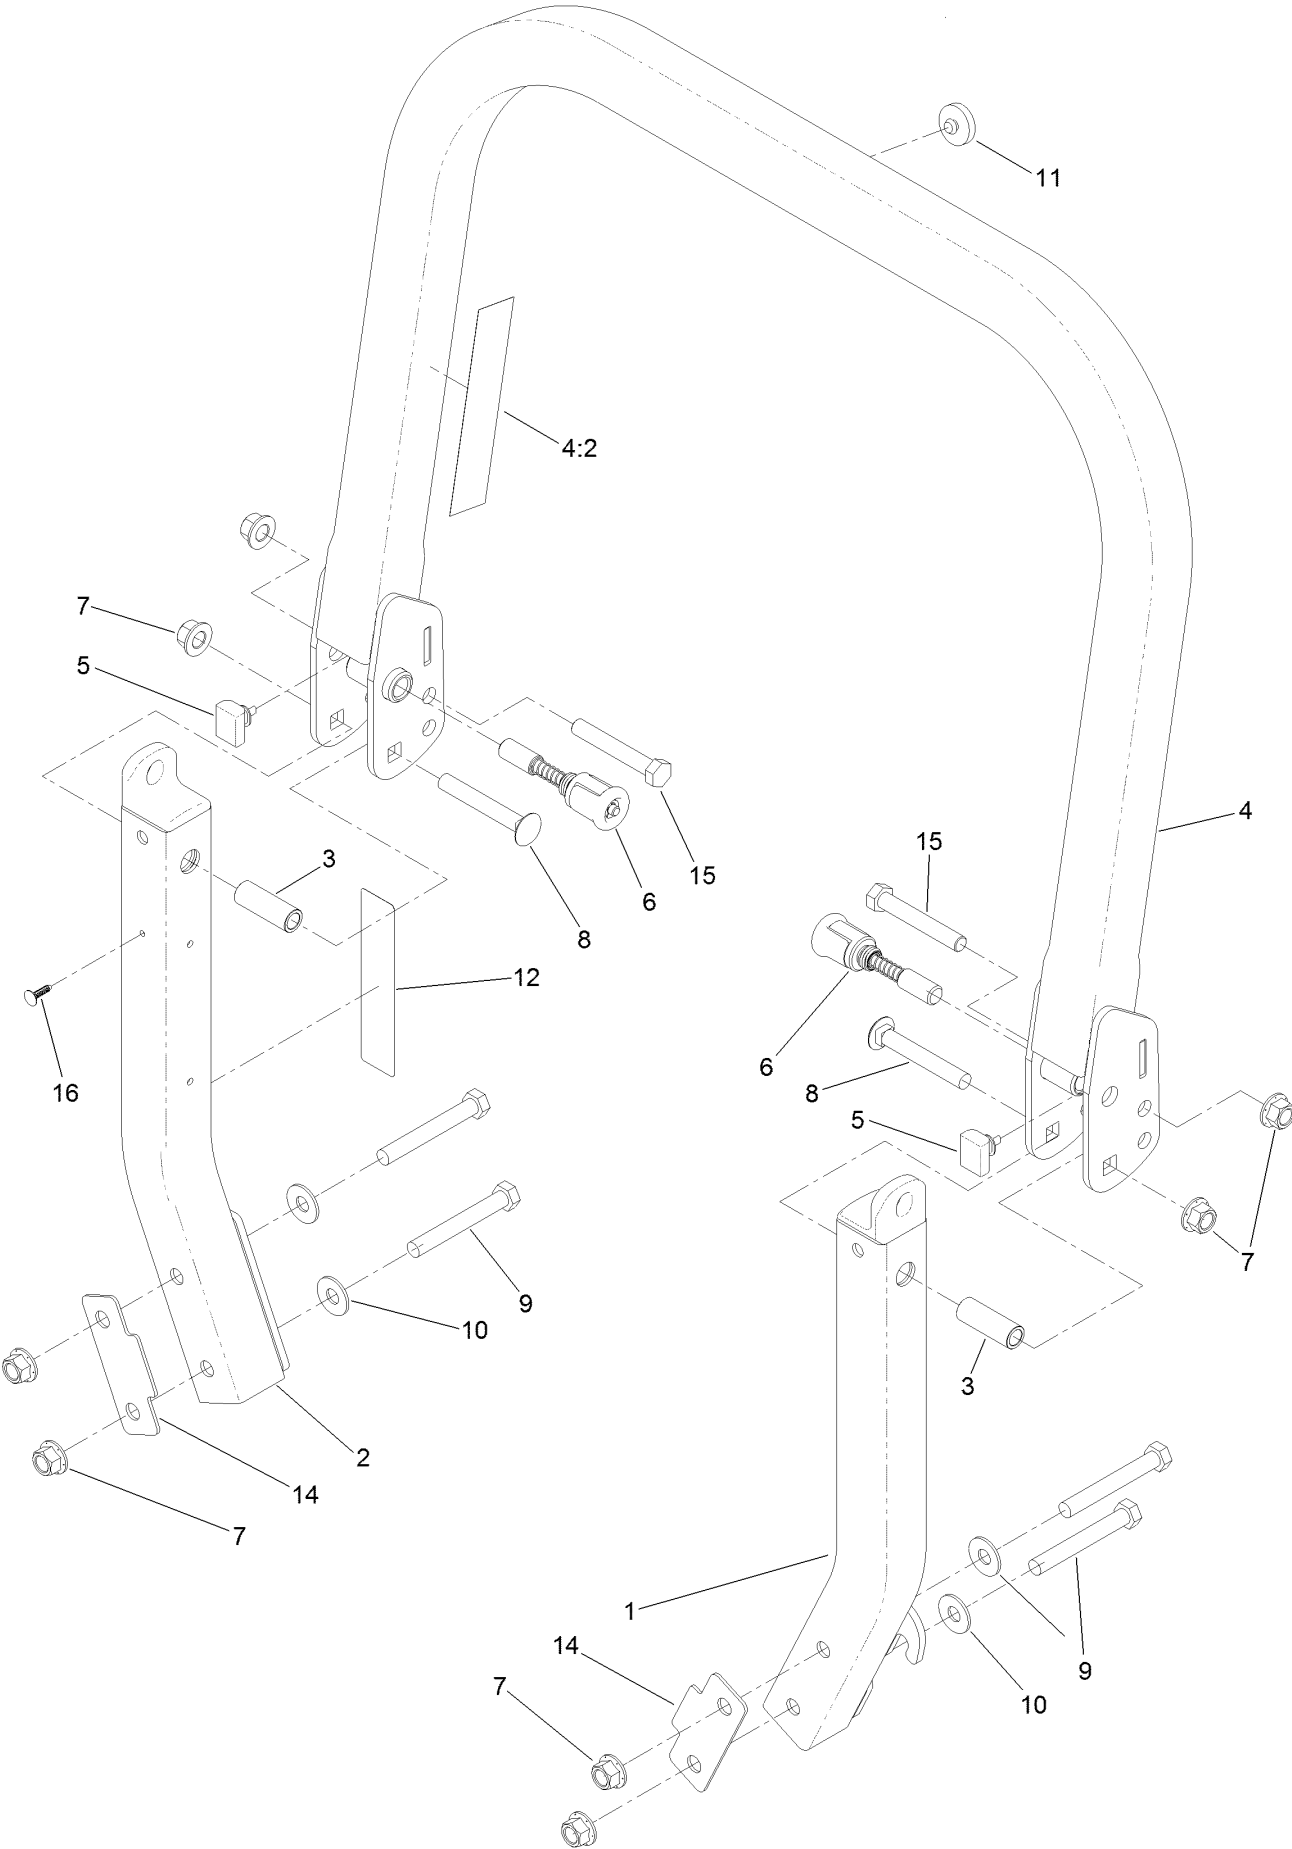


Roll-Over Protection System Assembly No. 116-0231 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Leg-ROPS, LH ●	8	3233-10	2	Screw-CARR
2		1	Leg-ROPS, RH ●	9	325-35	4	Screw-HH
3	109-6653	2	Spacer	10	109-9505	4	Washer-Spring
4		1	Upper ROPS ASM ●	11	109-9233	1	Bumper-Push-In, Rubber
4:2	107-3069	1	Decal-Warning	12	117-0346	1	Decal-Caution, Fuel Vent
5	109-5337	2	Bumper-ROPS	14	116-0960	2	Spacer
6	116-0104	2	Pin-Spring	15	325-13	2	Screw-HH
7	99-5107	8	Nut-Lock	16	125-8067	1	Plug-Plastic

● Not serviced separately

 Caster Fork and Wheel Assembly

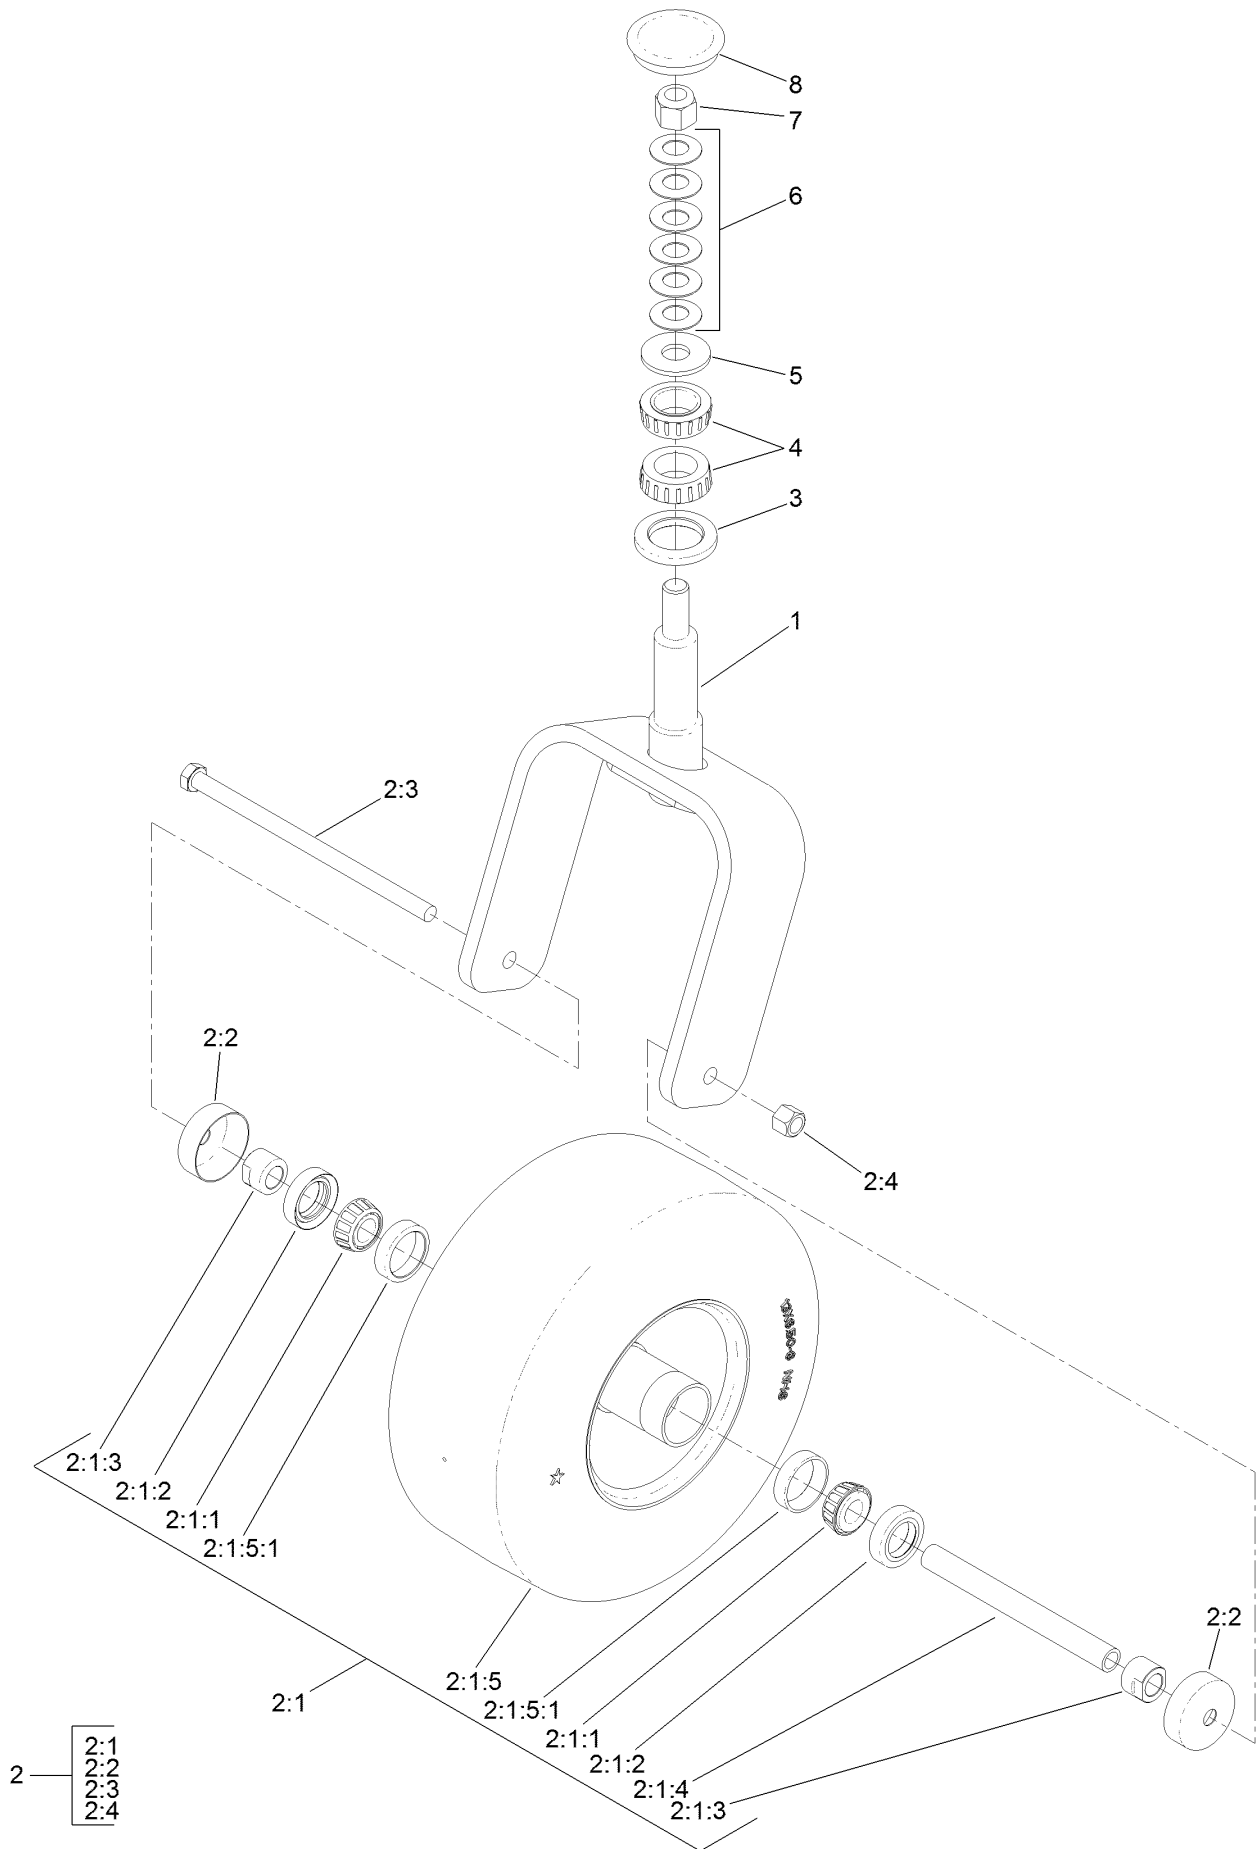

Caster Fork and Wheel Assembly (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-0750-01	1	Fork-Caster
2		1	Wheel And Axle ASM ●
2:1	127-9526	1	Wheel And Bearing ASM
2:1:1	1-633585	2	Bearing-Cone, Taper
2:1:2	103-0063	2	Seal-Caster
2:1:3	103-3051	1	Spacer-Nut ■
2:1:4	126-5361	1	Axle Caster ASM
2:1:5	127-9527	1	Wheel And Tire ASM
2:1:5:1	1-633584	2	Bearing-Cup

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2:2	103-2768	2	Guard-Seal
2:3	325-39	1	Screw-HH
2:4	3296-23	1	Nut-Lock, NI
3	135-0355	1	Seal-Grease
4	103-9028	2	Bearing-Roller, Cone Taper
5	3256-8	1	Washer-Flat
6	1-633508	6	Washer-Bellville
7	3296-51	1	Nut-Lock, NI
8	126-9369	1	Cap-Grease

● Not serviced separately

■ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

 Hydraulic Drive Assembly

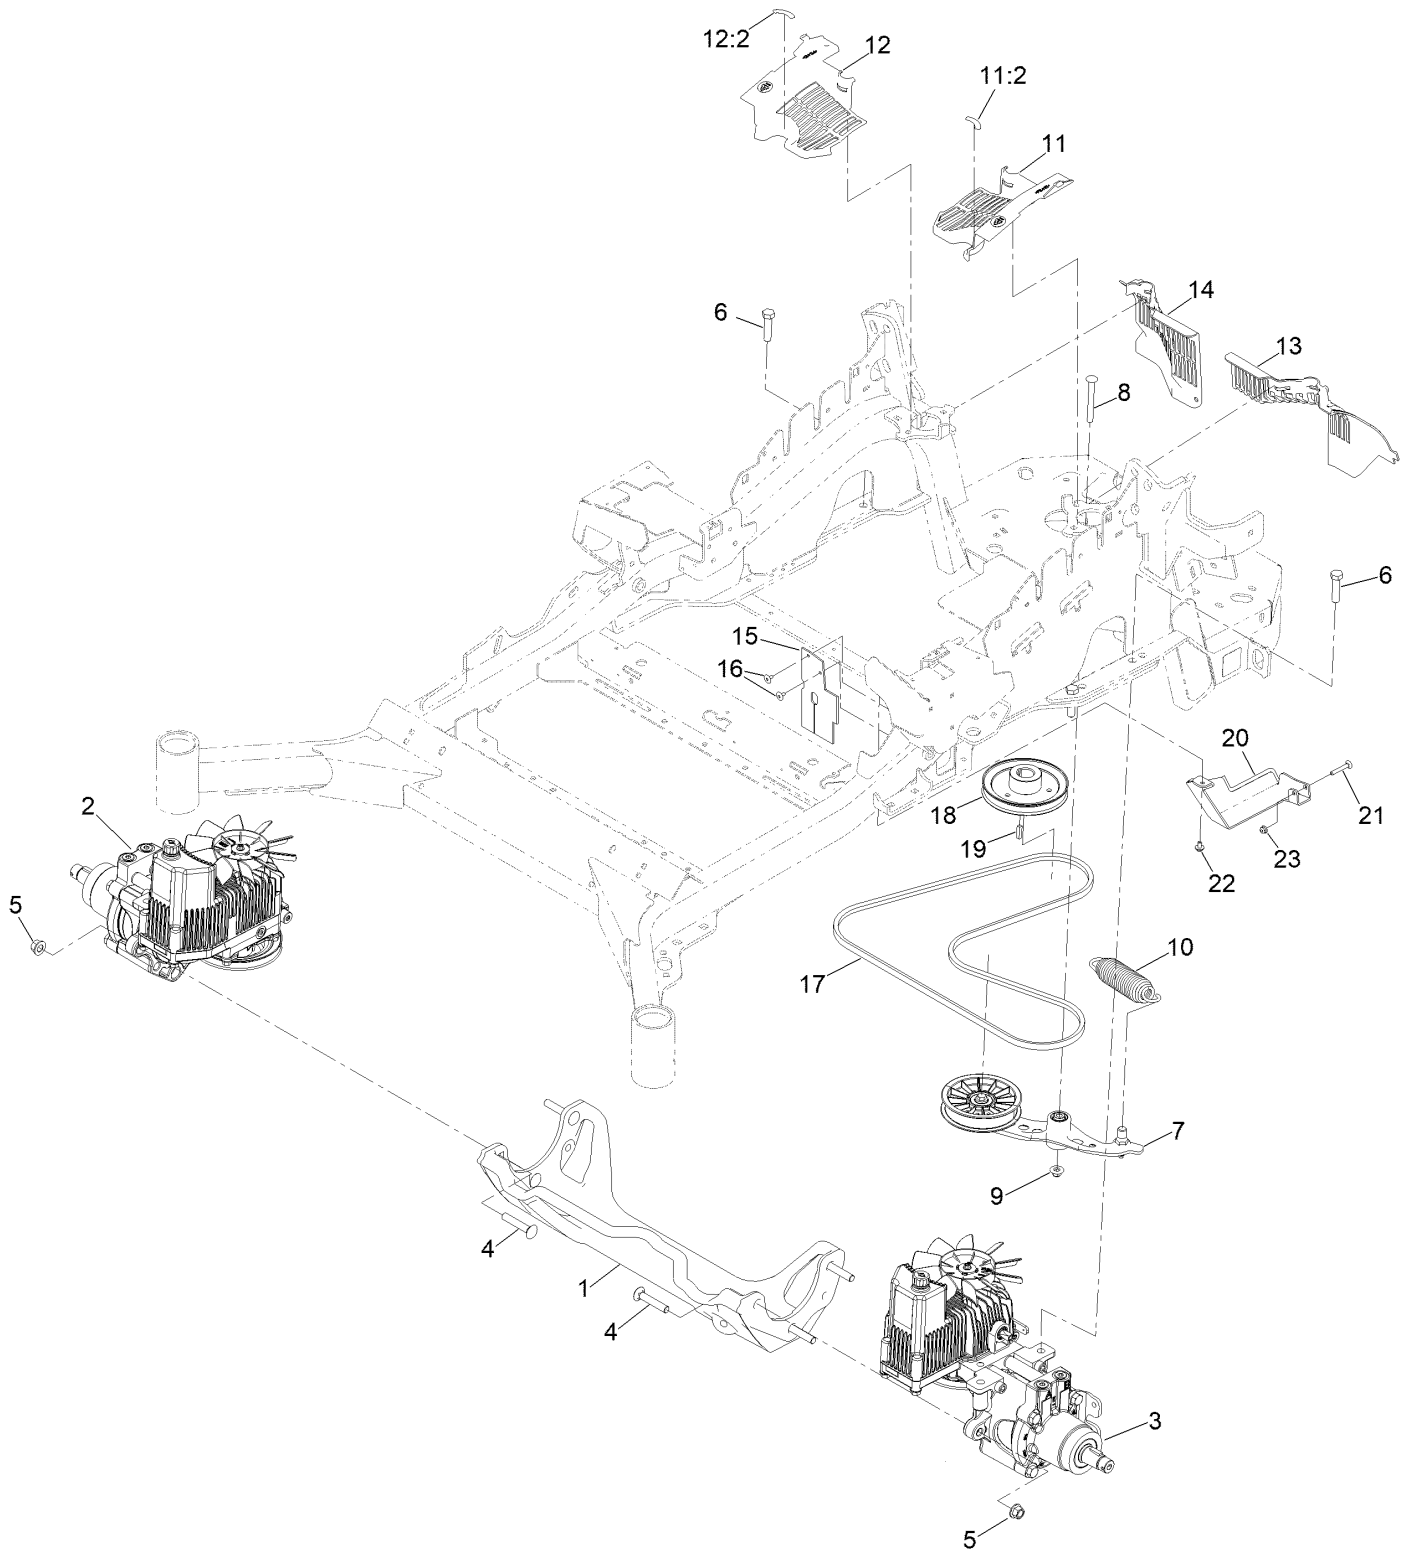


Hydraulic Drive Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	116-7558	1	Cradle-Hydro	14	109-9058	1	Guard-Hydro, Rear (RH)
2	135-7910	1	Hydro-RH	15	116-2362	1	Deflector-Air Flow
3	135-7909	1	Hydro-LH	16	1-803035	2	Rivet-Pop
4	126-0095	6	Screw-CARR	17	126-9835	1	Belt-V
5	99-5107	6	Nut-Lock	18	142-9445	1	Sheave, W/Hub
6	325-8	4	Screw-HH	19	1-807259	1	Key
7	116-1255	1	Pump Idler ASM	20	142-3469	1	Tank Guard Wldmnt
8	116-1502	1	Bolt-Shoulder, Carriage	21	3229-5	1	Screw-CARR
9	109-6658	1	Nut-Flange, NI	22	46-6810	1	Screw And Washer ASM
10	116-6317	1	Spring-Extension	23	104-7201	1	Nut-HF, NI
11	116-0170	1	LH Hydro Guard ASM	99	114-4713	1	Hypr-Oil 500 (Quart) ●
11:2	116-8726	1	Decal-Oil, Hydro	99	114-4714	1	Hypr-Oil 500 (Gallon) ●
12	116-0171	1	RH Hydro Guard ASM	99	114-4715	1	Hypr-Oil 500-5 (5 Gallon) ●
12:2	116-8726	1	Decal-Oil, Hydro	99	117-0390	1	Filter-Hydro ●
13	109-9709	1	Guard-Hydro, Rear Trim (LH)				

● Not illustrated

 RH Hydro Assembly No. 135-7910

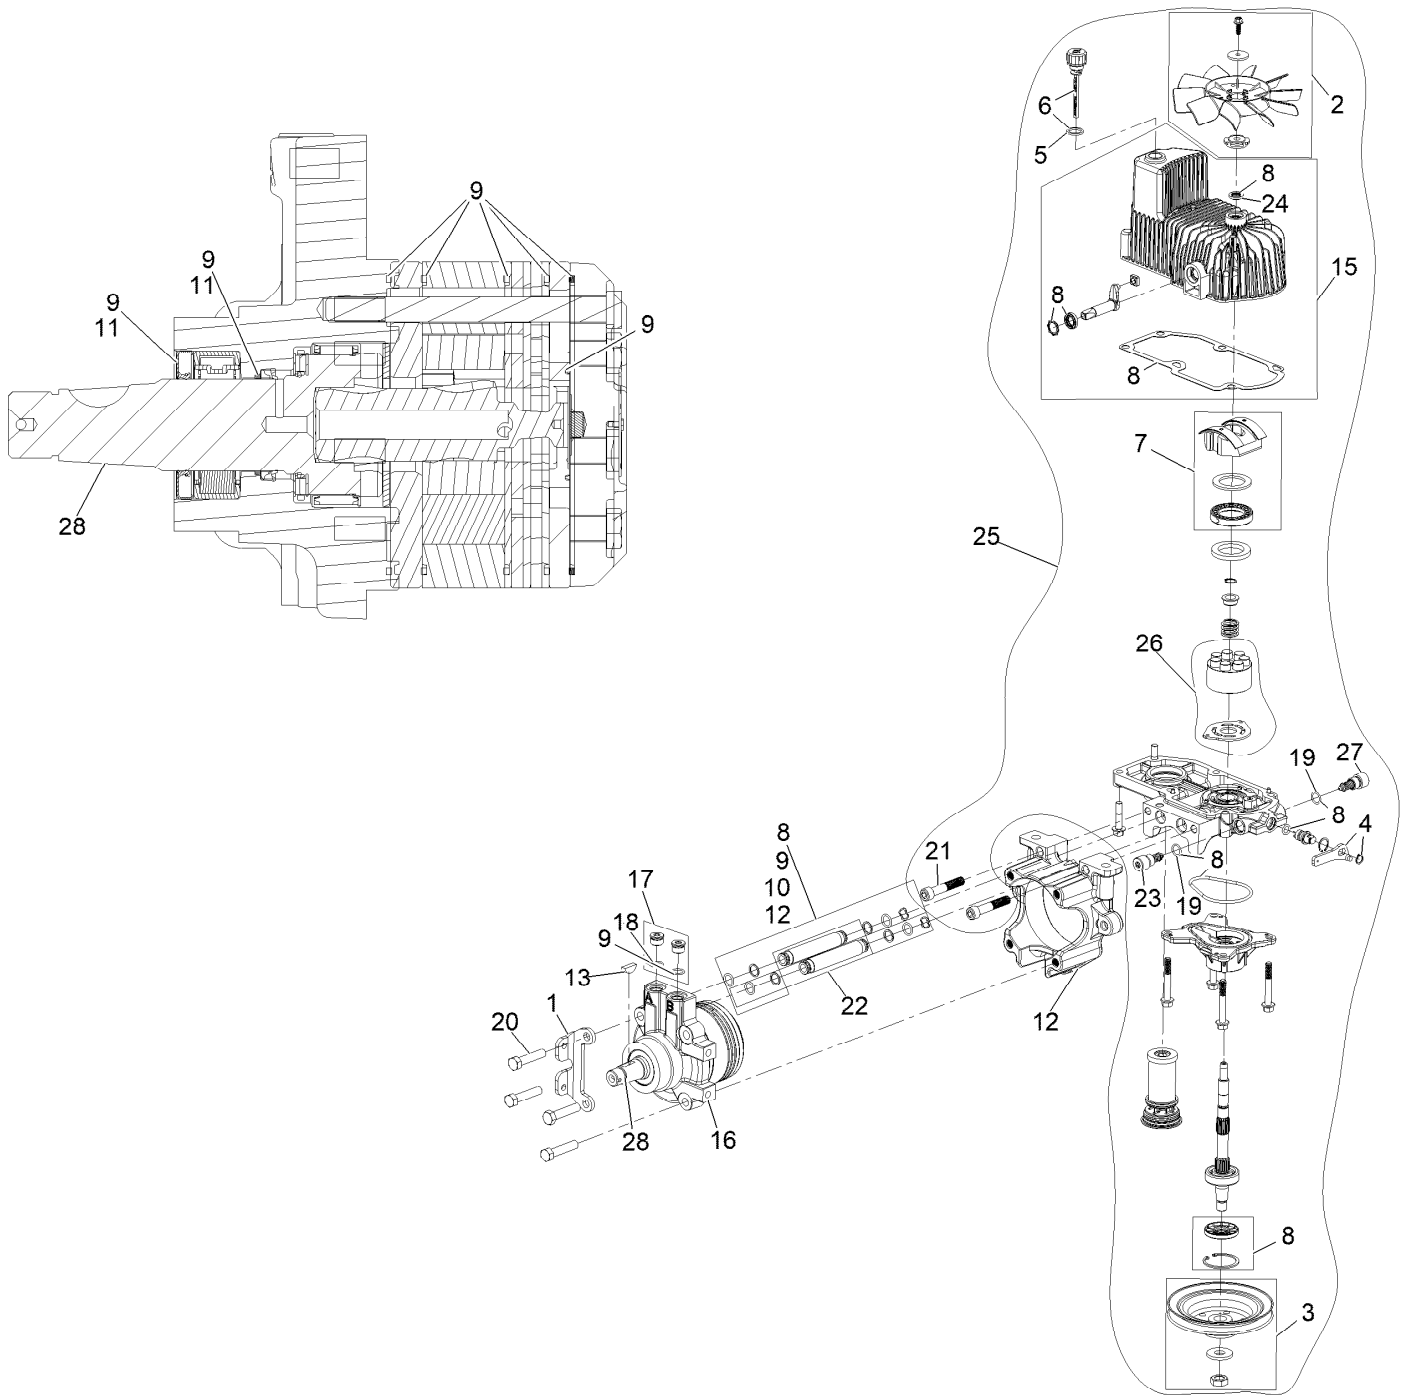


RH Hydro Assembly No. 135-7910 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-7827	1	Plate, Horse Shoe Mount	17	116-7901	1	Magnetic Plugs Service Kit
2	142-3603	1	Kit, 7.8 In Fan	18	76-1900	2	O-Ring
3	116-0234	1	Pulley Kit	19	116-8662	2	O-Ring-Valve, Check
4	116-0235	1	Handle	20	116-8974	4	Screw-HH 1/2-20 X 2 1/4
5	116-0236	1	Dipstick	21	116-8975	2	Screw-HSH 1/2-20 X 2 3/4
6	116-0237	1	Gasket	22	116-9922	2	Hydraulic Tube Kit
7	116-1367	1	Swash Block Kit	23	126-7466	1	Valve-Shock
8	142-3604	1	Kit, Pump Seal	24	126-7711	1	Seal-Drive, Fan
9	116-1369	1	Motor Seal Kit	25	142-3606	1	Kit, Pump Section 16Cc RH
10	116-1370	1	Tube Seal Kit	26	142-4501	1	Kit - 16Cc Port Plate, Rotate Grp
11	116-1371	1	Output Shaft Seal Kit				
12	116-5469	1	Cup-Nose	27	142-4459	1	Shock Valve Orificed 3800
13	3257-42	1	Key-Woodruff 5/16 X 1	28	99-3090	1	Shaft-Coupling
15	142-4461	1	Kit, Housing-Hydro RH	99	116-1373	1	Flow Test Kit ●
16	142-3617	1	Kit, Motor Tg310Cc RH	99	116-4245	1	Puller-Pulley ●

● Not illustrated

 LH Hydro Assembly No. 135-7909

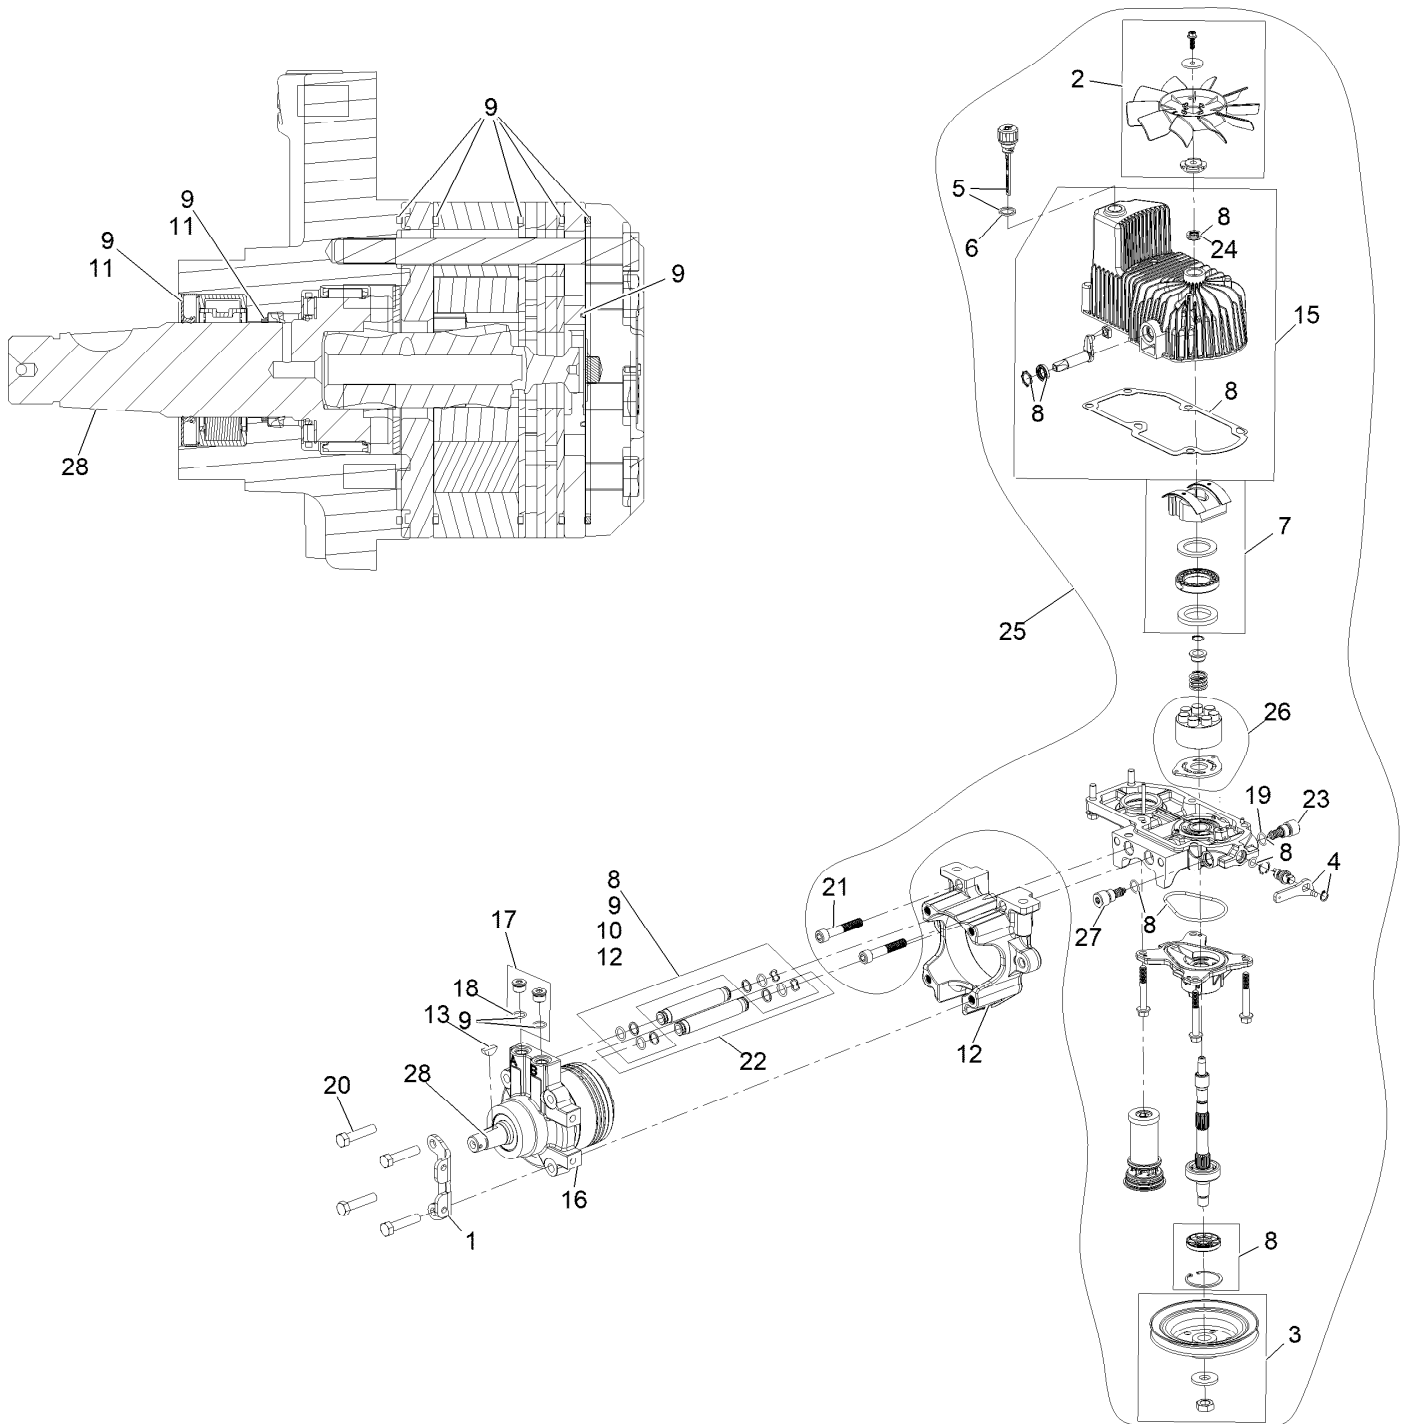


LH Hydro Assembly No. 135-7909 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-7827	1	Plate, Horse Shoe Mount	17	116-7901	1	Magnetic Plugs Service Kit
2	142-3603	1	Kit, 7.8 In Fan	18	76-1900	2	O-Ring
3	116-0234	1	Pulley Kit	19	116-8662	2	O-Ring-Valve, Check
4	116-0235	1	Handle	20	116-8974	4	Screw-HH 1/2-20 X 2 1/4
5	116-0236	1	Dipstick	21	116-8975	2	Screw-HSH 1/2-20 X 2 3/4
6	116-0237	1	Gasket	22	116-9922	2	Hydraulic Tube Kit
7	116-1367	1	Swash Block Kit	23	126-7466	1	Valve-Shock
8	142-3604	1	Kit, Pump Seal	24	126-7711	1	Seal-Drive, Fan
9	116-1369	1	Motor Seal Kit	25	142-3607	1	Kit, Pump Section 16Cc LH
10	116-1370	1	Tube Seal Kit	26	142-4501	1	Kit - 16Cc Port Plate, Rotate Grp
11	116-1371	1	Output Shaft Seal Kit	27	142-4459	1	Shock Valve Orificed 3800
12	116-5469	1	Cup-Nose	28	99-3090	1	Shaft-Coupling
13	3257-42	1	Key-Woodruff 5/16 X 1	99	116-4245	1	Puller-Pulley ●
15	142-4460	1	Kit, Housing-Hydro LH	99	116-1373	1	Flow Test Kit ●
16	142-3616	1	Kit, Motor Tg310Cc LH				

● Not illustrated

 
Pump Idler Assembly No. 116-1255

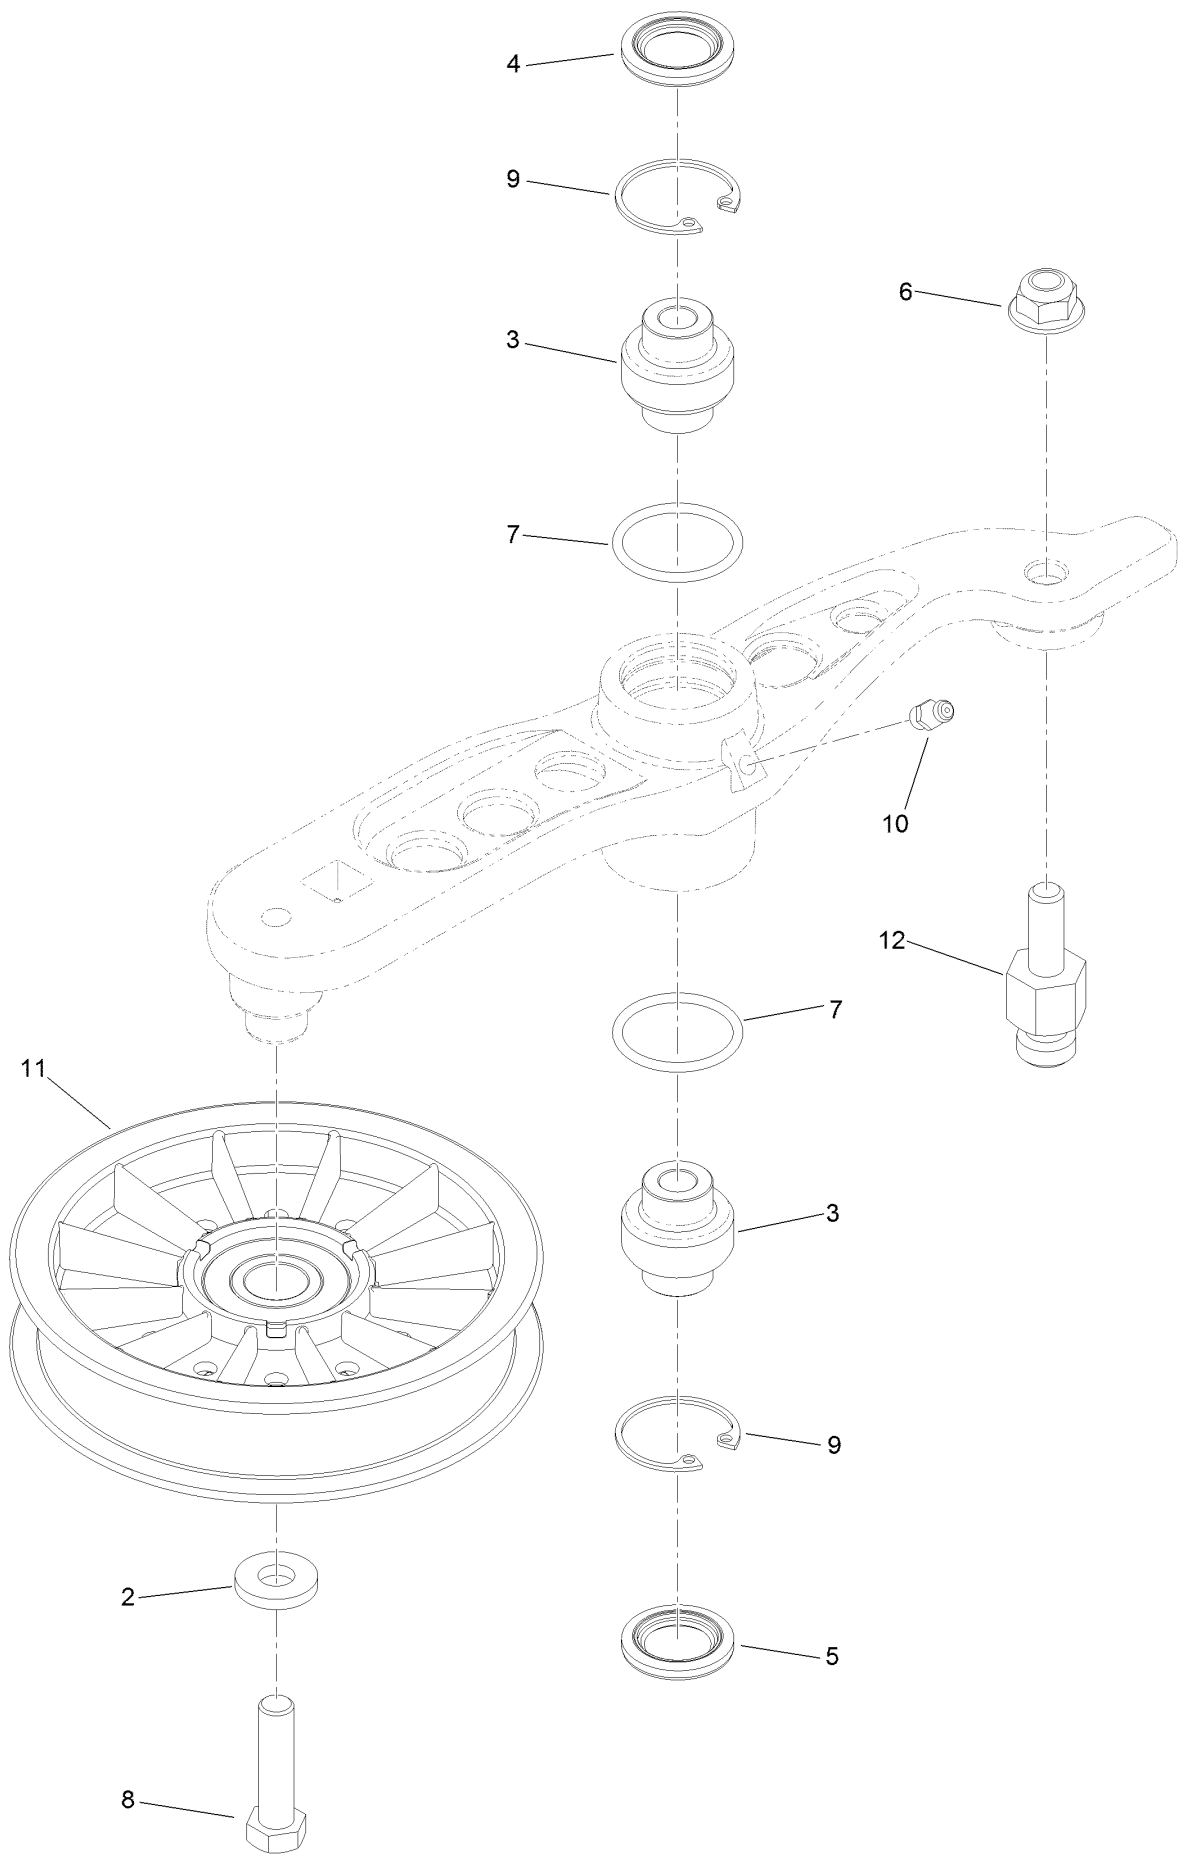

Pump Idler Assembly No. 116-1255 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	43-0940	1	Spacer	8	323-8	1	Screw-HH
3	103-3504	2	Bearing-Spherical	9	32120-10	2	Ring-Snap
4	103-3505	1	Seal-Lip, Double	10	302-19	1	Fitting-Grease
5	103-3506	1	Seal-Lip, Single	11	109-8076	1	Pulley-Idler
6	109-6658	1	Nut-Flange, NI	12	132-4724	1	Pin-Anchor, Spring
7	106-7159	2	O-Ring				

 Rear Wheel Assembly

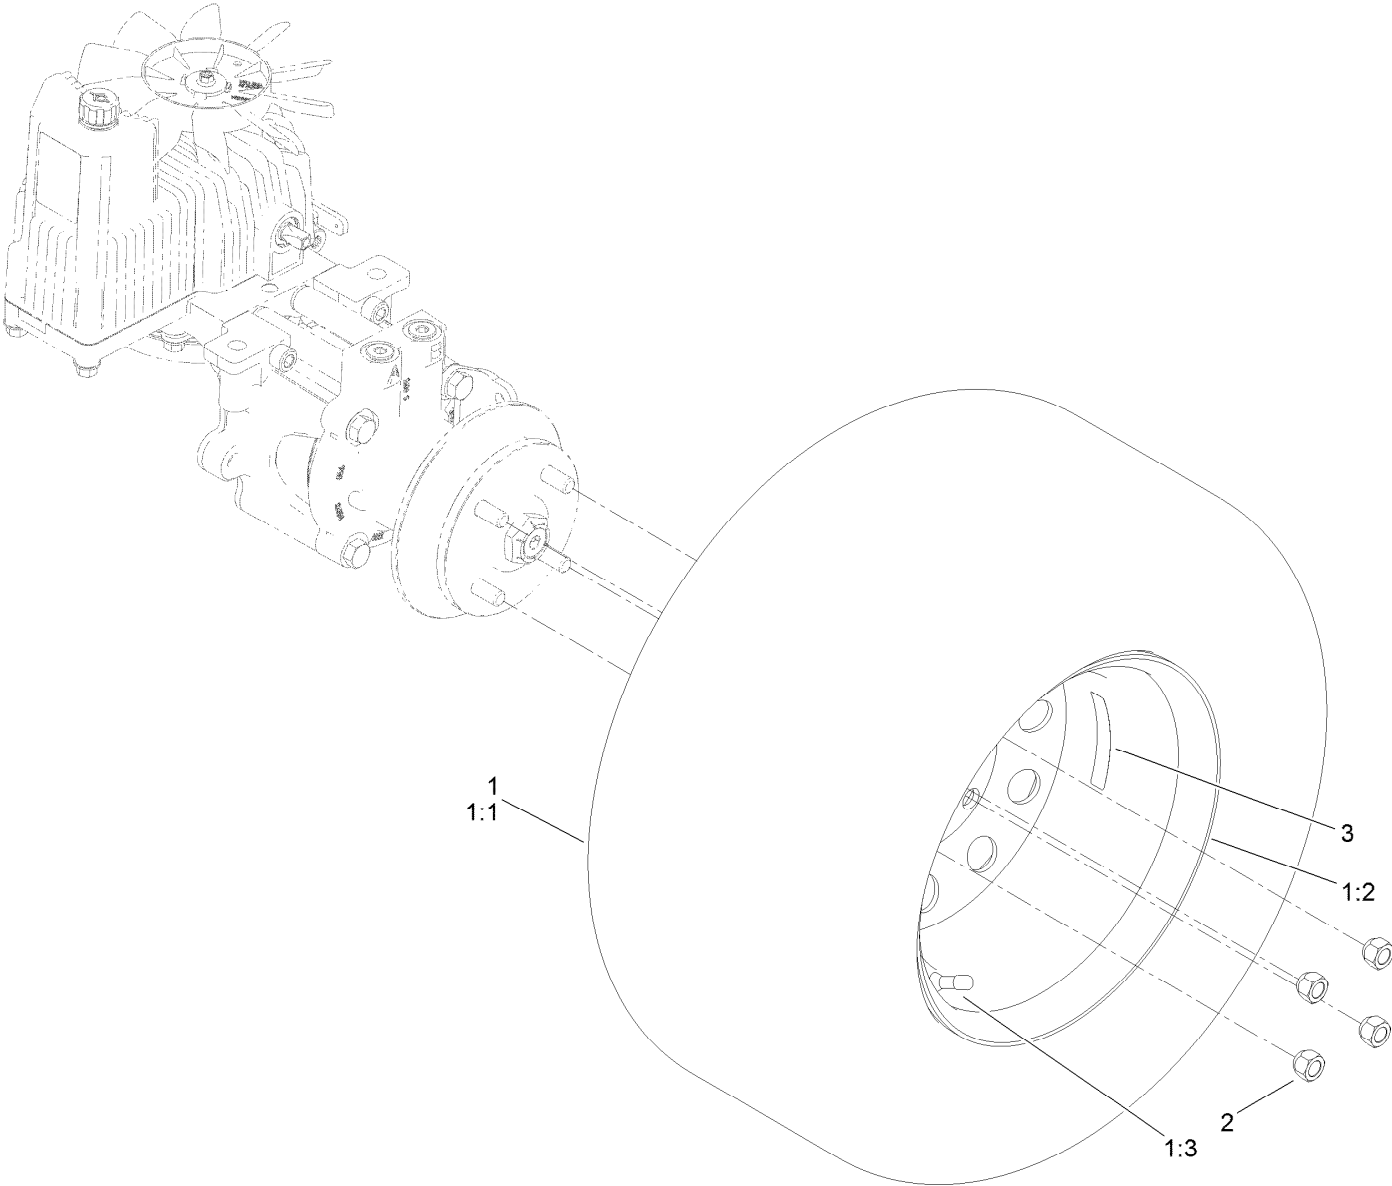

Rear Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-9521	2	Wheel And Tire ASM	1:3	232-27	1	Stem-Valve
1:1	1-633993	1	Tire	2	139-2564	8	Nut-Lug
1:2	127-9522	1	Wheel	3	135-7898	2	Decal-Wheel Hub

This diagram is an exploded view of a mechanical assembly, likely a pump or motor unit. It shows the main housing (1) and various internal components, including a motor (29), a pump head (19), and a drive shaft (12). The assembly is shown in a disassembled state to illustrate the relationship between parts. Key components include:

- Motor (29):** A three-phase induction motor with cooling fins.
- Pump Head (19):** A cast iron component with a central shaft and a flange.
- Drive Shaft (12):** A long shaft connecting the motor to the pump head.
- Impeller (36):** A centrifugal impeller mounted on the end of the drive shaft.
- Housing (1):** The main cast iron housing with a flange and mounting feet.
- Internal Components:** Various internal parts like bearings (32), seals (33), and shafts (11, 14, 15, 16, 21, 22, 23, 24, 25, 26, 27, 28, 30, 31, 34, 35) are shown in their relative positions.


The diagram uses a standard exploded view format with dashed lines indicating the assembly path. The parts are numbered 1 through 37, with some parts having multiple instances (e.g., 13:1, 13:2, 13:3; 8:1, 8:2, 8:3; 23:1, 23:2, 23:3; 36:1, 36:2).

3476-247A

Park Brake Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-4893	1	Mount-Bellcrank, LH	19	135-7440	1	Caliper-Brake, RH
2	135-4895	1	Mount-Bellcrank, RH	20	135-7828	2	Plate-Mount, Brake
3	116-9681	1	Mount-Pivot, LH	21	115-7109	2	Washer-Flat
4	116-9682	1	Mount-Pivot, RH	22	98-9940	4	Screw-HHF
5	32144-70	4	Screw-HWH 5/16-18 X 3/4 Tf	23	126-7587	2	Rear Linkage ASM
6	109-8054	2	Bushing-Flanged	23:1	126-7588	2	Yoke
7	116-9096-01	1	Bracket-Mount	23:2	116-9069	1	Linkage, Rear
8	135-7565	1	Brake Lever ASM	23:3	3220-1	1	Nut-Jam 1/4-28
8:2	109-8054	2	Bushing-Flanged	24	126-6395	4	Pin-Clevis, Spring
8:3	132-4749	1	Grip-Lever	25	142-3422	2	Spacer
9	116-9117	1	Pivot-Handle, Brake	26	32120-19	2	E-Ring
10	323-11	1	Screw-HH 3/8-16 X 2 1/4	27	3230-2	2	Bolt-Carriage 5/16-18 X 1
11	126-6199	4	Bushing	28	135-7915	4	Screw-HH,
12	135-7800	1	Shaft-Cross	29	112-0236	4	Nut-Lock
13	135-4859	1	Front Linkage ASM	30	104-8301	1	Nut-Nyloc 3/8-16 Flg
13:2	94-7572	1	End-Tie Rod, RH	31	142-6328	2	Mid-Link, Short
13:3	3220-3	1	Nut-Jam 3/8-24	32	3256-23	4	Washer-5/16 SAE
14	135-4896	2	Bellcrank,	33	119-1415	4	Pin-Cotter, Locking
15	126-3716	1	Arm-Inner, RH	34	135-7441	1	Caliper-Brake, LH
16	126-3715	1	Arm-Inner, LH	35	116-1399	2	Locknut
17	104-8300	2	Nut-Nyloc 5/16-18 Flg	36	142-2701	2	Wheel Hub ASM
18	3296-6	1	Nut-Nyloc 3/8-24	36:2	116-1696	4	Stud-Wheel
				37	3256-24	4	Washer-Plain

 
Fuel System Assembly

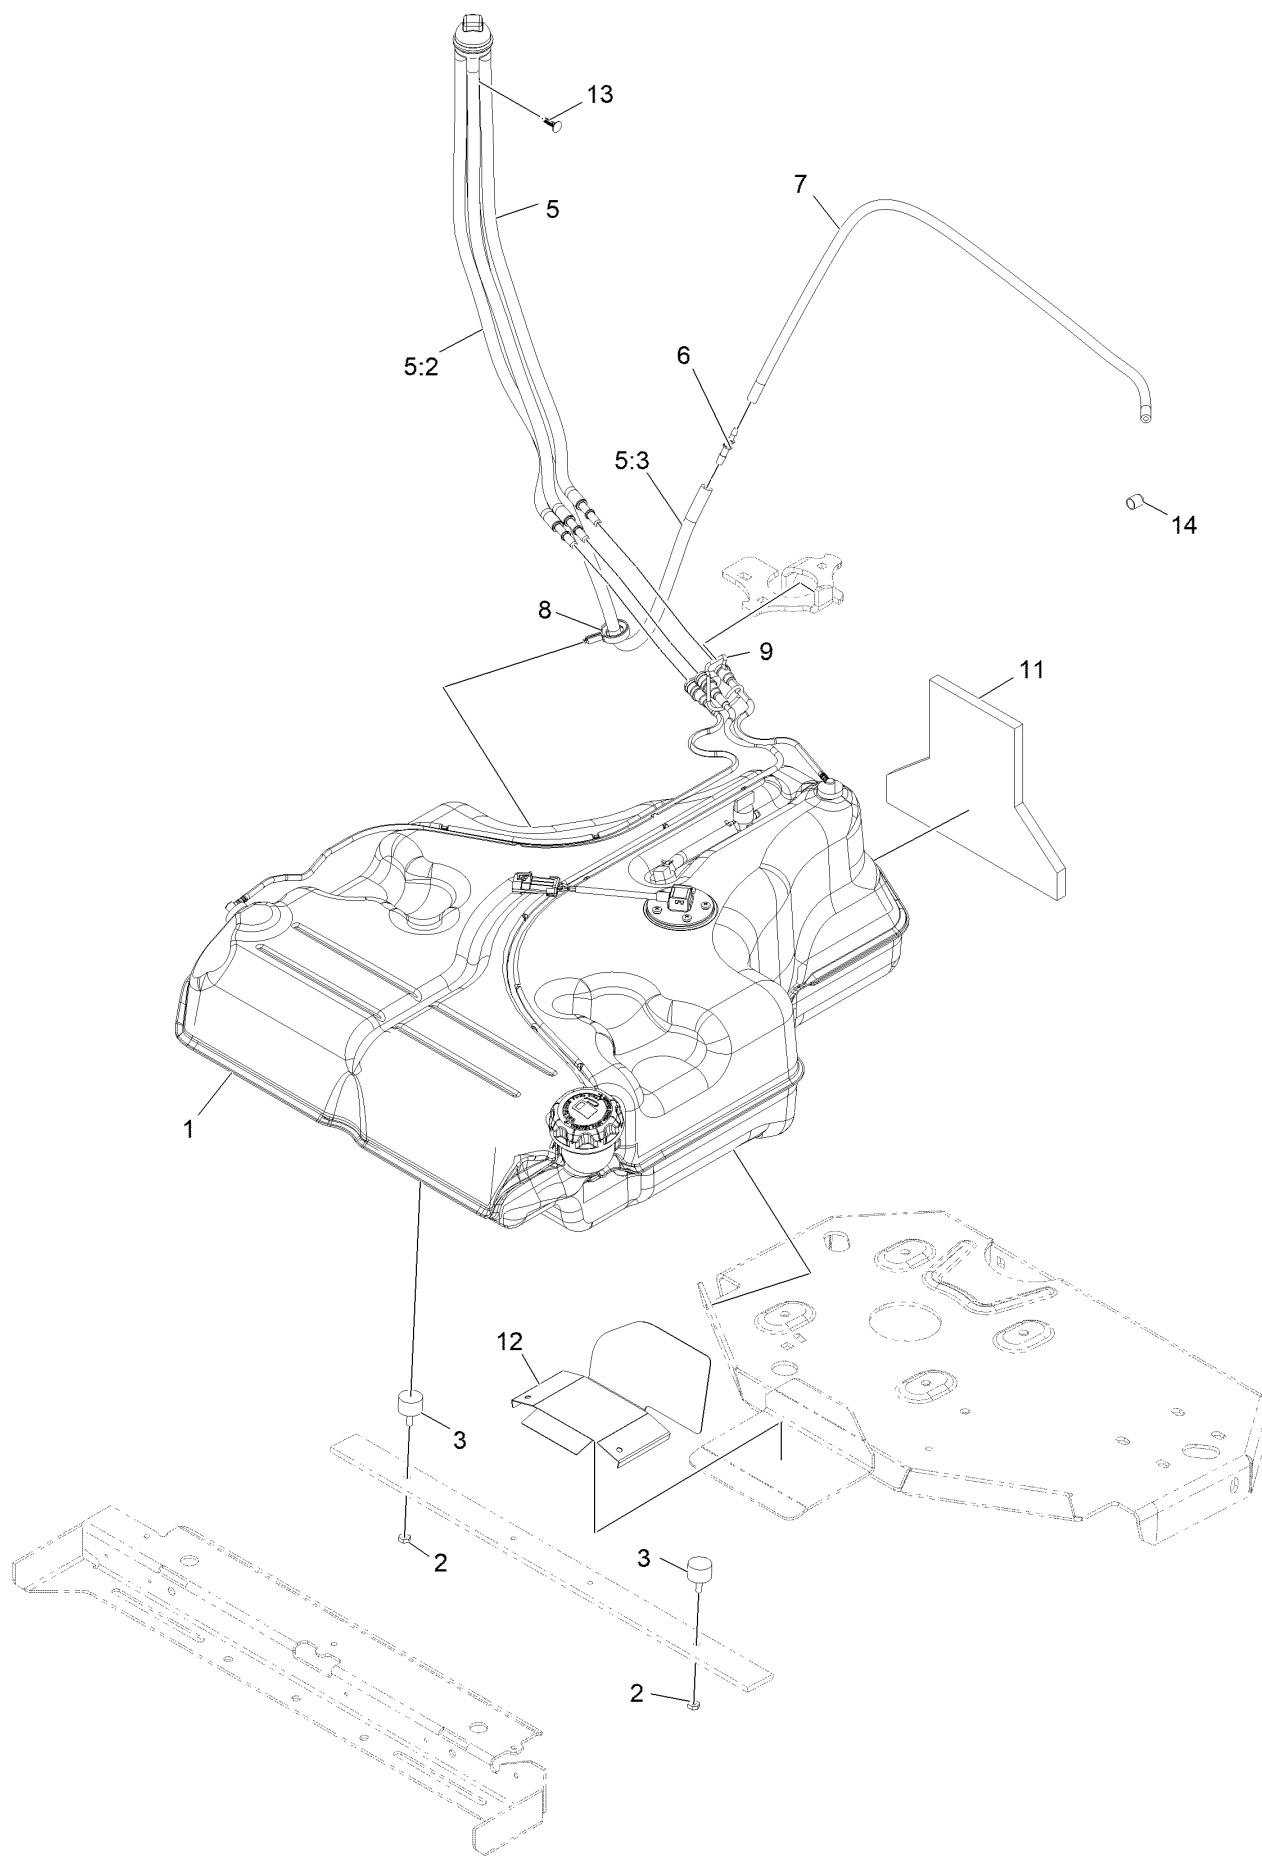

Fuel System Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-0643	1	Fuel Tank ASM	7	119-6074	1	Hose-Fuel
2	3218-1	2	Nut-Jam 1/4-20	8	105-1853	1	Clamp-Hose
3	1-523420	2	Bumper	9	116-6005	1	Retainer-Line, Vapor
5	127-0583	1	Fuel Manifold Vent ASM	11	126-0224	1	Insulation-Foam, Fuel Tank
5:2	109-0302	3	Hose-Fuel Line 24"	12	126-0032-01	1	Guard-Exhaust
5:3	108-5376	1	Hose-Fuel	13	125-8067	1	Plug-Plastic
6	135-5678	1	Barb-Fuel	14	116-4464	1	Plug-Port

 
Fuel Tank Assembly No. 135-0643

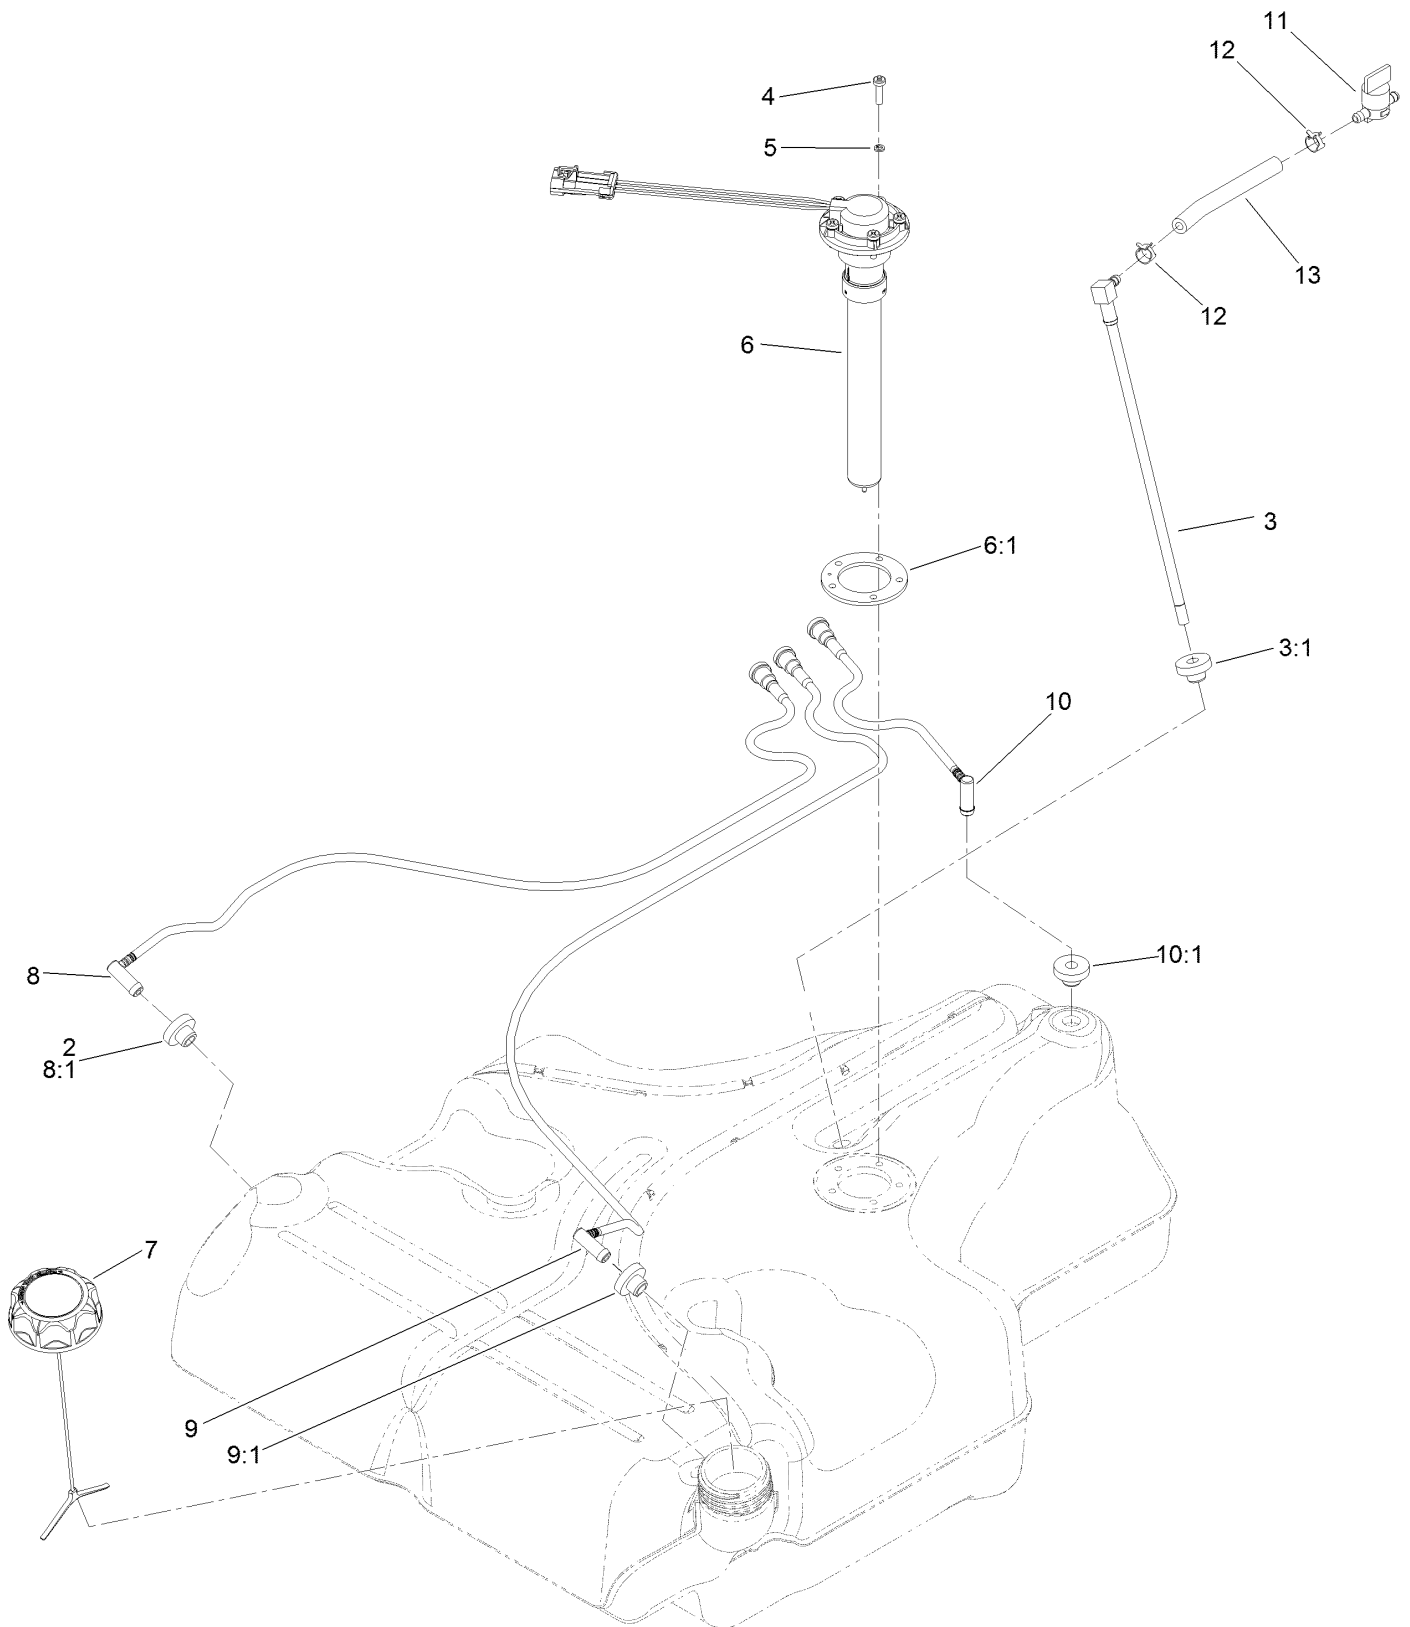

Fuel Tank Assembly No. 135-0643 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	46-6560	4	Bushing	8:1	46-6560	1	Bushing
3	116-2459	1	Fuel Line Kit (With Grommet)	9	116-2461	1	LH Vent Line Kit (With Grommet)
3:1	46-6560	1	Bushing	9:1	46-6560	1	Bushing
4	3290-500	5	Screw-PPH	10	116-2462	1	Rear Vent Line Kit (With Grommet)
5	3253-17	5	Washer-Lock	10:1	46-6560	1	Bushing
6	126-3913	1	Float-Sender, Fuel	11	1-603770	1	Valve-Fuel
6:1	126-3950	1	Gasket-Sender	12	2412-98	2	Clamp-Hose
7	137-4127	1	Cap-Fuel	13	109-0650	1	Hose-Fuel
8	116-2460	1	RH Vent Line Kit (With Grommet)				

 
Seat Mounting Assembly

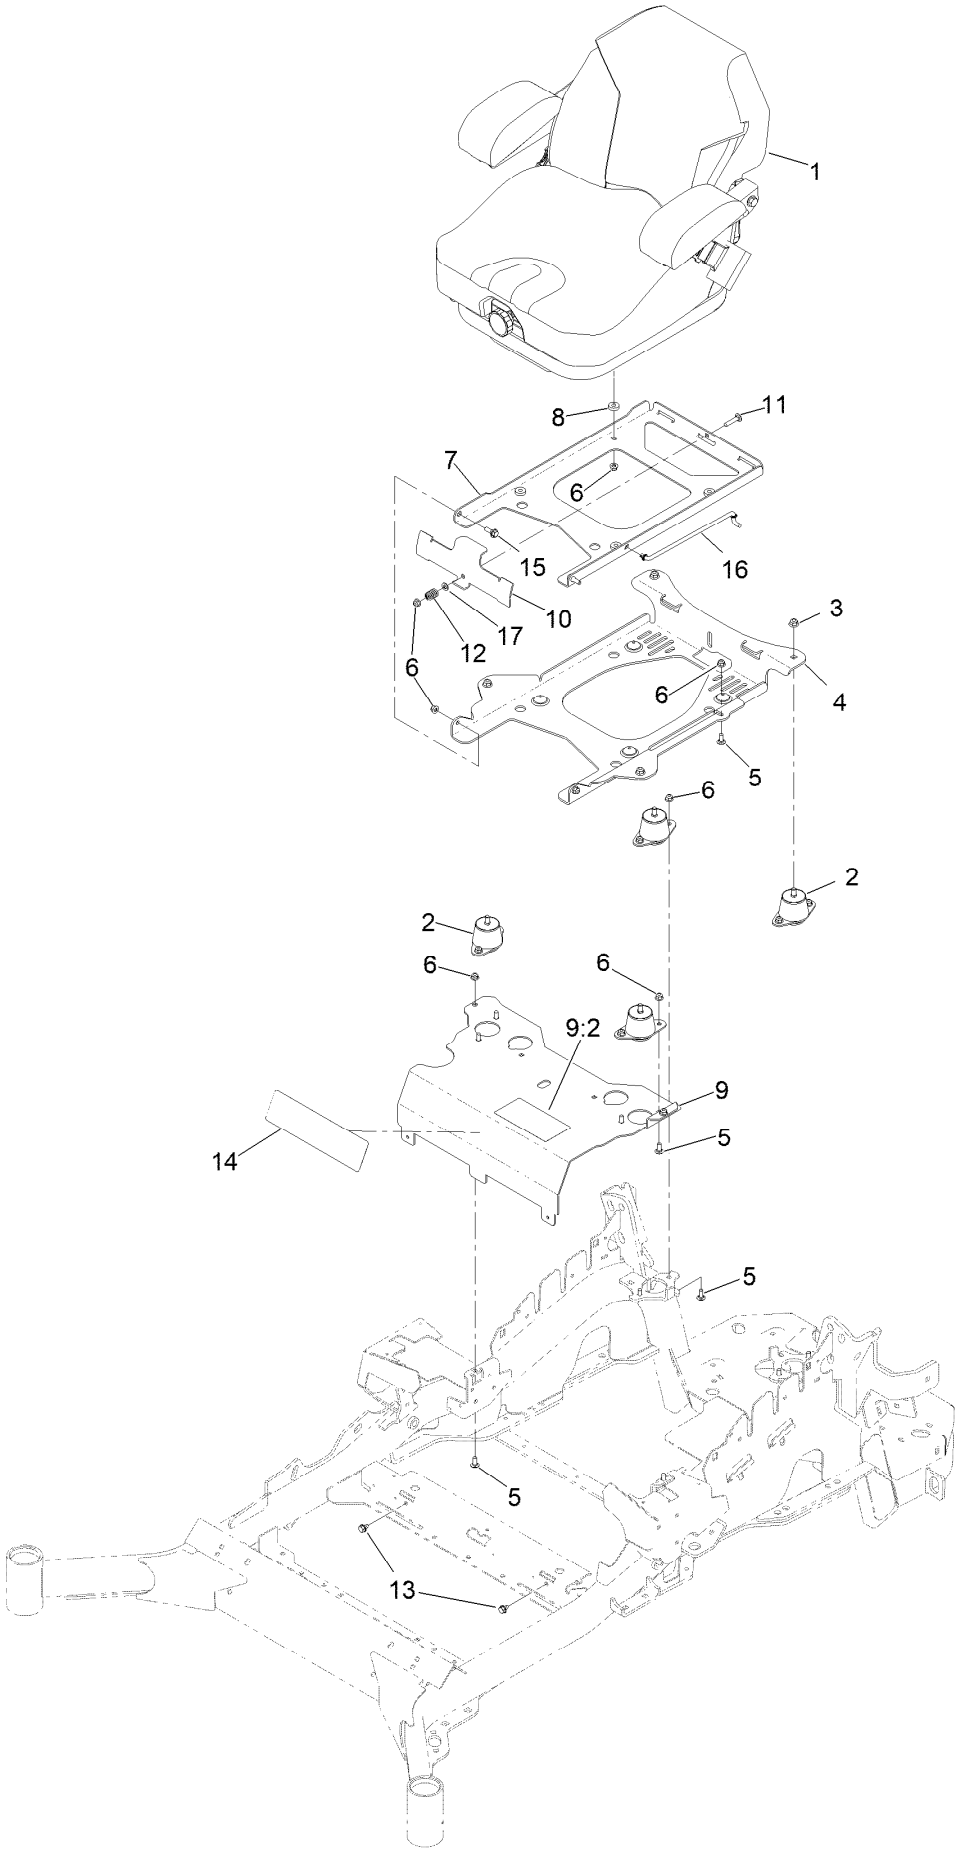

Seat Mounting Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-4984	1	Seat-Suspension	9:2	142-2935	1	Decal-Lazer 96 Service Aid
2	109-9034	4	Isolator-Seat	10	109-9881-03	1	Plate-Latch, Seat
3	104-8301	4	Nut-HF, NI	11	3230-4	1	Screw-CARR
4	116-3860-03	1	Plate-Tilt, Seat Support	12	107-3017	1	Spring-Compression
5	3230-23	11	Bolt-CARR	13	32144-70	2	Screw-HWHTF
6	104-8300	18	Nut-HF, NI	14	140-1215	1	Decal-Console
7	116-3859-03	1	Plate-Frame, Seat	15	116-1297	2	Screw-Shoulder
8	26-4840	4	Spacer-Pin, Mounting	16	116-0070	1	Rod-Prop
9	142-3315	1	Mount-Seat W/Decals	17	3256-23	1	Washer-Plain

 Seat Assembly No. 147-4984

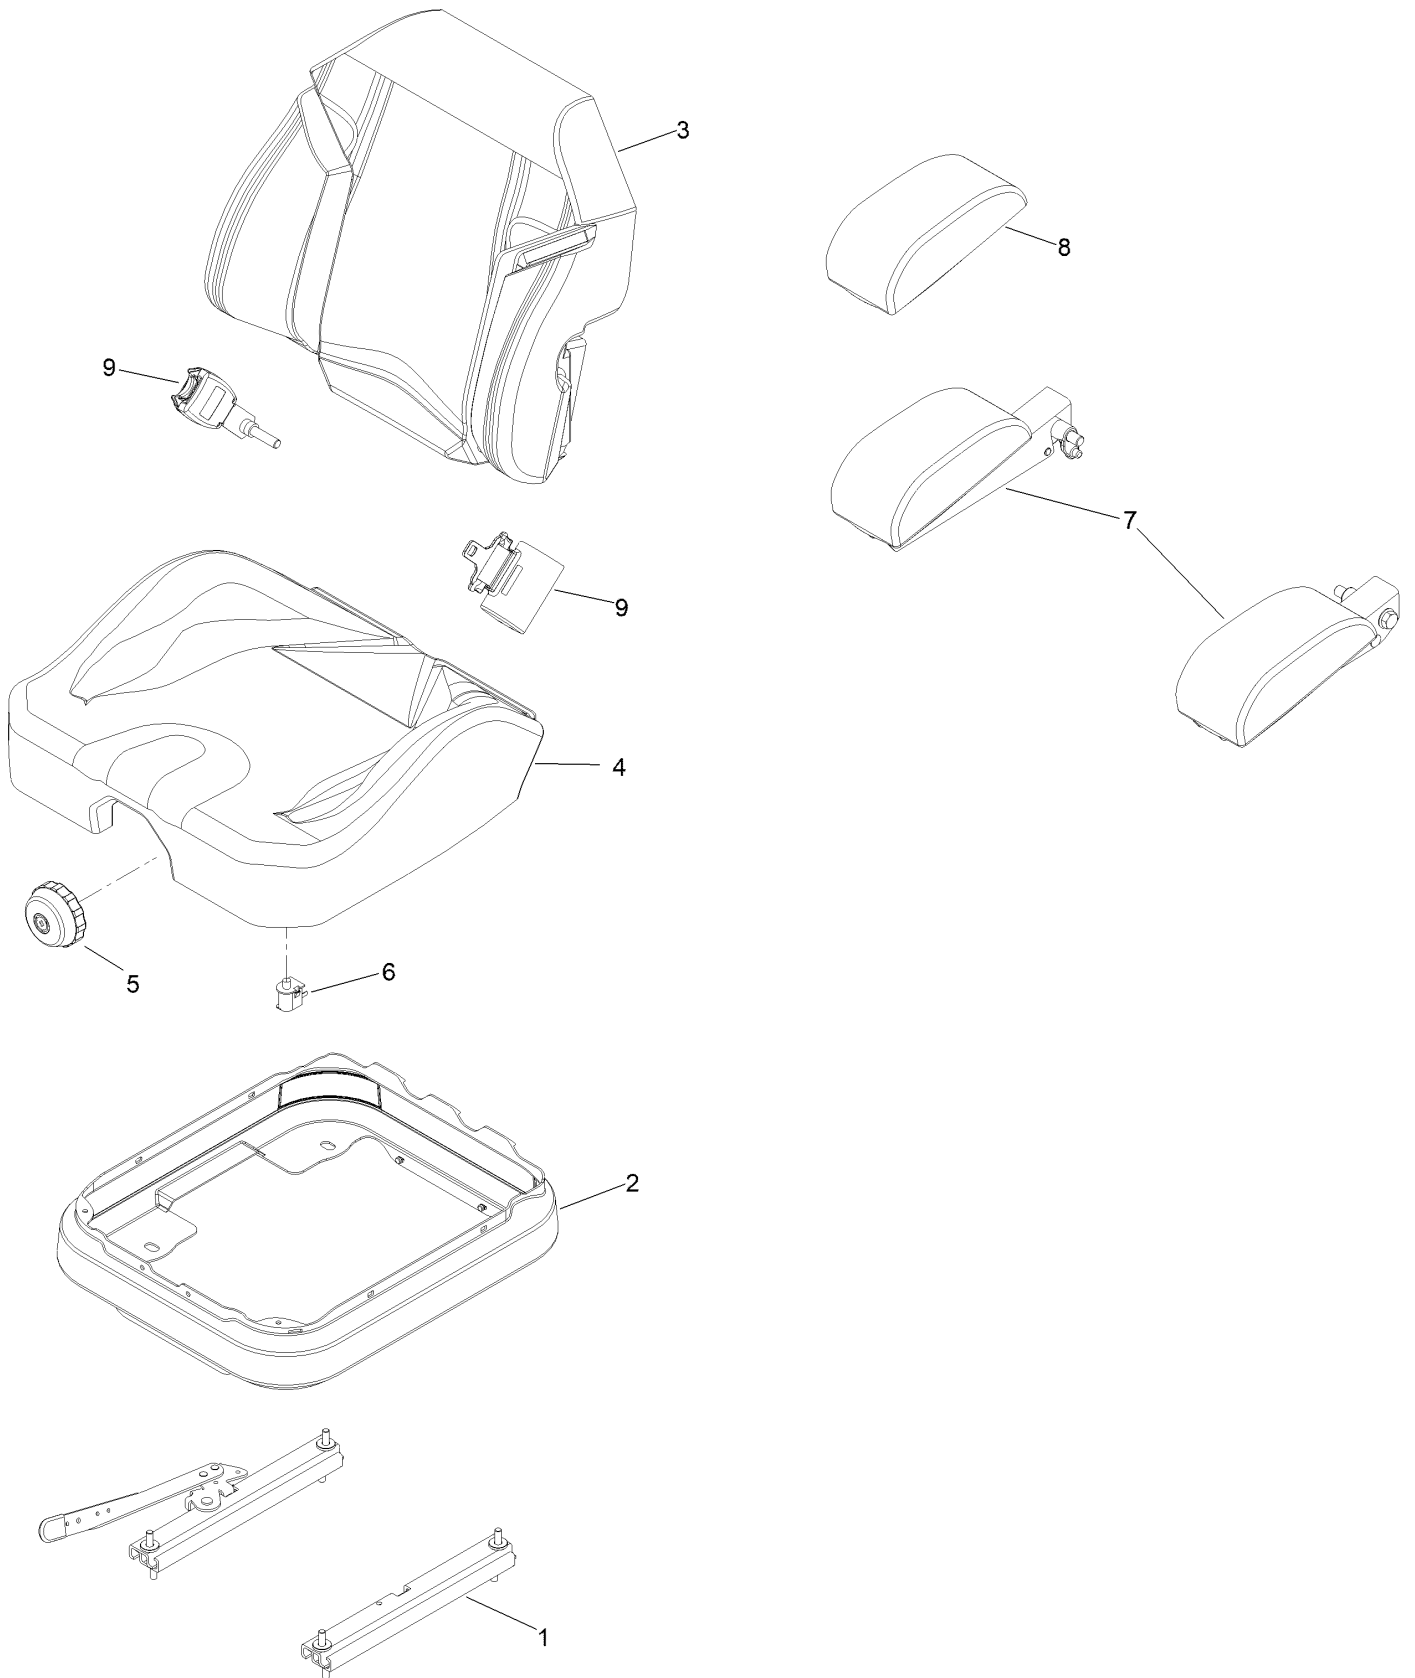


Seat Assembly No. 147-4984 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	140-8012	1	Seat Track Set
2	116-5659	1	Cover-Suspension Bellows
3	140-8004	1	Cover-Back
4	140-8005	1	Cover-Cushion
5	116-8911	1	Knob-Adjuster

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
6	82-2190	1	Switch-Bail
7	147-4985	1	Armrest Kit
8	109-9802	1	Arm Rest Pad Set
9	126-2061	1	Seat Belt Service Kit

 Motion Control Assembly

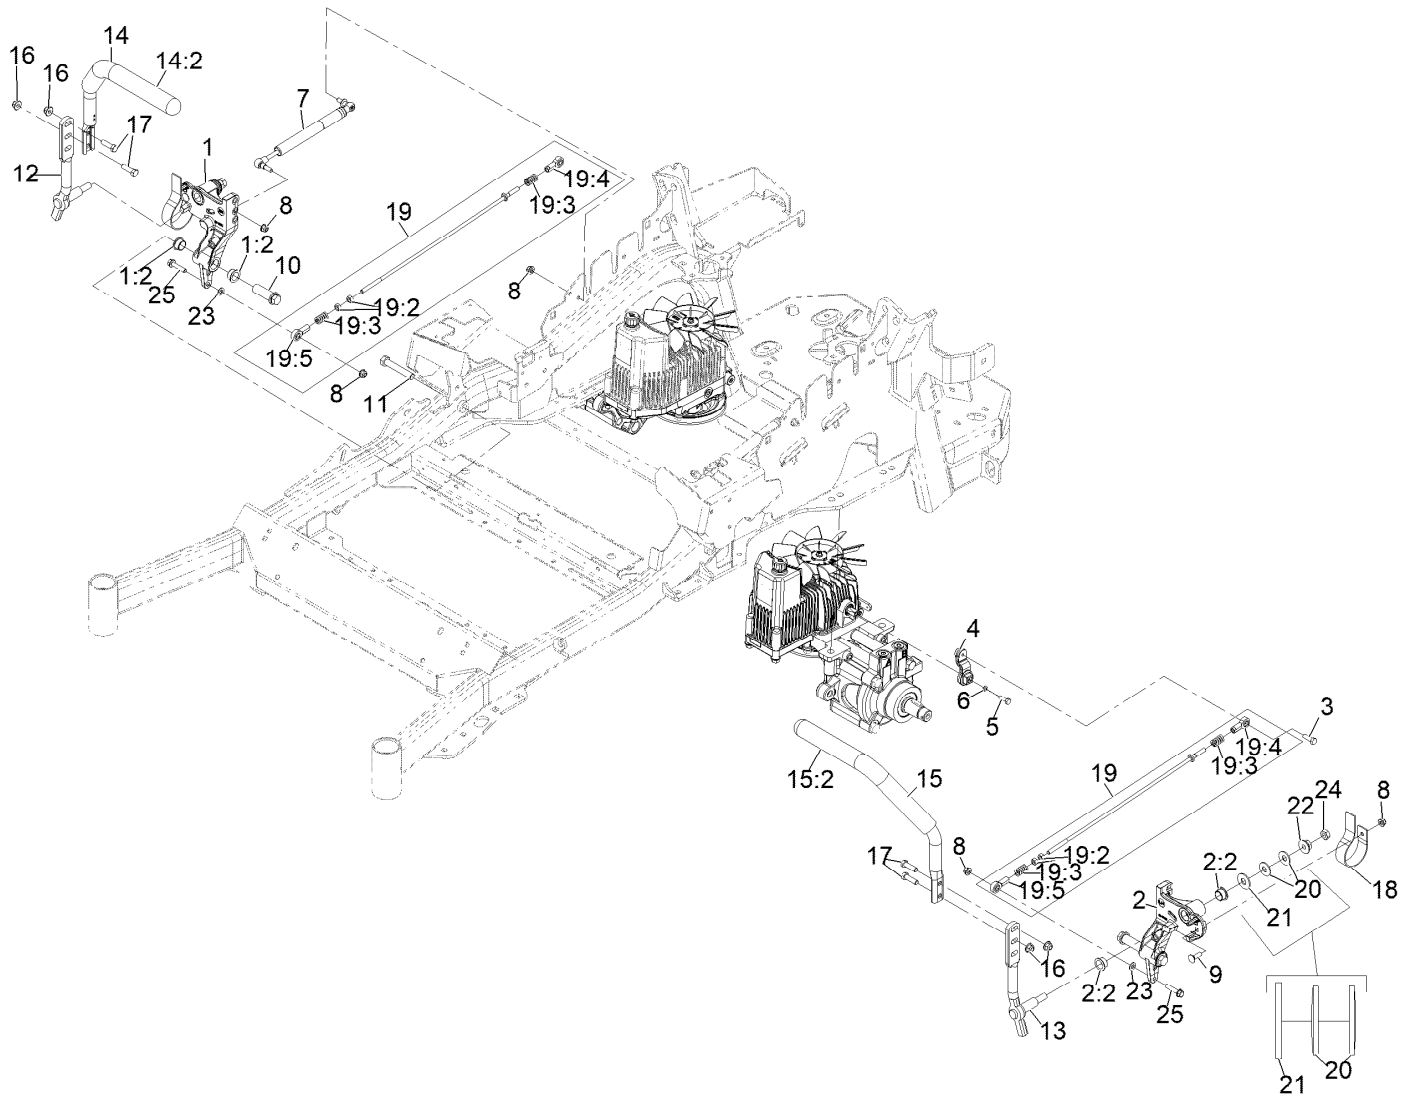


Motion Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	116-0880	1	RH Motion Control And Bushing ASM	14:2	109-5668	1	Grip-Lever, Control
1:2	109-8054	4	Bushing-Flanged	15	135-4373	1	LH Handle ASM
2	116-0881	1	LH Motion Control And Bushing ASM	15:2	109-5668	1	Grip-Lever, Control
2:2	109-8054	4	Bushing-Flanged	16	104-8301	4	Nut-Nyloc 3/8-16 Flg
3	116-0648	2	Screw-HH 5/16-18 X 1 W/Patch ●	17	323-7	4	Screw-HH 3/8-16 X 1 1/4
4	109-4581	2	Arm-Control, Pump	18	109-5575	2	Spring-Leaf
5	9080046	2	Screw-HH 1/4-20 X 7/8 ●	19	109-8106	2	Front Pump Linkage ASM
6	1-303435	2	Washer-Spring Disc 1/4	19:2	3219-2	2	Nut-Hex 5/16-24
7	146-0859	2	Damper, Motion Control	19:3	1-323245	2	Spring-Compression
8	104-8300	8	Nut-Nyloc 5/16-18 Flg	19:4	1-633152	1	Balljoint
9	3230-2	2	Bolt-Carriage 5/16-18 X 1	19:5	1-543017	1	Balljoint
10	109-5891	2	Hub-Threaded	20	109-9505	4	Washer, Spring Disc 1/2
11	325-12	2	Screw-HH 1/2-13 X 3	21	3256-6	2	Washer
12	116-0039	1	Lever-Control Motion, RH	22	32128-56	2	Nut-Hex 1/2-13 Flange
13	116-0040	1	Lever-Control Motion, LH	23	3256-23	2	Washer-5/16 SAE
14	135-4371	1	RH Handle ASM	24	3218-5	2	Nut-Jam 1/2-13
				25	115-1794	2	Screw-Hex Flange 5/16-18 X 1 1/2

● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

 
Fender, Console and Control Assembly

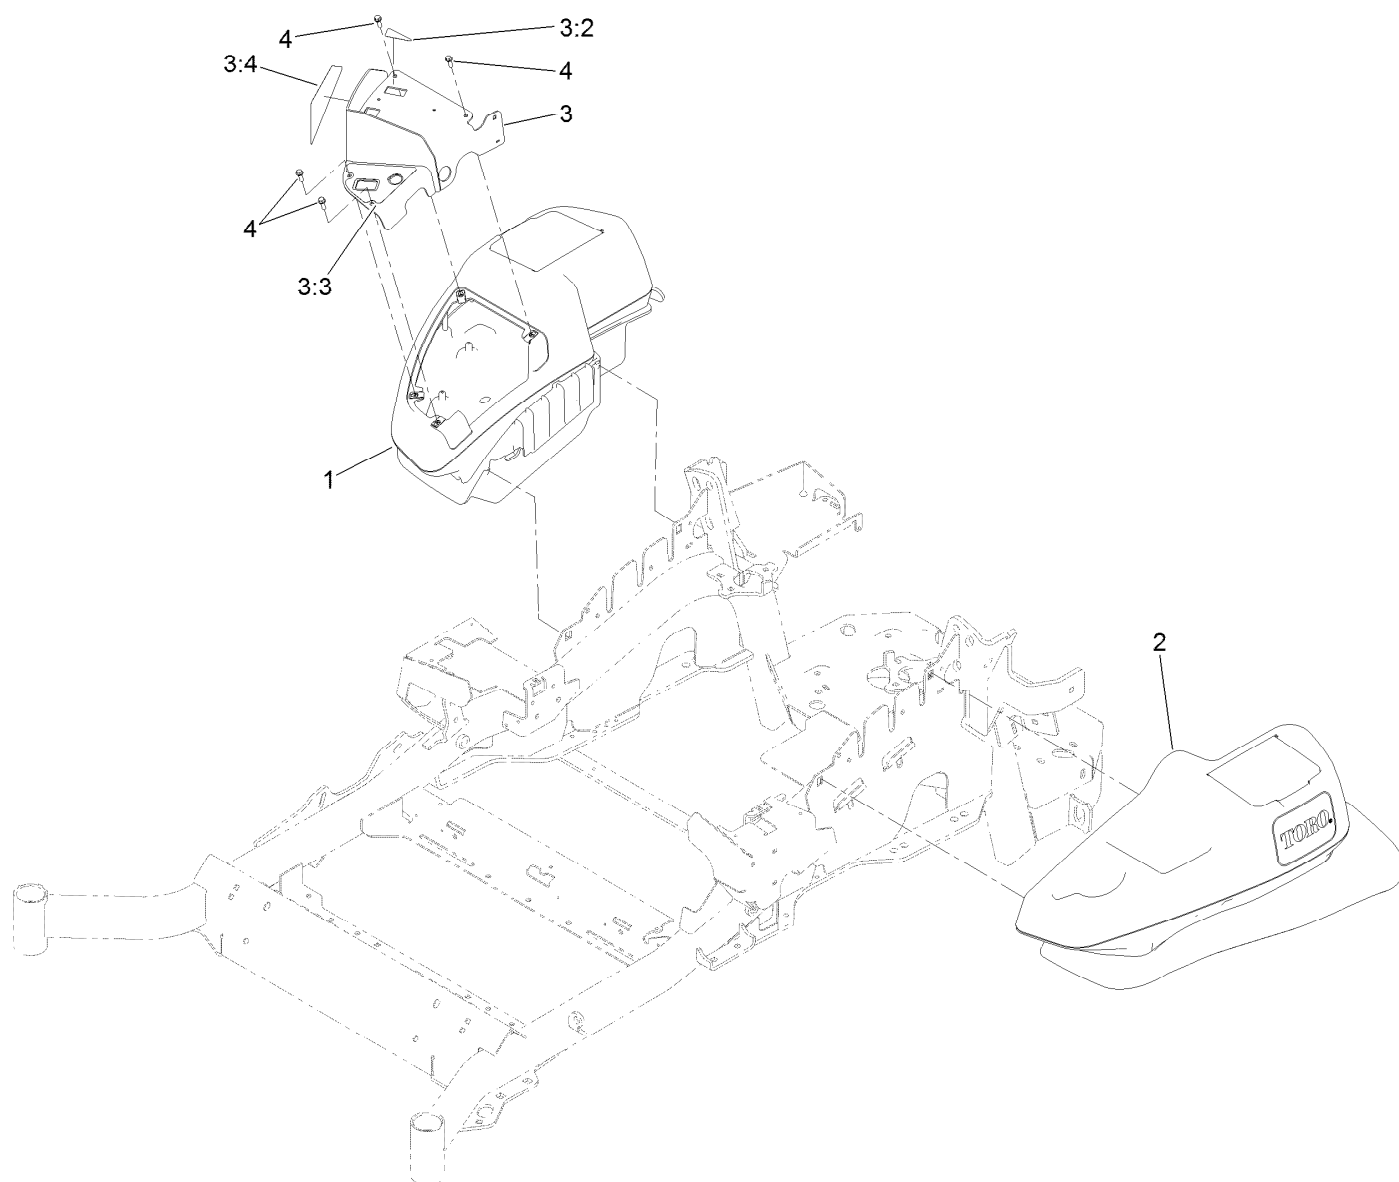

Fender, Console and Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	115-7400	1	RH Console ASM	3:3	136-5530	1	Decal-Control Panel
2	115-7401	1	LH Console ASM	3:4	136-5531	1	Decal-Horizon
3	135-7079	1	Control Panel ASM	4	32105-15	4	Screw-HWH
3:2	135-7057	1	Decal-Console				

 
RH Console Assembly No. 115-7400

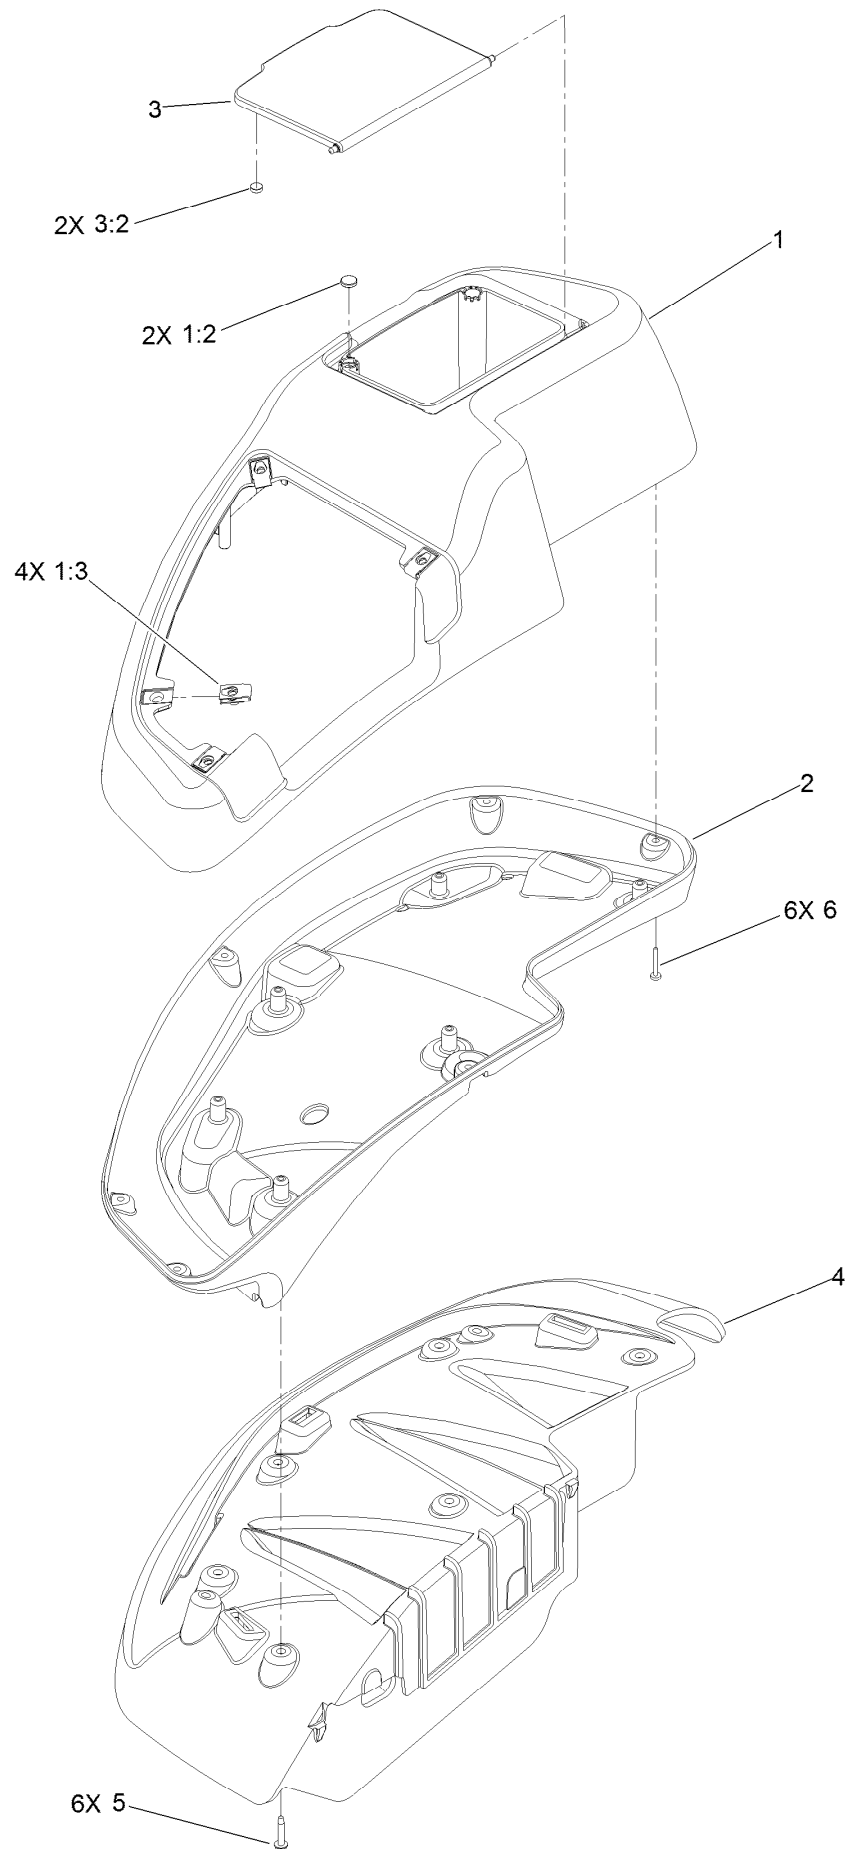

RH Console Assembly No. 115-7400 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	114-1538	1	RH Wide Top Console ASM	3:2	114-5896	2	Magnet
1:2	117-0883	2	Puck	4	109-9083	1	Fender-Wide, RH
1:3	107069	4	Clip	5	32144-89	6	Screw-Thread Forming
2	115-3643	1	Console-Lower, RH Wide	6	117-0347	6	Screw-PPH
3	114-1537	1	Wide Lid ASM				

 LH Console Assembly No. 115-7401

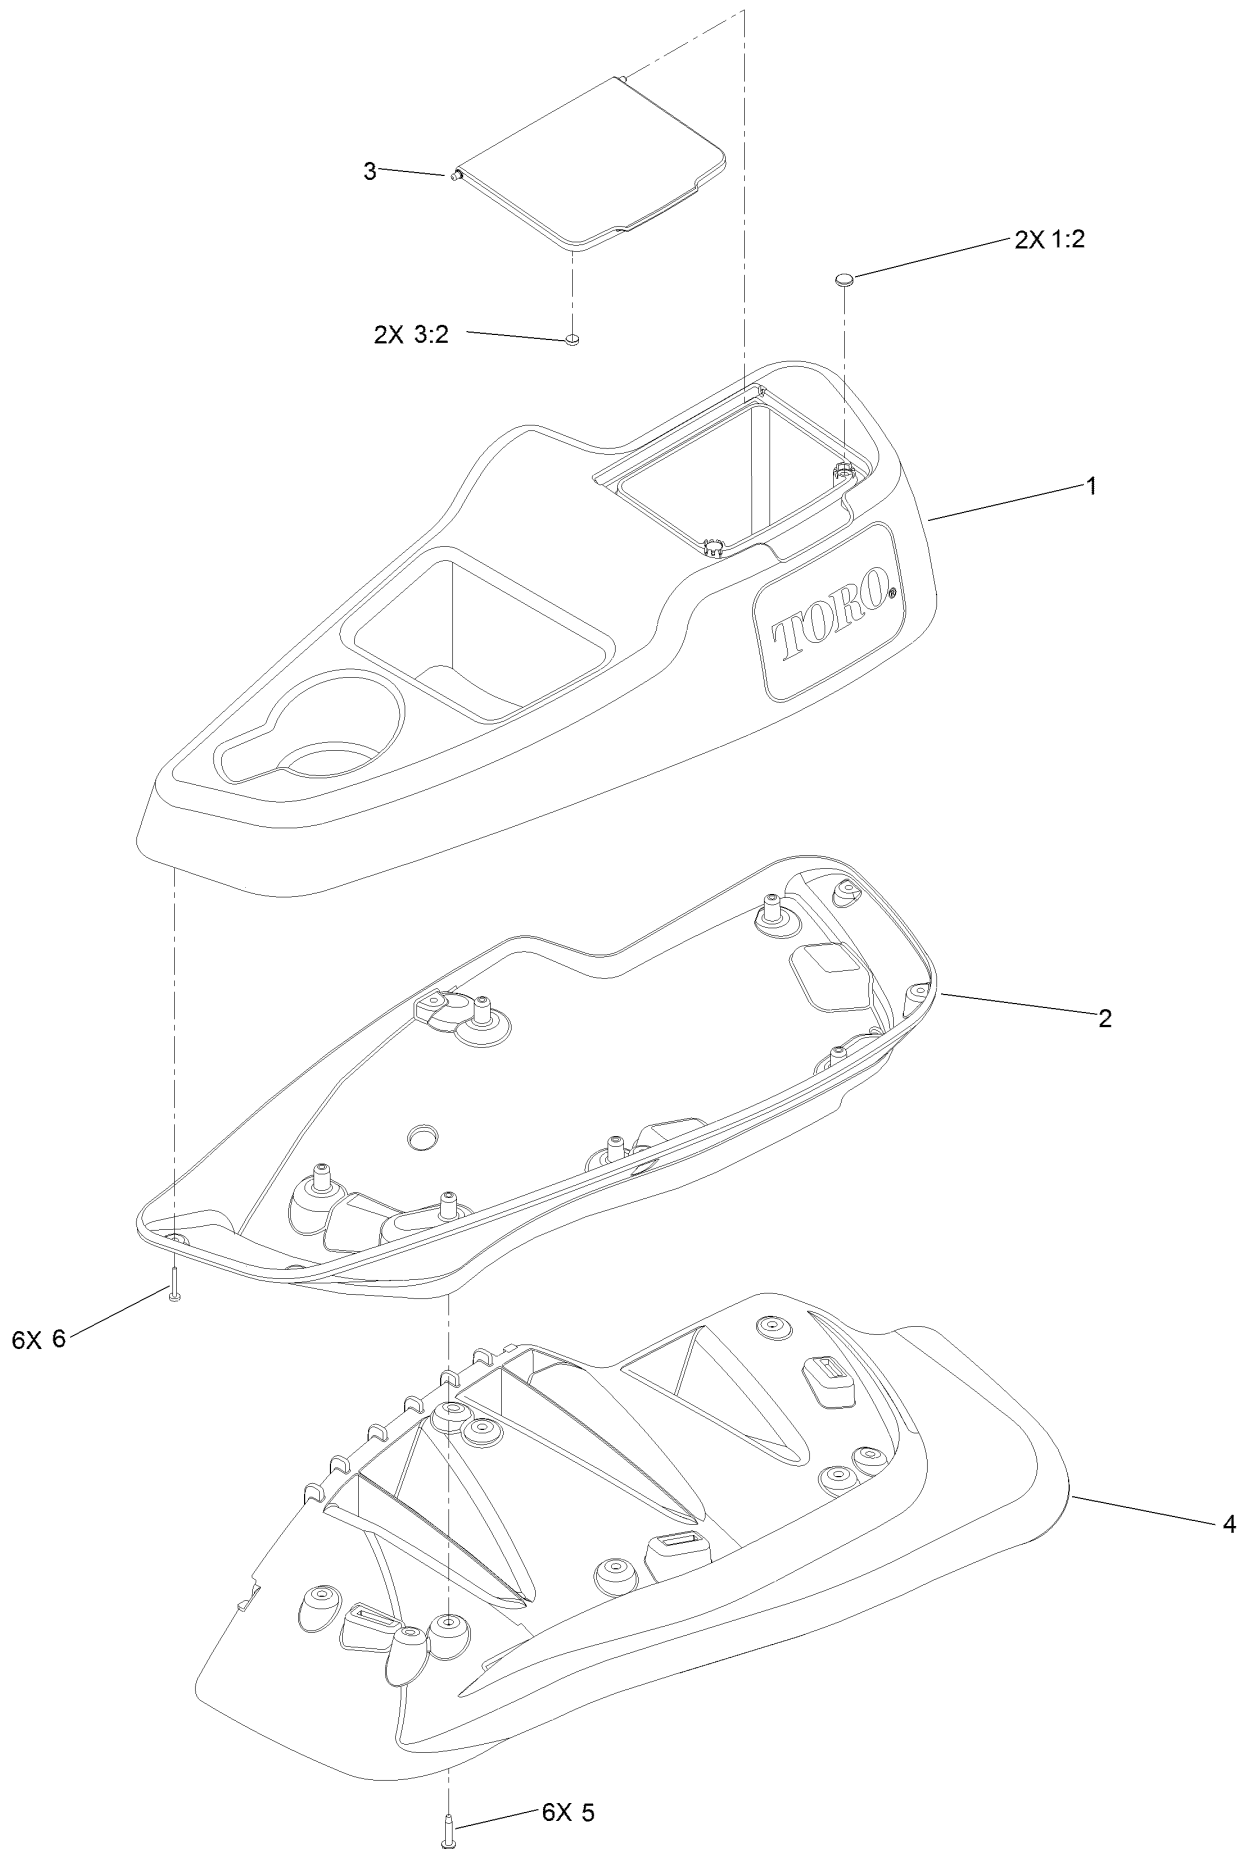


LH Console Assembly No. 115-7401 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	114-1539	1	LH Wide Console Top ASM
1:2	117-0883	2	Puck
2	115-3641	1	Console-Lower, LH Wide
3	114-1537	1	Wide Lid ASM

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3:2	114-5896	2	Magnet
4	109-9085	1	Fender-Wide, LH
5	32144-89	6	Screw-Thread Forming
6	117-0347	6	Screw-PPH

 
Electrical Assembly

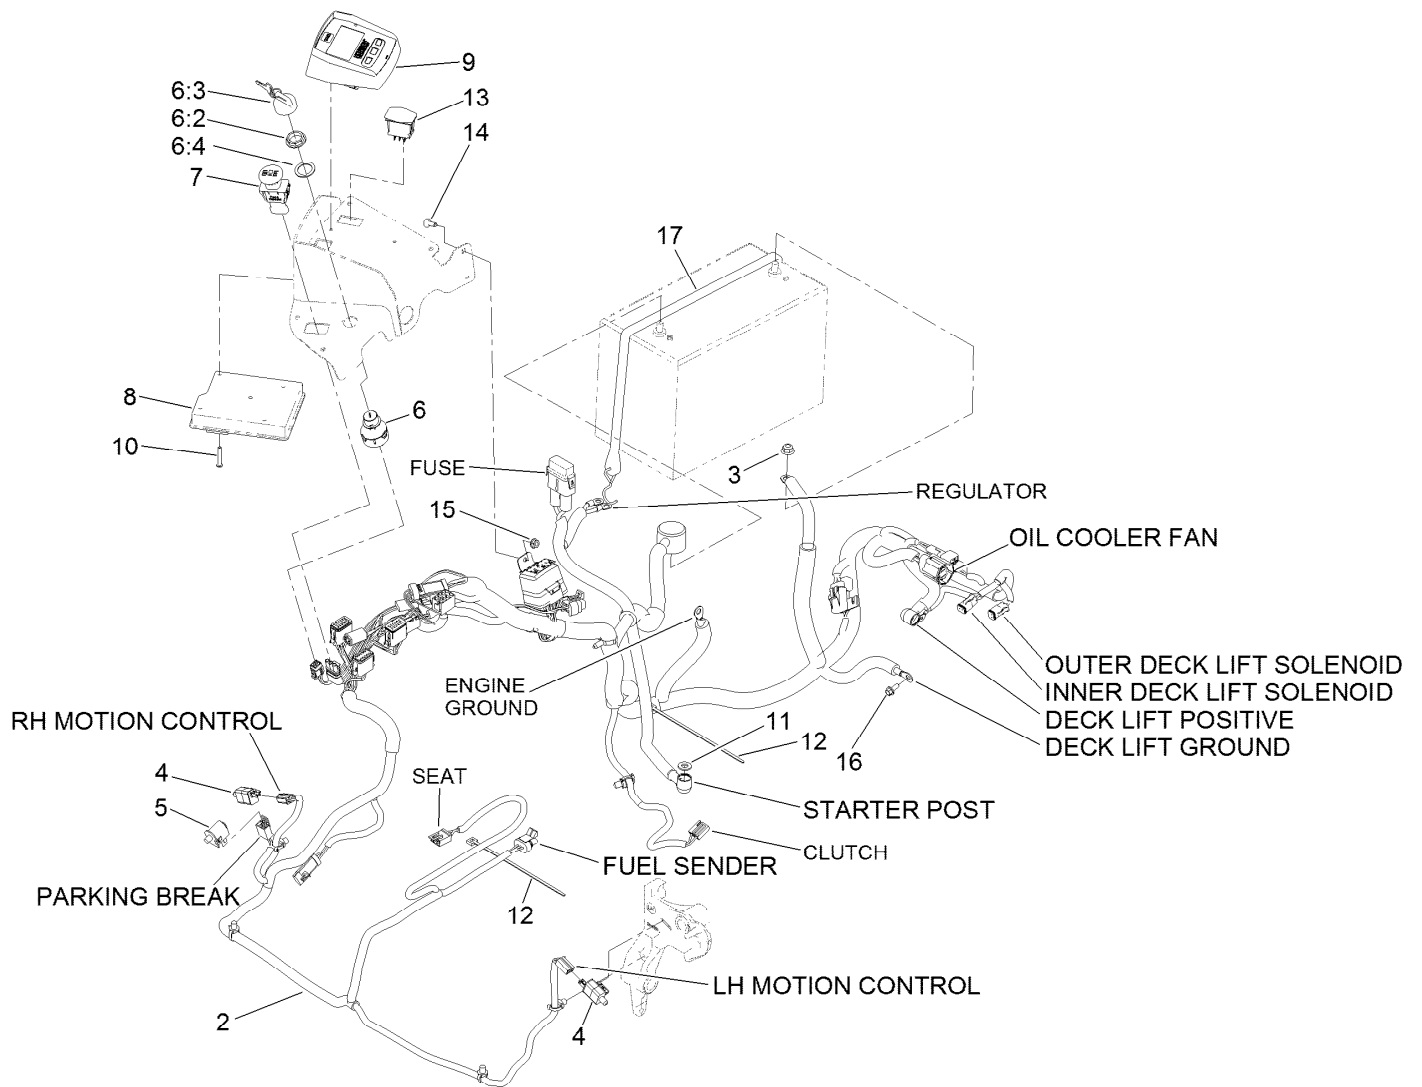

Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	142-8168	1	Harness-Wire	9	126-9976	1	Module-Horizon
3	104-8301	2	Nut-HF, NI	10	126-5092	4	Screw-PPH
4	110-6765	2	Switch	11	3256-24	1	Washer-Plain
5	82-2190	1	Switch-Bail	12	3290-378	2	Tie-Cable
6	126-6285	1	Ignition Switch ASM	13	100-1535	1	Switch-Rocker, (On)-Off-(On)
6:2	108-8660	1	Nut-Mounting	14	1-807512	1	Bolt-CARR
6:3	106-5270	1	Ignition Key Set	15	32128-33	1	Nut-HF
6:4	108-8659	1	Washer-Backup	16	99-6810	1	Screw-HHF
7	126-6187	1	Switch-PTO, Sealed	17	135-4440	1	Strap
8	135-3427	1	Module-Mcu				

 
Electrical Harness Assembly No. 142-8168

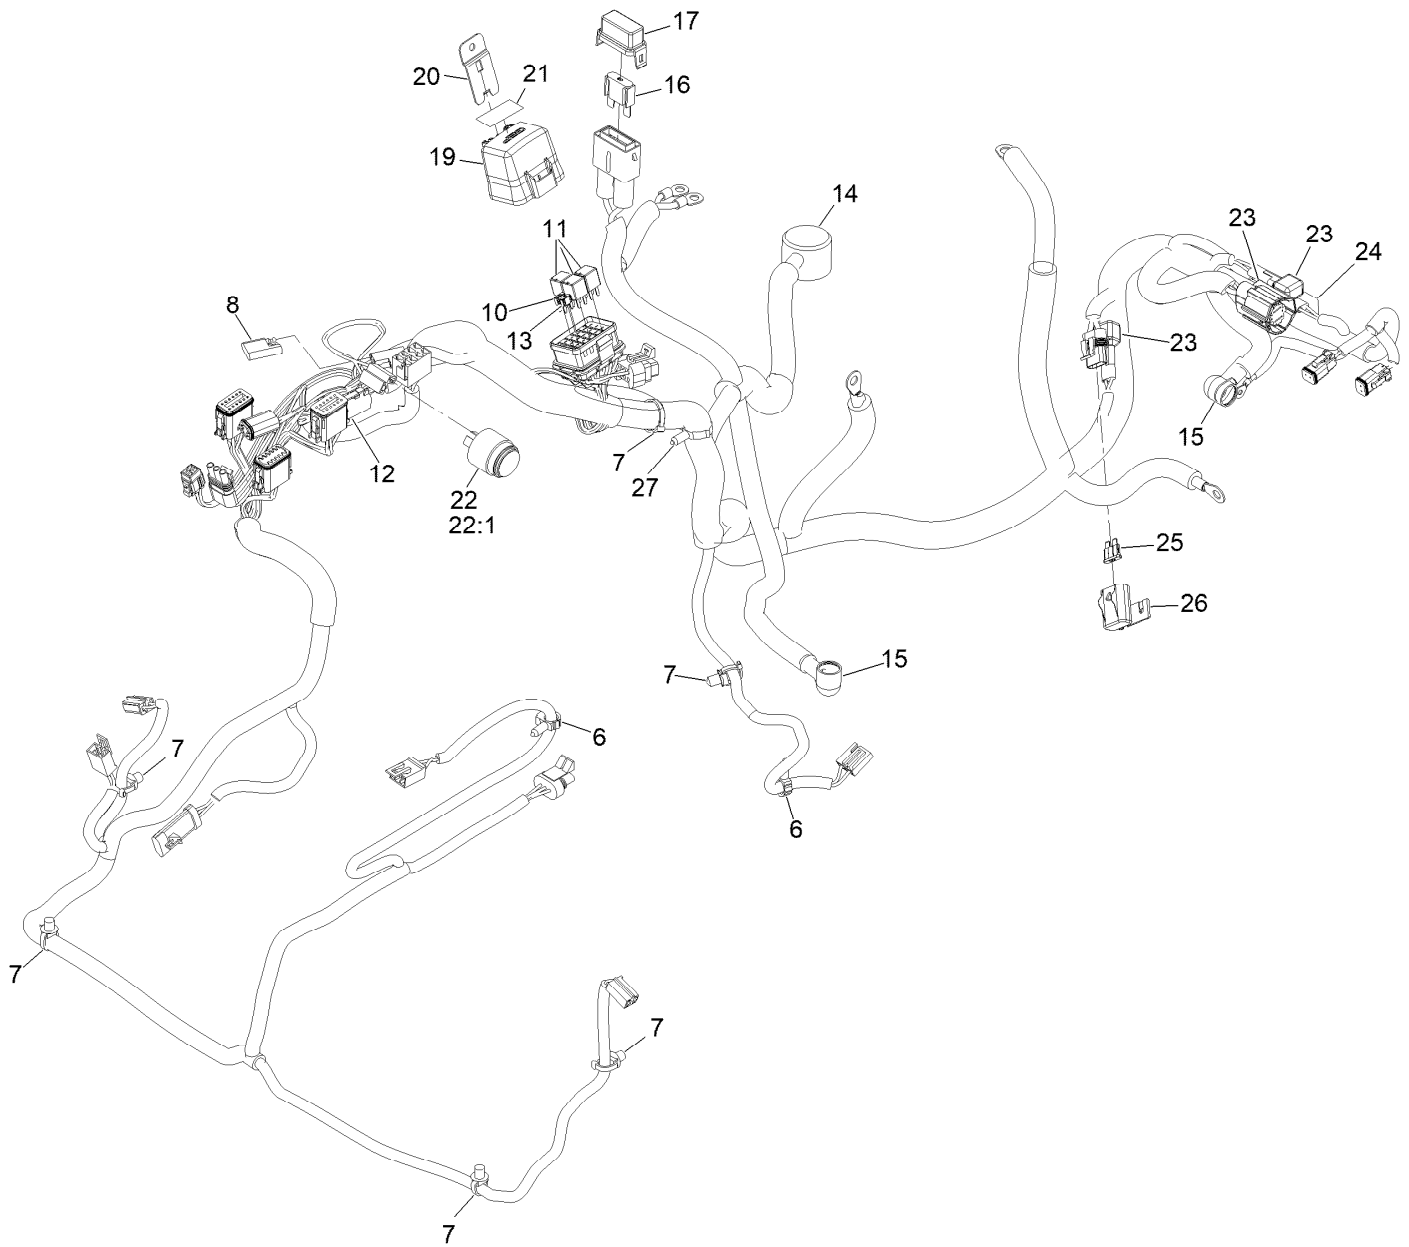

Electrical Harness Assembly No. 142-8168 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
6	32180-037	2	Clip-Harness	20	32180-177	1	Clip-Mounting
7	32180-030	6	Clip-Tie	21	135-7226	1	Decal-Fuse
8	32180-197	1	Cap-Plug	22	80-9330	1	Audio Alarm ASM
10	121-8868	1	Fuse-Mini Blade, 20 Amp	22:1	104-5107	1	Nut-Plastic, Knurled
11	126-3991	3	Relay-Micro	23	100-4918	3	Diode
12	32180-156	1	Cap-Plug, 6 Way	24	135-1366	1	Resistor - 30K Ohms 2W 5% Overmolded
13	121-8867	1	Fuse-Mini Blade, 15 Amp	25	99-6124	1	Fuse-40 Amp
14	109-2407	1	Insulator-Battery	26	32180-019	1	Cover-Fuse, Single
15	1-543393	2	Insulator-Solenoid	27	32180-067	1	Clip-Harness,Tubing (16MM)
16	94-8002	1	Fuse-Blade, 50 Amp				
17	32181-014	1	Cover-Fuse Holder, Maxi				
19	32181-013	1	Cover-Fuseblock, 24F, Gep				

 
Deck Lift Assembly

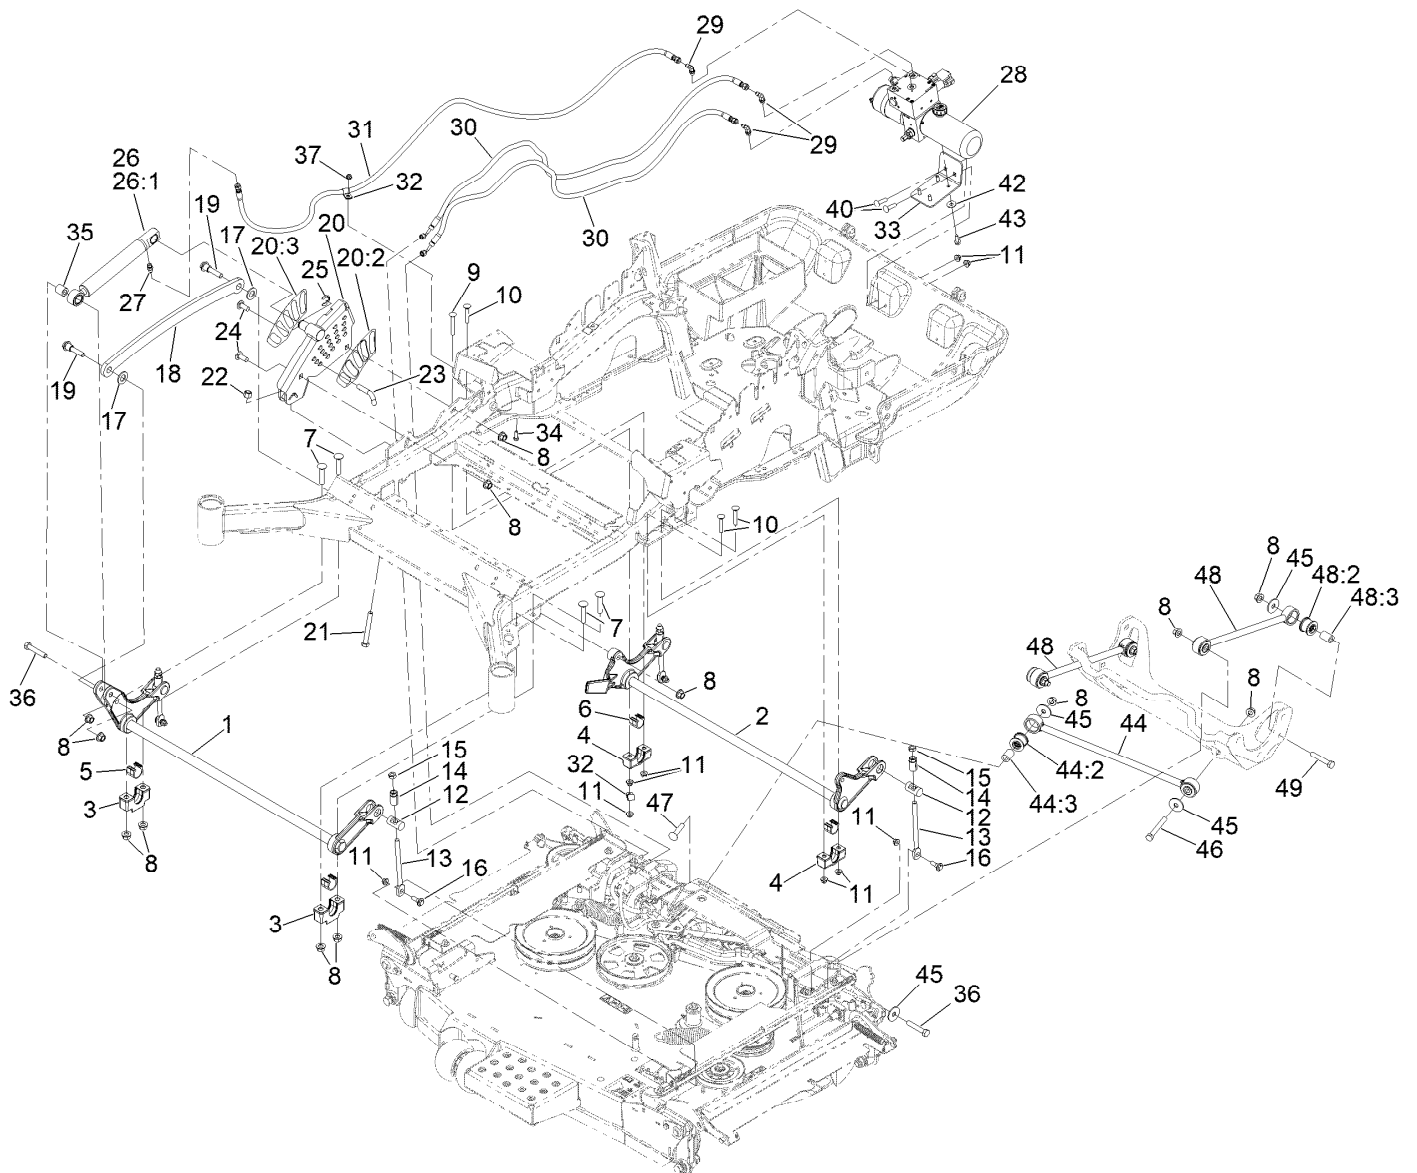

Deck Lift Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-1216-03	1	Lift-Deck, Front	25	32151-91	1	Ring-Retaining
2	116-2645-03	1	Lift-Deck, Rear	26	126-7841	1	Lift Cylinder ASM
3	109-9409	2	Support-Bearing, Cross Shaft (Front)	26:1	142-2767	1	Kit, CYL Repair
4	127-0553	2	Support-Bearing, Cross Shaft (Rear)	27	109-2017	1	Adapter, Straight
5	109-9410	2	Bearing-Cross Shaft, Front	28	146-5089	1	Power Unit-Hydraulic
6	109-7173	2	Bearing-Cross Shaft, Rear	29	109-0760	3	Adapter, 90°
7	116-1700	4	Bolt-CARR	30	135-3330	2	Hose-HYD, HP
8	99-5107	15	Nut-Lock	31	135-3331	1	Hose-HYD, HP
9	3231-9	1	Screw-CARR	32	2412-138	2	R-Clamp
10	3231-7	3	Screw-CARR	33	142-2158-03	1	Mount-Power Unit
11	104-8301	11	Nut-HF, NI	34	322-4	1	Screw-HH
12	109-8353	4	Trunnion	35	135-1215	1	Spacer-Pivot
13	109-8007	4	Link-Adjuster, Deck Lift	36	325-11	3	Screw-HH
14	109-7840	4	Adjuster-Lift, Deck	37	104-8300	1	Nut-HF, NI
15	3218-5	4	Nut-Jam	40	3231-26	2	Screw-CARR
16	109-9840	4	Screw-Shoulder, HHF	42	3290-461	4	Washer-Spring
17	3256-28	2	Washer-Flat	43	3234-29	4	Screw-HHF
18	116-0797-03	1	Link-Lift, Deck	44	109-5013	1	Panhard Rod ASM
19	116-2022	2	Screw-HHF, Shoulder	44:2	109-5009	2	Bushing-Suspension, Rubber
20	126-7866	1	HOC ASM	44:3	109-5010	2	Spacer
20:2	126-9275	1	Decal-HOC	45	86-1990	6	Washer
20:3	135-1432	1	Decal-HOC, Outer	46	325-17	1	Screw-HH
21	116-0559	1	Bolt-TAP	47	3233-34	1	Screw-CARR
22	3296-23	1	Nut-Lock, NI	48	142-3269	2	ASM, Deck Strut
23	116-5584	1	Pin-HOC	48:2	135-2466	2	Bushing-Rubber
24	3233-26	2	Screw-CARR, Shortneck	48:3	109-5010	2	Spacer
				49	325-12	2	Screw-HH

 Power Unit Assembly No. 146-5089

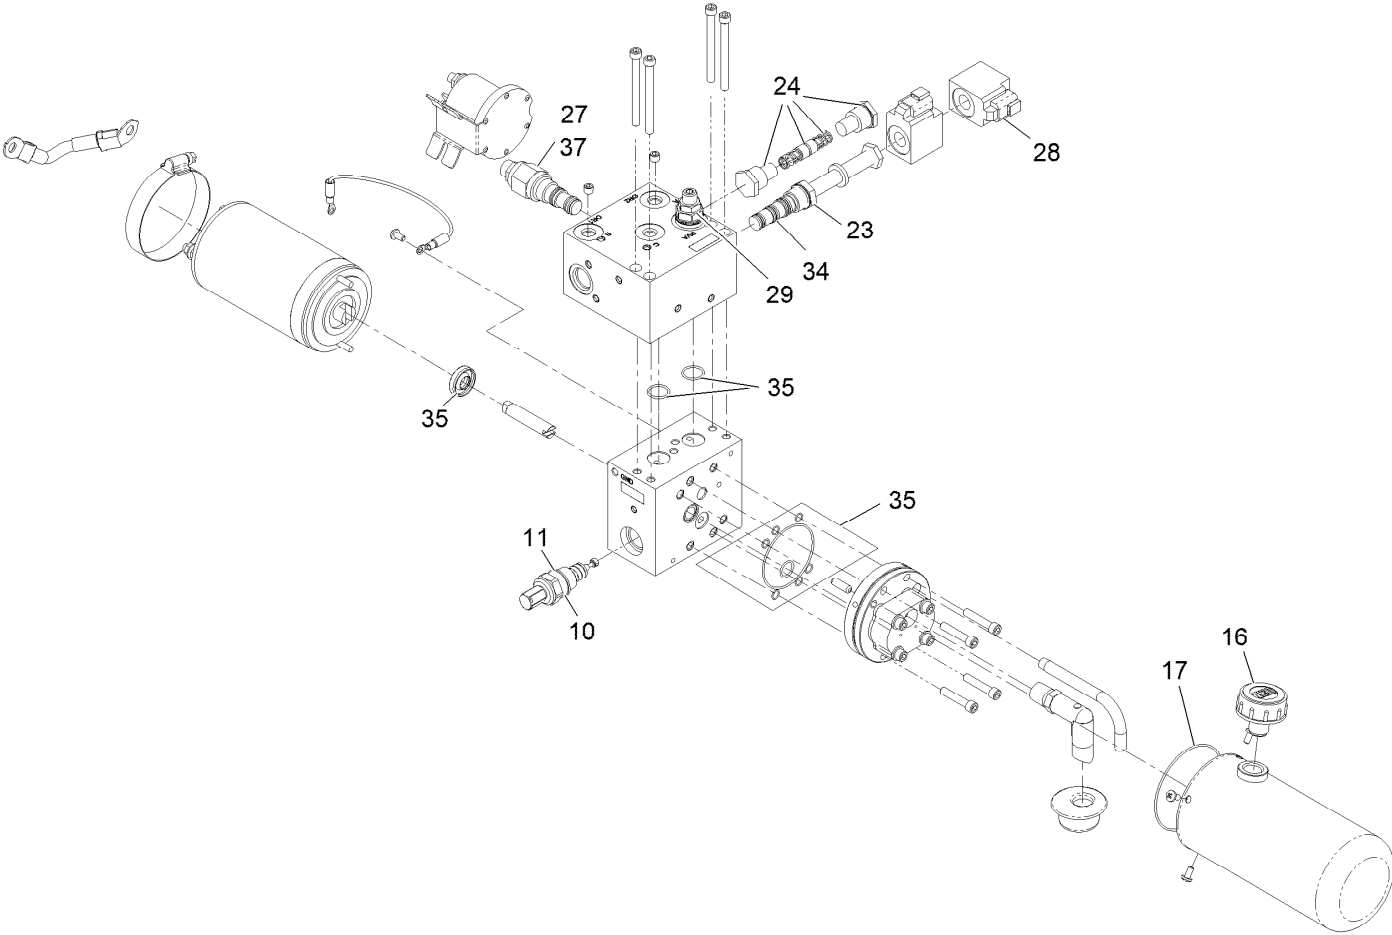


Power Unit Assembly No. 146-5089 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	135-7606	1	Valve,Relief,Vm01,210-320 Bar	27	135-7615	1	Counterbalance, 08, 5000-PSI
11	146-6722	1	Seal Kit	28	135-7616	2	Coil, 12Vdc, 16W, Rect, Deutsch
16	142-4398	1	Cap-Powerunit	29	146-5725	1	Valve-Relief [1500 Psi]
17	146-6644	1	O-Ring	34	135-7880	1	Parts Kit, Seal, 4W/3P Valve
23	135-7613	1	Cartridge, 4W/3P, 3000PSI, Mc, #8	35	146-6714	1	Seal Kit
24	135-7614	1	Parts Kit,DbI Po Ck Vlv,4Inman	37	146-6721	1	Seal Kit
				99	146-5944	1	Ruby Tran-1 Gal ●

● Not illustrated

 Engine Assembly

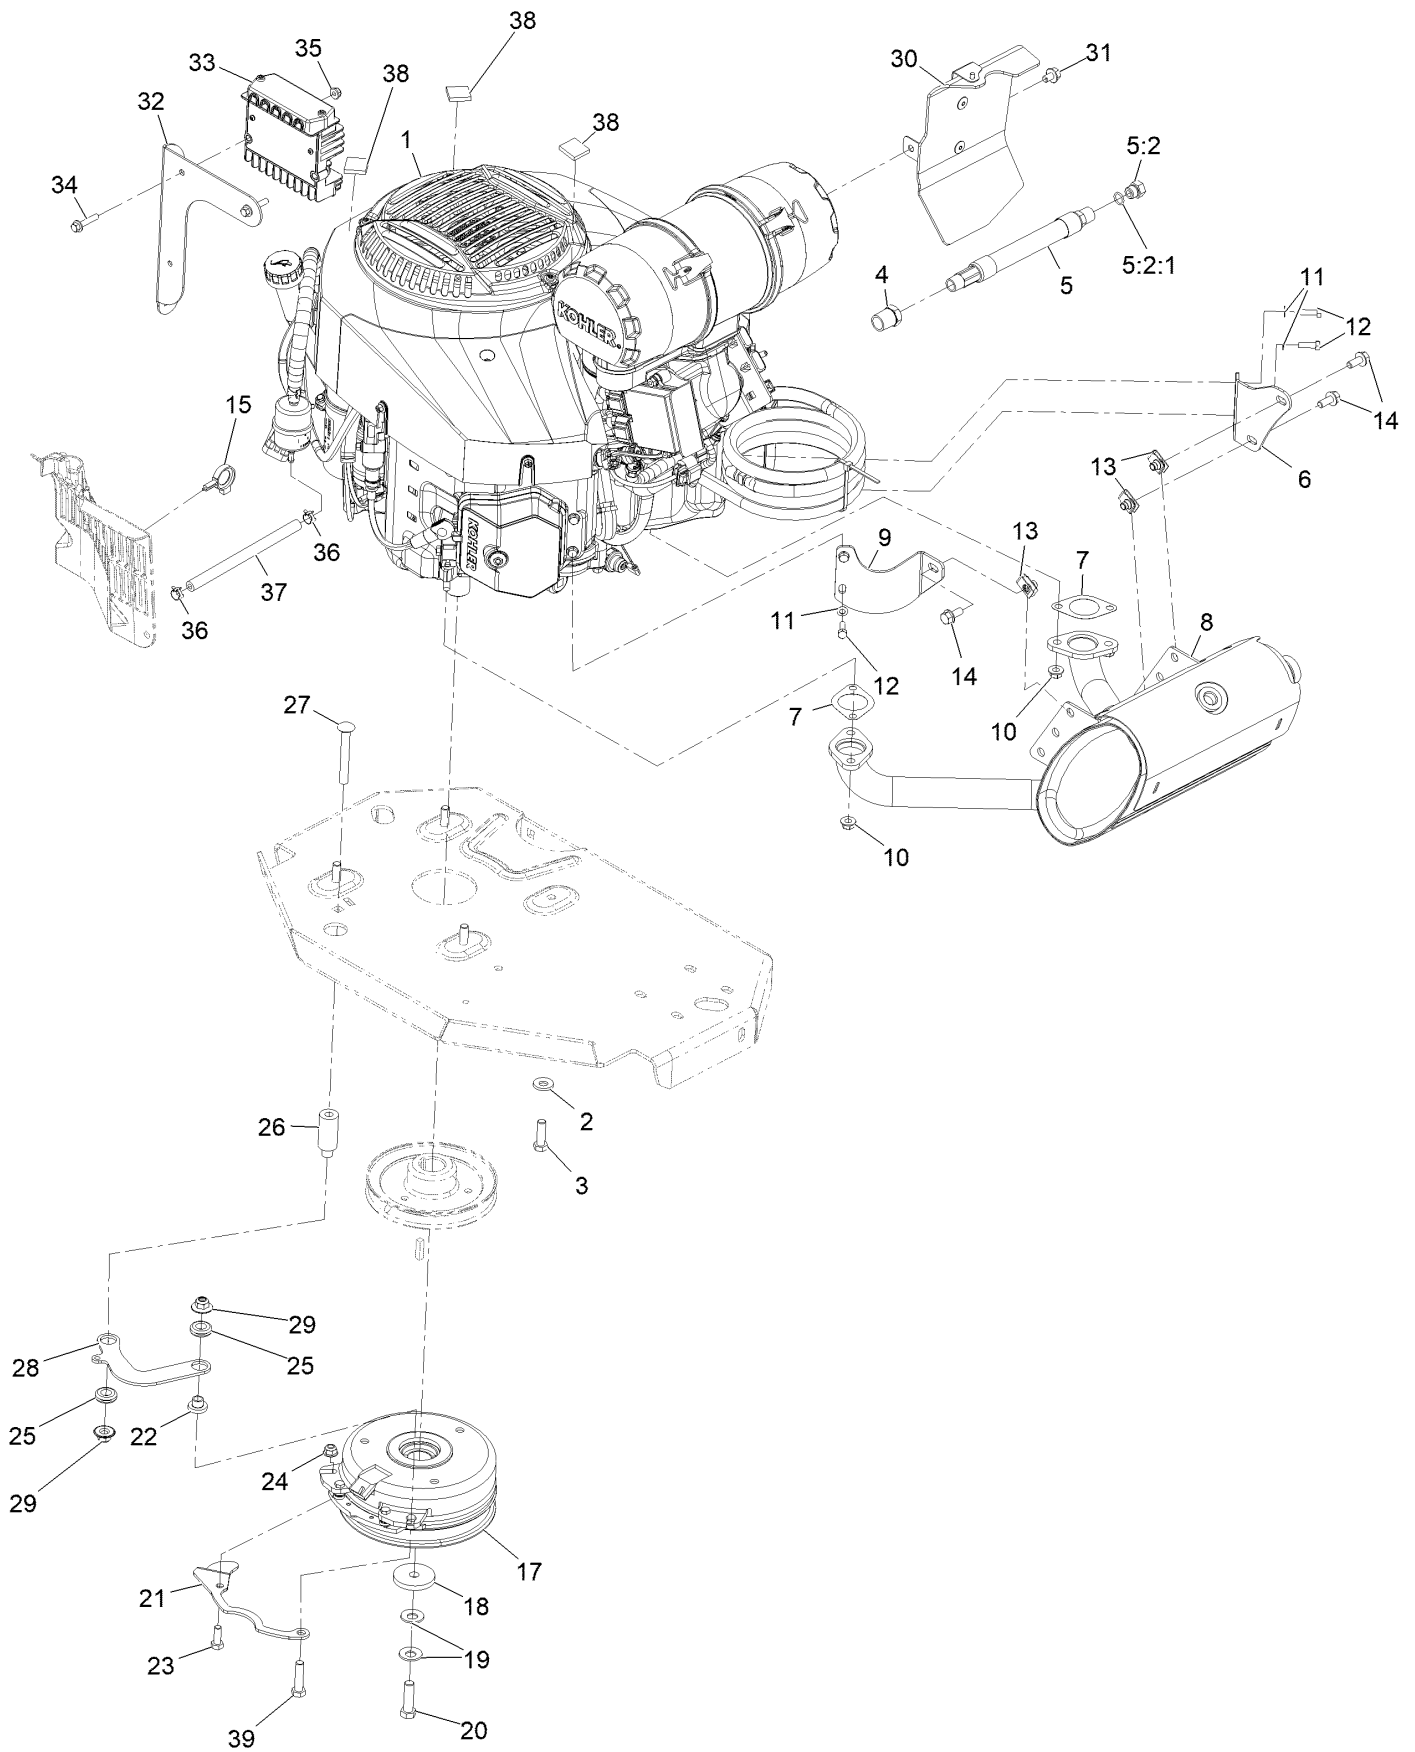


Engine Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Engine-Kohler Ecv980 - 3022 ●■	20	109-9761	1	Screw-HH 7/16-20 X 1 1/2 W/Loctite
2	98-5975	4	Washer-Spring Disc 3/8	21	116-3331-01	1	Belt-Guide
3	323-7	4	Screw-HH 3/8-16 X 1 1/4	22	116-3318	1	Spacer
4	103-1390	1	Bushing	23	322-4	2	Screw-HH 5/16-18 X 7/8
5	135-7298	1	Oil Drain Hose ASM	24	104-8300	2	Nut-Nyloc 5/16-18 Flg
5:2	353-508	1	Plug-W/O-Ring	25	93-5108	2	Grommet-Rubber
5:2:1	237-42	1	O-Ring	26	116-3319	1	Spacer
6	116-9048	1	Bracket-Muffler	27	3231-42	1	Bolt-Carriage 3/8-16 X 3
7	126-0359	2	Gasket-Exhaust	28	116-3317-01	1	Link-Anchor, Clutch
8	126-4645	1	Muffler	29	109-6658	2	Nut-Nyloc 3/8-16 Flg
9	126-5620	1	Bracket-Muffler, Front	30	135-7326	1	Baffle ASM
10	116-9626	4	Nut-Flange, Lock	31	68-9410	1	Screw-HH M8-1.25 X 12Mm
11	1-303435	4	Washer-Spring Disc 1/4	32	135-7731-03	1	Mount-Regulator
12	116-4295	4	Screw-HH M6-1 X 20Mm W/Patch	33	135-4434	1	Regulator And Rectifier ASM
13	94-2413	3	Nut-U 5/16-18	34	127-8639	2	Screw-HHF
14	3234-5	3	Screw-HH Flg 5/16-18 X 3/4	35	104-7201	2	Nut-Nyloc 1/4-20 Flg
15	105-1853	1	Clamp-Hose	36	2412-98	2	Clamp-Hose
17	126-4185	1	Clutch Kit	37	109-0303	1	Hose-Fuel Line 7"
18	109-6919	1	Washer-Plain	38	93-9155	3	Velcro
19	1-603610	2	Washer-Spring Disc 7/16	39	323-8	1	Screw-HH 3/8-16 X 1 1/2

● Not serviced separately

■ Obtain parts from www.kohlerplus.com

 
Hood and Oil Cooler Assembly

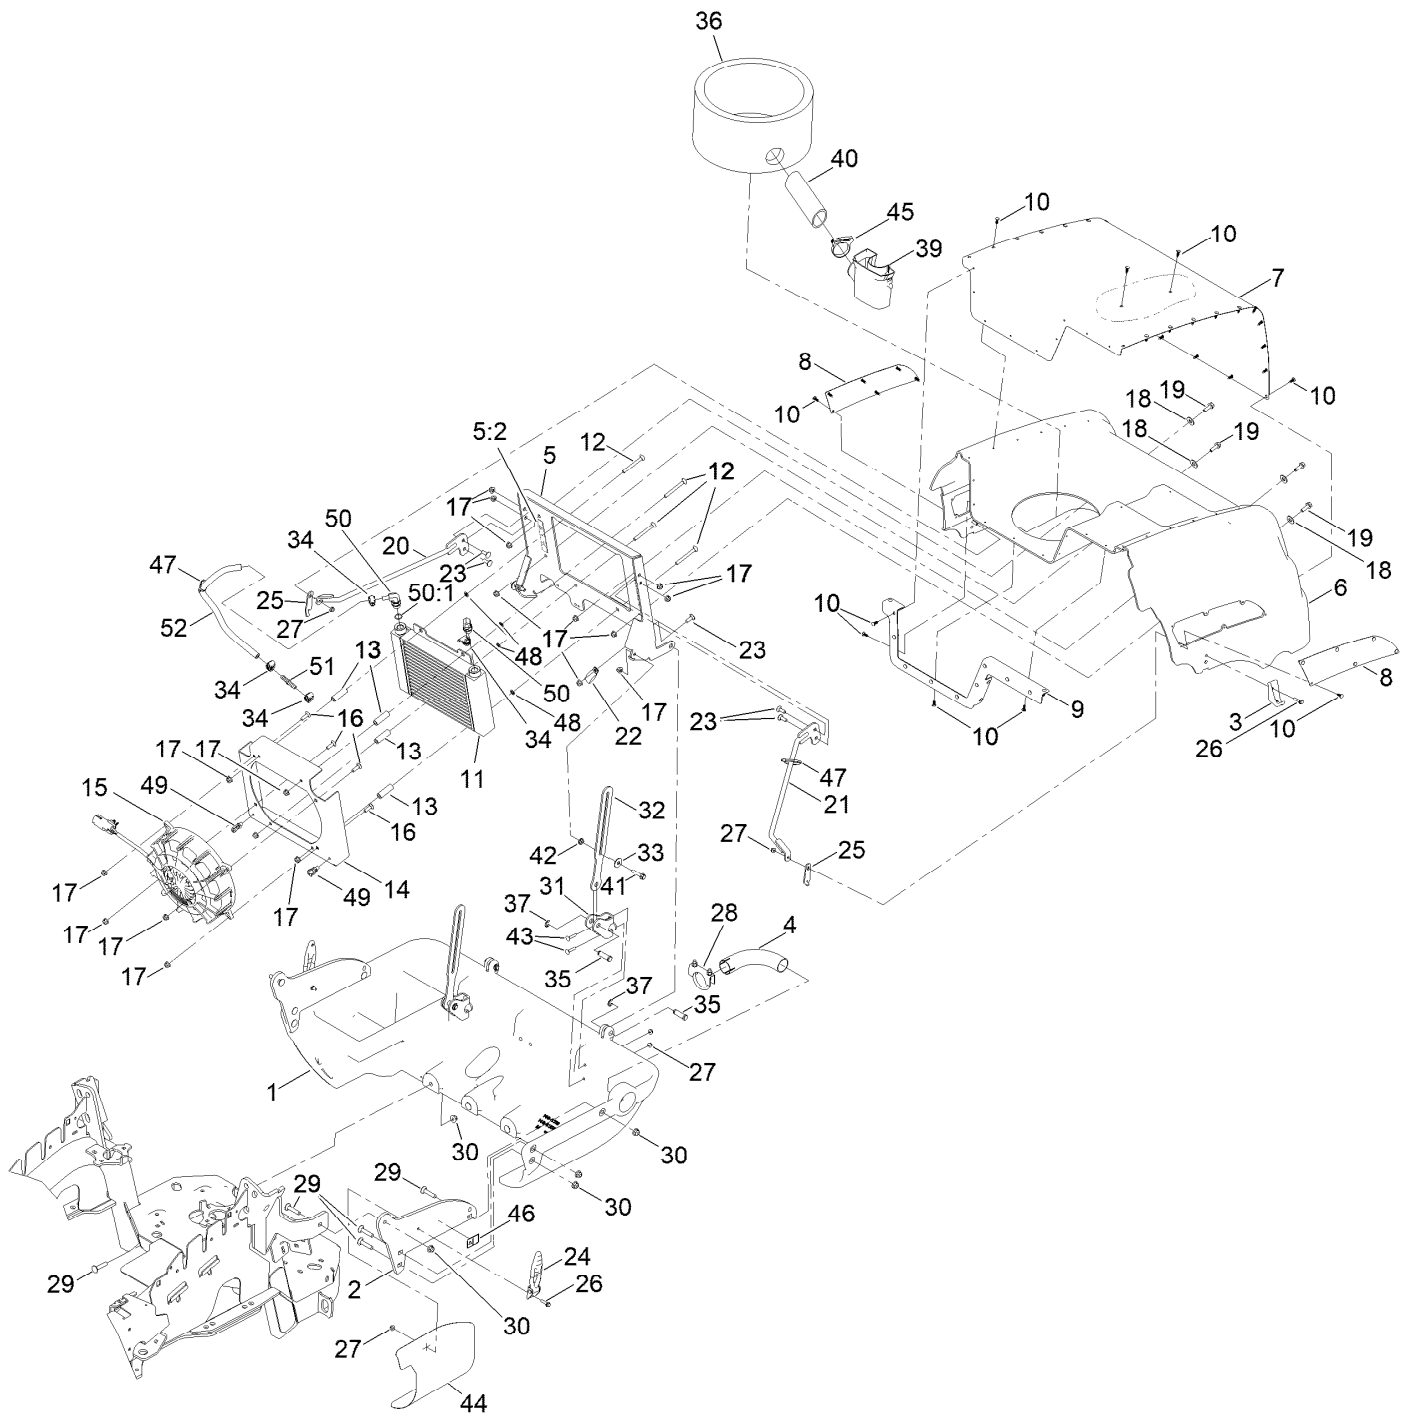

Hood and Oil Cooler Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-3340-03	1	Casting-Lower, Rear	27	104-7201	8	Nut-HF, NI
2	135-3344-03	2	Plate-Mount	28	18-2130	1	Clamp
3	126-8672	2	Latch-Catch	29	3231-5	11	Screw-CARR
4	135-1459	1	Tube-Exhaust	30	104-8301	11	Nut-HF, NI
5	146-6968	1	Mount-Cooler	31	135-4438-03	2	Bracket-Mount, Slide
5:2	93-7272	2	Decal-Warning	32	135-3321-03	2	Slide-Hood
6	135-3345	1	Hood	33	52-2900	2	Washer-Plastic
7	135-3324-03	1	Screen-Intake	34	135-7984	4	Clamp-Hose
8	135-3332-03	2	Screen-Intake	35	135-3347	4	Pin
9	135-4437-03	1	Cap-Perforation, Hood	36	135-3319	1	Foam-Inlet, Air
10	120-6737	57	Plug-Plastic	37	32120-47	4	Ring-Retaining, External
11	147-6648	1	Cooler-Oil	39	135-7203	1	Mount-Hose
12	3230-26	4	Screw-CARR	40	135-7442	1	Hose-Air Intake
13	146-6457	4	Tube-Spacer	41	115-1794	2	Screw-HHF
14	146-6580-03	1	Sheet-Fan Mount	42	32128-20	2	Nut-HF
15	135-0877	1	Fan	43	3229-3	4	Screw-CARR
16	3230-22	4	Screw-CARR	44	135-7312	1	Barrier-Heat
17	104-8300	19	Nut-HF, NI	45	135-7836	1	Clamp
18	3256-4	4	Washer-Flat	46	106-5517	1	Decal-Warning
19	3234-29	4	Screw-HHF	47	3290-378	4	Tie-Cable
20	135-4892	1	Support-Hood, RH	48	109-5667	4	Nut-Push
21	135-4874	1	Support-Hood, LH	49	32180-030	2	Clip-Tie
22	120-1959	1	Clamp	50	146-2506	2	Fitting-90
23	3230-10	5	Bolt-CARR	50:1	237-79	1	O-Ring
24	103-2898	2	Latch-Rubber	51	146-6643	1	Fitting-Mender-Strght
25	135-3353	2	Stop-Hood	52	146-6678	1	Hose-HYD, LP
26	120-4654	4	Screw-HHF				

 
Frame Decal Assembly

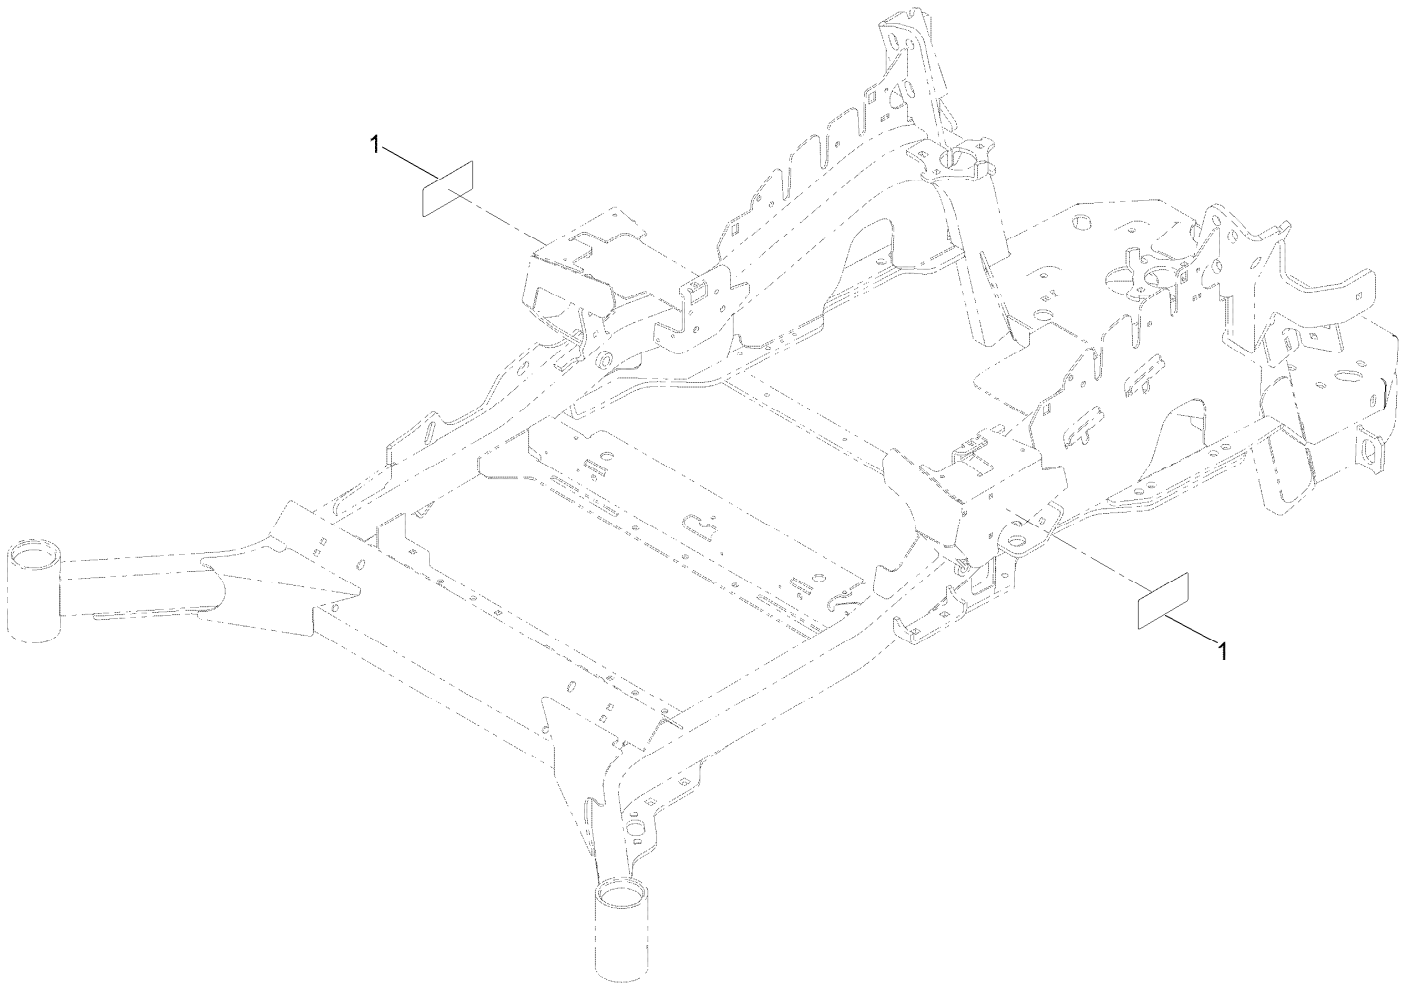

Frame Decal Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	140-4909	2	Decal-7500 Series

 Deck and Discharge Tunnel Assembly

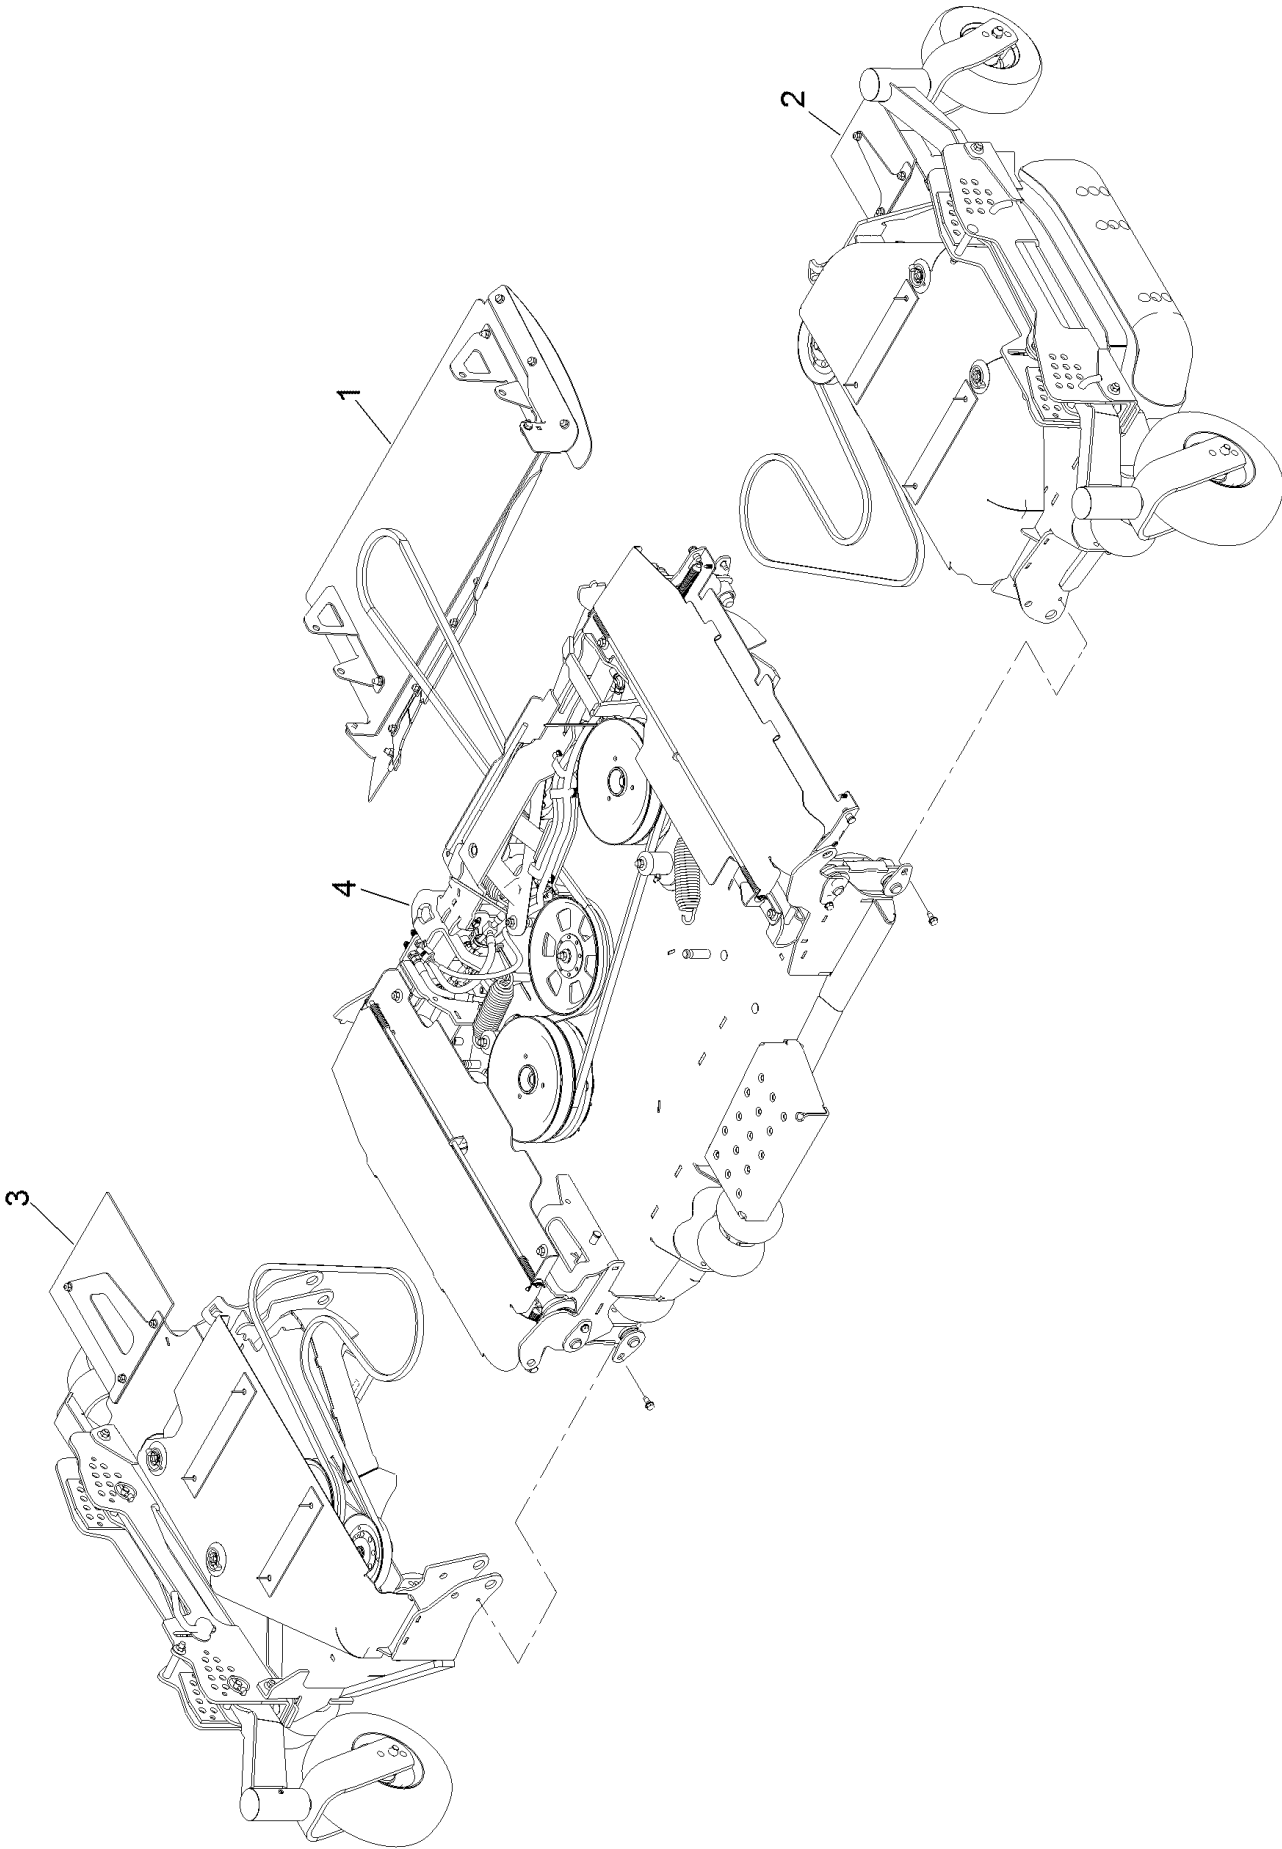


Deck and Discharge Tunnel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Discharge-Tunnel ASM, 96-Gas ●	3		1	ASM-Deck, RH Wing [gas] ●
2		1	ASM-Deck, LH Wing [gas] ●	4		1	ASM-Deck, Ctr 96 [toro] ●

● Not serviced separately

 
Discharge Tunnel Assembly

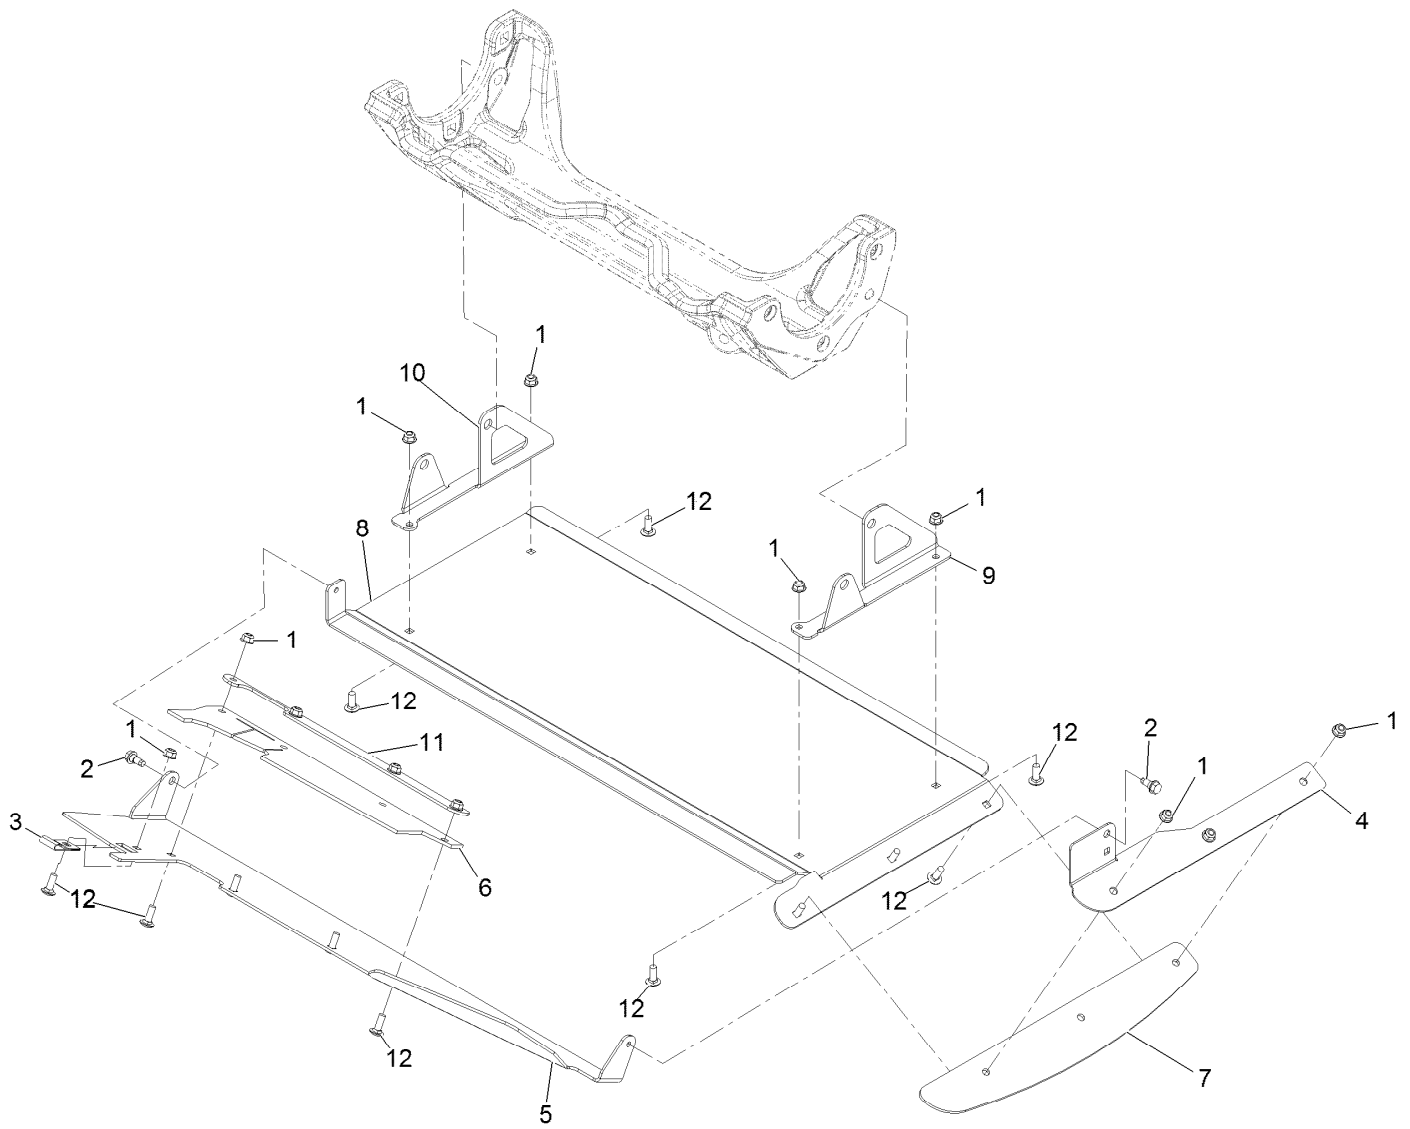

Discharge Tunnel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-8300	12	Nut-Nyloc 5/16-18 Flg	7	135-3789	1	Flap-Rubber
2	126-4424	2	Screw-Shoulder	8	135-5932-03	1	Panel-Discharge
3	135-0608	1	Bearing-Strap, Nylon	9	135-7041-03	1	Bracket-Tunnel Hanger LH
4	135-2090-03	1	Bracket-Flap, LH	10	135-7042-03	1	Bracket-Tunnel Hanger RH
5	135-2657-03	1	Panel-Discharge	11	135-7046-03	1	Support-LH Flap Rd96
6	135-3769	1	Flap-Discharge	12	3230-10	12	Bolt-Carriage 5/16-18 X 7/8

 LH Deck Assembly

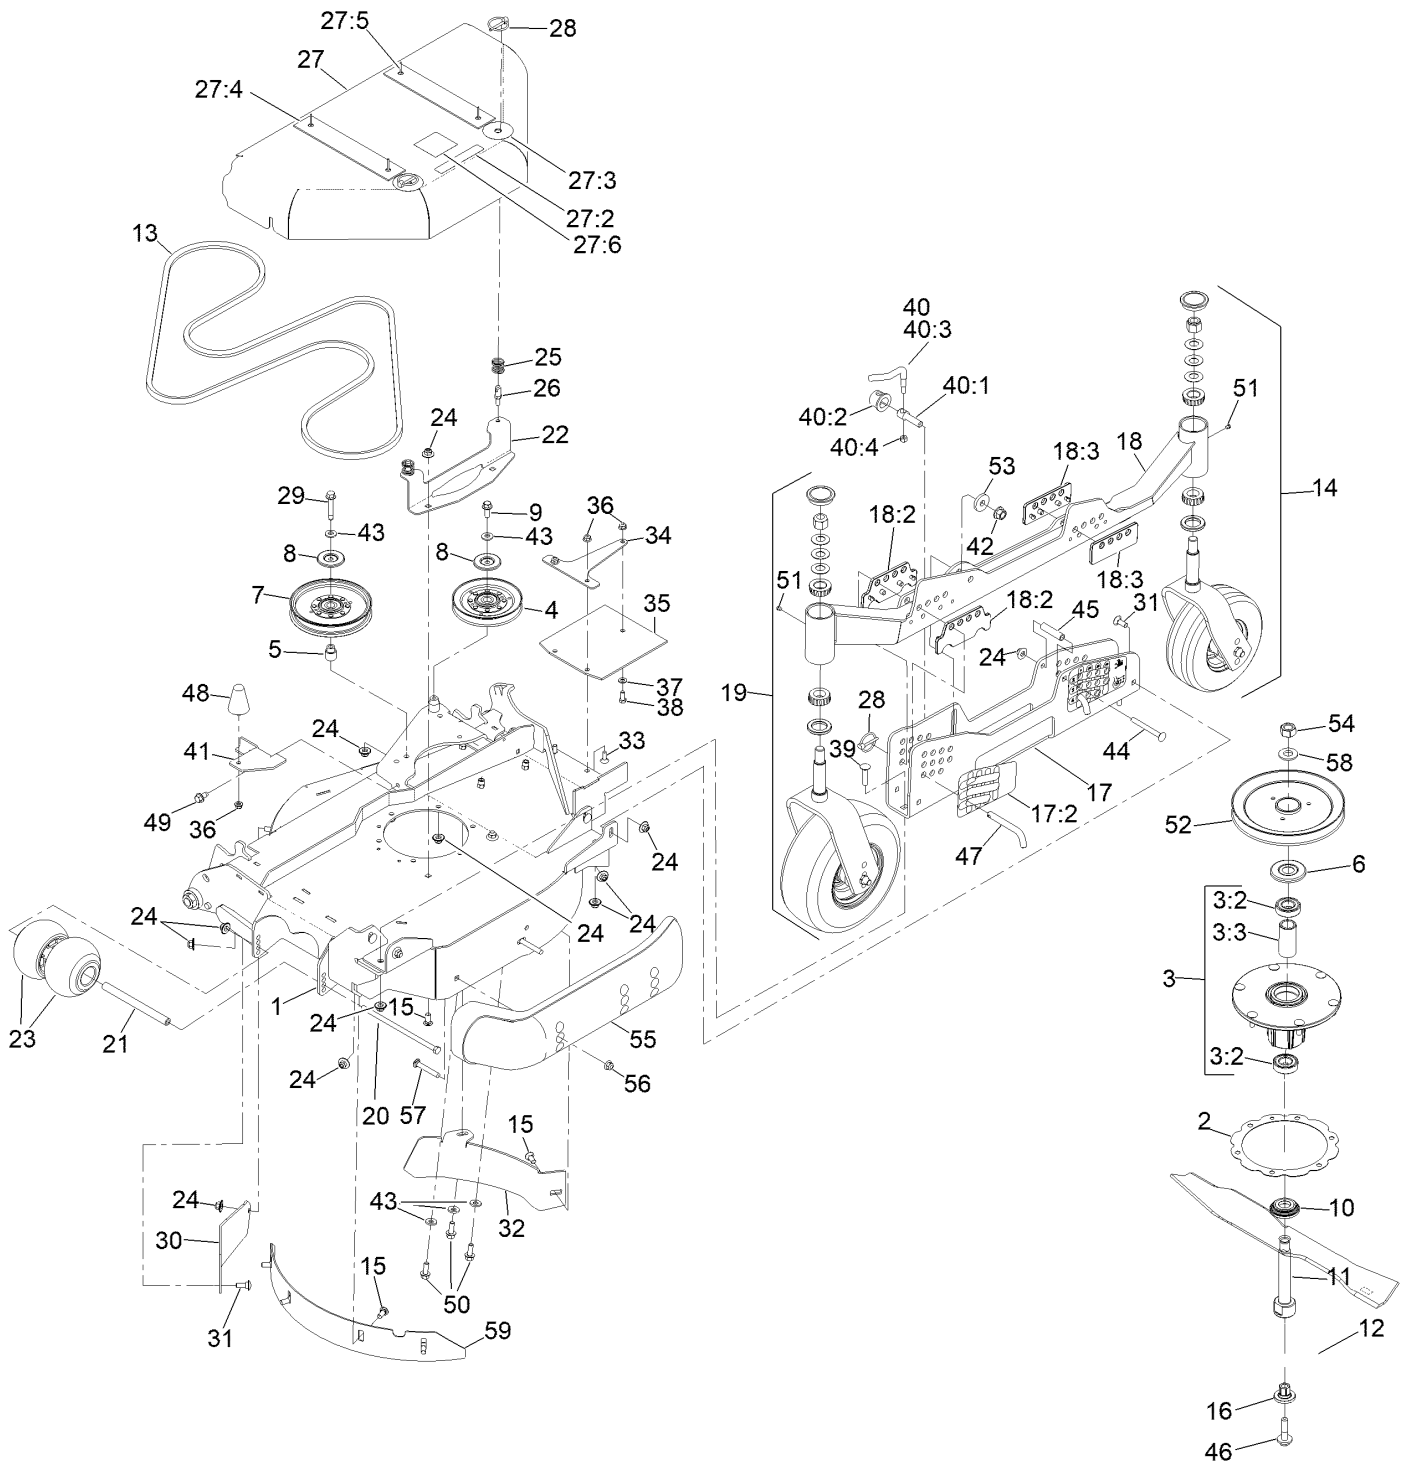


LH Deck Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	146-3903	1	ASM-Deck, LH Wing [w/Decals]	28	92-1298	4	Pin-Lynch
2	140-0986	1	Ring-Spacer, Housing	29	126-2956	1	Screw-HHF
3	137-9780	1	Spindle ASM	30	126-9757-01	1	Plate-Fill
3:2	116-0720	2	Bearing-Ball	31	3231-2	6	Bolt-CARR
3:3	138-6042	1	Spacer-Bearing	32	135-3461-01	1	Baffle-Block
4	126-2960	1	Idler-V	33	3230-16	2	Screw-CARR
5	1-633456	1	Bushing, Idler	34	135-0618-03	1	Support-Flap, LH
6	103-1330	1	Guard-Bearing, Top	35	135-1849	1	Guard-Tire, LH
7	126-7685	1	Idler-Pulley	36	104-8300	4	Nut-HF, NI
8	126-8043	2	Shield-Dust	37	3256-23	1	Washer-Plain
9	3234-42	1	Screw-HHF	38	322-3	1	Screw-HH
10	137-9784	1	Guard-Bottom	39	3231-5	2	Screw-CARR
11	138-6045	1	Shaft-Spindle	40	107-1664	1	Lever ASM
12	140-1246	1	Blade-24.50 Mulch	40:1	106-3239	1	Screw-Lock
13	126-6442	1	Belt-V	40:2	107-1644	1	Cap-Lock
14		1	Rear Caster Wheel ASM ●	40:3	106-3241	1	Lever-Lock
15	3231-12	7	Bolt-CARR	40:4	3296-29	1	Nut-Lock, NI
16	137-9787	1	Bushing-Hex	41	135-2611-01	1	Bracket-Retainer, Cover
17	142-4241	1	ASM-Channel, HOC LH	42	99-5107	1	Nut-Lock
17:2	126-8597	2	Decal-HOC, LH	43	98-5975	5	Washer-Belleville
18	146-3831	1	ASM-LH Gauge Wheel Arm	44	3231-11	1	Screw-CARR
18:2	142-3501	2	Plate-Guide, Rear	45	135-2424	1	Spacer
18:3	142-3592	2	Plate-Guide, Front	46	109-9220	1	Screw-Sems
19		1	Caster Wheel ASM ●	47	135-2073	2	Pin-HOC
20	99-7203	1	Screw-HH	48	114-1925	1	Bumper-Rubber
21	126-6115	1	Spacer-Wheel	49	110-9380	1	Screw-HWH
22	135-2653-03	1	Bracket-Shield Mount, Outer	50	3234-11	3	Screw-HHF
23	103-8415	2	Roller-Anti-Scalp	51	1-811010	2	Plug
24	109-6658	24	Nut-Flange, NI	52	140-1185	1	Sheave-Drive, Blade
25	126-1503	2	Spring	53	30-8770	1	Washer
26	135-7455	2	Pin, Spring	54	116-7306	1	Nut-Hex
27	146-7205	1	ASM-LH Wing Shield	55	112-1479	1	Skid-Bumper, Deck
27:2	93-6687	1	Decal-No Step	56	104-8301	2	Nut-HF, NI
27:3	135-3165	2	Decal-Cover, Scratch	57	3231-31	2	Screw-CARR
27:4	135-6706	2	Plate	58	103-2802	1	Washer
27:5	133-7130	4	Rivet-Pop	59	135-2459-01	1	Baffle-Depth, LH
27:6	146-7166	1	Decal-Warning, Rotating Part				

● Not serviced separately

 LH Wing Deck Decal Assembly No. 146-3903

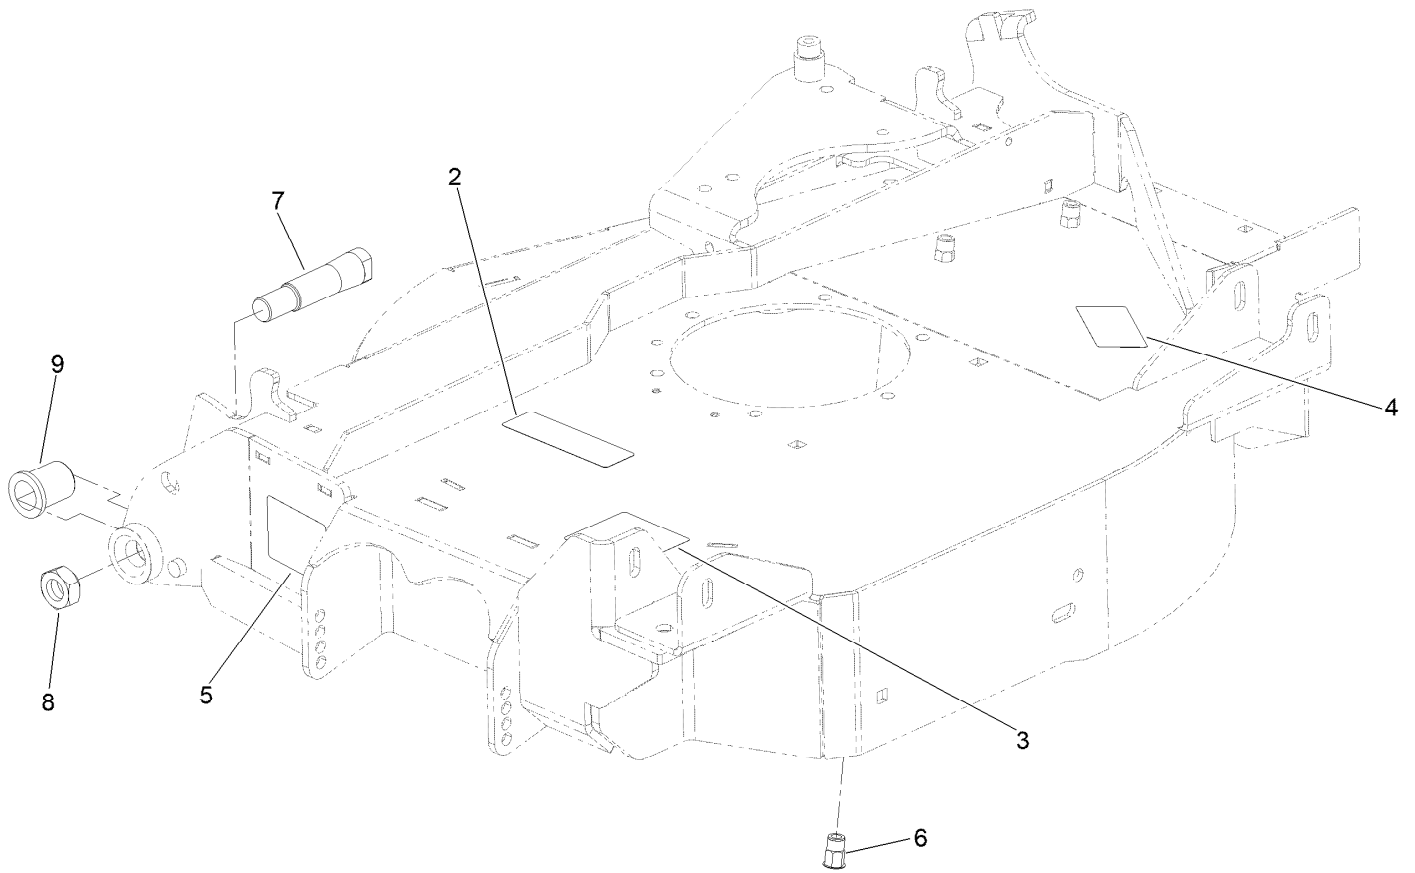


LH Wing Deck Decal Assembly No. 146-3903 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	112-9028	1	Decal-Cover, Missing
3	135-0664	1	Decal-Danger, Thrown Object
4	135-0670	1	Decal-Warning, Pinch Point
5	136-9042	1	Decal

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
6	146-2893	2	Bolt-Pivot Pin
7	146-3191	2	Nut-Lug
8	142-4794	2	Bushing-Flanged
9	142-4794	2	Bushing-Flanged

 Rear Caster Wheel Assembly

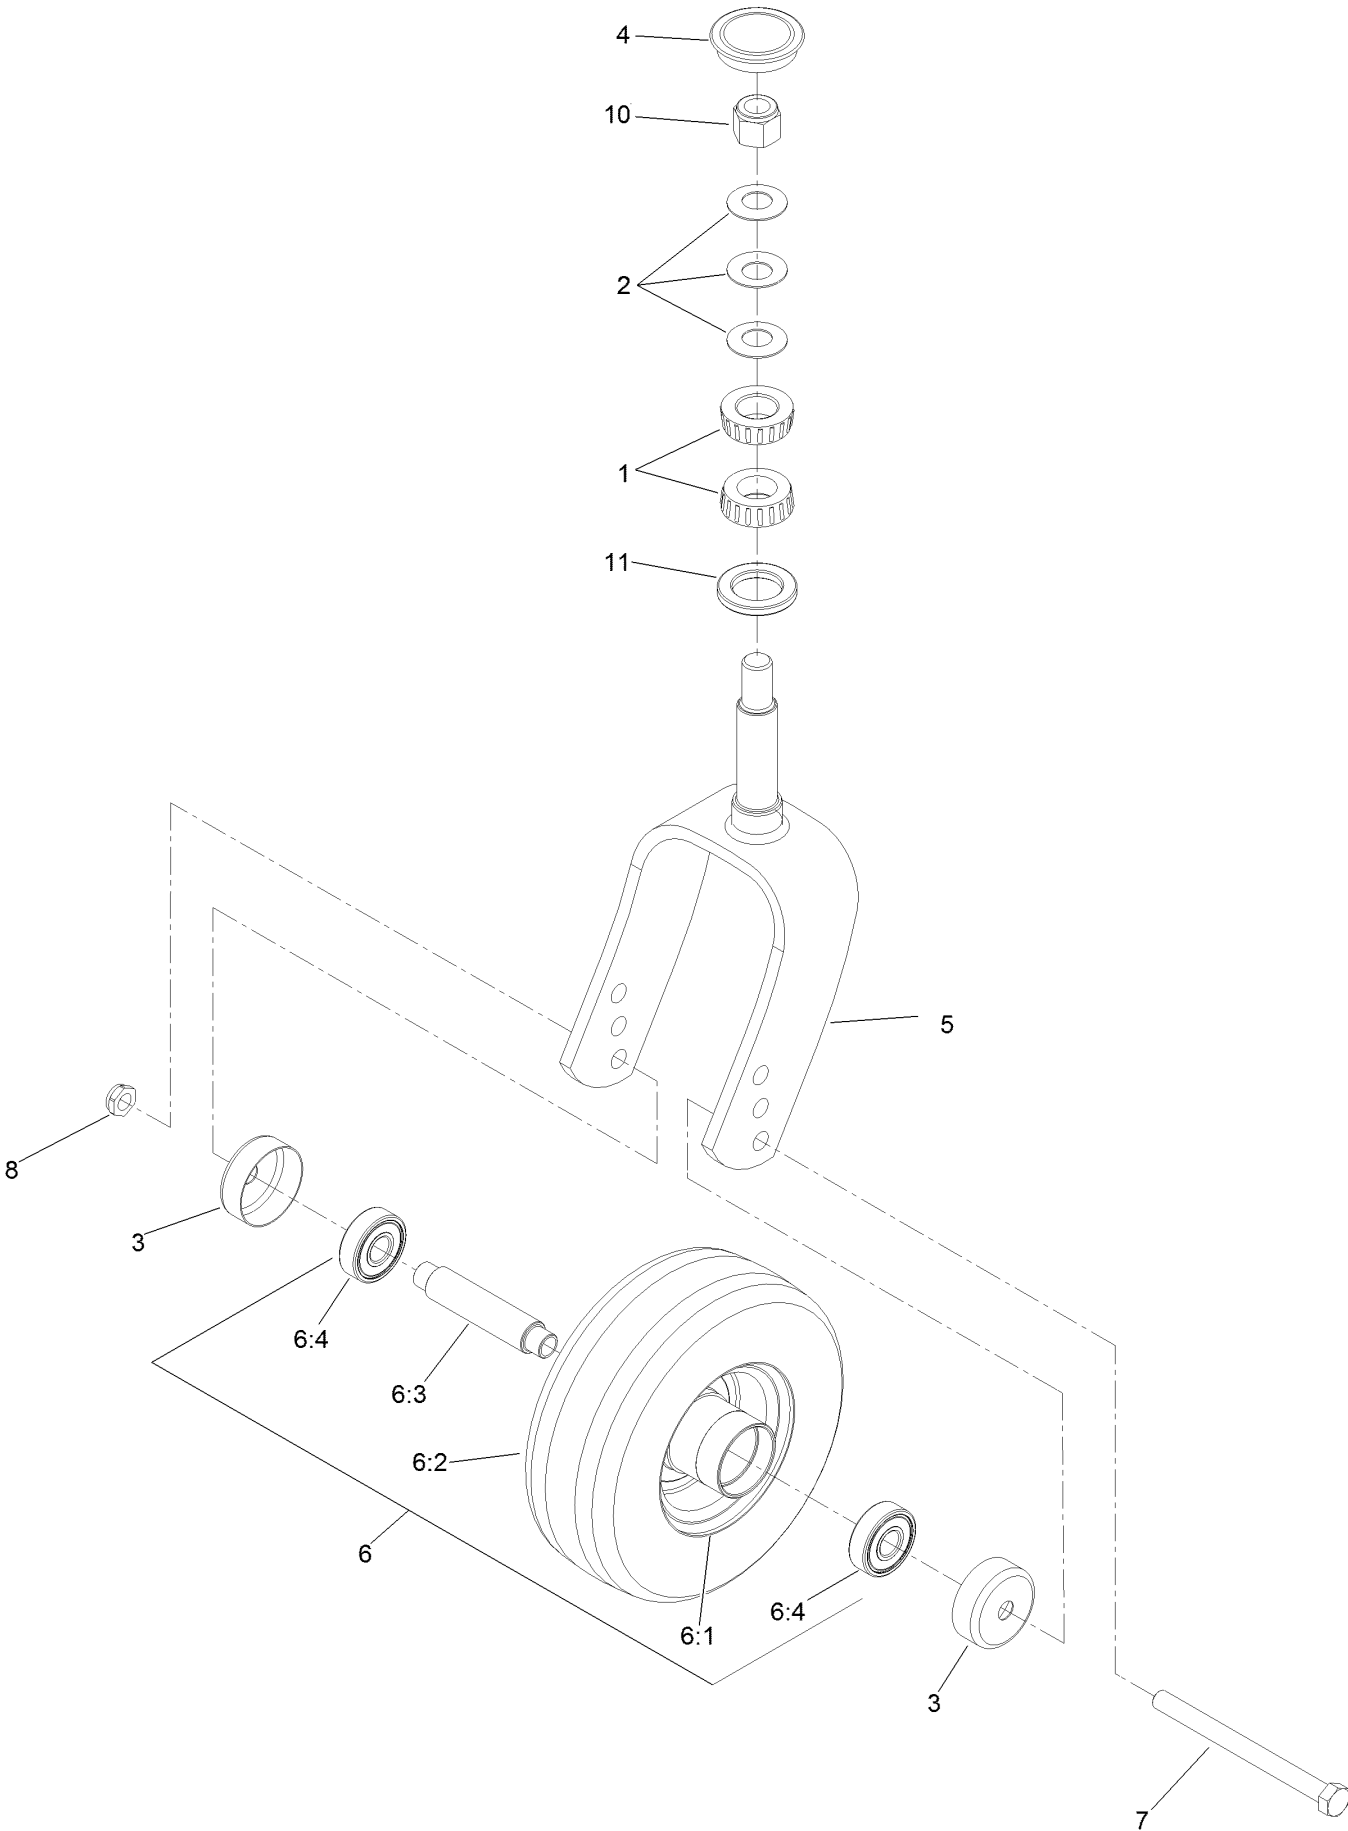


Rear Caster Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	1-543509	2	Bearing-Roller, Tapered	6:2	112-7065	1	Tire
2	1-633508	3	Washer-Bellville	6:3	126-7904	1	Axle-Caster
3	135-3218	2	Guard, Seal	6:4	116-4004	2	Bearing
4	103-4882	1	Cap-Grease	7	325-20	1	Screw-HH
5	135-3793-01	1	Fork-Caster	8	3296-45	1	Nut-Hex
6		1	Wheel And Tire ASM ●	10	3296-51	1	Nut-Lock, NI
6:1	135-2646	1	Wheel	11	1-543511	1	Seal-Grease

● Not serviced separately

 Caster Fork and Wheel Assembly

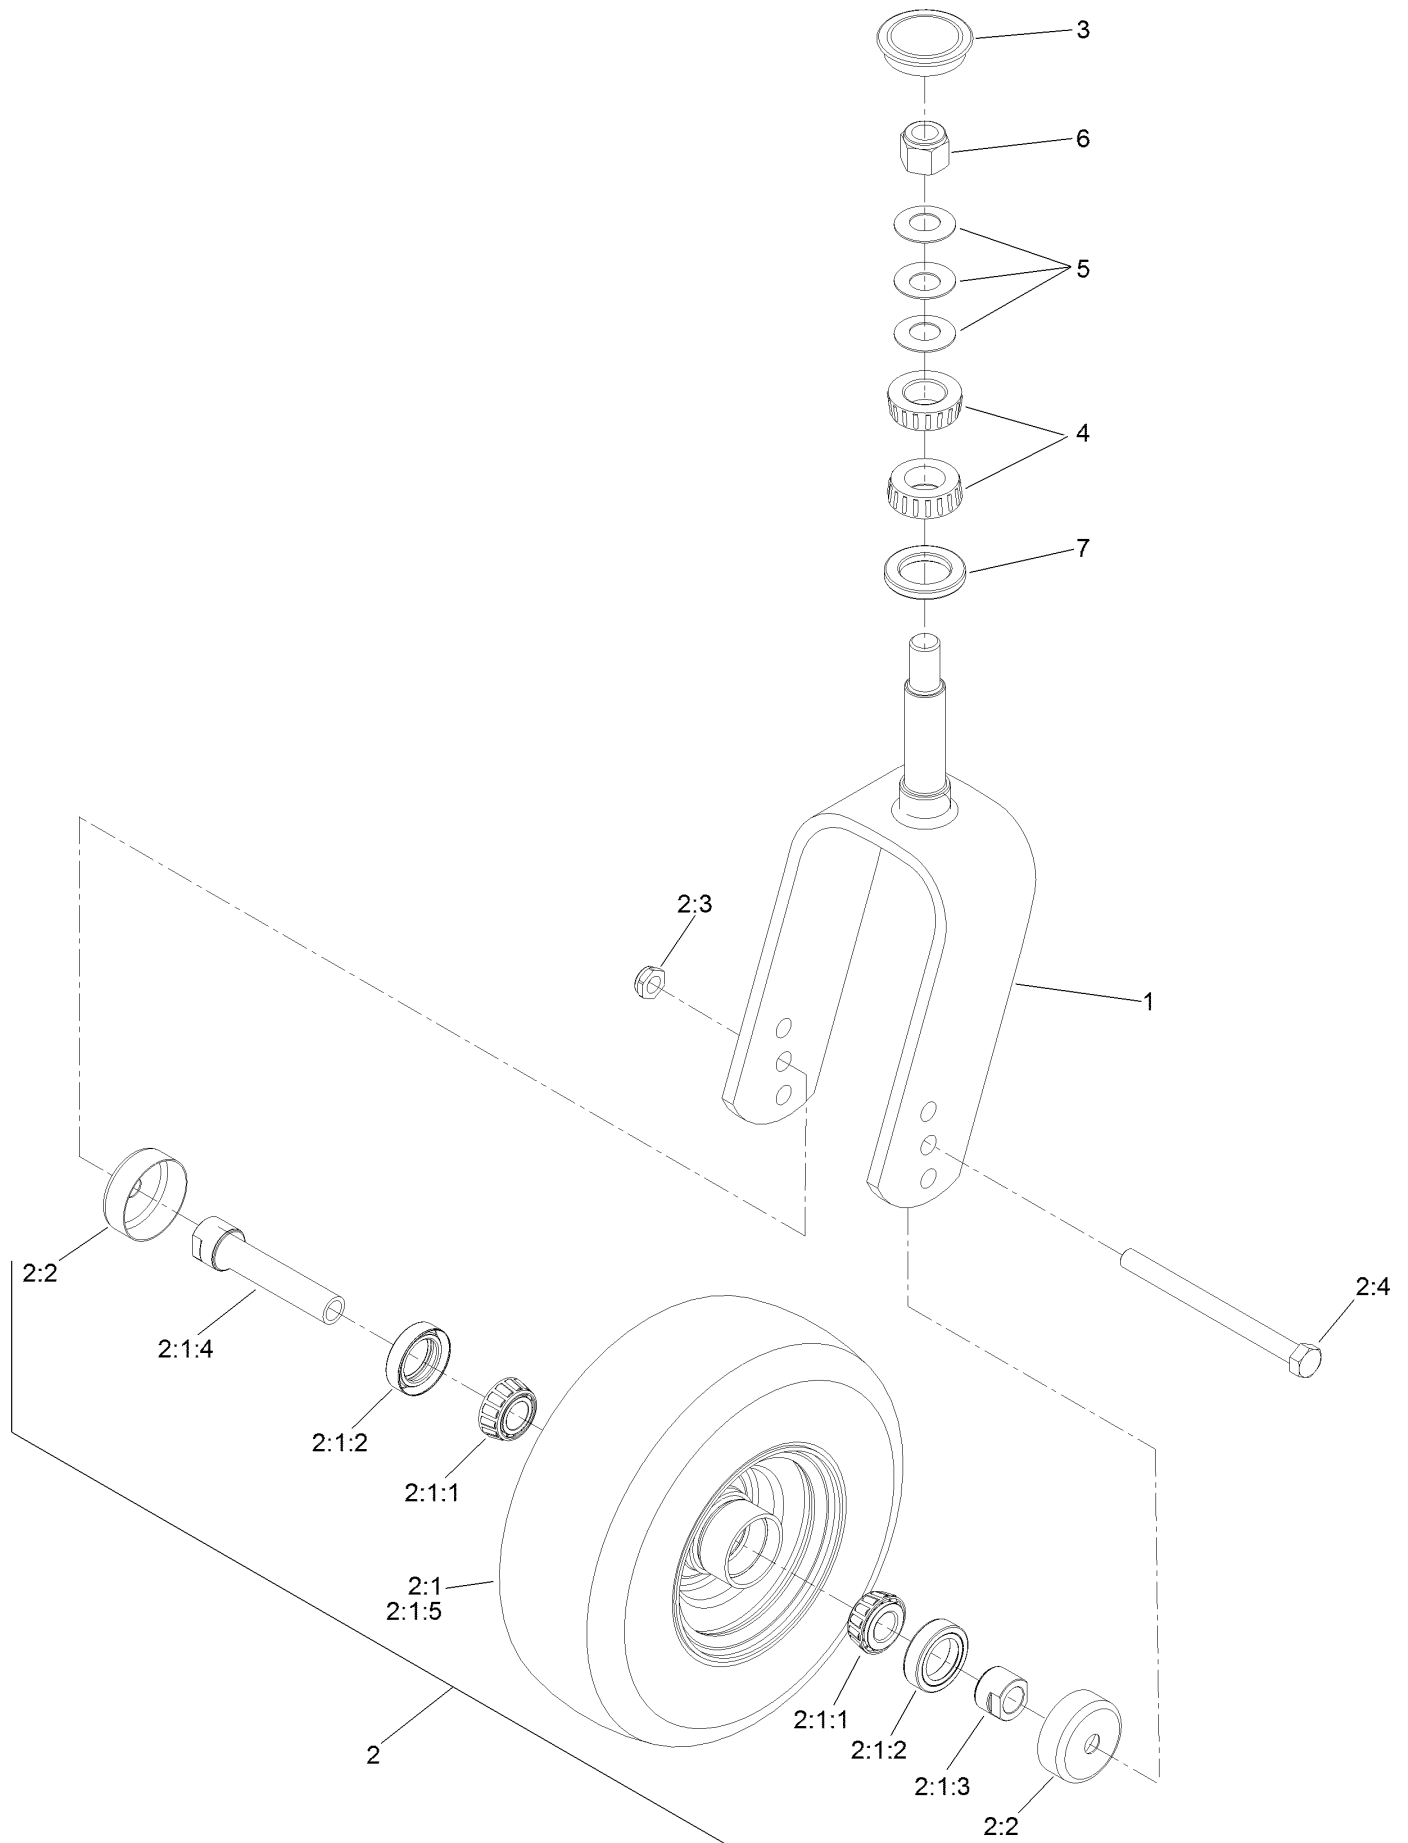


Caster Fork and Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-3794-01	1	Fork-Caster	2:2	103-2768	2	Guard-Seal
2	130-4558	1	Wheel/Tire And Bearing ASM	2:3	3296-45	1	Nut-Hex
2:1		1	Wheel And Bearing ASM ●	2:4	325-20	1	Screw-HH
2:1:1	1-633585	2	Bearing-Cone, Taper	3	103-4882	1	Cap-Grease
2:1:2	103-0063	2	Seal-Caster	4	1-543509	2	Bearing-Roller, Tapered
2:1:3	103-3051	1	Spacer-Nut ■	5	1-633508	3	Washer-Bellville
2:1:4	126-5359	1	Caster Axle ASM	6	3296-51	1	Nut-Lock, NI
2:1:5	130-4563	1	Wheel And Tire ASM	7	1-543511	1	Seal-Grease

● Not serviced separately

■ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on spacer nut

 RH Deck Assembly

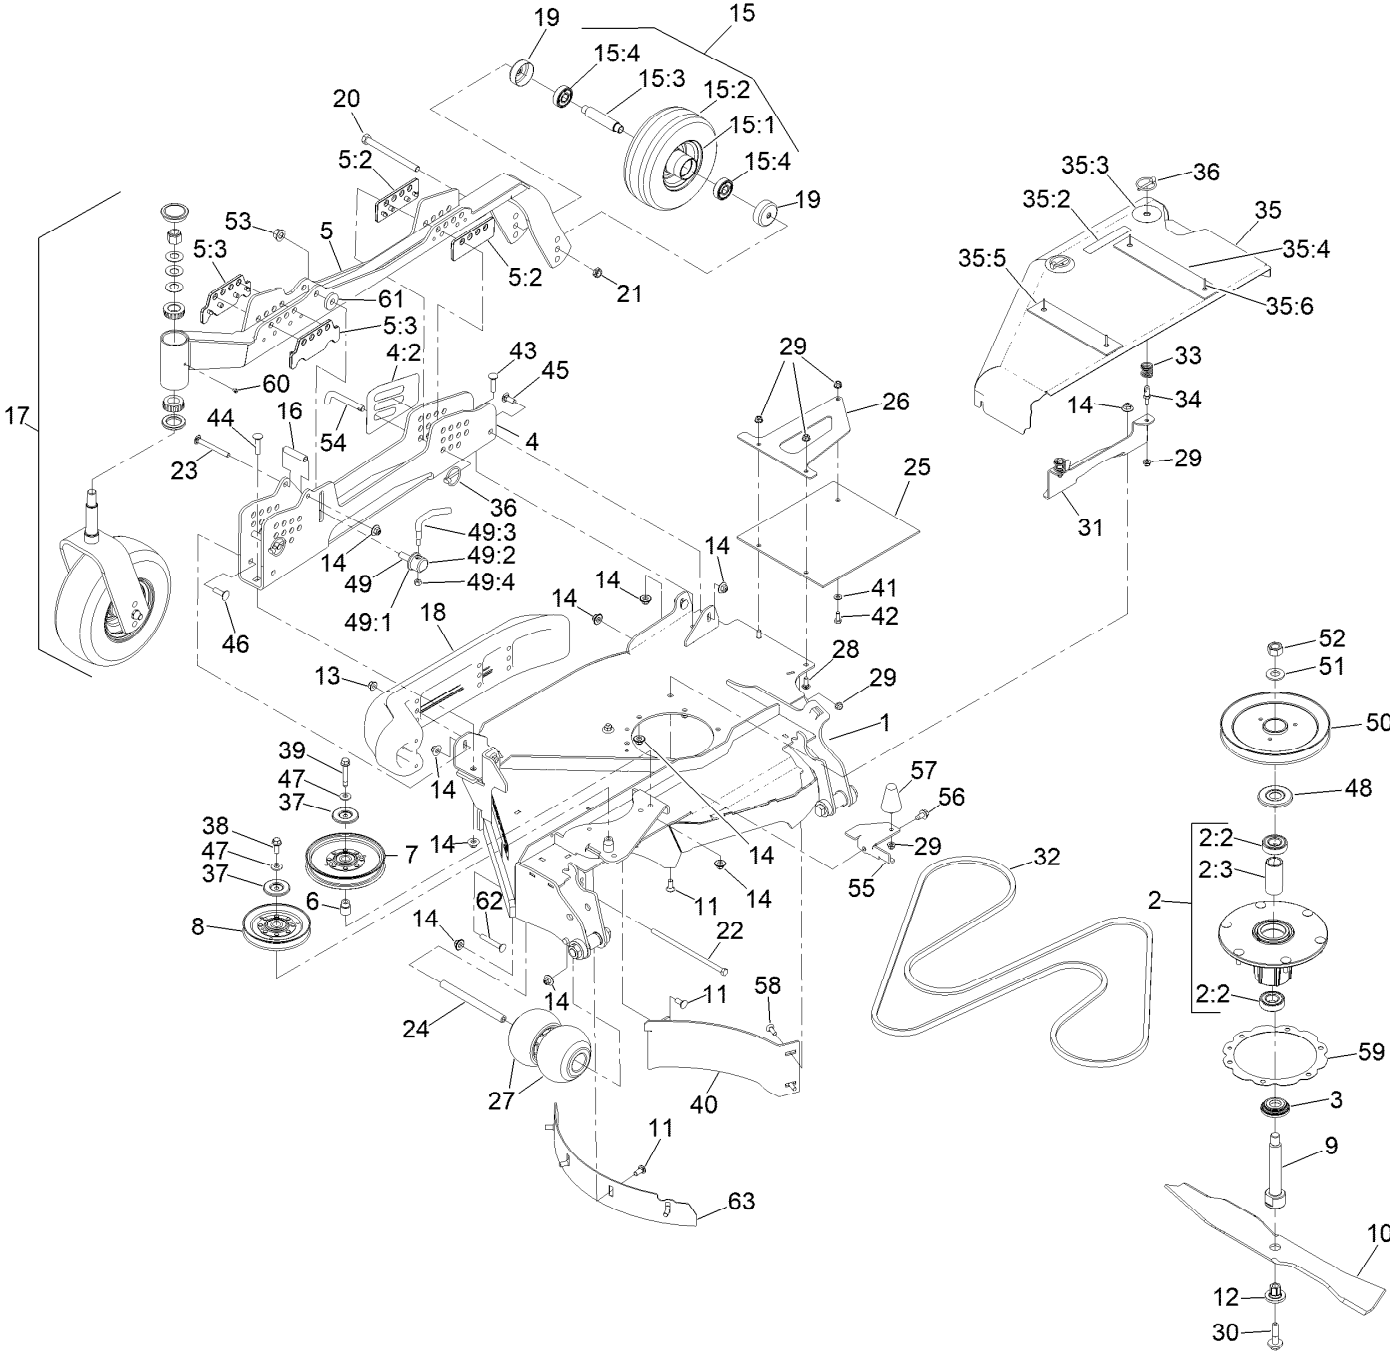


RH Deck Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	146-3904	1	ASM-Deck, RH Wing [w/Decals]	32	126-6447	1	Belt-V
2	137-9780	1	Spindle ASM	33	126-1503	2	Spring
2:2	116-0720	2	Bearing-Ball	34	135-7455	2	Pin, Spring
2:3	138-6042	1	Spacer-Bearing	35	135-6171	1	RH Wing Shield ASM
3	137-9784	1	Guard-Bottom	35:2	93-6687	1	Decal-No Step
4	142-4470	1	ASM-Channel, HOC RH W/Decals	35:3	135-3165	2	Decal-Cover, Scratch
4:2	146-5612	2	Decal-Height Of Cut-RH	35:4	135-6706	1	Plate
5	146-3832	1	ASM-RH Gauge Wheel Arm	35:5	135-6707	1	Plate-Front
5:2	142-3501	2	Plate-Guide, Rear	35:6	133-7130	4	Rivet-Pop
5:3	142-3592	2	Plate-Guide, Front	36	92-1298	4	Pin-Lynch
6	1-633456	1	Bushing, Idler	37	126-8043	2	Shield-Dust
7	126-7685	1	Idler-Pulley	38	3234-42	1	Screw-HHF
8	126-2960	1	Idler-V	39	126-2956	1	Screw-HHF
9	138-6045	1	Shaft-Spindle	40	135-3540-01	1	Baffle-Block, RH Wing
10	140-1246	1	Blade-24.50 Mulch	41	3256-23	1	Washer-Plain
11	3231-12	7	Bolt-CARR	42	322-3	1	Screw-HH
12	137-9787	1	Bushing-Hex	43	3231-4	1	Screw-CARR
13	104-8301	2	Nut-HF, NI	44	3231-5	1	Screw-CARR
14	109-6658	22	Nut-Flange, NI	45	3231-2	3	Bolt-CARR
15		1	Wheel And Tire ASM ●	46	3231-25	1	Bolt-CARR
15:1	135-2646	1	Wheel	47	98-5975	2	Washer-Belleville
15:2	112-7065	1	Tire	48	103-1330	1	Guard-Bearing, Top
15:3	126-7904	1	Axle-Caster	49	107-1664	1	Lever ASM
15:4	116-4004	2	Bearing	49:1	106-3239	1	Screw-Lock
16	135-2424	1	Spacer	49:2	107-1644	1	Cap-Lock
17		1	Caster Wheel ASM ●	49:3	106-3241	1	Lever-Lock
18	112-1479	1	Skid-Bumper, Deck	49:4	3296-29	1	Nut-Lock, NI
19	135-3218	2	Guard, Seal	50	140-1185	1	Sheave-Drive, Blade
20	325-20	1	Screw-HH	51	103-2802	1	Washer
21	3296-45	1	Nut-Hex	52	116-7306	1	Nut-Hex
22	99-7203	1	Screw-HH	53	99-5107	1	Nut-Lock
23	3231-11	1	Screw-CARR	54	135-2073	2	Pin-HOC
24	126-6115	1	Spacer-Wheel	55	135-2611-01	1	Bracket-Retainer, Cover
25	135-2068	1	Guard-Tire	56	110-9380	1	Screw-HWH
26	135-2067-03	1	Support-Flap, RH	57	114-1925	1	Bumper-Rubber
27	103-8415	2	Roller-Anti-Scalp	58	3230-22	2	Screw-CARR
28	3230-16	2	Screw-CARR	59	140-0986	1	Ring-Spacer, Housing
29	104-8300	8	Nut-HF, NI	60	1-811010	1	Plug
30	109-9220	1	Screw-Sems	61	30-8770	1	Washer
31	135-2653-03	1	Bracket-Shield Mount, Outer	62	3231-31	2	Screw-CARR
				63	135-2460-01	1	Baffle-Depth, RH

● Not serviced separately

 RH Wing Deck Decal Assembly No. 146-3904

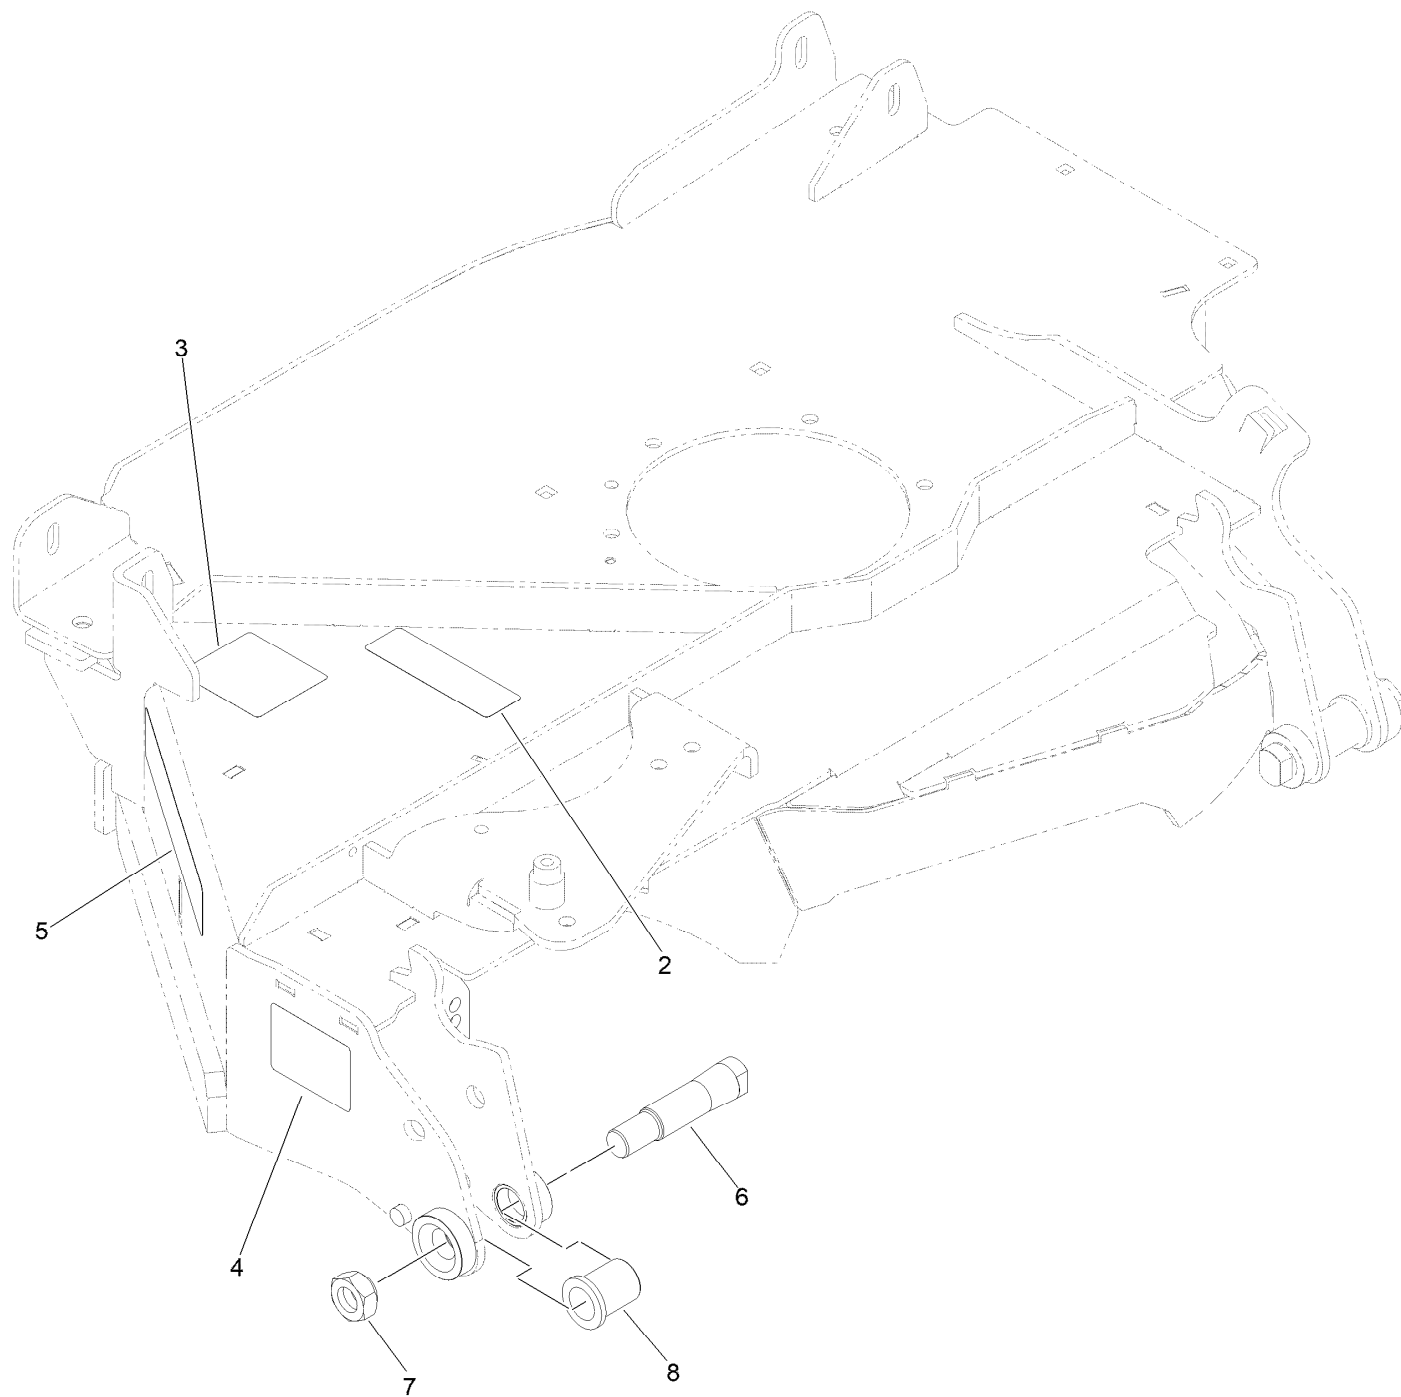


RH Wing Deck Decal Assembly No. 146-3904 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	112-9028	1	Decal-Cover, Missing
3	135-0664	1	Decal-Danger, Thrown Object
4	135-0670	1	Decal-Warning, Pinch Point

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	136-9042	1	Decal
6	146-2893	2	Bolt-Pivot Pin
7	146-3191	2	Nut-Lug
8	142-4794	2	Bushing-Flanged

 
Center Deck Belt Drive Assembly

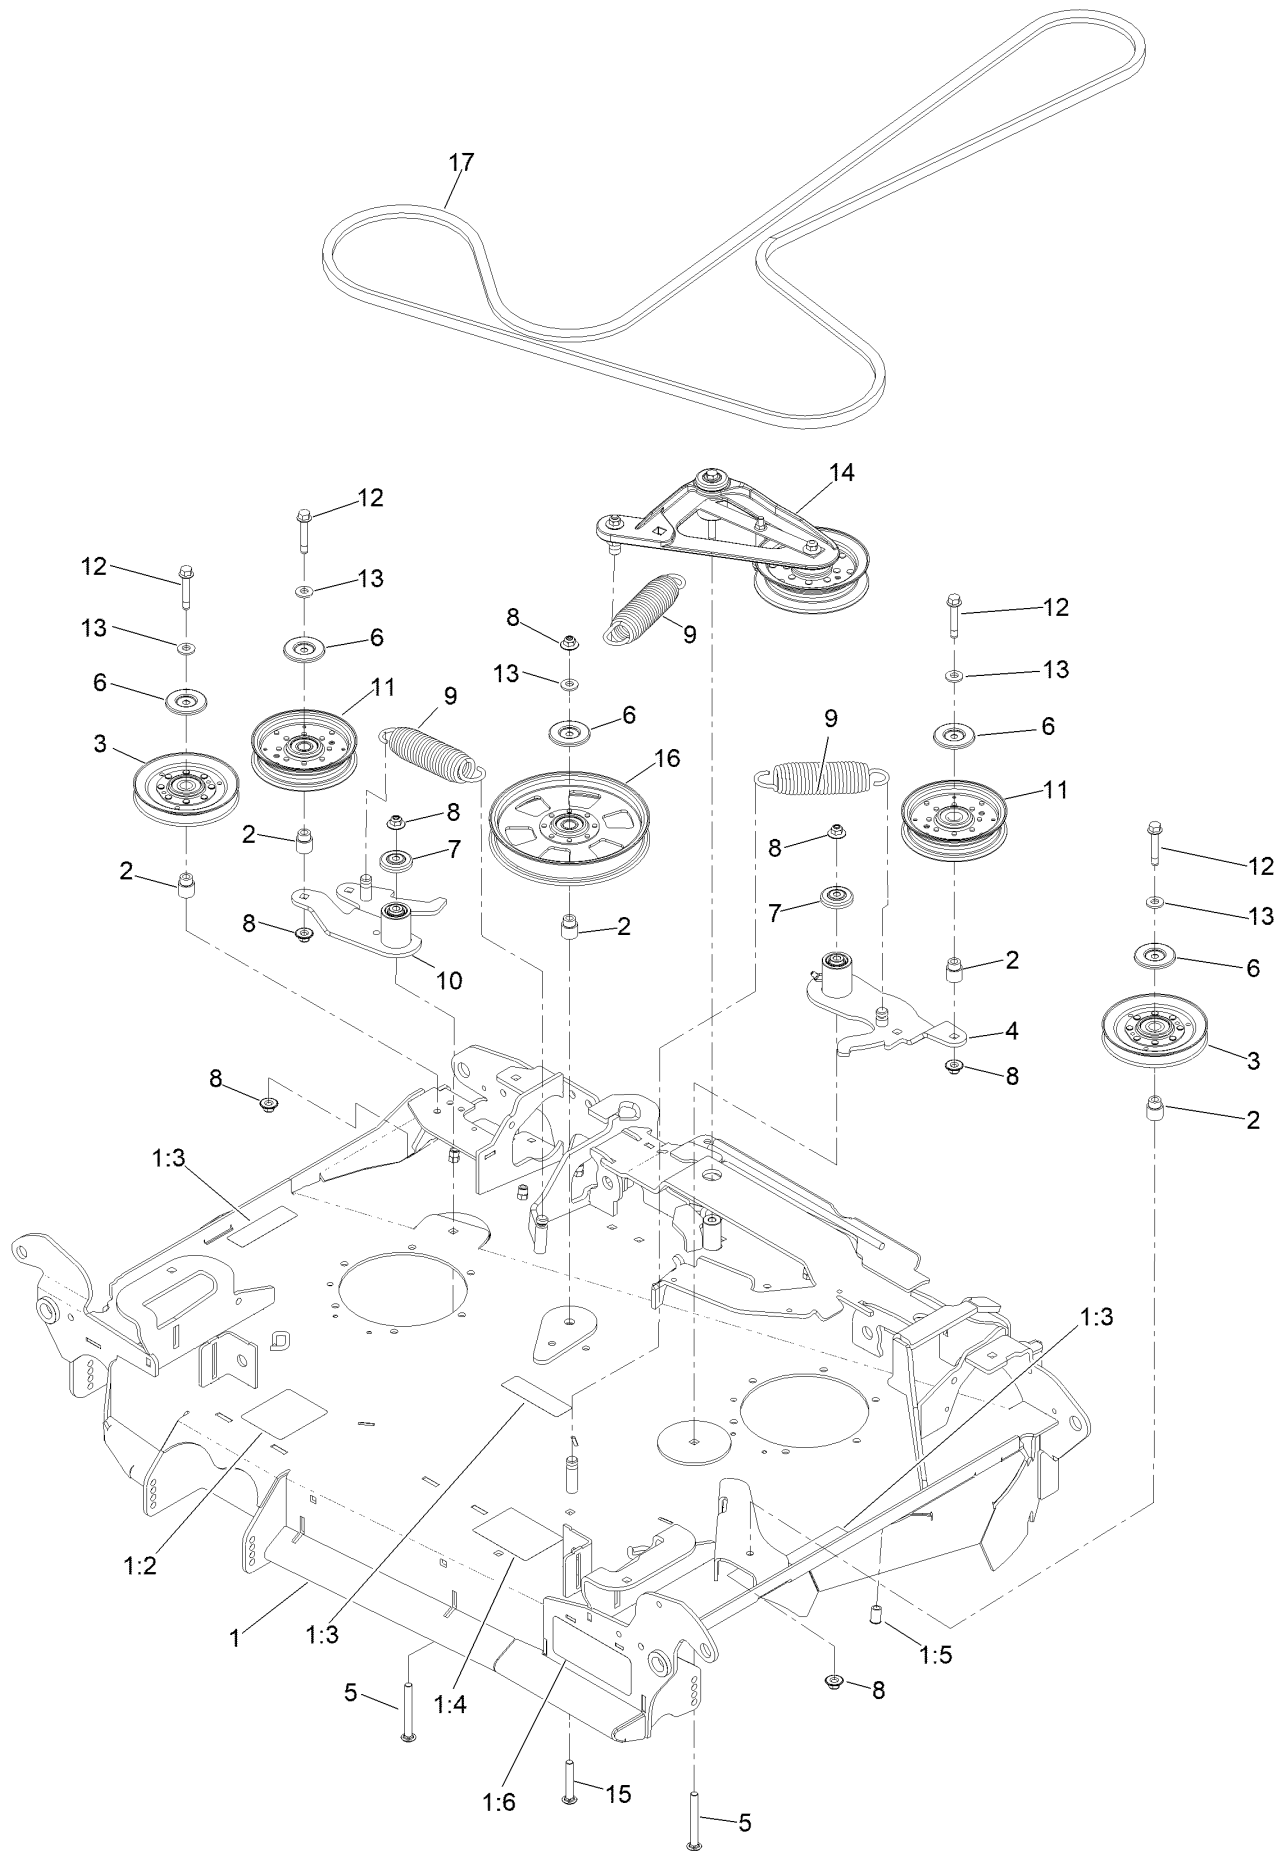

Center Deck Belt Drive Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	146-4890	1	ASM-Deck, Ctr 96G [toro]	7	103-2916	2	Guard-Top
1:2	109-6036	1	Decal-Roller, Anti-Scalp	8	109-6658	7	Nut-Flange, NI
1:3	112-9028	3	Decal-Cover, Missing	9	116-6317	3	Spring-Extension
1:4	135-1097	1	Decal-Belt Routing	10	126-9438	1	Idler ASM
1:5	135-7200	6	Nut-Clinch,Hex	11	126-9187	2	Pulley-Idler, Flat
1:6	136-9041	1	Decal	12	126-2956	4	Screw-HHF
2	1-633456	5	Bushing, Idler	13	98-5975	5	Washer-Belleville
3	126-2960	2	Idler-V	14	126-1720	1	Deck Idler ASM
4	126-9435	1	Idler ASM	15	3231-44	1	Screw-CARR
5	116-1502	2	Bolt-Shoulder, Carriage	16	116-9639	1	Pulley-Idler, Flat
6	126-8043	5	Shield-Dust	17	126-6440	1	V-Belt

 Idler Assembly No. 126-9435

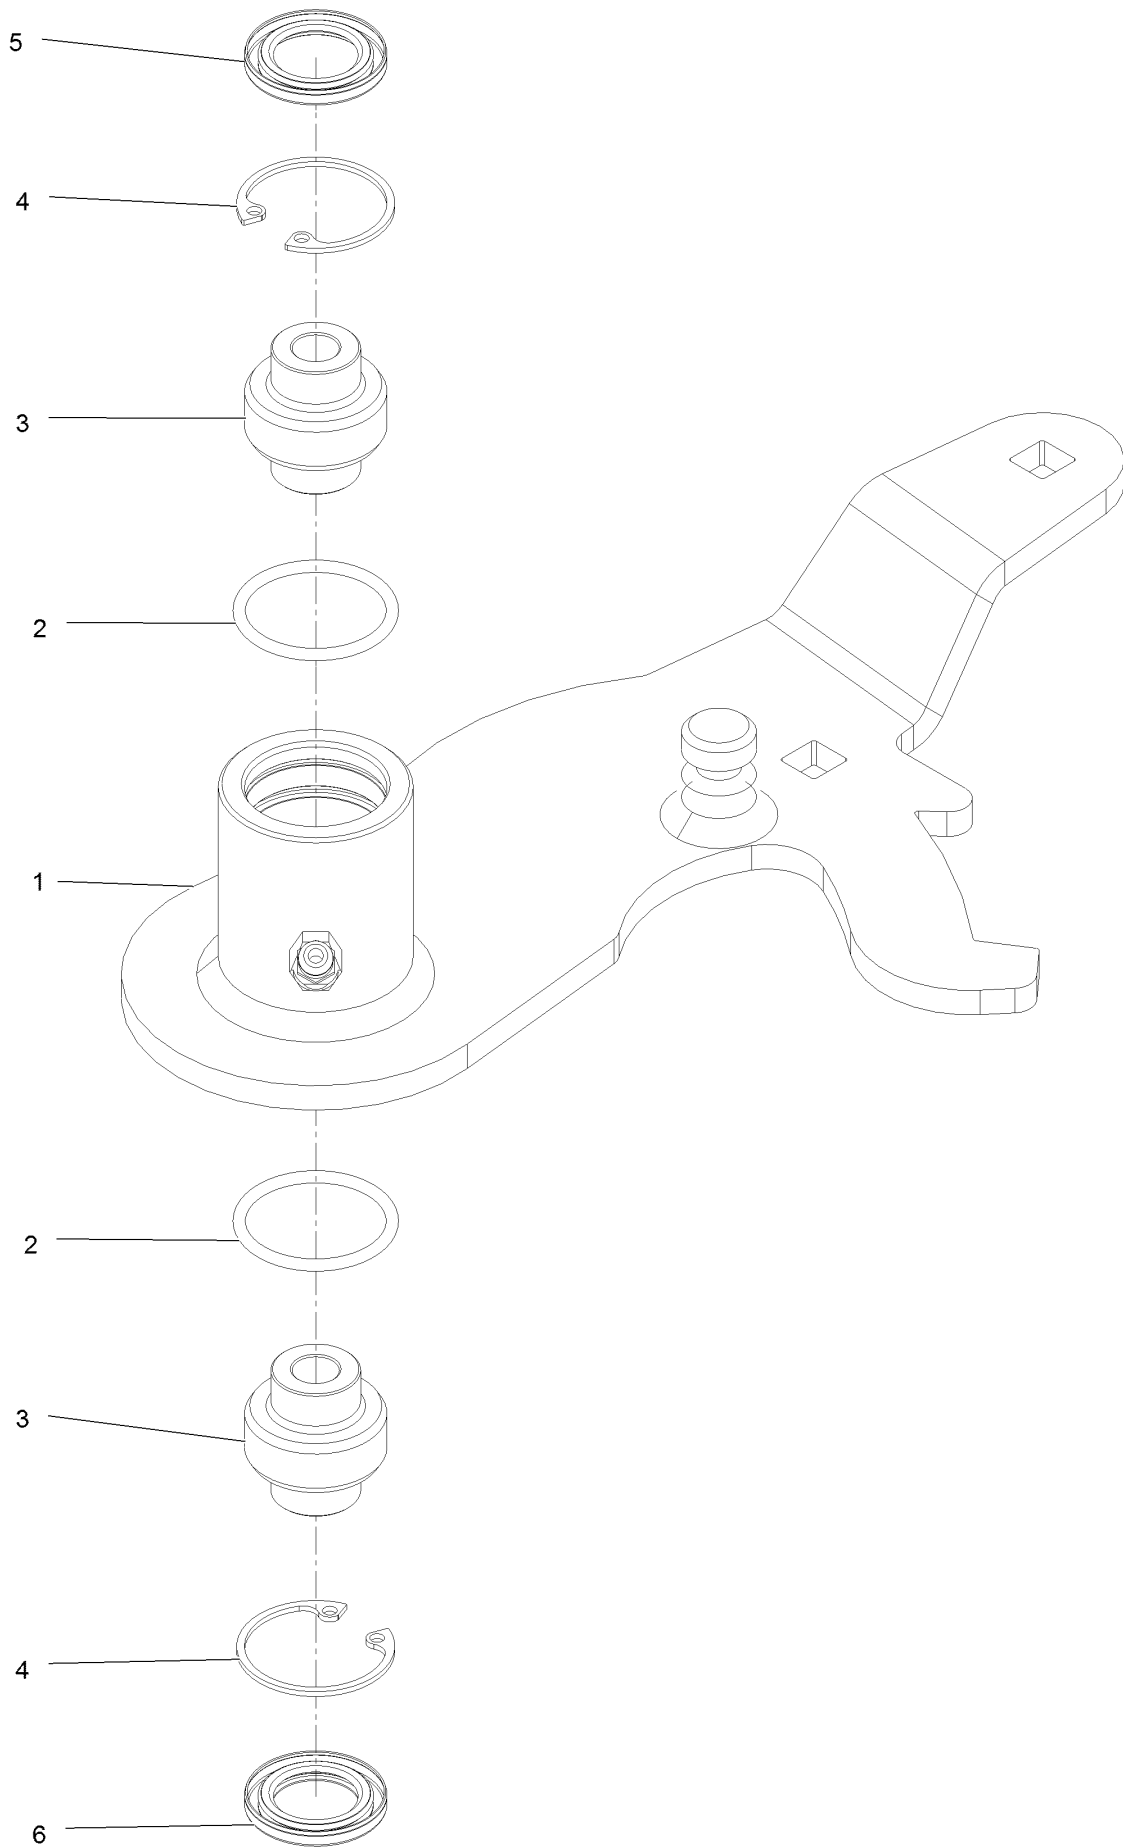


Idler Assembly No. 126-9435 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	ASM-Idler Arm 96Rd LH [red] ●
2	106-7159	2	O-Ring
3	103-3504	2	Bearing-Spherical

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	32120-10	2	Ring-Snap
5	103-3506	1	Seal-Lip, Single
6	103-3505	1	Seal-Lip, Double

● Not serviced separately

 Idler Assembly No. 126-9438

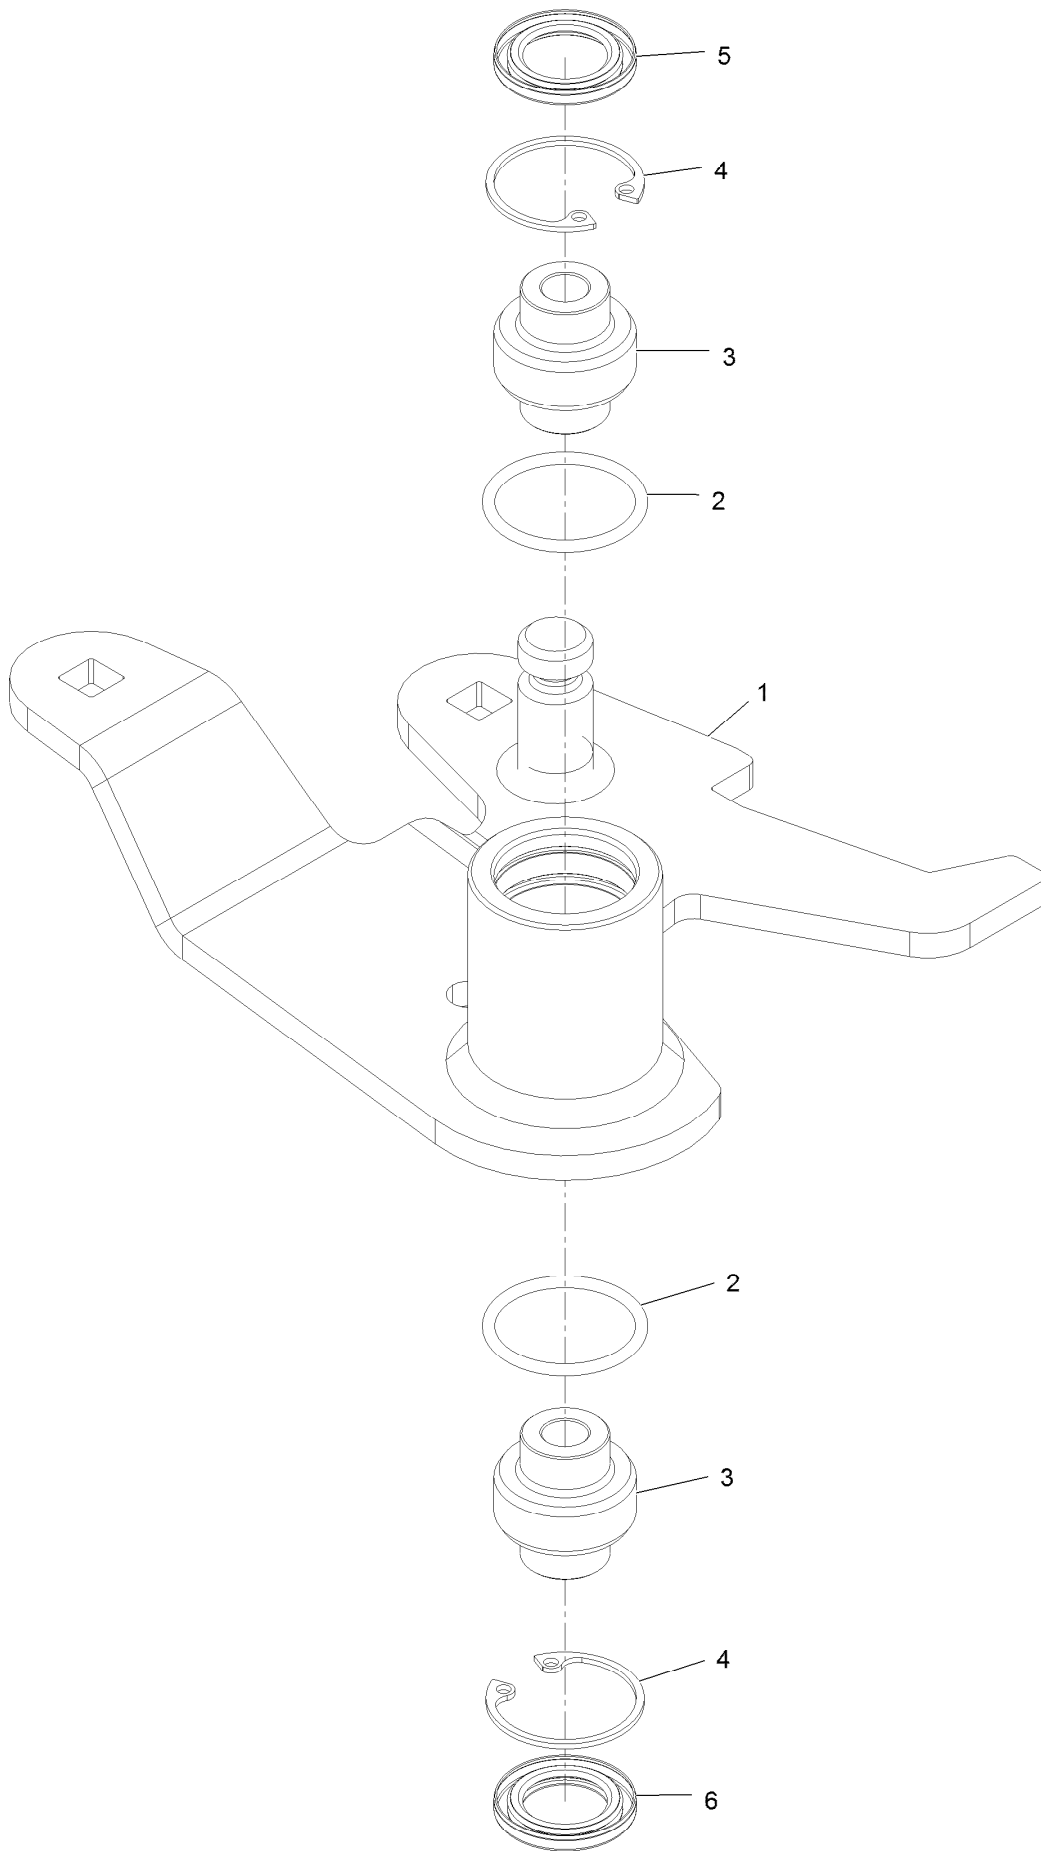


Idler Assembly No. 126-9438 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	ASM-Idler Arm, 96Rd [red] ●
2	106-7159	2	O-Ring
3	103-3504	2	Bearing-Spherical

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	32120-10	2	Ring-Snap
5	103-3506	1	Seal-Lip, Single
6	103-3505	1	Seal-Lip, Double

● Not serviced separately

 
Deck Idler Assembly No. 126-1720

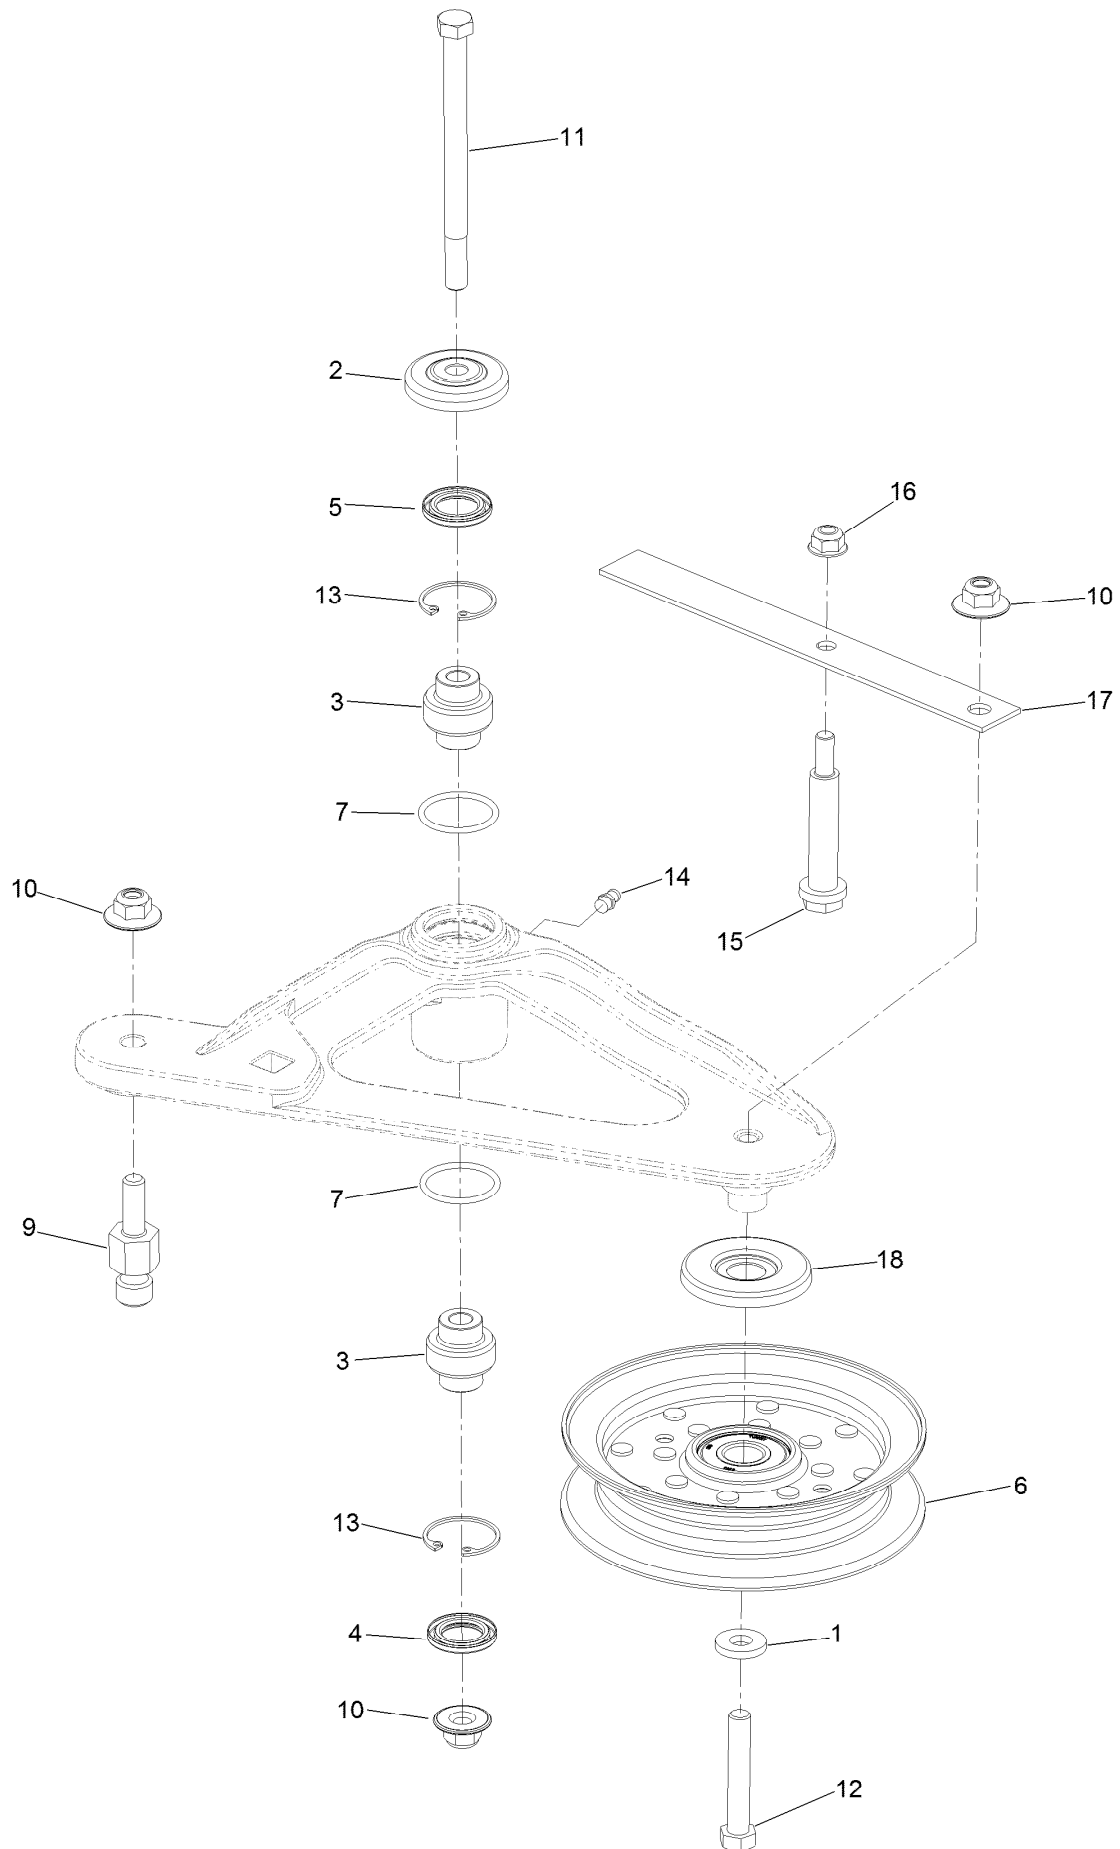

Deck Idler Assembly No. 126-1720 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	43-0940	1	Spacer	11	109-7409	1	Screw-Shoulder, HH
2	103-2916	1	Guard-Top	12	104-3396	1	Screw-HH
3	103-3504	2	Bearing-Spherical	13	32120-10	2	Ring-Snap
4	103-3505	1	Seal-Lip, Double	14	302-19	1	Fitting-Grease
5	103-3506	1	Seal-Lip, Single	15	88-4590	1	Bolt-Shoulder
6	126-9196	1	Idler-Pulley, Flat	16	104-8300	1	Nut-HF, NI
7	106-7159	2	O-Ring	17	126-1704	1	Spring-Belt
9	126-0423	1	Pin-Spring, Anchor	18	126-9195	1	Shield-Guard, Dust
10	109-6658	3	Nut-Flange, NI				

 
Center Deck Hydraulic and Electrical Assembly

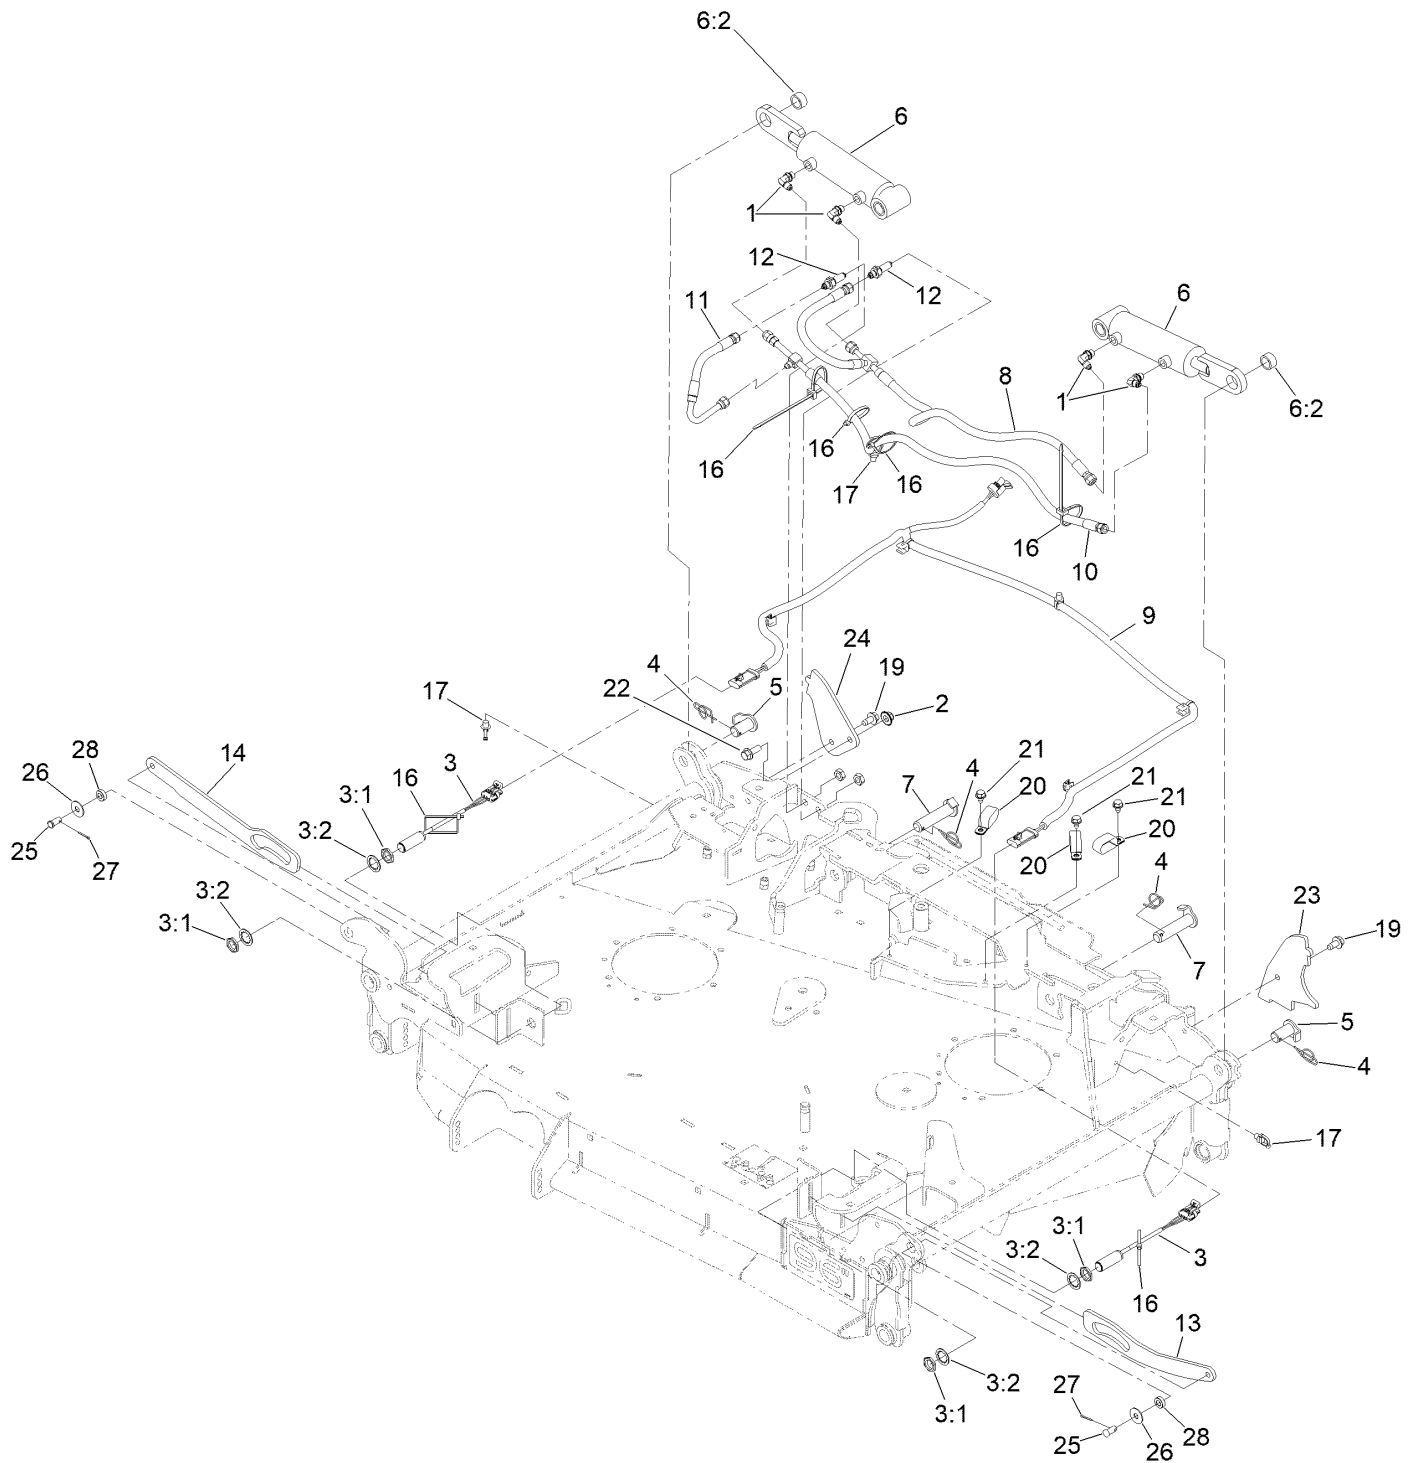

Center Deck Hydraulic and Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	109-0760	4	Adapter, 90°	12	135-5077	2	Fitting-Straight
2	109-6658	1	Nut-Flange, NI	13	146-6211	1	Plate-LH Flag Strap
3	115-5300	2	Proximity Switch ASM	14	146-4534	1	Strap-RH Flag
3:1	117-3207	2	Nut-Hex	16	3290-378	6	Tie-Cable
3:2	117-3208	2	Washer-Lock, Internal Tooth	17	32180-030	3	Clip-Tie
4	142-4002	4	Pin-Locking Cotter	19	110-9380	2	Screw-HWH
5	142-3999	2	Pin-Cylinder	20	120-1959	3	Clamp
6	142-6609	2	CYL-Deck Fold	21	9266934	3	Screw
6:2	142-5808	3	Bushing-0.75X1.00X0.50 Long	22	131-2220	1	Screw-HHF
7	142-5437	2	ASM-CYL Pin Base	23	135-2628-01	1	Bracket-Deck Stop, LH
8	142-6790	1	Hose ASM	24	135-2629-01	1	Bracket-Deck Stop, RH
9	146-4773	1	Harness-Wire	25	283-85	2	Pin-Clevis
10	142-6789	1	Hose ASM	26	52-2860	2	Washer
11	135-4526	1	Hose ASM	27	120-9716	2	Pin-Cotter
				28	142-6724	2	Bushing

 
Center Deck Fold Assembly

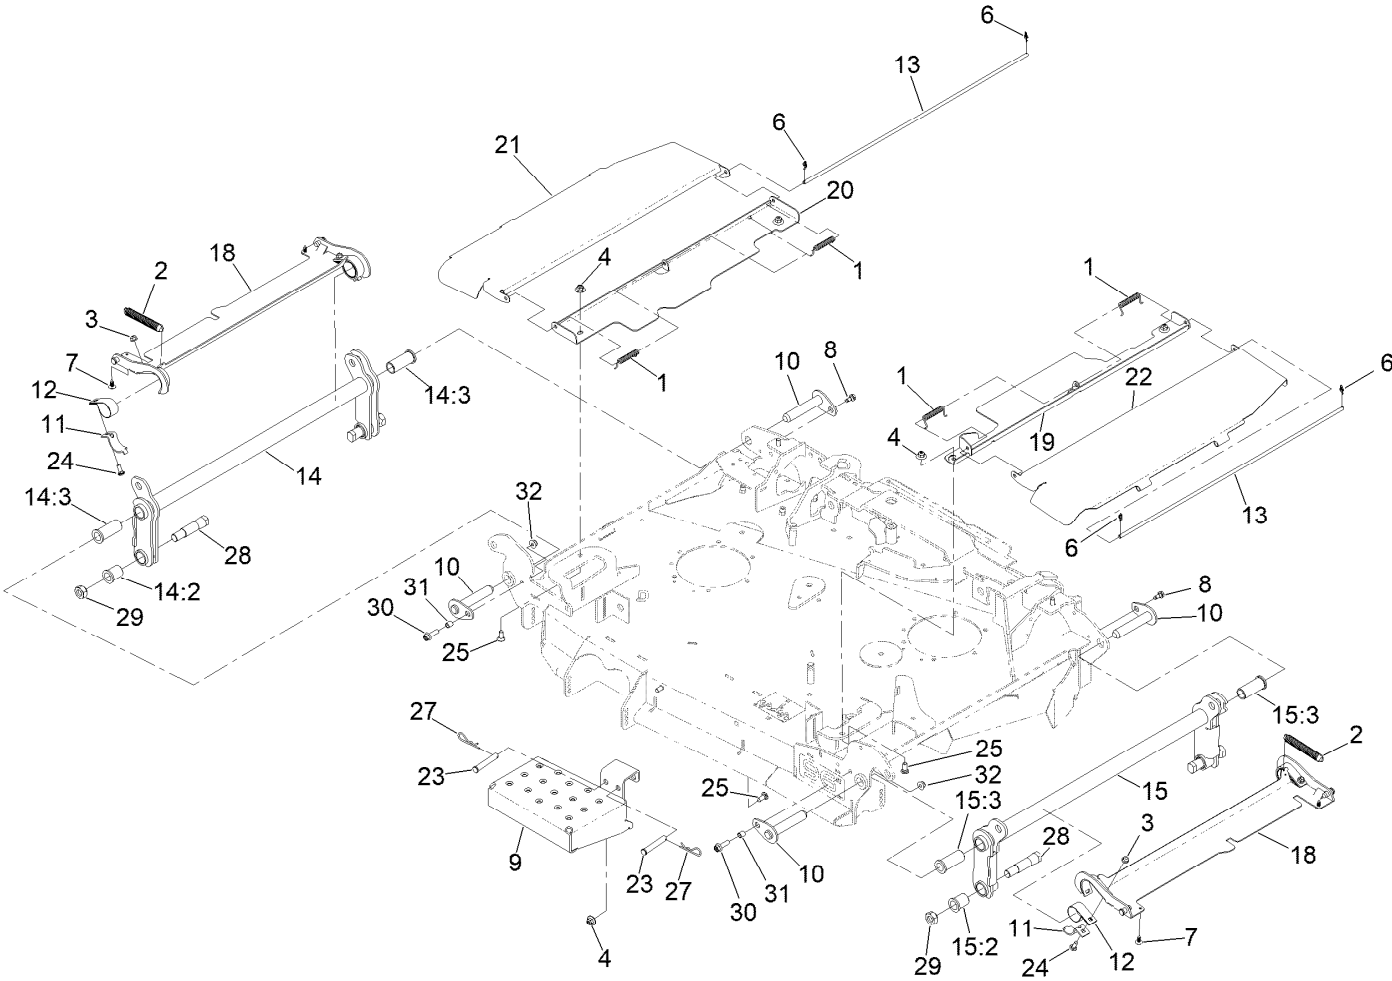

Center Deck Fold Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	99-5293	4	Spring-Torsion	15:2	142-4794	2	Bushing-Flanged
2	103-4813	2	Spring	15:3	146-2299	2	Bushing-Flanged
3	104-8300	4	Nut-HF, NI	18	135-2630-01	2	Cover-Wing
4	109-6658	6	Nut-Flange, NI	19	135-2651-01	1	Shield-Center, LH
6	116-6639	4	Pin-Cotter, Locking	20	135-2652-01	1	Shield-Center, RH
7	117-2382	4	Plug-Plastic	21	135-6174-03	1	Panel-Shield Hinge, RH
8	126-4424	2	Screw-Shoulder	22	135-6178-03	1	Panel-Shield Hinge, LH
9	146-4898-01	1	Plate-Step	23	283-55	2	Pin-Clevis
10	146-2595	4	ASM-Deck Pin	24	3230-16	4	Screw-CARR
11	126-9764	4	Plate-Retainer, Bearing	25	3231-12	6	Bolt-CARR
12	135-0584	4	Strap-Bearing, Nylon	27	3290-355	2	Pin-Hair
13	135-1023	2	Cover-Rod, Pivot	28	146-2893	4	Bolt-Pivot Pin
14	142-6419	1	ASM-RH Fold Arm	29	146-3191	4	Nut-Lug
14:2	142-4794	2	Bushing-Flanged	30	135-4712	2	Screw, HHF
14:3	146-2299	2	Bushing-Flanged	31	103-1166	2	Spacer-Tube, Pump Link
15	142-6428	1	ASM-LH Fold Arm	32	104-8301	2	Nut-HF, NI

 Center Deck Cutting Assembly

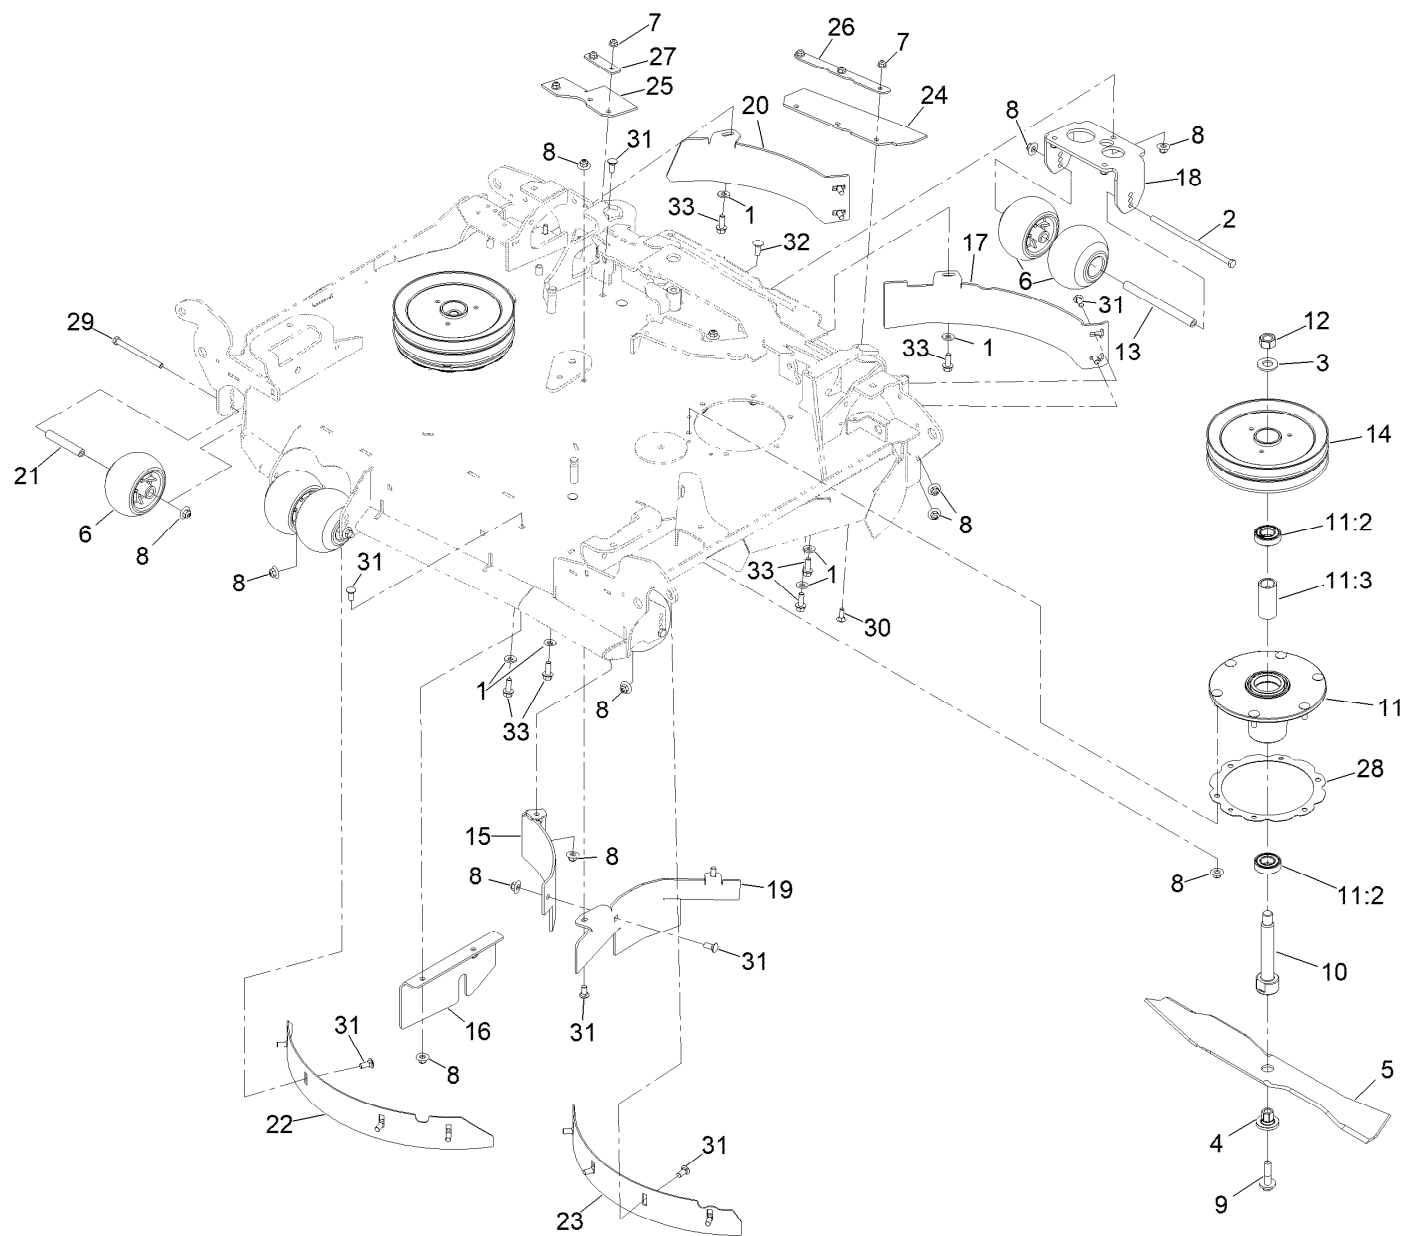

Center Deck Cutting Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	98-5975	6	Washer-Belleville	17	135-3462-01	1	Baffle-Block, LH Ctr
2	99-7203	4	Screw-HH	18	135-1036-01	1	Bracket-Antiscalp, Rear
3	103-2802	2	Washer	19	135-1827-01	1	Baffle-Center
4	137-9787	2	Bushing-Hex	20	135-3463-01	1	Baffle-Block, RH Ctr
5	140-1246	2	Blade-24.50 Mulch	21	126-7140	1	Spacer-Wheel, Short
6	103-8415	9	Roller-Anti-Scalp	22	135-2459-01	1	Baffle-Depth, LH
7	104-8300	6	Nut-HF, NI	23	135-2460-01	1	Baffle-Depth, RH
8	109-6658	39	Nut-Flange, NI	24	135-2658	1	Flap-Discharge
9	109-9220	2	Screw-Sems	25	135-2659	1	Flap-Discharge
10	138-6045	2	Shaft-Spindle	26	135-3760-03	1	Support-Flap
11	137-9780	2	Spindle ASM	27	135-3761-03	1	Support-Flap, RH
11:2	116-0720	2	Bearing-Ball	28	140-0986	2	Ring-Spacer, Housing
11:3	138-6042	1	Spacer-Bearing	29	323-38	1	Screw-HH
12	116-7306	2	Nut-Hex	30	3230-16	6	Screw-CARR
13	126-6115	4	Spacer-Wheel	31	3231-12	18	Bolt-CARR
14	140-1186	2	Sheave-Double Blade Drive	32	3231-2	3	Bolt-CARR
15	135-0601-01	1	Baffle-Center, Rear (RH)	33	3234-11	6	Screw-HHF
16	135-0603-01	1	Plate-Block, Front				

Attachments and Accessories

For 74090 96in Air Cool Z Master Professional Riding Mower

Product Name	Model/Part
Toro Rider Arm Rest Bag	490-7320
Slope Sensor-Lazer/Z-Master 3000/5000/6000	142-4910
Filter Minder Gauge	99-4664
Kit - Service Tool	137-9220
Hypr-Oil 500 (quart)	114-4713
Hypr-Oil 500 (gallon)	114-4714
Jack Kit	127-6666
Hypr-Oil 500-5 (5 gallon)	114-4715
Jack Mount Kit	135-1768
Sunshade Kit	142-8775
Kit-96 Rear Discharge Baffle	142-3000
Weight Kit, Under Toe Board	140-4958
Premium Transmission/Hydraulic Tractor Fluid (5 Gallon Pail)	108-1184
Premium Transmission/Hydraulic Tractor Fluid (55 Gallon Drum)	108-1183
Jack Kit With Adapter, Zero-Turn-Radius Side-Discharge or Rear-Discharge Riding Mower	126-7282
Jack Kit Adapter, Zero-Turn-Radius Side-Discharge or Rear-Discharge Riding Mower	126-7283
Blade-24.50 Mulch	140-1246
Toro Rops Lock Kit	126-4064
Light Kit	116-1154
Worklight Kit	135-7320
Light Flasher Kit	135-2892
Seat Tilt Frame and ISO Mount Kit	121-7596
Seat Cover (W/arm rest)	117-0095
Toro Rider Over Seat Bag	490-7317
Toro Deluxe Rider Cover	490-7319

Notes:



Count on it.