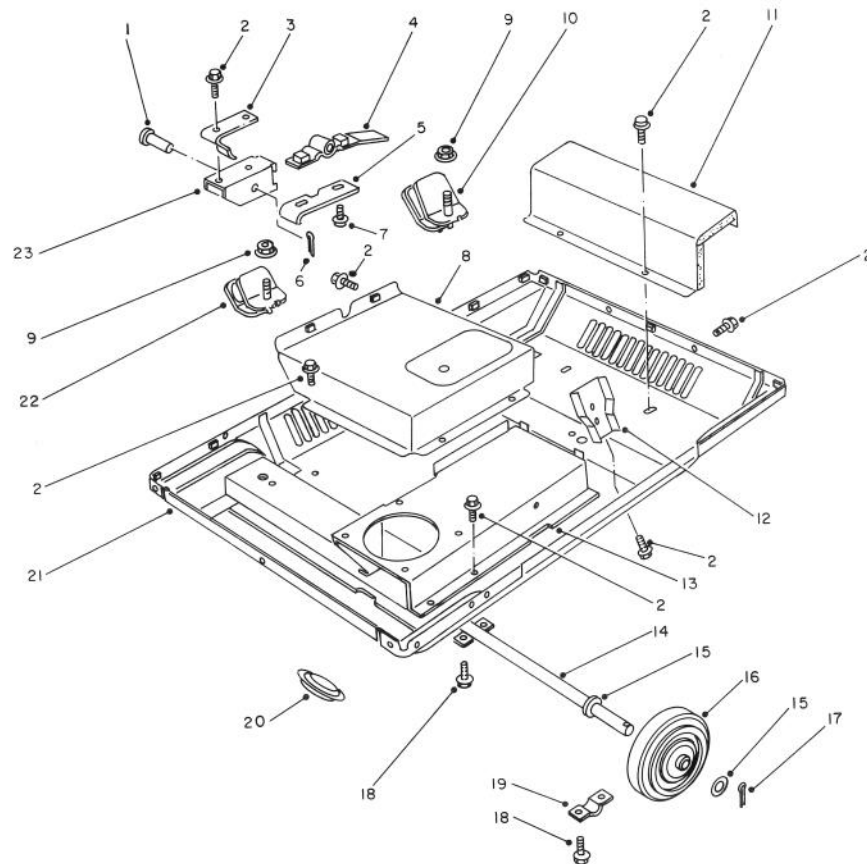



TORO®

MODEL NO. 62040 — 4000001 & UP

**PARTS
CATALOG****T 4000D GENERATOR****FRAME ASSEMBLY**

Ref. No.	Part No.	Description	No. Used
1	50-8250	Pin	1
2	50-6470	Bolt	22
3	50-8210	Plate — Wheel Stop	1
4	50-8240	Lever — Wheel Stop	1
5	50-8270	Lever — Wheel Stop	1
6	50-8260	Cotter Pin	1
7	50-0170	Bolt	2
8	50-8130	Duct — Middle	1
9	50-8190	Flange Nut	8
10	50-8170	Mount — Engine Side	2
11	50-8140	Duct — Rear	1
12	50-8150	Guide — Oil Drain	1


Ref. No.	Part No.	Description	No. Used
13	50-8120	Stand — Battery	1
14	50-8060	Shaft — Wheel	2
15	50-8110	Washer	8
16	50-8070	Wheel	4
17	50-0430	Cotter Pin	4
18	50-8090	Bolt	12
19	50-8080	Plate — Wheel Shaft	4
20	50-8160	Cap	1
21	50-8050	Plate — Engine Mount	1
22	50-8180	Mount — Generator Side	2
23	50-8220	Bracket — Wheel Stop	1

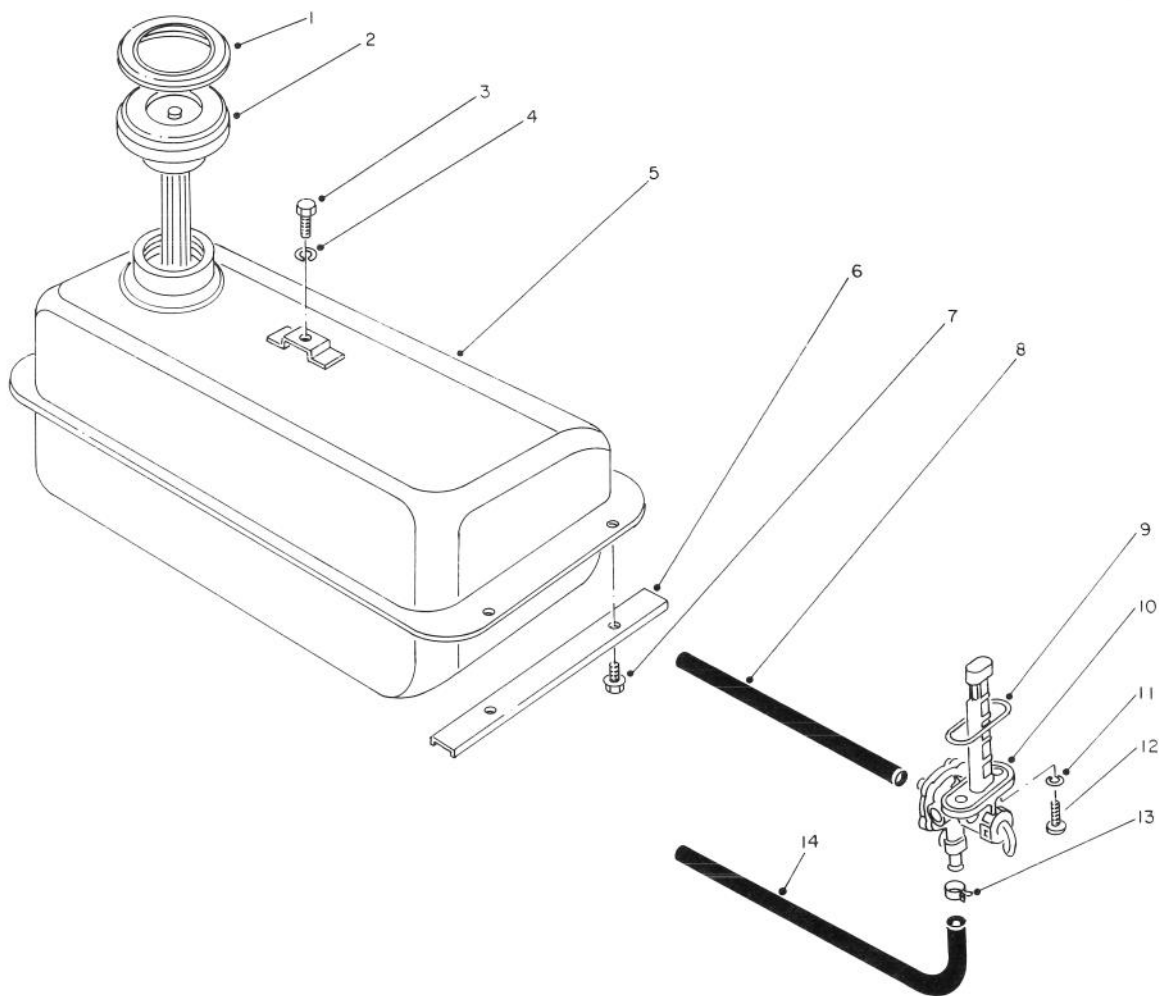

FUEL TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	50-8300	Grommet	1
2	50-8290	Gas Cap Assembly	1
3	50-8380	Bolt	1
4	50-8390	Lockwasher	1
5	50-8280	Tank Assembly	1
6	50-8310	Clamp — Fuel Tank	2
7	50-7680	Bolt	4


Ref. No.	Part No.	Description	No. Used
8	50-0900	Hose	1
9	50-8330	O-Ring	1
10	50-8320	Cock Assembly (Incl. Ref. #9)	1
11	50-8350	Gasket	2
12	50-8340	Screw	2
13	50-0990	Clip	2
14	50-8360	Hose	1

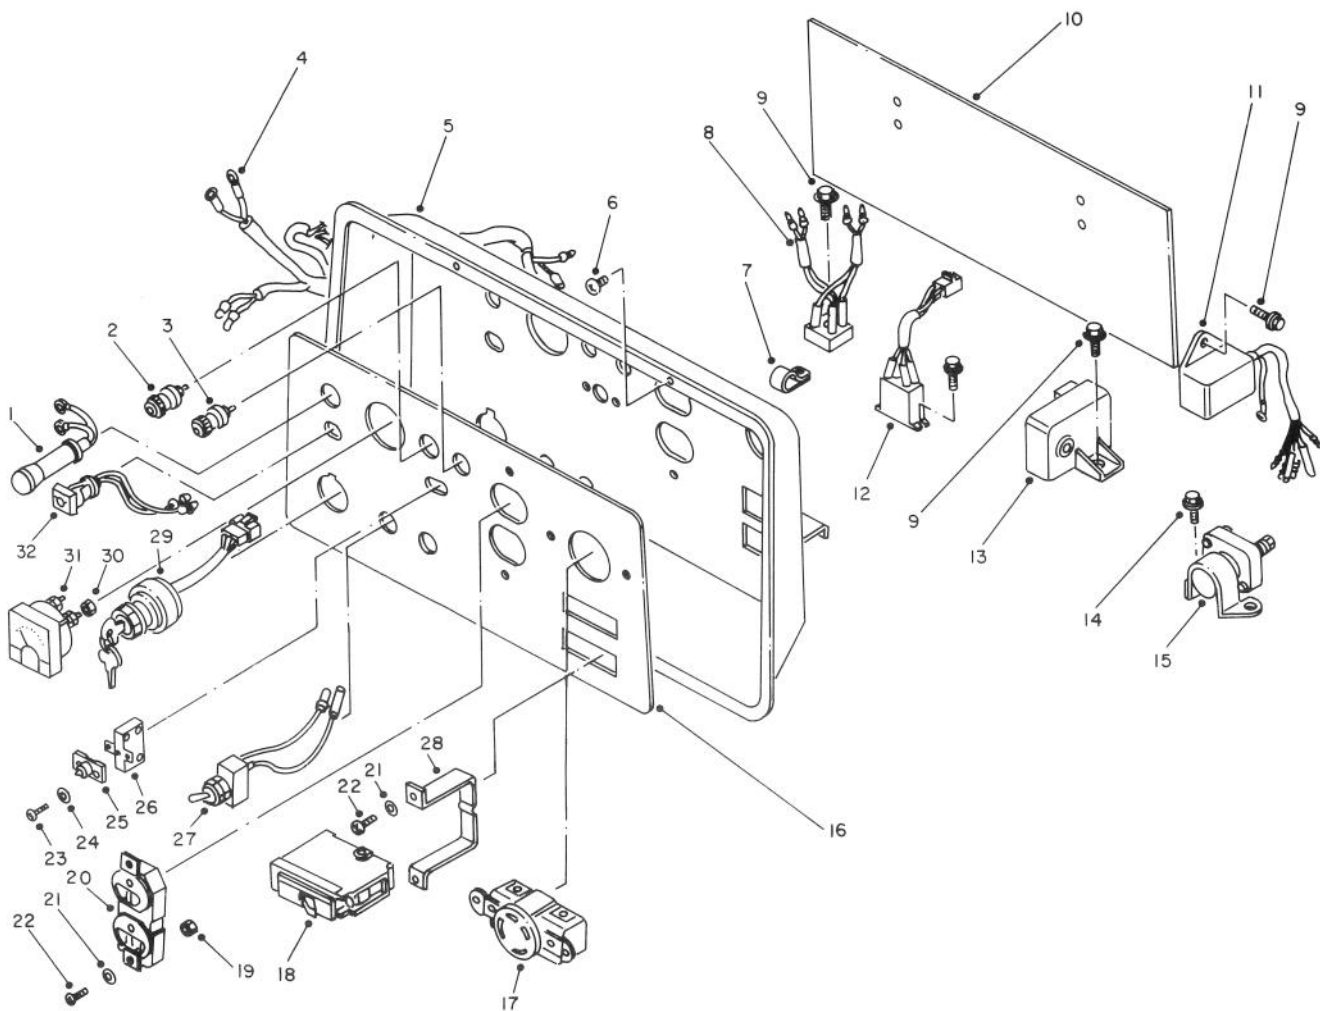

CONTROL PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	50-8660	Holder Assembly — Lamp	1
2	50-4520	Terminal (—)	1
3	50-4510	Terminal (+)	1
4	50-8790	Wire Harness	1
5	50-8570	Panel — Control	1
6	50-8420	Screw	6
7	50-1040	Clamp	1
8	50-8890	Rectifier Assembly	1
9	81-1300	Bolt	3
10	50-8610	Panel — Insulator	1
11	50-8880	Interlock Unit — Fuel & Oil	1
12	50-8860	Relay	1
13	50-8850	Unit — Slow Down	1
14	81-1280	Bolt	2
15	50-8820	Relay Assembly	1
16	50-8590	Plate — Panel	1

Ref. No.	Part No.	Description	No. Used
17	50-8740	Receptacle	1
18	50-4360	Circuit Breaker	2
19	50-0500	Nut	6
20	50-8730	Receptacle	1
21	50-0600	Washer	8
22	50-0240	Screw	8
23	50-8710	Screw	2
24	50-6750	Washer	2
25	50-8720	Cap — Protector	1
26	50-8700	Protector — Circuit	1
27	50-9540	Switch	1
28	50-8680	Holder — Breaker	1
29	50-8620	Switch — Engine	1
30	50-0490	Nut	2
31	50-8830	Voltage Meter	1
32	50-3480	Lamp — Oil Level	1

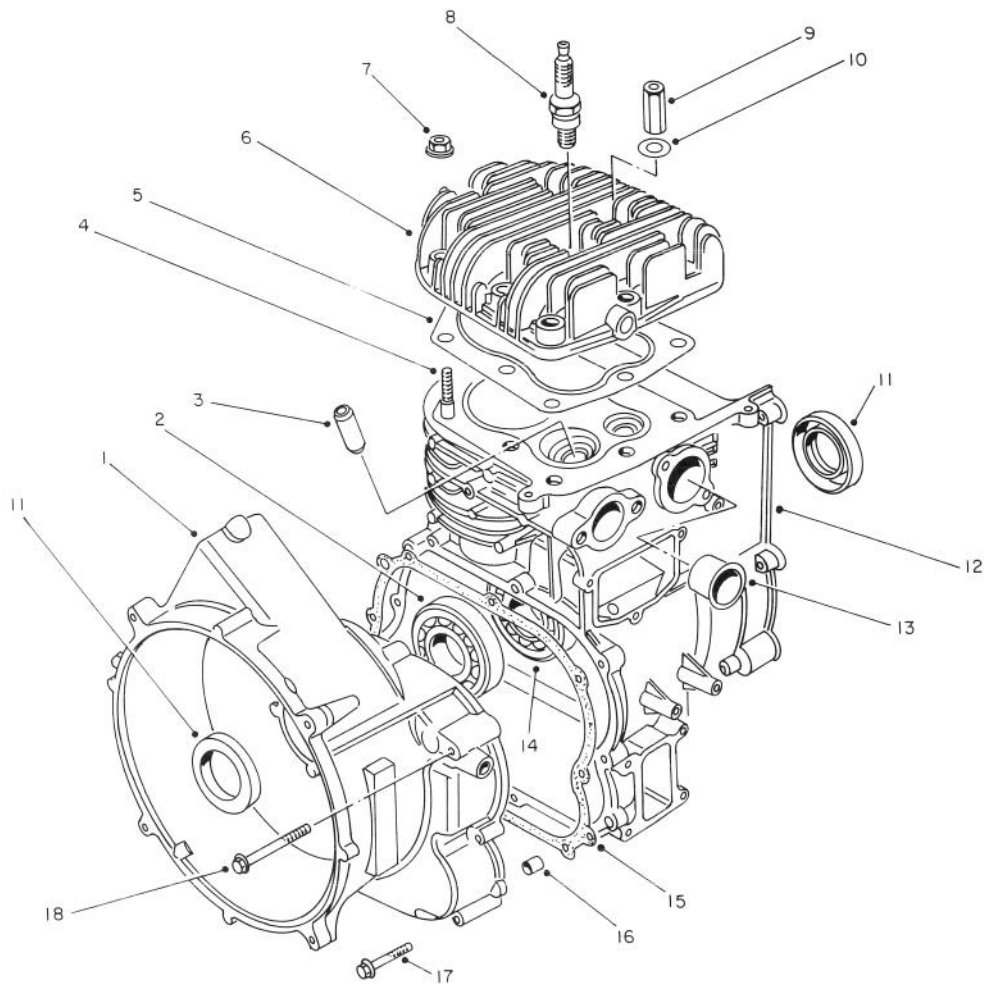


ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	50-6280	Cover Assembly	1
2	50-4680	Bearing	1
3	50-6110	Valve Guide — Intake	1
*	50-4850	Valve Guide — Exhaust	1
4	50-6040	Stud Bolt	8
5	50-6020	Gasket	1
6	50-6010	Cylinder Head	1
7	50-6050	Flange Nut	6
8	50-1160	Spark Plug	1
9	50-6030	Nut	2

Ref. No.	Part No.	Description	No. Used
10	50-6060	Washer	2
11	50-4720	Oil Seal	2
12	50-6080	Cylinder Assembly	1
13	50-6270	Exhaust Guide	1
14	50-4680	Bearing	1
15	50-6120	Gasket	1
16	50-0450	Pin, Locator	2
17	50-6140	Bolt	5
18	50-6150	Bolt	4

*Not Illustrated

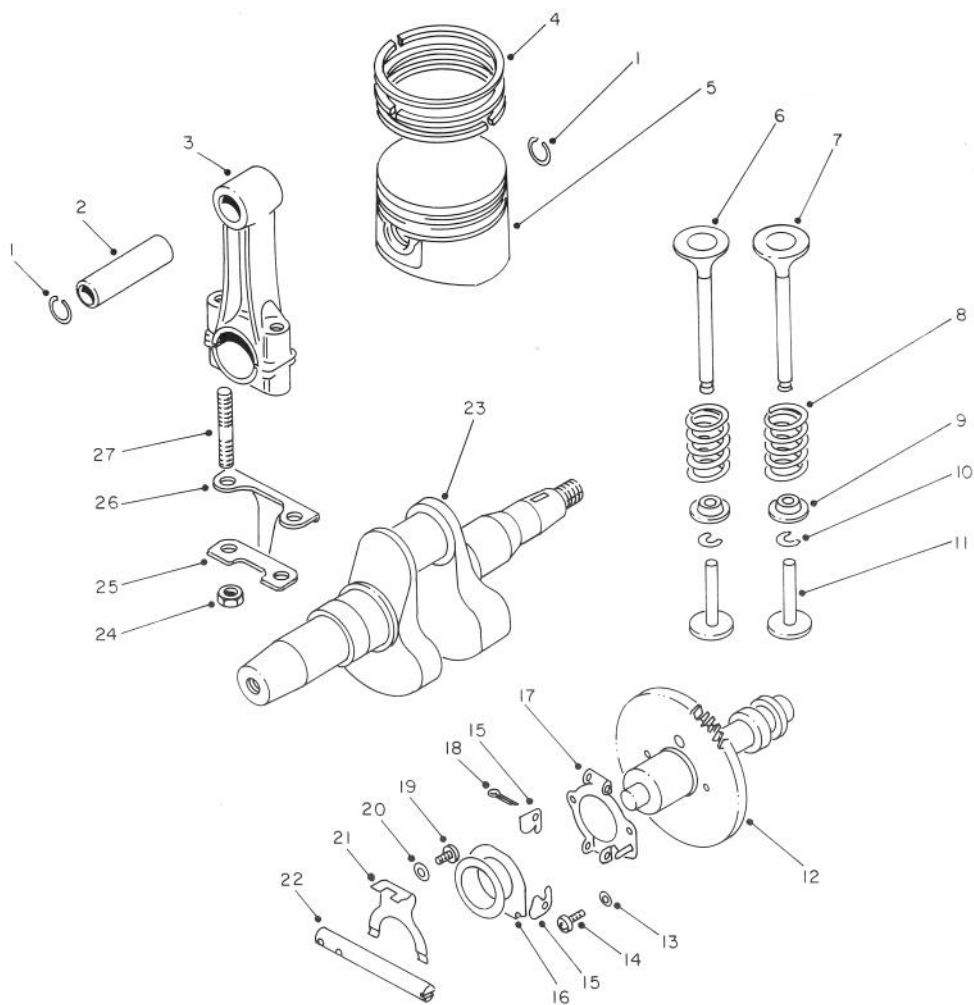


CRANKSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	50-6510	Snap Ring	2
2	50-6520	Pin — Piston	1
3	50-6530	Connecting Rod Assembly (Incl. Ref. #24-27)	1
4	50-6500	Ring Set	1
5	50-6490	Piston	1
6	50-6670	Valve — Exhaust	1
7	50-6660	Valve — Intake	1
8	50-6630	Spring — Valve	2
9	50-2140	Retainer	2
10	50-2160	Cotter	2
11	50-6600	Tappet (L:48.3)	0-2
*	50-6610	Tappet (L:48.23)	0-2
*	50-6620	Tappet (L:48.37)	0-2
12	50-6590	Camshaft	1
13	50-6720	Lockwasher	2

Ref. No.	Part No.	Description	No. Used
14	50-6710	Screw	2
15	50-3070	Arm — Centrifugal	16
16	50-3110	Collar — Governor	1
17	50-6700	Bracket	1
18	50-6680	Cotter Pin	2
19	50-6760	Screw	2
20	50-6750	Washer	2
21	50-3150	Plate — Shifter	1
22	50-6770	Shaft — Throttle Return	1
23	50-6580	Crankshaft	1
24	50-6560	Nut	2
25	50-6540	Plate — Lock	1
26	50-6570	Plate — Splasher	1
27	50-4710	Stud Bolt	2

* Not Illustrated

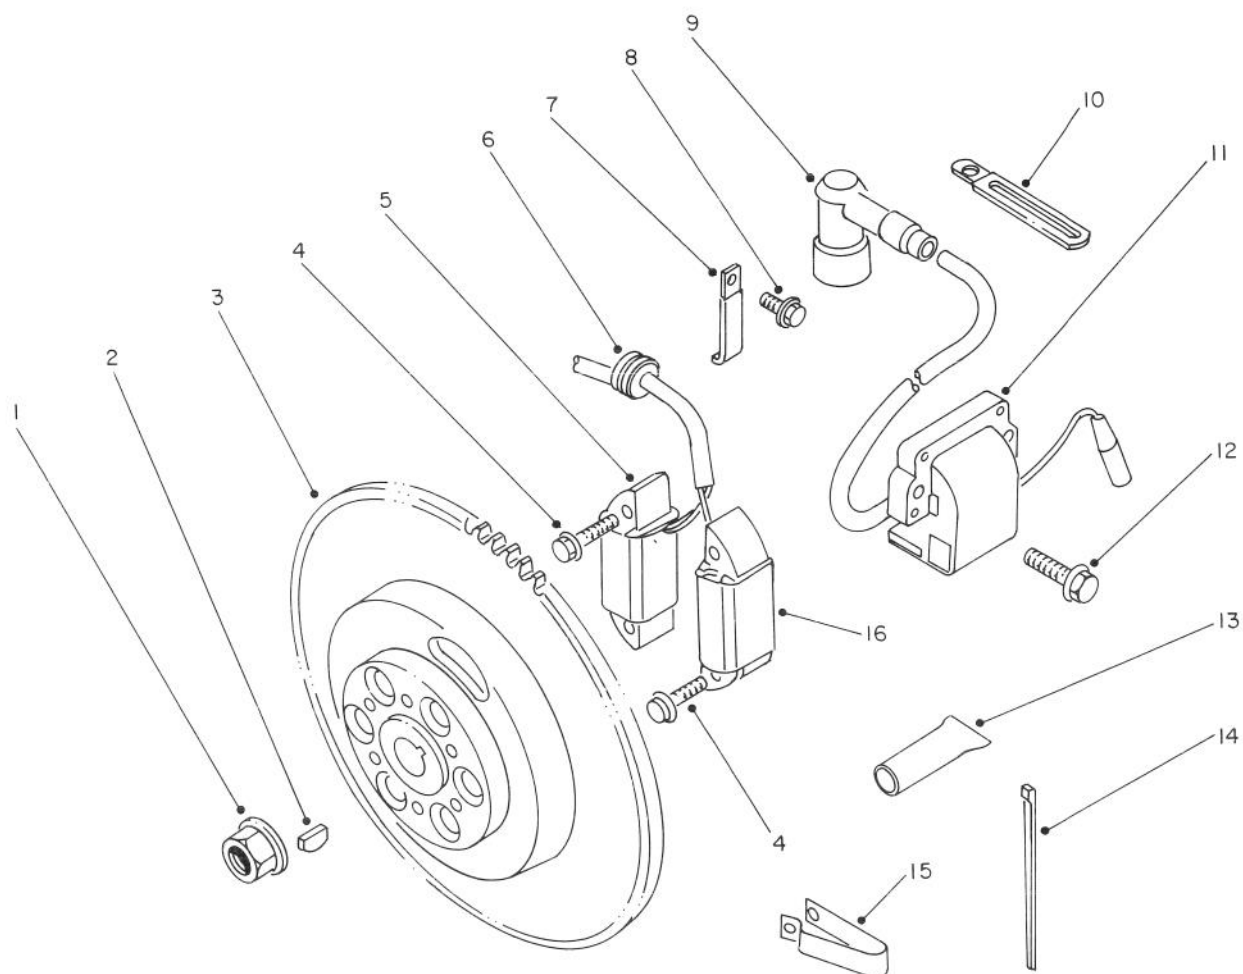


IGNITION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	50-7880	Flange Nut	1
2	50-0640	Key	1
3	50-7840	Rotor	1
4	50-7870	Bolt	4
5	50-7850	Coil — Exciter	1
6	50-7860	Grommet	1
7	50-7890	Clamp	1
*	50-8020	Clamp	1

Ref. No.	Part No.	Description	No. Used
8	50-7900	Bolt	1
9	50-3450	Cap — Spark Plug	1
10	50-1080	Clamp	1
11	50-7910	Unit — Igniter	1
12	50-6230	Bolt	2
13	50-7920	Cap — Connector	1
14	50-1100	Clamp — Eng. Panel Lead	1
15	50-1000	Clamp	1

* Not Illustrated

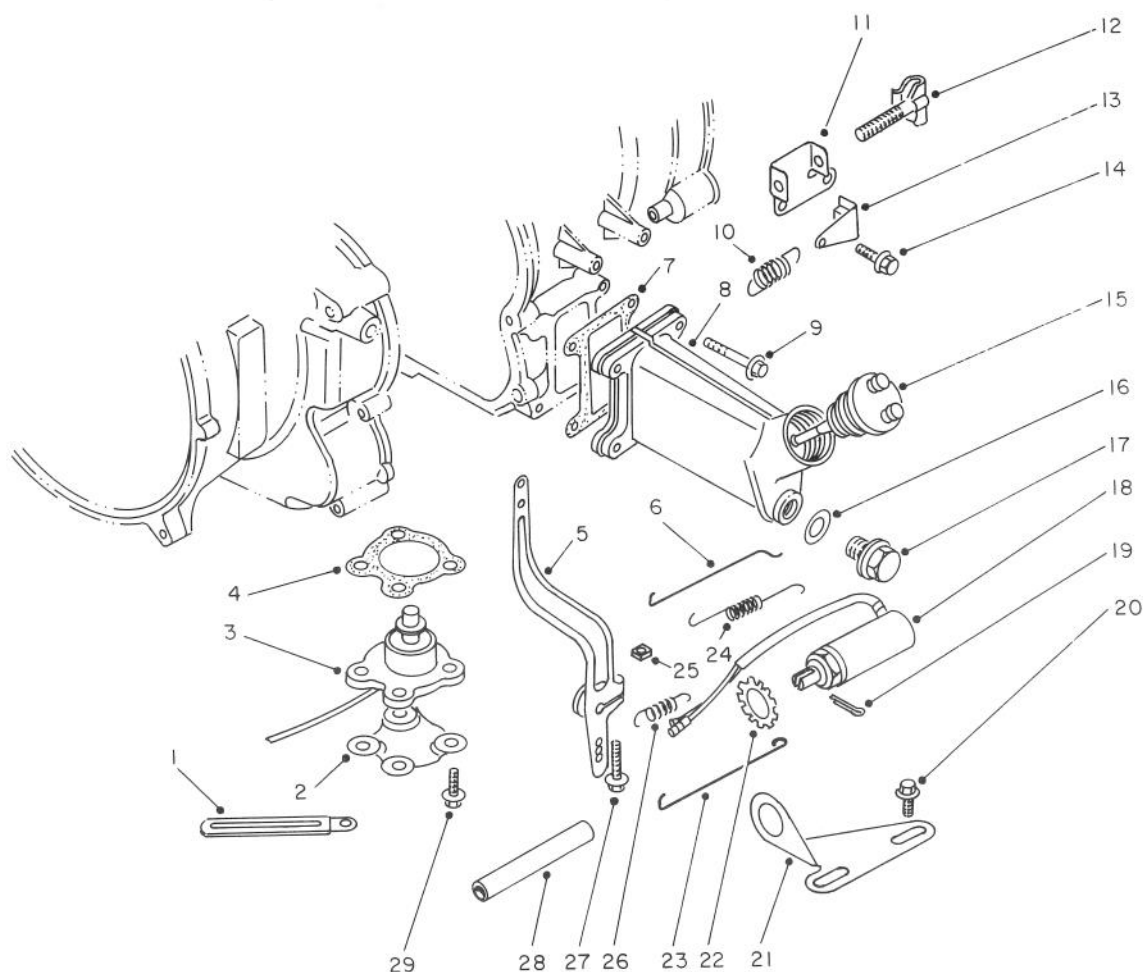


THROTTLE CONTROL & OIL FILL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	50-1080	Clamp	2
2	50-3540	Plate	1
3	50-6160	Oil Level Sensor	1
4	50-3520	Gasket	1
5	50-6340	Throttle Control Lever	1
6	50-6370	Rod	1
7	50-6220	Gasket	1
8	50-6210	Oil Filler Case	1
9	50-6230	Bolt	1
10	50-6330	Spring	1
11	50-6310	Bracket	1
12	50-6300	Hook Bolt	1
13	50-3230	Hook	1
14	50-6320	Bolt	2
15	50-6240	Oil Gauge	1

Ref. No.	Part No.	Description	No. Used
16	50-0800	Gasket	1
17	50-6250	Plug	1
18	50-6420	Solenoid	1
19	50-6400	Cotter Pin	1
20	50-6470	Bolt	2
21	50-6460	Bracket	1
22	50-6450	Lockwasher	1
23	50-6390	Rod	1
24	50-6380	Spring	1
25	50-6360	Nut	1
26	50-1130	Spring	1
27	50-6350	Bolt	1
28	50-6430	Pipe	1
29	50-6190	Bolt	4
*	50-6480	Gasket Set (Optional)	1

* Not Illustrated

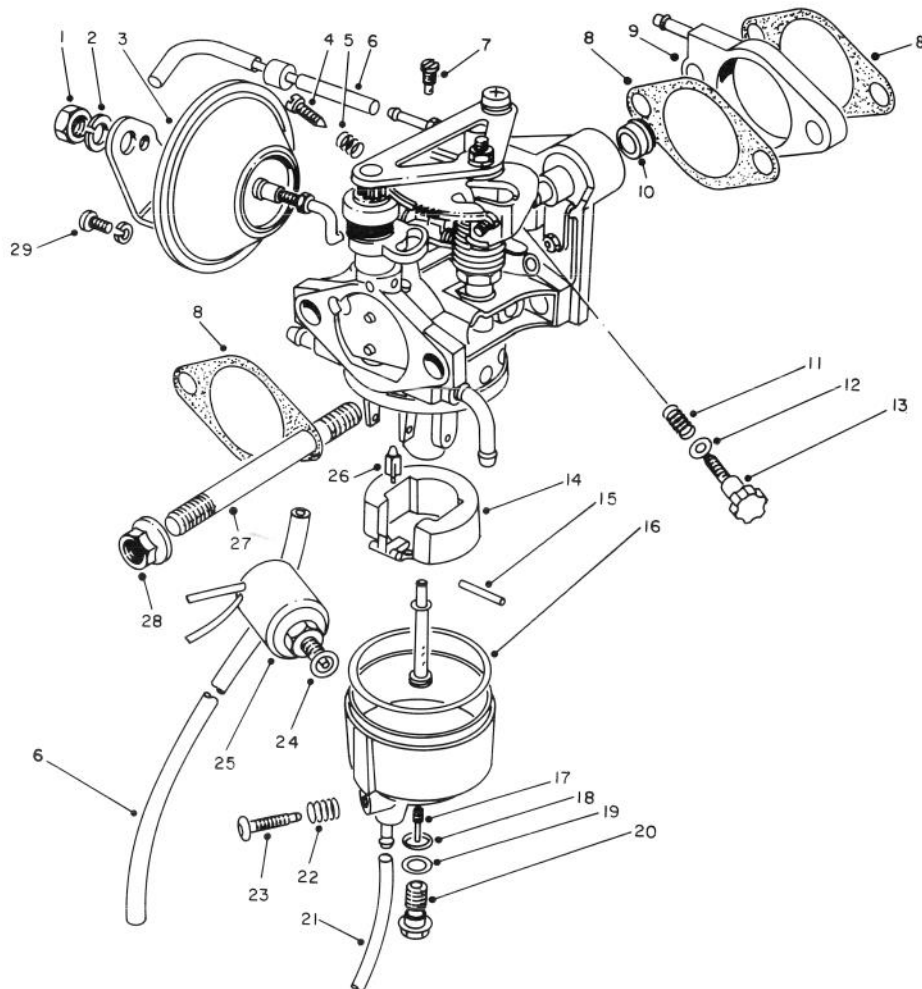


CARBURETOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	50-6970	Nut	1
2	81-1120	Lockwasher	1
3	50-6950	Depression Chamber	1
4	50-6840	Screw	1
5	50-2340	Spring	1
6	50-6920	Choke Opener Jet Assembly	1
7	50-6850	Jet, Pilot (65)	1
8	50-6990	Gasket	3
9	50-7000	Insulator	1
10	50-7040	Cover	1
11	50-7070	Spring	1
12	50-7060	Washer	1
13	50-7050	Screw — Idle Adjustment	1
14	50-6820	Float	1
15	81-0980	Pin	1

Ref. No.	Part No.	Description	No. Used
16	50-6790	Gasket	1
17	50-6890	Jet, Main (105)	1
18	50-6860	O-Ring	1
19	50-6870	Washer	1
20	50-6880	Holder	1
21	50-7030	Hose	1
22	50-6940	Spring	1
23	50-6930	Screw	1
24	50-6900	Washer	1
25	50-6910	Solenoid	1
26	50-6800	Needle	1
27	50-7020	Stud Bolt	2
28	50-7010	Flange Nut	2
29	50-0280	Screw	2
*	50-6780	Carburetor Assembly Complete	1


* Not Illustrated

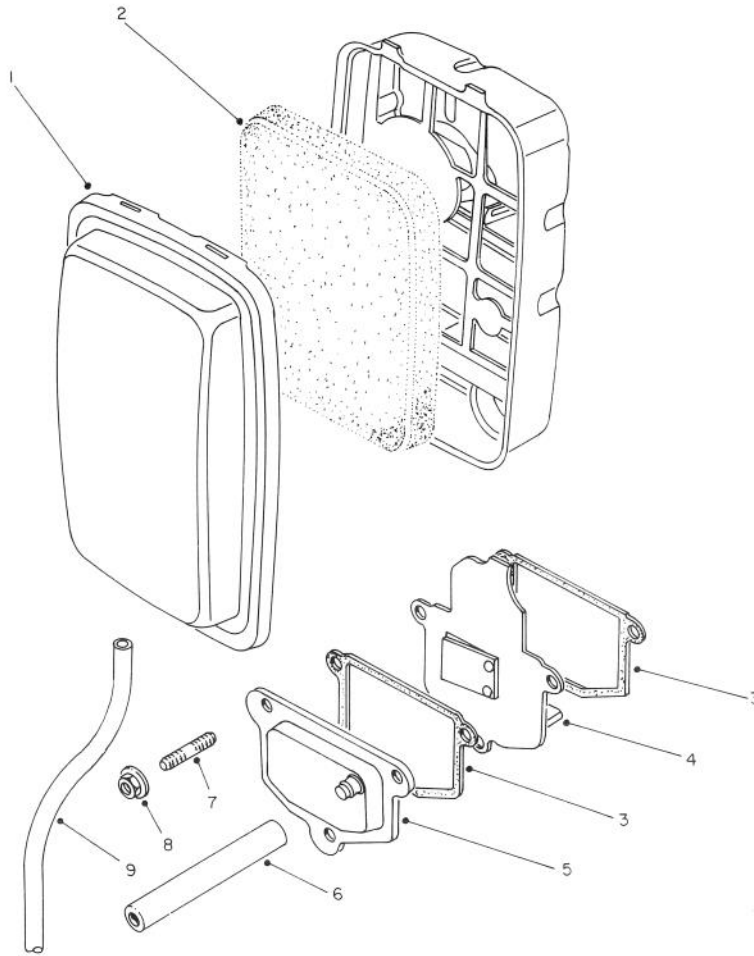

AIR CLEANER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	50-7210	Air Cleaner Assembly (Incl. Ref. #2)	1
2	50-7220	Filter Element	1
3	50-7150	Gasket	2
4	50-7200	Valve	1

Ref. No.	Part No.	Description	No. Used
5	50-7160	Cap	1
6	50-7190	Hose	1
7	50-7170	Stud Bolt	3
8	50-7180	Flange Nut	3
9	50-0900	Hose	1

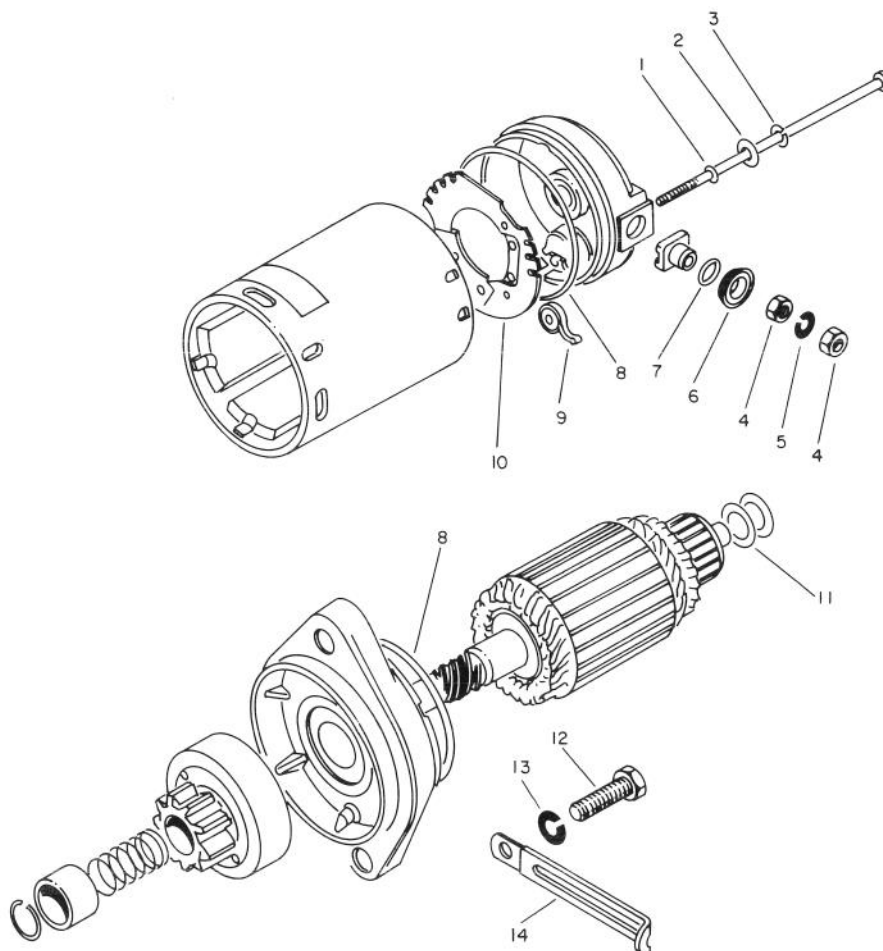


STARTER MOTOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	50-7450	"O"-Ring	2
2	50-7440	Washer	2
3	81-1380	Lockwasher	2
4	50-7470	Nut	2
5	50-0570	Lockwasher	1
6	50-7410	Bushing	1
7	50-7430	O Ring	1
8	50-7420	O Ring	2

Ref. No.	Part No.	Description	No. Used
9	50-7510	Spring	2
10	50-7500	Holder Assembly (Incl. Ref. #9)	1
11	50-7460	Shim	2
12	50-7530	Bolt	2
13	50-7540	Lockwasher	2
14	50-7520	Clamp	1
*	50-7400	Starter Motor Assembly Complete	1


* Not Illustrated

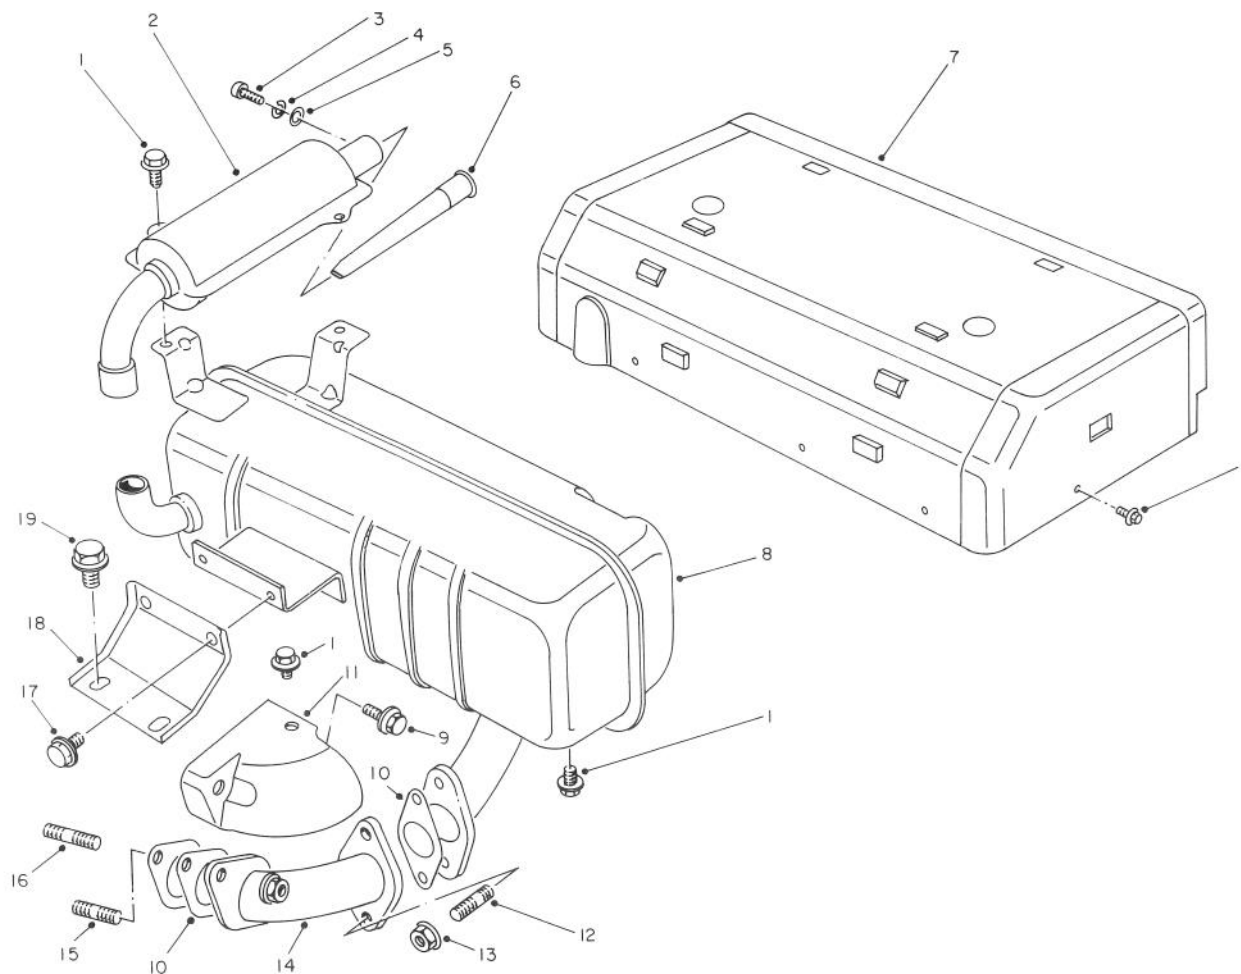

MUFFLER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	50-6470	Bolt	14
2	50-7310	Muffler	1
3	81-1410	Screw	1
4	81-1420	Lockwasher	1
5	50-0600	Washer	1
6	50-7320	Screw — Spark Arrester	1
7	50-7350	Cover — Muffler	1
8	50-7250	Muffler	1
9	50-6320	Bolt	1
10	50-7240	Gasket	3

Ref. No.	Part No.	Description	No. Used
11	50-7300	Cover — Exhaust Pipe	1
12	50-7380	Stud Bolt	2
13	50-7010	Flange Nut	3
14	50-7270	Exhaust Pipe	1
15	50-7290	Stud Bolt	1
16	50-7280	Stud Bolt	1
17	50-7260	Bolt	2
18	50-7360	Brace	1
19	50-0200	Bolt	2

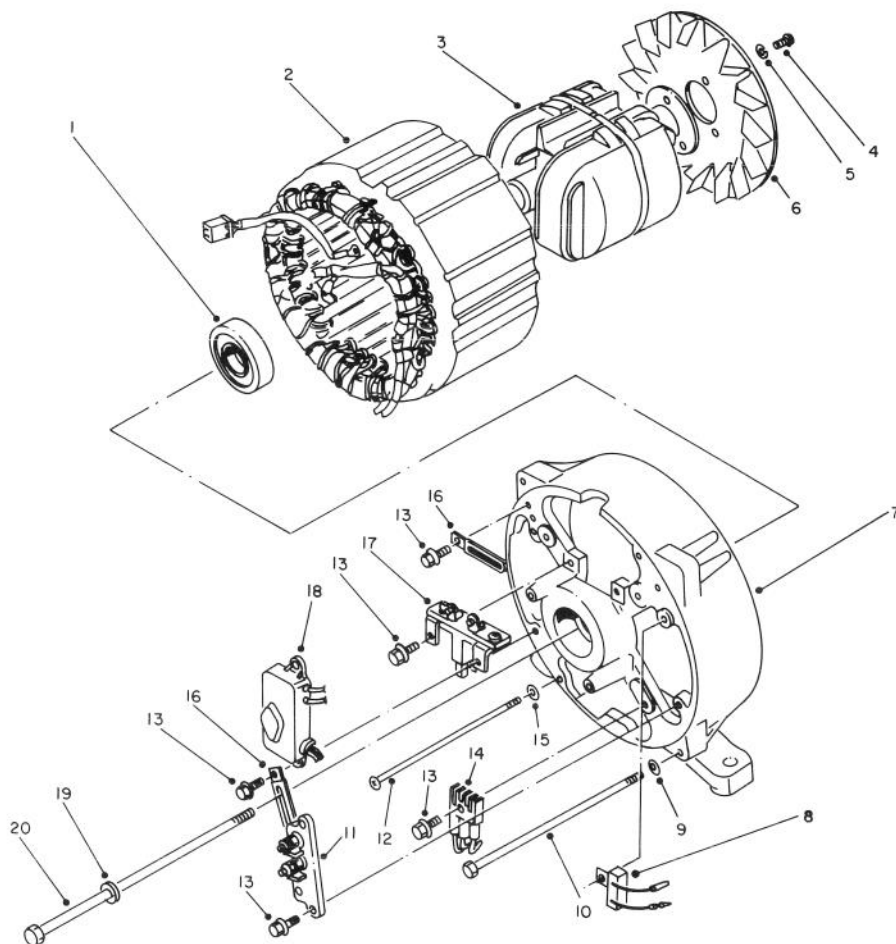


GENERATOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	50-9070	Bearing	1
2	50-9080	Stator	1
3	50-8930	Rotor	1
4	50-0280	Screw	3
5	81-1380	Lockwasher	3
6	50-9060	Fan	1
7	50-8920	Bracket — Rear	1
8	50-9090	Resistor	1
9	50-0620	Washer	4
10	50-9020	Bolt	4
11	50-8990	Terminal	1

Ref. No.	Part No.	Description	No. Used
12	50-9040	Screw	2
13	50-8950	Bolt	8
14	50-8980	Diode	1
15	50-0610	Washer	2
16	50-1070	Clamp	3
17	50-8940	Holder — Brush	1
18	50-8960	Voltage Regulator	1
19	50-9010	Washer	1
20	50-9000	Bolt	1
*	50-8910	Generator Complete	1


* Not Illustrated

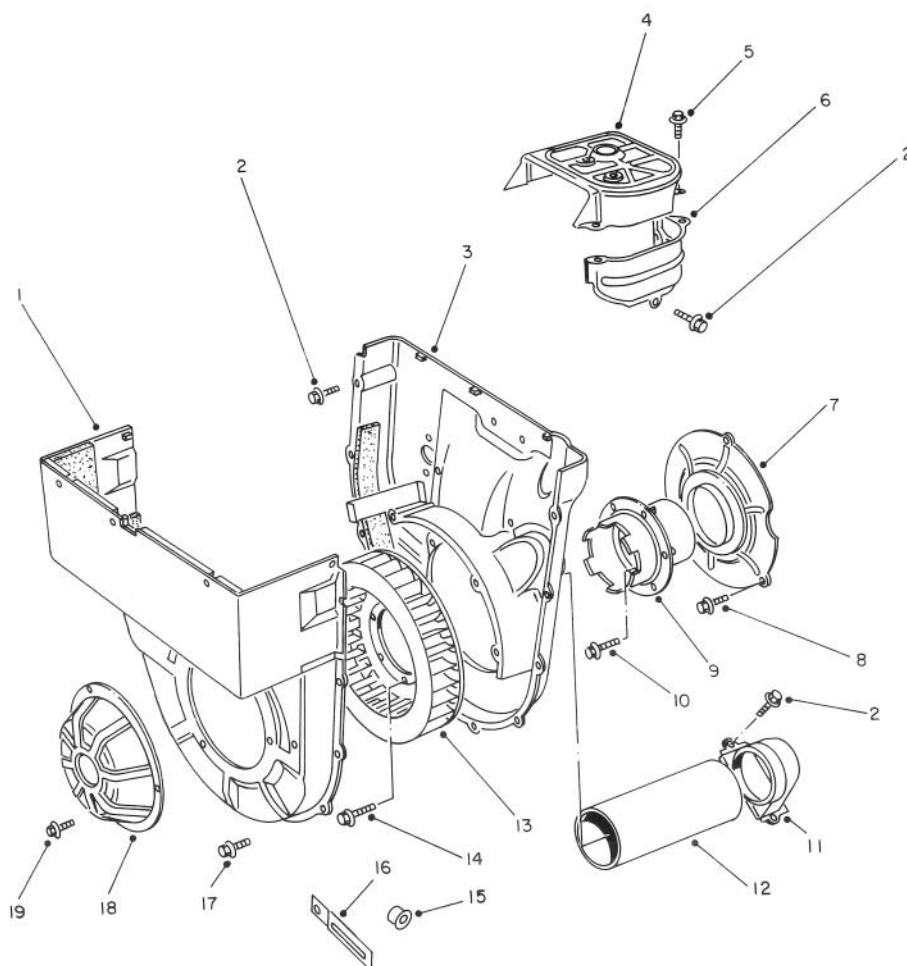

COOLING FAN ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	50-7700	Cover — Outer	1
2	50-6320	Bolt	10
3	50-7740	Cover — Inner	1
4	50-7750	Cowling — Upper	1
5	50-6470	Bolt	2
6	50-7760	Cowling — Side	1
7	50-7790	Cover — Magneto	1
8	50-6360	Bolt	3
9	50-7690	Pulley	1
10	50-7680	Bolt	6


Ref. No.	Part No.	Description	No. Used
11	50-7770	Guide — Air Duct	1
12	50-7780	Tube — Air Duct	1
13	50-7720	Fan	1
14	81-1300	Bolt	6
15	50-7810	Cap	1
16	50-7820	Clamp — Air Duct	1
17	81-1280	Bolt	14
18	50-7800	Cover	1
19	50-6470	Bolt	3

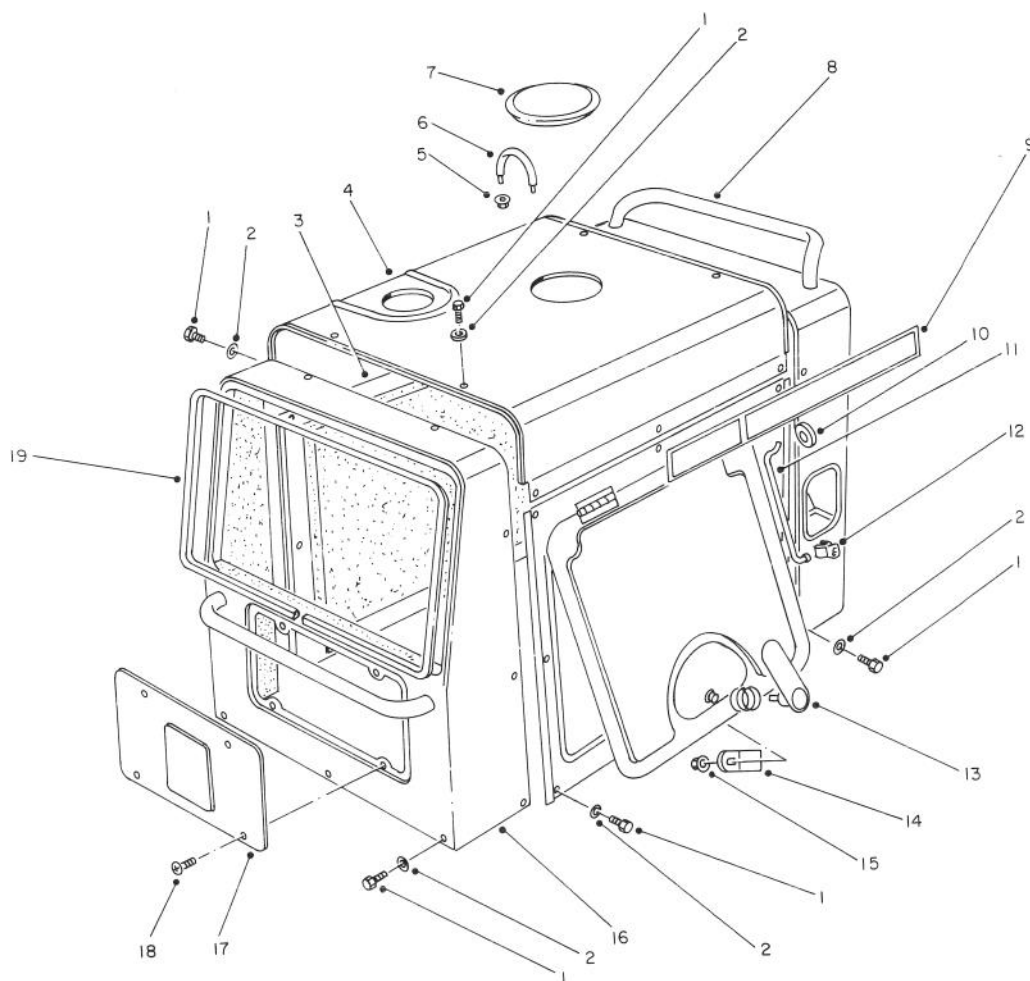

ENGINE COVER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	50-8380	Bolt	30
2	50-8390	Washer	30
3	50-8520	Cover — L.H.	1
4	50-8530	Cover — Upper	1
5	50-7010	Nut	2
6	50-8550	U-Bolt	1
7	50-8540	Cap	1
8	50-8440	Cover — Rear	1
9	50-8560	Decal — Toro	2
10	50-8470	Grommet	1


Ref. No.	Part No.	Description	No. Used
11	50-8460	Rod — Door Stop	1
12	50-8480	Clamp	1
13	50-8490	Handle — Door	1
14	50-8500	Plate — Handle	1
15	50-7180	Nut	1
16	50-8400	Cover — Front	1
17	50-8410	Lid — Terminal	1
18	50-8420	Screw	4
19	50-8430	Seal — Front Cover	1

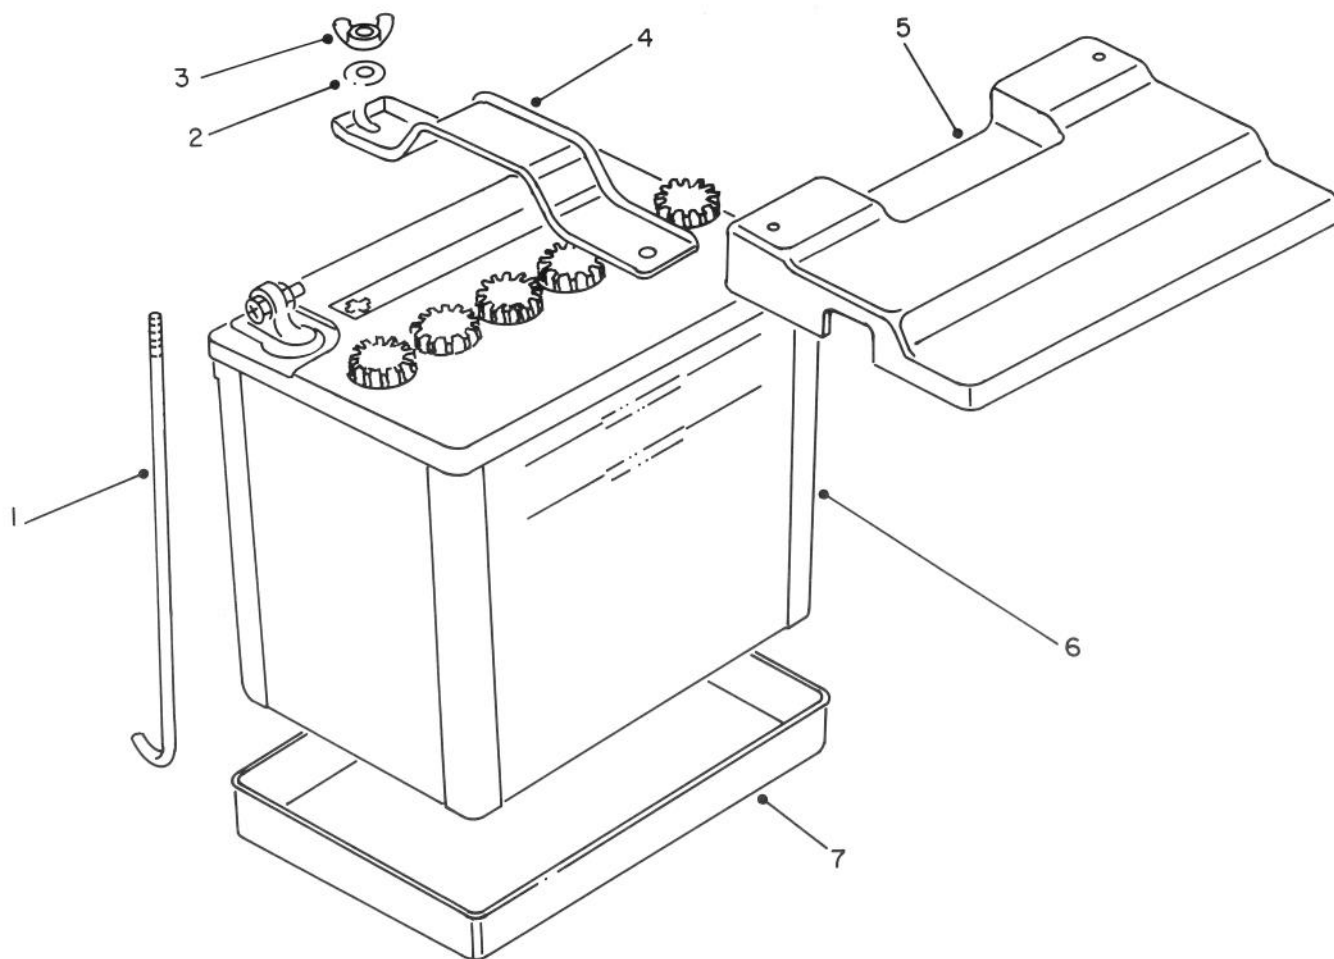

BATTERY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	50-7970	Bolt — Battery Holder	2
2	50-8000	Washer	2
3	50-7990	Wing Nut	2
4	50-7980	Band	1

Ref. No.	Part No.	Description	No. Used
5	50-7950	Cover — Battery	1
6	50-7940	Battery — 12V.	1
7	50-7960	Tray — Battery	1

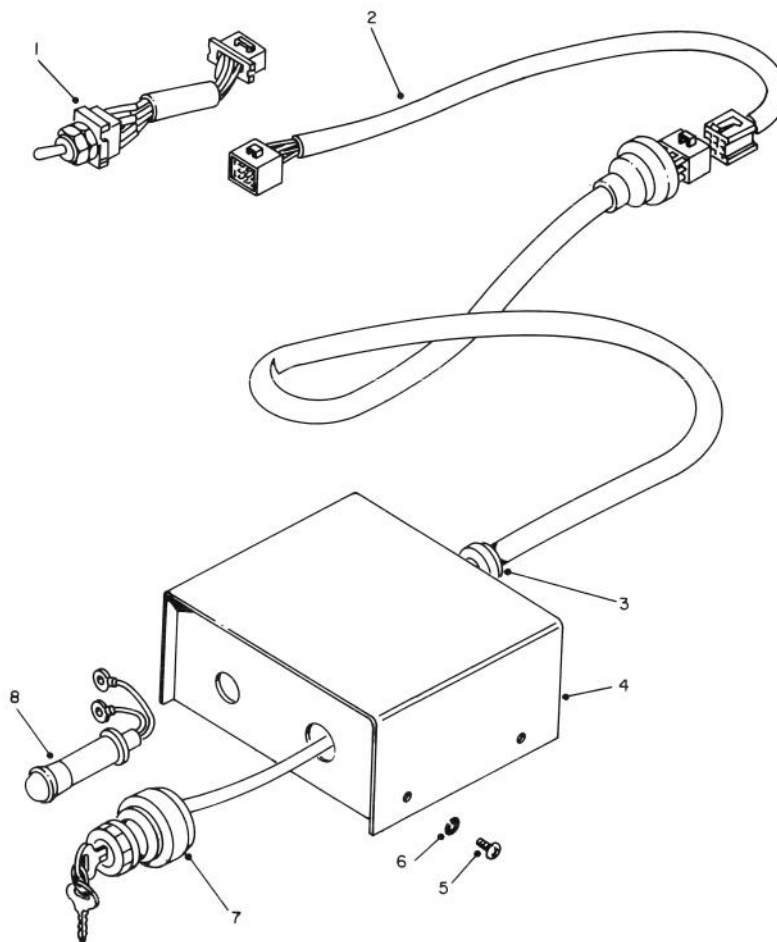

REMOTE CONTROL BOX ASSEMBLY No. 50-9160(Optional)

Ref. No.	Part No.	Description	No. Used
1	50-9540	Switch	1
2†	50-9100	Cable — Extension (Optional)	1
3	50-9150	Grommet	1
4	50-9110	Remote Control Box	1
5	50-9130	Screw	4

Ref. No.	Part No.	Description	No. Used
6	81-1120	Lockwasher	4
7	50-8620	Switch — Engine	1
8	50-9140	Holder	1
*	50-9120	Remote Control Box Assembly (Incl. Ref. #1 & 3-8)	1

* Not Illustrated

† Not part of Kit #50-9160