




MODEL NO. 62032-4000001 & UP

PARTS CATALOG

T3000D GENERATOR

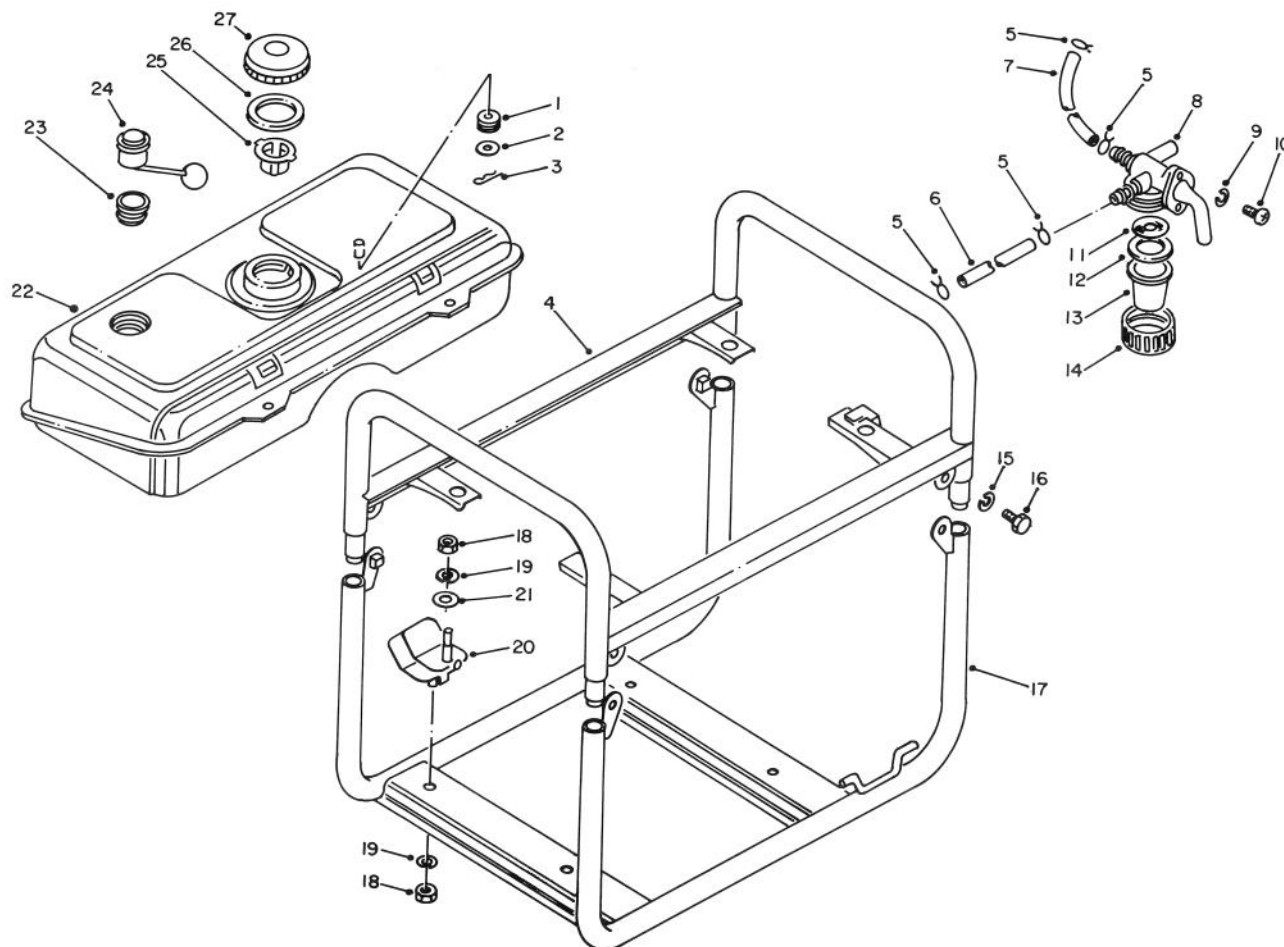


FUEL TANK & FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	50-0890	Cushion	4
2	50-0760	Washer	3
3	50-0970	Clip	3
4	50-5390	Upper Frame	1
5	50-0990	Clip	4
6	50-0930	Hose	1
7	50-0920	Hose	1
8	50-3740	Cock Assembly (Incl. Ref. #11-14)	1
9	81-1420	Lockwasher	2
10	50-0240	Screw	2
11	50-3750	Filter	1
12	50-3770	Gasket	1
13	50-3780	Cup	1
14	50-3760	Cap	1

Ref. No.	Part No.	Description	No. Used
15	50-5700	Lockwasher	4
16	50-0050	Bolt	4
17	50-5400	Lower Frame	1
18	50-0520	Nut	8
19	81-1120	Lockwasher	8
20	50-1590	Engine Mount	4
21	50-4700	Washer	4
22	50-5420	Fuel Tank	1
23	50-3850	Gasket	1
24	50-5430	Fuel Gauge Assembly (Incl. Ref. #23)	1
25	50-3810	Filter	1
26	50-4630	Gasket	1
27	50-3700	Cap	1
*	50-1230	Tool Kit	1


*Not Illustrated

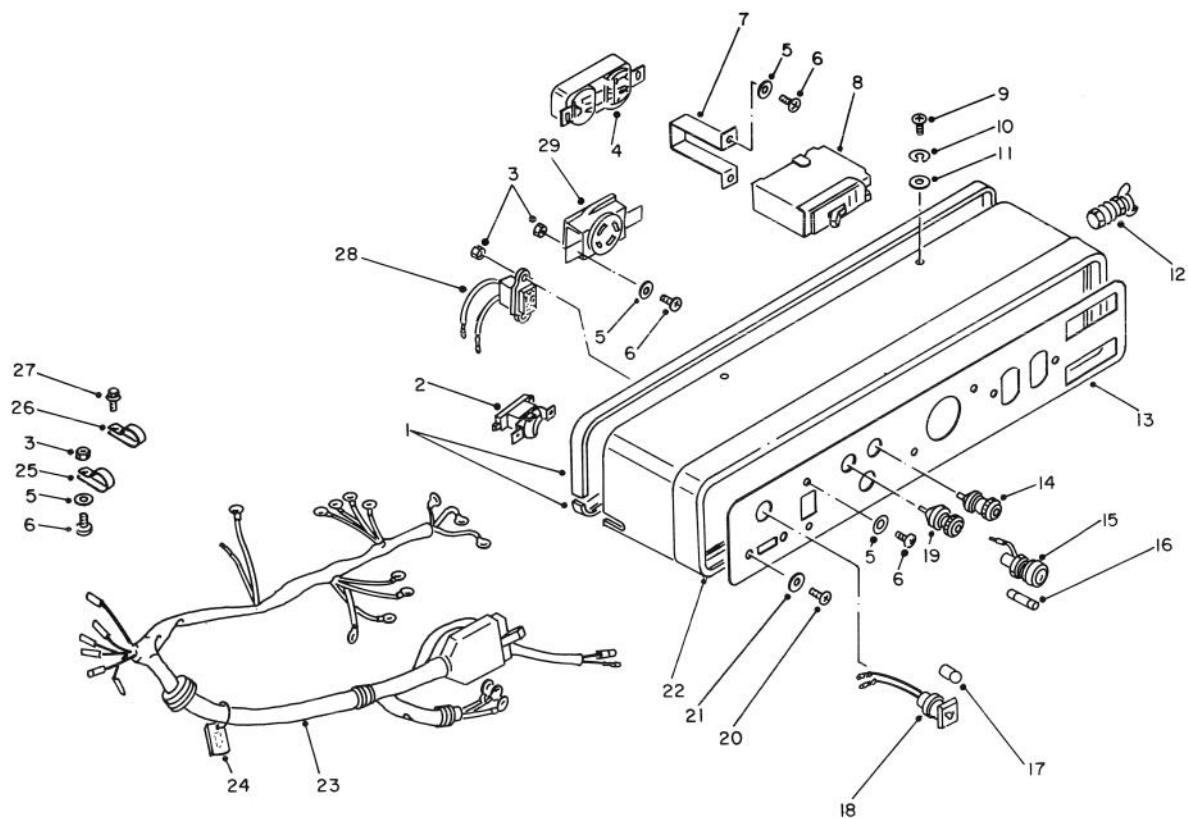

CONTROL PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	50-5590	Seal	2
2	50-4350	Switch	1
3	50-0500	Nut	10
4	50-5810	Receptacle	1
5	50-0600	Washer	8
6	50-0240	Screw	8
7	50-5850	Holder	1
8	50-5840	Circuit Breaker	1
9	50-0280	Screw	5
10	81-1380	Lockwasher	5
11	50-0610	Washer	5
12	50-5650	Terminal	1
13	50-5880	Plate — Panel	1
14	50-4510	Terminal — Positive	1
15	50-4410	Fuse Holder (Incl. Ref. #16)	1

Ref. No.	Part No.	Description	No. Used
16	50-4460	Fuse	1
17	50-3490	Bulb	1
18	50-5370	Lamp (Incl. Ref. #19)	1
19	50-4520	Terminal — Negative	1
20	50-0220	Screw	2
21	50-0590	Washer	2
22	50-5860	Control Panel	1
23	50-5900	Wire Harness	1
24	50-5680	Fuse — Spare	1
25	50-1030	Clamp	1
26	50-1040	Clamp	1
27	81-1280	Bolt	1
28	50-4390	Hertz Meter	1
29	50-5820	Receptacle	1

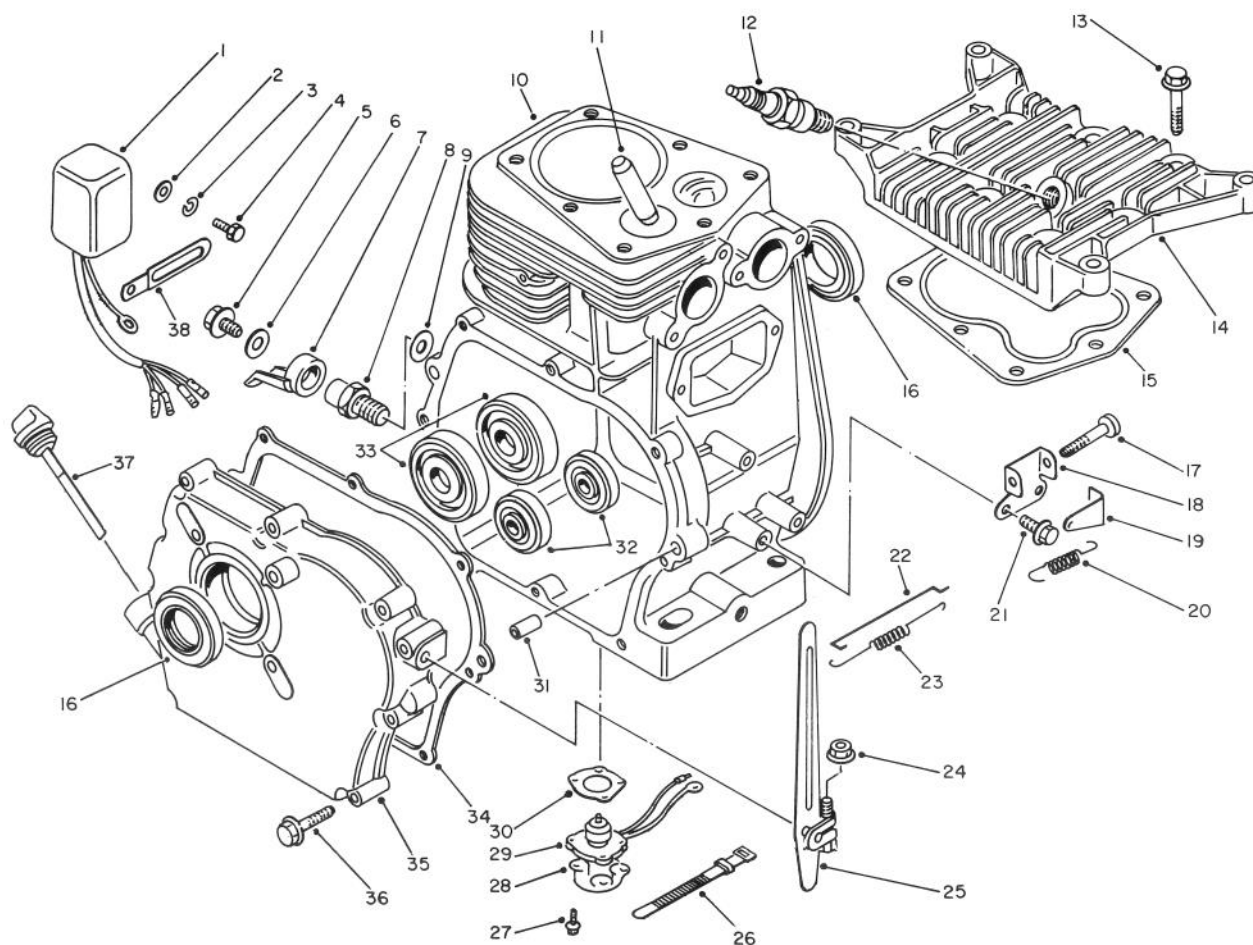


ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	50-3550	Oil Level Unit	1
2	50-0620	Washer	1
3	50-0570	Lockwasher	1
4	50-0020	Bolt	1
5	50-0200	Drain Plug	1
6	50-0780	Gasket	1
7	50-1360	Drain Plate	1
8	50-1370	Adapter	1
9	50-0800	Gasket	1
10	50-4830	Cylinder Assembly	1
11	50-4850	Valve Guide	2
12	50-1160	Spark Plug	1
13	50-4670	Bolt	7
14	50-4790	Cylinder Head	1
15	50-4810	Gasket	1
16	50-4720	Seal	2
17	50-0680	Screw	1
18	50-3260	Bracket	1
19	50-3210	Hook	1
20	50-1150	Spring	1

Ref. No.	Part No.	Description	No. Used
21	50-0170	Bolt	2
22	50-5280	Rod	1
23	50-4750	Spring	1
24	46-0400	Nut	1
25	50-5270	Control Lever	1
26	50-1100	Clamp	1
27	81-1300	Bolt	4
28	50-3540	Plate — Lead Wire	1
29	50-3510	Sensor — Oil Level	1
30	50-3520	Gasket	1
31	50-0450	Pin	2
32	50-0820	Bearing	2
33	50-4680	Bearing	2
34	50-4870	Gasket	1
35	50-4860	Cover	1
36	81-0550	Bolt	8
37	50-4880	Oil Gauge	1
38	50-1000	Clamp	1
*	50-4890	Gasket Set (Optional)	1

*Not Illustrated

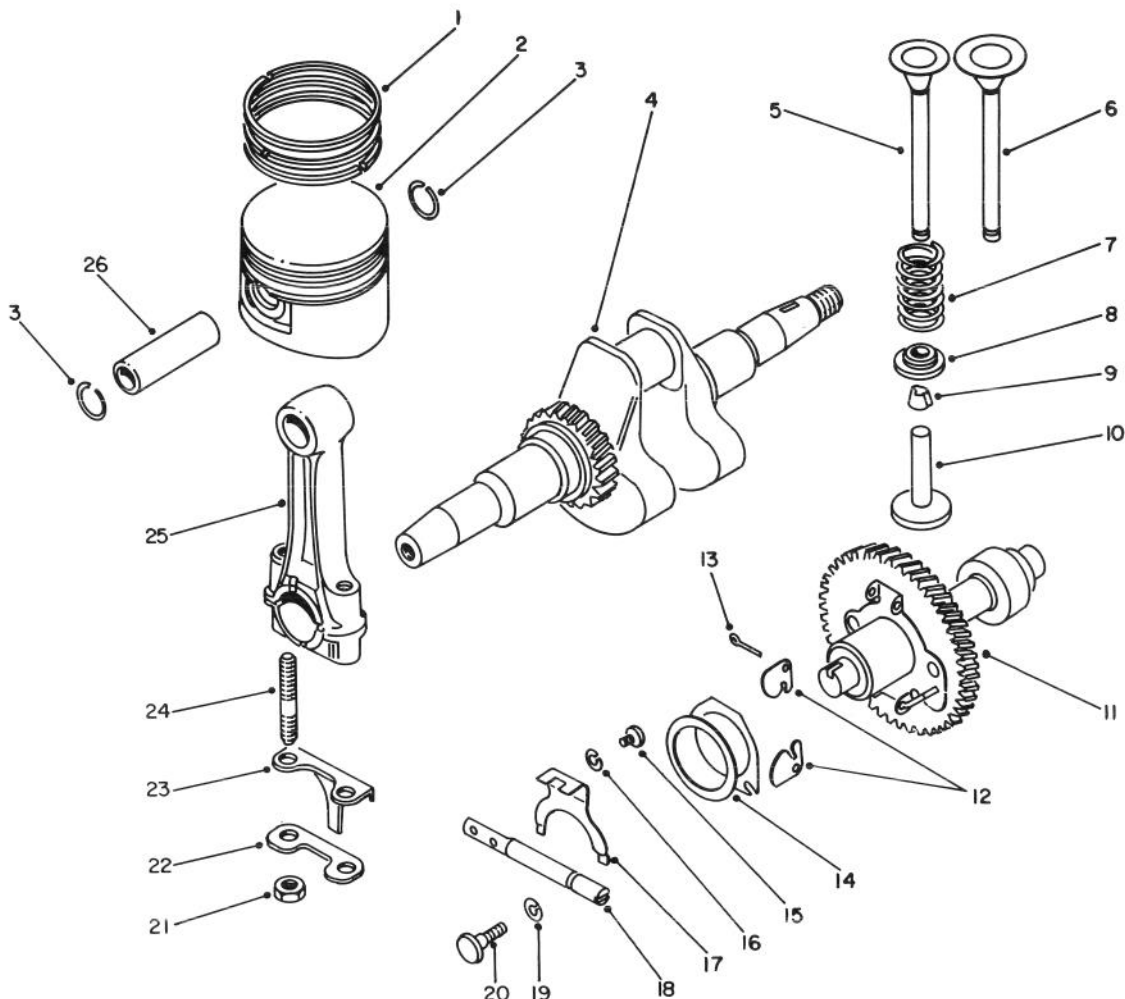


CRANKSHAFT & CAMSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	50-4980	Ring Set	1
*	50-5000	Ring Set (Optional)	1
*	50-5010	Ring Set (Optional)	1
2	50-4940	Piston	1
*	50-4960	Piston (Optional)	1
*	50-4970	Piston (Optional)	1
3	50-4740	Circlip	2
4	50-5060	Crankshaft	1
5	50-5120	Valve — Exhaust	1
6	60-5110	Valve — Intake	1
7	50-5130	Spring	2
8	50-2140	Retainer	2
9	50-2160	Cotter — Valve	2
10	50-5080	Tappet	0-2
*	50-5090	Tappet	0-2
*	50-5100	Tappet	0-2
11	50-5910	Camshaft	1

Ref. No.	Part No.	Description	No. Used
12	50-3070	Arm	14
13	50-0430	Cotter Pin	2
14	50-3110	Spacer	1
15	50-0210	Screw	2
16	50-0560	Lockwasher	2
17	50-5260	Shifter Plate	1
18	50-5250	Shaft	1
19	50-0770	Gasket	1
20	50-0740	Screw	1
21	50-0520	Nut	2
22	50-5040	Lock Plate	1
23	50-5050	Splash Plate	1
24	50-4710	Stud Bolt	2
25	50-5030	Connecting Rod (Incl. Ref. #21-24)	1
26	50-5020	Pin	1


*Not Illustrated

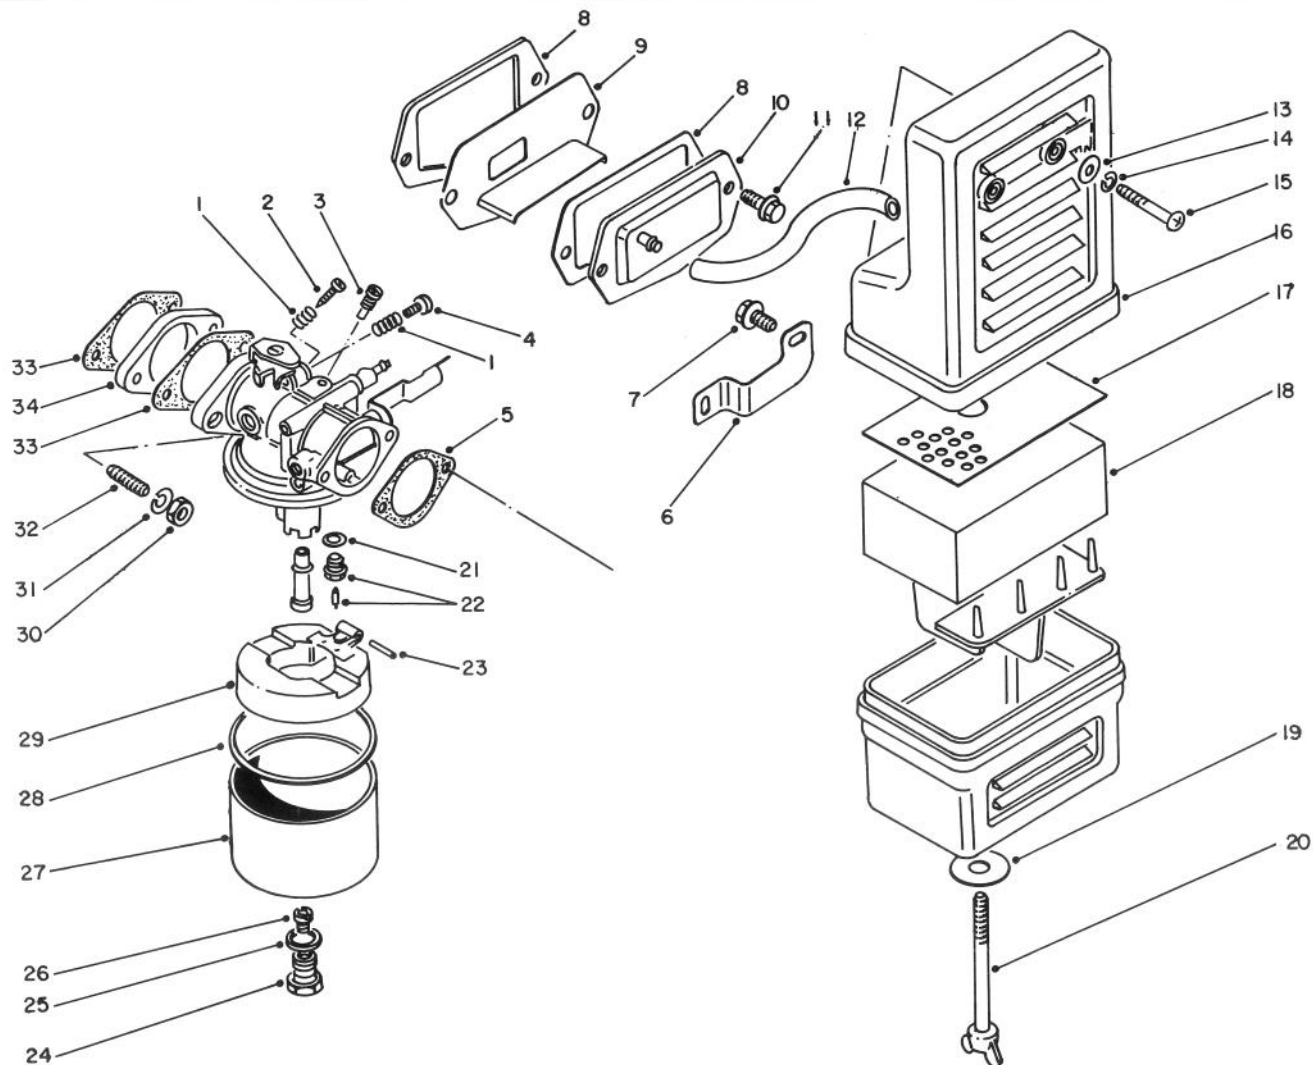

AIR CLEANER & CARBURETOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	50-2330	Spring	2
2	50-4770	Jet	1
3	50-2360	Adjuster	1
4	50-2320	Screw	1
5	50-2530	Gasket	1
6	50-5160	Bracket	1
7	50-0170	Bolt	2
8	50-4920	Gasket	2
9	50-4930	Reed Valve Assembly	1
10	50-4910	Cap — Breather	1
11	81-1300	Bolt	2
12	50-0940	Hose	1
13	50-0610	Washer	2
14	81-1380	Lockwasher	2
15	50-0330	Screw	2
16	50-5720	Air Cleaner Assembly (Incl. Ref. #17-20)	1
17	50-2490	Holder	1


Ref. No.	Part No.	Description	No. Used
18	50-2470	Filter	1
19	50-2570	Washer	1
20	50-2550	Wing Bolt	1
21	50-2400	Gasket	1
22	50-2390	Needle Valve	1
23	50-2310	Pin	1
24	50-2370	Bolt	1
25	50-2380	Gasket	1
26	50-4760	Jet	1
27	50-5140	Carburetor Assembly (Incl. Ref. # 21-26, 28, & 29)	1
28	50-2290	Gasket	1
29	50-2270	Float	1
30	81-0900	Nut	2
31	50-0570	Lockwasher	2
32	50-0080	Stud Bolt	2
33	50-2180	Gasket	2
34	50-2200	Insulator	1

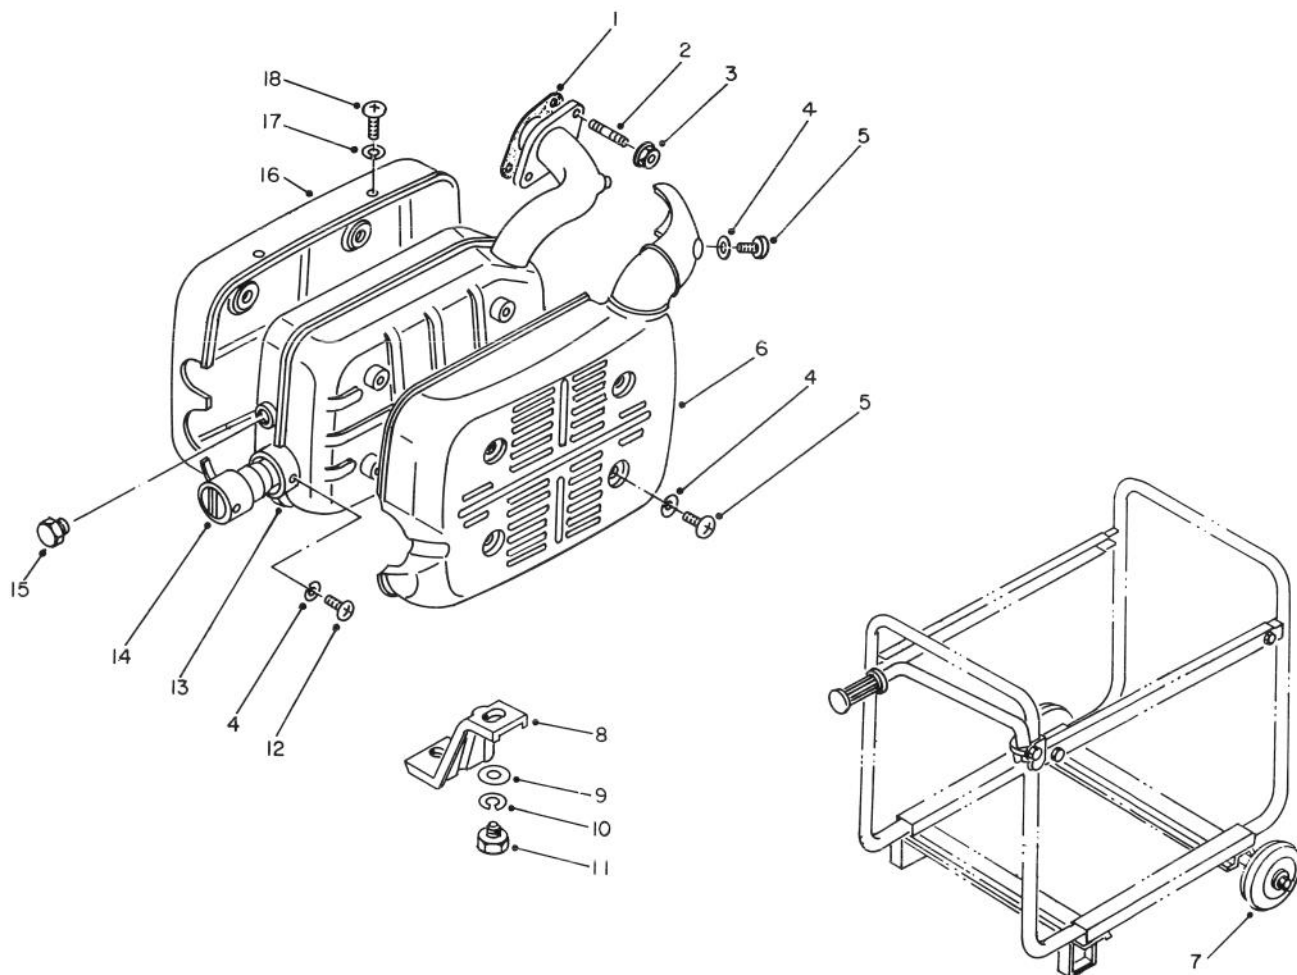

EXHAUST ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	50-5170	Gasket	1
2	50-0100	Stud Bolt	2
3	50-0530	Nut	2
4	50-0570	Lockwasher	10
5	81-1140	Screw	9
6	50-5210	Cover — Front	1
7	50-3660	Wheel Assembly (Optional)	1
8	50-5190	Bracket — Muffler	1
9	50-0630	Washer	1


Ref. No.	Part No.	Description	No. Used
10	81-1120	Lockwasher	1
11	50-0060	Bolt	1
12	50-0350	Screw	1
13	50-5180	Muffler	1
14	50-2700	Cleanout Tube	1
15	50-2640	Drain Plug	2
16	50-2690	Cover — Rear	1
17	81-1420	Lockwasher	3
18	50-0230	Screw	3

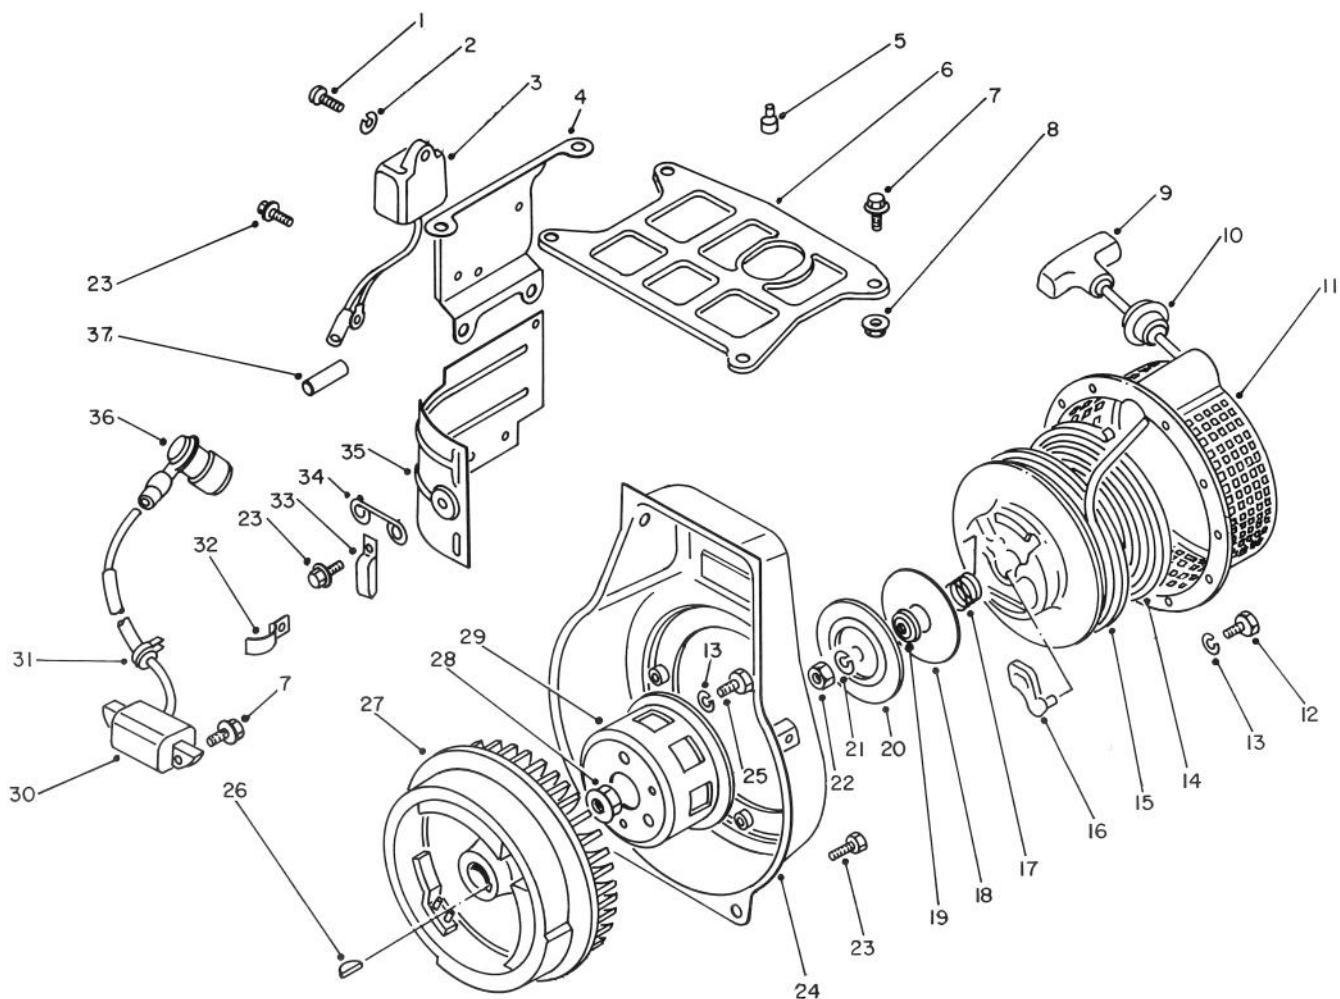

RECOIL STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	50-0270	Screw	2
2	81-1380	Lockwasher	2
3	50-5320	Transistor Magneto	1
4	50-5330	Bracket	1
5	50-4730	Cushion	1
6	50-5240	Upper Cowling	1
7	81-0530	Bolt	6
8	46-0400	Nut	4
9		Grip	1
10	50-2990	Grip Assembly (Incl. Ref. #9)	1
11	50-2840	Starter Assembly (Incl. Ref. #14-22)	1
12	50-0650	Bolt	3
13	50-0570	Lockwasher	6
14	50-2900	Spring	1
15	50-2860	Reel	1
16	50-2880	Ratchet	1
17	50-2940	Spring	1
18	50-2980	Slide Plate	1

Ref. No.	Part No.	Description	No. Used
19	50-2970	Cover	1
20	50-2920	Plate	1
21	81-1120	Lockwasher	1
22	50-0750	Nut	1
23	50-0170	Bolt	10
24	50-5220	Cover — Fan	1
25	50-0020	Bolt	3
26	50-0640	Key	1
27	50-5300	Rotor	1
28	50-0540	Nut	1
29	50-3030	Pulley — Starter	1
30	50-5290	Stator	1
31	50-5310	Grommet	1
32	50-5710	Clamp	1
33	50-1040	Clamp	1
34	50-1030	Clamp	1
35	50-5230	Side Cowling	1
36	50-5350	Cap — Spark Plug	1
37	50-5340	Tube	1

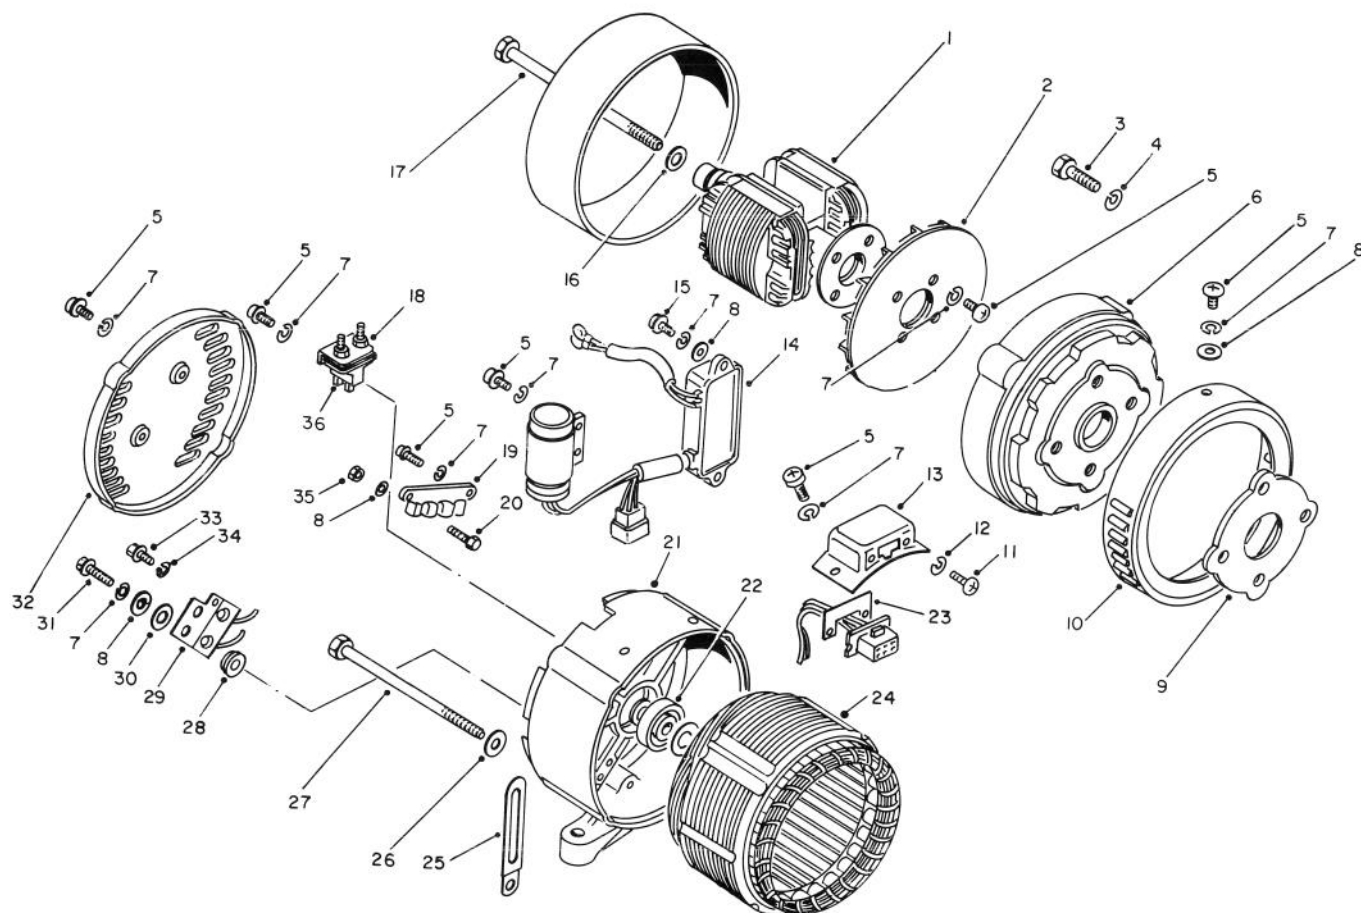

GENERATOR

Ref. No.	Part No.	Description	No. Used
1	50-5520	Rotor	1
2	50-5550	Fan	1
3	50-0070	Bolt	4
4	50-5730	Lockwasher	4
5	50-0280	Screw	15
6	50-5800	Generator Assy. (Incl. Ref. #1,2,5,7,16,17,21,22 & 24)	1
7	50-0610	Lockwasher	23
8	50-0610	Washer	6
9	50-5460	Seal	1
10	50-5470	Cover — Front	1
11	50-0220	Screw	2
12	50-0560	Lockwasher	2
13	50-3990	Cover — Coupler	1
14*		Voltage Regulator	1
15	50-0300	Screw	2
16	50-4700	Washer	1
17	50-5540	Bolt	1
18	50-4160	Holder — Brush	1

Ref. No.	Part No.	Description	No. Used
19	50-5490	Terminal	1
20	50-4650	Bolt	2
21	50-5750	Rear Bracket	1
22	50-4690	Bearing	1
23	50-4000	Plate	1
24*		Stator	1
25	50-1070	Clamp	2
26	50-0620	Washer	4
27	50-5500	Bolt	4
28	50-4130	Bushing	2
29	50-4090	Diode	1
30	50-4110	Washer	2
31	50-0310	Screw	2
32	50-5480	Cover — Rear	1
33	81-1410	Screw	1
34	81-1420	Lockwasher	1
35	50-5690	Nut	4
36	50-4180	Brush	2

*Note: See Service Bulletin No. 2