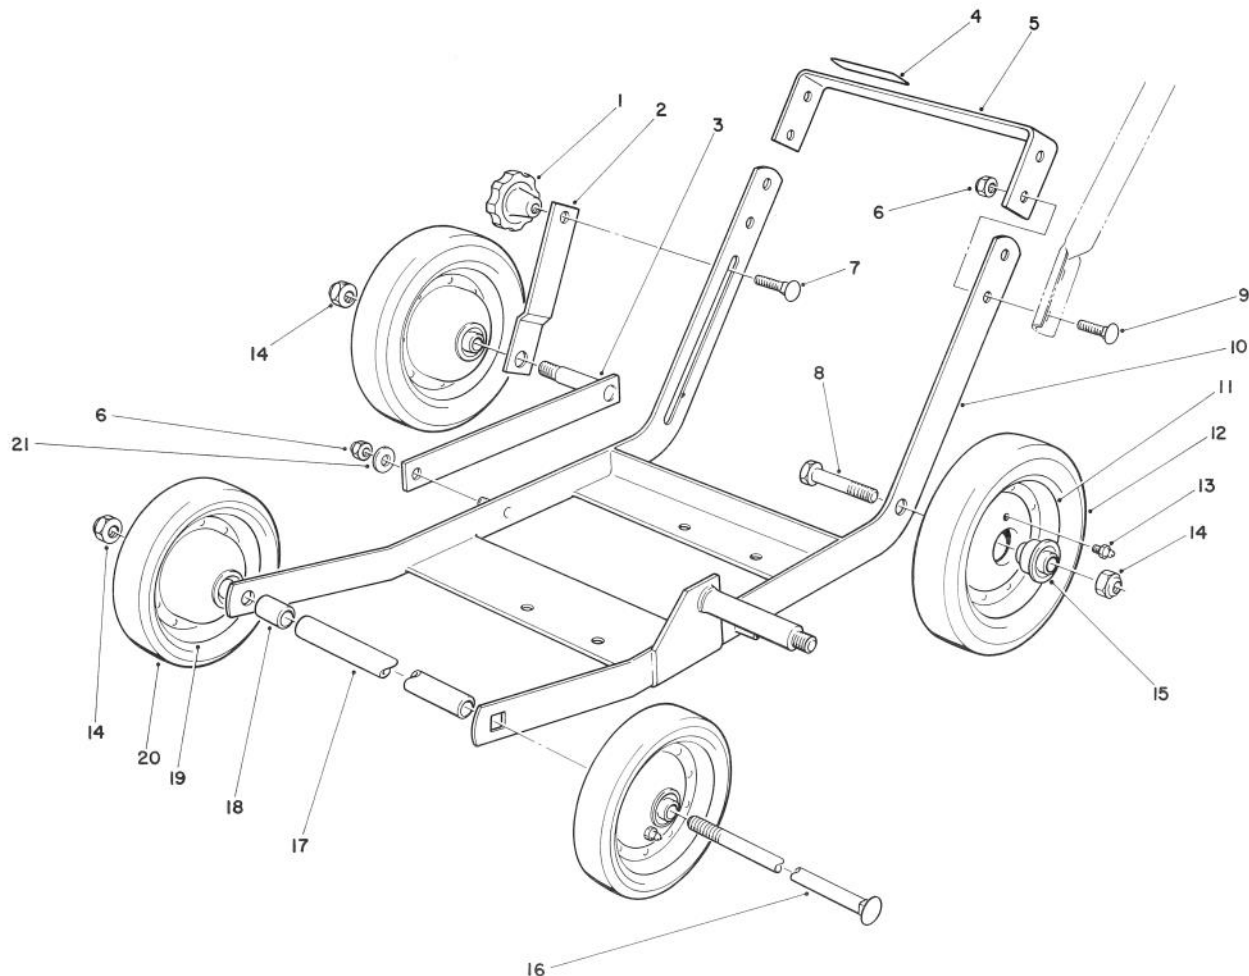



**TORO®**

MODEL NO. 58435 — 4000001 &amp; UP

**PARTS  
CATALOG****3.5 H.P. GAS EDGER****FRAME ASSEMBLY**

| Ref. No. | Part No. | Description                                             | No. Used |
|----------|----------|---------------------------------------------------------|----------|
| 1        | 19-4050  | Knob — Handle Release                                   | 1        |
| 2        | 52-0050  | Link — Wheel                                            | 1        |
| 3        | 52-0100  | Bar Assembly                                            | 1        |
| 4        | 52-0570  | Decal — Warning                                         | 1        |
| 5        | 52-0040  | Bar — Escutcheon                                        | 1        |
| 6        | 3296-47  | Nut — Lock                                              | 5        |
| 7        | 3230-3   | Bolt — Carriage                                         | 1        |
| 8        | 325-9    | Screw — Cap, Hx. Hd.                                    | 1        |
| 9        | 3230-22  | Bolt — Carriage                                         | 4        |
| 10       | 52-0130  | Frame Assembly                                          | 1        |
| 11       | 36-8851  | Wheel & Tire Assembly — 8"<br>(Incl. Ref. #12, 13 & 15) | 2        |

| Ref. No. | Part No. | Description                                             | No. Used |
|----------|----------|---------------------------------------------------------|----------|
| 12       | 36-8990  | Tire — 8"                                               | 2        |
| 13       | 302-26   | Fitting — Grease                                        | 4        |
| 14       | 3296-25  | Nut — Lock                                              | 3        |
| 15       | 52-0560  | Bearing                                                 | 8        |
| 16       | 52-0530  | Bolt — Carriage                                         | 1        |
| 17       | 52-0540  | Spacer — Axle, Long                                     | 1        |
| 18       | 52-1210  | Spacer — Axle, Short                                    | 1        |
| 19       | 36-8841  | Wheel & Tire Assembly — 7"<br>(Incl. Ref. #13, 15 & 20) | 2        |
| 20       | 36-8980  | Tire — 7"                                               | 2        |
| 21       | 3256-2   | Washer — Flat                                           | 1        |

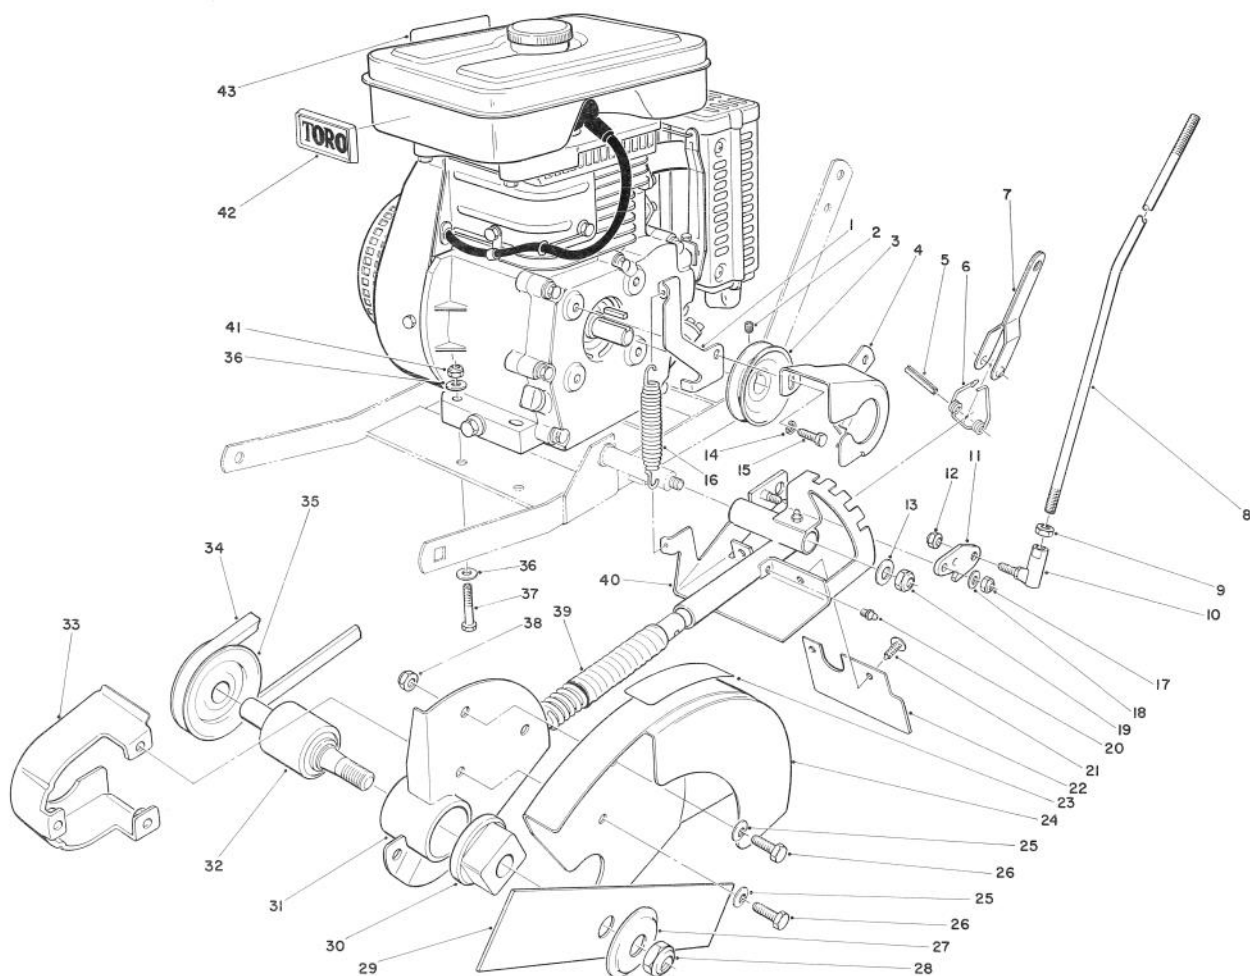


## ENGINE & BLADE ASSEMBLY

| Ref. No. | Part No.  | Description           | No. Used |
|----------|-----------|-----------------------|----------|
| 1        | 52-0210   | Bracket — Spring      | 1        |
| 2        | 3246-15   | Screw — Set           | 1        |
| 3        | 52-0550   | Pulley — Engine       | 1        |
| 4        | 52-0580   | Guard — Engine Pulley | 1        |
| 5        | 32121-111 | Pin — Roll            | 1        |
| 6        | 52-0270   | Spring — Torsion      | 1        |
| 7        | 52-0280   | Lever Assembly        | 1        |
| 8        | 52-0230   | Rod — Lower           | 1        |
| 9        | 3220-3    | Nut — Jam             | 1        |
| 10       | 52-0220   | Ball — Joint          | 1        |
| 11       | 52-0240   | Lock Lever Assembly   | 1        |
| 12       | 3296-6    | Nut — Lock            | 1        |
| 13       | 36-4780   | Washer — Flat         | 1        |
| 14       | 3253-4    | Washer — Lock         | 3        |
| 15       | 3210-2    | Screw — Cap, Hx. Hd.  | 3        |
| 16       | 52-0610   | Spring — Extension    | 1        |
| 17       | 3296-47   | Nut — Lock            | 1        |
| 18       | 3256-2    | Washer — Flat         | 1        |
| 19       | 3296-25   | Nut — Lock            | 1        |
| 20       | 302-55    | Fitting — Grease      | 2        |
| 21       | 3290-446  | Fastener — Panel Clip | 2        |
| 22       | 52-0310   | Guard — Rubber        | 1        |

| Ref. No. | Part No. | Description               | No. Used |
|----------|----------|---------------------------|----------|
| 23       | 52-0400  | Decal — Warning           | 1        |
| 24       | 52-0090  | Blade Guard Assembly      | 1        |
| 25       | 3290-451 | Washer — Bellville        | 5        |
| 26       | 49-2040  | Screw — Cap, Hx. Hd.      | 5        |
| 27       | 3290-450 | Washer — Blade            | 1        |
| 28       | 3296-19  | Nut — Lock                | 1        |
| 29       | 52-0480  | Blade — 10"               | 1        |
| 30       | 52-0720  | Shield — Bearing          | 1        |
| 31       | 52-0410  | Hub & Shaft Assembly      | 1        |
| 32       | 52-0460  | Spindle Assembly          | 1        |
| 33       | 52-0500  | Guard — Blade Pulley      | 1        |
| 34       | 52-0320  | V-Belt                    | 1        |
| 35       | 52-0620  | Pulley — Blade            | 1        |
| 36       | 3256-23  | Washer — Flat             | 8        |
| 37       | 322-8    | Screw — Cap, Hx. Hd.      | 4        |
| 38       | 3296-8   | Nut — Lock                | 2        |
| 39       | 11-8249  | Spring & Bellows Assembly | 1        |
| 40       | 52-0330  | Pivot Bracket Assembly    | 1        |
| 41       | 3296-29  | Nut — Lock                | 4        |
| 42       | 46-8290  | Plate — Toro Logo         | 1        |
| 43       | 52-3370  | Decal — Instruction       | 1        |
| *        | 59270    | Engine (Complete)         | 1        |


\*Not Illustrated

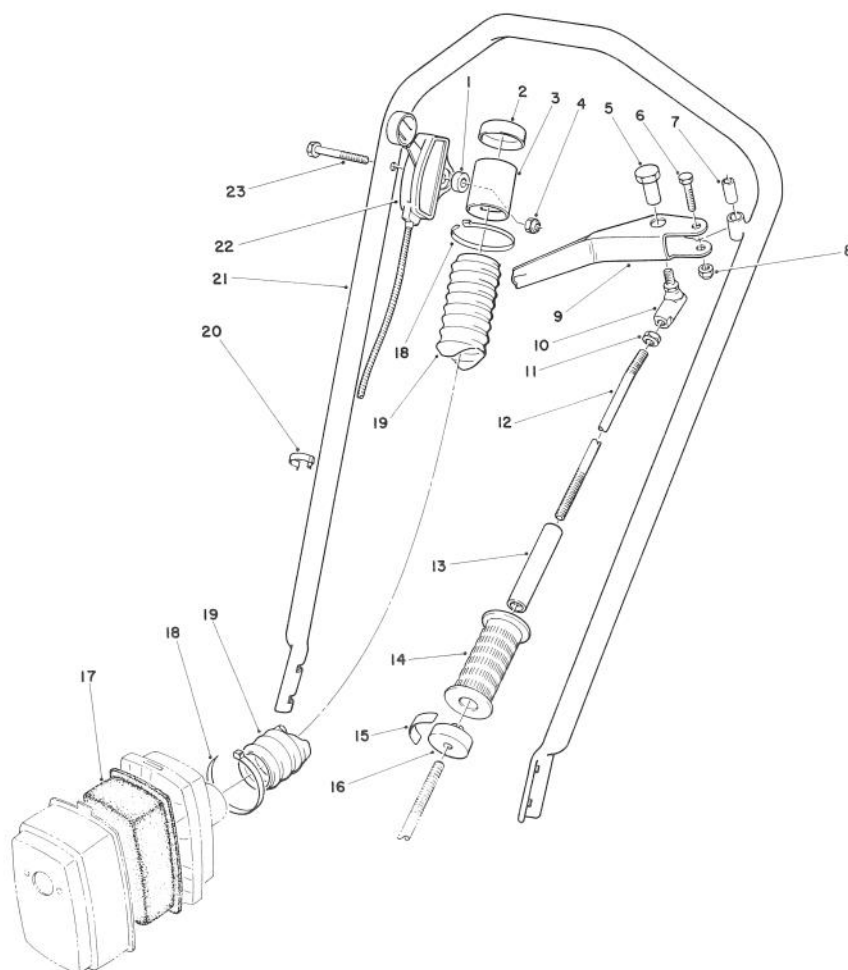

## HANDLE ASSEMBLY

| Ref. No. | Part No. | Description             | No. Used |
|----------|----------|-------------------------|----------|
| 1        | 2-0780   | Spacer                  | 1        |
| 2        | 2410-53  | Caplug                  | 1        |
| 3        | 39-7790  | Hose Tip — Air Cleaner  | 1        |
| 4        | 3296-8   | Nut — Lock              | 1        |
| 5        | 52-0710  | Bolt — Control Lever    | 1        |
| 6        | 321-9    | Screw — Cap, Hx. Hd.    | 1        |
| 7        | 52-0690  | Bushing — Control Lever | 1        |
| 8        | 3296-16  | Nut — Lock              | 1        |
| 9        | 52-0700  | Lever — Control         | 1        |
| 10       | 52-0220  | Ball Joint              | 1        |
| 11       | 3220-3   | Nut — Jam               | 1        |
| 12       | 52-0680  | Rod — Upper             | 1        |
| 13       | 52-0660  | Turnbuckle — Adjustable | 1        |

| Ref. No. | Part No. | Description                                                               | No. Used |
|----------|----------|---------------------------------------------------------------------------|----------|
| 14       | 52-0670  | Grip — Handle                                                             | 1        |
| 15       | 52-0740  | Decal — Adjustment                                                        | 1        |
| 16       | 52-0650  | Knob — Lock                                                               | 1        |
| 17       | 52-0200  | Foam Element — Air Cleaner                                                | 1        |
| 18       | 3290-378 | Tie Strap                                                                 | 2        |
| 19       | 39-9761  | Hose — Air Cleaner                                                        | 1        |
| 20       | 218-465  | Clip — Control Wire                                                       | 1        |
| 21       | 52-0010  | Handle Assembly                                                           | 1        |
| 22       | 52-0060  | Control — Throttle<br>Bend Type #1<br>Sheath Length 38"<br>Wire Length 2" | 1        |
| 23       | 321-33   | Screw — Cap, Hx. Hd.                                                      | 1        |

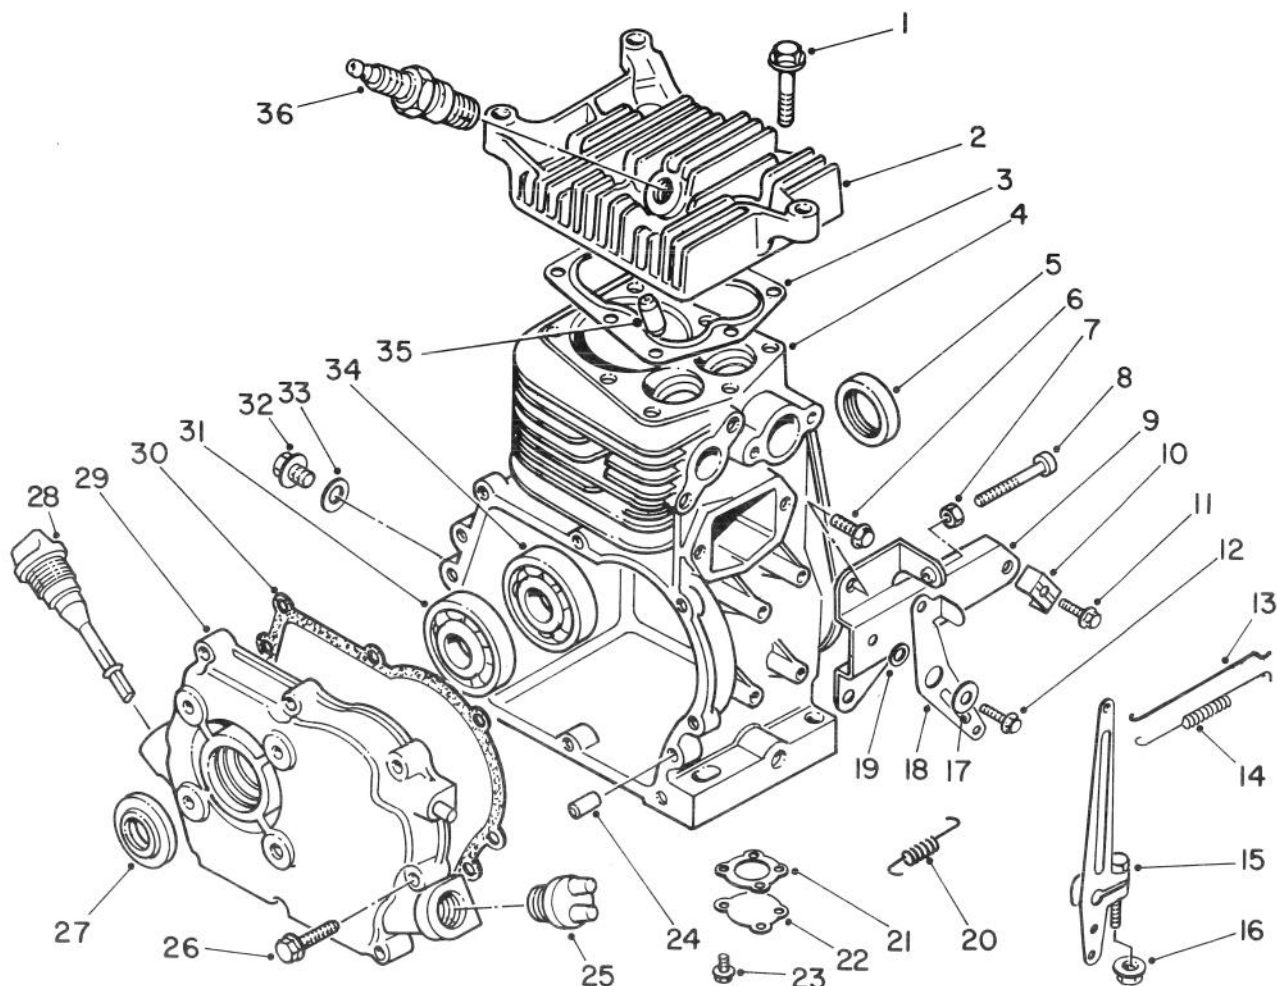


## CRANKCASE ASSEMBLY

| Ref. No. | Part No. | Description                | No. Used |
|----------|----------|----------------------------|----------|
| 1        | 50-0190  | Screw — Hex Flange Hd.     | 7        |
| 2        | 50-1260  | Cylinder Head              | 1        |
| 3        | 50-1290  | Gasket — Cylinder Head     | 1        |
| 4        | 53-0950  | Cylinder                   | 1        |
| 5        | 50-0870  | Seal — Oil                 | 1        |
| 6        | 50-6320  | Screw — Hex Flange Hd.     | 2        |
| 7        | 81-0900  | Nut — Jam                  | 1        |
| 8        | 53-1030  | Screw — Round Phillips Hd. | 1        |
| 9        | 53-1020  | Bracket — Governor Control | 1        |
| 10       | 81-1690  | Clamp — Cable              | 1        |
| 11       | 50-0130  | Screw — Hex Flange Hd.     | 1        |
| 12       | 53-0220  | Screw — Hex Flange Hd.     | 1        |
| 13       | 50-3300  | Rod — Carburetor           | 1        |
| 14       | 50-1130  | Spring                     | 1        |
| 15       | 53-1060  | Lever — Control            | 1        |
| 16       | 50-7180  | Nut — Flange               | 1        |
| 17       | 53-0200  | Spacer                     | 1        |
| 18       | 53-1000  | Lever — Governor Control   | 1        |
| 19       | 53-1010  | Washer                     | 1        |

| Ref. No. | Part No. | Description                 | No. Used |
|----------|----------|-----------------------------|----------|
| 20       | 53-1050  | Spring                      | 1        |
| 21       | 50-3520  | Gasket — Level Sensor Cover | 1        |
| 22       | 53-0090  | Cover — Level Sensor        | 1        |
| 23       | 50-6190  | Screw — Hex Flange Hd.      | 4        |
| 24       | 81-0520  | Pin                         | 2        |
| 25       | 53-0990  | Plug                        | 1        |
| 26       | 81-0550  | Screw — Hex Flange Hd.      | 8        |
| 27       | 50-0870  | Seal — Oil                  | 1        |
| 28       | 50-1450  | Gauge — Oil Level           | 1        |
| 29       | 53-0980  | Cover — Crankcase Side      | 1        |
| 30       | 50-1430  | Gasket — Crankcase Cover    | 1        |
| 31       | 53-0960  | Bearing                     | 1        |
| 32       | 53-0970  | Plug — Drain                | 2        |
| 33       | 50-0800  | Gasket — Drain Plug         | 2        |
| 34       | 53-0960  | Bearing                     | 1        |
| 35       | 50-1350  | Guide — Valve               | 2        |
| 36       | 50-1160  | Spark Plug                  | 1        |
| *        | 53-1090  | Gasket Set                  | 1        |


\*Not Illustrated

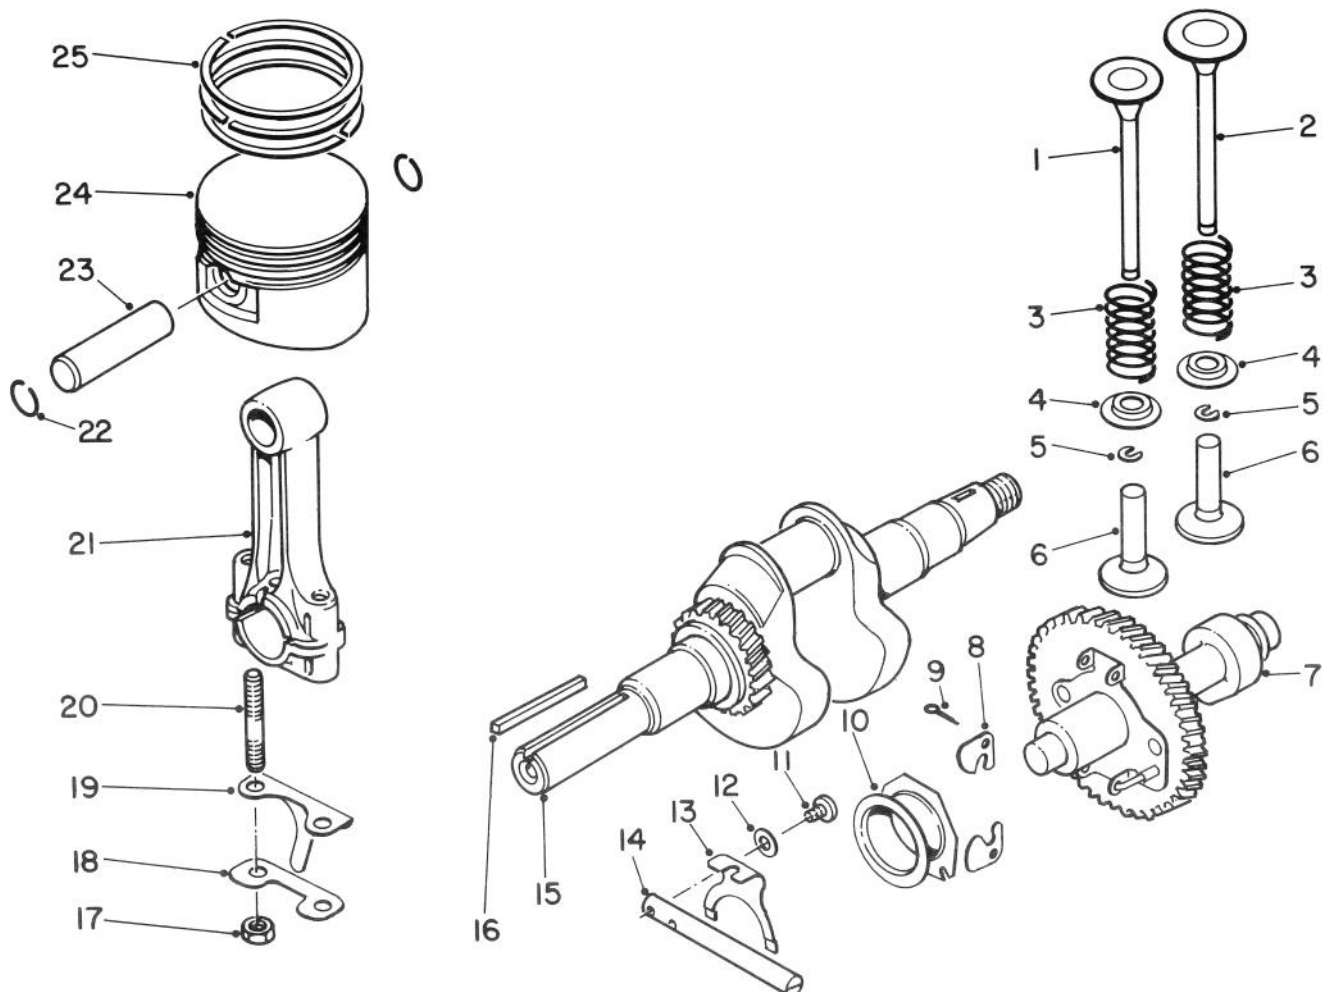

## CRANKSHAFT ASSEMBLY

| Ref. No. | Part No. | Description                                  | No. Used |
|----------|----------|----------------------------------------------|----------|
| 1        | 50-2110  | Valve — Exhaust                              | 1        |
| 2        | 50-2080  | Valve — Intake                               | 1        |
| 3        | 50-2120  | Spring — Valve                               | 2        |
| 4        | 50-2140  | Retainer — Spring                            | 2        |
| 5        | 50-2160  | Cotter — Valve                               | 2        |
| 6        | 50-2040  | Tappet — Valve (Length: 1.433 inch, 36.39mm) | 2        |
|          | 50-2030  | Tappet — Valve (Length: 1.435 inch, 36.46mm) | 2        |
|          | 50-2050  | Tappet — Valve (Length: 1.438 inch, 36.53mm) | 2        |
| 7        | 50-1950  | Cam Shaft                                    | 1        |
| 8        | 50-3070  | Arm                                          | 14       |
| 9        | 50-0430  | Pin — Cotter                                 | 2        |
| 10       | 50-3110  | Spacer — Governor                            | 1        |
| 11       | 50-0220  | Screw                                        | 2        |
| 12       | 50-0590  | Washer                                       | 2        |
| 13       | 50-3150  | Plate — Shift                                | 1        |
| 14       | 50-3130  | Shaft — Throttle Return                      | 1        |
| 15       | 53-1450  | Crankshaft                                   | 1        |

| Ref. No. | Part No. | Description                                        | No. Used |
|----------|----------|----------------------------------------------------|----------|
| 16       | 53-1130  | Key                                                | 1        |
| 17       | 50-0510  | Nut                                                | 2        |
| 18       | 50-1890  | Plate — Lock                                       | 1        |
| 19       | 50-1870  | Plate — Splasher                                   | 1        |
| 20       | 50-0670  | Stud Bolt                                          | 2        |
| 21       | 50-1840  | Connecting Rod Assembly (Std.) (Incl. Ref. #17-20) | 1        |
| 22       | 50-0960  | Circlip                                            | 2        |
| 23       | 50-1800  | Pin — Piston                                       | 1        |
| 24       | 50-1650  | Piston (Std.)                                      | 1        |
|          | 50-1660  | Piston (Oversize .010 inch, .25mm)                 | 1        |
|          | 50-1670  | Piston (Oversize .020 inch, .5mm)                  | 1        |
| 25       | 50-1740  | Ring Set — Piston (Std.)                           | 1        |
|          | 50-1750  | Ring Set — Piston (Oversize .010 inch, .25mm)      | 1        |
|          | 50-1760  | Ring Set — Piston (Oversize .020 inch, .5mm)       | 1        |


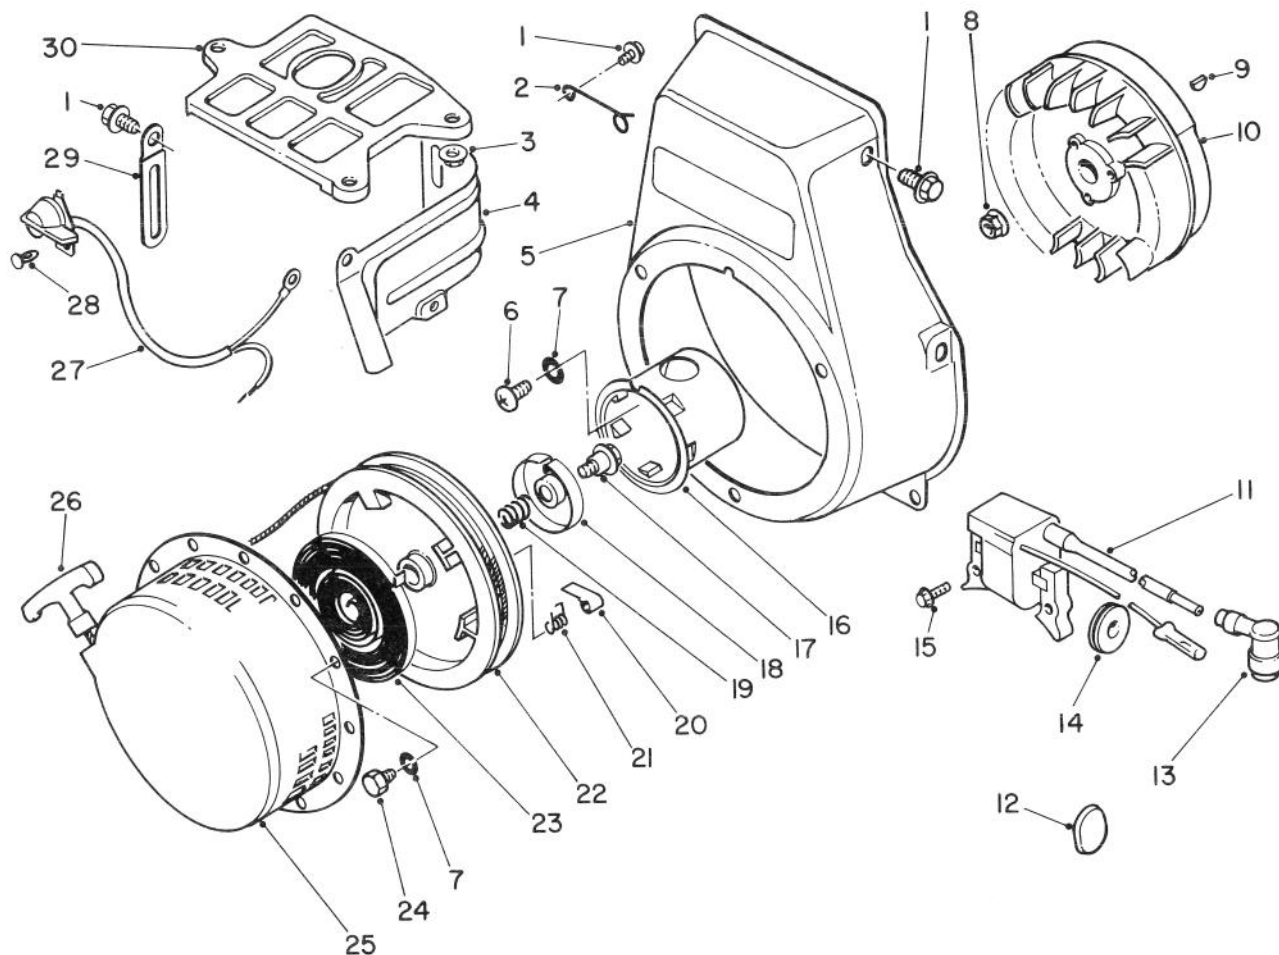


## RECOIL STARTER ASSEMBLY

| Ref. No. | Part No. | Description                | No. Used |
|----------|----------|----------------------------|----------|
| 1        | 53-1340  | Screw — Hex Flange Hd.     | 7        |
| 2        | 50-1030  | Clamp — Cord               | 1        |
| 3        | 50-7180  | Nut — Flange               | 3        |
| 4        | 53-1380  | Cowling — Side             | 1        |
| 5        | 53-1480  | Cover — Cooling Fan        | 1        |
| 6        | 50-0380  | Screw — Round Phillips Hd. | 3        |
| 7        | 81-1450  | Washer — Lock              | 6        |
| 8        | 50-0540  | Nut — Flange               | 1        |
| 9        | 50-0640  | Key — Woodruff             | 1        |
| 10       | 53-1350  | Flywheel                   | 1        |
| 11       | 53-1360  | Coil — Primary             | 1        |
| 12       | 53-0870  | Plug                       | 1        |
| 13       | 50-3450  | Cap — Spark Plug           | 1        |
| 14       | 53-1370  | Grommet                    | 1        |
| 15       | 50-6230  | Screw — Hex Flange Hd.     | 2        |
| 16       | 53-1320  | Pulley — Starter           | 1        |
| 17       | 81-1260  | Bolt — Shoulder            | 1        |

| Ref. No. | Part No. | Description                                            | No. Used |
|----------|----------|--------------------------------------------------------|----------|
| 18       | 53-1310  | Retainer                                               | 1        |
| 19       | 81-1240  | Spring — Brake                                         | 1        |
| 20       | 81-1230  | Dog                                                    | 2        |
| 21       | 81-1220  | Spring — Dog                                           | 2        |
| 22       | 53-1300  | Reel                                                   | 1        |
| 23       | 53-0720  | Spring — Recoil                                        | 1        |
| 24       | 50-0650  | Screw — Cap, Hex Hd.                                   | 3        |
| 25       | 53-1290  | Recoil Starter Assembly<br>(Incl. Ref. #7, 17-24 & 26) | 1        |
| 26       |          | Grip — Hand                                            | 1        |
| 27       | 53-1390  | Switch — Engine                                        | 1        |
| 28       | 53-0890  | Rivet — Switch                                         | 1        |
| 29       | 53-1400  | Clamp — Wire                                           | 2        |
| 30       | 50-2810  | Cowling — Upper                                        | 1        |
| *        | 53-0730  | Starter Rope Assembly<br>(Incl. Ref. #26)              | 1        |



\*Not Illustrated

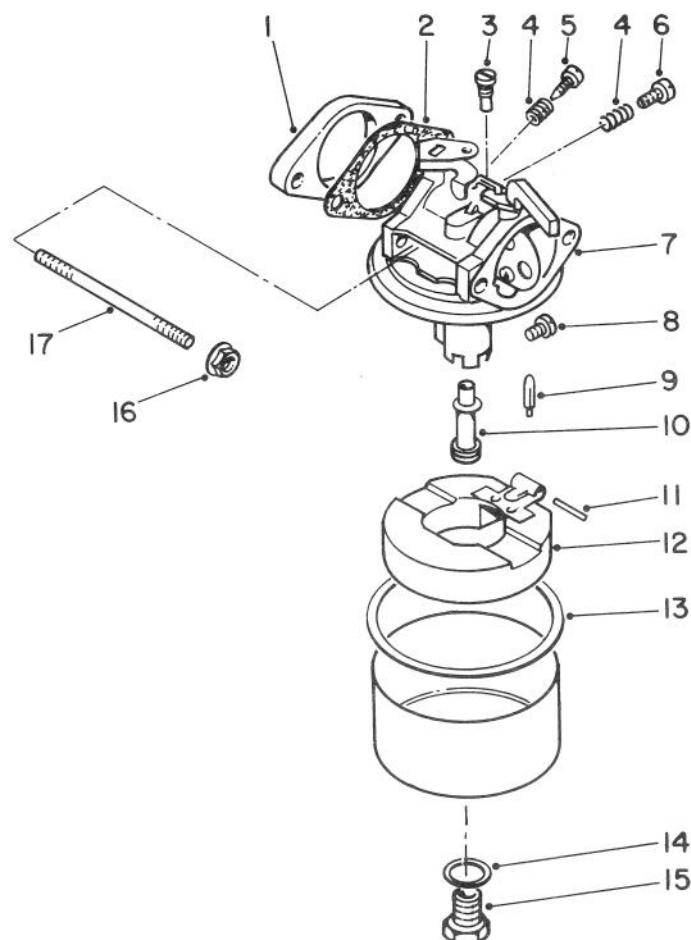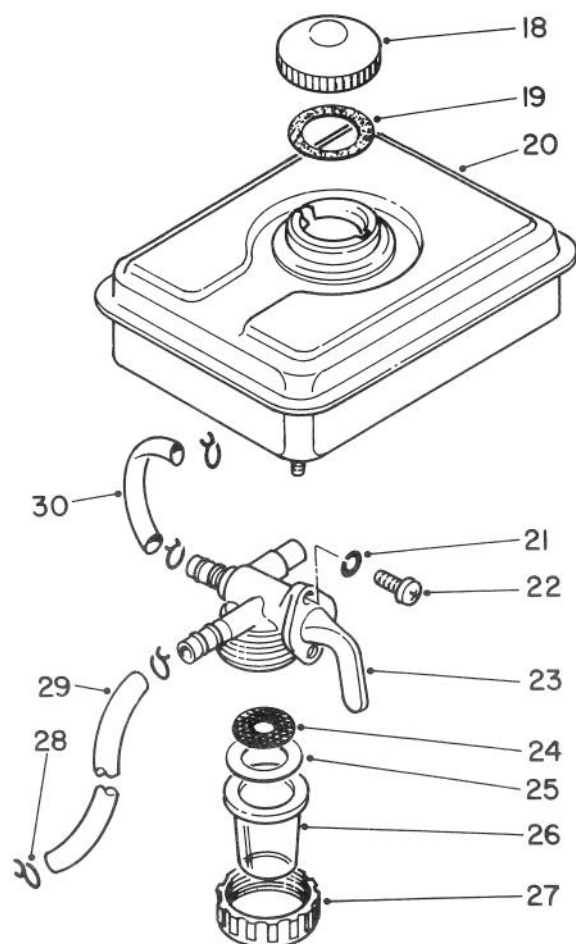

## FUEL TANK & CARBURETOR ASSEMBLY

| Ref. No. | Part No. | Description                               | No. Used |
|----------|----------|-------------------------------------------|----------|
| 1        | 53-1250  | Insulator — Carburetor                    | 1        |
| 2        | 53-1240  | Gasket — Carburetor                       | 2        |
| 3        | 50-1220  | Jet — Pilot                               | 1        |
| 4        | 50-2340  | Spring                                    | 2        |
| 5        | 50-2360  | Adjuster                                  | 1        |
| 6        | 50-0250  | Screw — Throttle Stop                     | 1        |
| 7        | 53-1190  | Carburetor Assembly<br>(Incl. Ref. #8-15) | 1        |
| 8        | 53-1220  | Jet — Main                                | 1        |
| 9        | 53-1200  | Valve — Needle                            | 1        |
| 10       | 53-1230  | Nozzle                                    | 1        |
| 11       | 81-0980  | Pin                                       | 1        |
| 12       | 53-1210  | Float                                     | 1        |
| 13       | 81-1010  | Gasket — Float Bowl                       | 1        |
| 14       | 81-1020  | Gasket — Drain Plug                       | 1        |
| 15       | 81-1000  | Plug — Drain                              | 1        |
| 16       | 50-7180  | Nut — Flange                              | 2        |

| Ref. No. | Part No. | Description                             | No. Used |
|----------|----------|-----------------------------------------|----------|
| 17       | 50-0090  | Stud Bolt                               | 2        |
| 18       | 50-3700  | Cap — Fuel                              | 1        |
| 19       | 53-1420  | Gasket — Fuel Cap                       | 1        |
| 20       | 53-1410  | Tank — Fuel                             | 1        |
| 21       | 81-1420  | Washer — Lock                           | 2        |
| 22       | 50-0240  | Screw — Round Phillips Hd.              | 2        |
| 23       | 53-1430  | Petcock Assembly<br>(Incl. Ref. #24-27) | 1        |
| 24       | 53-1440  | Filter — Fuel                           | 1        |
| 25       | 50-3770  | Gasket — Fuel Filter                    | 1        |
| 26       | 50-3780  | Cup — Fuel Filter                       | 1        |
| 27       | 50-3760  | Cap — Fuel Filter                       | 1        |
| 28       | 50-0990  | Clip — Hose                             | 4        |
| 29       | 50-0930  | Hose — Fuel<br>(Petcock to Carburetor)  | 1        |
| 30       | 50-8360  | Hose — Fuel<br>(Tank to Petcock)        | 1        |

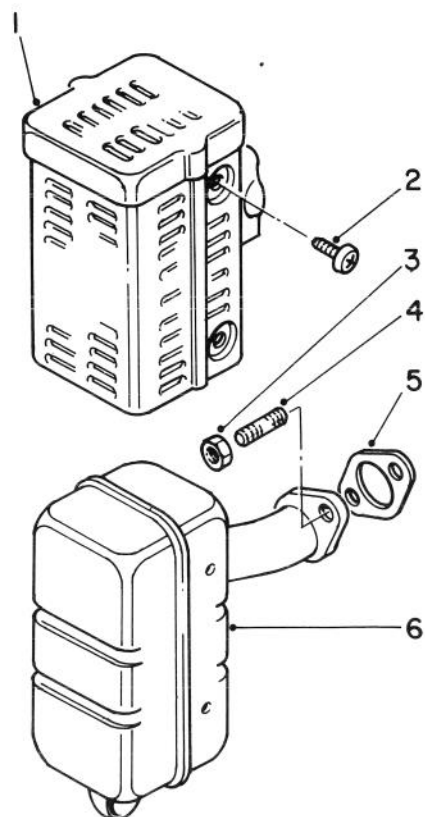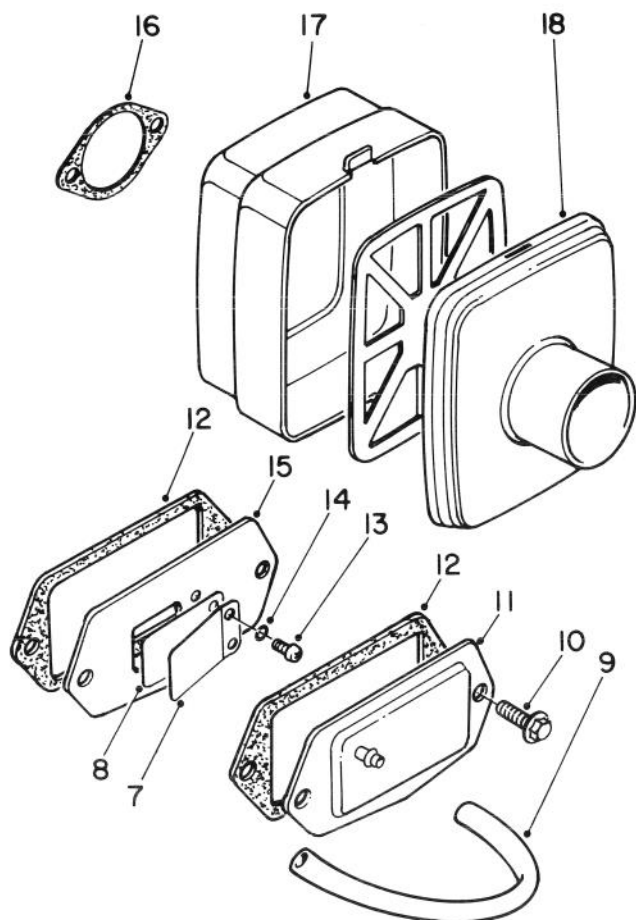

## AIR CLEANER & MUFFLER ASSEMBLY

| Ref. No. | Part No. | Description                | No. Used |
|----------|----------|----------------------------|----------|
| 1        | 53-1270  | Cover — Muffler            | 1        |
| 2        | 53-1280  | Screw — Round Phillips Hd. | 4        |
| 3        | 50-0530  | Nut                        | 2        |
| 4        | 50-0100  | Stud Bolt                  | 2        |
| 5        | 50-2590  | Gasket — Exhaust           | 1        |
| 6        | 53-1260  | Muffler                    | 1        |
| 7        | 53-1150  | Stopper                    | 1        |
| 8        | 53-1140  | Valve — Reed               | 1        |
| 9        | 50-0940  | Hose — Breather            | 1        |
| 10       | 50-6190  | Screw — Hex Flange Hd.     | 2        |

| Ref. No. | Part No. | Description                                        | No. Used |
|----------|----------|----------------------------------------------------|----------|
| 11       | 50-1520  | Cap — Breather                                     | 1        |
| 12       | 50-1540  | Gasket — Breather                                  | 2        |
| 13       | 50-0210  | Screw — Round Phillips Hd.                         | 2        |
| 14       | 50-0560  | Washer — Lock                                      | 2        |
| 15       | 50-1560  | Reed Valve Assembly<br>(Incl. Ref. #7, 8, 13 & 14) | 1        |
| 16       | 53-1180  | Gasket — Air Cleaner                               | 1        |
| 17       | 53-1160  | Air Cleaner Assembly<br>(Incl. Ref. #18)           | 1        |
| 18       | 53-1170  | Cap — Air Cleaner                                  | 1        |