
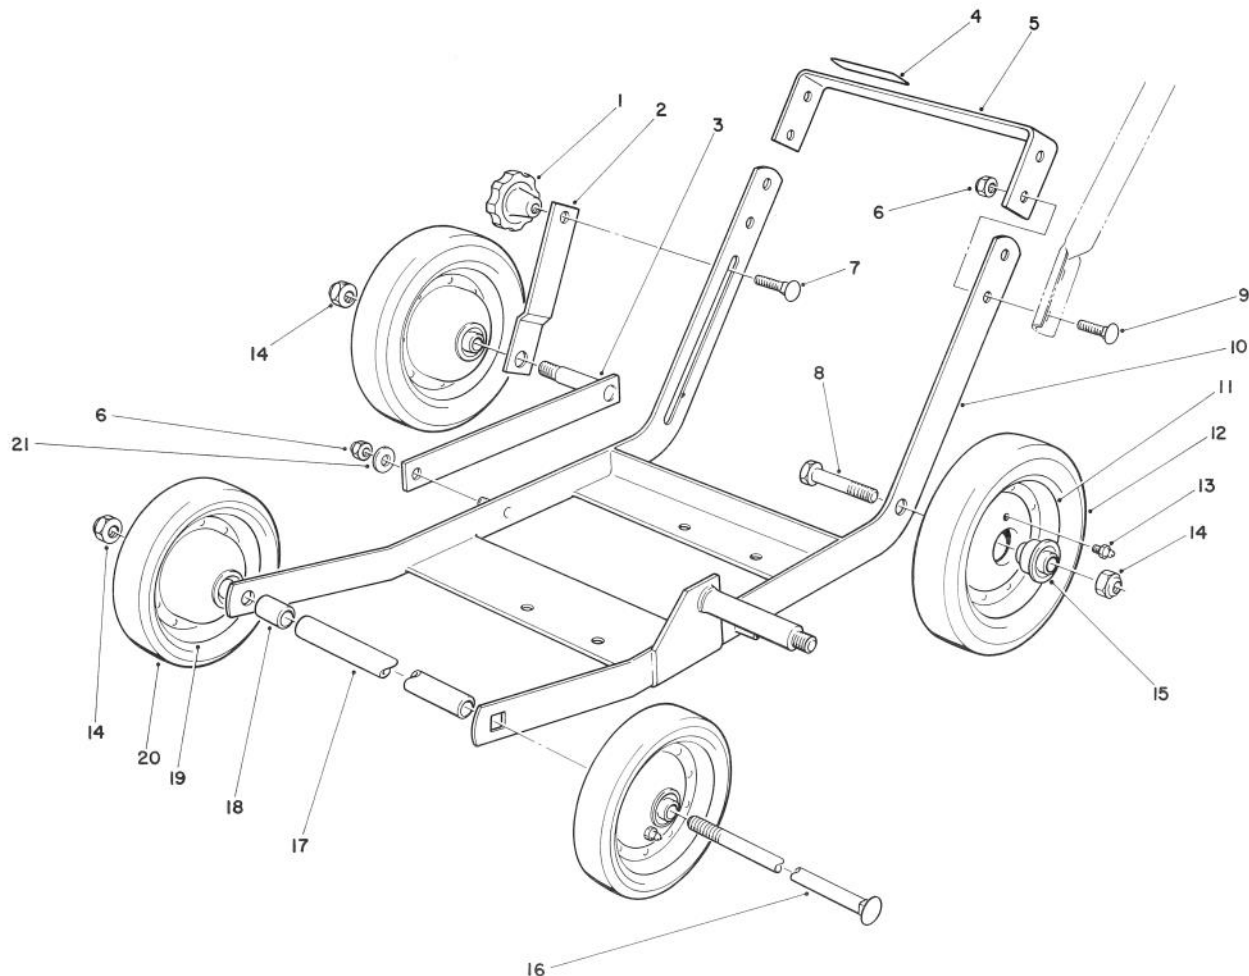


TORO®**MODEL NO. 58435 — 4000001 & UP****PARTS
CATALOG****3.5 H.P. GAS EDGER****FRAME ASSEMBLY**

Ref. No.	Part No.	Description	No. Used
1	19-4050	Knob — Handle Release	1
2	52-0050	Link — Wheel	1
3	52-0100	Bar Assembly	1
4	52-0570	Decal — Warning	1
5	52-0040	Bar — Escutcheon	1
6	3296-47	Nut — Lock	5
7	3230-3	Bolt — Carriage	1
8	325-9	Screw — Cap, Hx. Hd.	1
9	3230-22	Bolt — Carriage	4
10	52-0130	Frame Assembly	1
11	36-8851	Wheel & Tire Assembly — 8" (Incl. Ref. #12, 13 & 15)	2

Ref. No.	Part No.	Description	No. Used
12	36-8990	Tire — 8"	2
13	302-26	Fitting — Grease	4
14	3296-25	Nut — Lock	3
15	52-0560	Bearing	8
16	52-0530	Bolt — Carriage	1
17	52-0540	Spacer — Axle, Long	1
18	52-1210	Spacer — Axle, Short	1
19	36-8841	Wheel & Tire Assembly — 7" (Incl. Ref. #13, 15 & 20)	2
20	36-8980	Tire — 7"	2
21	3256-2	Washer — Flat	1

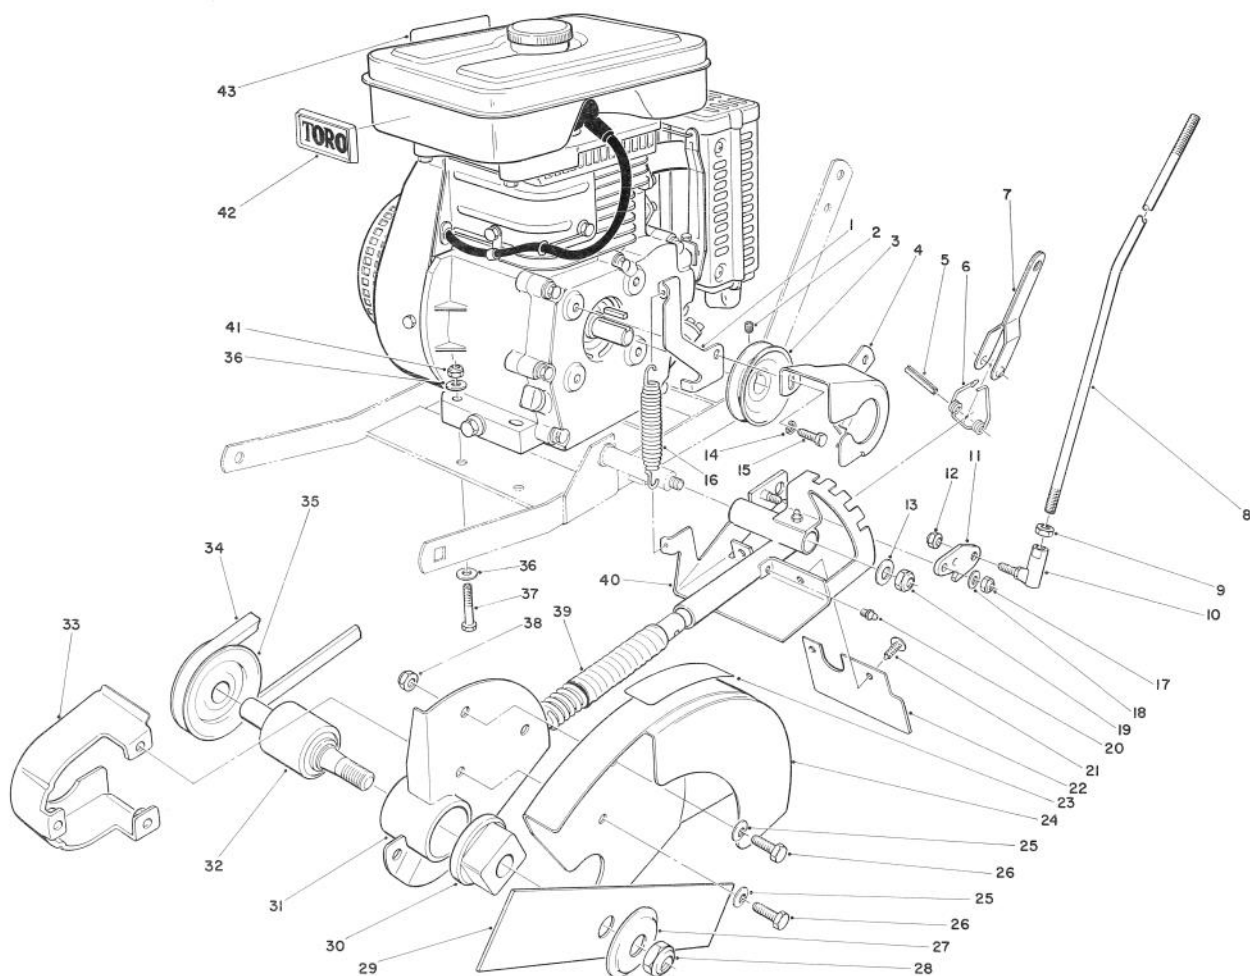


ENGINE & BLADE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	52-0210	Bracket — Spring	1
2	3246-15	Screw — Set	1
3	52-0550	Pulley — Engine	1
4	52-0580	Guard — Engine Pulley	1
5	32121-111	Pin — Roll	1
6	52-0270	Spring — Torsion	1
7	52-0280	Lever Assembly	1
8	52-0230	Rod — Lower	1
9	3220-3	Nut — Jam	1
10	52-0220	Ball — Joint	1
11	52-0240	Lock Lever Assembly	1
12	3296-6	Nut — Lock	1
13	36-4780	Washer — Flat	1
14	3253-4	Washer — Lock	3
15	3210-2	Screw — Cap, Hx. Hd.	3
16	52-0610	Spring — Extension	1
17	3296-47	Nut — Lock	1
18	3256-2	Washer — Flat	1
19	3296-25	Nut — Lock	1
20	302-55	Fitting — Grease	2
21	3290-446	Fastener — Panel Clip	2
22	52-0310	Guard — Rubber	1

Ref. No.	Part No.	Description	No. Used
23	52-0400	Decal — Warning	1
24	52-0090	Blade Guard Assembly	1
25	3290-451	Washer — Bellville	5
26	49-2040	Screw — Cap, Hx. Hd.	5
27	3290-450	Washer — Blade	1
28	3296-19	Nut — Lock	1
29	52-0480	Blade — 10"	1
30	52-0720	Shield — Bearing	1
31	52-0410	Hub & Shaft Assembly	1
32	52-0460	Spindle Assembly	1
33	52-0500	Guard — Blade Pulley	1
34	52-0320	V-Belt	1
35	52-0620	Pulley — Blade	1
36	3256-23	Washer — Flat	8
37	322-8	Screw — Cap, Hx. Hd.	4
38	3296-8	Nut — Lock	2
39	11-8249	Spring & Bellows Assembly	1
40	52-0330	Pivot Bracket Assembly	1
41	3296-29	Nut — Lock	4
42	46-8290	Plate — Toro Logo	1
43	52-3370	Decal — Instruction	1
*	59270	Engine (Complete)	1


*Not Illustrated

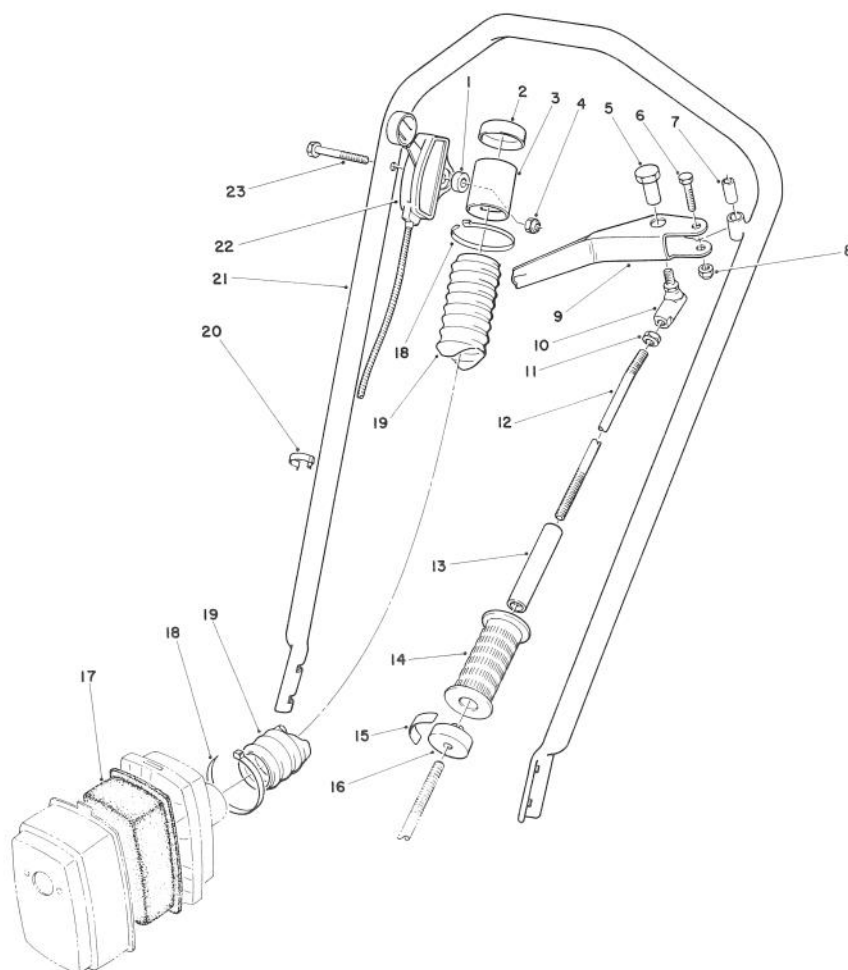

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	2-0780	Spacer	1
2	2410-53	Caplug	1
3	39-7790	Hose Tip — Air Cleaner	1
4	3296-8	Nut — Lock	1
5	52-0710	Bolt — Control Lever	1
6	321-9	Screw — Cap, Hx. Hd.	1
7	52-0690	Bushing — Control Lever	1
8	3296-16	Nut — Lock	1
9	52-0700	Lever — Control	1
10	52-0220	Ball Joint	1
11	3220-3	Nut — Jam	1
12	52-0680	Rod — Upper	1
13	52-0660	Turnbuckle — Adjustable	1

Ref. No.	Part No.	Description	No. Used
14	52-0670	Grip — Handle	1
15	52-0740	Decal — Adjustment	1
16	52-0650	Knob — Lock	1
17	52-0200	Foam Element — Air Cleaner	1
18	3290-378	Tie Strap	2
19	39-9761	Hose — Air Cleaner	1
20	218-465	Clip — Control Wire	1
21	52-0010	Handle Assembly	1
22	52-0060	Control — Throttle Bend Type #1 Sheath Length 38" Wire Length 2"	1
23	321-33	Screw — Cap, Hx. Hd.	1

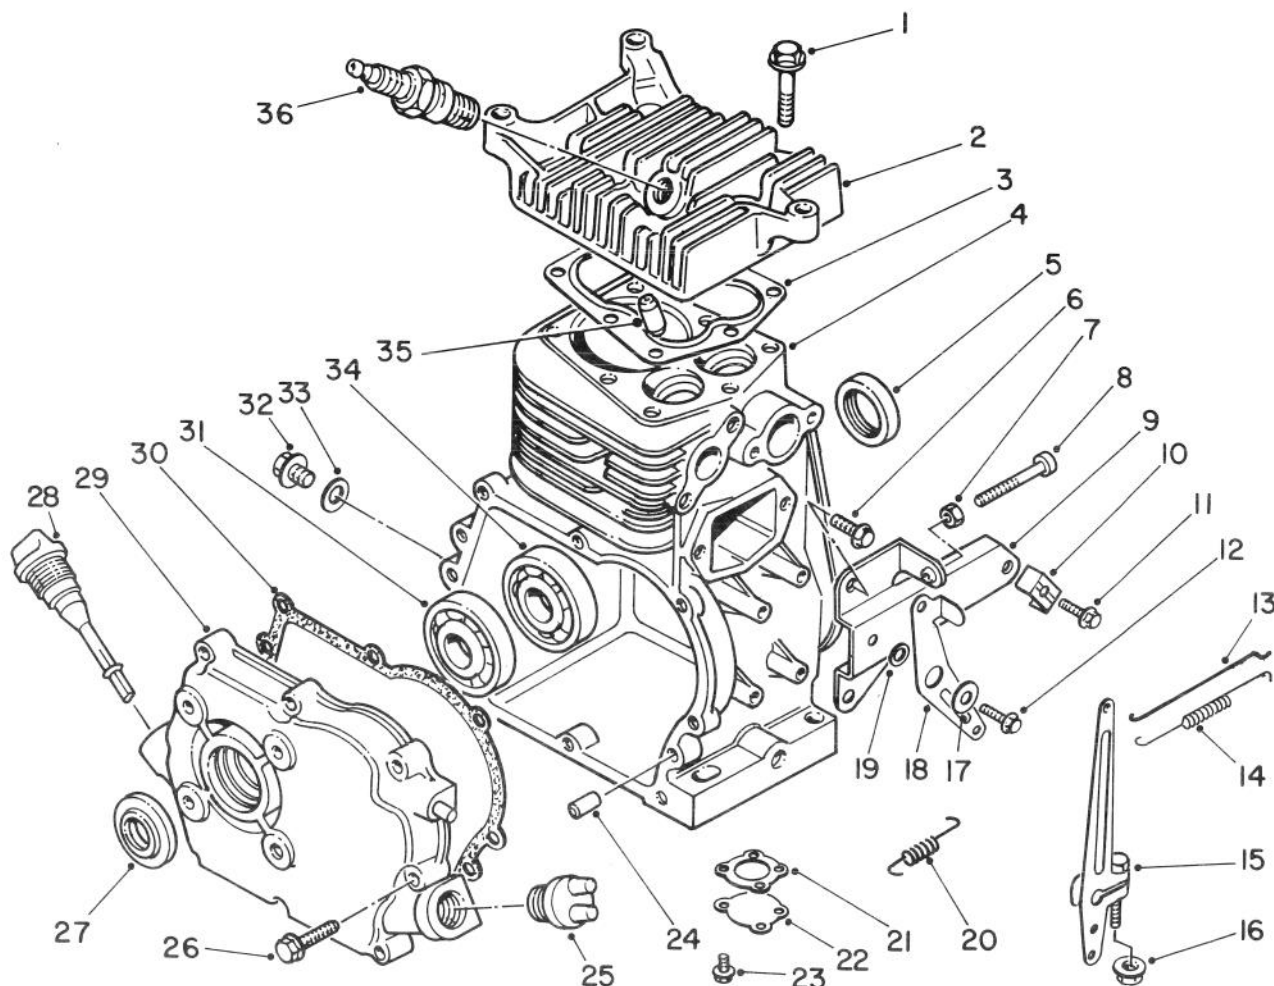


CRANKCASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	50-0190	Screw — Hex Flange Hd.	7
2	50-1260	Cylinder Head	1
3	50-1290	Gasket — Cylinder Head	1
4	53-0950	Cylinder	1
5	50-0870	Seal — Oil	1
6	50-6320	Screw — Hex Flange Hd.	2
7	81-0900	Nut — Jam	1
8	53-1030	Screw — Round Phillips Hd.	1
9	53-1020	Bracket — Governor Control	1
10	81-1690	Clamp — Cable	1
11	50-0130	Screw — Hex Flange Hd.	1
12	53-0220	Screw — Hex Flange Hd.	1
13	50-3300	Rod — Carburetor	1
14	50-1130	Spring	1
15	53-1060	Lever — Control	1
16	50-7180	Nut — Flange	1
17	53-0200	Spacer	1
18	53-1000	Lever — Governor Control	1
19	53-1010	Washer	1

Ref. No.	Part No.	Description	No. Used
20	53-1050	Spring	1
21	50-3520	Gasket — Level Sensor Cover	1
22	53-0090	Cover — Level Sensor	1
23	50-6190	Screw — Hex Flange Hd.	4
24	81-0520	Pin	2
25	53-0990	Plug	1
26	81-0550	Screw — Hex Flange Hd.	8
27	50-0870	Seal — Oil	1
28	50-1450	Gauge — Oil Level	1
29	53-0980	Cover — Crankcase Side	1
30	50-1430	Gasket — Crankcase Cover	1
31	53-0960	Bearing	1
32	53-0970	Plug — Drain	2
33	50-0800	Gasket — Drain Plug	2
34	53-0960	Bearing	1
35	50-1350	Guide — Valve	2
36	50-1160	Spark Plug	1
*	53-1090	Gasket Set	1


*Not Illustrated

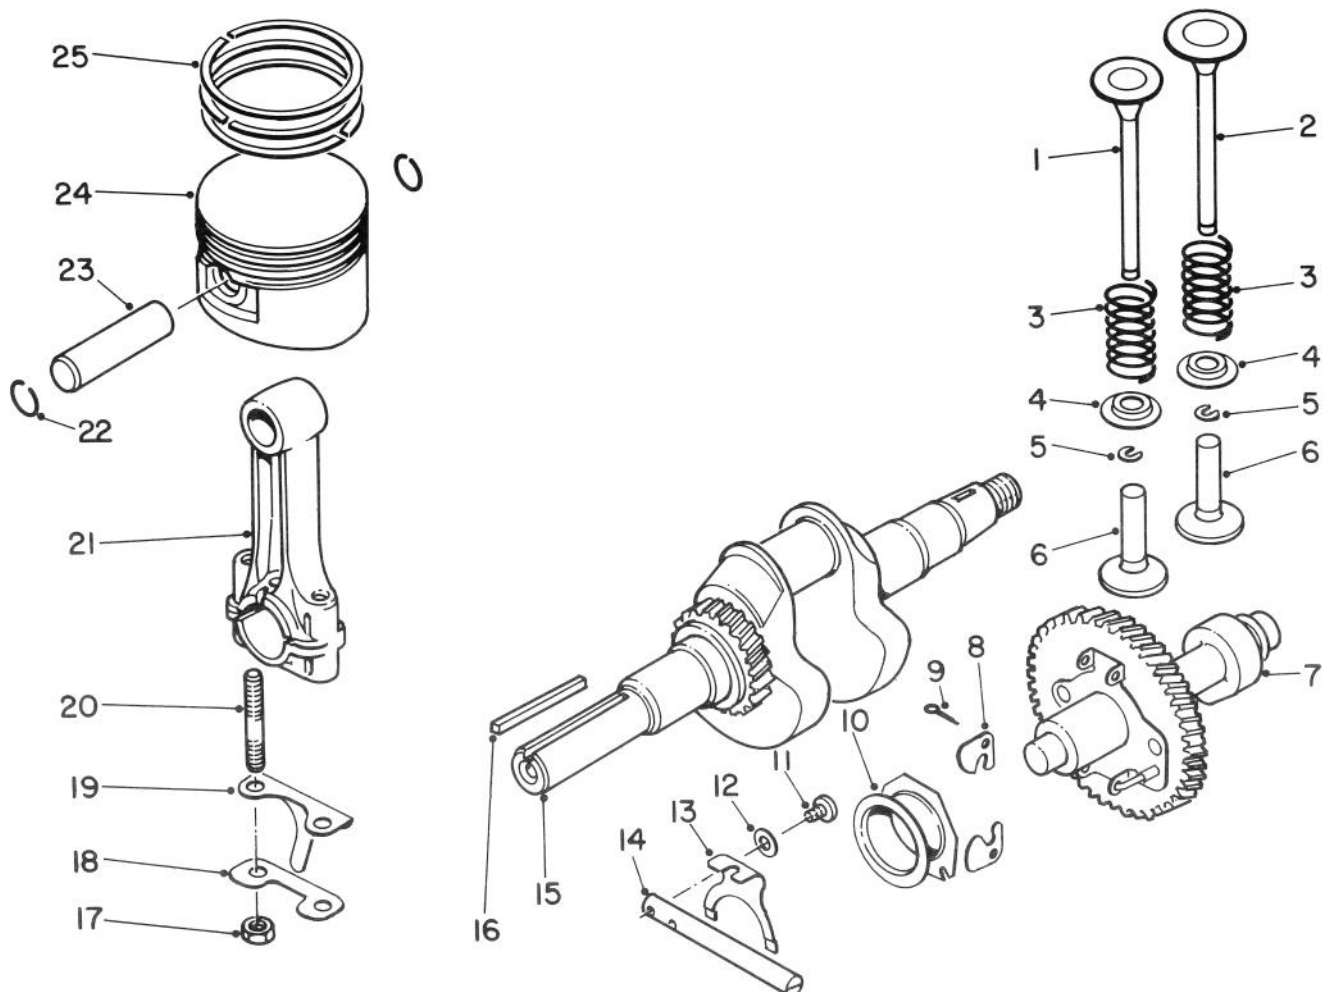

CRANKSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	50-2110	Valve — Exhaust	1
2	50-2080	Valve — Intake	1
3	50-2120	Spring — Valve	2
4	50-2140	Retainer — Spring	2
5	50-2160	Cotter — Valve	2
6	50-2040	Tappet — Valve (Length: 1.433 inch, 36.39mm)	2
	50-2030	Tappet — Valve (Length: 1.435 inch, 36.46mm)	2
	50-2050	Tappet — Valve (Length: 1.438 inch, 36.53mm)	2
7	50-1950	Cam Shaft	1
8	50-3070	Arm	14
9	50-0430	Pin — Cotter	2
10	50-3110	Spacer — Governor	1
11	50-0220	Screw	2
12	50-0590	Washer	2
13	50-3150	Plate — Shift	1
14	50-3130	Shaft — Throttle Return	1
15	53-1450	Crankshaft	1

Ref. No.	Part No.	Description	No. Used
16	53-1130	Key	1
17	50-0510	Nut	2
18	50-1890	Plate — Lock	1
19	50-1870	Plate — Splasher	1
20	50-0670	Stud Bolt	2
21	50-1840	Connecting Rod Assembly (Std.) (Incl. Ref. #17-20)	1
22	50-0960	Circlip	2
23	50-1800	Pin — Piston	1
24	50-1650	Piston (Std.)	1
	50-1660	Piston (Oversize .010 inch, .25mm)	1
	50-1670	Piston (Oversize .020 inch, .5mm)	1
25	50-1740	Ring Set — Piston (Std.)	1
	50-1750	Ring Set — Piston (Oversize .010 inch, .25mm)	1
	50-1760	Ring Set — Piston (Oversize .020 inch, .5mm)	1


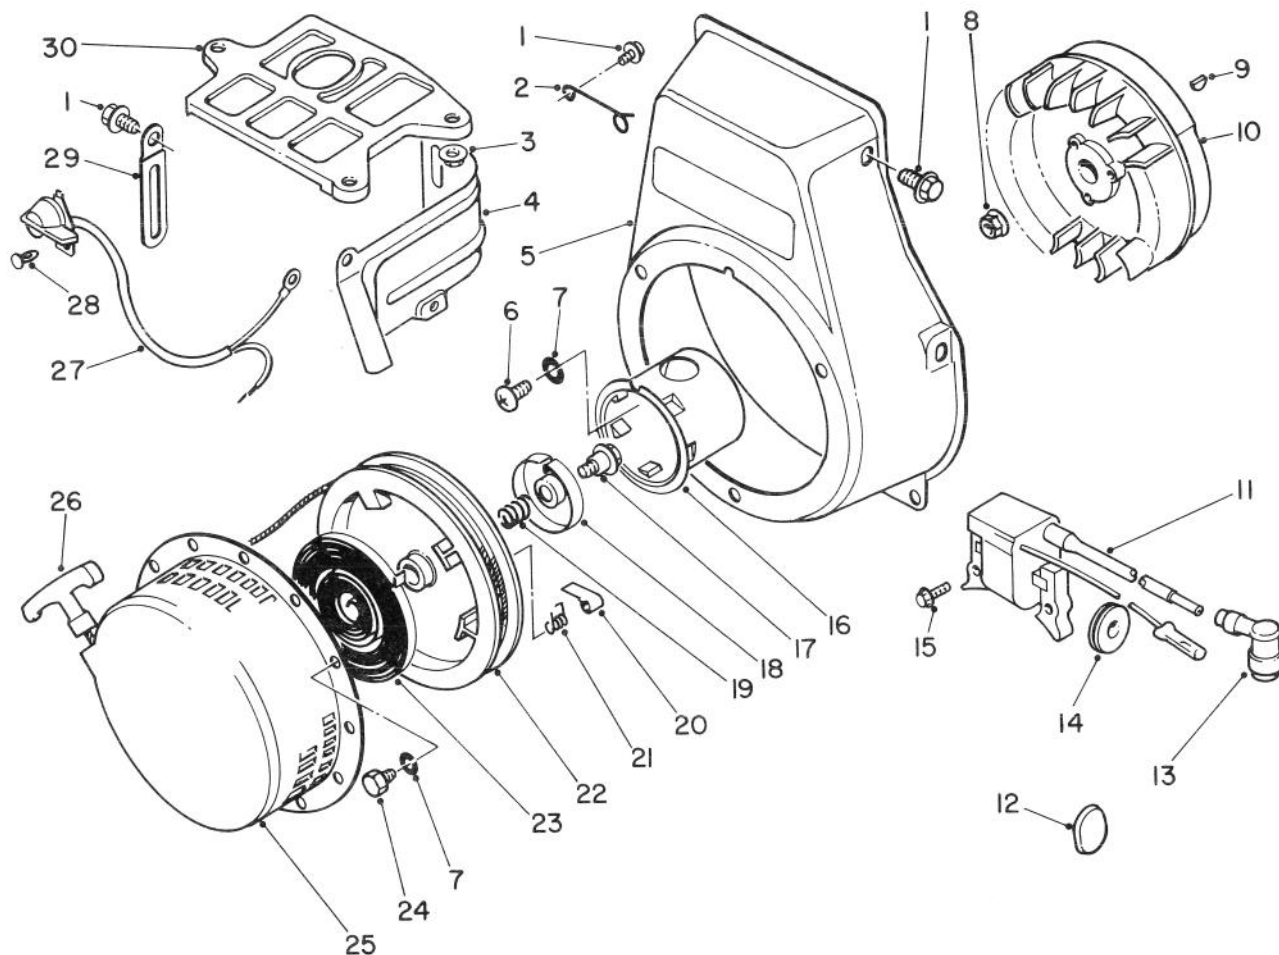


RECOIL STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	53-1340	Screw — Hex Flange Hd.	7
2	50-1030	Clamp — Cord	1
3	50-7180	Nut — Flange	3
4	53-1380	Cowling — Side	1
5	53-1480	Cover — Cooling Fan	1
6	50-0380	Screw — Round Phillips Hd.	3
7	81-1450	Washer — Lock	6
8	50-0540	Nut — Flange	1
9	50-0640	Key — Woodruff	1
10	53-1350	Flywheel	1
11	53-1360	Coil — Primary	1
12	53-0870	Plug	1
13	50-3450	Cap — Spark Plug	1
14	53-1370	Grommet	1
15	50-6230	Screw — Hex Flange Hd.	2
16	53-1320	Pulley — Starter	1
17	81-1260	Bolt — Shoulder	1

Ref. No.	Part No.	Description	No. Used
18	53-1310	Retainer	1
19	81-1240	Spring — Brake	1
20	81-1230	Dog	2
21	81-1220	Spring — Dog	2
22	53-1300	Reel	1
23	53-0720	Spring — Recoil	1
24	50-0650	Screw — Cap, Hex Hd.	3
25	53-1290	Recoil Starter Assembly (Incl. Ref. #7, 17-24 & 26)	1
26		Grip — Hand	1
27	53-1390	Switch — Engine	1
28	53-0890	Rivet — Switch	1
29	53-1400	Clamp — Wire	2
30	50-2810	Cowling — Upper	1
*	53-0730	Starter Rope Assembly (Incl. Ref. #26)	1



*Not Illustrated

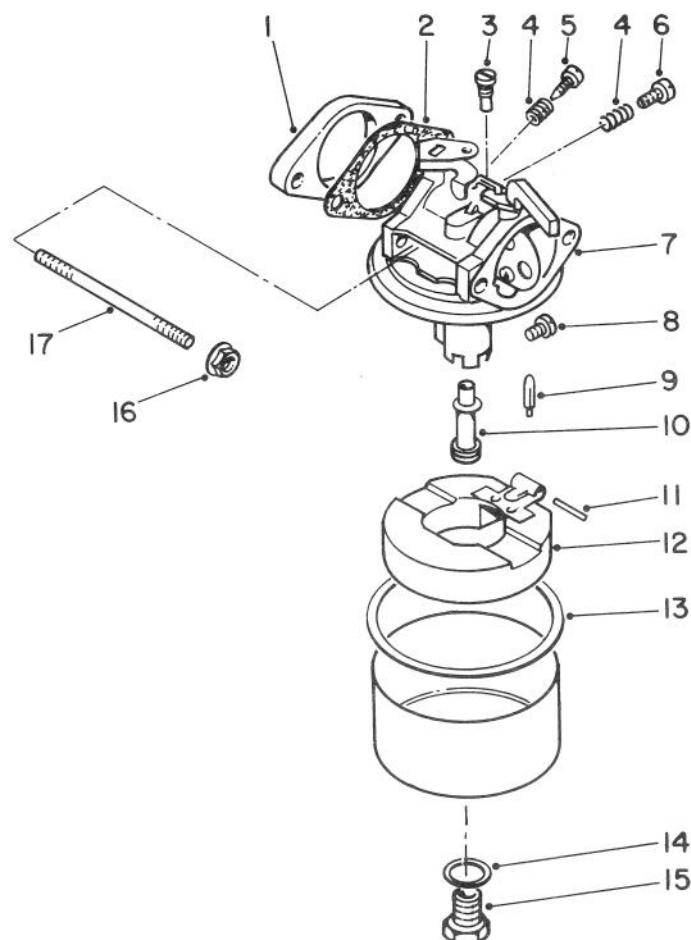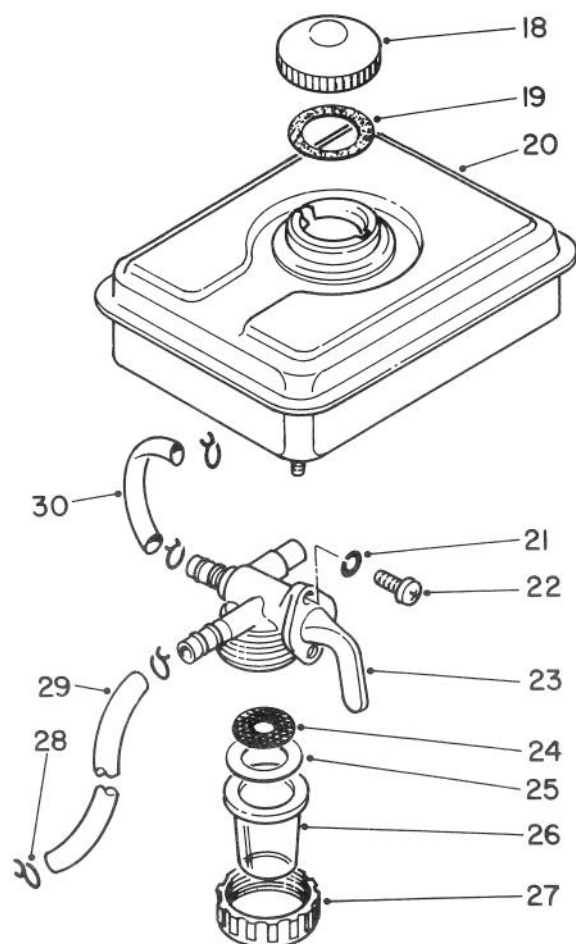

FUEL TANK & CARBURETOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	53-1250	Insulator — Carburetor	1
2	53-1240	Gasket — Carburetor	2
3	50-1220	Jet — Pilot	1
4	50-2340	Spring	2
5	50-2360	Adjuster	1
6	50-0250	Screw — Throttle Stop	1
7	53-1190	Carburetor Assembly (Incl. Ref. #8-15)	1
8	53-1220	Jet — Main	1
9	53-1200	Valve — Needle	1
10	53-1230	Nozzle	1
11	81-0980	Pin	1
12	53-1210	Float	1
13	81-1010	Gasket — Float Bowl	1
14	81-1020	Gasket — Drain Plug	1
15	81-1000	Plug — Drain	1
16	50-7180	Nut — Flange	2

Ref. No.	Part No.	Description	No. Used
17	50-0090	Stud Bolt	2
18	50-3700	Cap — Fuel	1
19	53-1420	Gasket — Fuel Cap	1
20	53-1410	Tank — Fuel	1
21	81-1420	Washer — Lock	2
22	50-0240	Screw — Round Phillips Hd.	2
23	53-1430	Petcock Assembly (Incl. Ref. #24-27)	1
24	53-1440	Filter — Fuel	1
25	50-3770	Gasket — Fuel Filter	1
26	50-3780	Cup — Fuel Filter	1
27	50-3760	Cap — Fuel Filter	1
28	50-0990	Clip — Hose	4
29	50-0930	Hose — Fuel (Petcock to Carburetor)	1
30	50-8360	Hose — Fuel (Tank to Petcock)	1

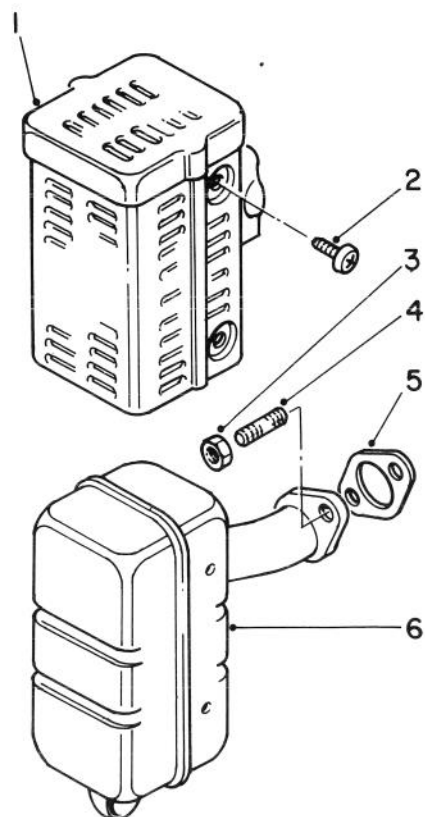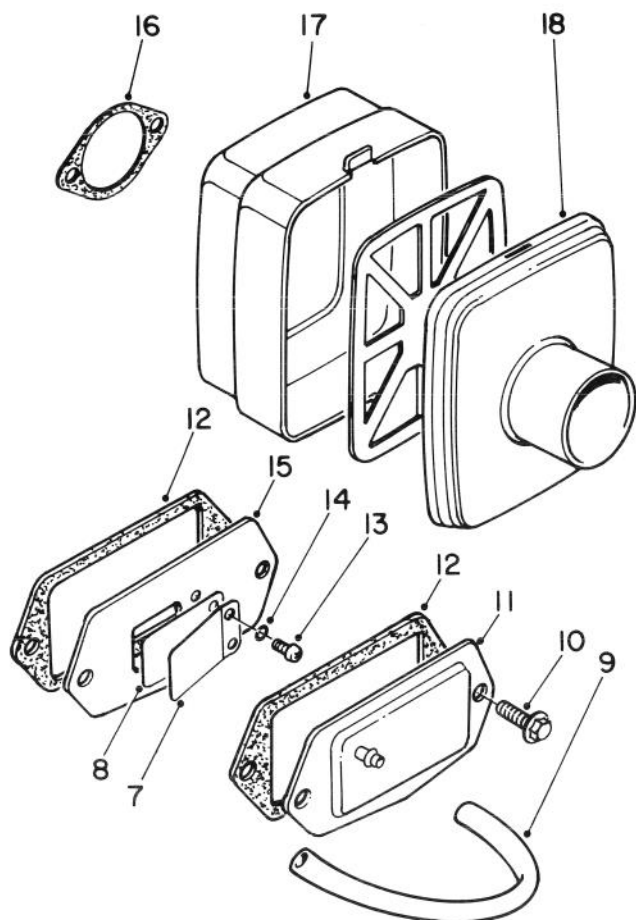

AIR CLEANER & MUFFLER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	53-1270	Cover — Muffler	1
2	53-1280	Screw — Round Phillips Hd.	4
3	50-0530	Nut	2
4	50-0100	Stud Bolt	2
5	50-2590	Gasket — Exhaust	1
6	53-1260	Muffler	1
7	53-1150	Stopper	1
8	53-1140	Valve — Reed	1
9	50-0940	Hose — Breather	1
10	50-6190	Screw — Hex Flange Hd.	2

Ref. No.	Part No.	Description	No. Used
11	50-1520	Cap — Breather	1
12	50-1540	Gasket — Breather	2
13	50-0210	Screw — Round Phillips Hd.	2
14	50-0560	Washer — Lock	2
15	50-1560	Reed Valve Assembly (Incl. Ref. #7, 8, 13 & 14)	1
16	53-1180	Gasket — Air Cleaner	1
17	53-1160	Air Cleaner Assembly (Incl. Ref. #18)	1
18	53-1170	Cap — Air Cleaner	1