



Mid-Size Mower, ProLine Pistol Grip Gear 13 HP with 36in Side Discharge Mower

Model No. 30519 - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


AR.	as required	HYD.	hydraulic
ASM.	assembly	INC.	incorporated
CARR.	carriage	LH.	left hand
DEG.	degrees	NI.	nylon insert
FH.	flat head	PPH.	phillips pan head
GA.	gauge	PTH.	phillips truss head
HF.	hex flange	PTO.	power take off
HH.	hex head	RH.	right hand
HHF.	hex head flange	SFH.	slotted fillister head
HHFTF.	hex head flange thread forming	SHH.	slotted hex head
HJ.	hex jam	SHWH.	slotted hex washer head
HLH.	hex lag head	SPH.	slotted pan head
HOC.	height-of-cut	SQH.	square head
HS.	hex	SRH.	slotted round head
HSBH.	hex socket button head	STD.	standard
HSFH.	hex socket flat head	TAP.	self tapping
HSH.	hex socket head	TTH.	torx truss head
HWH.	hex washer head	WH.	wing head
HWHTF.	hex washer head thread forming		

Footnotes

- | | | | |
|---|---|---|--|
| ❶ | Not illustrated | ❷ | Not serviced separately |
| ❸ | Obtain parts from your local Kawasaki dealer. | ❹ | Obtain parts from Peerless Transmissions, model 700-070A |
| ❺ | Obtain parts from your local Kawasaki dealer | | |

Contents


Description	Page	Description	Page
Engine and Fuel Tank Assembly	 3	Electric-Equipment Assembly Kawasaki Model FH381V-AS25	 20
Transmission and Drive Pulley Assembly	 4	Control-Equipment Assembly Kawasaki Model FH381V-AS25	 21
Wheel Drive Assembly	 6	Carburetor Assembly Kawasaki Model FH381V-AS25	 22
Upper Handle Assembly	 8	Air-Filter and Muffler Assembly Kawasaki Model FH381V-AS25	 23
Handle Assembly No. 106-2742	 10	Fuel Tank/Fuel Valve Assembly Kawasaki Model FH381V-AS25	 24
Deck Assembly	 11	Starter Assembly Kawasaki Model FH381V-AS25	 25
Front Caster and Blade Brake Assembly	 12	Decal Assembly Kawasaki Model FH381V-AS25	 26
Spindle Assembly	 14		
Cylinder and Crankcase Assembly Kawasaki Model FH381V-AS25	 15		
Piston and Crankshaft Assembly Kawasaki Model FH381V-AS25	 16		
Valve and Camshaft Assembly Kawasaki Model FH381V-AS25	 17		
Lubrication-Equipment Assembly Kawasaki Model FH381V-AS25	 18		
Cooling Equipment Assembly Kawasaki Model FH381V-AS25	 19		

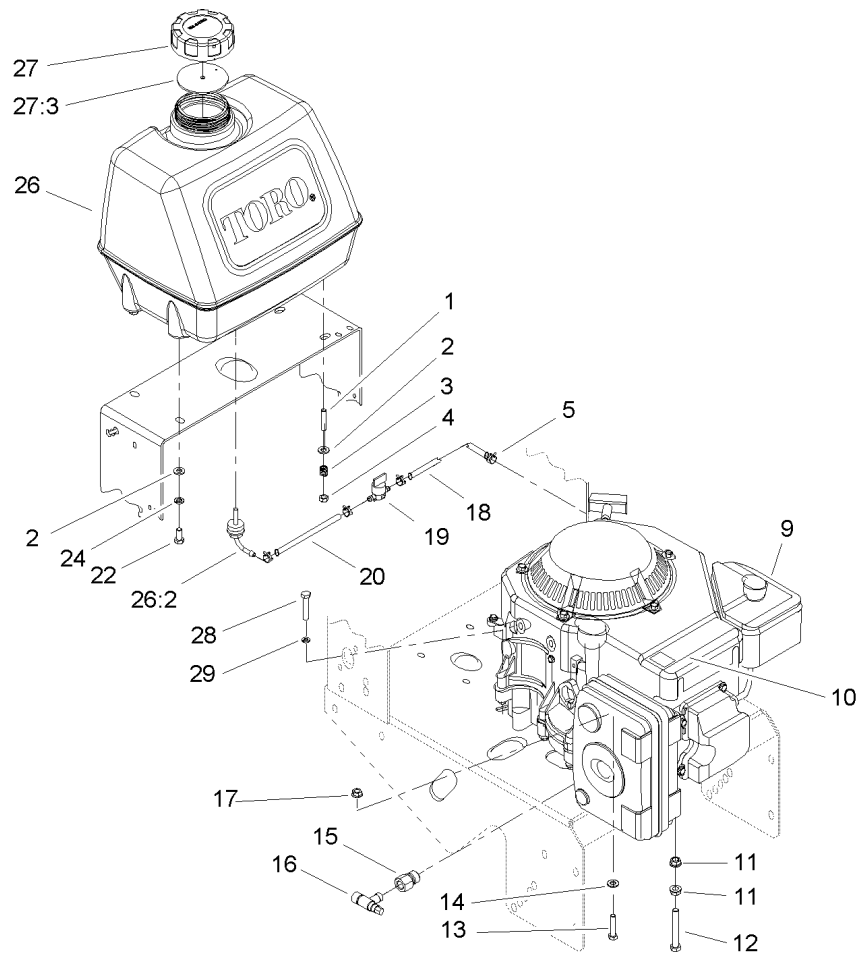

Engine and Fuel Tank Assembly

Ref	Part No.	Qty.	Description
1	1-633023	2	Stud
2	3256-23	4	Washer-Flat
3	1-633349	2	Spring-Tank, Fuel
4	3296-47	2	Nut-Lock, NI
5	1-303077	4	Clamp
9		1	Engine-Kawasaki, Fh381v-As25
10	63-8440	1	Decal-Surface, Hot
11	3290-357	2	Nut-HHF
12	323-13	1	Screw-HH
13	322-7	4	Screw-HH
14	1-303334	4	Washer-Spring
15	103-1966	1	Adapter
16	103-1965	1	Valve-Drain, Oil
17	32128-20	4	Nut-HF
18	1-303022	1	Hose-Fuel
19	1-603770	1	Valve-Fuel
20	1-603955	1	Hose-Fuel
22	322-3	2	Screw-HH
24	1-805005	2	Washer-Lock
26	106-0730	1	Fuel Tank ASM
26:2	103-2605	1	Fitting-Fuel, Bulkhead
27	88-3980	1	Gas Cap ASM
27:3	88-4010	1	Gasket-Cap, Gas
28	33113-016	1	Screw-HH


Ref	Part No.	Qty.	Description
29	1-805004	1	Washer-Lock
●99	1-303335	1	Tie-Plastic

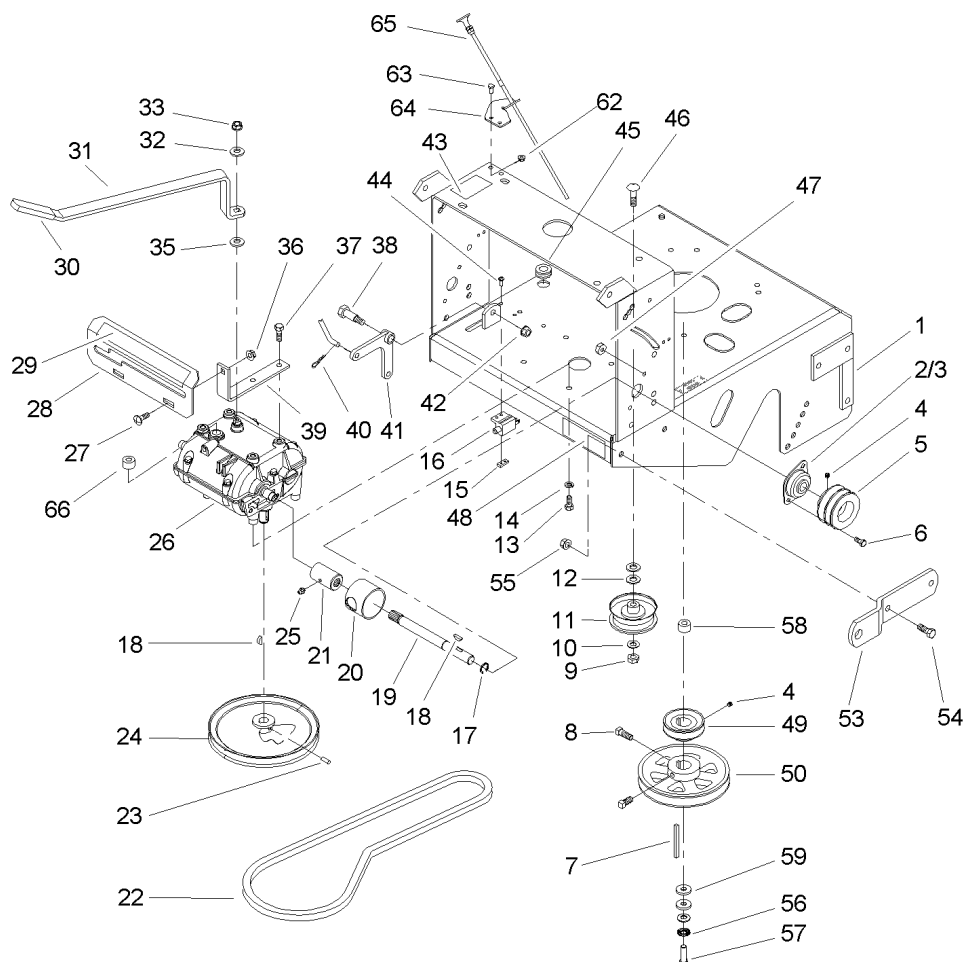

Transmission and Drive Pulley Assembly


Ref	Part No.	Qty.	Description
1	103-2923-01	1	Deck-Rear
2	1-323252	2	Bearing-Shaft
3	1-323254	2	Flange-Output
4	1-803310	3	Screw-Set
5	103-6511	2	Sheave-Transmission
6	321-3	4	Screw-HH
7	103-4177	1	Key-Machine
8	3242-4	2	Screw-Set, SQH
9	3296-39	1	Nut-Lock, NI
10	3256-24	1	Washer-Flat
11	1-323285	1	Idler-Drive, Transmission
12	3256-5	2	Washer-Flat
13	322-3	4	Screw-HH
14	1-805005	4	Washer-Lock
15	1-633181	1	Plate-Tapped
16	1-513051	1	Switch-Open, Normally
17	32151-62	2	Ring-Retaining
18	3257-5	3	Key-Woodruff
19	1-323502	2	Shaft-Transmission
20	51-4220	2	Guard-Coupler
21	1-323680	2	Coupler
22	1-323630	1	V-Belt
23	3245-41	2	Screw-HSH
24	1-323278	1	Sheave-Transmission

Ref	Part No.	Qty.	Description
25	302-19	2	Fitting-Grease
26	1-323500	1	Transmission
27	3230-1	2	Bolt-CARR
28	1-323387-03	1	Plate-Shift
29	105-4104	1	Decal-Speed, Ground
30	1-303020	1	Grip-Lever
31	98-3274-03	1	Lever-Shift
32	98-5975	1	Washer-Belleville
33	3296-6	1	Nut-Lock, NI
35	1-323379	1	Washer
36	32128-20	2	Nut-HF
37	9264964	4	Screw-Hwh, Thd Cut
38	1-603403	1	Bolt-Shoulder
39	1-323389-03	2	Bracket-Plate, Shift
40	1-806003	1	Pin-Hair
41	1-303186	1	Bellcrank
42	3290-357	1	Nut-HHF
43	95-2814	1	Decal-Shut Off, Fuel
44	3290-500	2	Screw-PPH
45	1-543296	1	Grommet
46	3231-6	1	Screw-CARR
47	3296-42	4	Nut-Lock, NI
48	98-0776	1	Decal-Caution
49	103-1666	1	Sheave-Transmission

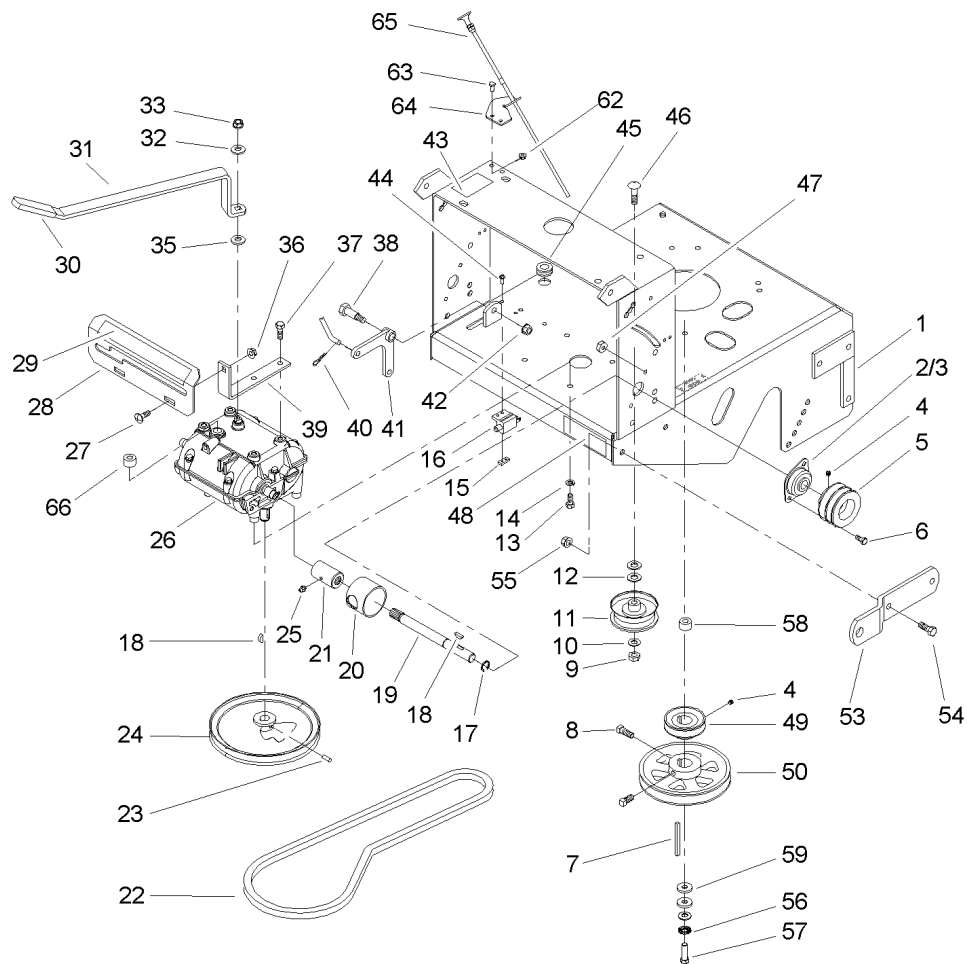

Transmission and Drive Pully Assembly (continued)

Ref	Part No.	Qty.	Description
50	103-1668	1	Sheave
53	1-323318-01	2	Hitch-Sulky
54	323-6	4	Screw-HH
55	3290-357	4	Nut-HHF
56	1-603610	2	Washer-Spring
57	3212-6	1	Screw-HH
58	1-633453	1	Spacer-Clutch
59	1-373034	2	Washer
62	32128-33	2	Nut-HF
63	321-3	2	Screw-HH
64	103-1797-01	1	Bracket-Cable, Choke
65	103-1796	1	Cable-Choke
66	1-303282	1	Switch-Start, Neutral

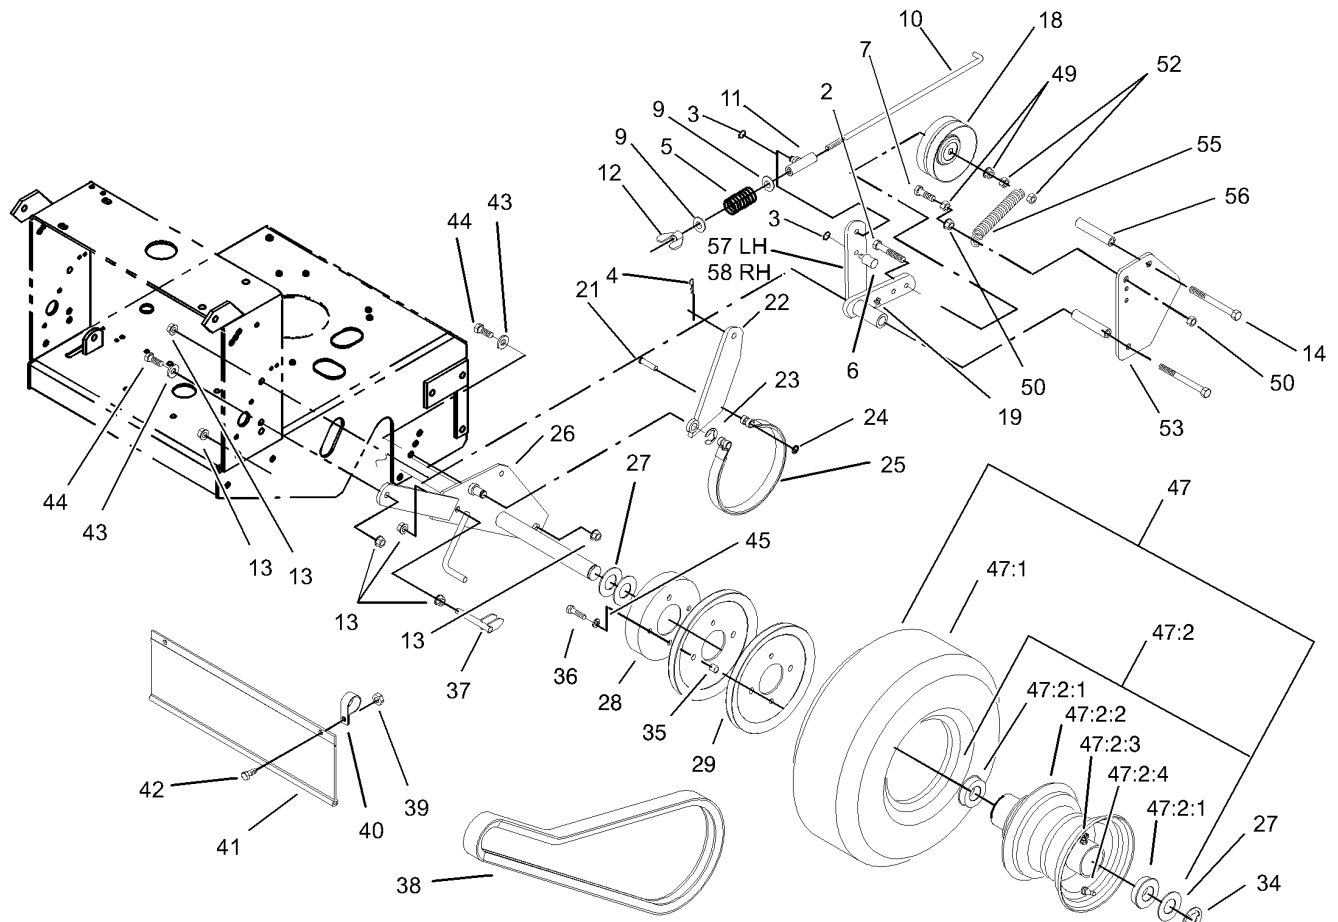


Wheel Drive Assembly

Ref	Part No.	Qty.	Description
2	99-8664	2	Screw-HH
3	32151-47	6	Ring-Retaining
4	1-806003	4	Pin-Hair
5	1-323245	2	Spring-Compression
6	103-1864	2	Swivel-Lever, Drive
7	322-6	2	Screw-HH
9	3256-23	4	Washer-Flat
10	1-323548	2	Linkage-Brake
11	1-322125	2	Swivel-Brake
12	1-513959	2	Wingnut-Nylock
13	3290-357	14	Nut-HHF
14	323-39	4	Screw-HH
18	1-323277	2	Idler-Wheel, Drive
19	302-19	2	Fitting-Grease
21	1-323307	2	Pin-Clevis
22	103-1611-03	2	Arm-Brake
23	32120-47	2	Ring-Retaining, External
24	1-803051	2	Nut-Push
25	1-323262	2	Band-Brake
26	1-322117-03	1	Axle
27	1-543436	8	Washer-Spacer
27	1-523157	6	Washer-Spacer
28	1-323261	2	Drum-Brake
29	1-323253	4	Sheave-Wheel, Drive

Ref	Part No.	Qty.	Description
34	1-808519	2	Ring-Snap
35	1-323260	8	Spacer-Sheave, Wheel
36	322-6	8	Screw-HH
37	1-412358	2	Scraper
38	1-323631	2	V-Belt
39	3296-29	4	Nut-Lock, NI
40	2412-104	2	R-Clamp
41	98-3259	1	Shield-Trailing
42	322-3	2	Screw-HH
43	98-5975	4	Washer-Belleville
44	323-6	4	Screw-HH
45	1-373034	8	Washer
47		2	Wheel And Tire ASM
47:1	1-323720	1	Tire-Turfmaster
47:2	1-323328	1	Wheel And Hub ASM
47:2:1	1-323329	2	Bearing-Flanged
47:2:2		1	Rim ASM
47:2:3		1	Fitting-Grease
47:2:4		1	Stem-Valve
49	3290-357	2	Nut-HHF
50	32128-20	2	Nut-HF
52	3296-39	8	Nut-Lock, NI
53	1-323287-01	2	Shield-Wheel, Drive
55	1-603402	2	Spring-Extension

7

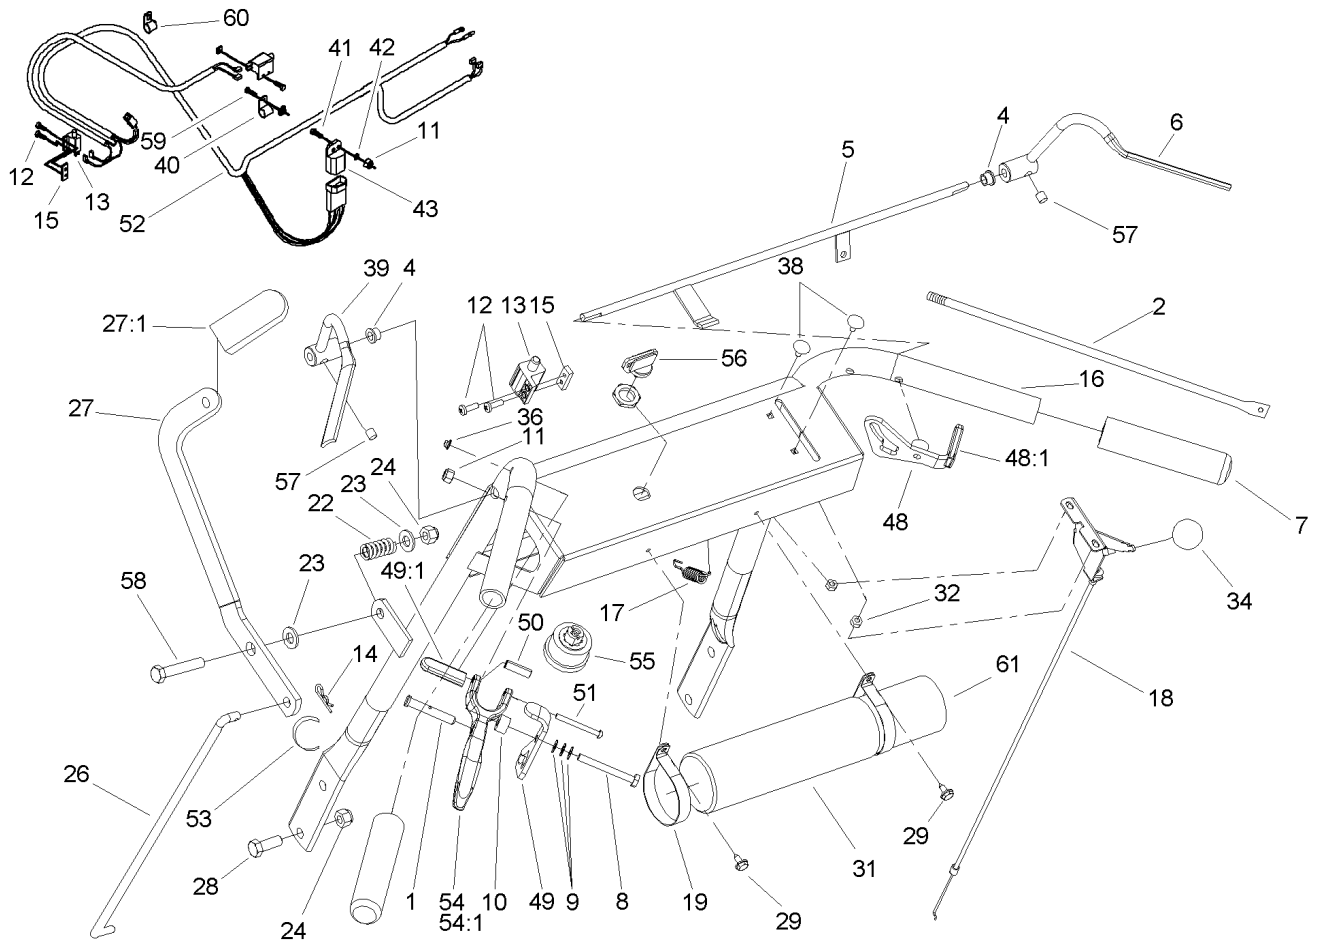


Upper Handle Assembly

Ref	Part No.	Qty.	Description
1	1-808286	2	Pin-Clevis
2	1-323359	2	Linkage-Wheel, Drive
4	1-303365	2	Bushing-Nylon
5	106-2717-03	1	Operator Presence Control Rod ASM
6	1-412185-03	1	Lever-RH
7	1-303097	2	Grip-Handle
8	321-18	2	Screw-HH
9	1-303435	6	Washer-Spring
10	1-323549	2	Spacer
11	3296-42	3	Nut-Lock, NI
12	3290-500	2	Screw-PPH
13	1-513051	1	Switch-Open, Normally
14	1-806003	2	Pin-Hair
15	1-633181	1	Plate-Tapped
16	106-2742	1	Handle ASM
17	1-303363	1	Spring-Extension
18	1-633696	1	Cable-Throttle
19	2412-120	2	R-Clamp
22	1-303160	1	Spring-Compression
23	3256-4	2	Washer-Flat
24	3296-39	5	Nut-Lock, NI
26	1-323298	1	Linkage-Blade, Upper
27	1-322157	1	Lever ASM

Ref	Part No.	Qty.	Description
27:1	1-303020	1	Grip-Lever
28	323-6	4	Screw-HH
29	32104-76	2	Screw
31	104-7050	1	Housing-Manual
32	3296-2	2	Nut-Lock
34	1-513592	1	Knob-Ball
36	1-803001	2	Nut
38	1-807513	2	Bolt-CARR
39	1-412183-03	1	Lever-LH
40	1-323229	1	Clip-Loom
41	321-4	1	Screw-HH
42	3256-22	1	Washer-Flat
43	1-323430	1	Module-Interlock
48	1-324280	1	RH Thumb Latch ASM
48:1	1-303019	1	Grip-Latch
49	1-324279	1	LH Thumb Latch ASM
49:1	1-303019	1	Grip-Latch
50	1-806340	2	Pin-Roll
51	1-808250	2	Pin-Drive Lever
52	103-1610	1	Harness-Wiring
53	1-303088	1	Clip-Cable
54	1-302006	2	Drive Lever ASM
54:1	1-303021	1	Grip-Lever, Drive
55	1-403121	1	Switch-Key




Ref	Part No.	Qty.	Description
56	63-8360	1	Key-Ignition
57	1-803322	2	Screw-Set
58	323-10	1	Screw-HH
59	33114-016	1	Screw-HH
60	1-413510	1	Clip-Loom
61	104-7048	1	Cap-Housing

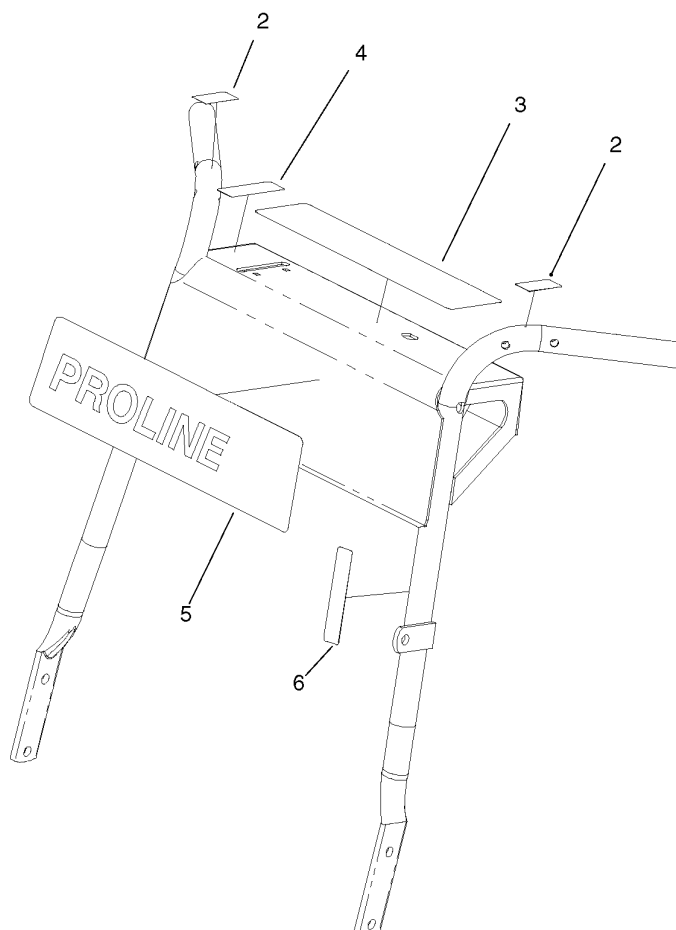

Handle Assembly No. 106-2742


Ref	Part No.	Qty.	Description
2	105-4111	2	Decal-Lock, Neutral
3	106-2737	1	Decal-Warning
4	106-2733	1	Decal-Throttle
5	106-2735	1	Decal-Proline
6	95-5537	1	Decal-Engage, Deck

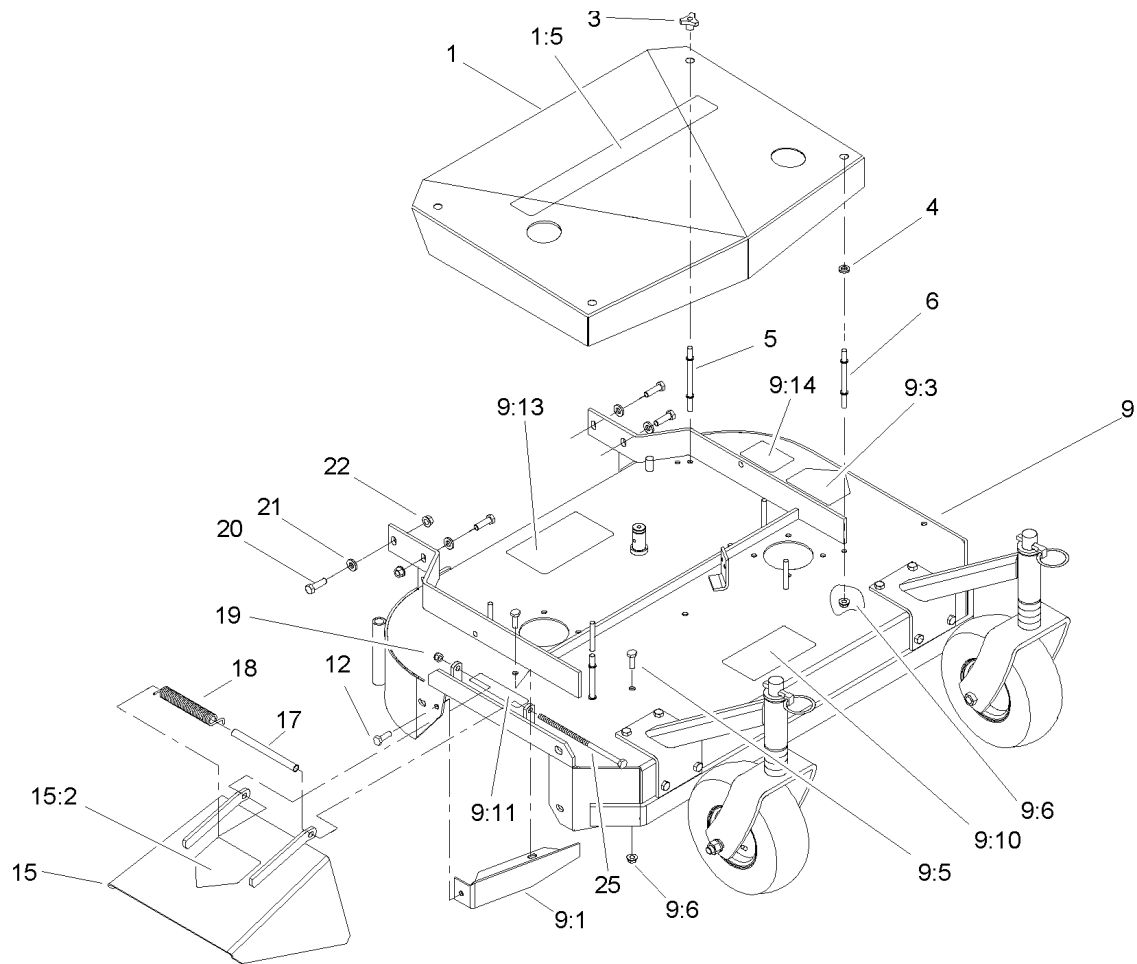

Deck Assembly

Ref	Part No.	Qty.	Description
1	1-304258	1	Belt Shield ASM
1:5	106-0711	1	Decal
3	106-4161	4	Knob-Handle
4	1-323417	4	Washer
5	1-303536	2	Stud-Shield, Belt (Long)
6	1-303537	2	Stud-Shield, Belt (Short)
9	105-4680	1	Deck ASM
9:1	1-302189-01	1	Baffle
9:3	1-403005	1	Decal-Danger
9:5	322-2	8	Screw-HH
9:6	32128-20	8	Nut-HF
9:10	66-1340	1	Decal-Danger
9:11	98-5954	1	Decal-Missing, Cover
9:13	98-3296	1	Decal-Routing, Belt
9:14	98-5130	1	Decal-Torque, Bolt
12	322-2	8	Screw-HH
15	1-304256	1	Chute-Discharge
15:2	54-9220	1	Decal-Danger
17	98-3281	1	Spacer-Spring
18	98-3280	1	Spring-Deflector
19	3296-29	1	Nut-Lock, NI
20	323-8	6	Screw-HH
21	98-5975	6	Washer-Belleville
22	3290-357	6	Nut-HHF


Ref	Part No.	Qty.	Description
25	322-50	1	Screw-HH

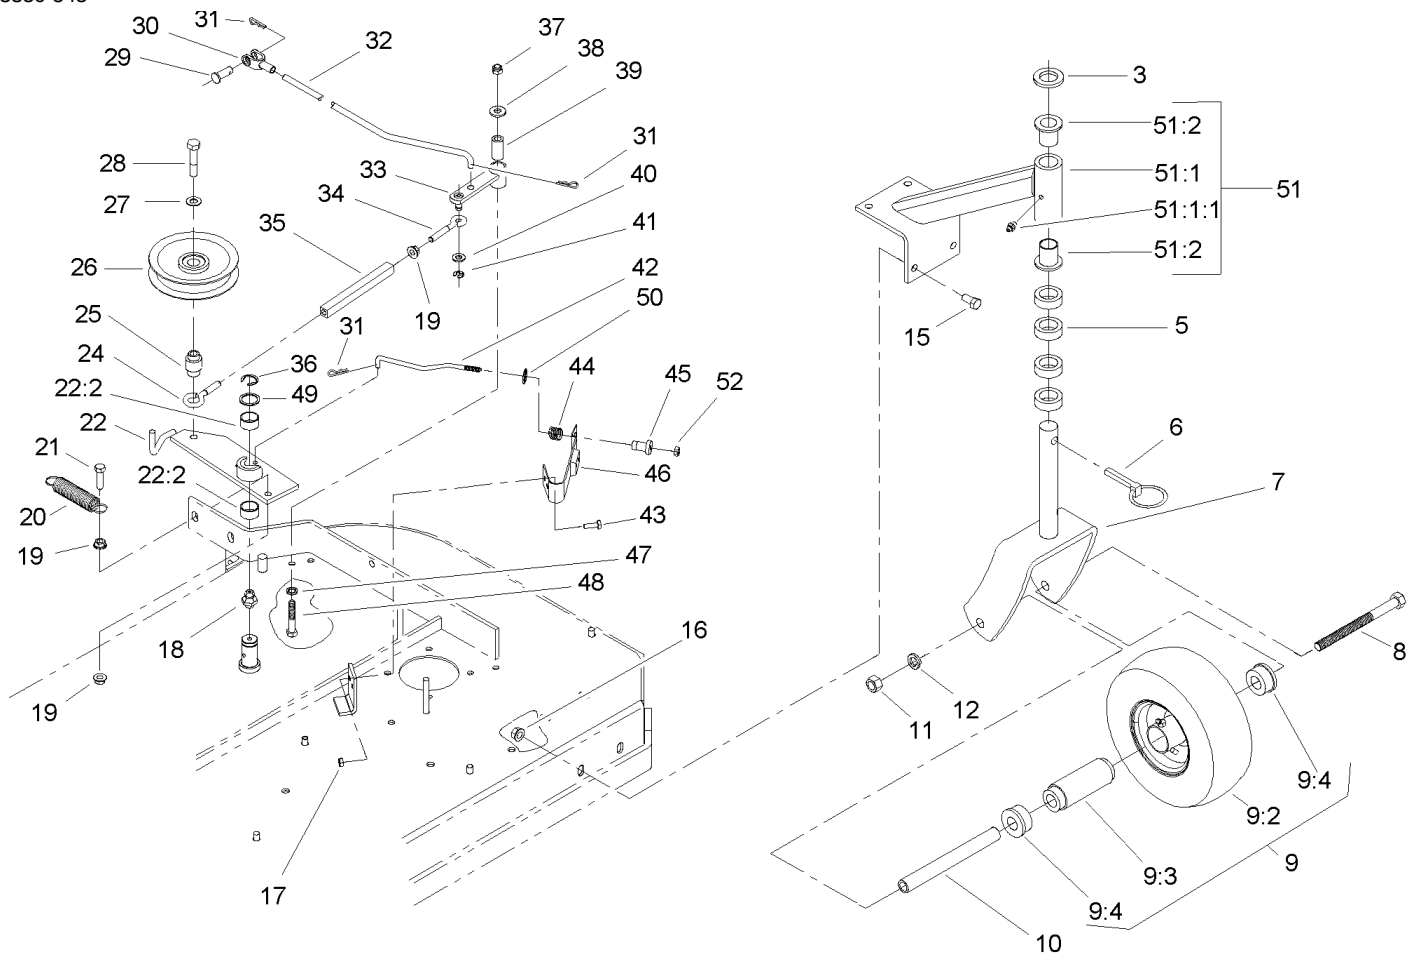

Front Caster and Blade Brake Assembly


Ref	Part No.	Qty.	Description
3	1-513338	2	Washer-Flat
5	1-303314	8	Spacer-Caster
6	1-809020	2	Pin
7	1-322145-01	2	Fork
8	325-20	2	Screw-HH
9	1-513648	2	Wheel And Tire ASM
9:2	1-513808	1	Tire
9:3	1-513809	1	Bearing
9:4	1-513810	2	Bushing
10	1-513547	2	Spacer
11	3217-9	2	Nut-Hex
12	3253-7	2	Washer-Lock
15	323-4	8	Screw-HH
16	3290-357	8	Nut-HHF
17	3296-42	2	Nut-Lock, NI
18	302-19	1	Fitting-Grease
19	32128-20	3	Nut-HF
20	1-323071	1	Spring-Extension
21	322-6	2	Screw-HH
22	103-3600	1	Idler Arm ASM
22:2	1-323729	2	Sleeve-Bearing
24	1-303348	1	Eyebolt-Thread, LH
25	1-303434	1	Bushing-Engagement
26	1-603843	1	Pulley-Idler

Ref	Part No.	Qty.	Description
27	98-5975	1	Washer-Belleville
28	702809	1	Screw-Cap
29	1-808280	1	Pin-Clevis
30	1-303105	1	Yoke-Adjustable
31	1-806003	3	Pin-Hair
32	1-323303	1	Linkage-Arm
33	1-322235	1	Arm-Assist
34	1-303238	1	Eyebolt-Thread, RH
35	1-303236	1	Body-Turnbuckle
36	32151-103	1	Ring-Snap
37	3296-29	1	Nut-Lock, NI
38	3256-3	1	Washer-Flat
39	1-403179	1	Tube-Pivot
40	3256-23	1	Washer-Flat
41	32120-35	1	E-Ring
42	1-323715	1	Rod-Brake
43	321-4	2	Screw-HH
44	1-323747	1	Spring-Compression
45	1-323746	1	Spacer-Flanged
46	1-324372	1	Pad/spring ASM
47	1-303334	1	Washer-Spring
48	322-10	1	Screw-HH
49	1-303352	1	Washer-Spindle
50	1-323748	1	Ring-Push On

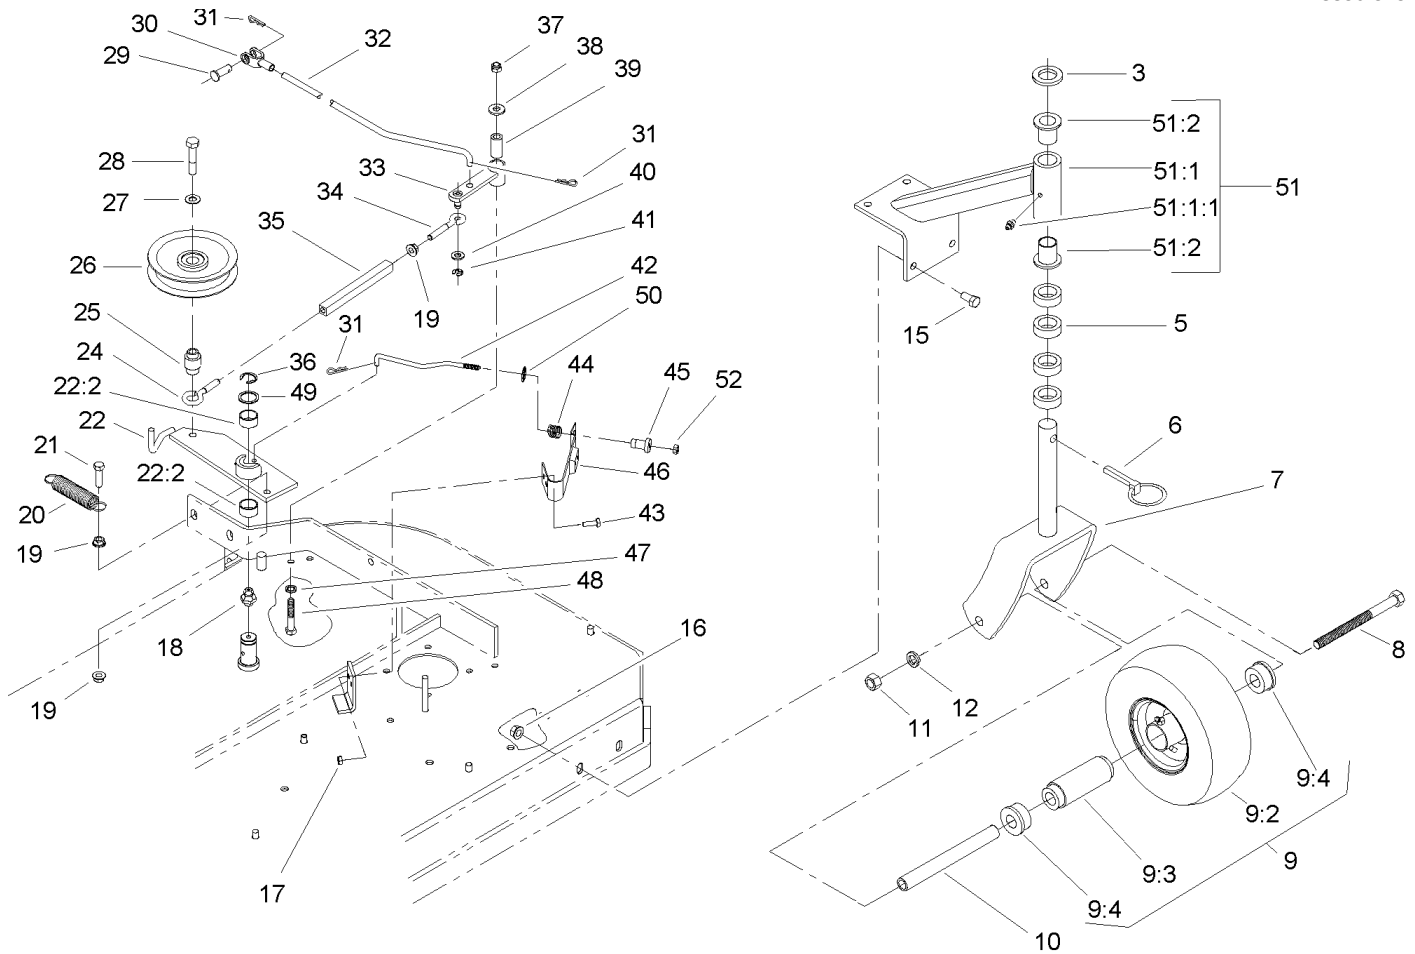


Front Caster and Blade Brake Assembly (continued)

Ref	Part No.	Qty.	Description
51	1-302203	2	Support ASM
②51:1		1	Support-Caster
51:1:1	302-52	1	Fitting-Grease
51:2	1-303514	2	Bearing-Flanged
52	3296-56	1	Nut-Lock, NI

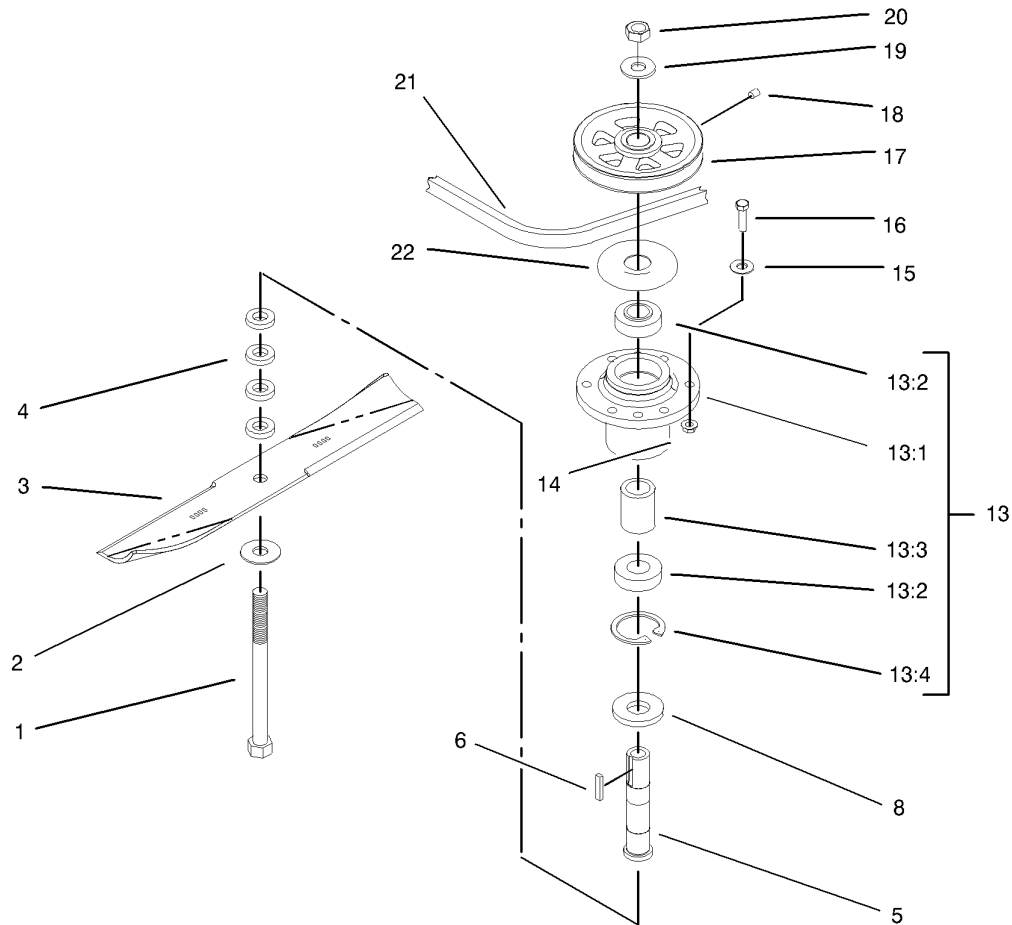


Spindle Assembly

Ref	Part No.	Qty.	Description				
1	1-800861	2	Screw-Cap, HH				
2	1-513208	2	Washer-Spring				
3	103-2508	2	Blade-Lift, Low				
13	103-2528	2	Blade-Notched				
4	1-323539	8	Spacer-Drive, Blade				
5	1-323529	2	Tube-Spindle, Short				
6	1-807267	2	Key				
8	103-2535	2	Spacer-Guard, Bottom				
13		2	Cutter Housing ASM				
13:1	1-323532	1	Housing-Spindle				
13:2	103-2477	2	Bearing-Ball				
13:3	103-2534	1	Spacer-Bearing				
13:4	32120-8	1	Ring-Snap				
14	32128-20	8	Nut-HF				
15	1-303334	8	Washer-Spring				
16	322-6	8	Screw-HH				
17	1-403183	2	Sheave				
18	1-803310	2	Screw-Set				
19	1-323339	2	Washer-Retainer, Sheave				
20	3219-6	2	Nut-Hex				
21	1-323737	1	Belt-Blade, Drive				
22	103-1330	2	Guard-Bearing, Top				

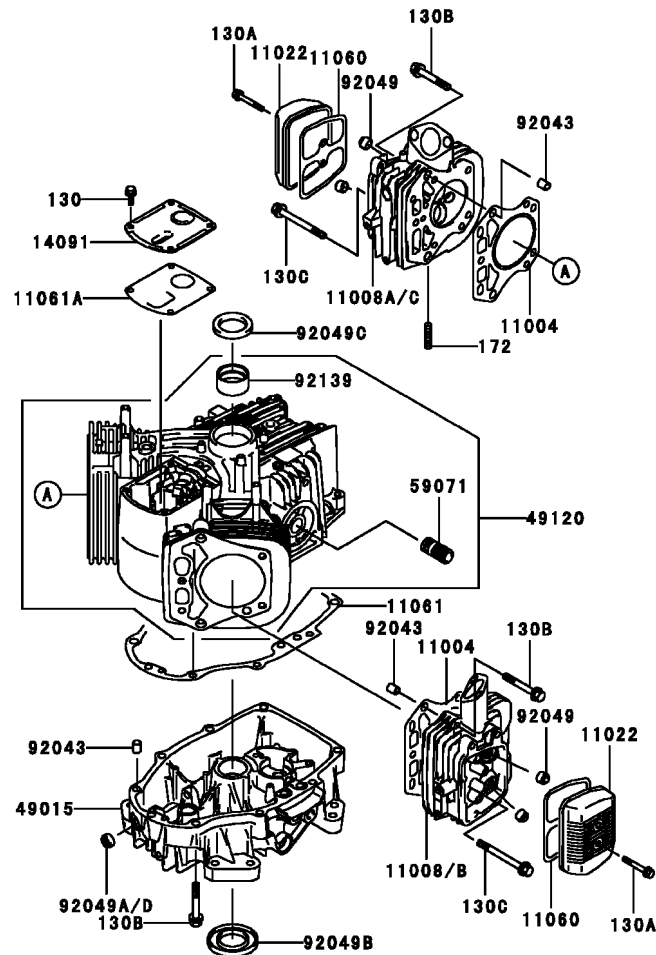


Cylinder and Crankcase Assembly Kawasaki Model FH381V-AS25

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
11004	11004-7008	2	Gasket-Head	172	172G0818	4	Bolt-Stud
11008	11008-7011	1	Head-Comp-Cylinder, No.2				
11008A	11008-7017	1	Head-Comp-Cylinder, No.1				
11008B	11008-7021	1	Head-Comp-Cylinder, No.2				
11008C	11008-7022	1	Head-Comp-Cylinder, No.1				
11022	11022-7003	2	Case-Rocker				
11060	11060-7001	2	Gasket, Rocker Case				
11061	11061-7007	1	Gasket, Cover-Crankcase				
11061A	11061-7008	1	Gasket, Breather				
14091	14091-7007	1	Cover				
49015	49015-7032	1	Cover-Crankcase				
49120	49120-7015	1	Crankcase-Comp				
59071	59071-2079	1	Joint				
92043	92043-7001	6	Pin				
92049	92049-7001	4	Seal-Oil				
92049A	92049-7005	1	Seal-Oil				
92049B	92049-7015	1	Seal-Oil				
92049C	92049-7016	1	Seal-Oil				
92049D	92049-7019	1	Seal-Oil				
92139	92139-7002	1	Bushing				
130	130B0612	4	Bolt-Flanged				
130A	130B0640	4	Bolt-Flanged				
130B	130T0850	17	Bolt-Flanged				
130C	130T0875	2	Bolt-Flanged				

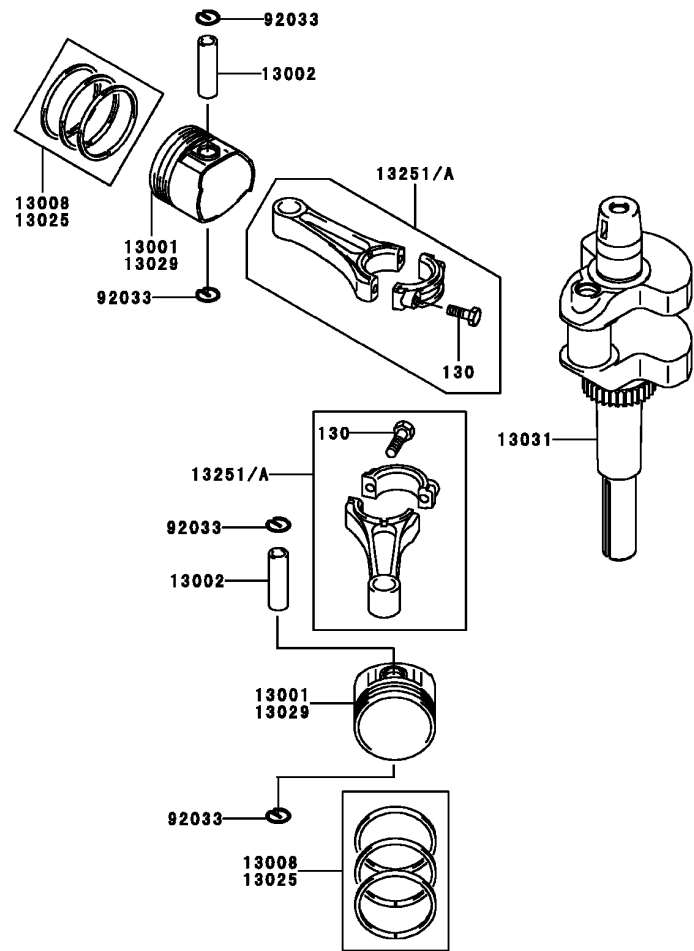


Piston and Crankshaft Assembly
Kawasaki Model FH381V-AS25

Ref	Part No.	Qty.	Description				
13001	13001-7009	2	Piston-Engine				
13002	13002-7001	2	Pin-Piston				
13008	13008-7001	2	Ring-Set-Piston				
13025	13025-7003	1	Ring-Set-Piston L, 0.50				
13029	13029-7005	1	Piston-Engine L, 0.50				
13031	13031-7033	1	Crankshaft-Comp				
13251	13251-7007	2	Rod-ASM-Connecting				
13251A	13251-7008	2	Rod-ASM-Connecting				
92033	92033-7005	4	Ring-Snap				
130	130G0630	4	Bolt-Flanged				

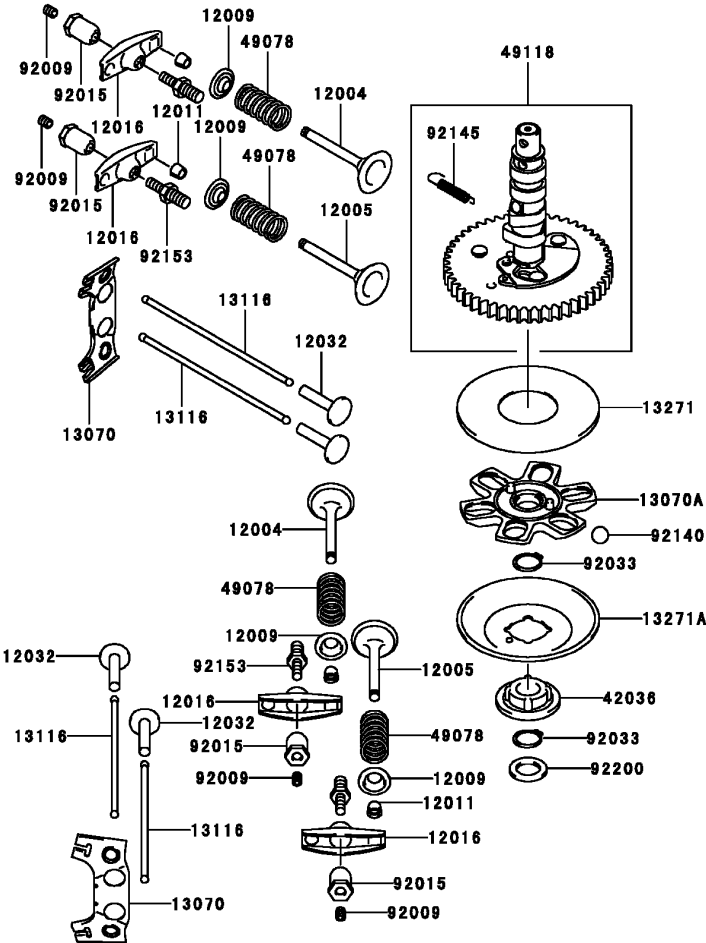


Valve and Camshaft Assembly
Kawasaki Model FH381V-AS25

Ref	Part No.	Qty.	Description				
⑤12004	12004-7003	2	Valve-Intake				
⑤12005	12005-7003	2	Valve-Exhaust				
⑤12009	12009-7001	4	Retainer-Valve Spring				
⑤12011	12011-2056	8	Collet				
⑤12016	12016-7001	4	Arm-Rocker				
⑤12032	12032-7001	4	Tappet				
⑤13070	13070-7001	2	Guide				
⑤13070A	13070-7004	1	Guide				
⑤13116	13116-2057	4	Rod-Push				
⑤13271	13271-7007	1	Plate				
⑤13271A	13271-7021	1	Plate, Governor				
⑤42036	42036-7009	1	Sleeve				
⑤49078	49078-7001	4	Spring-Engine Valve				
⑤49118	49118-7009	1	Camshaft-Comp				
⑤92009	92009-2341	4	Screw				
⑤92015	92015-2253	4	Nut				
⑤92033	92033-7001	2	Ring-Snap				
⑤92140	92140-7002	6	Ball				
⑤92145	92145-7001	1	Spring				
⑤92153	92153-7019	4	Bolt				
⑤92200	92200-7001	1	Washer				

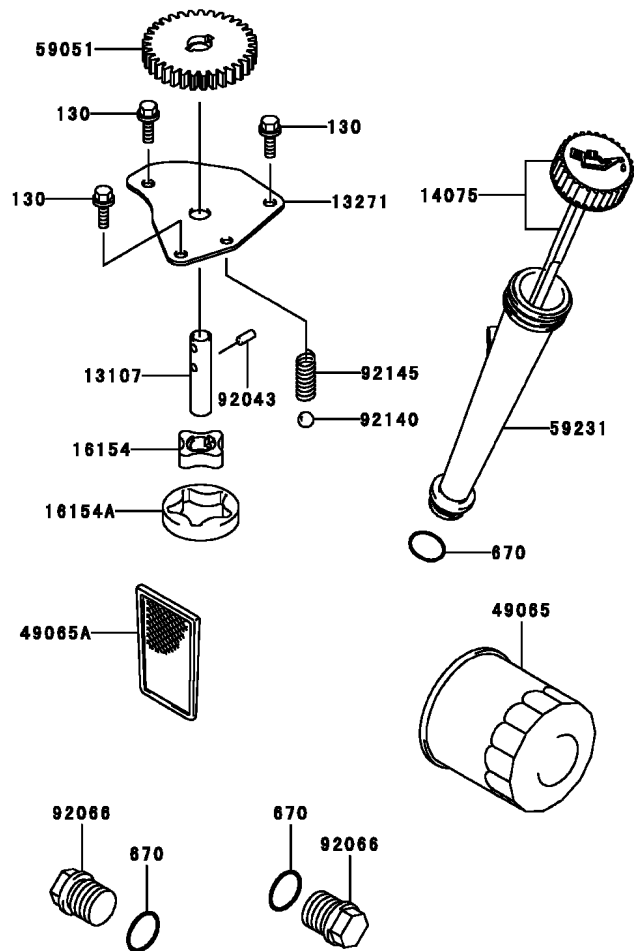


Lubrication-Equipment Assembly
Kawasaki Model FH381V-AS25

Ref	Part No.	Qty.	Description				
⑤13107	13107-7009	1	Shaft				
⑤13271	13271-7017	1	Plate				
⑤14075	14075-7009	1	Cap-ASM				
⑤16154	16154-2053	1	Rotor-Pump, In				
⑤16154A	16154-2054	1	Rotor-Pump, Out				
⑤49065	49065-2078	1	Filter-Oil				
⑤49065A	49065-7004	1	Filter-Oil				
⑤59051	59051-7011	1	Gear-Spur				
⑤59231	59231-7003	1	Filler				
⑤92043	92043-7003	2	Pin				
⑤92066	92066-7003	2	Plug				
⑤92140	92140-7003	1	Ball				
⑤92145	92145-7002	1	Spring				
⑤130	130B0612	3	Bolt-Flanged				
⑤670	670D2016	3	O Ring, 16mm				

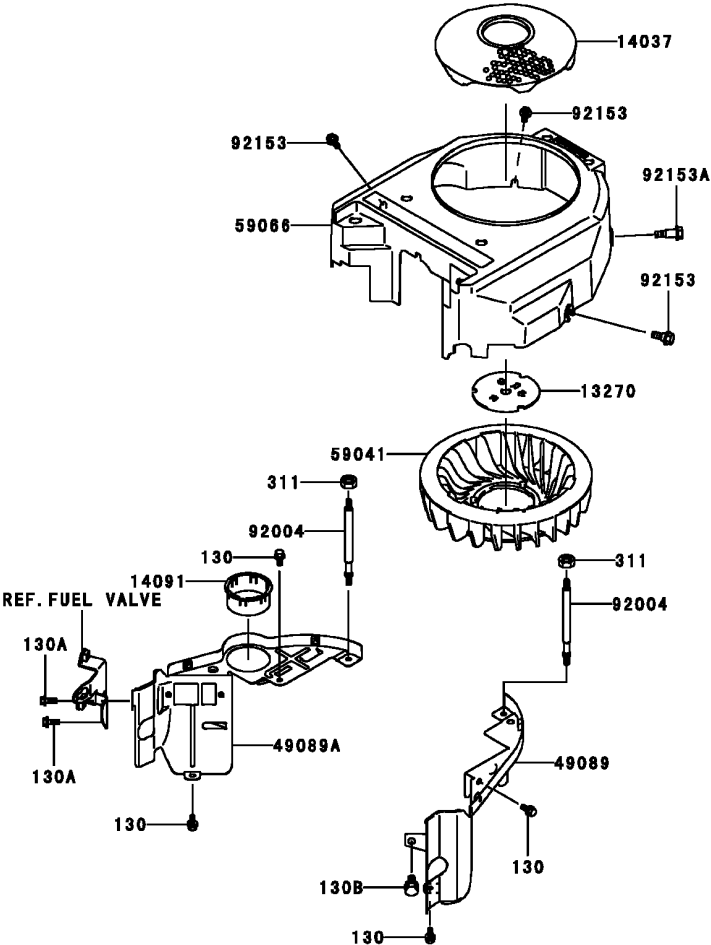

Cooling Equipment Assembly
Kawasaki Model FH381V-AS25


Ref	Part No.	Qty.	Description				
⑤13270	13270-7007	1	Plate				
⑤14037	14037-7021-9H	1	Screen				
⑤14091	14091-7009	1	Cover				
⑤49089	49089-7044	1	Shroud-Engine				
⑤49089A	49089-7045	1	Shroud-Engine				
⑤59041	59041-7010	1	Fan				
⑤59066	59066-7023	1	Housing-Fan				
⑤92004	92004-7007	2	Stud				
⑤92153	92153-7007	3	Bolt				
⑤92153A	92153-7008	1	Bolt				
⑤130	130B0612	4	Bolt-Flanged				
⑤130A	130B0616	2	Bolt-Flanged				
⑤130B	130B0816	1	Bolt-Flanged				
⑤311	311F0600	2	Nut-Hex				

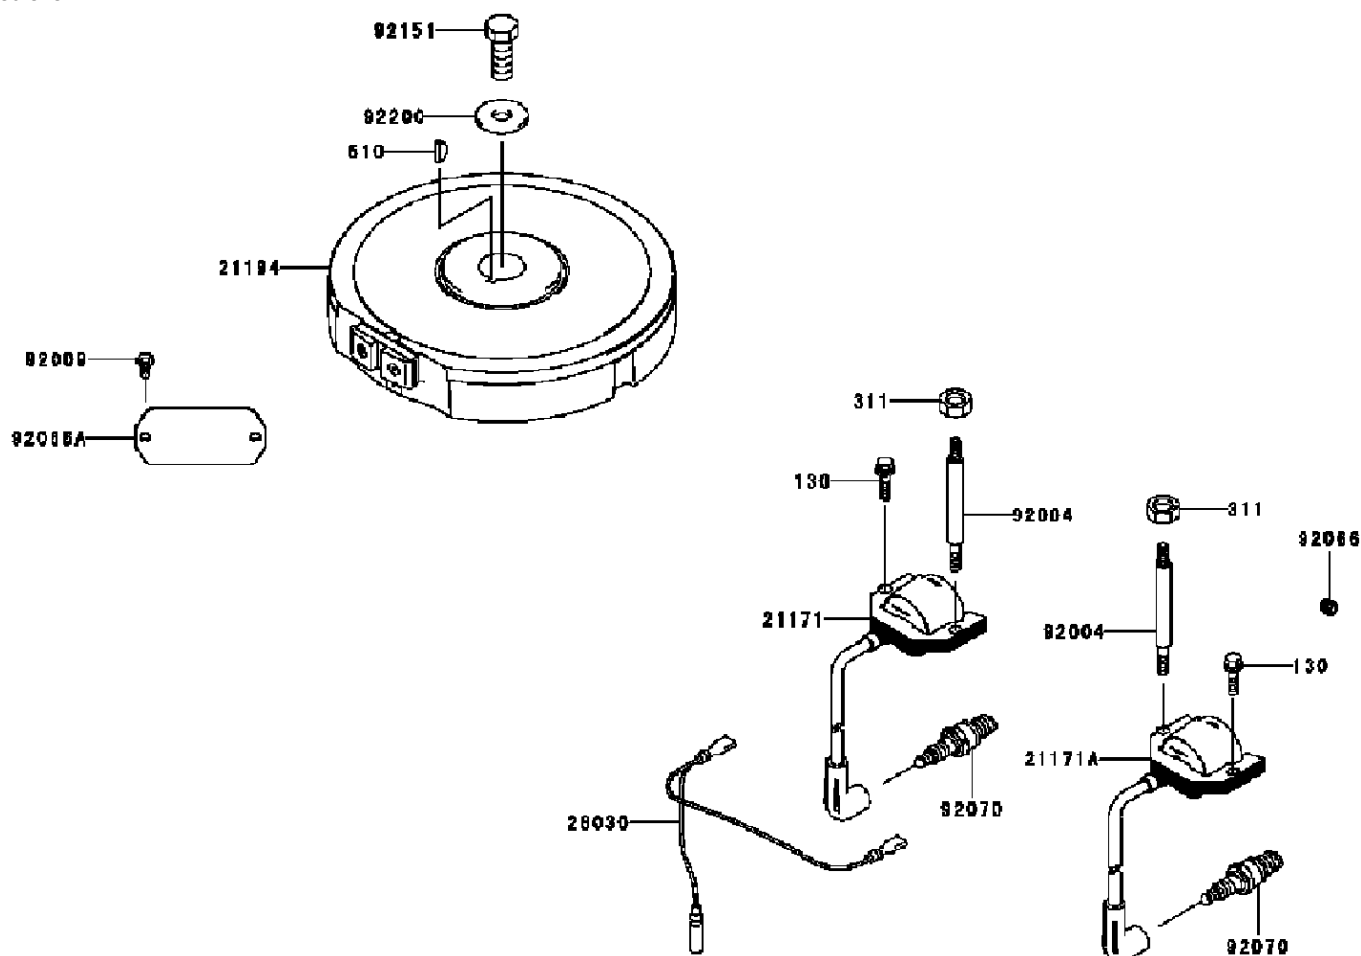

Electric-Equipment Assembly Kawasaki Model FH381V-AS25

Ref	Part No.	Qty.	Description				
⑤21171	21171-7013	1	Coil-ASM-Ignition				
⑤21171A	21171-7014	1	Coil-ASM-Ignition				
⑤21194	21194-7013	1	Flywheel-Comp				
⑤26030	26030-7001	1	Harness				
⑤92004	92004-7008	2	Stud				
⑤92009	92009-2308	2	Screw				
⑤92066	92066-7002	1	Plug				
⑤92066A	92066-7005	1	Plug				
⑤92070	92070-7003	2	Plug-Spark, Rcj8y, Solid				
⑤92151	92151-2097	1	Bolt				
⑤92200	92200-7002	1	Washer				
⑤130	130B0620	2	Bolt-Flanged				
⑤311	311F0600	2	Nut-Hex				
⑤510	510A5100	1	Key-Woodruff				


21

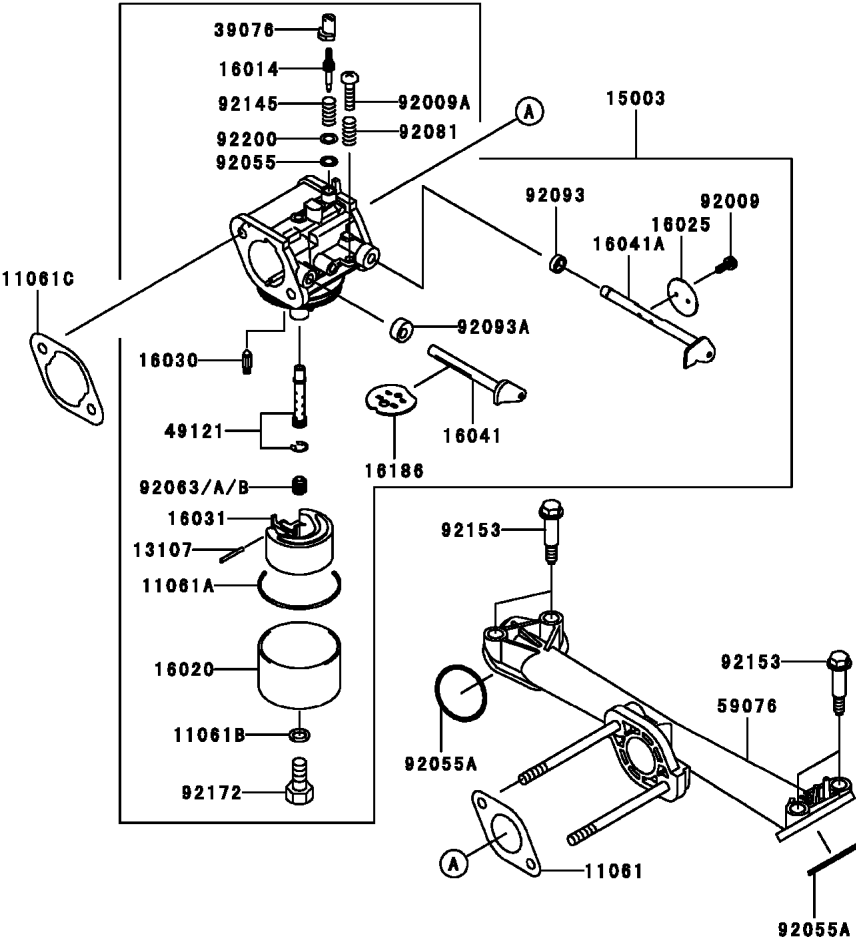

Carburetor Assembly
Kawasaki Model FH381V-AS25


Ref	Part No.	Qty.	Description
⑤11061	11061-7004	1	Gasket, Insulator
⑤11061A	11061-7009	1	Gasket, Chamber
⑤11061B	11061-7010	1	Gasket, Screw
⑤11061C	11061-7018	1	Gasket, Air Cleaner
⑤13107	13107-7018	1	Shaft
⑤15003	15003-7054	1	Carburetor-ASM
⑤16014	16014-7002	1	Screw-Pilot Air
⑤16020	16020-7003	1	Chamber-Float
⑤16025	16025-7006	1	Valve-Throttle
⑤16030	16030-7003	1	Valve-Float
⑤16031	16031-7002	1	Float
⑤16041	16041-7016	1	Shaft-Carburetor, Choke
⑤16041A	16041-7018	1	Shaft-Carburetor, Throttle
⑤16186	16186-7002	1	Valve-ASM-Choke
⑤39076	39076-7001	1	Limiter
⑤49121	49121-7002	1	Nozzle-Main
⑤59076	59076-7005	1	Manifold-Intake
⑤92009	92009-2083	2	Screw
⑤92009A	92009-2349	1	Screw
⑤92055	92055-2174	1	Ring-O
⑤92055A	92055-7007	2	Ring-O
⑤92063	92063-7027	1	Jet-Main-#78
⑤92063A	92063-7030	1	Jet-Main-#75
⑤92063B	92063-7031	1	Jet-Main-#72

Ref	Part No.	Qty.	Description
⑤92081	92081-2234	1	Spring
⑤92093	92093-2100	1	Seal
⑤92093A	92093-7003	1	Seal
⑤92145	92145-7015	1	Spring
⑤92153	92153-7009	4	Bolt
⑤92172	92172-7002	1	Screw
⑤92200	92200-7014	1	Washer

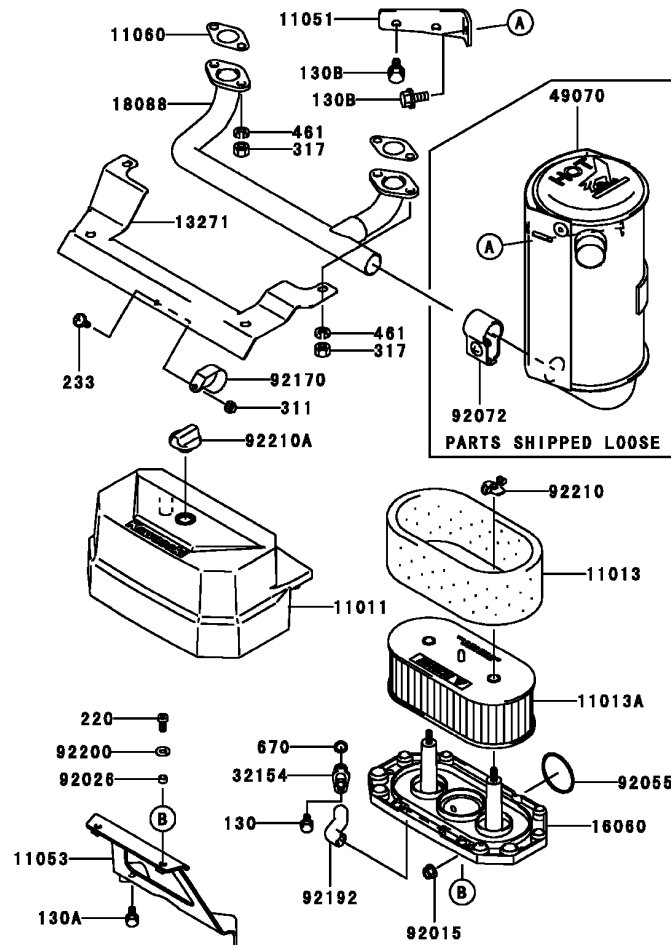


Air-Filter and Muffler Assembly Kawasaki Model FH381V-AS25

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
⑤11011	11011-7035	1	Case-Air Filter	⑤220	220B0614	2	Screw-Pan-Cross
⑤11013	11013-7025	1	Element-Air Filter	⑤233	233B0416	1	Screw-Pan, Wp
⑤11013A	11013-7031	1	Element-Air Filter	⑤311	311B0400	1	Nut-Hex
⑤11051	11051-7005-9H	1	Bracket	⑤317	317R0800	4	Nut-Hex-Small
⑤11053	11053-7022	1	Bracket	⑤461	461F0800	4	Washer-Spring
⑤11060	11060-7021	2	Gasket, Muffler	⑤670	670B2010	1	O Ring, 10mm
⑤13271	13271-7022	1	Plate				
⑤16060	16060-7016	1	Pipe-Intake				
⑤18088	18088-7001	1	Pipe-Exhaust				
⑤32154	32154-7006	1	Pipe				
⑤49070	49070-7015	1	Muffler-Comp				
⑤92015	92015-1193	2	Nut				
⑤92026	92026-7001	2	Spacer				
⑤92055	92055-7015	1	O-Ring				
⑤92072	92072-7008	1	Band				
⑤92170	92170-7002	1	Clamp				
⑤92192	92192-7010	1	Tube				
⑤92200	92200-2070	2	Washer				
⑤92210	92210-7004	2	Nut				
⑤92210A	92210-7019	1	Nut				
⑤130	130B0610	1	Bolt-Flanged				
⑤130A	130B0612	2	Bolt-Flanged				
⑤130B	130B0816	2	Bolt-Flanged				

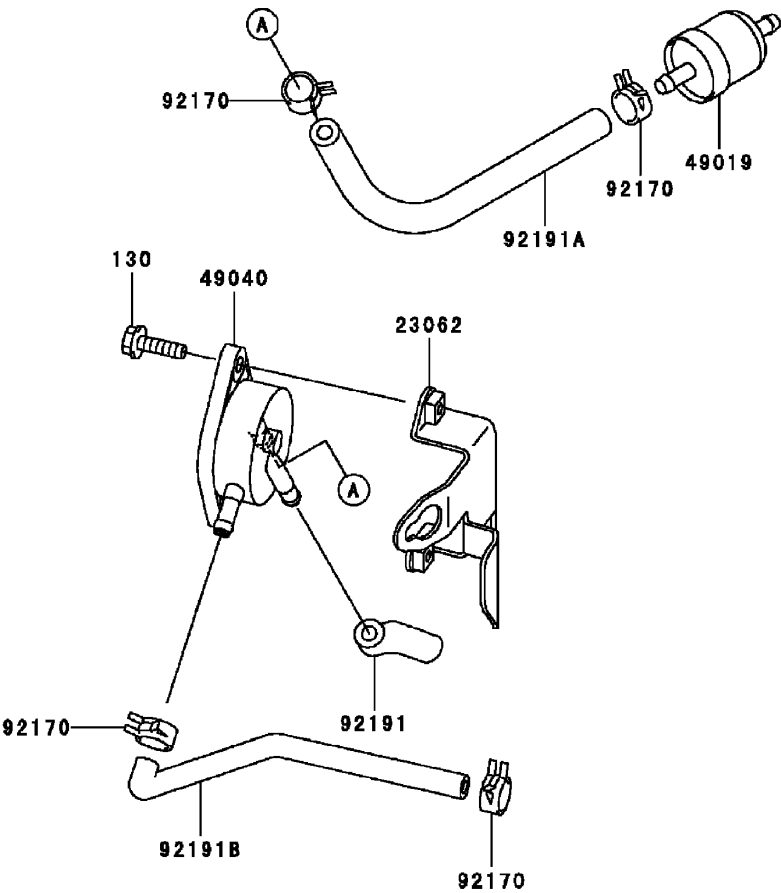

Fuel Tank/Fuel Valve Assembly
Kawasaki Model FH381V-AS25

Ref	Part No.	Qty.	Description				
③23062	23062-7004-9H	1	Bracket-Comp				
③49019	49019-7001	1	Filter-Fuel				
③49040	49040-7001	1	Pump-Fuel				
③92170	92170-2088	4	Clamp				
③92191	92191-7002	1	Tube				
③92191A	92191-7003	1	Tube				
③92191B	92191-7004	1	Tube				
③130	130B0620	2	Bolt-Flanged				

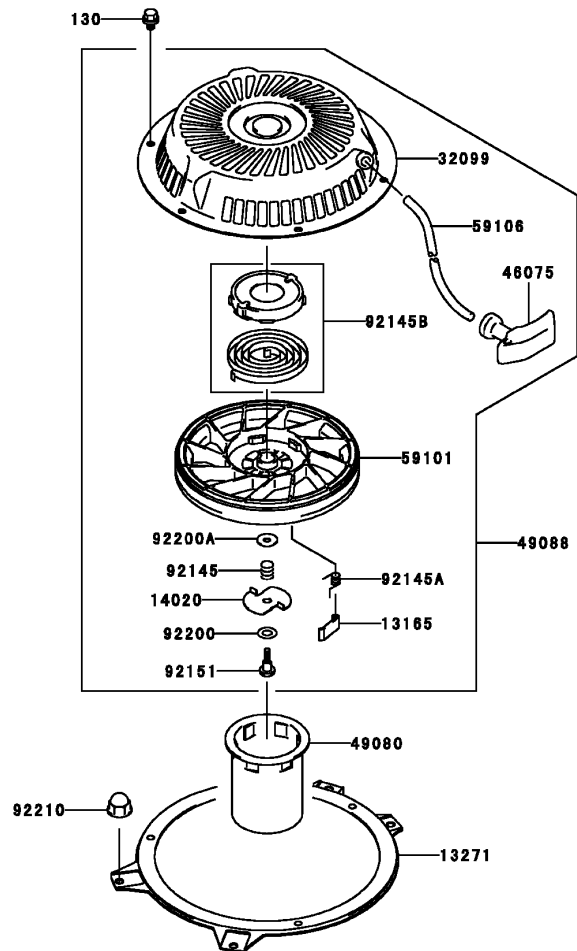

Starter Assembly
Kawasaki Model FH381V-AS25

Ref	Part No.	Qty.	Description				
13165	13165-7001	2	Pawl-Recoil, Starter				
13271	13271-7003-9H	1	Plate				
14020	14020-7001	1	Retainer				
32099	32099-7002	1	Case-Recoil, Starter				
46075	46075-7001	1	Grip-Recoil, Starter				
49080	49080-7001	1	Pulley-Starting				
49088	49088-7013	1	Starter-Recoil				
59101	59101-7001	1	Reel- Recoil, Starter				
59106	59106-7001	1	Rope				
92145	92145-7006	1	Spring				
92145A	92145-7007	2	Spring				
92145B	92145-7008	1	Spring				
92151	92151-7008	1	Bolt				
92200	92200-7004	1	Washer				
92200A	92200-7005	1	Washer				
92210	92210-0003	4	Nut				
130	130B0608	3	Bolt-Flanged				

56033 -



56070



56080



56080A



Decal Assembly

Kawasaki Model FH381V-AS25

Ref	Part No.	Qty.	Description
⑤56033	56033-7001	1	Label-Manual
⑤56070	56070-7001	1	Label-Warning
⑤56080	56080-2077	1	Label-Brand
⑤56080A	56080-7025	1	Label-Brand

NOTES

