



Mid-Size Mower, ProLine Pistol Grip Gear 15 hp with 48in Side Discharge Mower

Model No. 30531 - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


AR.	as required	HYD.	hydraulic
ASM.	assembly	INC.	incorporated
CARR.	carriage	LH.	left hand
DEG.	degrees	NI.	nylon insert
FH.	flat head	PPH.	phillips pan head
GA.	gauge	PTH.	phillips truss head
HF.	hex flange	PTO.	power take off
HH.	hex head	RH.	right hand
HHF.	hex head flange	SFH.	slotted fillister head
HHFTF.	hex head flange thread forming	SHH.	slotted hex head
HJ.	hex jam	SHWH.	slotted hex washer head
HLH.	hex lag head	SPH.	slotted pan head
HOC.	height-of-cut	SQH.	square head
HS.	hex	SRH.	slotted round head
HSBH.	hex socket button head	STD.	standard
HSFH.	hex socket flat head	TAP.	self tapping
HSH.	hex socket head	TTH.	torx truss head
HWH.	hex washer head	WH.	wing head
HWHTF.	hex washer head thread forming		

Footnotes

- | | | | |
|---|--|---|--|
| ❶ | Not illustrated | ❷ | Not serviced separately |
| ❸ | Obtain parts from Peerless Transmissions, model 700-070A | ❹ | Obtain parts from your local Kawasaki dealer |

Contents


Description	Page	Description	Page
Engine and Fuel Tank Assembly	 3	Electric Equipment Assembly Kawasaki Model FH430V-AS25	 21
Transmission and Drive Pulley Assembly	 4	Control Equipment Assembly Kawasaki Model FH430V-AS25	 22
Wheel Drive Assembly	 6	Carburetor Assembly Kawasaki Model FH430V-AS25	 23
Upper Handle Assembly	 8	Air Filter and Muffler Assembly Kawasaki Model FH430V-AS25	 24
Handle Assembly No. 106-2742	 10	Fuel Tank and Fuel Valve Assembly Kawasaki Model FH430V-AS25	 25
Front Caster and Blade Brake Assembly	 11	Starter Assembly Kawasaki Model FH430V-AS25	 26
Spindle Assembly	 13	Label Assembly Kawasaki Model FH430V-AS25	 27
Idler Pulley Assembly	 14		
Deck Assembly	 15		
Cylinder and Crankcase Assembly Kawasaki Model FH430V-AS25	 16		
Piston and Crankshaft Assembly Kawasaki Model FH430V-AS25	 17		
Valve and Camshaft Assembly Kawasaki Model FH430V-AS25	 18		
Lubrication Equipment Assembly Kawasaki Model FH430V-AS25	 19		
Cooling Equipment Assembly Kawasaki Model FH430V-AS25	 20		

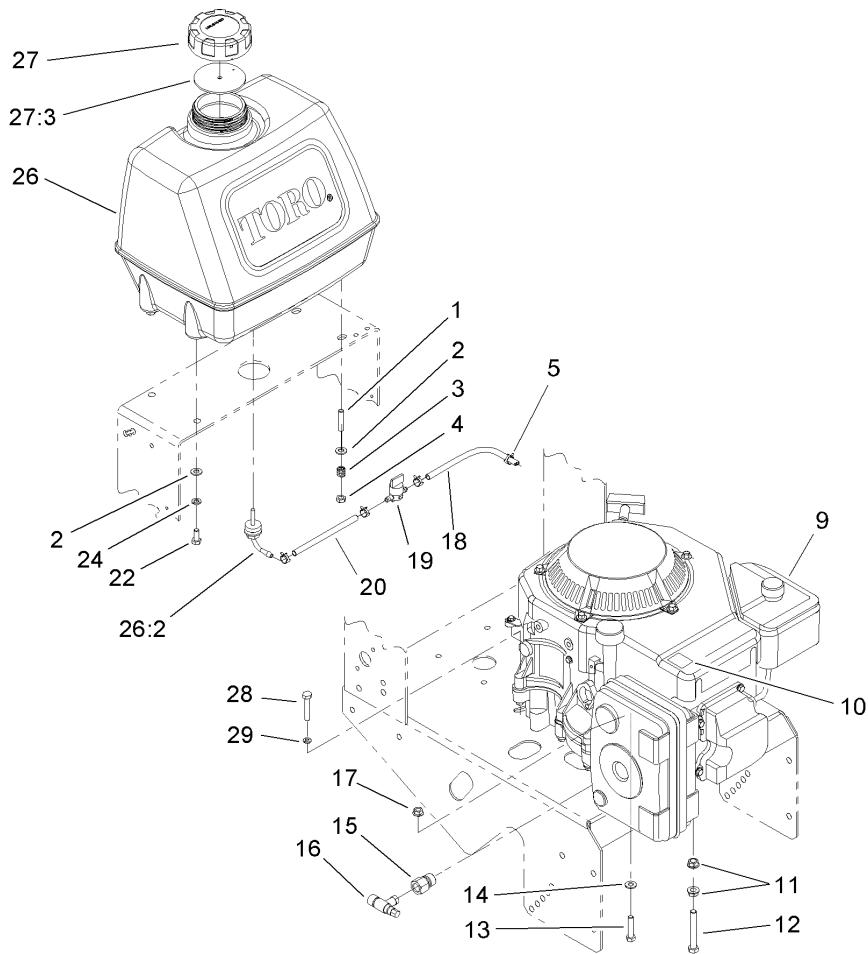

Engine and Fuel Tank Assembly

Ref	Part No.	Qty.	Description
1	1-633023	2	Stud
2	3256-23	4	Washer-Flat
3	1-633349	2	Spring-Tank, Fuel
4	3296-47	2	Nut-Lock, NI
5	1-303077	4	Clamp
29		1	Engine-Kawasaki, Fh430v-As25
10	63-8440	1	Decal-Surface, Hot
11	3290-357	2	Nut-HHF
12	323-13	1	Screw-HH
13	322-7	4	Screw-HH
14	1-303334	4	Washer-Spring
15	103-1966	1	Adapter
16	103-1965	1	Valve-Drain, Oil
17	32128-20	4	Nut-HF
18	1-303022	1	Hose-Fuel
19	1-603770	1	Valve-Fuel
20	1-603955	1	Hose-Fuel
22	322-3	2	Screw-HH
24	1-805005	2	Washer-Lock
26	106-0730	1	Fuel Tank ASM
26:2	103-2605	1	Fitting-Fuel, Bulkhead
27	88-3980	1	Gas Cap ASM
27:3	88-4010	1	Gasket-Cap, Gas
28	33113-016	1	Screw-HH

Ref	Part No.	Qty.	Description
29	1-805004	1	Washer-Lock
99	1-303335	1	Tie-Plastic

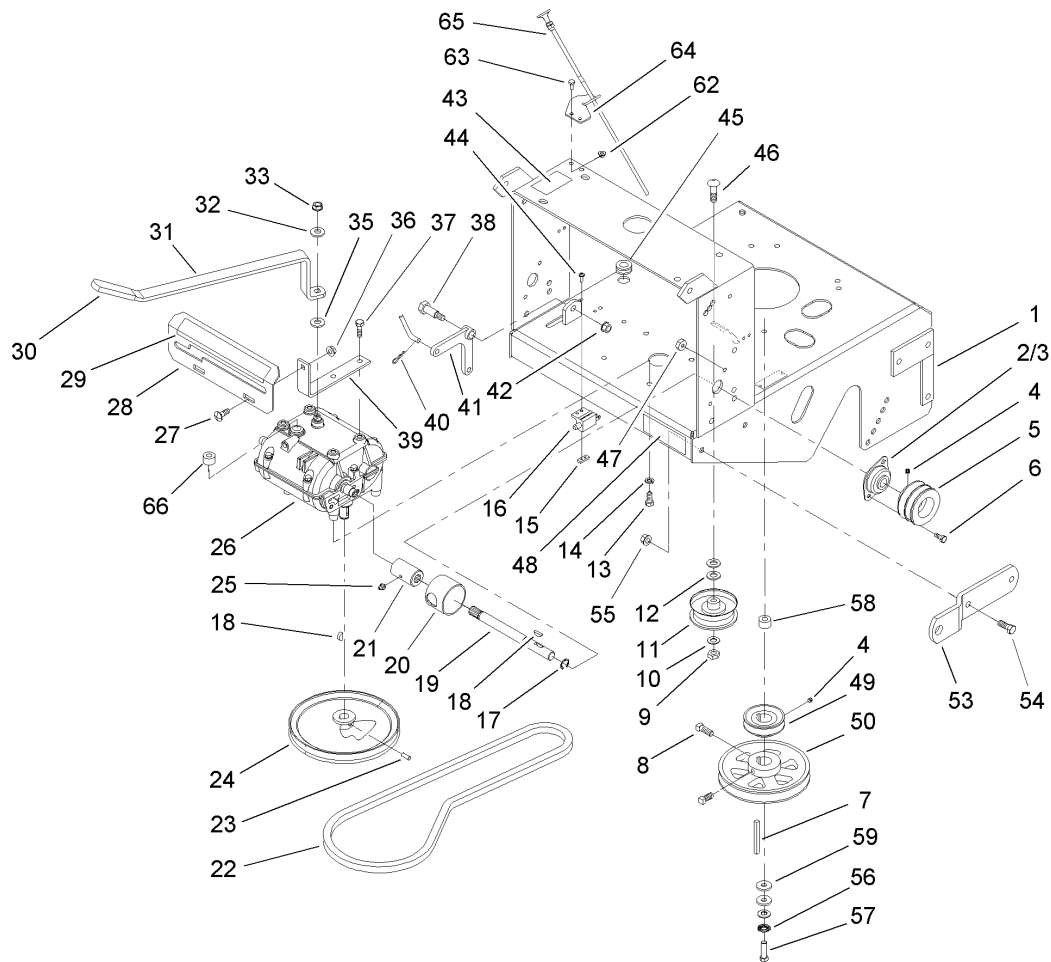


Transmission and Drive Pulley Assembly

Ref	Part No.	Qty.	Description
1	103-2923-01	1	Deck-Rear
2	1-323252	2	Bearing-Shaft
3	1-323254	2	Flange-Output
4	1-803310	3	Screw-Set
5	103-6511	2	Sheave-Transmission
6	321-3	4	Screw-HH
7	103-4177	1	Key-Machine
8	3242-4	2	Screw-Set, SQH
9	3296-39	1	Nut-Lock, NI
10	3256-24	1	Washer-Flat
11	1-323285	1	Idler-Drive, Transmission
12	3256-5	2	Washer-Flat
13	322-3	4	Screw-HH
14	1-805005	4	Washer-Lock
15	1-633181	1	Plate-Tapped
16	1-513051	1	Switch-Open, Normally
17	32151-62	2	Ring-Retaining
18	3257-5	3	Key-Woodruff
19	1-323502	2	Shaft-Transmission
20	51-4220	2	Guard-Coupler
21	1-323680	2	Coupler
22	1-323630	1	V-Belt
23	3245-41	2	Screw-HSH
24	1-323278	1	Sheave-Transmission

Ref	Part No.	Qty.	Description
25	302-19	2	Fitting-Grease
26	1-323500	1	Transmission
27	3230-1	2	Bolt-CARR
28	1-323387-03	1	Plate-Shift
29	105-4104	1	Decal-Speed, Ground
30	1-303020	1	Grip-Lever
31	98-3274-03	1	Lever-Shift
32	98-5975	1	Washer-Belleville
33	3296-6	1	Nut-Lock, NI
35	1-323379	1	Washer
36	32128-20	2	Nut-HF
37	9264964	4	Screw-Hwh, Thd Cut
38	1-603403	1	Bolt-Shoulder
39	1-323389-03	2	Bracket-Plate, Shift
40	1-806003	1	Pin-Hair
41	1-303186	1	Bellcrank
42	3290-357	1	Nut-HHF
43	95-2814	1	Decal-Shut Off, Fuel
44	3290-500	2	Screw-PPH
45	1-543296	1	Grommet
46	3231-6	1	Screw-CARR
47	3296-42	4	Nut-Lock, NI
48	98-0776	1	Decal-Caution
49	103-1666	1	Sheave-Transmission


5

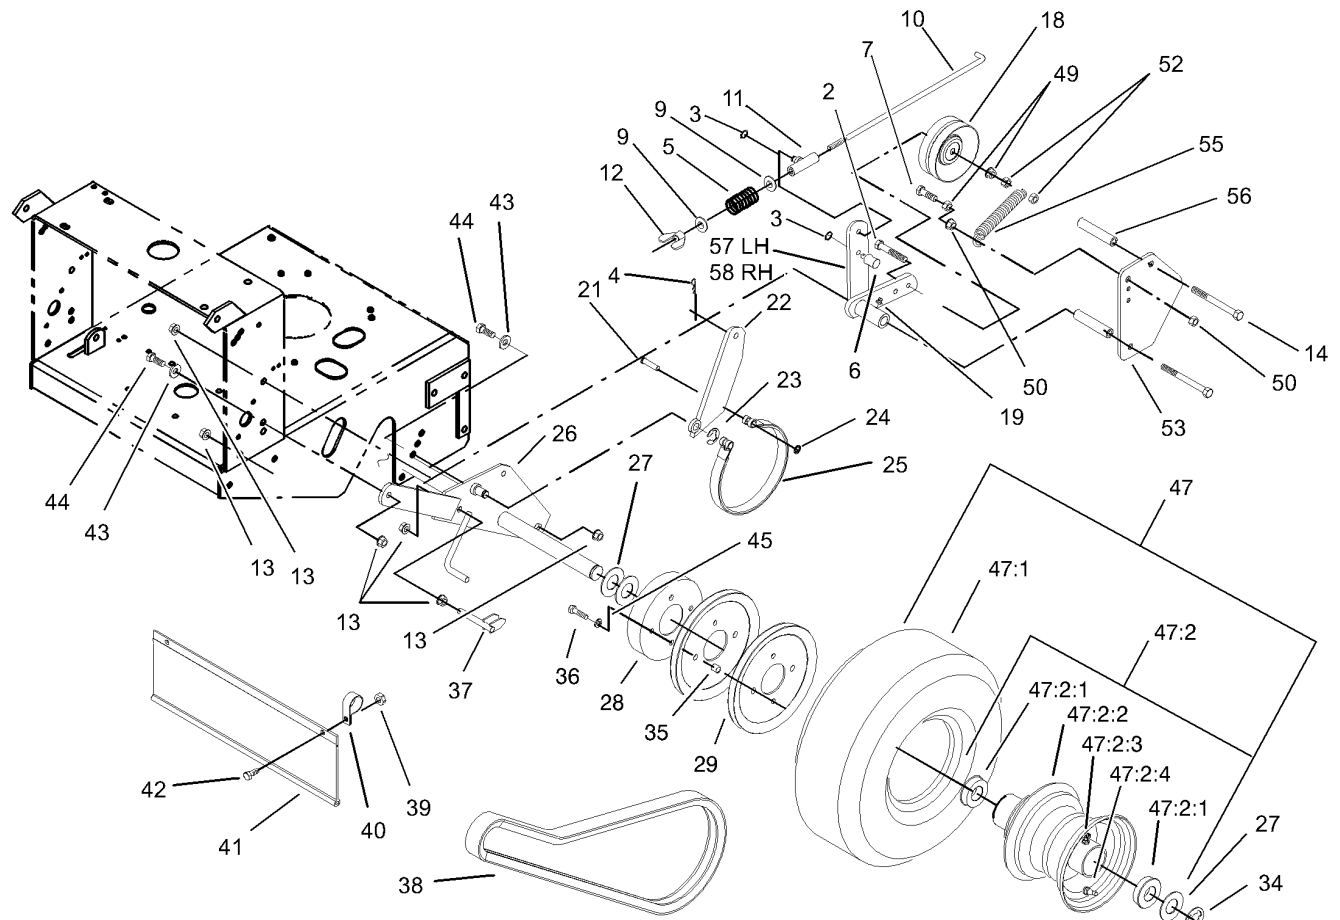

Wheel Drive Assembly

Ref	Part No.	Qty.	Description
2	99-8664	2	Screw-HH
3	32151-47	6	Ring-Retaining
4	1-806003	4	Pin-Hair
5	1-323245	2	Spring-Compression
6	103-1864	2	Swivel-Lever, Drive
7	322-6	2	Screw-HH
9	3256-23	4	Washer-Flat
10	1-323548	2	Linkage-Brake
11	1-322125	2	Swivel-Brake
12	1-513959	2	Wingnut-Nylock
13	3290-357	14	Nut-HHF
14	323-39	4	Screw-HH
18	1-323277	2	Idler-Wheel, Drive
19	302-19	2	Fitting-Grease
21	1-323307	2	Pin-Clevis
22	103-1611-03	2	Arm-Brake
23	32120-47	2	Ring-Retaining, External
24	1-803051	2	Nut-Push
25	1-323262	2	Band-Brake
26	1-322117-03	1	Axle
27	1-543436	8	Washer-Spacer
27	1-523157	6	Washer-Spacer
28	1-323261	2	Drum-Brake
29	1-323253	4	Sheave-Wheel, Drive


Ref	Part No.	Qty.	Description
34	1-808519	2	Ring-Snap
35	1-323260	8	Spacer-Sheave, Wheel
36	322-6	8	Screw-HH
37	1-412358	2	Scraper
38	1-323631	2	V-Belt
39	3296-29	4	Nut-Lock, NI
40	2412-104	2	R-Clamp
41	98-3259	1	Shield-Trailing
42	322-3	2	Screw-HH
43	98-5975	4	Washer-Belleville
44	323-6	4	Screw-HH
45	1-373034	8	Washer
47		2	Wheel And Tire ASM
47:1	1-323720	1	Tire-Turfmaster
47:2	1-323328	1	Wheel And Hub ASM
47:2:1	1-323329	2	Bearing-Flanged
47:2:2		1	Rim ASM
47:2:3		1	Fitting-Grease
47:2:4		1	Stem-Valve
49	3290-357	2	Nut-HHF
50	32128-20	2	Nut-HF
52	3296-39	8	Nut-Lock, NI
53	1-323287-01	2	Shield-Wheel, Drive
55	1-603402	2	Spring-Extension

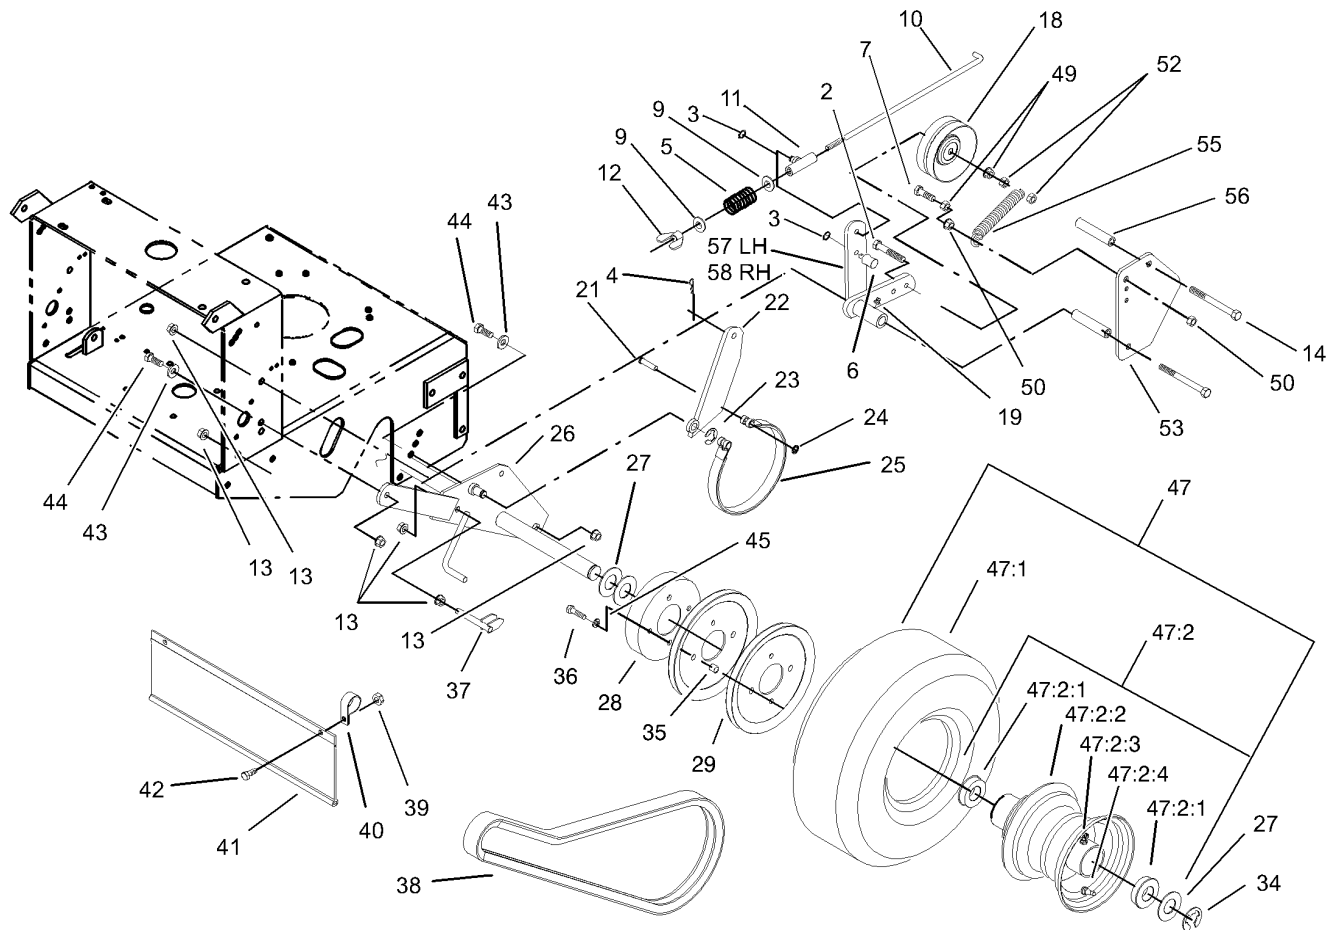

Wheel Drive Assembly (continued)

Ref	Part No.	Qty.	Description
56	1-323283	4	Spacer-Shield
57	103-1615-03	1	Arm-Idler, LH
58	103-1616-03	1	Arm-Idler, RH


--	--	--	--

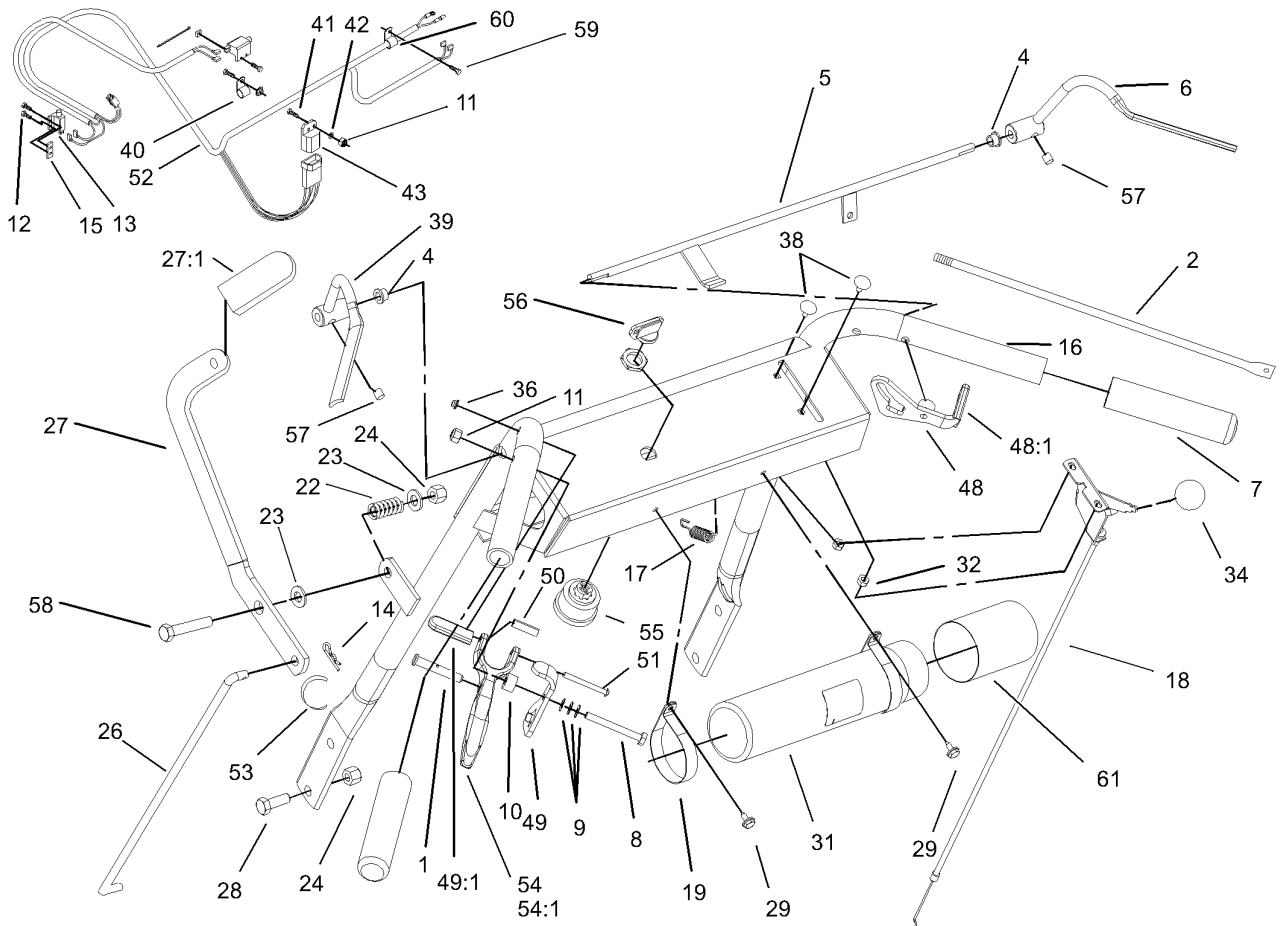

Upper Handle Assembly

Ref	Part No.	Qty.	Description
1	1-808286	2	Pin-Clevis
2	1-323359	2	Linkage-Wheel, Drive
4	1-303365	2	Bushing-Nylon
5	106-2717-03	1	Operator Presence Control Rod ASM
6	1-412185-03	1	Lever-RH
7	1-303097	2	Grip-Handle
8	321-18	2	Screw-HH
9	1-303435	6	Washer-Spring
10	1-323549	2	Spacer
11	3296-42	3	Nut-Lock, NI
12	3290-500	2	Screw-PPH
13	1-513051	1	Switch-Open, Normally
14	1-806003	2	Pin-Hair
15	1-633181	1	Plate-Tapped
16	106-2742	1	Handle ASM
17	1-303363	1	Spring-Extension
18	1-633696	1	Cable-Throttle
19	2412-120	2	R-Clamp
22	1-303160	1	Spring-Compression
23	3256-4	2	Washer-Flat
24	3296-39	5	Nut-Lock, NI
26	1-323298	1	Linkage-Blade, Upper
27	1-322157	1	Lever ASM


Ref	Part No.	Qty.	Description
27:1	1-303020	1	Grip-Lever
28	323-6	4	Screw-HH
29	32104-76	2	Screw
31	104-7050	1	Housing-Manual
32	3296-2	2	Nut-Lock
34	1-513592	1	Knob-Ball
36	1-803001	2	Nut
38	1-807513	2	Bolt-CARR
39	1-412183-03	1	Lever-LH
40	1-323229	1	Clip-Loom
41	321-4	1	Screw-HH
42	3256-22	1	Washer-Flat
43	1-323430	1	Module-Interlock
48	1-324280	1	RH Thumb Latch ASM
48:1	1-303019	1	Grip-Latch
49	1-324279	1	LH Thumb Latch ASM
49:1	1-303019	1	Grip-Latch
50	1-806340	2	Pin-Roll
51	1-808250	2	Pin-Drive Lever
52	103-1610	1	Harness-Wiring
53	1-303088	1	Clip-Cable
54	1-302006	2	Drive Lever ASM
54:1	1-303021	1	Grip-Lever, Drive
55	1-403121	1	Switch-Key

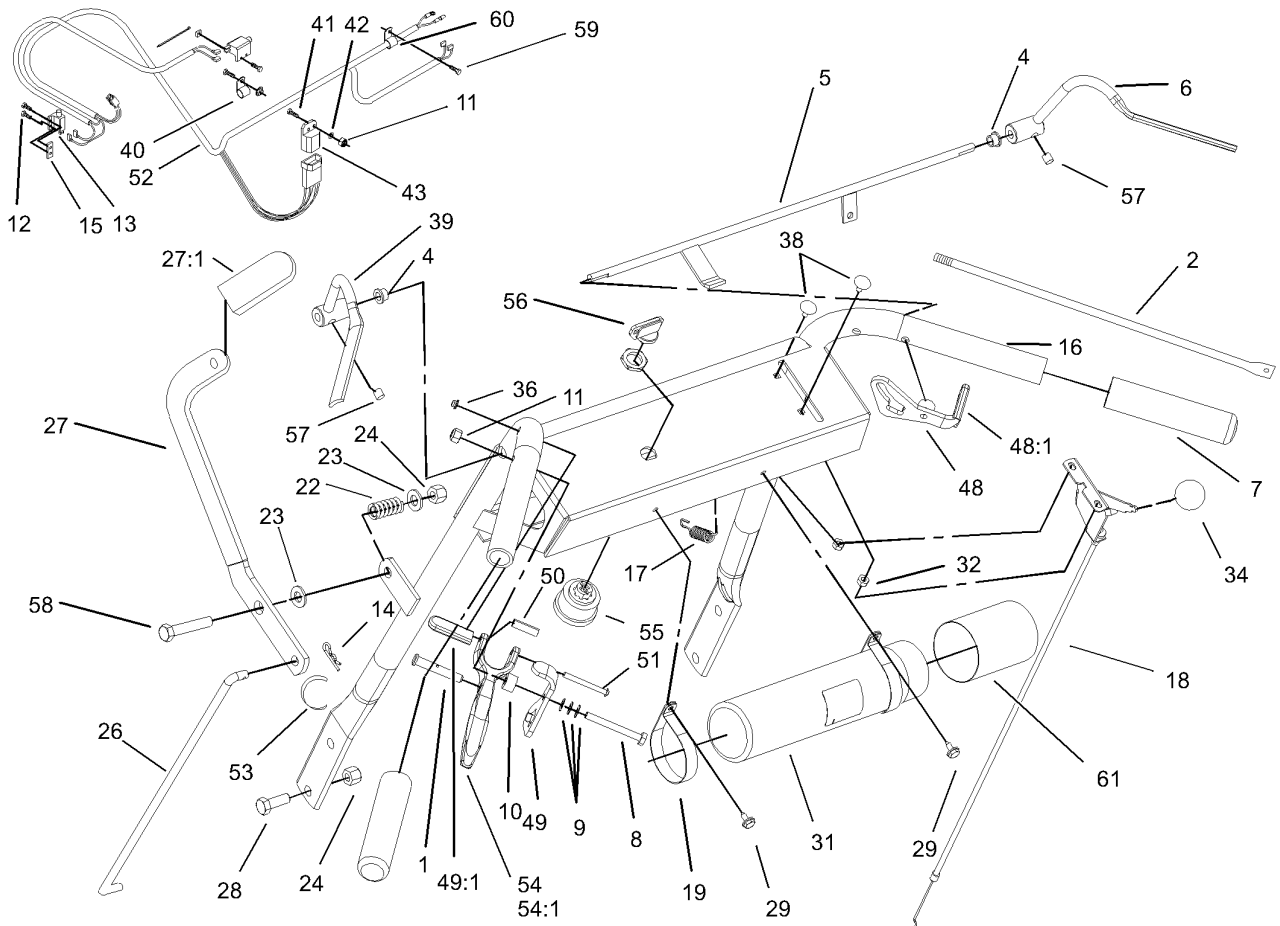

Upper Handle Assembly (continued)

Ref	Part No.	Qty.	Description
56	63-8360	1	Key-Ignition
57	1-803322	2	Screw-Set
58	323-10	1	Screw-HH
59	33114-016	1	Screw-HH
60	1-413510	1	Clip-Loom
61	104-7048	1	Cap-Housing


--	--	--	--

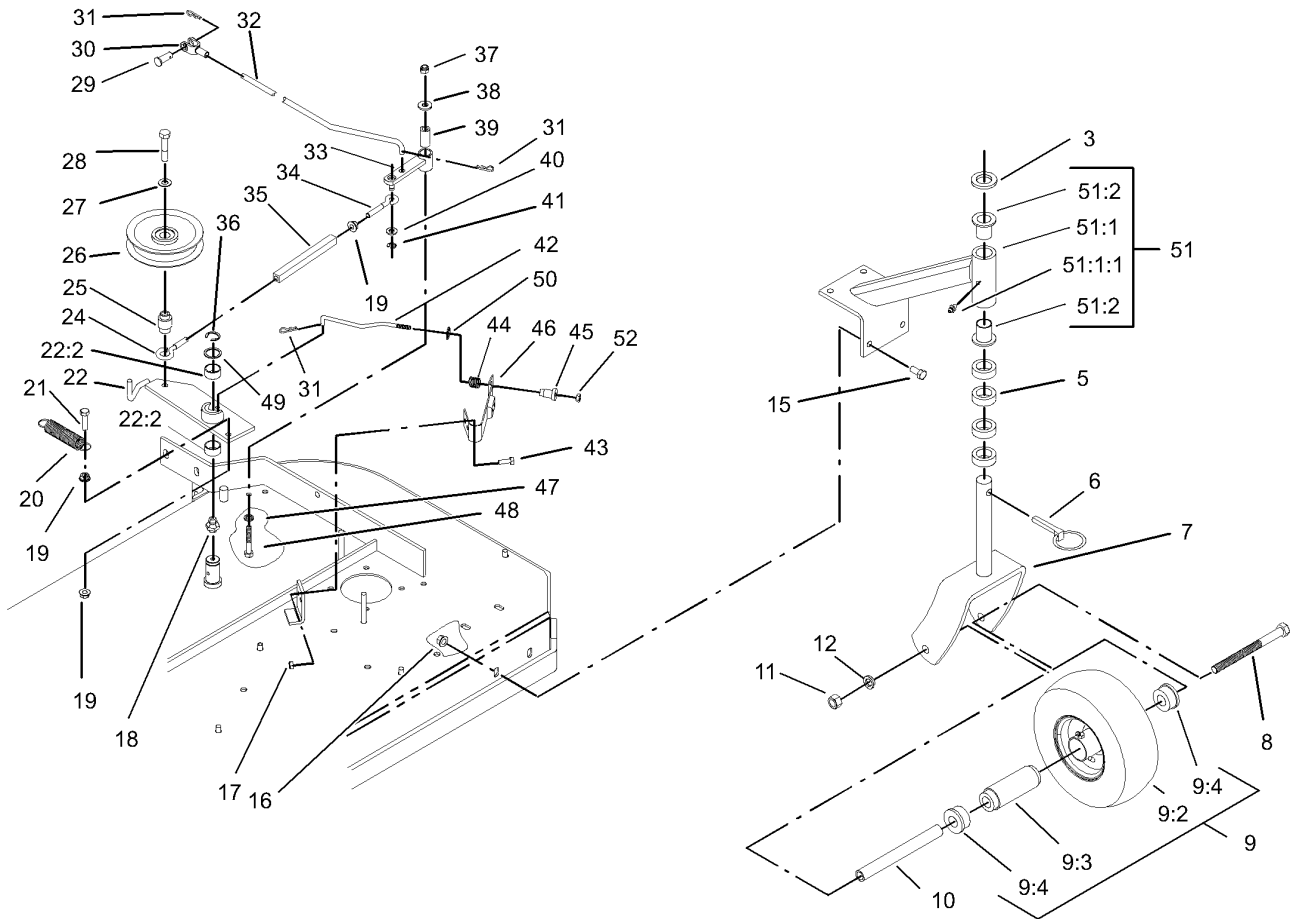

Front Caster and Blade Brake Assembly


Ref	Part No.	Qty.	Description
3	1-513338	2	Washer-Flat
5	1-303314	8	Spacer-Caster
6	1-809020	2	Pin
7	1-322145-01	2	Fork
8	325-20	2	Screw-HH
9	1-513648	2	Wheel And Tire ASM
9:2	1-513808	1	Tire
9:3	1-513809	1	Bearing
9:4	1-513810	2	Bushing
10	1-513547	2	Spacer
11	3217-9	2	Nut-Hex
12	3253-7	2	Washer-Lock
15	323-4	8	Screw-HH
16	3290-357	8	Nut-HHF
17	3296-42	2	Nut-Lock, NI
18	302-19	1	Fitting-Grease
19	32128-20	3	Nut-HF
20	1-323071	1	Spring-Extension
21	322-6	2	Screw-HH
22	103-3600	1	Idler Arm ASM
22:2	1-323729	2	Sleeve-Bearing
24	1-303348	1	Eyebolt-Thread, LH
25	1-303434	1	Bushing-Engagement
26	1-603843	1	Pulley-Idler

Ref	Part No.	Qty.	Description
27	98-5975	1	Washer-Belleville
28	702809	1	Screw-Cap
29	1-808280	1	Pin-Clevis
30	1-303105	1	Yoke-Adjustable
31	1-806003	3	Pin-Hair
32	1-323303	1	Linkage-Arm
33	1-322235	1	Arm-Assist
34	1-303238	1	Eyebolt-Thread, RH
35	1-303236	1	Body-Turnbuckle
36	32151-103	1	Ring-Snap
37	3296-29	1	Nut-Lock, NI
38	3256-3	1	Washer-Flat
39	1-403179	1	Tube-Pivot
40	3256-23	1	Washer-Flat
41	32120-35	1	E-Ring
42	1-323714	1	Rod-Brake
43	321-4	2	Screw-HH
44	1-323747	1	Spring-Compression
45	1-323746	1	Spacer-Flanged
46	1-324372	1	Pad/spring ASM
47	1-303334	1	Washer-Spring
48	322-10	1	Screw-HH
49	1-303352	1	Washer-Spindle
50	1-323748	1	Ring-Push On

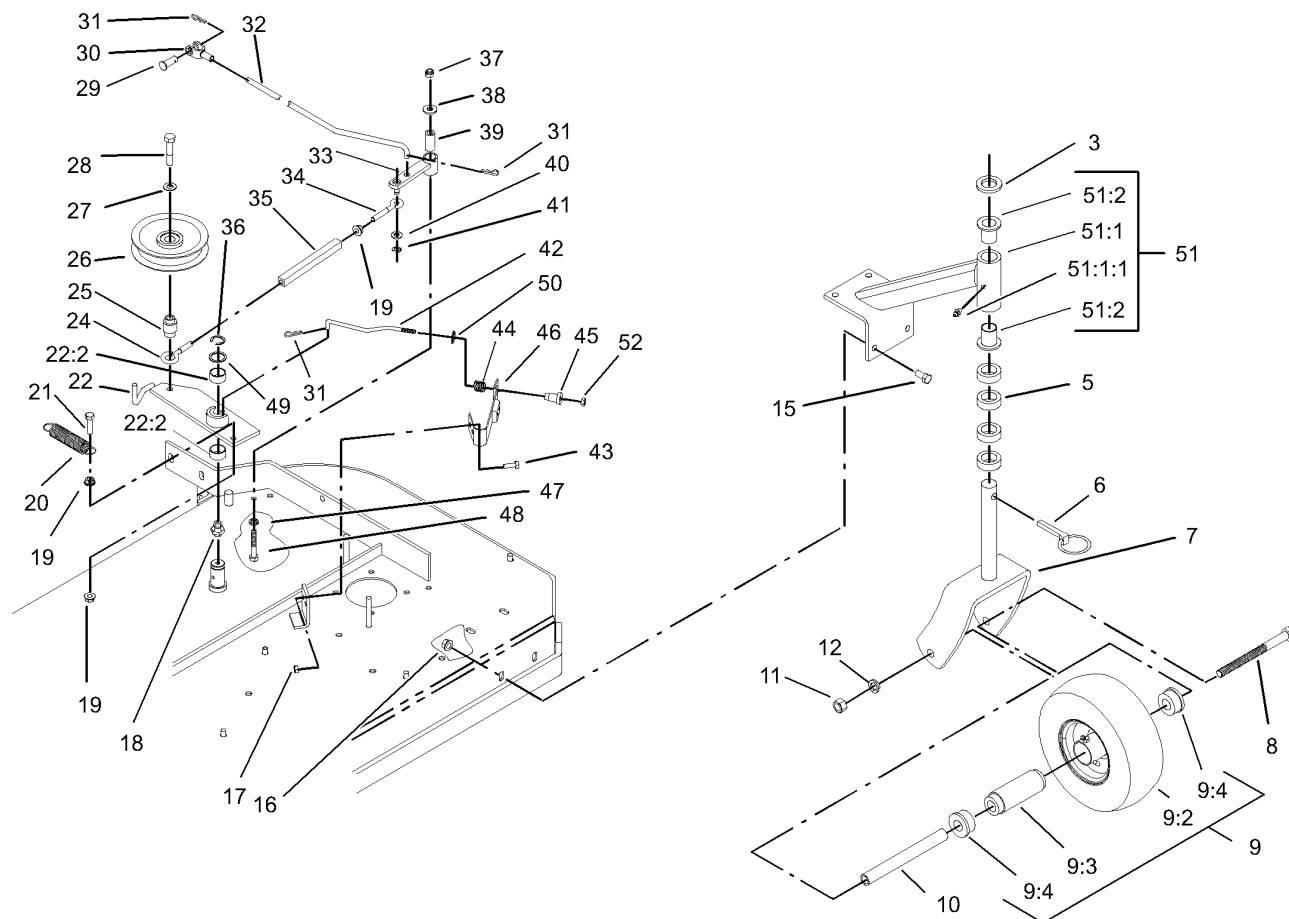


Front Caster and Blade Brake Assembly (continued)

Ref	Part No.	Qty.	Description
51	1-302203	2	Support ASM
② 51:1		1	Support-Caster
51:1:1	302-52	1	Fitting-Grease
51:2	1-303514	2	Bearing-Flanged
52	3296-56	1	Nut-Lock, NI

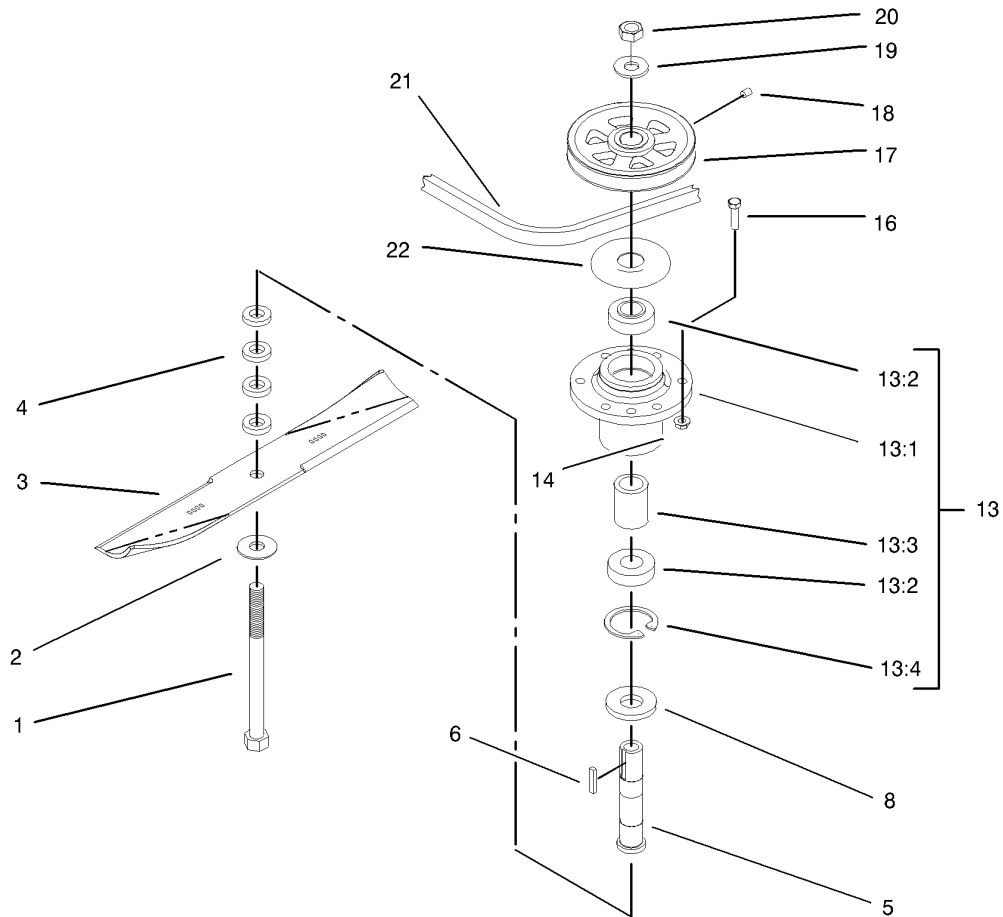


Spindle Assembly

Ref	Part No.	Qty.	Description
1	1-800861	3	Screw-Cap, HH
2	1-513208	3	Washer-Spring
3	103-2527	3	Blade-Notched
3	103-2507	3	Blade-Lift, Low
4	1-323539	12	Spacer-Drive, Blade
5	1-323529	3	Tube-Spindle, Short
6	1-807267	3	Key
8	103-2535	3	Spacer-Guard, Bottom
13		3	Cutter Housing ASM
13:1	1-323532	1	Housing-Spindle
13:2	103-2477	2	Bearing-Ball
13:3	103-2534	1	Spacer-Bearing
13:4	32120-8	1	Ring-Snap
14	3296-39	18	Nut-Lock, NI
16	323-7	18	Screw-HH
17	1-403183	3	Sheave
18	1-803310	3	Screw-Set
19	1-323339	3	Washer-Retainer, Sheave
20	3219-6	3	Nut-Hex
21	1-403171	1	Belt-Drive, Blade
22	103-1330	3	Guard-Bearing, Top

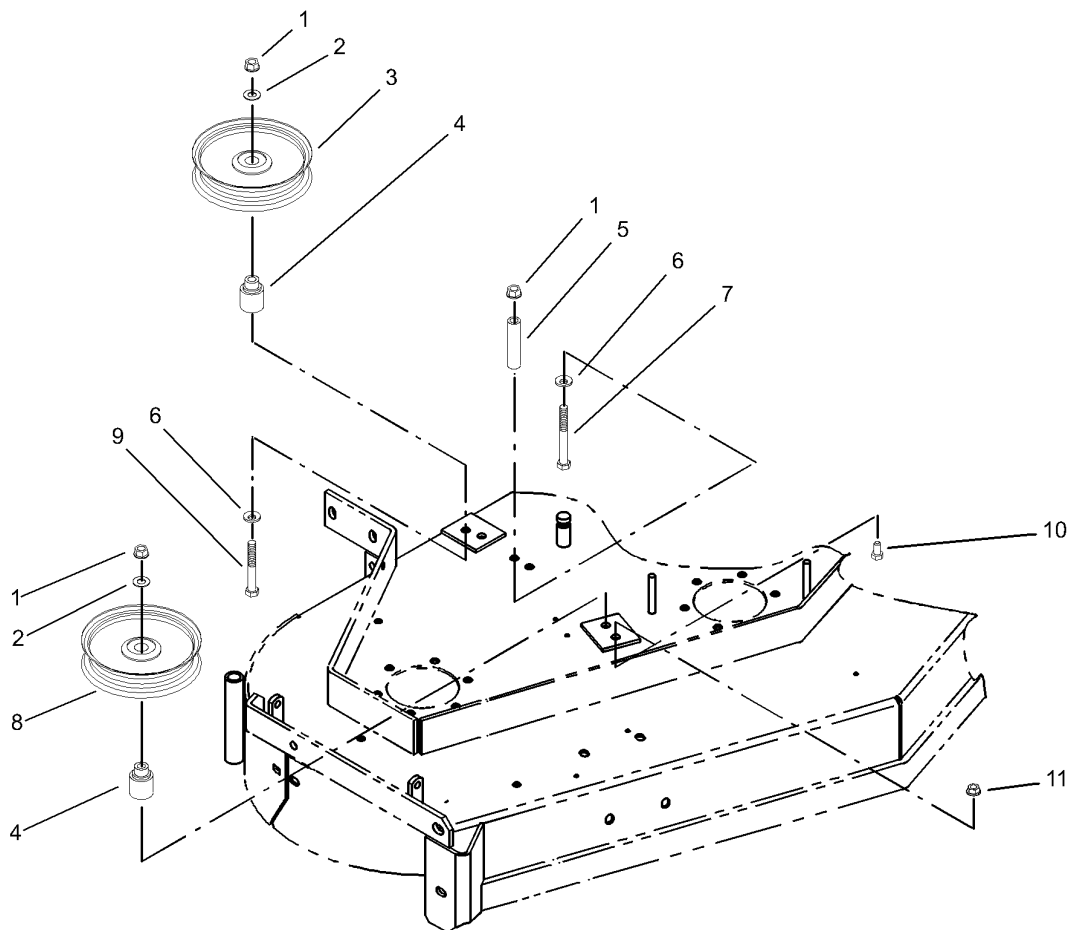

Idler Pulley Assembly


Ref	Part No.	Qty.	Description				
1	3290-357	3	Nut-HHF				
2	3256-24	2	Washer-Flat				
3	1-403186	1	Idler-Pulley, Flat				
4	1-403184	2	Bushing-Idler				
5	1-403188	1	Spacer				
6	98-5975	3	Washer-Belleville				
7	323-20	1	Screw-HH				
8	1-613098	1	Pulley-Idler				
9	323-13	2	Screw-HH				
10	322-2	7	Screw-HH				
11	32128-20	2	Nut-HF				

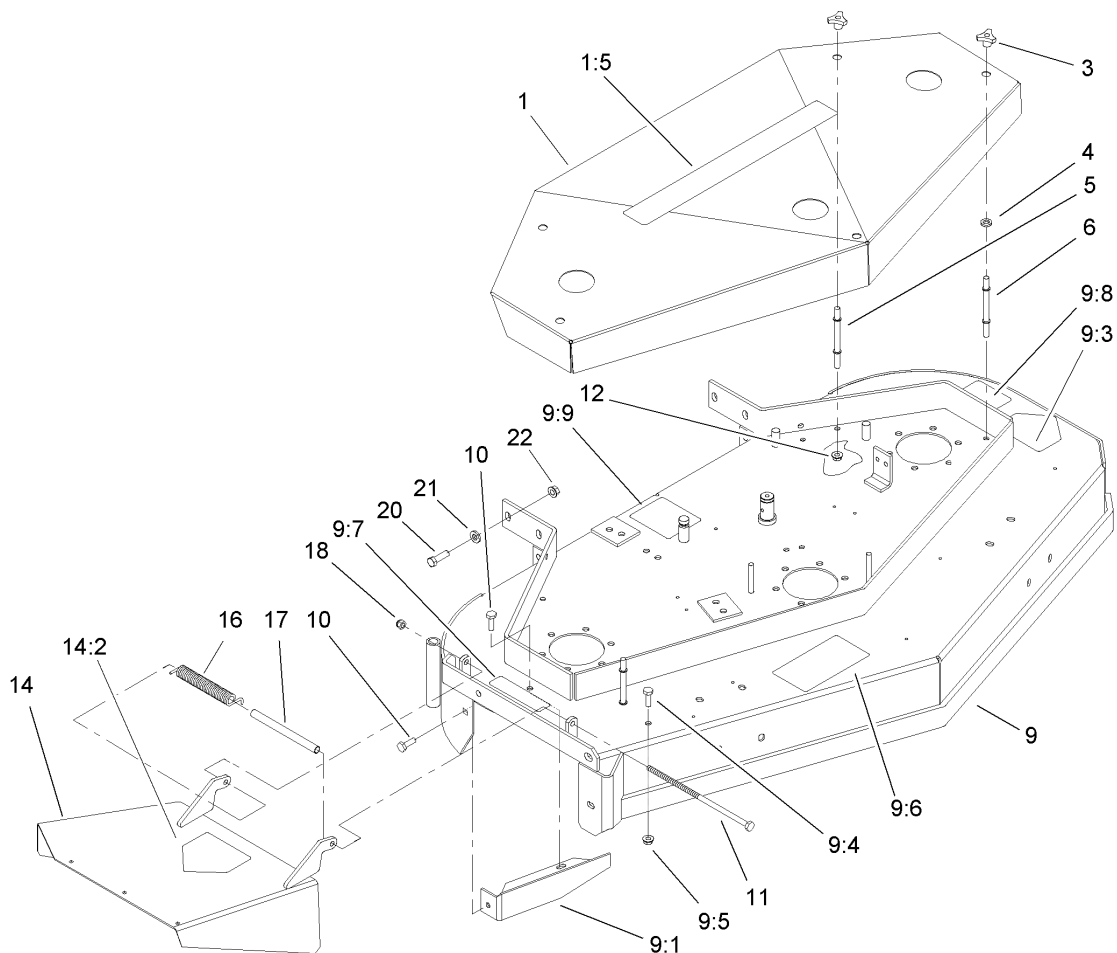

Deck Assembly


Ref	Part No.	Qty.	Description
1	1-404246	1	Shield-Belt
1:5	106-0712	1	Decal
3	106-4161	5	Knob-Handle
4	1-323417	5	Washer
5	1-303536	3	Stud-Shield, Belt (Long)
6	1-303537	2	Stud-Shield, Belt (Short)
9	1-404270	1	Deck
9:1	1-402107-01	1	Baffle-Dogleg
9:3	1-403005	1	Decal-Danger
9:4	322-2	4	Screw-HH
9:5	32128-20	4	Nut-HF
9:6	66-1340	1	Decal-Danger
9:7	67-5360	1	Decal-Danger
9:8	98-5130	1	Decal-Torque, Bolt
9:9	99-3943	1	Decal-Routing, Belt
10	322-2	7	Screw-HH
11	1-800291	1	Screw-HH
12	32128-20	11	Nut-HF
14	1-404245	1	Chute
14:2	54-9220	1	Decal-Danger
16	98-3280	1	Spring-Deflector
17	1-323636	1	Spacer-Spring
18	3296-29	1	Nut-Lock, NI
20	323-8	6	Screw-HH

Ref	Part No.	Qty.	Description
21	98-5975	6	Washer-Belleville
22	3290-357	6	Nut-HHF

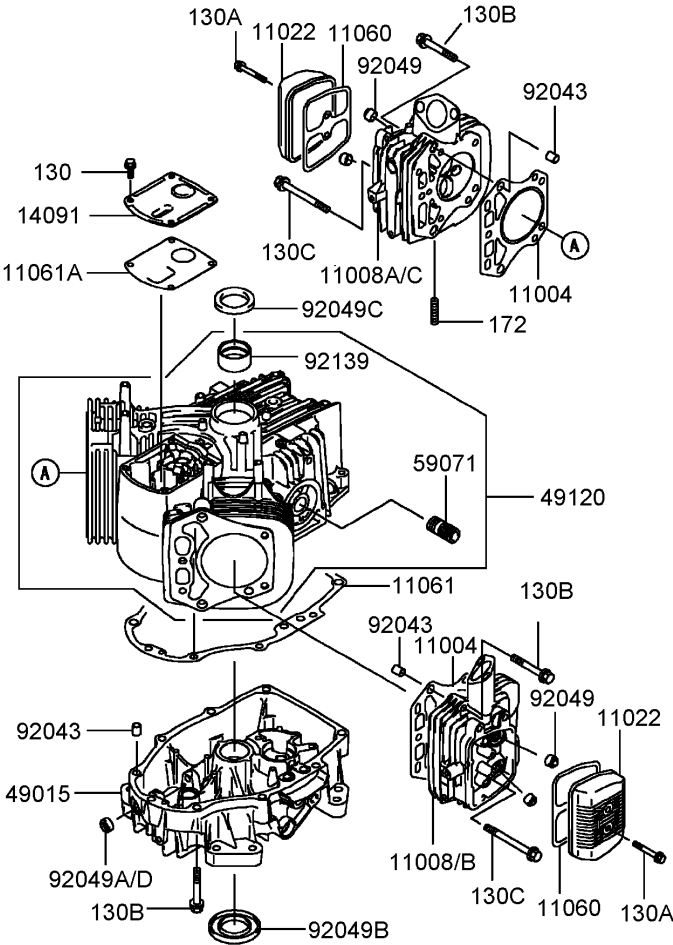


Cylinder and Crankcase Assembly
Kawasaki Model FH430V-AS25

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
④11004	11004-7008	1	Gasket-Head	④172	172G0818	1	Bolt-Stud
④11008	11008-7011	1	Head-Comp-Cylinder, No.2				
④11008A	11008-7017	1	Head-Comp-Cylinder, No.1				
④11008B	11008-7021	1	Head-Comp-Cylinder, No.2				
④11008C	11008-7022	1	Head-Comp-Cylinder, No.1				
④11022	11022-7003	1	Case-Rocker				
④11060	11060-7001	1	Gasket, Rocker Case				
④11061	11061-7007	1	Gasket, Cover-Crankcase				
④11061A	11061-7008	1	Gasket, Breather				
④14091	14091-7007	1	Cover				
④49015	49015-7032	1	Cover-Crankcase				
④49120	49120-7015	1	Crankcase-Comp				
④59071	59071-2079	1	Joint				
④92043	92043-7001	1	Pin				
④92049	92049-7001	1	Seal-Oil				
④92049A	92049-7005	1	Seal-Oil				
④92049B	92049-7015	1	Seal-Oil				
④92049C	92049-7016	1	Seal-Oil				
④92049D	92049-7019	1	Seal-Oil				
④92139	92139-7002	1	Bushing				
④130	130B0612	1	Bolt-Flanged				
④130A	130B0640	1	Bolt-Flanged				
④130B	130T0850	1	Bolt-Flanged				
④130C	130T0875	1	Bolt-Flanged				

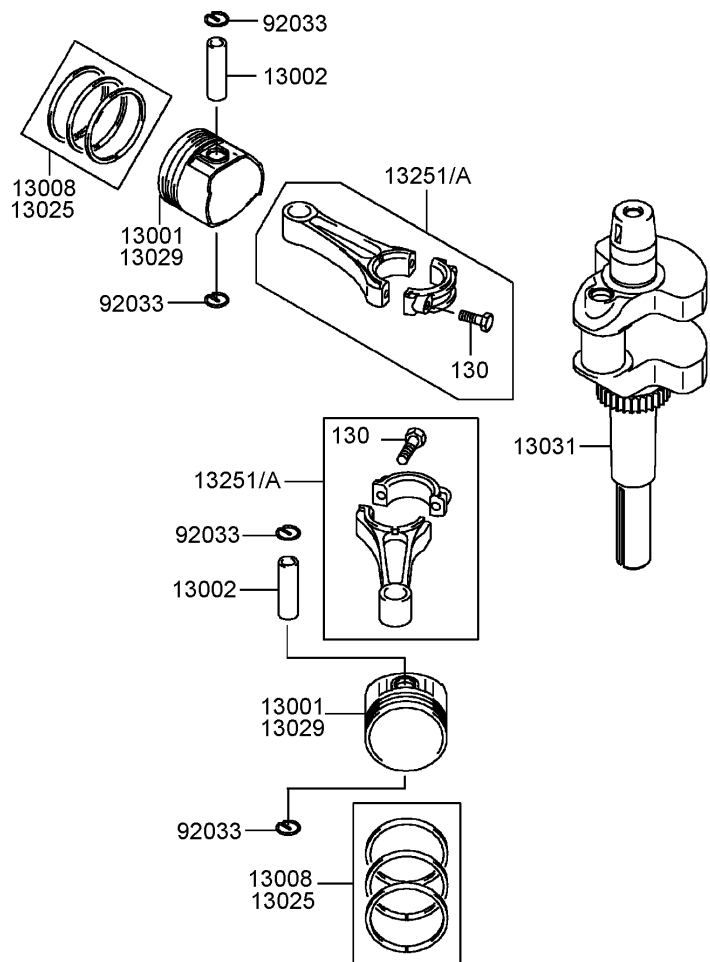


Piston and Crankshaft Assembly
Kawasaki Model FH430V-AS25

Ref	Part No.	Qty.	Description				
④ 13001	13001-7009	1	Piston-Engine				
④ 13002	13002-7001	1	Pin-Piston				
④ 13008	13008-7001	1	Ring-Set-Piston				
④ 13025	13025-7003	1	Ring-Set-Piston L, 0.50				
④ 13029	13029-7005	1	Piston-Engine L, 0.50				
④ 13031	13031-7033	1	Crankshaft-Comp				
④ 13251	13251-7007	1	Rod-ASM-Connecting				
④ 13251A	13251-7008	1	Rod-ASM-Connecting				
④ 92033	92033-7005	1	Ring-Snap				
④ 130	130G0630	1	Bolt-Flanged				

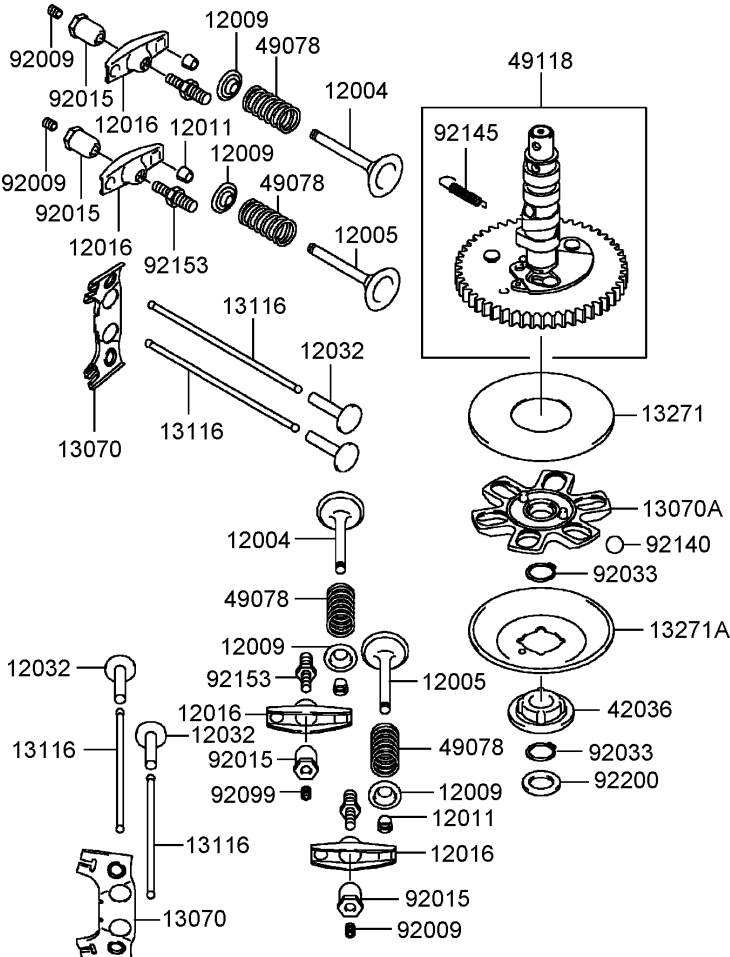


Valve and Camshaft Assembly
Kawasaki Model FH430V-AS25

Ref	Part No.	Qty.	Description				
④12004	12004-7003	1	Valve-Intake				
④12005	12005-7003	1	Valve-Exhaust				
④12009	12009-7001	1	Retainer-Valve Spring				
④12011	12011-2056	1	Collet				
④12016	12016-7001	1	Arm-Rocker				
④12032	12032-7001	1	Tappet				
④13070	13070-7001	1	Guide				
④13070A	13070-7004	1	Guide				
④13116	13116-2057	1	Rod-Push				
④13271	13271-7007	1	Plate				
④13271A	13271-7021	1	Plate, Governor				
④42036	42036-7009	1	Sleeve				
④49078	49078-7001	1	Spring-Engine Valve				
④49118	49118-7009	1	Camshaft-Comp				
④92009	92009-2341	1	Screw				
④92015	92015-2253	1	Nut				
④92033	92033-7001	1	Ring-Snap				
④92140	92140-7002	1	Ball				
④92145	92145-7001	1	Spring				
④92153	92153-7019	1	Bolt				
④92200	92200-7001	1	Washer				

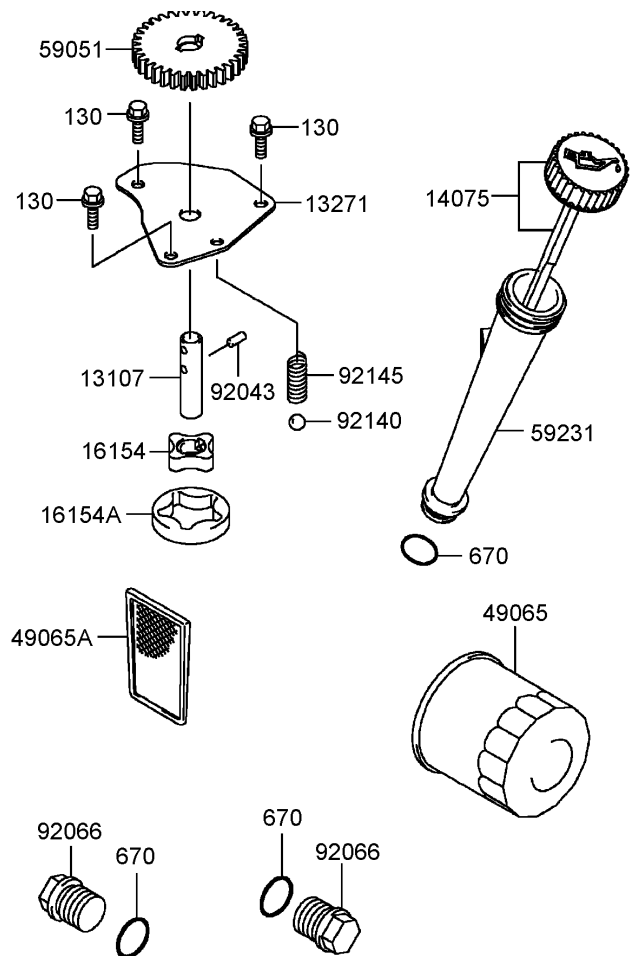


Lubrication Equipment Assembly
Kawasaki Model FH430V-AS25

Ref	Part No.	Qty.	Description				
❶13107	13107-7009	1	Shaft				
❶13271	13271-7017	1	Plate				
❶14075	14075-7009	1	Cap-ASM				
❶16154	16154-2053	1	Rotor-Pump, In				
❶16154A	16154-2054	1	Rotor-Pump, Out				
❶49065	49065-2078	1	Filter-Oil				
❶49065A	49065-7004	1	Filter-Oil				
❶59051	59051-7011	1	Gear-Spur				
❶59231	59231-7003	1	Filler				
❶92043	92043-7003	1	Pin				
❶92066	92066-7003	1	Plug				
❶92140	92140-7003	1	Ball				
❶92145	92145-7002	1	Spring				
❶130	130B0612	1	Bolt-Flanged				
❶670	670D2016	1	O Ring, 16mm				

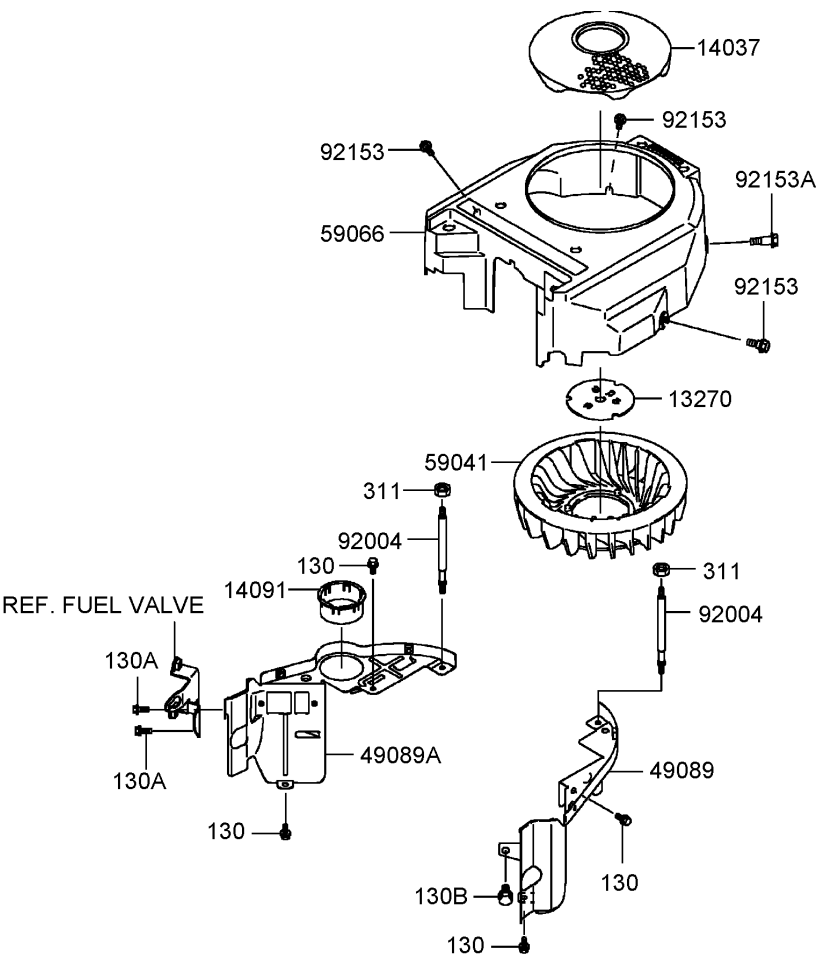


Cooling Equipment Assembly
Kawasaki Model FH430V-AS25

Ref	Part No.	Qty.	Description				
④ 13270	13270-7007	1	Plate				
④ 14037	14037-7021-9H	1	Screen				
④ 14091	14091-7009	1	Cover				
④ 49089	49089-7044	1	Shroud-Engine				
④ 49089A	49089-7045	1	Shroud-Engine				
④ 59041	59041-7010	1	Fan				
④ 59066	59066-7023	1	Housing-Fan				
④ 92004	92004-7007	1	Stud				
④ 92153	92153-7007	1	Bolt				
④ 92153A	92153-7008	1	Bolt				
④ 130	130B0612	1	Bolt-Flanged				
④ 130A	130B0616	1	Bolt-Flanged				
④ 130B	130B0816	1	Bolt-Flanged				
④ 311	311F0600	1	Nut-Hex				

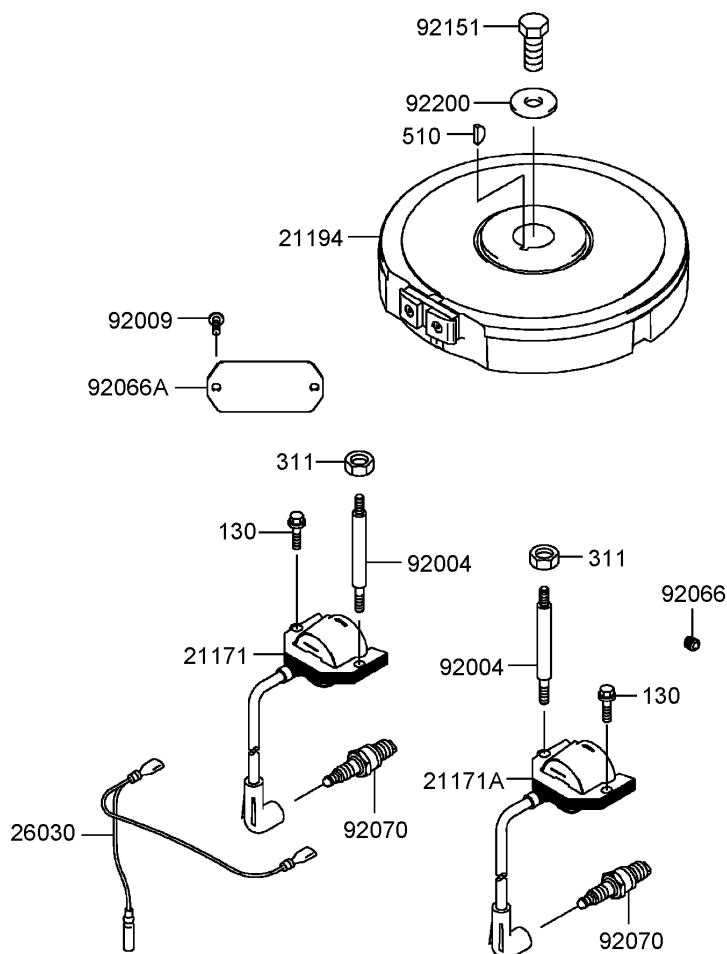

Electric Equipment Assembly Kawasaki Model FH430V-AS25


Ref	Part No.	Qty.	Description				
④21171	21171-7013	1	Coil-ASM-Ignition				
④21171A	21171-7014	1	Coil-ASM-Ignition				
④21194	21194-7013	1	Flywheel-Comp				
④26030	26030-7001	1	Harness				
④92004	92004-7008	1	Stud				
④92009	92009-2308	1	Screw				
④92066	92066-7002	1	Plug				
④92066A	92066-7005	1	Plug				
④92070	92070-7003	1	Plug-Spark, Rcj8y, Solid				
④92151	92151-2097	1	Bolt				
④92200	92200-7002	1	Washer				
④130	130B0620	1	Bolt-Flanged				
④311	311F0600	1	Nut-Hex				
④510	510A5100	1	Key-Woodruff				

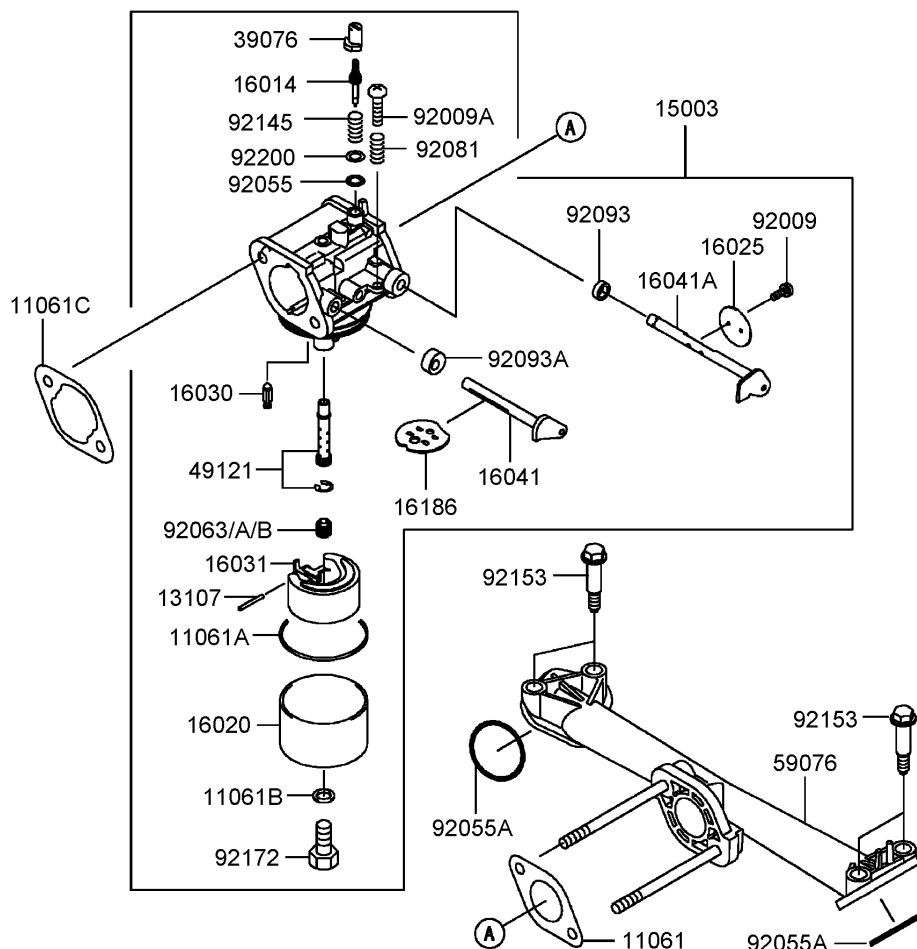

Carburetor Assembly Kawasaki Model FH430V-AS25


Ref	Part No.	Qty.	Description
④11061	11061-7004	1	Gasket, Insulator
④11061A	11061-7009	1	Gasket, Chamber
④11061B	11061-7010	1	Gasket, Screw
④11061C	11061-7018	1	Gasket, Air Cleaner
④13107	13107-7018	1	Shaft
④15003	15003-7061	1	Carburetor-ASM
④16014	16014-7002	1	Screw-Pilot Air
④16020	16020-7003	1	Chamber-Float
④16025	16025-7006	1	Valve-Throttle
④16030	16030-7003	1	Valve-Float
④16031	16031-7002	1	Float
④16041	16041-7016	1	Shaft-Carburetor, Choke
④16041A	16041-7018	1	Shaft-Carburetor, Throttle
④16186	16186-7002	1	Valve-ASM-Choke
④39076	39076-7001	1	Limiter
④49121	49121-7001	1	Nozzle-Main
④59076	59076-7005	1	Manifold-Intake
④92009	92009-2083	1	Screw
④92009A	92009-2349	1	Screw
④92055	92055-2174	1	Ring-O
④92055A	92055-7007	1	Ring-O
④92063	92063-7026	1	Jet-Main, No.88
④92063A	92063-7028	1	Jet-Main, No.85
④92063B	92063-7029	1	Jet-Main, No.82

Ref	Part No.	Qty.	Description
④92081	92081-2234	1	Spring
④92093	92093-2100	1	Seal
④92093A	92093-7003	1	Seal
④92145	92145-7015	1	Spring
④92153	92153-7009	1	Bolt
④92172	92172-7002	1	Screw
④92200	92200-7014	1	Washer

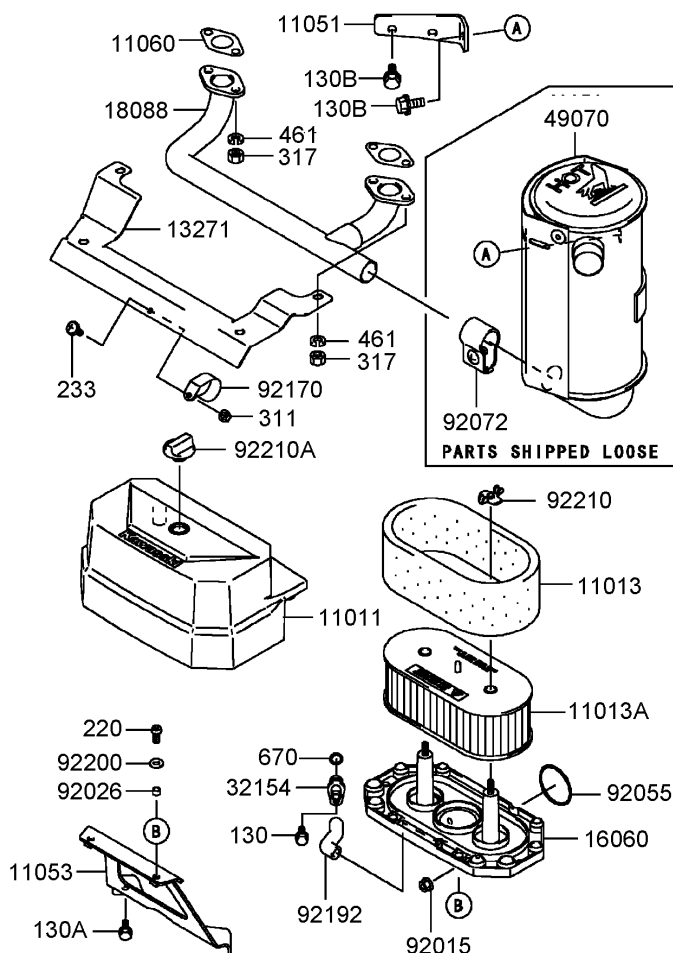


Air Filter and Muffler Assembly Kawasaki Model FH430V-AS25

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
④ 11011	11011-7035	1	Case-Air Filter	④ 220	220B0614	1	Screw-Pan-Cross
④ 11013	11013-7025	1	Element-Air Filter	④ 233	233B0416	1	Screw-Pan, Wp
④ 11013A	11013-7031	1	Element-Air Filter	④ 311	311B0400	1	Nut-Hex
④ 11051	11051-7005-9H	1	Bracket	④ 317	317R0800	1	Nut-Hex-Small
④ 11053	11053-7022	1	Bracket	④ 461	461F0800	1	Washer-Spring
④ 11060	11060-7021	1	Gasket, Muffler	④ 670	670B2010	1	O Ring, 10mm
④ 13271	13271-7022	1	Plate				
④ 16060	16060-7016	1	Pipe-Intake				
④ 18088	18088-7001	1	Pipe-Exhaust				
④ 32154	32154-7006	1	Pipe				
④ 49070	49070-7015	1	Muffler-Comp				
④ 92015	92015-1193	1	Nut				
④ 92026	92026-7001	1	Spacer				
④ 92055	92055-7015	1	O-Ring				
④ 92072	92072-7008	1	Band				
④ 92170	92170-7002	1	Clamp				
④ 92192	92192-7010	1	Tube				
④ 92200	92200-2070	1	Washer				
④ 92210	92210-7004	1	Nut				
④ 92210A	92210-7019	1	Nut				
④ 130	130B0610	1	Bolt-Flanged				
④ 130A	130B0612	1	Bolt-Flanged				
④ 130B	130B0816	1	Bolt-Flanged				

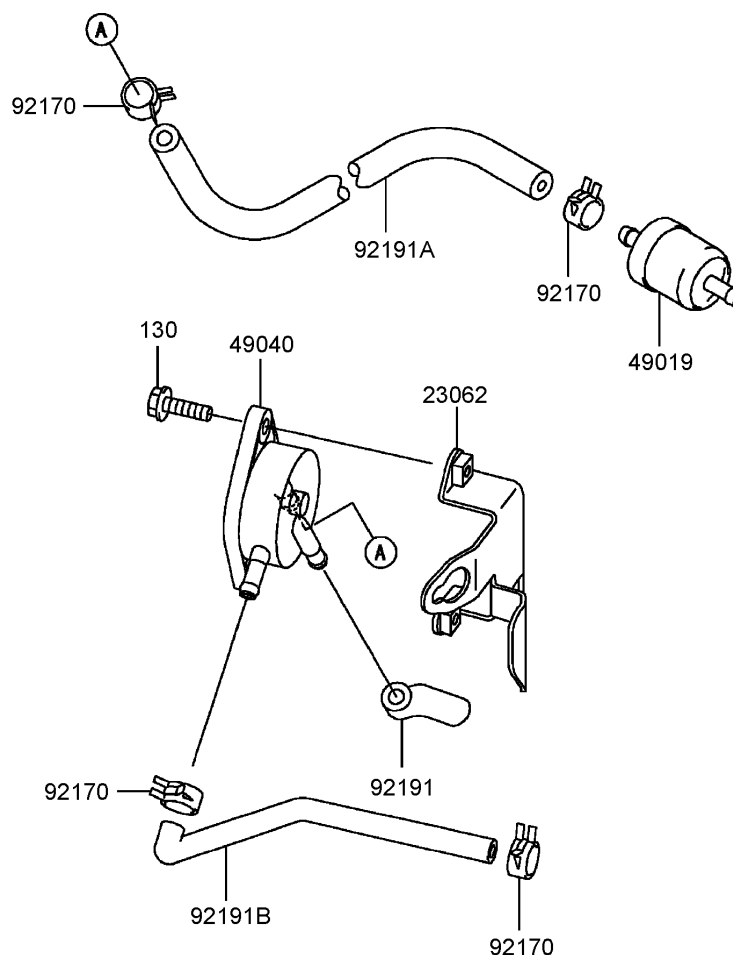

Fuel Tank and Fuel Valve Assembly Kawasaki Model FH430V-AS25

Ref	Part No.	Qty.	Description				
④23062	23062-7004-9H	1	Bracket-Comp				
④49019	49019-7001	1	Filter-Fuel				
④49040	49040-7001	1	Pump-Fuel				
④92170	92170-2088	1	Clamp				
④92191	92191-7002	1	Tube				
④92191A	92191-7003	1	Tube				
④92191B	92191-7004	1	Tube				
④130	130B0620	1	Bolt-Flanged				

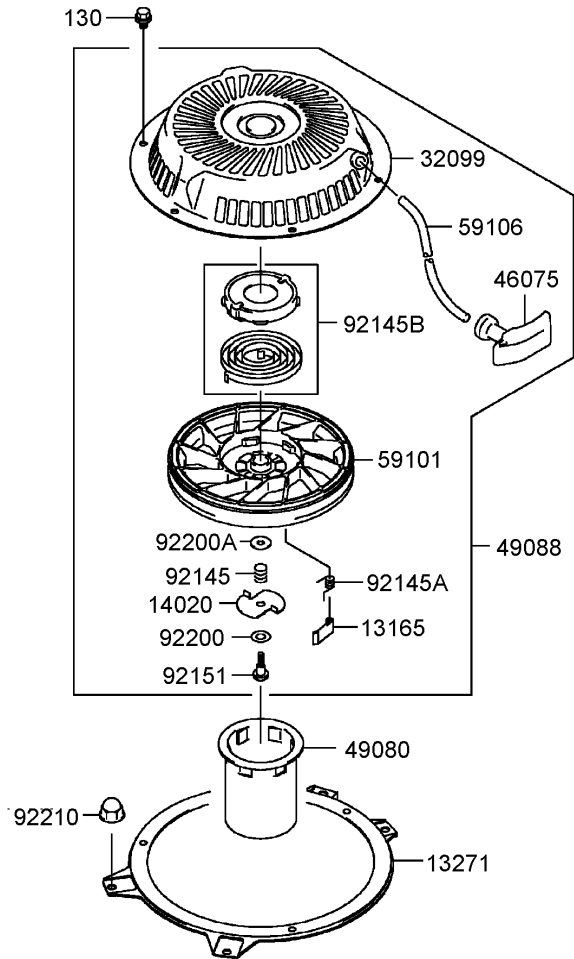

Starter Assembly
Kawasaki Model FH430V-AS25

Ref	Part No.	Qty.	Description				
④ 13165	13165-7001	1	Pawl-Recoil, Starter				
④ 13271	13271-7003-9H	1	Plate				
④ 14020	14020-7001	1	Retainer				
④ 32099	32099-7002	1	Case-Recoil, Starter				
④ 46075	46075-7001	1	Grip-Recoil, Starter				
④ 49080	49080-7001	1	Pulley-Starting				
④ 49088	49088-7013	1	Starter-Recoil				
④ 59101	59101-7001	1	Reel- Recoil, Starter				
④ 59106	59106-7001	1	Rope				
④ 92145	92145-7006	1	Spring				
④ 92145A	92145-7007	1	Spring				
④ 92145B	92145-7008	1	Spring				
④ 92151	92151-7008	1	Bolt				
④ 92200	92200-7004	1	Washer				
④ 92200A	92200-7005	1	Washer				
④ 92210	92210-0003	1	Nut				
④ 130	130B0608	1	Bolt-Flanged				



Ref	Part No.	Qty.	Description				
④56033	56033-7001	1	Label-Manual				
④56070	56070-7001	1	Label-Warning				
④56080	56080-2077	1	Label-Brand				
④56080A	56080-7024	1	Label-Brand				

