 




MODEL NO. 38035-5000001 & UP

PARTS CATALOG

3521 SNOWTHROWER

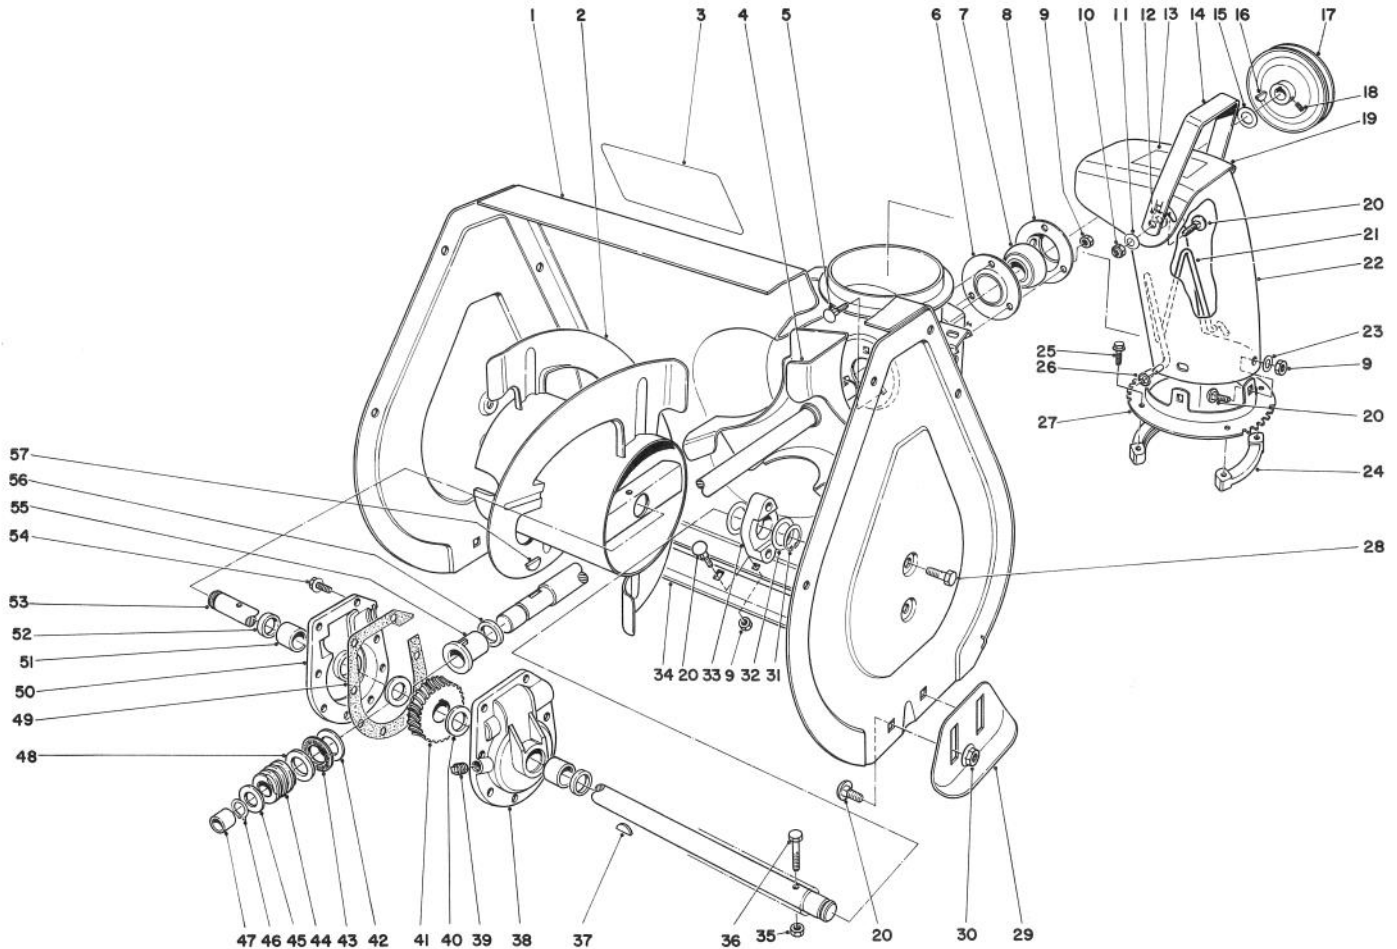


AUGER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	43-7320	Auger Housing	1
2	39-1180	Auger R.H.	1
*	39-1190	Auger L.H.	1
3	29-6350	Decal — Auger Warning	1
4	37-6990	Shaft & Impeller	1
5	3230-10	Carriage Bolt	3
6	26-6110	Bearing Flange Front	1
7	26-6100	Ball Bearing	1
8	26-6120	Bearing Flange Rear	1
9	3296-29	Locknut	11
10	32152-1	Locknut	2
11	3290-340	Washer Belleville	2
12	20-4320	Washer Rubber	2
13	53-7660	Decal — Discharge	1
14	37-8930	Handle Deflector	1
15	3-0737	Washer	1

Ref. No.	Part No.	Description	No. Used
16	3257-5	Key	1
17	37-6890	Pulley	1
18	3242-4	Set Screw	2
19	11-9359	Deflector (Incl. Ref. #13)	1
20	3230-1	Carriage Bolt	14
21	53-7590	Wire — Chute	1
22	53-7600	Chute — Discharge	1
23	3256-23	Washer	3
24	37-6490	Retainer — Chute Ring	3
25	27-0220	Self Tapping Screw	6
26	3290-326	Push Nut	1
27	37-8940	Chute Ring	1
28	32144-11	Self Tapping Screw	4
29	40-8160	Skid	2
30	32128-20	Flange Nut	4
31	32151-36	Snap Ring	2

 *Not Illustrated

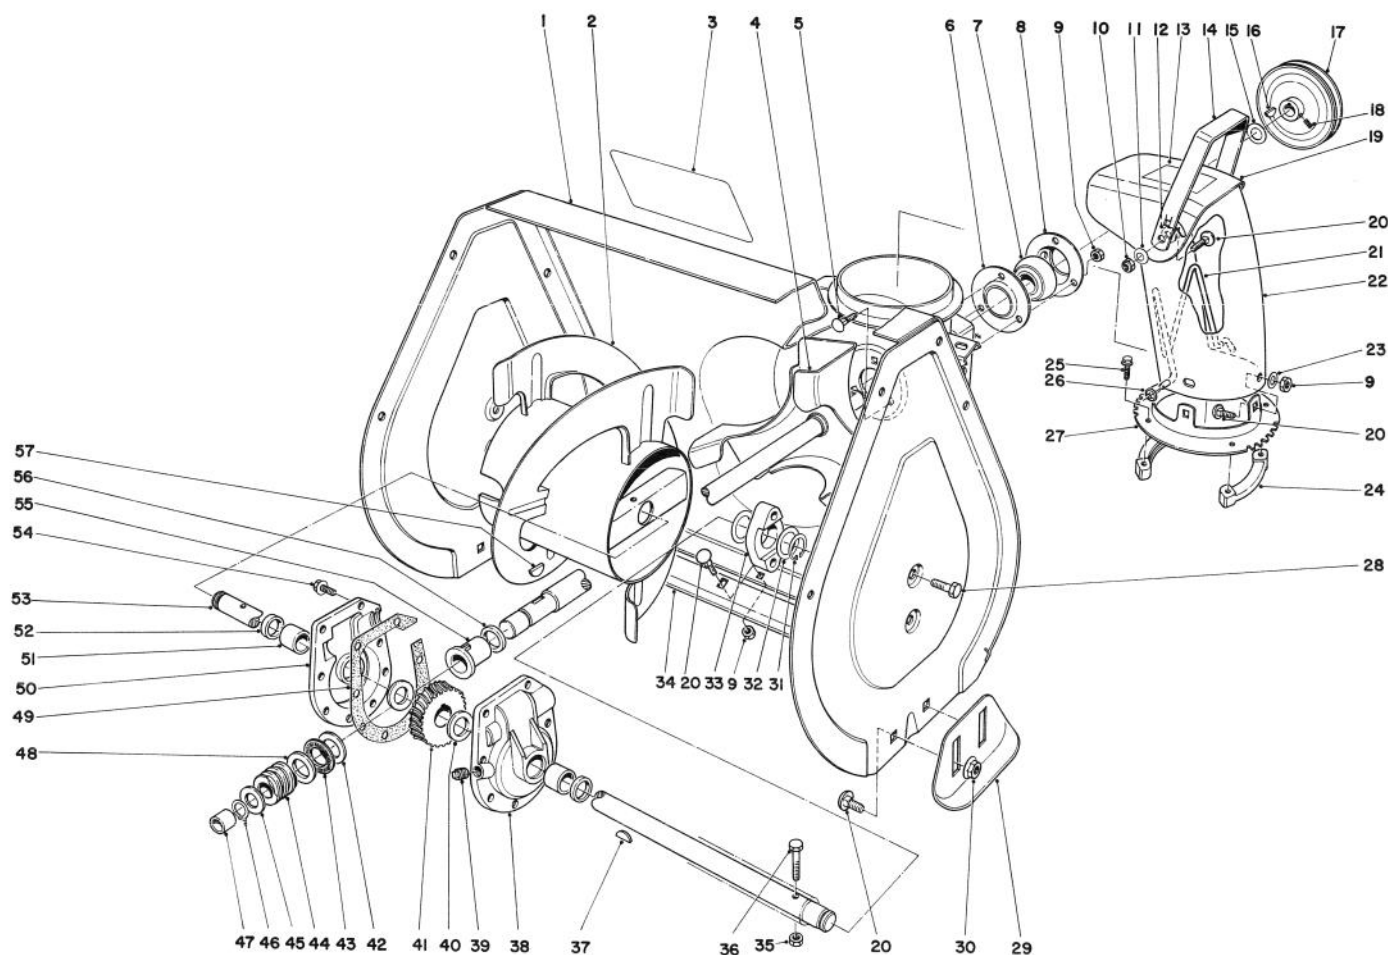


AUGER ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
32	5-1550	Thrust Washer	4
33	37-6550	Auger Bearing	2
34	39-1550	Scraper Blade	1
35	32152-4	Locknut	2
36	321-10	Capscrew	2
37	3257-33	Woodruff Key	1
38	37-8860	Gear Case L.H. (Incl. Ref. #51 & 52)	1
39	281-1	Pipe Plug	1
40	252-71	Thrust Bearing	2
41	23-9050	Gear	1
42	257-3	Thrust Washer	1
43	252-76	Needle Thrust Bearing	1
44	5-7170	Worm	1
45	3-8664	Washer	1

Ref. No.	Part No.	Description	No. Used
46	32120-72	Retaining Ring	1
47	256-32	Bushing	1
48	252-80	Thrust Washer	1
49	51-0460	Gasket	1
50	37-8850	Gear Case R.H. (Incl. Ref. #51 & 52)	1
51	256-237	Bushing	2
52	7-0045	Oil Seal	2
53	37-6800	Shaft — Auger	1
54	32144-41	Self Tapping Screw	8
55	37-6560	Bushing — Input	1
56	237-87	Seal	1
57	3257-23	Key — Woodruff	1
*	37-6960	Gear Case Assy. Complete	1

 *Not Illustrated

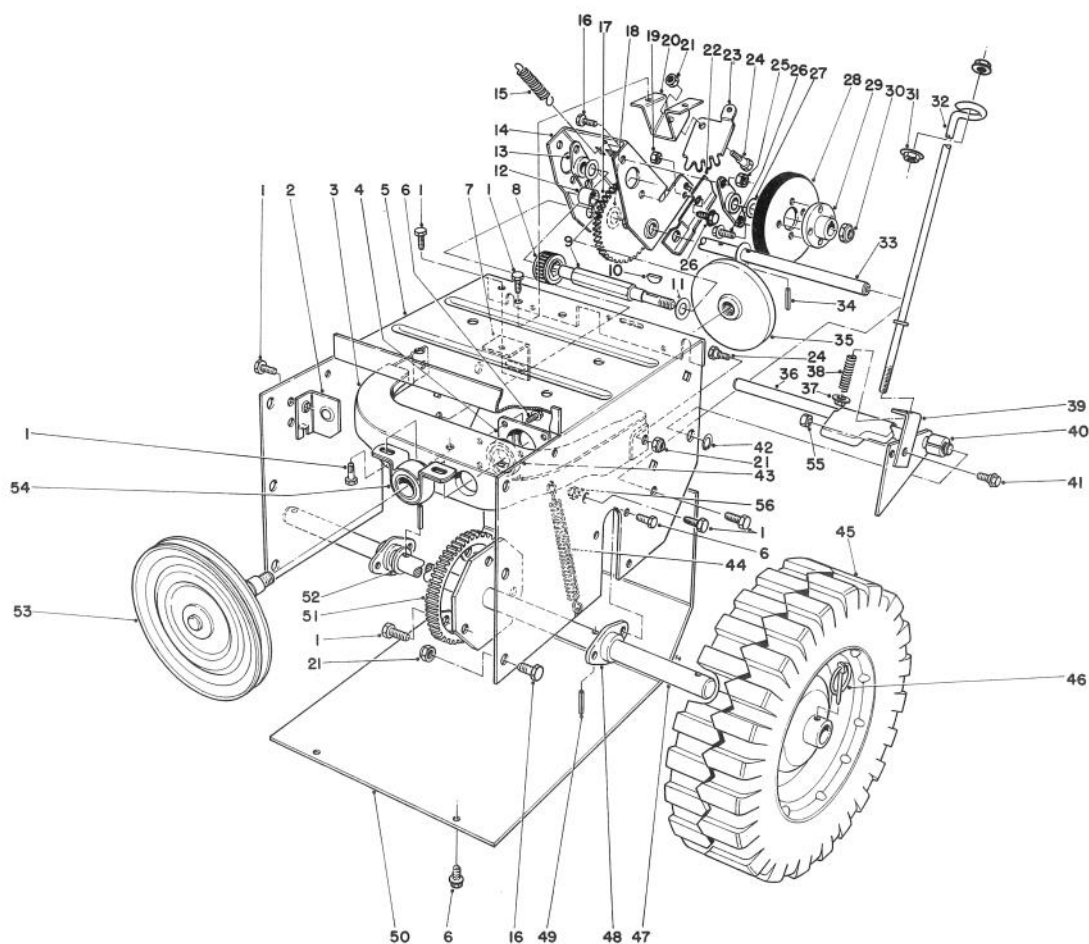


TRACTION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-11	Hex Self Tapping Screw	12
2	37-9060	Mount — Clutch Rod Front	1
3	37-6740	Friction Plate Frame	1
4	37-6730	Cup — Bearing	1
5	37-8900	Traction Frame	1
6	12-3270	Hex Tapping Screw	12
7	37-9070	Mount — Clutch Rod Rear	1
8	37-6500	Sliding Gear	1
9	37-6780	Hex Shaft	1
10	3257-24	Key	1
11	5-7570	Thrust Washer	2
12	256-86	Bushing	1
13	20-1620	Bearing — Friction Wheel	2
14	39-1230	Bracket — Sliding	1
15	37-8880	Spring — Traction Disengage	1
16	322-2	Capscrew	10
17	37-9160	Intermediate Gear & Bushing (Incl. Ref. #12)	1
18	10-9280	Thrust Washer	2
19	3296-16	Locknut	1
20	37-8790	Mount — Quadrant Gear	1
21	3296-29	Locknut	9
22	39-1250	Cam Receiver	1
23	37-8800	Quadrant Gear	1
24	37-8770	Shoulder Bolt	3
25	32152-1	Locknut	4
26	11-9760	Self Tapping Screw	5
27	36-4790	Thrust Washer	2
28	37-6570	Friction Wheel	1
29	39-1520	Hub — Friction Wheel Mount	1

Ref. No.	Part No.	Description	No. Used
30	3296-48	Locknut	1
31	32128-33	Flange Locknut	2
32	39-3060	Lower Traction Rod	1
33	37-6760	Shaft — Pivot	1
34	32121-45	Roll Pin	2
35	38-0800	Friction Plate	1
36	43-7310	Traction Engagement Assy.	1
37	32128-10	Flange Locknut	1
38	38-4520	Spring — Compression	1
39	38-4490	Bracket — Traction	1
40	40-9680	Spacer	1
41	40-8350	Shoulder Screw	1
42	32151-61	Retaining Ring	1
43	38-7820	Bearing	1
44	37-8870	Spring — Friction Plate Frame	1
45	38-1400	Wheel Assembly	2
46	3290-243	Pin — Klik	2
47	37-6970	Axle Shaft	1
48	37-6850	Axle Bearing	2
49	32121-31	Roll Pin	2
50	37-6830	Bottom Cover	1
51	37-6520	Axle Gear	1
52	3-8664	Thrust Washer	2
53	40-8190	Pulley & Shaft	1
54	38-4470	Bushing Assembly	1
55	3296-42	Nut — Lock	1
56	32111-8	Nut — Cap	1
*	37-7010	Tire Chain Kit (Optional)	1
*	11-5529	Loose Parts	1

 
*Not Illustrated

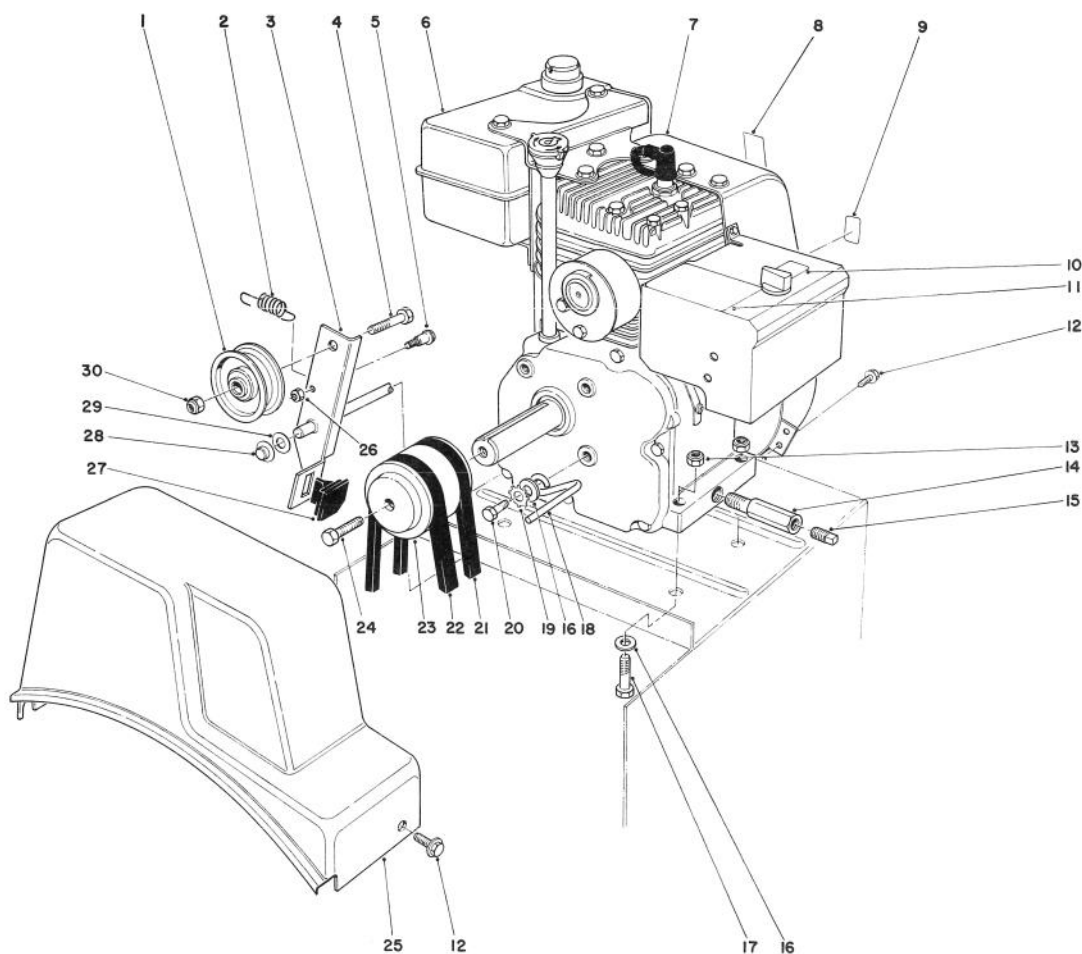

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3-4244	Idler Pulley	1
2	53-7570	Spring — Auger Disengage	1
3	8-8649	Auger Clutch Rod Assembly (Incl. Ref. #27)	1
4	323-29	Capscrew	1
5	42-3560	Bolt — Shoulder	1
6	52-2680	Gas Tank w/Cap	1
7	221-779	Engine	1
8	39-3860	Decal — Primer	1
9	37-8890	Decal — Throttle	1
10	39-3840	Decal — Choke	1
11	29-6390	Decal — Hot Surface Warning	1
12	12-3270	Self Tapping Screw	3
13	3296-29	Locknut	4
14	49-3040	Drain Tube	1
15	281-7	Pipe Plug	1


Ref. No.	Part No.	Description	No. Used
16	3256-23	Washer	5
17	322-7	Capscrew	4
18	37-8990	Belt Retainer	1
19	3255-8	Lockwasher	1
20	3210-3	Capscrew	1
21	37-9090	V-Belt — Traction	1
22	37-9080	V-Belt — Auger	1
23	43-7370	Engine Pulley	1
24	43-7290	Screw — Special	1
25	37-6900	Belt Cover	1
26	3296-42	Locknut	1
27	40-8140	Molded Brake	1
28	3290-320	Nut — Push On	1
29	3256-24	Flat Washer	1
30	32152-2	Locknut	1

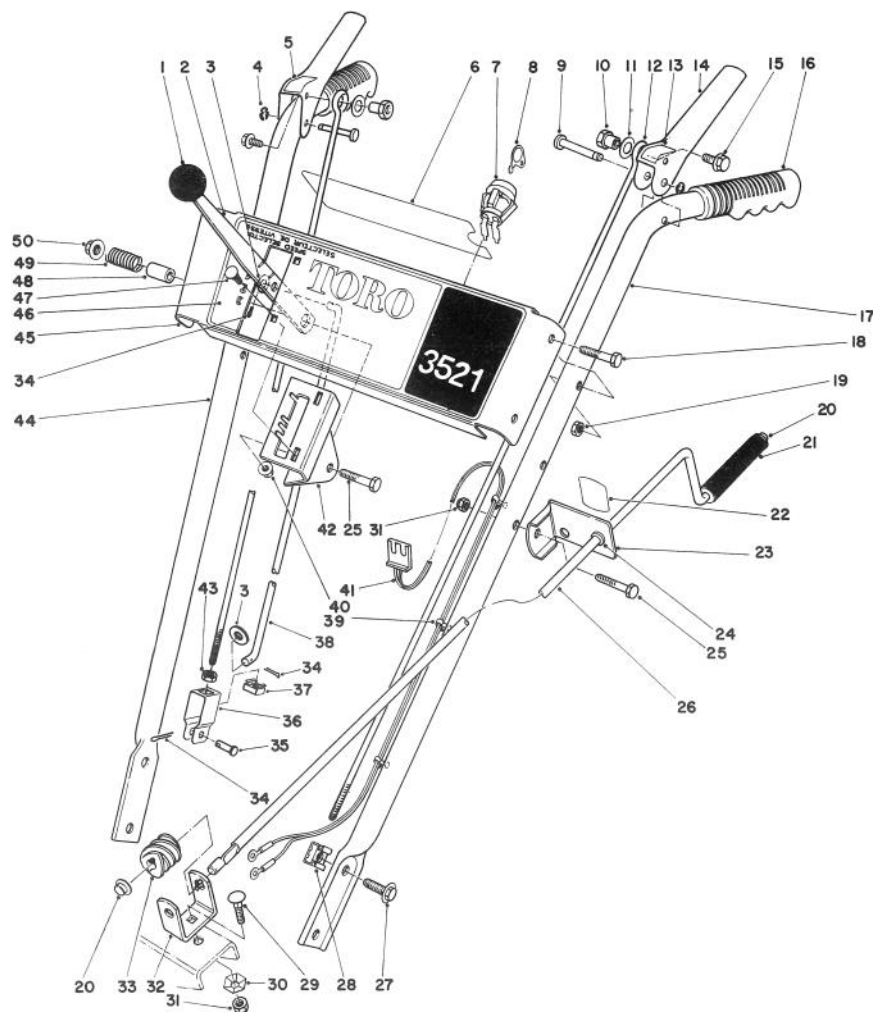 

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	233-21	Knob	1
2	37-8820	Selector — Speed	1
3	3256-23	Washer	2
4	32151-73	Ring — Clip	2
5	52-5650	Decal — Auger Drive	1
6	37-9140	Decal — Escutcheon Back	1
7	40-5940	Switch — On-Off	1
8	33-2010	Key — Ignition	1
9	52-5600	Pin — Control Lever	2
10	47-4990	Post — Linkage Mounting	2
11	3256-24	Washer	2
12	52-5590	Link — Upper	2
13	52-5630	Decal — Wheel Drive	1
14	52-5580	Handle — Control	2
15	3234-13	Screw — Hex Flange Hd.	2
16	37-9110	Grip — Handle	2
17	52-5570	Handle — Left	1
18	321-37	Screw — Hex Hd.	4
19	32152-4	Nut — Lock	4
20	3290-320	Nut — Push	2
21	40-8230	Grip — Rod	1
22	29-6370	Decal — Chute Direction	1
23	6-3069	Bracket — Chute Control (Incl. Ref. #22 & 24)	1
24	256-249	Nyliner	1
25	322-7	Screw — Hex Hd.	2

Ref. No.	Part No.	Description	No. Used
26	40-8270	Rod — Chute Control	1
27	3234-14	Screw — Hex Flange Hd.	4
28	3290-196	Nut — Retainer	4
29	3230-2	Bolt — Carriage	1
30	3290-238	Washer — Pyramidal	1
31	3296-29	Nut — Lock	2
32	40-8280	Bracket — Chute Worm	1
33	40-8250	Gear — Worm	1
34	3272-4	Pin — Cotter	3
35	283-3	Pin — Clevis	1
36	39-3080	Clevis	1
37	32115-5	Nut — Retainer	1
38	39-7570	Rod — Speed Selector	1
39	17-9120	Mount — Wire	3
40	32128-32	Nut — Flange Lock	2
41	43-7390	Wire Harness Assembly (Incl. Ref. #39)	1
42	39-1280	Mount — Speed Selector	1
43	3218-1	Nut — Jam	1
44	52-5560	Handle — Right	1
45	43-7360	Panel — Escutcheon	1
46	53-7630	Decal — 3521	1
47	3229-22	Bolt — Carriage	2
48	40-8130	Spacer — Speed Selector	1
49	37-9150	Spring	1
50	32128-13	Nut — Flange Lock	1

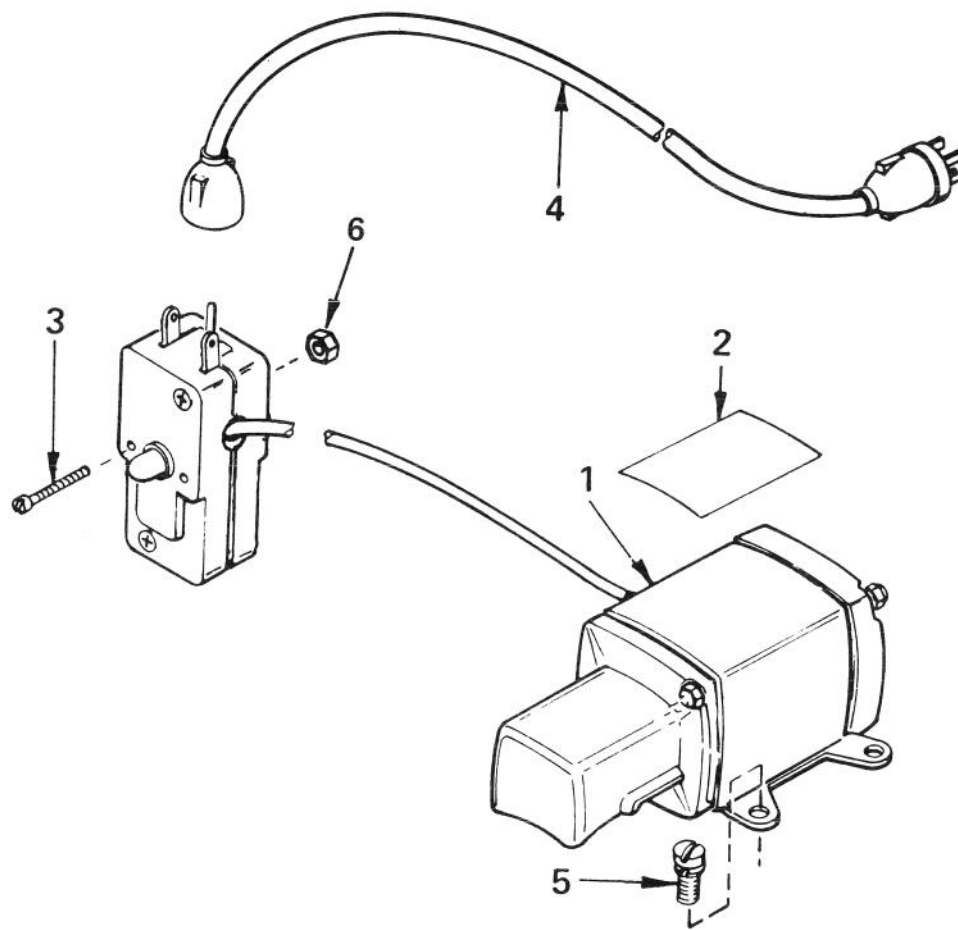 


STARTER MOTOR KIT MODEL 23-3790 (Optional)

Ref. No.	Part No.	Description	No. Used
1†	33517A	Motor, Cranking (CSA Approved) (Incl. Ref. #2 thru 6)	1
2†	34161	Decal	1
3†	650741	Screw, Hex Hd. Self Tapping	2

Ref. No.	Part No.	Description	No. Used
4†	32450A	Cord, Extension	1
5†	650759	Screw, Hex Washer Hd.	3
6†	650742	Nut & Lockwasher	2

 
† Note: Obtain individual replacement parts from your local Tecumseh Dealer.

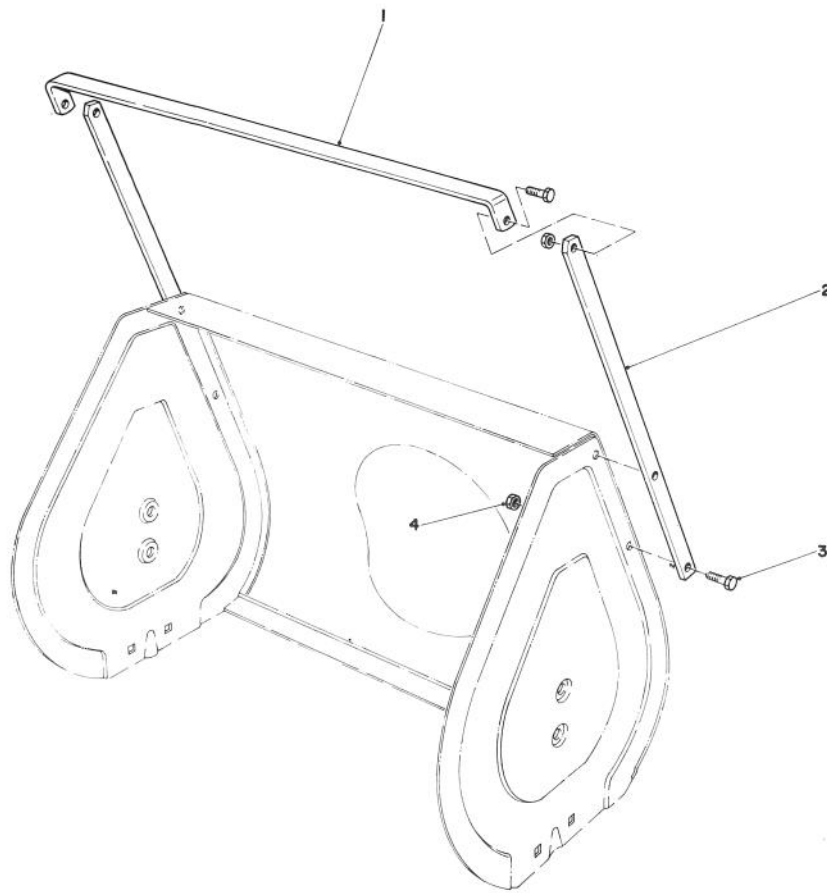

DRIFT BREAKER KIT NO. 37-7020 (Optional)

Ref. No.	Part No.	Description	No. Used
1	38-0760	Drift Breaker — Top	1
2	38-0750	Drift Breaker — Side	2

Ref. No.	Part No.	Description	No. Used
3	322-4	Capscrew	6
4	3296-29	Locknut	6

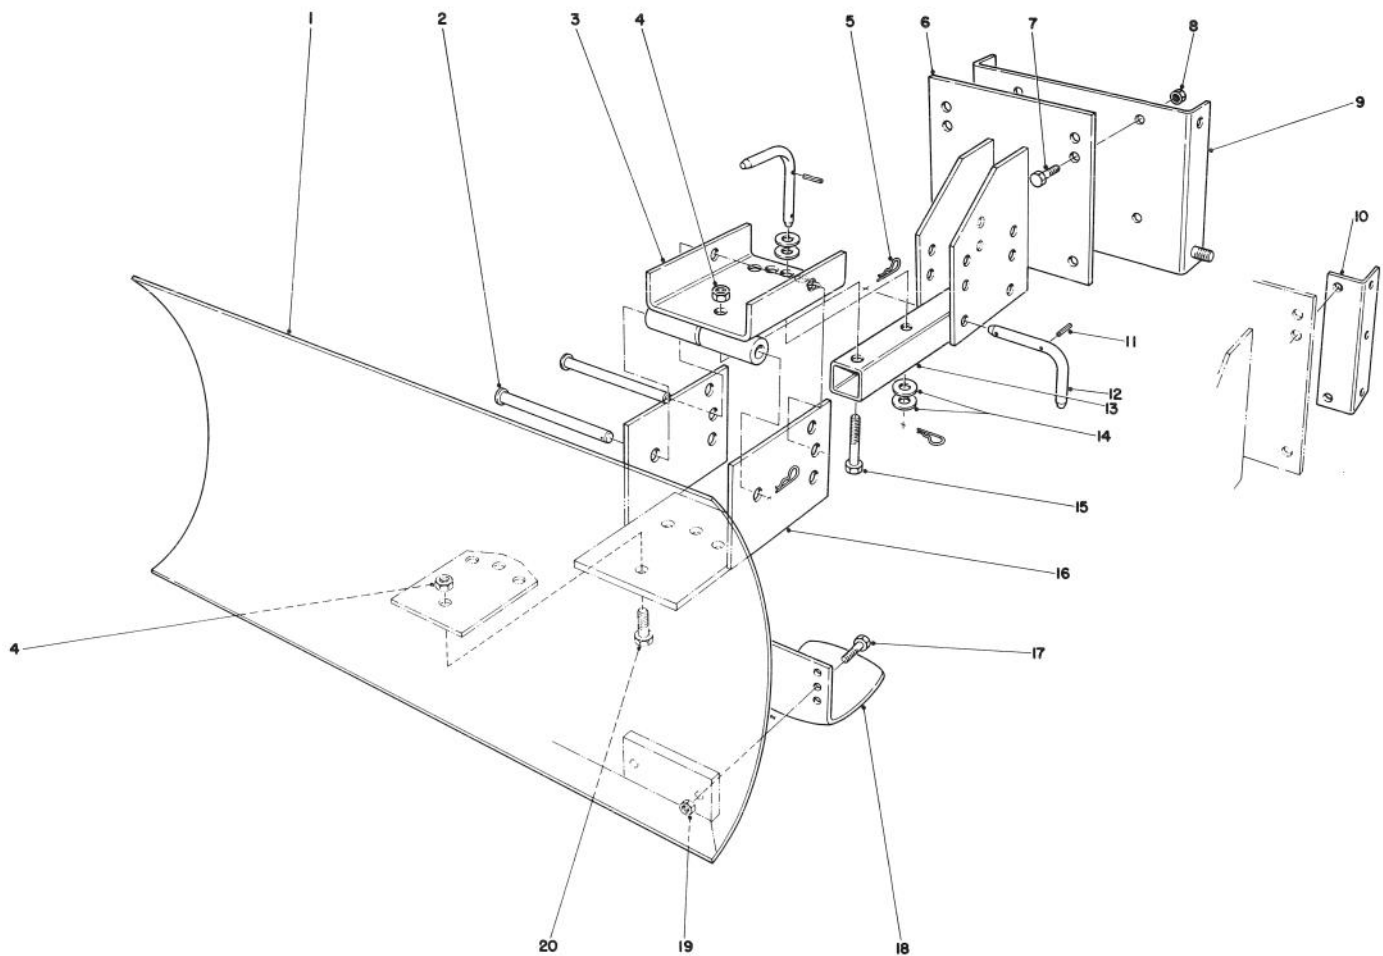 


GRADER BLADE ASSEMBLY MODEL 59099 (Optional)

Ref. No.	Part No.	Description	No. Used
1	7-4374	Blade	1
2	283-38	Clevis Pin	2
3	20-5090	Swivel Bracket	1
4	32152-3	Locknut	5
5	3290-322	Hairpin Cotter	5
6	20-5170	Mounting Plate	1
7	323-6	Capscrew	4
8	32152-2	Locknut	4
9	22-4920	Mounting Plate Bracket (used with 826 and 1132 only)	1
10	39-7850	Mounting Rail (Used with 3521, 421 & 521 Units only)	2

Ref. No.	Part No.	Description	No. Used
11	32121-45	Roll Pin	3
12	20-5210	Pivot Pin (Incl. Ref. #11)	3
13	20-5140	Tongue Blade	1
14	3256-5	Flat Washer	4
15	325-11	Capscrew	1
16	20-5130	Blade Adjustment	1
17	322-6	Capscrew	4
18	7-1023	Skid	2
19	32152-1	Locknut	4
20	325-5	Capscrew	4
*	20-9950	Air Cleaner Kit (Tecumseh)	1

 *Not Illustrated

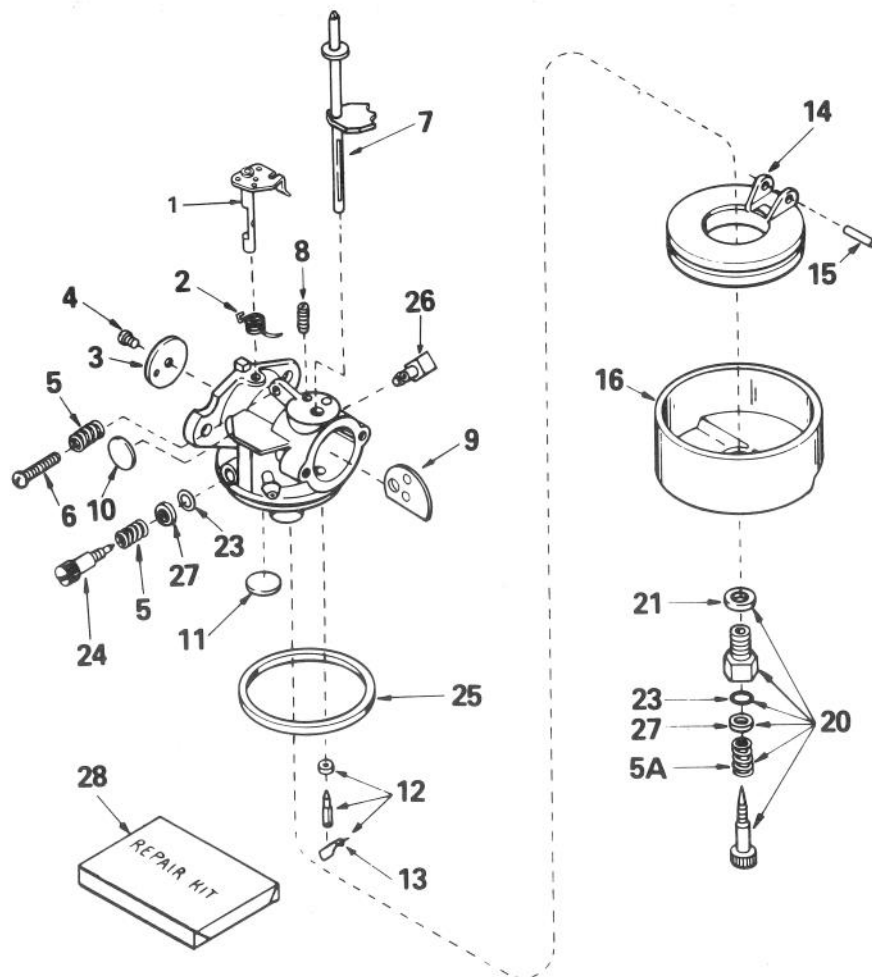


CARBURETOR NO. 632378

Ref. No.	Part No.	Description	No. Used
1	631615	Shaft & Lever Assy. — Throttle	1
2	631767	Spring — Throttle Return	1
3	631036	Shutter — Throttle	1
4	650506	Screw — Throttle Shutter	1
5	630766	Spring — Regulating Screw	2
5A	630738	Spring — Main Adjustment Screw	1
6	650417	Screw — Idle Regulating	1
7	632373	Shaft — Choke	1
8	630735	Spring — Choke Positioning	1
9	632372	Shutter — Choke	1
10	*630748	Plug — Welch	1
11	*631027	Plug — Welch	1
12	*631021	Inlet Needle — Seat & Clip Assy. (Incl. Ref. #13)	1

Ref. No.	Part No.	Description	No. Used
13	631022	Clip — Inlet Needle	1
14	632019	Float — Carburetor	1
15	*631024	Shaft — Float	1
16	631867	Bowl — Float	1
20	*31839	Adjustment Screw Assy. — Main (Incl. Ref. #5A, 21, 23 & 27)	1
21	27110	Gasket — Bowl-to-Body	1
23	*630740	O-Ring — Adjustment Screw	2
24	*631078	Screw — Idle Adjustment	1
25	*631028	Gasket — Bowl-to-Body	1
26	631775	Fitting — Fuel Inlet	1
27	630739	Washer	2
28	31840	Repair Kit	1

*Indicates parts included in Repair Kit Ref. #28.

 ENGINE TECUMSEH MODEL H35-45590P

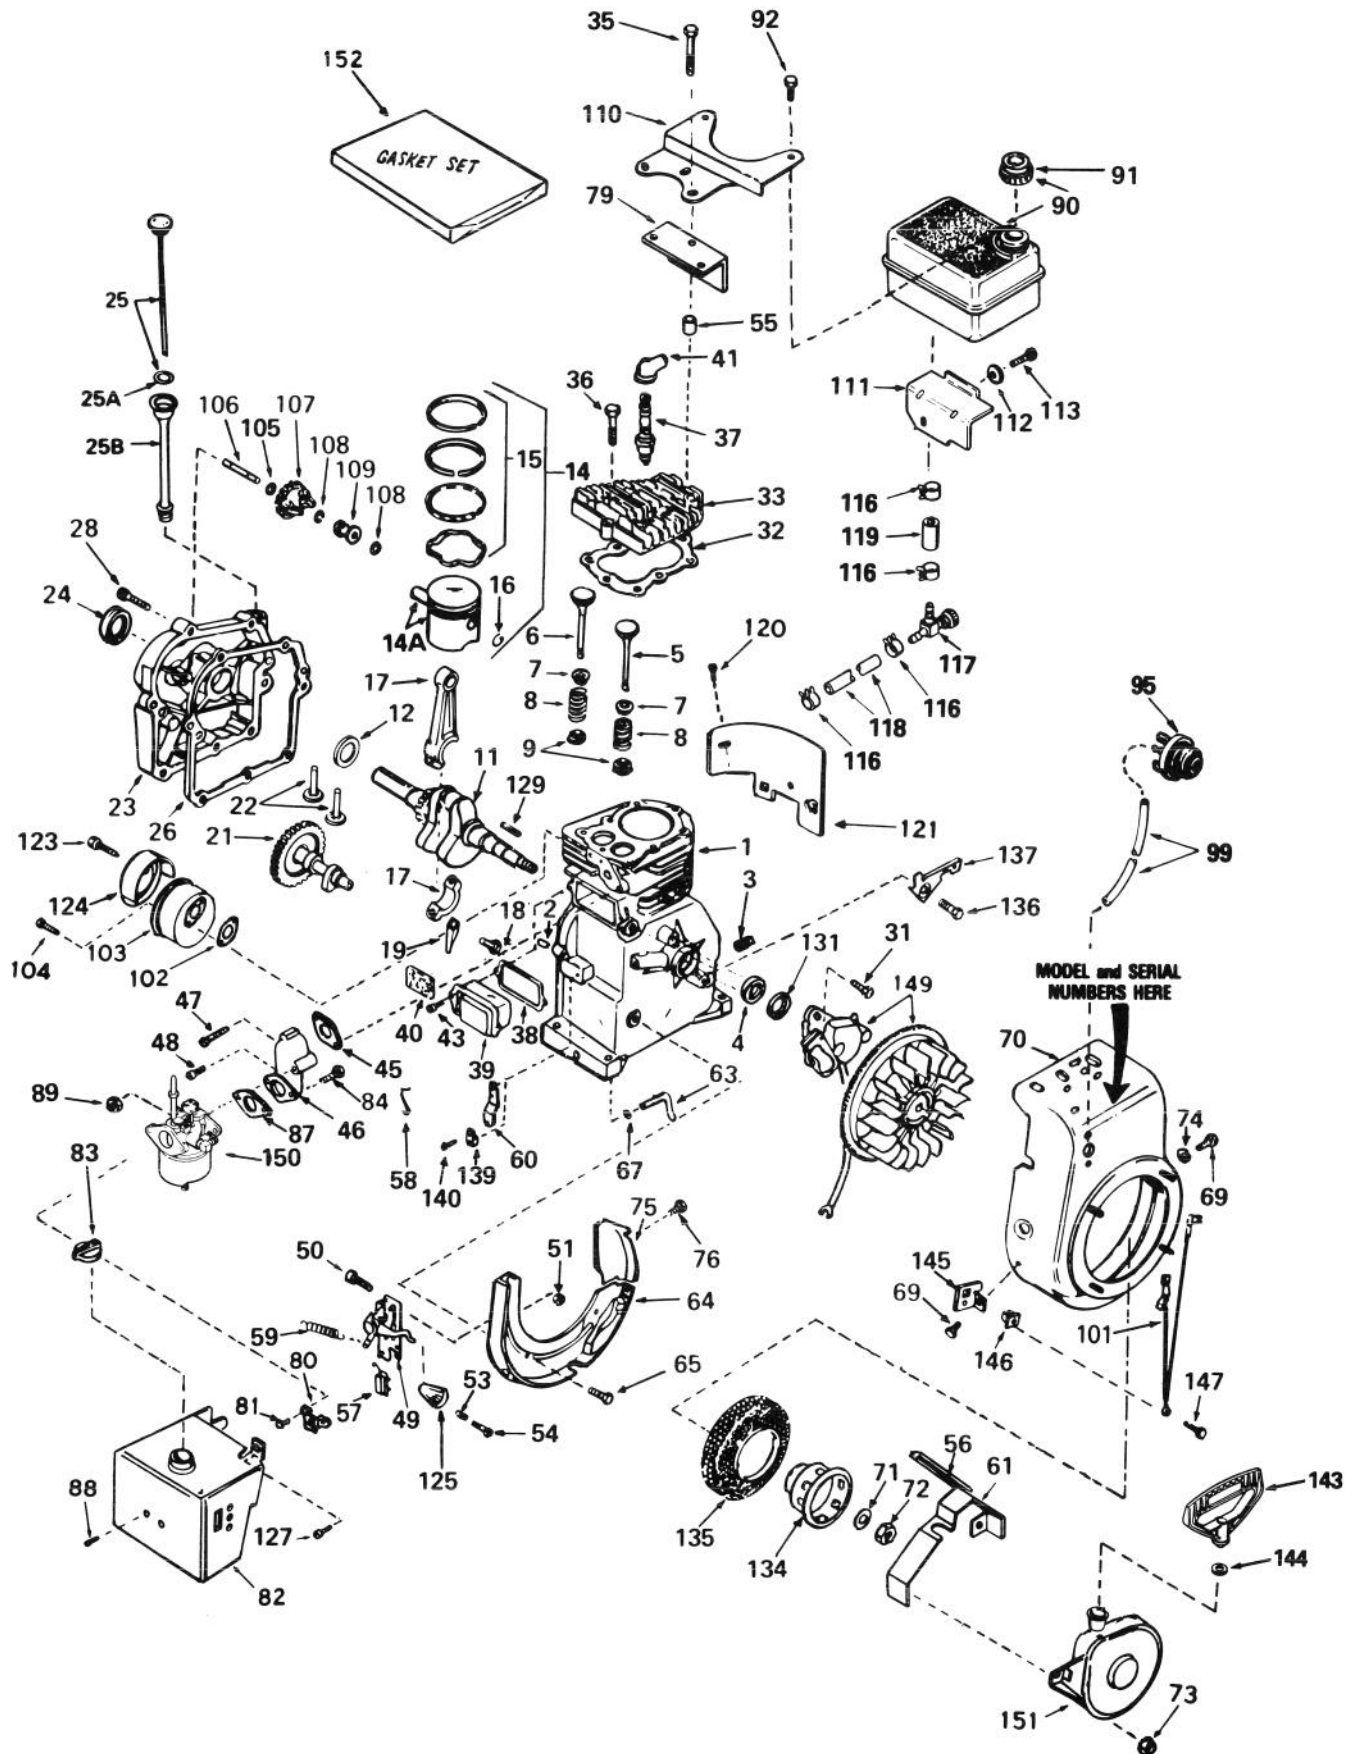

ENGINE TECUMSEH MODEL H35-45590P


Ref. No.	Part No.	Description	No. Used
1	34708	Cylinder Assy. (Incl. Ref. #2, 3 & 4)	1
2	26727	Pin, Dowel	2
3	27642	Plug — Sq. Hd. Pipe (Oil Drain)	2
4	32600	Seal — Oil	1
5	29314B	Valve — Intake (Std.) (Incl. Ref. #9)	1
5	29315C	Valve — Intake (1/32" oversize) (Incl. Ref. #9)	1
6	29313C	Valve — Exhaust (Std.) (Incl. Ref. #9)	1
6	29315C	Valve — Exhaust (1/32" oversize) (Incl. Ref. #9)	1
7	31671	Cap — Upper Valve Spring	2
8	31672	Spring — Valve	2
9	31673	Cap — Lower Valve Spring	2
11	34734A	Crankshaft	1
12	32323	Washer — Thrust	1
14	34514	Piston — Pin & Ring Assy. (Std.) (Incl. Ref. #14A, 15 & 16)	1
14	34515	Piston — Pin & Ring Assy. (.010 oversize) (Incl. Ref. #14A, 15 & 16)	1
14	34516	Piston — Pin & Ring Assy. (.020 oversize) (Incl. Ref. #14A, 15 & 16)	1
14A	32538B	Piston & Pin Assy. (Std.) (Incl. Ref. #16)	1
14A	32548B	Piston & Pin Assy. (.010 oversize) (Incl. Ref. #16)	1
14A	32549B	Piston & Pin Assy. (.020 oversize) (Incl. Ref. #16)	1
15	28986	Ring Set — Piston (Std.)	1
15	28987	Ring Set — Piston (.010 oversize)	1
15	28988	Ring Set — Piston (.020 oversize)	1
16	20381	Ring — Piston Pin Retaining	2
17	32875	Rod Assy. — Connecting (Incl. Ref. #18 & 19)	1
18	32610A	Bolt — Connecting Rod	2
19	32654	Dipper — Oil	1
21	33149A	Camshaft (Compression Release)	1
22	27241	Lifter — Valve	2
23	34674	Cover — Cylinder (Incl. Ref. #24 & 106)	1
24	27897	Seal — Oil	1
25	34676	Dipstick — Oil (Incl. Ref. #25A)	1
25A	33590	O-Ring	1
25B	33893A	Tube — Oil Fill	1
26	*27677	Gasket — Cylinder Cover	1
28	650488	Screw — Hex Hd.	7

Ref. No.	Part No.	Description	No. Used
31	650489	Screw — Hex Hd.	2
32	*29953B	Gasket — Cylinder Head	1
33	30579	Head — Cylinder	1
35	650694A	Screw — Hex Flange Hd.	5
36	6021A	Screw — Hex Flange Hd.	3
37	33636	Plug — Spark (Champion J-8 or equivalent) <i>Except for Canada</i>	1
37	34251 Canada	Resistor Spark Plug (Canadian Regulations Require RJ-17LM Resistor Spark Plug)	1
38	*31619	Gasket — Breather	1
39	31337	Breather Assy. (Incl. Ref. #38 & 40)	1
40	31410	Element — Breather	1
41	610118	Cover — Spark Plug	1
43	650128	Screw — Fil. Hd.	2
45	*26754	Gasket — Intake Pipe	1
46	28416A	Pipe — Intake (Incl. Ref. # 47)	1
47	650840	Screw — Fil. Hd.	1
48	650664	Screw — Fil. Hd.	1
49	†33858A	Control Assy. — Speed (Incl. Ref. #50 thru 54 & 57)	1
50	†650139	Screw — Fil. Hd.	2
51	†30322	Locknut — Hex "Keps"	2
53	31342	Spring — Compression	1
54	650549	Screw — Fil. Hd.	1
55	28212	Spacer — Tank Bracket	2
56	32576	Seal — Snow Guard	1
57	610973	Terminal Assy.	1
58	31858	Link — Governor-to-Throttle	1
59	31426	Spring — Extension	1
60	31510	Lever — Governor	1
61	34127	Guard — Starter	1
63	31334	Rod — Governor	1
64	†33342	Baffle — Blower Housing	1
65	650561	Screw — Hex Washer Hd.	2
67	28277	Washer — Flat	1
69	29212	Screw — Hex Hd.	2
70	34813	Housing — Blower	1
71	650815	Washer — Belleville	1
72	650816	Nut — Flywheel	1
73	29752	Nut & Lockwasher	4
74	650168	Washer — Flat	1
75	33341	Extension — Baffle	1
76	650701	Screw — Hex Washer Hd. Self-Tapping	1
79	33344	Baffle — Heat	1
80	32398	Bracket — Choke	1
81	28820	Screw — Fil. Hd.	2
82	35122	Cover — Carburetor	1
83	35156	Knob — Control	1
84	6201	Screw — Hex Hd.	2
87	*26756	Gasket — Carburetor	1
88	650257	Screw — Pan Hd.	2
89	29752	Nut & Lockwasher	2

*Indicates parts included in Gasket Set, Ref. #152.

† In original production, the speed control assembly is riveted to the blower housing baffle. Replacement speed control assembly includes screws and nuts for mounting. Replacement baffle has threaded holes.

 ENGINE TECUMSEH MODEL H35-45590P (Continued)

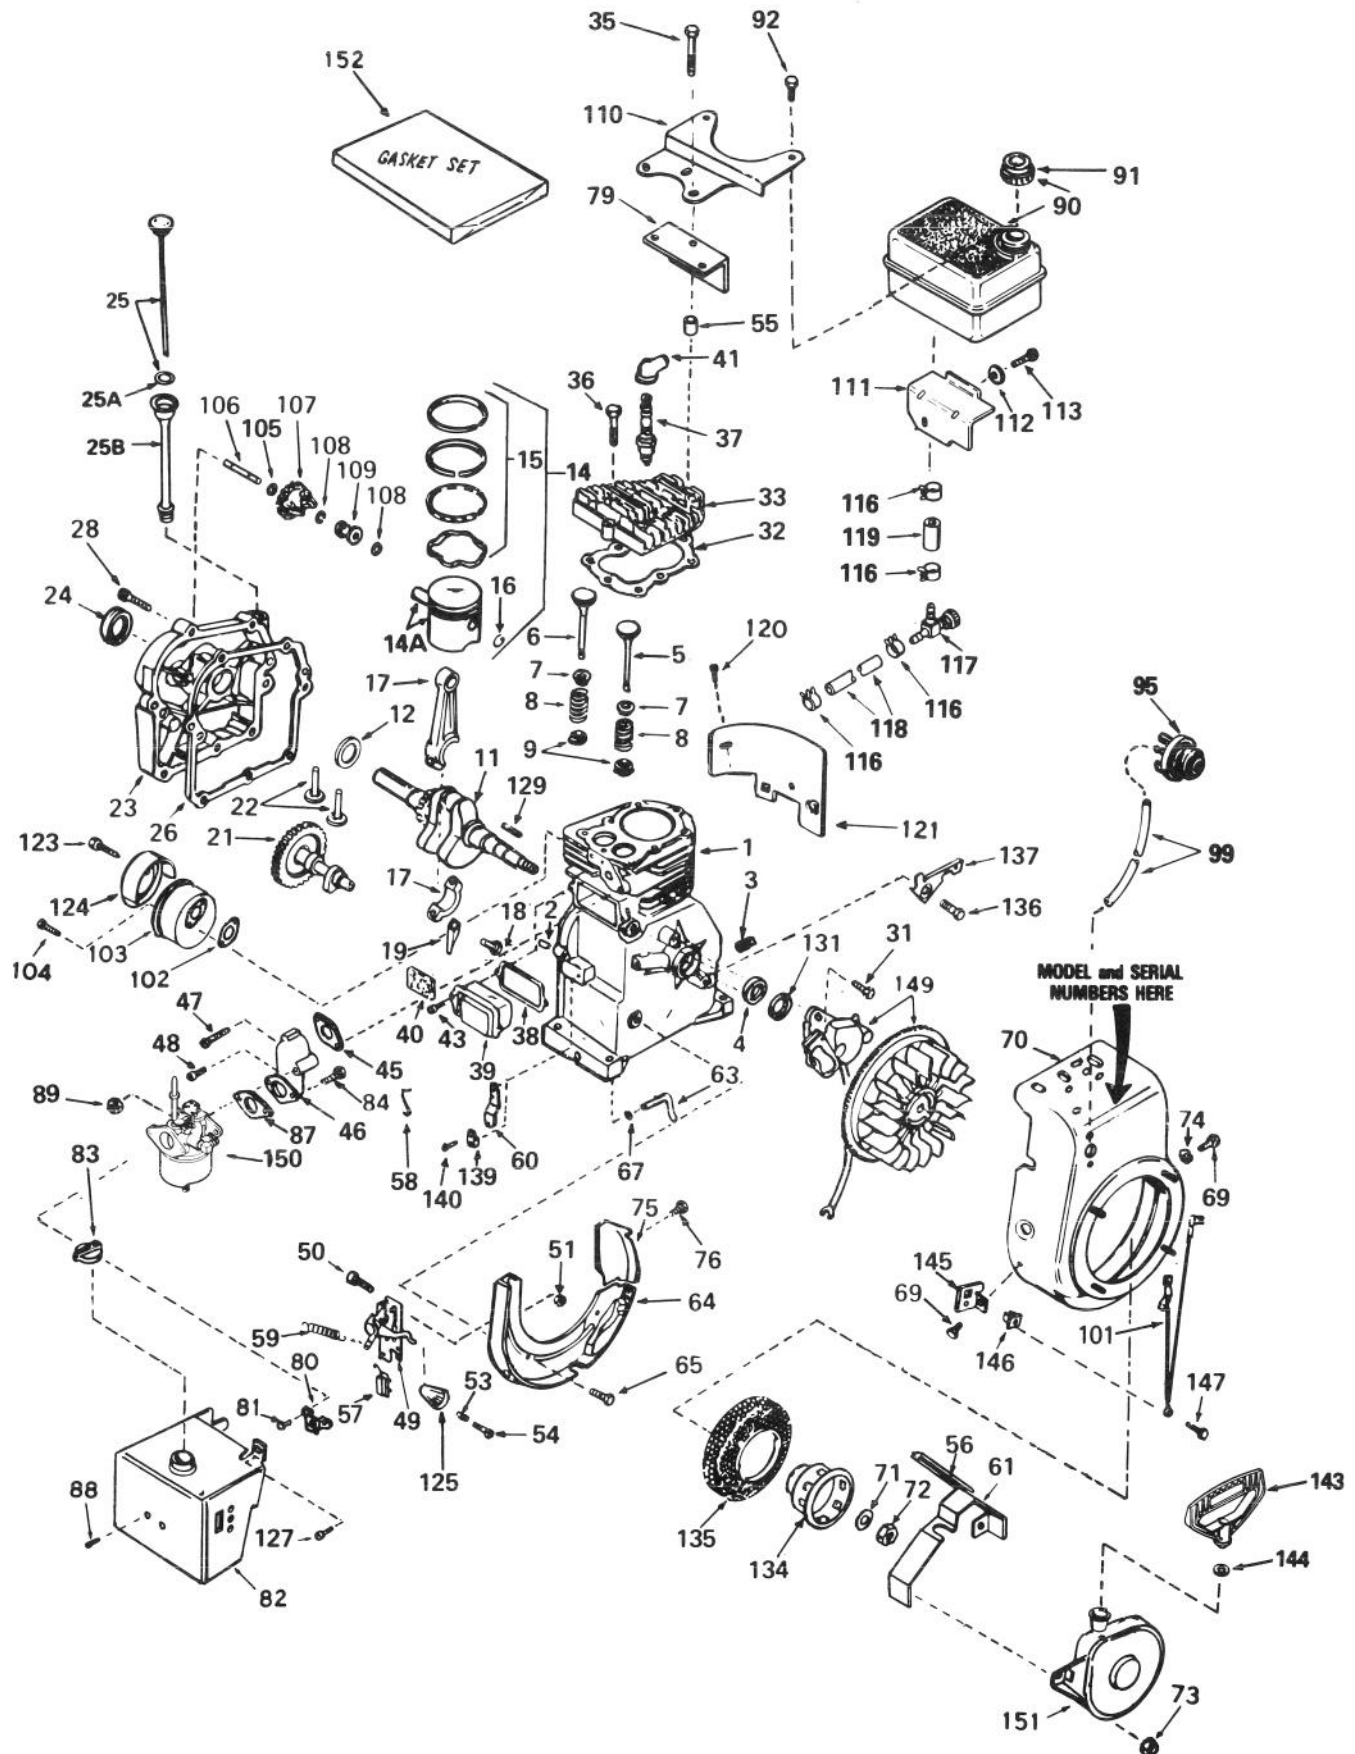


ENGINE TECUMSEH MODEL H35-45590P (Continued)

Ref. No.	Part No.	Description	No. Used
90	34711	Tank — Fuel (Incl. Ref. #91)	1
91	34210	Cap — Fuel Tank	1
92	650665	Screw — Hex Washer Hd., Self-tap	2
95	34814	Primer Assy.	1
99	32180C	Line — Primer	1
101	34241	Wire — Ground	1
102	*30081	Gasket — Muffler	1
103	30996	Muffler	1
104	650493	Screw — Hex Hd.	2
105	30590A	Washer — Flat	1
106	30574	Shaft — Mechanical Governor	1
107	30591	Gear Assy. — Governor (Incl. Ref. #105)	1
108	29193	Ring — Retaining	2
109	30588A	Spool — Governor	1
110	28371B	Bracket — Fuel Tank Mounting	1
111	34182	Bracket — Fuel Tank Mounting	1
112	650675	Washer — Flat	1
113	650805	Screw — Hex Hd. w/Belleville Washer	1
116	26460	Clamp — Fuel Line	4
117	32961	Valve — Fuel Shut-Off	1
118	30705	Line — Fuel	1
119	29774	Line — Fuel	1
120	650128	Screw — Fil. Hd.	1
121	29745	Extension — Blower Housing	1
123	650665	Screw — Hex Washer Hd. Self-Tap	1

Ref. No.	Part No.	Description	No. Used
124	30997	Cover — Muffler	1
125	32410	Knob — Control	1
127	650765	Screw — Hex Washer Hd. Self-Tapping	1
129	610961	Key — Flywheel	1
131	33876	Gasket — Stator	1
134	34694	Cup — Starter	1
135	33668	Screen — Starter	1
136	30200	Screw — Hex Washer Hd. Self-tap	1
137	34212	Bracket — Hold Down	1
139	31335	Clamp — Governor Lever	1
140	650548	Screw — Hex Washer Hd.	1
143	590574	Handle — Mitten Grip Starter	1
144	27261	Washer	1
145	34126	Bracket — Grommet Mounting	1
146	28545	Grommet — Plastic	1
147	650643	Screw — Pan Hd. Self-tap	1
149	611030	Magneto (The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list.)	1
150	632378	Carburetor (Incl. Ref. #87)	1
151	590576	Starter Assy. — Rewind	1
152	33233	Gasket Set	1

 *Indicates parts included in Gasket Set, Ref. #152.

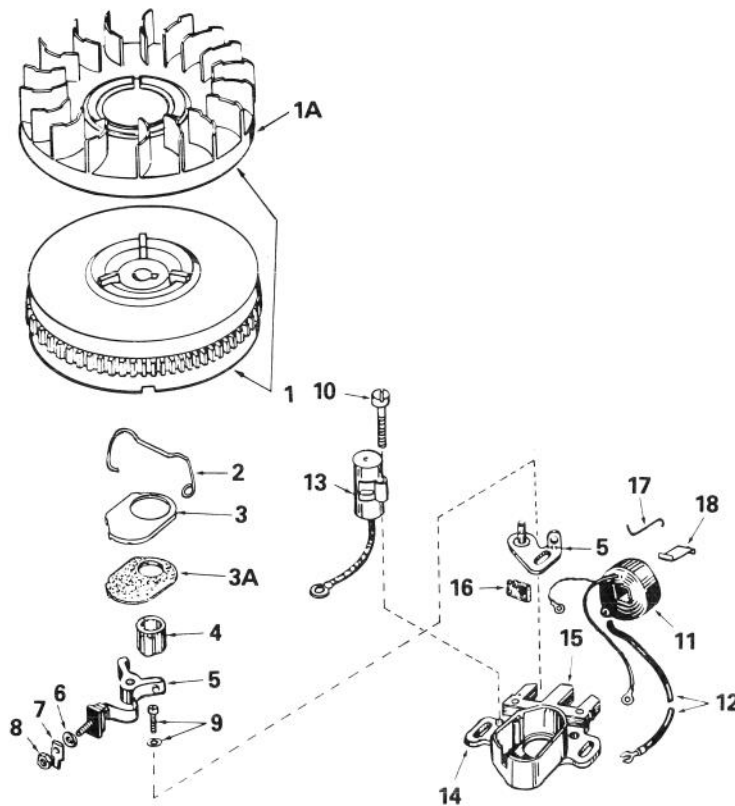


MAGNETO NO. 611030

Ref. No.	Part No.	Description	No. Used
1	611029	Flywheel (Incl. Ref. #1A)	1
1A	610933	Fan — Blower	1
2	30551	Spring, Breaker Box Dust Cover	1
3	610947	Cover — Dust	1
3A	610955	Gasket — Dust Cover	1
4	30992	Cam — Breaker	1
5	30547A	Contact Assembly — Breaker	1
6	610385	Washer — Terminal	1
7	33356	Tab — Ground Terminal	1
8	610408	Nut — Terminal	1

Ref. No.	Part No.	Description	No. Used
9	29181	Screw & Washer — Breaker	1
10	610593	Screw — Condenser	1
11	30560A	Coil Assy. (Incl. Ref. #12)	1
12	30554	Wire — Lead	1
13	30548B	Condenser	1
14	30545	Core & Plate	1
15	30561B	Stator Assy. (Incl. Ref. #2, 3, 3A, 5 thru 14, 16 & 17)	1
16	30549	Felt — Cam Wiper	1
17	31311	Clip — Coil Locking	1

 *The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually as shown in parts list.

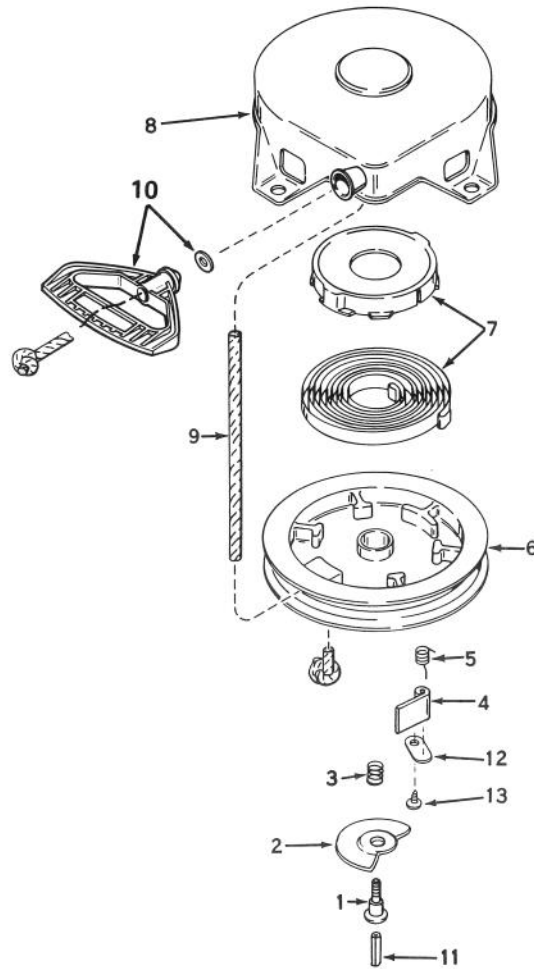

REWIND STARTER NO. 590576

Ref. No.	Part No.	Description	No. Used
1	590409A	Screw	1
2	490474	Cam — Dog	1
3	590411	Spring — Brake	1
4	490148	Dog — Starter	1
5	590475	Spring — Dog	1
6	590478	Pulley	1
7	490414	Spring & Keeper Assy.	1

Ref. No.	Part No.	Description	No. Used
8	590577	Housing Assy. — Starter (Incl. Ref. #1)	1
9	590451A	Rope — Starter	1
10	590574	Handle — Mitten Grip (Not Included With Starter)	1
11	590459	Pin — Centering	1
12	590476	Retainer — Dog	1
13	490477	Screw	1

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change apparently has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Snowthrower has two identification numbers: a model number and a serial number. The two numbers are stamped on a decal which is located on back of engine mounting plate. In any correspondence concerning the Snowthrower, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial numbers of the Snowthrower.
2. Part number, description, and quantity of part(s) desired.

Note: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

The Toro Promise

A TWO YEAR LIMITED WARRANTY

The Toro Company promises to repair any TORO Product if defective in materials or workmanship. The following time periods from the date of purchase apply:

Residential Product 2 Years
Residential Products Used Commercially..... 45 days

The costs of parts and labor are included, but the customer pays the transportation costs. Just return any residential product to an Authorized TORO Service Dealer or TORO Distributor.

Should you feel your TORO Product is defective and wish to rely on The Toro Promise, the following procedure is recommended:

1. Contact any Authorized TORO Service Dealer, TORO Master Service Dealer, or TORO Distributor (the Yellow Pages of your telephone directory is a good reference source).
2. He will either instruct you to return the product to him or recommend another Authorized TORO Service outlet which might be more convenient.
3. Bring the product along with your original sales slip, or other evidence of purchase date, to the service dealer.
4. The servicing dealer will inspect the unit, advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without extra charge to you.

If for any reason you are dissatisfied with the dealer's analysis of the defect or the service performed, you may contact us.

Write:

TORO Consumer Service Department
8111 Lyndale Avenue South
Minneapolis, Minnesota 55420

The above remedy of product defects through repair by an Authorized TORO Service Dealer is the purchaser's sole remedy for any defect.

THERE IS NO OTHER EXPRESS WARRANTY. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND

FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This warranty applies only to parts or components which are defective and does not cover repairs necessary due to normal wear, misuse, accidents, or lack of proper maintenance. Regular, routine maintenance of the unit to keep it in proper operating condition is the responsibility of the owner.

All warranty repairs reimbursable under The Toro Promise must be performed by an Authorized TORO Service Dealer using Toro approved replacement parts.

Repairs or attempted repairs by anyone other than an Authorized TORO Service Account are not reimbursable under The Toro Promise. In addition, these unauthorized repair attempts may result in additional malfunctions, the correction of which is not covered by warranty.

THE TORO COMPANY IS NOT LIABLE FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE USE OF THE PRODUCT INCLUDING ANY COST OR EXPENSE OF PROVIDING SUBSTITUTE EQUIPMENT OR SERVICE DURING PERIODS OF MALFUNCTION OR NON-USE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their TORO Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason

you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.