

LAWN-BOY®

GoldPro Series® Lawnmower

Model No. 10424 - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


AR.	as required	HYD.	hydraulic
ASM.	assembly	INC.	incorporated
CARR.	carriage	LH.	left hand
DEG.	degrees	NI.	nylon insert
FH.	flat head	PPH.	phillips pan head
GA.	gauge	PTH.	phillips truss head
HF.	hex flange	PTO.	power take off
HH.	hex head	RH.	right hand
HHF.	hex head flange	SFH.	slotted fillister head
HHFTF.	hex head flange thread forming	SHH.	slotted hex head
HJ.	hex jam	SHWH.	slotted hex washer head
HLH.	hex lag head	SPH.	slotted pan head
HOC.	height-of-cut	SQH.	square head
HS.	hex	SRH.	slotted round head
HSBH.	hex socket button head	STD.	standard
HSFH.	hex socket flat head	TAP.	self tapping
HS.	hex socket head	TTH.	torx truss head
HWH.	hex washer head	WH.	wing head
HWHTF.	hex washer head thread forming		

Footnotes

-  Not illustrated
-  Not serviced separately

Contents


Description	Page	Description	Page
Housing Assembly	 3	Carburetor Assembly No. 98-7042	 10
Engine and Blade Assembly	 4		
Handle Assembly	 5		
Engine Assembly	 6		
Short Block Assembly No. 95-7636	 8		
Recoil Assembly No. 95-1781	 9		

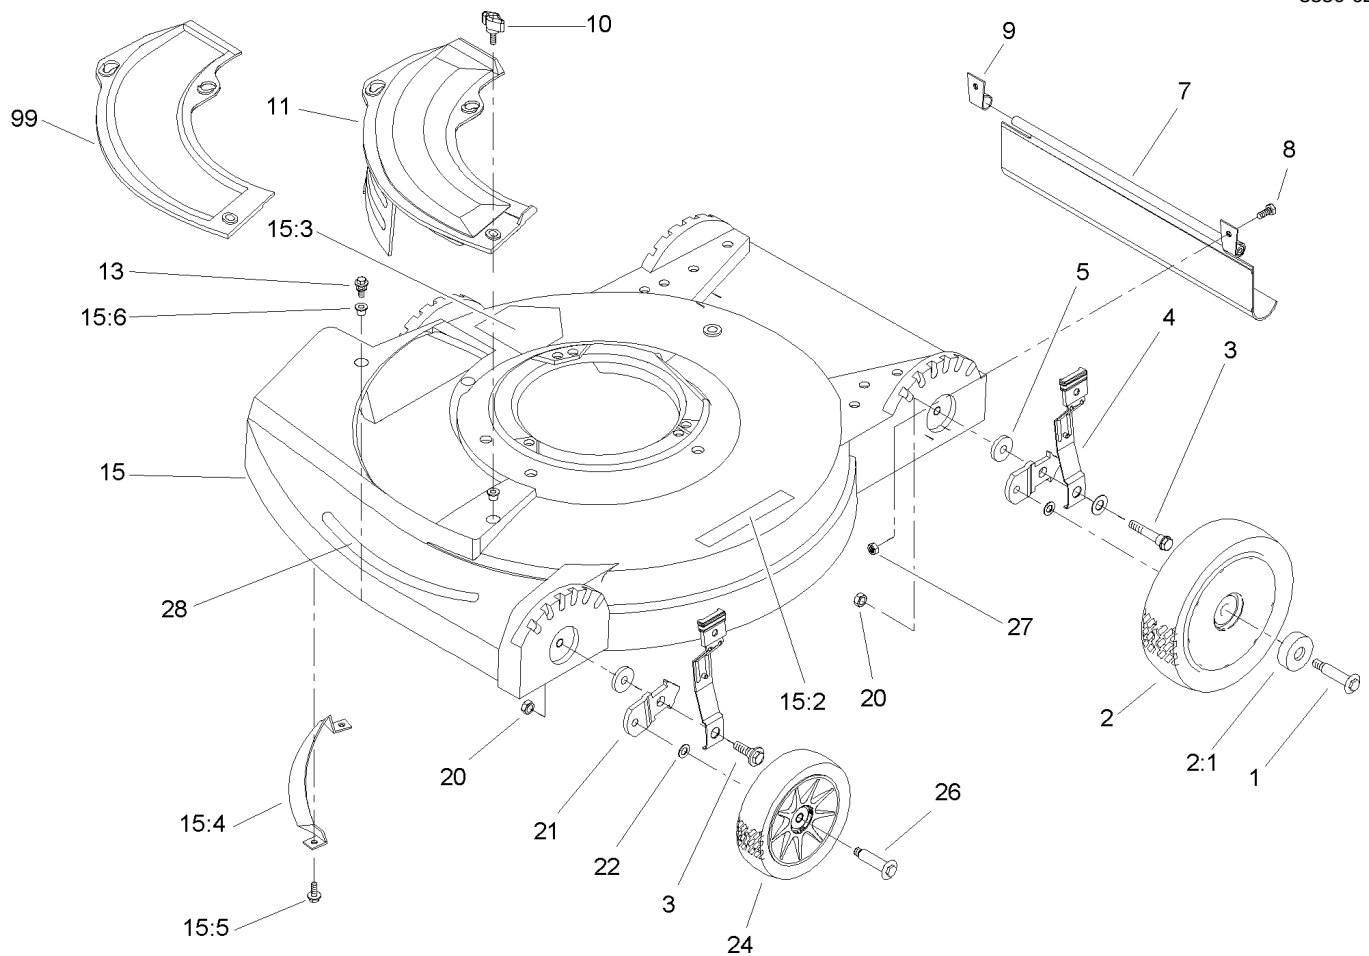

Housing Assembly

Ref	Part No.	Qty.	Description
1	614650	2	Bolt-Shoulder
2	684777	2	Wheel ASM
2:1	27-6250	2	Bushing
3	610646	4	Bolt
4	153444	4	Spring Arm ASM
5	608834	4	Washer
7	93-7368	1	Shield-Trailing
8	609891	2	Screw
9	93-7693	2	Clamp-Shield
10	98-8332	1	Knob
11	92-8630	1	Plate-Mulch
13	614677	2	Screw-Sems
15	99-1562	1	Housing ASM
15:2	93-7250	1	Decal-Warning
15:3	39-5770	1	Decal-Danger
15:4	608175	1	Bar-Toe
15:5	46-6811	2	Screw-HWH
15:6	94-1610	3	Nut-Clip
20	3296-39	4	Nut-Lock, NI
21	608833-03	4	Bracket-Wheel Height
22	40-1940	4	Washer
24	684776	2	Wheel And Tire ASM
26	92-1099	2	Bolt-Shoulder
27	3296-56	2	Nut-Lock, NI


Ref	Part No.	Qty.	Description
28	104-7958	1	Decal-Deck
99	95-7052	1	Plate-Opening, Chute

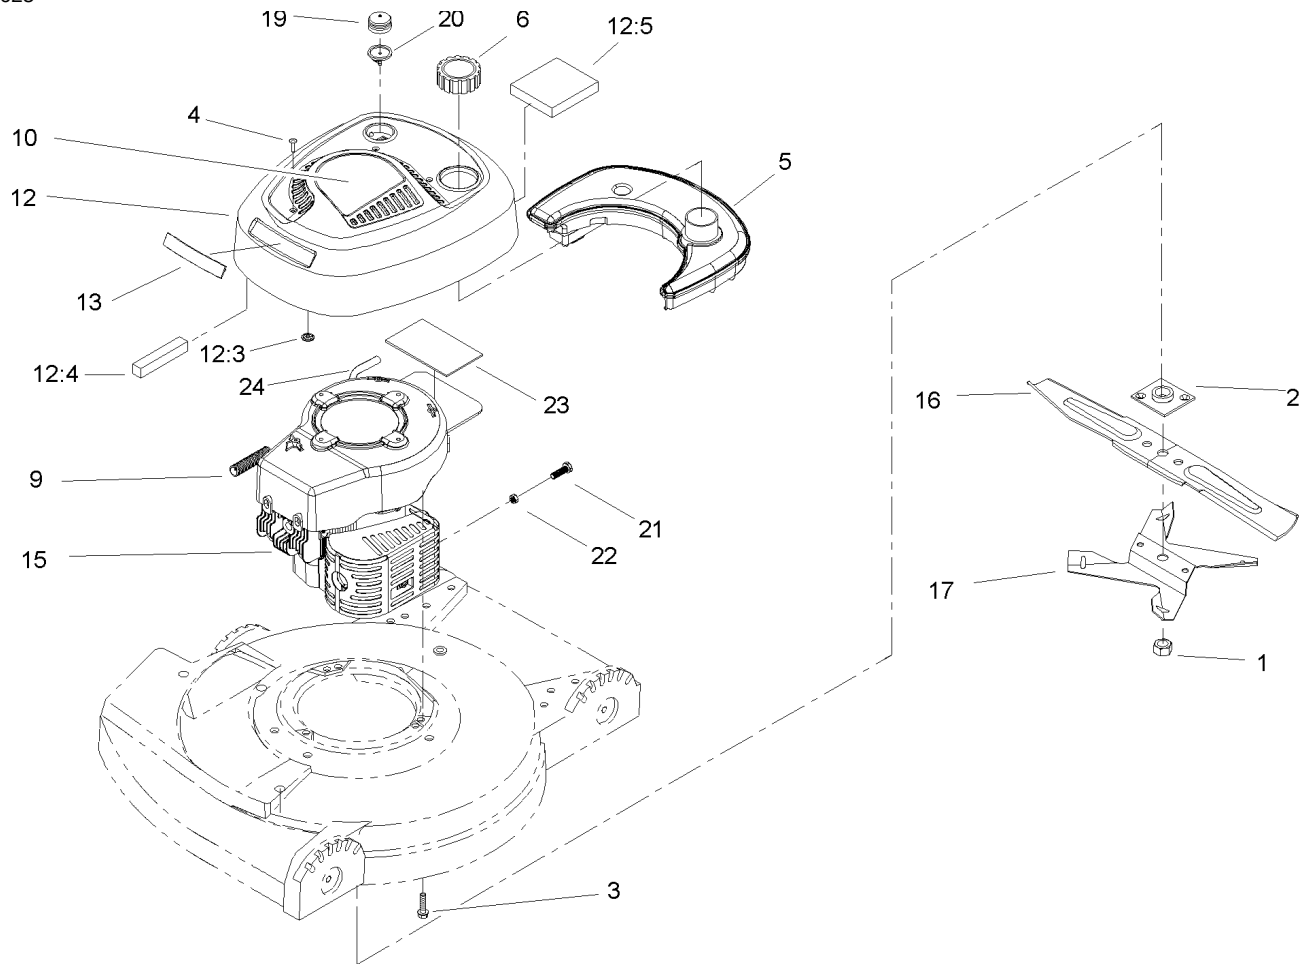

Engine and Blade Assembly

Ref	Part No.	Qty.	Description				
1	603164	1	Nut-Blade				
2	677525	1	Plate And Collar ASM				
3	98-4480	3	Screw-Hh, Sems				
4	95-7621	4	Screw				
5	95-1897	1	Tank				
6	98-8344	1	Fuel And Oil Cap ASM				
9	93-4306	1	Spring-Compression				
10	95-7420	1	Decal-Recoil				
12	100-8750	1	Shroud And Recoil Cover ASM				
12:3	613329	2	Nut-Push				
12:4	99-1522	2	Strip-Foam				
12:5	99-1521	1	Strip-Foam				
13	92-8615	1	Applique-Shroud				
15		1	Engine ASM				
16	612543-03	1	Blade				
17	99-6351-03	1	Fan-Mulching				
19	66-7460	1	Bulb-Primer				
20	44-2750	1	Body-Primer				
21	314576	1	Screw				
22	306531	1	Nut-Hex				
23	98-1386	1	Pad-Foam				
24	612782	1	Line-Fuel				

5

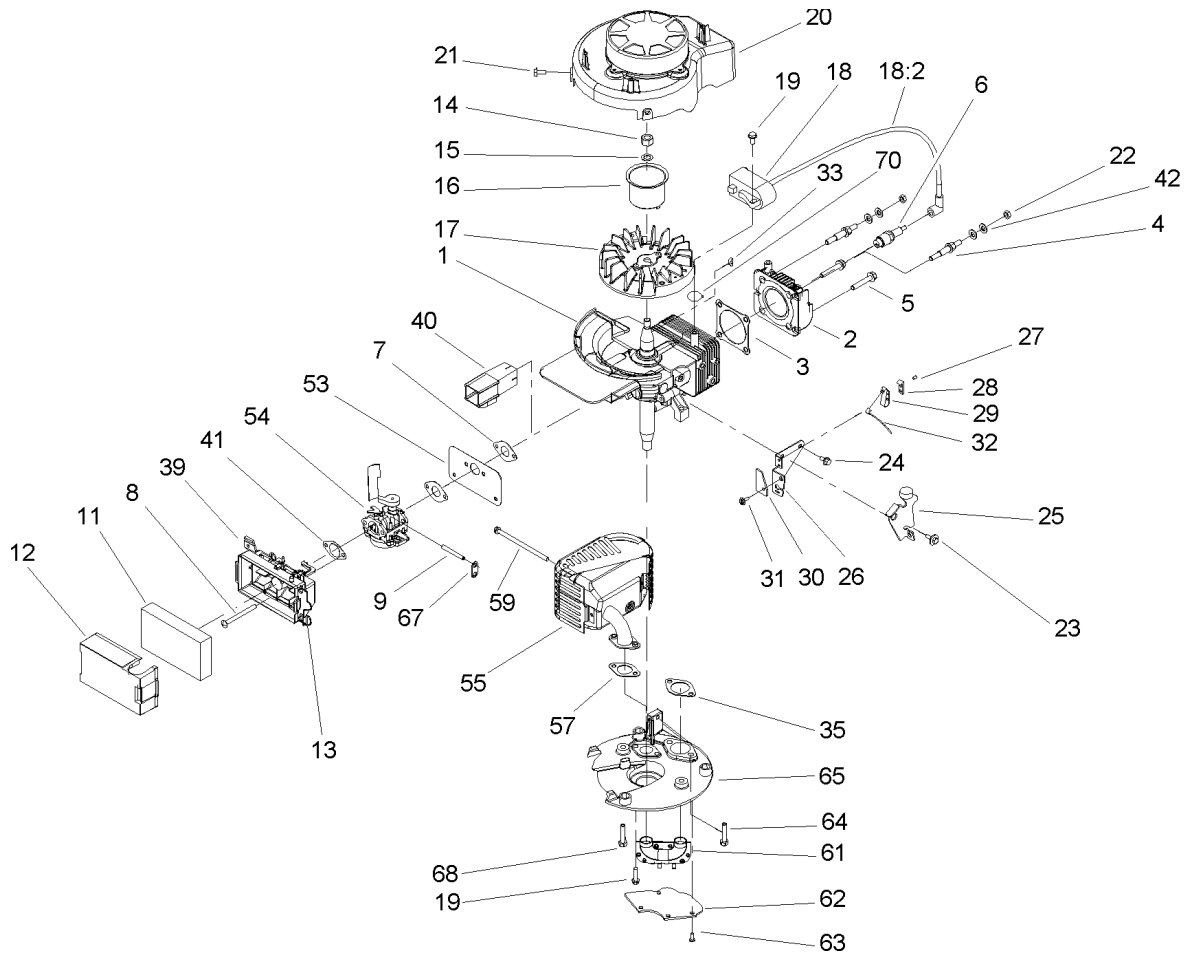


Engine Assembly

Ref	Part No.	Qty.	Description
1	95-7636	1	Short Block ASM
2	94-5776	1	Head-Cylinder
3	94-5778	1	Gasket-Head
4	94-5779	2	Stud
5	94-5780	2	Screw-HWH
6	50-1170	1	Spark Plug
7	94-5795	2	Gasket-Intake
8	612507	2	Screw
9	95-1861	1	Hose-Primer
11	95-5574	1	Filter-Air
12	95-5577	1	Cover-Filter, Air
13	610383	1	Retainer-Cover, Filter
14	130743	1	Nut
15	3253-6	1	Washer-Lock
16	95-1786	1	Cup-Starter
17	95-1866	1	Flywheel
18	99-2911	1	Module-Ignition
18:2	99-6719	1	Lead-Tension, High
19	613208	4	Screw
20	95-1868	1	Shroud-Recoil
21	700094	2	Screw-HH
22	146501	2	Nut
23	95-1870	1	Screw-Shoulder
24	95-1871	1	Screw-HWH

Ref	Part No.	Qty.	Description
25	93-4312	1	Plate-Brake
26	84-7820	1	Plate-Brake
27	3290-459	2	Rivet-Plastic
28	92-2925	1	Strap-Insulation
29	60-9010	1	Strap-Ground
30	100-2929	1	Stop-Strap, Ground
31	12-5450	1	Screw
32	98-7037	1	Lead Wire-Switch, Brake
33	607199	1	Key
35	95-1778	1	Gasket-Exhaust
39	95-5588	1	Air Base ASM
40	95-5578	1	Tunnel-Inlet
41	95-7613	1	Gasket-Filter
42	3290-456	4	Washer-Belleville
51	609790	1	Sealer-Loctite 50cc
53	98-1388	1	Shield-Carb
54	98-7042	1	Carburetor ASM
55	100-9514	1	Muffler And Guard
57	98-1392	1	Gasket
59	611228	1	Bolt-Console
61	98-1557	1	Pipe-Transfer
62	98-1591	1	Cover-Muffler
63	3234-13	4	Screw-HHF
64	322-17	2	Screw-HH




Ref	Part No.	Qty.	Description
65	98-1383	1	Plate-Mounting
67	95-7615	1	Hose-Retainer
68	613233	2	Screw
70	317893	1	Strap-Tie

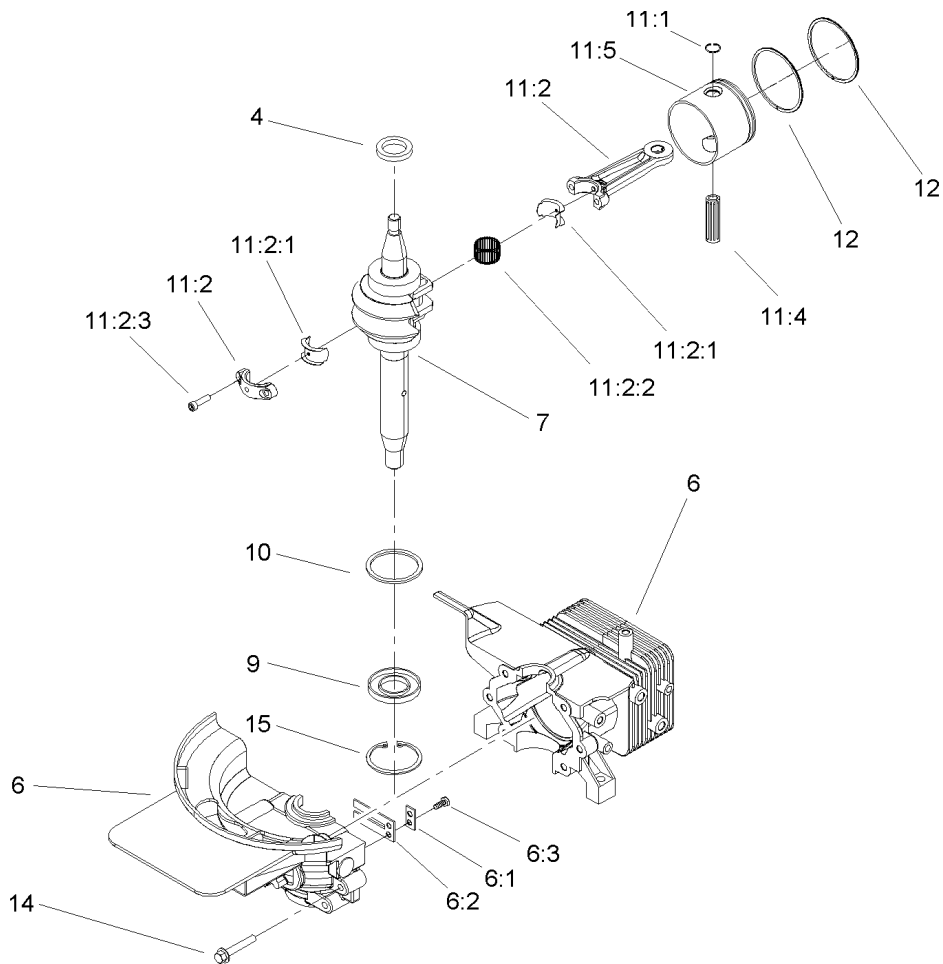


Short Block Assembly No. 95-7636

Ref	Part No.	Qty.	Description				
❶2	609790	1	Sealer-Loctite 50cc				
❶2	610372	1	Sealer-Loctite 6cc				
4	611396	1	Seal-Oil				
6	95-7631	1	Cylinder And Crankcase ASM				
6:1	602587	1	Plate-Backup, Reed				
6:2	602588	1	Reed-Carburetor				
6:3	612872	2	Screw-HH				
7	99-2920	1	Crankshaft And Bearing ASM				
9	94-5764	1	Seal-Oil				
10	94-5765	1	Ring-Retaining, Ext.				
❷11		1	Piston And Connecting Rod ASM				
11:1	303712	2	Ring-Retaining				
11:2	95-7629	1	Connecting Rod ASM				
11:2:1	677982	1	Liner ASM				
11:2:2	683911	1	Bearing-Needle				
11:2:3	611393	2	Screw-HSH				
11:4	94-5774	1	Pin-Wrist				
11:5	100-2916	1	Piston And Rings ASM				
12	100-2917	1	Set-Ring				
14	94-5781	6	Screw-HHF				
15	32151-75	1	Ring-Retaining				

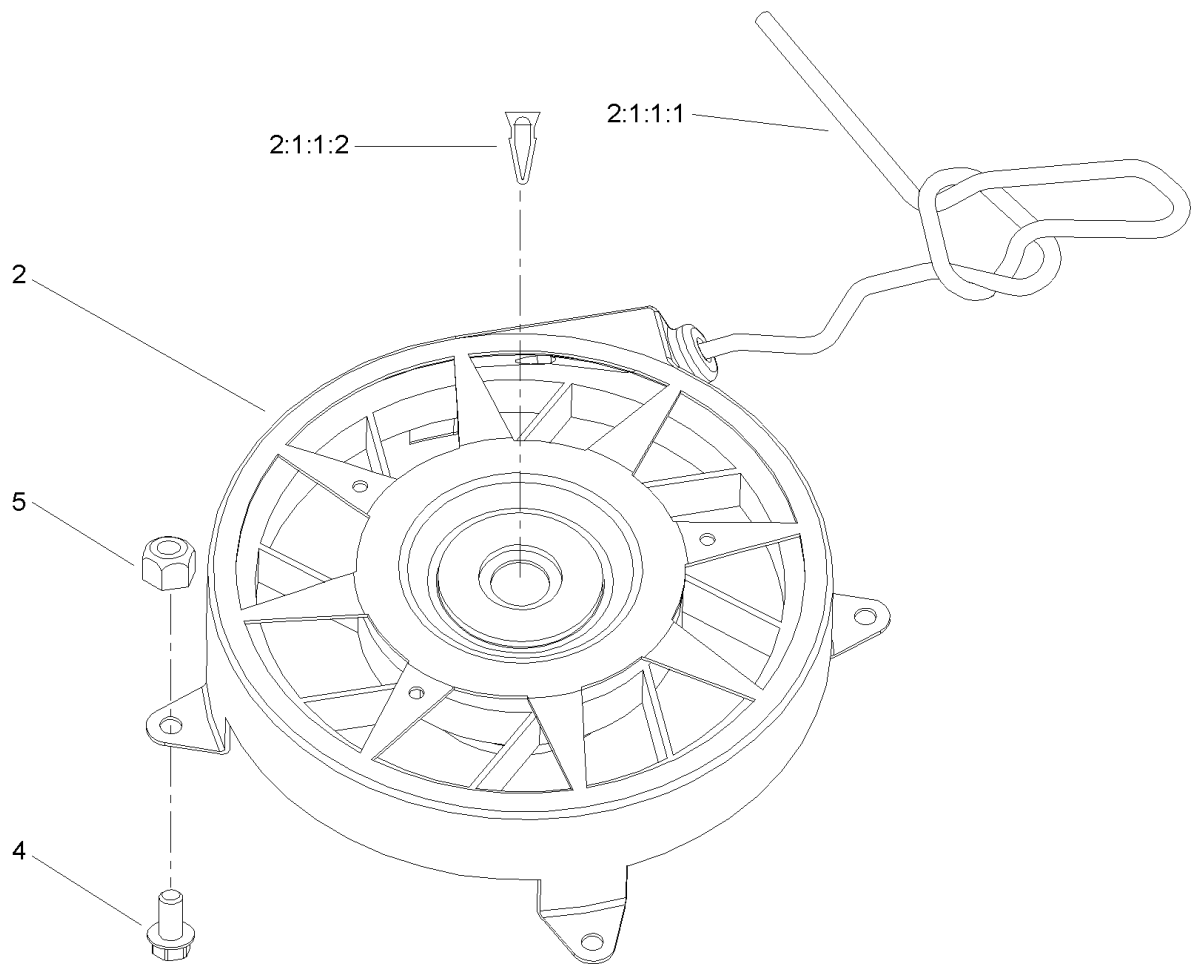

Recoil Assembly No. 95-1781

Ref	Part No.	Qty.	Description				
2	99-6713	1	Recoil ASM				
2:1		1	Recoil And Decal ASM				
2:1:1		1	Recoil				
2:1:1:1	613773	1	Rope-Recoil				
2:1:1:2	100-9540	1	Retainer And Clip ASM				
4	3290-321	4	Screw-HWH				
5	3296-2	4	Nut-Lock				

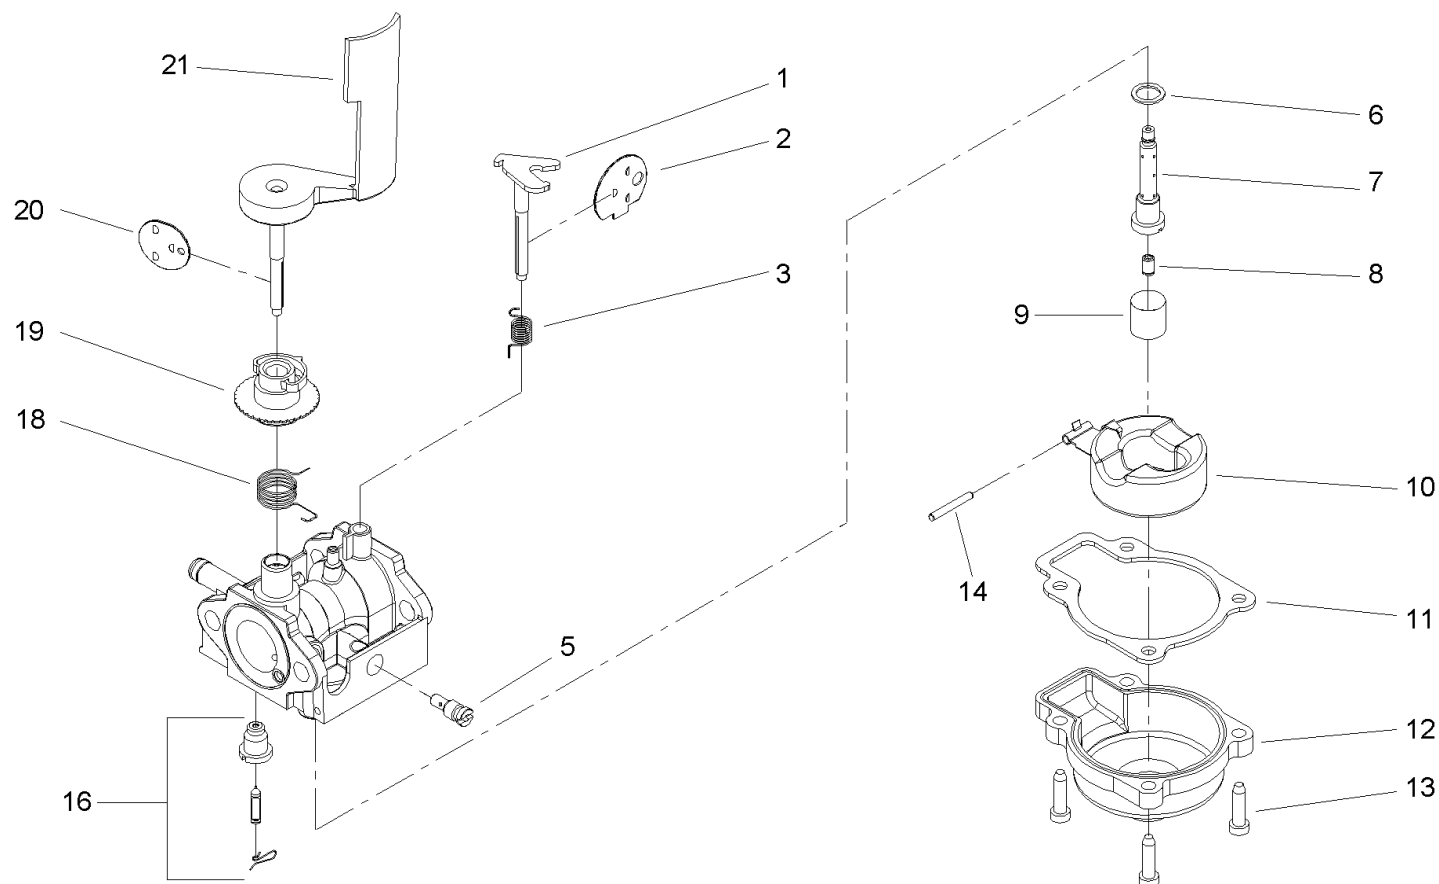

Carburetor Assembly No. 98-7042

Ref	Part No.	Qty.	Description				
1	95-5581	1	Shaft-Choke				
2	94-5788	1	Disc-Choke				
3	95-5583	1	Spring-Choke				
5	98-7041	1	Pilot-Jet 37.5				
6	612383	1	Washer				
7	98-7001	1	Nozzle				
8	98-1357	1	Jet-Main				
9	94-5787	1	Filter-Fuel				
10	95-1899	1	Float And Arm ASM				
11	98-1362	1	Gasket				
12	92-9691	1	Chamber-Float				
13	608850	4	Screw-HH				
14	92-6389	1	Pin-Straight				
16	92-9697	1	Valve/seat-Float				
18	98-7011	1	Spring-Throttle				
19	610834	1	Collar-Adjust, Airvane				
20	104-4431	1	Throttle-Disc				
21	104-4430	1	Airvane And Shaft ASM				

NOTES

LAWN-BOY®