

LAWN-BOY®

Gold Series® Lawnmower

Model No. 10656 - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Deck, Side Chute, and Rear Door Assembly	 3	Carburetor Assembly Honda Model No. GCV160AR3A1	 18
RWD Front Axle Assembly	 4	Air Cleaner Assembly Honda Model No. GCV160AR3A1	 19
RWD Rear Axle and Transmission Assembly	 5	Muffler Assembly Honda Model No. GCV160AR3A1	 20
Transmission Assembly 106-3956	 6	Flywheel Assembly Honda Model No. GCV160AR3A1	 21
Engine and Blade Assembly	 7	Starter Motor Assembly Honda Model No. GCV160AR3A1	 22
P2P Handle Assembly	 8	Control Assembly Honda Model No. GCV160AR3A1	 23
Electric Start Assembly	 9	Choke Base Assembly Honda Model No. GCV160AR3A1	 24
Rear Bag Assembly	 10	Top Cover Assembly Honda Model No. GCV160AR3A1	 25
Cylinder Barrel Assembly Honda Model No. GCV160AR3A1	 11	Label Assembly Honda Model No. GCV160AR3A1	 26
Oil Pan Assembly Honda Model No. GCV160AR3A1	 12		
Crankshaft Assembly Honda Model No. GCV160AR3A1	 13		
Piston and Connecting Rod Assembly Honda Model No. GCV160AR3A1	 14		
Camshaft Assembly Honda Model No. GCV160AR3A1	 15		
Recoil Starter Assembly Honda Model No. GCV160AR3A1	 16		
Fan Cover Assembly Honda Model No. GCV160AR3A1	 17		

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	INC. incorporated
ASM. assembly	LH. left hand
CARR. carriage	NI. nylon insert
DEG. degrees	PPH. phillips pan head
FH. flat head	PTH. phillips truss head
GA. gauge	PTO. power take off
HF. hex flange	RH. right hand
HH. hex head	SFH. slotted fillister head
HHF. hex head flange	SHH. slotted hex head
HHFTF. hex head flange thread forming	SHWH. slotted hex washer head
HJ. hex jam	SPH. slotted pan head
HLH. hex lag head	SQH. square head
HOC. height-of-cut	SRH. slotted round head
HS. hex	STD. standard
HSBH. hex socket button head	TAP. self tapping
HSFH. hex socket flat head	TTH. torx truss head
HSH. hex socket head	WH. wing head
HWH. hex washer head	
HWHTF. hex washer head thread forming	
HYD. hydraulic	

Footnotes


- | | |
|--|---------------------------|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Obtain parts from your local Honda dealer. | |

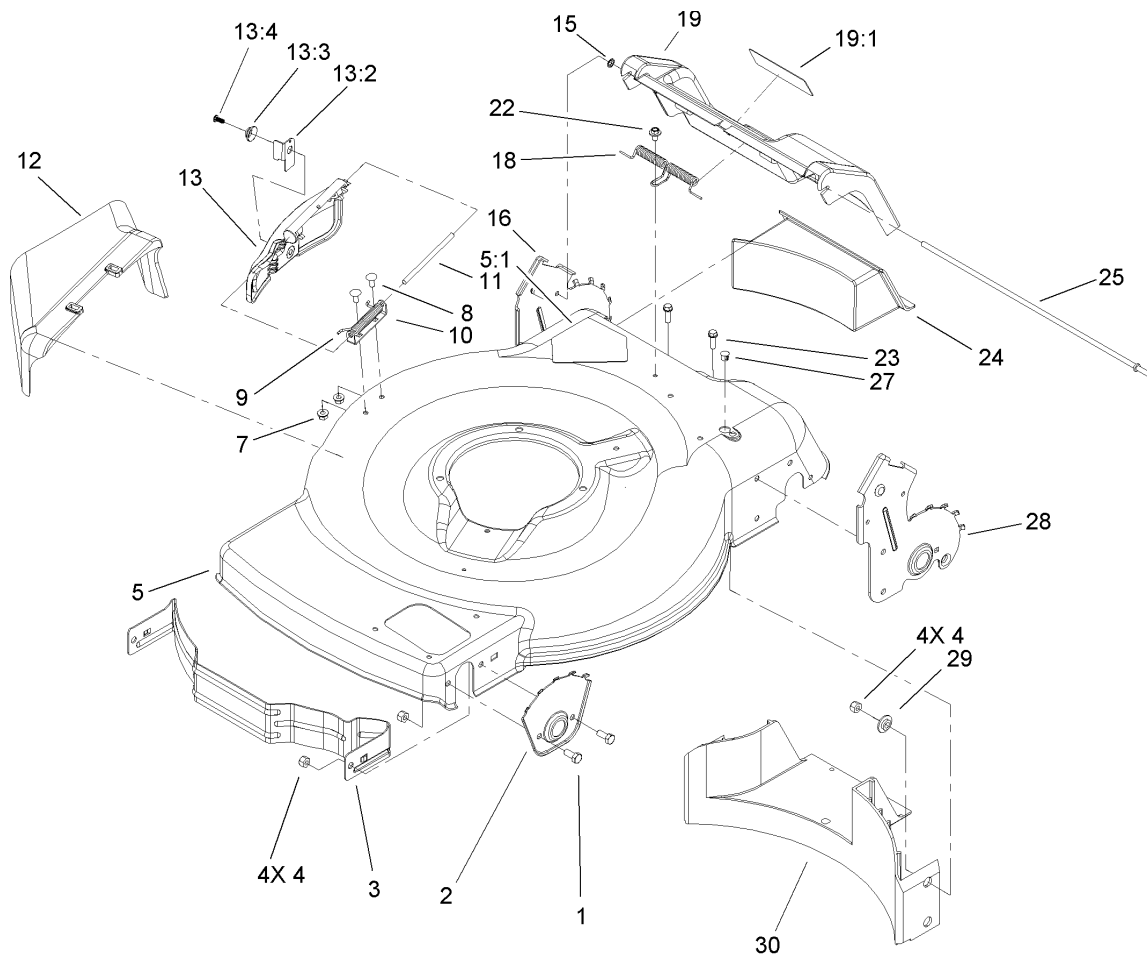

Deck, Side Chute, and Rear Door Assembly


Ref	Part No.	Qty.	Description
1	322-3	4	Screw-HH
2	105-1808-03	2	Plate-Hoc, Front
3	104-8694-03	1	Baffle-Front
4	3296-29	8	Nut-Lock, NI
5	106-8343	1	Housing ASM
5:1	105-6838	1	Decal-Danger
7	32128-32	2	Nut-HHF
8	3229-11	2	Screw-CARR
9	99-5293	1	Spring-Torsion
10	99-5292	1	Bracket-Cover
11	99-5291	1	Rod-Cover
12	105-3028	1	Chute-Side Discharge
13	106-8394	1	Discharge Door ASM
13:2	107-0795	1	Latch-Door
13:3	107-7456	1	Cap-Door
13:4	107-7461	1	Screw-Plastite
15	32112-6	1	Pushnut
16	107-0790	1	RH Rear HOC Plate ASM
18	105-3032	1	Spring-Door, Rear
19	106-8389	1	Door ASM-Service
19:1	106-8388	1	Decal-Warning, Door
22	46-6810	1	Screw And Washer ASM
23	46-8091	2	Screw-HWH
24	105-1842	1	Plug-Discharge, Rear

Ref	Part No.	Qty.	Description
25	105-1827	1	Rod-Pivot, Rear Door
27	104-9369	1	Plug-Dome
28	107-0783	1	LH Rear HOC Plate ASM
29	105-3006	4	Washer-Stepped
30	105-1834	1	Baffle-Rear

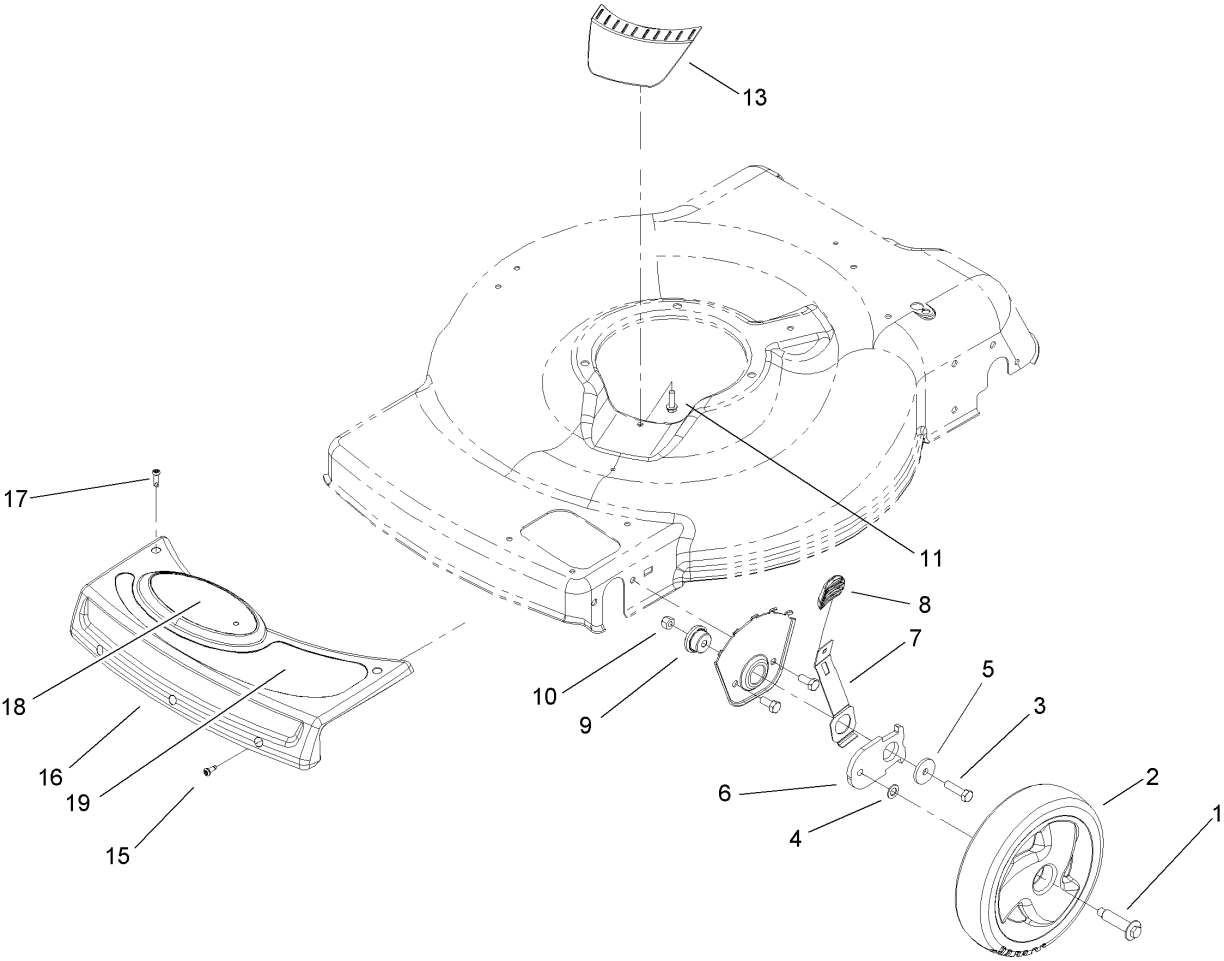 

RWD Front Axle Assembly


Ref	Part No.	Qty.	Description				
1	614650	2	Bolt-Shoulder				
2	107-1916	2	8in Wheel ASM				
3	322-6	2	Screw-HH				
4	40-1940	2	Washer				
5	105-3048	2	Washer-Flat				
6	105-1807	2	Arm-Pivot, Front				
7	105-1809	2	Arm-Spring				
8	107-1904	2	Knob-Lever, HOC				
9	105-1818	2	Bushing-Mount, HOC				
10	3296-29	2	Nut-Lock, NI				
11	46-8091	1	Screw-HWH				
13	105-3005	1	Cover-Belt Opening				
15	105-6849	3	Screw-Thread Forming				
16	107-1908	1	Bumper-Wpm				
17	105-6828	2	Screw				
18	107-3764	1	Decal-Housing				
19	107-3763	1	Decal-Housing				

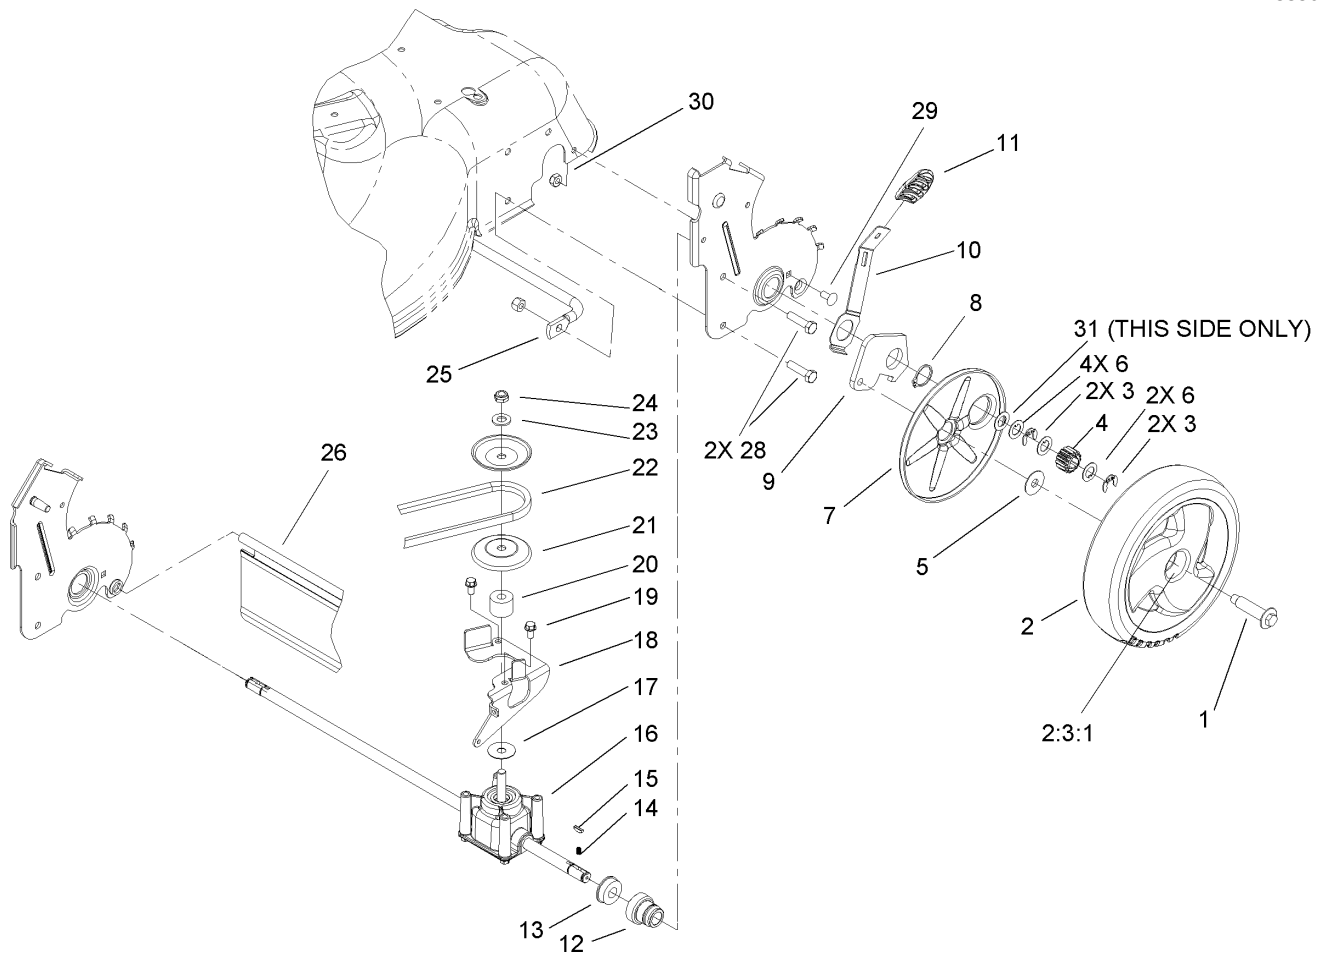 

RWD Rear Axle and Transmission Assembly


Ref	Part No.	Qty.	Description
1	614650	2	Bolt-Shoulder
2	107-1918	2	Wheel Gear Asm, 8-Inch
2:3:1	27-6250	2	Bushing
3	65-2720	4	Klipring-Locking
4	105-3040	2	Gear-Pinion, 15t
5	614426	2	Washer-Stepped
6	105-6840	6	Washer-Thrust
7	107-1919	2	Cover-Wheel
8	32151-36	2	Ring-Retaining
9	105-1819	2	Arm-Pivot, Rear
10	105-1809	2	Arm-Spring
11	107-1904	2	Knob-Lever, HOC
12	104-8698	2	Retainer-Bearing, HOC
13	104-8699	2	Bearing-Ball
14	39-9650	2	Spring-Compression
15	612066	2	Key
16	106-3956	1	Transmission ASM
17	105-6814	1	Washer-Shield
18	105-1832-03	1	Bracket-Pivot
19	32144-4	2	Screw-HWH
20	92-5791	1	Spacer
21	100-1176	2	Pulley-Half
22	91-2258	1	V-Belt
23	3256-24	1	Washer-Flat

Ref	Part No.	Qty.	Description
24	3296-5	1	Nut-Lock, NI
25	105-1811	1	Brace-HOC Plate
26	105-1843	1	Shield-Trailing
28	322-6	4	Screw-HH
29	3229-11	2	Screw-CARR
30	3296-16	2	Nut-Lock, NI
31	36-4780	1	Washer

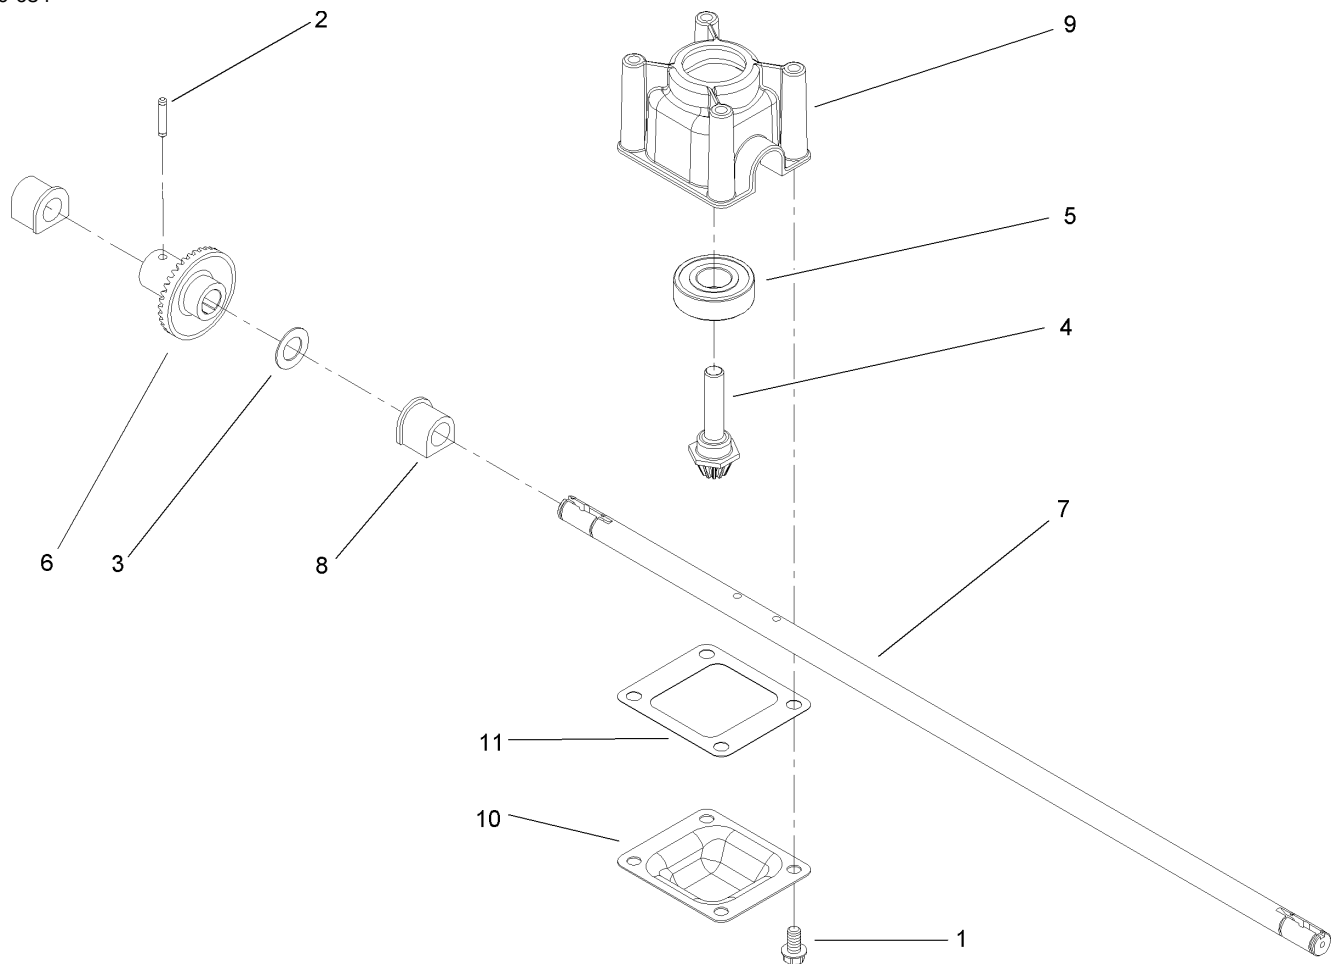 


Transmission Assembly 106-3956

Ref	Part No.	Qty.	Description				
1	32144-4	4	Screw-HWH				
2	3285-19	1	Pin-Groove				
3	36-4780	1	Washer				
4	92-5790	1	Pinion				
5	100-1048	1	Bearing-Ball				
6	104-8671	1	Gear-Bevel, 37t				
7	106-3957	1	Shaft-Output				
8	104-8673	2	Bushing-Shaft, Output				
9	104-8674	1	Gearcase-Upper				
10	104-8675-03	1	Cover-Gearcase				
11	105-6839	1	Gasket-Gearcase				

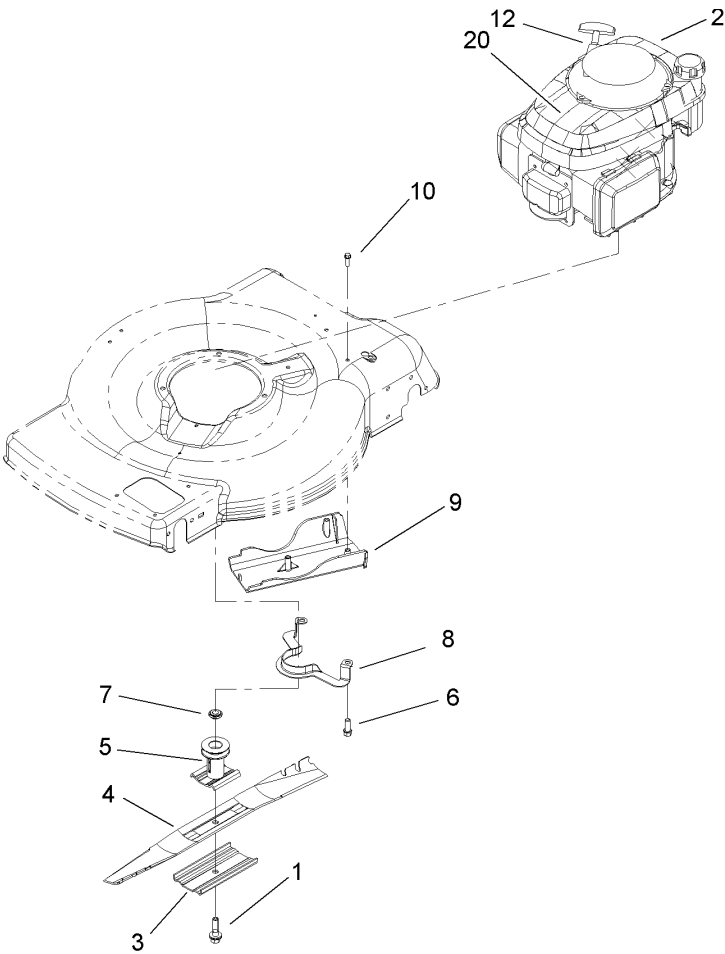 

Engine and Blade Assembly


Ref	Part No.	Qty.	Description				
1	105-8579	1	Bolt-Blade				
2		1	Engine-Gcv 160, Es Honda Model No. Gcv160ar3a1				
3	105-3029-03	1	Support-Blade				
4	104-8697-03	1	Blade-22 Inch				
5	106-3987	1	Blade Driver ASM				
6	95-1726	3	Screw-Taptite				
7	106-3999	1	Spacer-Driver				
8	105-3030-03	1	Guide-Belt				
9	105-1835	1	Cover-Belt, Rear				
10	46-8091	3	Screw-HWH				
12	92-1701	1	Stop-Rope				
20	107-3760	1	Decal-Recoil				

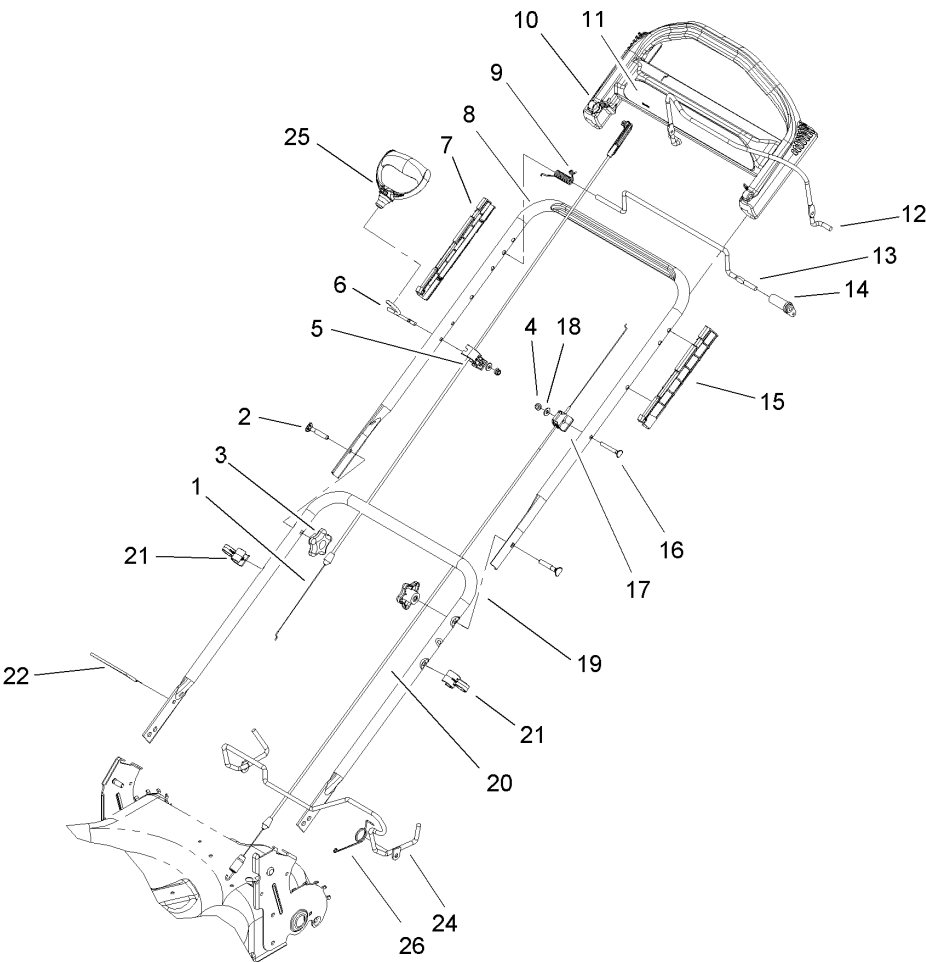 

P2P Handle Assembly


Ref	Part No.	Qty.	Description
1	107-1902	1	Cable-Brake
2	92-2260	2	Screw-Handle
3	106-4161	2	Knob-Handle
4	3296-73	2	Nut-Lock, NI
5	106-8331	1	Anchor-Cable
6	107-1935	1	Guide-Rope
7	105-6841	2	Guide-RH
8	104-8680-05	1	Handle-Upper
9	104-8690	1	Spring-Torsion
10	106-8337	1	Handle-Control, Gray
11	106-8390	1	Decal-Handle
12	104-8679-03	1	Bail-Brake
13	99-1588	1	Bar-Control, Traction
14	99-1589	1	Lever-Traction
15	105-6842	2	Guide-LH
16	321-50	1	Screw-HH
17	92-7729	1	Anchor-Cable, Upper
18	3256-1	2	Washer-Flat
19	107-0784-05	1	Handle-Lower
20	105-1844	1	Cable-Traction
21	106-6805	2	Guide-Cable
22	614249	1	Strap-Tie
24	107-0768	1	Release Lever ASM
25	106-8345	1	Handle-Recoil

Ref	Part No.	Qty.	Description
26	107-7472	1	Spring-Torsion

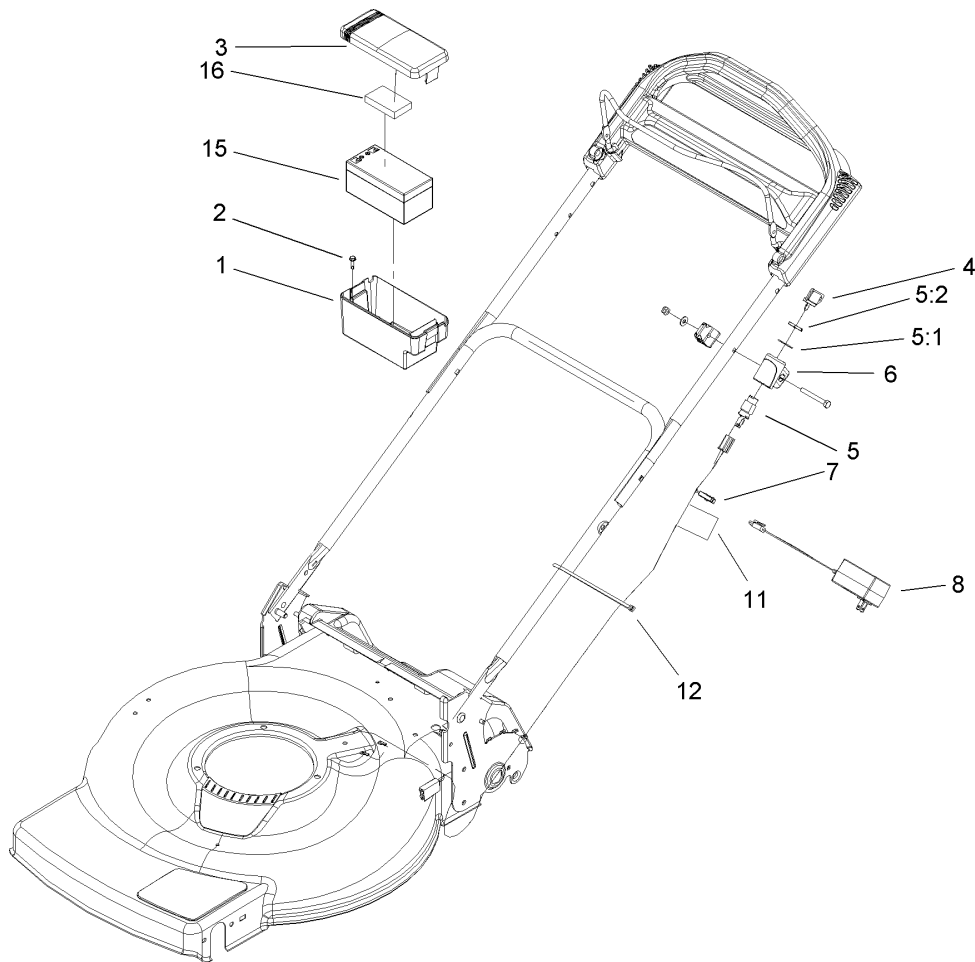 


Electric Start Assembly

Ref	Part No.	Qty.	Description				
1	107-3757	1	Box-Battery				
2	104-7648	2	Screw-Tek				
3	107-3758	1	Cover-Battery				
4	700918	1	Key				
5	46-5780	1	Switch-Starter				
5:1	3254-5	1	Washer-Tooth				
5:2	218-461	1	Nut-HH				
6	104-8692	1	Mount-Switch				
7	106-8395	1	Harness-Wire				
8	104-7401	1	Charger-12 Volt				
11	104-7953	1	Decal-Harness				
12	614249	2	Strap-Tie				
15	106-8397	1	Battery-12 Volt				
16	107-3774	1	Foam-Battery, Top				
●19	99-6124	2	Fuse-40 Amp				
●99	3256-51	1	Washer-Flat				
●99	47-2830	1	Metric Screw				

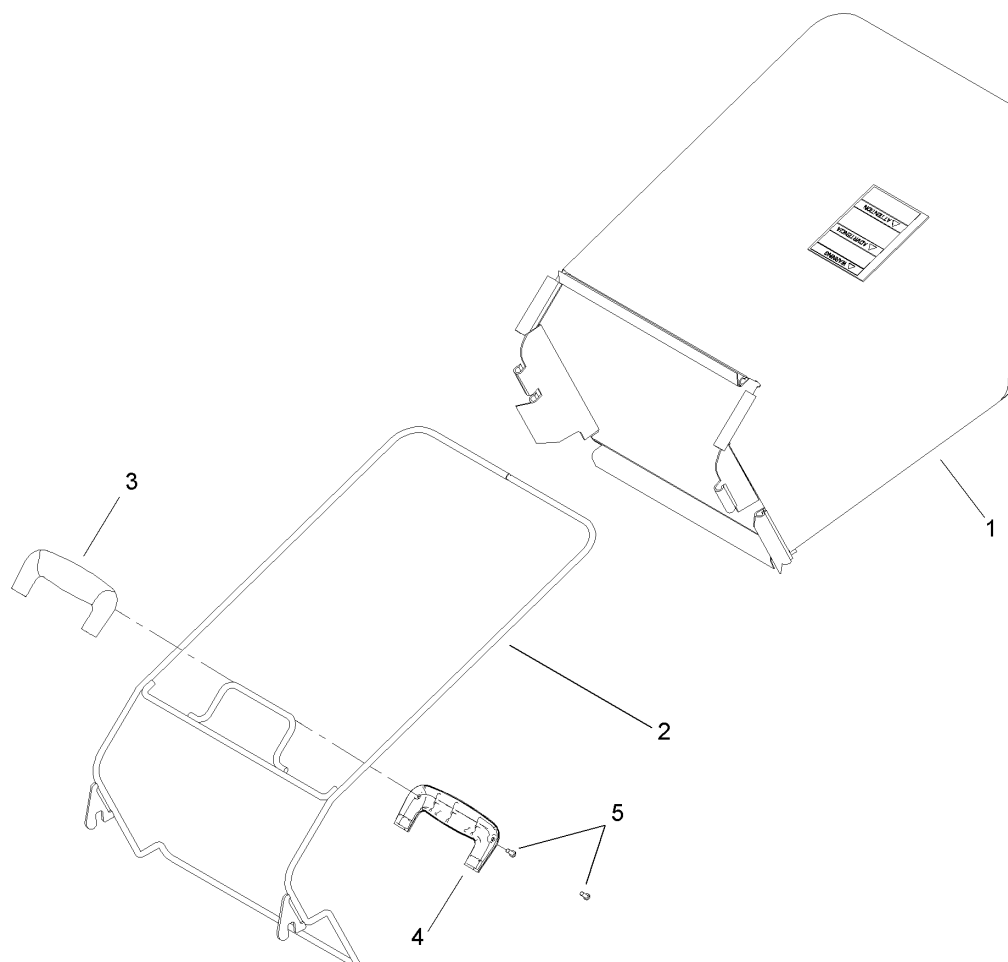 

Rear Bag Assembly

Ref	Part No.	Qty.	Description
1	106-8392	1	Grass Bag ASM
2	105-6831-03	1	Brace-Bag Frame ASM
3	107-1905	1	Handle-Bag, Top
4	107-1906	1	Handle-Bag, Bottom
5	32144-111	2	Screw-PPH

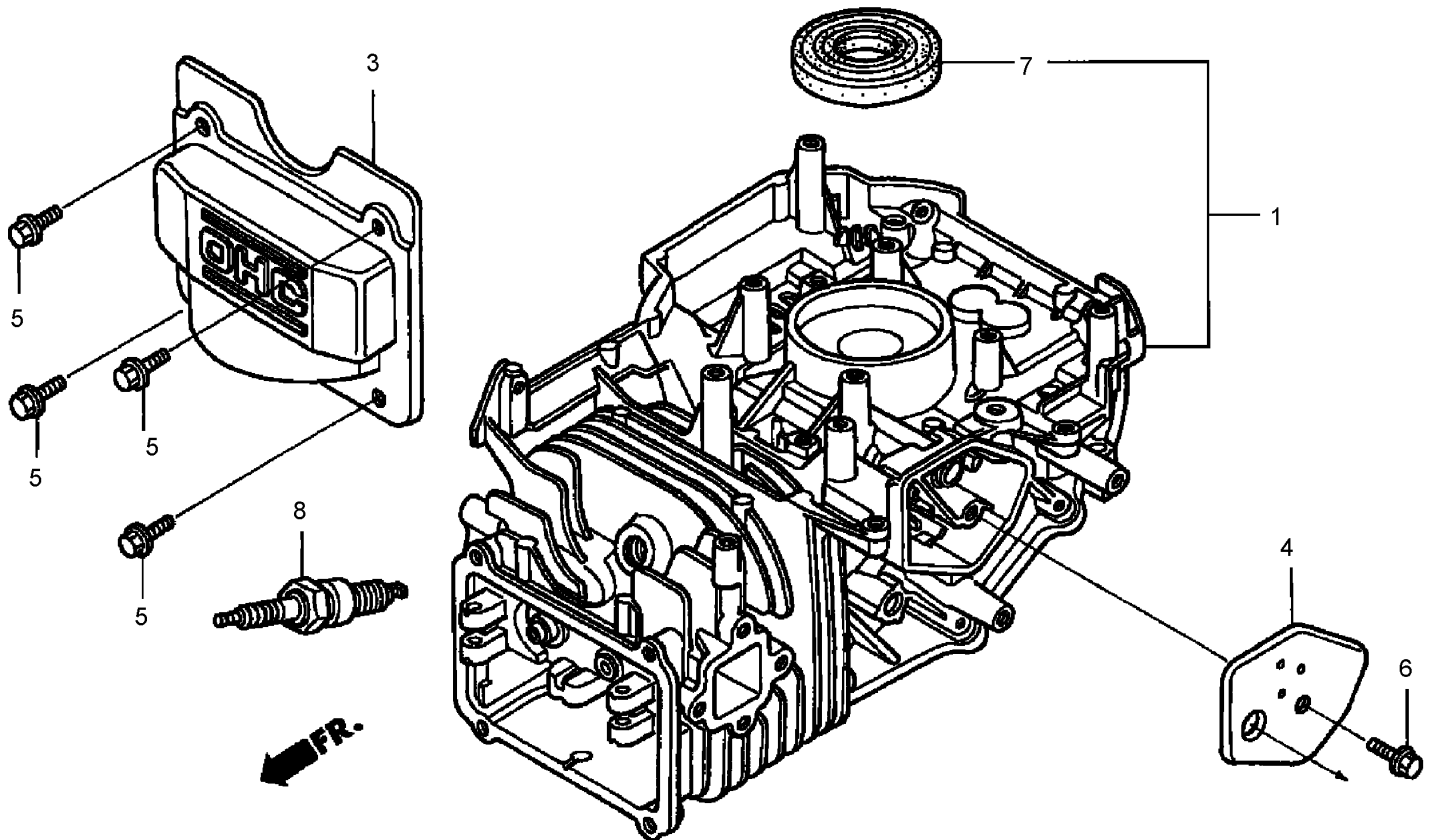 


PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Cylinder Barrel Assembly

Honda Model No. GCV160AR3A1


Ref	Part No.	Qty.	Description				
❸1	12000-Z0L-405	1	Cylinder Asm.				
❸3	12311-ZL8-000	1	Cover, Head				
❸4	12355-ZL8-000	1	Cover, Breather (Breather Valve Asm.)				
❸5	90013-883-000	4	Bolt-Flange				
❸6	90014-952-000	1	Bolt, Flange (6x14)				
❸7	91201-ZL8-003	1	Oil Seal (25.4x62x6)				
❸8	98079-56846	1	Spark Plug (Bpr6es) (Ngk)				

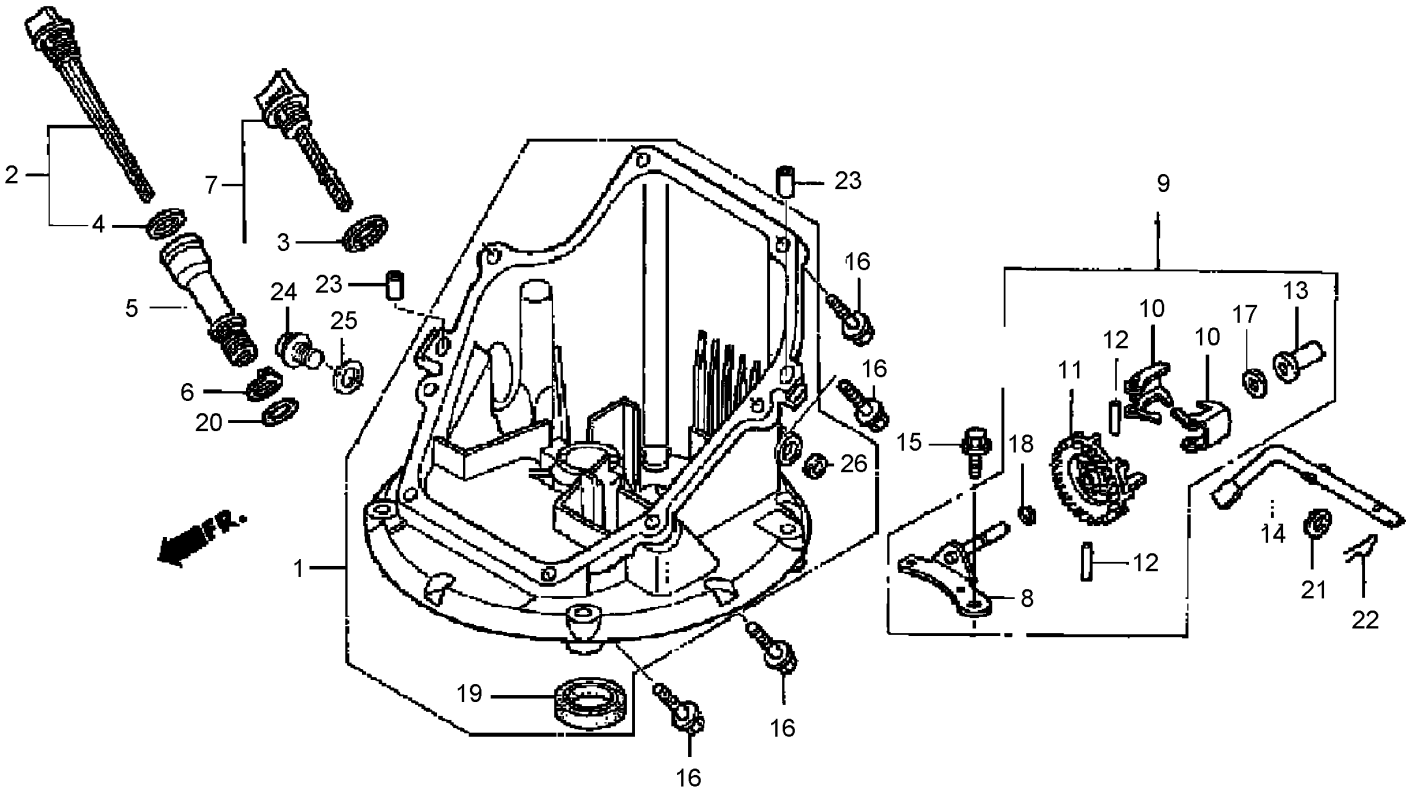 

PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Oil Pan Assembly
Honda Model No. GCV160AR3A1

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶1	11300-ZM0-811	1	Pan Asm., Oil	❶16	90121-952-000	8	Bolt, Flange (6x25)
❶2	15650-Z0L-820	1	Gauge Asm., Oil Level	❶17	90451-ZE1-000	1	Washer, Thrust (6mm)
❶4	15625-ZE6-000	1	Gasket, Oil Filler Cap	❶18	90602-ZE1-000	1	Clip-Governor Holder
❶5	15631-Z0L-820	1	Extension, Oil Filler	❶19	91202-ZL8-003	1	Oil Seal (28x41.25x6)
❶6	15639-ZM0-000	1	Washer, Extension Lock	❶21	94101-06800	1	Washer
❶8	16508-ZM0-010	1	Shaft, Governor Holder	❶22	94251-08000	1	Pin, Lock (8mm)
❶9	16510-ZM0-010	1	Governor Asm.	❶23	94301-08200	2	Pin, Dowel (8x20)
❶10	16511-ZL8-000	2	Weight, Governor				
❶11	16512-ZM0-000	1	Holder, Governor Weight				
❶12	16513-ZE1-000	2	Pin, Governor Weight				
❶13	16531-ZE1-000	1	Slider, Governor				
❶14	16541-ZM0-000	1	Shaft, Governor Arm				
❶15	90014-952-000	1	Bolt, Flange (6x14)				

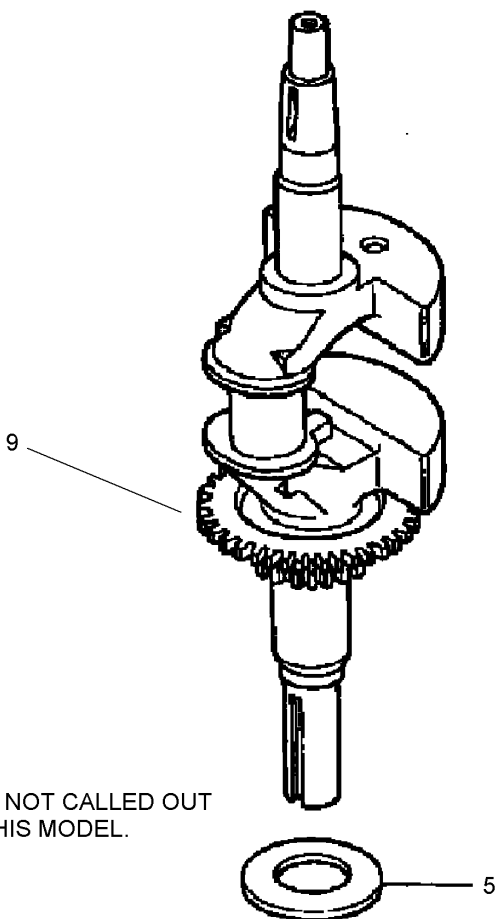 


PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT
IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Crankshaft Assembly

Honda Model No. GCV160AR3A1


Ref	Part No.	Qty.	Description
③5	90402-ZL8-000	1	Washer, Thrust
③9	13310-Z0L-V70	1	Crankshaft

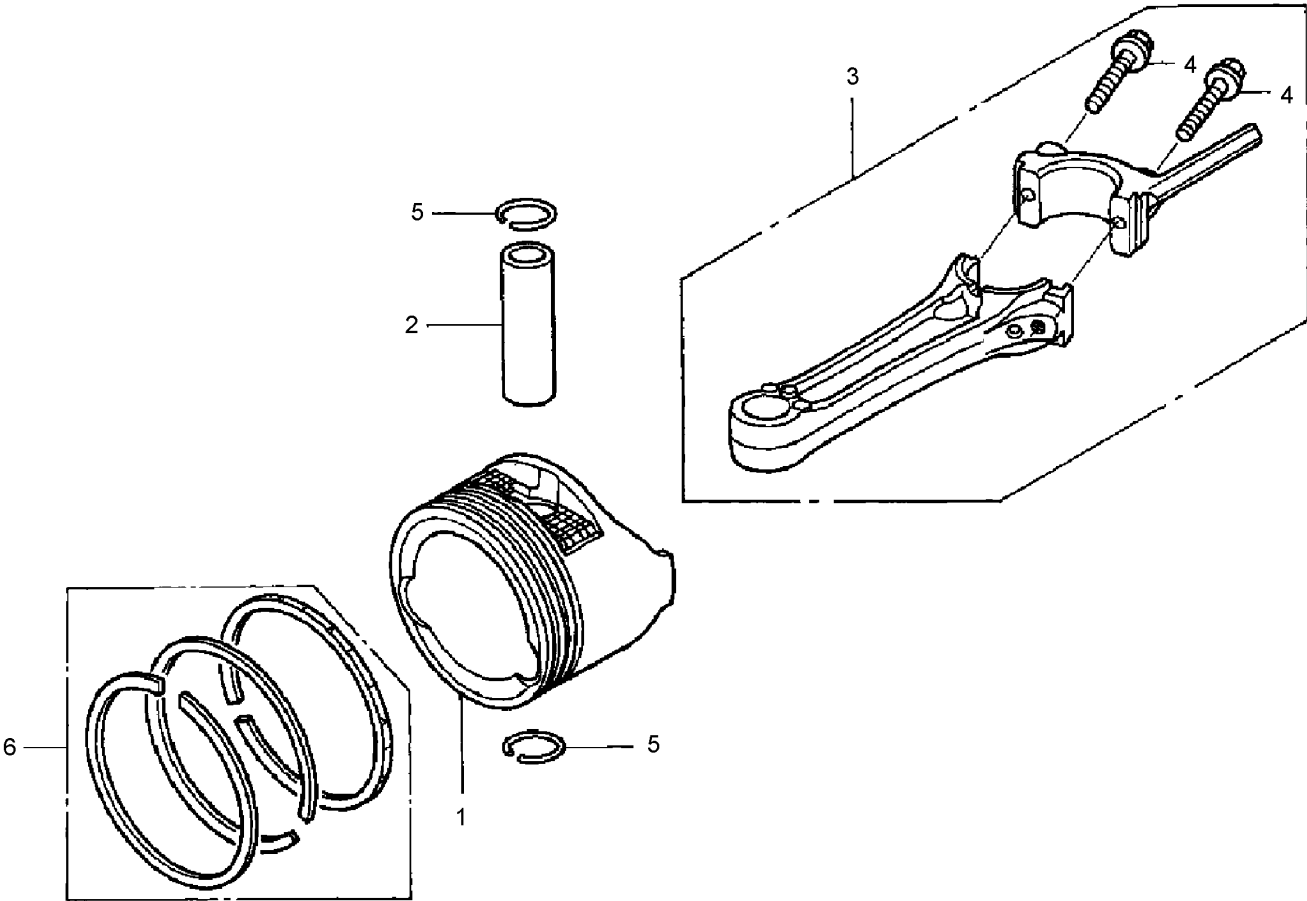 

PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Piston and Connecting Rod Assembly
Honda Model No. GCV160AR3A1


Ref	Part No.	Qty.	Description				
❶1	13101-ZL8-000	1	Piston				
❷2	13111-ZE0-000	1	Pin, Piston				
❸3	13200-ZL8-000	1	Rod Asm., Connecting				
❹4	90001-ZE1-000	2	Bolt, Connecting Rod				
❺5	90551-ZE0-000	2	Clip, Piston Pin (13mm)				
❻6	13010-ZL8-003	1	Ring Set, Piston (Riken)				
❼	13010-ZL8-024	1	Ring Set, Piston (Teikoku)				

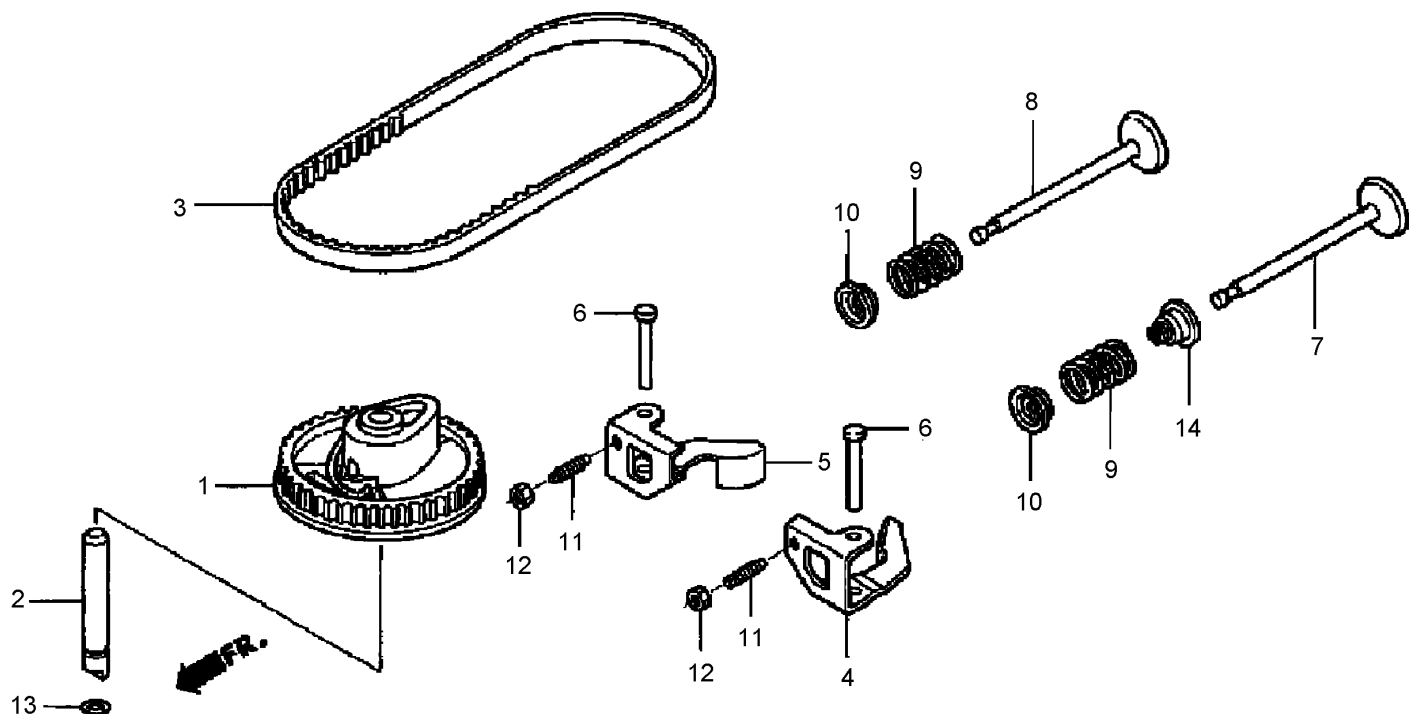 

PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Camshaft Assembly
Honda Model No. GCV160AR3A1

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶1	14320-ZL8-010	1	Pulley, Camshaft	❶14	12209-ZM0-003	1	Seal, Valve Stem
❶2	14324-ZL8-000	1	Shaft, Cam Pulley				
❶3	14400-Z0J-014	1	Belt, Timing (84hu7 G-014				
❶4	14431-Z0J-000	1	Arm, In. Valve Rocker				
❶5	14441-Z0J-000	1	Arm, Ex. Valve Rocker				
❶6	14461-ZL8-000	2	Shaft, Rocker Arm				
❶7	14711-ZL8-000	1	Valve, In.				
❶8	14721-ZL8-000	1	Valve, Ex.				
❶9	14751-ZL8-000	2	Spring, Valve				
❶10	14771-Z0J-000	2	Retainer, Valve Spring				
❶11	90012-333-000	2	Screw, Tappet Adj.				
❶12	90206-001-000	2	Nut, Tappet Adj.				
❶13	91301-ZM0-V31	1	O-Ring (6.8x1.9)				

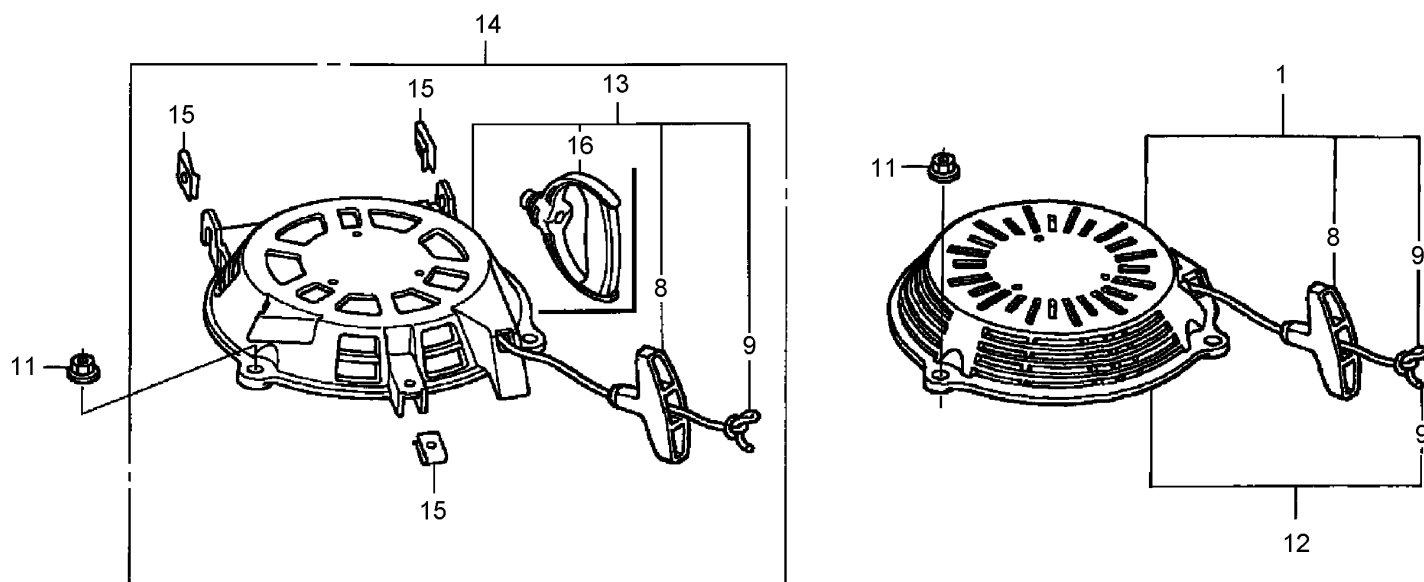 


PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Recoil Starter Assembly

Honda Model No. GCV160AR3A1

Ref	Part No.	Qty.	Description				
③9	28462-Z0L-V71	1	Rope, Recoil Starter				
③11	90201-ZM0-000	3	Nut, Flange (6mm)				
③13	28400-Z0L-V70	1	Starter Asm., Recoil				
③15	66871-KY2-700	3	Nut, Cowl (Upper)				
③16	28461-Z0L-V71	1	Knob, Recoil Starter				

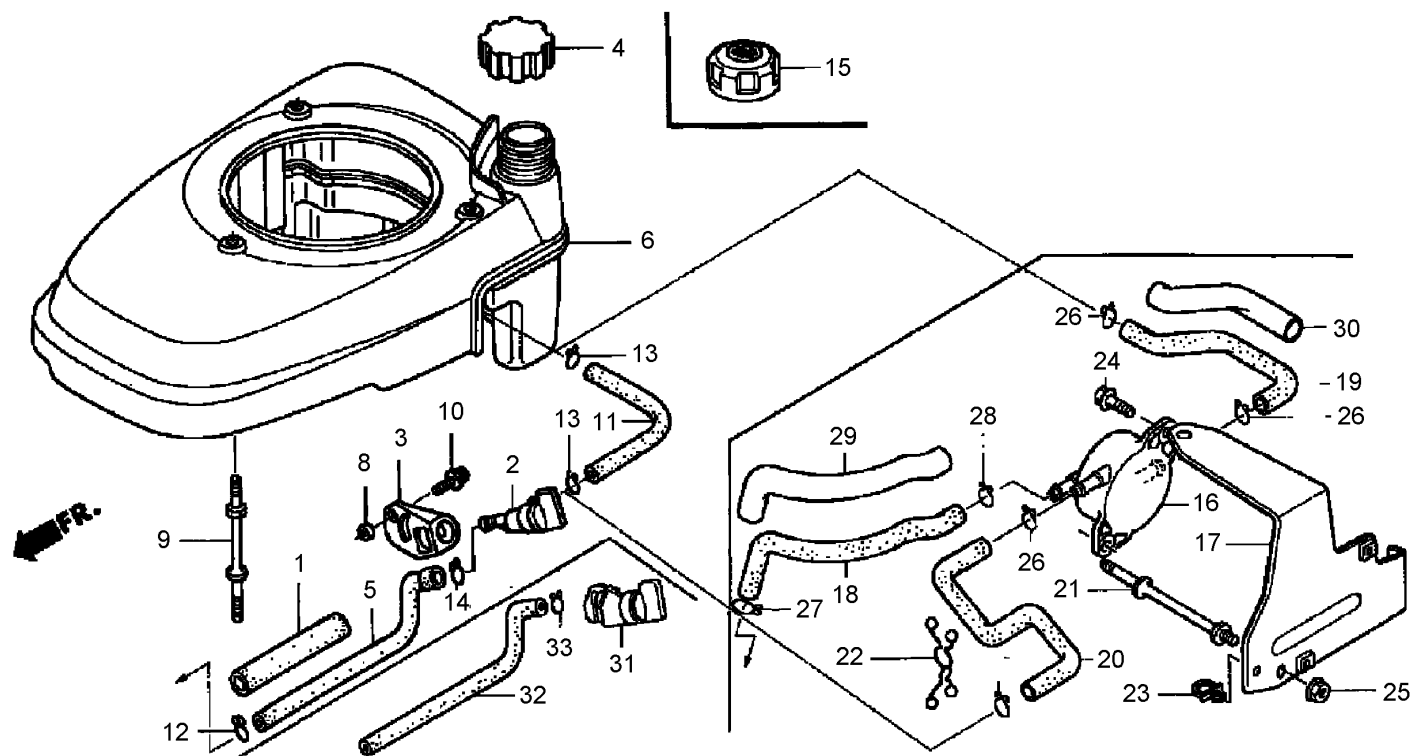 


PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Fan Cover Assembly

Honda Model No. GCV160AR3A1


Ref	Part No.	Qty.	Description				
❶	16854-ZH8-000	1	Rubber-Supporter (107mm)				
❷	16950-ZG9-M03	1	Petcock Asm.				
❸	16956-ZG9-M00	1	Bracket, Petcock				
❹	17620-ZL8-013	1	Cap Asm., Fuel Tank				
❺	17702-ZM0-000	1	Tube, Fuel				
❻	19610-Z0L-830ZA	1	Cover, Fan *nh1* (Black)				
❽	91501-Z0L-800	1	Collar, Fuel Petcock				
❾	90043-ZL8-000	3	Bolt, Stud				
❿	93891-05010-08	1	Screw-Washer (5x10)				
⓫	17701-Z0L-000	1	Tube, Fuel Tank				
⓬	95002-02080	1	Clip-Tube (B8)				
⓬	95002-02100	2	Clip, Tube (B10)				
⓬	95002-50000	1	Clip, Tube (C9)				

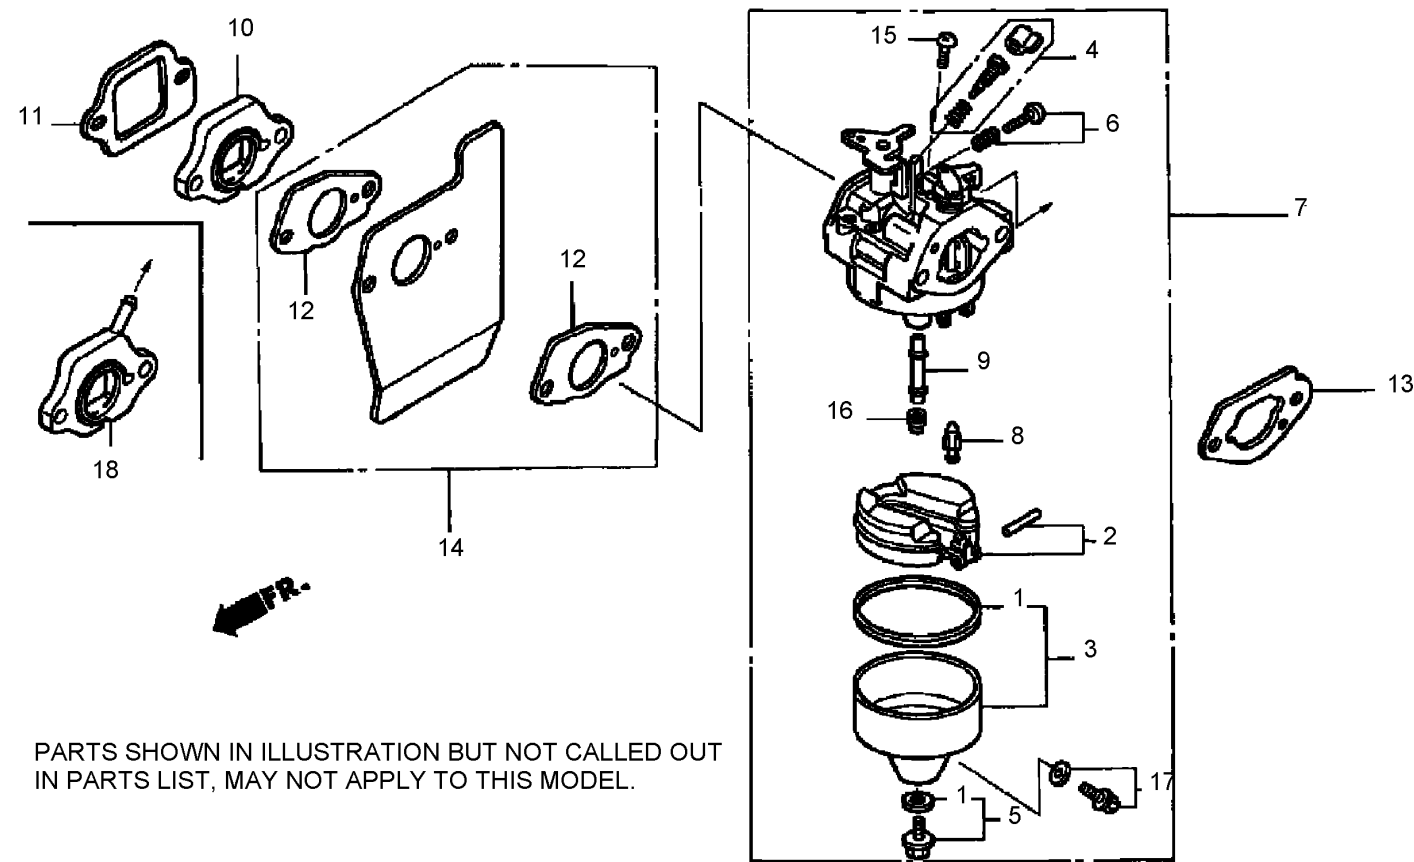 

Carburetor Assembly
Honda Model No. GCV160AR3A1

Ref	Part No.	Qty.	Description
❶1	16010-883-015	1	Gasket Set
❷2	16013-ZL1-003	1	Float Set
❸3	16015-887-782	1	Chamber Set, Float
❺5	16028-ZE0-005	1	Screw Set B
❷7	16100-Z0L-801	1	Carburetor Asm. (Bb62g A)
❸8	16155-ZM0-003	1	Valve, Float
❹9	16166-ZM0-003	1	Nozzle, Main
❺10	16211-ZL8-000	1	Insulator, Carburetor
❻11	16212-ZL8-000	1	Gasket, Insulator
❻12	16221-883-800	2	Gasket, Carburetor
❻13	16228-ZL8-000	1	Gasket, Carburetor (Choke Side)
❻14	19650-ZM0-000	1	Guide, Air
❻15	93500-05006-0H	1	Screw, Pan (5x6)


Ref	Part No.	Qty.	Description
❹16	99101-124-0600	1	Jet, Main (#60)
❹	99101-124-0620	1	Jet, Main (#62)
❹	99101-124-0650	1	Jet, Main (#65)
❹17	16024-ZE1-811	1	Screw Set-Drain

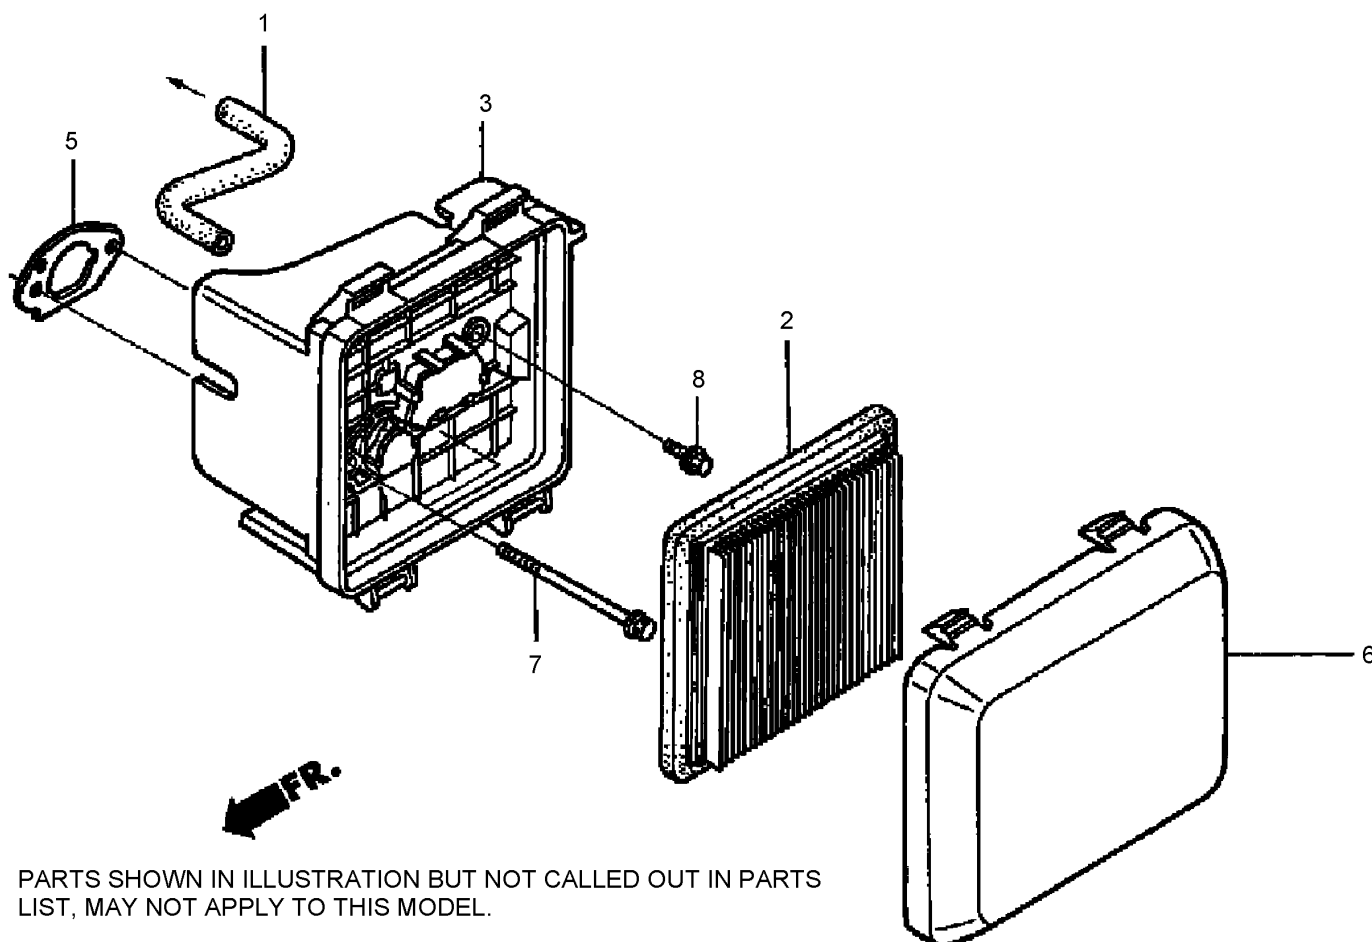 

Air Cleaner Assembly

Honda Model No. GCV160AR3A1

Ref	Part No.	Qty.	Description				
③1	15721-ZM0-000	1	Tube, Breather				
③2	17211-ZL8-013	1	Element, Air Cleaner				
③3	17220-ZM0-000	1	Case Asm., Air Cleaner				
③5	17228-ZM0-000	1	Gasket, Air Cleaner				
③6	17231-Z0L-020	1	Cover, Air Cleaner				
③7	90003-ZM0-000	2	Bolt, Flange (6x86) (Ct200)				
③8	95701-06014-08	1	Bolt, Flange (6x14)				

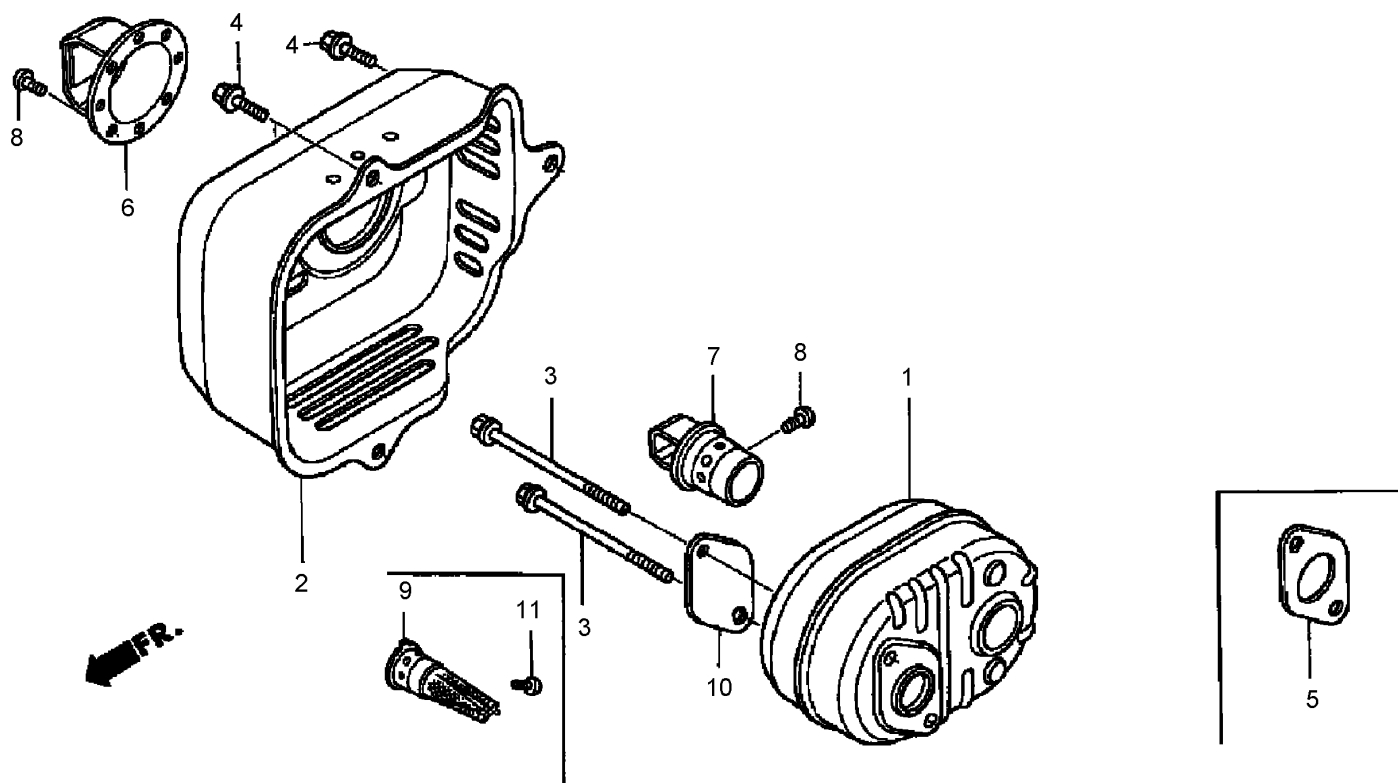 


PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIS, MAY NOT APPLY TO THIS MODEL.

Muffler Assembly

Honda Model No. GCV160AR3A1


Ref	Part No.	Qty.	Description				
③1	18310-ZM0-000	1	Muffler				
③2	18321-Z0L-J00	1	Protector, Muffler (Cbu)				
③3	90004-ZL8-000	2	Bolt, Flange (6x79) (Ct200)				
③4	90013-883-000	3	Bolt-Flange				
③5	18381-ZL8-305	1	Gasket, Muffler				
③9	18350-ZL8-000	1	Arrester, Spark				
③10	18356-ZL8-000	1	Plate, Arrester Number				
③11	90055-ZE1-000	1	Screw-Tapping (4x6)				

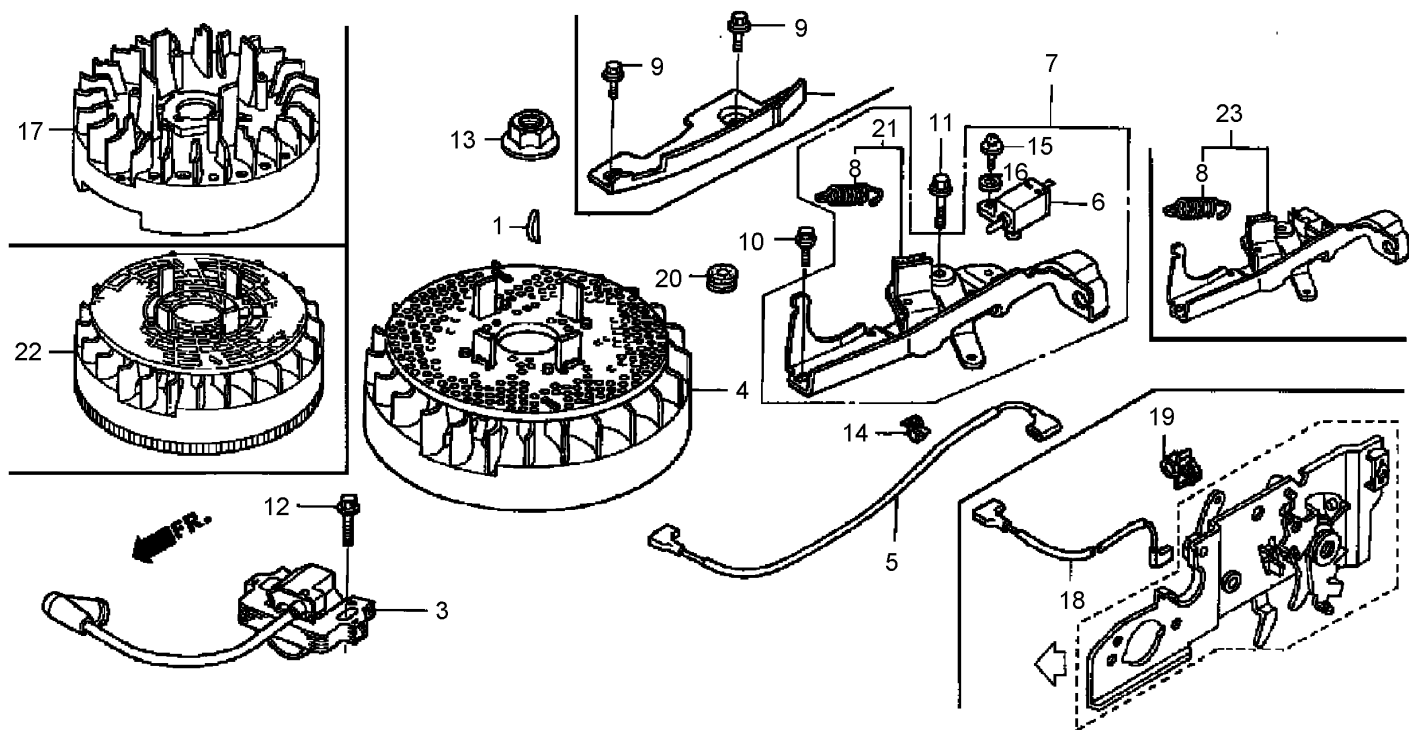 

PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Flywheel Assembly
Honda Model No. GCV160AR3A1

Ref	Part No.	Qty.	Description				
❶1	13331-357-000	1	Key, Special Woodruff (25x18)				
❸3	30500-Z0J-003	1	Coil Asm., Ignition				
❺5	32195-Z0L-820	1	Wire, Stop Switch				
❻8	75113-ZM0-000	1	Spring, Brake Lever				
❽10	90014-952-000	1	Bolt, Flange (6x14)				
❿11	90002-Z0L-820	1	Bolt, Flange (6x23) (Ct200)				
❿12	90022-888-010	1	Bolt, Flange (6x20) (Ct200)				
❿13	90201-878-003	1	Nut, Special (14mm)				
❿14	90681-959-003	1	Clip, Cable (A)				
❿22	31105-Z0L-820	1	Flywheel Asm.				
❿23	75110-Z0L-820	1	Brake Sub-Asm.				

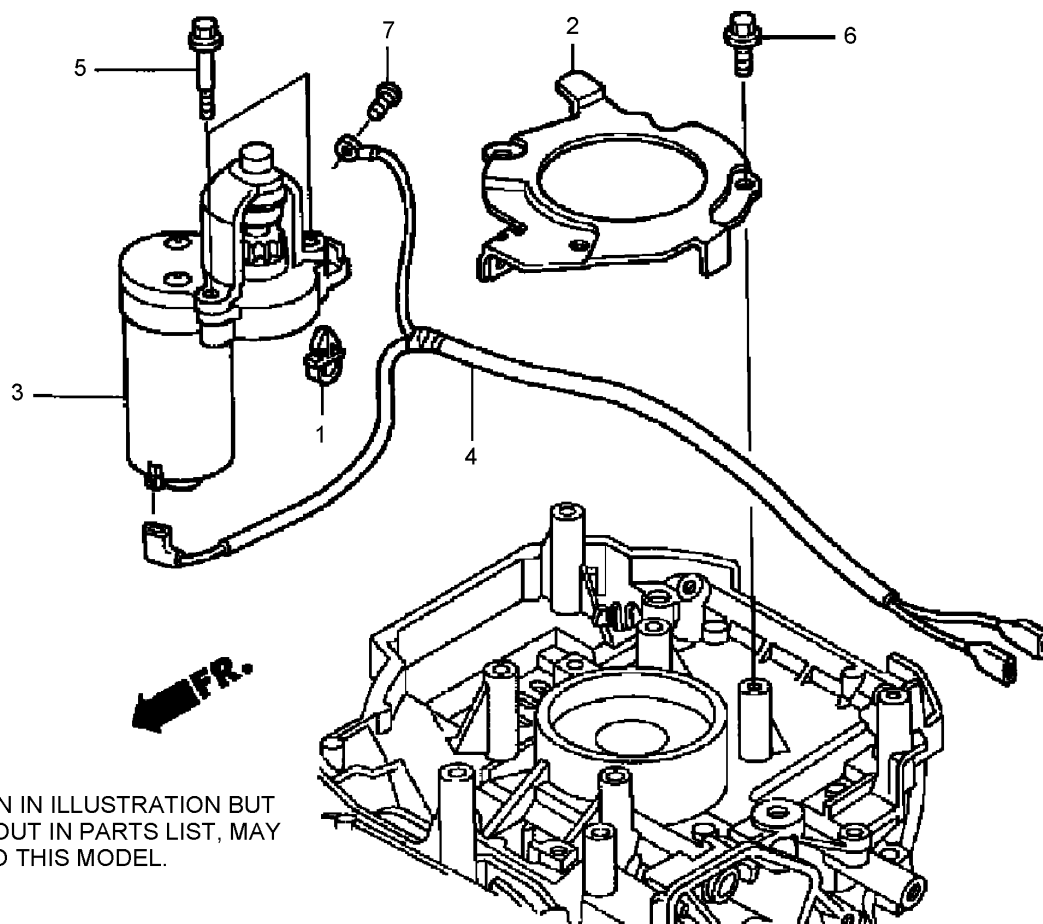 


PARTS SHOWN IN ILLUSTRATION BUT
NOT CALLED OUT IN PARTS LIST, MAY
NOT APPLY TO THIS MODEL.

Starter Motor Assembly

Honda Model No. GCV160AR3A1

Ref	Part No.	Qty.	Description				
③1	22534-Z0L-820	1	Holder, Wire				
③2	30549-Z0L-820	1	Clamp, Wire				
③3	31200-Z0L-821	1	Motor Asm., Starter				
③4	32222-Z0L-820	1	Wire, Terminal Ground				
③5	90001-Z0L-820	2	Bolt, Special (6mm)				
③6	90013-883-000	2	Bolt-Flange				
③7	93500-05008-0A	1	Screw, Pan (5x8)				

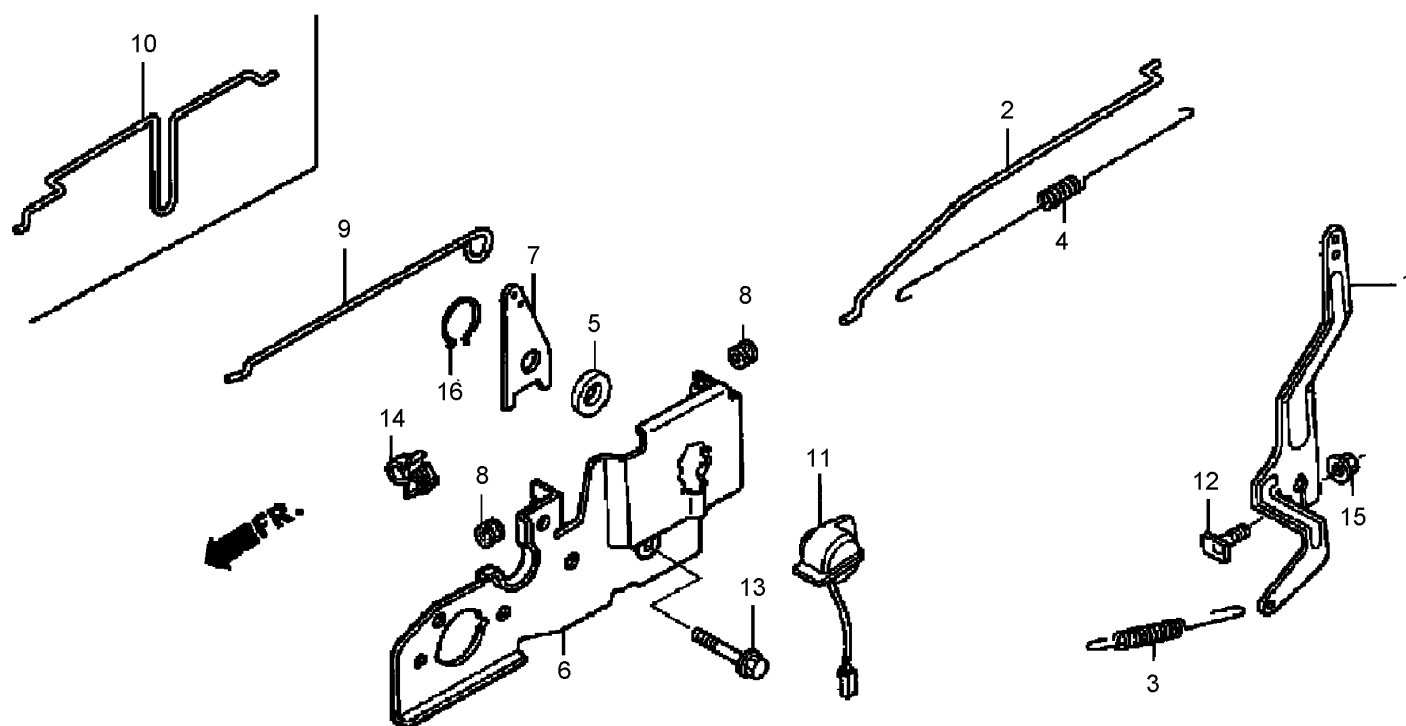 


PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Control Assembly

Honda Model No. GCV160AR3A1


Ref	Part No.	Qty.	Description				
③1	16551-ZM0-010	1	Arm, Governor				
③2	16555-Z0L-800	1	Rod, Governor				
③3	16561-Z0L-000	1	Spring, Governor				
③4	16562-ZM0-000	1	Spring, Throttle Return				
③6	16580-Z0L-810	1	Base, Control				
③12	90015-ZE5-010	1	Bolt-Governor Arm				
③13	90016-ZE8-000	1	Bolt, Flange (6x45)				
③15	94050-06000	1	Nut-Flange (6mm)				

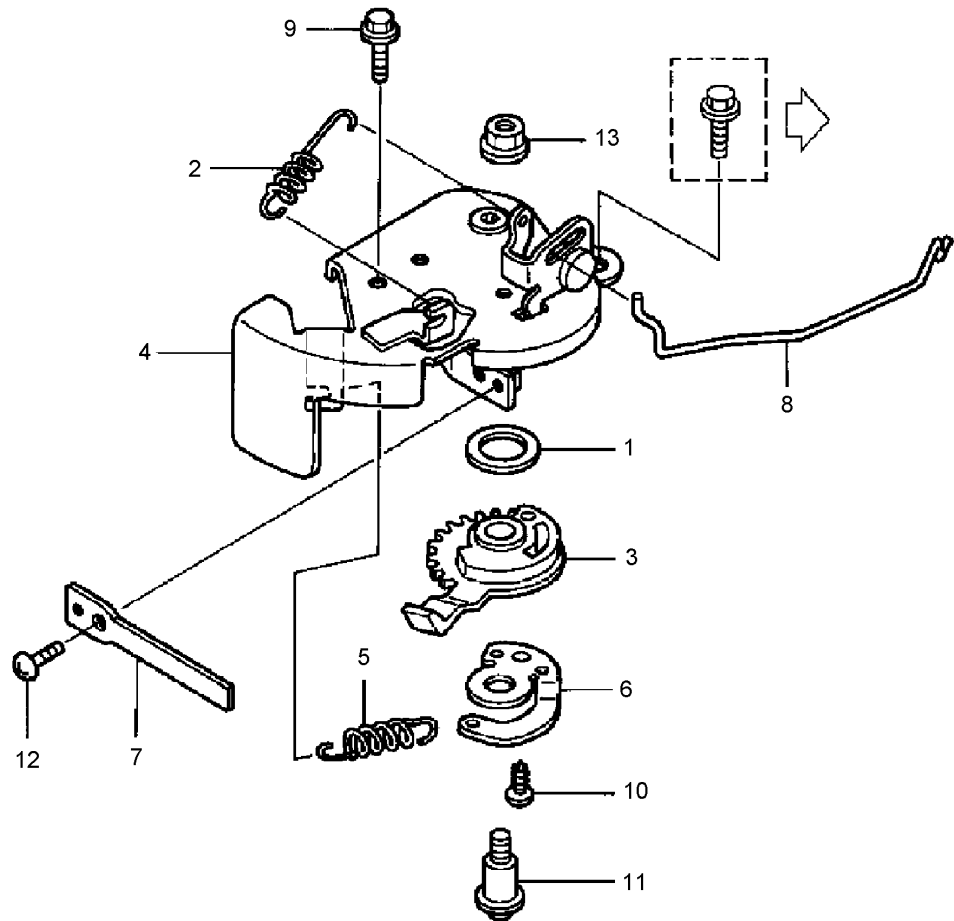 

PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Choke Base Assembly
Honda Model No. GCV160AR3A1

Ref	Part No.	Qty.	Description				
❶1	16251-Z0L-800	1	Seal, Choke Lever				
❷2	16592-ZJ1-000	1	Spring, Cable Return				
❸3	16612-Z0L-800	1	Lever, Choke				
❹4	16613-Z0L-800	1	Base, Choke				
❺5	16614-Z0L-800	1	Spring, Choke Lever				
❻6	16616-Z0L-800	1	Hook, Choke Spring				
❼7	16619-Z0L-800	1	Plate, Choke				
❽8	16632-Z0L-800	1	Rod, Stop				
❾9	90029-888-000	1	Bolt, Flange (6x16)				
❿10	90102-SP1-003	1	Screw, Tapping (4x8) (Po)				
❶11	90141-KT8-000	1	Screw, Pan (5x19)				
❶12	93500-04008-0H	1	Screw, Pan (4x8)				
❶13	94050-05000	1	Nut, Flange (5mm)				

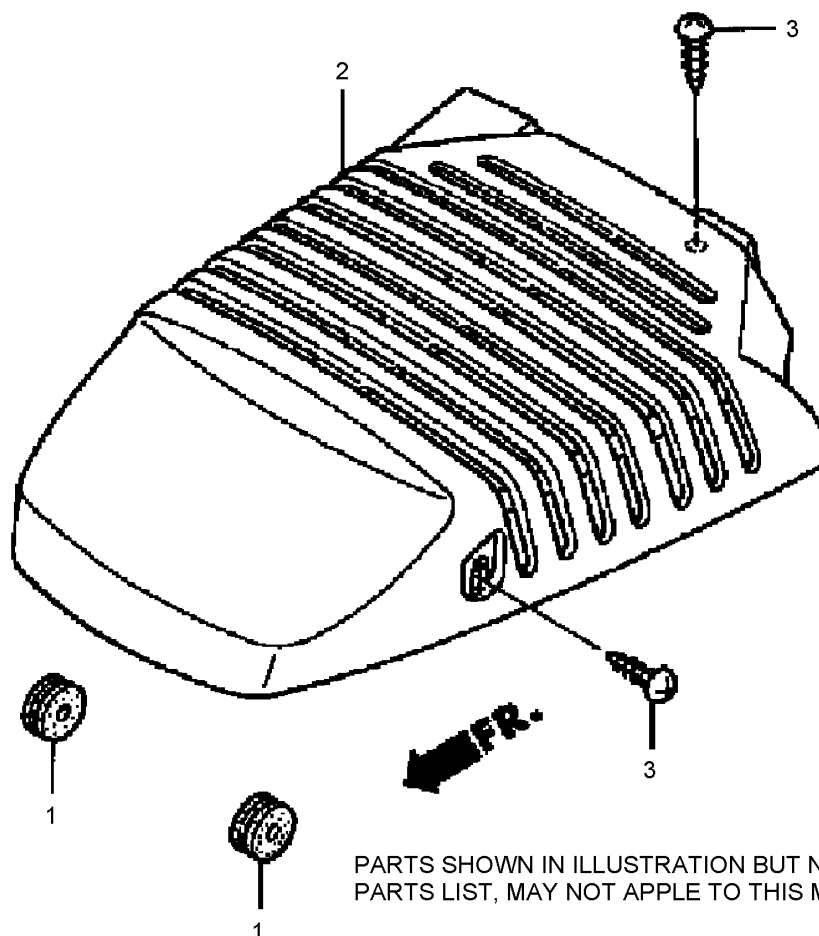 


PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPL E TO THIS MODEL.

Top Cover Assembly

Honda Model No. GCV160AR3A1

 [illegible]

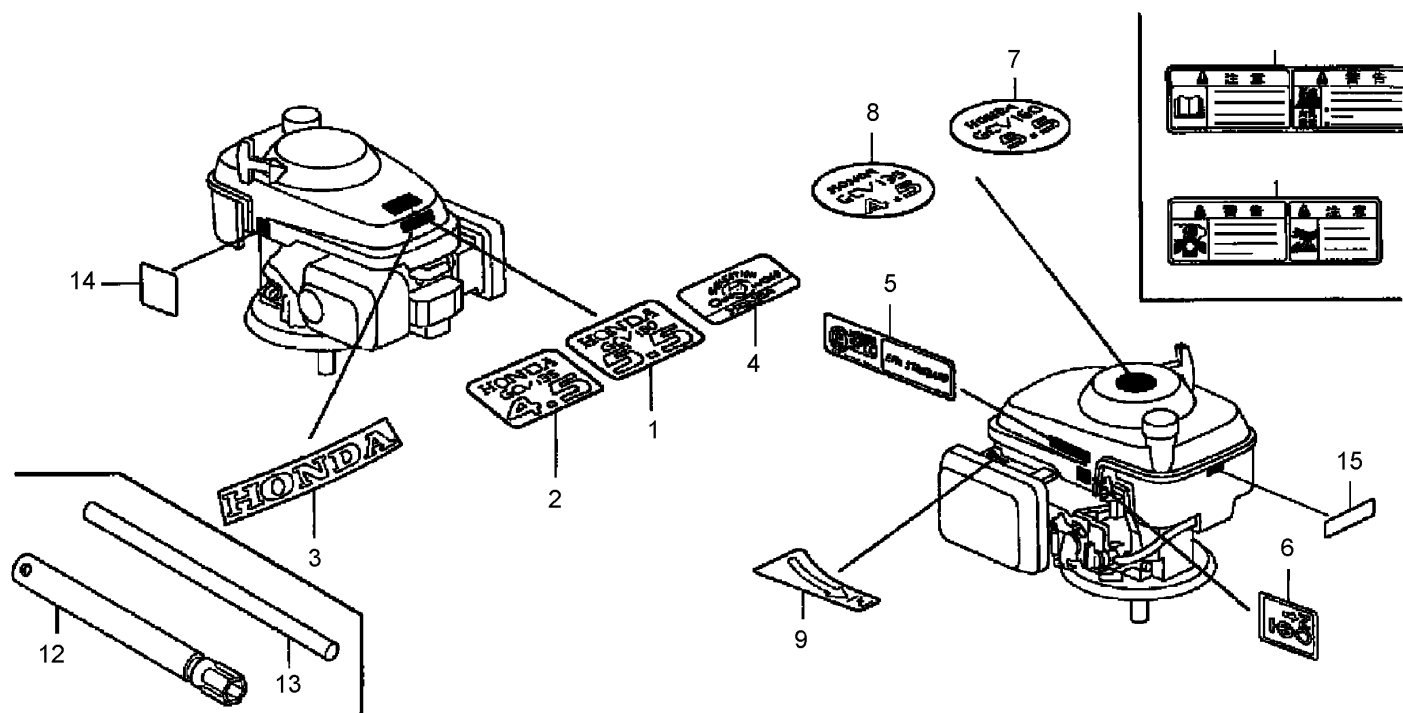

PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Label Assembly
Honda Model No. GCV160AR3A1

Ref	Part No.	Qty.	Description				
③1	87101-ZM0-010	1	Emblem (Gcv160 5.5)				
③9	87528-Z0L-800	1	Mark, Choke Indication				
③15	87601-Z0L-E70	1	Mark, Type (R3a1)				

NOTES

LAWN-BOY®