



Count on it.

Form No. 3468-643 Rev B

Parts Catalog

Cab Kit

**Workman® MD/MDE/MDX/MDXD Utility
Vehicle**

Model No. 07320—Serial No. 413000000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Cab Mount and Seal Assembly 4


Roof, Wiper and Console Assembly 6

Headliner Wire Harness Assembly 8

MDX Models Fuse Assembly 10

Front and Rear Window Assembly 12


Cab Mount and Seal Assembly

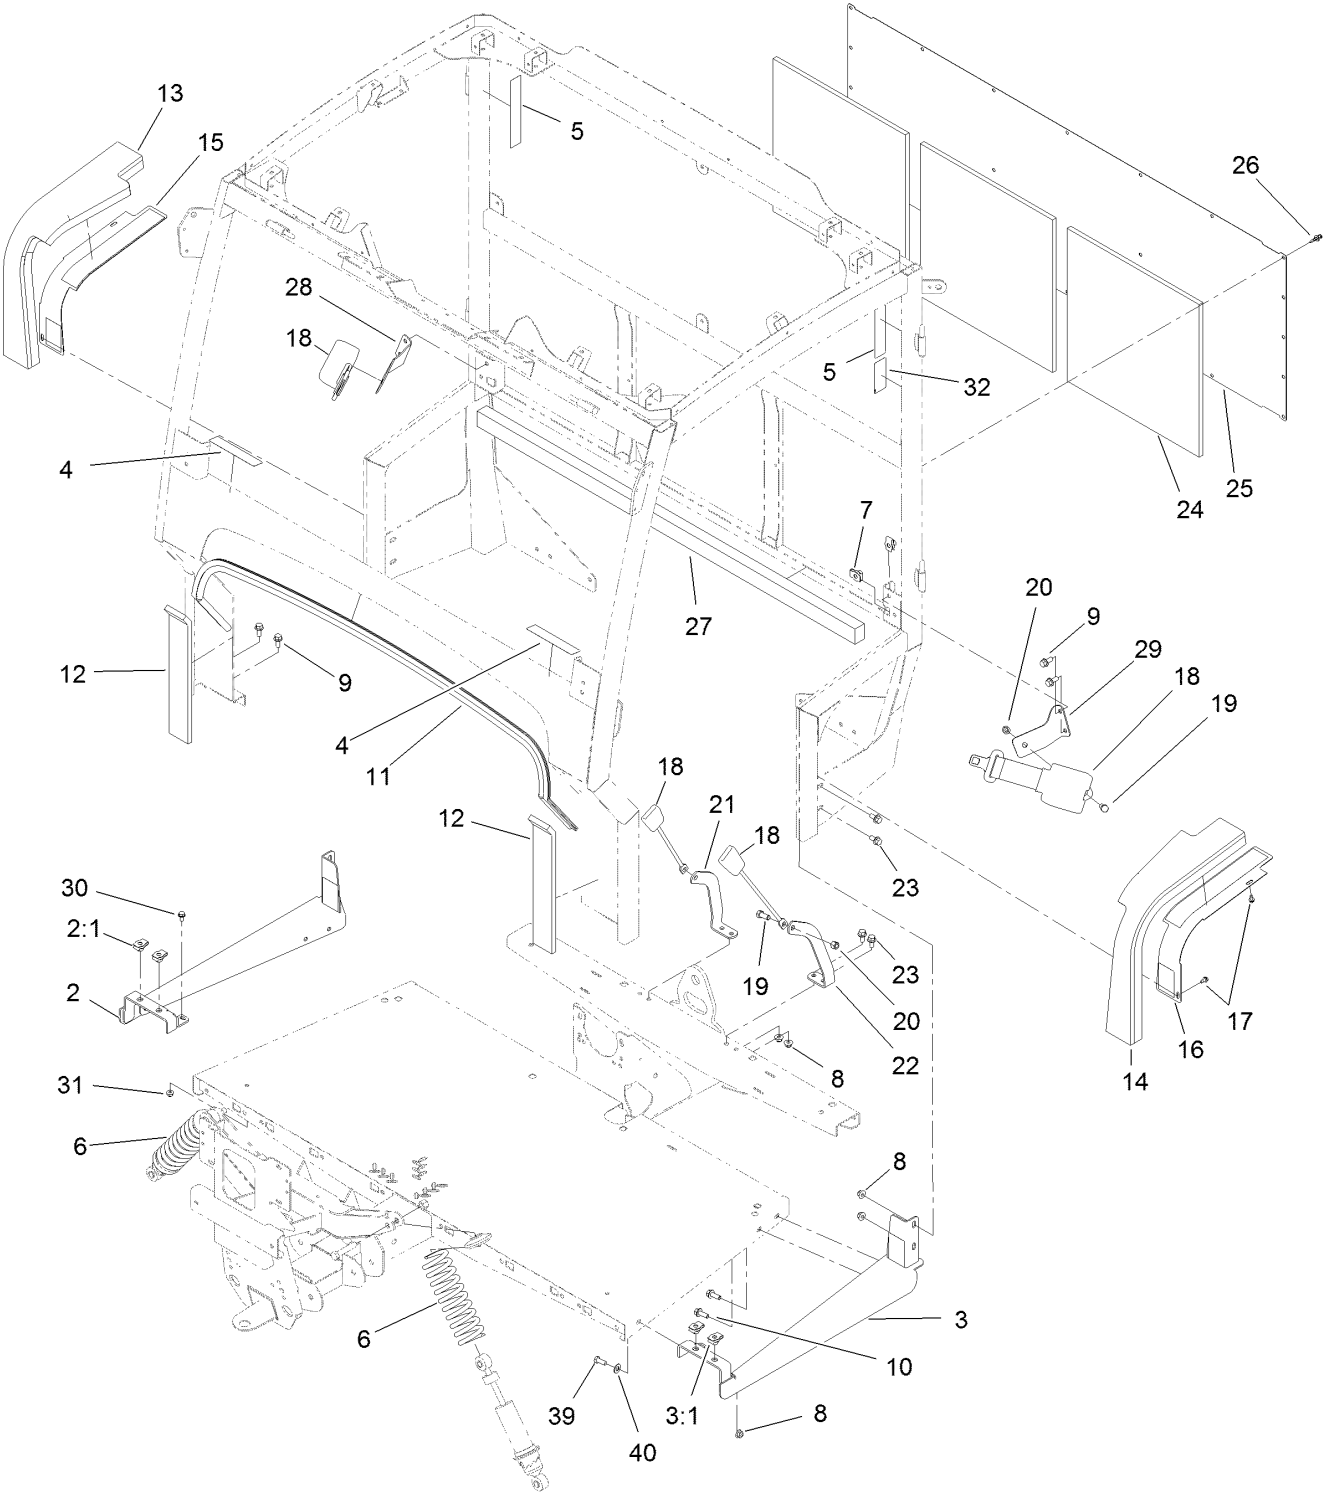

Cab Mount and Seal Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	130-5633	1	RH Floor Mount ASM	18	100-4928	2	Belt-Seat
2:1	105-4886	2	Nut-Tinnerman	19	3212-4	4	Screw-HH
3	130-5634	1	LH Floor Mount ASM	20	3296-7	4	Nut-Lock
3:1	105-4886	2	Nut-Tinnerman	21	99-7802-03	1	Anchor-Seat Belt, RH
4	130-5964	2	Decal-Window, Pin	22	99-7803-03	1	Anchor-Seat Belt, LH
5	117-4955	2	Decal-Danger, ROPS (CE)	23	3234-1	14	Screw-HHF
6	133-0629	2	Spring-Compression	24	125-9969	3	Foam-Upholstery, Rear
7	105-4886	4	Nut-Tinnerman	25	125-9978	1	Plate-Panel, Rear
8	104-8301	20	Nut-HF, NI	26	125-9622	22	Rivet-Blind
9	3234-25	8	Screw-HHF	27	125-9947	1	Foam-Strip, Rear
10	3234-42	4	Screw-HHF	28	127-9875-03	1	Bracket-Seatbelt, RH
11	127-9985	1	Trim-Seal, Bulb	29	125-9977-03	1	Bracket-Seatbelt, LH
12	125-9940	2	Foam-Pad	30	3234-47	2	Screw-HHF
13	125-9941	1	Foam-Side, RH	31	104-8300	2	Nut-HF, NI
14	125-9942	1	Foam-Side, LH	32	93-9850	1	Decal-ROPS, CE
15	130-5431	1	Mount-Foam, RH	39	323-5	2	Screw-HH
16	130-5432	1	Mount-Foam, LH	40	3256-25	2	Washer-Flat
17	32104-17	4	Screw-HWH				


Roof, Wiper and Console Assembly

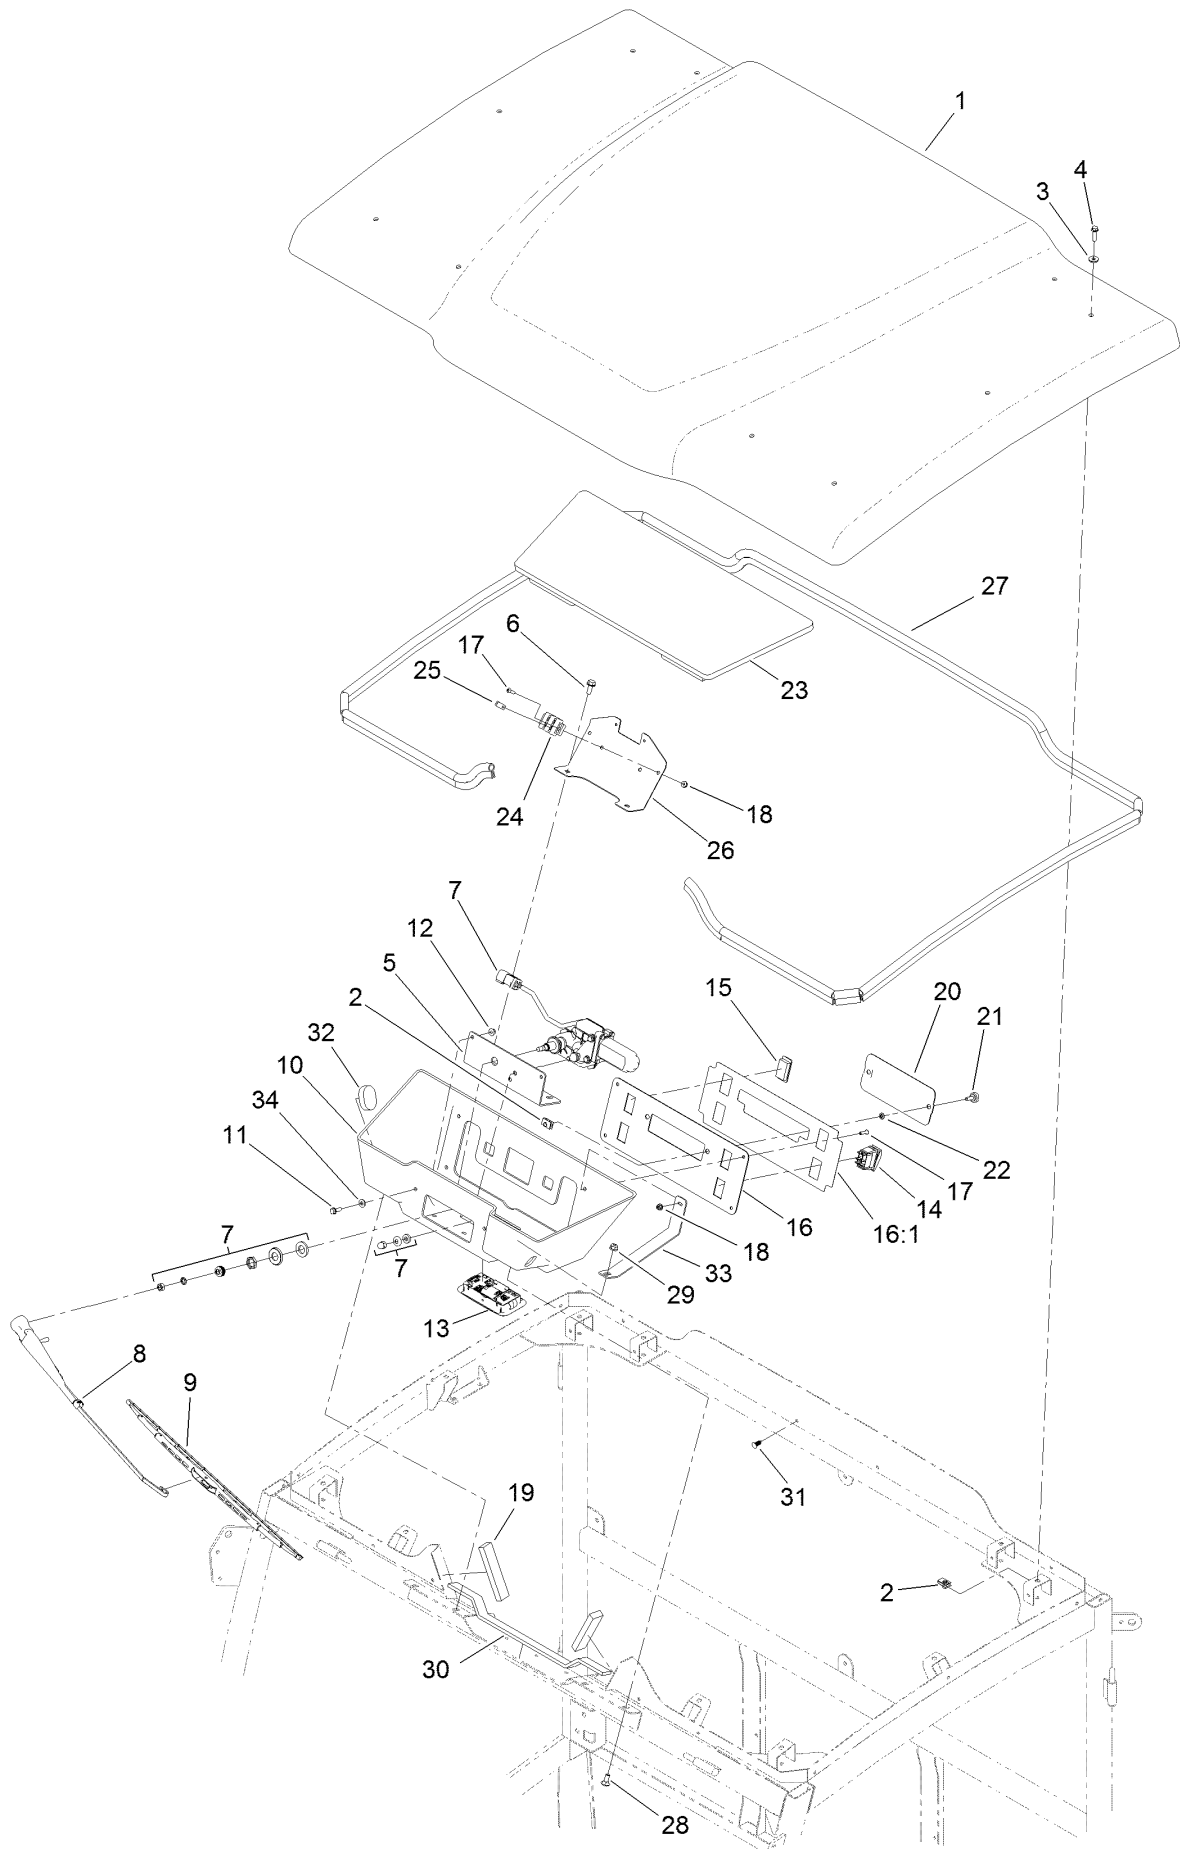

Roof, Wiper and Console Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-1972	1	Roof-Cab	18	120-4578	8	Nut-HF
2	107069	12	Clip	19	130-5438	2	Foam-Strip
3	119-0872	10	Washer-Sealing, Bonded	20	125-9603-03	1	Plate-Cover, Fuse
4	120-4654	10	Screw-HHF	21	125-7438	2	Knob-Screw, Thumb
5	127-9990-03	1	Bracket-Motor, Wiper	22	32115-15	2	Nut-Push
6	32144-11	3	Screw-HWH	23	130-5437	1	Foam-Plug, Console
7	130-6087	1	Wiper Motor ASM	24	42862	1	Block-Terminal, Ground
8	127-9878	1	Arm-Wiper	25	42863	1	Strip-Jumper
9	130-5829	1	Blade-Wiper	26	130-5727-03	1	Mount-Block, Fuse
10	125-9972	1	Console-Roof, Top	27	130-5408	1	Trim-Seal, Bulb
11	32105-15	2	Screw-HWH	28	3230-1	2	Bolt-CARR
12	104-7201	2	Nut-HF, NI	29	104-8300	2	Nut-HF, NI
13	125-7437	1	Light-Dome	30	130-5617	1	Foam-Strip
14	119-8355	1	Switch-Rocker	31	114-4899	12	Rivet-Push
15	99-7420	3	Plug-Hole	32	130-5488	1	Plug-Console
16	145-7732	1	Panel ASM-Console	33	130-5609-03	2	Strap-Support, Console
16:1	145-7728	1	Decal-Console	34	3256-1	2	Washer-Flat
17	104-2408	8	Screw-HSBH				

Headliner Wire Harness Assembly

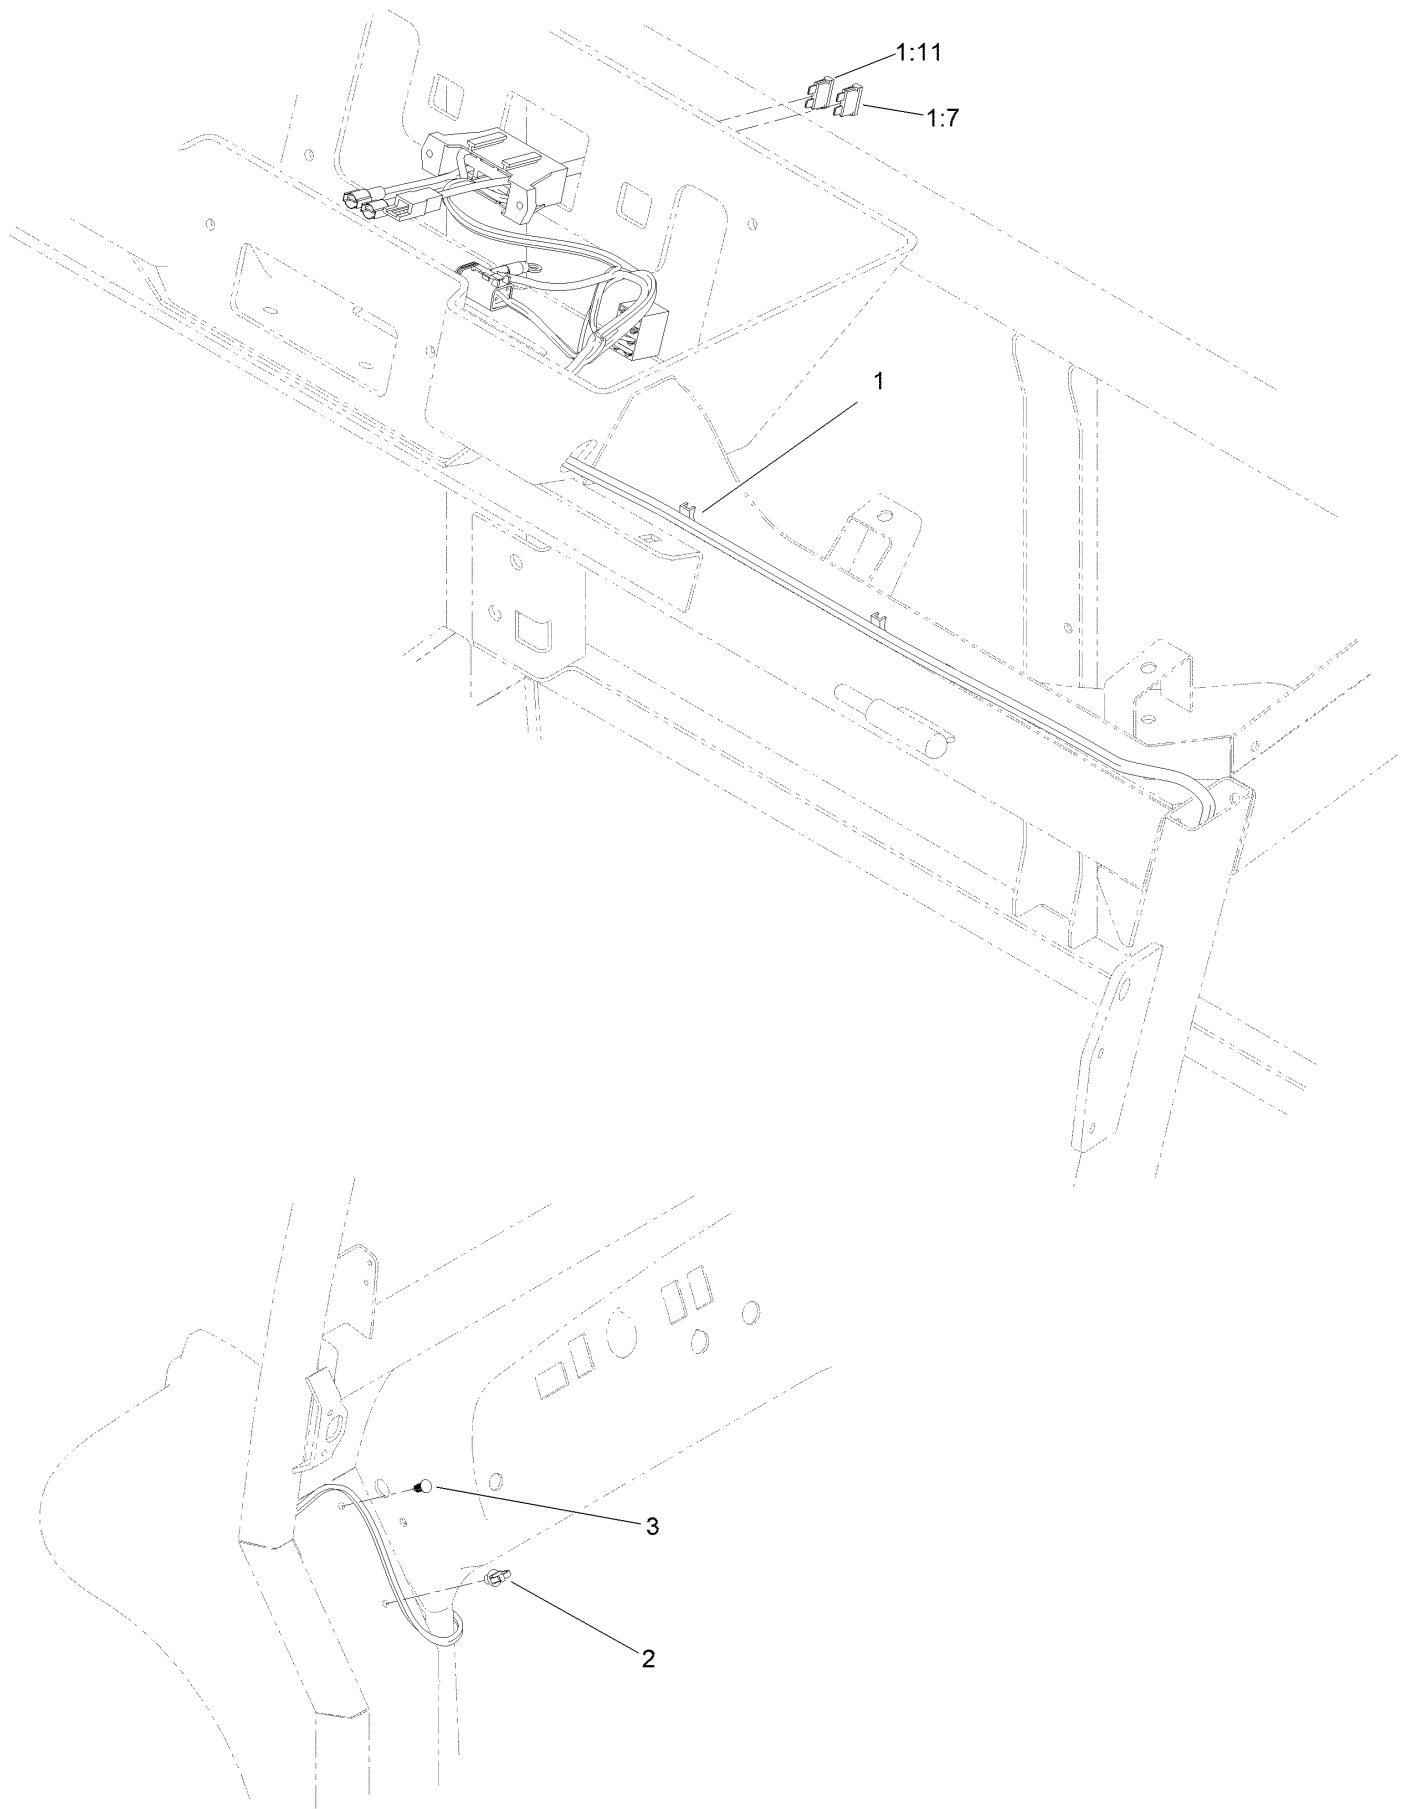


Headliner Wire Harness Assembly (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	122-0843	1	Harness-Wire, Headliner
1:7	109355	1	Fuse-Blade, 15 Amp
1:11	110928	1	Fuse-Blade, 5 Amp

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	32180-030	1	Clip-Tie
3	114-4899	1	Rivet-Push

MDX Models Fuse Assembly

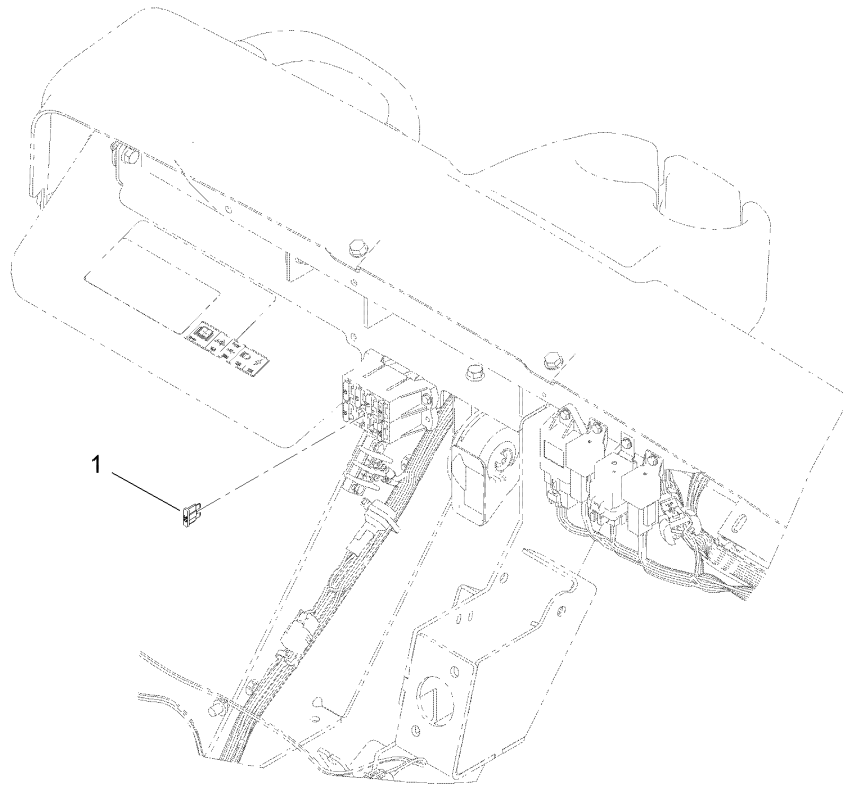

MDX MODELS

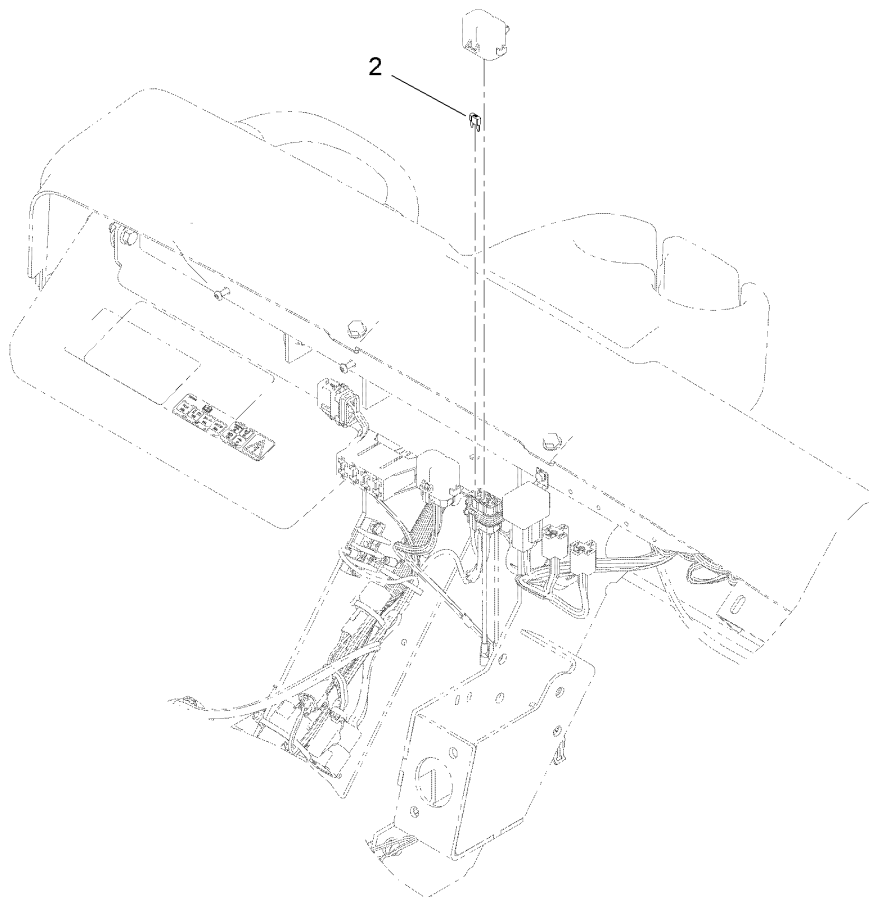


MDX LITHIUM MODELS

MDX Models

Fuse Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	109103	1	Fuse-Blade, 30 Amp
2	121-8869	1	Fuse-Mini Blade, 25 Amp

Front and Rear Window Assembly

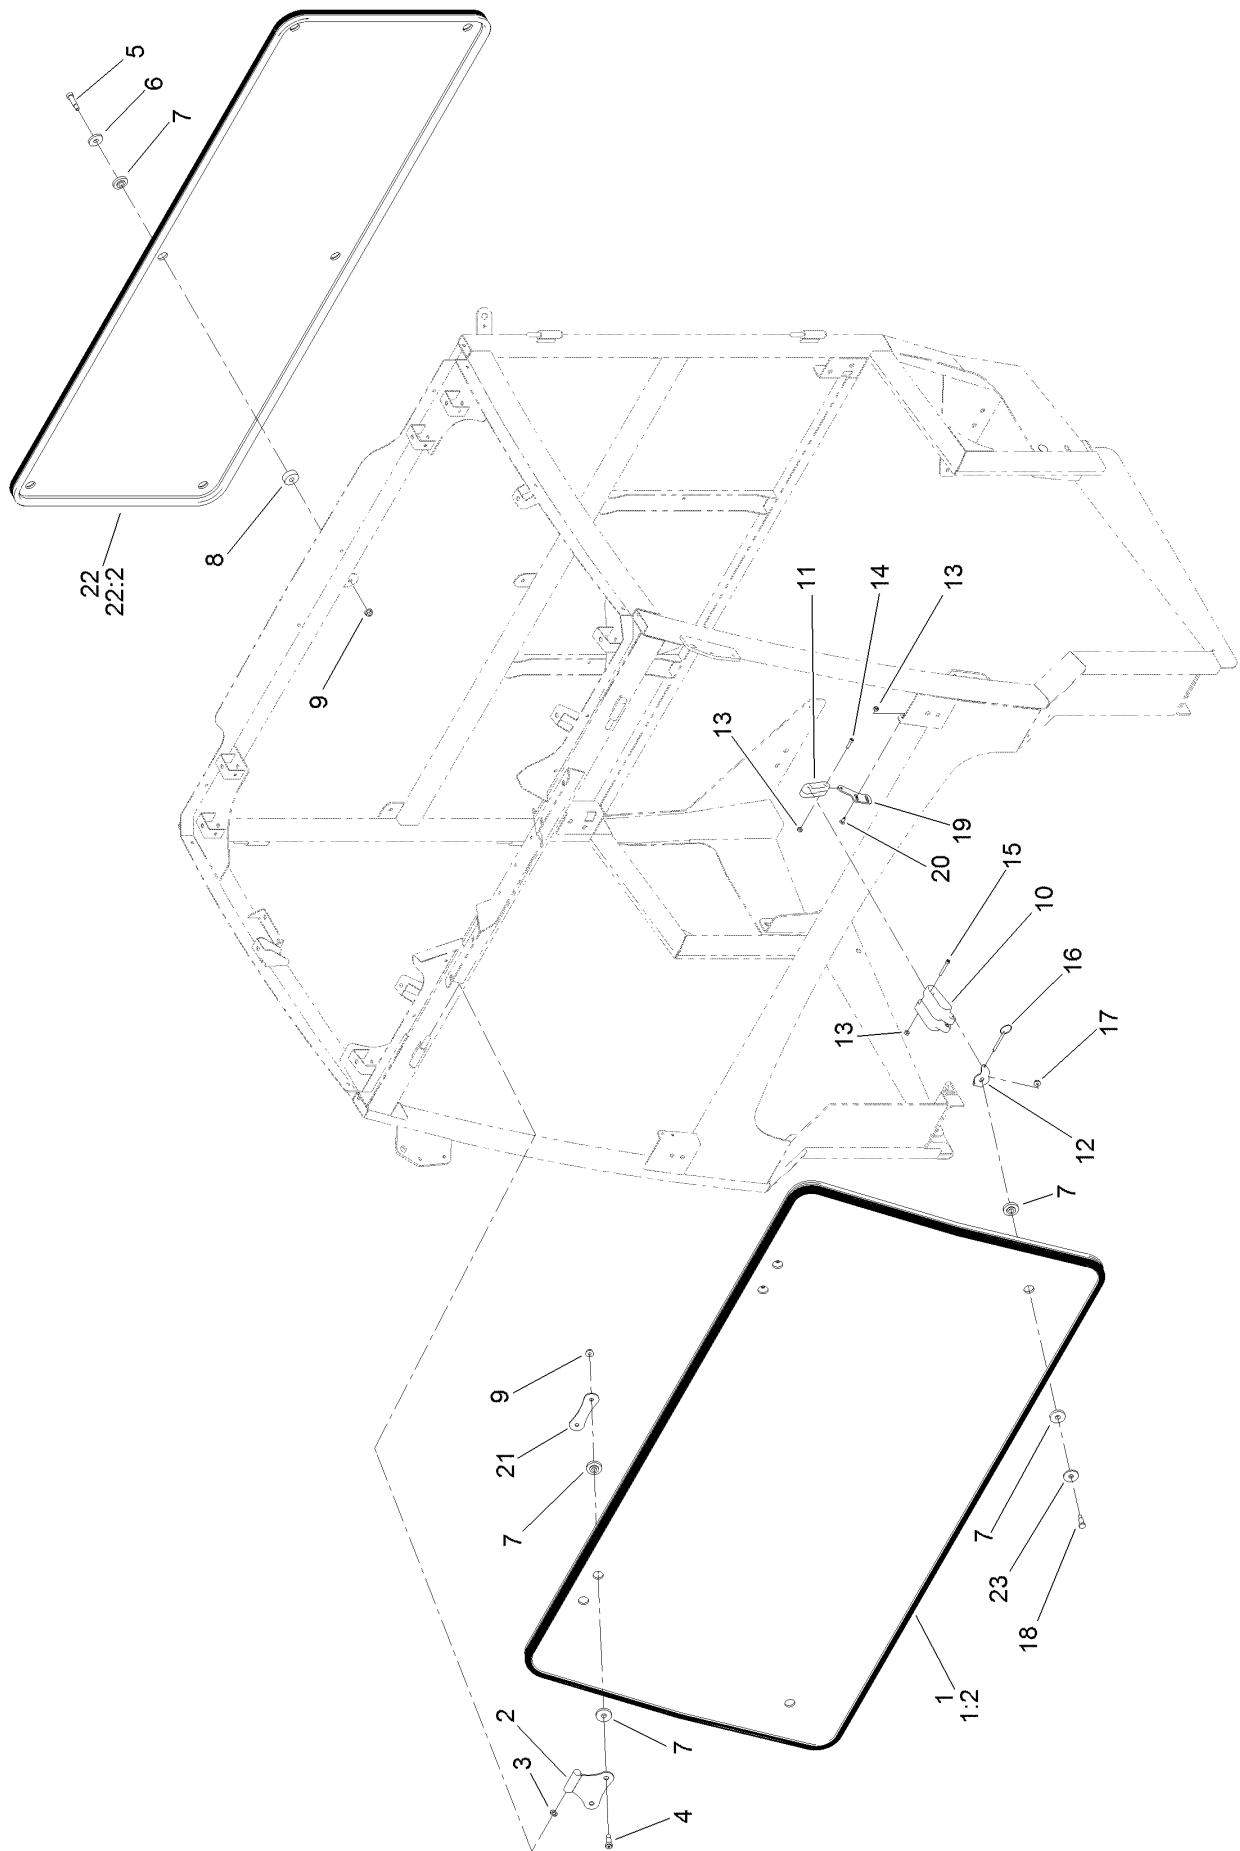

Front and Rear Window Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-5693	1	Front (Upper) Window ASM	13	120-9681	8	Nut-Lock, NI
1:2	125-9962	1	Trim-Window	14	3274-14	2	Screw-HSH
2	121-8535-03	2	Hinge-Window	15	3274-59	2	Screw-HSH
3	121-8441	2	Washer-Spacer	16	127-9850	2	Pin-Release, Quick
4	125-9520	4	Screw-Shoulder, HSH	17	104-7201	2	Nut-HF, NI
5	125-9521	6	Screw-Shldr HSH	18	119-9812	2	Bolt-Shoulder
6	130-5815	6	Washer-Backup	19	130-0590	2	Mount-Tab
7	125-9982	18	Bushing-Flange	20	1-807513	4	Bolt-CARR
8	125-9537	6	Bushing-Flange	21	144-3307	2	Plate-Backer, Windshield
9	104-8300	10	Nut-HF, NI	22	130-5694	1	Rear Window ASM
10	125-9792	2	Handle-Window	22:2	125-9965	1	Trim-Window
11	125-9793	2	Link-Window	23	125-9676	2	Washer-Backup
12	144-3308	2	Mount-Latch				

Notes:

Notes:



Count on it.