



Count on it.

Parts Catalog

Pro Force® Debris Blower

Model No. 44556—Serial No. 40000000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Frame, Wheel, Axle and Hitch Assembly	4
Frame Assembly No. 161-7874	6
Hub and Axle Assembly No. 144-3630	8
Wheel and Tire Assembly No. 144-3664	10
Turbine Mounting Assembly	12
Turbine Assembly No. 140-6946SP	14
Nozzle Assembly	16
Driveshaft and Battery Assembly	18
Engine, Muffler and Fuel Tank Assembly	20
Fuel Tank Assembly No. 115-9048	22
Fuel Delivery Assembly	24
Electrical System Assembly	26
Wire Harness Assembly No. 122-3530	28
Ignition Switch Assembly No. 121-5159	30
Controller Assembly No. 132-9600	32
Remote Assembly No. 125-1270	34
Red LED Indicator Lamp Assembly No. 122-0630	36
Attachments and Accessories	38

Frame, Wheel, Axle and Hitch Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	161-7874	1	Frame ASM Service Kit	23	119-4041	10	Nut-HF
2	119-2958-01	2	Mount-Axle	25	13-6200	1	Pin-Hitch, Pointed
3	144-3630	2	Hub Axle ASM	26	3256-82	8	Washer-Flat
4	112-6852	2	Fender	27	92-1298	1	Pin-Lynch
5	119-4042	8	Nut-HF, NI	28	3296-48	4	Nut-Hex
6	1-543286	2	Grommet	29	3232-17	4	Screw-CARR
7	3231-2	6	Bolt-CARR	30	161-4947-01	1	Tower-Control
8	2412-133	2	Clamp-R	31	323-10	3	Screw-HH
9	104-7050	1	Tube-Manual	32	93-8806	6	Washer-Hardened
10	144-3664	2	Wheel ASM	33	32128-19	3	Nut-HF Lock, Large Flg
11	323-14	2	Screw-HH	34	121-2870	3	Mount-2 Piece
12	112-6942-01	1	Hitch	35	119-6165	1	Decal-Ignition
13	3296-53	2	Nut-Lock, NI	36	131-6766	1	Decal-Fuses
14	327-23	2	Screw-HH	37	131-6703	1	Bracket-Hold Down, Electrical
15	131-4381-01	1	Hitch-Clevis	38	3334-945	1	Tie-Cable
16	104-7048	1	Cap-Housing	39	32180-030	1	Clip-Tie
20	3230-9	4	Screw-CARR	40	133-8062	1	Decal-Spark Arrestor
21	3230-2	4	Bolt-CARR	41	140-6843	1	Decal-Proforce Frame
22	322-5	2	Screw-HH				

Frame Assembly No. 161-7874

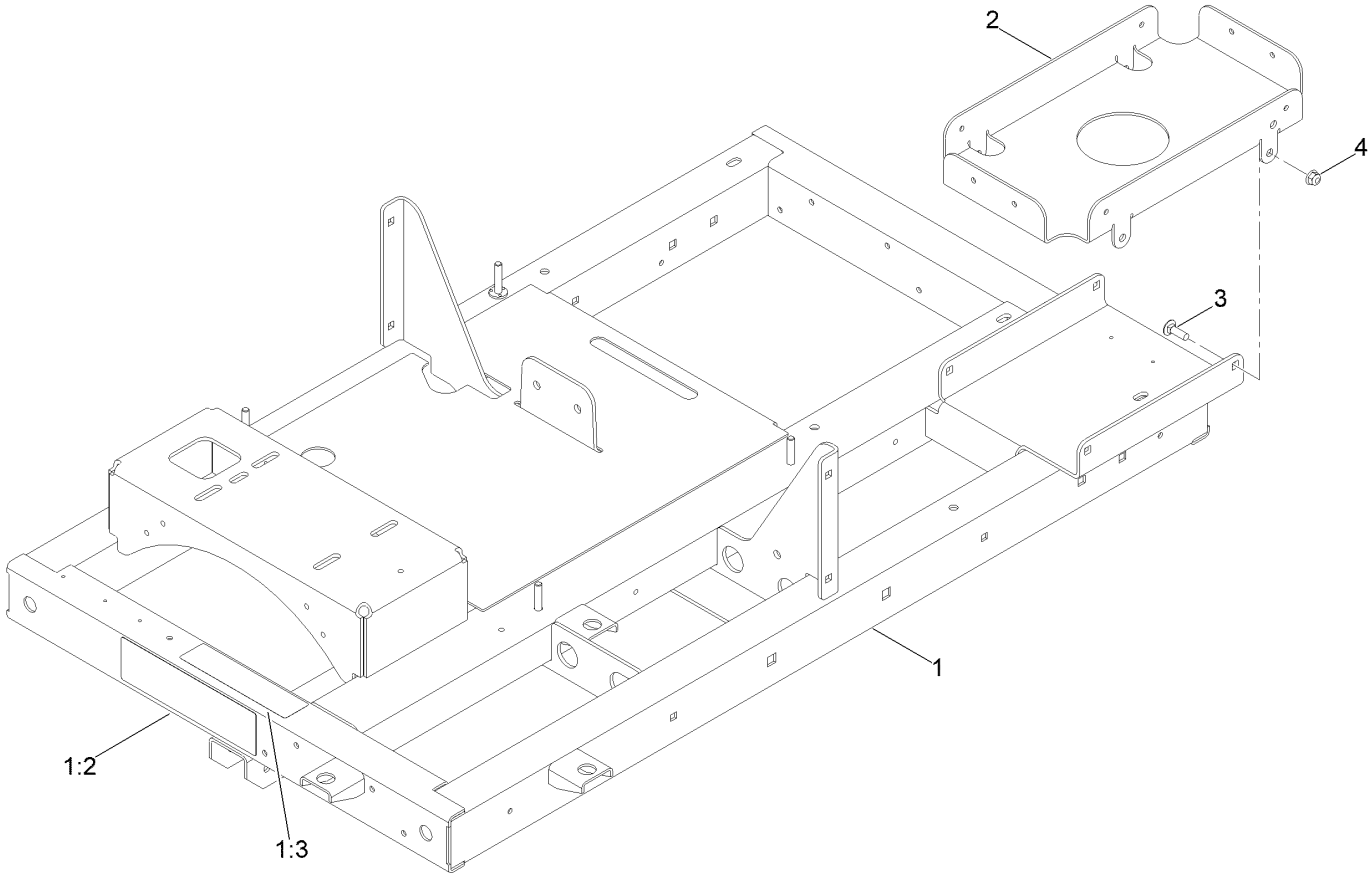


Frame Assembly No. 161-7874 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	144-3212	1	Frame ASM
1:2	140-6767	1	Decal-Warning, Db
1:3	115-5113	1	Decal-Protection, Eye And Ear

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	145-7461-01	1	Mount-Tank, 5GA
3	3230-2	4	Bolt-CARR
4	119-4041	4	Nut-HF

Hub and Axle Assembly No. 144-3630

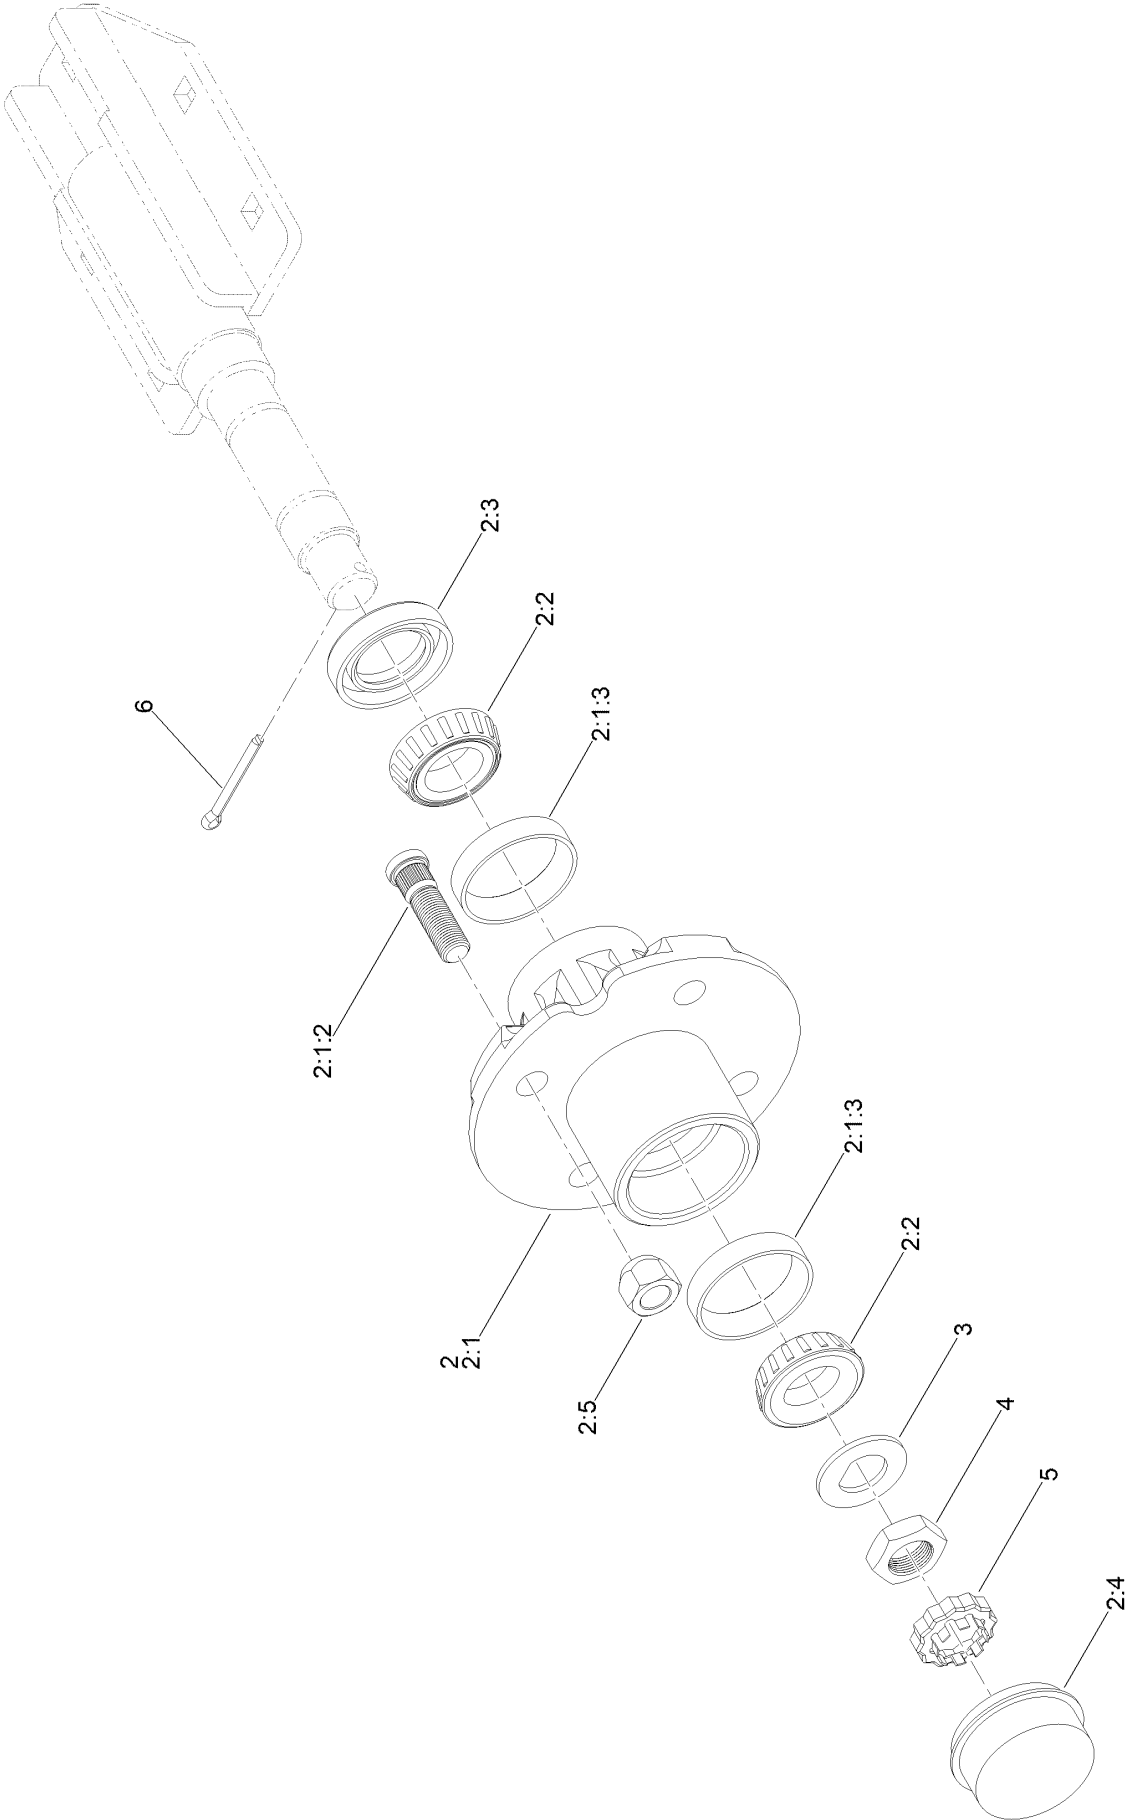


Hub and Axle Assembly No. 144-3630 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	117-5115	1	Hub And Bearing ASM
2:1	117-8251	1	Hub ASM
2:1:2	114-3918	4	Stud-Wheel
2:1:3	254-72	2	Bearing-Cup, Tapered
2:2	254-94	2	Bearing-Cone, Tapered
2:3	112-1690	1	Seal-Oil

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2:4	241-119	1	Cap-Dust
2:5	139-2564	4	Nut-Lug
3	117-8259	1	Washer-Spindle
4	117-8260	1	Nut
5	93-0307	1	Nut-Lock, Retainer
6	3272-18	1	Pin-Cotter


Wheel and Tire Assembly No. 144-3664

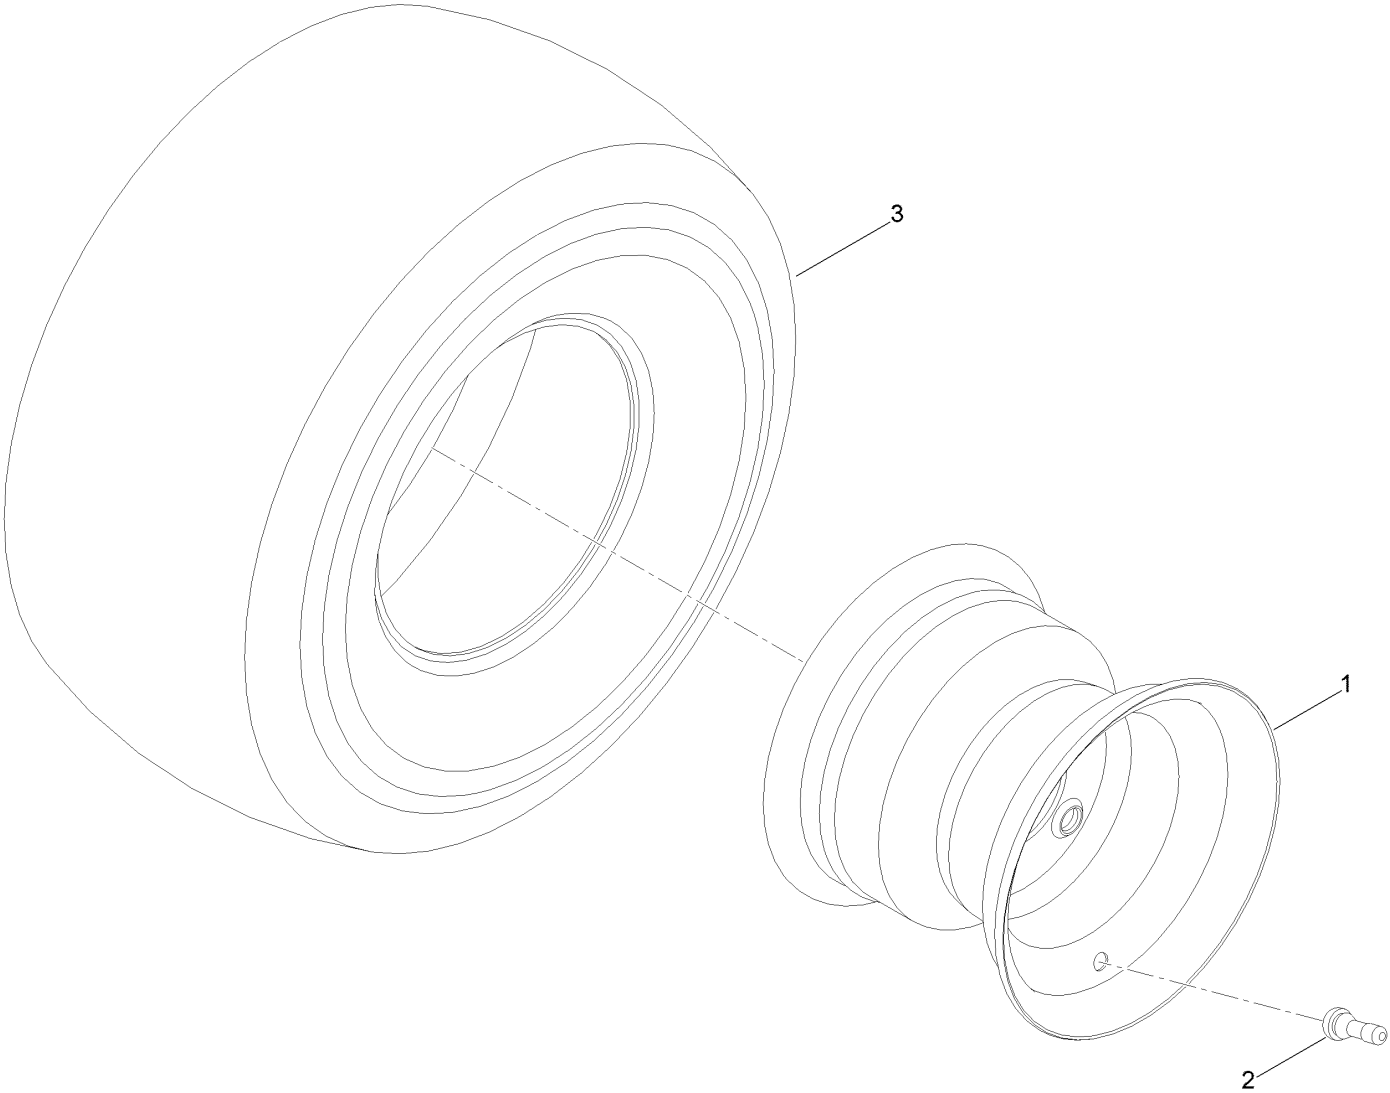

Wheel and Tire Assembly No. 144-3664 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	137-2597	1	Rim
2	232-27	1	Stem-Valve
3	144-3665	1	Tire


Turbine Mounting Assembly

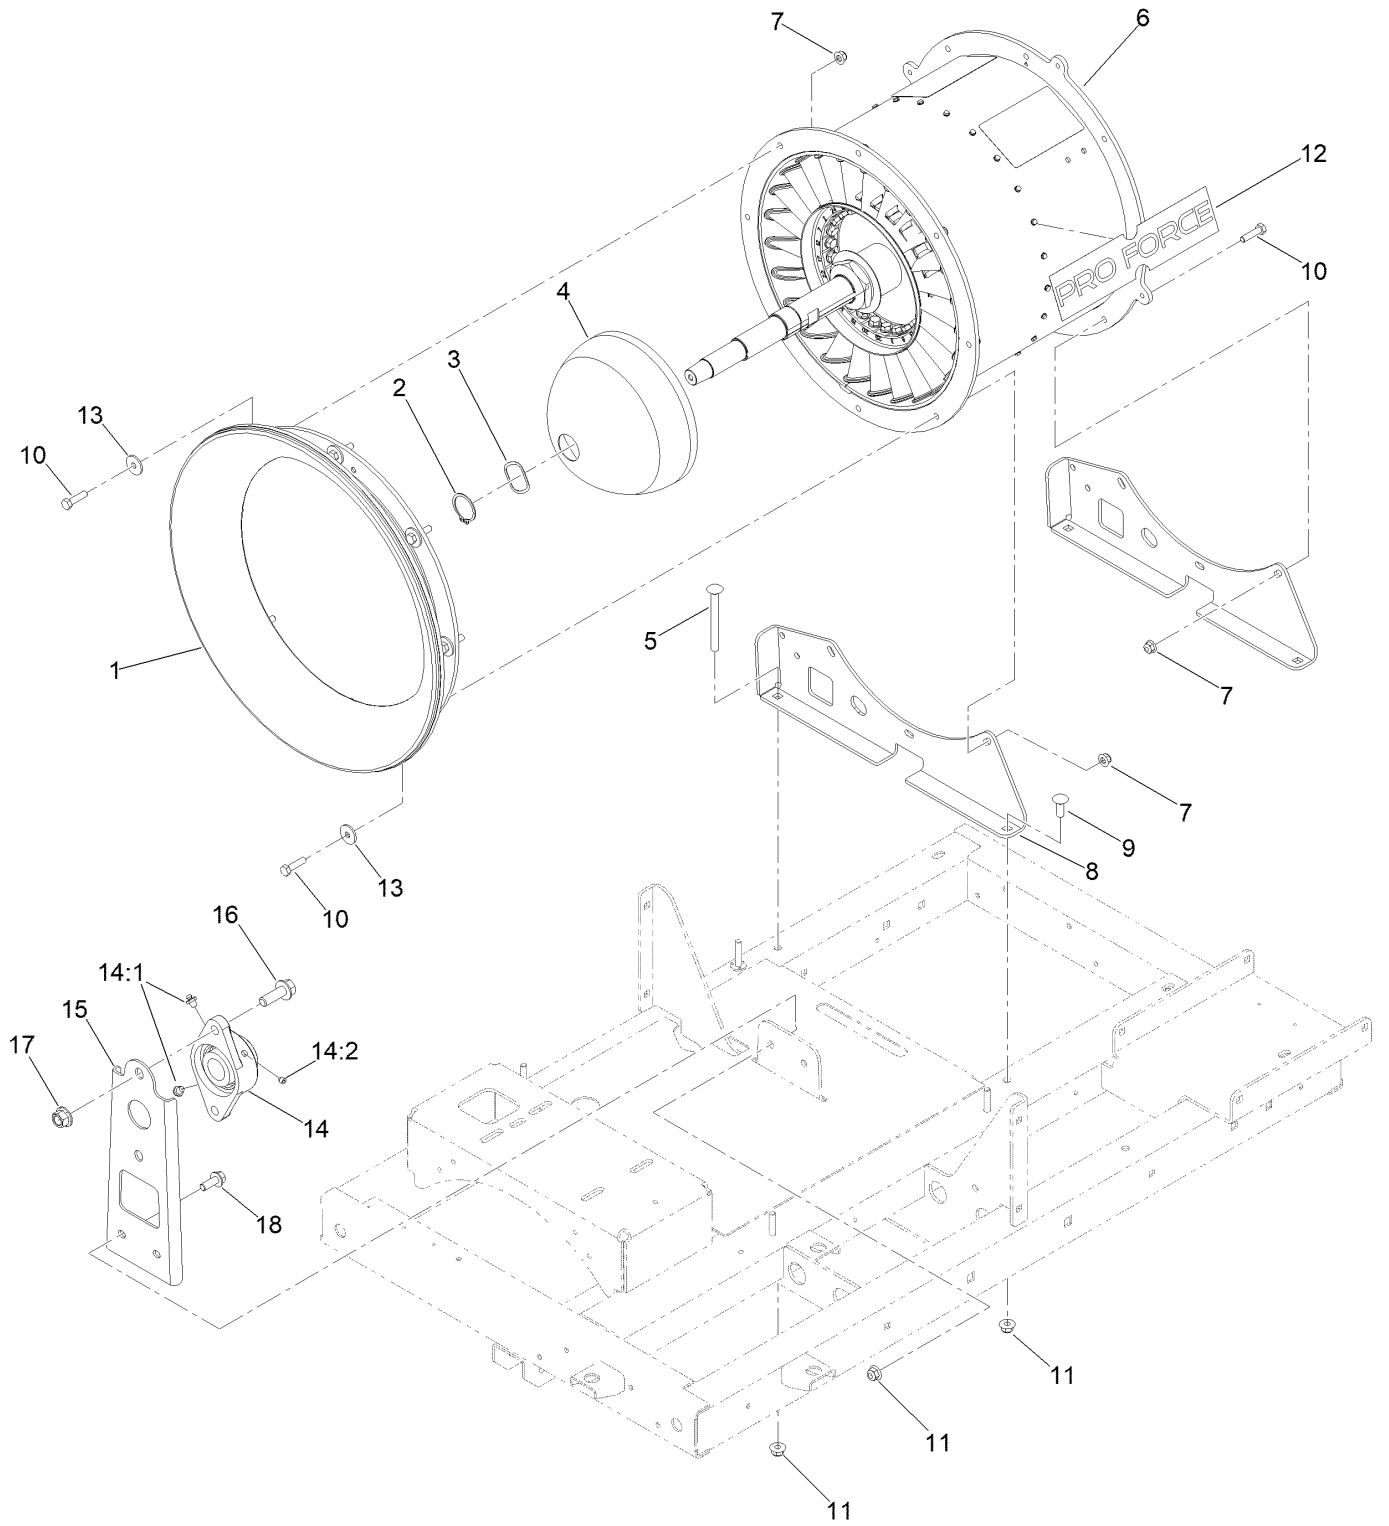

Turbine Mounting Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	117-8329	1	Bell-Inlet	11	119-4042	4	Nut-HF, NI
2	112-1952	1	Ring-Snap, EXT	12	115-5102	2	Decal
3	93-4632	1	Washer-Wavey	13	115-7109	8	Washer-Flat
4	131-9440	1	Cap-Front	14	94-7484	1	Bearing
5	3231-24	2	Screw-CARR	14:1	302-2	2	Fitting-Grease
6	140-6946SP	1	Turbine ASM-Horizontal	14:2	106-9662	1	Screw-Set, HSH
7	119-4041	11	Nut-HF	15	144-3316-01	1	Mount-Bearing
8	140-6983-01	2	Mount-Housing	16	100-6116	2	Screw-HHF
9	3231-22	2	Screw-CARR	17	139-1689	2	Nut-HF
10	322-6	11	Screw-HH	18	3234-42	2	Screw-HHF


Turbine Assembly No. 140-6946SP

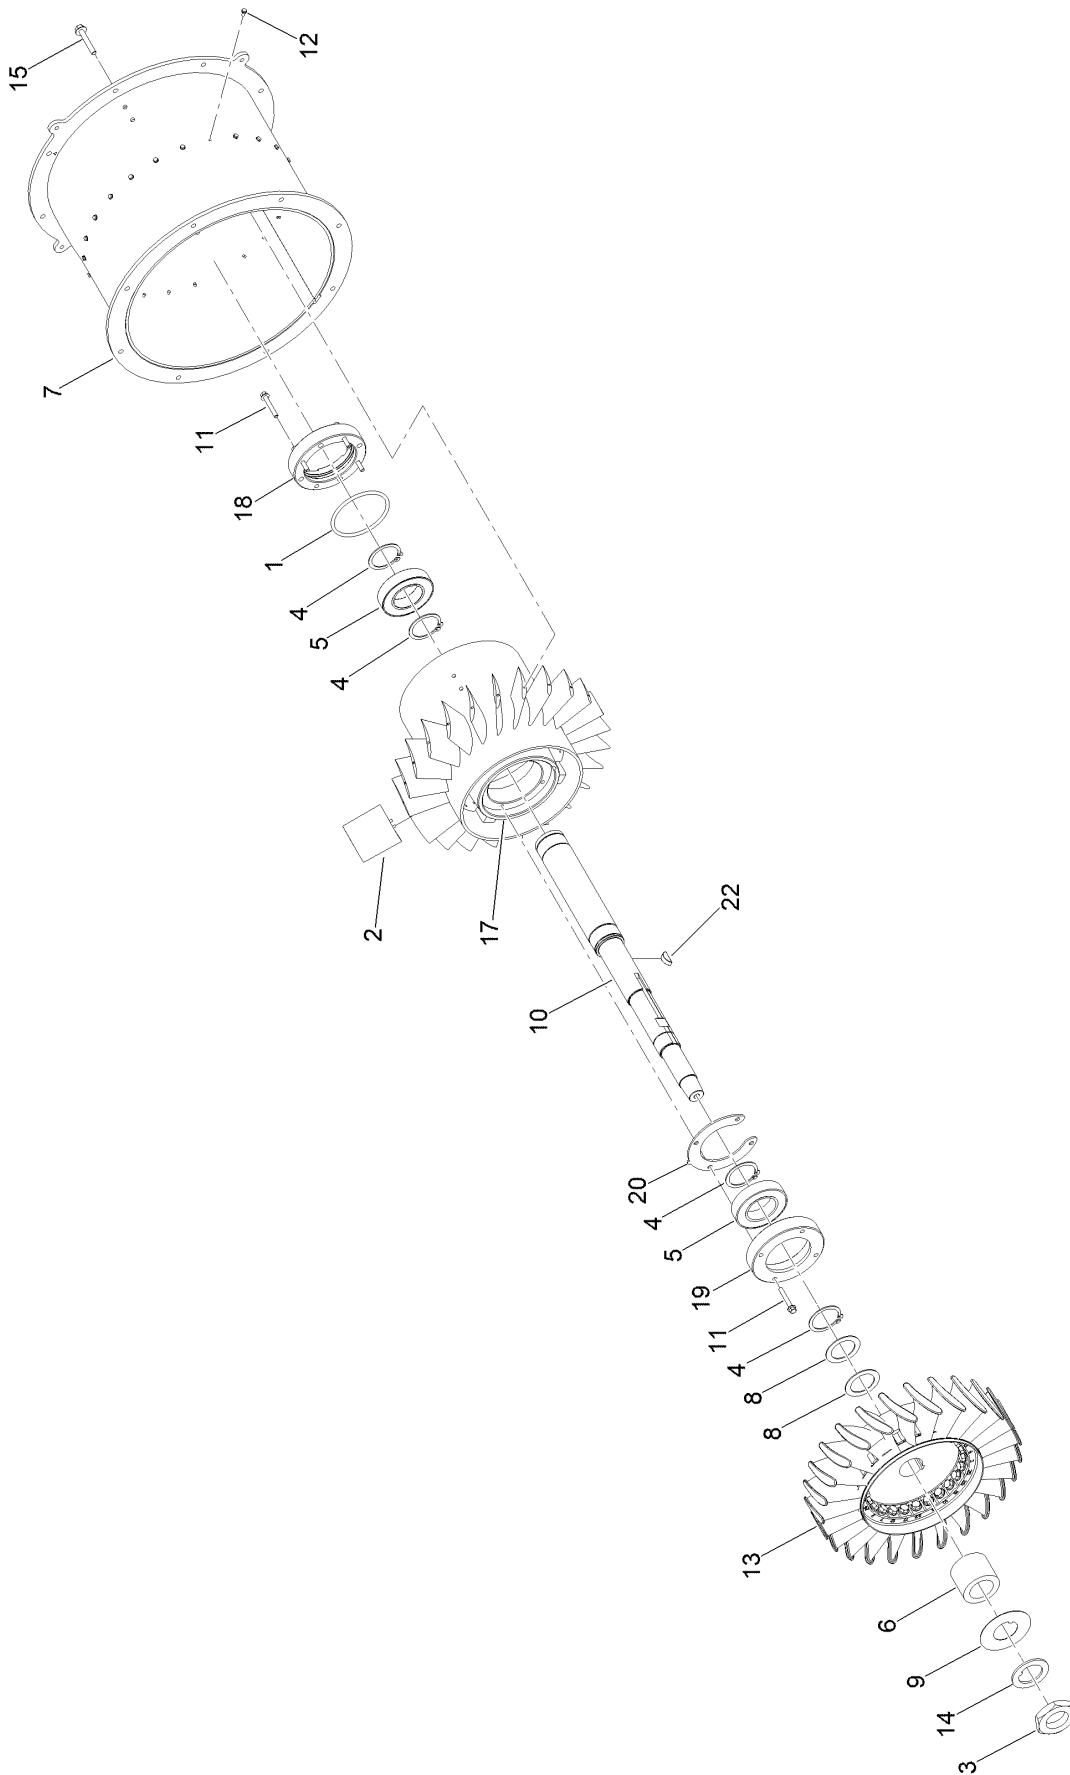

Turbine Assembly No. 140-6946SP (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	92-9533	1	O-Ring	11	125-4287	8	Screw-HHF
2	112-1871	24	Vane-Stator	12	117-8303	24	Screw-HWH
3	112-1899	1	Nut	13	117-8356	1	Rotor
4	112-1951	4	Ring-Snap, EXT	14	119-6202	1	Washer-Tab
5	112-6764	2	Bearing-Ball	15	161-7875	4	Screw-HHSF
6	114-2164	1	Spacer	17	145-7583	1	Inner Housing
7	140-6945	1	Housing-Horizontal, Service ASM	18	140-6933	1	End-Oring
8	115-5131	2	Washer	19	120-6061	1	Bearing-Cap
9	115-9005	1	Washer-Tab	20	120-6063	1	End-Cap
10	140-6997	1	Shaft-Fan Long	22	3257-42	1	Key-Woodruff


Nozzle Assembly

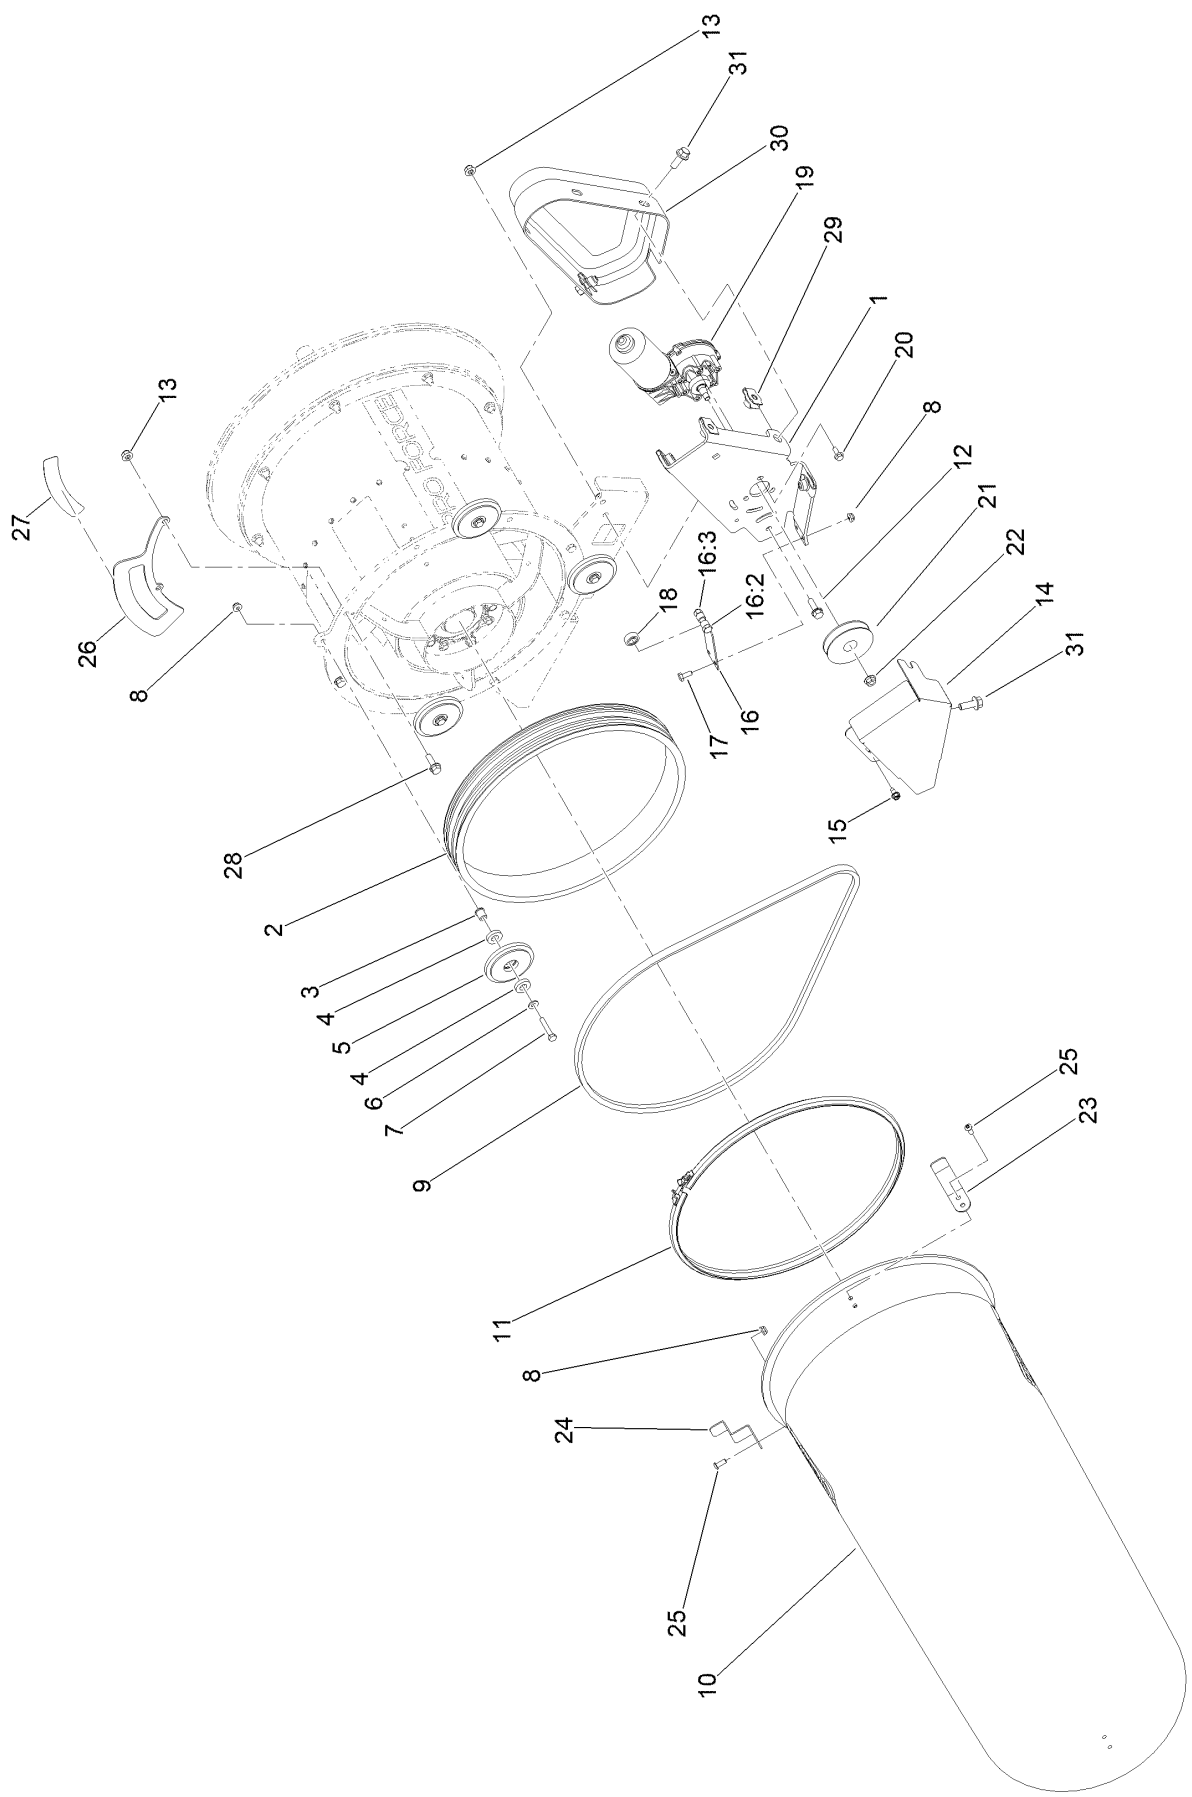

Nozzle Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	163-0456-01	1	Brkt-Motor, Nozzle	16:3	3296-42	1	Nut-Lock, NI
2	112-1874	1	Pulley-Nozzle	17	321-3	2	Screw-HH
3	140-6982	4	Spacer-Bearing	18	251-259	1	Bearing-Ball
4	115-6870	8	Bearing-Ball, Sealed	19	144-3274	1	Motor-Reversible
5	140-6979	4	Roller-Bearing	20	114-8414	3	Screw-HHF
6	120-9679	4	Washer-Flat	21	115-5147	1	Pulley
7	321-9	4	Screw-HH	22	98-0668	1	Nut
8	104-7201	10	Nut-HF, NI	23	140-2220-01	1	Indicator
9	112-1853	1	Belt-V	24	140-2220-07	1	Indicator
10	144-3382	1	Nozzle-Toro Proforce Trailer	25	119-6906	4	Screw-HSBH
11	112-6899	1	Clamp-Nozzle	26	140-6814-03	1	Gauge-Rotation
12	3234-29	2	Screw-HHF	27	140-2247	1	Decal-Position, Chute
13	119-4041	2	Nut-HF	28	3234-17	2	Screw-HHF
14	163-0457-01	1	Cover-Pulley	29	105-4886	5	Nut-Tinnerman
15	32104-17	1	Screw-HWH	30	140-6848	1	Motor-Cover
16	110-9650	1	Leaf Spring ASM	31	3234-42	5	Screw-HHF
16:2	36-2250	1	Bolt-Shoulder				


Driveshaft and Battery Assembly

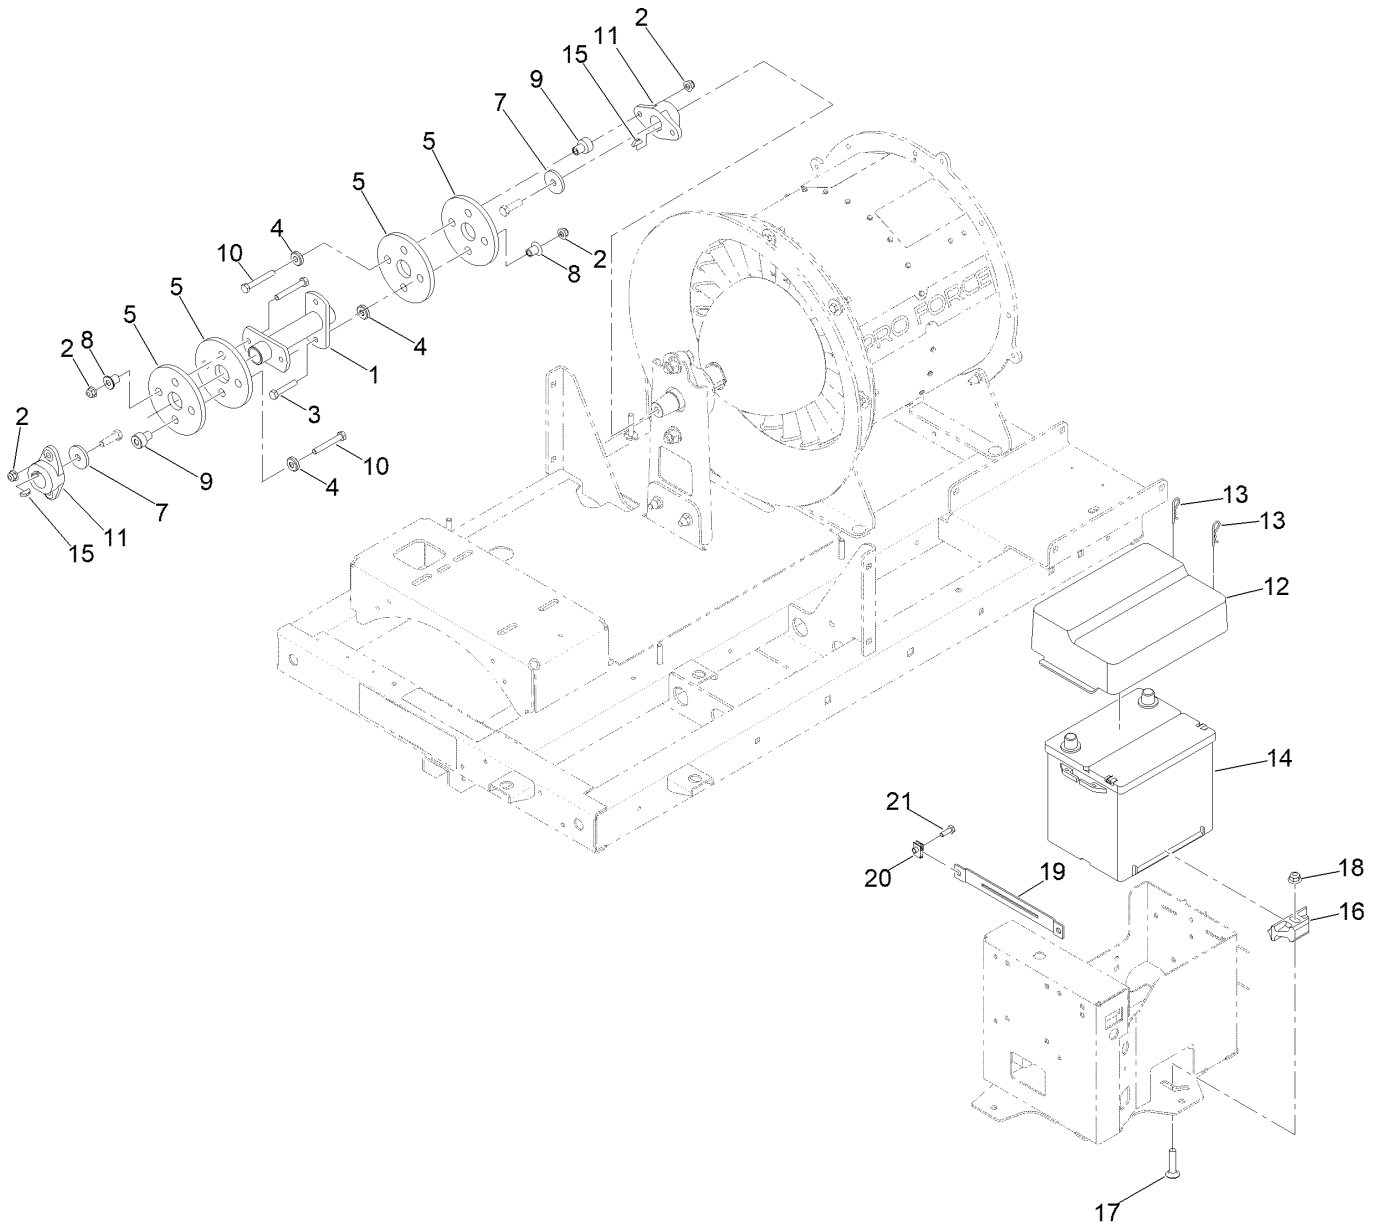

Driveshaft and Battery Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	140-6936-03	1	Shaft-Drive, Short	12	130-8569	1	Cover-Battery
2	119-4041	8	Nut-HF	13	3290-467	2	Pin-Hair
3	322-39	4	Screw-HH	14	106-5187	1	Battery- Dry, 12V, 525 CCA
4	131-6761	8	Washer	15	3257-5	2	Key-Woodruff
5	115-5129	4	Coupling-Rubber	16	138-6335	1	Retainer-Battery
7	114-2120	2	Washer	17	3231-5	1	Screw-CARR
8	131-6763	4	Spacer-Coupling, Rubber	18	119-4042	1	Nut-HF, NI
9	131-6762	4	Spacer-Coupling, Rubber	19	130-0932-01	1	Bracket-Cover
10	322-32	4	Screw-HH	20	107069	2	Clip
11	114-2122	2	Hub-Engine	21	321-4	2	Screw-HH


Engine, Muffler and Fuel Tank Assembly

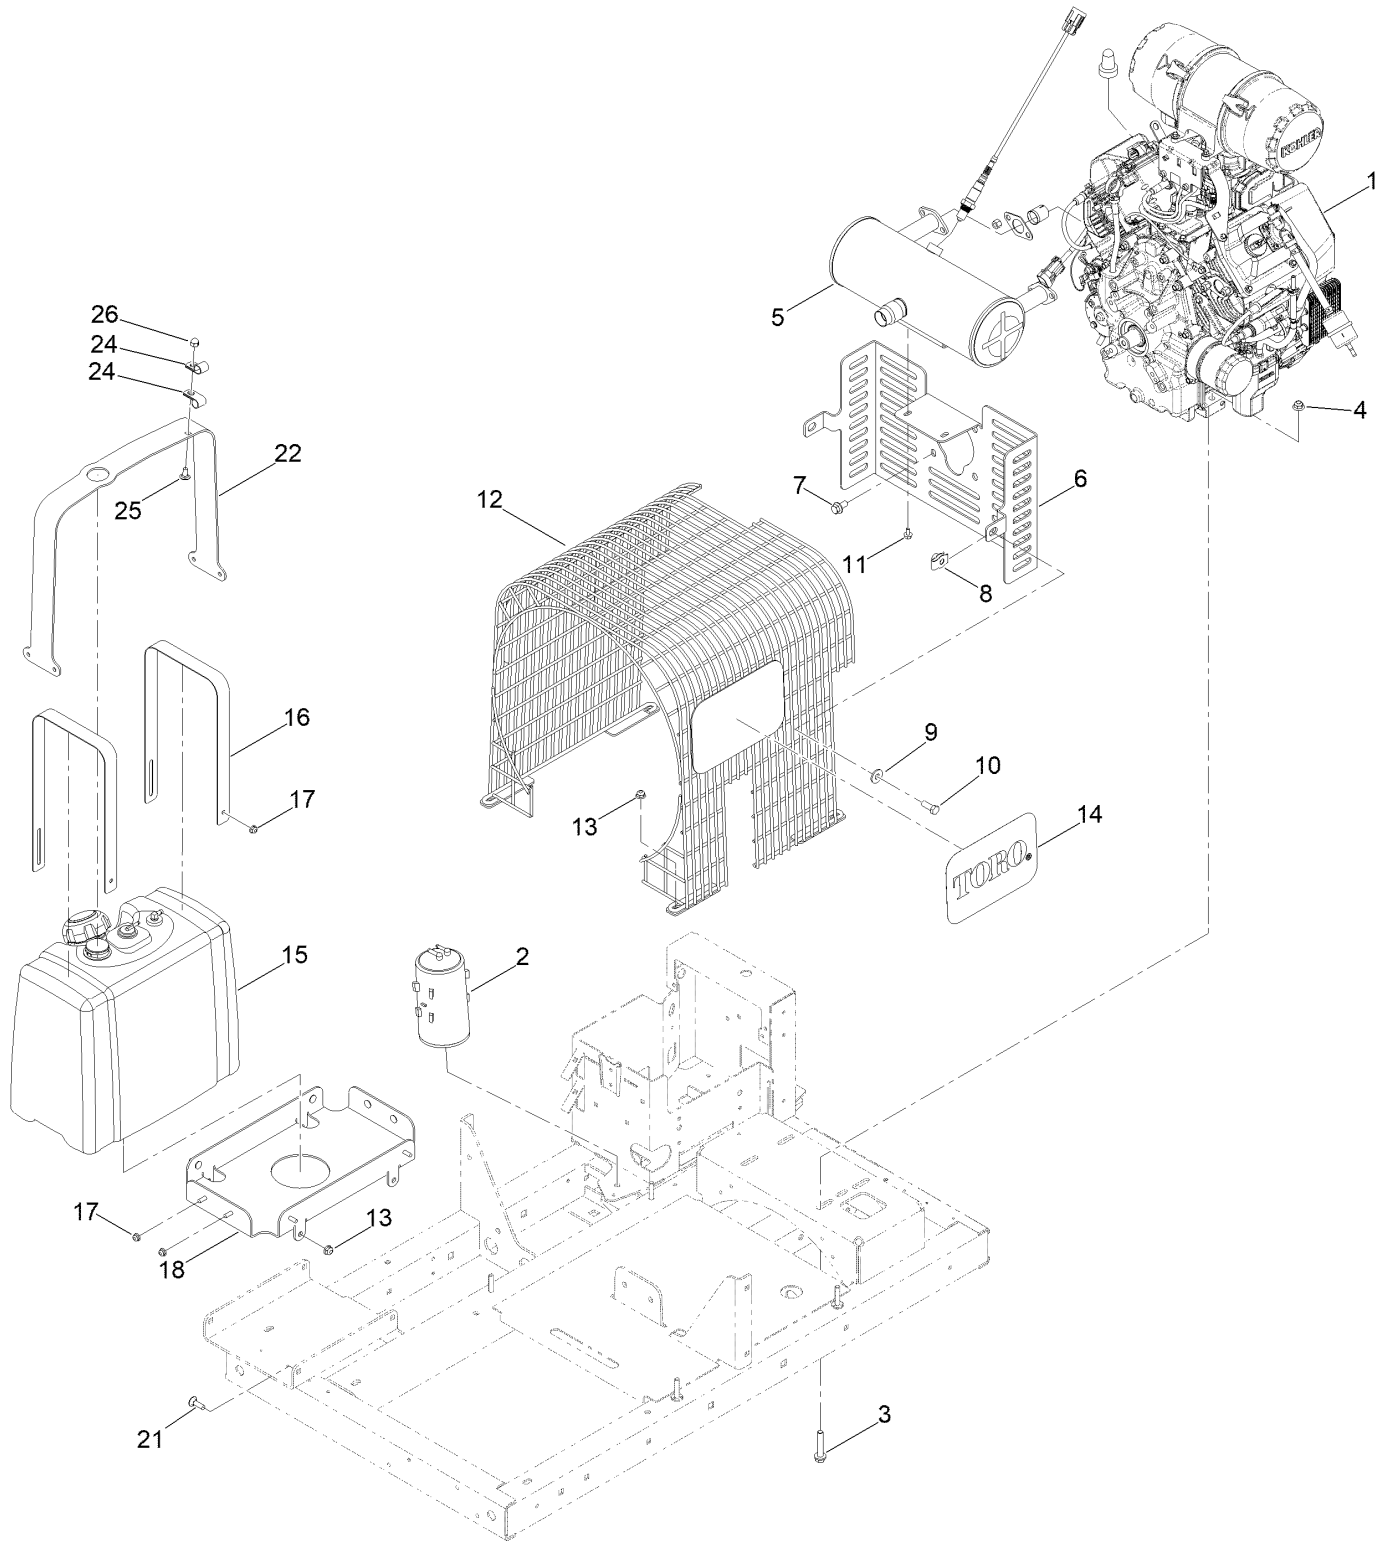

Engine, Muffler and Fuel Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	163-0495	1	Engine-Rehlko	13	119-4041	8	Nut-HF
2	127-8685	1	Canister-Carbon	14	92-1242	2	Decal
3	66-9302	4	Screw-HHF Lock	15	115-9048	1	Fuel Tank ASM
4	119-4042	4	Nut-HF, NI	16	119-6285	2	Strap-Hold Down, Tank
5	163-0401	1	Muffler	17	104-7201	8	Nut-HF, NI
6	161-4854-03	1	Mount-Muffler	18	145-7461-01	1	Mount-Tank, 5GA
7	110-1718	4	Screw-HHSF,Patch	21	3230-2	4	Bolt-CARR
8	105-4886	2	Nut-Tinnerman	22	144-3629-03	1	Guard-Gauges
9	80-6990	2	Washer-Hardened	24	2412-138	2	R-Clamp
10	323-6	2	Screw-HH	25	3230-18	1	Screw-CARR
11	33103-012	2	Screw-HHF	26	137-4808	1	Nut-Acorn
12	112-6876	1	Grill-Top				


Fuel Tank Assembly No. 115-9048

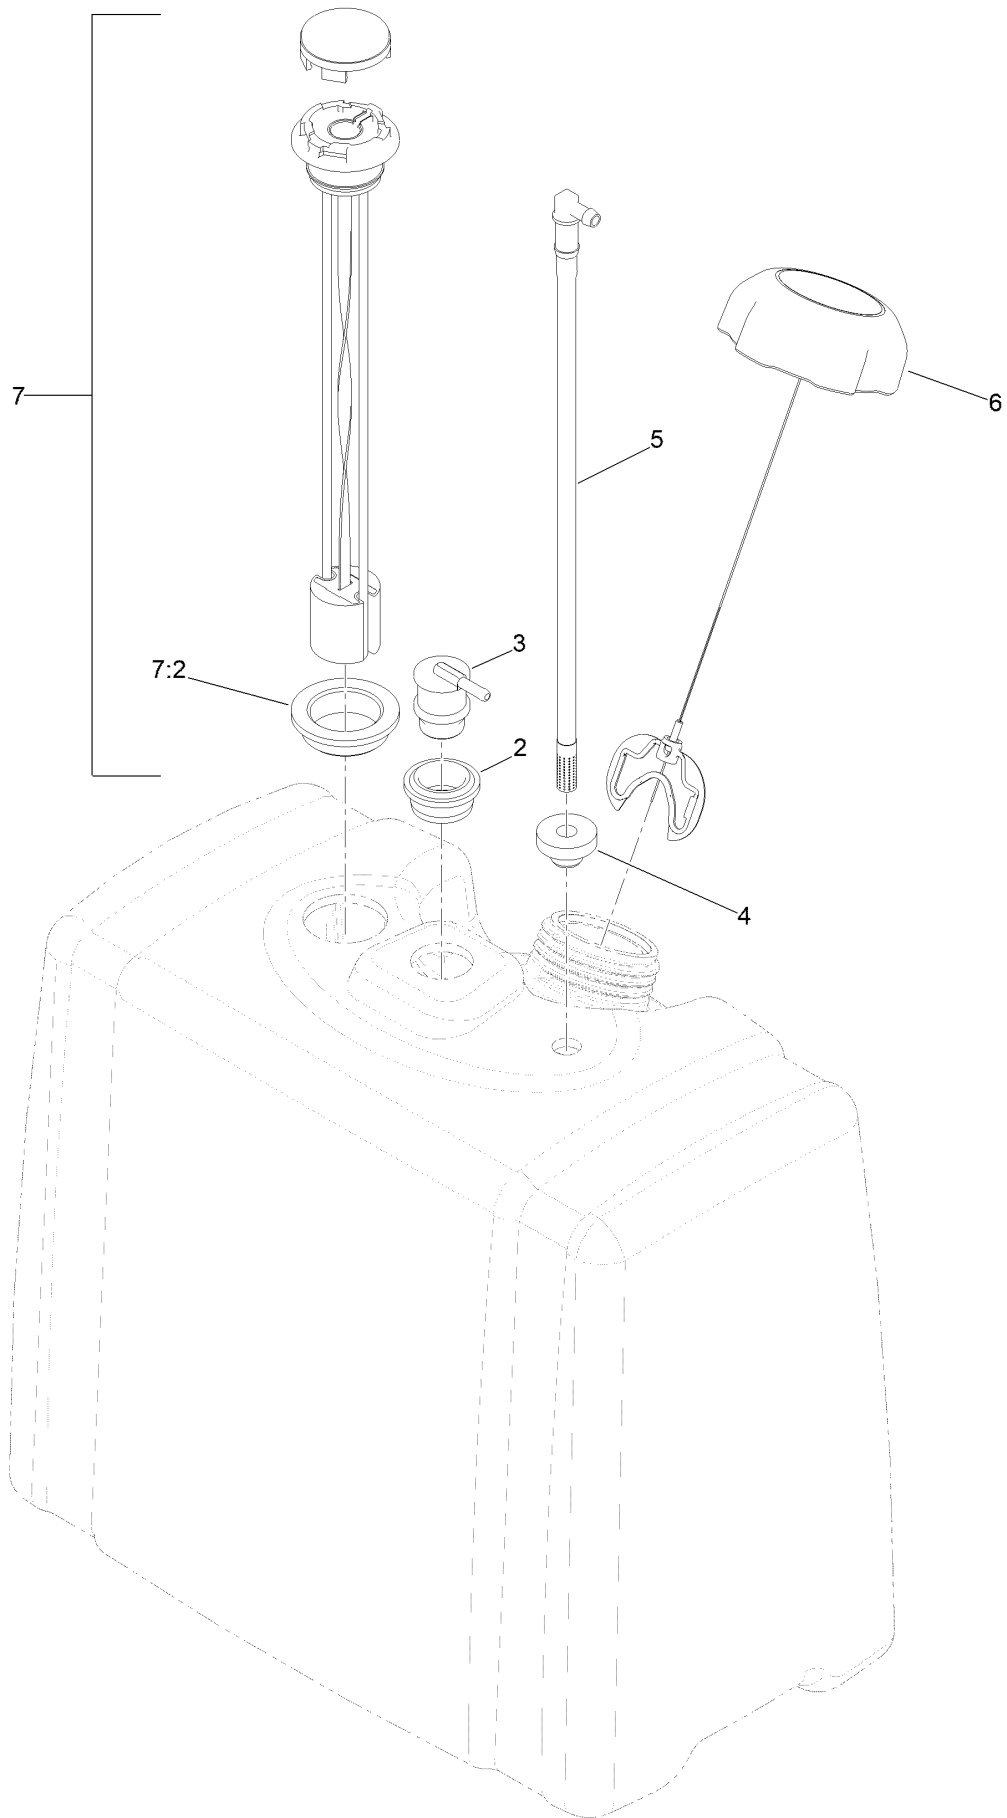

Fuel Tank Assembly No. 115-9048 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	114-0284	1	Grommet	6	137-4127	1	Cap-Fuel
3	114-0285	1	Valve-Rollover	7	119-0509	1	Gauge ASM
4	46-6560	1	Bushing	7:2	119-0508	1	Seal
5	115-9044	1	Pipe-Stand				


Fuel Delivery Assembly

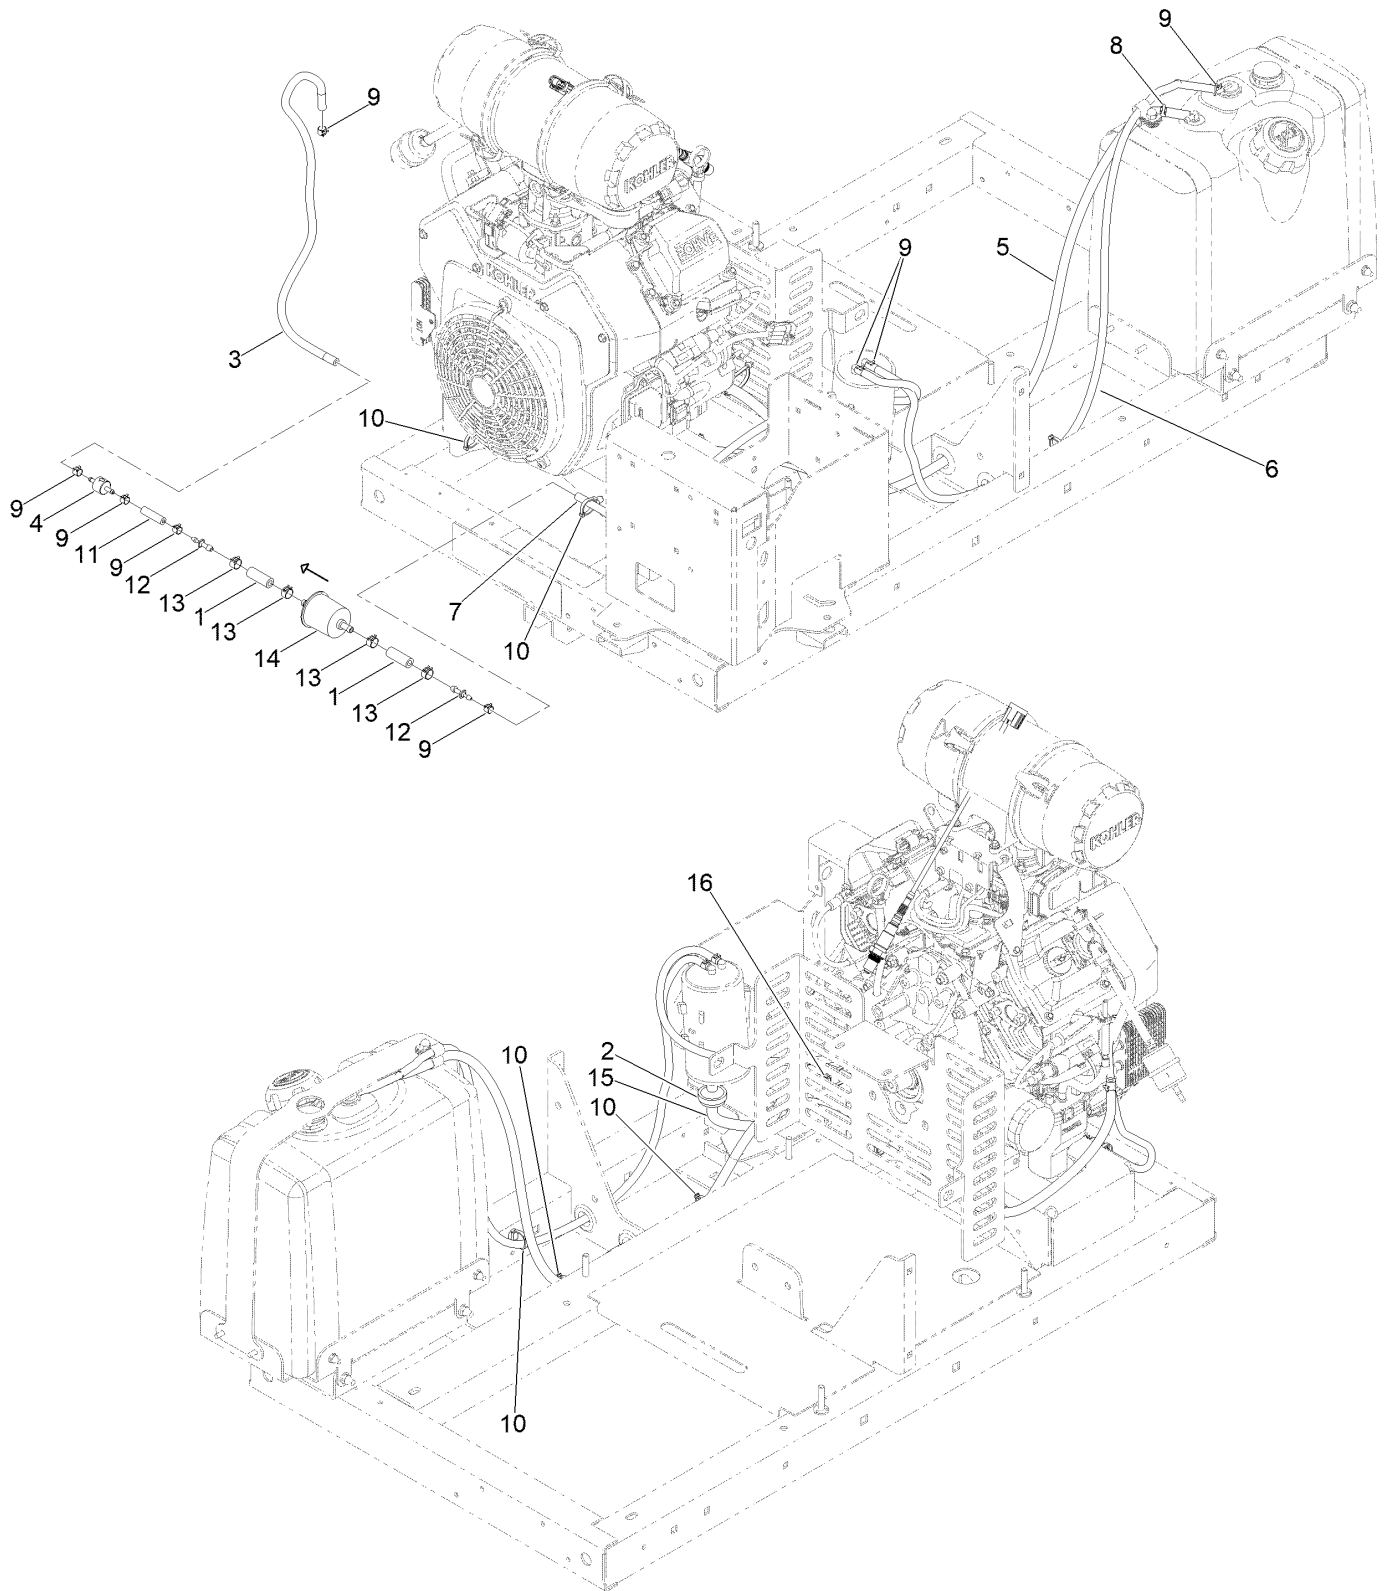

Fuel Delivery Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	106-5317	3	Hose-Fuel	9	2412-80	8	Clamp-Hose
2	115-7854	1	Filter-Fuel, Inline	10	32180-030	7	Clip-Tie
3	143-2545	1	Hose-Fuel	11	119-8561	1	Hose-Fuel
4	133-8499	1	Valve-Check, Vacuum	12	106-8150	2	Fitting-Straight
5	163-0402	1	Hose-Fuel	13	92-2379	4	Clamp-Hose
6	119-6073	1	Hose-Fuel	14	120-2235	1	Filter-Fuel
7	110-3254	1	Hose-Fuel	15	110-4109	1	Hose-Fuel
8	2412-98	2	Clamp-Hose	16	3290-378	1	Tie-Cable


Electrical System Assembly

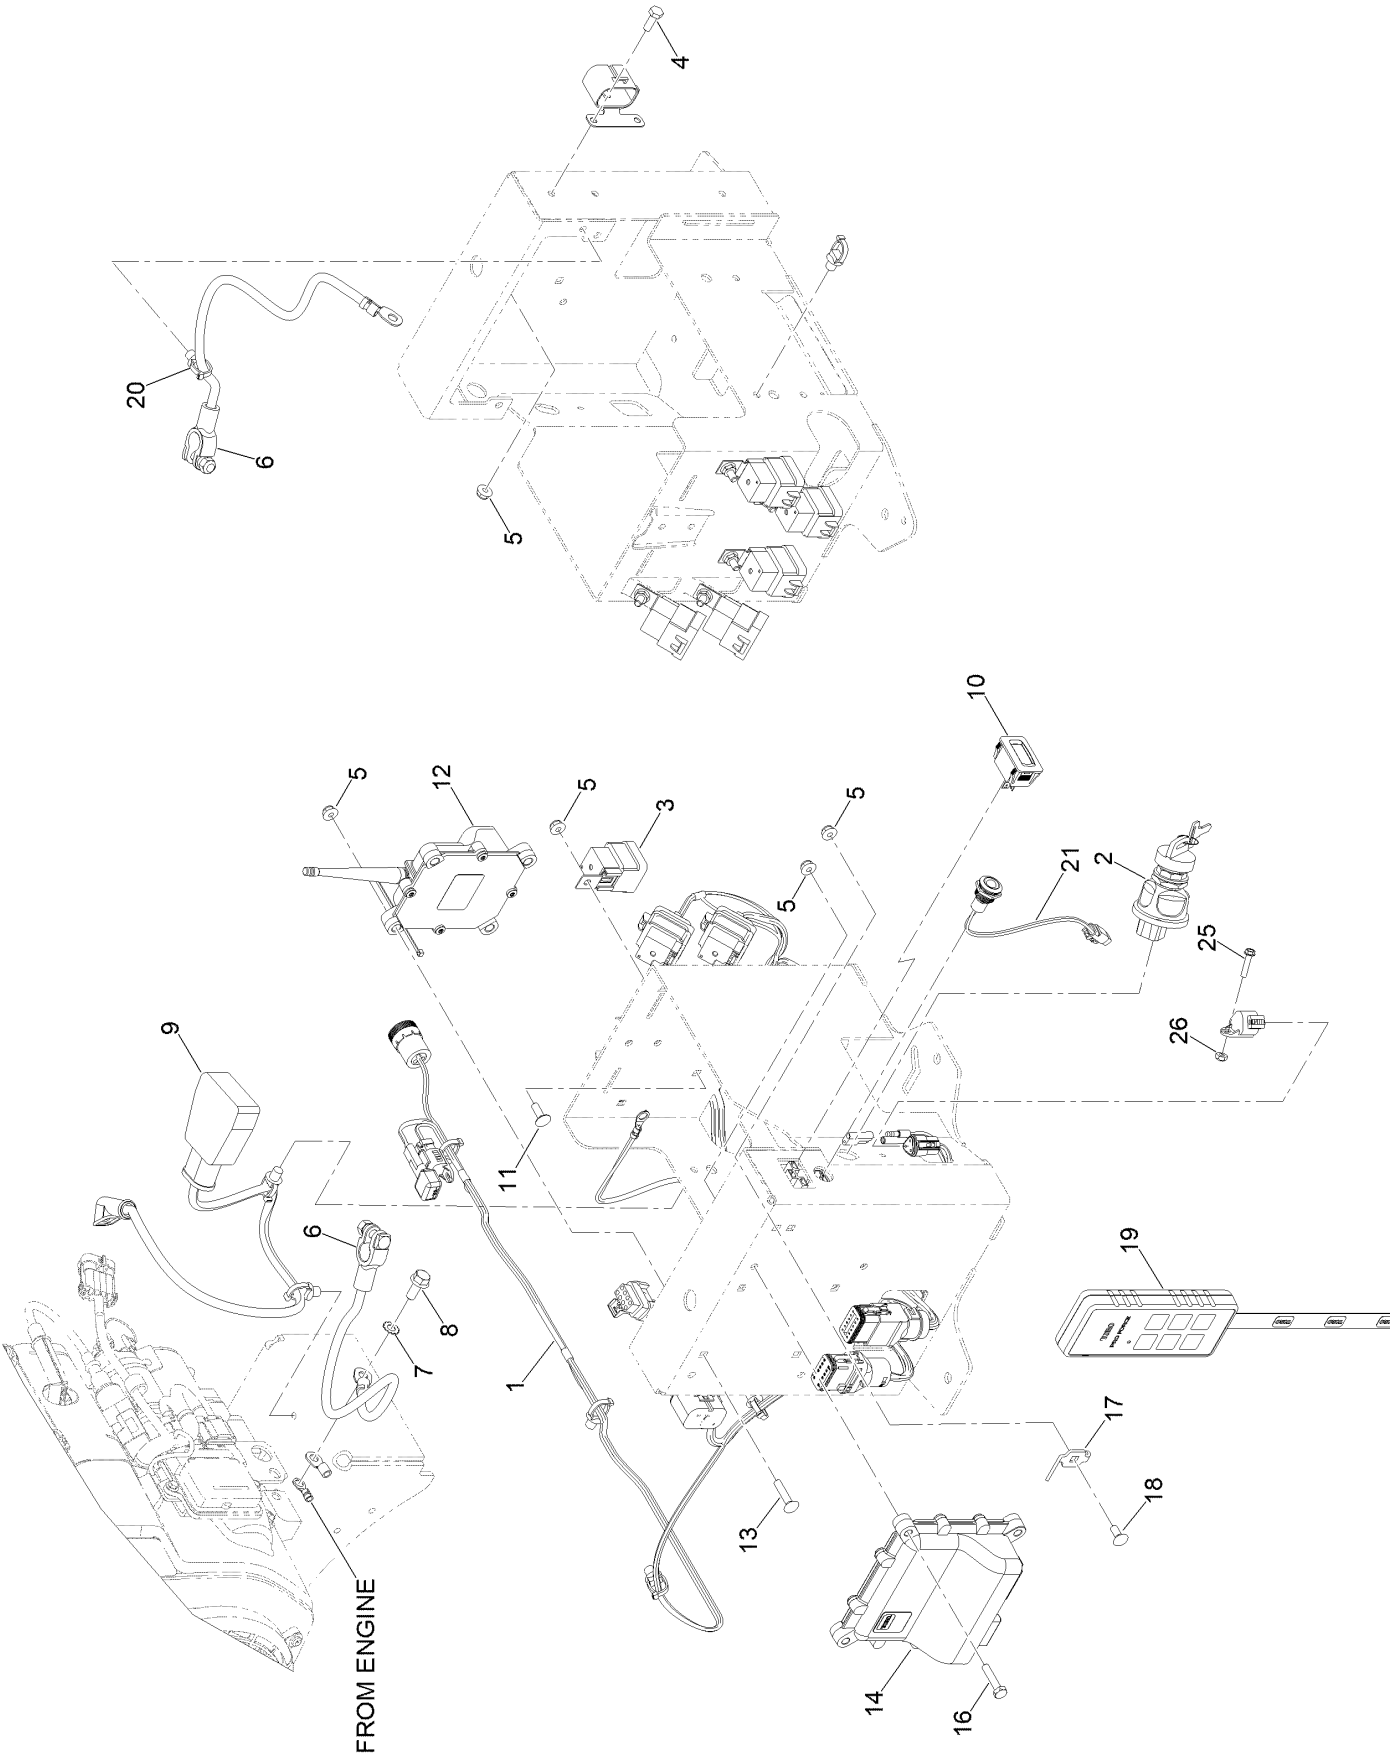

Electrical System Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	122-3530	1	Harness-Wire, Proforce Blower Rf2Can	12	132-9600	1	Controller
2	121-5159	1	Switch-Ignition	13	3229-3	4	Screw-CARR
3	99-7430	5	Relay-Mini	14	125-1360	1	Controller
4	321-4	2	Screw-HH	16	321-8	4	Screw-HH
5	104-7201	16	Nut-HF, NI	17	121-2761	1	Mount-Transmitter
6	125-5966	1	Cable-Battery, Negative	18	3229-11	1	Screw-CARR
7	3255-8	1	Washer-Lock	19	125-1270	1	Remote ASM
8	33104-020	1	Screw-HHF	20	32180-030	3	Clip-Tie
9	122-0629	1	Cable-Battery, Positive	21	122-0630	1	Red LED Indicator Lamp ASM
10	120-2244	1	Hourmeter	25	106-9169	1	Screw-HWH
11	1-807512	5	Bolt-CARR	26	3296-12	1	Nut-Lock, NI


Wire Harness Assembly No. 122-3530

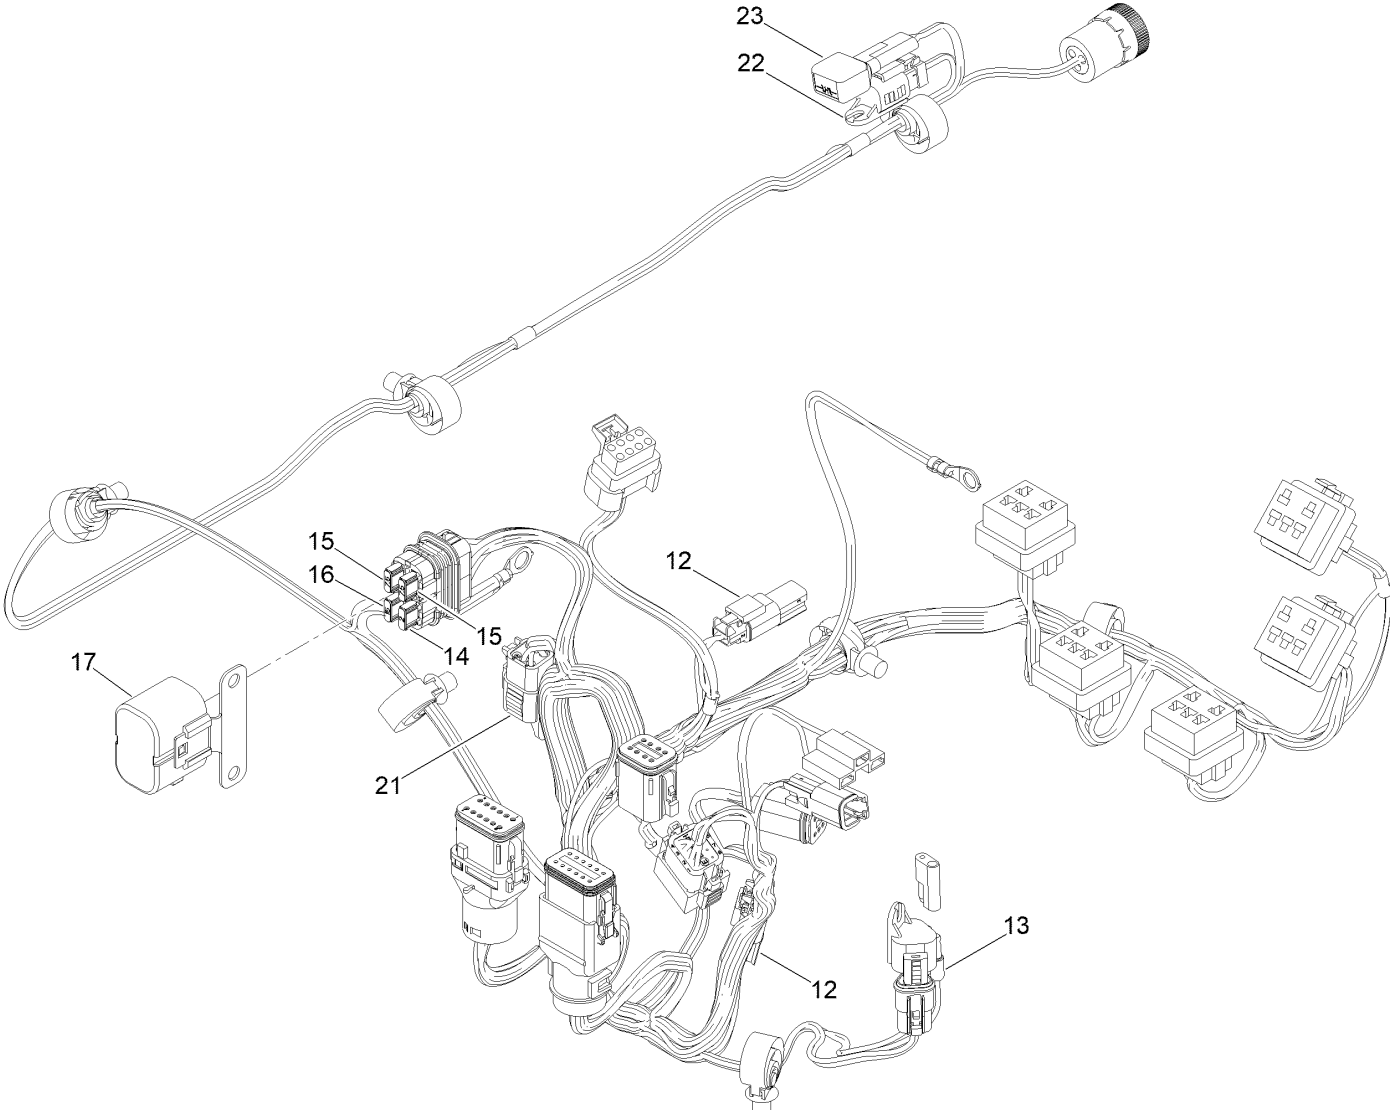

Wire Harness Assembly No. 122-3530 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
12	32180-282	2	Conn, Res, 120 Ohm	17	32180-179	1	Cover-Bussman
13	32180-089	1	Cap-Plug, 3 Way	21	32180-156	1	Cap-Plug, 6 Way
14	121-8861	1	Fuse-Mini Blade, 2 Amp	22	32180-091	1	Cap-Dust, 2 Way
15	121-8865	2	Fuse-Mini Blade, 7.5 Amp	23	108-9493	1	Diode-Tvs
16	121-8867	1	Fuse-Mini Blade, 15 Amp				


Ignition Switch Assembly No. 121-5159

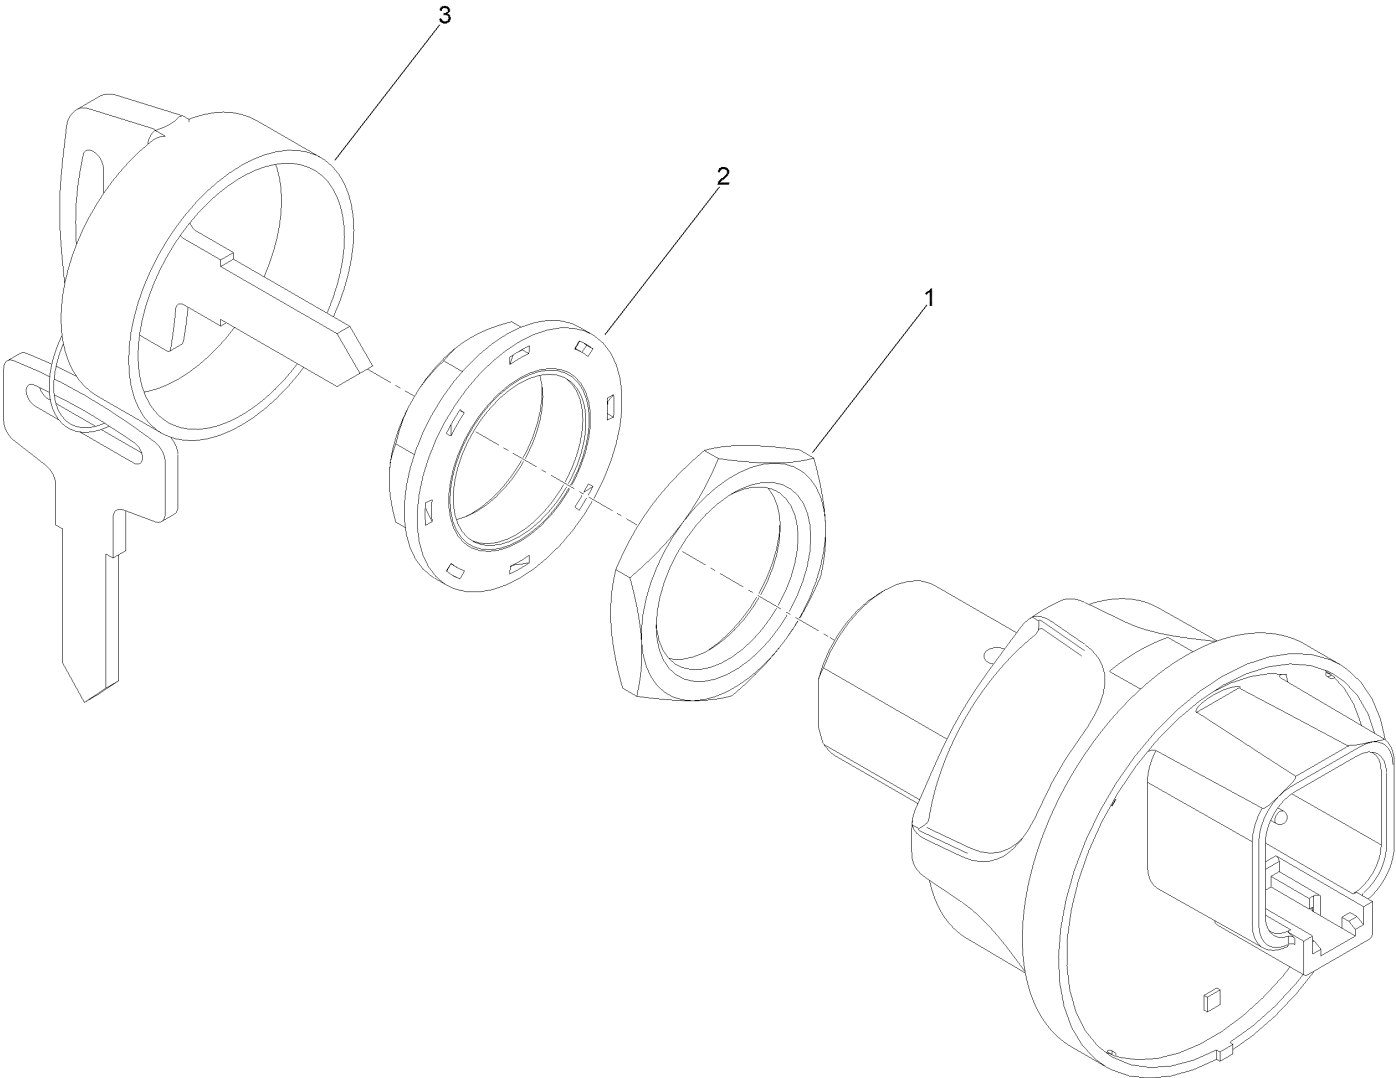

Ignition Switch Assembly No. 121-5159 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-5160	1	Nut-Hex
2	122-2704	1	Nut-Face, M22 (Plastic)
3	121-5162	1	Set-Key, Ignition

Controller Assembly No. 132-9600

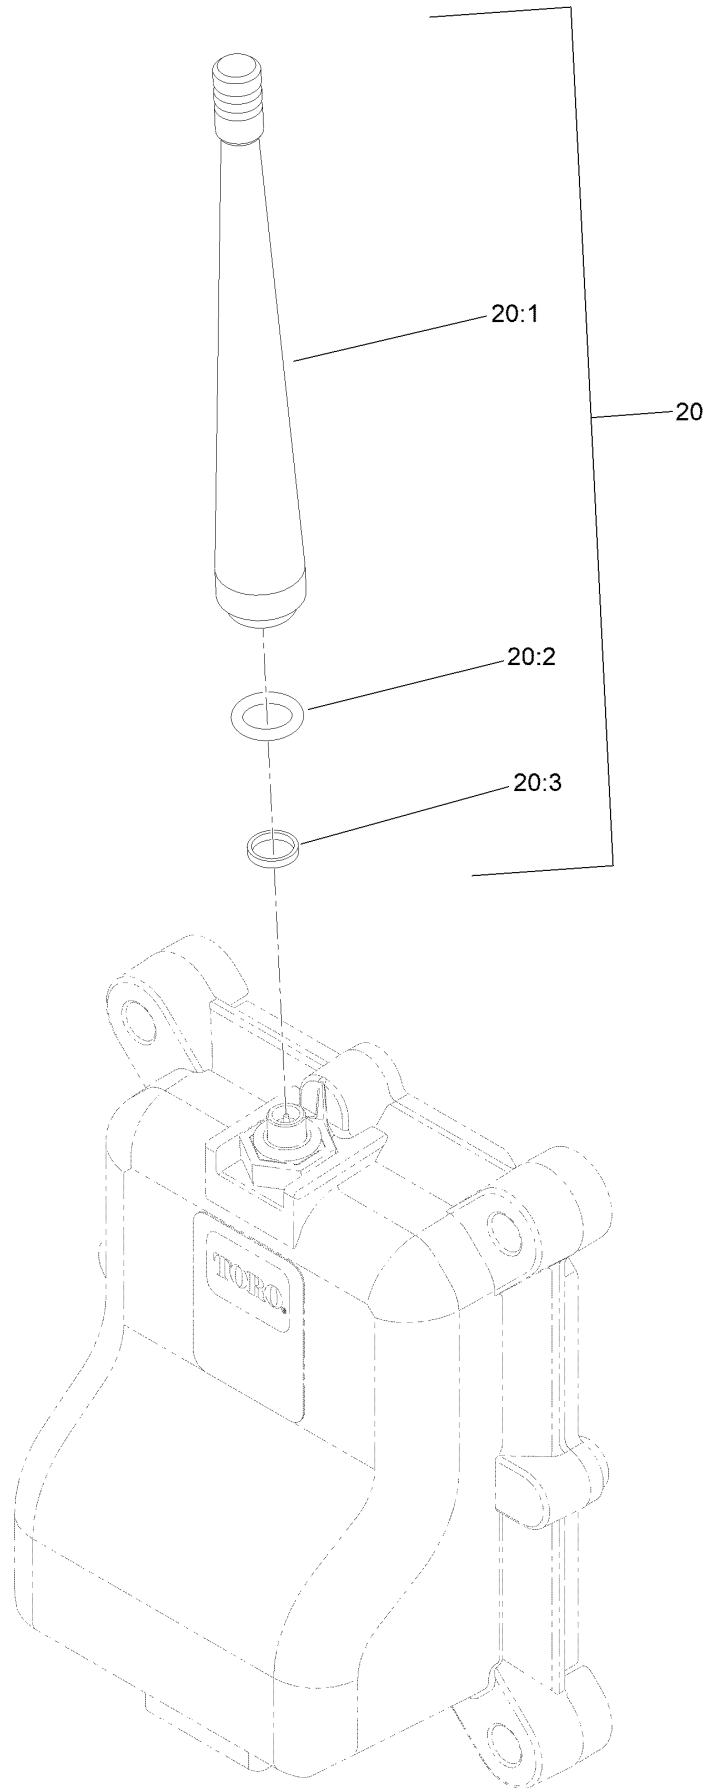


Controller Assembly No. 132-9600 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
20	140-6605	1	Antenna Service Kit
20:1	125-1567	1	Antenna

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
20:2	127-2323	1	O-Ring
20:3	127-2506	1	Spacer

Remote Assembly No. 125-1270

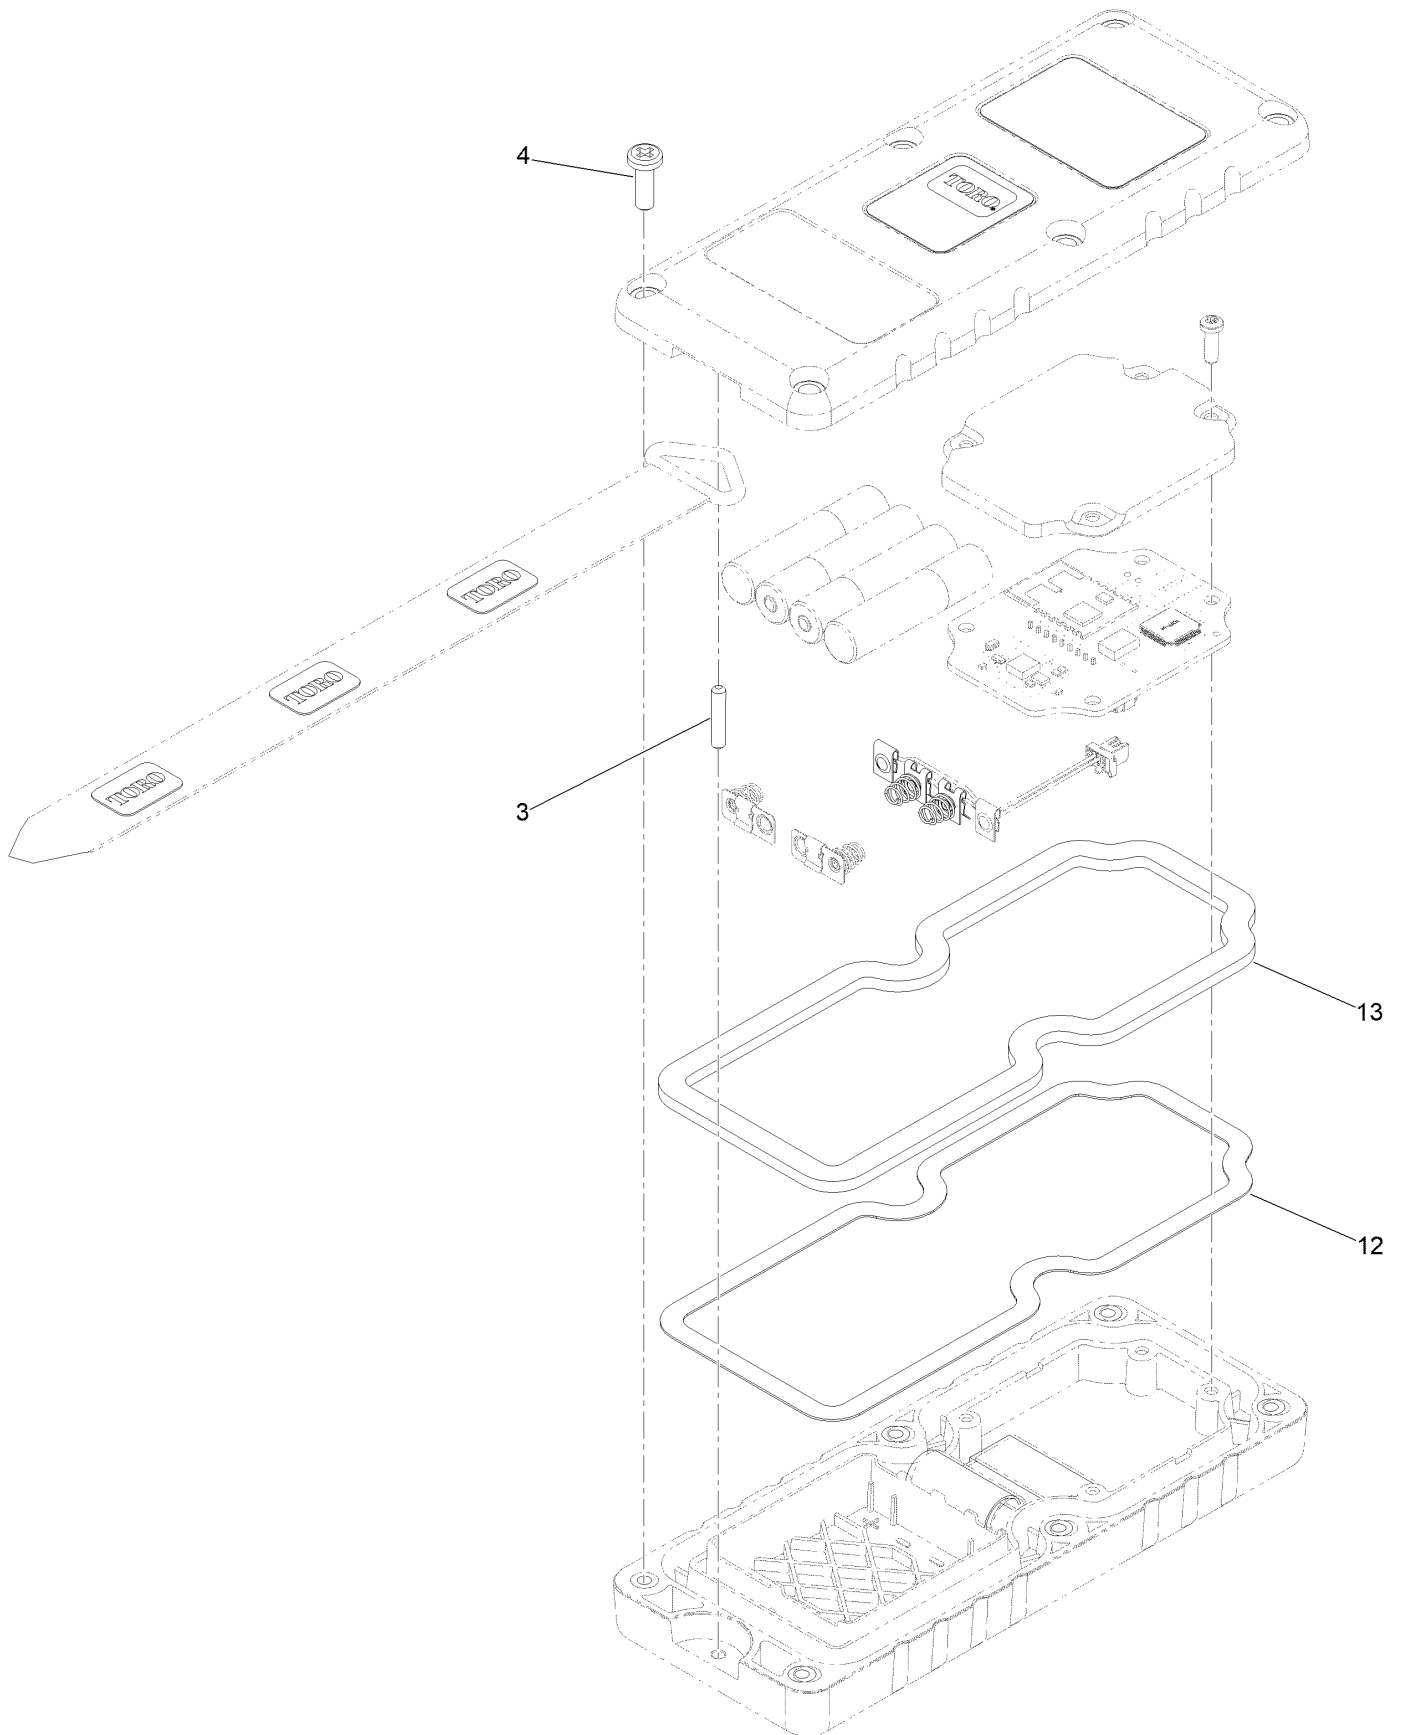


Remote Assembly No. 125-1270 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	121-2906	1	Pin-Lanyard
4	121-2908	6	Screw-PPH

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
12	125-1294	1	Backer-Gasket
13	163-0307	1	Gasket-HH

Red LED Indicator Lamp Assembly No. 122-0630

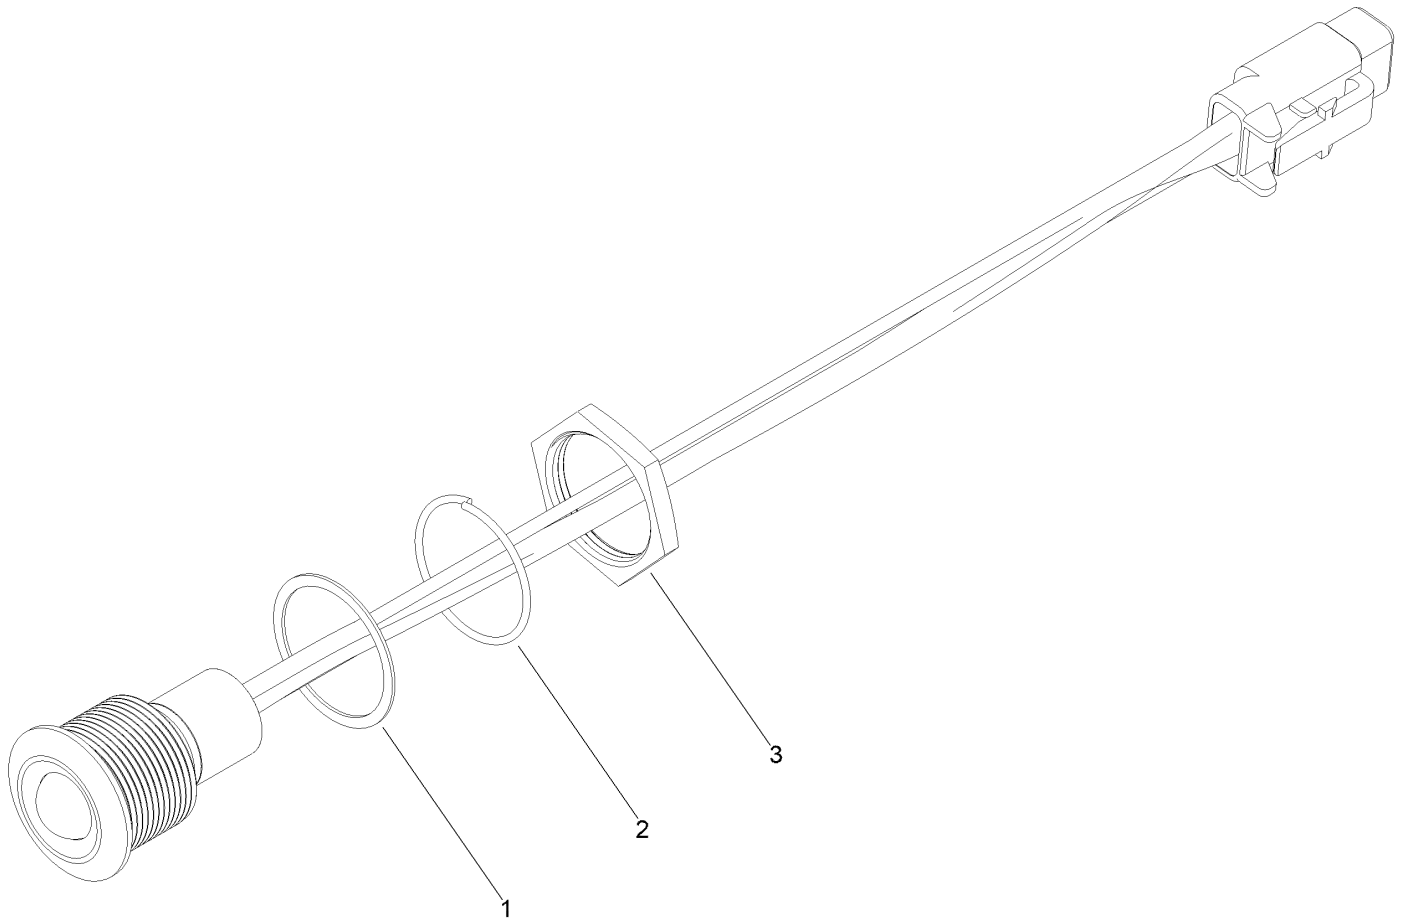

Red LED Indicator Lamp Assembly No. 122-0630 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	122-0634	1	Gasket-LED
2	122-0633	1	Washer-Locking
3	122-0632	1	Nut-Fixing

Attachments and Accessories

For 44556 — Pro Force Debris Blower

Product Name	Model/Part
LED Light Kit.....	44559
10 Gallon Kit, Pro Force Debris Blower.....	130-4371
Safety Chain Kit.....	139-3179
Alignment Tool Assembly.....	161-7891
Tapered Nozzle Kit.....	119-6280
Rectangular Nozzle Kit.....	119-6281
Telematics Kit.....	163-4515
Telematics Lite Kit.....	163-4516
External Antenna Kit, Wireless Hourmeter System.....	115-9524
Base Station Kit, Wireless Hourmeter System.....	115-9542
Repeater Kit, Wireless Hourmeter System.....	115-9543
Semi-Gloss Black Spray Paint.....	361-9
New Red Paint - Gallon.....	361-11
Wireless Hourmeter.....	115-4754
Toro Red 12oz Aerosol Can.....	361-10

Notes:



Count on it.