



**Count on it.**

**Parts Catalog**

**Pro Force®**

**Debris Blower**

Model No. 44557—Serial No. 400000000 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity


In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

Frame, Wheel, Axle and Hitch Assembly .....	4
Frame Assembly No. 161-7874 .....	6
Axle Assembly No. 119-2966 .....	8
Wheel and Tire Assembly No. 119-3013 .....	10
Hitch Assembly No. 119-3005 .....	12
Turbine Mounting Assembly .....	14
Turbine Assembly No. 140-6946SP .....	16
Nozzle Assembly .....	18
Driveshaft and Battery Assembly .....	20
Engine, Muffler and Fuel Tank Assembly .....	22
Fuel Tank Assembly No. 115-9048 .....	24
Fuel Delivery Assembly .....	26
Electrical System Assembly .....	28
Wire Harness Assembly No. 122-3530 .....	30
Ignition Switch Assembly No. 121-5159 .....	32
Controller Assembly No. 132-9600 .....	34
Remote Assembly No. 125-1270 .....	36
Red LED Indicator Lamp Assembly No. 122-0630 .....	38
Tail Light Assembly .....	40
Attachments and Accessories .....	42


# Frame, Wheel, Axle and Hitch Assembly

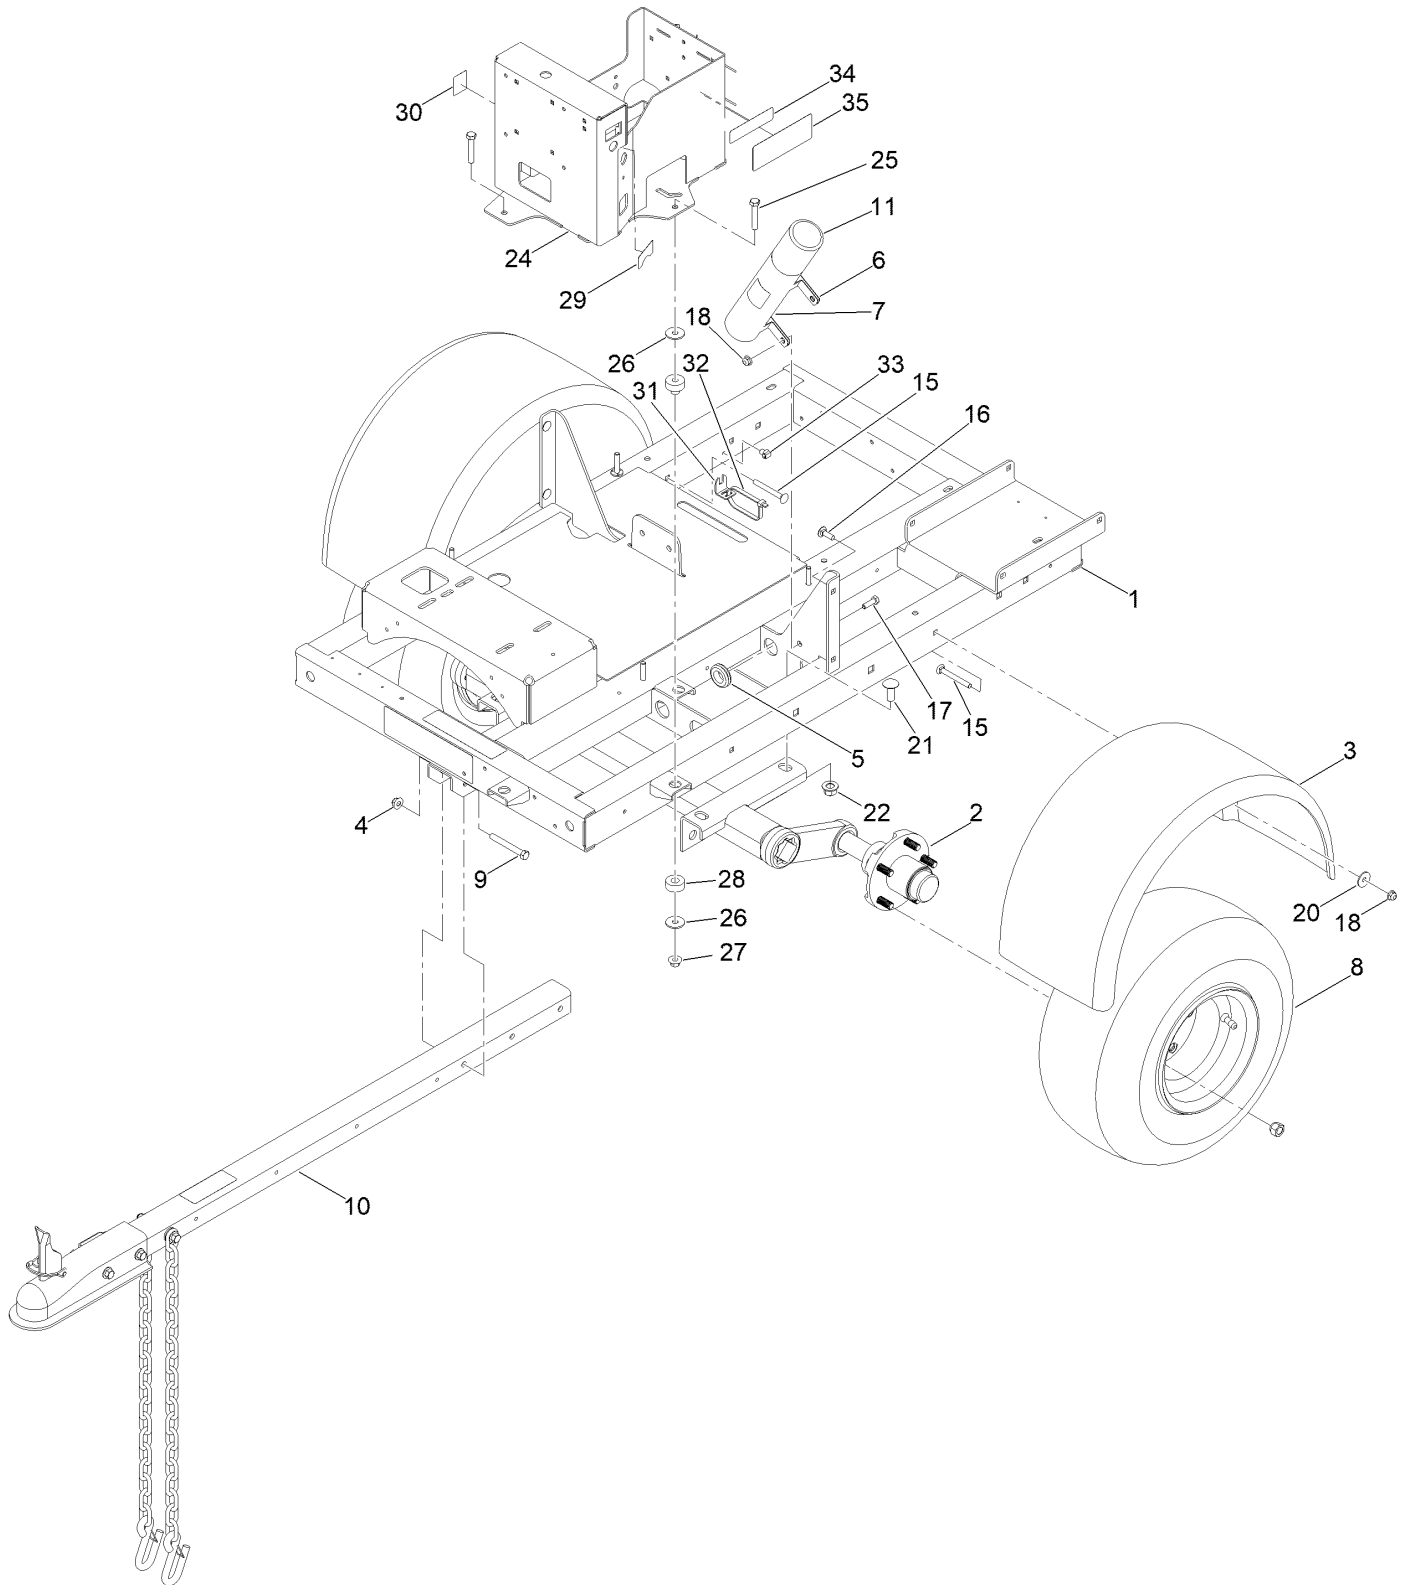

## Frame, Wheel, Axle and Hitch Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	161-7874	1	Frame ASM Service Kit	21	3233-26	4	Screw-CARR,Shortneck
2	119-2966	1	Axle ASM	22	139-1689	4	Nut-HF
3	112-6852	2	Fender	24	161-4947-01	1	Tower-Control
4	119-4042	2	Nut-HF, NI	25	323-10	3	Screw-HH
5	1-543286	2	Grommet	26	93-8806	6	Washer-Hardened
6	2412-133	2	Clamp-R	27	32128-19	3	Nut-HF Lock, Large Flg
7	104-7050	1	Tube-Manual	28	121-2870	3	Mount-2 Piece
8	119-3013	2	Wheel And Tire ASM	29	119-6165	1	Decal-Ignition
9	323-14	2	Screw-HH	30	131-6766	1	Decal-Fuses
10	119-3005	1	Hitch ASM	31	131-6703	1	Bracket-Hold Down, Electrical
11	104-7048	1	Cap-Housing	32	3334-945	1	Tie-Cable
15	3230-9	4	Screw-CARR	33	32180-030	1	Clip-Tie
16	3230-2	4	Bolt-CARR	34	133-8062	1	Decal-Spark Arrestor
17	322-5	2	Screw-HH	35	140-6843	1	Decal-Proforce Frame
18	119-4041	10	Nut-HF				
20	3256-82	8	Washer-Flat				

# Frame Assembly No. 161-7874

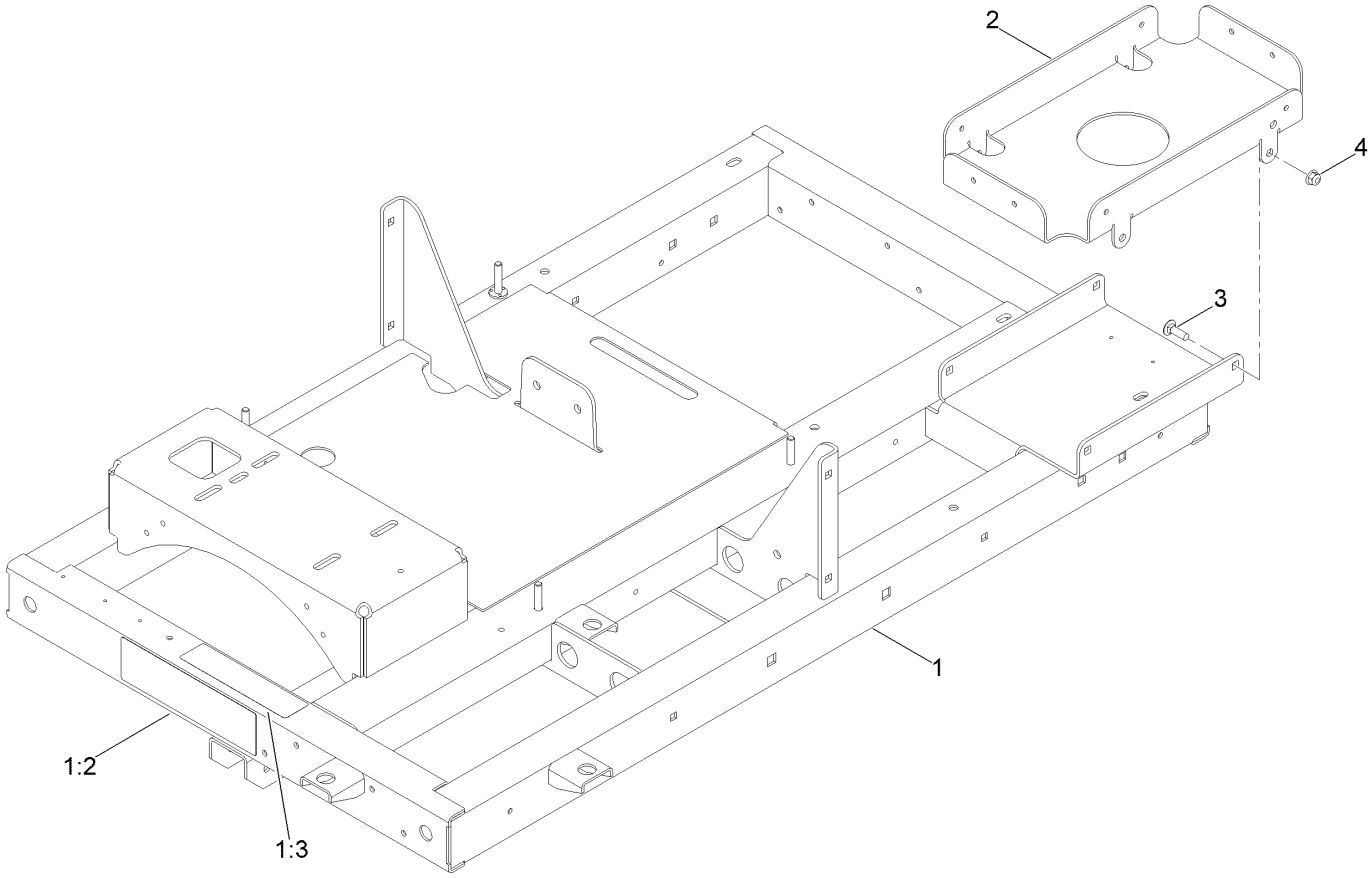


## Frame Assembly No. 161-7874 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	144-3212	1	Frame ASM
1:2	140-6767	1	Decal-Warning,Db
1:3	115-5113	1	Decal-Protection, Eye And Ear

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	145-7461-01	1	Mount-Tank, 5GA
3	3230-2	4	Bolt-CARR
4	119-4041	4	Nut-HF

# Axle Assembly No. 119-2966

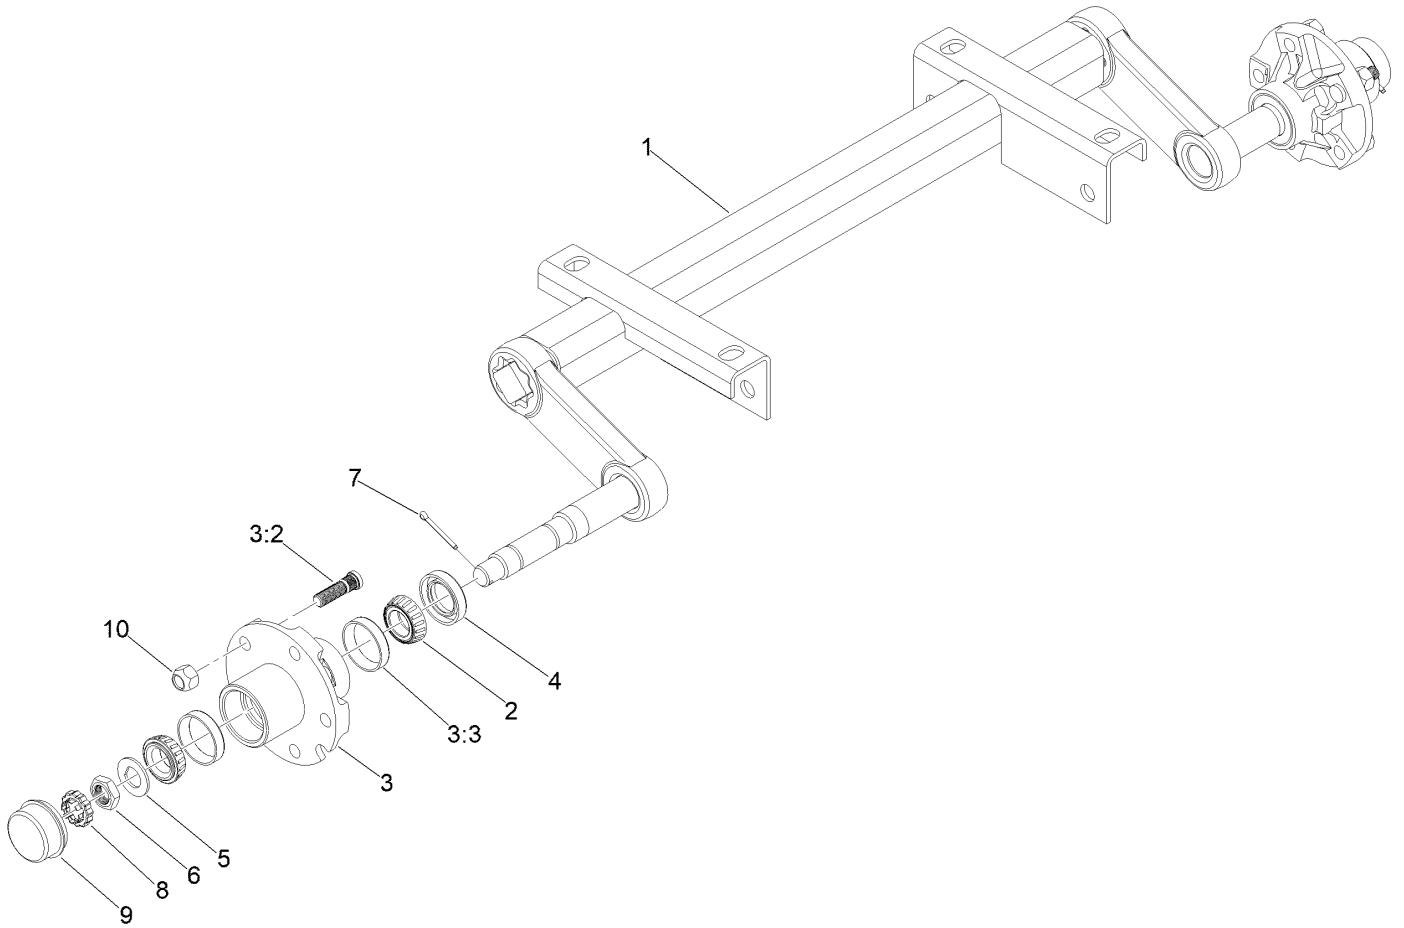


## Axle Assembly No. 119-2966 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Axle-Torsion ●
2	254-94	4	Bearing-Cone, Tapered
3	119-3016	1	Hub ASM
3:2	114-3918	5	Stud-Wheel
3:3	254-72	2	Bearing-Cup, Tapered
4	112-1690	2	Seal-Oil

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	117-8259	2	Washer-Spindle
6	117-8260	2	Nut
7	3272-18	2	Pin-Cotter
8	93-0307	2	Nut-Lock, Retainer
9	241-119	2	Cap-Dust
10	139-2564	10	Nut-Lug

● Not serviced separately


# Wheel and Tire Assembly No. 119-3013

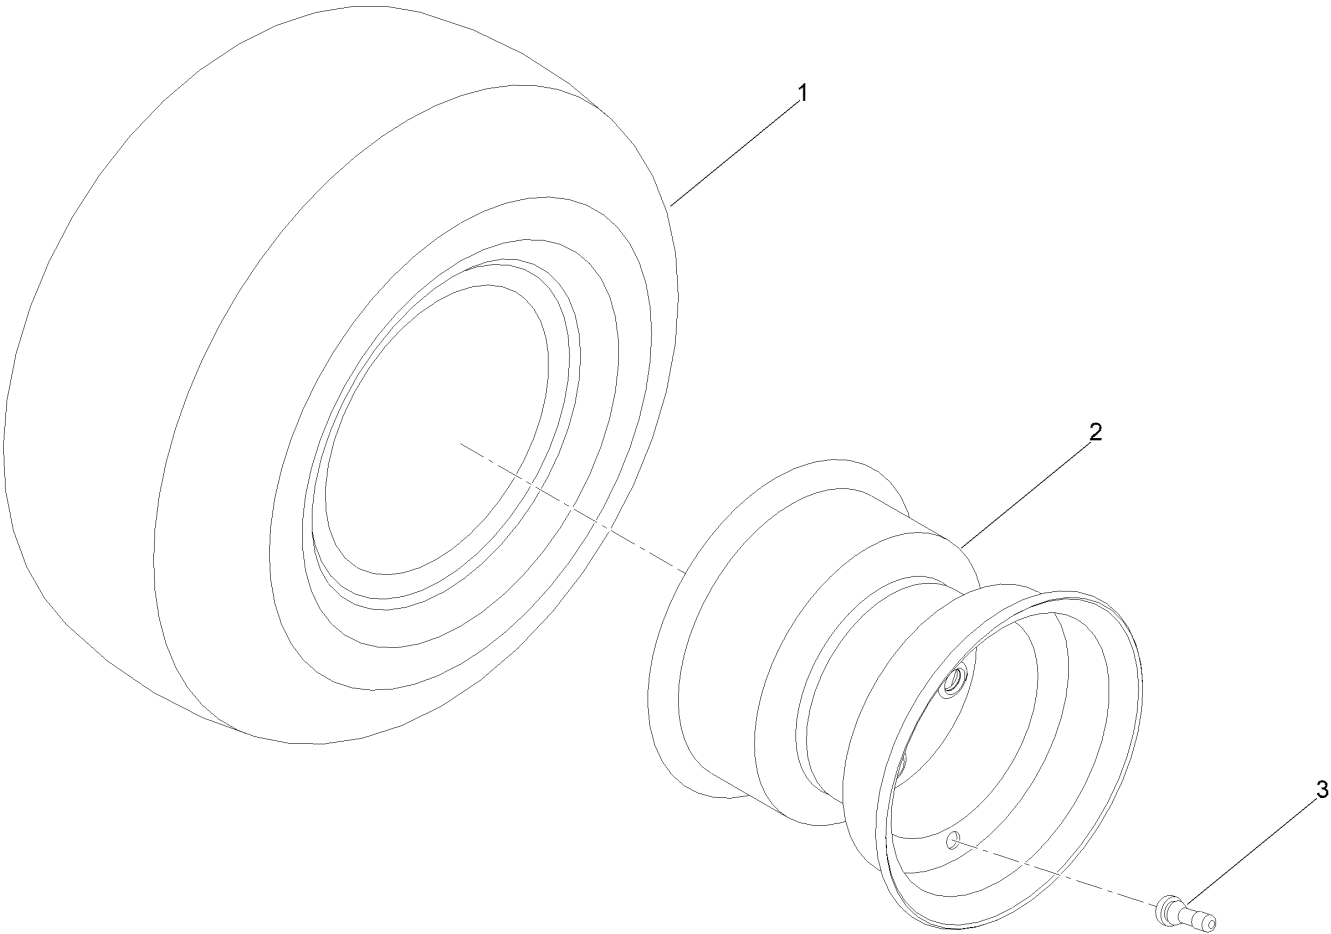

## Wheel and Tire Assembly No. 119-3013 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-3009	1	Tire
2	119-3010	1	Rim
3	232-27	1	Stem-Valve

# Hitch Assembly No. 119-3005

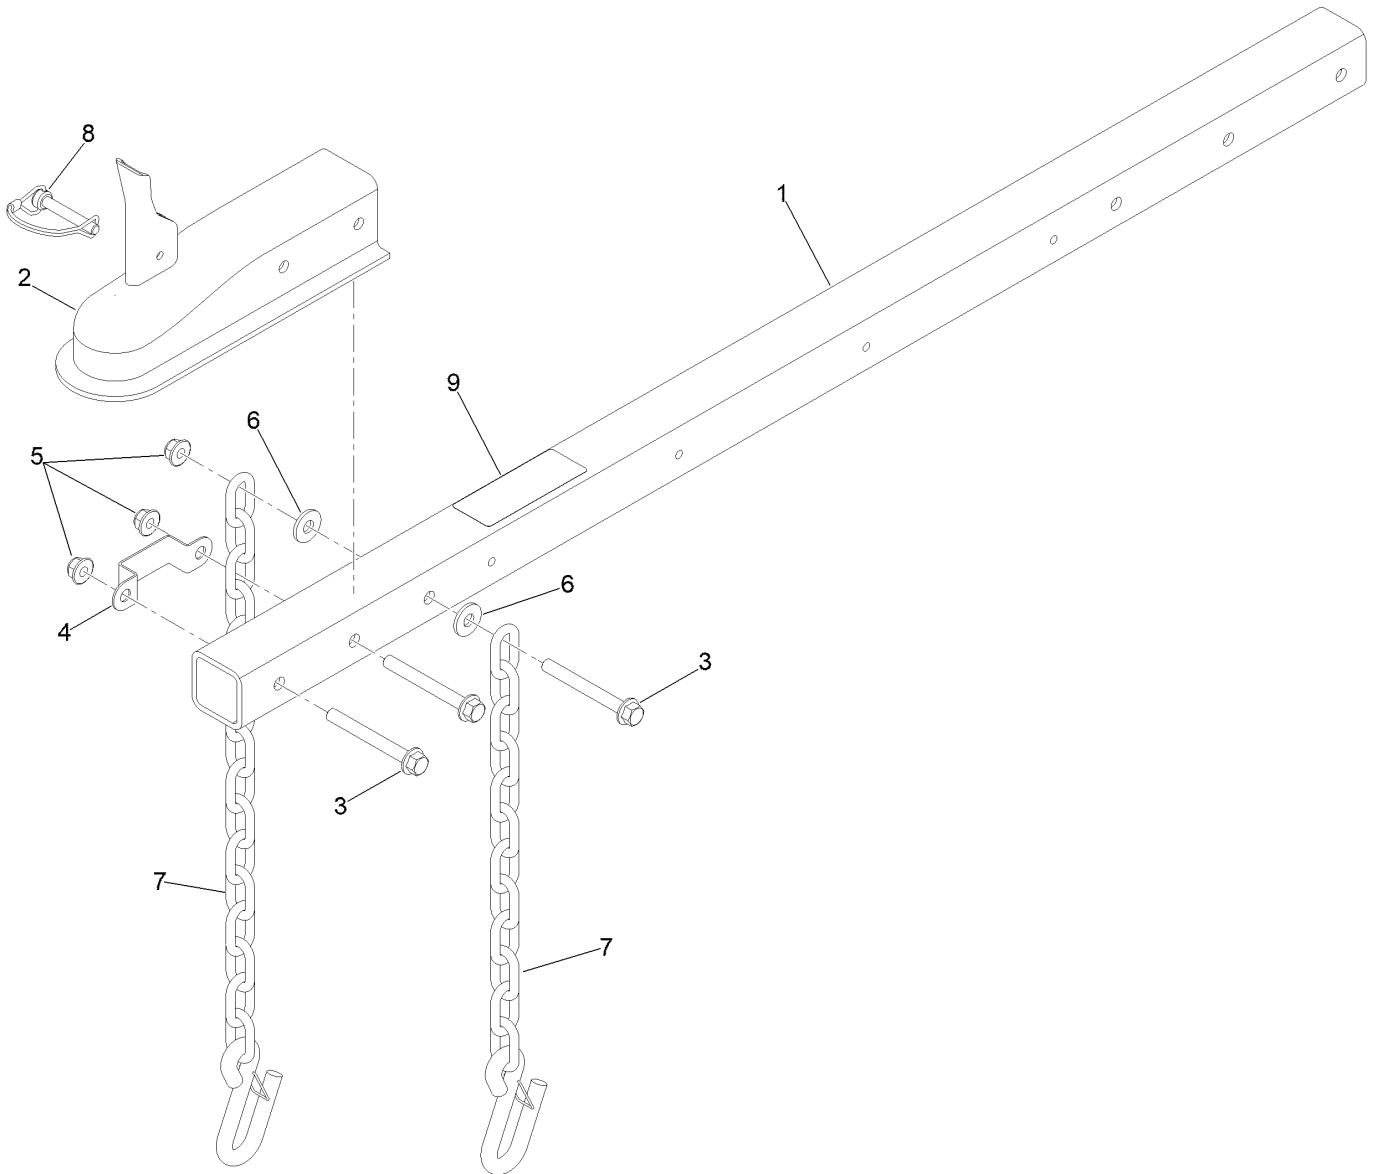

# Hitch Assembly No. 119-3005 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Tube-Hitch ●
2	117-8371	1	Receiver-Hitch, Ball
3	3234-41	3	Screw-HHF
4	119-3006	1	Hook-Light
5	119-4042	3	Nut-HF, NI

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
6	80-6990	2	Washer-Hardened
7	119-3045	2	Chain-Safety, Trailer
8	105-9245	1	Pin-Lock
9	119-6162	1	Decal-Tire


● Not serviced separately



## Turbine Mounting Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	117-8329	1	Bell-Inlet	11	119-4042	4	Nut-HF, NI
2	112-1952	1	Ring-Snap, EXT	12	115-5102	2	Decal
3	93-4632	1	Washer-Wavey	13	115-7109	8	Washer-Flat
4	131-9440	1	Cap-Front	14	94-7484	1	Bearing
5	3231-24	2	Screw-CARR	14:1	302-2	2	Fitting-Grease
6	140-6946SP	1	Turbine ASM-Horizontal	14:2	106-9662	1	Screw-Set, HSH
7	119-4041	11	Nut-HF	15	144-3316-01	1	Mount-Bearing
8	140-6983-01	2	Mount-Housing	16	100-6116	2	Screw-HHF
9	3231-22	2	Screw-CARR	17	139-1689	2	Nut-HF
10	322-6	11	Screw-HH	18	3234-42	2	Screw-HHF


# Turbine Assembly No. 140-6946SP

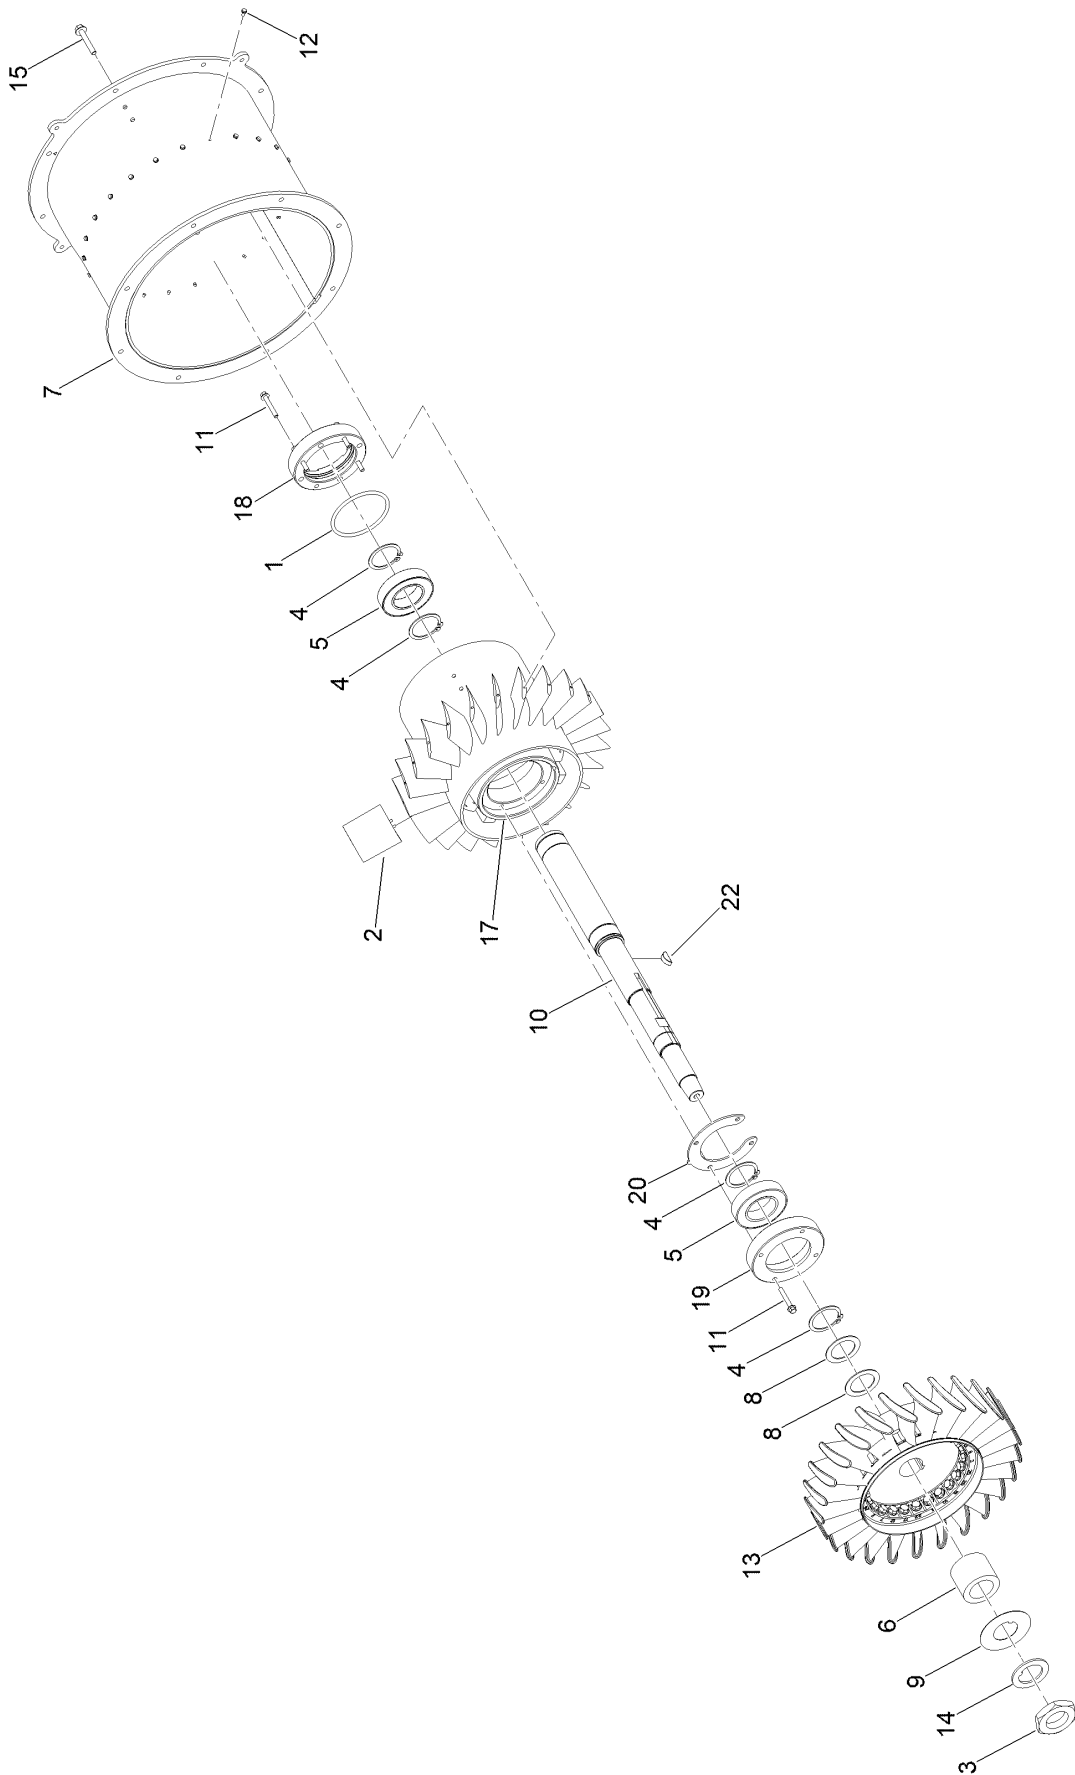

## Turbine Assembly No. 140-6946SP (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	92-9533	1	O-Ring	11	125-4287	8	Screw-HHF
2	112-1871	24	Vane-Stator	12	117-8303	24	Screw-HWH
3	112-1899	1	Nut	13	117-8356	1	Rotor
4	112-1951	4	Ring-Snap, EXT	14	119-6202	1	Washer-Tab
5	112-6764	2	Bearing-Ball	15	161-7875	4	Screw-HHSF
6	114-2164	1	Spacer	17	145-7583	1	Inner Housing
7	140-6945	1	Housing-Horizontal, Service ASM	18	140-6933	1	End-Oring
8	115-5131	2	Washer	19	120-6061	1	Bearing-Cap
9	115-9005	1	Washer-Tab	20	120-6063	1	End-Cap
10	140-6997	1	Shaft-Fan Long	22	3257-42	1	Key-Woodruff


# Nozzle Assembly

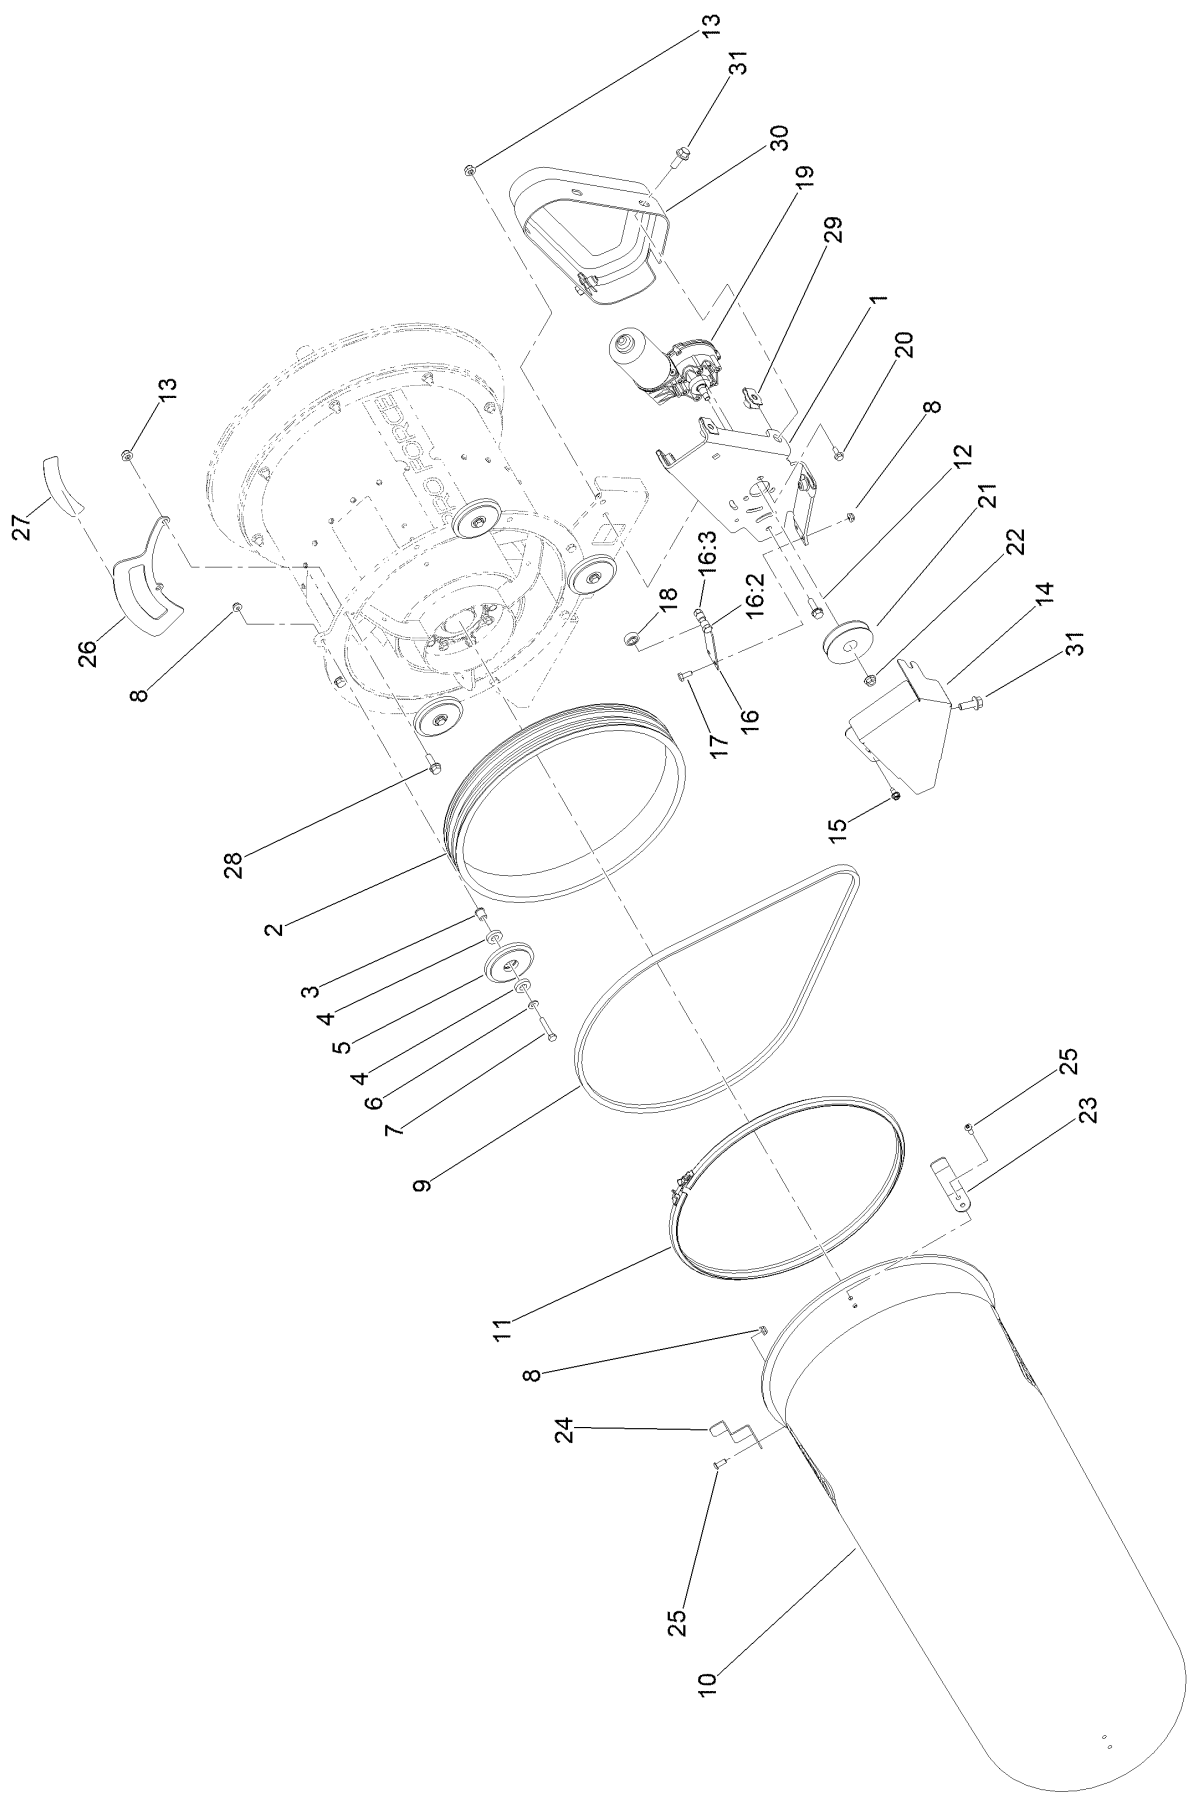

## Nozzle Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	163-0456-01	1	Brkt-Motor, Nozzle	16:3	3296-42	1	Nut-Lock, NI
2	112-1874	1	Pulley-Nozzle	17	321-3	2	Screw-HH
3	140-6982	4	Spacer-Bearing	18	251-259	1	Bearing-Ball
4	115-6870	8	Bearing-Ball, Sealed	19	144-3274	1	Motor-Reversible
5	140-6979	4	Roller-Bearing	20	114-8414	3	Screw-HHF
6	120-9679	4	Washer-Flat	21	115-5147	1	Pulley
7	321-9	4	Screw-HH	22	98-0668	1	Nut
8	104-7201	10	Nut-HF, NI	23	140-2220-01	1	Indicator
9	112-1853	1	Belt-V	24	140-2220-07	1	Indicator
10	144-3382	1	Nozzle-Toro Proforce Trailer	25	119-6906	4	Screw-HSBH
11	112-6899	1	Clamp-Nozzle	26	140-6814-03	1	Gauge-Rotation
12	3234-29	2	Screw-HHF	27	140-2247	1	Decal-Position, Chute
13	119-4041	2	Nut-HF	28	3234-17	2	Screw-HHF
14	163-0457-01	1	Cover-Pulley	29	105-4886	5	Nut-Tinnerman
15	32104-17	1	Screw-HWH	30	140-6848	1	Motor-Cover
16	110-9650	1	Leaf Spring ASM	31	3234-42	5	Screw-HHF
16:2	36-2250	1	Bolt-Shoulder				


# Driveshaft and Battery Assembly

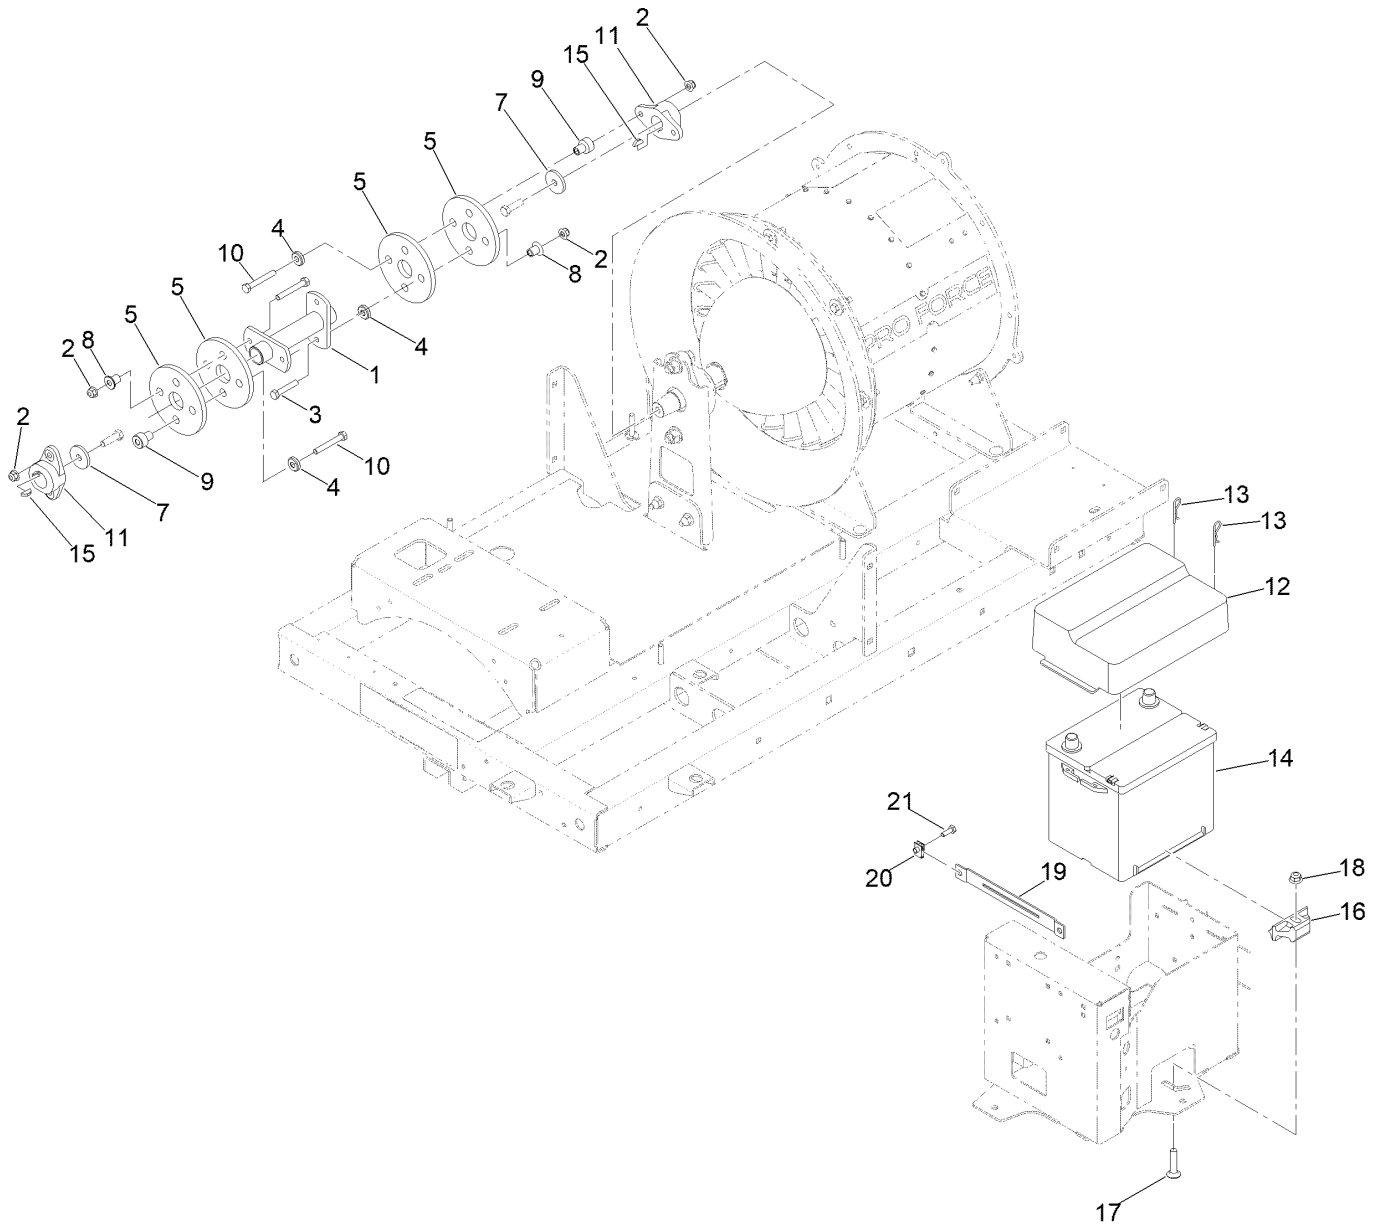

## Driveshaft and Battery Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	140-6936-03	1	Shaft-Drive, Short	12	130-8569	1	Cover-Battery
2	119-4041	8	Nut-HF	13	3290-467	2	Pin-Hair
3	322-39	4	Screw-HH	14	106-5187	1	Battery- Dry, 12V, 525 CCA
4	131-6761	8	Washer	15	3257-5	2	Key-Woodruff
5	115-5129	4	Coupling-Rubber	16	138-6335	1	Retainer-Battery
7	114-2120	2	Washer	17	3231-5	1	Screw-CARR
8	131-6763	4	Spacer-Coupling, Rubber	18	119-4042	1	Nut-HF, NI
9	131-6762	4	Spacer-Coupling, Rubber	19	130-0932-01	1	Bracket-Cover
10	322-32	4	Screw-HH	20	107069	2	Clip
11	114-2122	2	Hub-Engine	21	321-4	2	Screw-HH


# Engine, Muffler and Fuel Tank Assembly

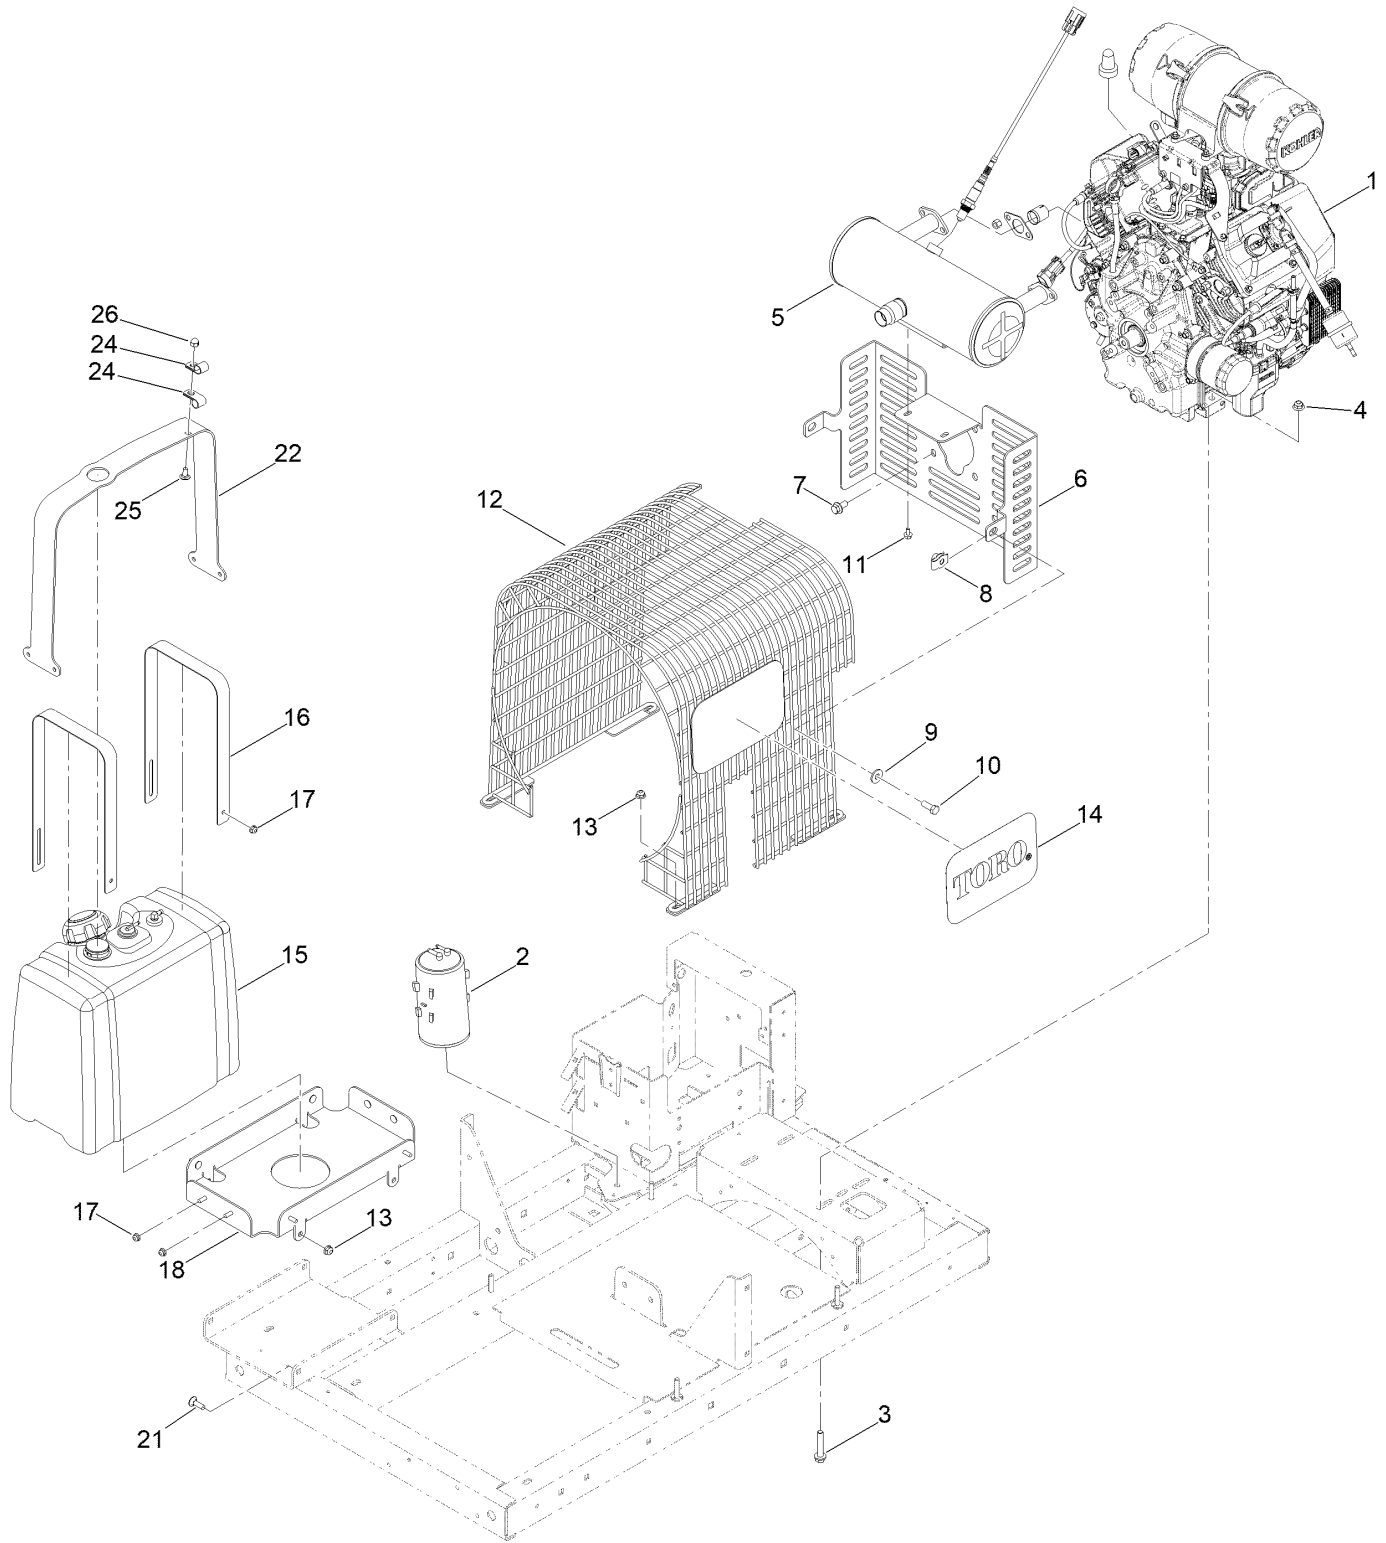

## Engine, Muffler and Fuel Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	163-0495	1	Engine-Rehlko	13	119-4041	8	Nut-HF
2	127-8685	1	Canister-Carbon	14	92-1242	2	Decal
3	66-9302	4	Screw-HHF Lock	15	115-9048	1	Fuel Tank ASM
4	119-4042	4	Nut-HF, NI	16	119-6285	2	Strap-Hold Down, Tank
5	163-0401	1	Muffler	17	104-7201	8	Nut-HF, NI
6	161-4854-03	1	Mount-Muffler	18	145-7461-01	1	Mount-Tank, 5GA
7	110-1718	4	Screw-HHSF,Patch	21	3230-2	4	Bolt-CARR
8	105-4886	2	Nut-Tinnerman	22	144-3629-03	1	Guard-Gauges
9	80-6990	2	Washer-Hardened	24	2412-138	2	R-Clamp
10	323-6	2	Screw-HH	25	3230-18	1	Screw-CARR
11	33103-012	2	Screw-HHF	26	137-4808	1	Nut-Acorn
12	112-6876	1	Grill-Top				


# Fuel Tank Assembly No. 115-9048

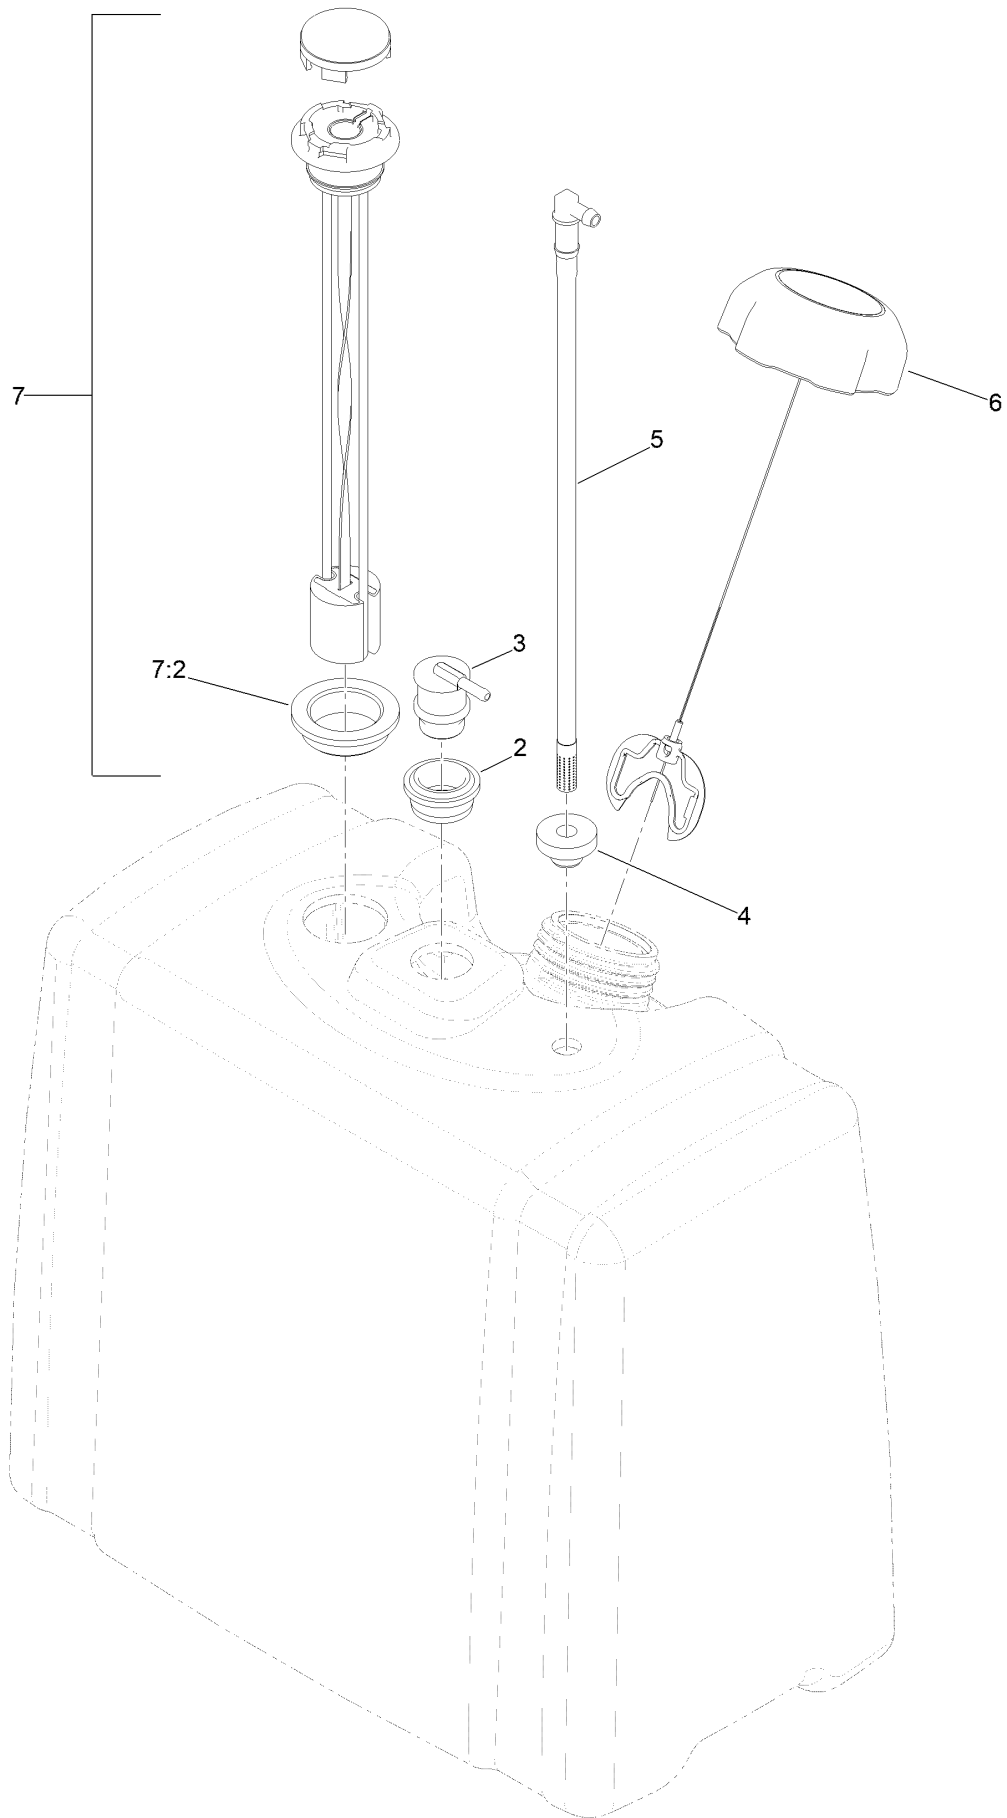

## Fuel Tank Assembly No. 115-9048 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	114-0284	1	Grommet	6	137-4127	1	Cap-Fuel
3	114-0285	1	Valve-Rollover	7	119-0509	1	Gauge ASM
4	46-6560	1	Bushing	7:2	119-0508	1	Seal
5	115-9044	1	Pipe-Stand				


# Fuel Delivery Assembly

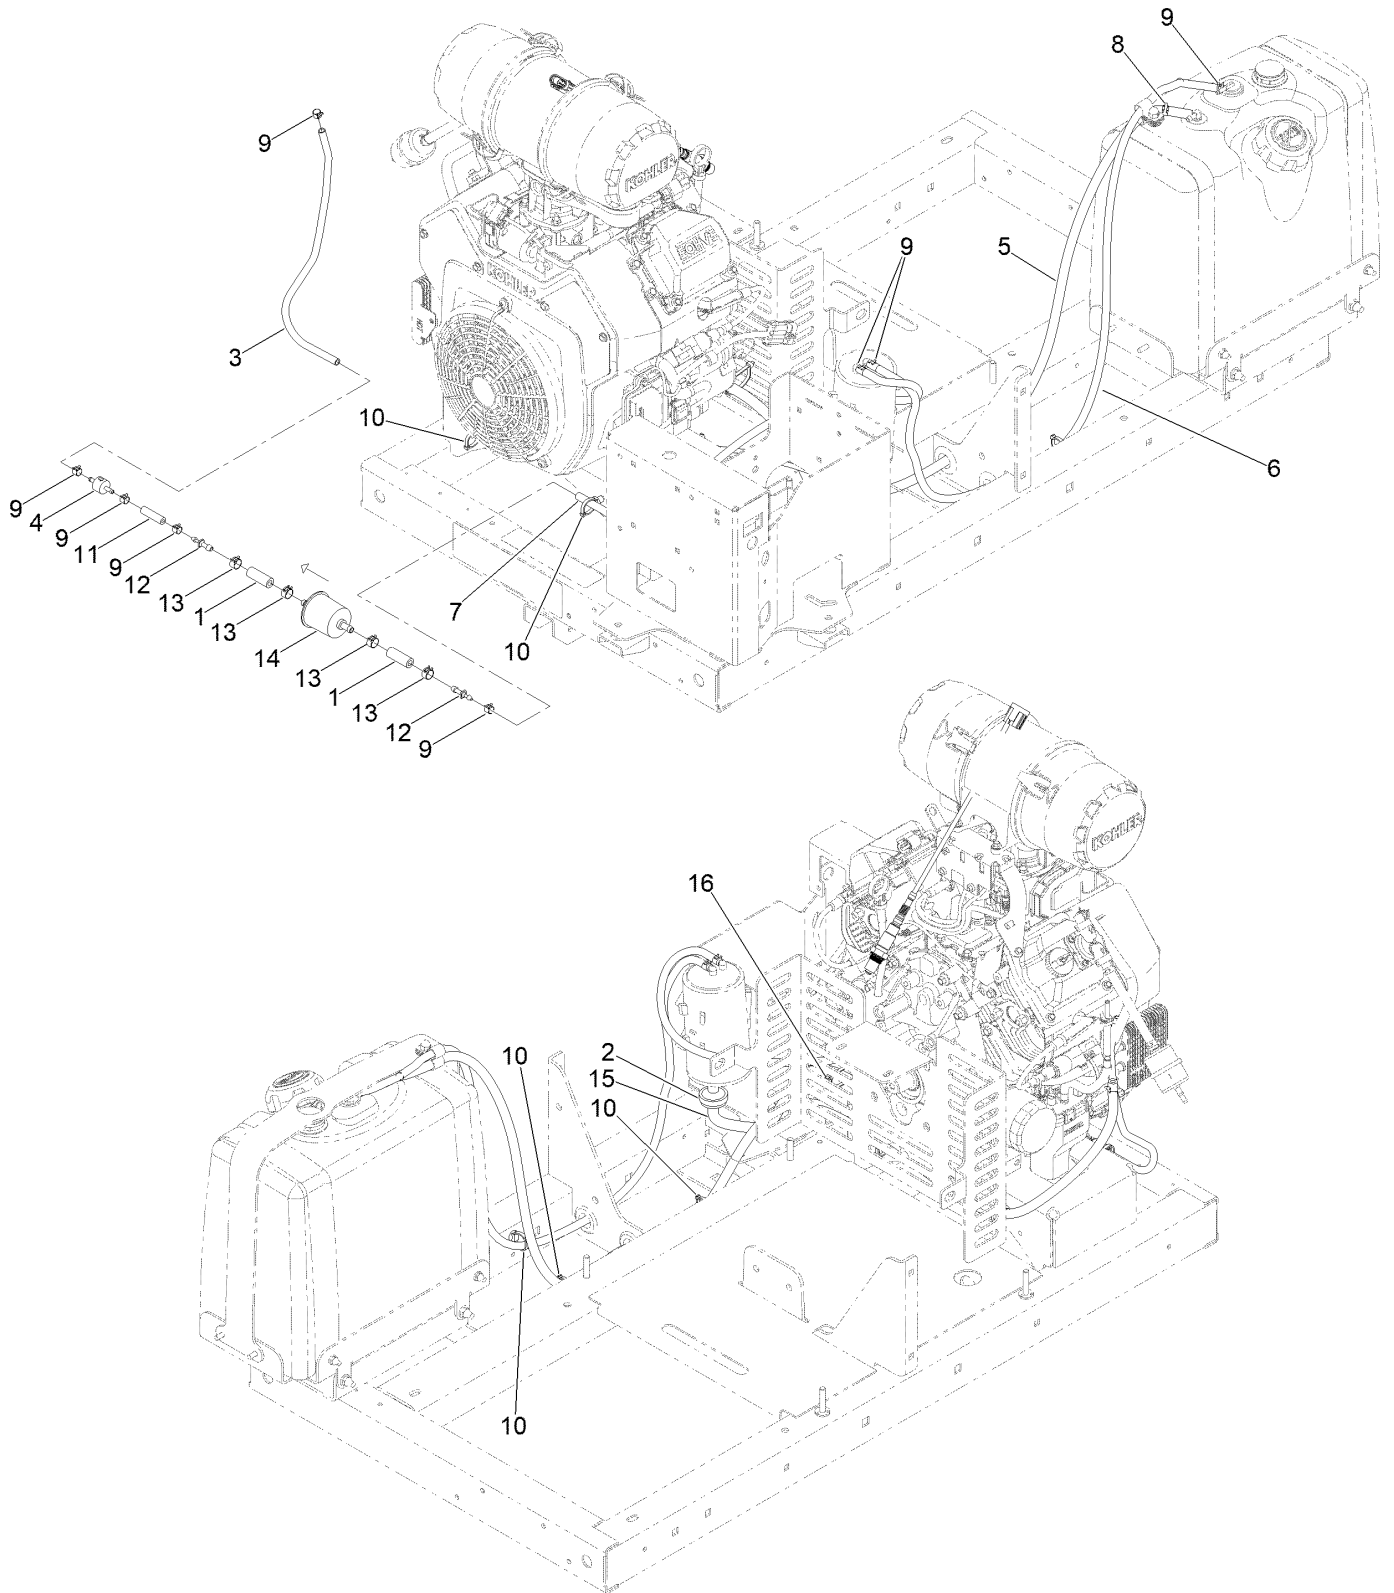

## Fuel Delivery Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	106-5317	3	Hose-Fuel	9	2412-80	8	Clamp-Hose
2	115-7854	1	Filter-Fuel, Inline	10	32180-030	7	Clip-Tie
3	143-2545	1	Hose-Fuel	11	119-8561	1	Hose-Fuel
4	133-8499	1	Valve-Check, Vacuum	12	106-8150	2	Fitting-Straight
5	163-0402	1	Hose-Fuel	13	92-2379	4	Clamp-Hose
6	119-6073	1	Hose-Fuel	14	120-2235	1	Filter-Fuel
7	110-3254	1	Hose-Fuel	15	110-4109	1	Hose-Fuel
8	2412-98	2	Clamp-Hose	16	3290-378	1	Tie-Cable


# Electrical System Assembly

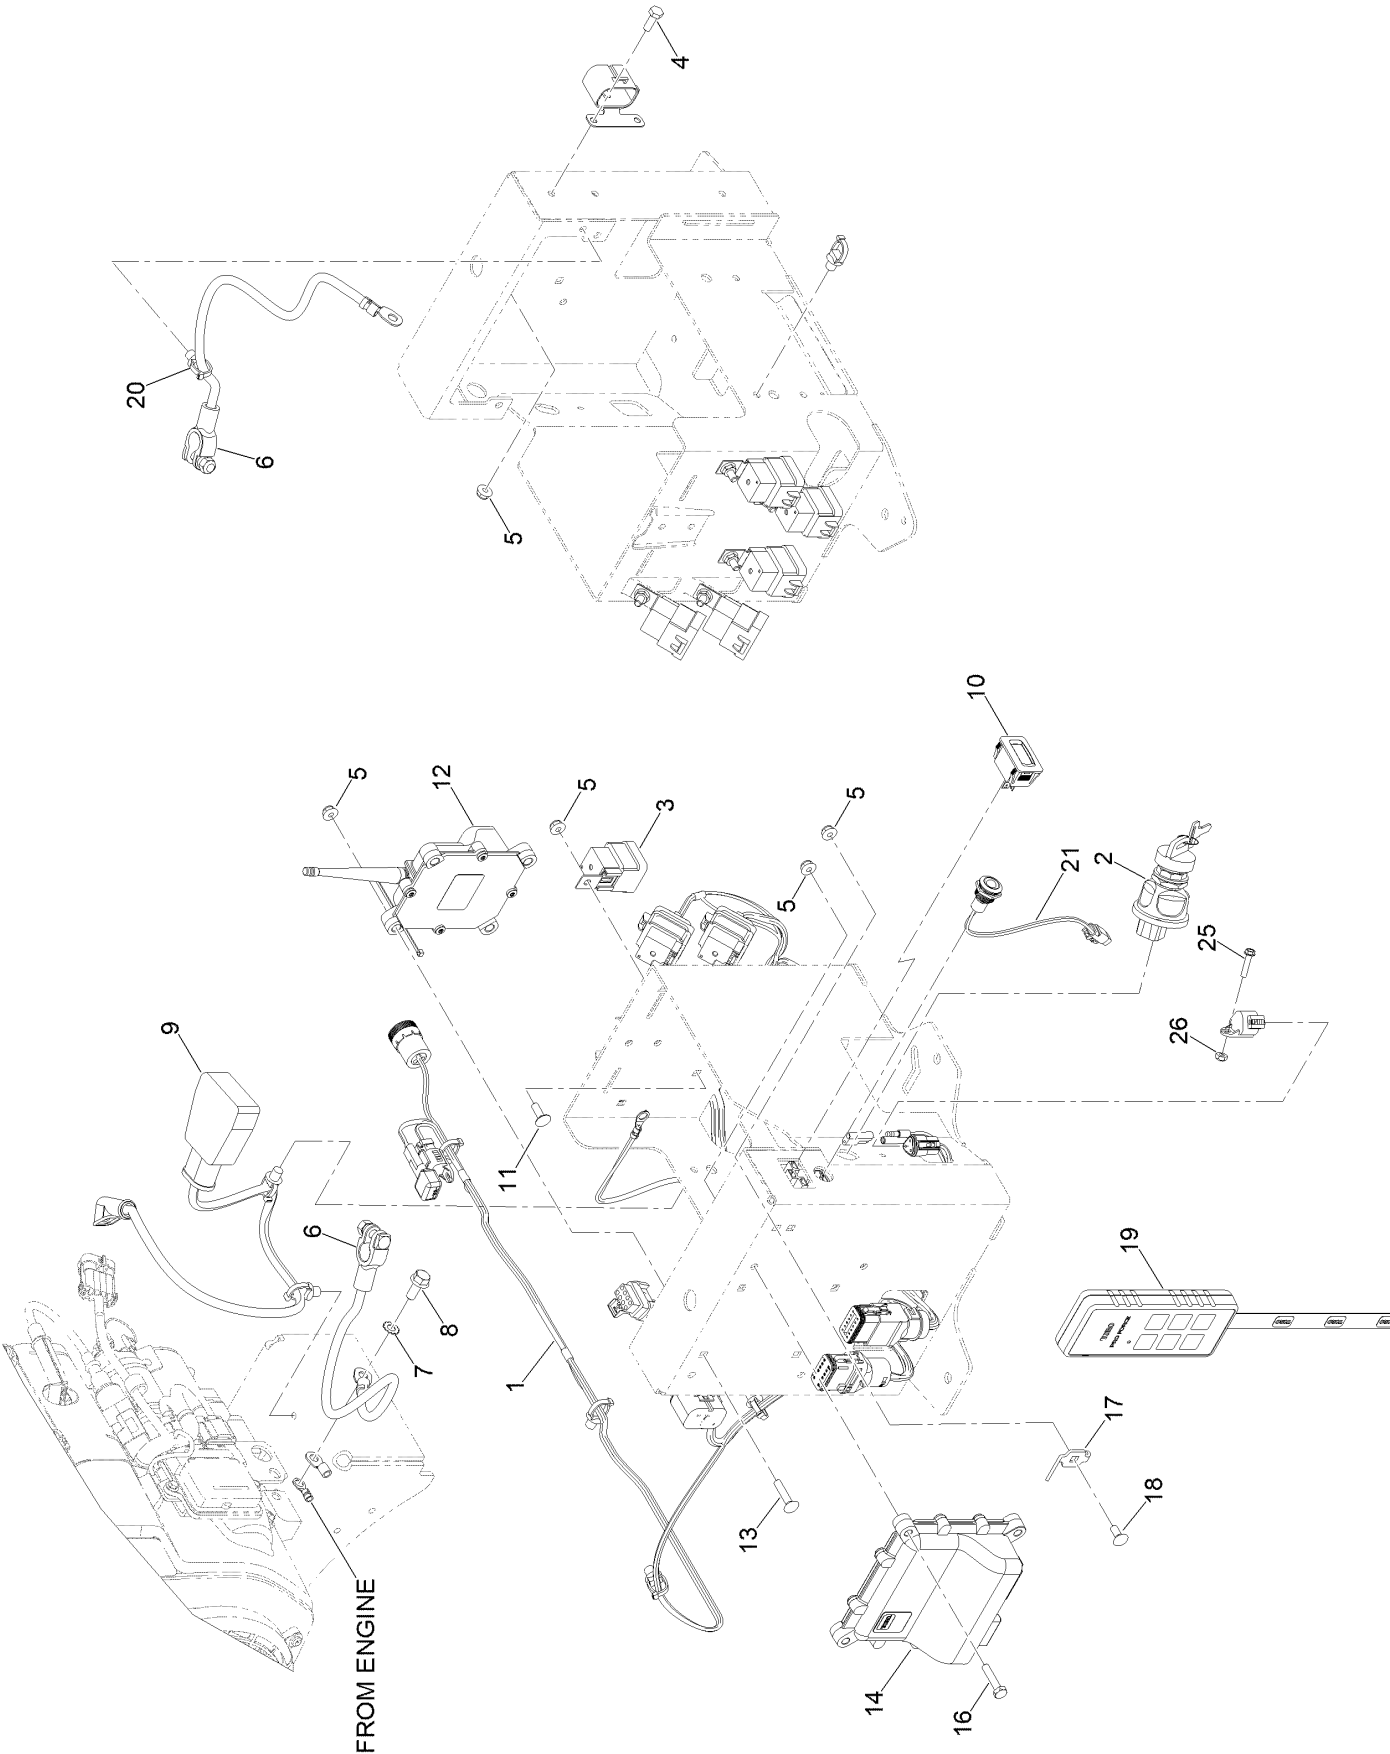

## Electrical System Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	122-3530	1	Harness-Wire, Proforce Blower Rf2Can	12	132-9600	1	Controller
2	121-5159	1	Switch-Ignition	13	3229-3	4	Screw-CARR
3	99-7430	5	Relay-Mini	14	125-1360	1	Controller
4	321-4	2	Screw-HH	16	321-8	4	Screw-HH
5	104-7201	16	Nut-HF, NI	17	121-2761	1	Mount-Transmitter
6	125-5966	1	Cable-Battery, Negative	18	3229-11	1	Screw-CARR
7	3255-8	1	Washer-Lock	19	125-1270	1	Remote ASM
8	33104-020	1	Screw-HHF	20	32180-030	3	Clip-Tie
9	122-0629	1	Cable-Battery, Positive	21	122-0630	1	Red LED Indicator Lamp ASM
10	120-2244	1	Hourmeter	25	106-9169	1	Screw-HWH
11	1-807512	5	Bolt-CARR	26	3296-12	1	Nut-Lock, NI


# Wire Harness Assembly No. 122-3530

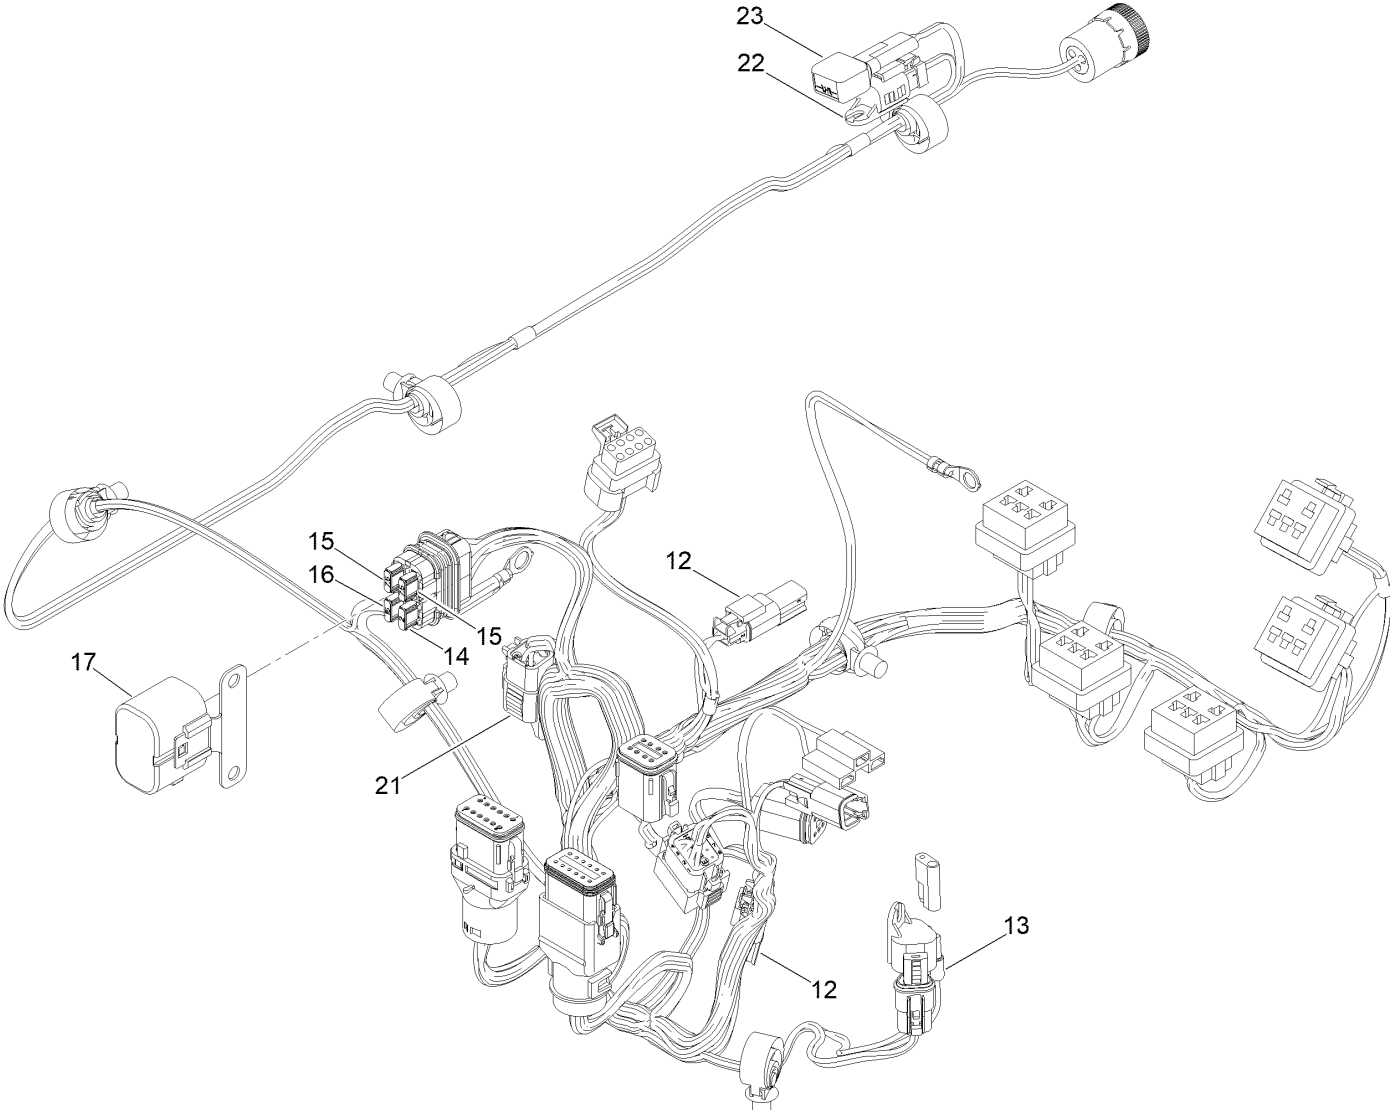

## Wire Harness Assembly No. 122-3530 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
12	32180-282	2	Conn, Res, 120 Ohm	17	32180-179	1	Cover-Bussman
13	32180-089	1	Cap-Plug, 3 Way	21	32180-156	1	Cap-Plug, 6 Way
14	121-8861	1	Fuse-Mini Blade, 2 Amp	22	32180-091	1	Cap-Dust, 2 Way
15	121-8865	2	Fuse-Mini Blade, 7.5 Amp	23	108-9493	1	Diode-Tvs
16	121-8867	1	Fuse-Mini Blade, 15 Amp				


# Ignition Switch Assembly No. 121-5159

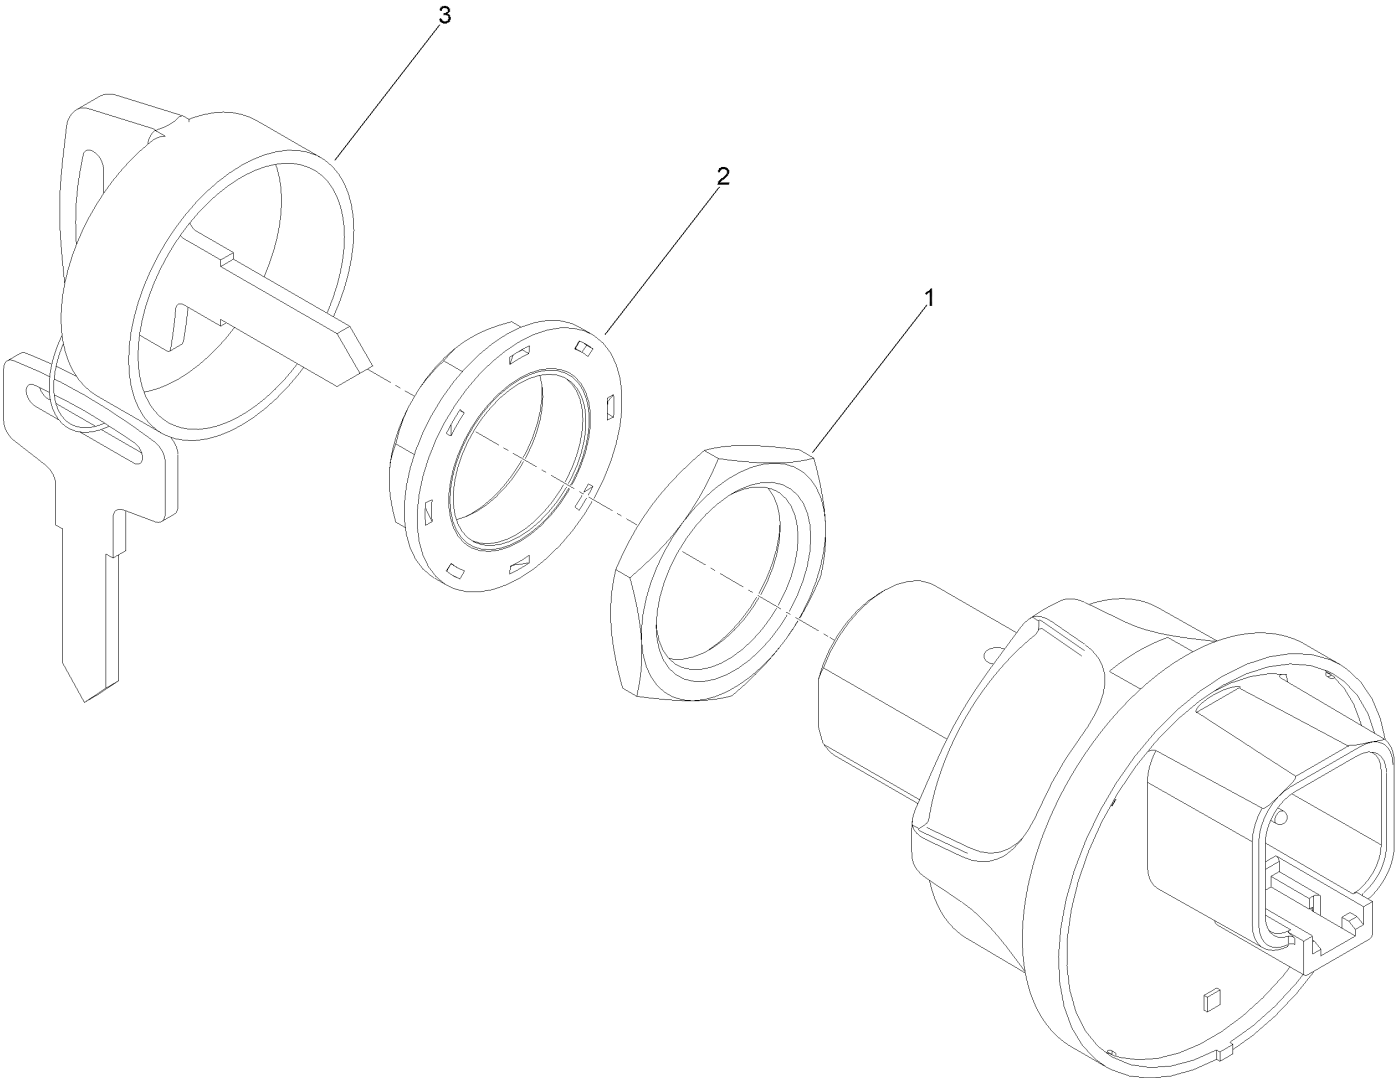

## Ignition Switch Assembly No. 121-5159 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-5160	1	Nut-Hex
2	122-2704	1	Nut-Face, M22 (Plastic)
3	121-5162	1	Set-Key, Ignition

# Controller Assembly No. 132-9600

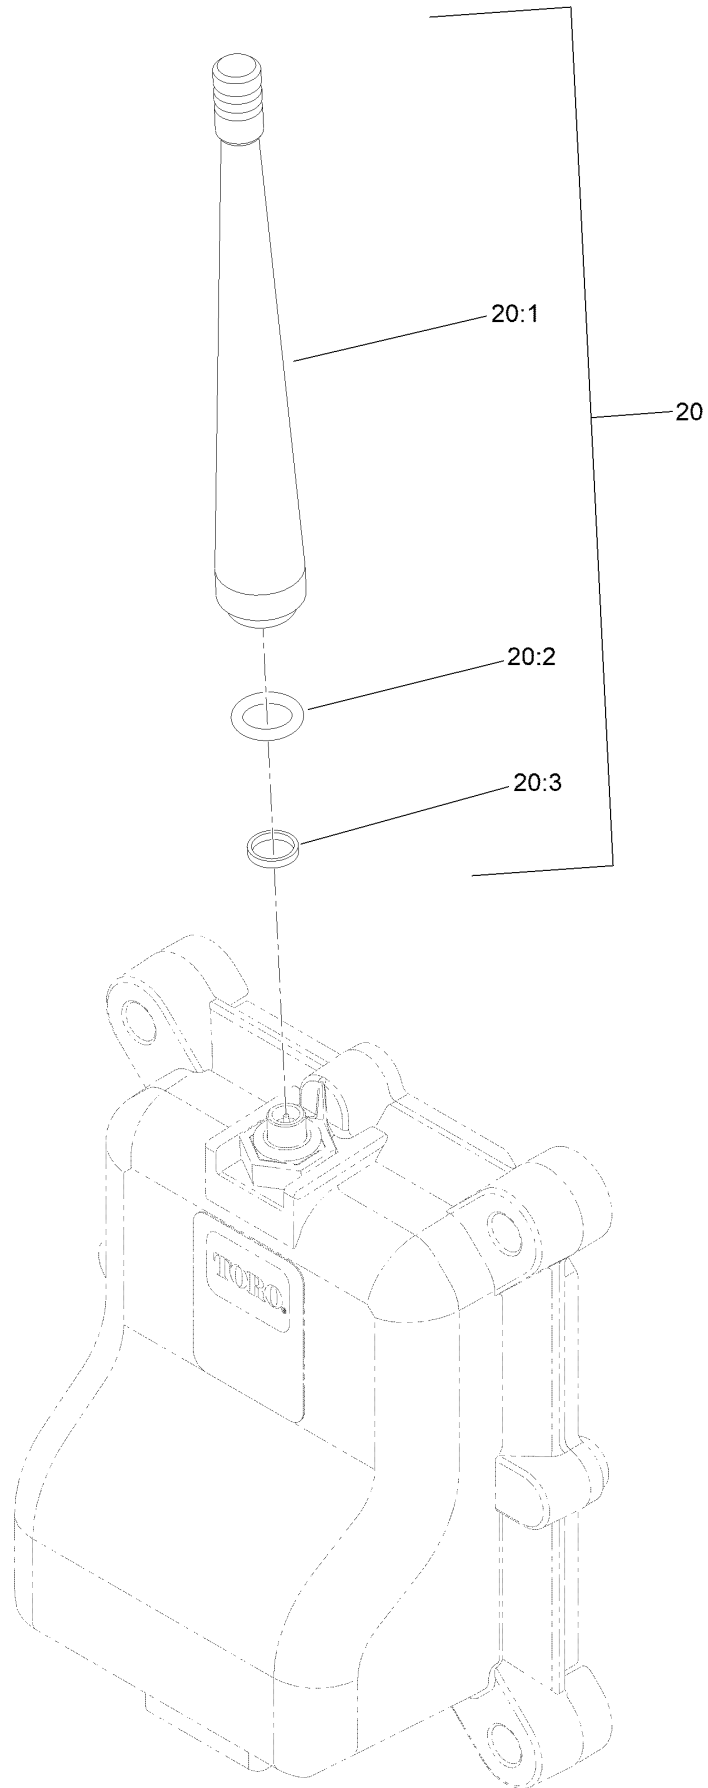


## Controller Assembly No. 132-9600 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
20	140-6605	1	Antenna Service Kit
20:1	125-1567	1	Antenna

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
20:2	127-2323	1	O-Ring
20:3	127-2506	1	Spacer

# Remote Assembly No. 125-1270

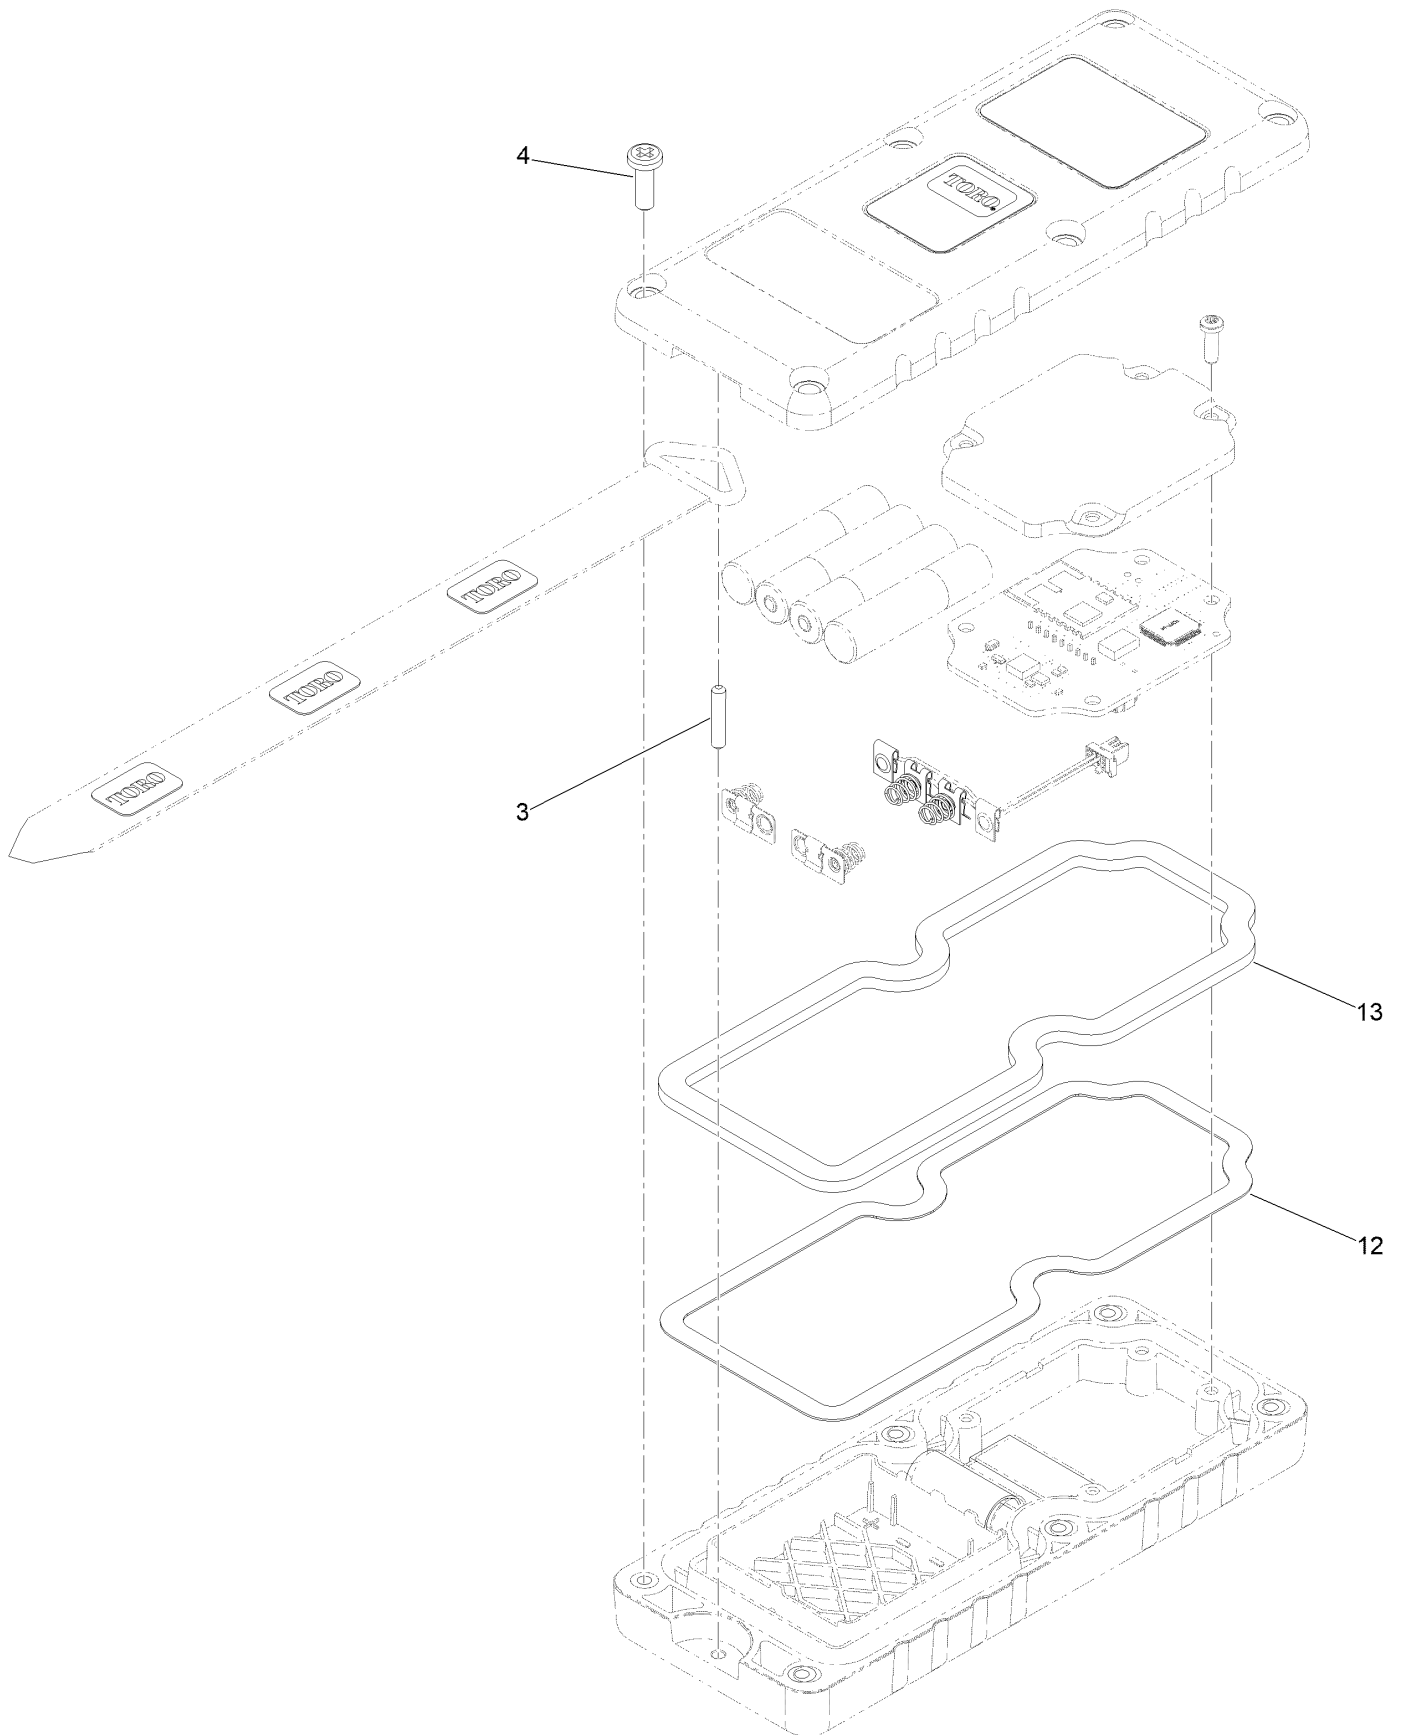


## Remote Assembly No. 125-1270 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	121-2906	1	Pin-Lanyard
4	121-2908	6	Screw-PPH

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
12	125-1294	1	Backer-Gasket
13	163-0307	1	Gasket-HH


# Red LED Indicator Lamp Assembly No. 122-0630

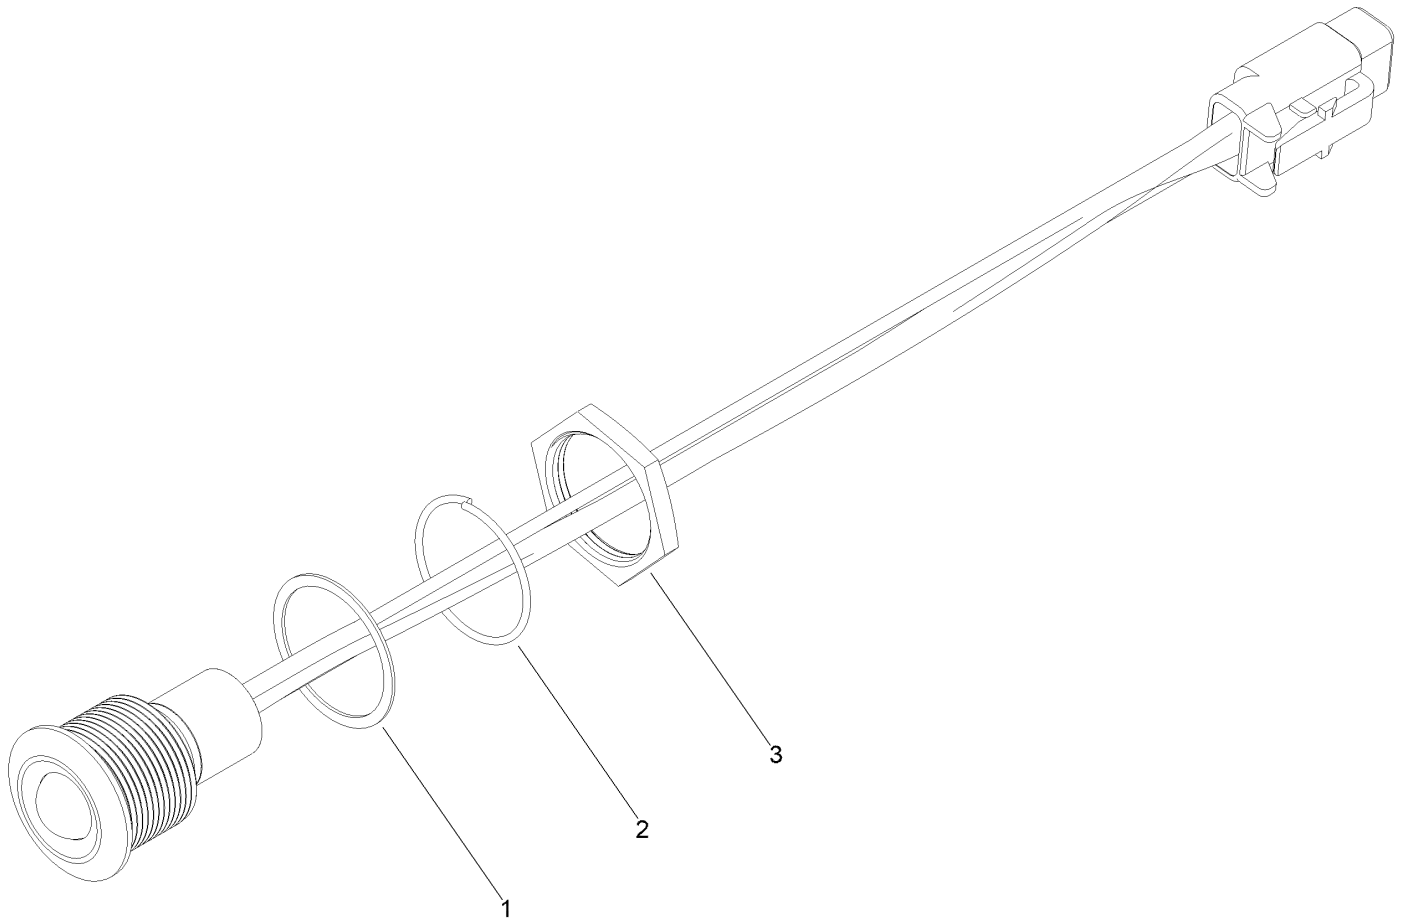

# Red LED Indicator Lamp Assembly No. 122-0630 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	122-0634	1	Gasket-LED
2	122-0633	1	Washer-Locking
3	122-0632	1	Nut-Fixing

# Tail Light Assembly

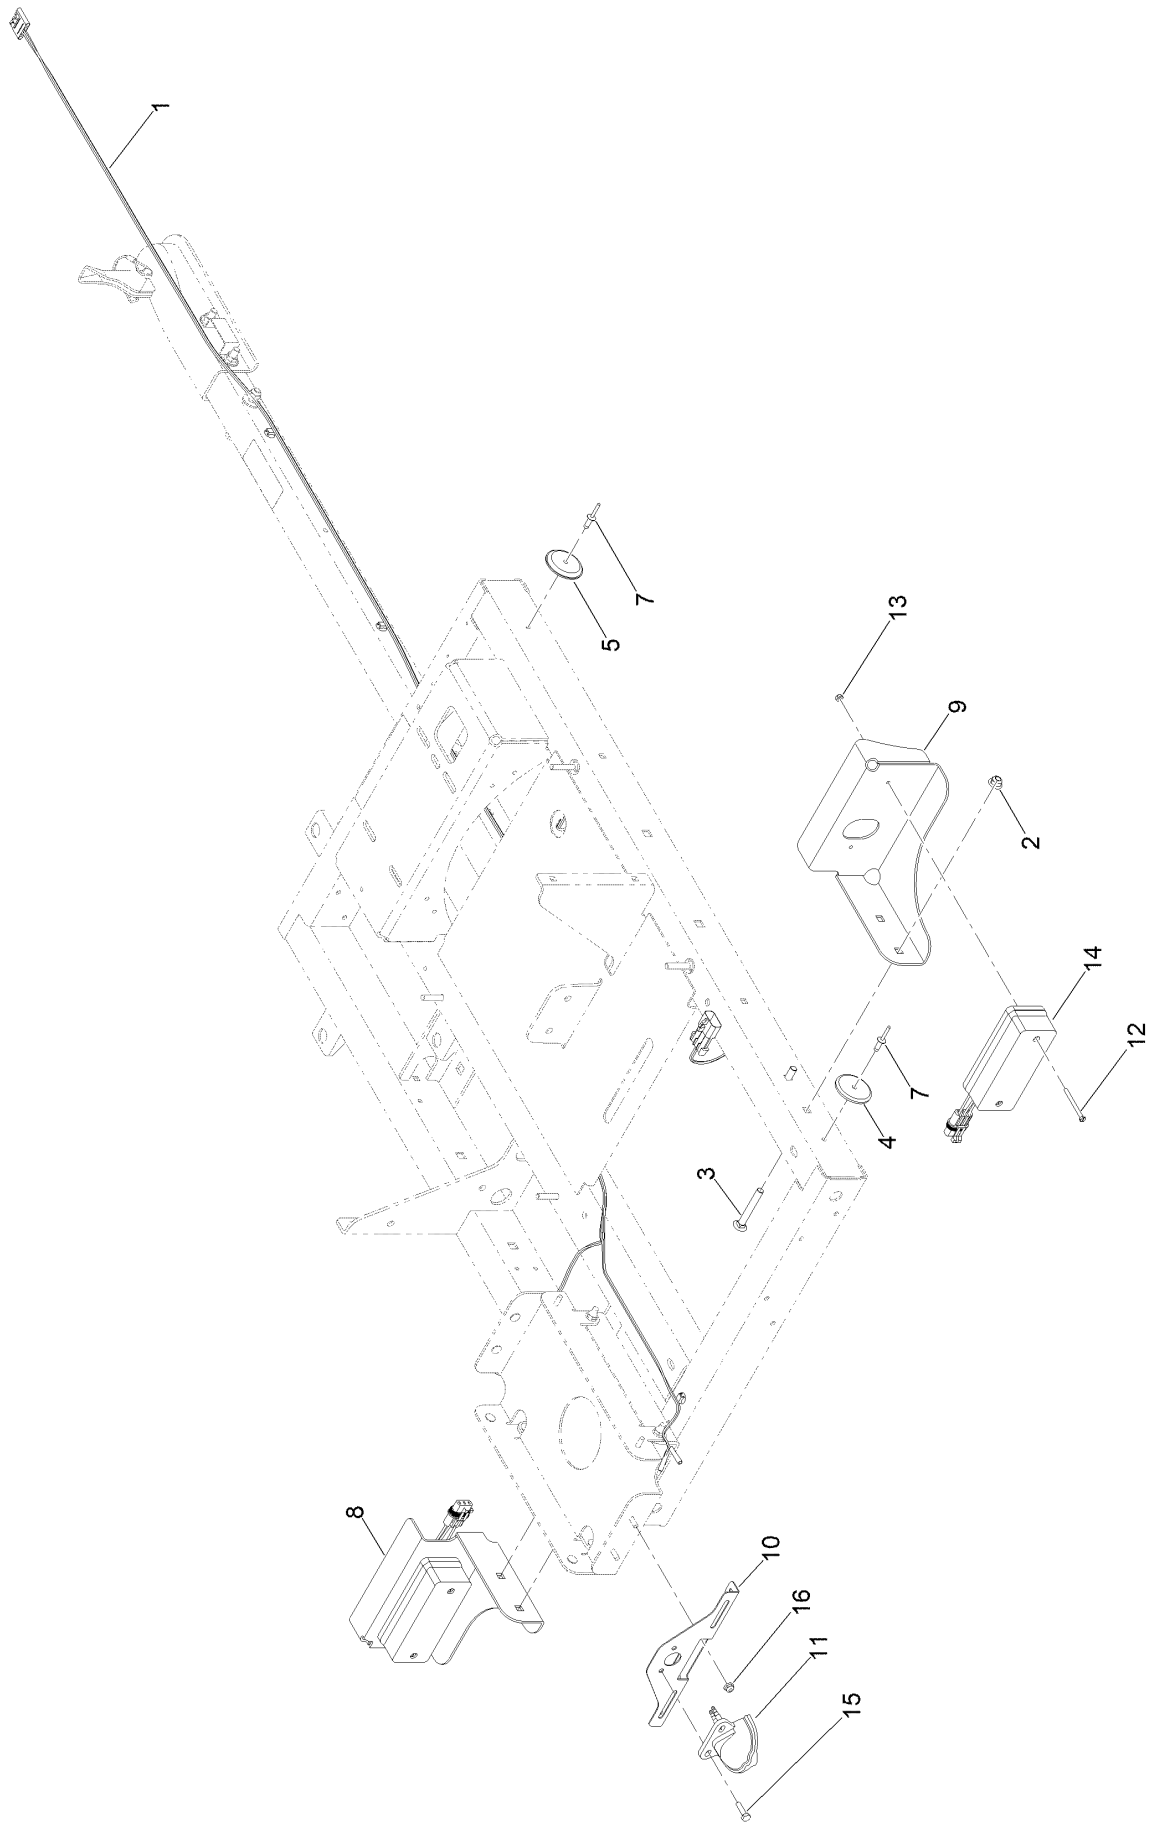

## Tail Light Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	122-3327	1	Harness-Wire	10	145-7635-03	1	Bracket-License Plate
2	119-4042	4	Nut-HF, NI	11	145-7637	1	Lamp-License, LED
3	3231-9	4	Screw-CARR	12	32105-14	4	Screw-SHH
4	74-2390	2	Reflector-Red	13	3296-12	4	Nut-Lock, NI
5	104-6962	2	Reflector-Amber	14	119-3046	2	Tail-Light
7	3290-412	4	Rivet-Blind	15	321-6	2	Screw-HH
8	119-3003-03	1	Bracket-Light Mount (LH)	16	104-7201	2	Nut-HF, NI
9	119-3004-03	1	Bracket-Light Mount (RH)				

# Attachments and Accessories

## For 44557 — Pro Force Debris Blower

<b>Product Name</b>	<b>Model/Part</b>
Wireless Hourmeter .....	115-4754
External Antenna Kit, Wireless Hourmeter System .....	115-9524
Base Station Kit, Wireless Hourmeter System .....	115-9542
Repeater Kit, Wireless Hourmeter System .....	115-9543
Tapered Nozzle Kit.....	119-6280
Rectangular Nozzle Kit .....	119-6281
10 Gallon Kit, Pro Force Debris Blower .....	130-4371
Alignment Tool Assembly.....	161-7891
Telematics Kit .....	163-4515
Telematics Lite Kit.....	163-4516
Toro Red 12oz Aerosol Can .....	361-10
New Red Paint - Gallon .....	361-11
Semi-Gloss Black Spray Paint .....	361-9
LED Light Kit.....	44559

**Notes:**



**Count on it.**