



Mid-Size ProLine T-Bar Gear 15 HP with 44in Side Discharge Mower

Model No. 30326 - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Engine Installation Assembly	 3	Valve and Camshaft Assembly Kawasaki	
Fuel Tank Assembly	 4	FH430V-AS28	 19
Lower Control Assembly	 5	Lubrication Equipment Assembly Kawasaki	
Transmission Drive Assembly	 6	FH430V-AS28	 20
Wheel Drive and Brake Assembly	 7	Cooling Equipment Assembly Kawasaki	
Upper Handle Assembly	 8	FH430V-AS28	 21
Control Panel Assembly	 9	Electrical Equipment Assembly Kawasaki	
Carrier Frame Assembly	 10	FH430V-AS28	 22
Spindle, Pulley and Belt Assembly	 11	Control Equipment Assembly Kawasaki FH430V-	
Deck Assembly No. 106-0617	 12	AS28	 23
Spindle Assembly No. 106-0786	 13	Carburetor Assembly Kawasaki FH430V-AS28	 24
Spindle Assembly No. 106-0784	 14	Air-Filter and Muffler Assembly Kawasaki	
Deck Assembly	 15	FH430V-AS28	 25
Drive Belt and Tensioner Assembly	 16	Fuel Tank/Fuel Valve Assembly Kawasaki	
Cylinder and Crankcase Assembly Kawasaki		FH430V-AS28	 26
FH430V-AS28	 17	Starter Assembly Kawasaki FH430V-AS28	 27
Piston and Crankshaft Assembly Kawasaki		Decal Assembly Kawasaki FH430V-AS28	 28
FH430V-AS28	 18		

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR. as required	INC. incorporated
ASM. assembly	LH. left hand
CARR. carriage	NI. nylon insert
DEG. degrees	PPH. phillips pan head
FH. flat head	PTH. phillips truss head
GA. gauge	PTO. power take off
HF. hex flange	RH. right hand
HH. hex head	SFH. slotted fillister head
HHF. hex head flange	SHH. slotted hex head
HHFTF. hex head flange thread forming	SHWH. slotted hex washer head
HJ. hex jam	SPH. slotted pan head
HLH. hex lag head	SQH. square head
HOC. height-of-cut	SRH. slotted round head
HS. hex	STD. standard
HSBH. hex socket button head	TAP. self tapping
HSFH. hex socket flat head	TTH. torx truss head
HSH. hex socket head	WH. wing head
HWH. hex washer head	
HWHTF. hex washer head thread forming	
HYD. hydraulic	

Footnotes

- | | |
|--|---------------------------|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Obtain parts from your local Kawasaki dealer | |


PROTOTYPE

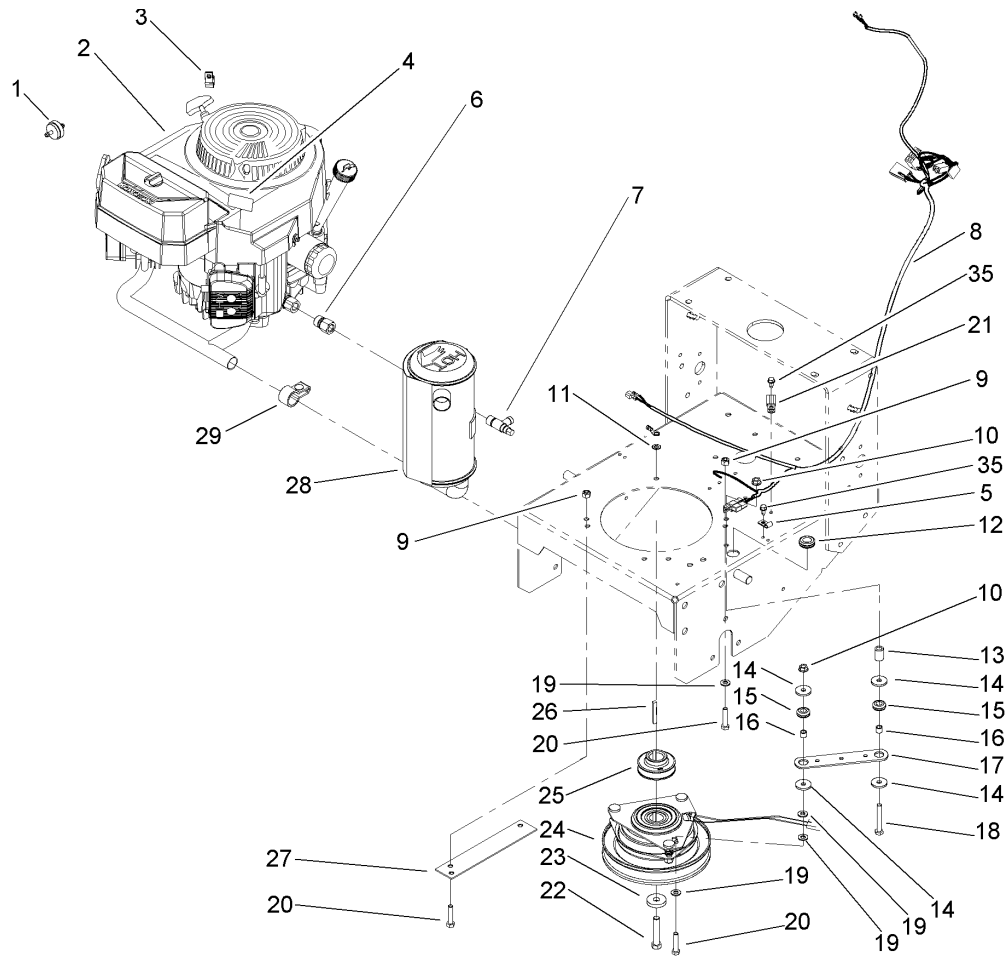

Engine Installation Assembly


Ref	Part No.	Qty.	Description
1	56-6360	1	Filter-Fuel
2		1	Engine-Kawasaki, Fh430v-As28
3	2412-87	1	Clamp-Cable
4	106-0699	1	Decal-Warning, Hot Surfaces
5	2412-72	1	Clip-Closed, Insulated
6	103-1966	1	Adapter
7	103-1965	1	Valve-Drain, Oil
8	104-8137	1	Harness-Wire
9	3296-29	4	Nut-Lock, NI
10	32128-20	2	Nut-HF
11	3255-8	1	Washer-Lock
12	237-124	1	Grommet
13	104-6373	1	Tube-Retainer
14	1-613235	4	Washer
15	1-633630	2	Grommet-Brake
16	1-633545	2	Spacer
17	1-633543-03	1	Strap-Clutch, Brake
18	322-11	1	Screw-HH
19	3256-23	5	Washer-Flat
20	322-7	5	Screw-HH
21	2412-134	1	R-Clamp
22	3212-9	1	Screw-HH
23	112843	1	Washer
24	105-2635	1	Clutch / Brake

Ref	Part No.	Qty.	Description
25	105-0827	1	Pulley-Drive
26	608006	1	Key-Square
27	94-5847-01	1	Cover-Pulley
28	100-6467	1	Muffler
29	103-5465	1	Clamp-Muffler
35	12-3270	2	Screw
99	103-1964	1	Hose-Drain, Oil

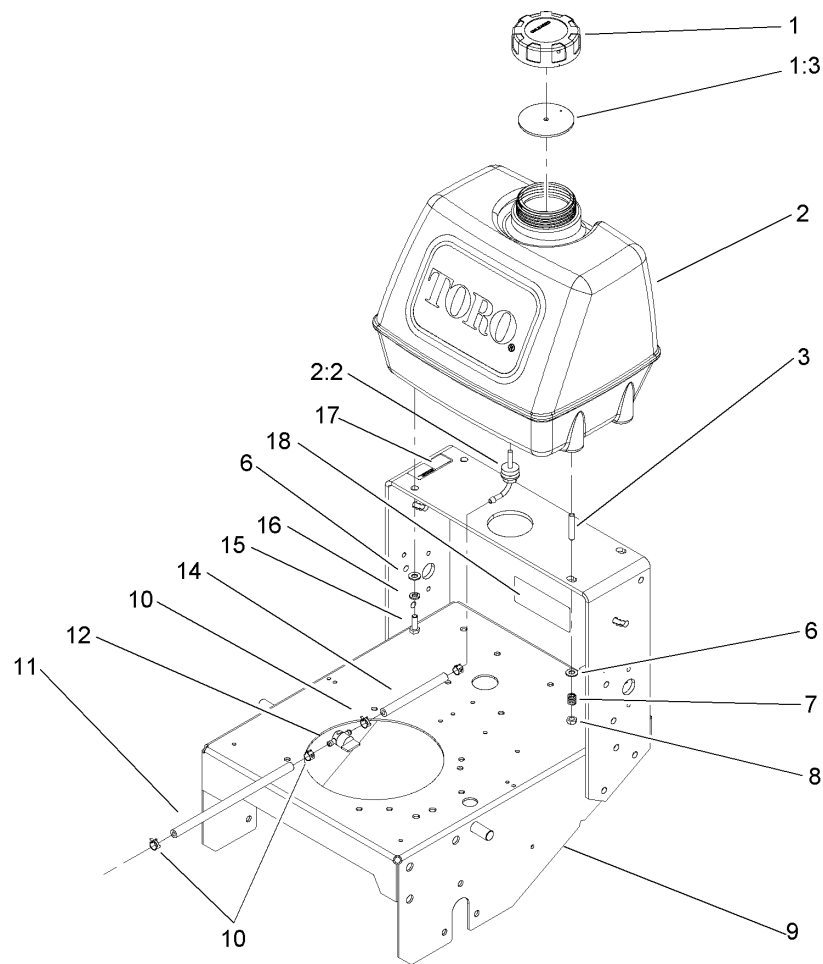


Fuel Tank Assembly

Ref	Part No.	Qty.	Description				
1	88-3980	1	Gas Cap ASM				
1:3	88-4010	1	Gasket-Cap, Gas				
2	106-0730	1	Fuel Tank ASM				
2:2	103-2605	1	Fitting-Fuel, Bulkhead				
3	104-8121	2	Stud-Threaded				
6	3256-23	4	Washer-Flat				
7	1-633349	2	Spring-Tank, Fuel				
8	3296-47	2	Nut-Lock, NI				
9	106-0546-01	1	Gear Frame ASM				
10	2412-98	4	Clamp				
11	47-2982	1	Hose-Fuel				
12	1-603770	1	Valve-Fuel				
14	47-2980	1	Hose-Fuel				
15	322-4	2	Screw-HH				
16	3253-4	2	Washer-Lock				
17	95-2814	1	Decal-Shut Off, Fuel				
18	98-0776	1	Decal-Caution				

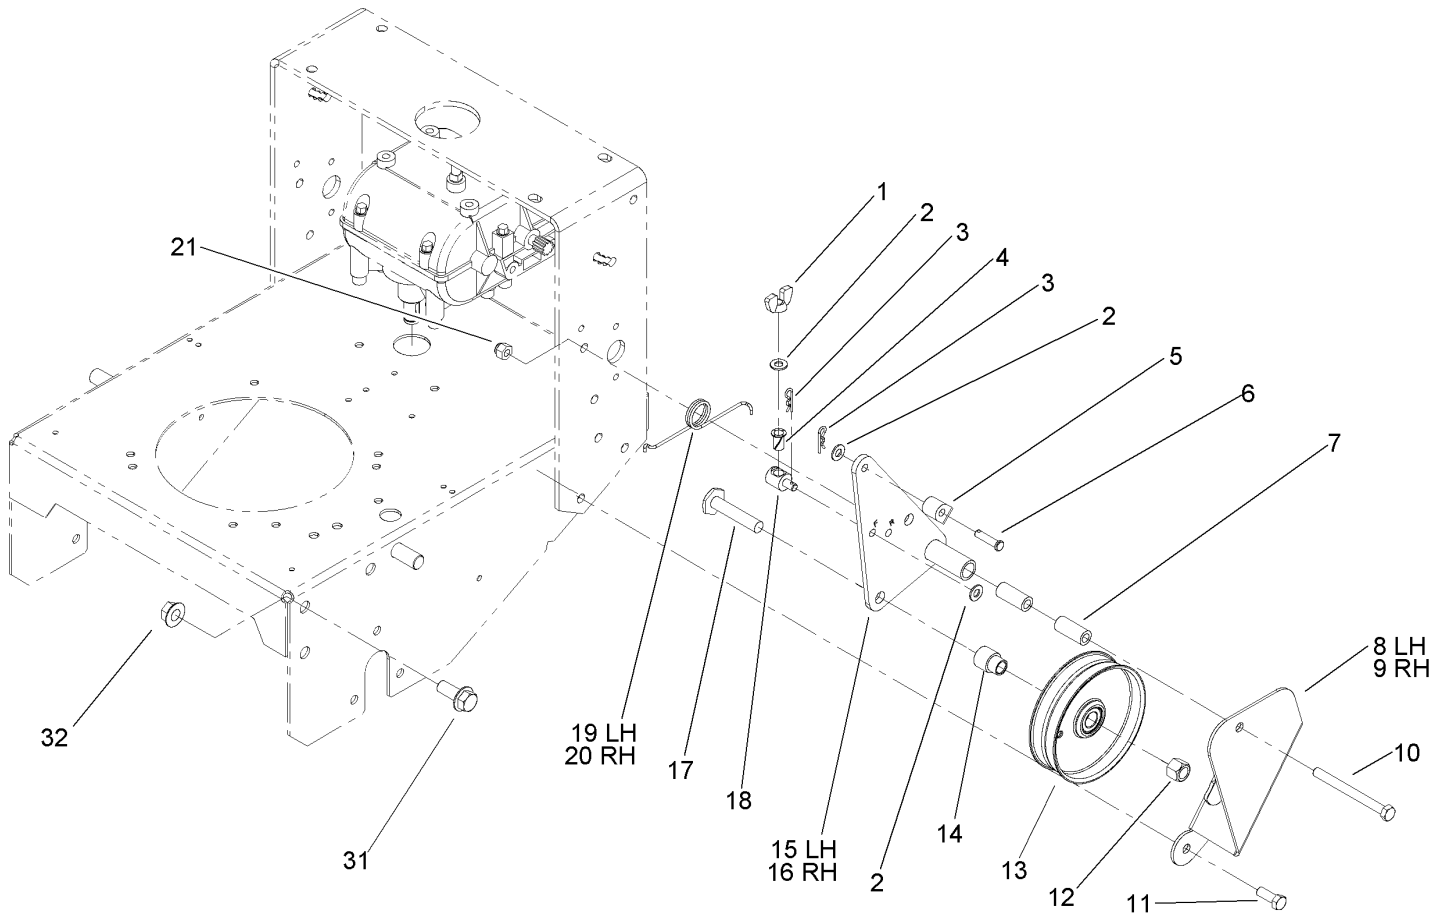


Lower Control Assembly

Ref	Part No.	Qty.	Description				
1	32103-25	2	Nut-Wing	PROTOTYPE			
2	3256-23	6	Washer-Flat				
3	3290-307	4	Pin-Hair				
4	52-2890	2	Bushing-Nylon				
5	74-0521	2	Fitting-Rod				
6	283-6	2	Pin-Clevis				
7	74-0040	4	Spacer-Pivot, Idler				
8	67-6380-01	1	Bracket-Support, LH				
9	67-6370-01	1	Bracket-Support, RH				
10	323-16	2	Screw-HH				
11	323-6	4	Screw-HH				
12	3296-23	2	Nut-Lock, NI				
13	95-2800	2	Pulley-Idler				
14	95-2801	2	Spacer-Pulley				
15	74-0220-01	1	Bracket-Idler, LH				
16	74-0230-01	1	Bracket-Idler, RH				
17	51-4450	2	Screw-Leveler				
18	68-9690	2	Fitting-Rod				
19	51-4380	1	Spring-Torsion, LH				
20	51-4370	1	Spring-Torsion, RH				
21	3296-39	6	Nut-Lock, NI				
31	3234-32	6	Screw-HHF				
32	32128-23	6	Nut-HF				

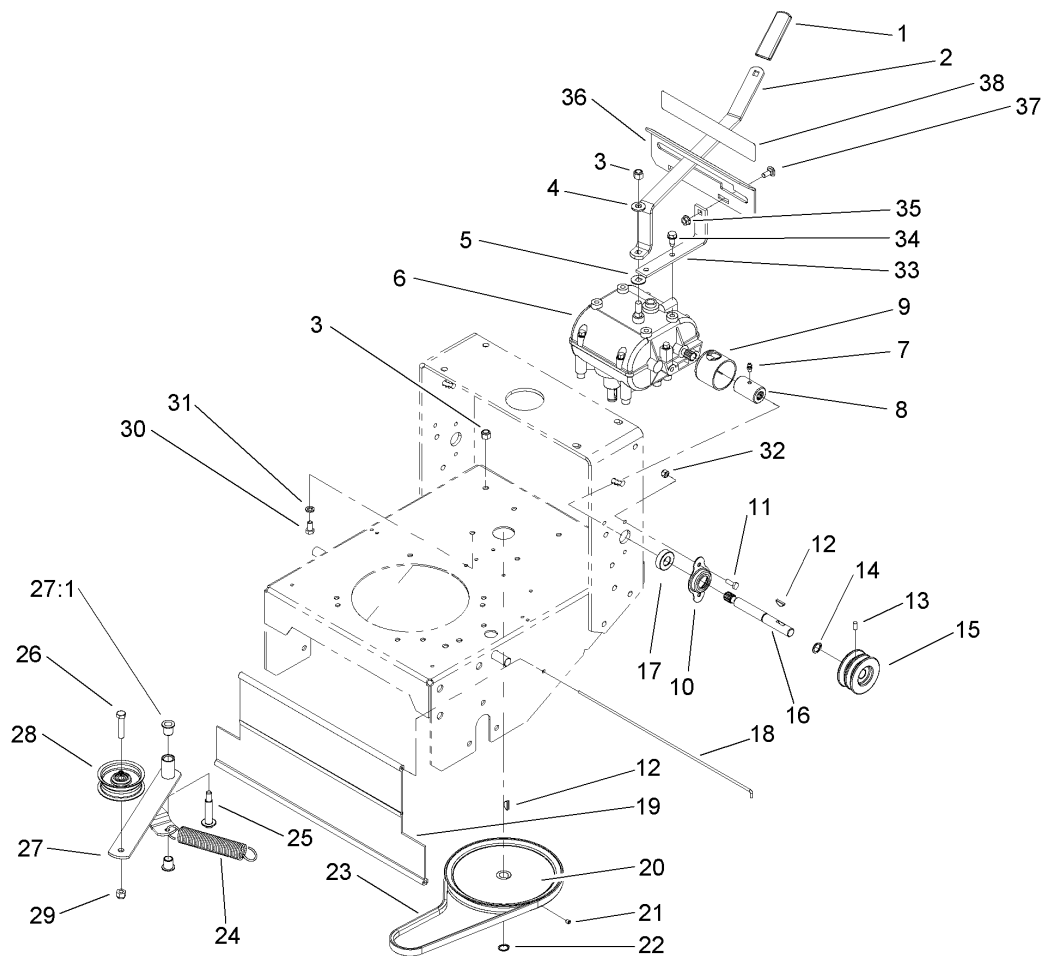


Transmission Drive Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	47-1970	1	Grip	25	27-6230	1	Bolt-Wheel
2	98-3274-03	1	Lever-Shift	26	323-9	1	Screw-HH
3	3296-6	2	Nut-Lock	27	16-7509	1	Lever-Idler
4	98-5975	1	Washer-Belleville	27:1	256-155	2	Bushing-Flange
5	1-323379	1	Washer	28	62-4540	1	Pulley
6	1-323500	1	Transmission	29	3296-39	1	Nut-Lock, NI
7	302-5	2	Fitting-Grease	30	322-2	4	Screw-HH
8	1-323680	2	Coupler	31	3253-4	4	Washer-Lock
9	51-4220	2	Guard-Coupler	32	3296-42	4	Nut-Lock, NI
10	1-323254	2	Flange-Output	33	1-323389-03	2	Bracket-Plate, Shift
11	321-4	4	Screw-HH	34	9264964	4	Screw-Hwh, Thd Cut
12	3257-5	3	Key-Woodruff	35	32128-20	2	Nut-HF
13	3245-9	2	Screw-Set	36	1-323387-03	1	Plate-Shift
14	32151-62	2	Ring-Retaining	37	3230-1	2	Bolt-CARR
15	105-2698	2	Pulley-Transmission	38	98-3256	1	Decal-Speed, Ground
16	104-1102	2	Shaft-Output				
17	1-323252	2	Bearing-Shaft				
18	95-1529	1	Rod-Shield				
19	95-1526	1	Shield-Trailing				
20	105-5646	1	Pulley-Driven				
21	3245-1	1	Screw-Set, HSH				
22	32120-64	1	Ring-Snap, External				
23	105-5668	1	V-Belt				
24	68-2190	1	Spring				

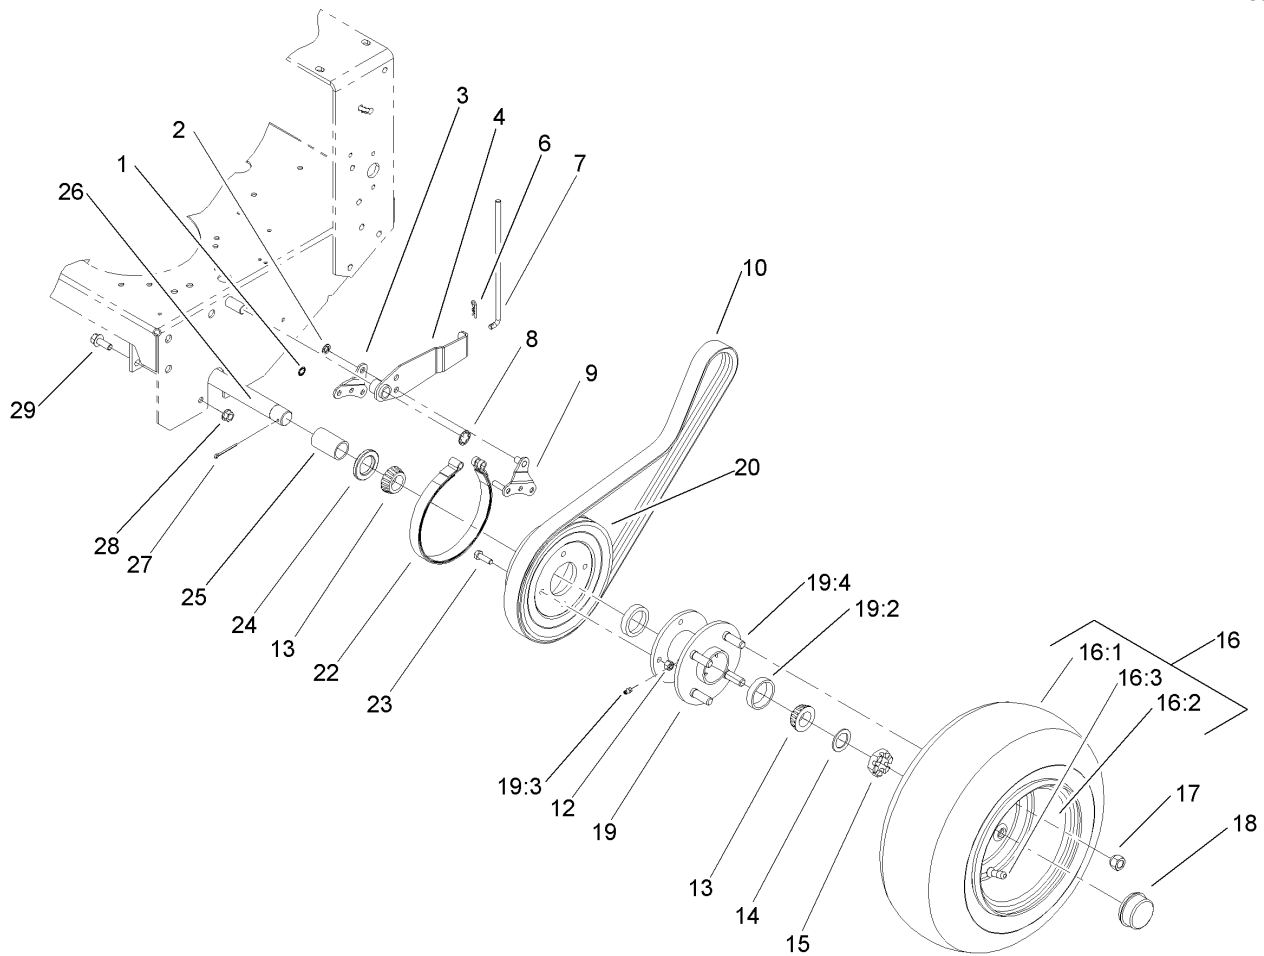


Wheel Drive and Brake Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	32151-72	4	Ring-Retaining	22	1-323262	2	Band-Brake
2	32151-56	2	Ring-Retaining, External	23	322-5	8	Screw-HH
3	106-8792	2	Plate-Link, Brake	24	1-543511	2	Seal-Grease
4	106-8779-01	2	Brake Arm ASM	25	104-1197	2	Spacer-Wheel
6	3290-307	2	Pin-Hair	26	104-1196-01	1	Axle ASM
7	51-4580	2	Rod-Brake	27	1-806800	2	Pin-Cotter
8	32151-40	2	Ring-Retaining	28	32128-21	6	Nut-HF
9	106-8773	2	Brake Link ASM	29	3234-11	6	Screw-HHF
10	51-4290	2	V-Belt				
12	3296-29	8	Nut-Lock, NI				
13	254-94	4	Bearing-Cone, Tapered				
14	1-523157	2	Washer-Spacer				
15	1-809082	2	Nut-SHH				
16	106-0892	2	Wheel And Tire ASM				
16:1	104-6322	1	Tire				
16:2	106-0893	1	Wheel				
16:3	232-27	1	Stem-Valve				
17	242-50	8	Nut-Lug				
18	241-119	2	Cap-Dust				
19	1-413333	2	Hub/wheel ASM				
19:2	254-72	2	Bearing-Cup, Tapered				
19:3	302-19	1	Fitting-Grease				
19:4	1-633926	4	Stud-Wheel				
20	106-5544	2	Pulley-Wheel				

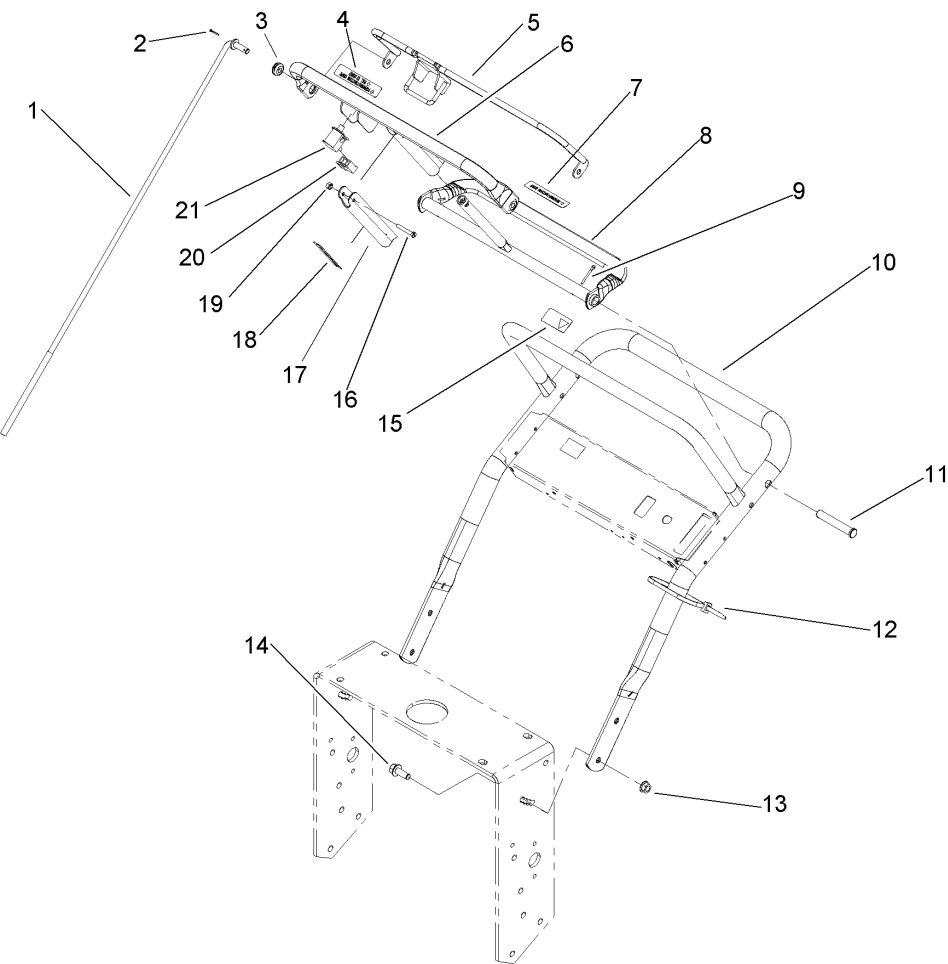


Upper Handle Assembly

Ref	Part No.	Qty.	Description				
1	105-4677	2	Rod-Control				
2	3272-4	2	Pin-Cotter				
3	237-141	2	Grommet-Rubber				
4	82-2290	1	Decal				
5	82-7680-03	1	Bail ASM				
6	82-7690-03	1	Bar-Control				
7	82-2280	1	Decal				
8	106-5477-03	1	Control Pivot ASM				
9	3272-11	2	Pin-Cotter				
10	105-3158-03	1	Upper Handle ASM				
11	283-55	2	Pin-Clevis				
12	3290-378	1	Tie-Cable				
13	32128-21	4	Nut-HF				
14	3234-11	4	Screw-HHF				
15	98-4387	1	Decal-Protection, Ear				
16	32105-1	1	Screw-SHH				
17	51-4850-03	1	Lever-Brake, Parking				
18	52-2010	1	Decal-Lever, Parking				
19	3296-2	1	Nut-Lock				
20	218-595	1	Connector-Body				
21	82-2190	1	Switch-Bail				

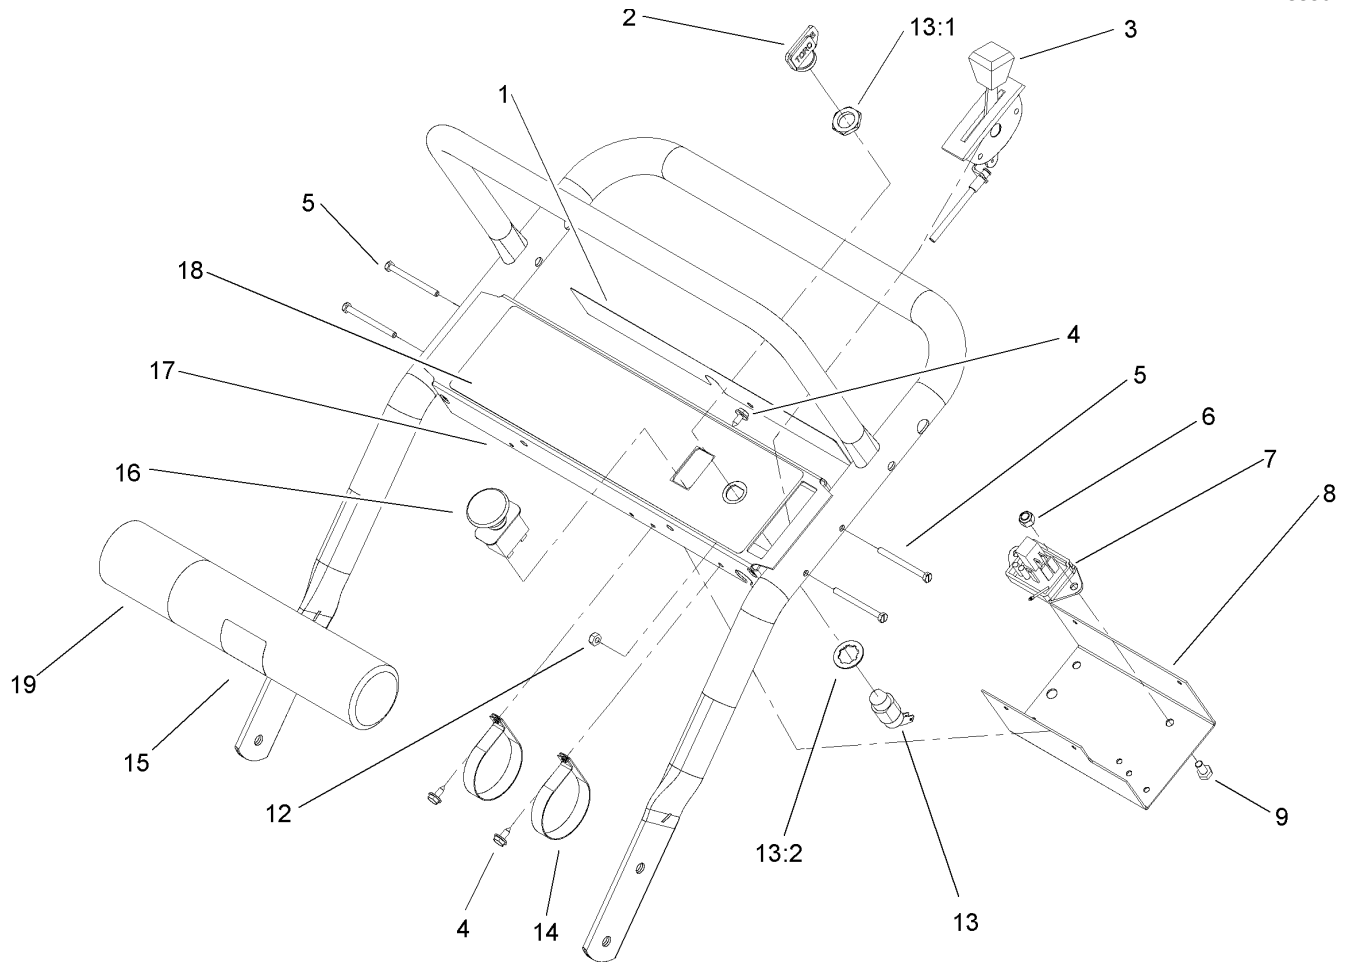


Control Panel Assembly

Ref	Part No.	Qty.	Description				
1	105-0884	1	Decal-Danger				
2	63-8360	1	Key-Ignition				
3	107-4101	1	Cable-Throttle				
4	32104-76	4	Screw				
5	32105-14	4	Screw-SHH				
6	3296-42	1	Nut-Lock, NI				
7	104-8141	1	Module-Delay				
8	93-1187-03	1	Panel-Bottom				
9	321-2	1	Screw-HH				
12	3296-2	4	Nut-Lock				
13	29-5560	1	Switch-On/off				
13:1	218-461	1	Nut-HH				
13:2	3254-5	1	Washer-Tooth				
14	2412-120	2	R-Clamp				
15	104-7050	1	Housing-Manual				
16	104-8140	1	Switch-PTO				
17	104-8177-03	1	Panel-Control				
18	106-5499	1	Decal-Control Panel				
19	104-7048	1	Cap-Housing				

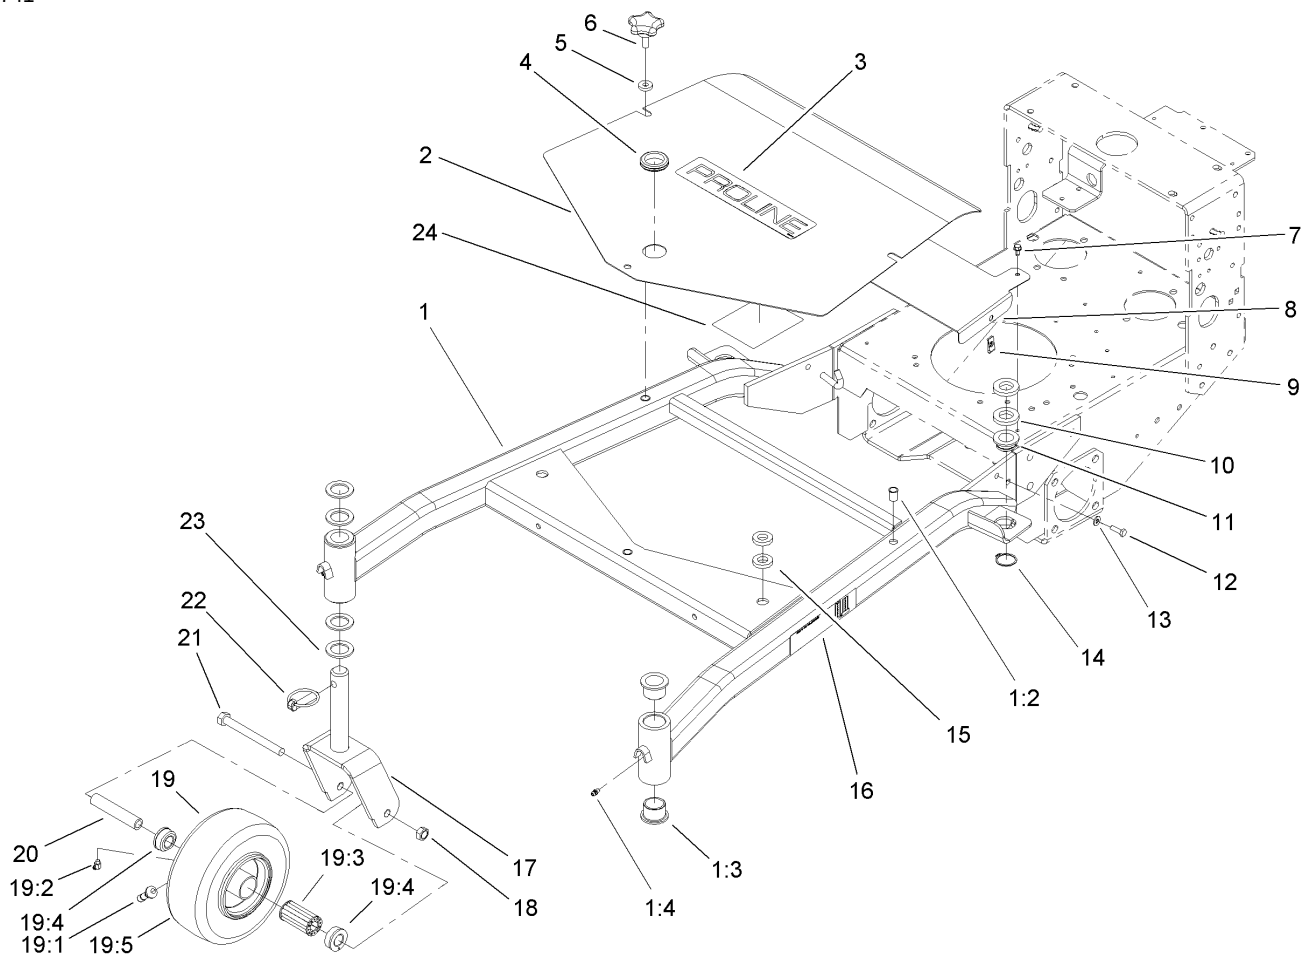


Carrier Frame Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-0707	1	Carrier Frame ASM	19:3	83-4740	1	Bearing
1:2	32148-9	3	Insert-Nut	19:4	62-5580	2	Bearing-Outside
1:3	94-1291	4	Bushing	19:5	100-6452	1	Tire-Tubeless
1:4	302-5	2	Fitting-Grease	20	100-6453	2	Bushing-Spanner
2	106-0537-01	1	Cover	21	325-19	2	Screw-HH
3	106-0719	1	Decal	22	283-71	2	Pin-Lynch
4	240-3	1	Grommet-Rubber	23	3-6781	8	Washer-Thrust
5	106-0565	3	Washer-Rubber	24	106-5503	1	Decal-Service, Hydro Tbar
6	106-0887	3	Knob	24	106-5505	1	Decal-Service, Gear Tbar
7	12-3270	2	Screw	24	106-5511	1	Decal-Service, Gear Pistol Grip
8	105-9389-01	1	Shield-Heat	24	106-5513	1	Decal-Service, Hydro Pistol Grip
9	3290-199	2	Nut-Speed				
10	104-1105	4	Spacer-Support, Deck				
11	1-513336	2	Bushing-Deck				
12	321-5	2	Screw-HH				
13	3256-22	2	Washer-Flat				
14	32120-33	2	Ring-Retaining				
15	105-0842	4	Spacer				
16	106-0635	2	Decal-HOC				
17	105-3159-01	2	Castor Fork ASM				
18	32153-5	2	Nut-Lock, Side				
19	100-6451	2	Castor Wheel ASM				
19:1	232-27	1	Stem-Valve				
19:2	302-11	1	Fitting-Lube, 45 DEG				

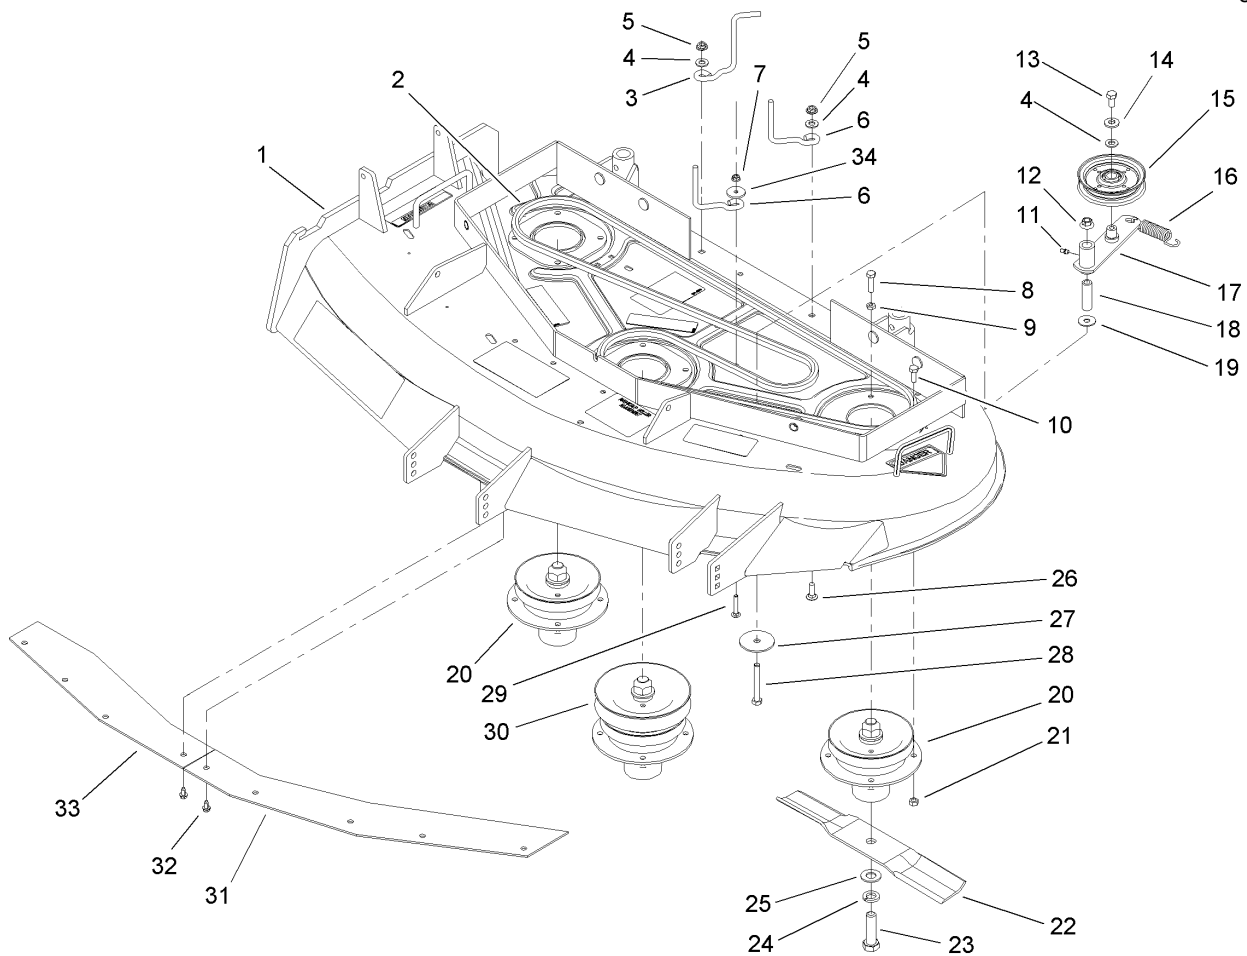


Spindle, Pulley and Belt Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-0617	1	Deck ASM	25	3256-27	3	Washer-Flat
2	27-1160	1	V-Belt	26	3230-2	2	Bolt-CARR
3	106-5488	1	Guide-Belt	27	20-9530	1	Washer-End
4	3256-24	3	Washer-Flat	28	323-13	1	Screw-HH
5	32128-13	2	Nut-HF	29	3229-4	1	Screw-CARR
6	52-4780	2	Rod-Belt	30	106-0784	1	Spindle Housing ASM
7	32128-10	1	Nut-Lock, HHF	31	100-3258-03	1	Plate-Blowout, LH
8	322-6	1	Screw-HH	32	12-3270	9	Screw
9	3218-2	1	Nut-Jam	33	100-3257-03	1	Plate-Blowout, RH
10	322-4	11	Screw-HH	34	1-503033	1	Washer-Retainer, Pulley
11	302-19	1	Fitting-Grease				
12	32128-19	1	Nut-HF				
13	323-4	1	Screw-HH				
14	98-5975	1	Washer-Belleville				
15	65-5940	1	Pulley-Idler				
16	54-2730	1	Spring-Extension				
17	104-8110	1	Idler Arm ASM				
18	104-8113	1	Tube-Idler				
19	52-2860	1	Washer				
20	106-0786	2	Spindle Housing ASM				
21	32152-1	12	Nut-Lock, Cone				
22	54-0010	3	Blade				
23	51-4060	3	Screw-Blade				
24	3253-8	3	Washer-Lock				

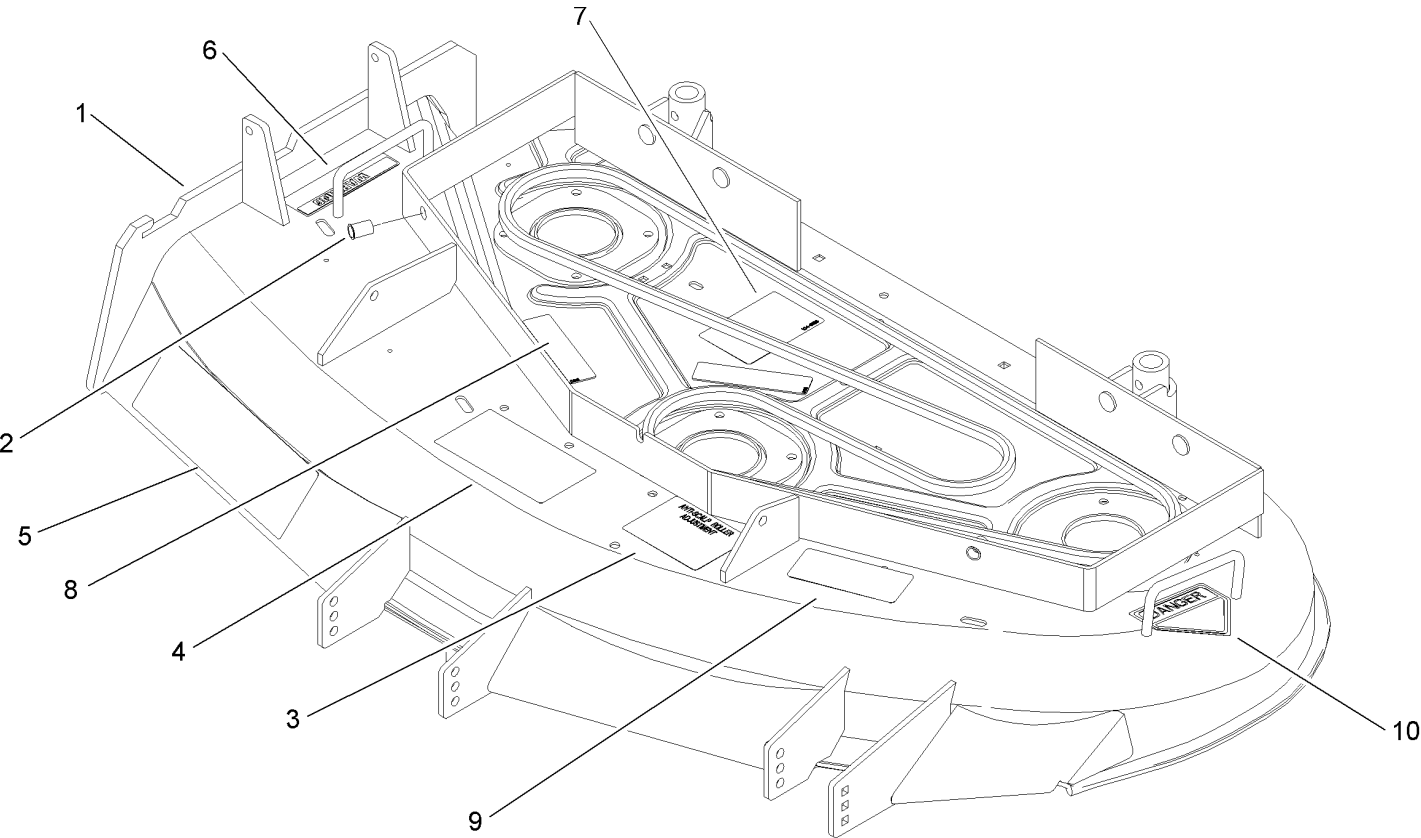

Deck Assembly No. 106-0617


Ref	Part No.	Qty.	Description				
1		1	44in Deck ASM				
2	32148-10	2	Insert-Threaded				
3	106-5532	1	Decal-Scalp, Anti				
4	66-1340	1	Decal-Danger				
5	106-0704	1	Decal				
6	104-8569	1	Decal-Warning				
7	104-8186	1	Decal-Routing, Belt				
8	67-5360	3	Decal-Danger				
9	68-8340	1	Decal-Torque				
10	43-8480	1	Decal-Danger				

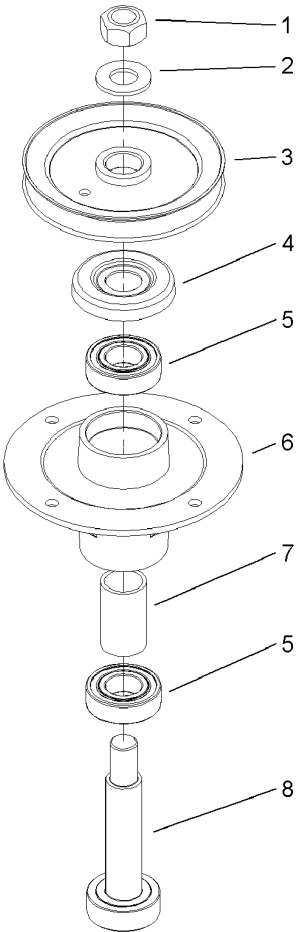

Spindle Assembly No. 106-0786


Ref	Part No.	Qty.	Description				
1	3219-7	1	Nut-Hex				
2	7-4150	1	Washer				
3	104-1181	1	Pulley ASM				
4	106-0873	1	Shield-Bearing				
5	104-6325	2	Bearing				
6	106-0818	1	Housing-Spindle				
7	106-0794	1	Spacer-Bearing				
8	106-0780	1	Shaft-Spindle				

PROTOTYPE

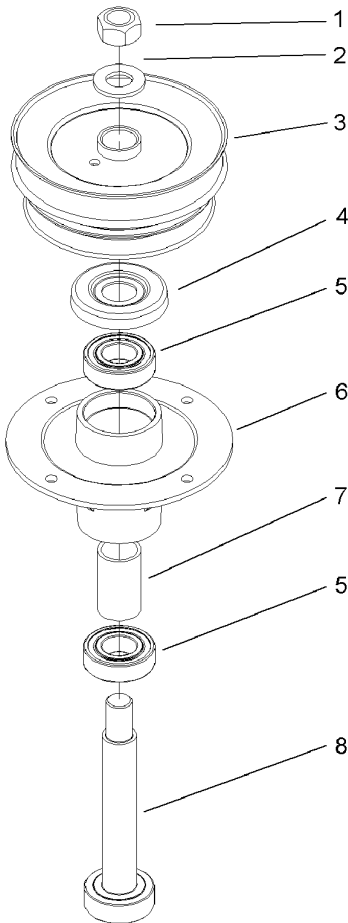


Spindle Assembly No. 106-0784

Ref	Part No.	Qty.	Description				
1	3219-7	1	Nut-Hex				
2	7-4150	1	Washer				
3	104-1116	1	Pulley And Hub ASM				
4	106-0873	1	Shield-Bearing				
5	104-6325	2	Bearing				
6	106-0818	1	Housing-Spindle				
7	106-0794	1	Spacer-Bearing				
8	106-0779	1	Shaft-Spindle				

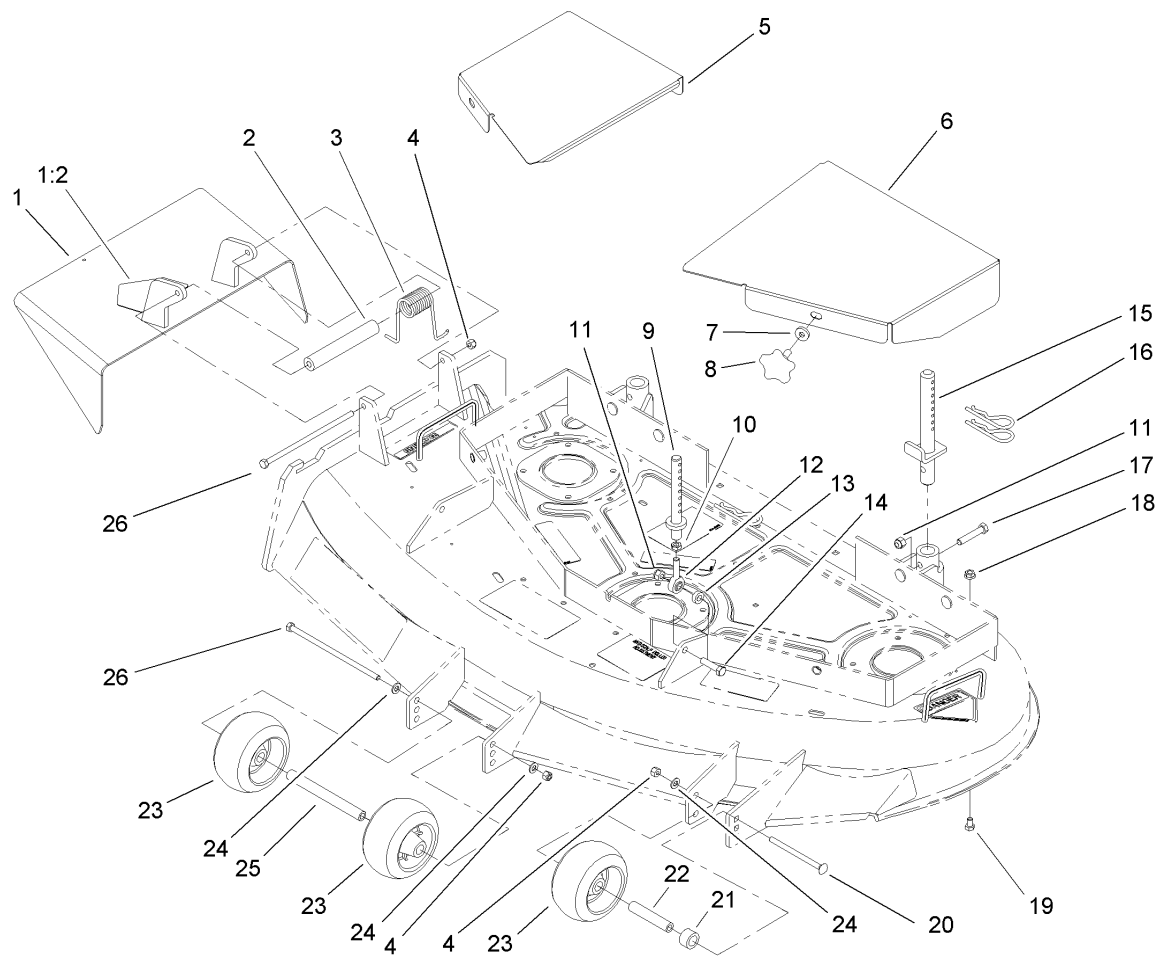


Deck Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	105-4625	1	Deflector ASM	24	3256-23	3	Washer-Flat
1:2	93-1122	1	Decal-Danger	25	98-5967	1	Spacer-Wheel
2	105-4622	1	Spacer	26	322-50	2	Screw-HH
3	104-8554	1	Spring-Torsion				
4	3296-29	3	Nut-Lock, NI				
5	106-3363-01	1	Cover-Belt, RH				
6	106-3362-01	1	Cover-Belt, LH				
7	106-0565	2	Washer-Rubber				
8	106-0887	2	Knob				
9	106-0684	2	Front Pin ASM				
10	3220-3	2	Nut-Jam				
11	3296-39	4	Nut-Lock, NI				
12	1-613204	2	Balljoint				
13	104-1156	2	Spacer				
14	323-8	2	Screw-HH				
15	106-3365	2	Rear Pin ASM				
16	3290-256	6	Pin-Hair				
17	323-10	2	Screw-HH				
18	32128-20	4	Nut-HF				
19	322-1	4	Screw-HH				
20	3230-30	1	Screw-CARR				
21	106-0563	1	Spacer-Wheel				
22	106-0545	1	Bushing-Roller				
23	68-2730	3	Wheel-Gage				

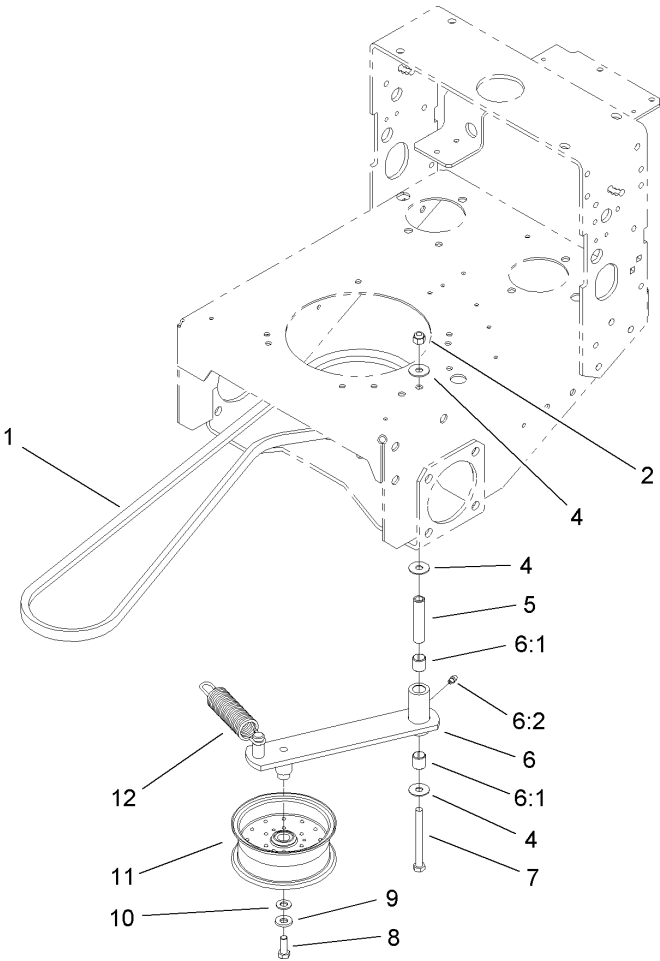


Drive Belt and Tensioner Assembly

Ref	Part No.	Qty.	Description				
1	104-8120	1	V-Belt, PTO				
2	3296-39	1	Nut-Lock, NI				
4	52-2860	3	Washer				
5	104-6377	1	Tube-Idler				
6	106-0734	1	Idler Arm ASM				
6:1	1-513034	2	Sleeve-Bearing				
6:2	302-5	1	Fitting-Grease				
7	323-42	1	Screw-HH				
8	323-6	1	Screw-HH				
9	98-5975	1	Washer-Belleville				
10	3256-24	1	Washer-Flat				
11	1-413099	1	Pulley-Idler				
12	105-8443	1	Spring-Extension				

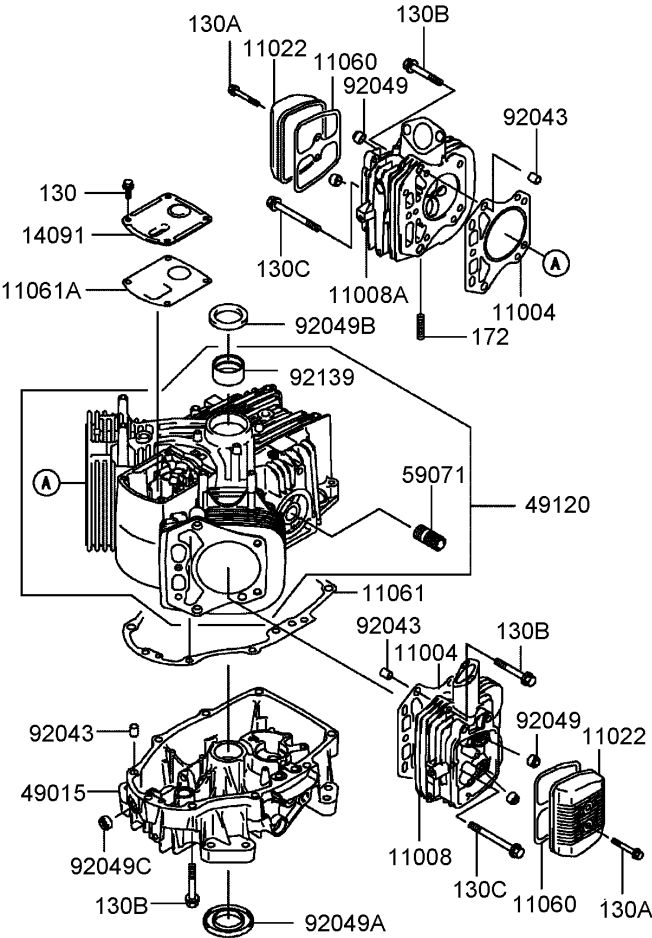


Cylinder and Crankcase Assembly
Kawasaki FH430V-AS28

Ref	Part No.	Qty.	Description				
11004	11004-7008	2	Gasket-Head				
11008	11008-7021	1	Head-Comp-Cylinder, #2				
11008A	11008-7022	1	Head-Comp-Cylinder, #1				
11022	11022-7003	2	Case-Rocker				
11060	11060-7001	2	Gasket,rocker Case				
11061	11061-7007	1	Gasket-Cover, Crankcase				
11061A	11061-7008	1	Gasket-Breather				
14091	14091-7007	1	Cover				
49015	49015-7032	1	Cover-Crankcase				
49120	49120-7015	1	Crankcase-Comp				
59071	59071-2079	1	Joint				
92043	92043-7001	6	Pin				
92049	92049-7001	4	Seal-Oil,rv2 6x11x10.2				
92049A	92049-7015	1	Seal-Oil,sd 35x62x8 L HS				
92049B	92049-7016	1	Seal-Oil,sd 35x48x8 R HS				
92049C	92049-7019	1	Seal-Oil,so 8x14x5 HS				
92139	92139-7002	1	Bushing				
130	130B0612	4	Bolt-Flanged				
130A	130B0640	4	Bolt-Flanged				
130B	130T0850	17	Bolt-Flanged				
130C	130T0875	2	Bolt-Flanged				
172	172G0818	4	Bolt-Stud				

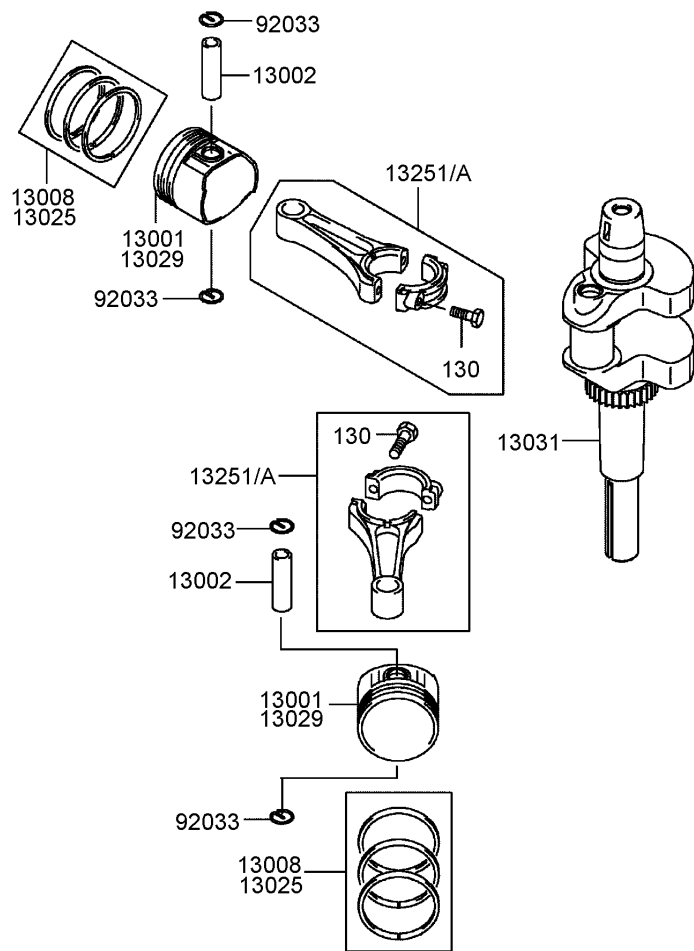


Piston and Crankshaft Assembly
Kawasaki FH430V-AS28

Ref	Part No.	Qty.	Description				
13001	13001-7009	2	Piston-Engine				
13002	13002-7001	2	Pin-Piston				
13008	13008-7001	2	Ring-Set-Piston				
13025	13025-7003	1	Ring-Set-Piston				
13029	13029-7005	1	Piston-Engine				
13031	13031-7033	1	Crankshaft-Comp				
13251	13251-7007	2	Connecting Rod ASM				
13251A	13251-7008	2	Connecting Rod Asm, U/s=0.50				
92033	92033-7005	4	Ring-Snap				
130	130G0630	4	Bolt-Flanged				

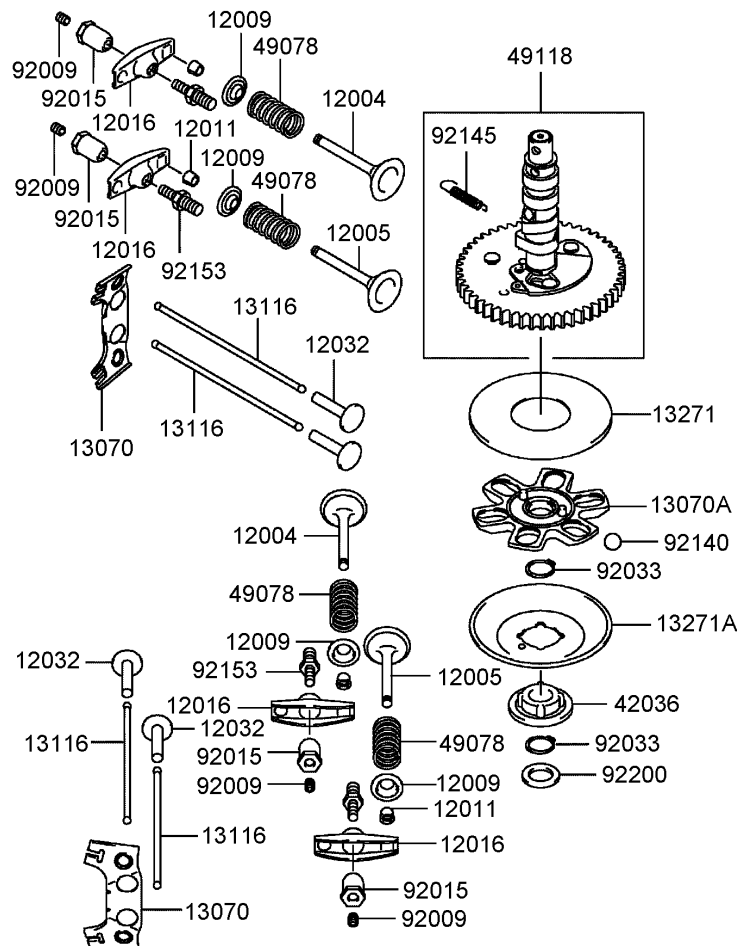


Valve and Camshaft Assembly
Kawasaki FH430V-AS28

Ref	Part No.	Qty.	Description				
⑨12004	12004-7003	2	Valve-Intake				
⑨12005	12005-7003	2	Valve-Exhaust				
⑨12009	12009-7001	4	Retainer-Valve Spring				
⑨12011	12011-2056	8	Collet				
⑨12016	12016-7001	4	Arm-Rocker				
⑨12032	12032-7001	4	Tappet				
⑨13070	13070-7001	2	Guide				
⑨13070A	13070-7004	1	Guide				
⑨13116	13116-2057	4	Rod-Push				
⑨13271	13271-7007	1	Plate				
⑨13271A	13271-7021	1	Plate,governor				
⑨42036	42036-7009	1	Sleeve				
⑨49078	49078-7001	4	Spring-Engine Valve				
⑨49118	49118-7009	1	Camshaft-Comp				
⑨92009	92009-2341	4	Screw				
⑨92015	92015-2253	4	Nut				
⑨92033	92033-7001	2	Ring-Snap				
⑨92140	92140-7002	6	Ball				
⑨92145	92145-7001	1	Spring				
⑨92153	92153-7019	4	Bolt				
⑨92200	92200-7001	1	Washer				

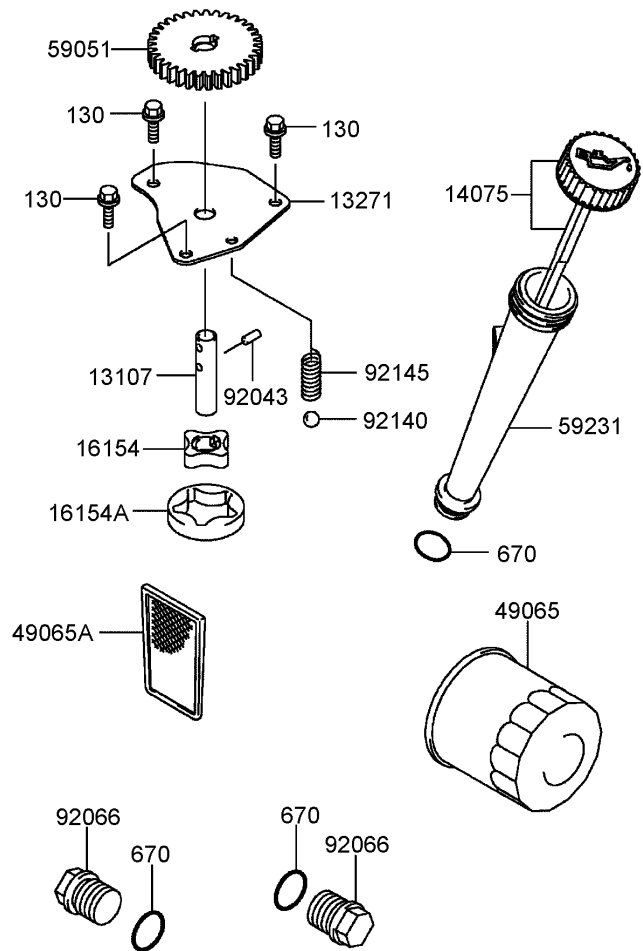


Lubrication Equipment Assembly
Kawasaki FH430V-AS28

Ref	Part No.	Qty.	Description				
13107	13107-7009	1	Shaft				
13271	13271-7017	1	Plate				
14075	14075-7009	1	Cap-Assy				
16154	16154-2053	1	Rotor-Pump,in				
16154A	16154-2054	1	Rotor-Pump,out				
49065	49065-2078	1	Filter-Oil				
49065A	49065-7004	1	Filter-Oil				
59051	59051-7011	1	Gear-Spur				
59231	59231-7003	1	Filler				
92043	92043-7003	2	Pin				
92066	92066-7003	2	Plug				
92140	92140-7003	1	Ball				
92145	92145-7002	1	Spring				
130	130B0612	3	Bolt-Flanged				
670	670D2016	3	O Ring,16mm				

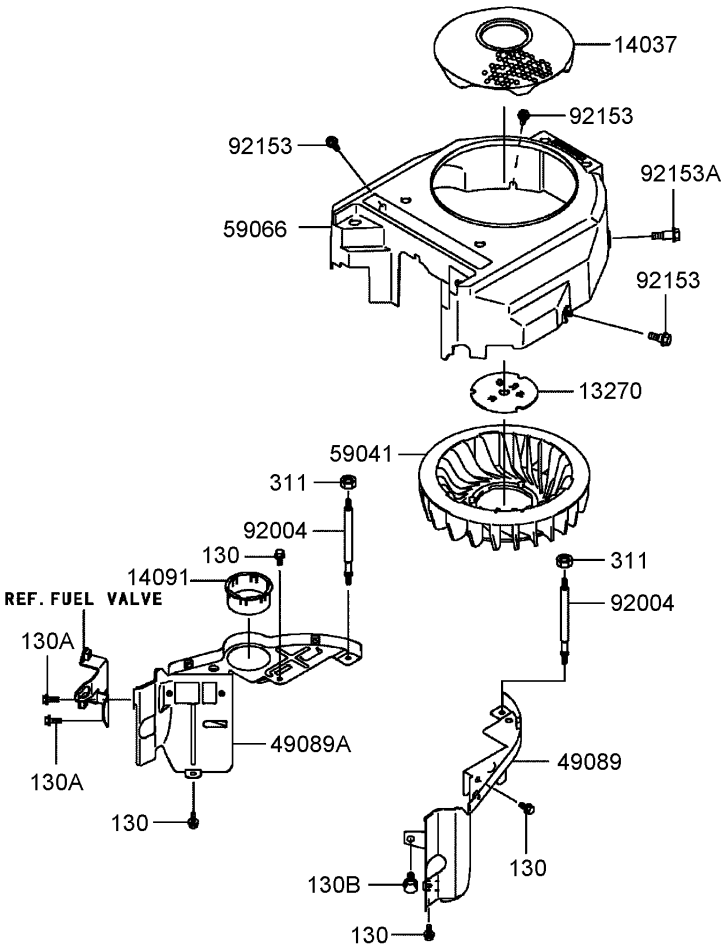


Cooling Equipment Assembly
Kawasaki FH430V-AS28

Ref	Part No.	Qty.	Description				
③ 13270	13270-7007	1	Plate				
③ 14037	14037-7021-9H	1	Screen				
③ 14091	14091-7009	1	Cover				
③ 49089	49089-7044	1	Shroud-Engine				
③ 49089A	49089-7045	1	Shroud-Engine				
③ 59041	59041-7010	1	Fan				
③ 59066	59066-7023	1	Housing-Fan				
③ 92004	92004-7007	2	Stud				
③ 92153	92153-7007	3	Bolt				
③ 92153A	92153-7008	1	Bolt				
③ 130	130B0612	4	Bolt-Flanged				
③ 130A	130B0616	2	Bolt-Flanged				
③ 130B	130B0816	1	Bolt-Flanged				
③ 311	311F0600	2	Nut-Hex				

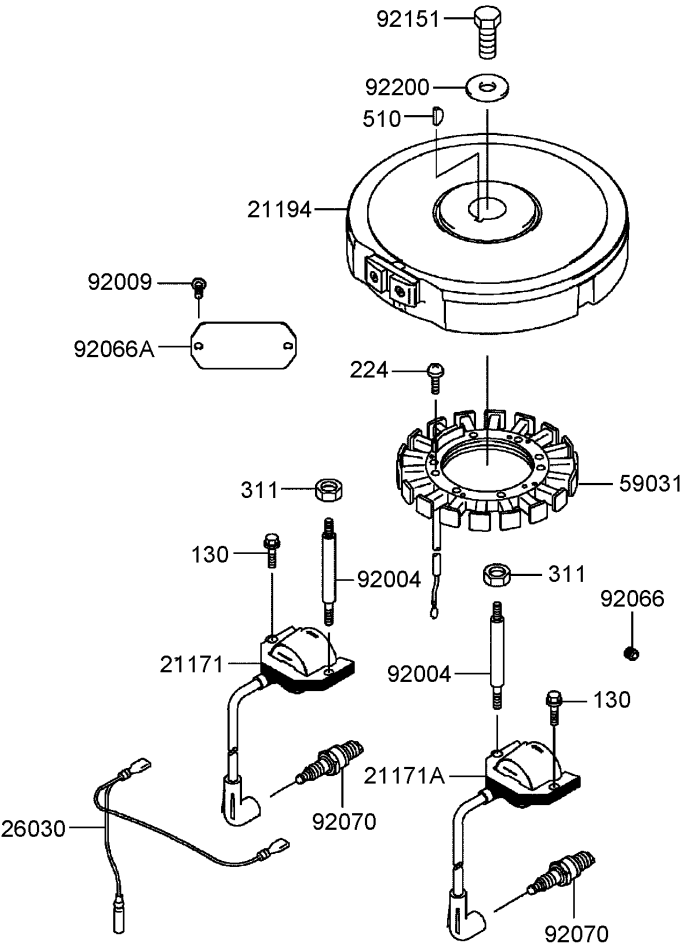


Electrical Equipment Assembly
Kawasaki FH430V-AS28

Ref	Part No.	Qty.	Description				
⑨21171	21171-7013	1	Coil-Assy-Ignition				
⑨21171A	21171-7014	1	Ignition Coil ASM				
⑨21194	21194-7012	1	Flywheel-Comp				
⑨26030	26030-7001	1	Harness				
⑨59031	59031-7002	1	Coil-Charging				
⑨92004	92004-7008	2	Stud				
⑨92009	92009-2308	2	Screw				
⑨92066	92066-7002	1	Plug				
⑨92066A	92066-7005	1	Plug				
⑨92070	92070-7003	2	Plug-Spark,rcj&y,solid				
⑨92151	92151-2097	1	Bolt,12x30				
⑨92200	92200-7002	1	Washer				
⑨130	130B0620	2	Bolt-Flanged				
⑨224	224B0520	4	Screw-Pan-Wp-Cros				
⑨311	311F0600	2	Nut-Hex				
⑨510	510A5100	1	Key-Woodruff				

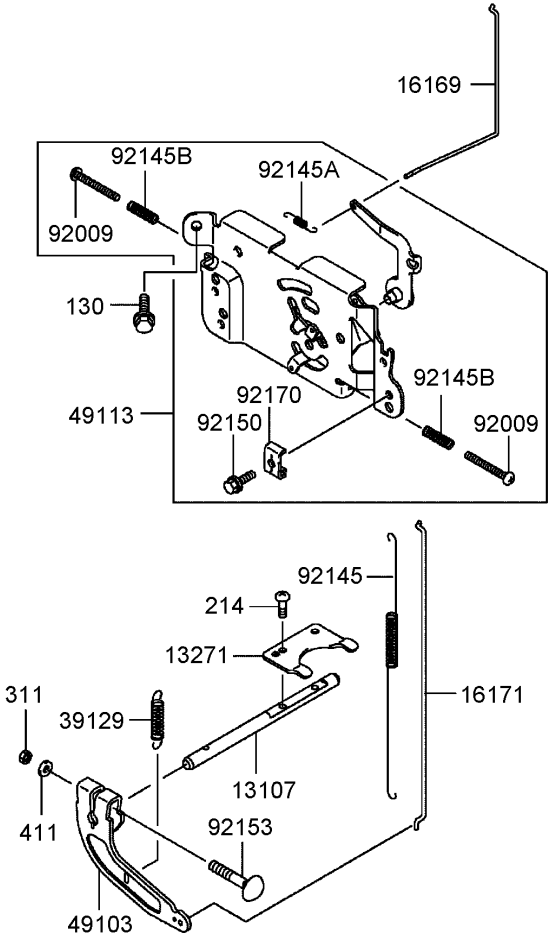


Control Euiptom Assembly
Kawasaki FH430V-AS28

Ref	Part No.	Qty.	Description				
13107	13107-7010	1	Shaft				
13271	13271-7018	1	Plate				
16169	16169-7012	1	Link-Choke				
16171	16171-7007	1	Link				
39129	39129-7003	1	Spring-Governor				
49103	49103-7004	1	Arm-Governor				
49113	49113-7027	1	Panel-Control, Comp				
92009	92009-7007	2	Screw,4x35				
92145	92145-7003	1	Spring				
92145A	92145-7004	1	Spring				
92145B	92145-7005	2	Spring				
92150	92150-2182	1	Bolt,5x18				
92153	92153-7005	1	Bolt,6x35				
92170	92170-7001	1	Clamp				
130	130B0612	2	Bolt-Flanged				
214	214B0408	2	Screw-Pan				
311	311B0600	1	Nut-Hex				
411	411b0600	1	Washer-Plain				

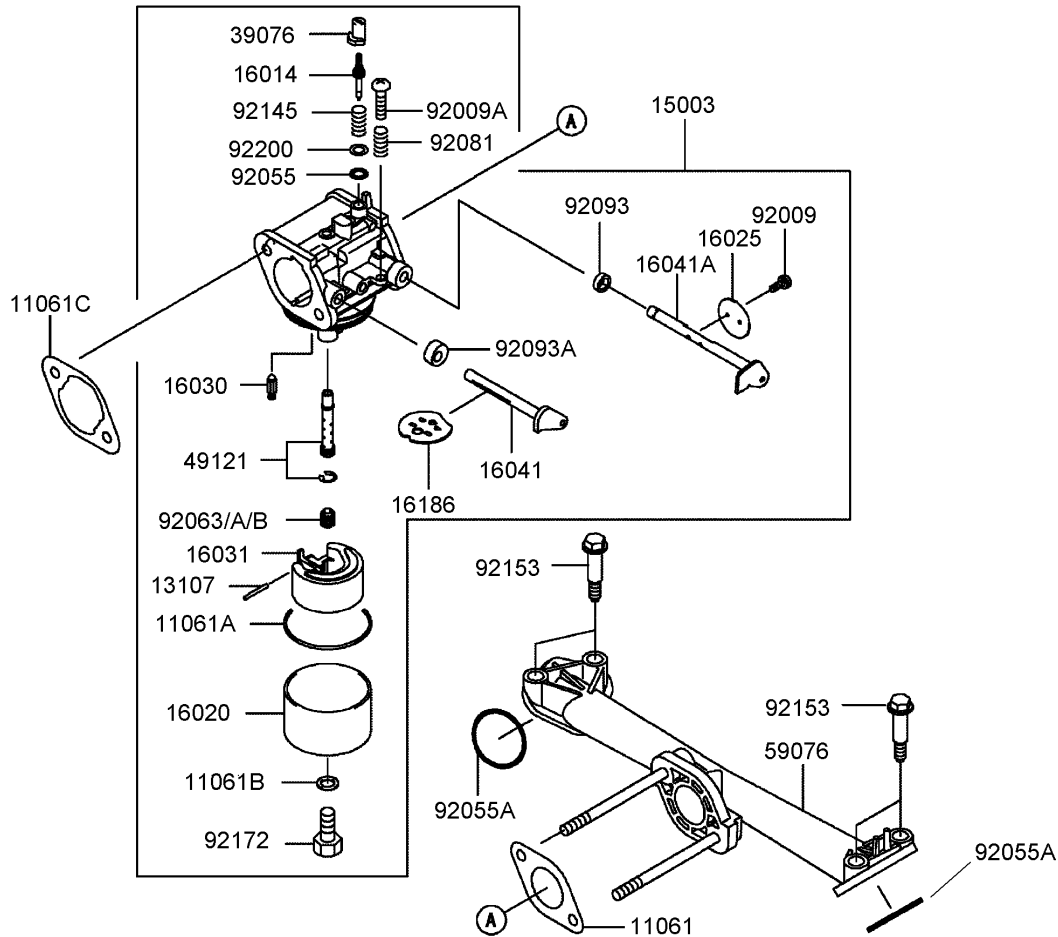


Carburetor Assembly
Kawasaki FH430V-AS28

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
⑨11061	11061-7004	1	Gasket,insulator	⑨92081	92081-2234	1	Spring
⑨11061A	11061-7009	1	Gasket,chamber	⑨92093	92093-2100	1	Seal
⑨11061B	11061-7010	1	Gasket,screw	⑨92093A	92093-7003	1	Seal
⑨11061C	11061-7018	1	Gasket,air Cleaner	⑨92145	92145-7015	1	Spring
⑨13107	13107-7018	1	Shaft	⑨92153	92153-7009	4	Bolt
⑨15003	15003-7061	1	Carburetor-ASM	⑨92172	92172-7002	1	Screw
⑨16014	16014-7002	1	Screw-Pilot	⑨92200	92200-7014	1	Washer
⑨16020	16020-7003	1	Chamber-Float				
⑨16025	16025-7006	1	Valve-Throttle				
⑨16030	16030-7003	1	Valve-Float				
⑨16031	16031-7002	1	Float				
⑨16041	16041-7016	1	Shaft-Carburetor,choke				
⑨16041A	16041-7018	1	Shaft-Carburetor,throttle				
⑨16186	16186-7002	1	Choke Valve ASM				
⑨39076	39076-7001	1	Limiter				
⑨49121	49121-7001	1	Nozzle-Main				
⑨59076	59076-7005	1	Manifold-Intake				
⑨92009	92009-2083	2	Screw				
⑨92009A	92009-2349	1	Screw				
⑨92055	92055-2174	1	Ring-O				
⑨92055A	92055-7007	2	Ring-O, Id=31				
⑨92063	92063-7026	1	Jet-Main, #88				
⑨92063A	92063-7028	1	Jet-Main, #85				
⑨92063B	92063-7029	1	Jet-Main, #82				

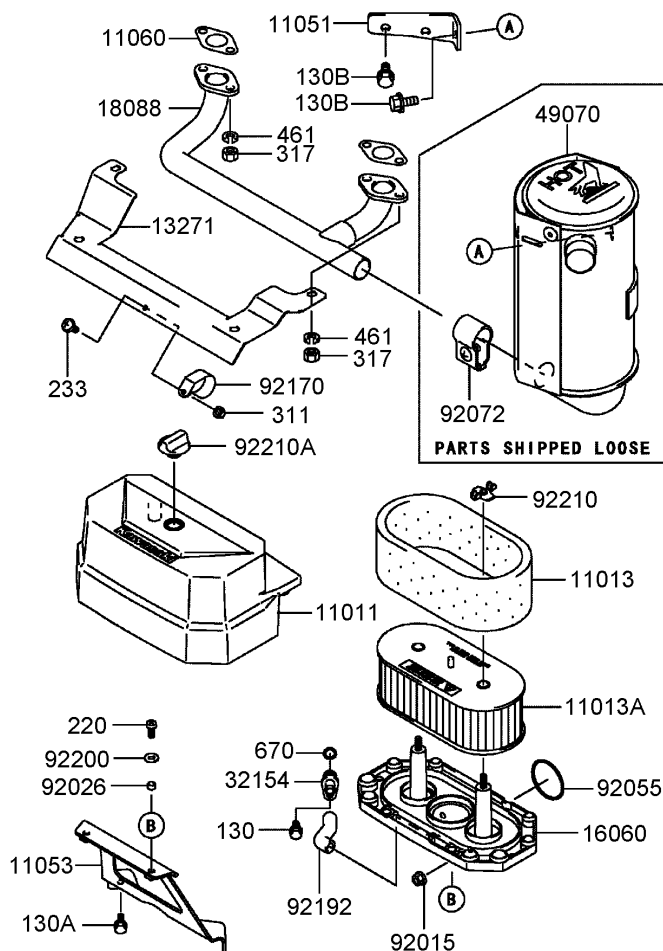


Air-Filter and Muffler Assembly Kawasaki FH430V-AS28

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
⑤11011	11011-7035	1	Case-Air Filter	⑤220	220B0614	2	Screw-Pan (Cross)
⑤11013	11013-7025	1	Element-Filter, Air	⑤233	233B0416	1	Screw-Pan-Wp+-
⑤11013A	11013-7031	1	Element-Filter, Air	⑤311	311B0400	1	Nut-Hex
⑤11051	11051-7005-9H	1	Bracket	⑤317	317R0800	4	Nut-Hex-Small
⑤11053	11053-7022	1	Bracket	⑤461	461F0800	4	Washer-Spring
⑤11060	11060-7021	2	Gasket,muffler	⑤670	670B2010	1	O-Ring
⑤13271	13271-7022	1	Plate				
⑤16060	16060-7016	1	Pipe-Intake				
⑤18088	18088-7001	1	Pipe-Exhaust				
⑤32154	32154-7006	1	Pipe				
⑤49070	49070-7015	1	Muffler-Comp				
⑤92015	92015-1193	2	Nut				
⑤92026	92026-7001	2	Spacer, 6.2x7.9x5				
⑤92055	92055-7015	1	O-Ring				
⑤92072	92072-7008	1	Band				
⑤92170	92170-7002	1	Clamp				
⑤92192	92192-7010	1	Tube				
⑤92200	92200-2070	2	Washer				
⑤92210	92210-7004	2	Nut				
⑤92210A	92210-7019	1	Nut				
⑤130	130B0610	1	Bolt-Flanged				
⑤130A	130B0612	2	Bolt-Flanged				
⑤130B	130B0816	2	Bolt-Flanged				

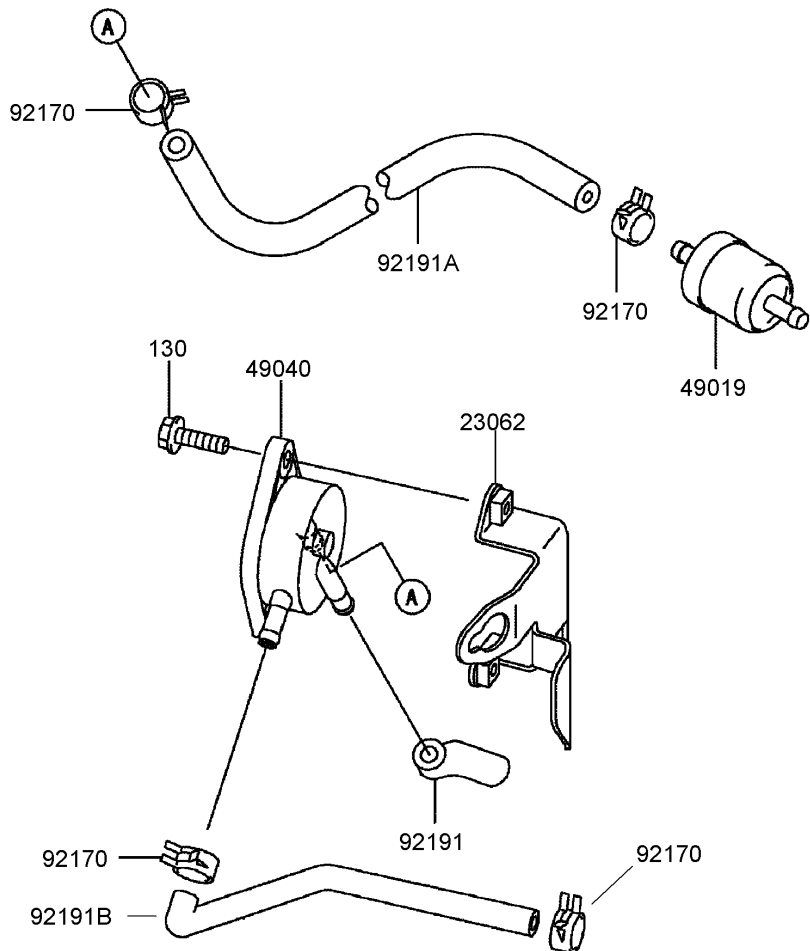




Fuel Tank/Fuel Valve Assembly
Kawasaki FH430V-AS28

Ref	Part No.	Qty.	Description				
③ 23062	23062-7004-9H	1	Bracket-Comp				
③ 49019	49019-7001	1	Filter-Fuel				
③ 49040	49040-7001	1	Pump-Fuel				
③ 92170	92170-2088	4	Clamp				
③ 92191	92191-7002	1	Tube				
③ 92191A	92191-7003	1	Tube,6.35x12.7x160				
③ 92191B	92191-7004	1	Tube				
③ 130	130B0620	2	Bolt-Flanged				

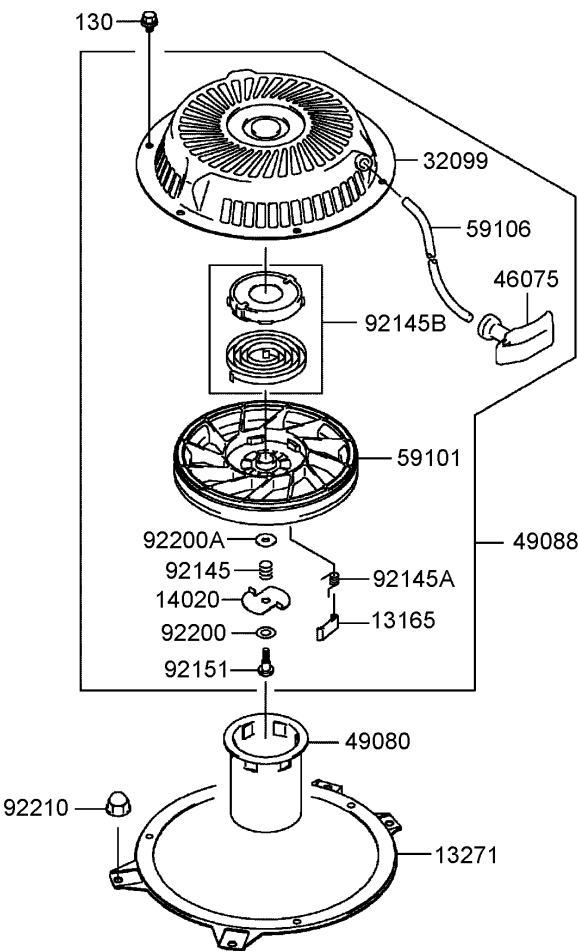

Starter Assembly
Kawasaki FH430V-AS28

Ref	Part No.	Qty.	Description				
❸ 13165	13165-7001	2	Pawl-Starter, Recoil				
❸ 13271	13271-7003-9H	1	Plate				
❸ 14020	14020-7001	1	Retainer				
❸ 32099	32099-7002	1	Case-Starter, Recoil				
❸ 46075	46075-7001	1	Grip-Recoil, Starter				
❸ 49080	49080-7001	1	Pulley-Starting				
❸ 49088	49088-7013	1	Starter-Recoil				
❸ 59101	59101-7001	1	Reel-Recoil				
❸ 59106	59106-7001	1	Rope				
❸ 92145	92145-7006	1	Spring				
❸ 92145A	92145-7007	2	Spring				
❸ 92145B	92145-7008	1	Spring				
❸ 92151	92151-7008	1	Bolt				
❸ 92200	92200-7004	1	Washer				
❸ 92200A	92200-7005	1	Washer				
❸ 92210	92210-0003	4	Nut				
❸ 130	130B0608	3	Bolt-Flanged				

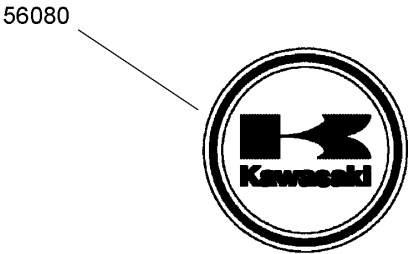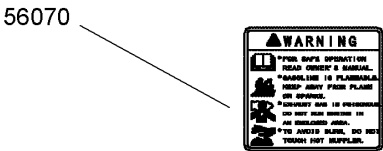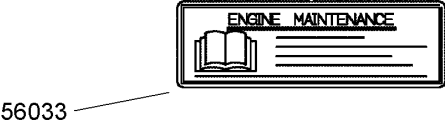

Decal Assembly
Kawasaki FH430V-AS28

Ref	Part No.	Qty.	Description				
⑤56033	56033-7001	1	Label-Manual				
⑤56070	56070-7001	1	Label-Warning				
⑤56080	56080-2077	1	Label-Brand				
⑤56080A	56080-7024	1	Label-Brand				

PROTOTYPE

NOTES

PROTOTYPE

NOTES

PROTOTYPE

NOTES

PROTOTYPE



PROTOTYPE