



Mid-Size ProLine Pistol Grip Gear 17 HP with 52in Side Discharge Mower

Model No. 30438 - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Engine Installation Assembly	 3	Lubrication Equipment Assembly Kawasaki FH541V-AS30	 19
Fuel Tank Assembly	 4	Cooling Equipment Assembly Kawasaki FH541V-AS30	 20
Lower Control Assembly	 5	Electric Equipment Assembly Kawasaki FH541V-AS30	 21
Transmission Drive Assembly	 6	Control Equipment Assembly Kawasaki FH541V-AS30	 22
Wheel Drive and Brake Assembly	 7	Carburetor Assembly Kawasaki FH541V-AS30	 23
Upper Handle Assembly	 8	Muffler and Air Filter Assembly Kawasaki FH541V-AS30	 24
Control Panel Assembly	 9	Fuel Tank/Fuel Valve Assembly Kawasaki FH541V-AS30	 25
Carrier Frame Assembly	 10	Starter Assembly Kawasaki FH541V-AS30	 26
Spline, Pulley and Belt Assembly	 11	Decal Assembly Kawasaki FH541V-AS30	 27
Outer Spindle Assembly 107-0787	 12		
Spindle Assembly No. 106-0785	 13		
Deck Assembly	 14		
Drive Belt and Tensioner Assembly	 15		
Cylinder/Crankcase Assembly Kawasaki FH541V-AS30	 16		
Piston/Crankshaft Assembly Kawasaki FH541V-AS30	 17		
Valve and Camshaft Assembly Kawasaki FH541V-AS30	 18		

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	INC. incorporated
ASM. assembly	LH. left hand
CARR. carriage	NI. nylon insert
DEG. degrees	PPH. phillips pan head
FH. flat head	PTH. phillips truss head
GA. gauge	PTO. power take off
HF. hex flange	RH. right hand
HH. hex head	SFH. slotted fillister head
HHF. hex head flange	SHH. slotted hex head
HHFTF. hex head flange thread forming	SHWH. slotted hex washer head
HJ. hex jam	SPH. slotted pan head
HLH. hex lag head	SQH. square head
HOC. height-of-cut	SRH. slotted round head
HS. hex	STD. standard
HSBH. hex socket button head	TAP. self tapping
HSFH. hex socket flat head	TTH. torx truss head
HS. hex socket head	WH. wing head
HWH. hex washer head	
HWHTF. hex washer head thread forming	
HYD. hydraulic	


Footnotes

- | | |
|--|---------------------------|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Obtain parts from your local Kawasaki dealer | |

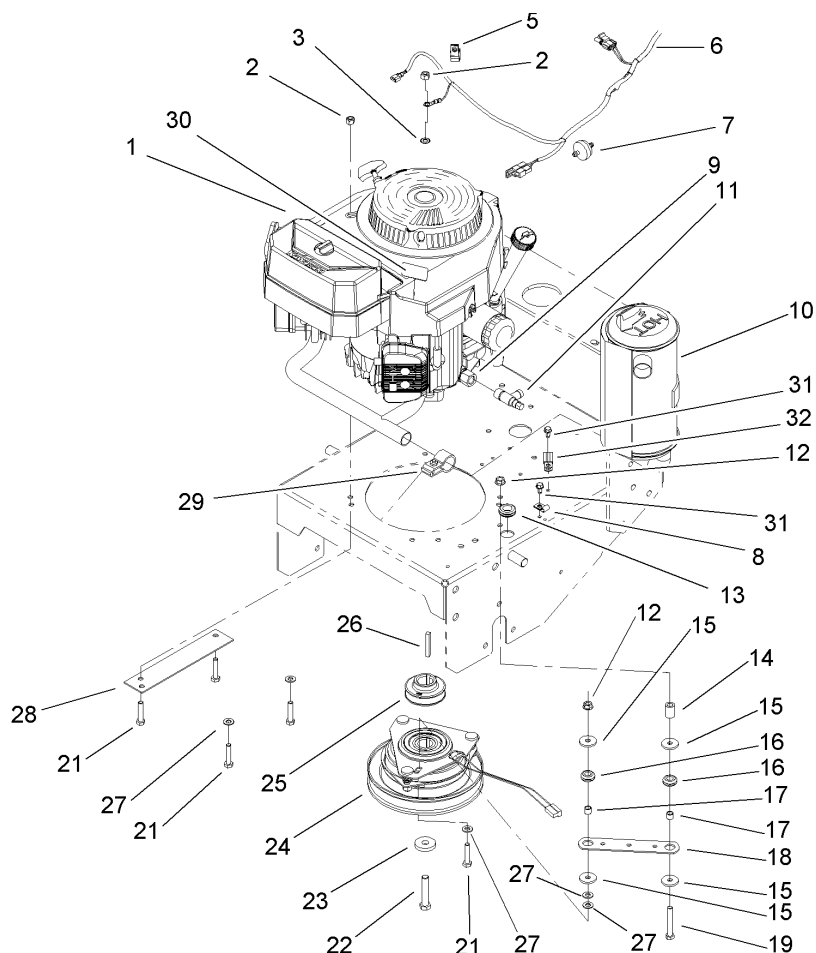


Engine Installation Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1		1	Engine-Kawasaki, Fh541v-As30	27	3256-23	5	Washer-Flat
2	3296-29	4	Nut-Lock, NI	28	94-5847-01	1	Cover-Pulley
3	3255-8	1	Washer-Lock	29	103-5465	1	Clamp-Muffler
5	2412-87	1	Clamp-Cable	30	106-0699	1	Decal-Warning, Hot Surfaces
6	104-9825	1	Harness-Wire	31	12-3270	2	Screw
7	56-6360	1	Filter-Fuel	32	2412-134	1	R-Clamp
8	2412-72	1	Clip-Closed, Insulated	99	103-1964	1	Hose-Drain, Oil
9	103-1966	1	Adapter				
10	100-6467	1	Muffler				
11	103-1965	1	Valve-Drain, Oil				
12	32128-20	2	Nut-HF				
13	237-124	1	Grommet				
14	104-6373	1	Tube-Retainer				
15	1-613235	4	Washer				
16	1-633630	2	Grommet-Brake				
17	1-633545	2	Spacer				
18	1-633543-03	1	Strap-Clutch, Brake				
19	322-11	1	Screw-HH				
21	322-7	5	Screw-HH				
22	3212-9	1	Screw-HH				
23	112843	1	Washer				
24	105-2635	1	Clutch/brake				
25	105-0827	1	Pulley-Drive				
26	608006	1	Key-Square				

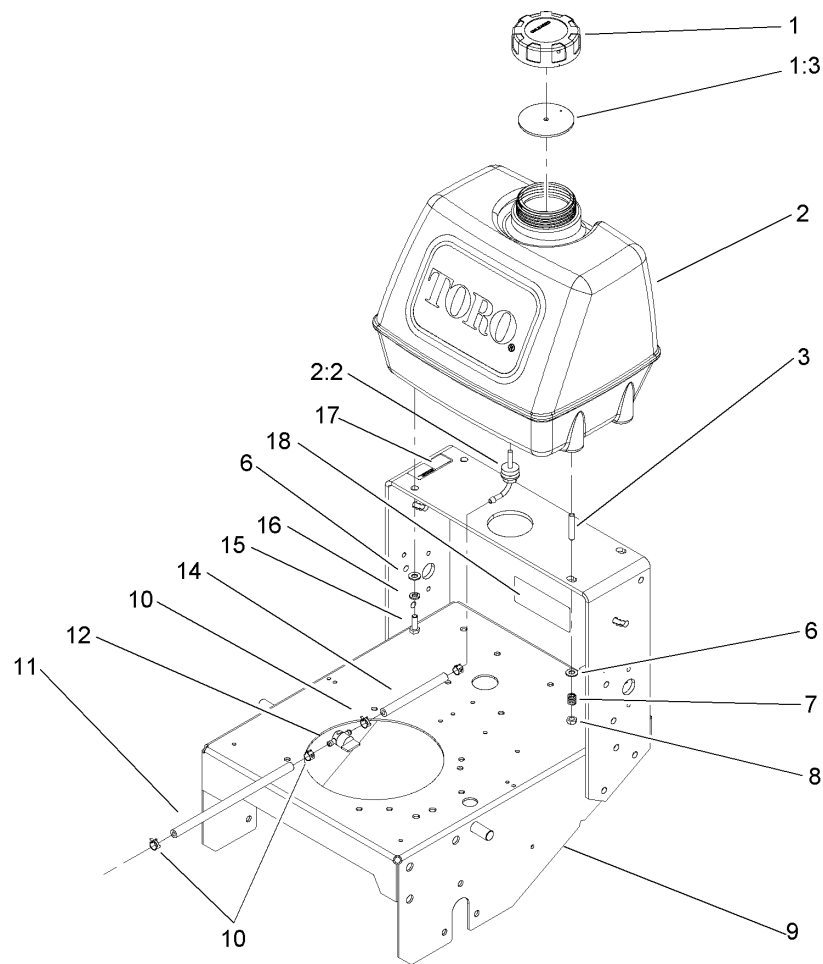

Fuel Tank Assembly


Ref	Part No.	Qty.	Description				
1	88-3980	1	Gas Cap ASM				
1:3	88-4010	1	Gasket-Cap, Gas				
2	106-0730	1	Fuel Tank ASM				
2:2	103-2605	1	Fitting-Fuel, Bulkhead				
3	104-8121	2	Stud-Threaded				
6	3256-23	4	Washer-Flat				
7	1-633349	2	Spring-Tank, Fuel				
8	3296-47	2	Nut-Lock, NI				
9	106-0546-01	1	Gear Frame ASM				
10	2412-98	4	Clamp				
11	47-2982	1	Hose-Fuel				
12	1-603770	1	Valve-Fuel				
14	47-2980	1	Hose-Fuel				
15	322-4	2	Screw-HH				
16	3253-4	2	Washer-Lock				
17	95-2814	1	Decal-Shut Off, Fuel				
18	98-0776	1	Decal-Caution				

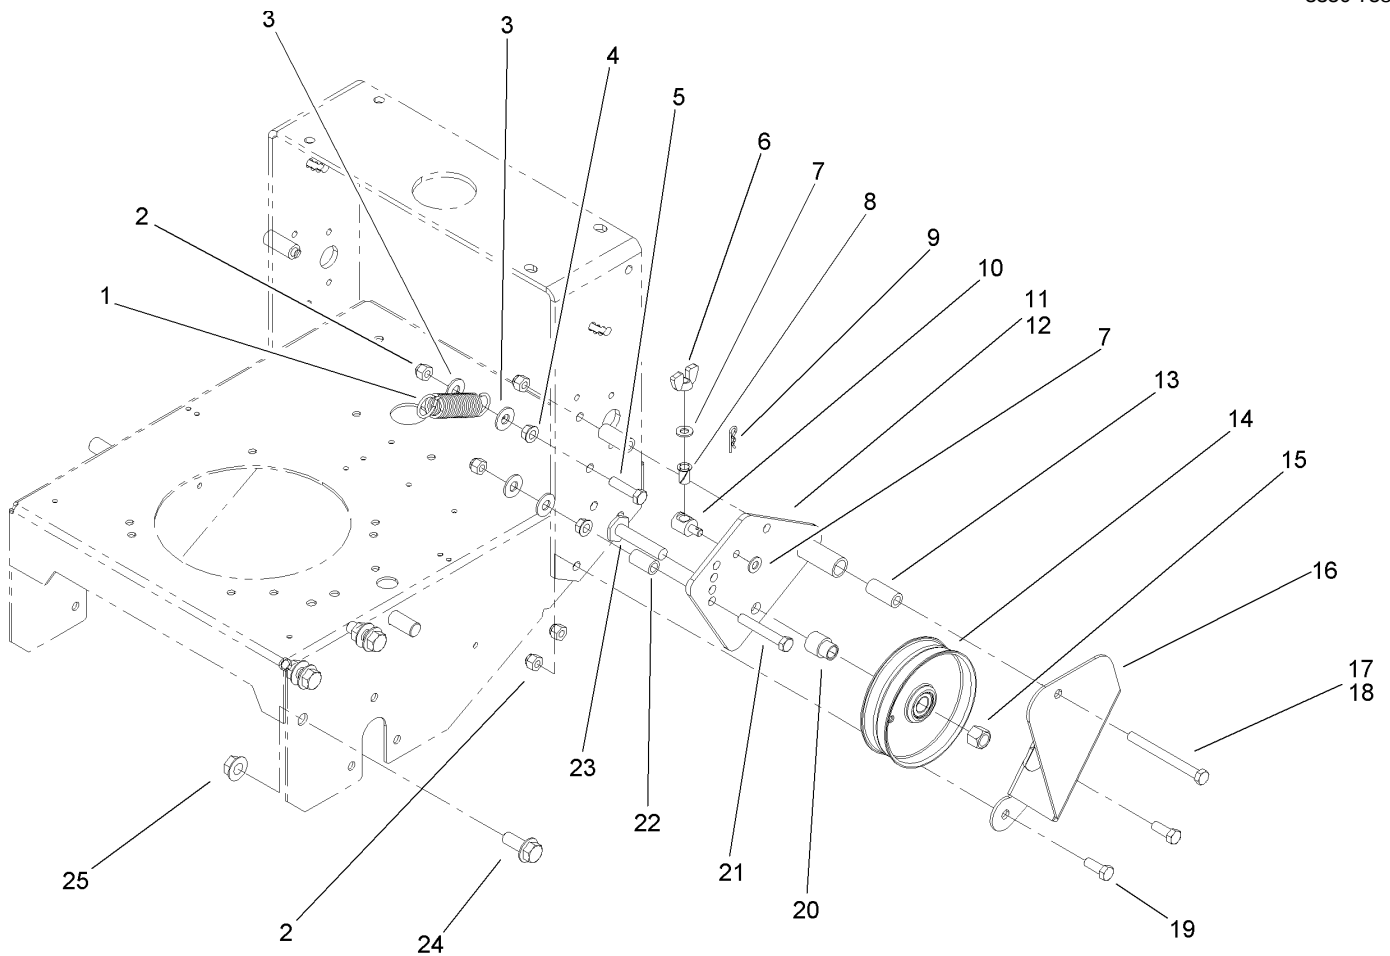 

Lower Control Assembly

Ref	Part No.	Qty.	Description
1	1-603402	2	Spring-Extension
2	3296-39	10	Nut-Lock, NI
3	3256-4	8	Washer-Flat
4	32128-40	4	Nut-Flange
5	323-8	2	Screw-HH
6	32103-25	2	Nut-Wing
7	3256-23	4	Washer-Flat
8	52-2890	2	Bushing-Nylon
9	3290-307	2	Pin-Hair
10	68-9690	2	Fitting-Rod
11	107-4092-01	1	LH Idler Bracket ASM
12	107-4093-01	1	RH Idler Bracket ASM
13	74-0040	4	Spacer-Pivot, Idler
14	95-2800	2	Pulley-Idler
15	3296-23	2	Nut-Lock, NI
16	67-6380-01	1	Bracket-Support, LH
17	67-6370-01	1	Bracket-Support, RH
18	323-16	2	Screw-HH
19	323-6	4	Screw-HH
20	95-2801	2	Spacer-Pulley
21	323-12	2	Screw-HH
22	106-0564	2	Spacer
23	51-4450	2	Screw-Leveler
24	3234-32	6	Screw-HHF


Ref	Part No.	Qty.	Description
25	32128-23	6	Nut-HF

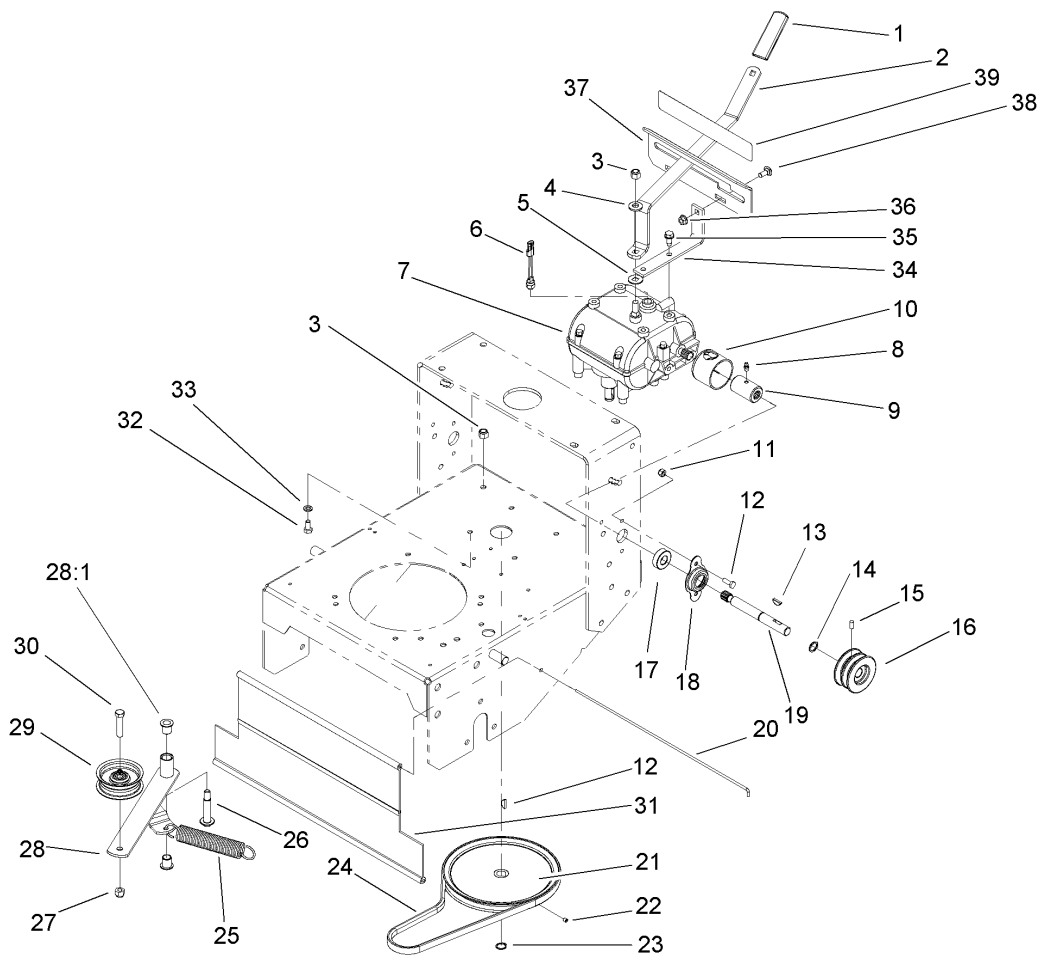 

Transmission Drive Assembly

Ref	Part No.	Qty.	Description
1	47-1970	1	Grip
2	98-3274-03	1	Lever-Shift
3	3296-6	2	Nut-Lock, NI
4	98-5975	1	Washer-Belleville
5	1-323379	1	Washer
6	72-4320	1	Switch-Ball
7	1-323500	1	Transmission
8	302-5	2	Fitting-Grease
9	1-323680	2	Coupler
10	51-4220	2	Guard-Coupler
11	3296-42	4	Nut-Lock, NI
12	321-4	4	Screw-HH
13	3257-5	3	Key-Woodruff
14	32151-62	2	Ring-Retaining
15	3245-9	2	Screw-Set
16	105-2698	2	Pulley-Transmission
17	1-323252	2	Bearing-Shaft
18	1-323254	2	Flange-Output
19	104-1102	2	Shaft-Output
20	95-1529	1	Rod-Shield
21	105-5646	1	Pulley-Driven
22	3245-1	1	Screw-Set, HSH
23	32120-64	1	Ring-Snap, External
24	105-5668	1	V-Belt


Ref	Part No.	Qty.	Description
25	68-2190	1	Spring
26	27-6230	1	Bolt-Wheel
27	3296-39	1	Nut-Lock, NI
28	16-7509	1	Lever-Idler
28:1	256-155	2	Bushing-Flange
29	62-4540	1	Pulley
30	323-9	1	Screw-HH
31	95-1526	1	Shield-Trailing
32	322-2	4	Screw-HH
33	3253-4	4	Washer-Lock
34	1-323389-03	2	Bracket-Plate, Shift
35	9264964	4	Screw-Hwh, TAP
36	32128-20	2	Nut-HF
37	1-323387-03	1	Plate-Shift
38	3230-1	2	Bolt-CARR
39	98-3256	1	Decal-Speed, Ground

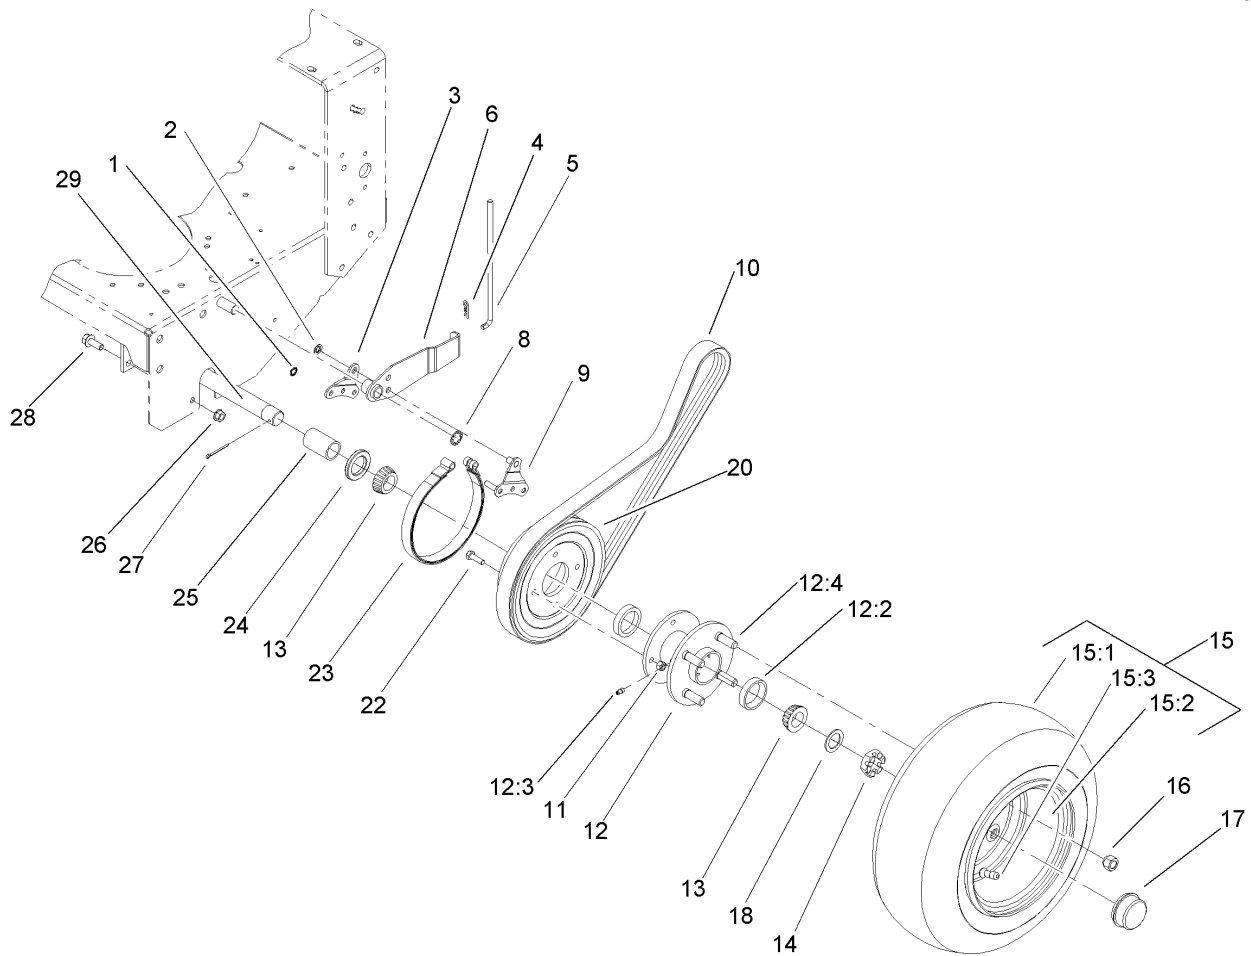 

Wheel Drive and Brake Assembly

Ref	Part No.	Qty.	Description
1	32151-56	2	Ring-Retaining, External
2	32151-72	4	Ring-Retaining
3	106-8792	2	Plate-Link, Brake
4	3290-307	2	Pin-Hair
5	51-4580	2	Rod-Brake
6	106-8779-01	2	Brake Arm ASM
8	32151-40	2	Ring-Retaining
9	106-8773	2	Brake Link ASM
10	51-4290	2	V-Belt
11	3296-29	8	Nut-Lock, NI
12	1-413333	2	Hub/wheel ASM
12:2	254-72	2	Bearing-Cup, Tapered
12:3	302-19	1	Fitting-Grease
12:4	1-633926	4	Stud-Wheel
13	254-94	4	Bearing-Cone, Tapered
14	1-809082	2	Nut-SHH
15	106-0892	2	Wheel And Tire ASM
15:1	104-6322	1	Tire
15:2	106-0893	1	Wheel
15:3	232-27	1	Stem-Valve
16	242-50	8	Nut-Lug
17	241-119	2	Cap-Dust
18	1-523157	2	Washer-Spacer
20	106-5544	2	Pulley-Wheel


Ref	Part No.	Qty.	Description
22	322-5	8	Screw-HH
23	1-323262	2	Band-Brake
24	1-543511	2	Seal-Grease
25	104-1197	2	Spacer-Wheel
26	32128-21	6	Nut-HF
27	1-806800	2	Pin-Cotter
28	3234-11	6	Screw-HHF
29	104-1196-01	1	Axle ASM

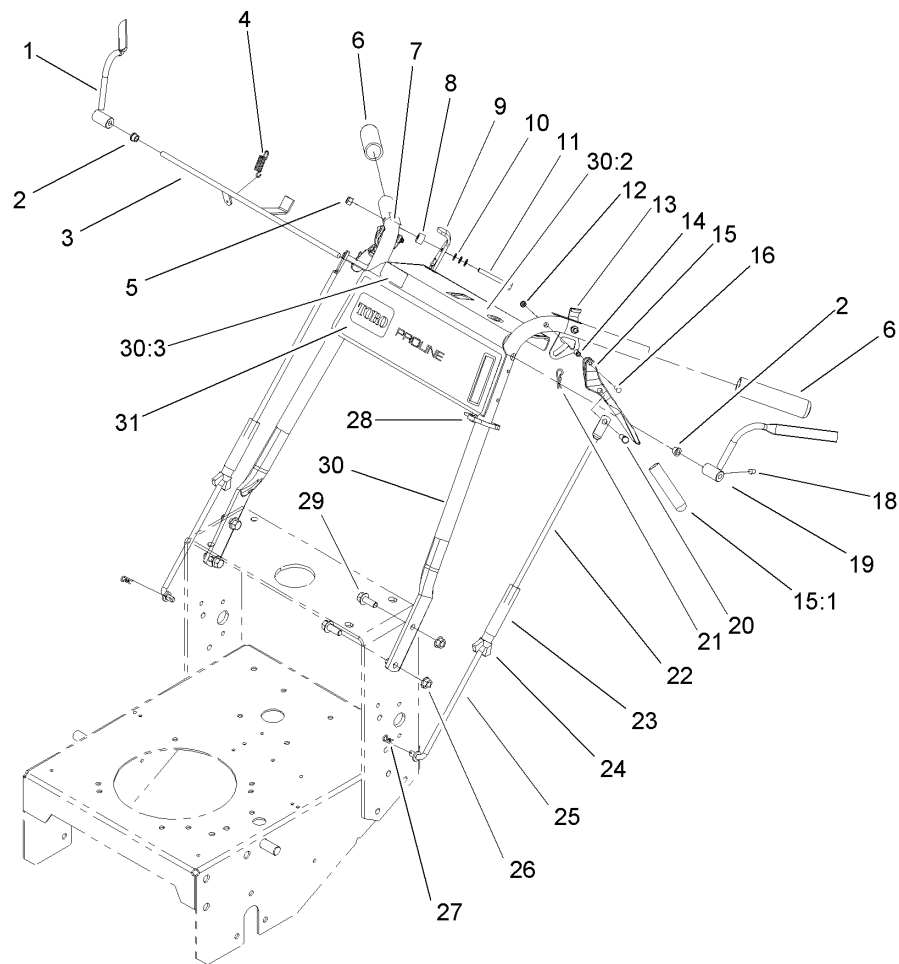 

Upper Handle Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-5486	1	RH Opc Lever ASM	25	95-1506	2	Rod-Control, Lower
2	1-303365	2	Bushing-Nylon	26	32128-21	4	Nut-HF
3	104-9803	1	Rod ASM	27	3290-307	2	Pin-Hair
4	1-303363	1	Spring-Extension	28	3290-378	1	Tie-Cable
5	3296-42	2	Nut-Lock, NI	29	3234-11	4	Screw-HHF
6	104-9838	2	Grip-Foam	30	105-3174	1	Handle ASM
7	105-4111	2	Decal-Lock, Neutral	30:2	106-5514	1	Decal-Control Panel
8	1-323549	2	Spacer	30:3	98-4387	1	Decal-Protection, Ear
9	106-5521	1	Latch-Thumb, RH	31	106-5501	1	Decal-Control, Throttle
10	1-303435	6	Washer-Spring				
11	321-18	2	Screw-HH				
12	1-803001	2	Nut				
13	106-5520	1	Latch-Thumb, LH				
14	1-806340	2	Pin-Roll				
15	1-302006	2	Drive Lever ASM				
15:1	1-303021	1	Grip-Lever, Drive				
16	1-808250	2	Pin-Drive Lever				
18	1-803322	2	Screw-Set				
19	106-5485	1	LH Opc Lever ASM				
20	1-808286	2	Pin-Clevis				
21	1-806003	2	Pin-Hair				
22	106-0613	2	Linkage-Drive Wheel				
23	95-1504	2	Turnbuckle				
24	32103-3	2	Nut-Wing				

 9

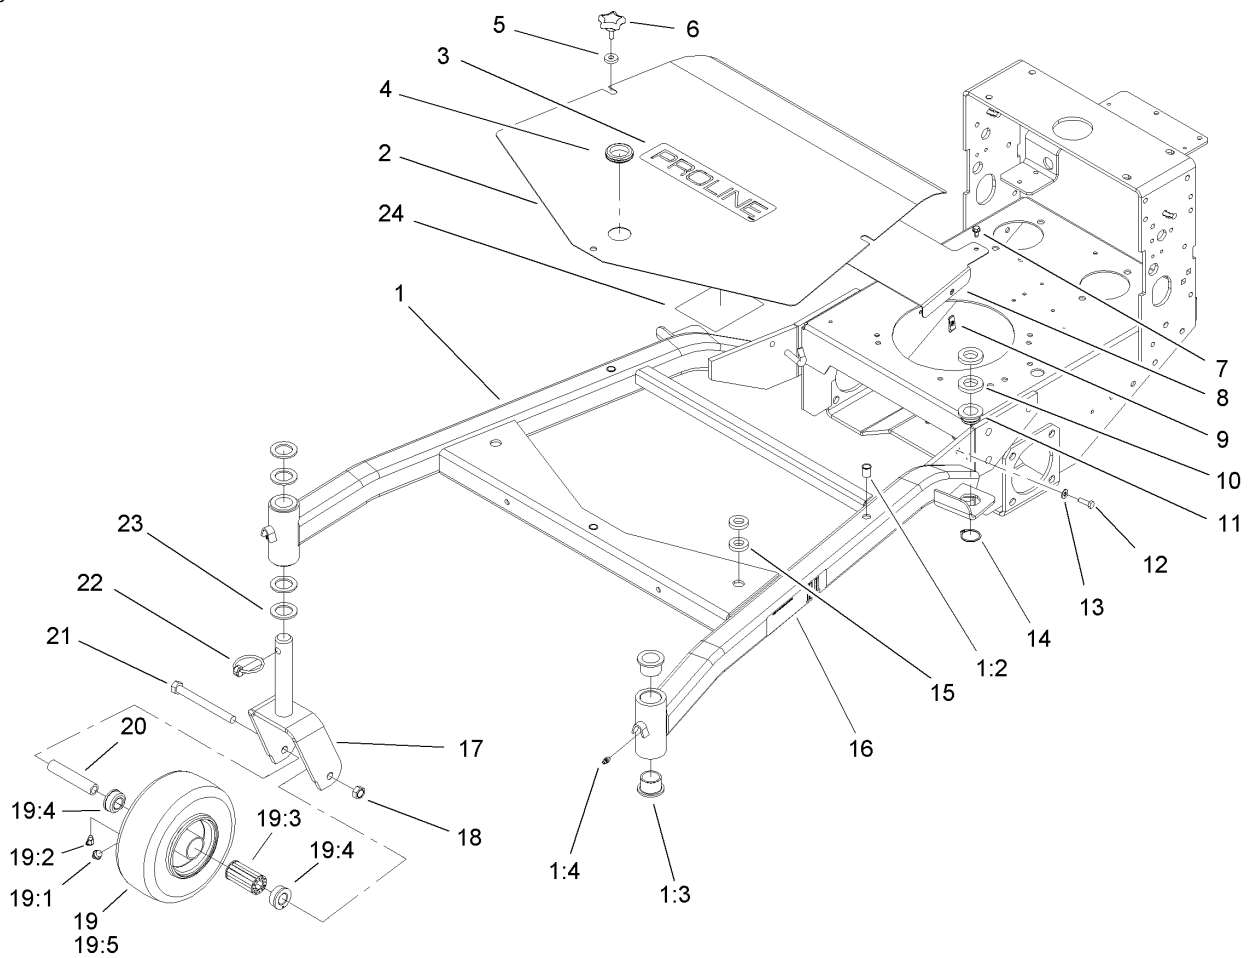

Carrier Frame Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-0708	1	Carrier Frame ASM	19:3	83-4740	1	Bearing
1:2	32148-9	3	Insert-Nut	19:4	62-5580	2	Bearing-Outside
1:3	94-1291	4	Bushing	19:5	100-6452	1	Tire-Tubeless
1:4	302-5	2	Fitting-Grease	20	100-6453	2	Bushing-Spanner
2	106-3360-01	1	Cover-Frame, Carrier	21	325-19	2	Screw-HH
3	106-0719	1	Decal	22	283-71	2	Pin-Lynch
4	240-3	1	Grommet-Rubber	23	3-6781	8	Washer-Thrust
5	106-0565	3	Washer-Rubber	24	106-5503	1	Decal-Service, Hydro Tbar
6	106-0887	3	Knob	24	106-5505	1	Decal-Service, Gear Tbar
7	12-3270	2	Screw	24	106-5511	1	Decal-Service, Gear Pistol Grip
8	106-3361-01	1	Shield-Heat	24	106-5513	1	Decal-Service, Hydro Pistol Grip
9	3290-199	2	Nut-Speed				
10	104-1105	4	Spacer-Support, Deck				
11	1-513336	2	Bushing-Deck				
12	321-5	2	Screw-HH				
13	3256-22	2	Washer-Flat				
14	32120-33	2	Ring-Retaining				
15	105-0842	4	Spacer				
16	106-0635	2	Decal-HOC				
17	105-3159-01	2	Castor Fork ASM				
18	32153-5	2	Nut-Lock				
19	100-6451	2	Castor Wheel ASM				
19:1	232-27	1	Stem-Valve				
19:2	302-11	1	Fitting-Lube, 45 DEG				

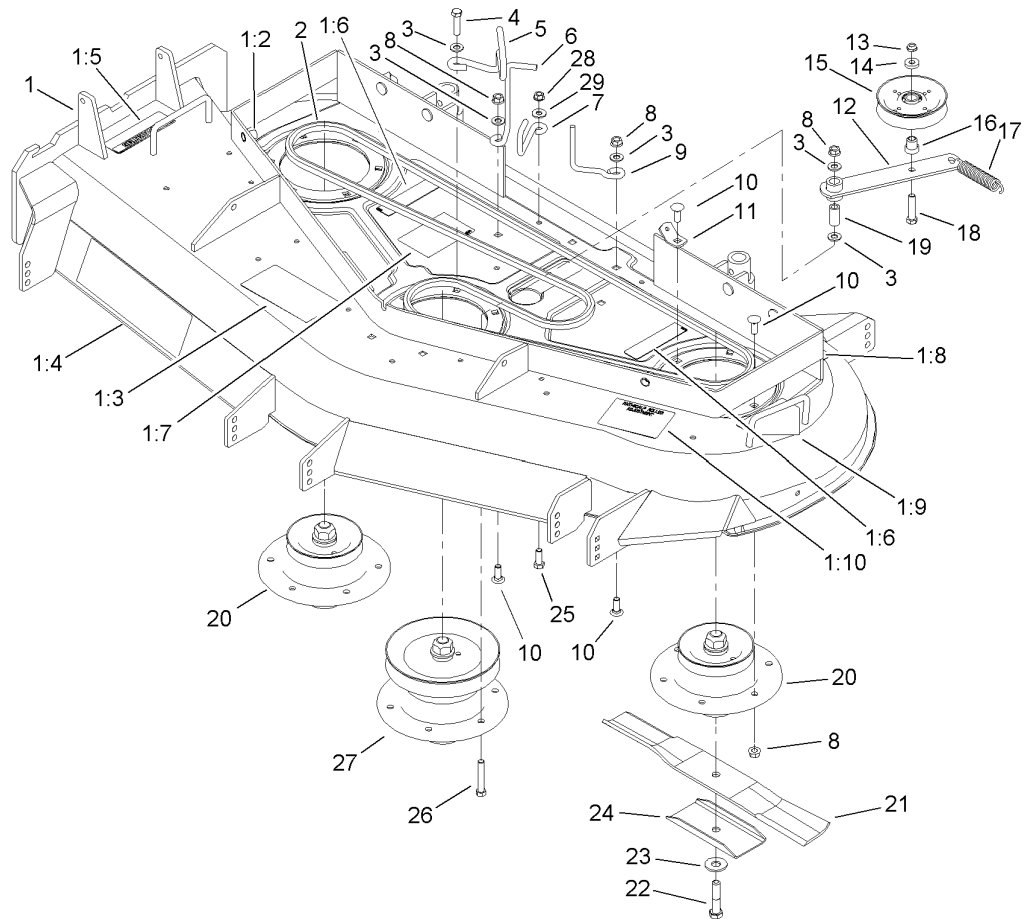 

Spline, Pulley and Belt Assembly


Ref	Part No.	Qty.	Description
1	106-0619	1	Deck ASM
1:2	32148-10	2	Insert-Threaded
1:3	66-1340	1	Decal-Danger
1:4	106-0705	1	Decal
1:5	104-8569	1	Decal-Warning
1:6	67-5360	3	Decal-Danger
1:7	104-8186	1	Decal-Routing, Belt
1:8	68-8340	1	Decal-Torque
1:9	43-8480	1	Decal-Danger
1:10	106-5532	1	Decal-Scalp, Anti
2	104-6397	1	V-Belt
3	3256-24	5	Washer-Flat
4	323-8	1	Screw-HH
5	105-0850	1	Guide-Belt
6	98-5980	1	Guide-Belt
7	104-6396	1	Guide-Belt
8	32128-21	20	Nut-HF
9	52-4780	1	Rod-Belt
10	3231-22	18	Screw-CARR
11	104-6374	1	Plate-Spring
12	104-6375	1	Idler Arm ASM
13	3296-5	1	Nut-Lock, NI
14	7-0081	1	Washer-Flat
15	65-5940	1	Pulley-Idler

Ref	Part No.	Qty.	Description
16	104-6379	1	Bushing-Pulley
17	51-3650	1	Spring-Extension
18	3211-8	1	Screw-HH
19	51-3640	1	Sleeve
20	106-0787	2	Spindle Housing ASM
21	27-0990	3	Blade
22	44-2200	3	Screw-Blade
23	3256-6	3	Washer-Flat
24	92-9820	3	Stiffener-Blade
25	323-6	1	Screw-HH
26	323-11	1	Screw-HH
27	106-0785	1	Spindle Housing ASM
28	32128-25	1	Nut-HF
29	3256-3	1	Washer-Flat

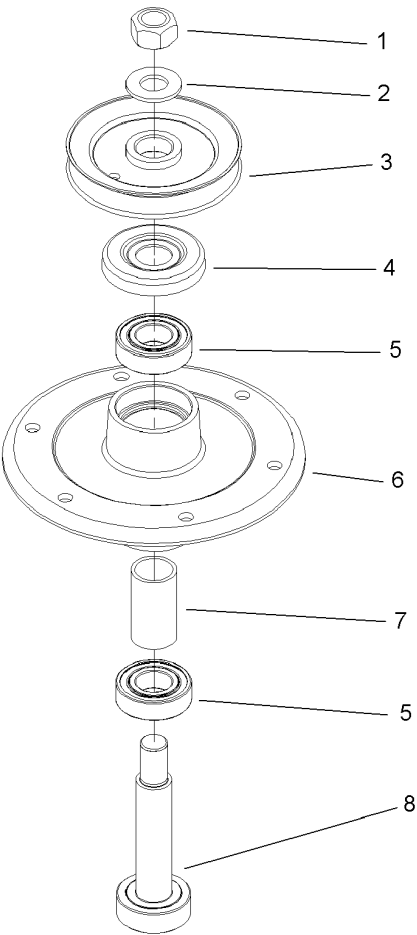 


Outer Spindle Assembly 107-0787

Ref	Part No.	Qty.	Description				
1	3219-7	1	Nut-Hex				
2	7-4150	1	Washer				
3	104-1118	1	Pulley And Hub ASM				
4	106-0873	1	Shield-Bearing				
5	104-6325	2	Bearing				
6	106-0819	1	Housing-Spindle				
7	106-0795	1	Spacer-Bearing				
8	106-0782	1	Shaft-Spindle				

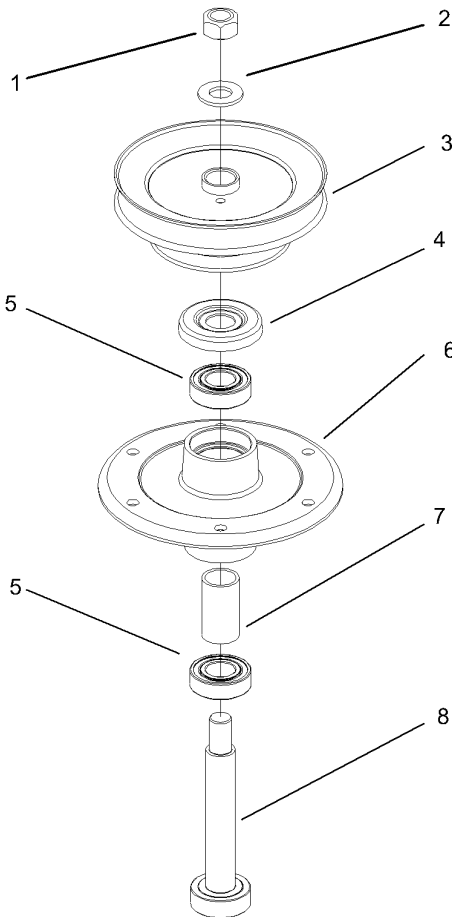 

Spindle Assembly No. 106-0785


Ref	Part No.	Qty.	Description				
1	3219-7	1	Nut-Hex				
2	7-4150	1	Washer				
3	104-1117	1	Pulley And Hub ASM				
4	106-0873	1	Shield-Bearing				
5	104-6325	2	Bearing				
6	106-0819	1	Housing-Spindle				
7	106-0795	1	Spacer-Bearing				
8	106-0781	1	Shaft-Spindle				

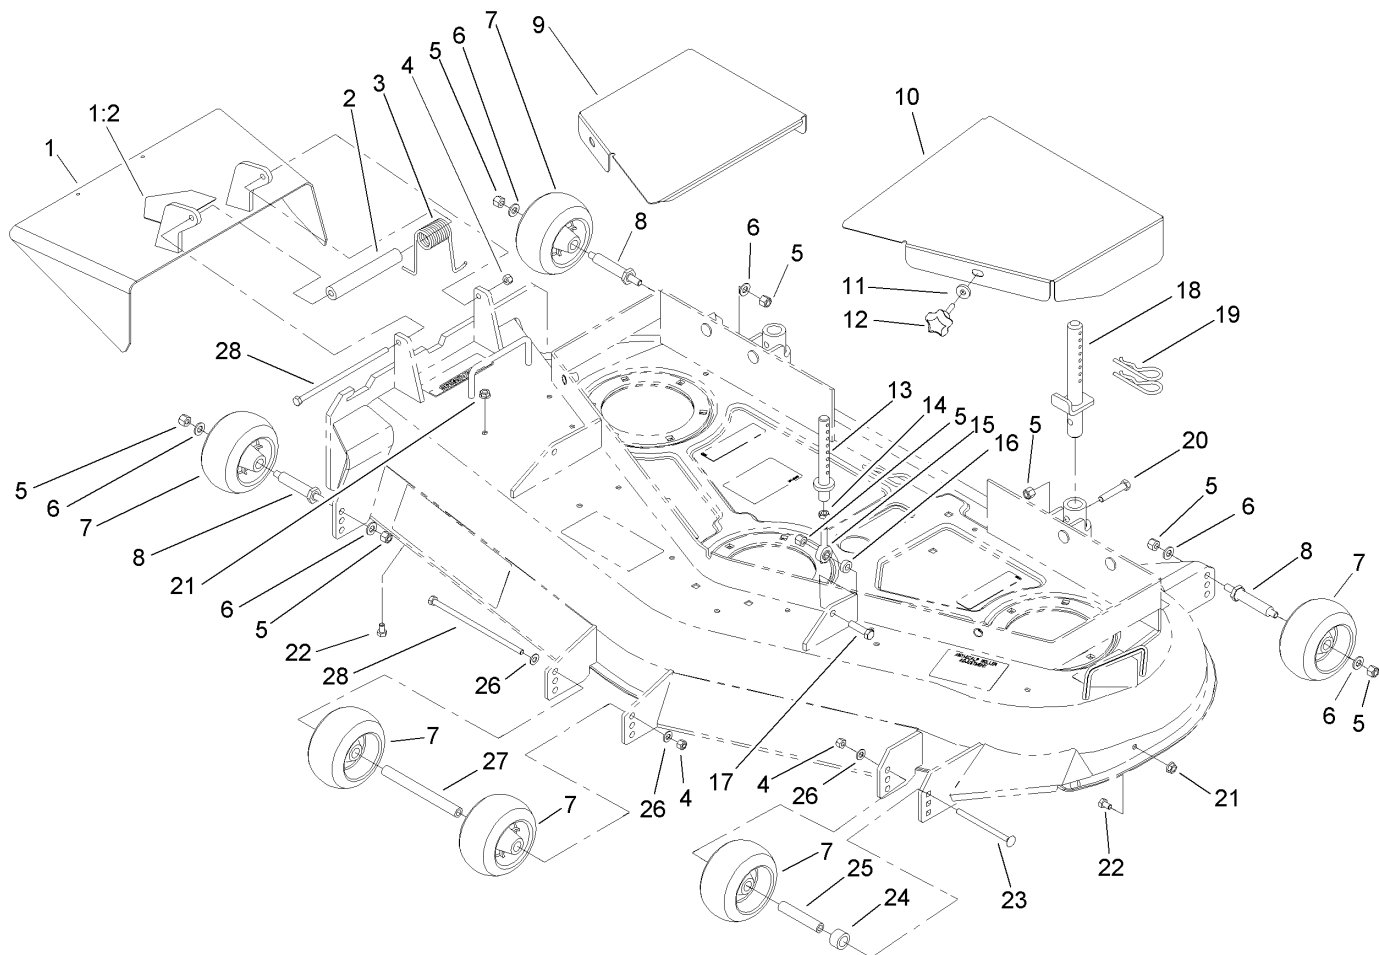 

Deck Assembly


Ref	Part No.	Qty.	Description
1	105-4623	1	Deflector ASM
1:2	93-1122	1	Decal-Danger
2	105-4622	1	Spacer
3	104-8554	1	Spring-Torsion
4	3296-29	3	Nut-Lock, NI
5	3296-39	10	Nut-Lock, NI
6	3256-24	6	Washer-Flat
7	68-2730	6	Wheel-Gage
8	99-2842	3	Spacer
9	106-3363-01	1	Cover-Belt, RH
10	106-3362-01	1	Cover-Belt, LH
11	106-0565	2	Washer-Rubber
12	106-0887	2	Knob
13	106-0684	2	Front Pin ASM
14	3220-3	2	Nut-Jam
15	1-613204	2	Balljoint
16	104-1156	2	Spacer
17	323-8	2	Screw-HH
18	106-3365	2	Rear Pin ASM
19	3290-256	6	Pin-Hair
20	323-10	2	Screw-HH
21	32128-20	6	Nut-HF
22	322-1	6	Screw-HH
23	3230-30	1	Screw-CARR

Ref	Part No.	Qty.	Description
24	106-0563	1	Spacer-Wheel
25	106-0545	1	Bushing-Roller
26	3256-23	3	Washer-Flat
27	98-5967	1	Spacer-Wheel
28	322-50	2	Screw-HH

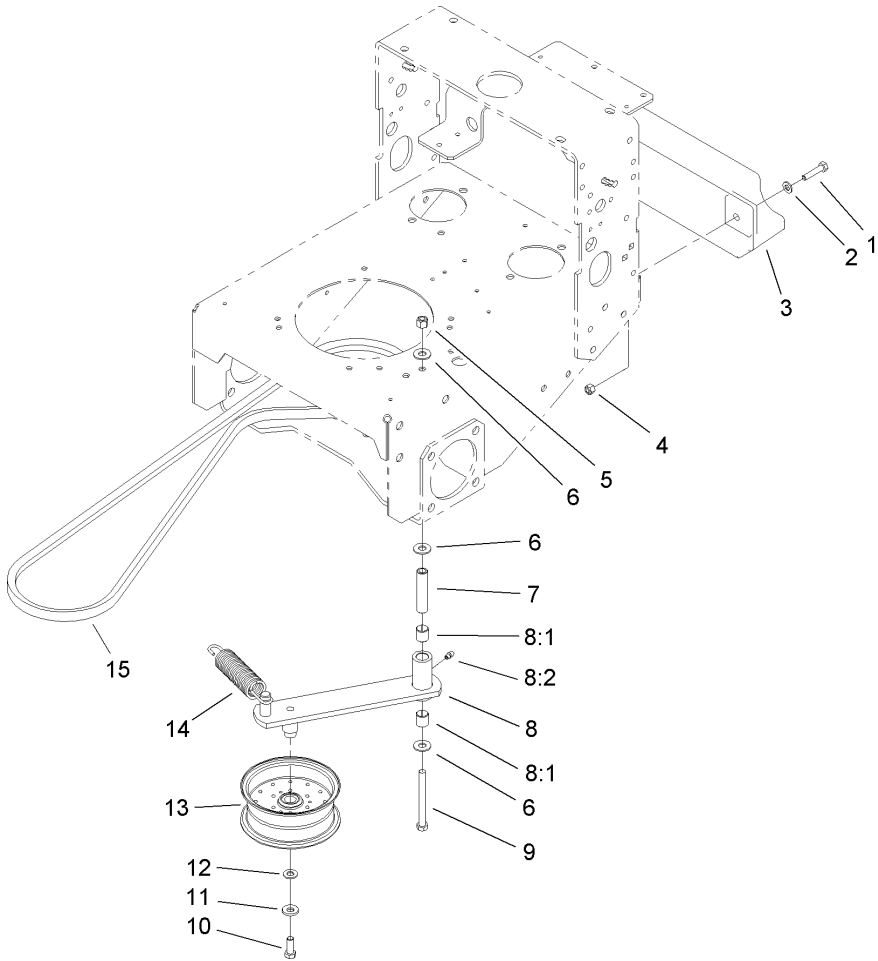 


Drive Belt and Tensioner Assembly

Ref	Part No.	Qty.	Description				
1	322-7	2	Screw-HH				
2	3256-23	2	Washer-Flat				
3	105-3173-01	1	Weight-Rear				
4	3296-29	2	Nut-Lock, NI				
5	3296-39	1	Nut-Lock, NI				
6	52-2860	3	Washer				
7	104-6377	1	Tube-Idler				
8	106-0734	1	Idler Arm ASM				
8:1	1-513034	2	Sleeve-Bearing				
8:2	302-5	1	Fitting-Grease				
9	323-42	1	Screw-HH				
10	323-6	1	Screw-HH				
11	98-5975	1	Washer-Belleville				
12	3256-24	1	Washer-Flat				
13	1-413099	1	Pulley-Idler				
14	105-8443	1	Spring-Extension				
15	106-0632	1	V-Belt				

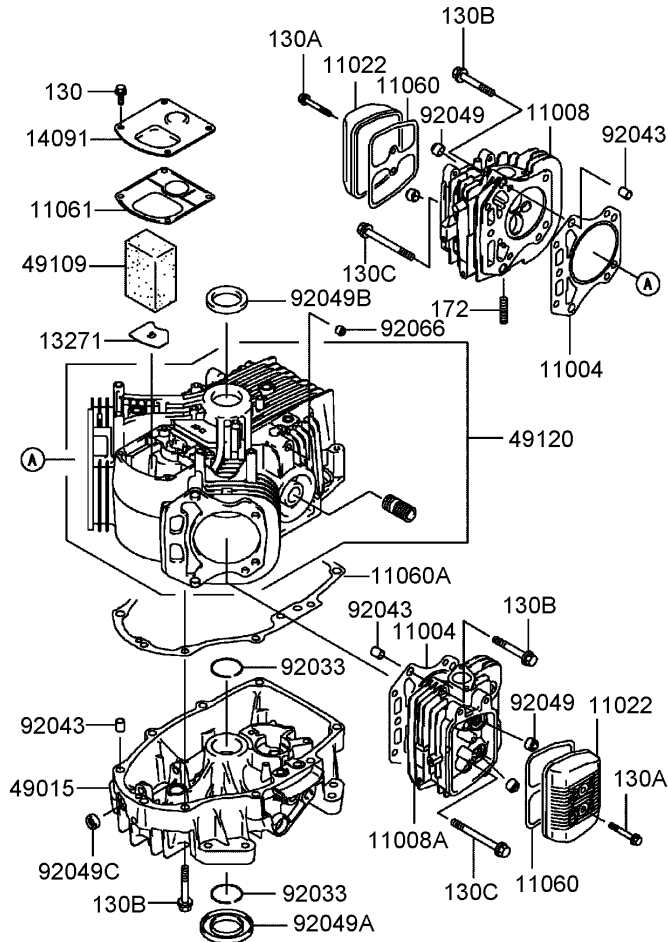 


Cylinder/Crankcase Assembly
Kawasaki FH541V-AS30

Ref	Part No.	Qty.	Description				
④11004	11004-7010	2	Gasket-Head				
④11008	11008-6043	1	Head-Comp-Cylinder,#1				
④11008A	11008-7020	1	Head-Comp-Cylinder,#2				
④11022	11022-7003	2	Case-Rocker				
④11060	11060-7001	1	Gasket,rocker Case				
④11060A	11060-7008	1	Gasket,crankcase Cover				
④11061	11061-7001	1	Gasket,breather				
④13271	13271-7016	1	Plate				
④14091	14091-7006	1	Cover				
④49015	49015-6253	1	Cover-Crankcase				
④49109	49109-7002	1	Element-Breather				
④49120	49120-7023	1	Crankcase-Comp				
④92033	92033-7003	2	Ring-Snap				
④92043	92043-7001	6	Pin				
④92049	92049-7001	4	Seal-Oil,rvc 26x11x10.2				
④92049A	92049-7015	1	Seal-Oil, Sd				
④92049B	92049-7016	1	Seal-Oil, Sd				
④92049C	92049-7019	1	Seal-Oil, So				
④92066	92066-7002	1	Plug				
④130	130B0612	4	Bolt-Flanged				
④130A	130B0640	4	Bolt-Flanged				
④130B	130T0850	17	Bolt-Flanged				
④130C	130T0875	2	Bolt-Flanged				
④172	172G0818	4	Bolt-Stud				

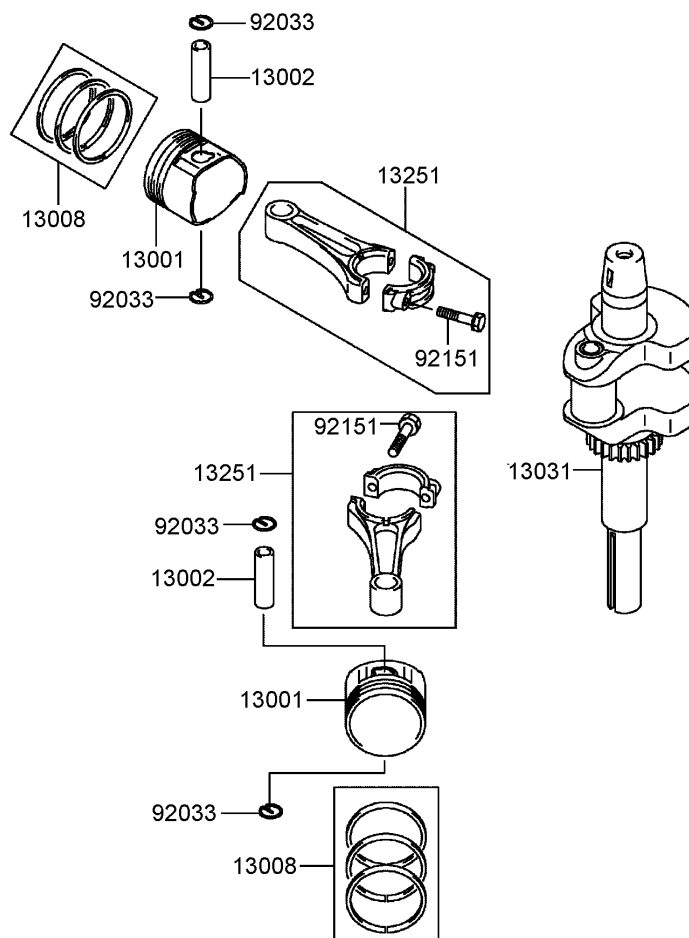 


Piston/Crankshaft Assembly Kawasaki FH541V-AS30

Ref	Part No.	Qty.	Description
③13001	13001-7010	2	Piston-Engine
③13002	13002-7001	2	Pin-Piston
③13008	13008-6060	2	Ring-Set-Piston
③13031	13031-7036	1	Crankshaft-Comp
③13251	13251-7010	2	Rod-Assy-Connecting
③92033	92033-7005	4	Ring-Snap
③92151	92151-7017	4	Bolt,6x35

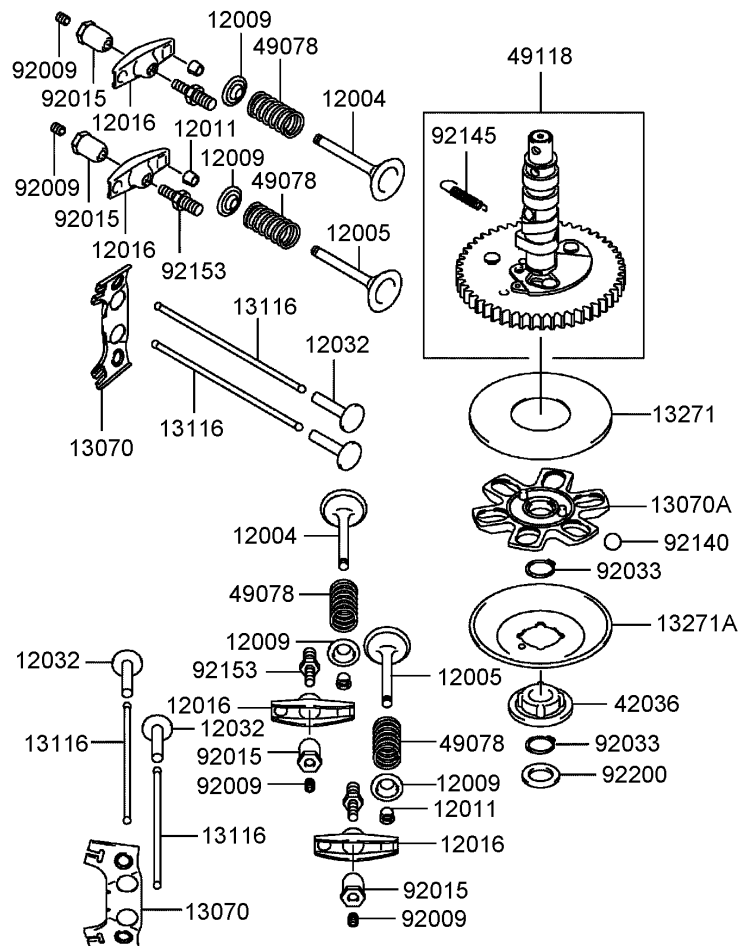 


Valve and Camshaft Assembly
Kawasaki FH541V-AS30

Ref	Part No.	Qty.	Description				
①12004	12004-7003	2	Valve-Intake				
①12005	12005-7003	2	Valve-Exhaust				
①12009	12009-7001	4	Retainer-Valve Spring				
①12011	12011-2056	8	Collet				
①12016	12016-7001	4	Arm-Rocker				
①12032	12032-7001	4	Tappet				
①13070	13070-7001	2	Guide				
①13070A	13070-7004	1	Guide				
①13116	13116-2057	4	Rod-Push				
①13271	13271-7007	1	Plate				
①13271A	13271-7021	1	Plate,governor				
①42036	42036-7009	1	Sleeve				
①49078	49078-7001	4	Spring-Engine Valve				
①49118	49118-7004	1	Camshaft-Comp				
①92009	92009-2341	4	Screw				
①92015	92015-2253	4	Nut				
①92033	92033-7001	2	Ring-Snap				
①92140	92140-7002	6	Ball				
①92145	92145-7001	1	Spring				
①92153	92153-7019	4	Bolt				
①92200	92200-7001	1	Washer				

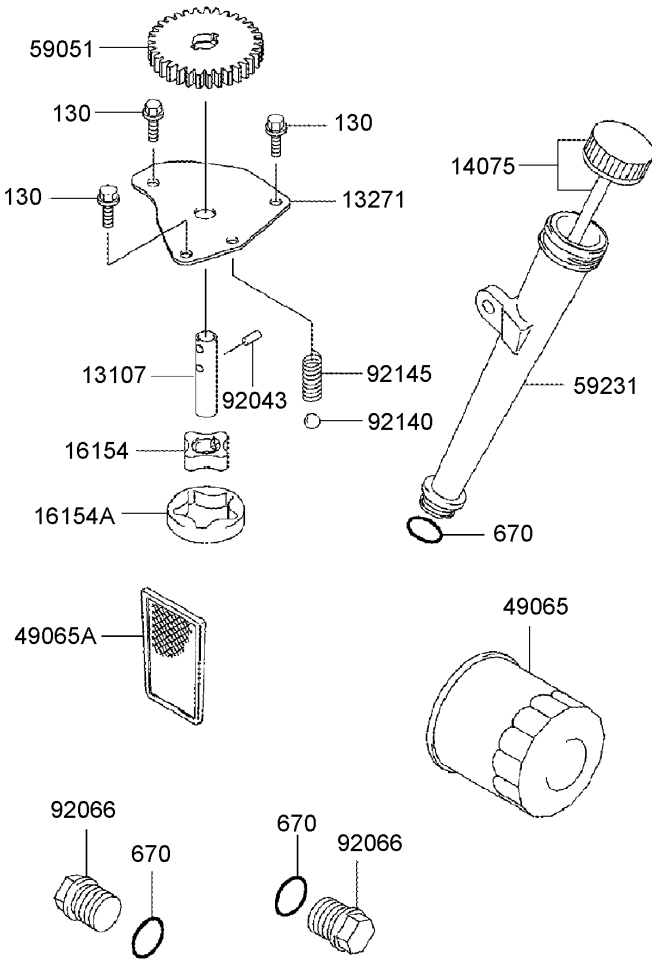 

Lubrication Equipment Assembly
Kawasaki FH541V-AS30


Ref	Part No.	Qty.	Description				
13107	13107-7009	1	Shaft				
13271	13271-7017	1	Plate				
14075	14075-7009	1	Cap-Assy				
16154	16154-2053	1	Rotor-Pump,in				
16154A	16154-2054	1	Rotor-Pump,out				
49065	49065-2078	1	Filter-Oil				
49065A	49065-7004	1	Filter-Oil				
59051	59051-7011	1	Gear-Spur				
59231	59231-7005	1	Filler				
92043	92043-7003	2	Pin				
92066	92066-7003	2	Plug				
92140	92140-7003	1	Ball				
92145	92145-7002	1	Spring				
130	130B0612	3	Bolt-Flanged				
670	670D2016	3	O Ring,16mm				

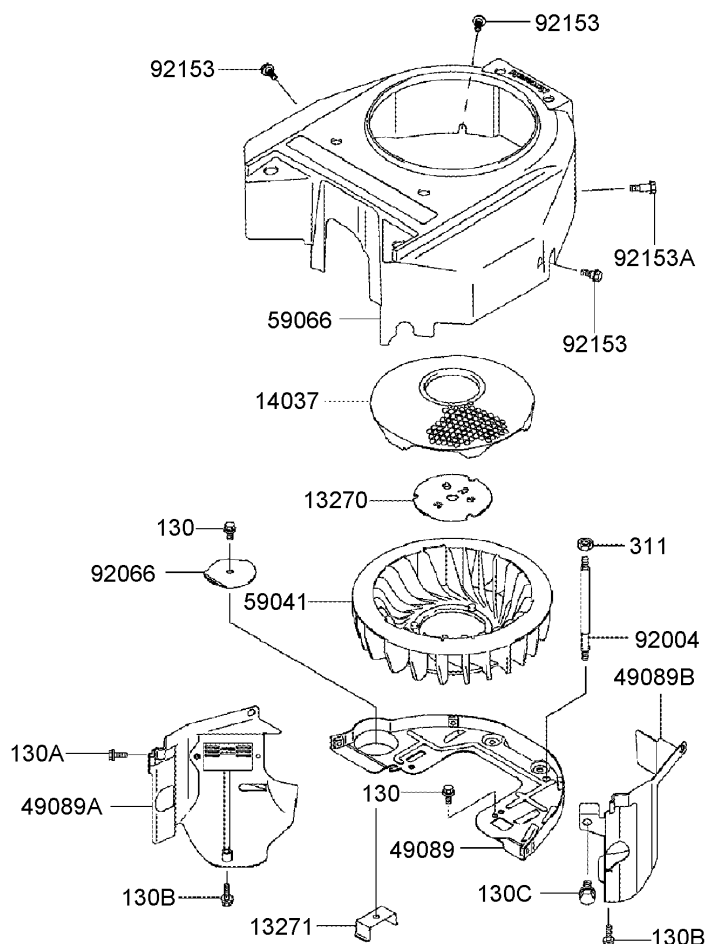 

Cooling Equipment Assembly


Kawasaki FH541V-AS30

Ref	Part No.	Qty.	Description				
③13270	13270-7007	1	Plate				
③13271	13271-7002	1	Plate				
③14037	14037-7021-9H	1	Screen				
③49089	49089-7032	1	Shroud-Engine				
③49089A	49089-7042	1	Shroud-Engine				
③49089B	49089-7043	1	Shroud-Engine				
③59041	59041-7010	1	Fan				
③59066	59066-7024	1	Housing-Fan				
③92004	92004-7006	2	Stud				
③92066	92066-7004	1	Plug				
③92153	92153-7007	3	Bolt				
③92153A	92153-7008	1	Bolt				
③130	130B0612	3	Bolt-Flanged				
③130A	130B0616	2	Bolt-Flanged				
③130B	130B0625	2	Bolt-Flanged				
③130C	130B0816	1	Bolt-Flanged				
③311	311B0600	2	Nut-Hex				

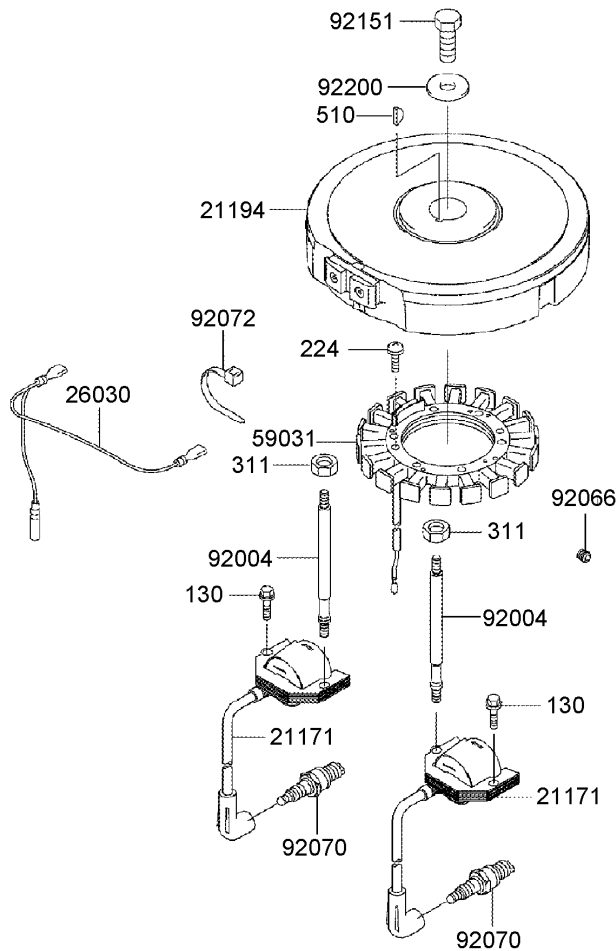 


Electric Equipment Assembly
Kawasaki FH541V-AS30

Ref	Part No.	Qty.	Description				
❶21171	21171-7013	2	Coil-Assy-Ignition				
❶21194	21194-7007	1	Flywheel-Comp				
❶26030	26030-7001	1	Harness				
❶59031	59031-7002	1	Coil-Charging				
❶92004	92004-7009	2	Stud				
❶92066	92066-7002	1	Plug				
❶92070	92070-7003	2	Plug-Spark,rcj8y,solid				
❶92072	92072-7003	2	Band				
❶92151	92151-2097	1	Bolt,12x30				
❶92200	92200-7002	1	Washer				
❶130	130B0620	2	Bolt-Flanged				
❶224	224B0520	4	Screw-Pan-Wp-Cros				
❶311	311B0600	2	Nut-Hex				
❶510	510A5100	1	Key-Woodruff				

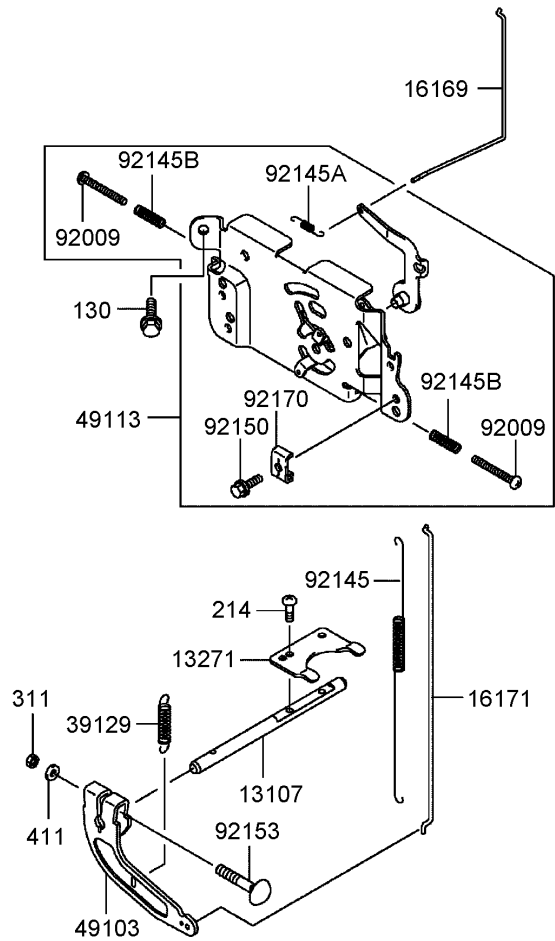 


Control Equipment Assembly
Kawasaki FH541V-AS30

Ref	Part No.	Qty.	Description				
13107	13107-7010	1	Shaft				
13271	13271-7018	1	Plate				
16169	16169-7010	1	Link-Choke				
16171	16171-7001	1	Link				
39129	39129-7003	1	Spring-Governor				
49103	49103-7004	1	Arm-Governor				
49113	49113-7027	1	Panel-Control, Comp				
92009	92009-7007	2	Screw,4x35				
92145	92145-7003	1	Spring				
92145A	92145-7004	1	Spring				
92145B	92145-7005	2	Spring				
92150	92150-2182	1	Bolt,5x18				
92153	92153-7005	1	Bolt,6x35				
92170	92170-7001	1	Clamp				
130	130B0612	2	Bolt-Flanged				
214	214B0408	2	Screw-Pan+-				
311	311B0600	1	Nut-Hex				
411	411b0600	1	Washer-Plain				

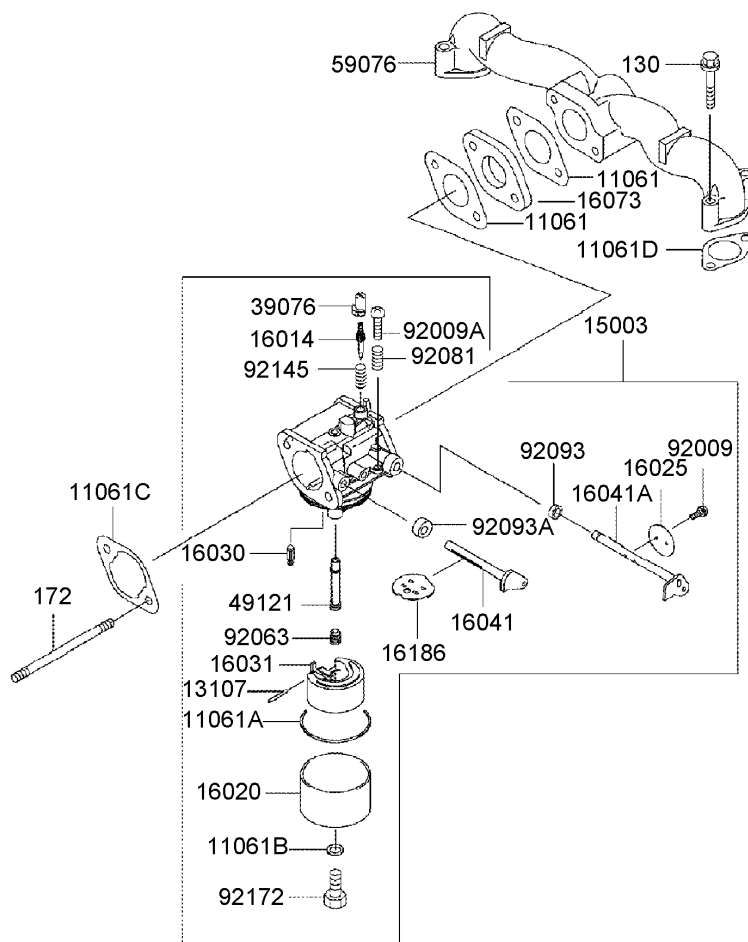 


Carburetor Assembly Kawasaki FH541V-AS30

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
⑤11061	11061-7004	2	Gasket,insulator	⑤92093A	92093-7003	1	Seal
⑤11061A	11061-7009	1	Gasket,chamber	⑤92145	92145-7015	1	Spring
⑤11061B	11061-7010	1	Gasket,screw	⑤92172	92172-7002	1	Screw
⑤11061C	11061-7018	1	Gasket,air Cleaner	⑤130	130B0635	4	Bolt-Flanged
⑤11061D	11061-7019	2	Gasket	⑤172	172G0690	2	Bolt-Stud
⑤13107	13107-7018	1	Shaft				
⑤15003	15003-7107	1	Carburetor ASM				
⑤16014	16014-7007	1	Screw-Pilot, Air				
⑤16020	16020-7003	1	Chamber-Float				
⑤16025	16025-7006	1	Valve-Throttle				
⑤16030	16030-7003	1	Valve-Float				
⑤16031	16031-7002	1	Float				
⑤16041	16041-7016	1	Shaft-Carburetor,choke				
⑤16041A	16041-7018	1	Shaft-Carburetor,throttle				
⑤16073	16073-7007	1	Insulator				
⑤16186	16186-7004	1	Valve-Assy-Choke				
⑤39076	39076-7001	1	Limiter				
⑤49121	49121-7010	1	Nozzle-Main				
⑤59076	59076-7001	1	Manifold-Intake				
⑤92009	92009-2083	2	Screw				
⑤92009A	92009-2349	1	Screw				
⑤92063	92063-7065	1	Jet-Main, #112				
⑤92081	92081-2234	1	Spring				
⑤92093	92093-2100	1	Seal				

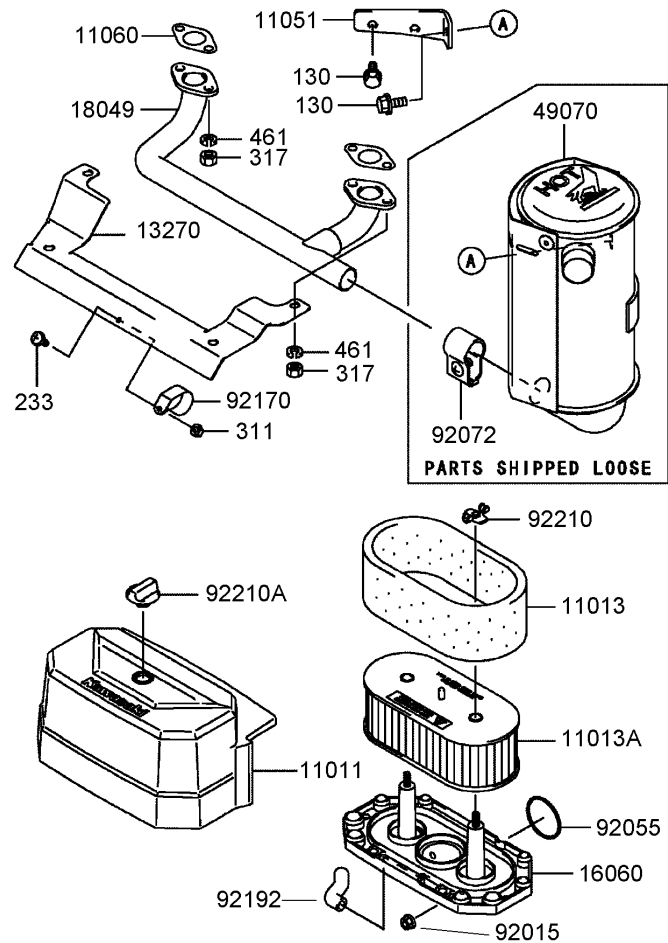 


Muffler and Air Filter Assembly
Kawasaki FH541V-AS30

Ref	Part No.	Qty.	Description				
❸11011	11011-7036	1	Case-Filter, Air				
❸11013	11013-7025	1	Element-Filter, Air				
❸11013A	11013-7031	1	Element-Filter, Air				
❸11051	11051-7005-9H	1	Bracket				
❸11060	11060-7021	2	Gasket,muffler				
❸13270	13270-7008	1	Plate				
❸16060	16060-7016	1	Pipe-Intake				
❸18049	18049-7001	1	Pipe-Exhaust				
❸49070	49070-7015	1	Muffler-Comp				
❸92015	92015-1193	2	Nut				
❸92055	92055-7015	1	O-Ring				
❸92072	92072-7008	1	Band				
❸92170	92170-7002	1	Clamp				
❸92192	92192-7010	1	Tube				
❸92210	92210-7004	2	Nut				
❸92210A	92210-7019	1	Nut				
❸130	130B0816	2	Bolt-Flanged				
❸233	233B0416	1	Screw-Pan-Wp+-				
❸311	311B0400	1	Nut-Hex				
❸317	317R0800	4	Nut-Hex-Small				
❸461	461F0800	4	Washer-Spring				

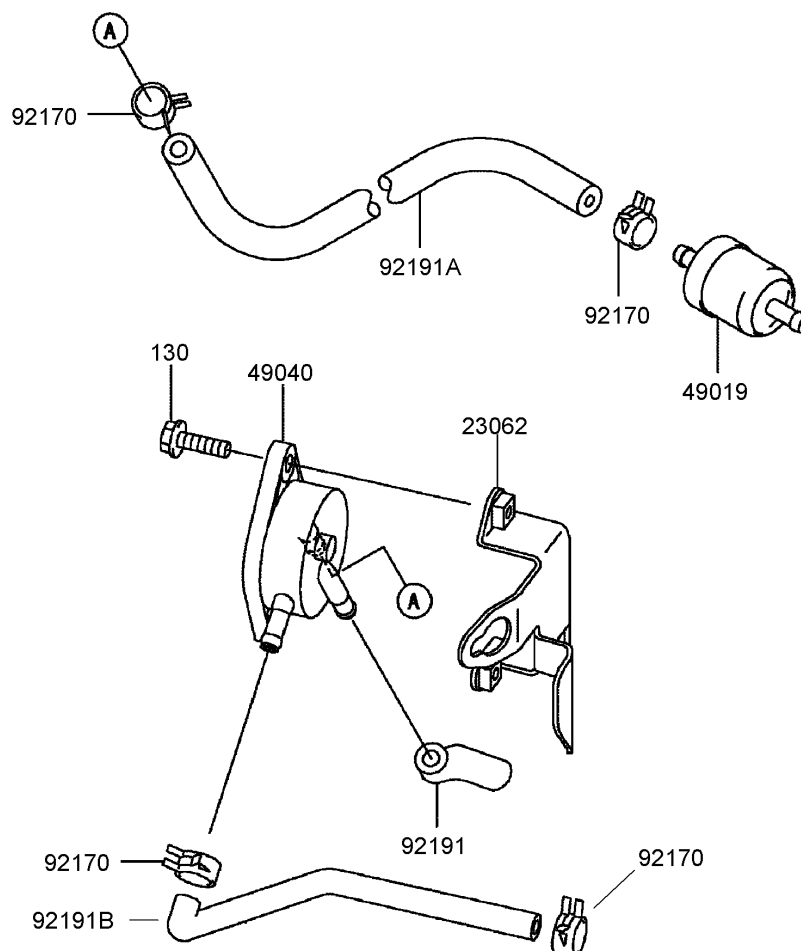 

Fuel Tank/Fuel Valve Assembly Kawasaki FH541V-AS30


Ref	Part No.	Qty.	Description				
③23062	23062-7004-9H	1	Bracket-Comp				
③49019	49019-7001	1	Filter-Fuel				
③49040	49040-7001	1	Pump-Fuel				
③92170	92170-2088	4	Clamp				
③92191	92191-7002	1	Tube				
③92191A	92191-7003	1	Tube,6.35x12.7x160				
③92191B	92191-7004	1	Tube				
③130	130B0620	2	Bolt-Flanged				

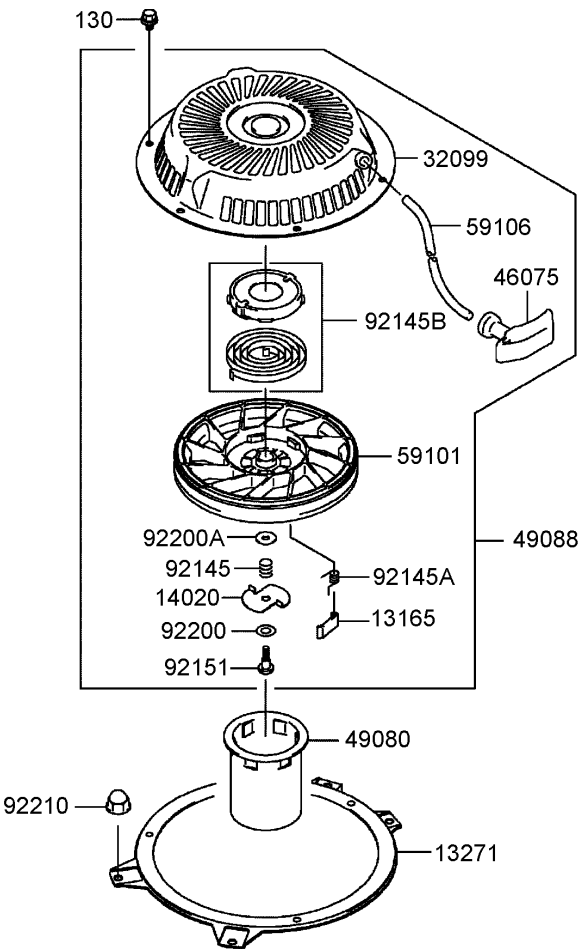 

Starter Assembly
Kawasaki FH541V-AS30

Ref	Part No.	Qty.	Description				
❸ 13165	13165-7001	2	Pawl-Starter, Recoil				
❸ 13271	13271-7003-9H	1	Plate				
❸ 14020	14020-7001	1	Retainer				
❸ 32099	32099-7002	1	Case-Starter, Recoil				
❸ 46075	46075-7001	1	Grip-Recoil, Starter				
❸ 49080	49080-7001	1	Pulley-Starting				
❸ 49088	49088-7013	1	Starter-Recoil				
❸ 59101	59101-7001	1	Reel-Recoil				
❸ 59106	59106-7001	1	Rope				
❸ 92145	92145-7006	1	Spring				
❸ 92145A	92145-7007	2	Spring				
❸ 92145B	92145-7008	1	Spring				
❸ 92151	92151-7008	1	Bolt				
❸ 92200	92200-7004	1	Washer				
❸ 92200A	92200-7005	1	Washer				
❸ 92210	92210-0003	4	Nut				
❸ 130	130B0608	3	Bolt-Flanged				

 56033

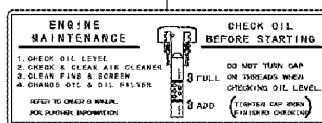


56070



56080



 56080A



Decal Assembly Kawasaki FH541V-AS30

Ref	Part No.	Qty.	Description
⑤56033	56033-7002	1	Label-Manual
⑤56070	56070-7001	1	Label-Warning
⑤56080	56080-2077	1	Label-Brand
⑤56080A	56080-7023	1	Label-Brand

