



Form No. 3477-773 Rev A

Count on it.

Parts Catalog

Titan® Max 60in Zero Turn Riding Mower

Model No. 76606—Serial No. 420200000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Frame Assembly. 4

Transaxle Assembly. 6

LH Hydro Assembly No. 161-6352 8

RH Hydro Assembly No. 161-6353 10

Styling Pod Assembly 12

Fuel Assembly 14

Fuel Tank Assembly No. 161-6234 16

Seat Pan Assembly 18

Seat Assembly No. 163-6014 20

Motion Control Assembly 22

Caster Wheel Assembly 24

Wheel and Tire Assembly 26

Electrical Assembly 28

Decklift Assembly 30

Engine and Muffler Assembly. 32


60 Inch Deck Assembly. 34

Decal Assembly No. 161-9768SP 36

Idler Arm Assembly No. 161-6406 38

Attachments and Accessories 40

Frame Assembly

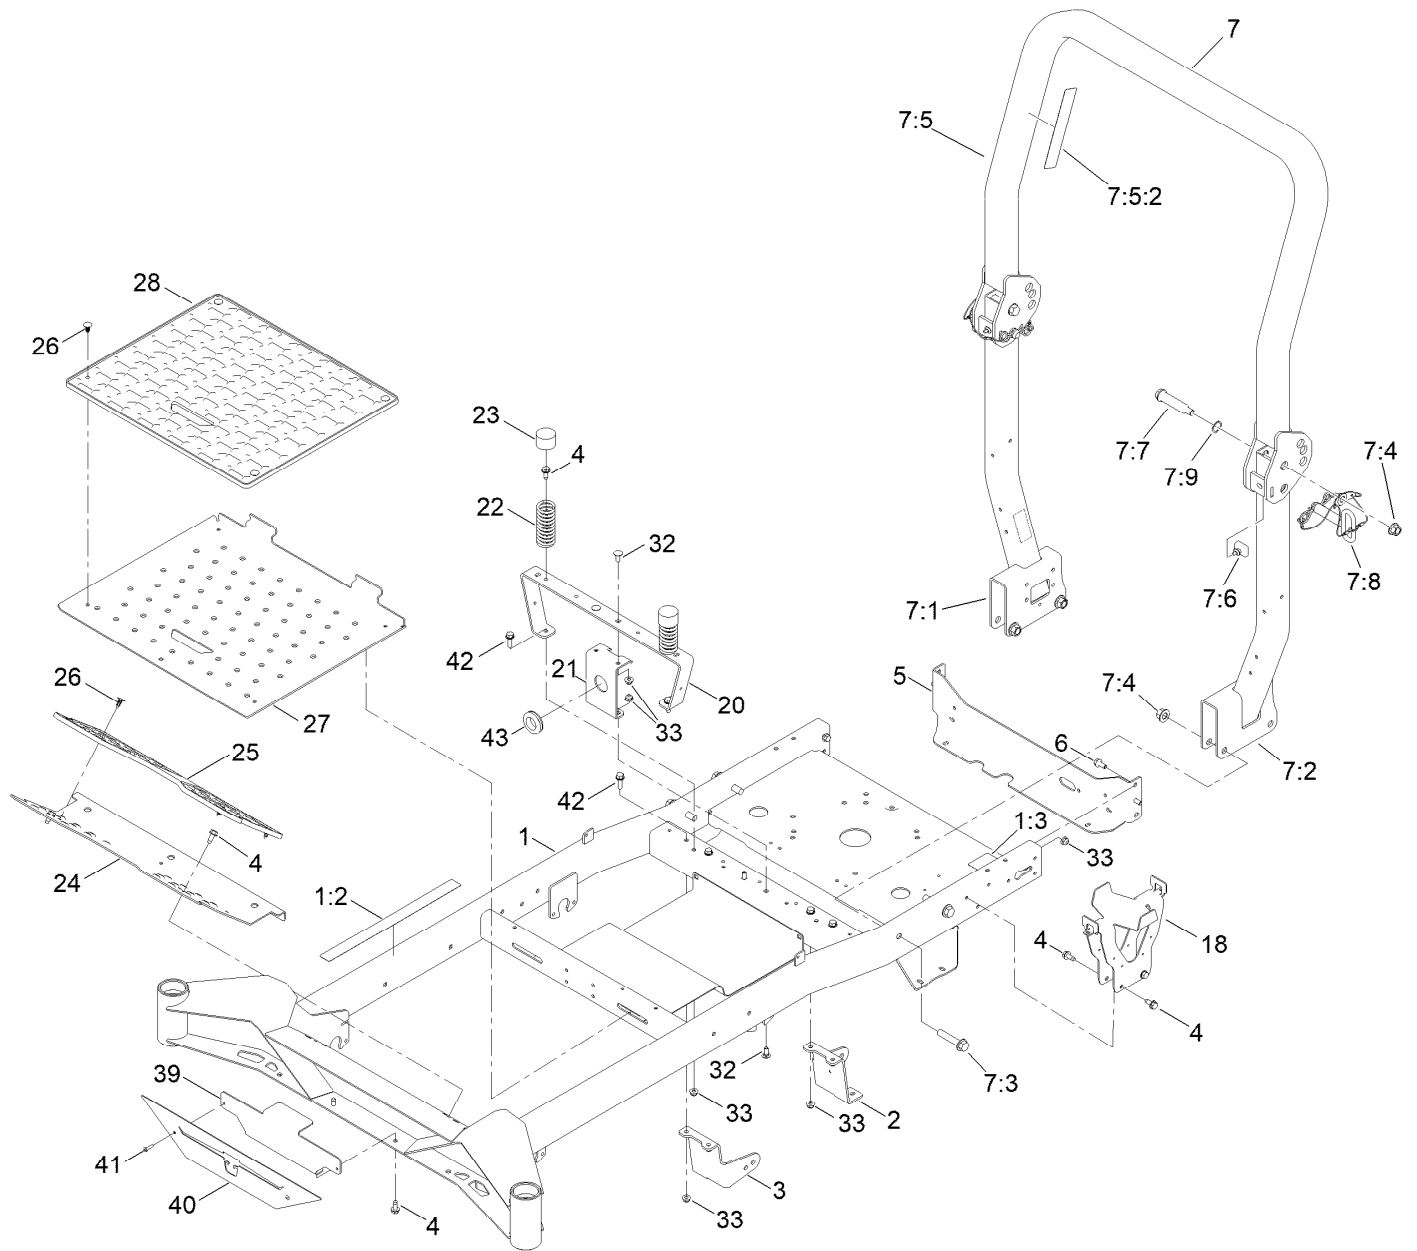


Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	163-2385	1	Frame W/Decals ASM	18	161-6314-03	1	Tray-Battery
1:2	161-6647	1	Decal-Warning	20	161-6318-03	1	Support-Seat
1:3	161-6207	1	Decal-Bypass	21	161-9738	1	Bracket-Latch, Frame (Mty/Btv)
2	161-6506-01	1	Mount-Drive, LH	22	138-2548	2	Spring-Compression
3	161-6507-01	1	Mount-Drive, RH	23	701178	2	Cap-Protector
4	32144-70	10	Screw-HWHTF	24	145-6369-01	1	Pan-Floor
5	163-3137-03	1	Plate-Mount, Rear	25	147-7611	1	Floor Mat - Titan
6	139-2598	4	Screw-HHF	26	117-2382	8	Plug-Plastic
7	164-0228	1	ASM-ROPS	27	145-6370-01	1	Pan-Floor
7:1		1	RH ROPS ASM [black] ●	28	147-7609	1	Floor Mat
7:2		1	LH ROPS ASM [black] ●	32	3230-23	4	Bolt-CARR
7:3	127-7444	4	Screw-HHF	33	104-8300	14	Nut-HF, NI
7:4	139-1689	6	Nut-HF	39	147-2878-01	1	Plate-Backer
7:5		1	Tube-ROPS, Upper ASM ●	40	147-2879-03	1	Logo-Plate-Front
7:5:2	107-3069	1	Decal-Warning	41	130-8451	2	Rivet-Trifold
7:6	109-5337	2	Bumper-ROPS	42	139-2596	6	Screw-HHF
7:7	161-4505	2	Bolt-Shoulder	43	108-3723	1	Grommet
7:8	161-4477	2	ROPS Pin ASM				
7:9	119-4164	2	Washer-Wave				

● Not serviced separately

Transaxle Assembly

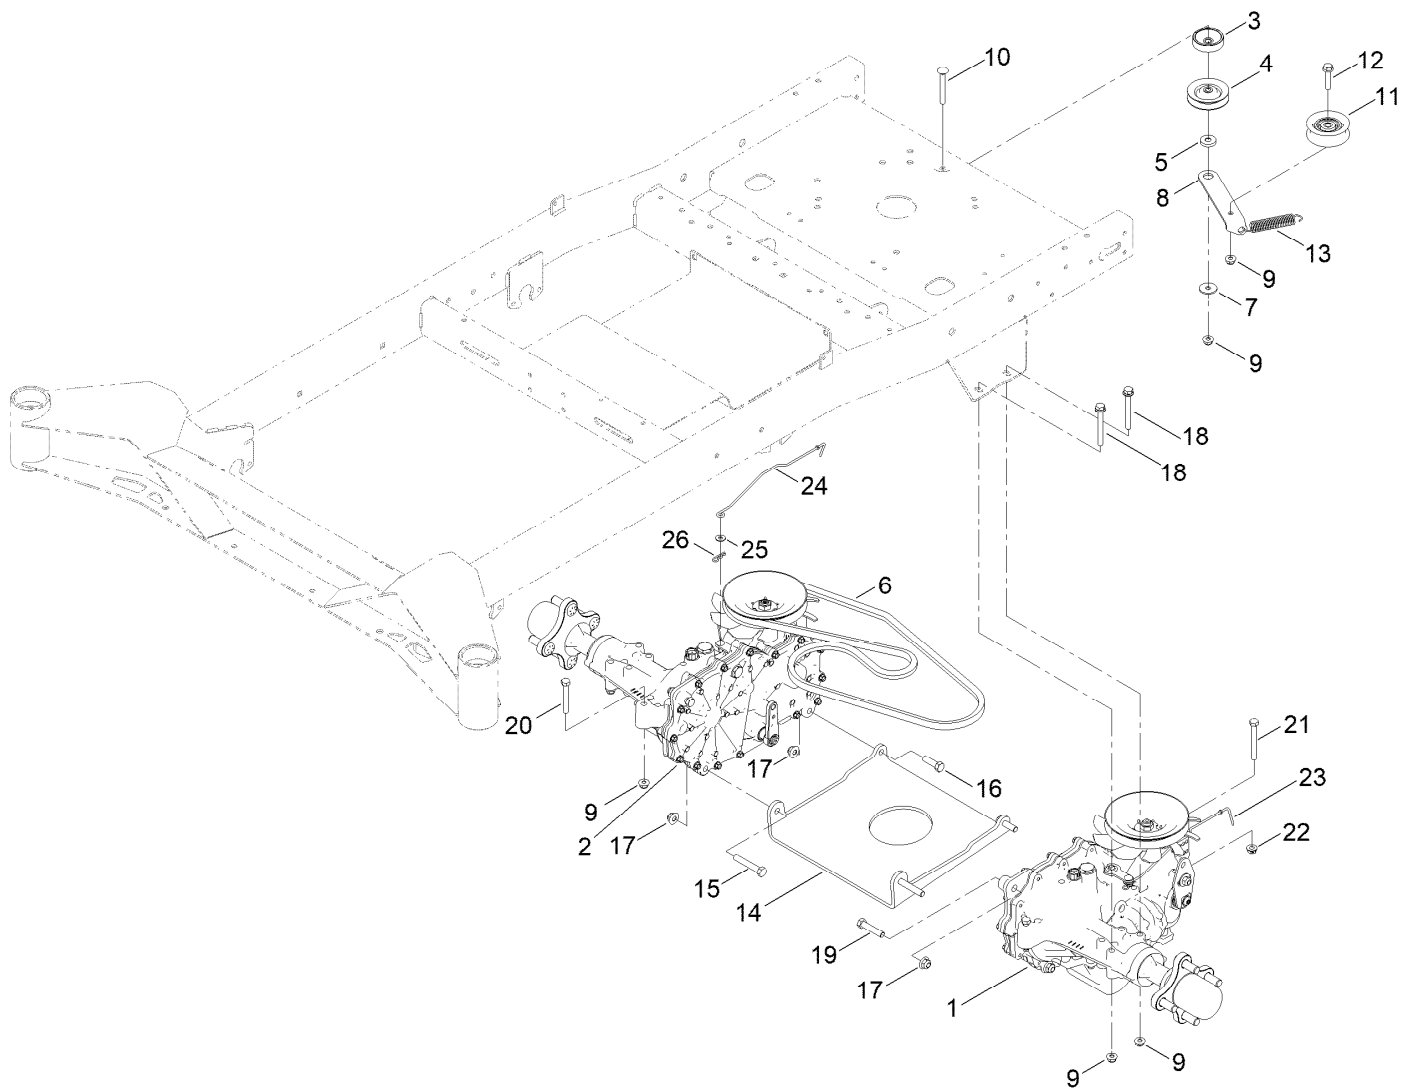

Transaxle Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	161-6352	1	LH Hydro Transaxle ASM	14	161-9754-03	1	Plate-Hydro
2	161-6353	1	RH Hydro Transaxle ASM	15	139-2589	2	Screw-HH
3	138-9809	1	Spacer	16	136-8684	2	Screw-HH
4	68-0030	1	Idler	17	119-4042	6	Nut-HF, NI
5	138-7277	1	Spacer-Arm, Idler	18	138-7590	4	Screw-HHF
6	145-6363	1	V-Belt (A Sec 66.30 EI)	19	139-2602	2	Screw-HH
7	5-4460	1	Washer-Pivot	20	322-11	2	Screw-HH
8	147-2925	1	Arm-Idler	21	145-6388	2	Screw-HH Spcl
9	119-4041	8	Nut-HF	22	139-2574	2	Nut-HF
10	139-2588	1	Screw-CARR	23	147-2987	1	Rod-Bypass, LH
11	138-7597	1	Pulley-Idler, Flat	24	147-2986	1	Rod-Bypass, RH
12	140-5024	1	Screw-HHF	25	119-8952	2	Washer-Spcl
13	137-7040	1	Spring-Return, Pedal	26	137-3083	2	Pin-Hair

LH Hydro Assembly No. 161-6352

Items Not Shown


14 Oil, 20W50

13 Sealant

200 Seal Kit

Parts Included in 200 Seal Kit:

10,30,31,33,35,41,56,57,71,103,
130,157.

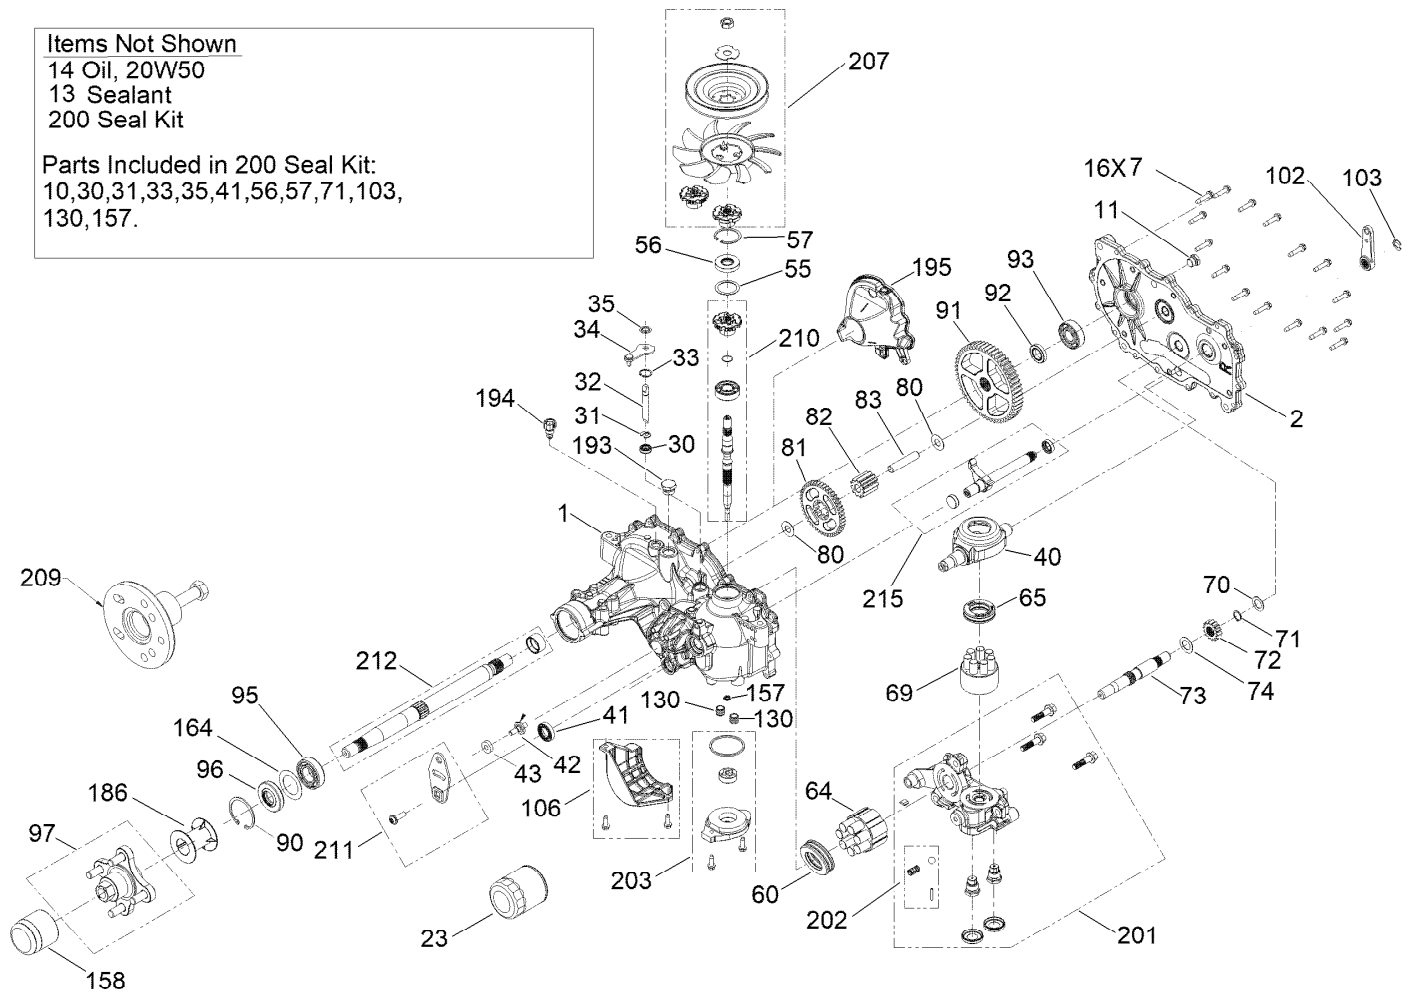

LH Hydro Assembly No. 161-6352 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	140-8345	1	RH Main Housing Kit	81	114-1692	1	Gear-45T
2	140-8349	1	RH Side Cover Kit	82	120-7974	1	Gear-11T
7	117-5359	1	Screw-HHF	90	104-2169	1	Ring-Retaining
11	135-1140	1	Plug-Straight	91	114-1694	1	Gear-54T
13	104-2147	1	Sealant, Silicone - Non-Flammable	92	120-7975	1	Spacer
23	109-3321	1	Element-Oil Filter, HYD	93	135-1361	1	Bearing-Ball
30	139-7497	1	Seal-Lip	95	130-8477	1	Bearing-Ball
31	106-8677	1	Ring-Retaining, External	96	104-2144	1	Seal
32	114-1685	1	Rod-Bypass	97	116-3872	1	Hub-Offset
33	106-8679	1	Ring-Retaining, Internal	102	125-0021	1	Handle-Brake
34	112-9852	1	Arm-Bypass	103	131-0906	1	Ring-Retaining, EXT
35	106-8681	1	Ring-Retaining, External	106	139-7499	1	Filter Guard Kit
40	104-5304	1	Swashplate-Trunnion	130	126-3251	1	Tube-Charge
41	104-5313	1	Seal-Lip	157	126-1930	1	Gerotor Seal Kit
42	104-2116	1	Stud	158	116-6214	1	Cap-Axle, Long
43	112-9853	1	Puck-Friction	164	121-5745	1	Spacer
55	104-5308	1	Spacer	186	116-6213	1	Tube-Axle
57	104-5309	1	Ring-Retaining	193	140-8343	1	Plug
60	112-4154	1	Bearing-Thrust	194	140-8356	1	Breather Fitting ASM
64	139-4074	1	Cylinder Block ASM Kit	195	140-8357	1	RH Internal Expansion Tank ASM
65	94-6922	1	Bearing-Thrust	200	140-8351	1	Seal Kit
69	110-8561	1	Pump Block ASM	202	114-8464	1	Charge Relief Kit
70	104-5339	1	Washer-Flat	203	114-8465	1	Charge Kit
71	104-5340	1	Ring-Retaining	207	135-7343	1	Fan And Pulley Kit
72	131-0905	1	Gear-14T	209	114-8467	1	Puller-Hub, 4 Bolt
73	114-1691	1	Shaft-Motor	210	139-7502	1	Input Shaft Kit
74	104-5360	1	Washer	211	117-5362	1	Control Arm Kit
80	94-1933	1	Washer	215	140-8352	1	Inboard Kit

RH Hydro Assembly No. 161-6353


Items Not Shown

14 Oil, 20W50

13 Sealant

200 Seal Kit


Parts Included in 200 Seal Kit:
10,30,31,33,35,41,56,57,71,103,
130,157.

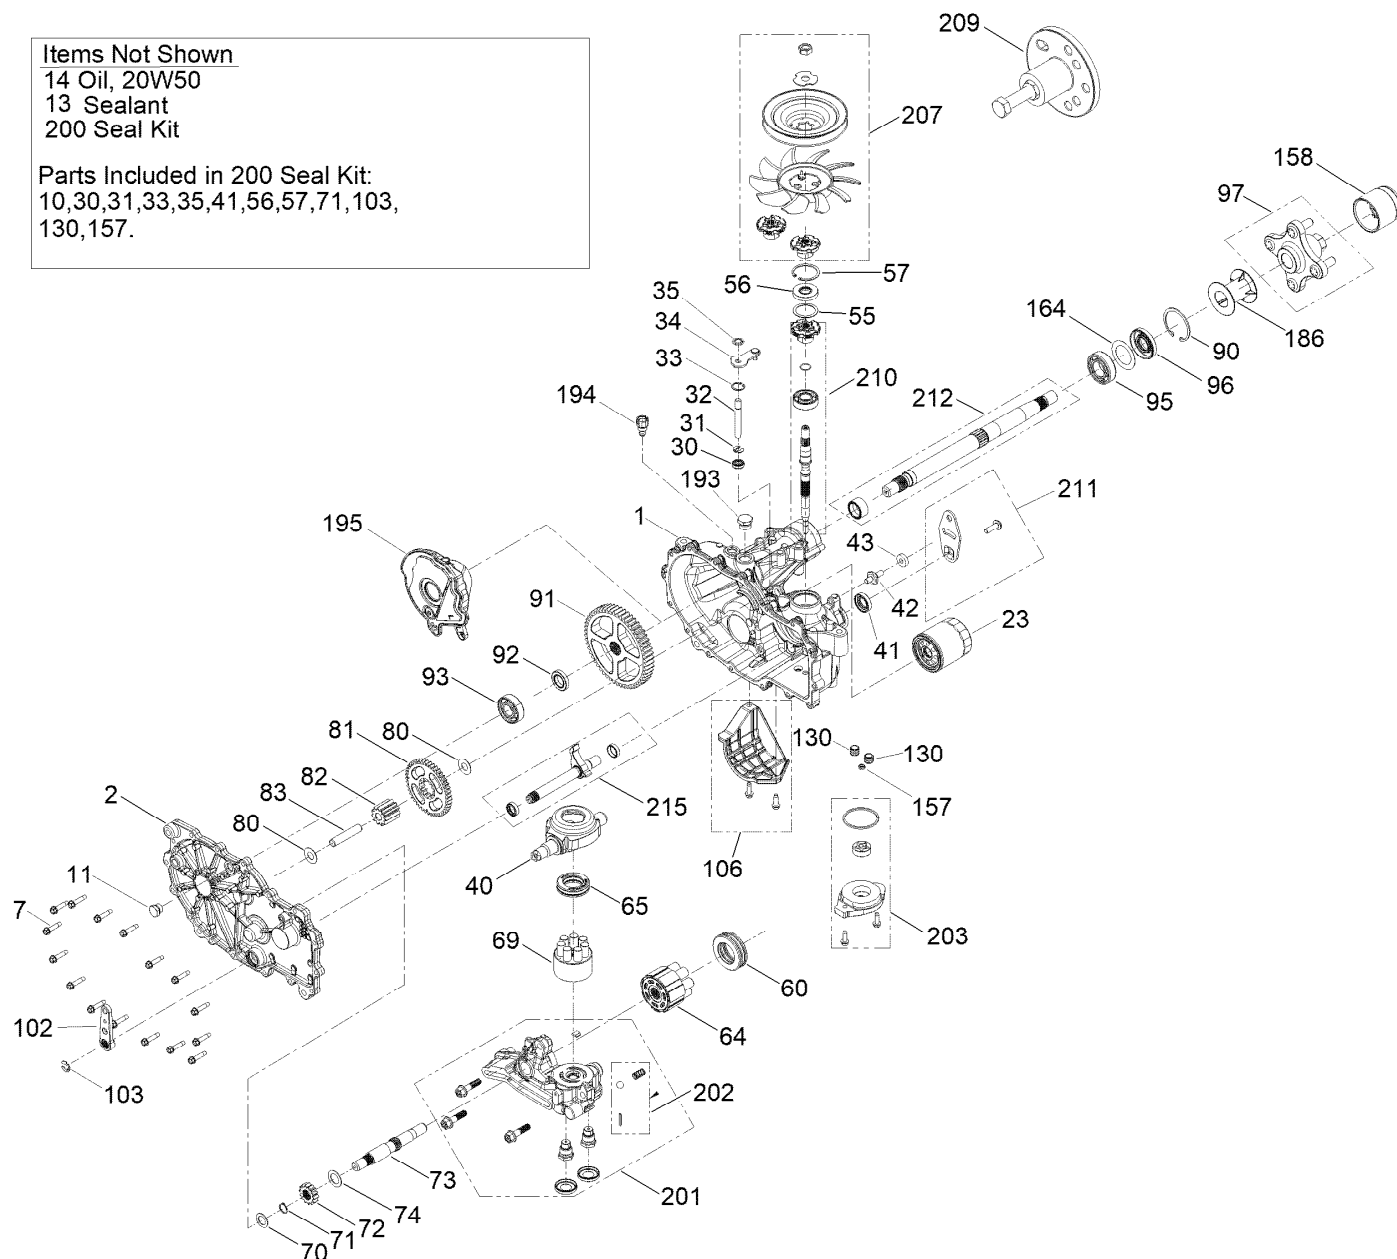

RH Hydro Assembly No. 161-6353 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	140-8347	1	LH Main Housing Kit	81	114-1692	1	Gear-45T
2	140-8350	1	LH Side Cover Kit	82	120-7974	1	Gear-11T
7	117-5359	1	Screw-HHF	90	104-2169	1	Ring-Retaining
11	135-1140	1	Plug-Straight	91	114-1694	1	Gear-54T
13	104-2147	1	Sealant, Silicone - Non-Flammable	92	120-7975	1	Spacer
23	109-3321	1	Element-Oil Filter, HYD	93	135-1361	1	Bearing-Ball
30	139-7497	1	Seal-Lip	95	130-8477	1	Bearing-Ball
31	106-8677	1	Ring-Retaining, External	96	104-2144	1	Seal
32	114-1685	1	Rod-Bypass	97	116-3872	1	Hub-Offset
33	106-8679	1	Ring-Retaining, Internal	102	125-0021	1	Handle-Brake
34	107-2490	1	Arm-Bypass	103	131-0906	1	Ring-Retaining, EXT
35	106-8681	1	Ring-Retaining, External	106	139-7498	1	Filter Guard Kit
40	104-5304	1	Swashplate-Trunnion	130	126-3251	1	Tube-Charge
41	104-5313	1	Seal-Lip	157	126-1930	1	Gerotor Seal Kit
42	104-2116	1	Stud	158	116-6214	1	Cap-Axle, Long
43	112-9853	1	Puck-Friction	164	121-5745	1	Spacer
55	104-5308	1	Spacer	186	116-6213	1	Tube-Axle
57	104-5309	1	Ring-Retaining	193	140-8343	1	Plug
60	112-4154	1	Bearing-Thrust	194	140-8356	1	Breather Fitting ASM
64	139-4074	1	Cylinder Block ASM Kit	195	140-8358	1	LH Internal Expansion Tank ASM
65	94-6922	1	Bearing-Thrust	200	140-8351	1	Seal Kit
69	110-8561	1	Pump Block ASM	202	114-8464	1	Charge Relief Kit
70	104-5339	1	Washer-Flat	203	114-8465	1	Charge Kit
71	104-5340	1	Ring-Retaining	207	135-7343	1	Fan And Pulley Kit
72	131-0905	1	Gear-14T	209	114-8467	1	Puller-Hub, 4 Bolt
73	114-1691	1	Shaft-Motor	210	139-7502	1	Input Shaft Kit
74	104-5360	1	Washer	211	117-5362	1	Control Arm Kit
80	94-1933	1	Washer	215	140-8353	1	Inboard Kit


Styling Pod Assembly

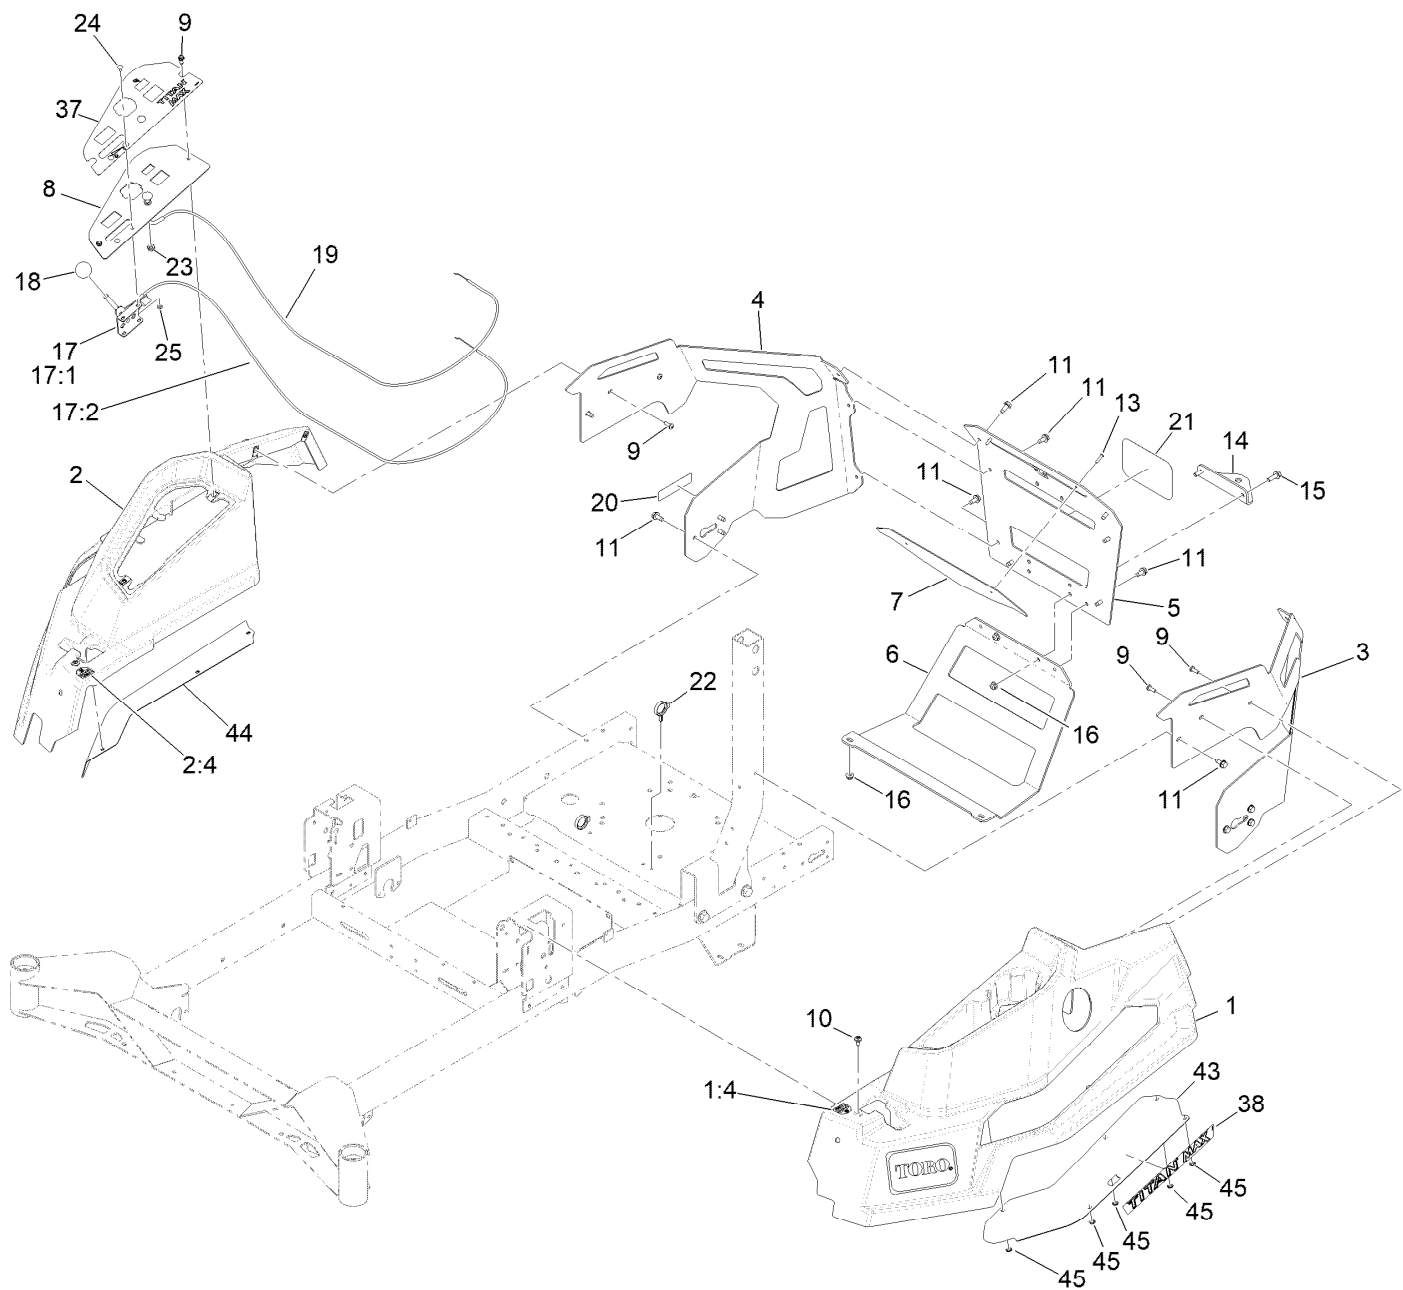

Styling Pod Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	161-6389	1	Titan Max LH Pod ASM	16	119-4041	4	Nut-HF
1:4	139-2395	1	Decal-Control Lever, LH	17	110-5727	1	Throttle Control ASM
2	161-6390	1	Titan Max RH Pod ASM	17:1	112-2334	1	Lever-Throttle
2:4	139-2394	1	Decal-Control Lever, RH	17:2	110-5728	1	Cable-Throttle
3	161-6315-01	1	Guard-Engine, LH	18	1-603175	1	Knob-Ball
4	161-6316-01	1	Guard-Engine, RH	19	144-2647	1	Cable-Choke Control
5	147-2998-03	1	Guard-Engine	20	142-5864	1	Decal-Spark Arrester
6	163-8620-03	1	Guard-Muffler, Titan	21	99-4693	1	Decal
7	147-2999-01	1	Plate-Backer	22	104-2490	2	Clamp-Hose
8	161-6203-03	1	Panel-Control	23	3220-3	1	Nut-HJ
9	138-0689	4	Screw-PH	24	135-1929	2	Bolt-CARR
9	49-2040	2	Screw-HWHTF	25	3296-2	2	Nut-Lock, NI
10	120-7950	2	Screw-Torx	37	161-9793	1	Decal-Panel, Control
11	32144-70	16	Screw-HWHTF	38	161-9794	2	Decal-Titan Max
13	130-8451	2	Rivet-Trifold	43	161-6293-01	1	Plate-Pod, LH
14	117-1232-03	1	Bracket-Hitch	44	161-6294-01	1	Plate-Pod, RH
15	139-2596	2	Screw-HHF	45	32112-6	10	Nut-Push


Fuel Assembly

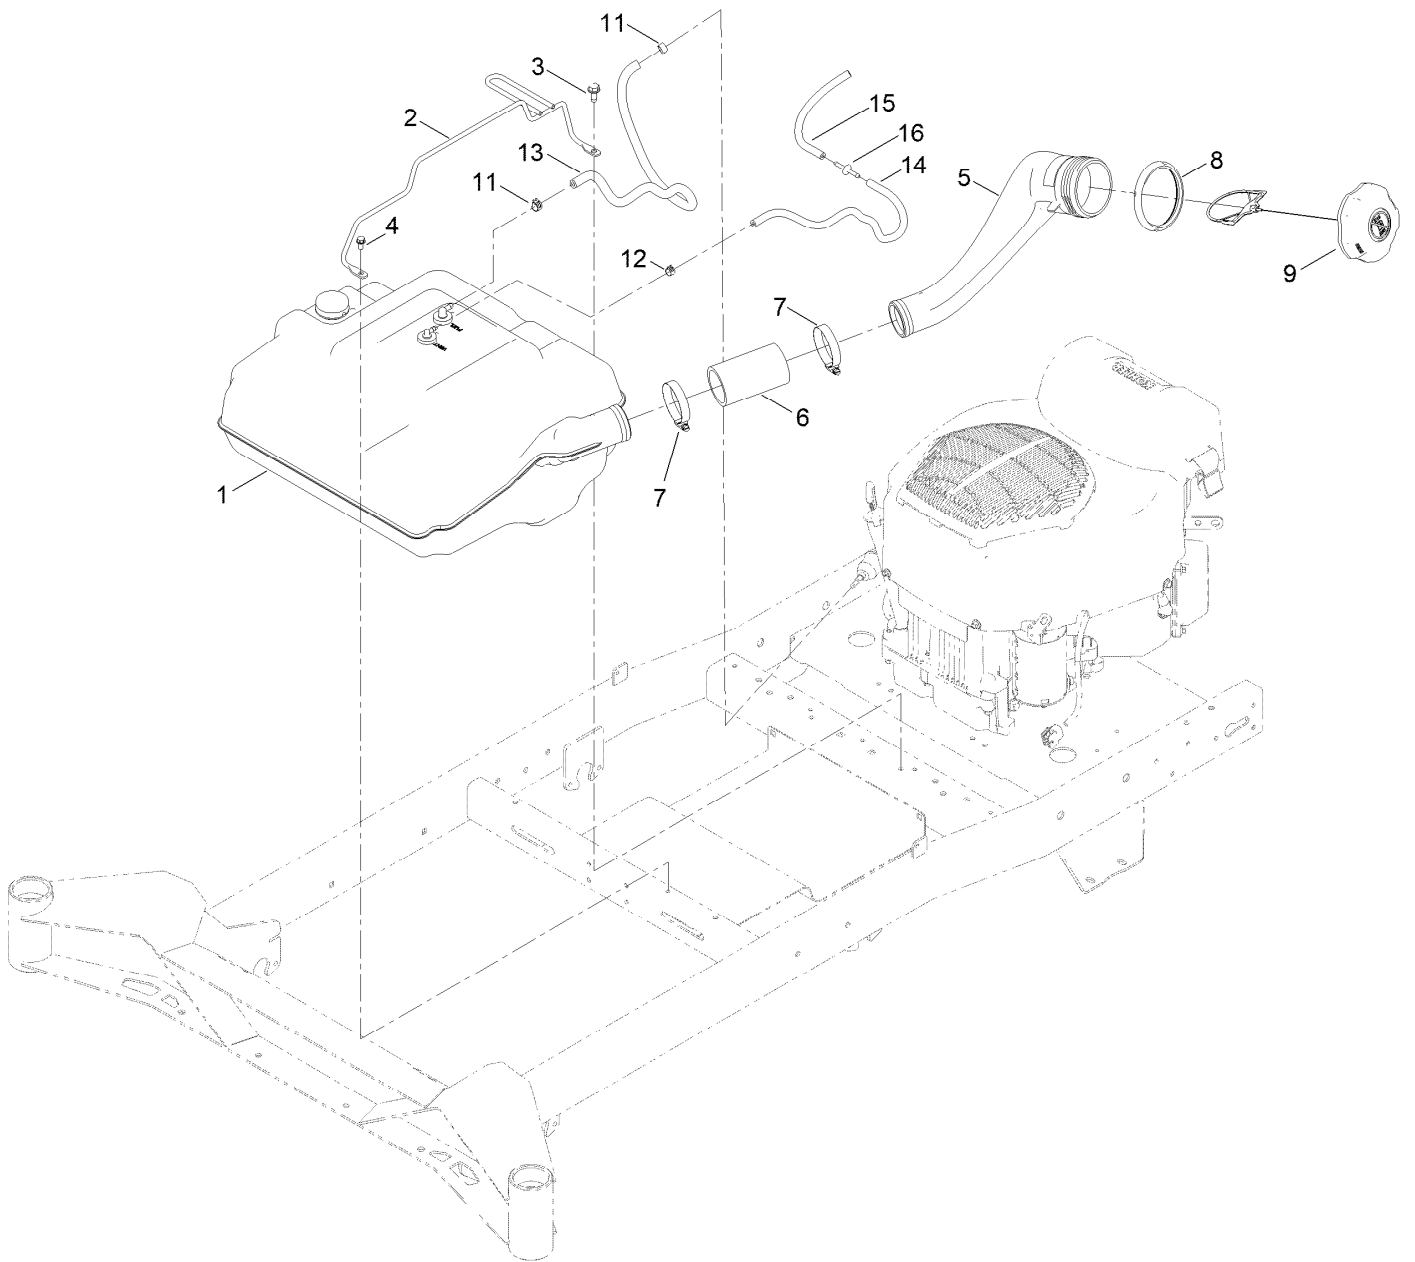

Fuel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	161-6234	1	Tank ASM-Fuel	9	163-5914	1	Cap Fuel, Ratcheting
2	161-6494	1	Hold Down ASM	11	2412-98	2	Clamp-Hose
3	32144-70	1	Screw-HWHTF	12	2412-80	1	Clamp-Hose
4	32144-4	1	Screw-HWH	13	110-1872	1	Hose-Fuel
5	161-6235	1	Neck-Filler, Fuel	14	143-2545	1	Hose-Fuel
6	145-4698	1	Hose-Filler, Fuel	15	121-3003	1	Hose-Fuel
7	2412-130	2	Clamp-Hose	16	144-1983	1	Adapter Orifice
8	147-7712	1	Ring-Retaining				

Fuel Tank Assembly No. 161-6234

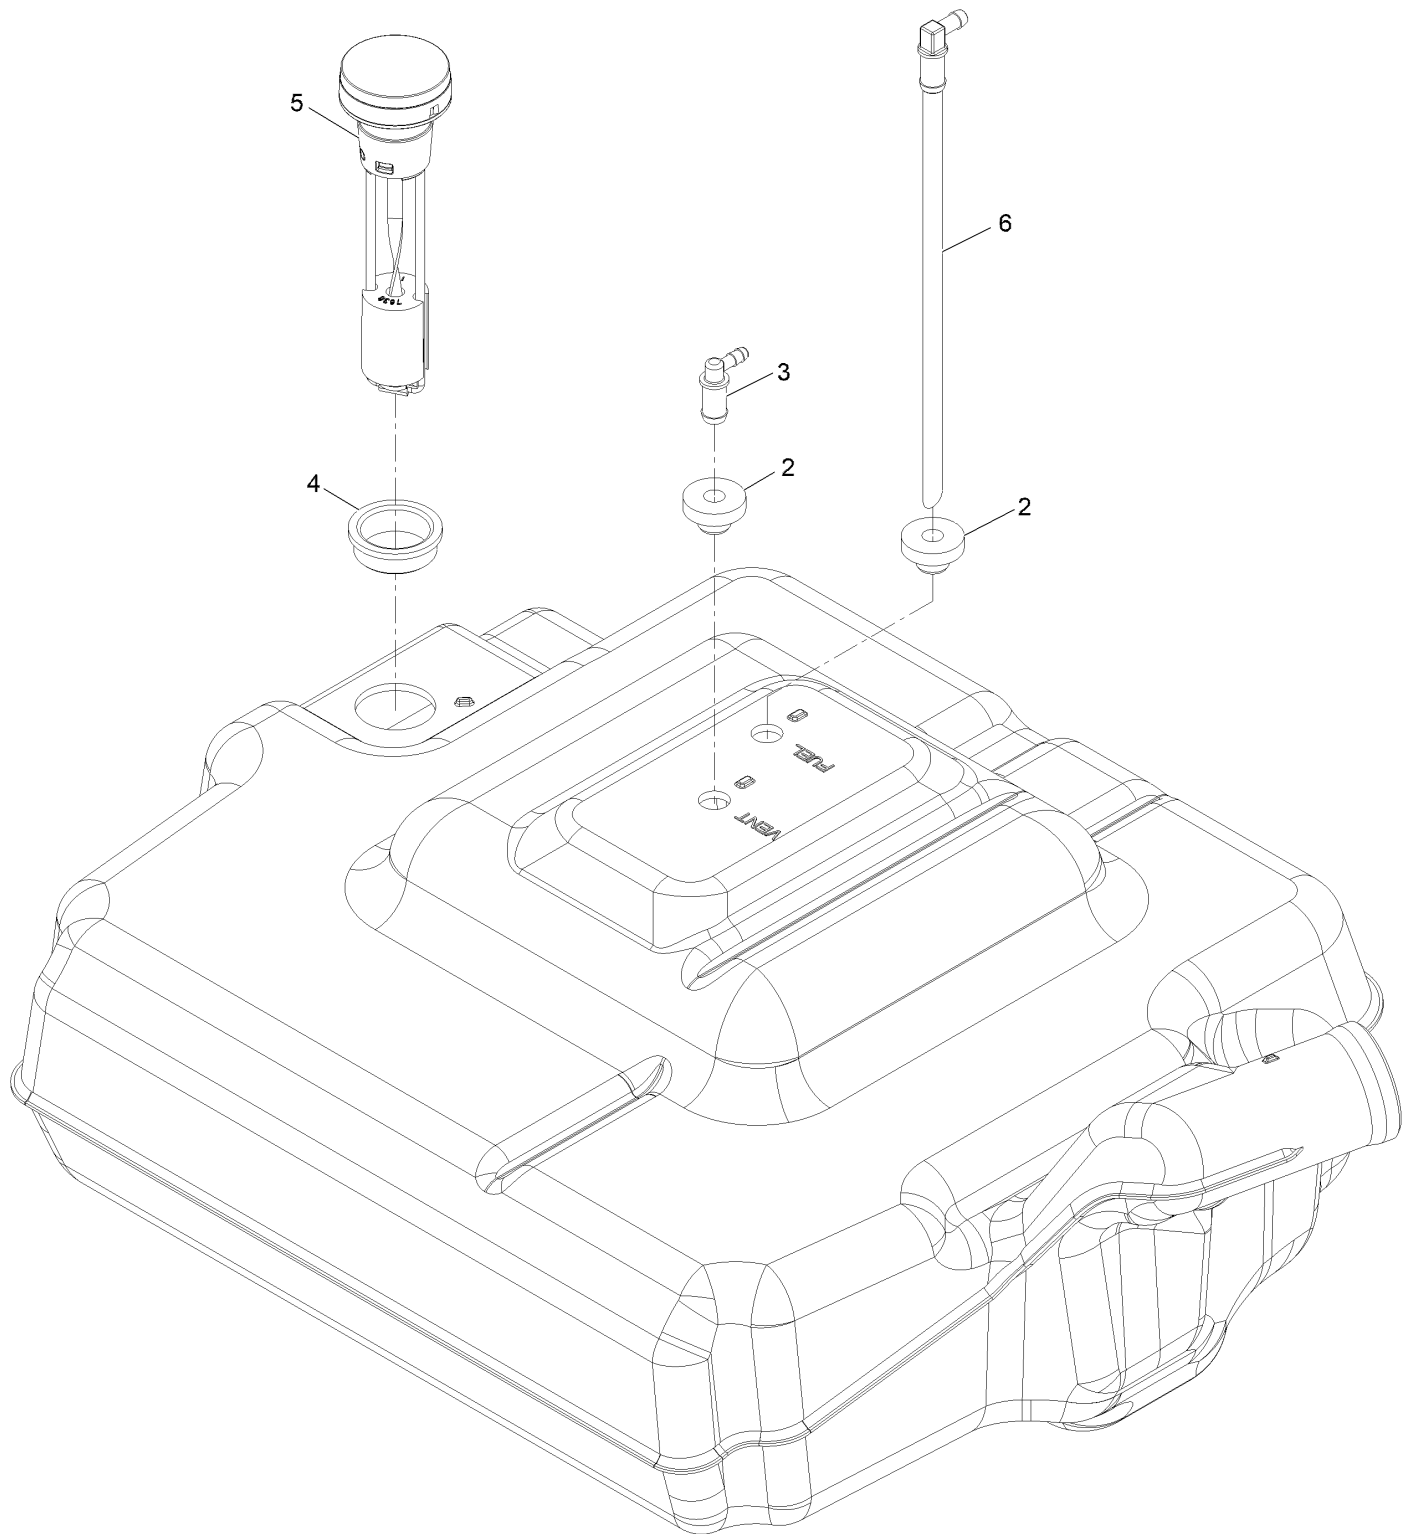


Fuel Tank Assembly No. 161-6234 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	46-6560	2	Bushing
3	161-6609	1	Fitting-Elbow 90
4	133-9269	1	Grommet-Fuel

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	161-6415	1	Remote Gauge ASM
6	161-6317	1	Fitting - Pickup, Fuel


Seat Pan Assembly

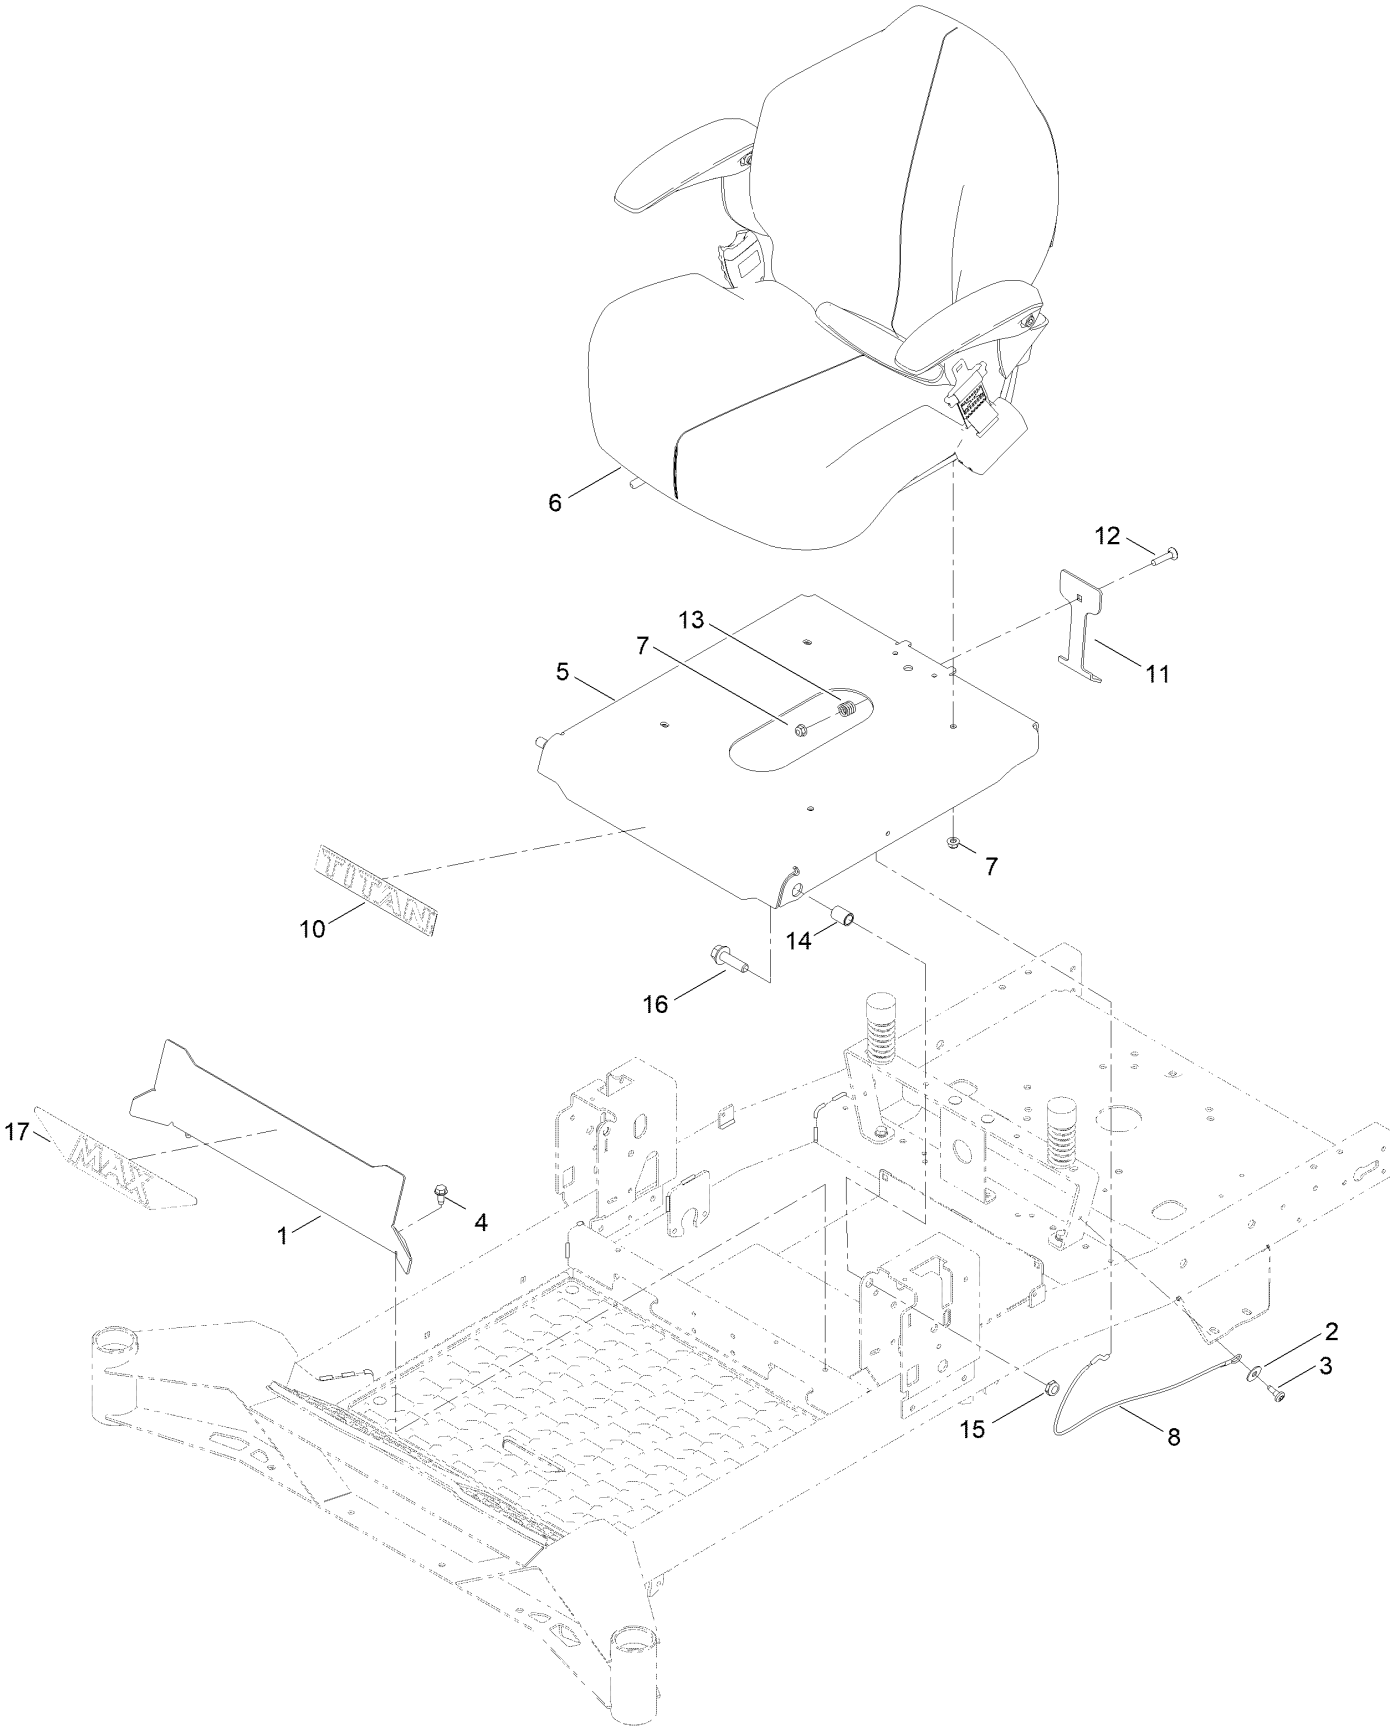

Seat Pan Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-5170-05	1	Plate-Kick	10	161-6624	1	Decal-Titan
2	147-5287	1	Washer-Flat	11	161-9731	1	Bracket-Latch, Seat (Mty)
3	135-2015	1	Screw-Shoulder	12	3230-4	1	Screw-CARR
4	32144-70	2	Screw-HWHTF	13	107-3017	1	Spring-Compression
5	161-9730-05	1	Pan-Seat	14	161-9735	2	Bushing-Pivot, Seat
6	163-6014	1	Seat ASM	15	3296-45	2	Nut-Hex
7	104-8300	5	Nut-HF, NI	16	130-6481	2	Screw-HHF
8	139-2398	1	Cable-Lanyard	17	161-6284	1	Decal- Tc Havoc

Seat Assembly No. 163-6014

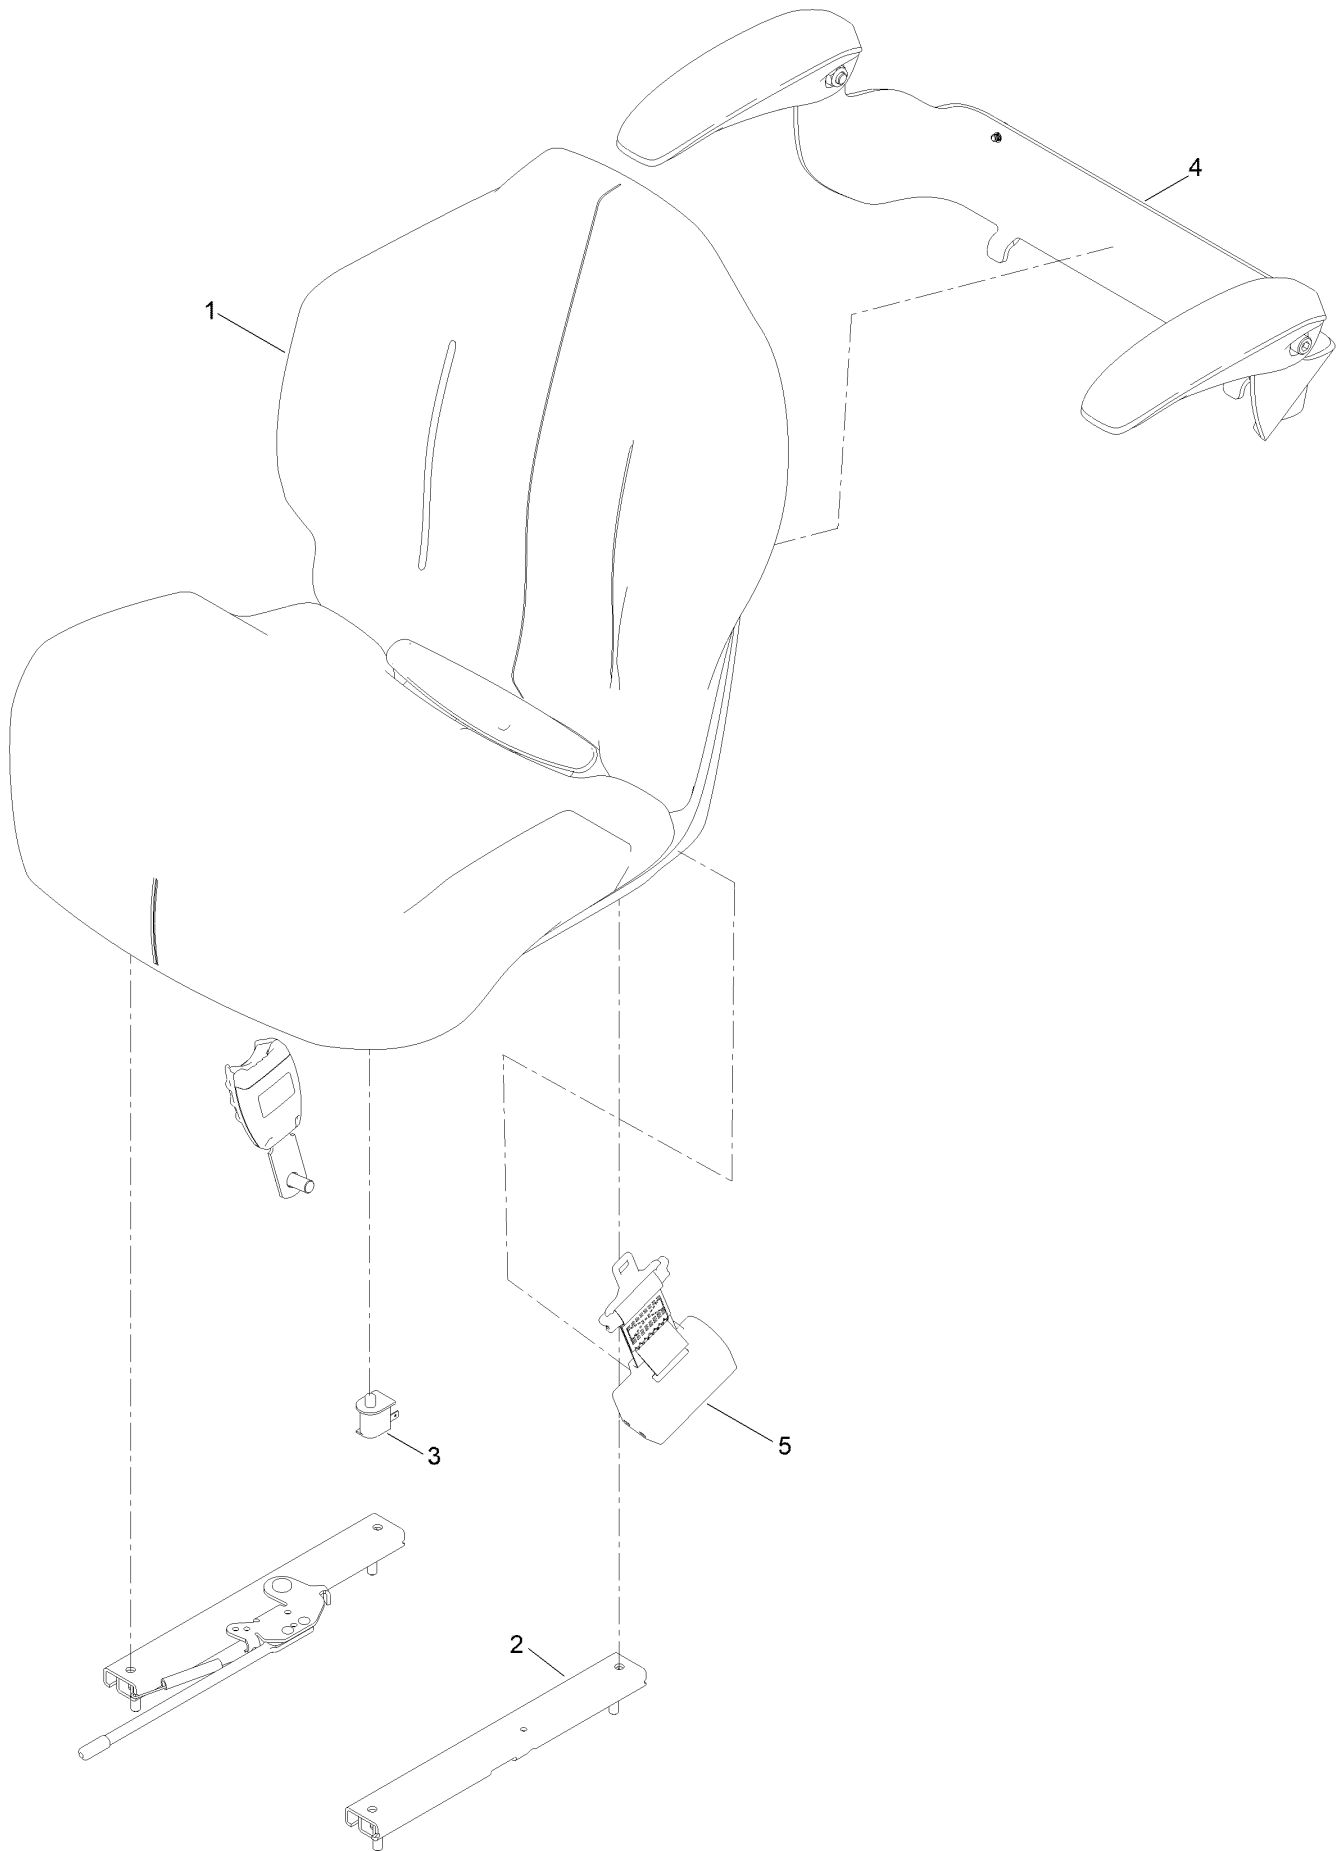


Seat Assembly No. 163-6014 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	163-6013	1	Seat ASM
2	161-4566	1	Kit-Adjuster
3	82-2190	1	Switch-Bail

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	161-4567	1	Kit-Arm Rest
5	109-9805	1	Seat Belt Kit
99	163-6015	1	Cover-Seat ●

● Not illustrated

Motion Control Assembly

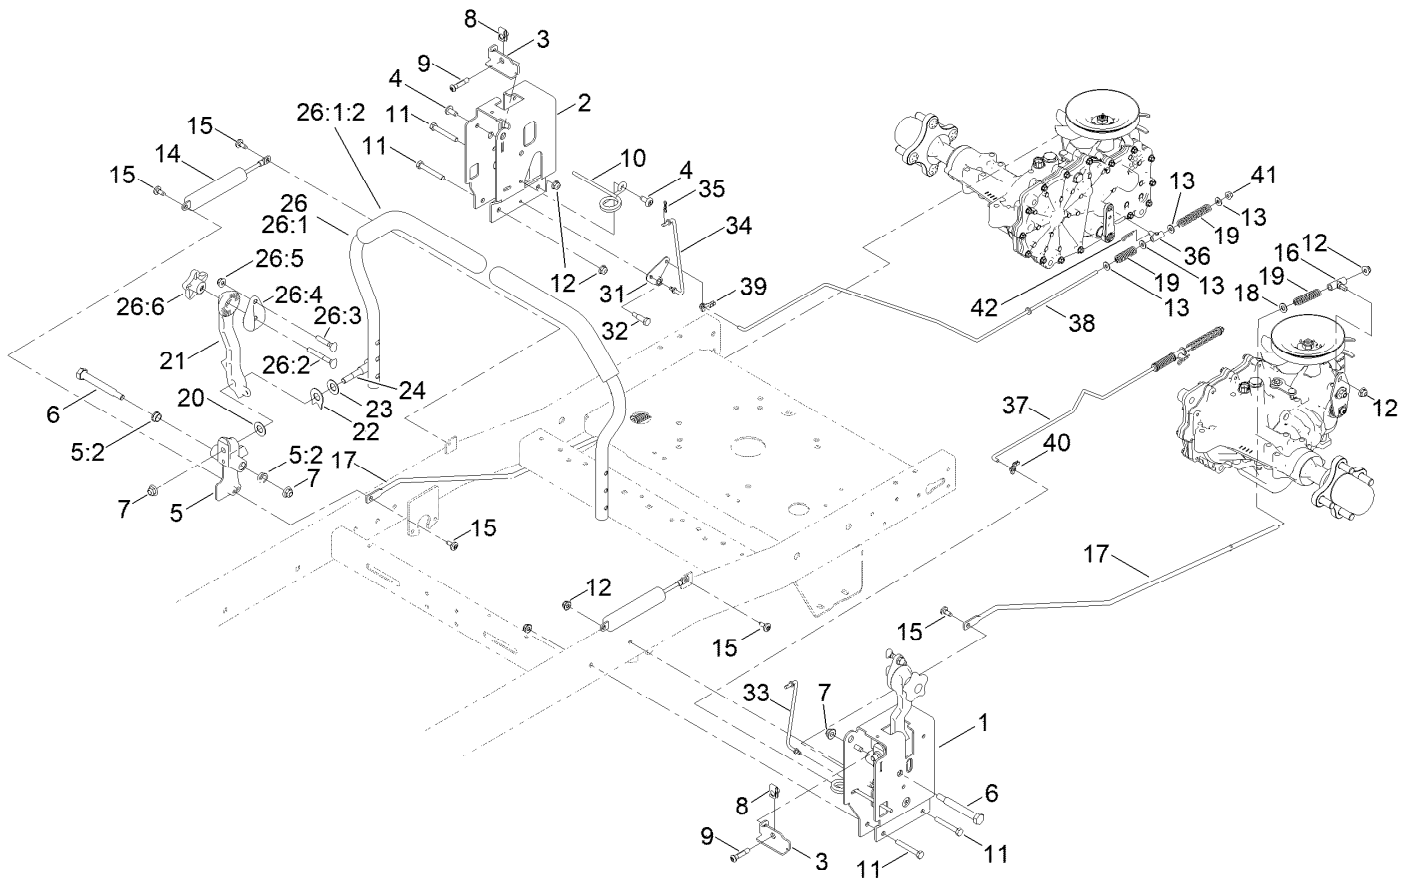


Motion Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-4615-03	1	Control Box - LH G7	23	119-8925	2	Washer-Belleville
2	145-4647-03	1	Control Box - RH G7	24	117-1198	2	Bolt-Pivot
3	163-3189	2	Adjustment Plate-Control Box	26	161-6523	2	Handle-Control, ASM
4	32144-70	4	Screw-HWHTF	26:1		1	Handle-Control, ●
5	145-4648	2	Pivot Arm ASM	26:1:2	147-3029	1	Grip
5:2	256-156	2	Bushing-Flange	26:2	145-6366	1	Screw-Handle
6	115-5099	2	Bolt-Pivot	26:3	137-3008	1	Screw-Handle
7	104-8301	4	Nut-HF, NI	26:4	147-5192-05	1	Disc-Adjustment Handle, 32 Teeth
8	112-3306	2	Nut	26:5	138-8401	2	Nut-HF
9	126-4299	2	Screw-HSBH	26:6	117-5976	1	Knob-Handle
10	145-6253	2	Spring-Torsion	31	161-6420	2	Bellcrank
11	322-11	4	Screw-HH	32	145-6364	2	Bolt-Shoulder
12	104-8300	8	Nut-HF, NI	33	145-4607	1	Link-Brake, LH
13	119-8952	8	Washer-Spcl	34	145-6238	1	Link-Brake, RH
14	161-6514	2	Damper - Non Cavitating	35	119-1414	2	Pin-Cotter, Locking
15	120-7950	6	Screw-Torx	36	161-6635	2	Mount-Pivot
16	138-7218	2	Mount-Rod, Hydro	37	145-0408	1	Rod-Brake LH
17	161-9725	2	Rod-Hydro	38	145-0407	1	Rod-Brake, RH
18	120-9683	2	Washer-Plain	39	144-1815	1	Clip-Rod, RH (7R, 1/4In)
19	138-7252	6	Spring-Compression	40	144-1816	1	Clip-Rod, LH (7L, 1/4In)
20	120-2273	2	Washer-Flat	41	119-4040	2	Nut-HF, NI
21	147-5191-05	2	Arm-Control, 32 Teeth	42	137-3083	2	Pin-Hair
22	142-8478	2	Spacer, Anti-Rotation				

● Not serviced separately


Caster Wheel Assembly

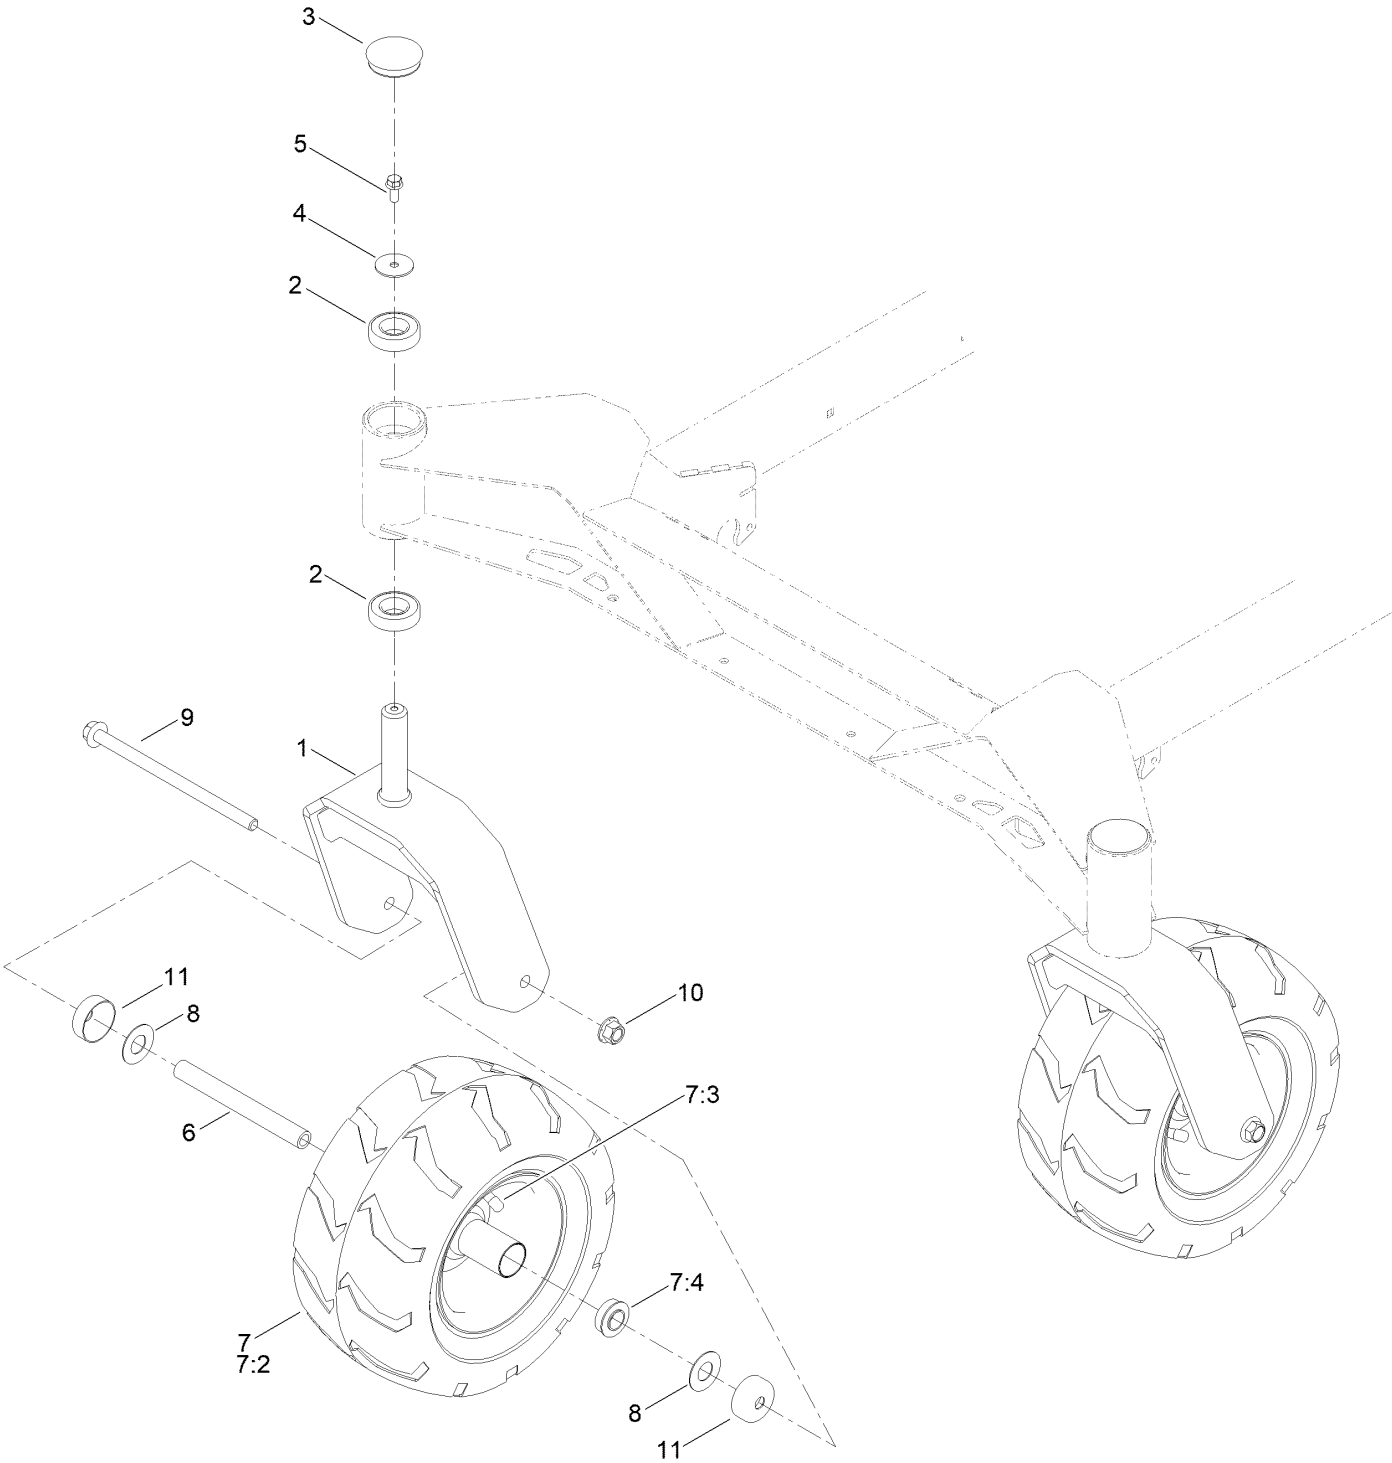

Caster Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-6375-01	2	Castor Fork [red]	7:2	147-7648	1	Tire 13X6.5-6, Treaded
2	109-3678	4	Bearing-Ball	7:3	232-27	1	Stem-Valve
3	144-0375	2	Cap, Grease	7:4	147-7652	2	Bearing
4	115-1151	2	Washer-Flat	8	136-5590	4	Washer
5	100-1668	2	Screw-HHF	9	139-2559	2	Screw-HHF
6	133-4487	2	Spanner-Wheel	10	139-1689	2	Nut-HF
7	147-7647	2	Tire And Wheel ASM	11	138-7208	4	Guard-Seal


Wheel and Tire Assembly

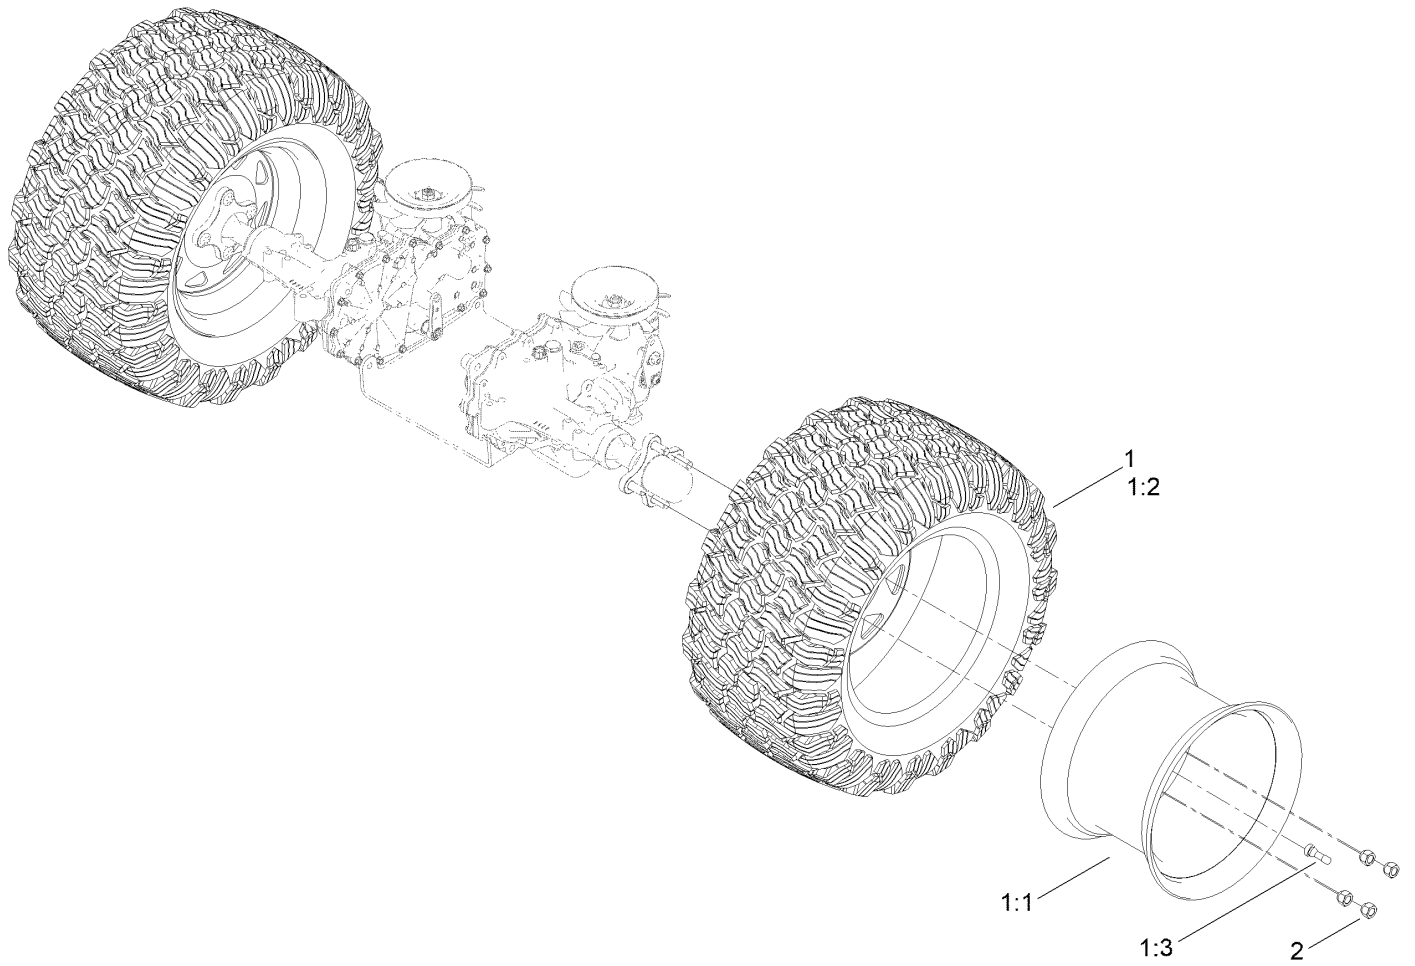

Wheel and Tire Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	161-9726	2	Wheel And Tire ASM	1:3	232-27	1	Stem-Valve
1:1	140-7969	1	Wheel	2	139-2564	8	Nut-Lug
1:2	161-9727	1	Tire				


Electrical Assembly

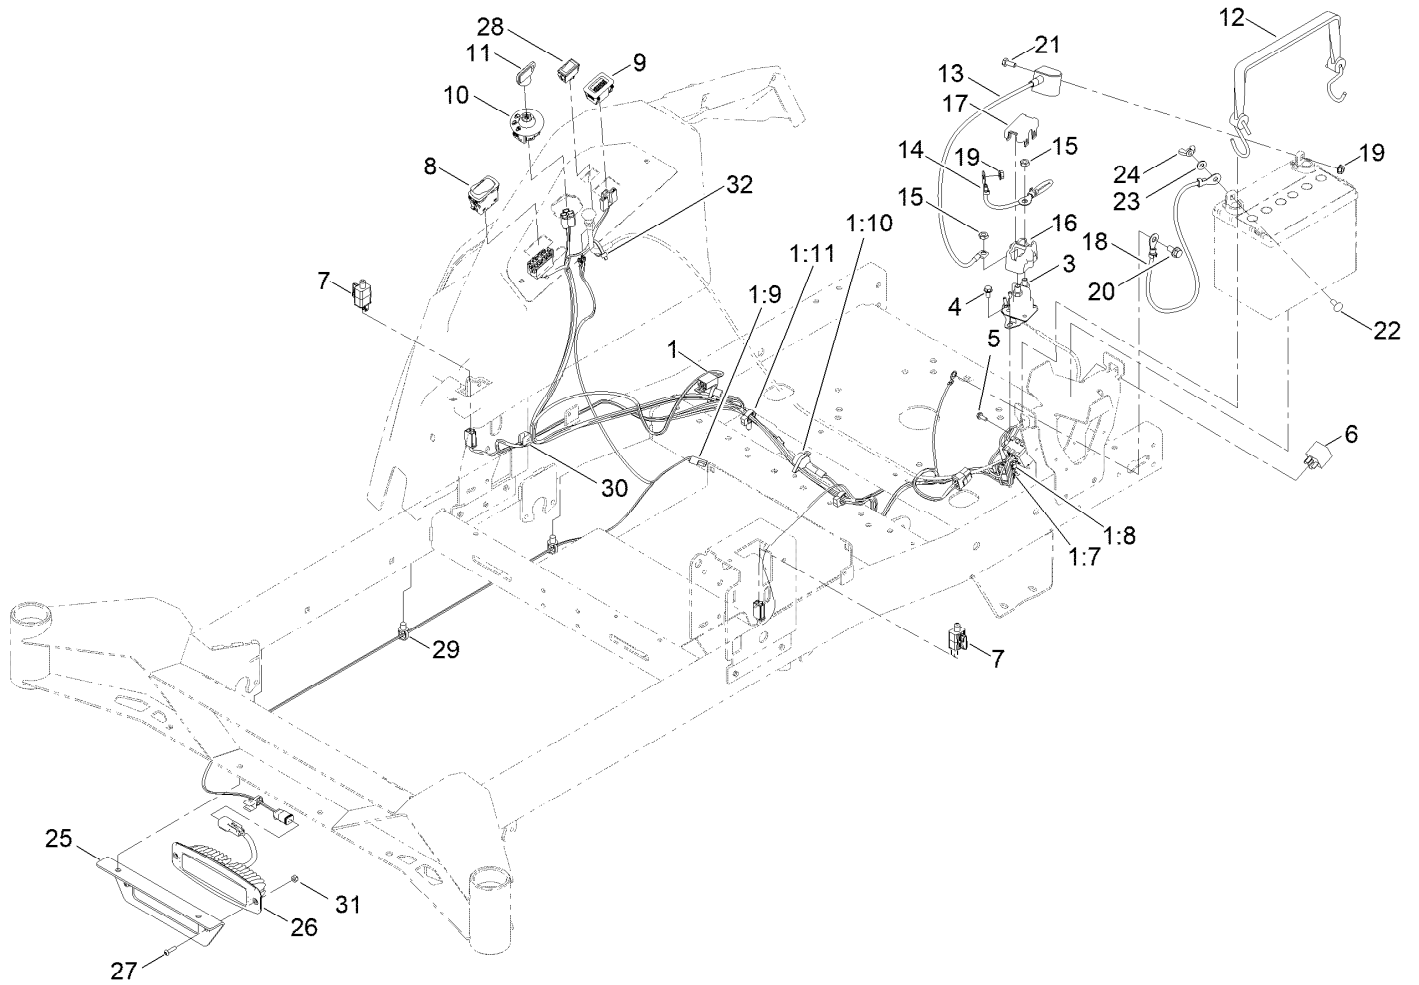

Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-6382	1	Harness-Wire, Main	16	140-2080	1	Cover-Solenoid
1:7	109355	1	Fuse-Blade, 15 Amp	17	140-2081	1	Cap-Solenoid
1:8	109102	1	Fuse-Blade, 25 Amp	18	119-8899	1	Cable-Battery, Black
1:9	32160-029	1	Connector-Molded, 1F,1M	19	139-2575	2	Nut-HF
1:10	100-4918	1	Diode	20	139-2593	1	Screw-HHF
1:11	32180-047	3	Clip-Tubing, Harness	21	137-3041	1	Screw-HH
3	117-1197	1	Solenoid	22	137-3053	1	Screw-CARR
4	32144-4	2	Screw-HWH	23	119-8952	1	Washer-Spcl
5	139-1713	1	Screw-Thd Roll	24	32103-22	1	Nut-Wing
6	1-643275	1	Relay	25	163-2331-03	1	Bracket-Mounting, Light
7	110-6765	2	Switch	26	139-8089	1	Light - Flush Mount
8	139-6368	1	Switch-Rocker, On-None-On	27	104-2408	2	Screw-HSBH
9	139-6404	1	Hour Meter	28	92-8875	1	Switch-Rocker
10	137-4100	1	Switch-Ignition	29	161-9748	1	Harness-Wire, Light Harness
11	63-8360	1	Key-Ignition	30	32180-082	1	Clip-Edge W/Tie, Perpendicular
12	139-2381	1	Strap-Rubber	31	3296-2	2	Nut-Lock, NI
13	147-2941	1	Cable-Battery,Red	32	3290-378	1	Tie-Cable
14	121-0711	1	Cable-Battery, Positive				
15	139-2580	2	Nut-HJ				


Decklift Assembly

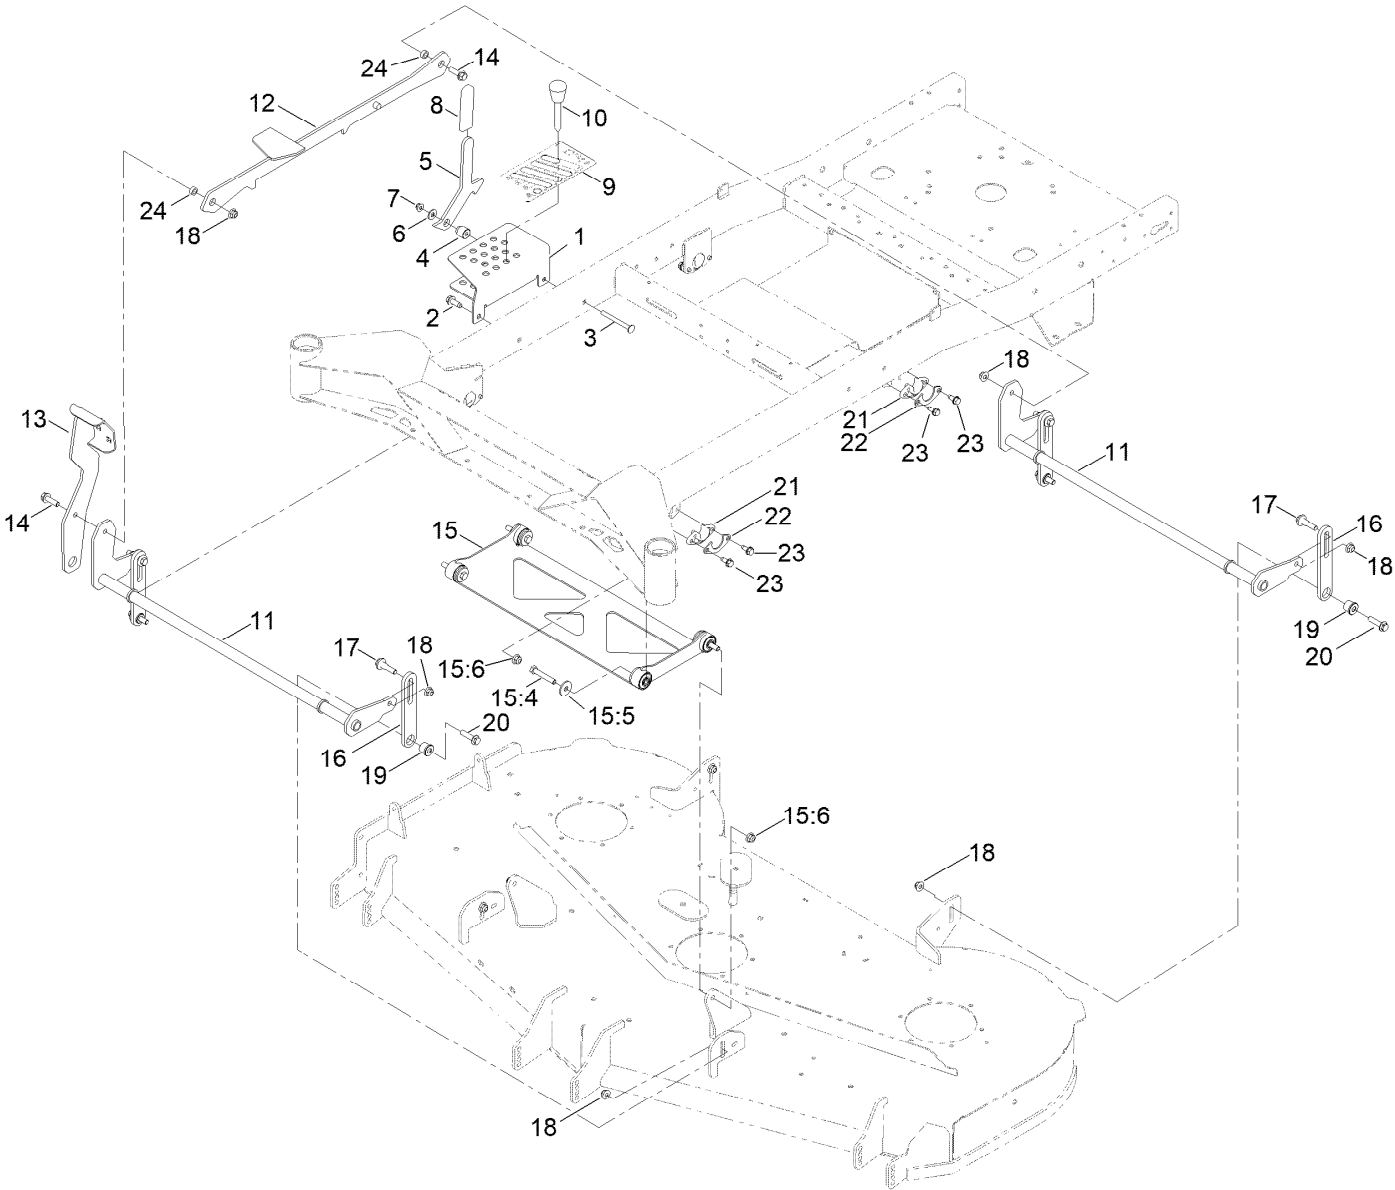

Decklift Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-6260-01	1	Bracket-HOC	15	161-6214	1	Deck Strut ASM
2	139-2428	1	Screw-HWH	15:4	323-11	4	Screw-HH
3	138-0741	1	Screw-CARR	15:5	2844	4	Washer
4	145-6282	1	Spacer-Stepped	15:6	104-8301	4	Nut-HF, NI
5	145-6279	1	Plate-Transport Lock	16	163-2370-01	4	Link-HOC
6	137-3082	1	Washer-Plain	17	130-0742	4	Bolt-Shoulder
7	119-4041	1	Nut-HF	18	119-4042	10	Nut-HF, NI
8	140-0413	1	Grip-Handle	19	161-9819	4	Bushing-Deck Lift
9	147-2867	1	Decal-HOC	20	3234-18	4	Screw-HHF
10	140-2146	1	HOC Pin ASM	21	139-5872	4	Bearing-Flange
11	161-4632-01	2	Pivot ASM-Decklift [red]	22	138-7204	4	Gusset-Deck Lift
12	145-6262-01	1	Link ASM-HOC [red]	23	32144-70	8	Screw-HWHTF
13	145-6278-01	1	Pedal ASM [red]	24	140-2093	2	Spacer
14	119-4061	2	Screw-HHF				

Engine and Muffler Assembly

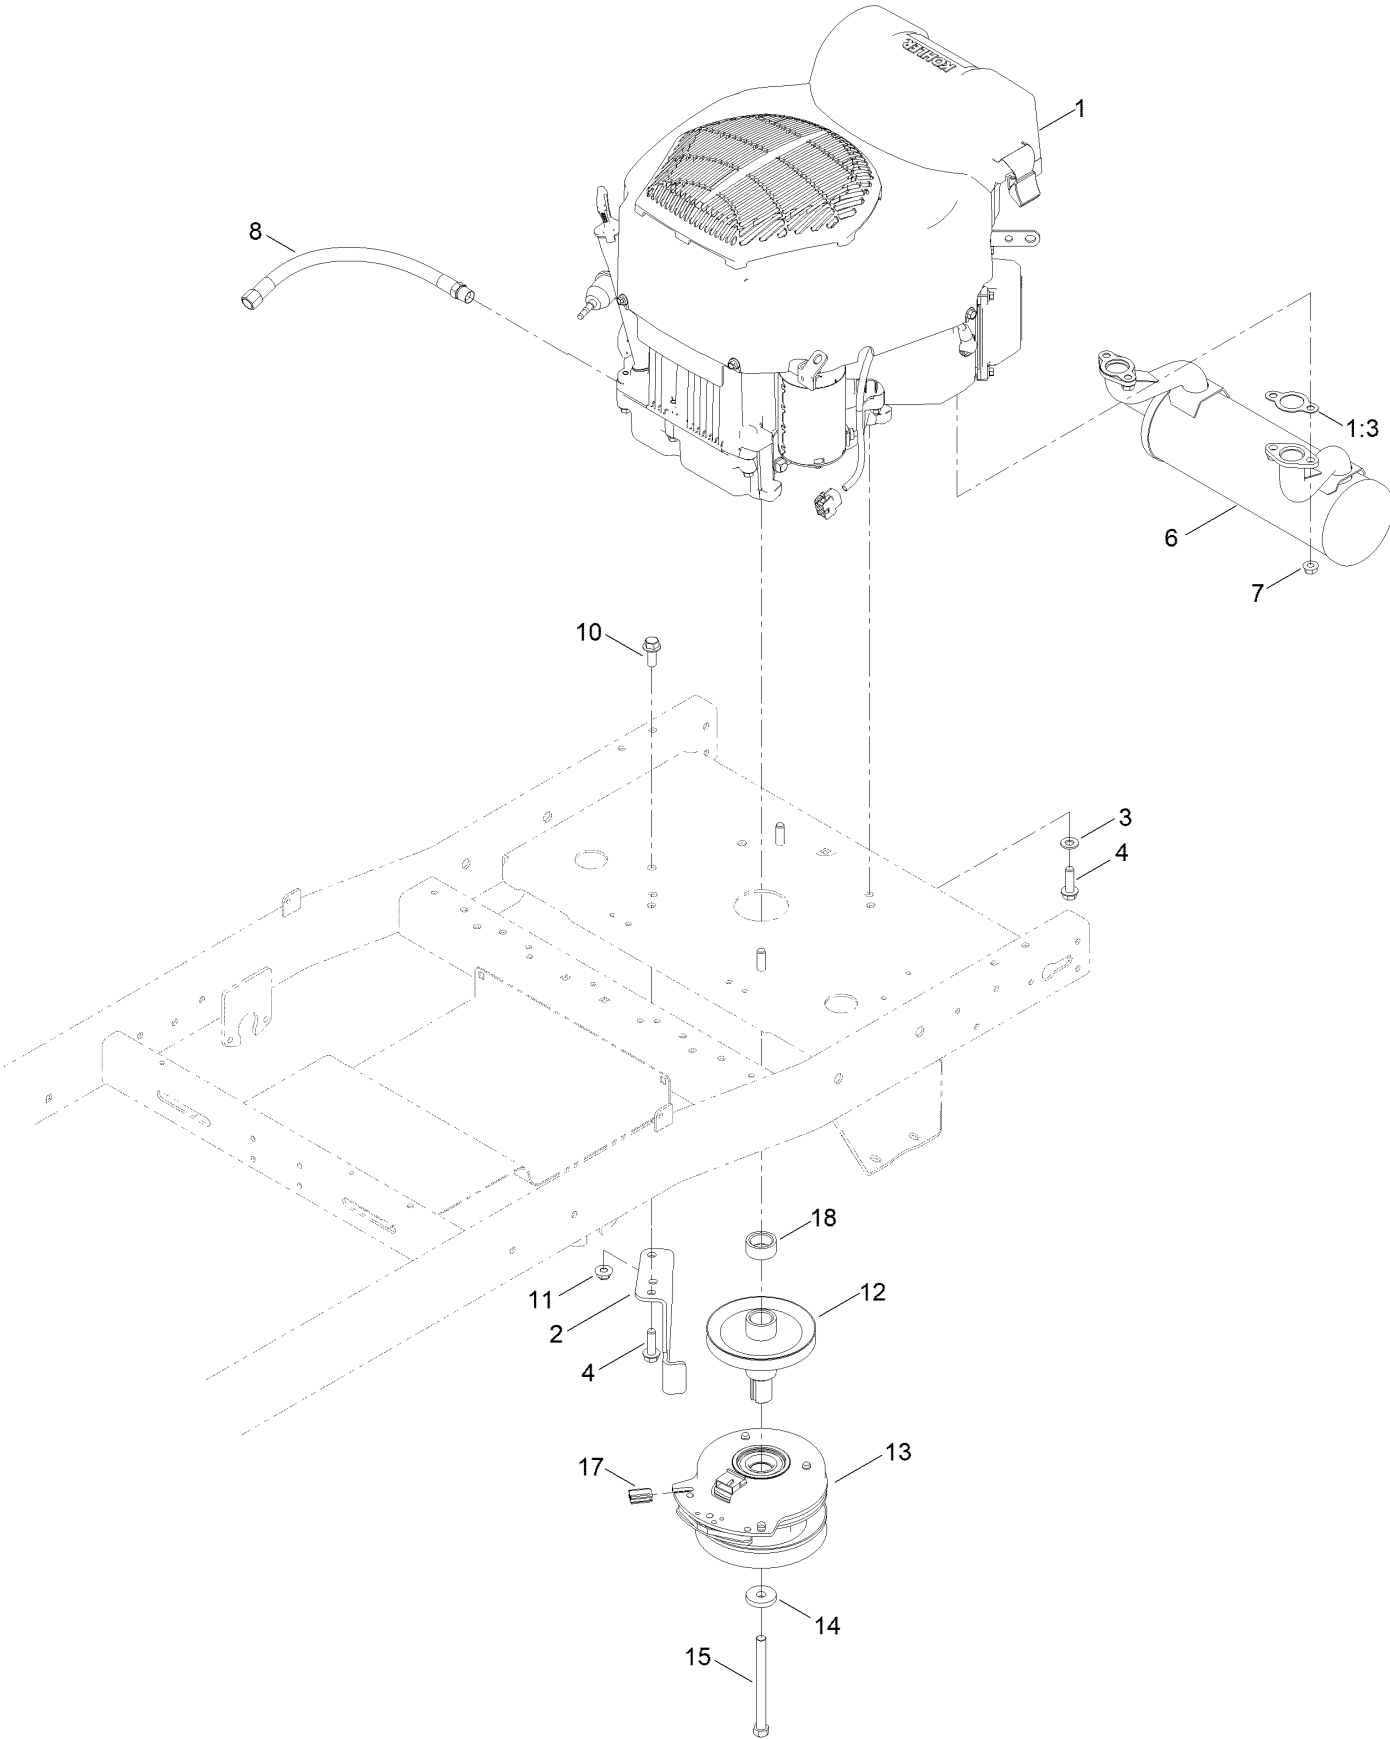


Engine and Muffler Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Engine-Kohler, Kt726-3015 ■▲	8	117-1261	1	Hose-Drain, Oil
1:3	110-6697	1	Gasket-Exhaust	10	3234-42	1	Screw-HHF
1:4	281-1	1	Plug-Pipe, Sq HD ●	11	104-8301	1	Nut-HF, NI
2	137-7000	1	Stop-Clutch (Wide)	12	138-9831	1	Pulley-Engine
3	3256-24	3	Washer-Plain	13	127-3410	1	Clutch-PTO
4	32144-109	4	Screw-Thd	14	112843	1	Washer
6	126-4359	1	Muffler-Kohler Aes	15	3212-19	1	Screw-HH
7	33004-00	4	Nut-HF	17	120-2217	1	Isolator-Clutch
				18	146-0538	1	Spacer-Engine Pulley

● Not illustrated
▲ Obtain parts from www.kawpower.com

■ Not serviced separately


60 Inch Deck Assembly

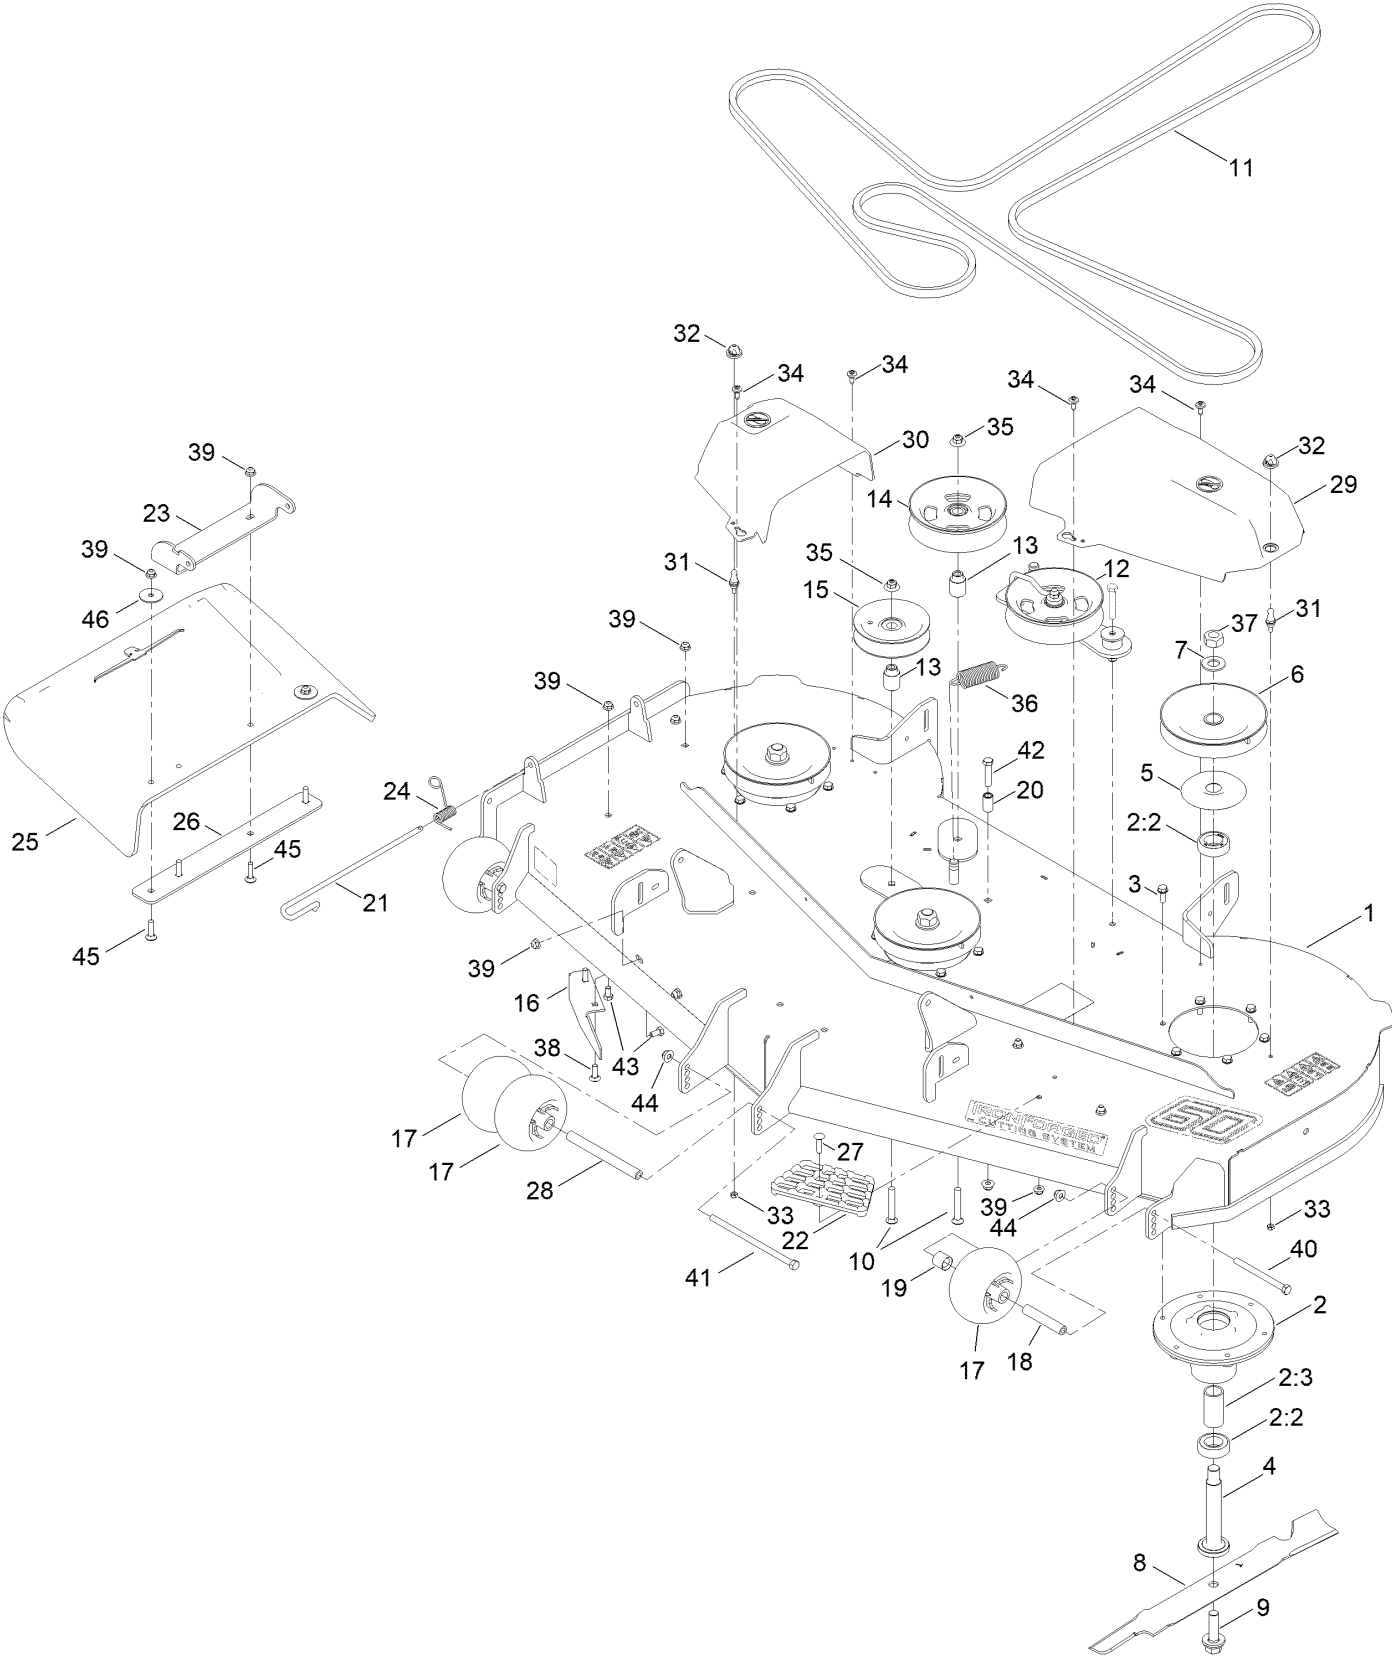

60 Inch Deck Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	161-9768SP	1	ASM-Deck W/Decals	23	114-1648-03	1	Bracket-Deflector, Upper
2	139-2357	3	Spindle ASM	24	138-7232	1	Spring-Torsion
2:2	116-0720	2	Bearing-Ball	25	147-3015	1	Deflector - Molded
2:3	138-7220	1	Spacer-Bearing	26	115-5048-03	1	Plate-Deflector
3	32144-41	18	Screw-Taptite	27	139-1702	1	Bolt-Carriage
4	115-2642	3	Shaft-Spindle	28	98-5967	1	Spacer-Wheel
5	138-7221	3	Shield-Bearing	29	147-2854	1	Cover-Belt, LH
6	147-7674	3	Pulley	30	147-2853	1	Cover-Belt, RH
7	7-4150	3	Washer	31	147-2872	2	Stud-Ball
8	115-9649-03	3	Blade-Hi Flow	32	147-2871	2	Grommet-Ball
9	145-0412	3	Screw-Blade	33	115-7373	2	Nut-Lock
10	3231-31	2	Screw-CARR	34	120-7950	4	Screw-Torx
11	135-5776	1	Belt,V-B X 186.00"	35	109-6658	2	Nut-Flange, NI
12	161-6406	1	Idler Arm ASM	36	139-3616	1	Spring - Extension
13	161-6398	2	Bushing-Idler, Fixed	37	3219-7	3	Nut-Hex
14	132-9425	1	Pulley-Idler, Flat	38	3230-22	2	Screw-CARR
15	132-4718	1	Pulley-Idler, Flat	39	104-8300	12	Nut-HF, NI
16	119-3388-03	1	Baffle-Cutoff	40	323-23	2	Screw-HH
17	1-603299	4	Roller-Scalp, Anti	41	108-5388	1	Screw-HH
18	138-7229	2	Tube-Spanner	42	323-9	1	Screw-HH
19	104-0892	2	Spacer-Axle, Rear	43	322-2	5	Screw-HH
20	161-6410	1	Bushing-Pivot, Idler	44	104-8301	4	Nut-HF, NI
21	138-7231	1	Pin-Chute	45	3230-3	4	Screw-CARR
22	126-4781-03	1	Step-Deck	46	3256-68	2	Washer-Flat


Decal Assembly No. 161-9768SP

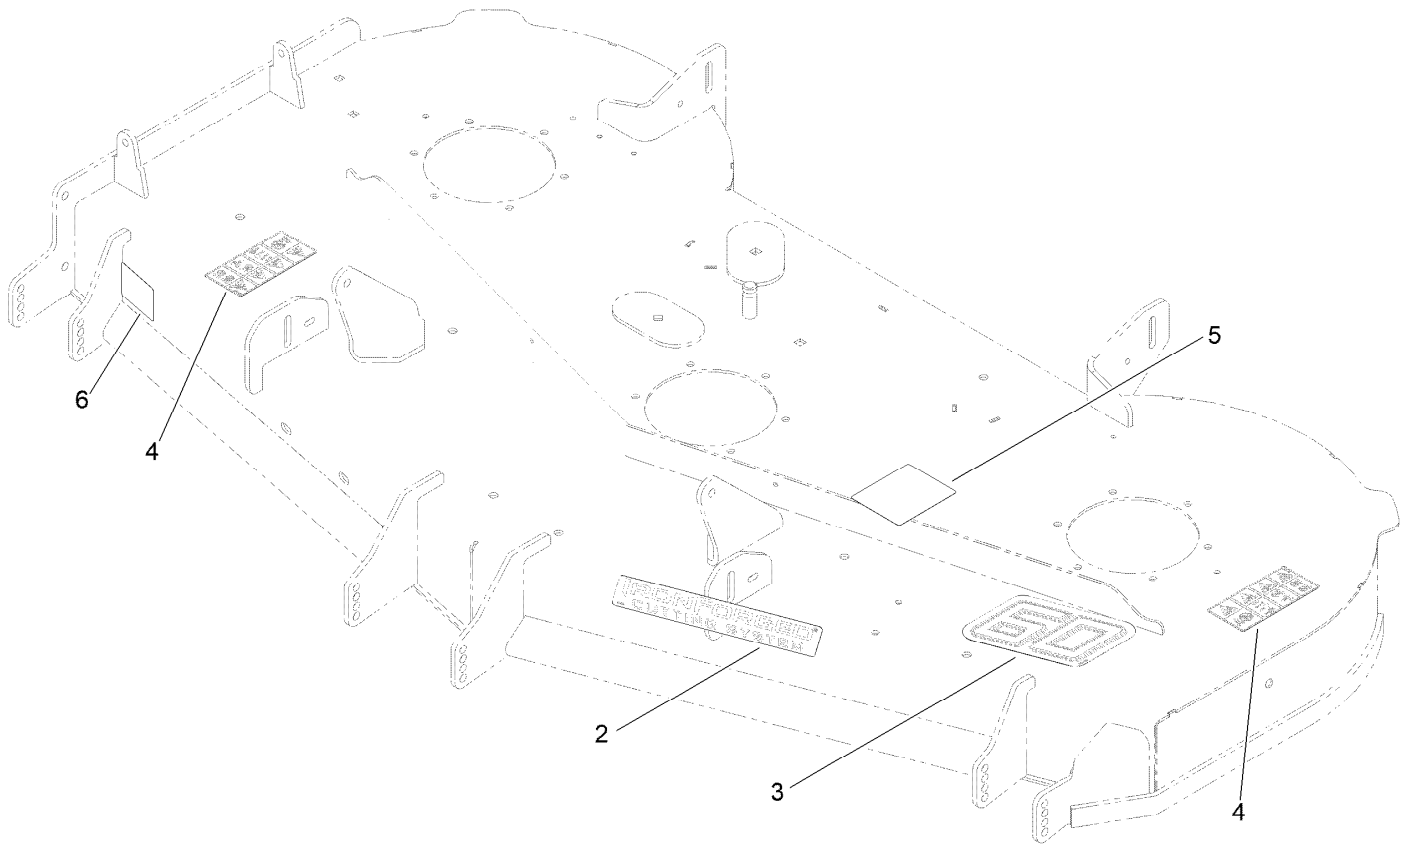

Decal Assembly No. 161-9768SP (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	147-7567	1	Decal - Iron Forged	5	117-1194	1	Decal-Routing, Belt
3	147-7570	1	Decal - Deck 60	6	130-0765	1	Decal-Scalp, Anti
4	161-6620	2	Decal-Danger, Deck				

Idler Arm Assembly No. 161-6406

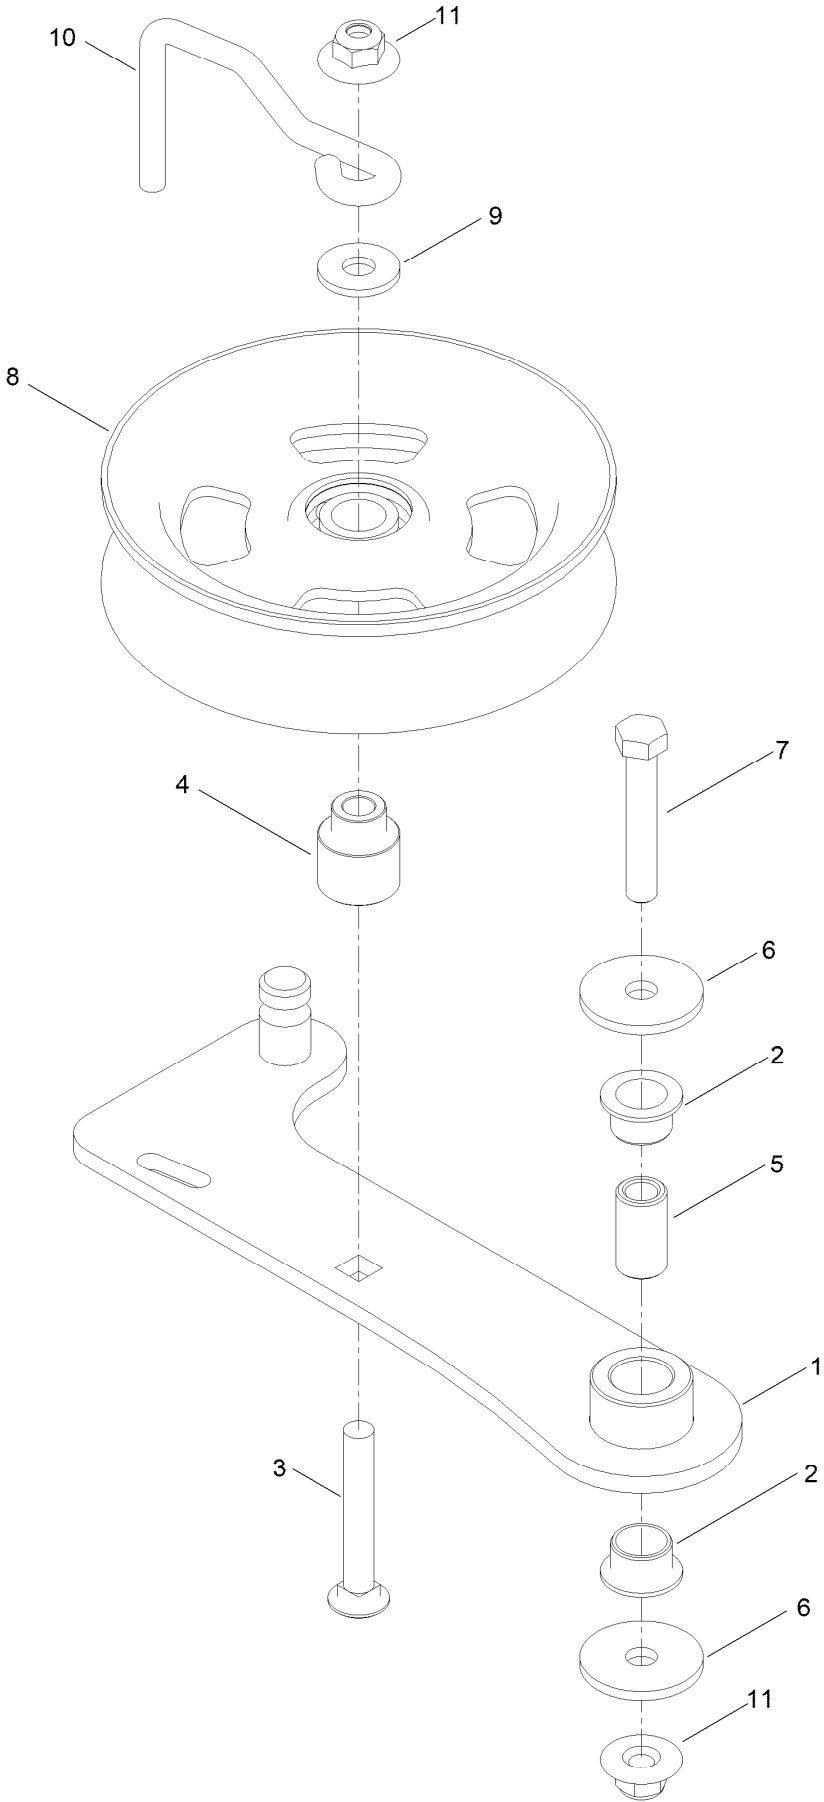

Idler Arm Assembly No. 161-6406 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	161-6407	1	Idler Arm ASM	7	323-11	1	Screw-HH
2	108-2973	2	Bushing-Flange	8	132-9425	1	Pulley-Idler, Flat
3	3231-31	1	Screw-CARR	9	80-6990	1	Washer-Hardened
4	126-7684	1	Bushing-Idler	10	161-6411	1	Guide-Belt, Idler
5	161-6410	1	Bushing-Pivot, Idler	11	109-6658	2	Nut-Flange, NI
6	1-213069	2	Washer				

Attachments and Accessories

For 76606 — Titan Max 60in Zero Turn Riding Mower

Product Name	Model/Part
Powered Bagger, Titan Models ROHS.....	79348
Kit-Recycler, 60in.....	148-1281
Leaf Bagging Enhancement Kit	140-5122
Toro Hydro Kit.....	121-3783
Mount, Jack Titan	147-8824
Jack Kit	127-6666
Seat ASM-Suspension	144-2632
Hardtop Sun Canopy	144-3719
Flat Free Caster Wheel Kit.....	145-0489
HD Bagger Cover Kit	140-5036
Hypr-Oil 500 (quart).....	114-4713
Fuel Stabilizer .05 oz	130-2393
4-Cycle Fuel, Snow And Lawn 32oz Can	131-3823
Toro Premium Fuel Treatment 12oz Bottle.....	131-6572
Oil-30/10W-30 Synthetic (Quart).....	138-6053
10W30 4-Cycle Engine Oil (32oz Bottle).....	38280
Toro 4-Cycle SAE 30 Oil (32oz Bottle)	38903
Toro Deluxe Rider Cover.....	490-7319
Blade-Hi Flow, 20.5in	115-9649-03P
Kit-Striping, 54/60in	147-8781
Hypr-Oil 500 (gallon).....	114-4714
Hypr-Oil 500-5 (5 gallon).....	114-4715

Notes:

Notes:

Notes:



Count on it.