


MODEL NO. 22025-5000001 & UP

PARTS CATALOG

21" COMMERCIAL SIDE DISCHARGE H.P. 2-CYCLE

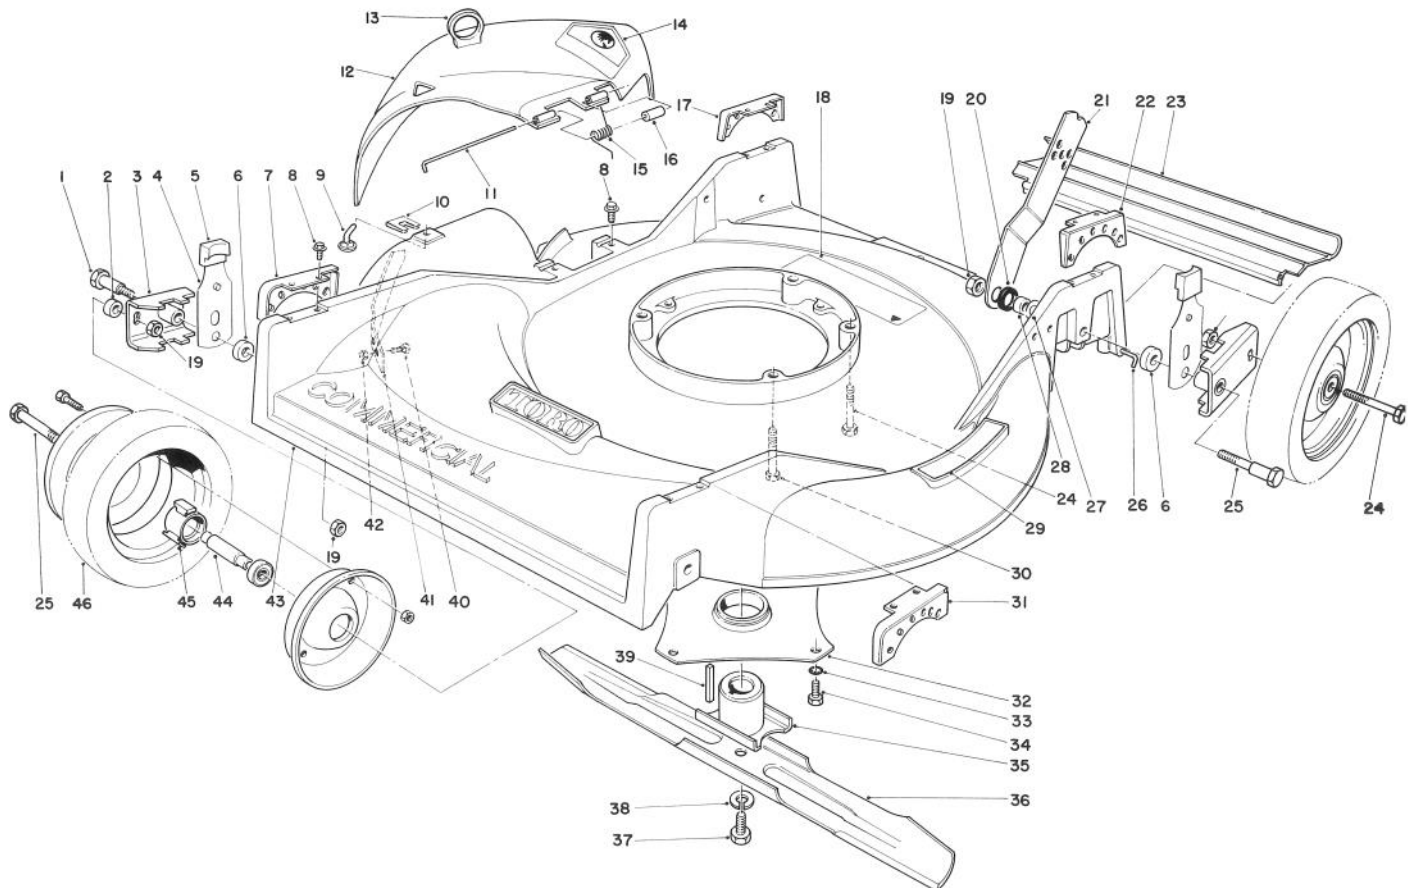


HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	49-9180	Screw — Pivot	2
2	52-2480	Spacer — Wheel	4
3	49-9160	Pivot Arm Assembly	4
4	49-8800	Spring Arm Assembly	4
5	25-7740	Knob — Arm	4
6	53-7930	Spacer — Pivot Arm	4
7	52-2510	Quadrant — Front R.H.	1
8	11-9760	Screw — Thread Forming	10
9	28-3260	Pin — Chute	1
10	28-3250	Clip — Pin	1
11	52-2570	Pin — Deflector Hinge	1
12	53-7910	Deflector	1
13	28-1430	Loop — Lift	1
14	39-5770	Decal — Danger	1
15	52-2560	Spring — Deflector	1

Ref. No.	Part No.	Description	No. Used
16	28-3270	Sleeve — Spring	1
17	52-2530	Quadrant — Rear R.H.	1
18	29-4720	Decal — Safety Instructions	1
19	3296-39	Nut — Lock	8
20	27-6510	Spacer — Handle Latch	2
21	27-7071	Latch — Handle	2
22	52-2540	Quadrant — Rear L.H.	1
23	52-2640	Shield — Rear Safety	1
24	323-12	Screw — Cap Hex Hd.	7
25	52-2260	Screw — Pivot Rear	2
26	33-3201	Rod — Shield	1
27	3290-340	Washer Belleville	2
28	52-2360	Spacer — Handle Brace	2
29	46-7370	Decal — Step Pad	1


PRICE \$1.00

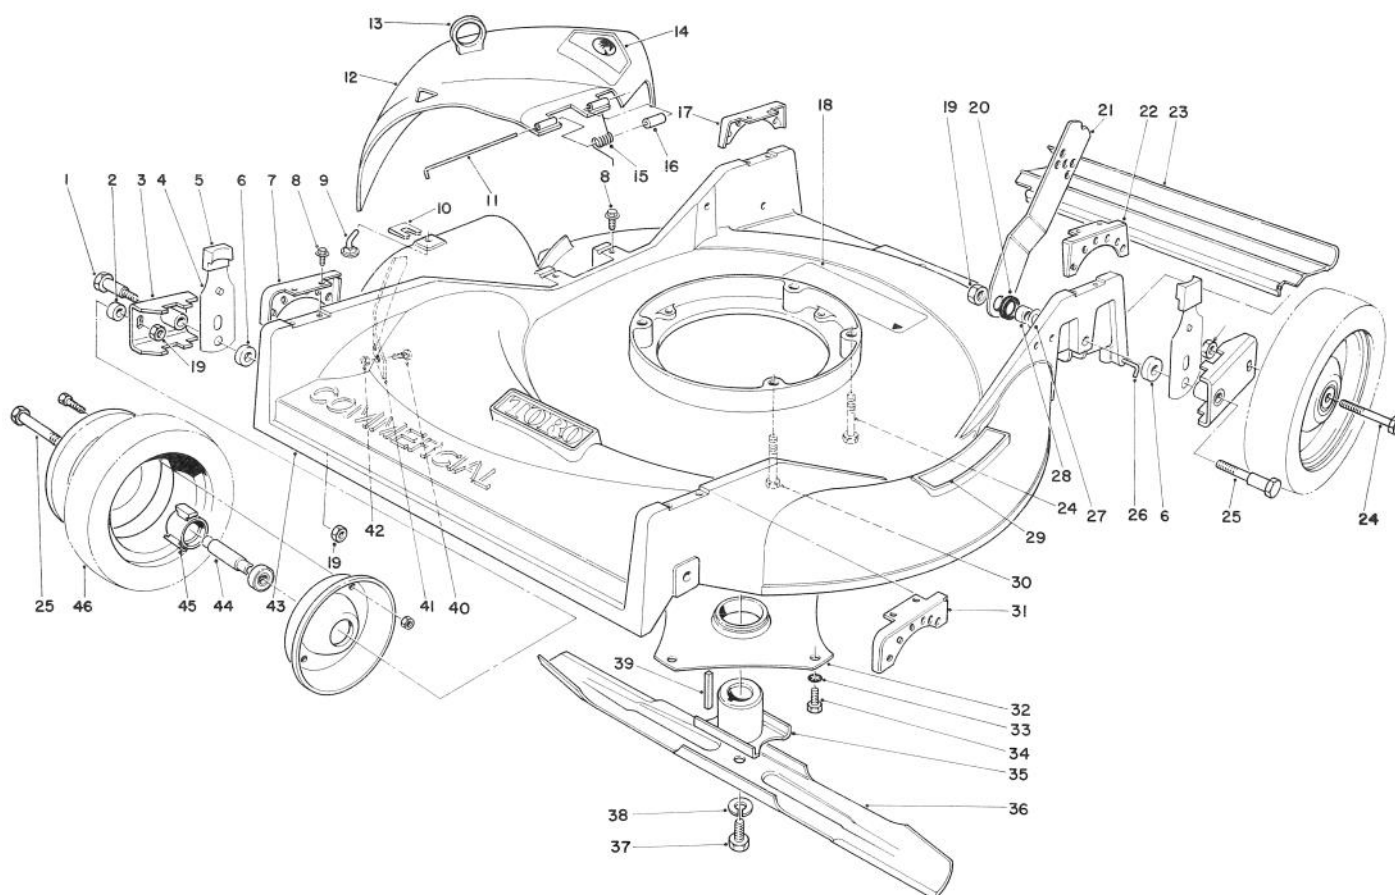

HOUSING ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
30	323-11	Screw — Cap Hex Hd.	1
31	52-2520	Quadrant — Front L.H.	1
32	52-2500	Crankshaft Protector	1
33	3254-6	Washer — Lock Internal Tooth	4
34	32144-11	Screw — Thread Forming Hex Hd.	4
35	52-2170	Blade Retainer	1
36	8-5230	Blade — 21"	1
37	26-0671	Screw — Blade	1
38	3253-22	Washer — Lock	1

Ref. No.	Part No.	Description	No. Used
39	27-8590	Key — Square	1
40	3230-16	Carriage Bolt	2
41	52-2650	Bar — Safety	1
42	3296-29	Locknut	2
43	53-7890	Housing	1
44	52-2450	Bearing — Wheel	8
45	52-2440	Spacer — Bearing	4
46	53-7720	Wheel & Tire Assembly (Incl. Ref. #44 & 45)	4

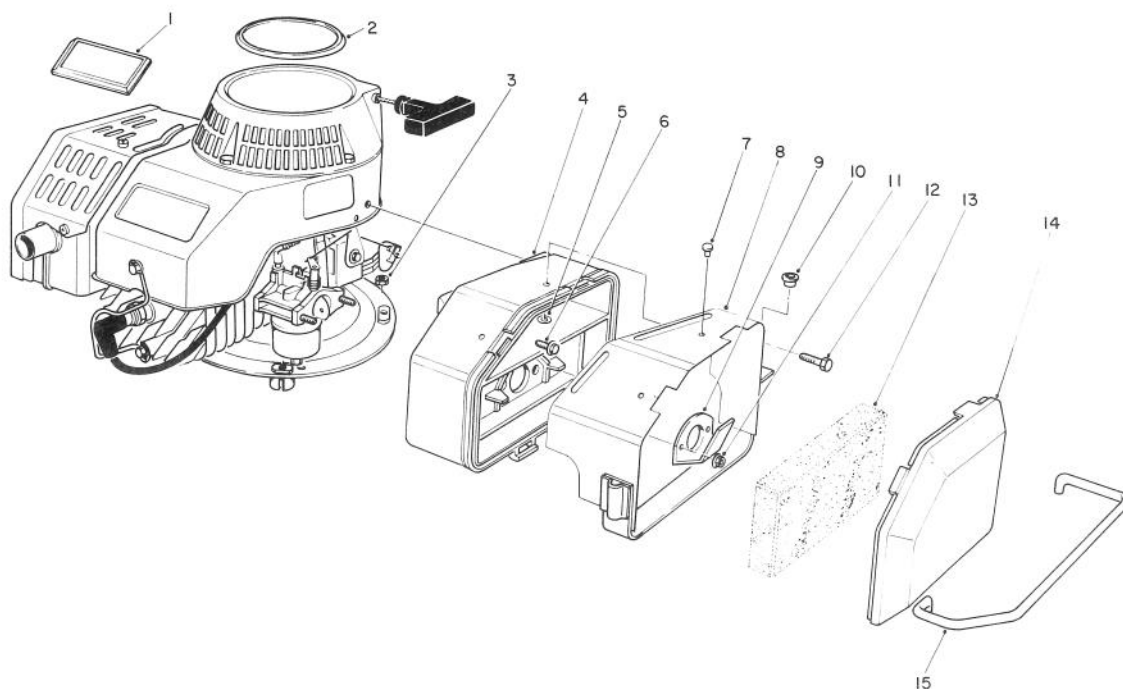


ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	46-8291	Plate — Logo Toro	1
2	49-9030	Plate — Logo Engine	1
3	3218-3	Nut — Hex Jam	3
4	52-2200	Air Cleaner Assembly (Incl. Ref. #5, 7 & 8)	1
5	3256-53	Washer	2
6	51-3220	Capscrew — Hex Flange	1
7	3296-5	Rivet	2
8	52-2250	Air Cleaner Band	1

Ref. No.	Part No.	Description	No. Used
9	81-0140	Deflector — Spitback	1
10	237-127	Snap Bushing	1
11	49-7810	Locknut — Hex Flange	2
12	81-1280	Capscrew — Hex Flange	1
13	81-0100	Filter — Foam	1
14	81-0120	Cover — Air Cleaner	1
15	52-2240	Guard — Air Cleaner	1
*	59260	Complete Engine	1

*Not Illustrated

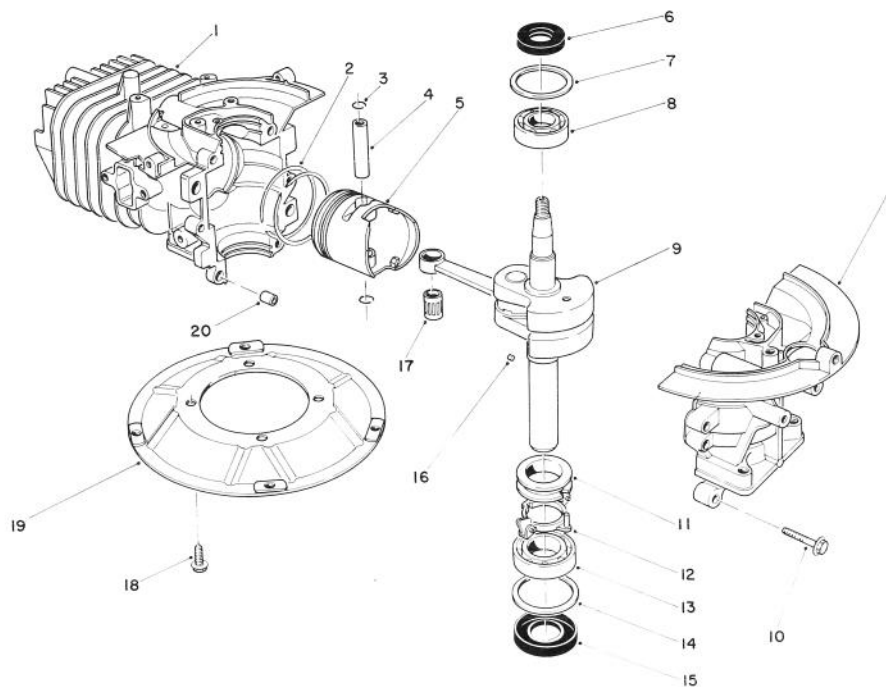


SHORT BLOCK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	81-2060	Crankcase/Cylinder Assy.	1
2	81-0590	Ring Set	1
3	81-0620	Circlip	2
4	81-0600	Wrist Pin	1
5	81-2140	Piston — 58 mm	1
6	81-0720	Oil Seal — Upper	1
7	81-0710	Thrust Washer — Upper	1
8	81-0690	Bearing — Upper 20 mm	1
9	81-2150	Crankshaft/Connecting Rod Assembly	1
10	81-0540	Bolt (30 mm Lg.)	6

Ref. No.	Part No.	Description	No. Used
11	81-0770	Collar — Governor	1
12	81-0750	Bracket — Governor Arm	1
13	81-0700	Bearing — Lower 25 mm	1
14	81-0730	Thrust Washer — Lower	1
15	81-0740	Oil Seal — Lower	1
16	81-0760	Pin	1
17	81-0610	Bearing — Wrist Pin	1
18	81-0570	Bolt	4
19	81-0560	Plate — Mounting	1
20	81-0520	Pin — Crankcase Dowel	2
*	11-6309	Short Block	1

*Not Illustrated

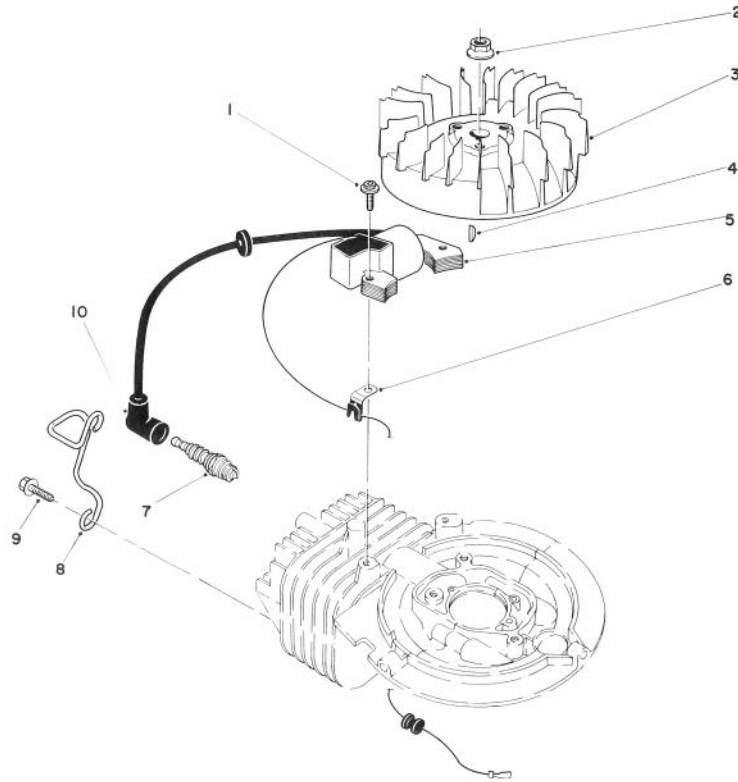


FLYWHEEL & MAGNETO ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	81-2050	Capscrew — Allenhead	2
2	81-1330	Nut	1
3	81-1980	Flywheel — Magneto	1
4	81-2180	Key — Flywheel	1
5	81-1990	Coil/Ignition Assembly	1
6	81-1480	Clamp	1

Ref. No.	Part No.	Description	No. Used
7	81-0181	Spark Plug	1
8	81-2120	Guard — Spark Plug	1
9	81-2350	Bolt — Self Tapping (20 mm Lg.)	2
10	81-1500	Cap Assembly — Spark Plug	1
*	41-7650	Puller — Flywheel	1

*Not Illustrated

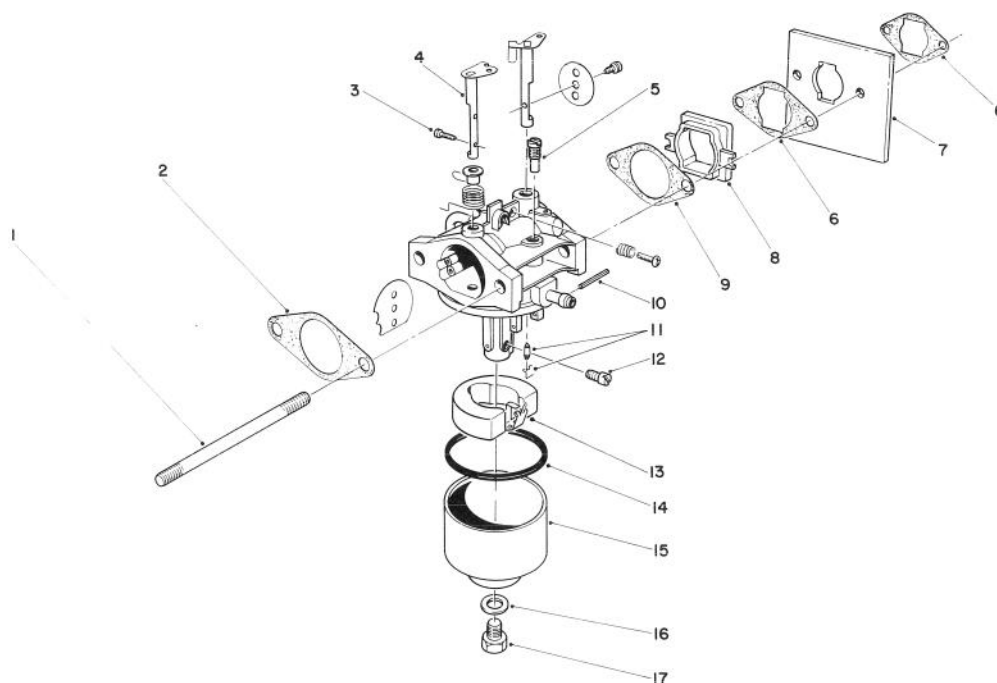


CARBURETOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	81-2240	Stud Bolt — Carburetor	2
2	81-0090	Gasket	1
3	81-2160	Screw — Choke Plate	2
4	81-1950	Shaft — Choke	1
5	81-1030	Jet — Pilot (#40)	1
6	81-2320	Gasket — Shield	2
7	81-2330	Shield — Carburetor	1
8	81-2190	Insulator — Carburetor	1
9	81-0780	Gasket — Carburetor	1
10	81-0980	Pin — Float	1
11	81-1600	Needle Valve — Float	1

12	81-1940	Jet — Main (#76.3)	1
*	81-2340	Jet — Main (#72.5) High Alt. Above 6,000 Ft. (Optional)	1
13	81-0970	Float	1
14	81-1010	Gasket — Float Bowl	1
15	81-1610	Bowl — Float	1
16	81-1020	Gasket — Bowl Capscrew	1
17	81-1000	Capscrew — Bowl	1
*	81-1960	Carburetor Kit (Incl. Ref. #2, 9, 11, 14, & 16)	1
*	81-1930	Carburetor Assembly Complete	1


*Not Illustrated

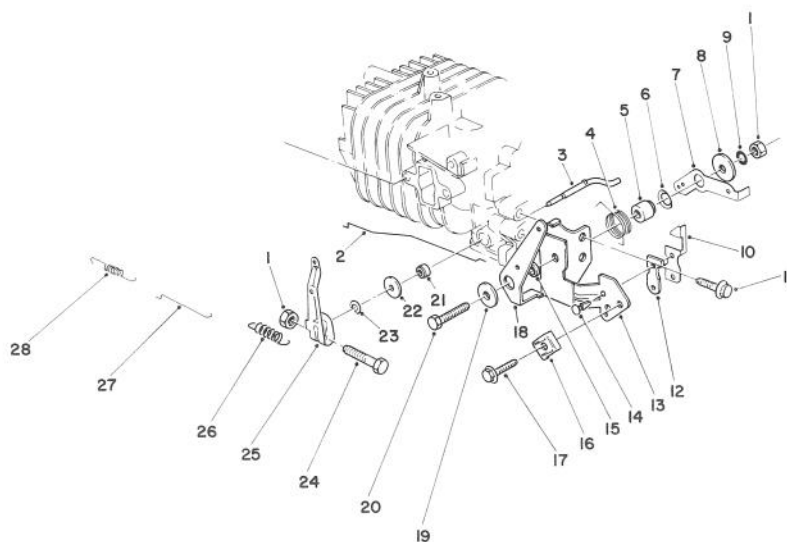

GOVERNOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	81-0900	Nut	2
2	81-1720	Rod — Choke	1
3	81-0840	Shaft — Governor	1
4	81-2460	Spring — Choke Control Lever	1
5	81-1770	Spacer — Governor Spring Lever	1
6	81-1820	Washer — Governor Spring Lever	1
7	81-1670	Lever — Governor Spring	1
8	50-0760	Washer — Choke Control Lever	1
9	81-1450	Washer — Lock	1
10	81-1840	Terminal — Kill Switch	1
11	81-1170	Bolt — Self Tapping (15 mm Lg.)	1
12	81-1830	Insulator — Kill Switch	1
13	81-1680	Bracket — Throttle Control	1

Ref. No.	Part No.	Description	No. Used
14	81-1850	Rivet — Kill Switch	2
15	81-1760	Spacer — Choke Control Lever	1
16	81-1690	Clamp — Cable	1
17	50-0130	Bolt — Cable Clamp	1
18	81-1710	Lever — Choke Control	1
19	81-1750	Washer	1
20	81-1730	Bolt — Throttle Control Bracket	1
21	81-0850	Oil Seal — Governor Shaft	1
22	81-0860	Washer	1
23	81-0870	E — Ring	1
24	81-0890	Bolt	1
25	81-0880	Lever — Throttle Control	1
26	81-0940	Spring — Governor	1
27	81-0910	Rod — Carburetor	1
28	81-0920	Spring — Carburetor Rod	1

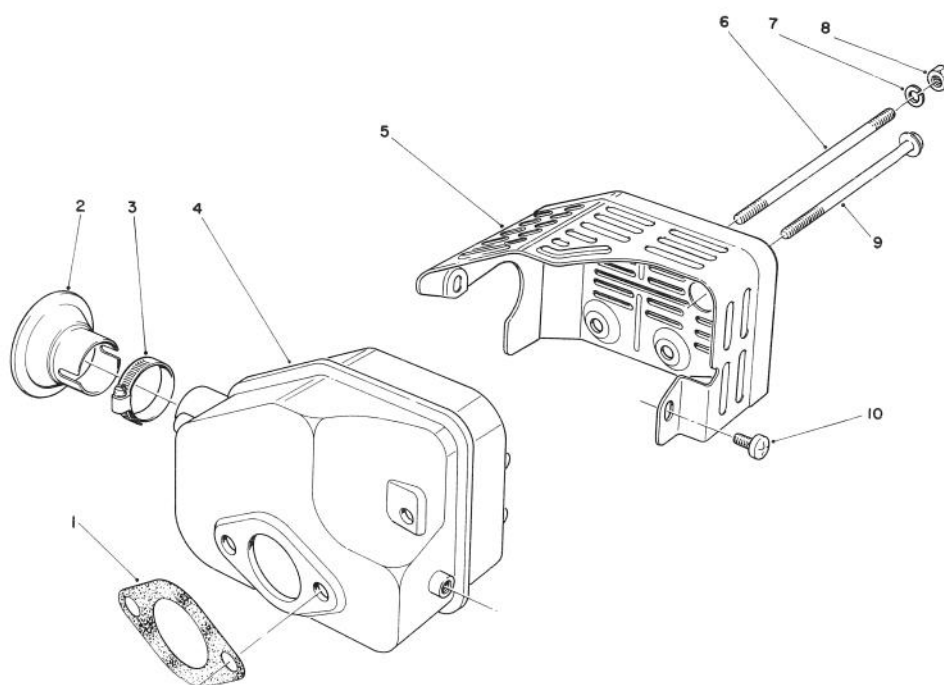


MUFFLER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	81-1080	Gasket — Muffler	1
2	81-0200	Spark Arrester (Optional)	1
3†		Clamp	1
4	81-1090	Muffler	1
5	81-2450	Cover — Muffler	1

Ref. No.	Part No.	Description	No. Used
6	81-1100	Stud — Muffler	2
7	81-1120	Lockwasher	2
8	81-1110	Nut	2
9	81-1150	Bolt — Self Tapping	1
10	81-1140	Screw — Phillips Hd.	2

† Obtain Locally

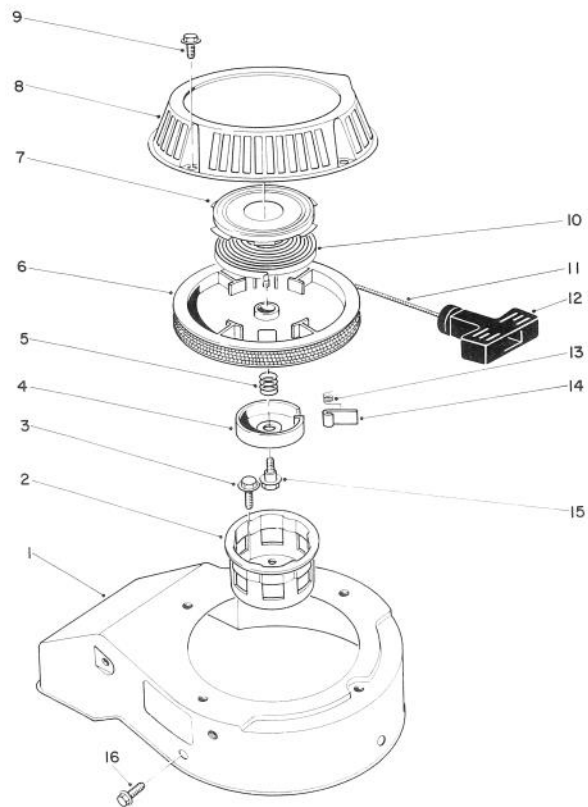


RECOIL STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	81-2080	Cover — Cooling Fan	1
2	81-2170	Pulley — Starter Cup	1
3	81-1300	Bolt 16 mm Lg.	3
4	81-1250	Retainer — Dog	1
5	81-1240	Spring — Compression	1
6	81-1210	Pulley — Rope	1
7	81-1640	Retainer — Recoil Spring	1
8	81-2100	Case — Starter	1
9	81-1280	Bolt	4
10	81-1200	Spring — Recoil	1

Ref. No.	Part No.	Description	No. Used
11	81-1270	Rope	1
12	81-1630	Handle — Recoil	1
13	81-1220	Spring — Dog	1
14	81-1230	Dog — Starter	1
15	81-1260	Bolt Shoulder	1
16	81-1170	Bolt — Self Tapping (15 mm Lg.)	2
*	81-2030	Starter Assembly (Incl. Ref. # 4-15)	1
*	81-2300	Recoil & Cup (Incl. Ref. # 7 & 10)	1


*Not Illustrated

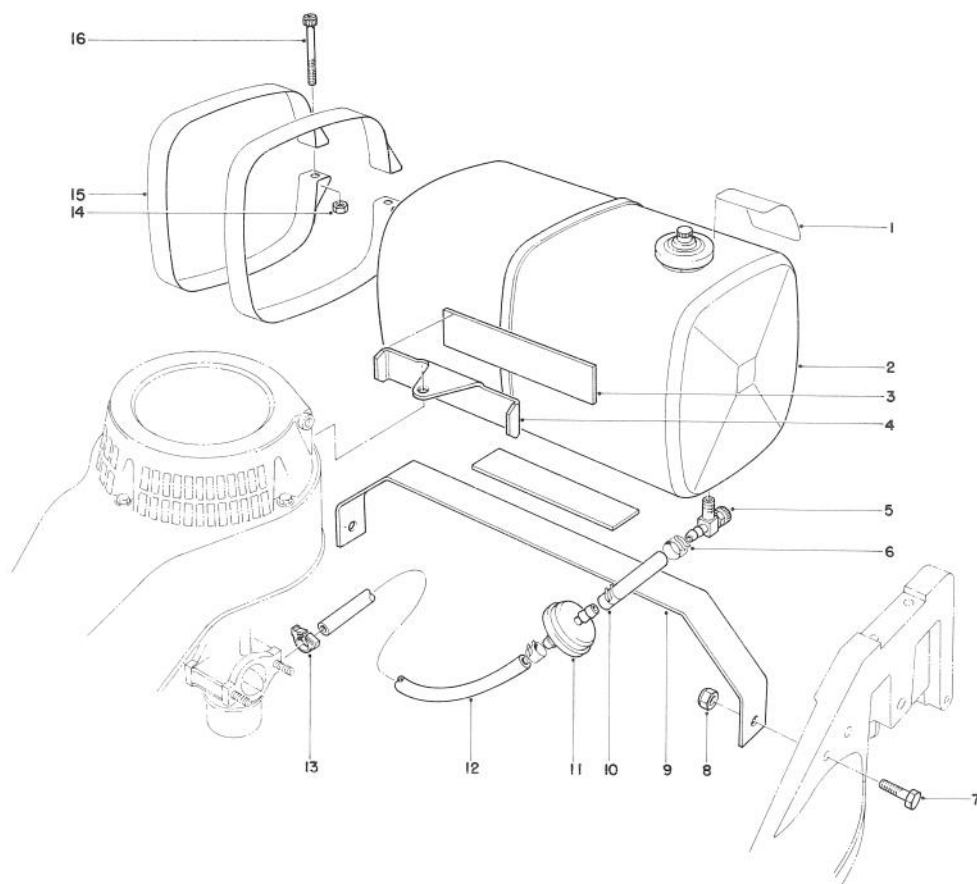

GAS TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	52-2350	Decal — Fuel Tank	1
2	52-2331	Gas Tank	1
3	52-2290	Pad — Isolator	2
4	52-2270	Mount — Tank, Front	1
5	304-71	Valve — Fuel Shutoff	1
6	2210-185	Clamp — Fuel Line	3
7	322-6	Screw — Cap Hex Hd.	2
8	3296-29	Nut — Lock	2


Ref. No.	Part No.	Description	No. Used
9	52-2280	Mount — Tank, Bottom	1
10	51-3210	Line — Fuel	1
11	42-5240	Filter — Fuel	1
12	51-3211	Line — Fuel	1
13	51-3200	Clamp — Fuel Line	1
14	3217-5	Nut — Hex	2
15	39-0570	Strap — Tank Mounting	2
16	3274-62	Screw — Cap Hex Socket Hd.	2

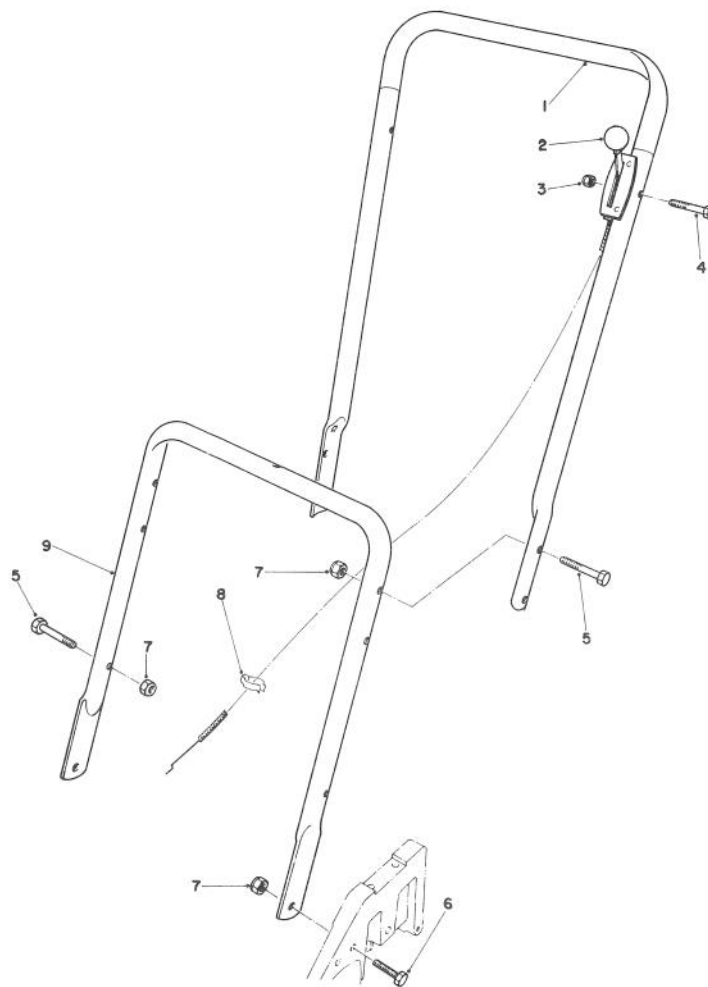

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	52-2380	Handle — Upper	1
2	53-7831	Control — Bowden	1
3	3296-42	Nut — Lock	1
4	321-10	Screw — Cap Hex Hd.	1
5	322-7	Screw — Cap Hex Hd.	6

Ref. No.	Part No.	Description	No. Used
6	322-6	Screw — Cap Hex Hd.	2
7	3296-29	Nut — Lock	8
8	218-466	Clip — Bowden	1
9	52-2370	Handle — Lower	1

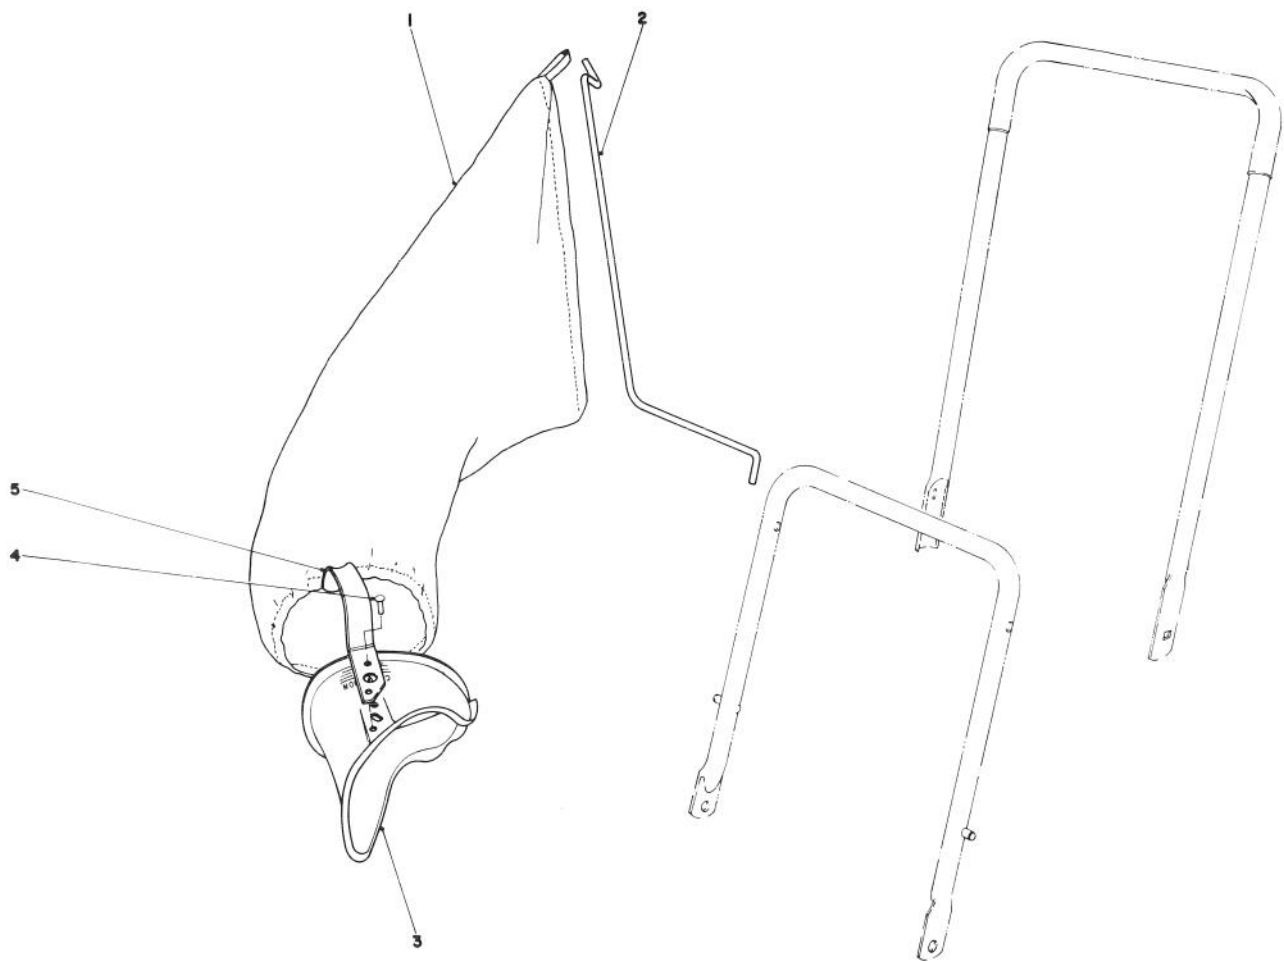

GRASS BAGGING KIT NO. 38-0050 (Optional)

Ref. No.	Part No.	Description	No. Used
1	6-0929	Grass Bag	1
2	19-4210	Bag Rod	1
3	38-0010	Grass Chute Assembly (Incl. Ref. #4-5)	1

Ref. No.	Part No.	Description	No. Used
4	3295-26	Rivet — Semi Tubular	2
5	38-0030	Handle Bag Chute	1