 


TORO®

MODEL NO. 22030-5000001 & UP
MODEL NO. 22035-5000001 & UP

PARTS CATALOG

21" Heavy Duty Rear Bagger H.P. & S.P. 2-Cycle

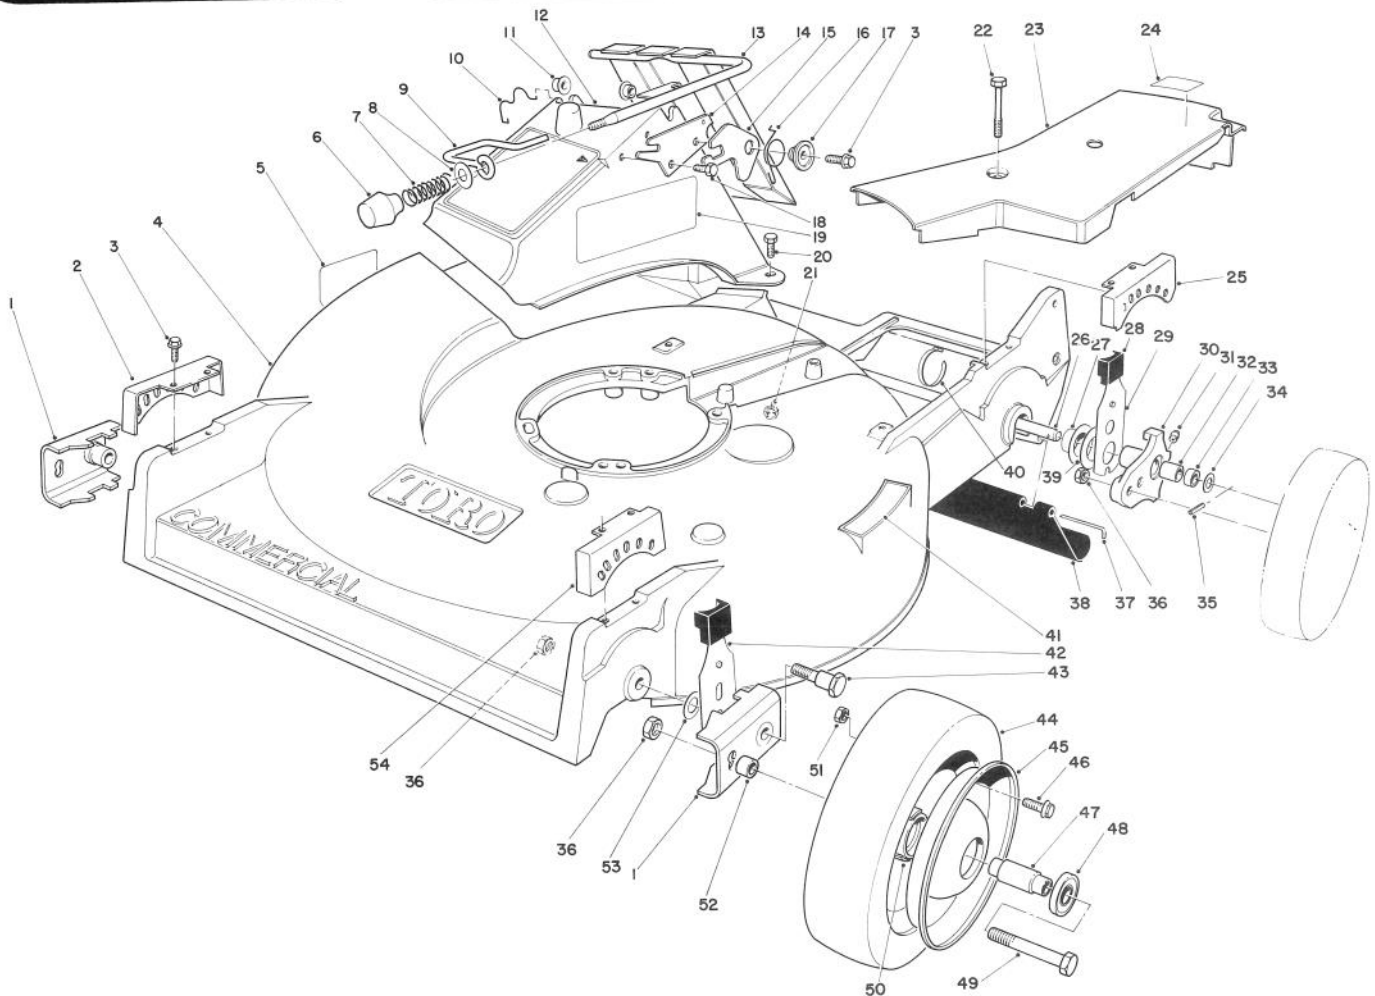


HOUSING ASSEMBLY (Model 22030)

Ref. No.	Part No.	Description	No. Used
1	49-9160	Pivot Arm Assembly	2
2	49-8770	Quadrant — Front R.H.	1
3	11-9760	Screw — Thread Forming	9
4	11-7859	Housing — Commercial (Incl. Ref. #5, 41)	1
5	39-5770	Decal — Danger	1
6	233-37	Knob	1
7	23-0920	Spring — Compression	1
8	3256-25	Washer — Plain	1
9	23-0940	Latch — Door	1
10	33-4830	Retainer — Door	1
11	23-0880	Bushing	2
12	11-5639	Chute & Door Assy. (Incl. Ref. #3, 6-11 & 13-21)	1
13	33-5660	Door Handle	1

Ref. No.	Part No.	Description	No. Used
14	23-1040	Latch Plate	1
15	42-4010	Latch — Safety	1
16	33-4860	Spring — Torsion	1
17	43-4840	Latch — Spacer	1
18	32104-17	Screw — Cap, Hex Hd.	1
19	29-4720	Decal — Safety Instructions	1
20	321-7	Screw — Cap, Hex Hd.	2
21	3296-42	Nut — Lock	2
22	37-7260	Screw — Special	2
23	48-2800	Belt — Cover	1
24	52-2610	Label — Grease	1
25	49-8740	Quadrant — Rear L.H.	1
*	49-8750	Quadrant — Rear R.H.	1
26	49-8790	Shaft — Rear Axle	1
27	48-2170	Cap — End	2

 *Not Illustrated

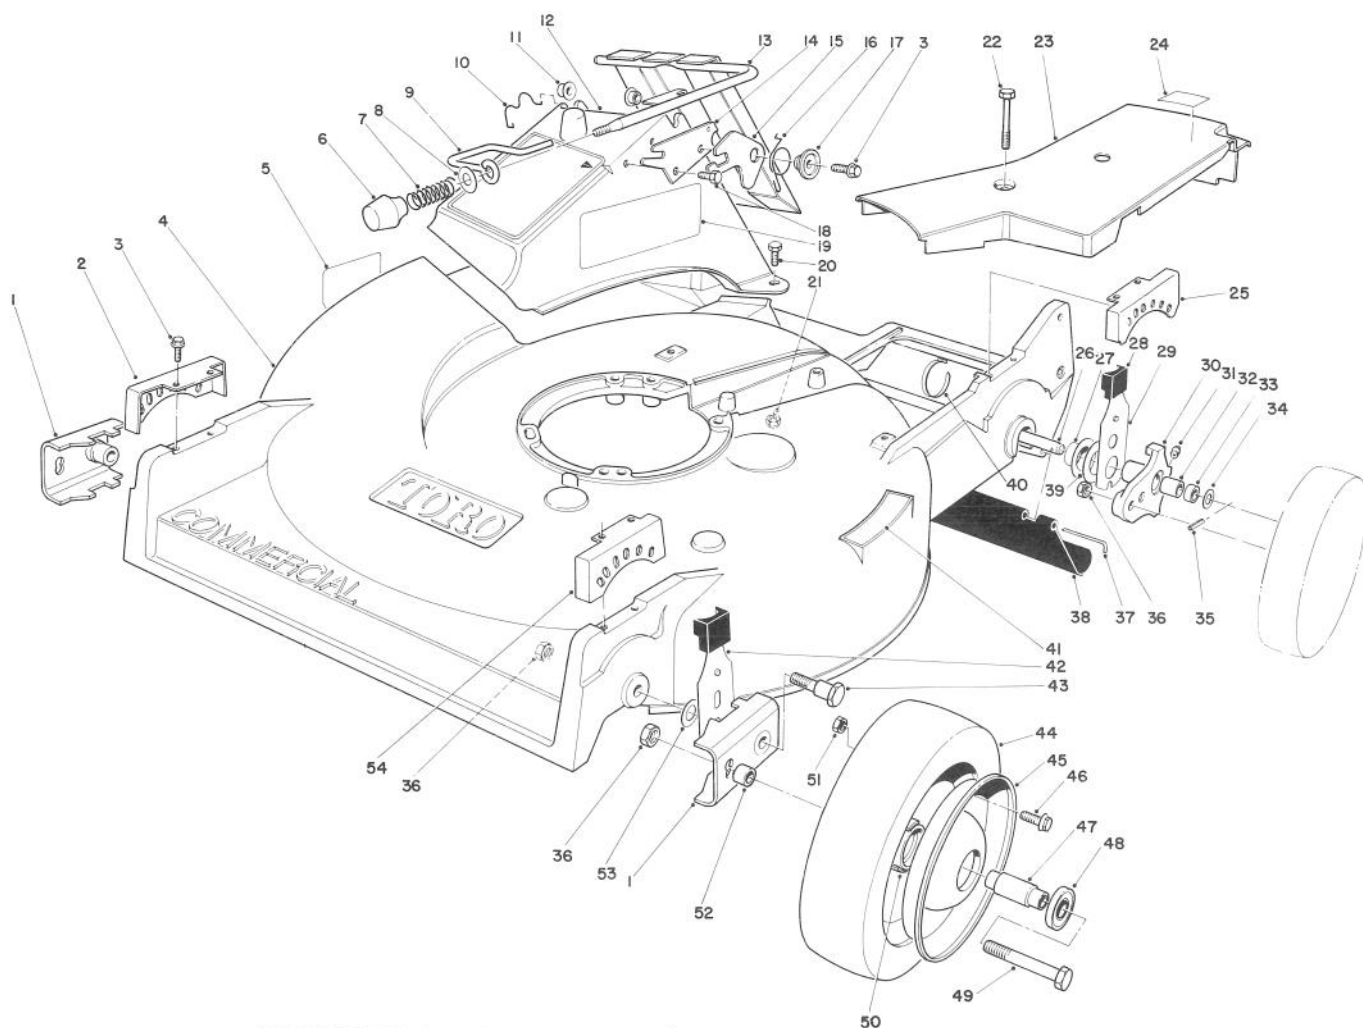


HOUSING ASSEMBLY (Model 22030 Continued)

Ref. No.	Part No.	Description	No. Used
28	25-7740	Knob — Arm	4
29	49-8810	Spring Arm Assembly Rear	2
30	42-3510	Pivot Arm (Incl. Ref. #31-33)	2
31	302-56	Grease Fitting	4
32	47-2900	Bushing	4
33	47-2890	Bushing	4
34	36-4780	Washer — Thrust	2
35	32121-108	Roll Pin	2
36	3296-39	Nut — Lock	6
37	33-3208	Rod — Shield	1
38	44-0580	Shield — Rear Safety	1
39	36-4770	Washer	1
40	3290-378	Cable Tie	1
41	46-7370	Decal — Step Pad	1
42	49-8800	Spring Arm Assembly Front	2

Ref. No.	Part No.	Description	No. Used
43	49-9180	Screw — Pivot	2
44	53-7740	Tire	4
45	53-7780	Plate — Wheel Half	8
46	3234-26	Hex Flange Capscrew	16
47	52-2440	Spacer — Bearing	4
48	52-2450	Bearing	8
49	323-12	Hex Hd. Capscrew	4
50	52-2410	Hub — Bearing Support	4
51	3296-56	Locknut	16
52	52-2480	Spacer — Wheel	4
53	49-9150	Washer — Pivot	2
54	49-8760	Quadrant — Front L.H.	1
*	53-7720	Wheel & Tire Assembly (Incl. Ref. #44-48, 50, & 51)	4

 
*Not Illustrated

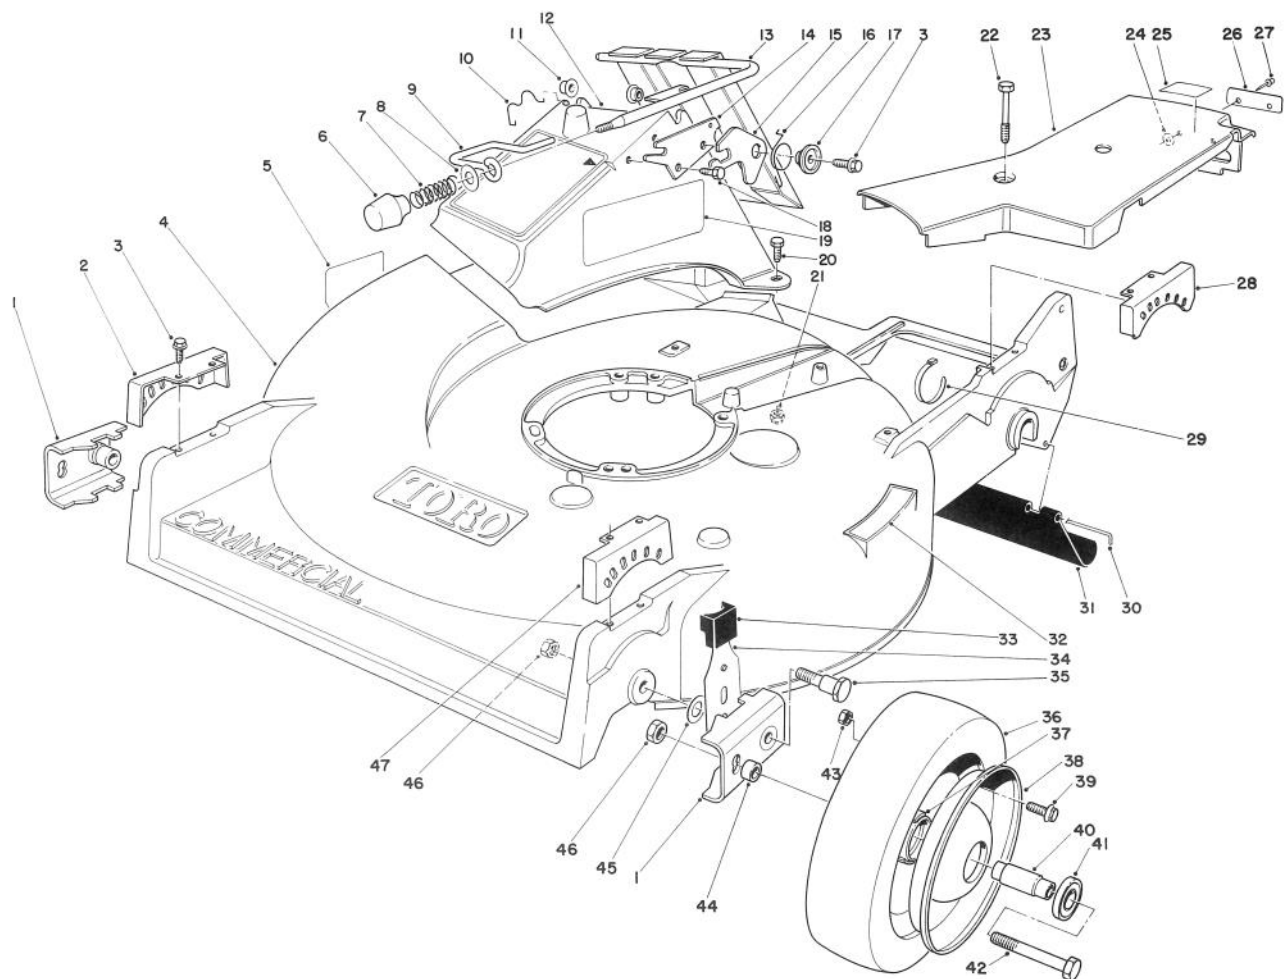

HOUSING ASSEMBLY (Model 22035)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	49-9160	Pivot Arm Assembly	2	25	52-2620	Label — Grease	1
2	49-8770	Quadrant — Front R.H.	1	26	48-2790	Name Plate — Ground Speed	1
3	11-9760	Screw — Thread Forming	9	27	3290-409	Rivet	2
4	11-7859	Housing — Commercial (Incl. Ref. #5 & 32)	1	28	49-8740	Quadrant — Rear L.H.	1
5	39-5770	Decal — Danger	1	*	49-8750	Quadrant — Rear R.H.	1
6	233-37	Knob	1	29	3290-378	Cable Tie	1
7	23-0920	Spring — Compression	1	30	33-3208	Rod — Shield	1
8	3256-25	Washer	1	31	44-0580	Shield — Rear Safety	1
9	23-0940	Latch — Door	1	32	46-7370	Decal — Step Pad	1
10	33-4830	Retainer — Door	1	33	25-7740	Knob — Arm	2
11	23-0880	Bushing	2	34	49-8800	Spring Arm Assembly Front	2
12	11-5639	Chute & Door Assy. (Incl. Ref. #3, 6-11 & 13-21)	1	35	49-9180	Screw — Pivot	2
13	33-5660	Door Handle	1	36	53-7740	Tire	2
14	23-1040	Latch Plate	1	37	52-2410	Hub — Bearing Support	2
15	42-4010	Latch — Safety	1	38	53-7780	Plate — Wheel Half	4
16	33-4860	Spring — Torsion	1	39	3234-26	Hex Flange Capscrew	8
17	43-4840	Latch — Spacer	1	40	52-2440	Spacer — Bearing	2
18	32104-17	Screw — Self Tapping Hex Hd.	1	41	52-2450	Bearing — Wheel	4
19	29-4720	Decal — Safety Instructions	1	42	323-12	Hex Hd. Capscrew	2
20	321-7	Screw — Cap Hex Hd.	2	43	3296-56	Locknut	8
21	3296-42	Nut — Lock	2	44	52-2480	Spacer — Wheel	2
22	37-7260	Screw — Special	2	45	49-9150	Washer — Pivot	2
23	48-2770	Belt Cover Assmblly (Incl. Ref. #24, 26-27)	1	46	3296-39	Nut — Lock	4
24	3256-49	Washer	1	47	49-8760	Quadrant — Front L.H.	1
				*	53-7720	Wheel & Tire Assembly (Incl. Ref. #36-41 & 43)	2

 *Not Illustrated

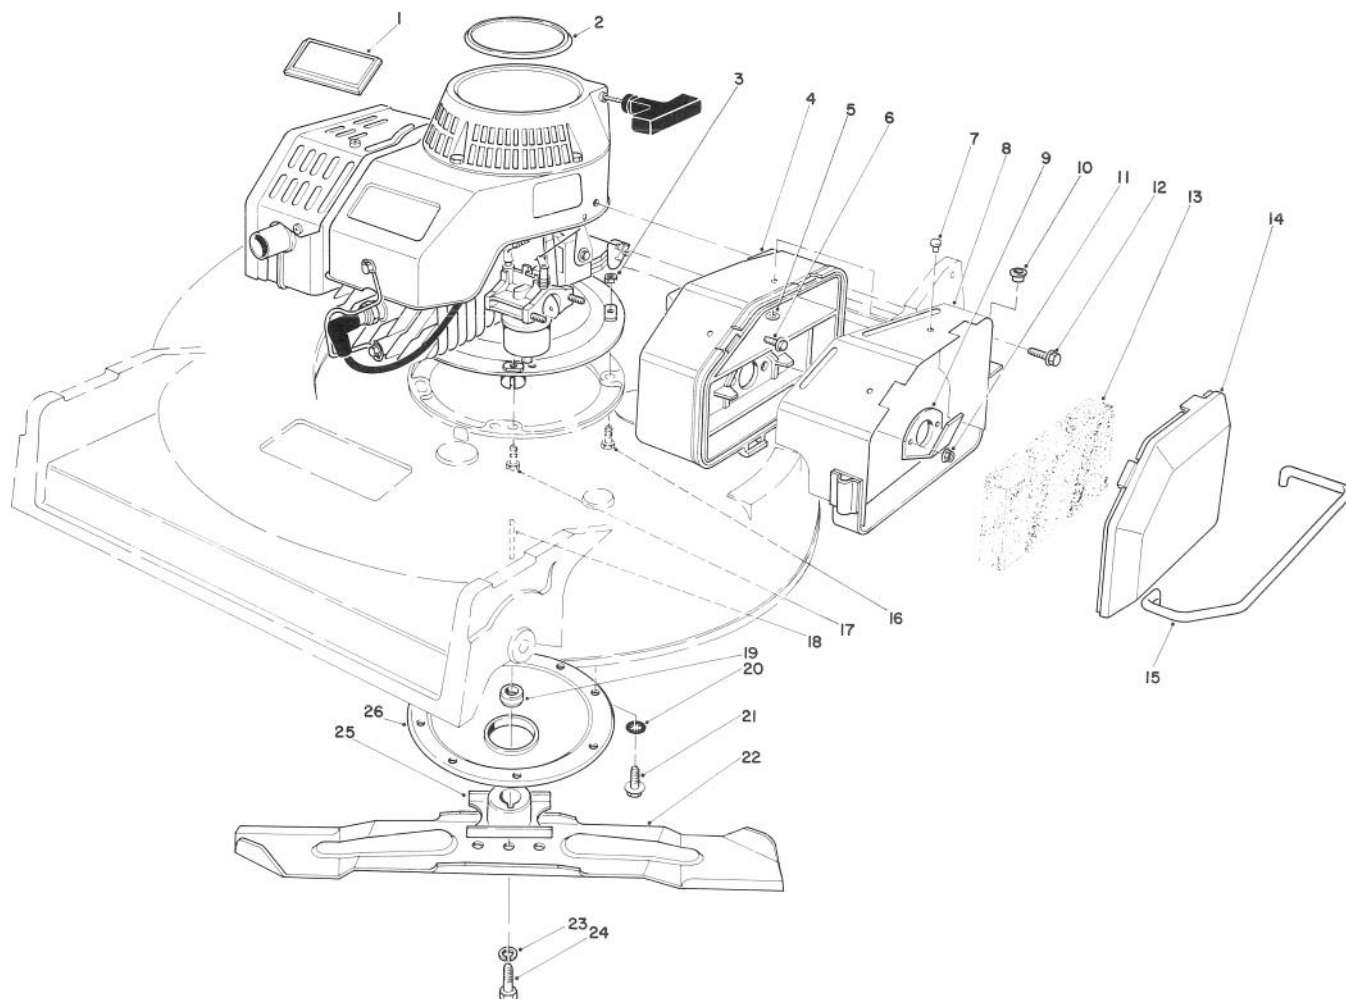


ENGINE ASSEMBLY (Model 22030)

Ref. No.	Part No.	Description	No. Used
1	46-8291	Plate — Logo Toro	1
2	49-9030	Plate — Logo Engine	1
3	3218-3	Nut — Hex Jam	3
4	52-2200	Air Cleaner Assembly (Incl. Ref. #5, 7, 8)	1
5	3269-6	Washer	2
6	51-3220	Capscrew — Hex Flange	1
7	3269-5	Rivet	2
8	52-2250	Air Cleaner Band	1
9	81-0140	Deflector — Spitback	1
10	237-127	Snap Bushing	1
11	49-7810	Locknut — Hex Flange	2
12	81-1280	Capscrew — Hex Flange	1
13	81-0100	Filter — Foam	1
14	81-0120	Cover — Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
15	52-2240	Guard — Air Cleaner	1
16	323-7	Screw — Cap Hex Hd.	3
17	323-6	Screw — Cap Hex Hd.	1
18	27-8590	Key — Square	1
19	52-2190	Spacer — Blade Retainer	1
20	3254-6	Washer — Internal Tooth Locking	3
21	32144-11	Screw — Thread Forming Hex Hd.	3
22	42-1000	Blade	1
23	3253-22	Washer — Lock	1
24	26-0670	Screw — Blade	1
25	52-2170	Blade — Retainer	1
26	48-2591	Crankshaft Protector	1
*	59260	Complete Engine	1

 *Not Illustrated

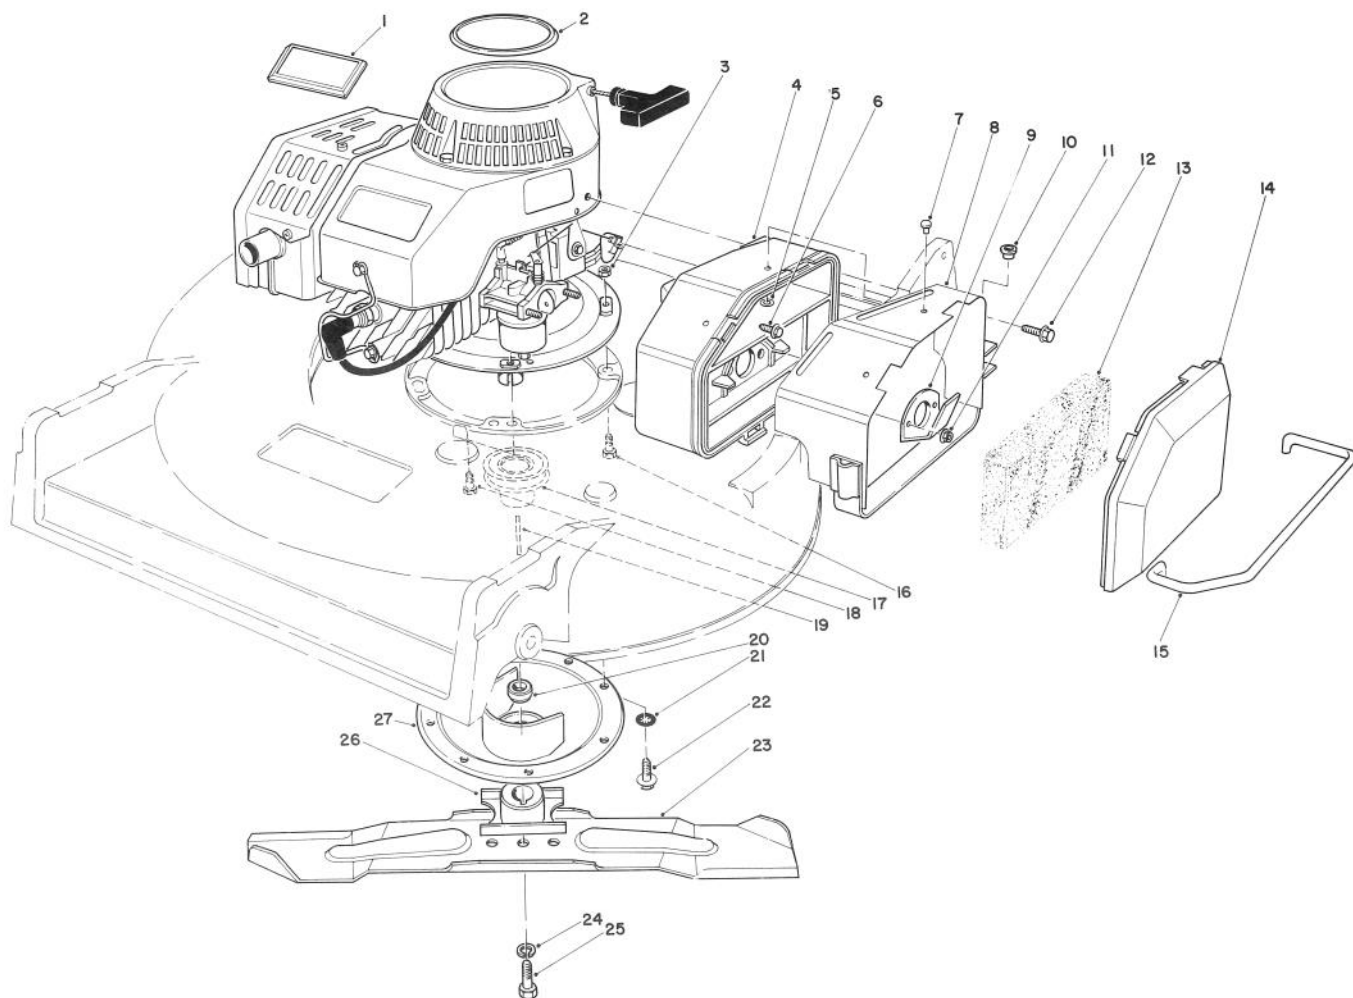


ENGINE ASSEMBLY (Model 22035)

Ref. No.	Part No.	Description	No. Used
1	46-8291	Plate — Logo Toro	1
2	49-9030	Plate — Logo Engine	1
3	3218-3	Nut — Hex Jam	3
4	52-2200	Air Cleaner Assembly (Incl. Ref. #5, 7, 8)	1
5	3269-6	Washer	2
6	51-3220	Capscrew — Hex Flange	1
7	3269-5	Rivet	2
8	52-2250	Air Cleaner Band	1
9	81-0140	Deflector — Spitback	1
10	237-127	Snap Bushing	1
11	49-7810	Locknut — Hex Flange	2
12	81-1280	Capscrew — Hex Flange	1
13	81-0100	Filter — Foam	1
14	81-0120	Cover — Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
15	52-2240	Guard — Air Cleaner	1
16	323-7	Screw — Cap Hex Hd.	3
17	46-7910	Pulley — Driver	1
18	323-6	Screw — Cap Hex Hd.	1
19	27-6300	Key Square	1
20	52-2190	Spacer — Blade Retainer	1
21	3254-6	Lockwasher — Internal Tooth	3
22	32144-11	Screw — Thread Forming Hex Hd.	3
23	42-1000	Blade 21"	1
24	3253-22	Washer — Lock	1
25	26-0670	Screw — Blade	1
26	52-2170	Blade Retainer	1
27	48-2590	Crankshaft Protector Assembly	1
*	59260	Complete Engine	1

 *Not Illustrated

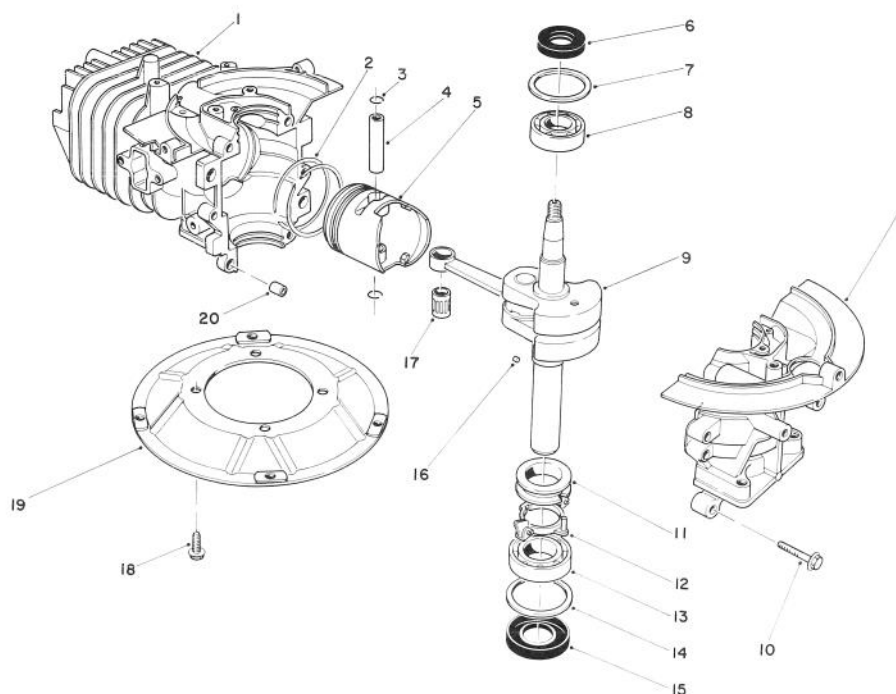


SHORT BLOCK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	81-2060	Crankcase/Cylinder Assy.	1
2	81-0590	Ring Set	1
3	81-0620	Circlip	2
4	81-0600	Wrist Pin	1
5	81-2140	Piston — 58 mm	1
6	81-0720	Oil Seal — Upper	1
7	81-0710	Thrust Washer — Upper	1
8	81-0690	Bearing — Upper 20 mm	1
9	81-2150	Crankshaft/Connecting Rod Assembly	1
10	81-0540	Bolt (30 mm Lg.)	6

Ref. No.	Part No.	Description	No. Used
11	81-0770	Collar — Governor	1
12	81-0750	Bracket — Governor Arm	1
13	81-0700	Bearing — Lower 25 mm	1
14	81-0730	Thrust Washer — Lower	1
15	81-0740	Oil Seal — Lower	1
16	81-0760	Pin	1
17	81-0610	Bearing — Wrist Pin	1
18	81-0570	Bolt	4
19	81-0560	Plate — Mounting	1
20	81-0520	Pin — Crankcase Dowel	2
*	11-6309	Short Block	1

 *Not Illustrated

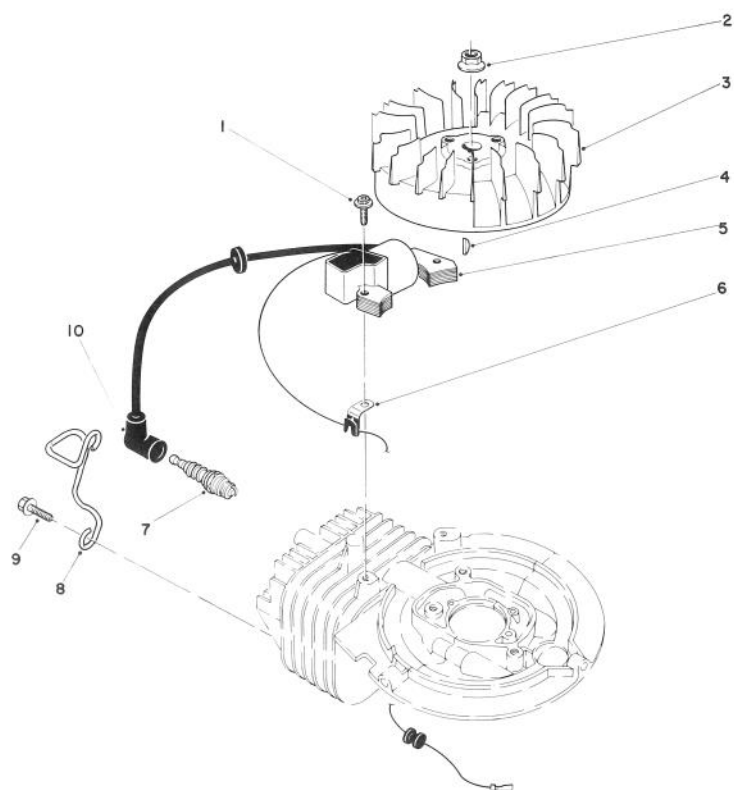


FLYWHEEL & MAGNETO ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	81-2050	Capscrew — Allenhead	2
2	81-1330	Nut	1
3	81-1980	Flywheel — Magneto	1
4	81-2180	Key — Flywheel	1
5	81-1990	Coil/Ignition Assembly	1
6	81-1480	Clamp	1

Ref. No.	Part No.	Description	No. Used
7	81-0181	Spark Plug	1
8	81-2120	Guard — Spark Plug	1
9	81-2350	Bolt — Self Tapping (20 mm Lg.)	2
10	81-1500	Cap Assembly — Spark Plug	1
*	41-7650	Puller — Flywheel	1

 *Not Illustrated

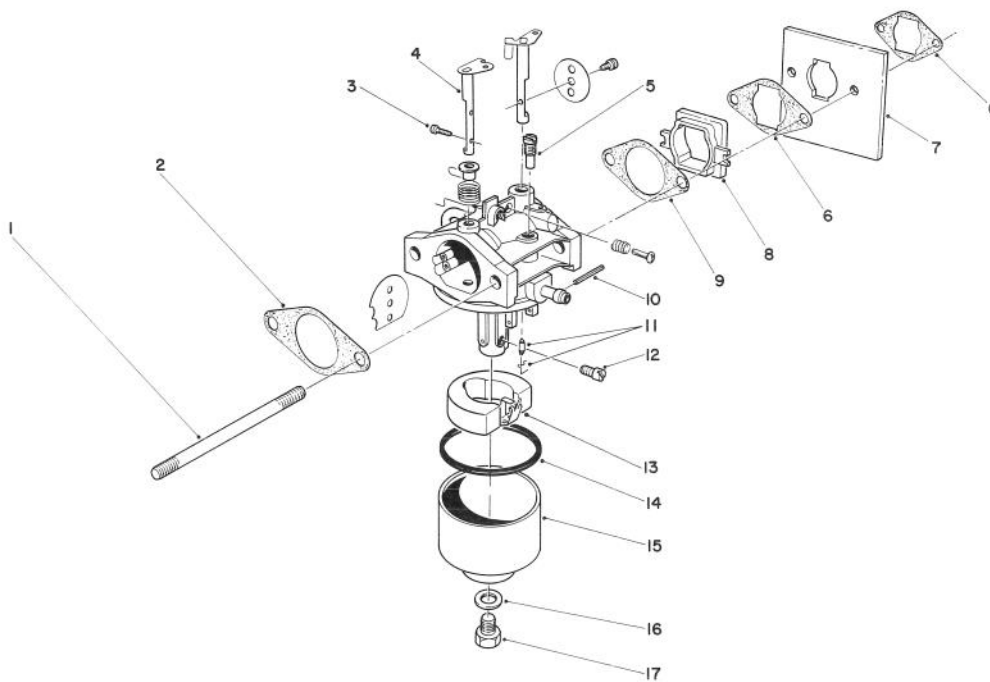


CARBURETOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	81-2240	Stud Bolt — Carburetor	2
2	81-0090	Gasket	1
3	81-2160	Screw — Choke Plate	2
4	81-1950	Shaft — Choke	1
5	81-1030	Jet — Pilot (#40)	1
6	81-2320	Gasket — Shield	2
7	81-2330	Shield — Carburetor	1
8	81-2190	Insulator — Carburetor	1
9	81-0780	Gasket — Carburetor	1
10	81-0980	Pin — Float	1
11	81-1600	Needle Valve — Float	1

Ref. No.	Part No.	Description	No. Used
12	81-1940	Jet — Main (#76.3)	1
*	81-2340	Jet — Main (#72.5) High Alt. Above 6,000 Ft. (Optional)	1
13	81-0970	Float	1
14	81-1010	Gasket — Float Bowl	1
15	81-1610	Bowl — Float	1
16	81-1020	Gasket — Bowl Capscrew	1
17	81-1000	Capscrew — Bowl	1
*	81-1960	Carburetor Kit (Incl. Ref. #2, 9, 11, 14, & 16)	1
*	81-1930	Carburetor Assembly Complete	1

 
*Not Illustrated

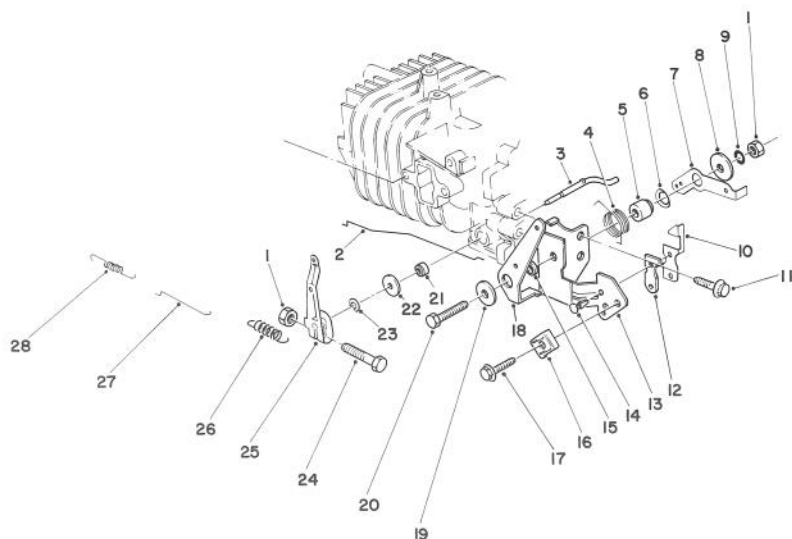

GOVERNOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	81-0900	Nut	2
2	81-1720	Rod — Choke	1
3	81-0840	Shaft — Governor	1
4	81-2460	Spring — Choke Control Lever	1
5	81-1770	Spacer — Governor	
		Spring Lever	1
6	81-1820	Washer — Governor	
		Spring Lever	1
7	81-1670	Lever — Governor Spring	1
8	50-0760	Washer — Choke Control Lever	1
9	81-1450	Washer — Lock	1
10	81-1840	Terminal — Kill Switch	1
11	81-1170	Bolt — Self Tapping	
		(15 mm Lg.)	1
12	81-1830	Insulator — Kill Switch	1
13	81-1680	Bracket — Throttle Control	1

Ref. No.	Part No.	Description	No. Used
14	81-1850	Rivet — Kill Switch	2
15	81-1760	Spacer — Choke Control Lever	1
16	81-1690	Clamp — Cable	1
17	50-0130	Bolt — Cable Clamp	1
18	81-1710	Lever — Choke Control	1
19	81-1750	Washer	1
20	81-1730	Bolt — Throttle Control Bracket	1
21	81-0850	Oil Seal — Governor Shaft	1
22	81-0860	Washer	1
23	81-0870	E — Ring	1
24	81-0890	Bolt	1
25	81-0880	Lever — Throttle Control	1
26	81-0940	Spring — Governor	1
27	81-0910	Rod — Carburetor	1
28	81-0920	Spring — Carburetor Rod	1

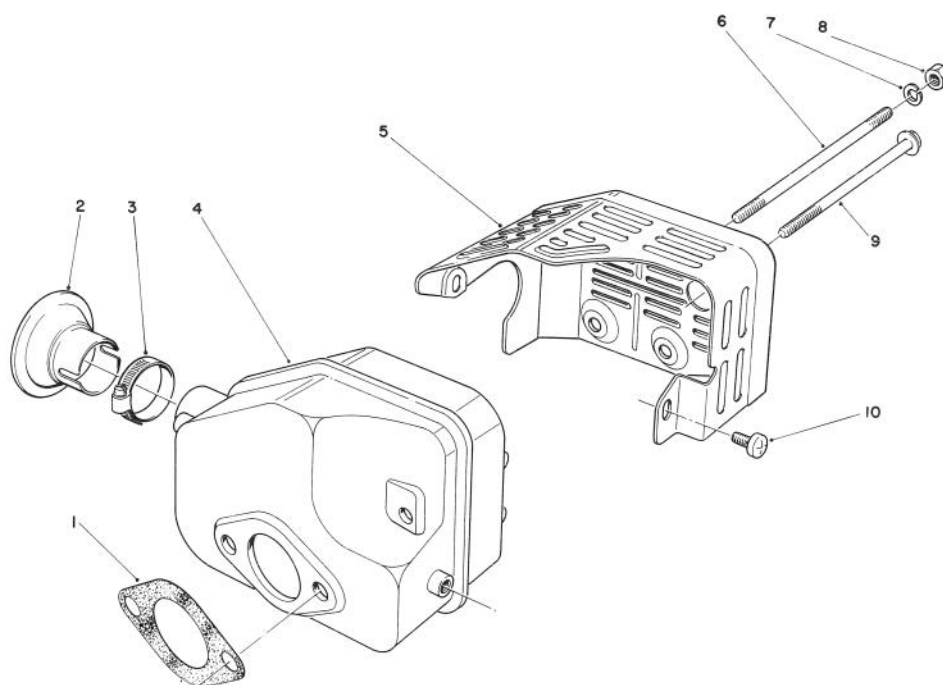 


MUFFLER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	81-1080	Gasket — Muffler	1
2	81-0200	Spark Arrester (Optional)	1
3†		Clamp	1
4	81-1090	Muffler	1
5	81-2450	Cover — Muffler	1

Ref. No.	Part No.	Description	No. Used
6	81-1100	Stud — Muffler	2
7	81-1120	Lockwasher	2
8	81-1110	Nut	2
9	81-1150	Bolt — Self Tapping	1
10	81-1140	Screw — Phillips Hd.	2

 † Obtain Locally

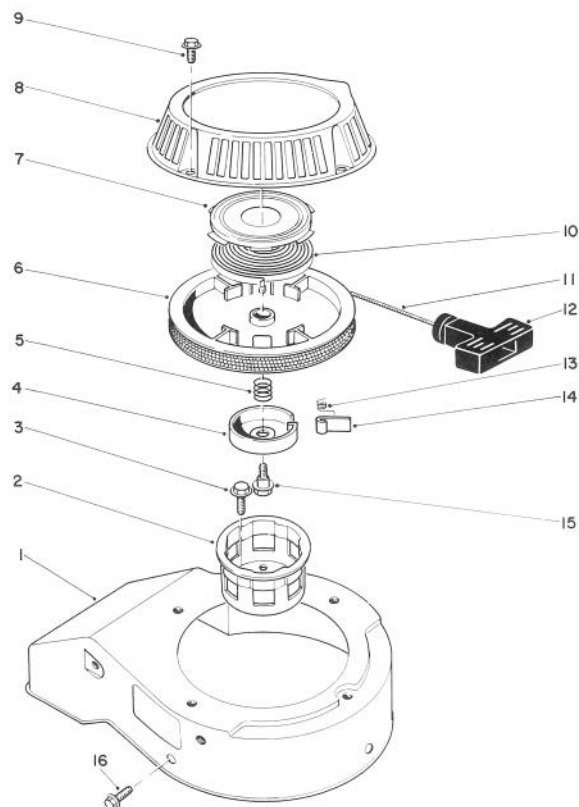


RECOIL STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	81-2080	Cover — Cooling Fan	1
2	81-2170	Pulley — Starter Cup	1
3	81-1300	Bolt 16 mm Lg.	3
4	81-1250	Retainer — Dog	1
5	81-1240	Spring — Compression	1
6	81-1210	Pulley — Rope	1
7	81-1640	Retainer — Recoil Spring	1
8	81-2100	Case — Starter	1
9	81-1280	Bolt	4
10	81-1200	Spring — Recoil	1

Ref. No.	Part No.	Description	No. Used
11	81-1270	Rope	1
12	81-1630	Handle — Recoil	1
13	81-1220	Spring — Dog	1
14	81-1230	Dog — Starter	1
15	81-1260	Bolt Shoulder	1
16	81-1170	Bolt — Self Tapping (15 mm Lg.)	2
*	81-2030	Starter Assembly (Incl. Ref. #4-15)	1

 
*Not Illustrated

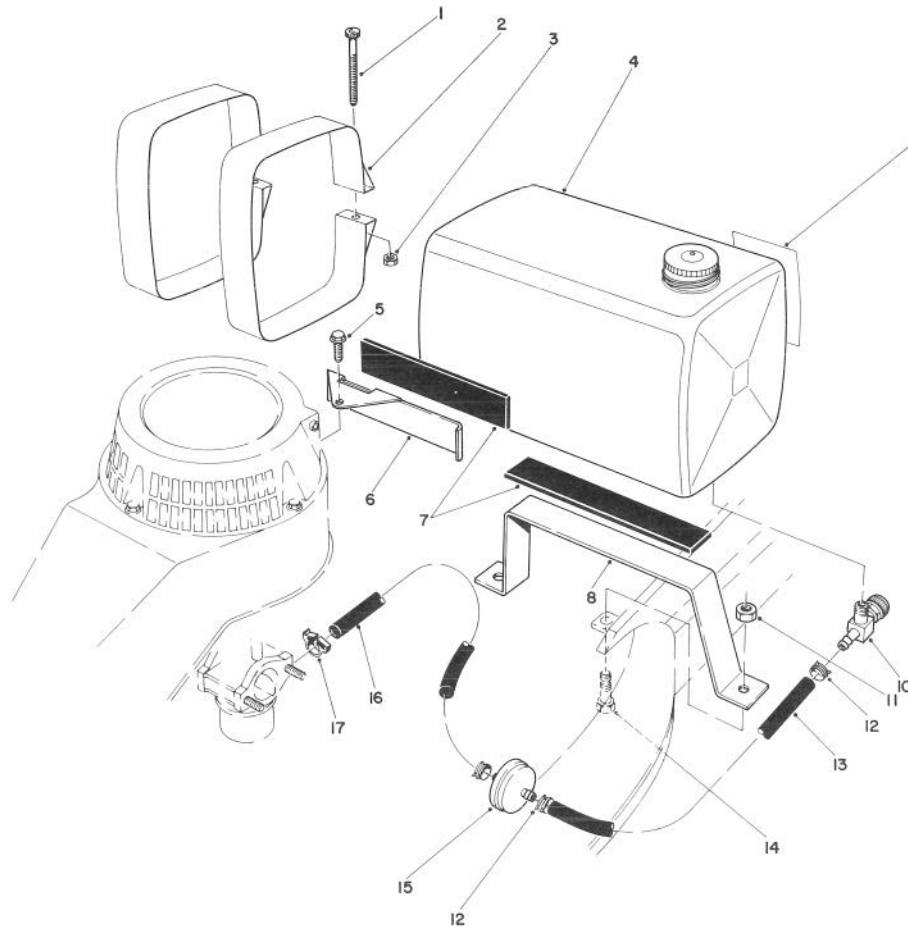

GAS TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3274-62	Screw — Cap Hex Socked Hd.	2
2	52-2320	Tank Mounting Strap	2
3	3217-5	Nut — Hex	2
4	52-2330	Tank — Gas	1
5	81-1280	Bolt	4
6	52-2300	Mount — Tank Front	1
7	52-2290	Pad — Isolator	2
8	52-2310	Mount — Tank Bottom	1
9	52-2350	Decal Fuel Tank	1

Ref. No.	Part No.	Description	No. Used
10	304-71	Valve — Fuel Shutoff	1
11	32152-1	Nut — Lock	2
12	2210-185	Clamp — Fuel Line	3
13	51-3210	Line — Fuel	1
14	322-5	Screw — Cap Hex Hd.	2
15	42-5240	Filter — Fuel	1
16	51-3211	Line — Fuel	1
17	51-3200	Clamp — Fuel Line	1

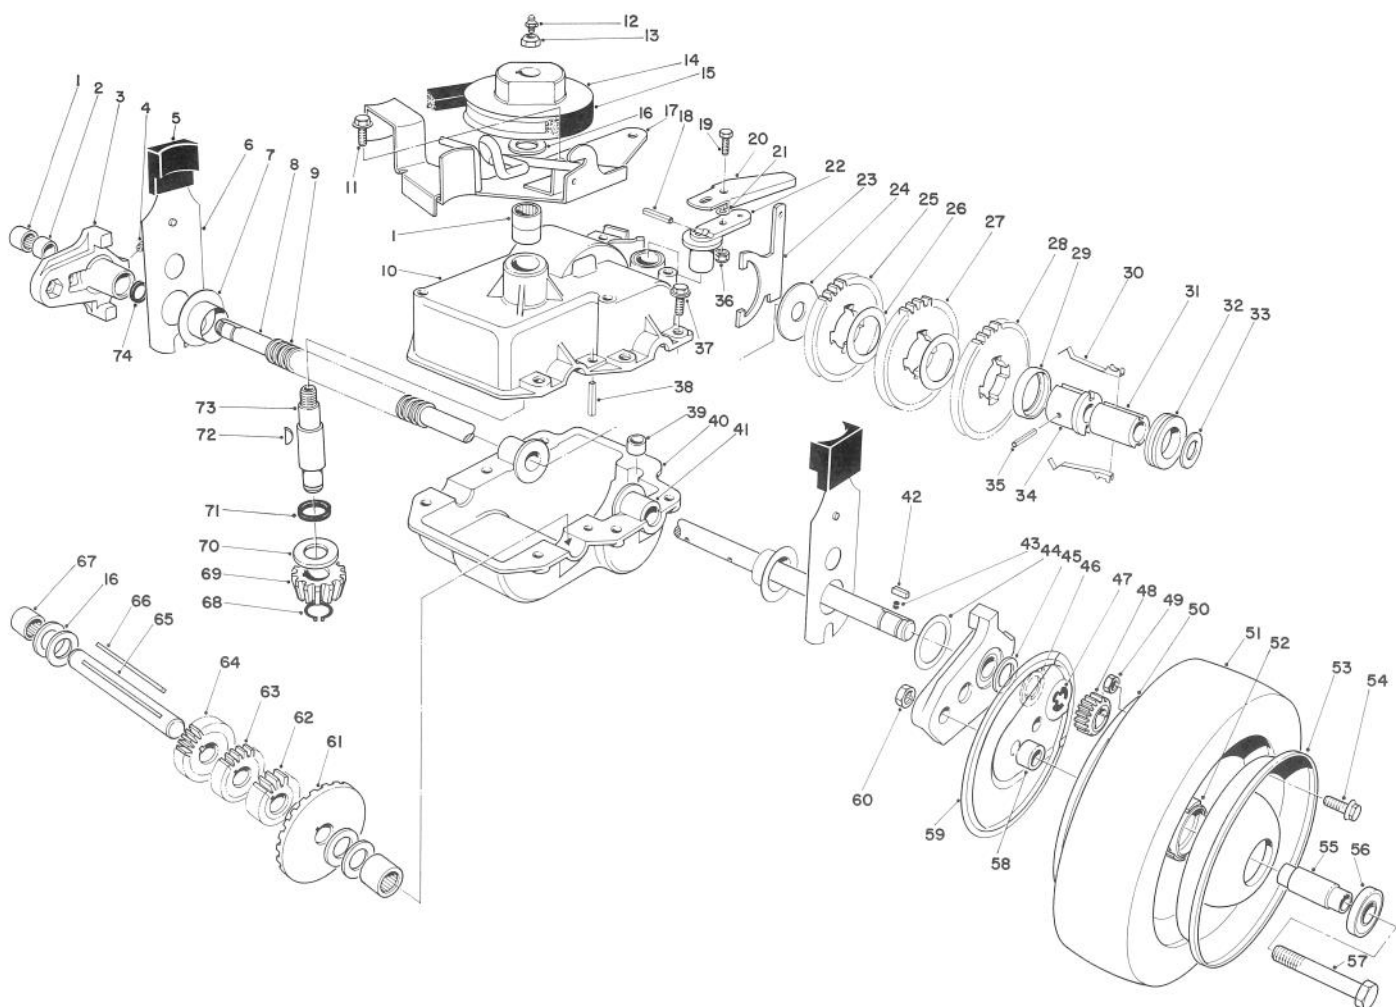 


GEAR CASE ASSEMBLY (Model 22035)

Ref. No.	Part No.	Description	No. Used
1	47-7270	Needle Bearing	4
2	47-2890	Bushing	2
3	48-2540	Pivot Arm Assembly (Incl. Ref. #1-2, 4 & 69)	2
4	302-56	Grease Fitting	2
5	25-7740	Knob Arm	2
6	49-8810	Spring Arm Assembly — Rear	2
7	48-2170	Cap — End	2
8	44-0850	Shaft — Output	1
9	24-7922	Cover — Drive Shaft	1
10†		Case Upper	1
11	12-3270	Screw — Special	2
12	302-5	Grease Fitting	1
13	3296-5	Nut — Lock	1
14	39-6740	Pulley	1
15	36-8070	V-Belt	1
16	36-4790	Thrust Washer	5
17	48-2490	Belt Guide Bracket	1
18	32121-99	Pin — Roll	1
19	3290-134	Screw — Machine Hex Hd.	1
20	48-2560	Cover — Shift Lever	1
21	3256-14	Washer	1
22	29-9560	Shift Lever	1

Ref. No.	Part No.	Description	No. Used
23	29-9520	Shift Yoke	1
24	29-9690	Washer — Plain	1
25	42-4740	Gear — 38T	1
26	36-4770	Spacer — Gear	2
27	29-9271	Gear — 42T	1
28	46-3560	Gear — 52T	1
29	39-7830	Key Retainer	1
30	29-9330	Key — Shift	2
31	39-6720	Sleeve	1
32	29-9340	Shift Collar	1
33	36-4780	Washer — Plain	1
34	39-6730	Sleeve Body	1
35	32121-108	Pin — Spiral	1
36	3296-2	Locknut	1
37	49-2040	Screw — Self Tapping Hex Washer Hd.	6
38	32121-100	Pin — Roll	1
39	29-9570	Bushing — Yoke	1
40†		Case — Lower	1
41	48-2450	Bushing — Output Shaft	2
42	39-9680	Key	2
43	53-7850	Spring	2
44	36-4770	Washer	1

 † Order Complete Gear Case Assembly 48-2500

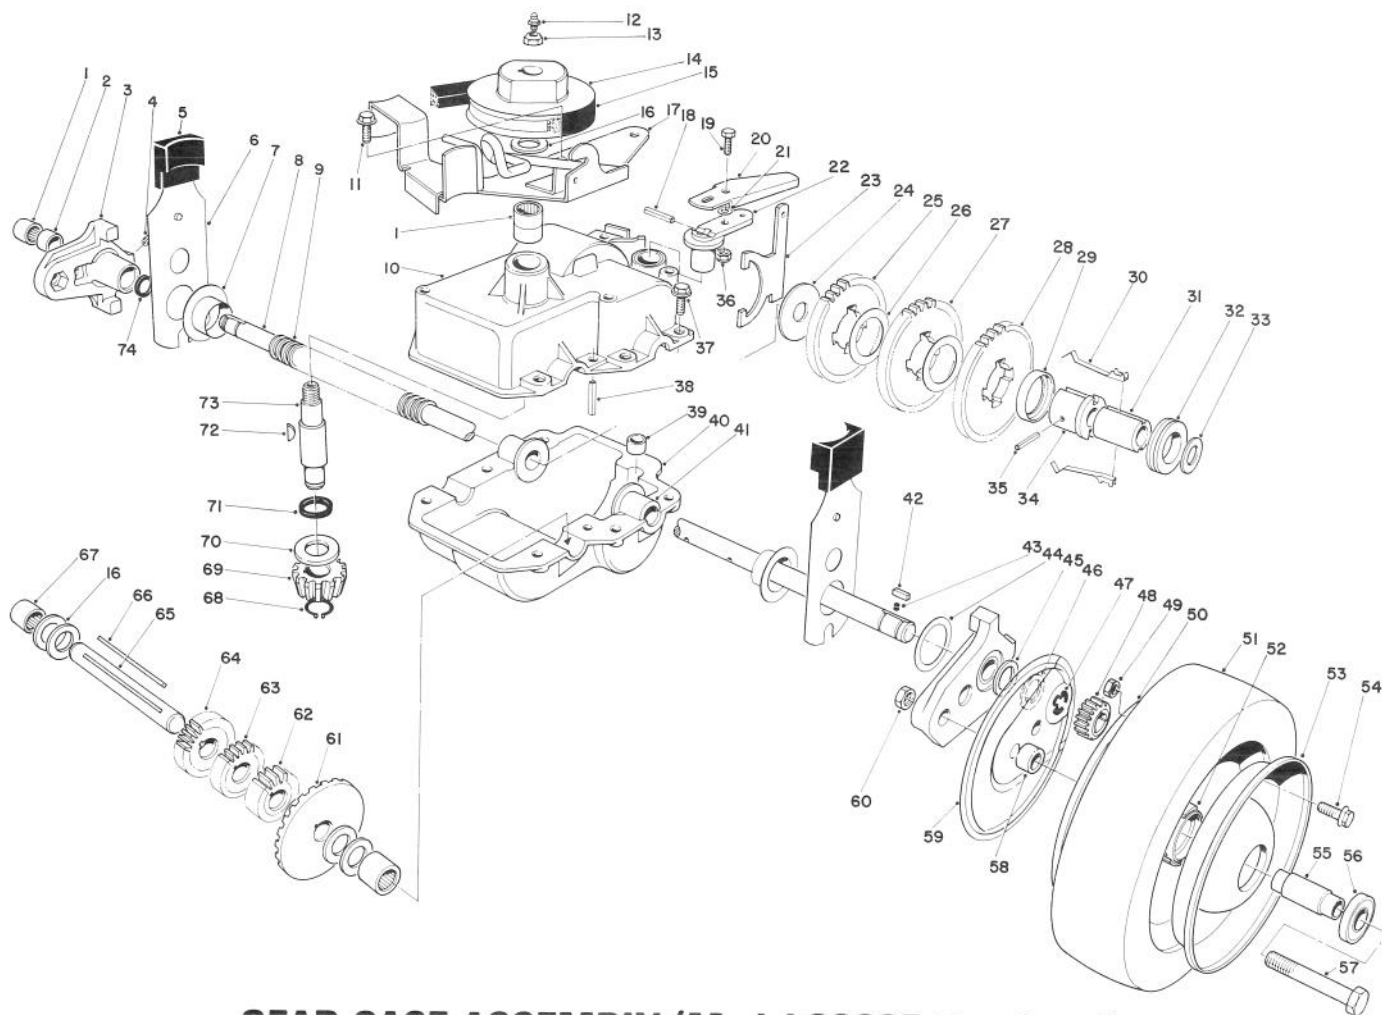


GEAR CASE ASSEMBLY (Model 22035 Continued)

Ref. No.	Part No.	Description	No. Used
45	48-2890	Washer — Thrust	2
46	48-2580	Washer — Thrust Keyed	2
47	32151-68	Ring — Grip	4
48	39-9160	Pinion	2
49	3296-56	Locknut	8
50	53-7790	Wheel — Inner Half	2
51	53-7740	Tire	2
52	52-2410	Hub — Bearing Support	2
53	53-7780	Plate — Wheel Half	2
54	3234-26	Hex Flange Screw	8
55	52-2440	Spacer — Bearing	2
56	52-2450	Bearing — Wheel	4
57	323-12	Hex Hd. Capscrew	2
58	52-2480	Spacer — Wheel	2
59	44-0600	Cover — Wheel	2
60	3296-39	Nut — Lock	2
61	39-6670	Gear — Bevel	1

Ref. No.	Part No.	Description	No. Used
62	46-3540	Gear — 12T	1
63	46-3550	Gear — 14T	1
64	39-6650	Gear — 18T	1
65	48-2520	Shaft — Intermediate	1
66	39-7841	Key Square	1
67	252-103	Bearing — Closed	2
68	32151-57	Ring — Retaining	1
69	39-6660	Pinion — Bevel	1
70	47-2910	Thrust Washer	1
71	47-7260	Seal	1
72	3257-1	Key Woodruff	2
73	48-2460	Shaft — Input	1
74	47-7260	Seal	2
*	48-2500	Gear Case Assembly (Incl. Ref. #8, 10-14, 16-41 & 61-73)	1
*	53-7730	Wheel & Tire Assembly (Incl. Ref. #49-56)	2

 
*Not Illustrated

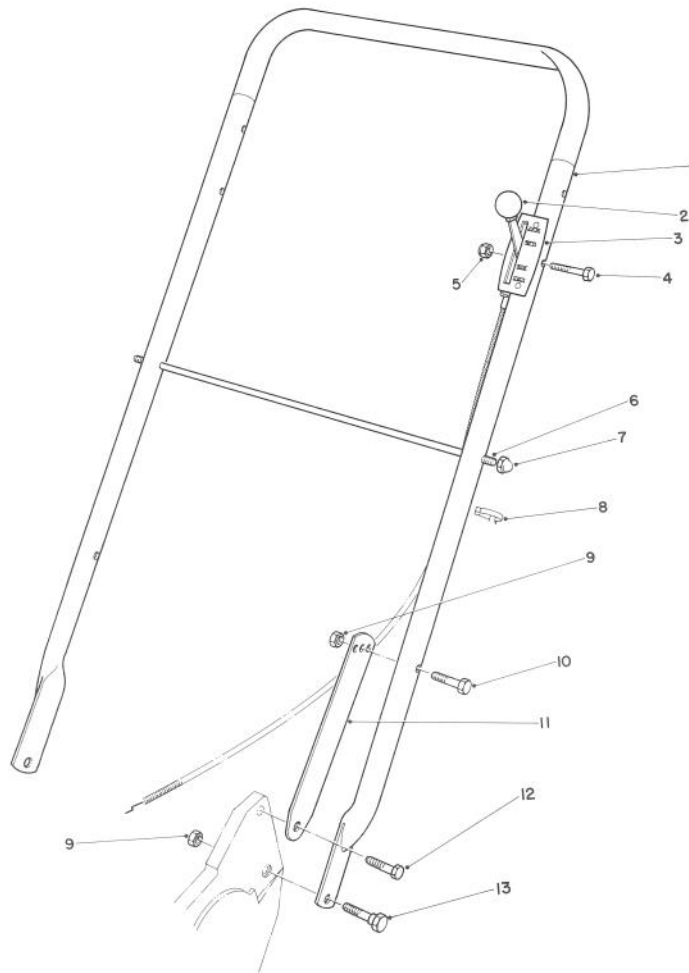

HANDLE ASSEMBLY (Model 22030)

Ref. No.	Part No.	Description	No. Used
1	48-2610	Handle	1
2	233-25	Knob	1
3	53-7831	Control — Throttle (Incl. Ref. #2)	1
4	321-10	Screw — Cap Hex Hd.	1
5	3296-42	Nut — Lock	1
6	48-2810	Rod — Bag Support	1


Ref. No.	Part No.	Description	No. Used
7	32111-7	Nut — Cap Locking	2
8	218-466	Clip — Bowden	1
9	32152-1	Nut — Lock	6
10	322-7	Screw — Cap Hex Hd.	2
11	53-7820	Latch — Handle	2
12	322-5	Hex Hd. Capscrew	2
13	27-7211	Screw — Shoulder	2

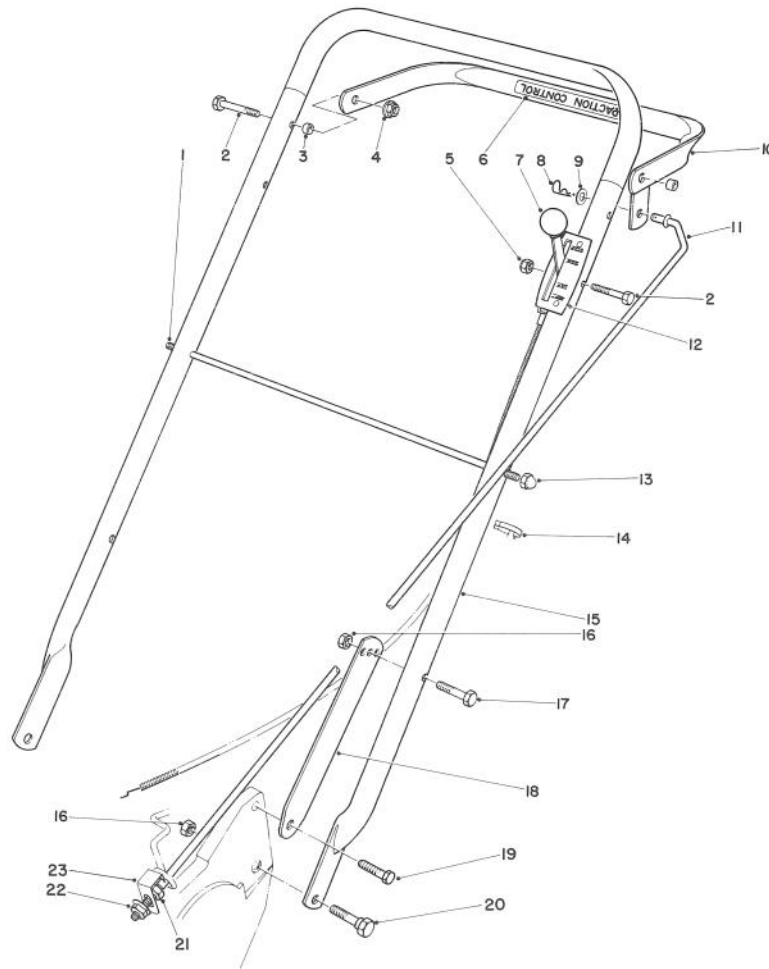 

HANDLE ASSEMBLY (Model 22035)

Ref. No.	Part No.	Description	No. Used
1	48-2810	Rod — Bag Support	1
2	321-10	Capscrew	3
3	48-2740	Stand-off Lift Bail	2
4	32128-10	Nut — Hex Flange	2
5	3296-42	Nut — Lock	1
6	48-2750	Decal — Traction Control	1
7	233-25	Knob	1
8	3290-307	Pin — Cotter Hair	1
9	3256-23	Washer — Plain	1
10	48-2470	Control Bail Assembly	1
11	48-2720	Rod — Control	1
12	53-7831	Control — Throttle	1

Ref. No.	Part No.	Description	No. Used
13	32111-7	Nut — Cap Locking	2
14	218-466	Clip — Bowden	1
15	48-2610	Handle	1
16	32152-1	Nut — Lock	6
17	322-7	Capscrew	2
18	53-7820	Latch — Handle	2
19	322-5	Hex Hd. Capscrew	2
20	27-7211	Screw — Shoulder	2
21	32149-11	Nut — Hex	1
22	32128-26	Nut — Hex Flange	1
23	48-2980	Bracket — Rod Stop	1

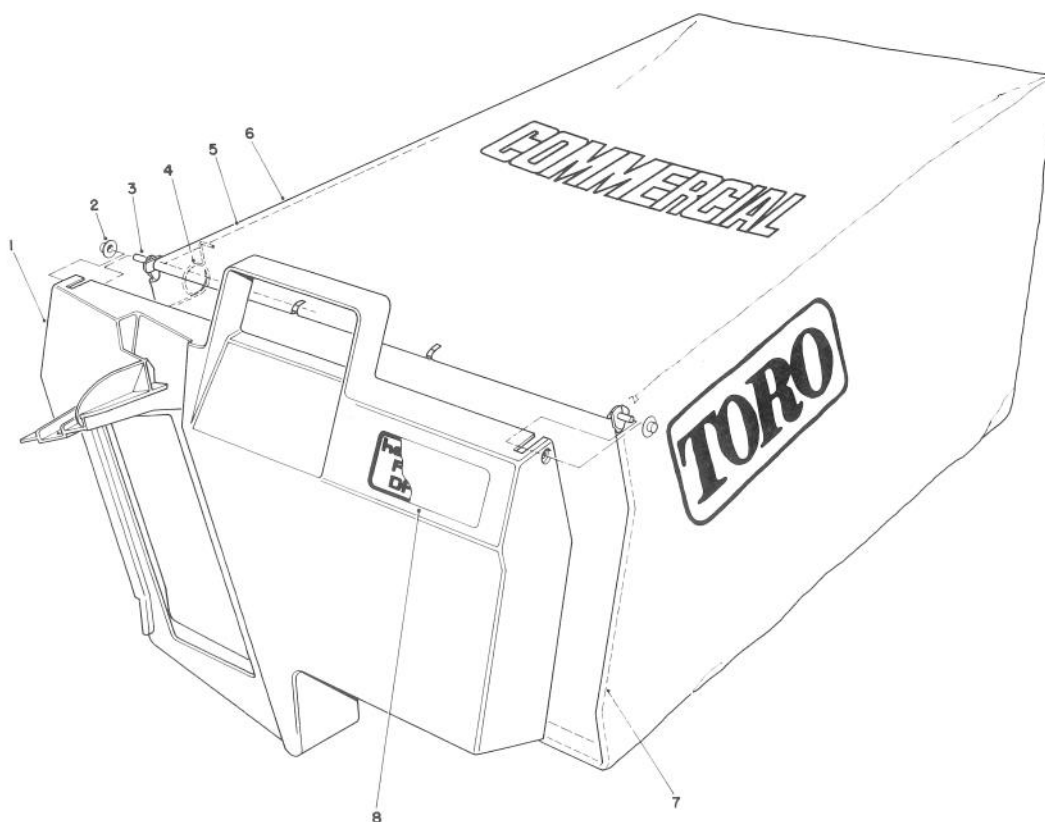 


GRASS BAG ASSEMBLY NO. 11-5609

Ref. No.	Part No.	Description	No. Used
1†		Door — Grass Bag	1
2	3290-422	Push Nut — Washer Cap	2
3	33-4820	Hinge — Bag Door	1
4	36-6910	Spring	2
5	42-4030	Frame — Bag Upper	1

Ref. No.	Part No.	Description	No. Used
6†		Bag — Grass	1
7	42-4020	Frame — Bag	1
8†		Decal — Bag Door	1
*	11-5609	Grass Bag Assembly (Incl. Ref. #1-8)	1

*Not Illustrated

 †Order Complete Grass Bag Assembly 11-5609

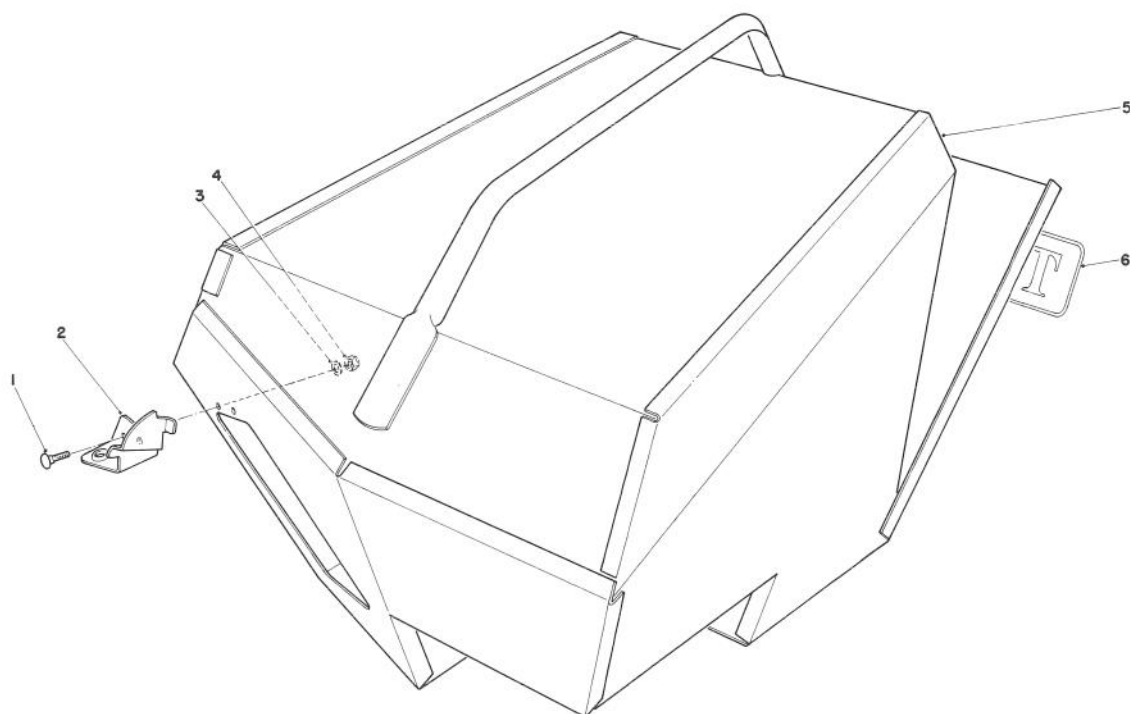

STEEL GRASS CATCHER (Model 22099) (Optional)

Ref. No.	Part No.	Description	No. Used
1	3229-25	Bolt — Carriage	2
2	52-4990	Bracket — Latch	1
3	3256-1	Washer — Plain	2

Ref. No.	Part No.	Description	No. Used
4	3296-42	Nut — Lock	2
5	52-5020	Steel Bag	1
6	43-5110	Decal — Toro	1

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change apparently has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

Model and Serial Numbers

The 21" H.P. & S.P. Commercial Rear Bagger has two identification numbers: a model number and a serial number. The two numbers are stamped on a plate which is located on Housing between the rear wheels. In any correspondence concerning the 21" H.P. & S.P. Commercial Rear Bagger, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Distributor, supply the following information:

1. Model and serial numbers of the 21" H.P. & S.P. Commercial Rear Bagger.
2. Part number, description, and quantity of part(s) desired.

NOTE: do not order by reference number if a parts catalog is being used; use the PART NUMBER.

The Toro Promise

A ONE YEAR LIMITED WARRANTY Model 22030 and Model 22035 Commercial Rear Bagger's

The Toro Company promises to repair your TORO Product if defective in materials or workmanship. The following time periods from the date of purchase apply:

Commercial Products 1 Year

The costs of parts and labor are included, but the customer pays the transportation costs on walk rotary mowers.

If you feel your TORO product is defective and wish to rely on The Toro Promise, the following procedure is recommended:

1. Contact your Authorized TORO Distributor or Commercial Dealer (the Yellow Pages of your telephone directory is a good reference source).
2. The TORO Distributor or Commercial Dealer will advise you on the arrangements that can be made to inspect and repair your product.
3. The TORO Distributor or Commercial Dealer will inspect the product and advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without an extra charge to you.

If for any reason you are dissatisfied with the distributor's analysis of the defect or the service performed, you may contact us.

Write:

TORO Commercial Products Service Department
8111 Lyndale Avenue South
Minneapolis, Minnesota 55420

The above remedy of product defects through repair by an Authorized TORO Distributor or Commercial Dealer is the purchaser's sole remedy for any defect.

THERE IS NO OTHER EXPRESS WARRANTY. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This Warranty applies only to parts or components which are defective and does not cover repairs necessary due to normal wear, misuse, accidents, or lack of proper maintenance. Regular, routine maintenance of the unit to keep it in proper condition is the responsibility of the owner.

All warranty repairs reimbursable under the Toro Promise must be performed by an Authorized TORO Commercial Dealer or Distributor using Toro approved replacement parts.

Repairs or attempted repairs by anyone other than an Authorized TORO Distributor or Commercial Dealer are not reimbursable under the Toro Promise. In addition, these unauthorized repair attempts may result in additional malfunctions, the correction of which is not covered by warranty.

THE TORO COMPANY IS NOT LIABLE FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE USE OF THE PRODUCT INCLUDING ANY COST OR EXPENSE OF PROVIDING SUBSTITUTE EQUIPMENT OR SERVICE DURING PERIODS OF MALFUNCTION OR NON-USE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

MAINTENANCE RECORD

[illegible]