



Form No. 3473-110 Rev B

Count on it.

Parts Catalog

Multi Pro® 1750 Turf Sprayer

Model No. 41196—Serial No. 400000000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Roll-Over Protection System and Seat Assembly	6
Frame Assembly.	8
Rear Drive Assembly	10
Case Assembly Transaxle Assembly No. 120-7610.	12
Center Plate Assembly Transaxle Assembly No. 120-7610	13
Main Shaft Assembly Transaxle Assembly No. 120-7610	14
Reduction Shaft Assembly Transaxle Assembly No. 120-7610	15
Reverse Shaft Assembly Transaxle Assembly No. 120-7610	16
Main Shift Assembly Transaxle Assembly No. 120-7610.	17
Counter Shaft Assembly Transaxle Assembly No. 120-7610	18
Differential Gear Assembly Transaxle Assembly No. 120-7610	19
Differential Carrier Assembly Transaxle Assembly No. 120-7610	20
Differential Lock Assembly Transaxle Assembly No. 120-7610	21
Axle Shaft Assembly Transaxle Assembly No. 120-7610	22
Brake Caliper Assembly No. 127-7424.	23
Brake Hydraulic Assembly	24
Master Cylinder Assembly No. 104-6782.	25
Front Suspension Assembly	26
Hydraulic Cylinder Assembly No. 125-0720	29
Pedal Assembly	30
Parking Brake Lever and Cable Assembly	32
Control Console Mount Assembly	33
Gear Shift and Drift Lock Control Assembly	34
Shift Assembly No. 106-7887.	35
Control Console Assembly	36
Hood, Dash and Headlight Assembly	38
Seat Base and Front Fender Assembly	40
Hydraulic Steering Assembly	42
Hydraulic Pump Assembly No. 121-6545.	44
Steering Valve Assembly No. 138-6100.	45
Boom Lift Hydraulic Assembly	46
Hydraulic Cylinder Assembly No. 117-0701.	47
On-Off Boom Lift Valve Assembly No. 136-2400	48
Engine Mounting Assembly	50
Pump Assembly No. 145-3381	52
Exhaust Assembly	53
Fuel Tank, Filter and Line Assembly	54
Driveshaft Connection Assembly	56
Driveshaft Assembly No. 119-6040	58
Clutch and Bell Housing Assembly	59
Spray Tank Assembly	60
Tank Assembly No. 121-6491	61
Spray Tank Lid Assembly No. 138-6283	62
Filter Assembly No. 130-7096	63
Spray Tank Valve Assembly	64
Section Manifold Assembly.	65
Bypass Valve Assembly No. 127-9805.	66
3-Way Valve Assembly No. 147-3183.	67
Agitation Manifold Assembly	68
M100 Manifold Assembly No. 161-4110.	70
3-Way Flange Manifold Assembly No. 147-3192	71
Pressure Filter Assembly No. 131-3791.	72
QD Manifold Assembly No. 161-4111	73
Hose Assembly.	74

Contents (continued)

Main Wiring Harness and Battery Assembly 76

Center Boom Mount Assembly. 78

RH Single Body Turret Assembly No. 108-3726 80

Double Turret Body Assembly No. 108-3727 82

LH Single Turret Body Assembly No. 108-3725 83

 
Boom Pivot Assembly 84

Boom Pivot Assembly 85

Left and Right Hand Boom Assembly 86

Attachments and Accessories 87


Roll-Over Protection System and Seat Assembly

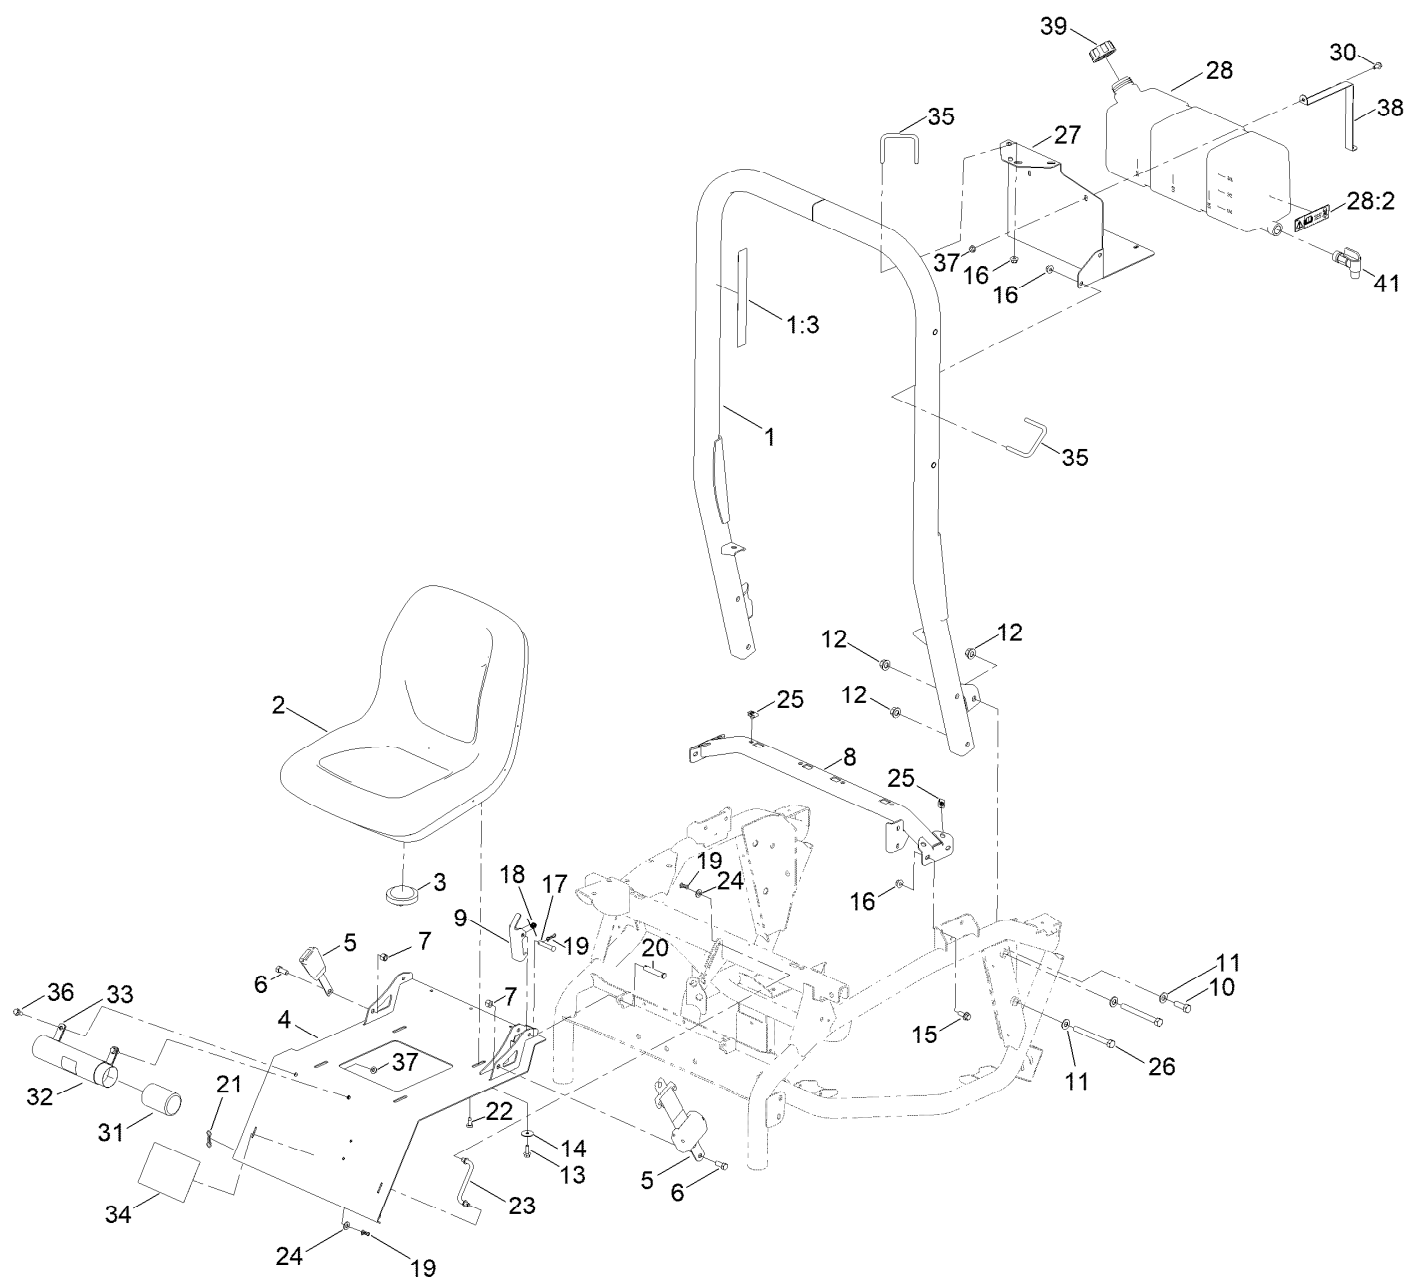

Roll-Over Protection System and Seat Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-3918	1	ROPS ASM	20	100-6541	2	Pin-Clevis
1:3	127-3939	1	Decal-ROPS	21	119-1416	2	Pin-Cotter, Locking
2	112-2923	1	Seat ASM	22	87-8460	3	Bumper-Rubber
3	100-3524	1	Switch-Seat	23	125-0909	1	Rod-Prop, Seat
4	125-0872-03	1	Plate-Seat	24	3256-24	2	Washer-Plain
5	110-0413	1	Seatbelt-Retractable	25	94-2413	3	Nut-U
6	3212-4	2	Screw-HH	26	325-19	4	Screw-HH
7	3296-7	2	Nut-Lock	27	131-5797-03	1	Mount-Tank, Eye Wash
8	163-2948-03	1	Seat Cross-Member, ASM [black]	28	132-7745	1	Fresh Water Tank ASM
9	125-0916	1	Latch-Seat	28:2	120-0616	3	Decal-Water, Fresh
10	325-6	2	Screw-HH	30	3234-7	4	Screw-HHF
11	3256-26	6	Washer-Flat	31	104-7048	1	Cap-Housing
12	99-5107	6	Nut-HF Nylock	32	104-7050	1	Tube-Manual
13	33104-025	4	Screw-HHF	33	2412-133	2	Clamp-R
14	3256-57	4	Washer-Flat	34	133-0382	1	Decal-Service/Maintenance
15	3234-42	4	Screw-HHF	35	119-6727	2	U-Bolt
16	104-8301	8	Nut-HF, NI	36	3234-47	2	Screw-HHF
17	283-82	1	Pin-Clevis	37	104-8300	6	Nut-HF, NI
18	104-4821	1	Spring-Torsion	38	132-7628-03	2	Band-Tank, Eye Wash
19	119-1415	3	Pin-Cotter, Locking	39	137-4291	1	Cap-Tank, Fresh Water
				41	100-7011	1	Spigot-90 DEG

 Frame Assembly

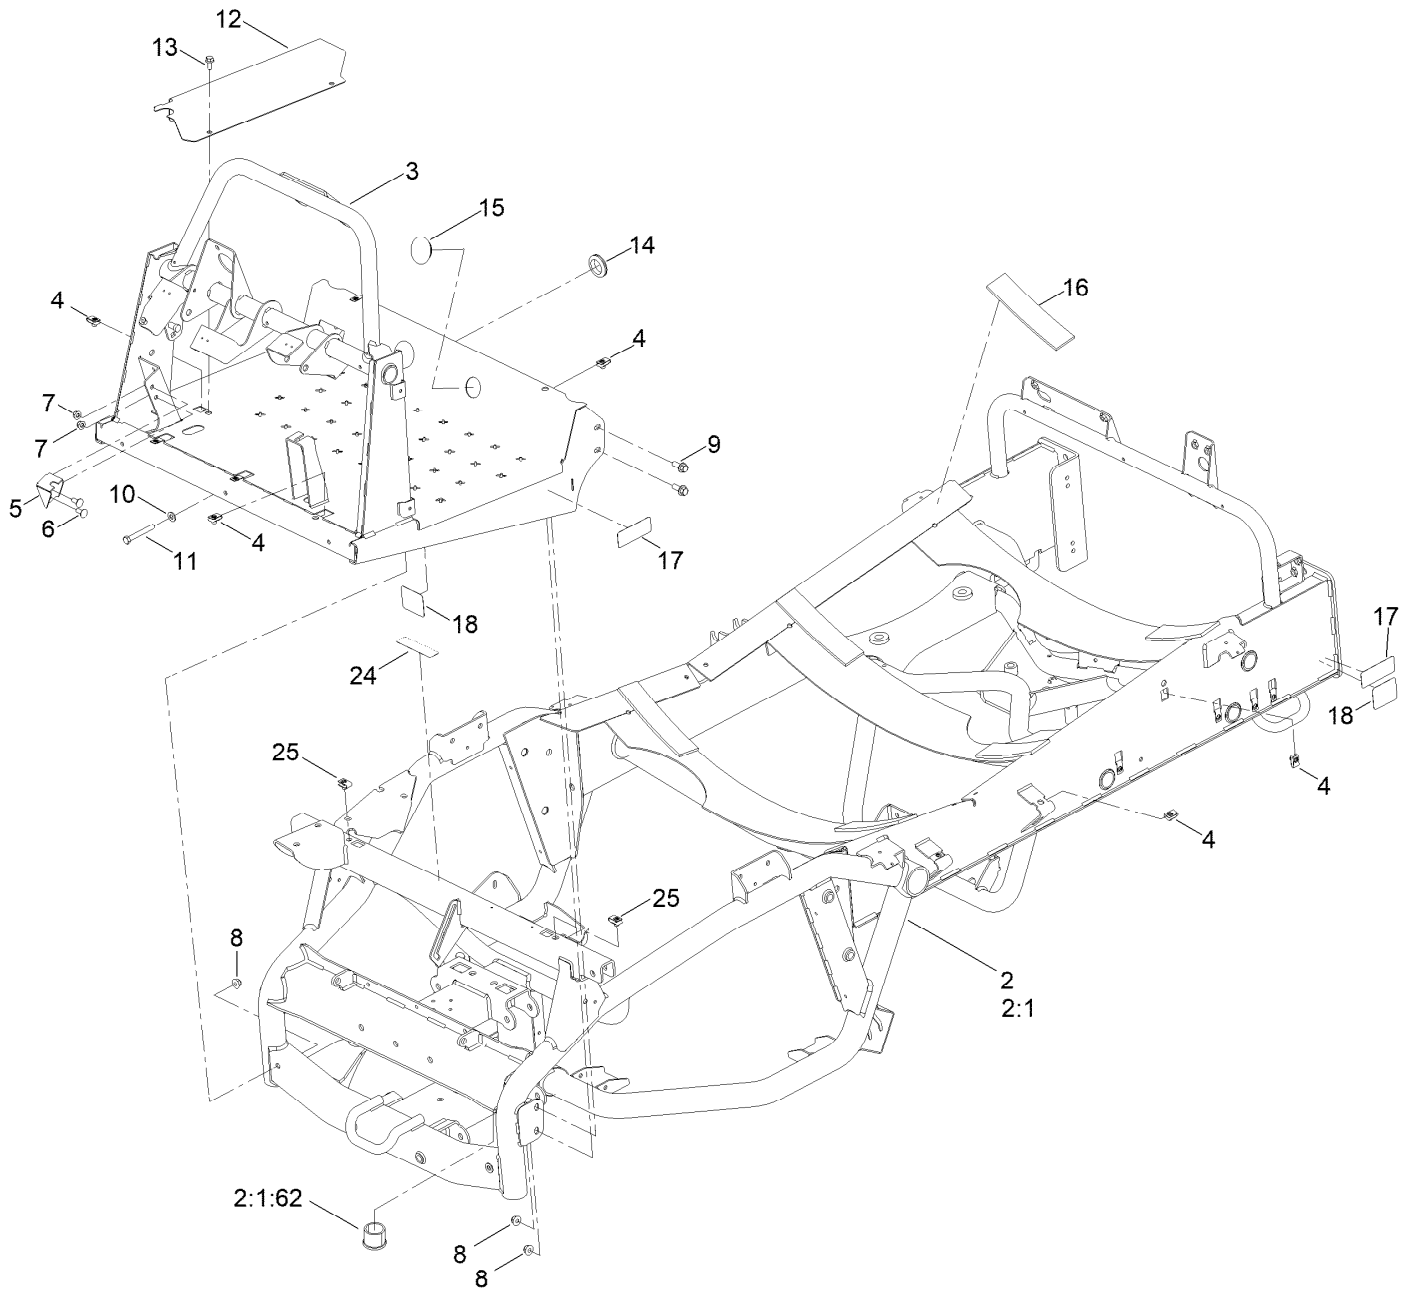


Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	121-6501-03	1	Frame ASM	11	323-13	2	Screw-HH
2:1		1	Frame ●	12	125-0871-03	1	Cover-Hose
2:1:62	104-0015	2	Bushing-Flange	13	3234-47	2	Screw-HHF
3	163-2919-03	1	Platform ASM [black]	14	240-3	2	Grommet-Rubber
4	94-2413	19	Nut-U	15	121-3397	2	Plug-Grommet
5	106-2421	1	Bracket-Mount, Cable	16	125-8094	6	Pad-Tank
6	3230-23	2	Bolt-CARR	17	106-9206	4	Decal-Torque, Wheel
7	104-8300	2	Nut-HF, NI	18	125-6694	3	Decal-Tie Down
8	104-8301	6	Nut-HF, NI	24	133-8062	1	Decal-Spark Arrestor
9	3234-42	4	Screw-HHF	25	115-7721	2	Nut-Clip, U
10	3256-24	2	Washer-Plain				

● Not serviced separately

 
Rear Drive Assembly

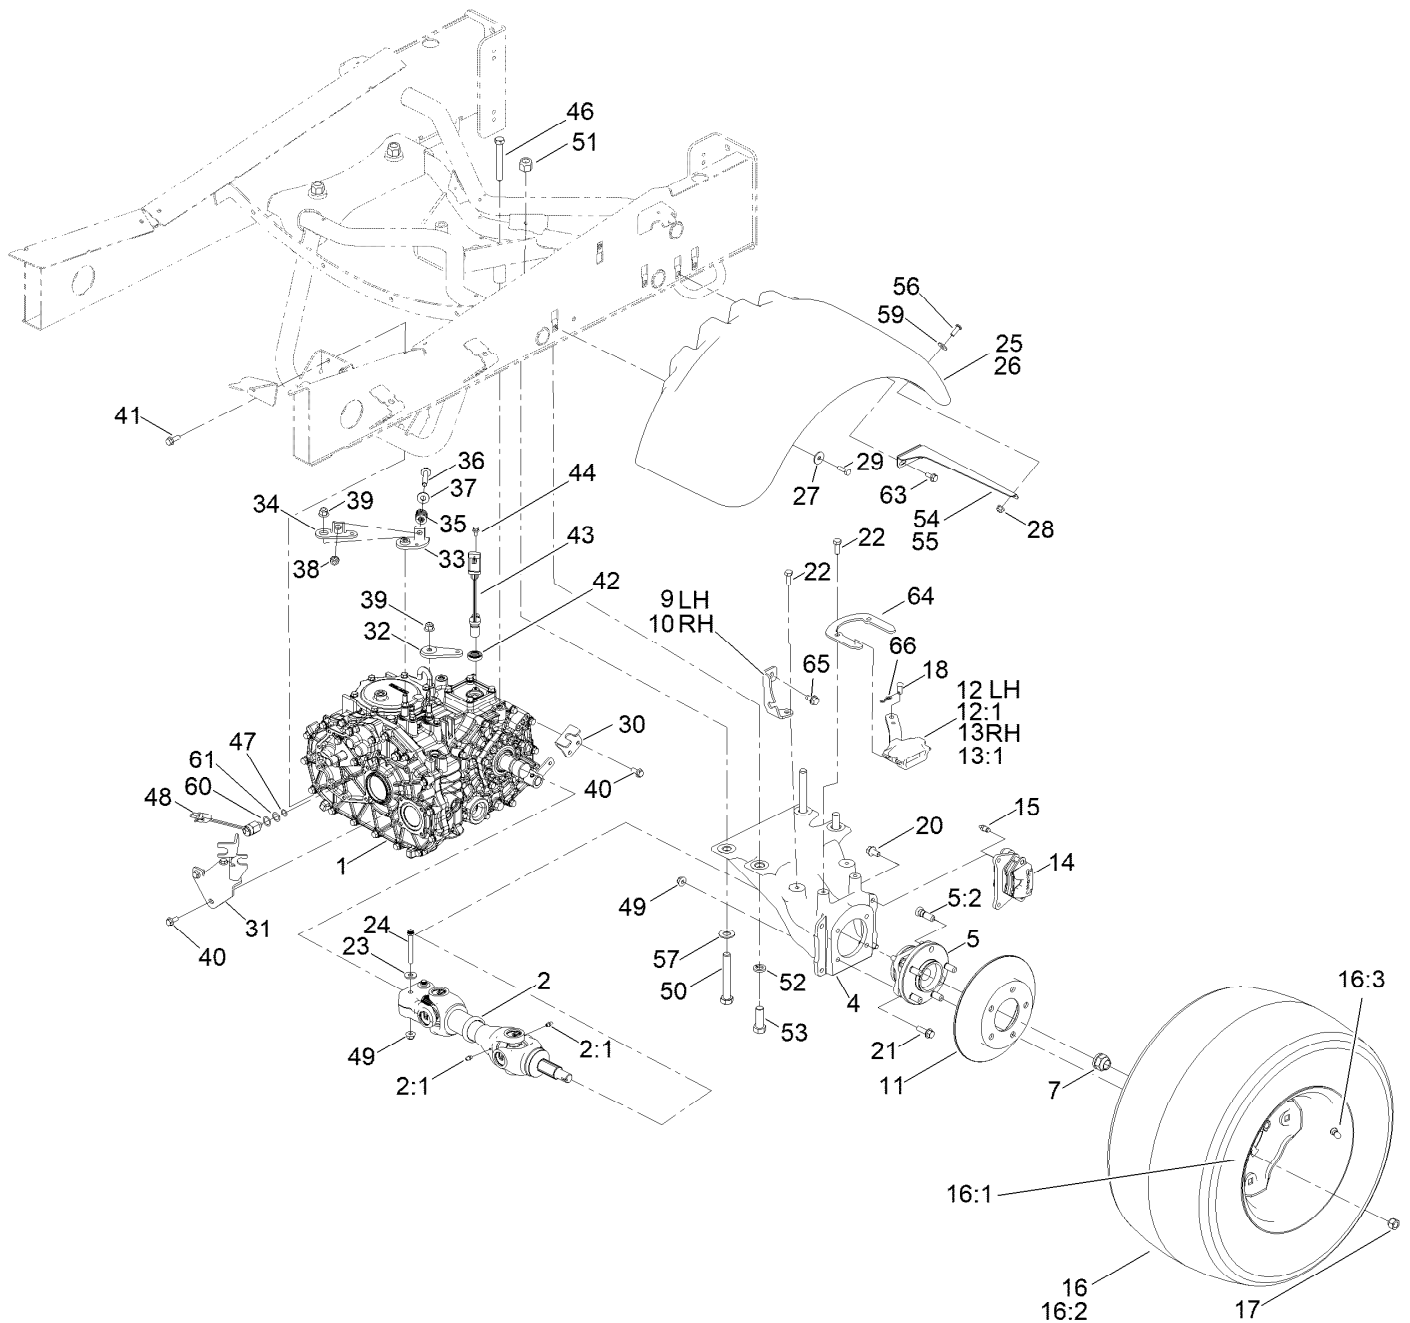

Rear Drive Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	120-7610	1	Transaxle ASM	31	107-8749-0P	1	Bracket-Cable, Welded
2		2	Driveshaft ASM ●	32	87-7960	1	Lever-Shift
2:1	302-5	2	Fitting-Grease	33	87-7970	1	Arm-Shift
4	131-4311	2	Axle-Housing	34	87-8250	1	Plate-Arm, Shift
5	121-9751	2	Hub-Bearing, Wheel	35	87-6910	1	Spring-Compression
5:2	121-9752	5	Stud-Wheel	36	66-9302	1	Screw-HHF Lock
7	115-2164	2	Nut-Spindle	37	3256-4	1	Washer-Flat
9	131-4362	1	Bracket-Cable, LH	38	3290-357	1	Nut-HSF
10	131-4346	1	Bracket-Cable, RH	39	103-9511	2	Nut-Flg
11	114-8351	2	Rotor-Brake	40	98-7977	5	Screw-HHF
12	114-8365	1	Caliper-Mechanical, LH	41	33104-025	4	Screw-HHF
12:1	115-7847	1	Parking Brake Pad Kit	42	92-3735	1	Seal-Sensor, Oil
13	114-8366	1	Caliper-Mechanical, RH	43	120-4800	1	Sensor-Gear tooth
13:1	115-7847	1	Parking Brake Pad Kit	44	33103-012	1	Screw-HHF
14	127-7424	2	Brake Caliper ASM	46	33116-090	2	Screw-HH
15	119-9509	2	Screw-Bleed	47	237-30	1	O-Ring
16	144-6160	2	Tire/Wheel ASM	48	87-6710	1	Switch-Transmission
16:1	144-6170	1	Wheel - 12 X 10.50	49	104-8301	12	Nut-HF, NI
16:2	144-6171	1	Tire - 24/13-12,6 Ply	50	327-29	4	Screw-HH
16:3	232-27	1	Stem-Valve	51	127-3958	4	Nut-Lock, NI
17	139-2564	10	Nut-Lug	52	3253-23	4	Washer-Lock
18	283-85	2	Pin-Clevis	53	327-5	4	Screw-HH
20	3234-1	4	Screw-HHF	54	125-7959-03	1	Bracket-Fender
21	3234-24	8	Screw-HHF	55	125-7960-03	1	Bracket-Fender
22	323-6	6	Screw-HH	56	3274-32	2	Screw-HSBH
23	80-6990	4	Washer-Hardened	57	3256-27	4	Washer-Flat
24	98-2939	4	Screw-Cap	59	3256-71	2	Washer-Flat
25	112-6805	1	Fender-RH	60	125-8106	3	Shim
26	112-6806	1	Fender-LH	61	125-8107	3	Shim
27	3256-82	6	Washer-Flat	63	3234-47	4	Screw-HHF
28	104-8300	2	Nut-HF, NI	64	131-4257-0P	2	Support-Park Brake
29	322-5	6	Screw-HH	65	110-9380	2	Screw-HWH
30	87-4470	1	Bracket-Lock, Differential	66	119-1415	2	Pin-Cotter, Locking

 
● Not serviced separately

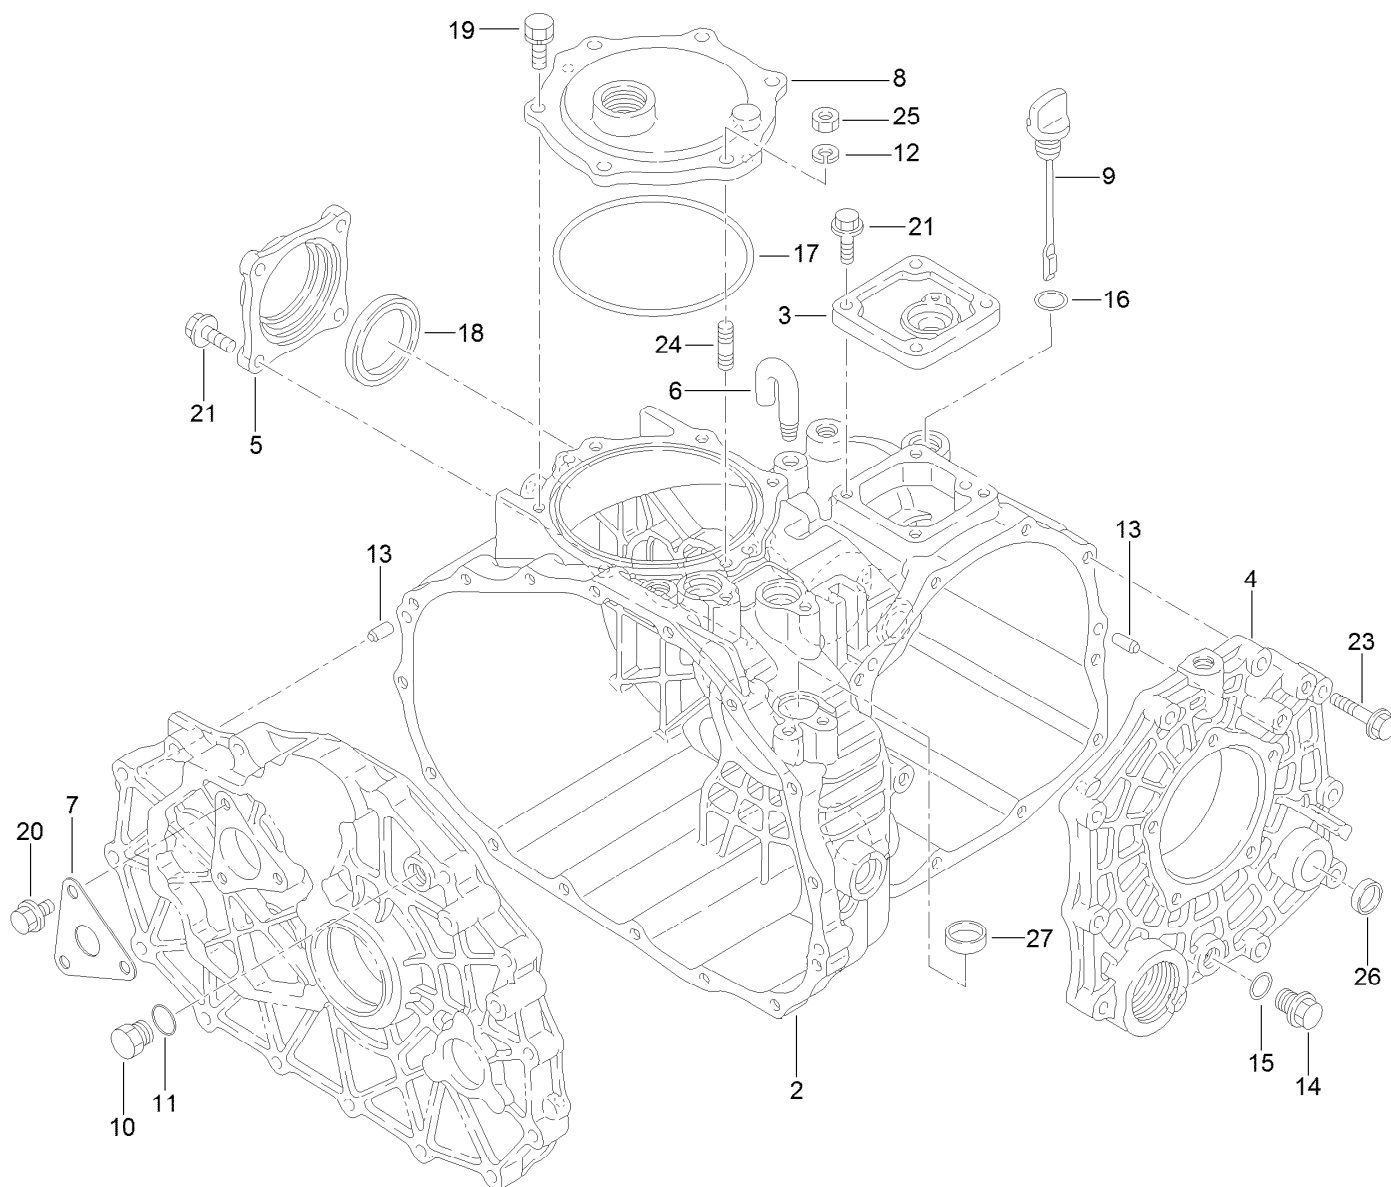

Case Assembly Transaxle Assembly No. 120-7610


Ref.	Part Number	Qty.	Description
2	92-0651	1	Case-Transmission
3	92-3736	1	Cover ASM
4	92-0653	1	Cover-Side
5	92-0655	1	Cover-Seal, Axle
6	127-3925	1	Breather
7	100-8594	1	Cover-Shaft, Input
8	100-8595	1	Cover-PTO
9	92-0662	1	Cap-Oil
10	100-6924	1	Plug
11	100-6925	1	Packing
12	92-0762	1	Washer-Spring
13	92-0765	4	Pin-Parallel
14	92-0773	1	Plug-Drain

Ref.	Part Number	Qty.	Description
15	92-0787	1	O-Ring
16	92-0788	1	O-Ring
17	92-0790	1	O-Ring
18	92-0793	1	Seal-Oil
19	92-0796	5	Bolt
20	100-6928	3	Bolt
21	33114-025	8	Screw-HH
23	33114-040	10	Screw-HH
24	92-0804	1	Stud
25	48-7930	1	Nut
26	100-6926	1	Cap-Sealing
27	100-6927	1	Cap-Sealing

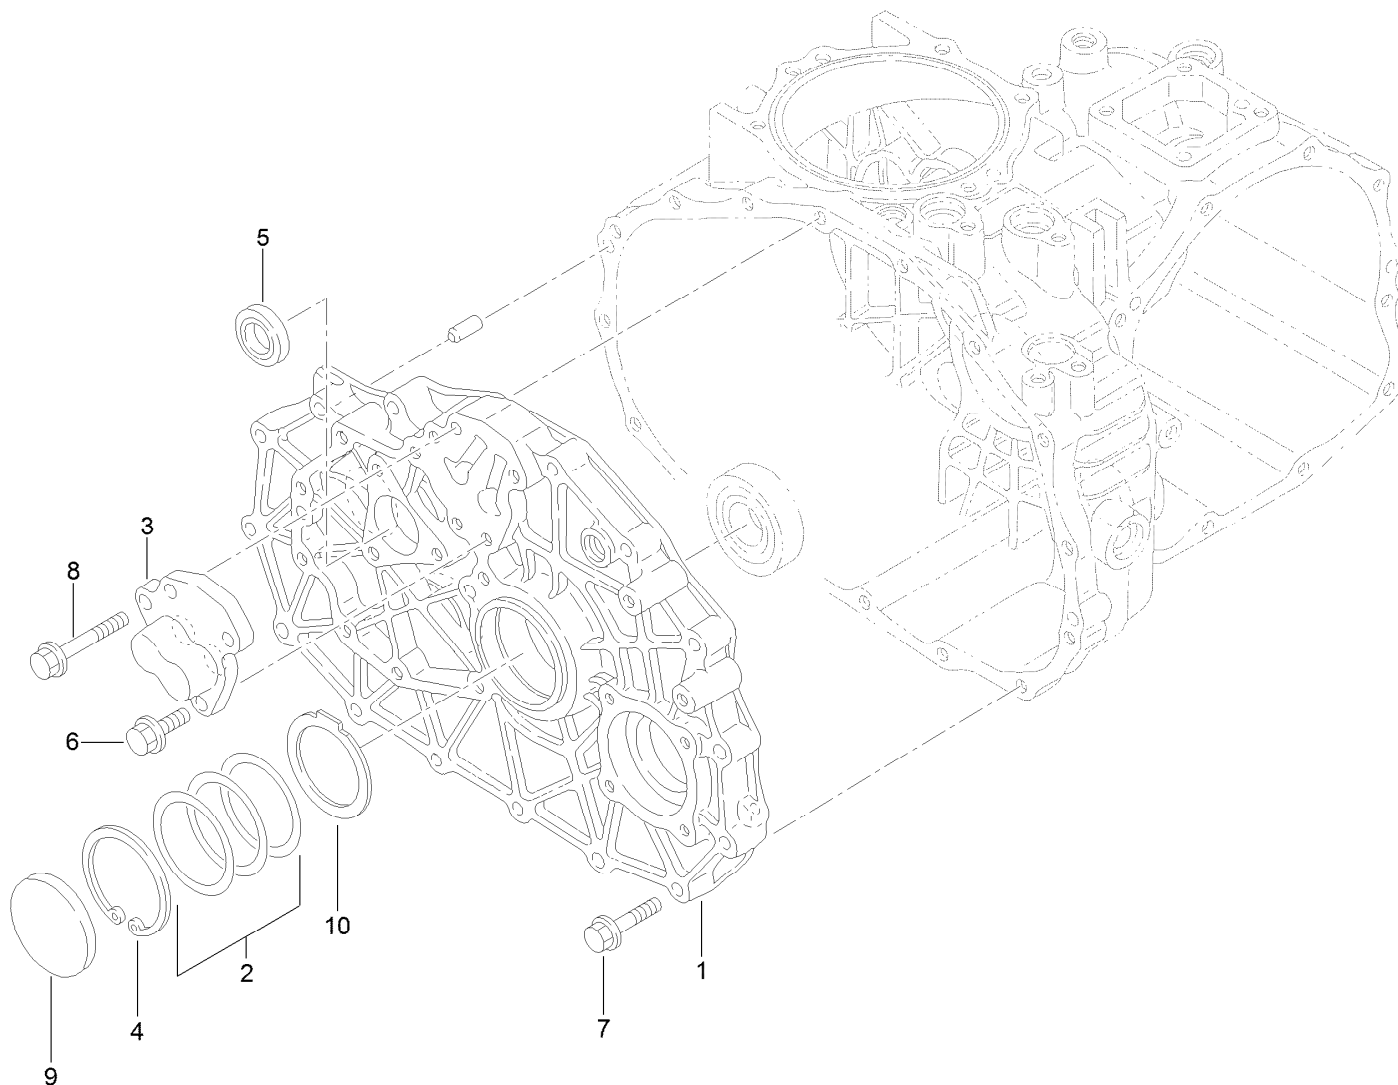 

Center Plate Assembly Transaxle Assembly No. 120-7610


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	100-4461	1	Plate-Center
2	100-4460	1	Shim-Set
3	92-0706	1	Shaft-Fork
4	92-0759	1	Ring-Snap
5	92-0791	1	Seal-Oil
6	33114-025	3	Screw-HH
7	33114-040	15	Screw-HH
8	48-7560	1	Bolt-HH
9	92-0807	1	Cap-Sealing
10	100-4465	1	Shim (W/Tab)

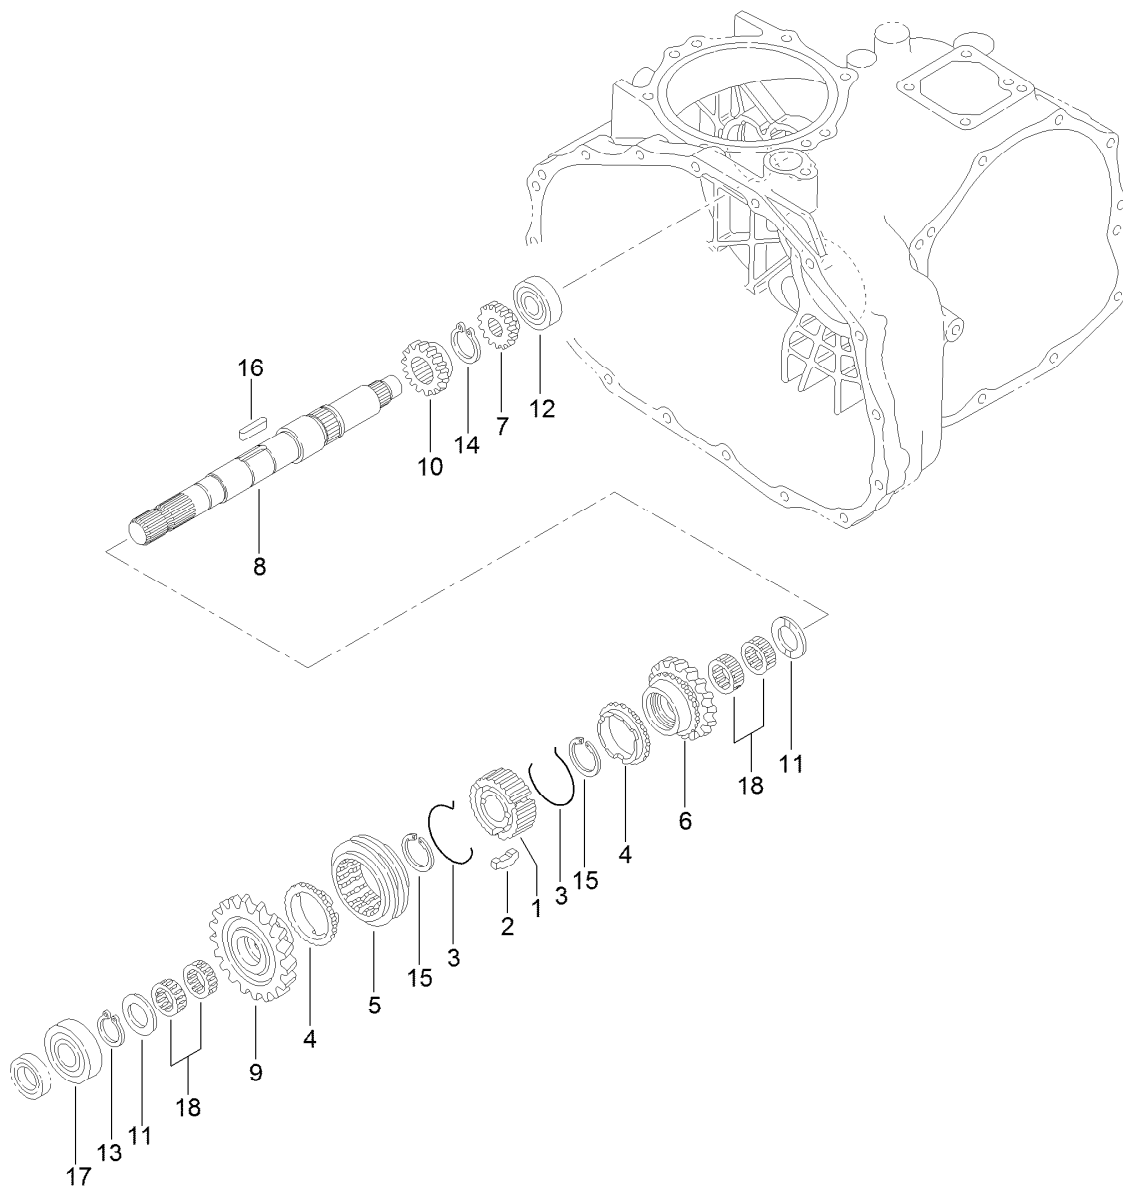 

Main Shaft Assembly Transaxle Assembly No. 120-7610

Ref.	Part Number	Qty.	Description
1	92-0664	1	Hub-Synchro
2	92-0665	3	Key-Synchro
3	92-0666	2	Spring-Synchro
4	92-0667	2	Ring-Synchro
5	92-0668	1	Shifter-Synchro
6	127-3926	1	Gear-Main, 23T
7	92-0673	1	Gear-Main, 14 Tooth
8	100-8596	1	Shaft-Main
9	108-3694	1	Gear-Main, 36T


Ref.	Part Number	Qty.	Description
10	100-8598	1	Gear-Main, 20 Tooth
11	92-0740	2	Washer-Thrust
12	92-0650	1	Bearing
13	92-0753	1	Ring-Snap
14	92-0754	1	Ring-Snap
15	92-0763	2	Ring-Snap
16	92-0772	1	Key
17	251-8	1	Bearing-Ball
18	92-0781	4	Bearing-Needle

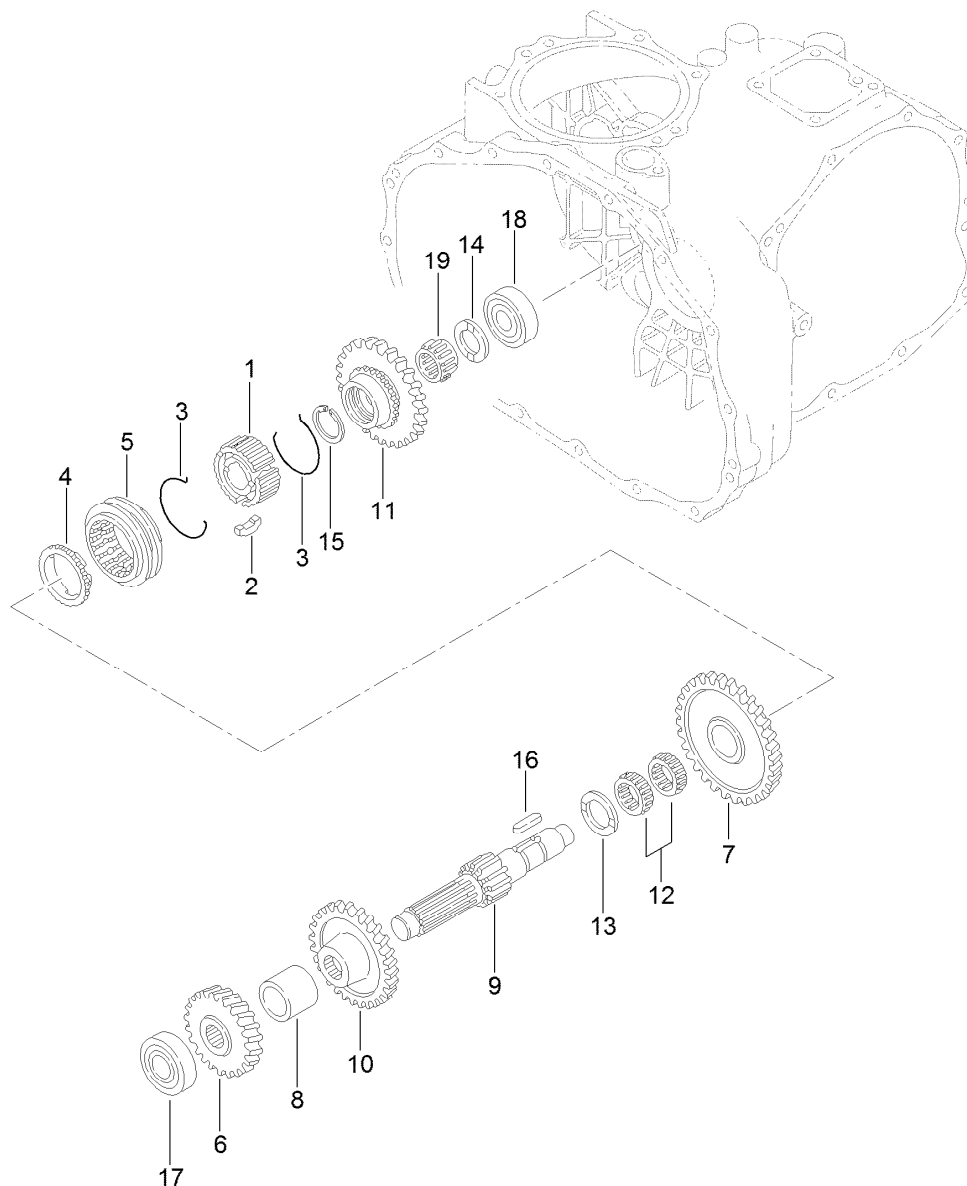 

Reduction Shaft Assembly Transaxle Assembly No. 120-7610


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	92-0664	1	Hub-Synchro
2	92-0665	3	Key-Synchro
3	92-0666	2	Spring-Synchro
4	92-0667	1	Ring-Synchro
5	92-0668	1	Shifter-Synchro
6	100-8599	1	Gear-Red, 25 Tooth
7	108-3697	1	Gear-Reduction, 47T
8	100-8601	1	Collar
9	127-3927	1	Shaft-Reduction
10	127-3928	1	Gear-Reduction, 31T

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
11	92-0819	1	Gear-Reduction, 40 Tooth
12	92-0681	2	Bearing-Needle
13	92-0682	1	Washer-Thrust
14	92-0740	1	Washer-Thrust
15	92-0763	1	Ring-Snap
16	92-0772	1	Key
17	105-7985	1	Bearing
18	92-0778	1	Bearing
19	92-0782	1	Bearing-Needle

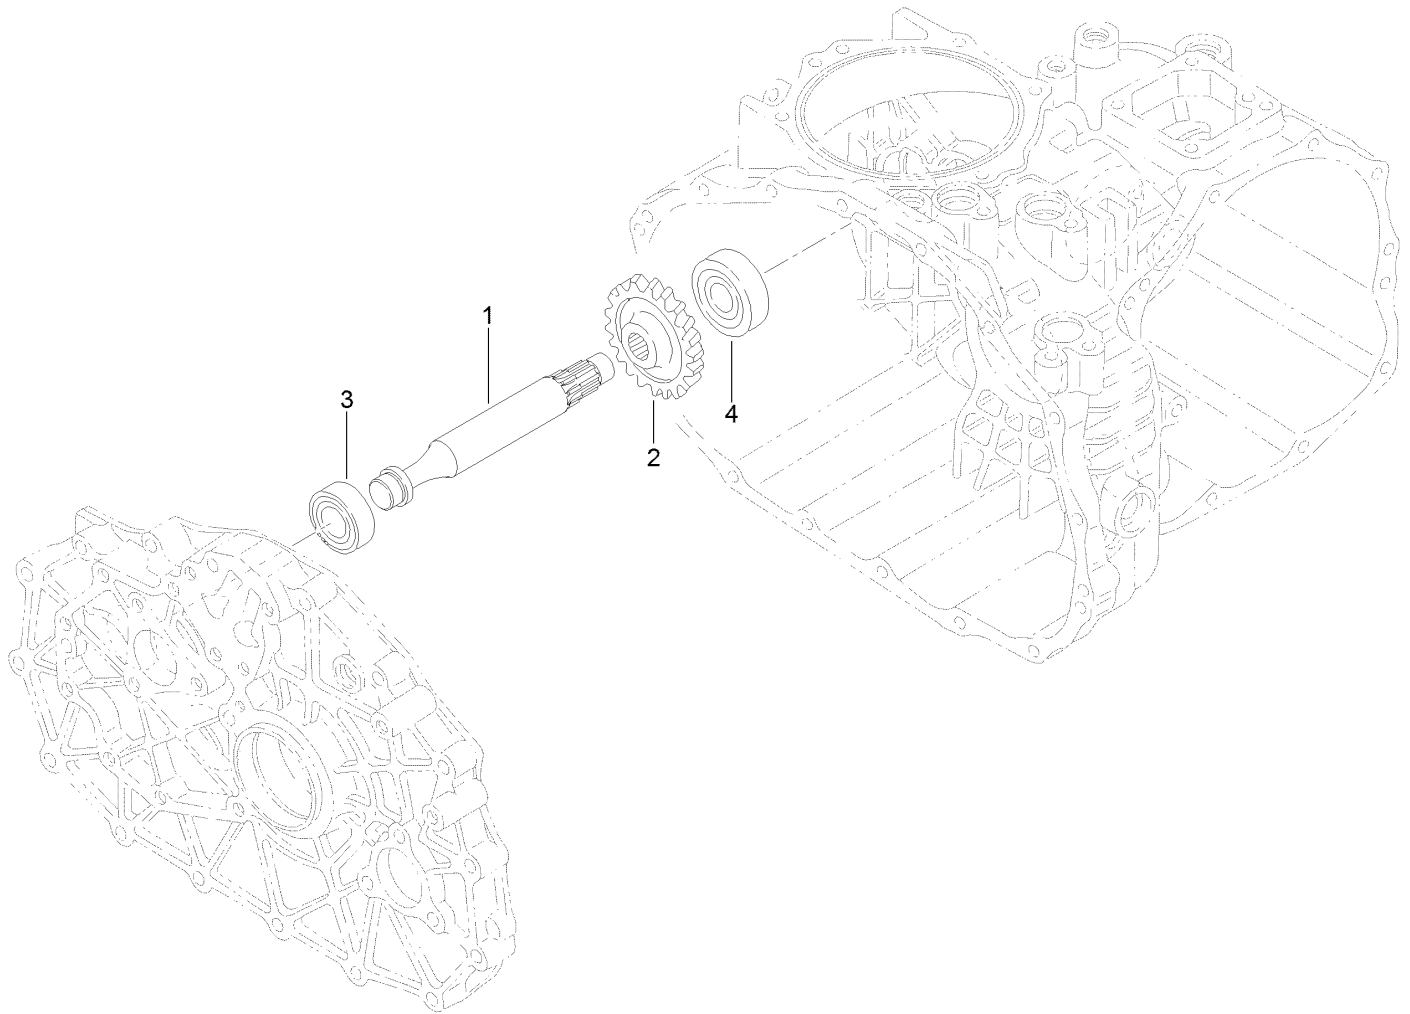 

Reverse Shaft Assembly Transaxle Assembly No. 120-7610

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	100-8602	1	Shaft-Idler, Reverse
2	92-0684	1	Gear-Reverse, 33 Tooth
3	251-346	1	Bearing-Ball
4	92-0778	1	Bearing

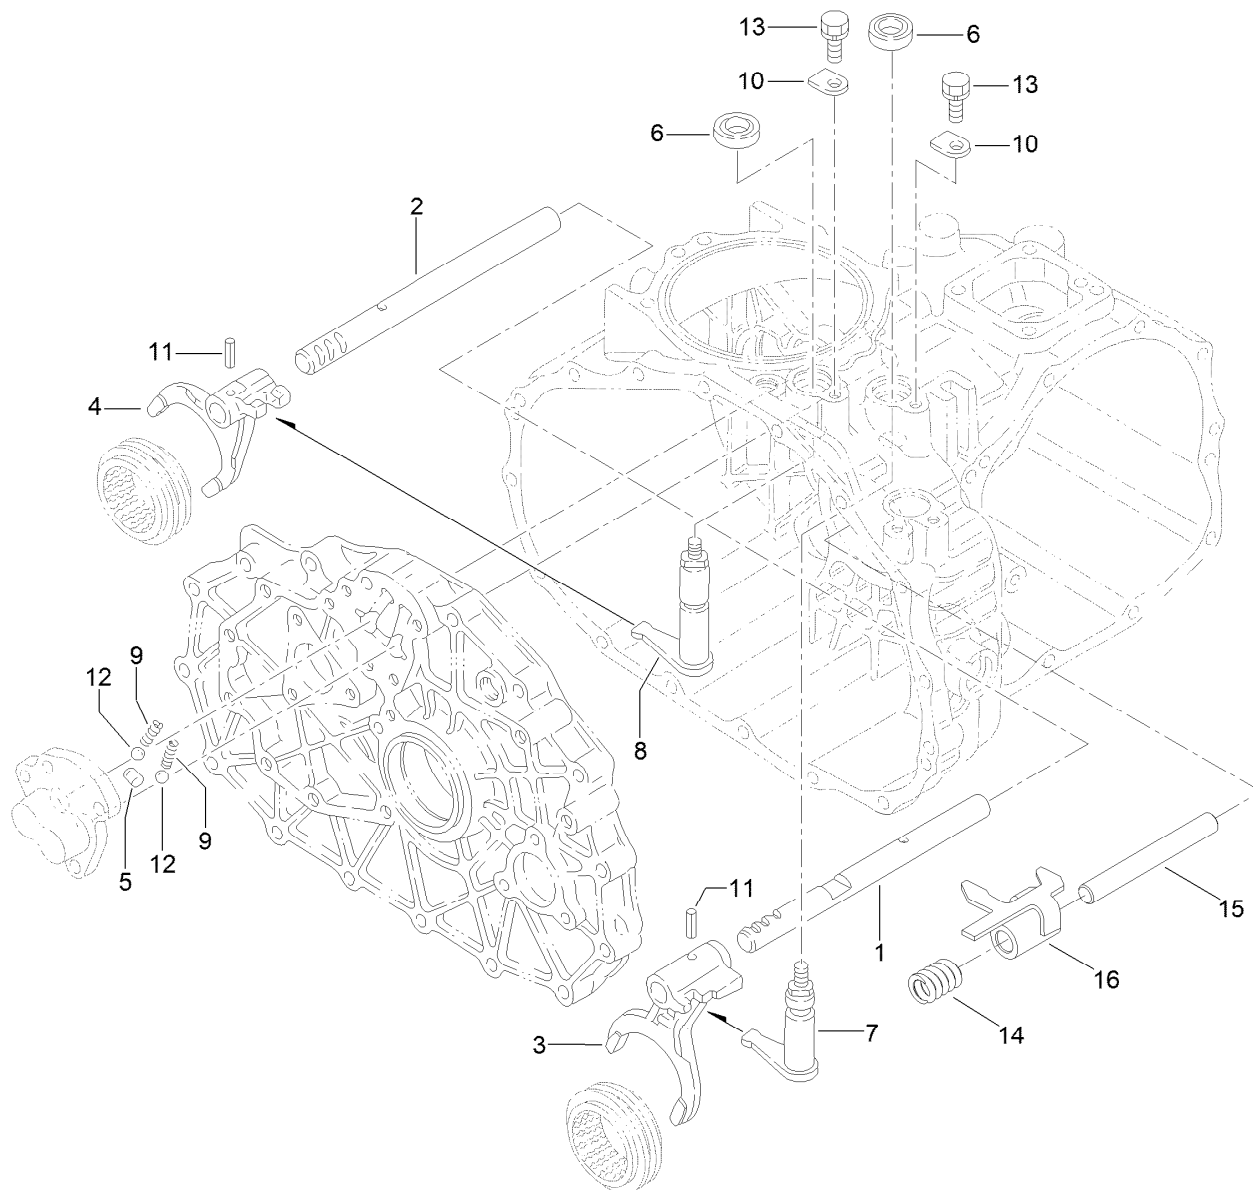 


Main Shift Assembly Transaxle Assembly No. 120-7610

Ref.	Part Number	Qty.	Description
1	92-0698	1	Shaft-Fork
2	92-0699	1	Shaft-Fork
3	92-0700	1	Fork-Shift
4	92-0701	1	Fork-Shift
5	92-0705	1	Lock-Spindle
6	92-0729	2	Seal-Oil
7	127-3929	1	Arm-Shift
8	127-3930	1	Arm-Shift


Ref.	Part Number	Qty.	Description
9	92-0731	2	Spring
10	92-0732	2	Plate-Keeper
11	92-0769	2	Pin-Roll
12	92-0785	2	Ball-Steel
13	33114-016	2	Screw-HH
14	127-3931	1	Spring-Switch ●
15	127-3932	1	Shaft-Switch ●
16	127-3933	1	Plate-Switch ●

 ● Not illustrated

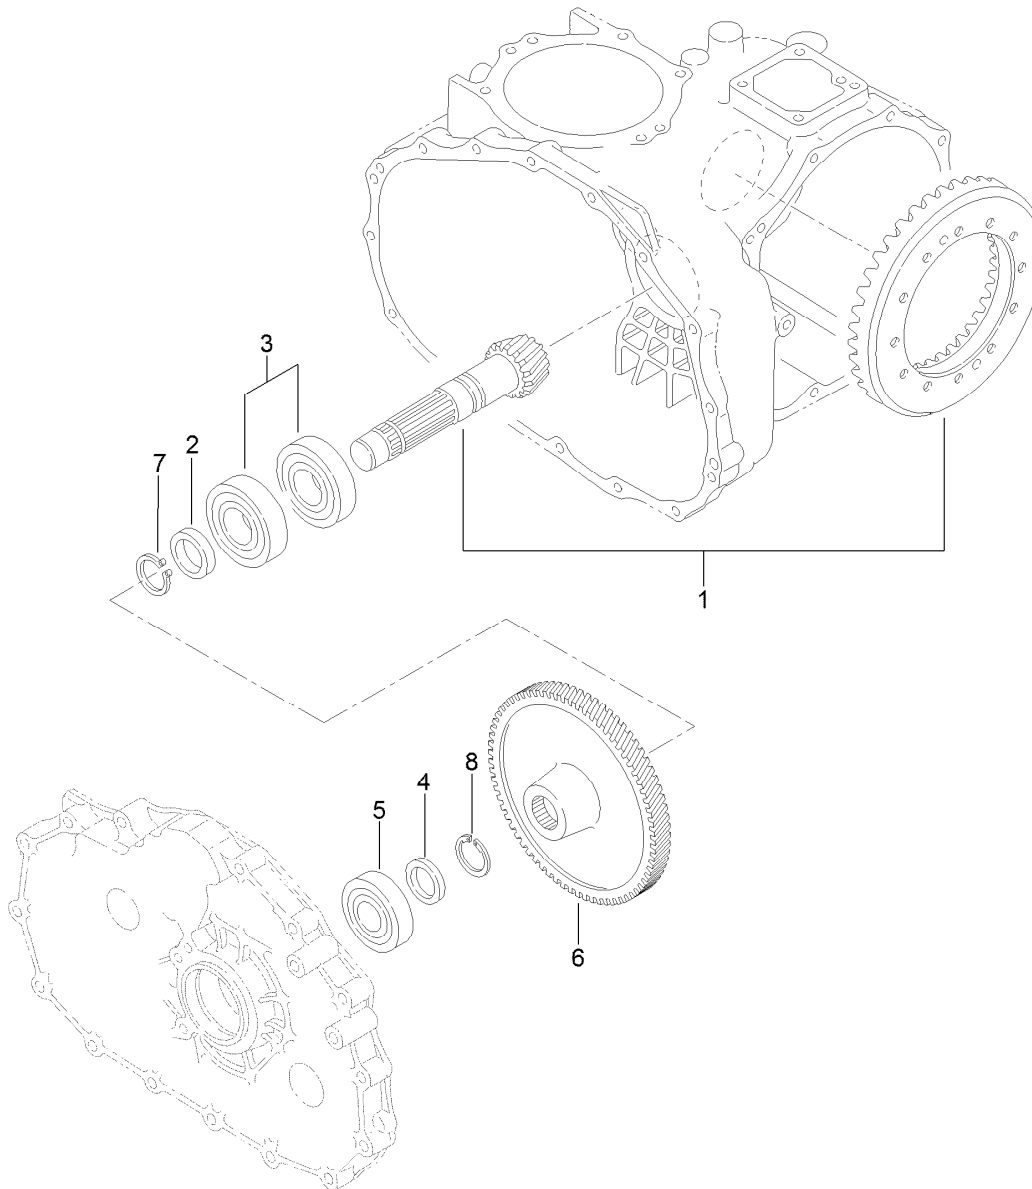


Counter Shaft Assembly Transaxle Assembly No. 120-7610

Ref.	Part Number	Qty.	Description
1	92-0710	1	Gear-Ring
2	92-0713	1	Collar
3	92-0714	2	Bearing
4	92-0716	1	Collar
5	92-0712	1	Bearing-Ball
6	100-8603	1	Gear-Count
7	92-0755	1	Ring-Snap
8	92-0764	1	Ring-Snap

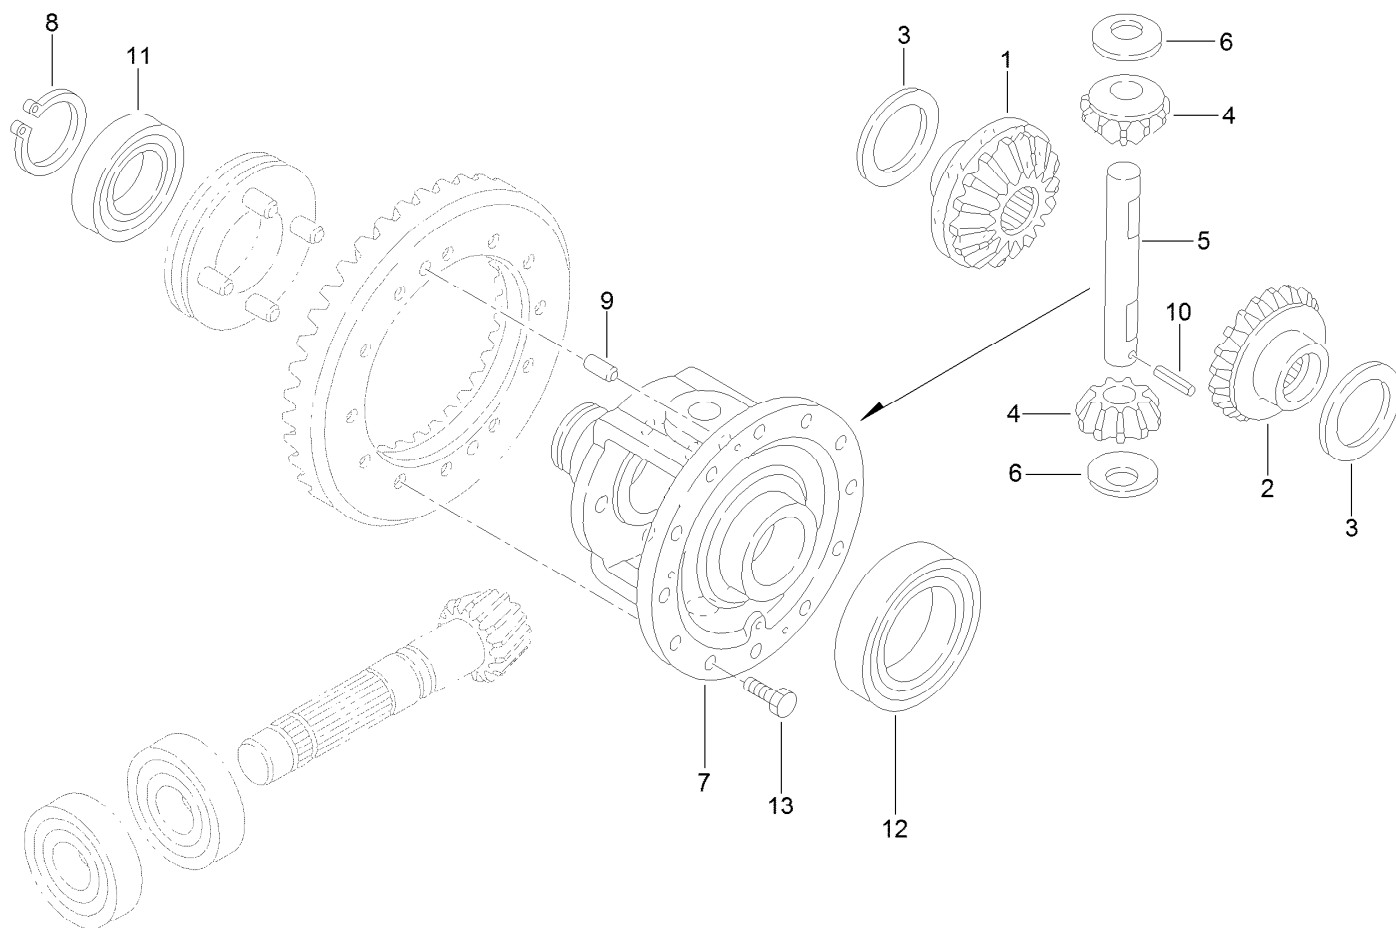 


Differential Gear Assembly Transaxle Assembly No. 120-7610

Ref.	Part Number	Qty.	Description
1	92-0745	1	Gear-Side, LH
2	92-0746	1	Gear-Side, RH
3	92-0747	2	Side-Gear, Left Inner
4	92-0748	2	Pinion-Differential
5	92-0749	1	Shaft-Pinion
6	92-0750	2	Washer
7	92-0720	1	Case-Differential
8	92-0756	1	Ring-Snap
9	92-0765	2	Pin-Parallel
10	92-0768	1	Pin-Roll, Spring
11	92-0775	1	Bearing
12	92-0776	1	Bearing
13	92-0803	12	Bolt

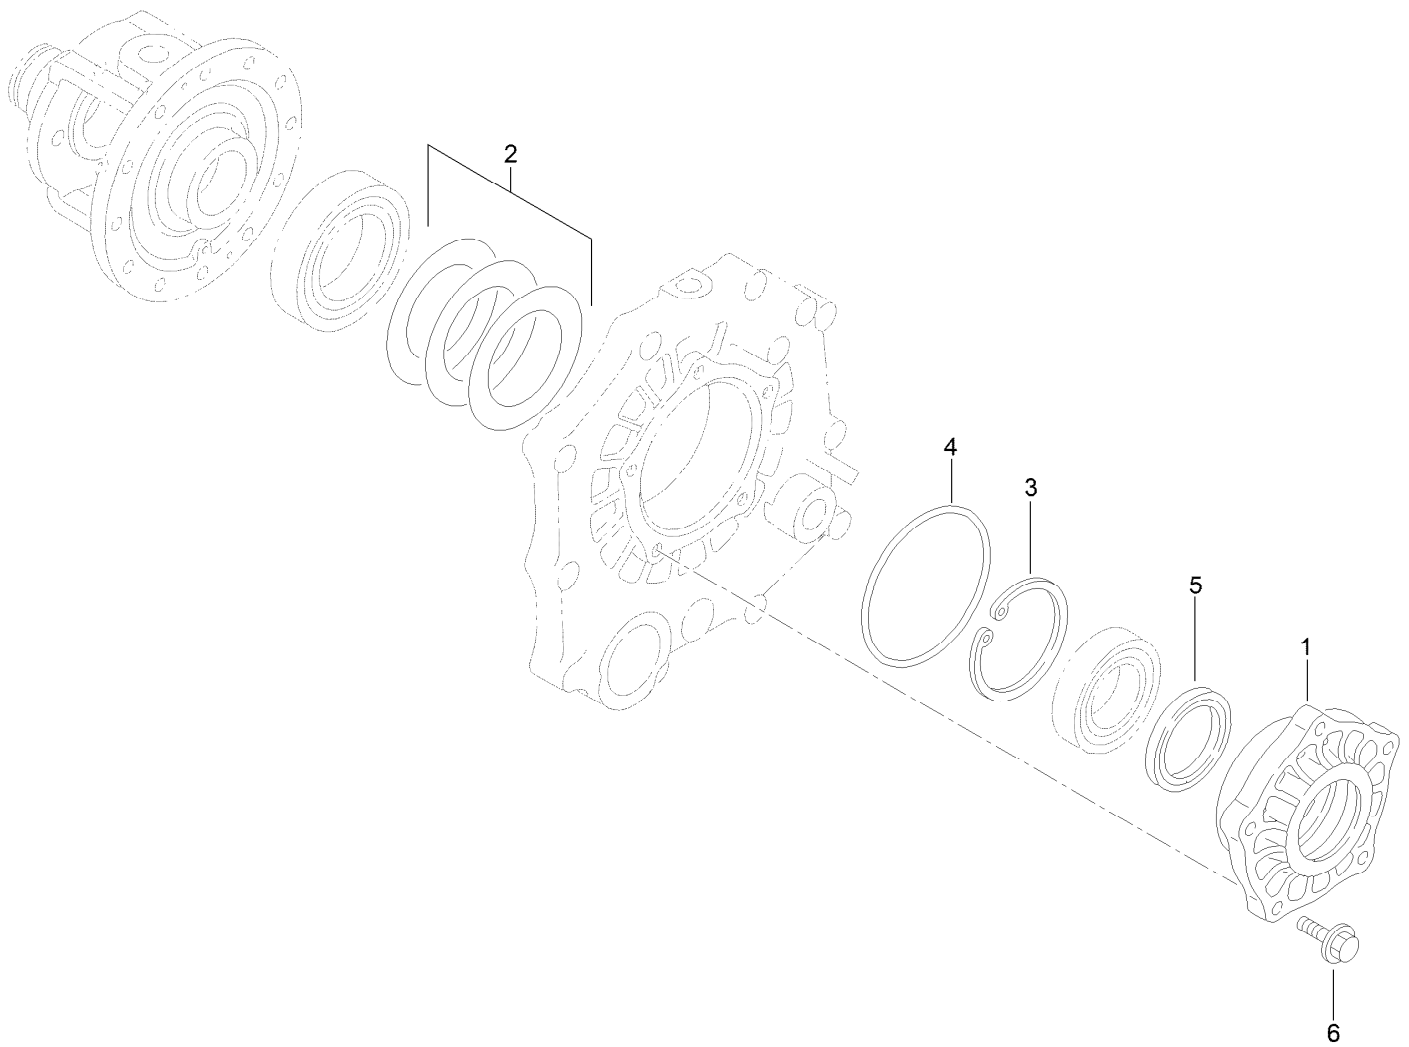 


Differential Carrier Assembly Transaxle Assembly No. 120-7610

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	92-0654	1	Carrier-Differential
2	92-0809	1	Set-Shim
3	92-0760	1	Ring-Snap
4	92-0789	1	O-Ring
5	92-0793	1	Seal-Oil
6	48-7730	5	Screw-Cap, HH

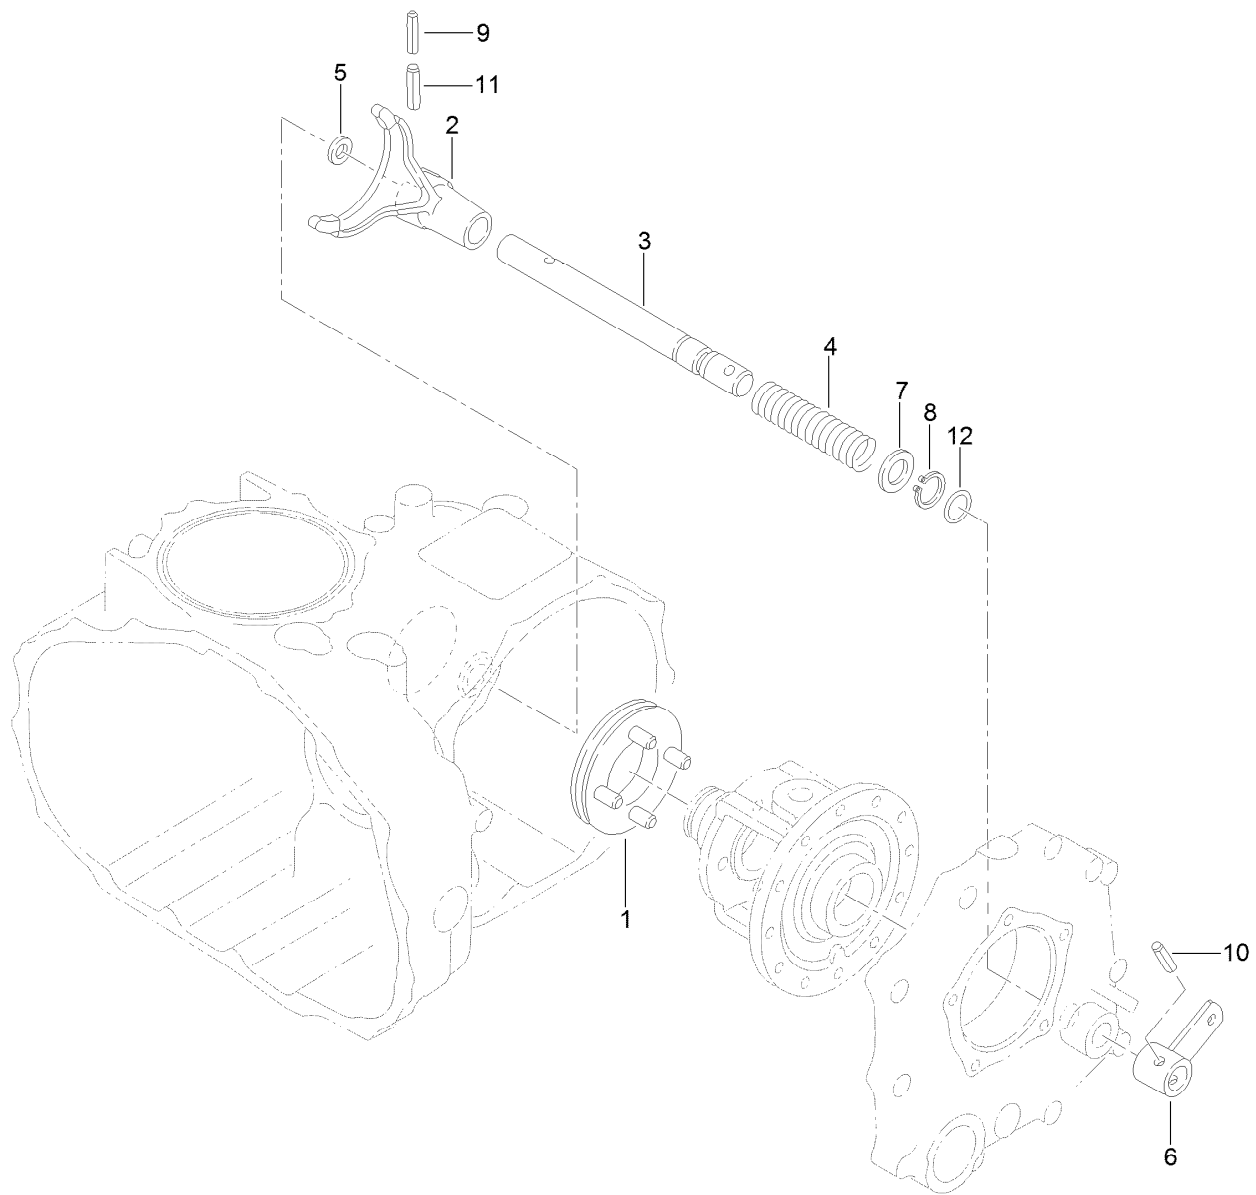 


Differential Lock Assembly Transaxle Assembly No. 120-7610

Ref.	Part Number	Qty.	Description
1	92-0730	1	Slider-Differential, Lock
2	92-0721	1	Fork-Lock, Differential
3	92-0722	1	Shaft-Fork, Lock Differential
4	92-0723	1	Spring-Lock, Differential
5	92-0744	1	Washer
6	92-0724	1	Arm-Lock, Differential
7	92-0733	1	Washer
8	92-0753	1	Ring-Snap
9	92-0768	1	Pin-Roll, Spring
10	92-0770	1	Pin-Roll, Spring
11	92-0771	1	Pin-Roll, Spring
12	92-0787	1	O-Ring

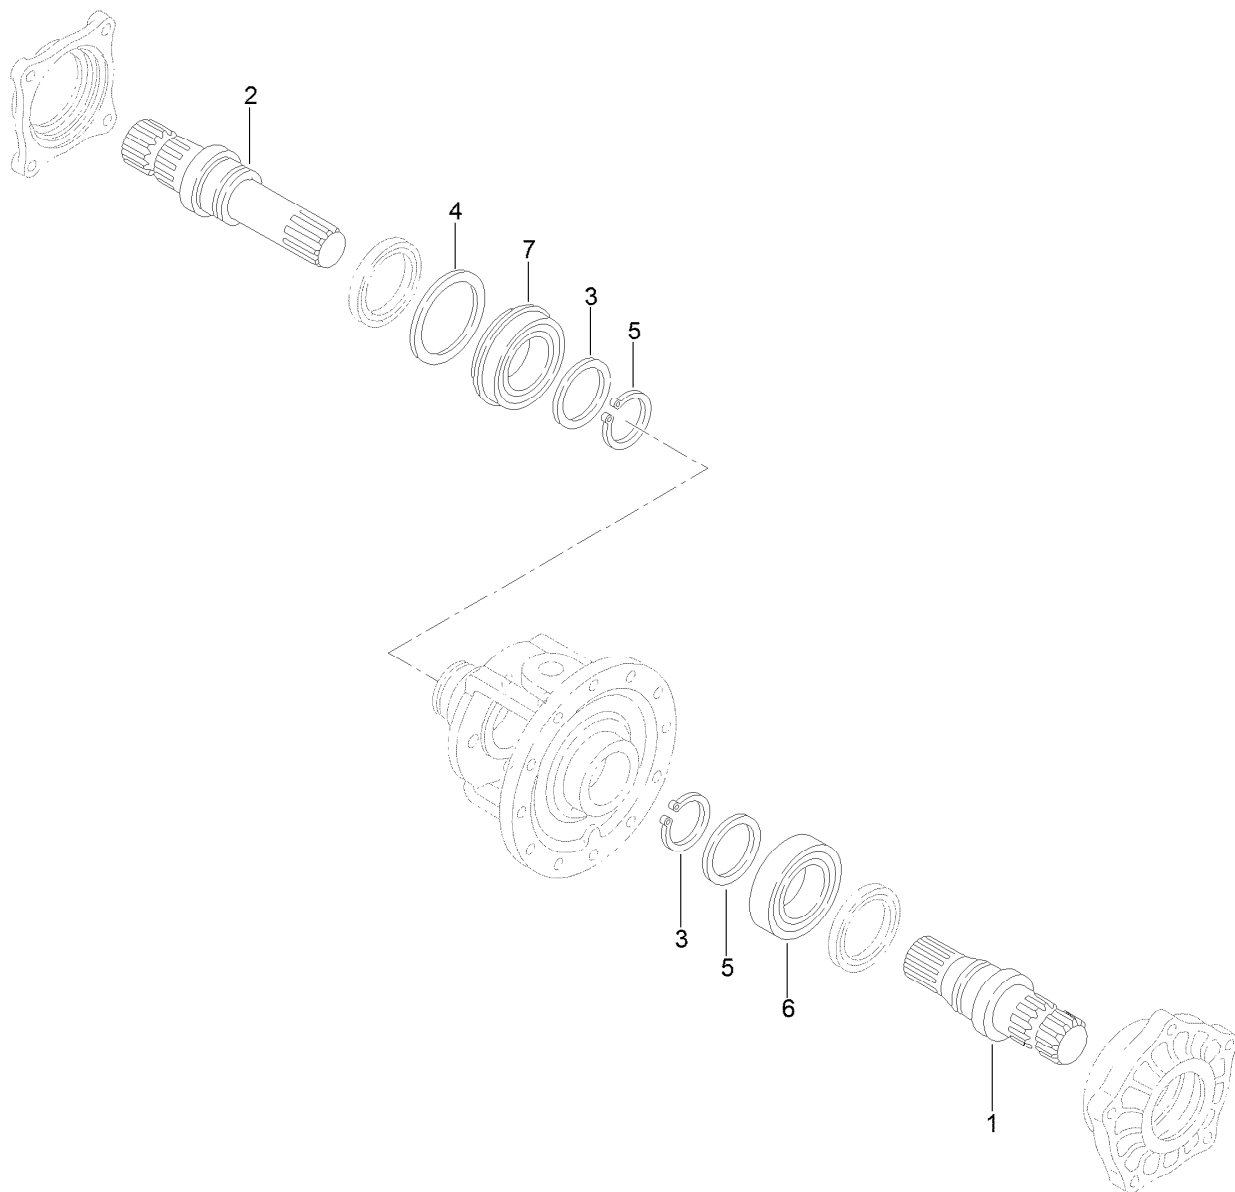 


Axle Shaft Assembly Transaxle Assembly No. 120-7610

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	92-0725	1	Shaft-Axle, Left
2	92-0726	1	Shaft-Axle, Right
3	92-0727	2	Washer
4	92-0728	1	Washer
5	92-0756	2	Ring-Snap
6	92-0775	1	Bearing
7	92-0780	1	Bearing

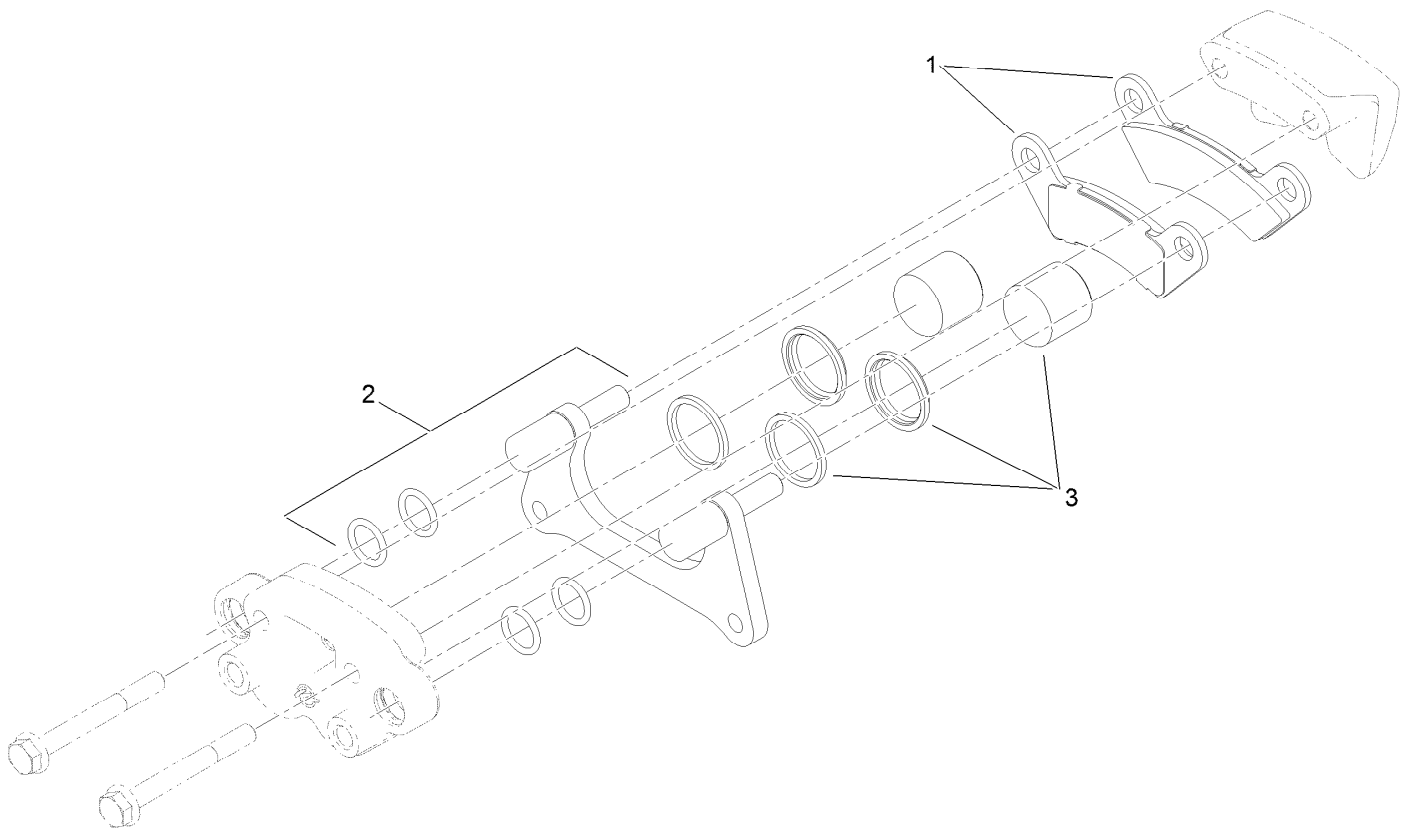 

Brake Caliper Assembly No. 127-7424


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	140-2580	1	Brake Pad Service Kit (Front, Qty 4)
2	119-9511	1	Bracket Kit
3	133-0614	1	Piston Kit

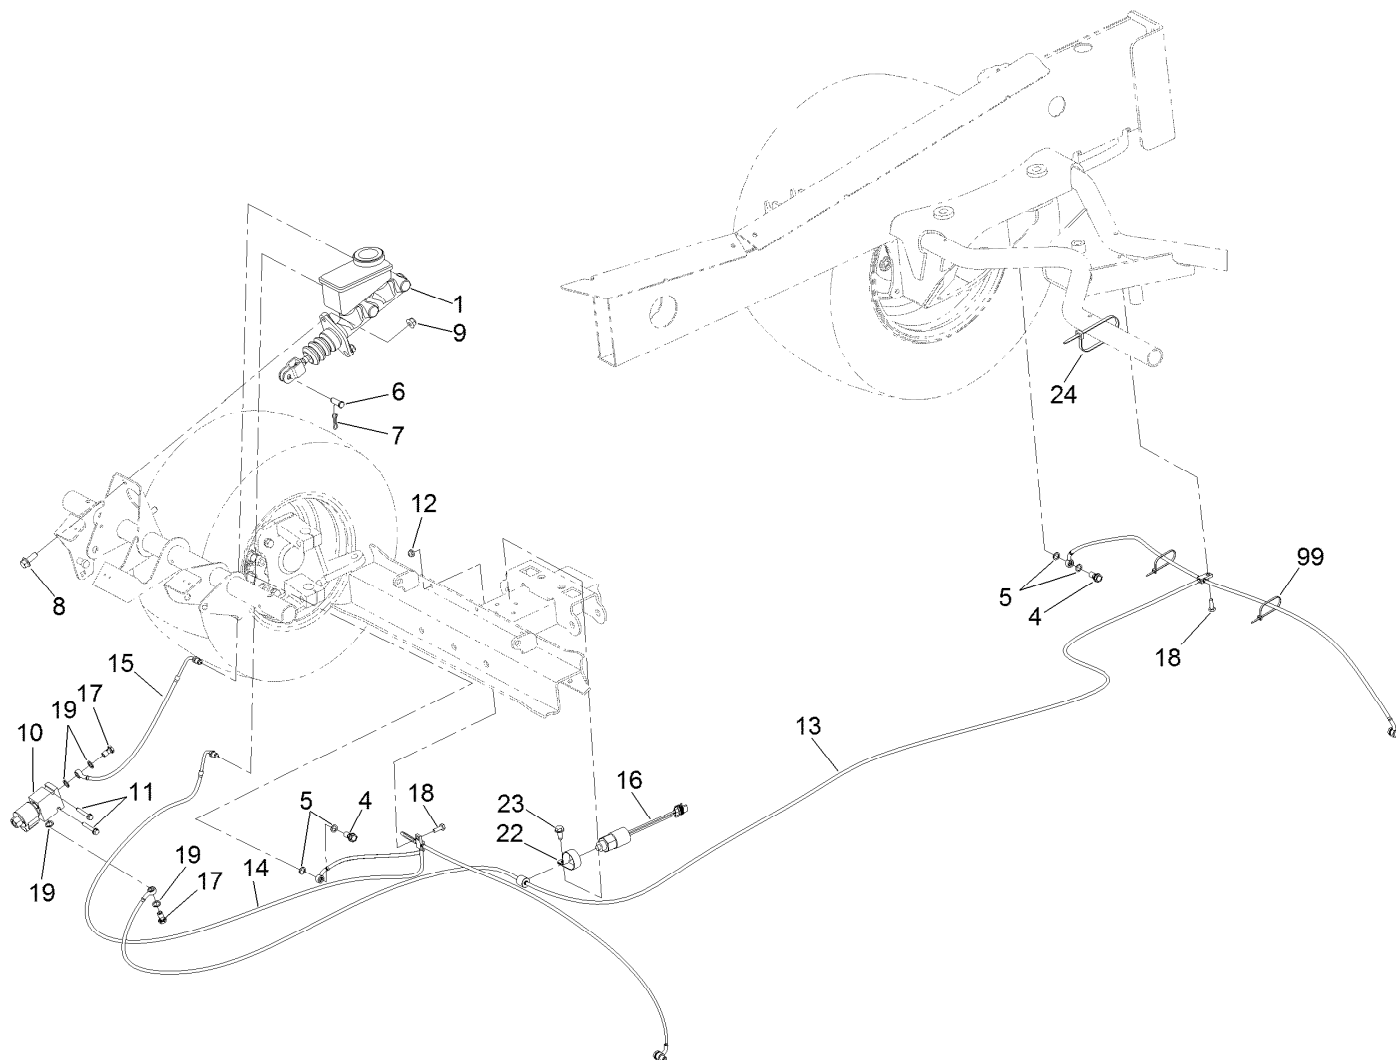 

Brake Hydraulic Assembly


Ref.	Part Number	Qty.	Description
1	104-6782	1	Master Cylinder ASM
4	120-4875	4	Bolt-Flange, Banjo
5	115-2341	8	Washer-Banjo
6	283-2	1	Pin-Clevis
7	119-1415	1	Pin-Cotter, Locking
8	3234-11	2	Screw-HHF
9	104-8301	2	Nut-HF, NI
10	125-0900	1	Valve-Brake Hold
11	94-2691	2	Screw-HWH Taptite
12	104-7201	1	Nut-HF, NI
13	125-7998	1	Line-Brake, Rear

Ref.	Part Number	Qty.	Description
14	125-7999	1	Line-Brake, Front
15	125-8000	1	Line-Brake, Solenoid
16	130-7148	1	Switch-Pressure
17	125-8005	2	Bolt-Banjo
18	321-4	2	Screw-HH
19	127-3914	4	Washer-Banjo
22	2412-74	1	R-Clamp
23	32104-32	1	Screw-HWH
24	3290-378	3	Tie-Cable
99	3290-379	6	Tie-Cable

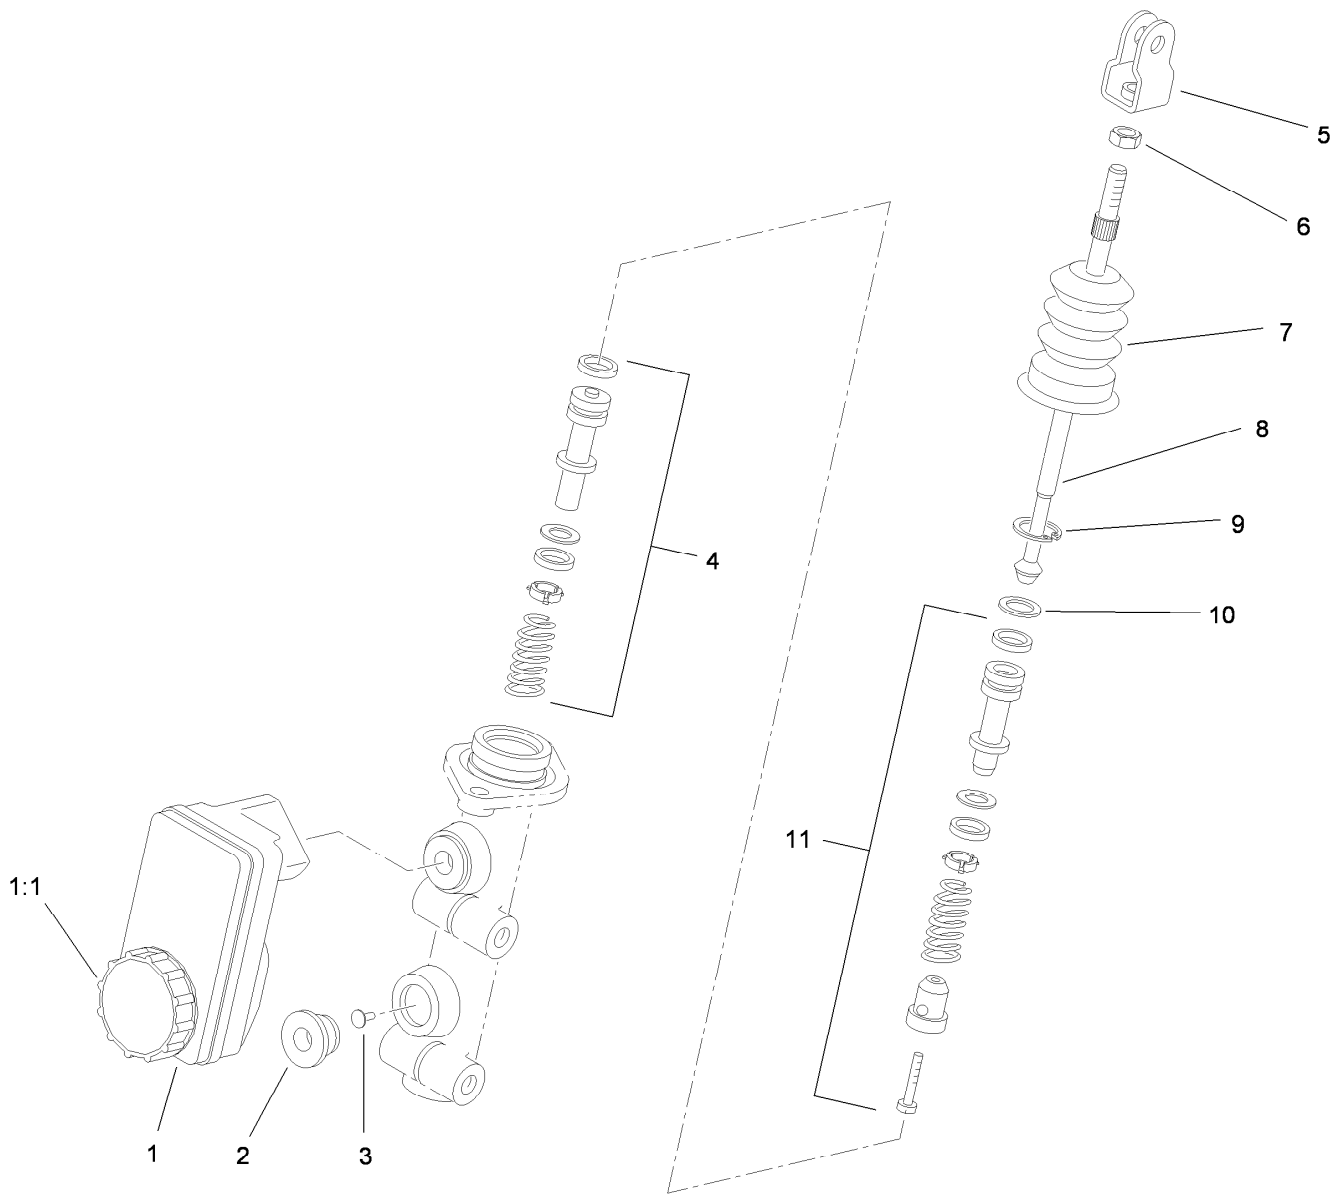 

Master Cylinder Assembly No. 104-6782

Ref.	Part Number	Qty.	Description
1	104-6845	1	Reservoir ASM
1:1	92-4112	1	Cap ASM
2	93-8971	2	Seal-Port, Flange
3	92-4103	1	Pin-Stop
4	92-4102	1	Secondary Piston ASM
5	92-4110	1	Clevis
6	21-0360	1	Nut-Hex
7	94-5209	1	Cover-Dust
8	94-5210	1	Rod-Push
9	92-4109	1	Ring-Snap
10	92-4108	1	Retainer-Washer
11	92-4101	1	Primary Piston ASM

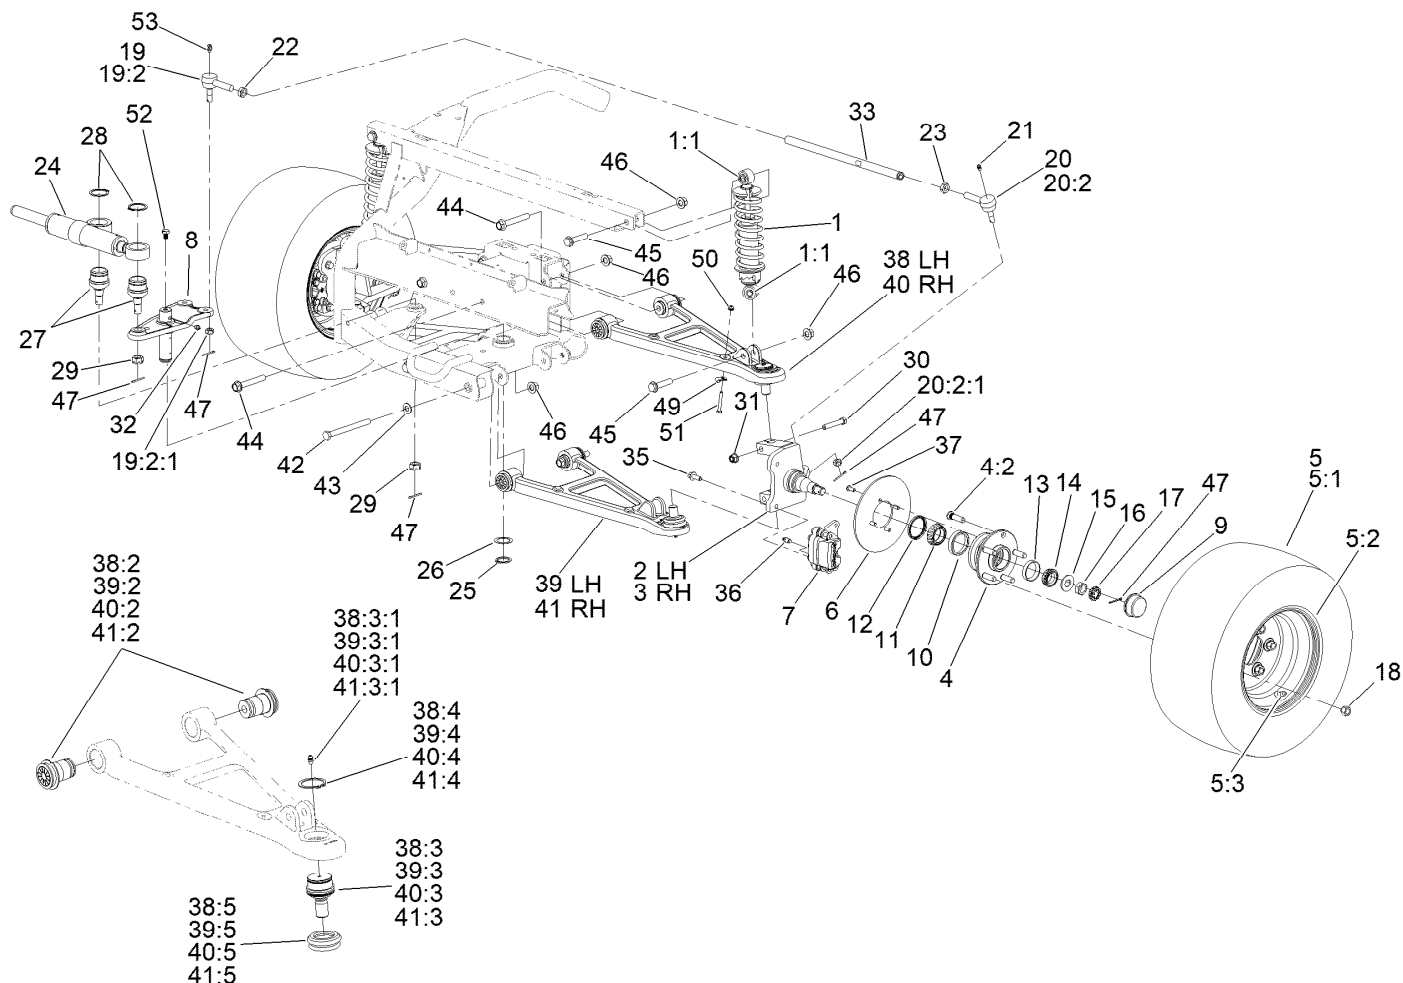 


Front Suspension Assembly

Ref.	Part Number	Qty.	Description
1	147-3170	2	Shock ASM - Coil Over
1:1	131-8574	2	Isolator-Shock
2	147-3160	1	Spindle, LH
3	147-4654	1	Spindle, RH
4	117-8071	2	Hub ASM
4:2	10-6830	5	Stud-Type, Drive
5	125-0763	2	Tire And Wheel ASM
5:1	120-7639	1	Tire
5:2	125-0764	1	Wheel
5:3	232-27	1	Stem-Valve
6	136-6295	2	Rotor-Brake
7	127-7424	2	Brake Caliper ASM
8	137-1602	1	Pitman Arm (Mach)
9	241-119	2	Cap-Dust
10	254-107	2	Cup-Bearing, Tapered
11	254-106	2	Cone-Bearing, Tapered
12	108-7019	2	Seal-Shaft
13	254-72	2	Bearing-Cup, Tapered

Ref.	Part Number	Qty.	Description
14	254-94	2	Bearing-Cone, Tapered
15	93-0309	2	Washer-Tab
16	3220-7	2	Nut-Jam
17	93-0307	2	Nut-Lock, Retainer
18	139-2564	10	Nut-Lug
19	112772-03	2	Joint-Ball, RH
19:2		1	Socket-Balljoint ●
19:2:1	915031	1	Nut
20	112771-03	2	Joint-Ball, LH
20:2		1	Socket-Balljoint ●
20:2:1	915031	1	Nut
21	302-5	2	Fitting-Grease
22	3220-11	2	Nut-Jam
23	3218-21	2	Nut-Jam LH
24	125-0720	1	Cylinder-Hydraulic, Steering
25	32151-77	1	Ring-Retaining, External
26	76-2980	2	Washer-Thrust
27	117-9875	2	Joint-Ball

 
● Not serviced separately

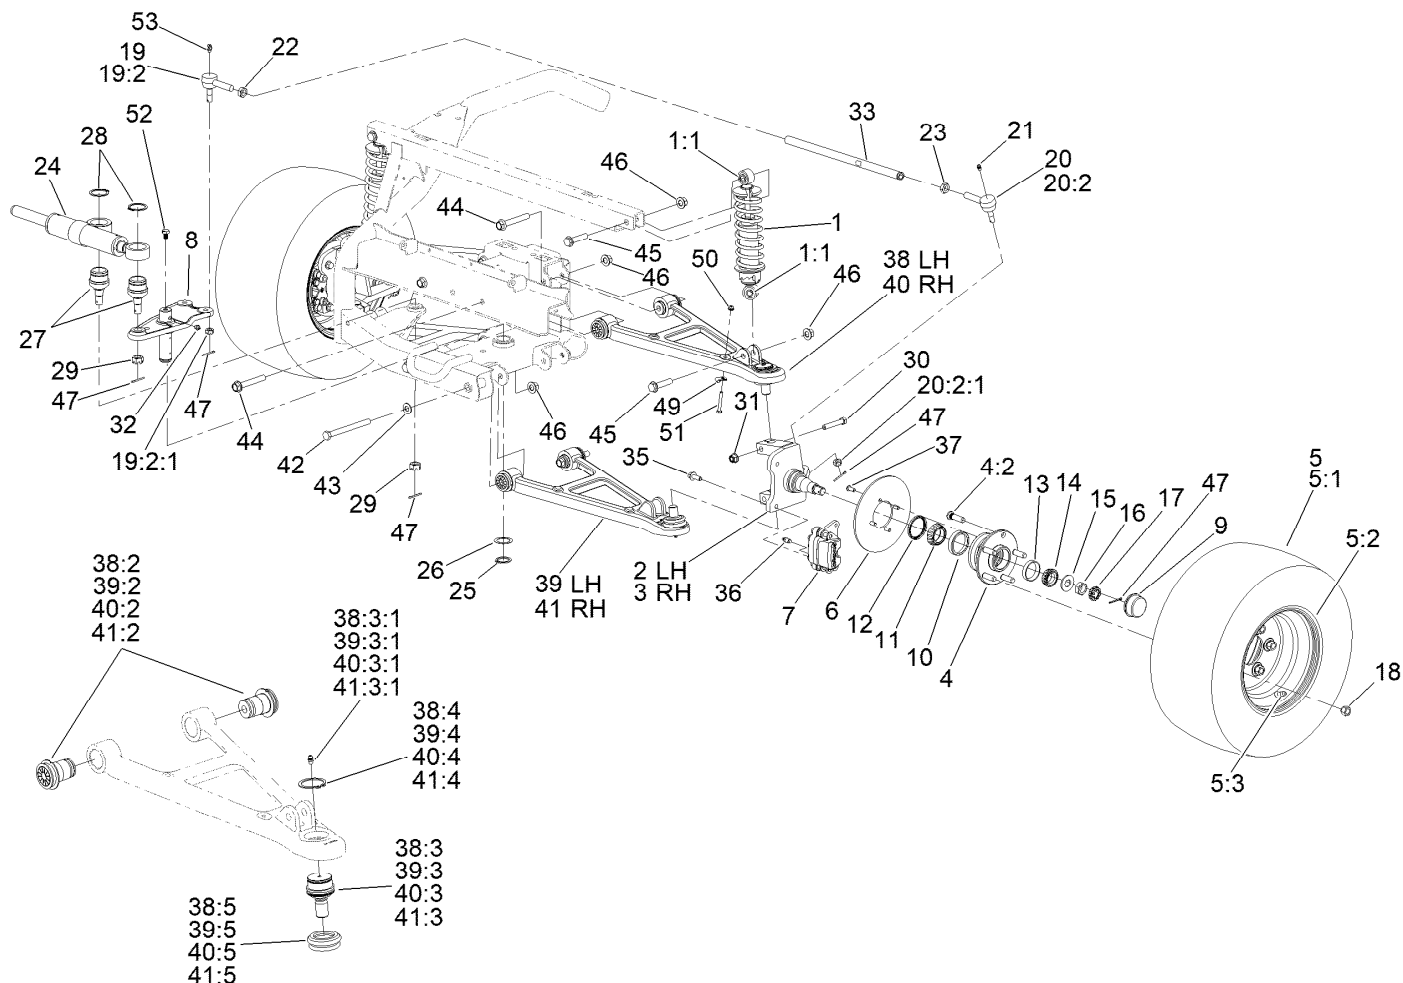

Front Suspension Assembly (continued)

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
28	32151-104	2	Ring-Retaining, External	39:3:1	302-5	1	Fitting-Grease
29	32136-2	2	Nut-SHH	39:4	32151-104	1	Ring-Retaining, External
30	324-10	4	Screw-HH	39:5	87-2420	1	Seal-Joint, Ball
31	114-8417	4	Nut-HF, NI	40	125-8023	1	RH Upper Control Arm ASM
32	302-52	1	Fitting-Grease	40:2	87-1450	2	Bushing-Flange
33	115-7654	2	Tie Rod	40:3	115-2165	1	Ball Joint
35	3234-11	4	Screw-HHF	40:3:1	302-5	1	Fitting-Grease
36	119-9509	2	Screw-Bleed	40:4	32151-104	1	Ring-Retaining, External
37	3274-55	8	Screw-HSBH	40:5	87-2420	1	Seal-Joint, Ball
38	125-8021	1	LH Upper Control Arm ASM	41	125-8024	1	RH Lower Control Arm ASM
38:2	87-1450	2	Bushing-Flange	41:2	87-1450	2	Bushing-Flange
38:3	115-2165	1	Ball Joint	41:3	115-2165	1	Ball Joint
38:3:1	302-5	1	Fitting-Grease	41:3:1	302-5	1	Fitting-Grease
38:4	32151-104	1	Ring-Retaining, External	41:4	32151-104	1	Ring-Retaining, External
38:5	87-2420	1	Seal-Joint, Ball	41:5	87-2420	1	Seal-Joint, Ball
39	125-8022	1	LH Lower Control Arm ASM	42	325-22	2	Screw-HH
39:2	87-1450	2	Bushing-Flange	43	3256-26	2	Washer-Flat
39:3	115-2165	1	Ball Joint	44	114-8419	6	Screw-HHF

 ● Not serviced separately

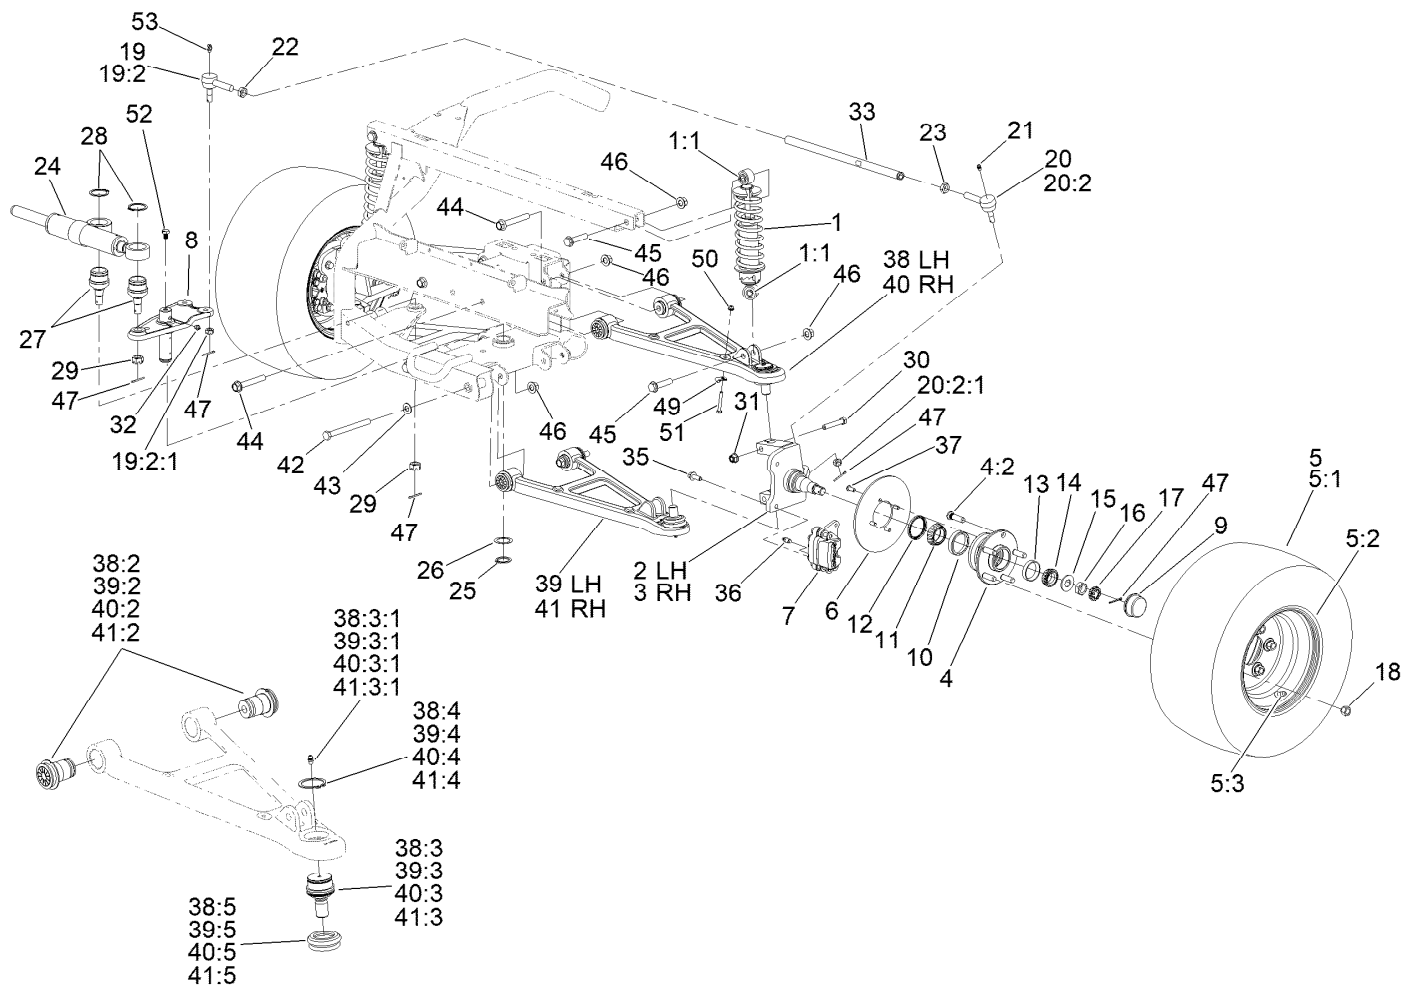

Front Suspension Assembly (continued)


Ref.	Part Number	Qty.	Description
45	3234-46	4	Screw-HHF
46	99-5107	12	Nut-HF Nylock
47	3272-12	8	Pin-Cotter
49	2412-72	2	Clip-Closed, Insulated

Ref.	Part Number	Qty.	Description
50	104-7201	2	Nut-HF, NI
51	321-11	2	Screw-HH
52	302-60	2	Fitting-Grease
53	138-6279	1	Screw-Cap, HH

● Not serviced separately


3473-110B

 Pedal Assembly

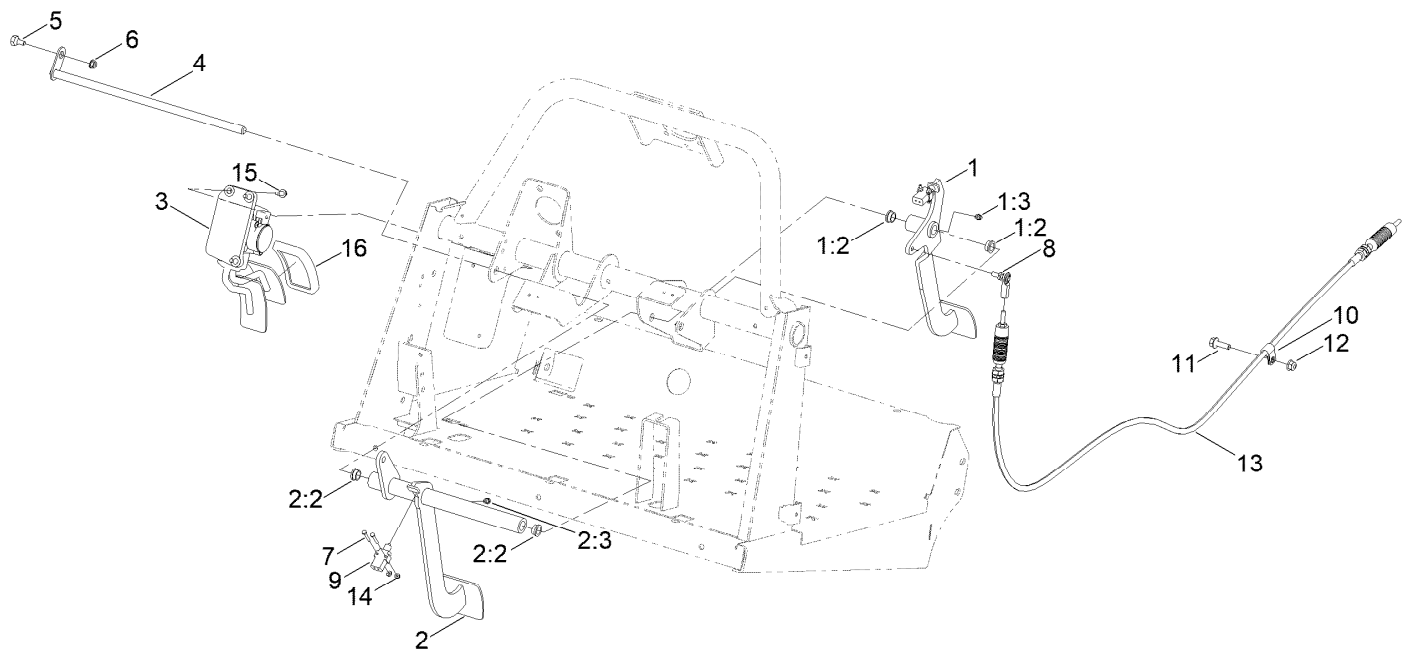

Pedal Assembly (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-3587	1	Pedal, Clutch ASM	7	32105-9	4	Screw-HH
1:2	256-156	2	Bushing-Flange	8	110-2554	1	Rod End-Spherical
1:3	302-5	1	Fitting-Grease	9	99-3410	2	Switch
2	147-3585	1	Pedal, Brake ASM	10	2412-93	1	Clamp-R
2:2	256-156	2	Bushing-Flange	11	3234-17	1	Screw-HHF
2:3	302-5	1	Fitting-Grease	12	104-8300	1	Nut-HF, NI
3	144-2740	1	Pedal ASM-Accelerator	13	125-0957	1	Cable-Clutch
4	163-2930	1	Pivot ASM	14	3296-9	4	Nut-Hex
5	63-3410	1	Screw-Shoulder	15	49-2040	3	Screw-HWHTF
6	32128-33	1	Nut-HF	16	140-4572	1	Pedal Pad-Throttle

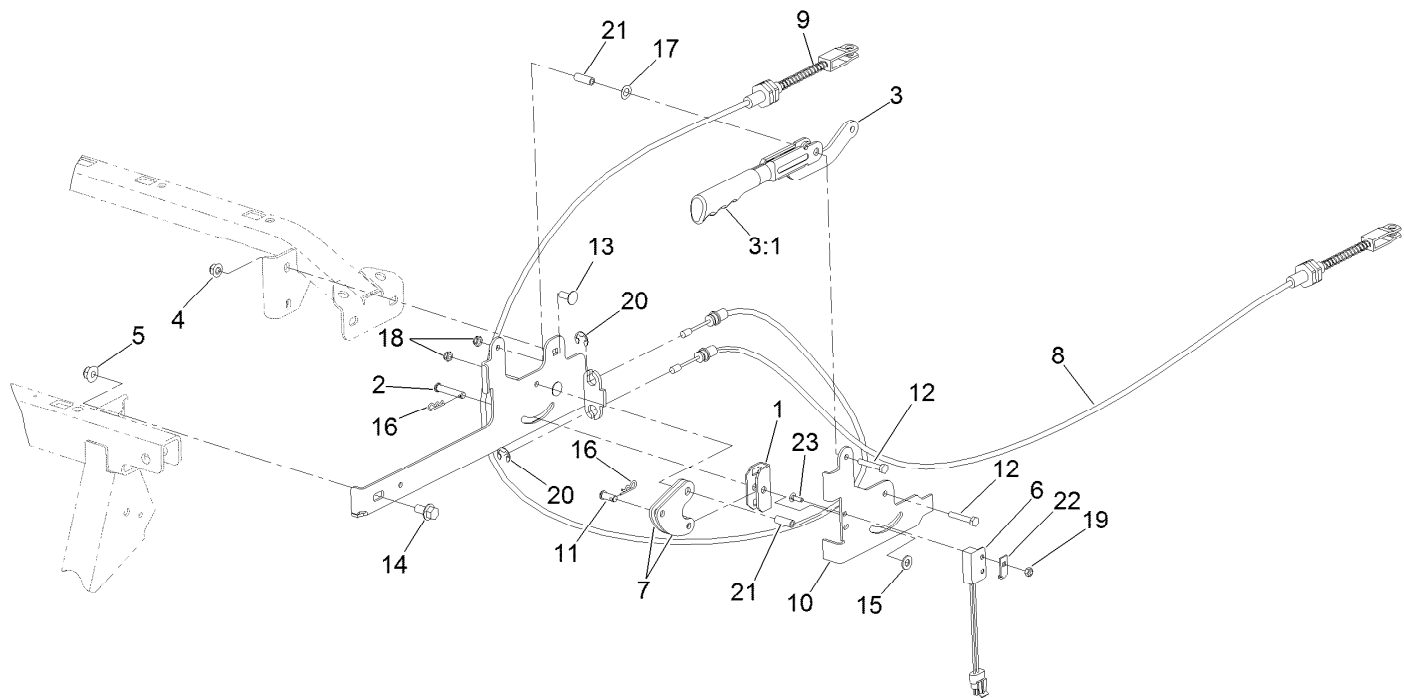 

Parking Brake Lever and Cable Assembly

Ref.	Part Number	Qty.	Description
1	87-3480	1	Bracket-Equalizer, Cable
2	94-3829	1	Pin-Clevis
3	127-8863	1	Lever-Brake, Park
3:1	127-8864	1	Grip-Handle
4	104-8300	2	Nut-HF, NI
5	104-8301	1	Nut-HF, NI
6	105-0023	1	Switch-Proximity
7	106-7814	2	Bellcrank
8	136-2444	1	Cable-Parking Brake, LH
9	136-2445	1	Cable-Parking Brake, RH
10	136-2353-0P	1	Parking Brake ASM [primed]
11	283-62	1	Pin-Clevis

Ref.	Part Number	Qty.	Description
12	321-9	2	Screw-HH
13	3230-23	2	Bolt-CARR
14	3234-1	1	Screw-HHF
15	3256-23	1	Washer-Plain
16	3290-307	2	Pin-Cotter
17	3290-477	1	Washer-Curved
18	3296-56	2	Nut-Lock, NI
19	3296-2	1	Nut-Lock, NI
20	32120-47	2	Ring-Retaining, External
21	114402	2	Spacer
22	100-4872	1	Plate-Switch, Neutral
23	3229-34	1	Screw-CARR

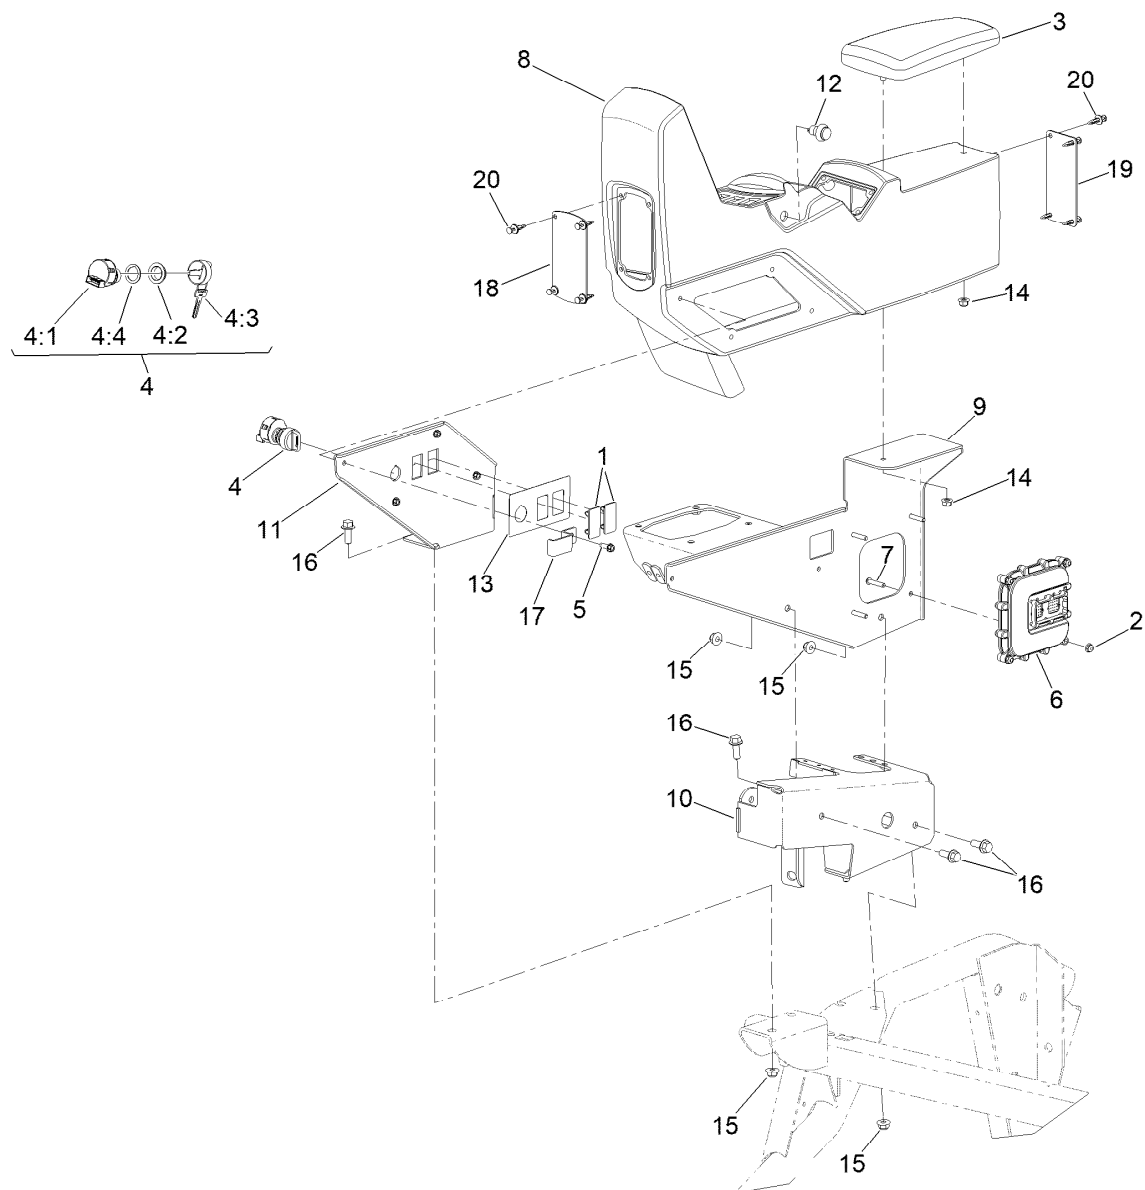 


Control Console Mount Assembly

Ref.	Part Number	Qty.	Description
1	99-7420	2	Plug-Hole
2	104-7201	4	Nut-HF, NI
3	108-7602	1	Rest-Arm
4	110-2580	1	Switch-Key, Supervisor
4:1		1	Switch-Key ●
4:2	108-8660	1	Nut-Mounting
4:3	110-5221	1	Set-Key, Supervisor
4:4	108-8659	1	Washer-Backup
5	49-2040	4	Screw-HWHTF
6	122-3374	1	Controller
7	120-0834	4	Screw-HSBH
8	161-4147	1	Console-Armrest
9	125-4108-0P	1	Console-Mount ASM [primed]

Ref.	Part Number	Qty.	Description
10	125-4188-0P	1	Shifter-Mount [primed]
11	125-4191-03	1	Console Mount ASM
12	125-7996	1	Switch-Pb, Momentary
13	125-8114	1	Decal-Control Panel
14	104-8300	2	Nut-HF, NI
15	104-8301	6	Nut-HF, NI
16	3234-11	6	Screw-HHF
17	136-2309	1	Bracket-Mount, Radio
18	147-4692-03	1	Plate-Cover, Front
19	147-4693-03	1	Plate-Cover, Rear
20	125-9622	8	Rivet-Blind

 
● Not serviced separately

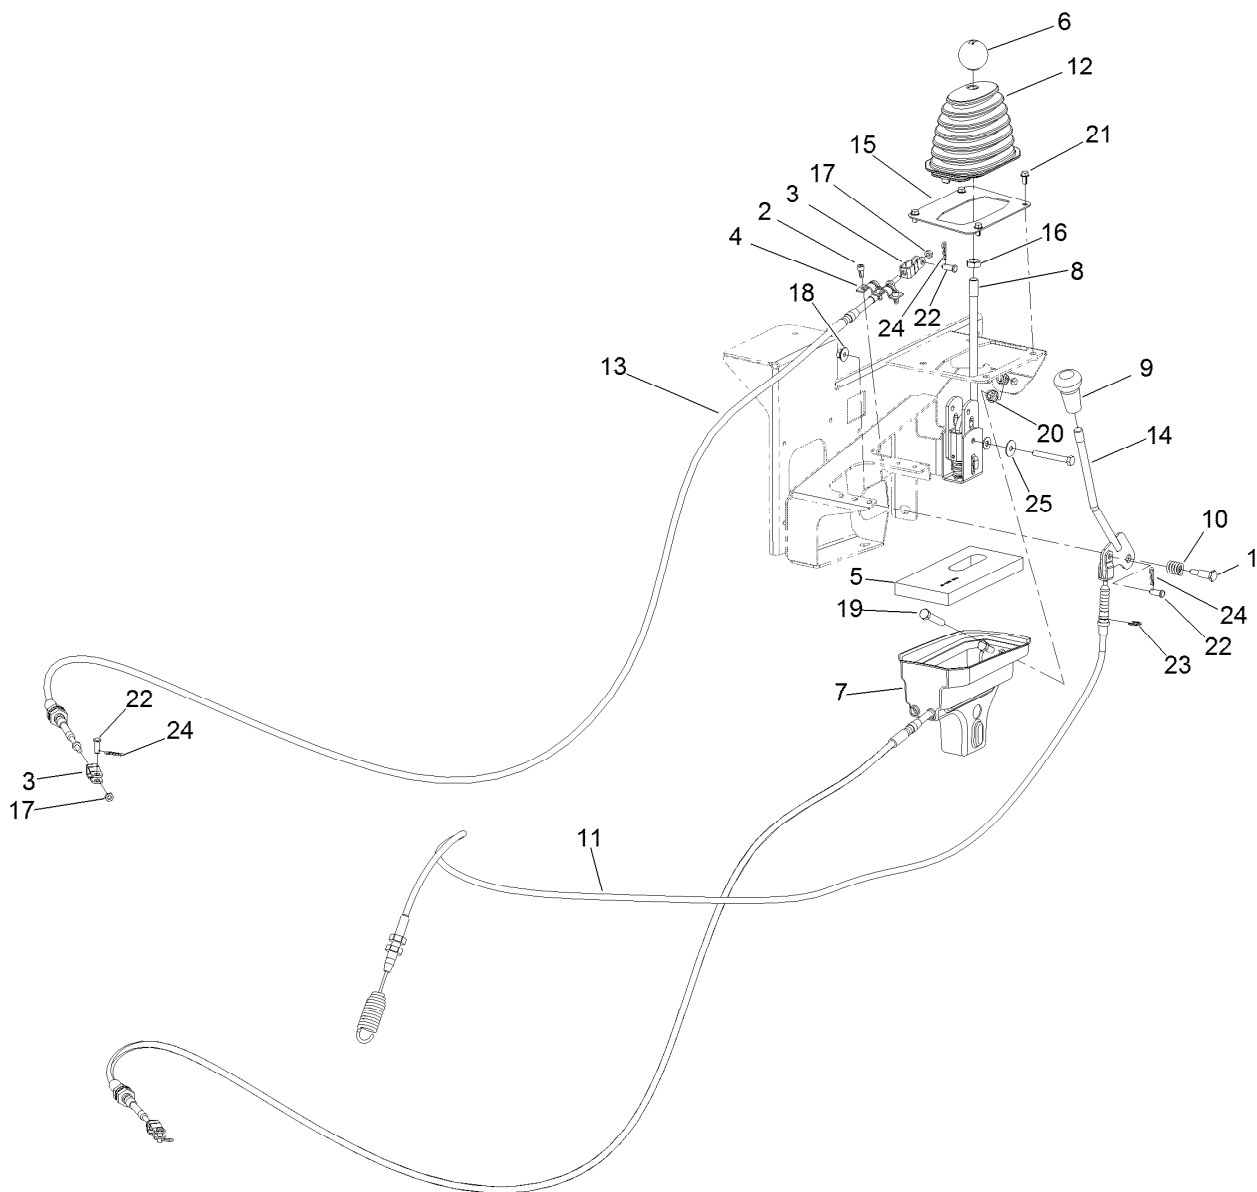

Gear Shift and Drift Lock Control Assembly

Ref.	Part Number	Qty.	Description
1	63-2650	1	Screw-Shoulder
2	65-5220	3	Screw-HSH, Thread Forming
3	87-2310	4	Clevis-Cable
4	87-4960	1	Clamp-Cable
5	87-6570	1	Seal-Boot, Lower
6	87-6720	1	Knob-Shift
7	106-2376	1	Boot-Shift, Lower
8	106-7887	1	Shift ASM
9	106-7952	1	Knob
10	136-7121	1	Spring-Compression
11	115-2287	1	Cable-Lock, Differential
12	117-8063	1	Boot-Shift


Ref.	Part Number	Qty.	Description
13	125-0880	2	Cable-Shift
14	125-0894	1	Handle-Difflock
15	125-8030-03	1	Cover-Shifter
16	3218-18	1	Nut-Jam
17	3220-1	4	Nut-Jam
18	32128-13	1	Nut-HF
19	323-10	2	Screw-HH
20	3290-357	2	Nut-HSF
21	93-6083	4	Screw-HWH
22	283-62	5	Pin-Clevis
23	32120-47	1	Ring-Retaining, External
24	3290-307	5	Pin-Cotter
25	108-4925	1	Washer

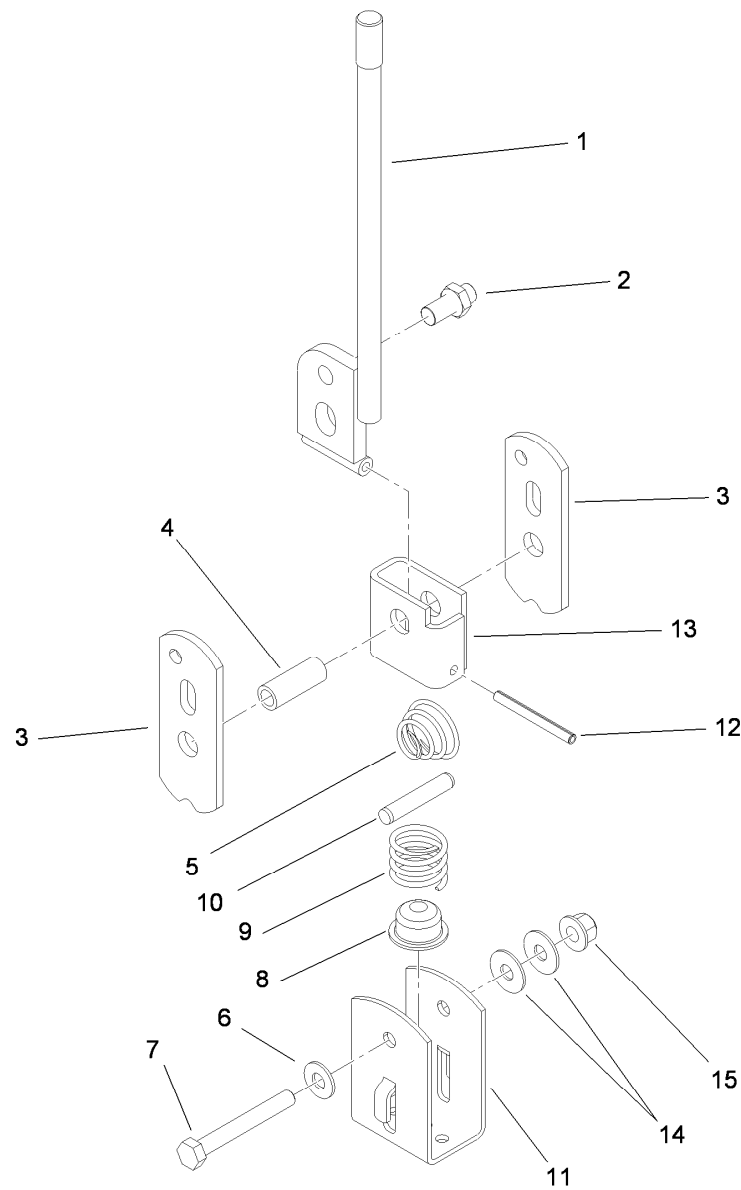 

Shift Assembly No. 106-7887

Ref.	Part Number	Qty.	Description
1	131-3469	1	Lever-Shift
2	87-3650	1	Pin-Shift
3	87-3540	2	Link-Shift
4	87-2520	1	Tube-Pivot
5	87-2900	1	Spring-Compression
6	87-8640	1	Washer-Flat
7	322-12	1	Screw-HH
8	87-3530	1	Button-Shifter
9	87-3660	1	Spring-Compression
10	3290-507	1	Pin-Dowel
11	87-3520	1	Clevis
12	32121-48	1	Pin-Spring
13	87-6040	1	Bracket-Shifter
14	3290-456	2	Washer-Belleville
15	104-8300	1	Nut-HF, NI

 
Control Console Assembly

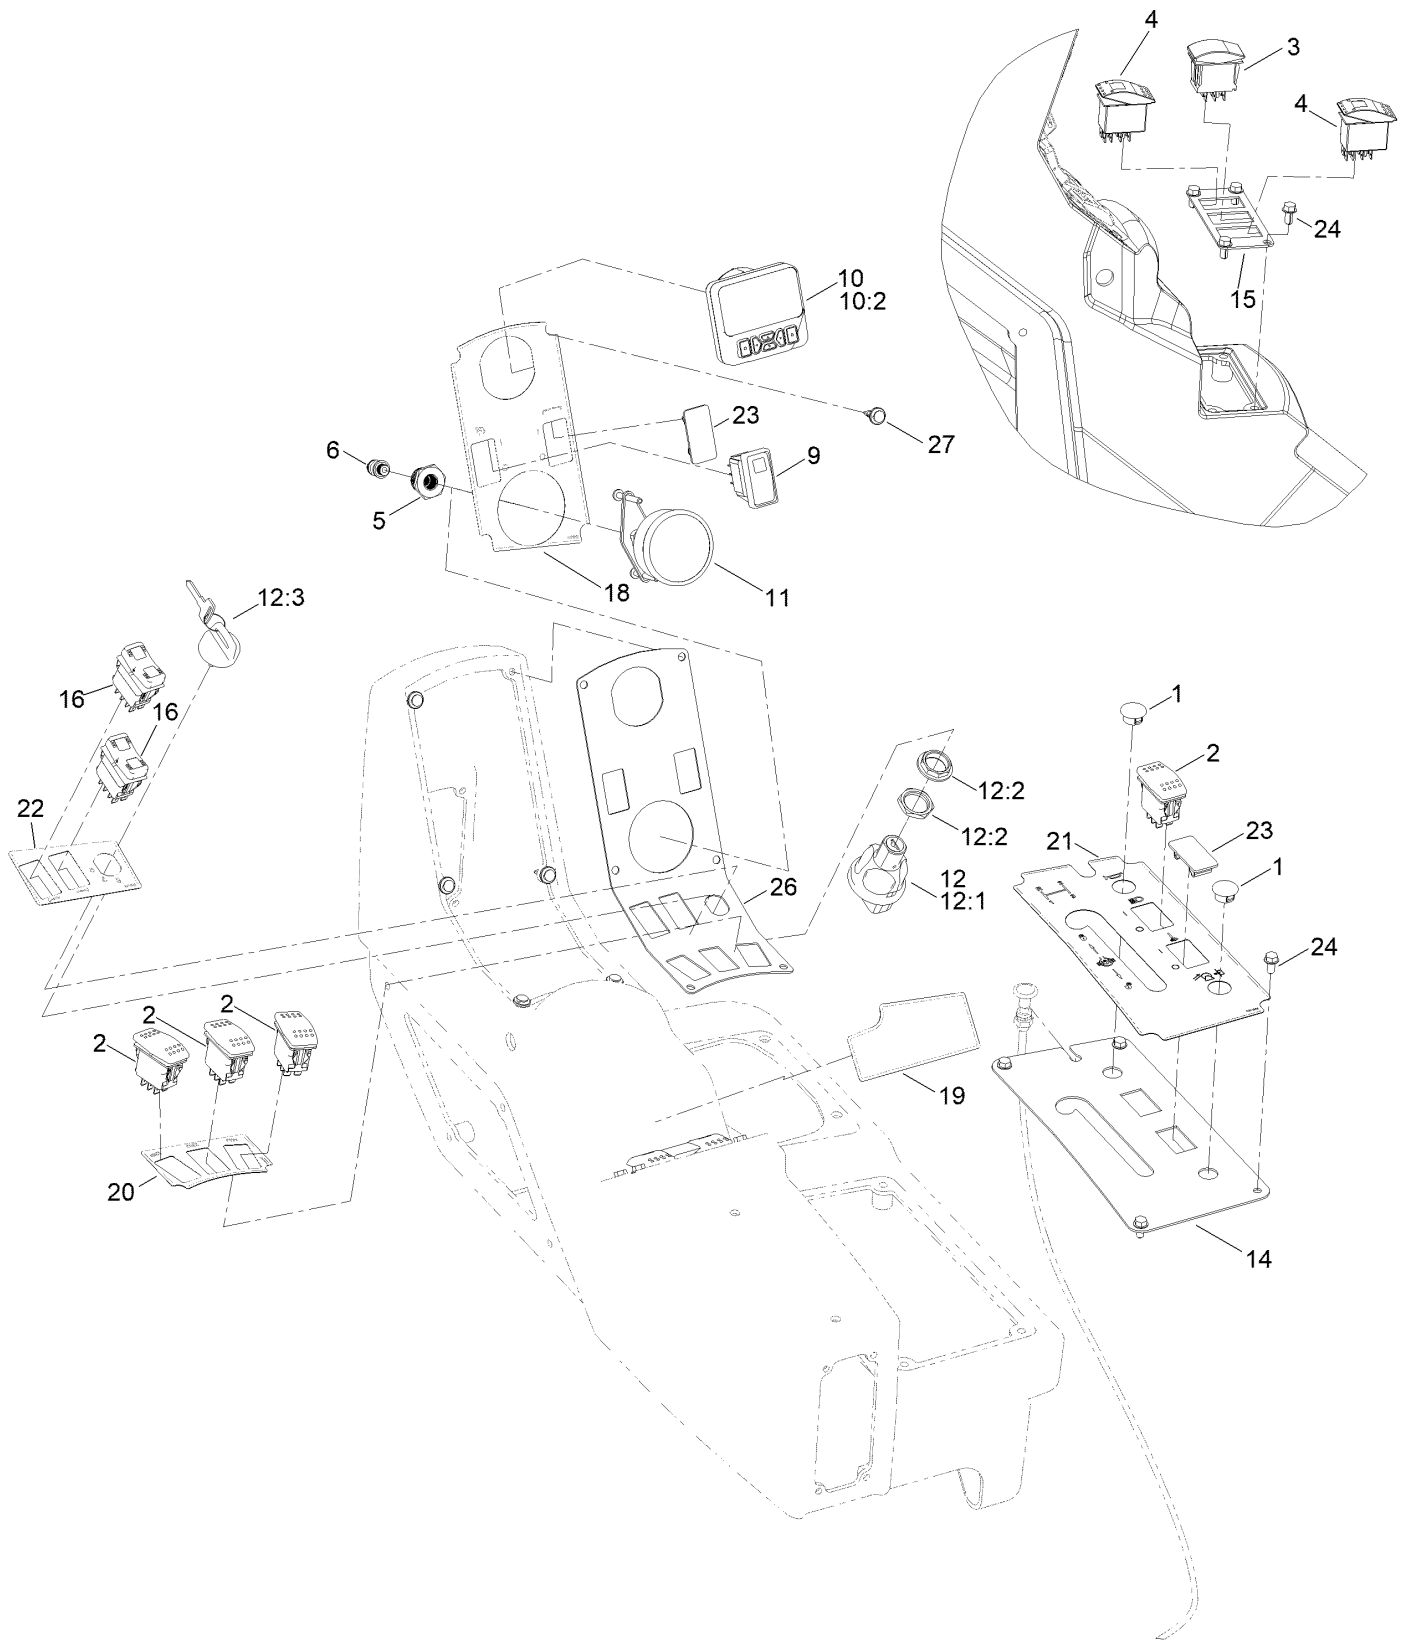

Control Console Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	94-5627	2	Plug-Dome	12:2	122-2704	1	Nut-Face, M22 (Plastic)
2	95-8999	4	Switch-Rocker, On-None-On	12:3	121-5162	1	Set-Key, Ignition
3	100-1535	1	Switch-Rocker, (On)-Off-(On)	14	125-0896-03	1	Panel-Cover
4	100-8490	2	Switch-Rocker, On-None-On	15	125-0898-03	1	Panel-Switches
5	100-8665	1	Reducer-Gauge, Pressure	16	125-0899	2	Switch-Rocker
6	100-8667	1	Coupler-Reducer	18	161-4143	1	Decal-Control Panel, Upper
9	120-0695	1	Switch-Rocker, On-Off-(On)	19	130-8293	1	Decal-Control Panel, Rear
10	161-1700	1	Display-LCD	20	161-4145	1	Decal-Control Panel, Spray
10:2	161-1723	1	Nut-Display	21	163-2966	1	Decal-Control Panel
11	120-8546	1	Gauge-Pressure	22	161-4144	1	Decal-Switch Panel, Center
12	121-5159	1	Switch-Ignition	23	99-7420	2	Plug-Hole
12:1	121-5160	1	Nut-Hex	24	93-6083	8	Screw-HWH
				26	161-4137-03	1	Panel-Switches
				27	125-9622	6	Rivet-Blind

 
Hood, Dash and Headlight Assembly

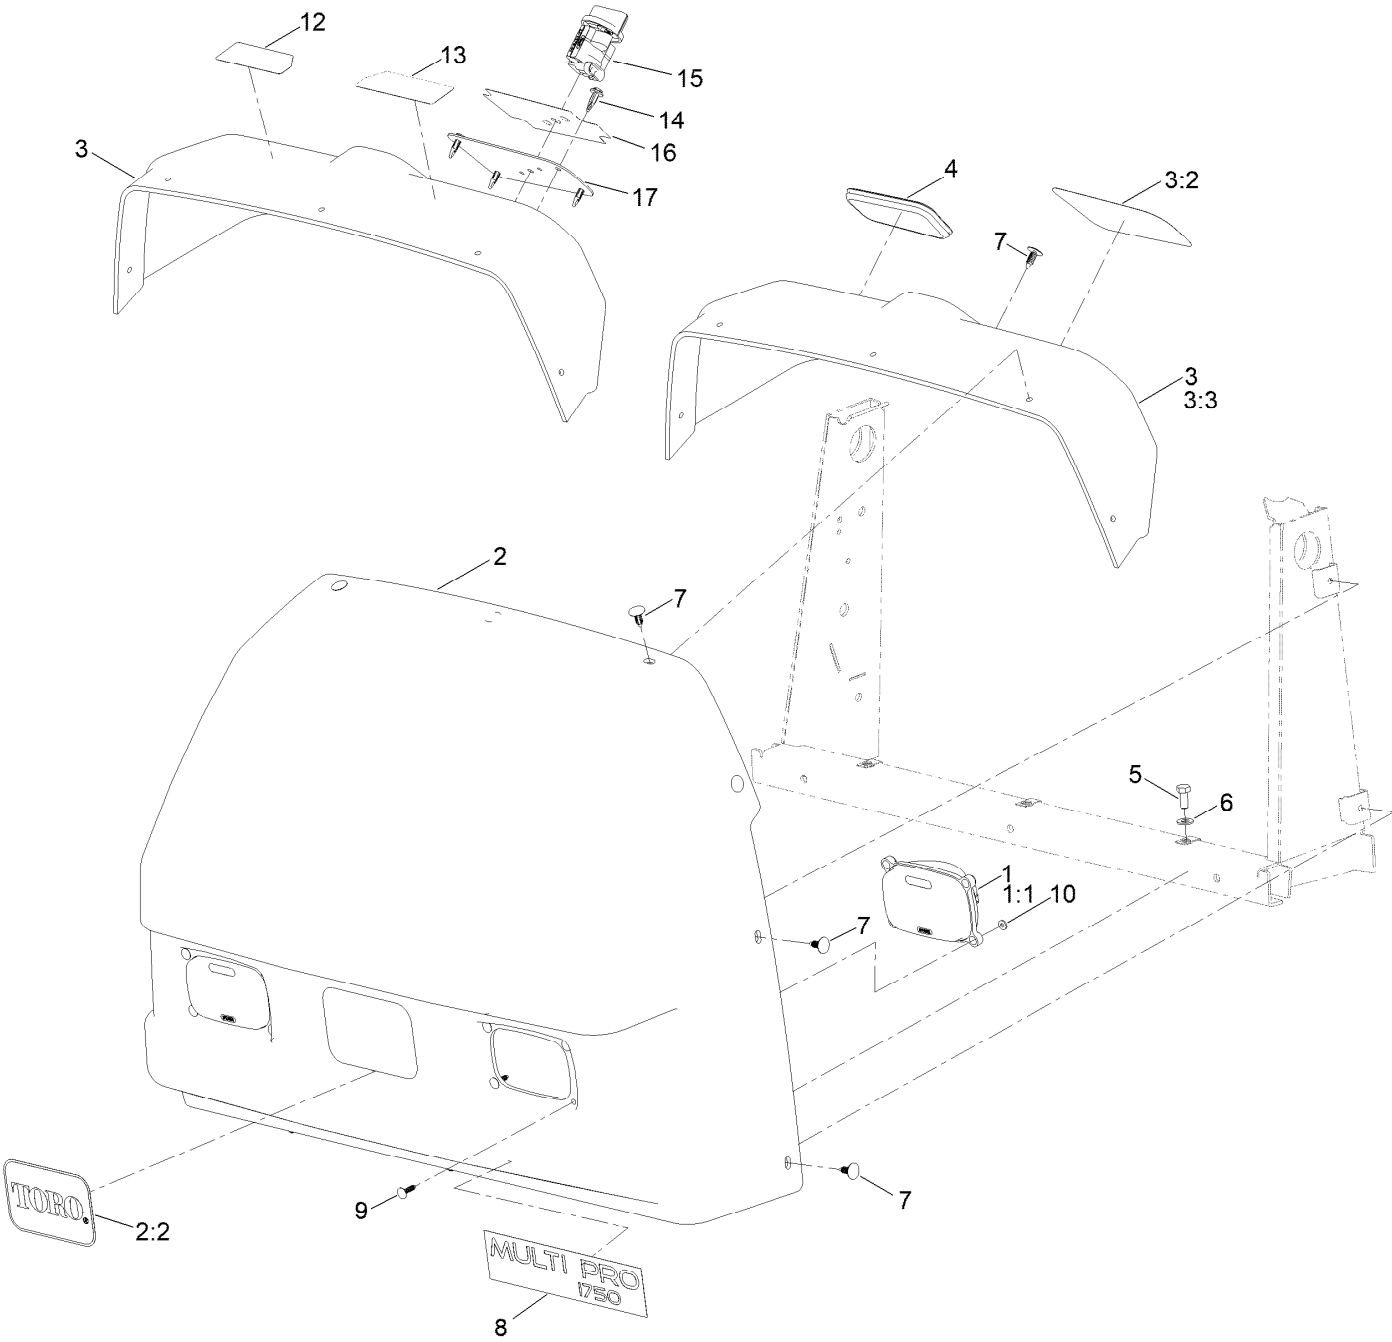

Hood, Dash and Headlight Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-0672	2	Headlight ASM	7	117-2382	10	Plug-Plastic
1:1	125-0673	1	Halogen-Bulb	8	127-3944	1	Decal
2	127-3982	1	Hood	9	125-8067	8	Plug-Plastic
2:2	67-1300	1	Decal	10	3256-21	8	Washer-Flat
3	163-2998	1	Dash	12	163-2967	1	Decal-Warning
3:2	163-2967	1	Decal-Warning	13	163-2968	1	Decal-Warning
3:3	163-2968	1	Decal-Warning	14	125-9622	4	Rivet-Blind
4	125-8059	1	Cover- Reservoir, Brake	15	163-2962	1	Sensor-Position, Rotary
5	322-3	3	Screw-HH	16	163-2990	1	Decal-Hand Throttle
6	3256-23	3	Washer-Plain	17	163-2961-03	1	Bracket-Hand Throttle

 
Seat Base and Front Fender Assembly

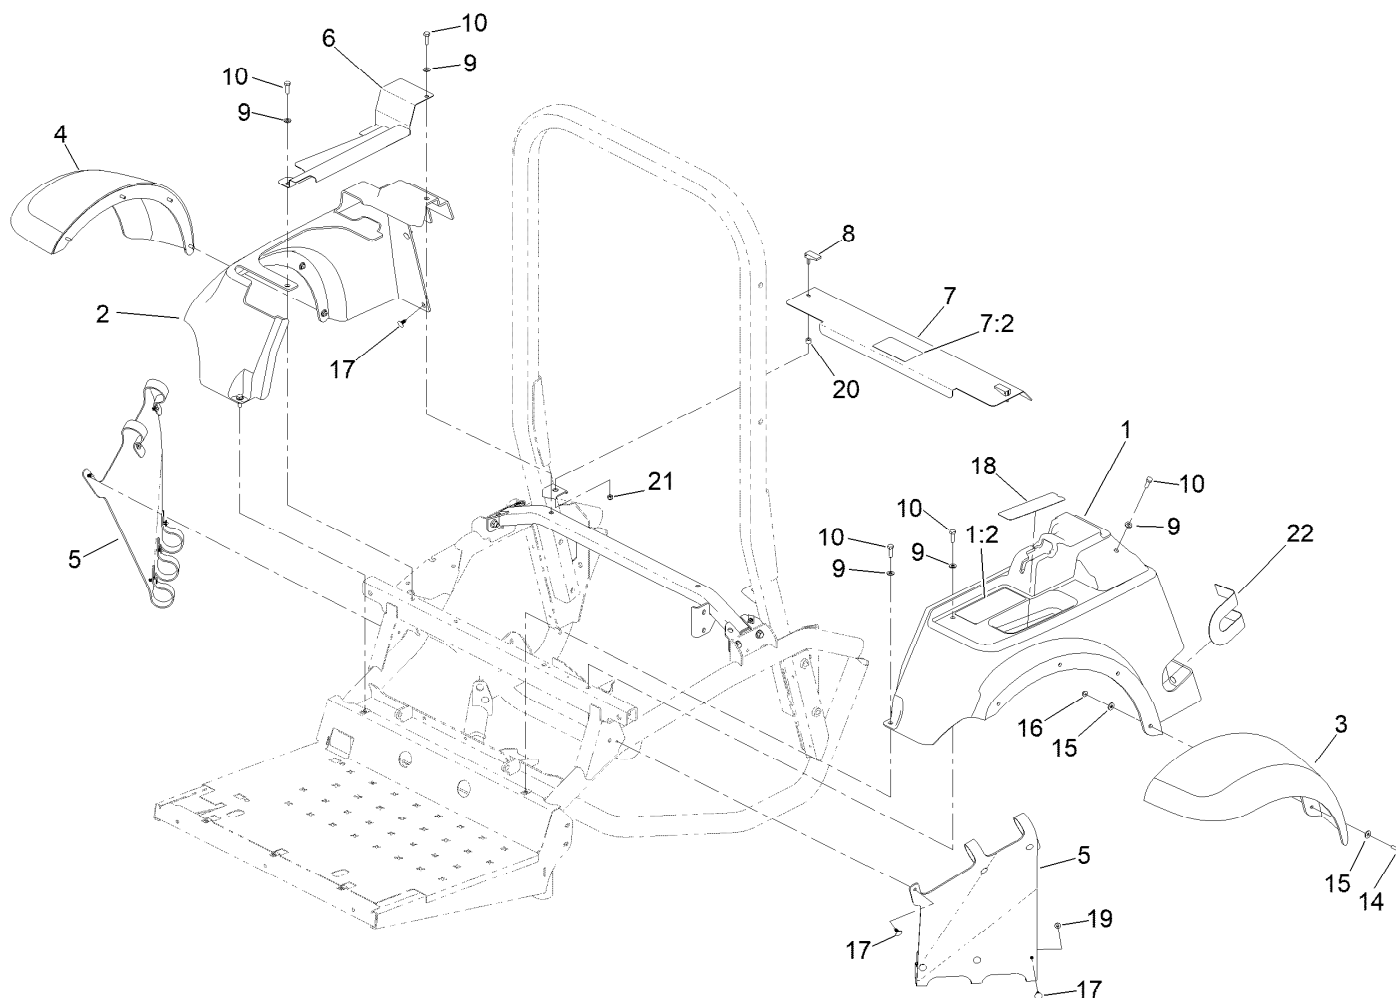

Seat Base and Front Fender Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-3980	1	LH Seatbase ASM	9	3256-23	7	Washer-Plain
1:2	127-3935	1	Decal-Start-Up/Shut-Down	10	322-5	7	Screw-HH
2	125-0803	1	Seatbase-RH	14	321-5	8	Screw-HH
3	125-0902	1	Fender-LH	15	3256-2	16	Washer-Flat
4	125-0903	1	Fender-RH	16	104-7201	8	Nut-HF, NI
5	125-0935	2	Shroud-Fender, Inner	17	117-2382	16	Plug-Plastic
6	163-7060-01	1	Cover ASM-Console, Bottom	18	125-8093	1	Pad-Pocket
7	127-3979	1	Cover-Engine	19	3256-16	10	Washer-Flat
7:2	127-3937	1	Decal-Warning, Engine Cover	20	106-6778	2	Bushing-Latch, Swell
8	106-6777	2	Handle-Latch, Swell	21	1-804254	2	Nut-Lock, HH
				22	131-5822	1	Guard-Rubber

 
Hydraulic Steering Assembly

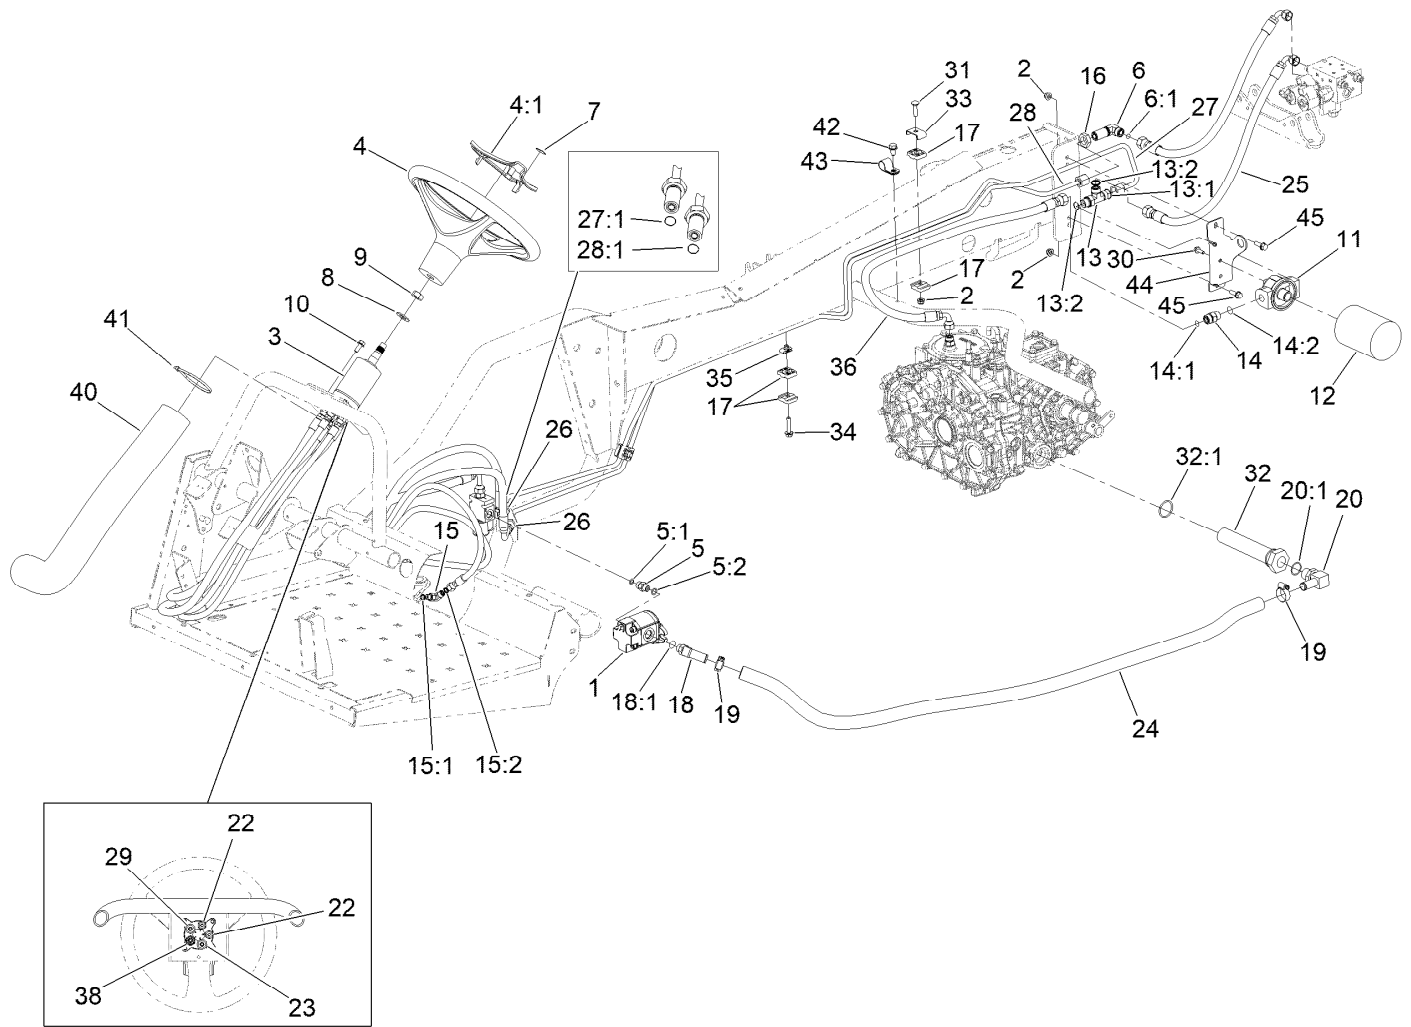

Hydraulic Steering Assembly (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-6545	1	HYD Pump ASM	19	2412-129	2	Clamp-Hose
2	104-8300	4	Nut-HF, NI	20	353-987	1	Fitting-Elbow, 90
3	138-6100	1	Steering Control Unit	20:1	237-81	1	O-Ring
4	98-1471	1	Wheel-Steering	22	108-5675	2	Hydraulic Hose ASM
4:1	98-1468	1	Cover-Wheel, Steering	23	127-3987	1	Hose ASM
5		2	Fitting-Straight ●	24	125-0952	1	Hose-Suction
5:1	237-22	1	O-Ring	25	125-0949	2	Hydraulic Hose ASM
5:2	237-42	1	O-Ring	26	340-70	2	Nut-Lock
6	93-9151	1	Fitting-HYD	27	125-4058	1	Hydraulic Tube ASM
6:1	237-30	2	O-Ring	27:1	237-22	1	O-Ring
7	98-1459	1	Decal	28	125-4059	1	Hydraulic Tube ASM
8	3256-27	1	Washer-Flat	28:1	237-22	1	O-Ring
9	3296-33	1	Nut-Lock, NI	29	114-7702	1	Hose-HYD
10	33104-020	4	Screw-HHF	30	3234-4	2	Screw-HHF
11	87-8780	1	Head-Filter	31	3230-3	2	Screw-CARR
12	54-0110	1	Filter-Oil, Transmission	32	147-6678	1	Strainer-Hydraulic
13	340-109	1	Fitting-Tee	32:1	237-101	1	O-Ring
13:1	237-79	1	O-Ring	33	119-1418	2	Plate-Clamp, Short
13:2	237-30	2	O-Ring	34	115-1794	1	Screw-HHF
14	340-4	1	Fitting-Straight	35	94-2413	1	Nut-U
14:1	237-30	1	O-Ring	36	94-5961	1	Hose
14:2	237-79	1	O-Ring	38	120-2061	1	Hose-HYD
15	340-132	2	Fitting-Elbow, 90 DEG	40	106-6713	1	Cover-Lines, Steering
15:1	237-78	1	O-Ring	41	3290-379	4	Tie-Cable
15:2	237-21	1	O-Ring	42	110-9380	1	Screw-HWH
16	340-127	1	Nut-Bulkhead	43	2412-81	1	Clamp-R
17	56-7973	6	Clamp-Tube	44	136-2313-03	1	Mount-Filter
18	93-6848	1	Fitting-Elbow 45	45	3234-29	2	Screw-HHF
18:1	237-79	1	O-Ring				

 ● Not serviced separately

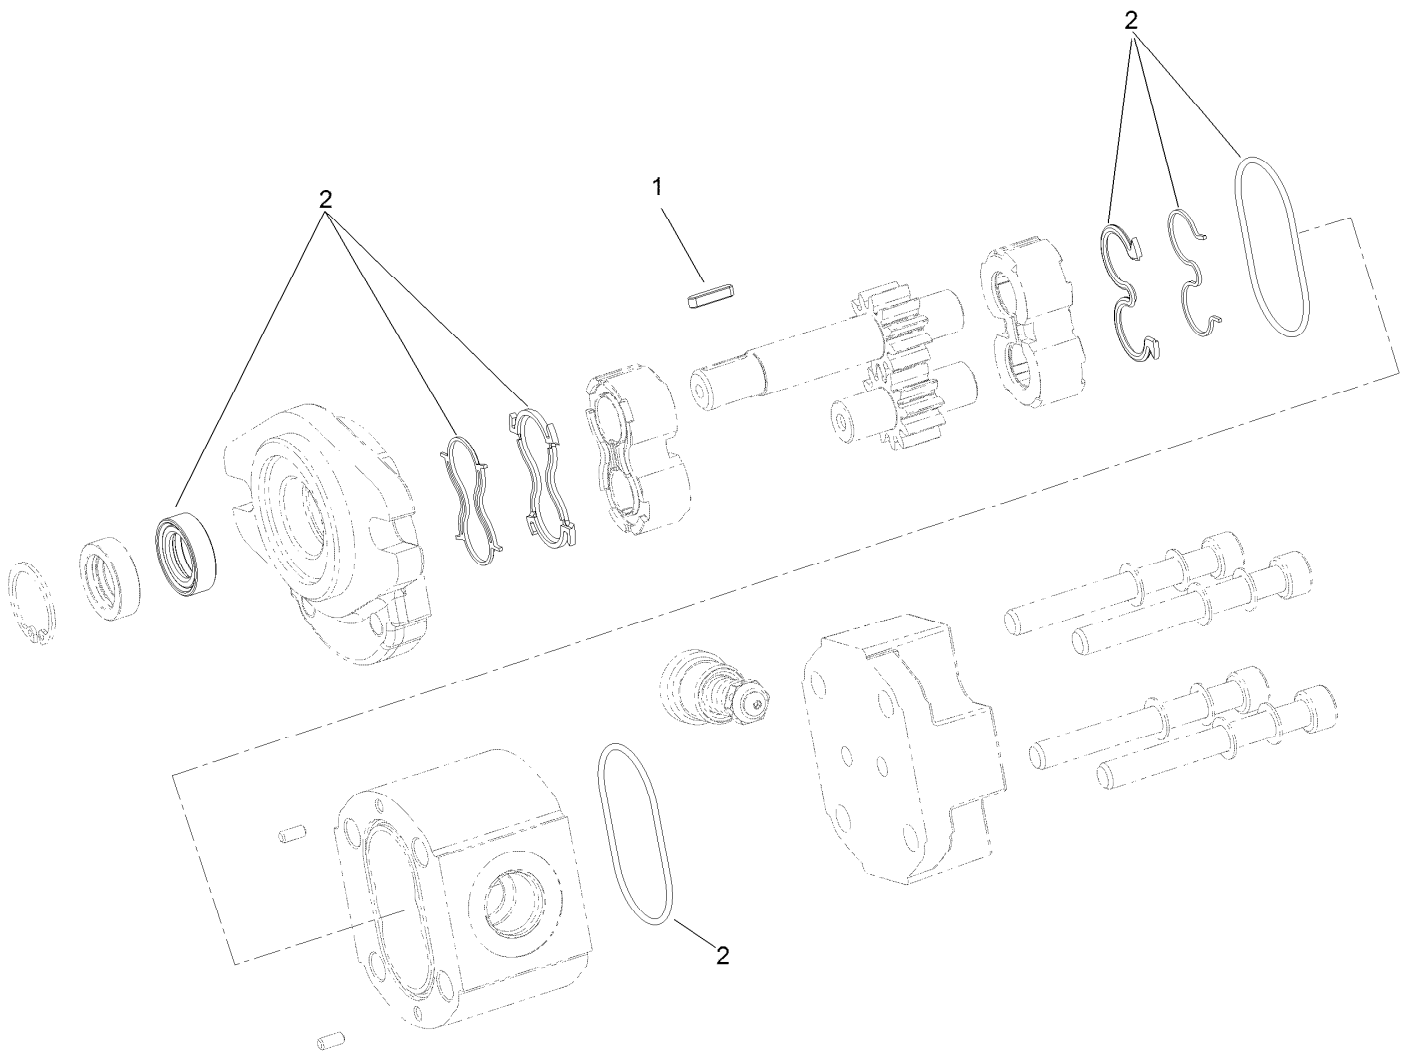

Hydraulic Pump Assembly No. 121-6545


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-8147	1	Key, Square
2	125-8148	1	Seal Kit

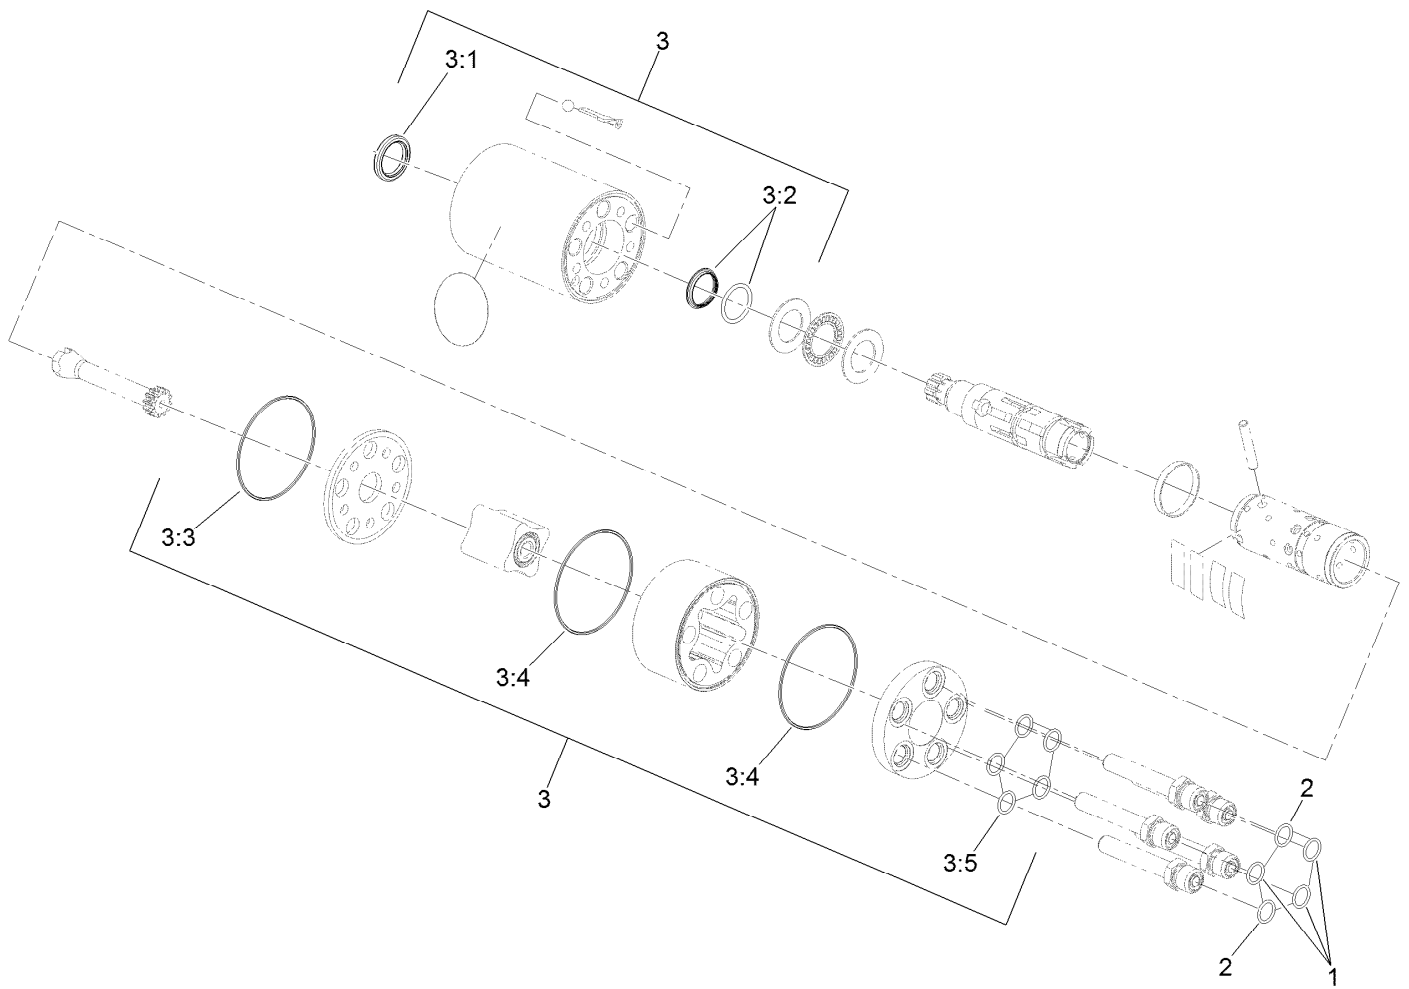 

Steering Valve Assembly No. 138-6100

Ref.	Part Number	Qty.	Description
1	237-21	3	O-Ring
2	237-22	2	O-Ring
3	106-6716	1	Seal Kit
3:1		1	Ring-Seal, Dust ●
3:2		1	Seal-Shaft ●
3:3		1	O-Ring ●
3:4		2	O-Ring ●
3:5		5	O-Ring ●

 
● Not serviced separately

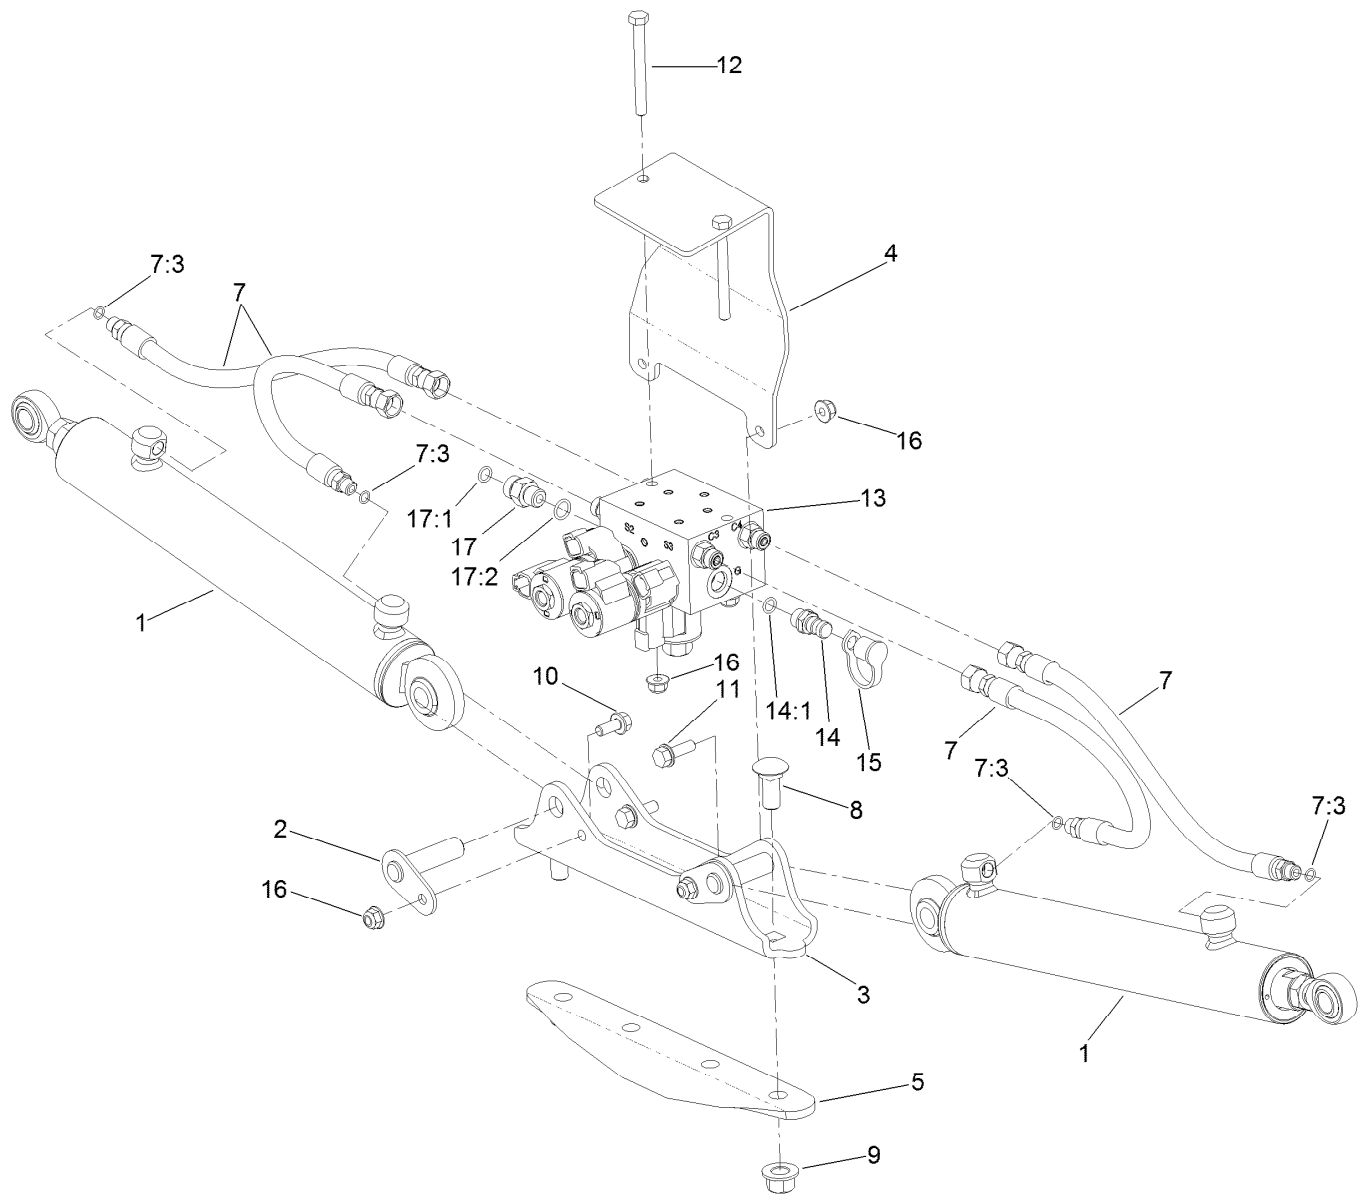

Boom Lift Hydraulic Assembly

Ref.	Part Number	Qty.	Description
1	117-0701	2	Hydraulic Cylinder ASM
2	112-7884	2	Pin-Pivot
3	119-4856-03	1	Plate-Mount, Cylinders
4	130-8201-03	1	Mount-Valve
5	131-0297-03	1	Plate-Stiffener, Boom
7	119-4859	4	Hose ASM
7:3	237-78	1	O-Ring
8	110-5067	2	Screw-CARR
9	99-5107	2	Nut-HF Nylock
10	110-5053	2	Screw-HHF

Ref.	Part Number	Qty.	Description
11	3234-29	2	Screw-HHF
12	322-14	2	Screw-HH
13	136-2400	1	On-Off Boom Lift Valve ASM
14	59-7410	1	Fitting-Diagnostic
14:1	237-42	1	O-Ring
15	354-79	1	Cap-Dust
16	104-8300	6	Nut-HF, NI
17	340-2	2	Fitting-Straight
17:1	237-22	1	O-Ring
17:2	237-42	1	O-Ring

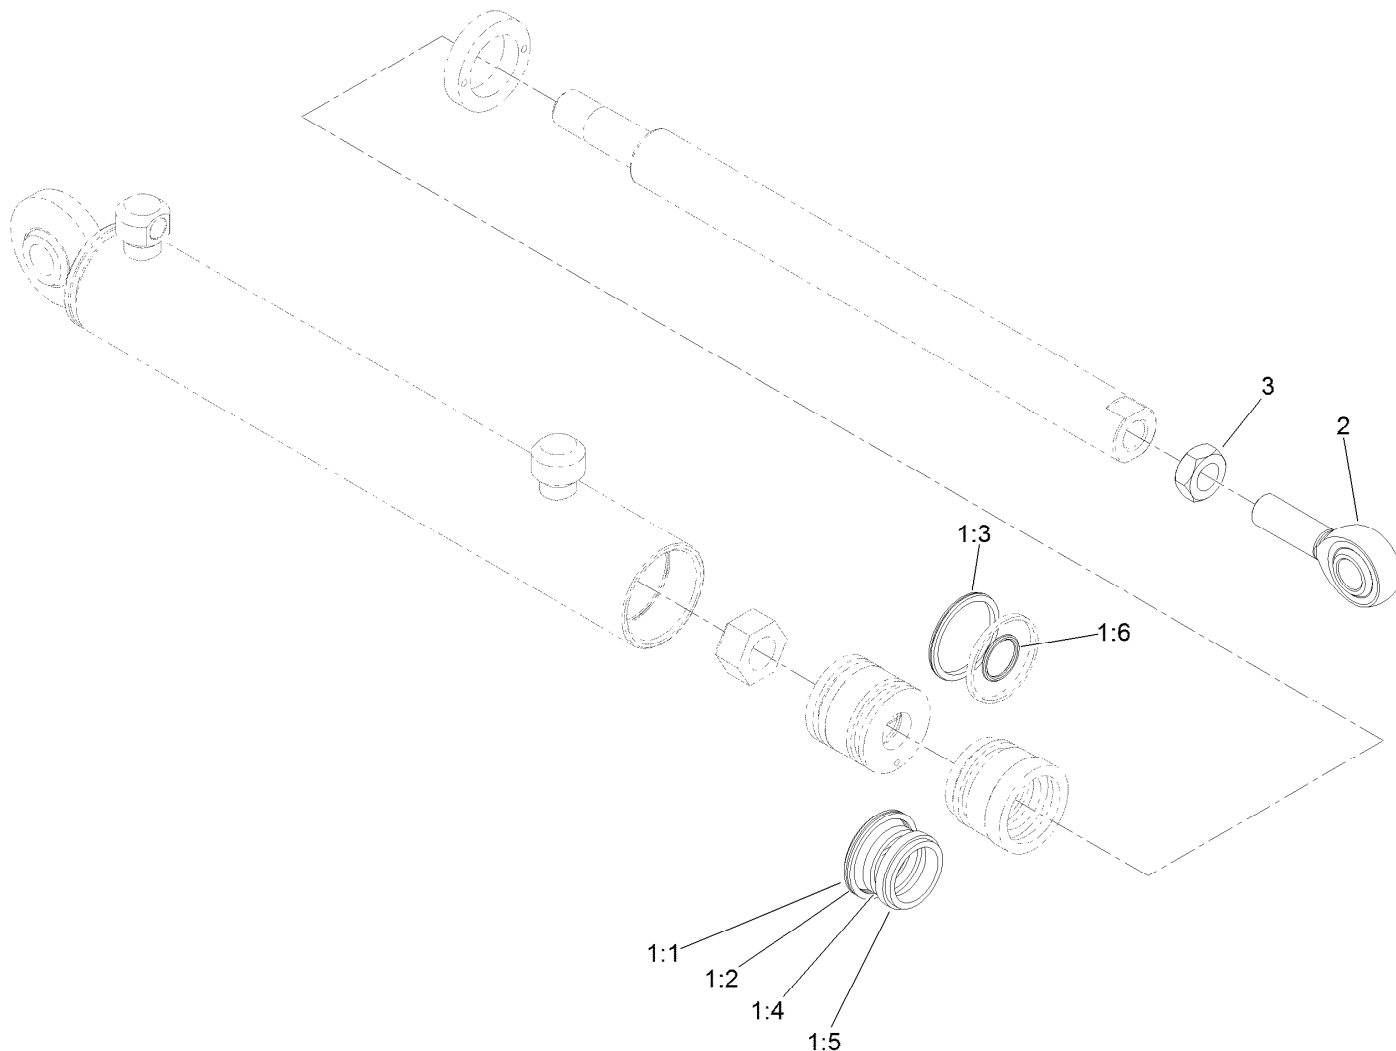 


Hydraulic Cylinder Assembly No. 117-0701

Ref.	Part Number	Qty.	Description
1	119-8026	1	Seal Kit ●
1:1		1	O-Ring ■
1:2		1	Ring-Backup ■
1:3		1	Bp Seal ■
1:4		1	Bs Seal ■
1:5		1	Dust Seal ■
1:6		1	O-Ring ■
2	119-8027	1	Rod End
3	3220-6	1	Nut-Jam

● Not illustrated

■ Not serviced separately

 On-Off Boom Lift Valve Assembly No. 136-2400

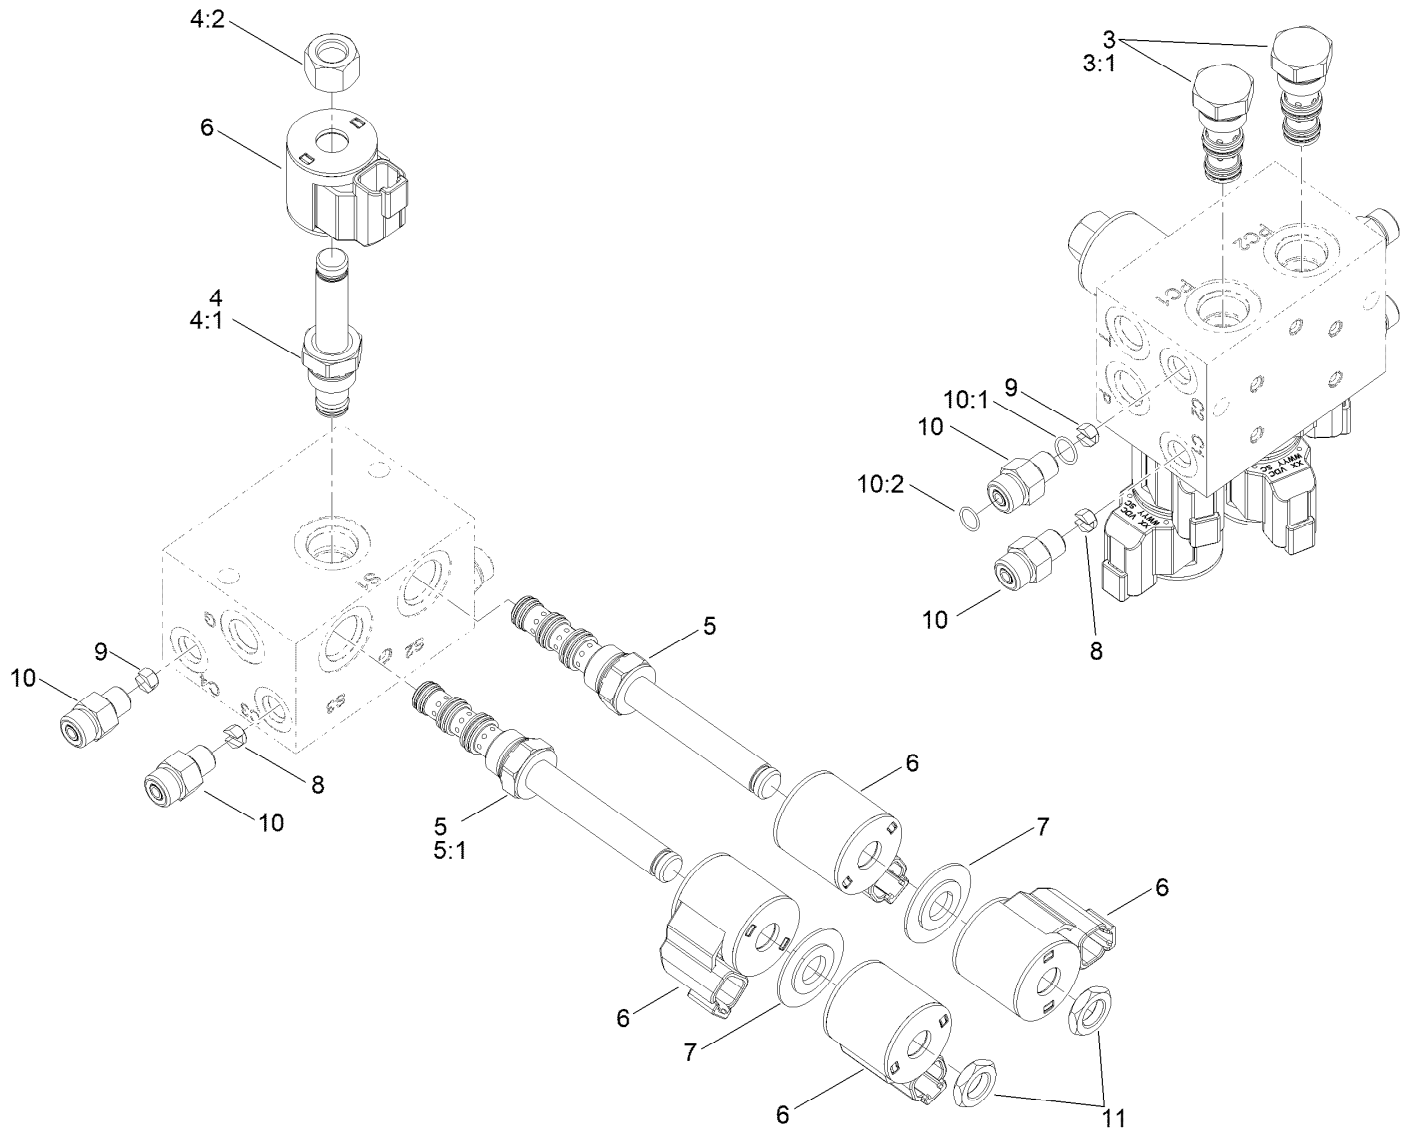


On-Off Boom Lift Valve Assembly No. 136-2400 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	136-2430	2	Valve-Check, Po
3:1	120-0886	1	Seal Kit
4	107-7517	1	Valve-Solenoid
4:1	105-9156	1	Seal Kit
4:2	107-7812	1	Nut-Solenoid
5	120-2587	2	Valve-Solenoid
5:1	112-6520	1	Seal Kit ●
6	119-8036	5	Coil

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
7	120-2586	2	Spacer-Coil
8	110-8903	2	Orifice-Control, Flow (0.055)
9	125-8849	2	Orifice-Flow Control
10	340-92	4	Fitting-Straight
10:1	237-78	1	O-Ring
10:2	237-21	1	O-Ring
11	110-2634	2	Nut-Coil


● Not illustrated

 Engine Mounting Assembly

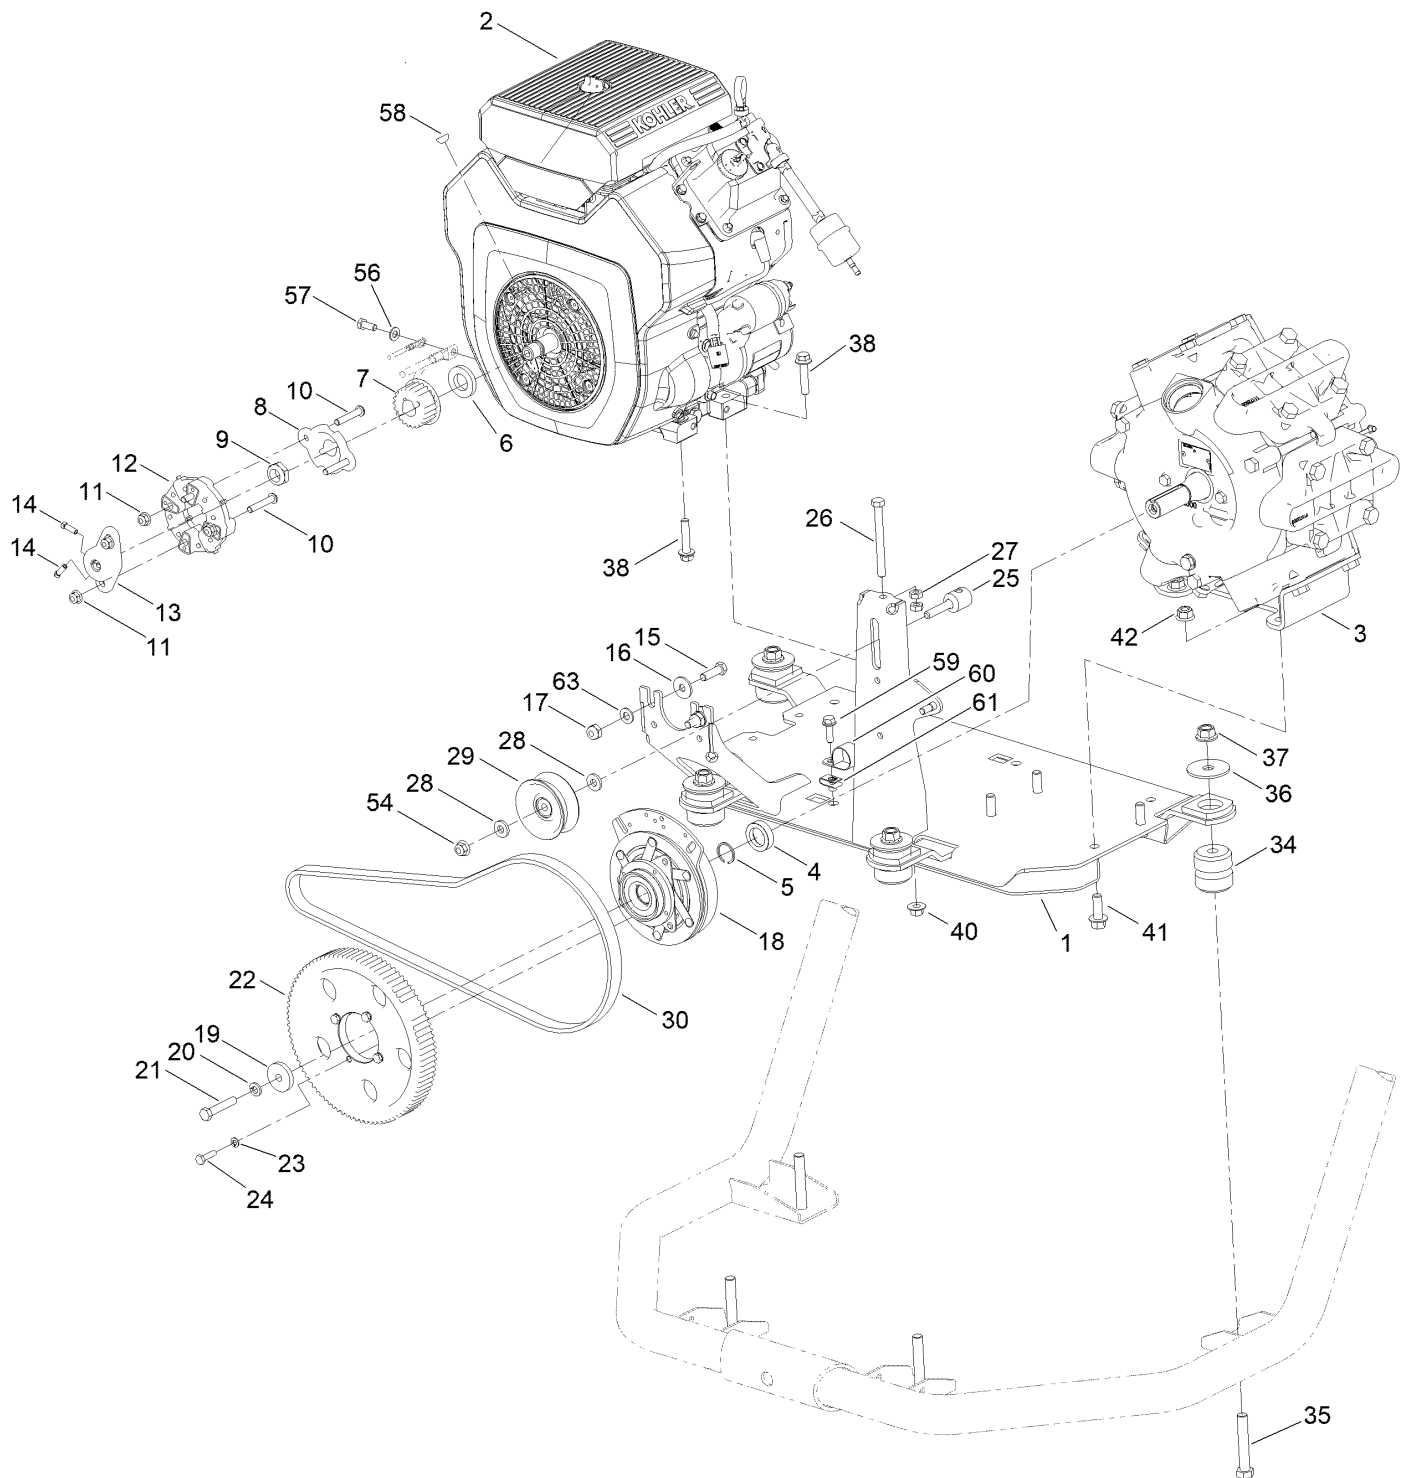

Engine Mounting Assembly (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-6511-03	1	Mount-Engine	24	321-6	4	Screw-HH
2	161-4100	1	Engine-Kohler, Ech749	25	125-0605	1	Shaft-Idler
3	145-3381	1	Pump ASM	26	107-4026	1	Screw-HH
4	108-3301	1	Retainer-Spacer	27	3217-7	2	Nut-Hex
5	108-3302	1	Ring-Snap	28	43-0940	2	Spacer
6	104-1105	1	Spacer-Support, Deck	29	1-633167	1	Sheave-Idler
7	125-8017	1	Sprocket-22 Tooth	30	125-0765	1	Belt-Synchronous
8	125-4092	1	Adaptor-Sprocket, Flanged	34	106-7865	4	Mount-Engine
9	3296-15	1	Nut-Lock, NI	35	325-12	4	Screw-HH
10	125-7977	4	Screw-HSBH	36	41985	4	Washer-Special
11	104-8300	4	Nut-HF, NI	37	99-5107	4	Nut-HF Nylock
12	119-0652	1	Coupler-Rubber	38	3234-19	4	Screw-HHF
13	115-2169	1	Hub-Pump	40	32128-43	4	Nut-Flange
14	3241-6	2	Screw-SQH	41	3234-15	4	Screw-HHF
15	323-7	2	Screw-HH	42	114-8417	4	Nut-HF, NI
16	52-2861	2	Washer	54	104-8301	1	Nut-HF, NI
17	3296-44	2	Nut-Lock, NI	56	3256-23	1	Washer-Plain
18	120-7625	1	Clutch-Electric	57	33114-020	1	Screw-HH
19	125-0604	1	Spacer-Clutch	58	3257-5	1	Key-Woodruff
20	3253-5	1	Washer-Lock	59	3234-17	1	Screw-HHF
21	3211-46	1	Screw-HH	60	2412-126	1	R-Clamp
22	125-7982	1	Sprocket-90 Tooth	61	115-7721	1	Nut-Clip, U
23	3253-3	4	Washer-Lock	63	3256-24	2	Washer-Plain

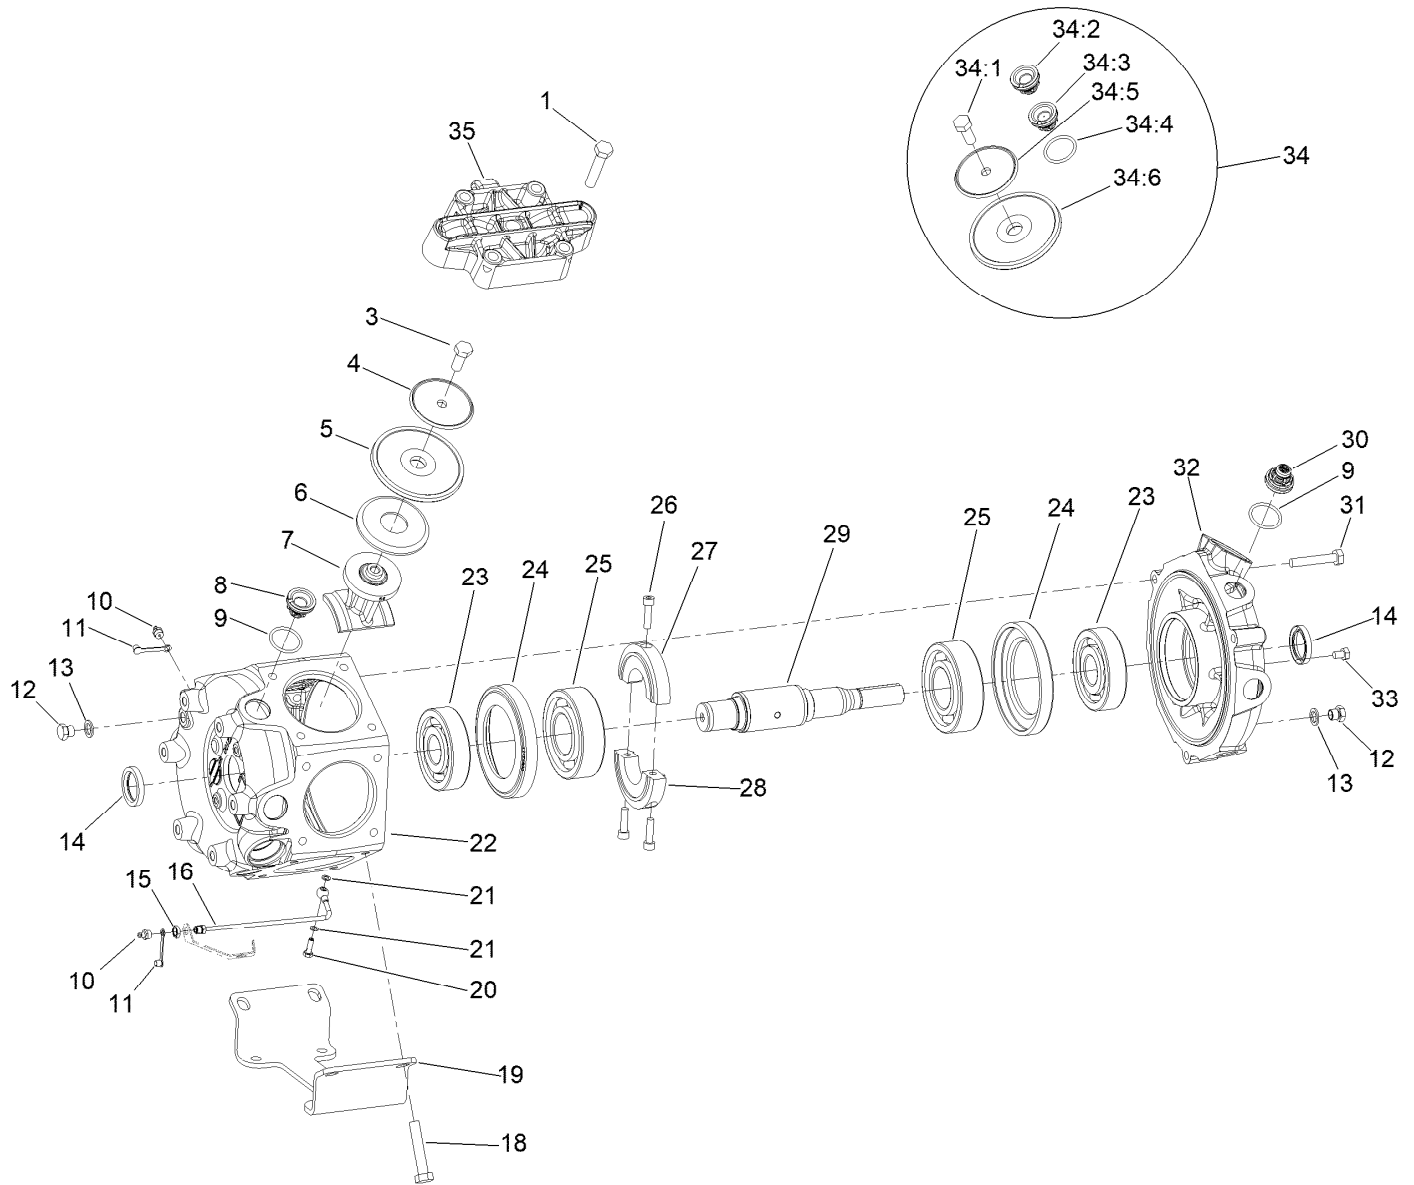 

Pump Assembly No. 145-3381

Ref.	Part Number	Qty.	Description
1	120-0773	20	Bolt-Hex
3	120-0777	6	Bolt-Hex
4	120-0778	6	Disc-Diaphragm
5	120-0779	6	Diaphragm
6	120-0780	6	Disc-Backing, Diaphragm
7	125-8141	6	Rod-Connectiing
8	99-0861	10	Valve-Pump
9	100-6651	12	O-Ring
10	133-2879	2	Nipple-Grease
11	133-2880	2	Cap-Grease Nipple, Yellow
12	120-0785	2	Plug
13	120-0786	2	Seal
14	120-0783	2	Seal-Oil
15	133-2878	1	Nut
16	133-2877	1	Tube-Banjo, Long
18	120-0774	4	Bolt-Hex
19	120-0787	1	Foot-Pump
20	133-2830	1	Bolt-Banjo
21	136-2251	2	Gasket
22	133-2821	1	Housing-Pump, Main

Ref.	Part Number	Qty.	Description
23	120-0788	2	Bearing-Ball
24	133-2820	2	Spacer-Metal
25	120-0791	2	Bearing-Ball
26	125-8146	3	Bolt-Allen
27	133-2828	1	Counter Weight
28	133-2829	1	Counter Weight
29	133-2826	1	Shaft - Crank
30	120-0793	2	Valve W/Hole
31	120-0794	3	Bolt-Hex
32	133-2822	1	Housing-Pump, Front
33	120-0784	4	Bolt-Hex
34	120-0796	1	Pump Kit
34:1	120-0777	6	Bolt-Hex
34:2	99-0861	10	Valve-Pump
34:3	120-0793	2	Valve W/Hole
34:4	100-6651	12	O-Ring
34:5	120-0778	6	Disc-Diaphragm
34:6	120-0779	6	Diaphragm
35	145-3399	1	Pump Head Kit

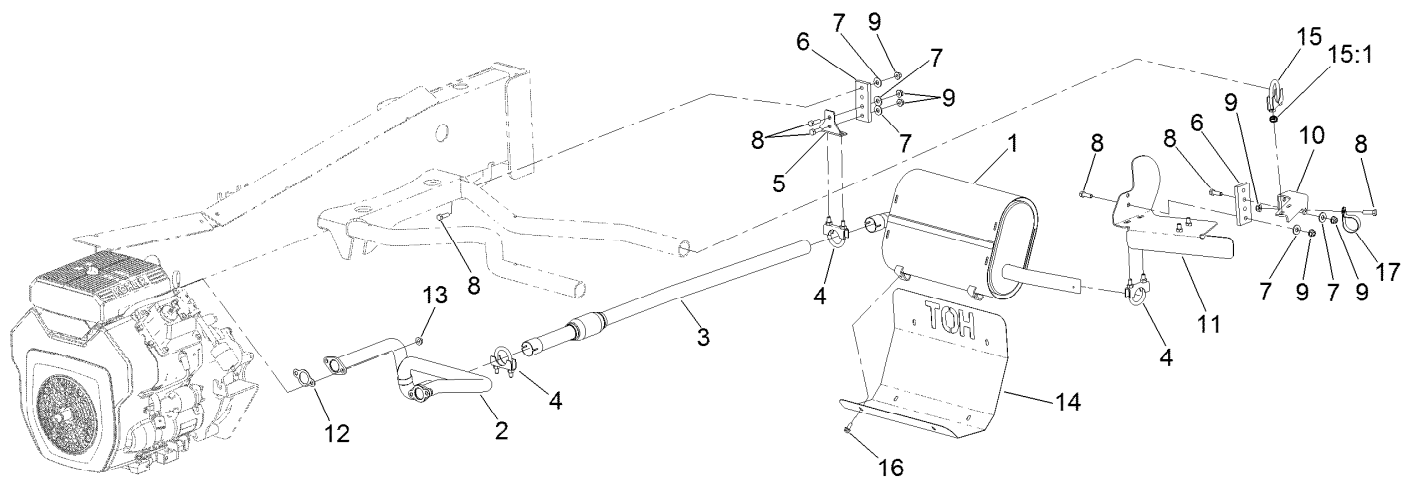 


Exhaust Assembly

Ref.	Part Number	Qty.	Description
1	127-9736	1	Muffler-Venturi
2	163-7081	1	Manifold-Exhaust
3	163-7082	1	Tail-Exhaust
4	2112-11	4	Clamp-Muffler
5	130-7101	1	Bracket-Hanger, Tailpipe
6	117-0744	2	Hanger-Muffler
7	3256-3	7	Washer-Flat
8	322-5	8	Screw-HH
9	104-8300	8	Nut-HF, NI

Ref.	Part Number	Qty.	Description
10	131-3286	1	Mount-Muffler
11	130-7143	1	Shield-Muffler
12	110-6697	2	Gasket-Exhaust
13	92-6780	4	Nut-HF
14	127-9787	1	Shield-Heat, Muffler
15	2112-9	1	Clamp
15:1	32128-20	2	Nut-HF
16	3234-13	6	Screw-HHF
17	2412-74	1	R-Clamp

 
Fuel Tank, Filter and Line Assembly

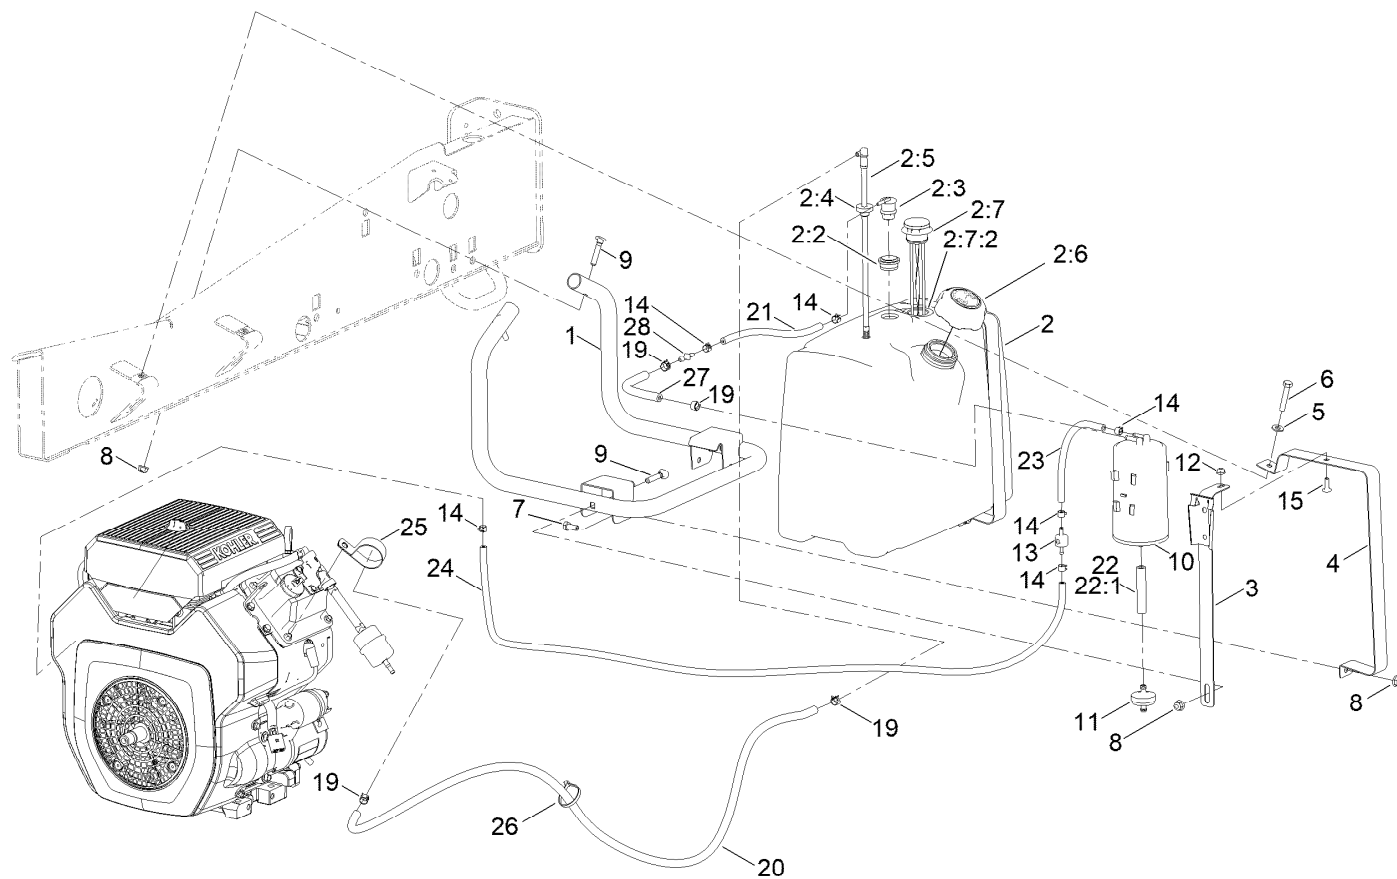

Fuel Tank, Filter and Line Assembly (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	163-2974-03	1	Tube ASM-Fuel Tank [black]	11	115-7854	1	Filter-Fuel, Inline
2	115-9048	1	Fuel Tank ASM	12	104-7201	1	Nut-HF, NI
2:2	114-0284	1	Grommet	13	133-8499	1	Valve-Check, Vacuum
2:3	114-0285	1	Valve-Rollover	14	2412-80	8	Clamp-Hose
2:4	46-6560	1	Bushing	15	1-807512	1	Bolt-CARR
2:5	115-9044	1	Pipe-Stand	19	115-7871	2	Hose-Fuel
2:6	137-4127	1	Cap-Fuel	20	163-2903	1	Hose-Fuel
2:7	119-0509	1	Gauge ASM	21	117-9568	1	Hose-Fuel
2:7:2	119-0508	1	Seal	22	163-2982	1	Hose-Fuel ASM
3	125-8129-03	1	Strap-Cannister, Carbon	22:1	127-0578	1	Fitting-STR
4	125-0853	2	Strap-Fuel Tank	23	109-0284	1	Hose-Fuel
5	33094-00	2	Washer-Plain	24	109-0273	1	Hose-Fuel
6	322-41	2	Bolt-Hex,TAP	25	116-9189	2	Sleeve-Thermal
7	322-3	2	Screw-HH	26	109-0306	1	Hose-Fuel
8	104-8300	5	Nut-HF, NI	27	3290-378	1	Tie-Cable
9	17-9420	3	Screw-Handle	28	121-2573	1	Fitting-Straight
10	127-8685	1	Canister-Carbon				

 Driveshaft Connection Assembly

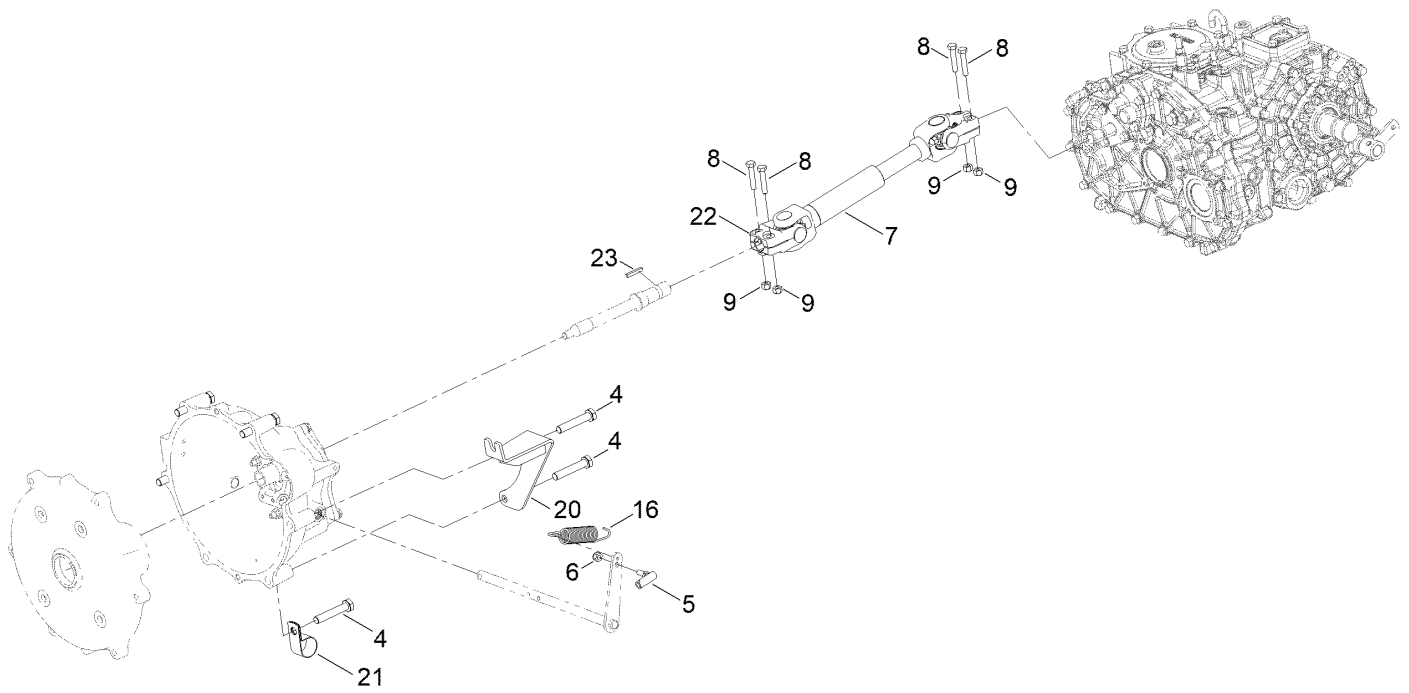


Driveshaft Connection Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	107-7983	6	Screw-HH	16	68-9950	1	Spring-Traction
5	2411-33	1	Balljoint-RH (W/Grommet)	20	163-2958-0P	1	Clutch-Cable Mount, ASM [primed]
6	3296-4	1	Nut-Lock	21	100-1424	1	Clamp-R
7	119-6040	1	Driveshaft ASM	22	3245-32	1	Screw-HSH
8	322-8	4	Screw-HH	23	92-0049	1	Key-Square
9	3296-29	4	Nut-Lock, NI				

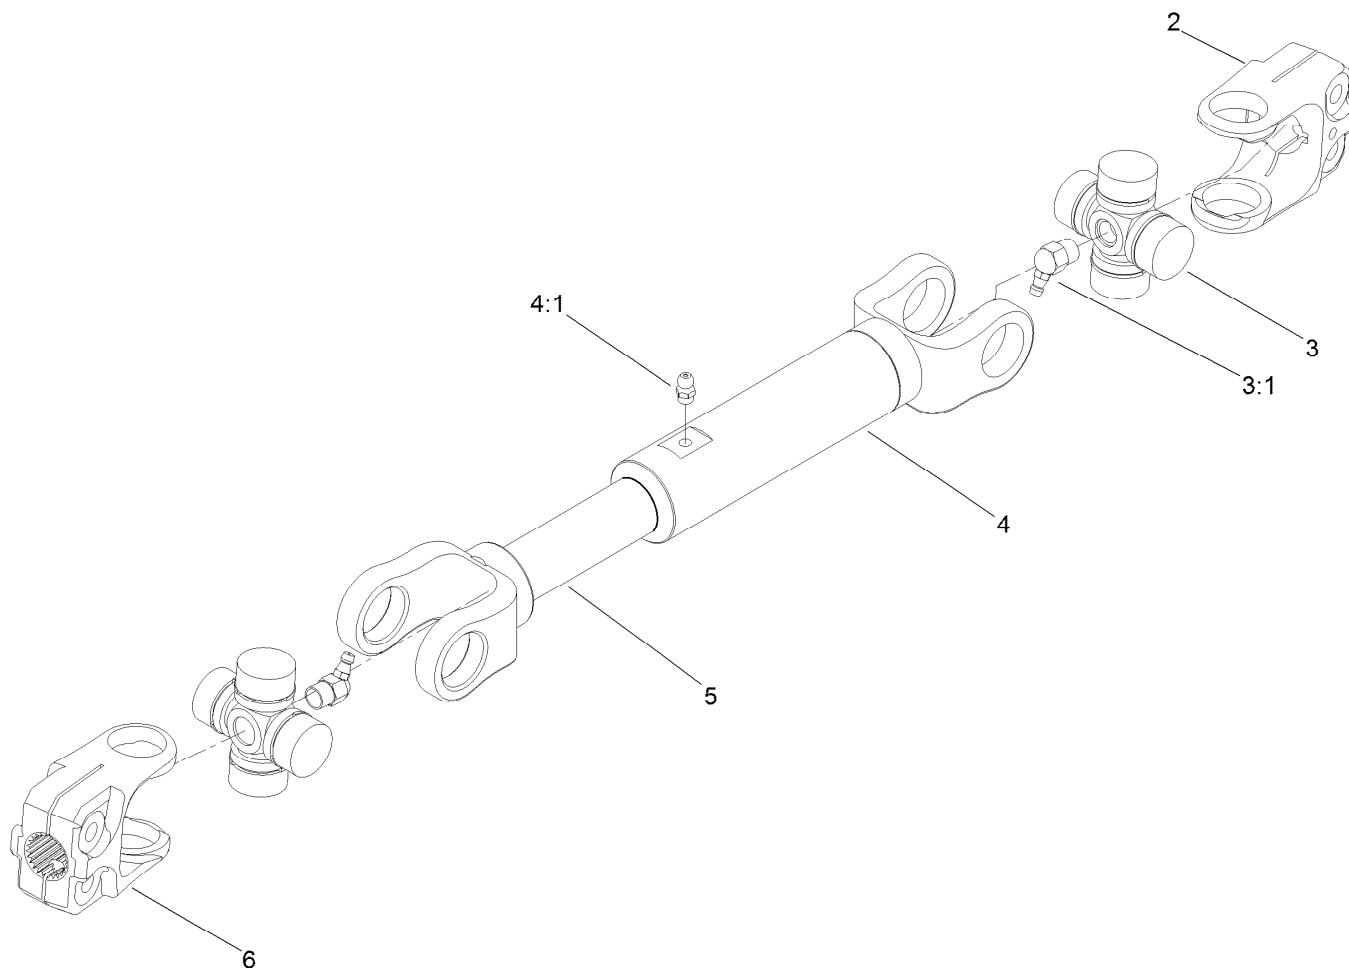 

Driveshaft Assembly No. 119-6040

Ref.	Part Number	Qty.	Description
2	100-8633	1	Yoke-Keyed
3	54-9180	2	U-Joint Kit
3:1	62-3820	1	Fitting-Grease
4	110-4706	1	Tube-Yoke, Slip
4:1	302-58	1	Fitting-Straight
5	110-4705	1	Shaft-Yoke, Slip
6	100-8632	1	Yoke-Splined

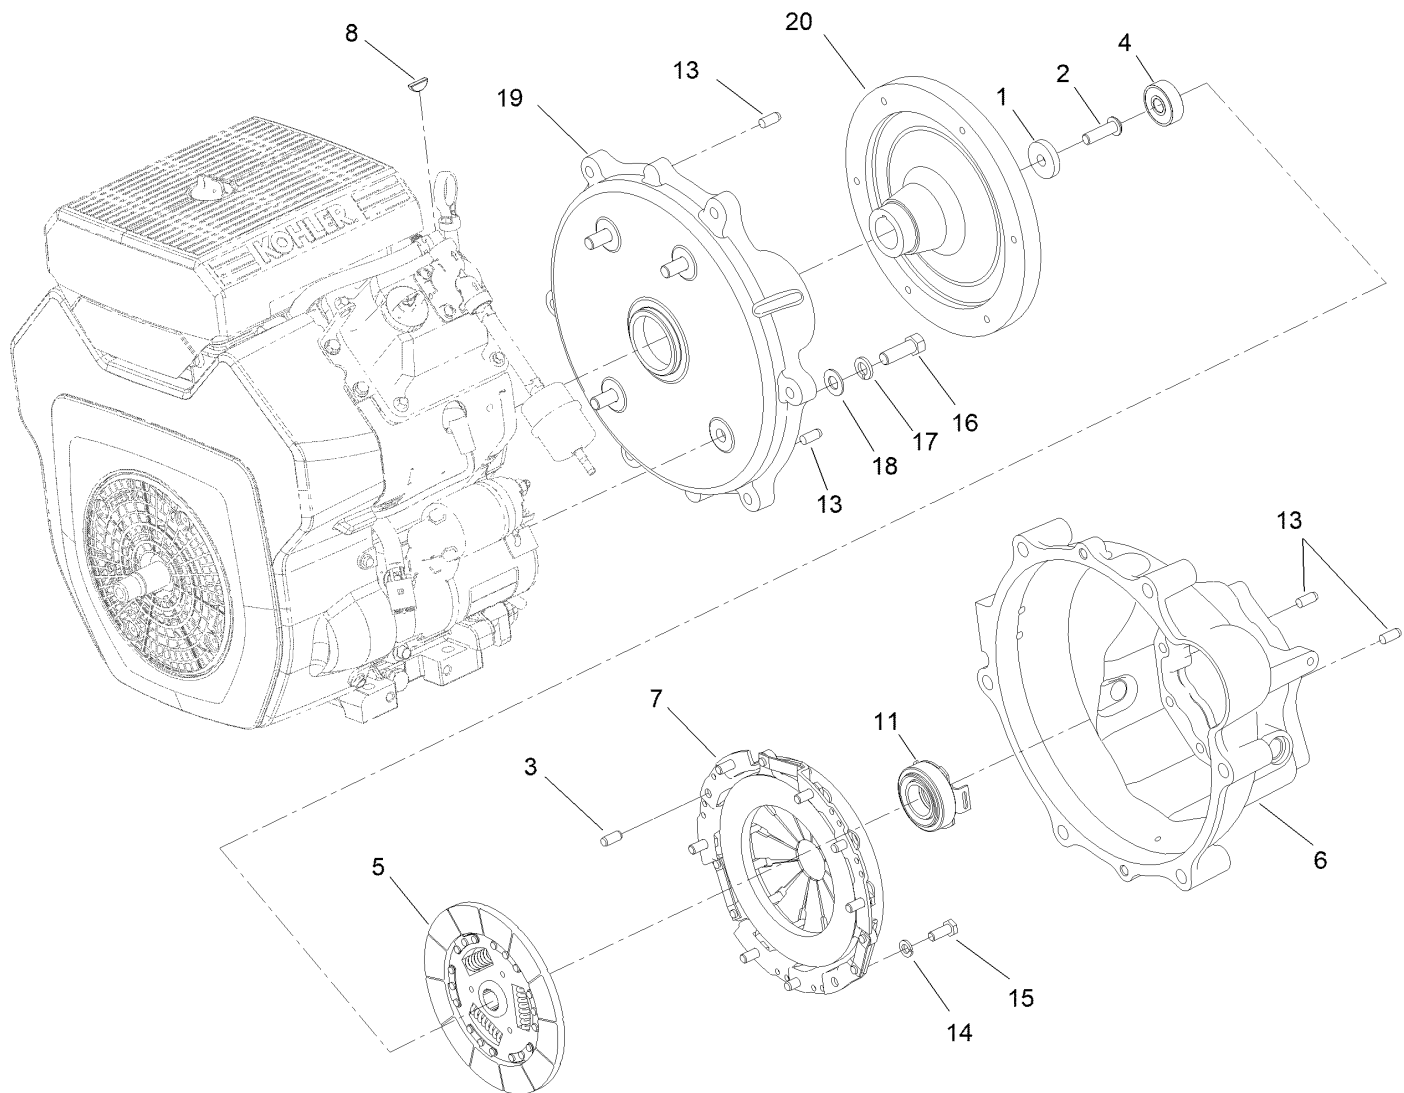 


Clutch and Bell Housing Assembly

Ref.	Part Number	Qty.	Description
1	87-6080	1	Washer
2	3274-1	1	Screw-HSH
3	42-7160	3	Pin
4	87-6460	1	Bearing-Ball (W/Seal)
5	98-2959	1	Disc-Clutch
6		1	Bell Housing ASM ●
7	98-2958	1	Cover-Clutch
8	3257-5	1	Key-Woodruff
11	110-2538	1	Bearing-Release, Clutch

Ref.	Part Number	Qty.	Description
13	87-1910	2	Pin-Dowel
14	3253-4	6	Washer-Lock
15	33114-020	6	Screw-HH
16	324-5	4	Screw-HH
17	3253-6	4	Washer-Lock
18	3256-25	4	Washer-Flat
19	107-7991	1	Adapter-Clutch
20	87-6480	1	Flywheel

 
● Not serviced separately

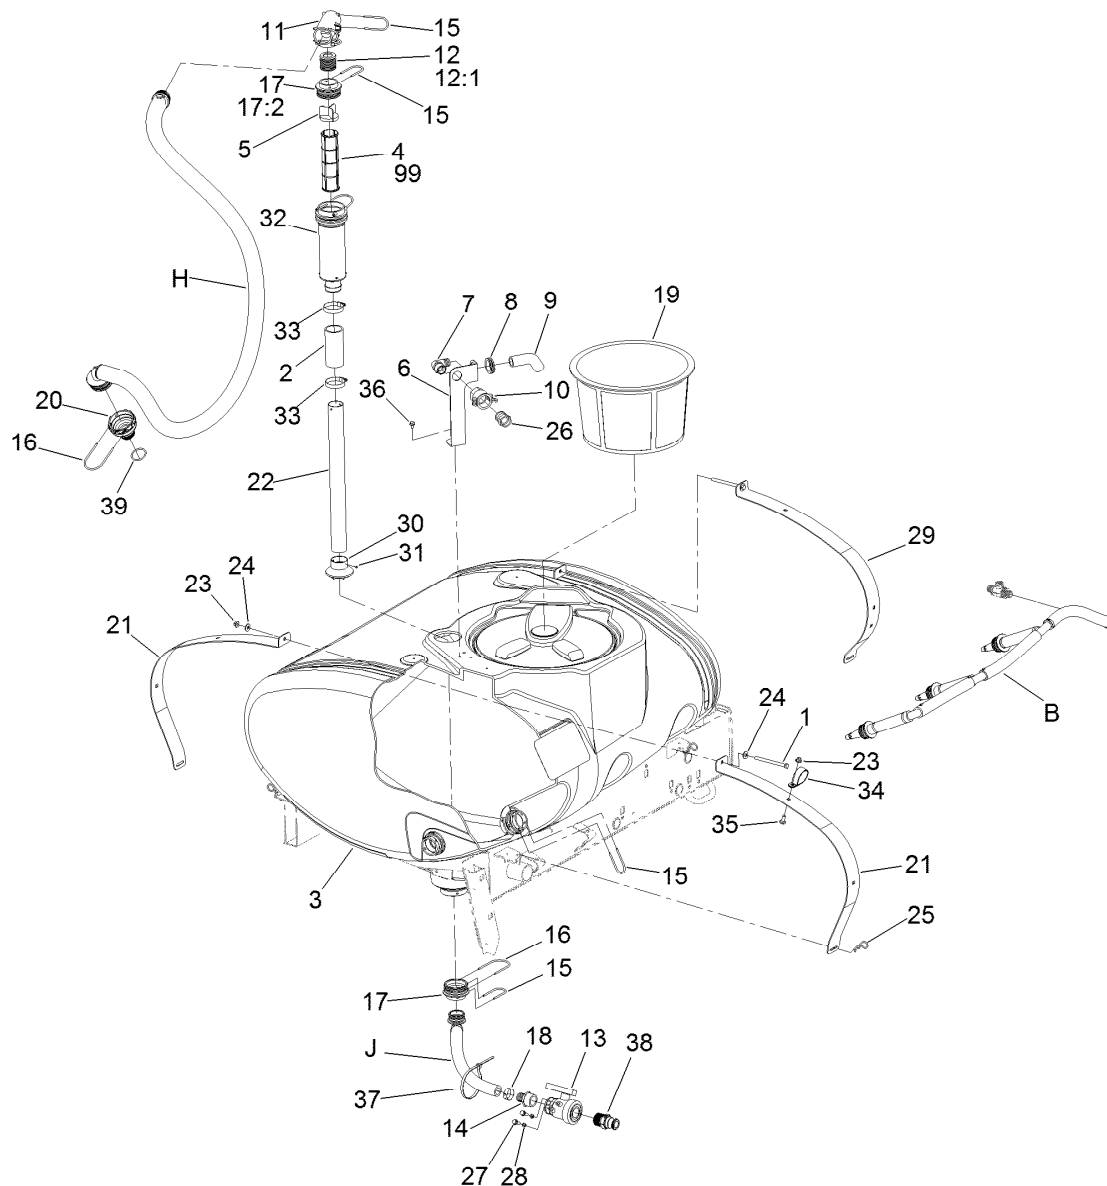

Spray Tank Assembly

Ref.	Part Number	Qty.	Description
1	323-59	2	Bolt-Cap
2	100-8649	1	Hose-Suction
3	121-6491	1	Tank ASM
4	100-8642	1	Screen-Suction
5	100-8641	1	Vane-Screen
6	110-5082-03	1	Bracket-Anti Siphon
7	41140	1	Elbow
8	110-5090	1	Grommet
9	110-5088	1	Hose-Fill
10	100-6779	1	Coupling-Female
11	100-6704	1	Tee
12	106-4947	1	Connector
12:1	100-8637	2	O-Ring
13	108-0069	1	Valve-Ball
14	110-5224	1	Fitting-Barbed, Straight
15	100-8635	8	Fork
16	117-7996	2	Fork
17	117-7928	2	Adapter ASM
17:2	100-6989	1	O-Ring
18	2412-34	1	Clamp-Hose
19	119-9419	1	Basket-Filter


Ref.	Part Number	Qty.	Description
20	133-2883	1	Fitting
21	121-6477-03	2	Band-Tank
22	125-7997	1	Tube-Suction
23	104-8301	3	Nut-HF, NI
24	3256-4	4	Washer-Flat
25	3290-343	4	Pin-Hair
26	41316	1	Adapter-Quick
27	3234-29	2	Screw-HHF
28	3296-47	2	Nut-Lock, NI
29	125-0987-03	2	Band-Tank, Rear
30	100-6714	1	Foot-Tube, Suction
31	108-3270	1	Screw-TAP
32	130-7096	1	Filter ASM
33	2412-130	2	Clamp-Hose
34	114-9566	1	Clamp-R
35	3231-2	1	Bolt-CARR
36	3234-30	1	Screw-HHF
37	1-809066	1	Cable Tie-Plastic
38	132-7787	1	Coupler-Quick
39	133-2884	1	O-Ring
99	133-0385	2	Screen-Teejet, 50 Mesh

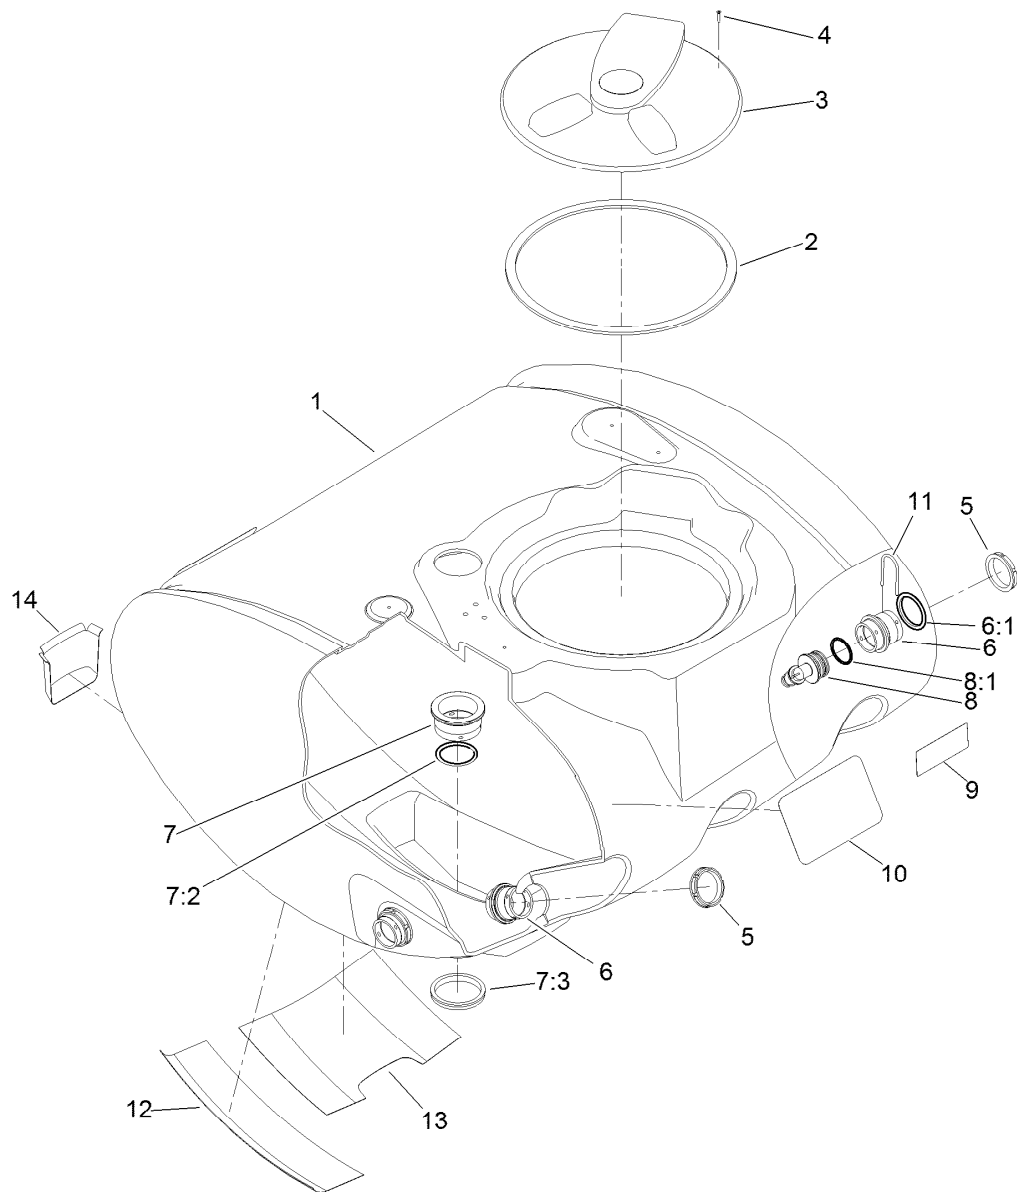 

Tank Assembly No. 121-6491


Ref.	Part Number	Qty.	Description
1	121-6490	1	Tank-175 Gallon
2	119-9378	1	Gasket-Lid, Tank
3	138-6283	1	Lid ASM - Sprayer Tank
4	107-8635	8	Screw-PFH
5	100-7051	4	Nut-Bulkhead
6	108-3358	5	Fitting-Bulkhead
6:1	107-2864	1	Gasket-Bulkhead
7	117-7851	1	Bulkhead ASM
7:2	100-8646	1	Gasket-Bulkhead

Ref.	Part Number	Qty.	Description
7:3	100-8647	1	Nut-Bulkhead
8	106-4933	2	Hosebarb ASM
8:1	100-8637	1	O-Ring
9	120-0622	1	Decal-Warning
10	121-6486	2	Decal-Tank
11	100-8635	2	Fork
12	125-7967	1	Heat Tape-Shield, Front
13	125-7968	1	Heat Tape-Shield, Side
14	125-7969	1	Heat Tape-Shield, Sump

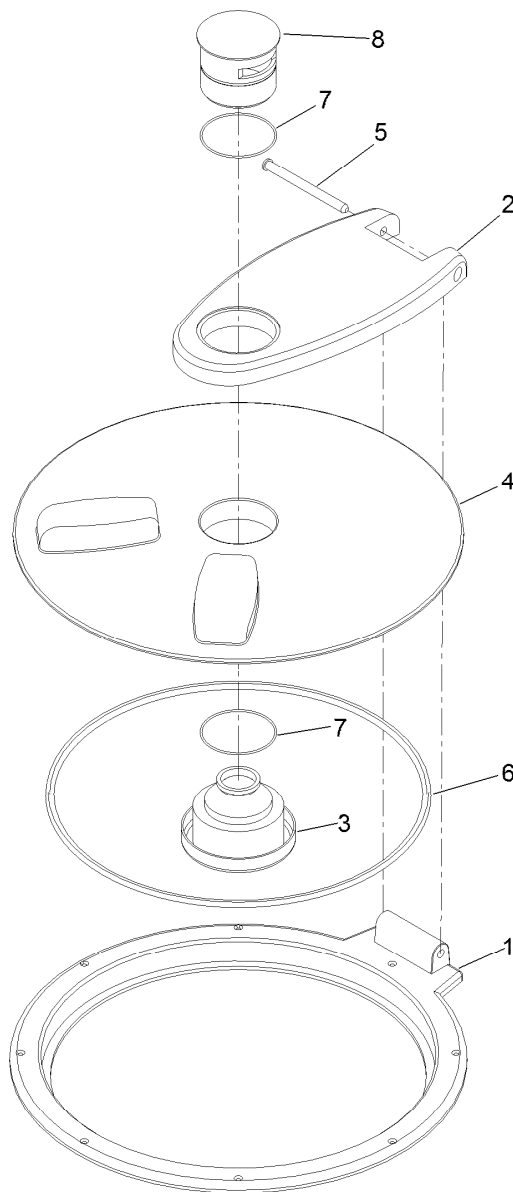 


Spray Tank Lid Assembly No. 138-6283

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-9381	1	Ring-Lid
2	119-9382	1	Arm-Lid
3	119-9383	1	Vent-Lid
4	119-9384	1	Cover-Lid
5	119-9385	1	Pin-Pivot
6	138-6281	1	Seal - Tank Lid
7	119-9386	2	O-Ring
8	119-9387	1	Cap-Lid

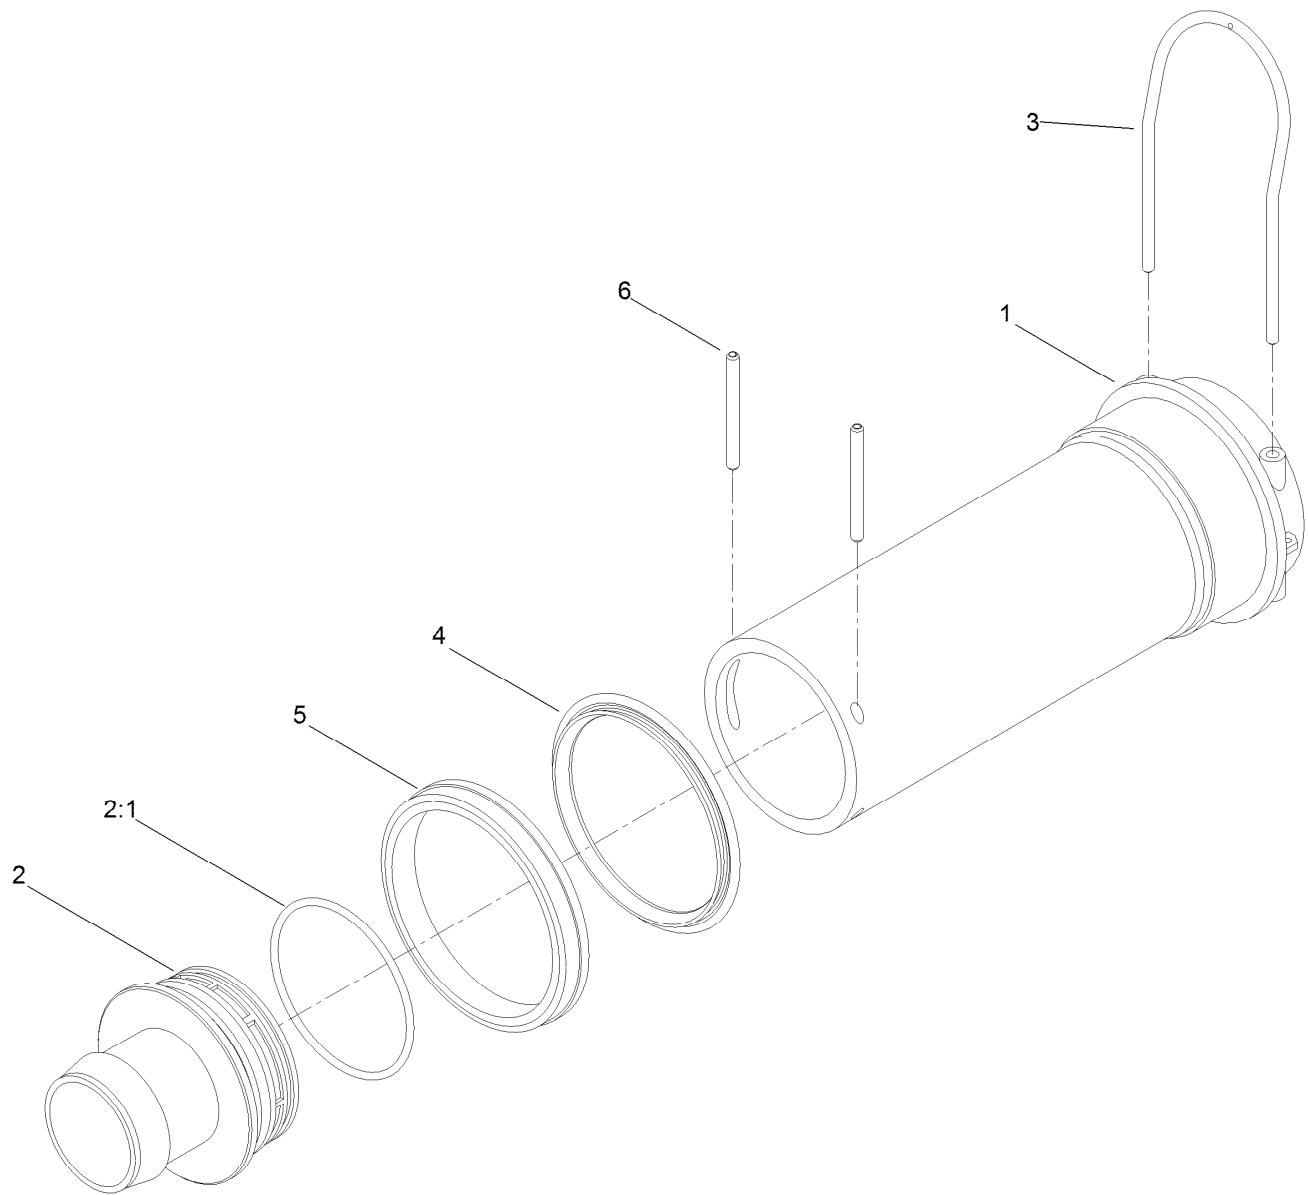 

Filter Assembly No. 130-7096

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	100-8643	1	Housing-Filter
2	106-4942	1	Hosebarb-Straight
2:1	100-6989	1	O-Ring
3	100-8636	1	Fork-Special
4	100-8646	1	Gasket-Bulkhead
5	100-8647	1	Nut-Bulkhead
6	100-8644	2	Pin-Expansion

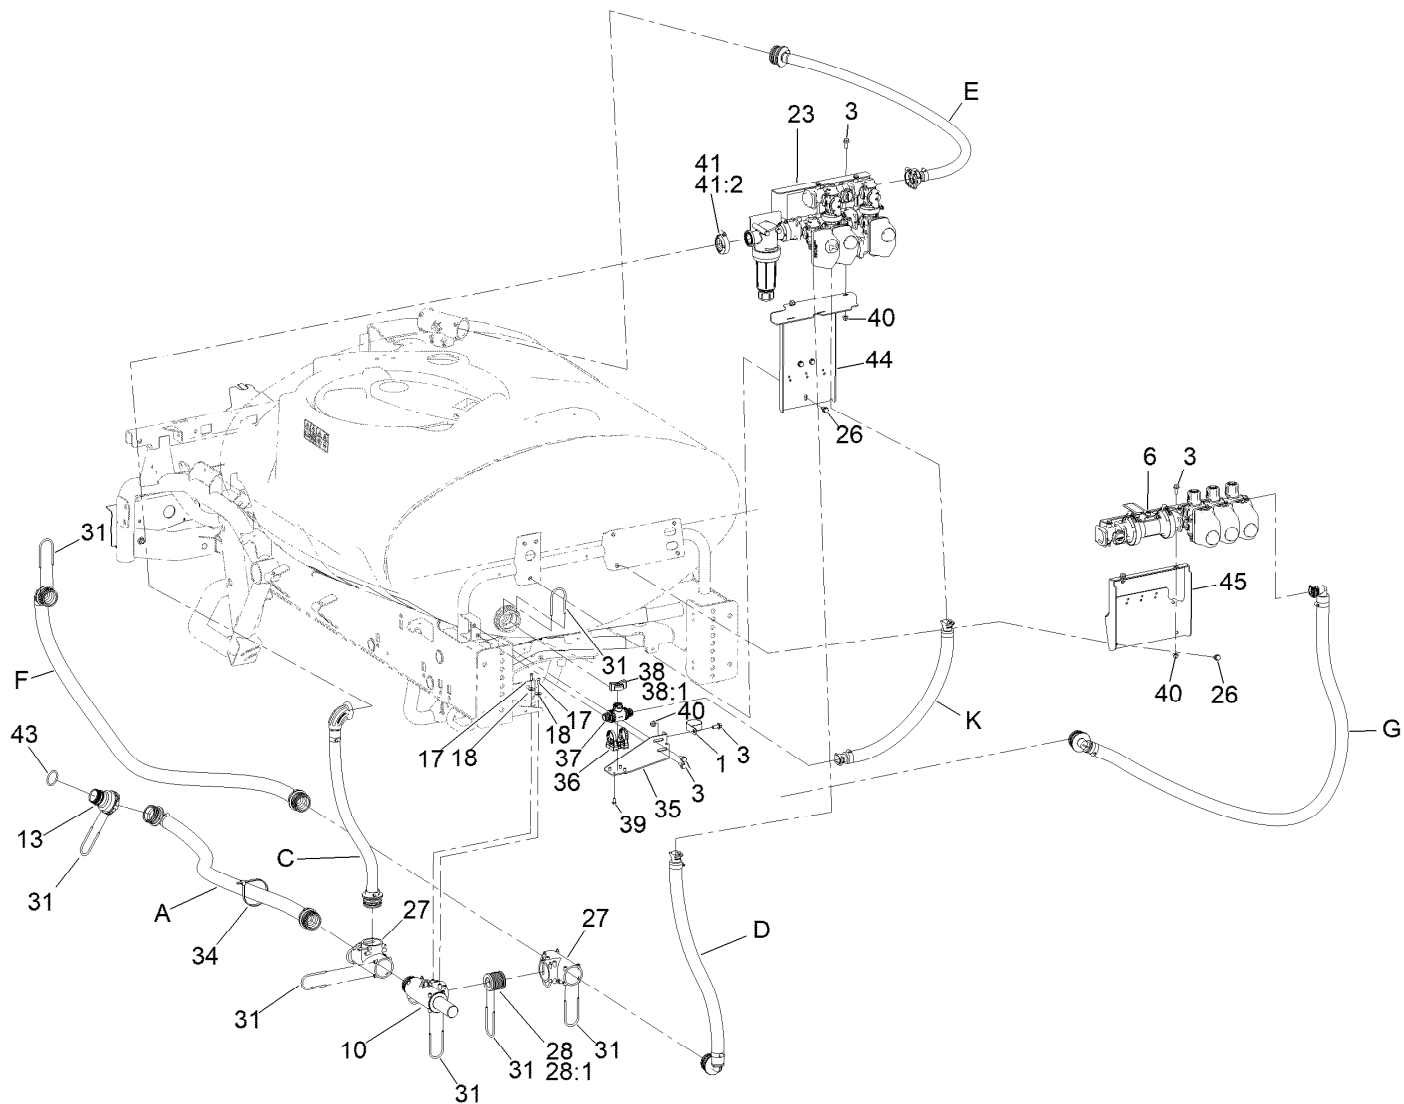 


Spray Tank Valve Assembly

Ref.	Part Number	Qty.	Description
1	2412-147	1	Clamp-R
3	32104-32	7	Screw-HWH
6		1	Manifold ASM, Section ●
10	117-7874	1	Relief Valve ASM
13	133-2881	1	Fitting
17	32144-32	2	Screw-PPH
18	3256-61	2	Washer-Flat
23		1	Manifold ASM, Agitation ●
26	32104-32	7	Screw-HWH
27	100-6704	2	Tee
28	106-4947	1	Connector
28:1	100-8637	2	O-Ring
31	100-8635	12	Fork
34	3334-945	3	Tie-Cable

Ref.	Part Number	Qty.	Description
35	132-4318-03	1	Mount-Bracket, Agitation
36	132-4302	1	Mount-Valve
37	131-0249	1	On/Off 2-Way Valve Kit
38	131-0264	1	Agitation Throttling Handle Kit
38:1	131-0263	1	Screw-Handle
39	33113-012	4	Screw-HH
40	104-8300	5	Nut-HF, NI
41	127-9829	1	Clamp/Gasket Kit
41:2	127-1145	1	Gasket-Flange
43	133-2882	1	O-Ring
44	147-4658-03	1	Valve-Mount, ASM [black]
45	147-4662-03	1	Agitation-Mount, ASM [black]

 
● Not serviced separately

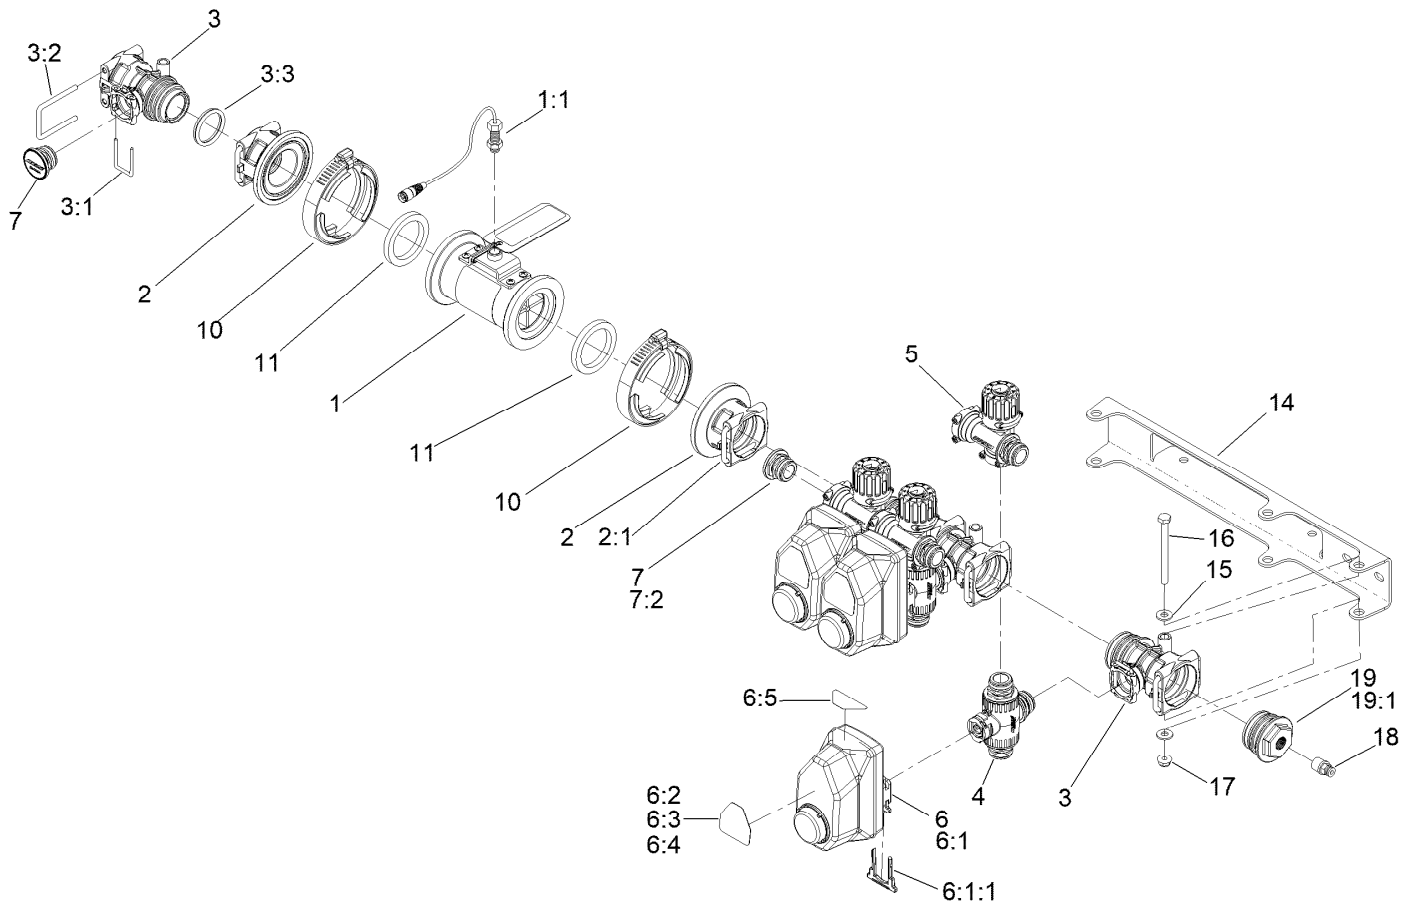

Section Manifold Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	147-4730	1	Flow Meter ASM	6:3	127-6981	1	Decal-Valve, On/Off
1:1	147-4733	1	Sensor - Flow Meter, Fm270Plf	6:4	127-6982	1	Decal-Valve, Master Boom
2	147-3197	2	Kit Qf, Flange-M200 Female	6:5	127-6976	1	Decal-Valve, Bypass Adjust
2:1	147-3186	1	Pin-Fork, Qf Large	7	127-9810	2	Male Cap Fitting Kit
3	147-3187	4	Kit-Qf, Manifold Tee	7:2	127-1187	1	O-Ring, Endcap
3:1	147-3185	1	Pin-Fork, Qf Small	10	104-9089	2	Clamp-Screw, Worm
3:2	147-3186	1	Pin-Fork, Qf Large	11	104-9090	2	Gasket
3:3	147-3188	1	Seal-Manifold, Qf Series	14	147-4659	1	Brkt-Section
4	147-3183	3	Kit-Tx2 - 3Way Manifold	15	3256-22	6	Washer-Flat
5	127-9805	3	Bypass Valve ASM	16	321-23	3	Screw-HH
6	140-7377	3	Kit-Actuator Pi, On/Off	17	104-7201	3	Nut-HF, NI
6:1		1	Actuator - On/Off ●	18	131-3709	1	Coupler
6:1:1	130-7301	1	Hairpin-Actuator	19	161-4187	1	Kit Qf, Plug-Male W/Port
6:2	127-6979	1	Decal-Valve, Agitation	19:1	147-3188	1	Seal-Manifold, Qf Series

 ● Not serviced separately

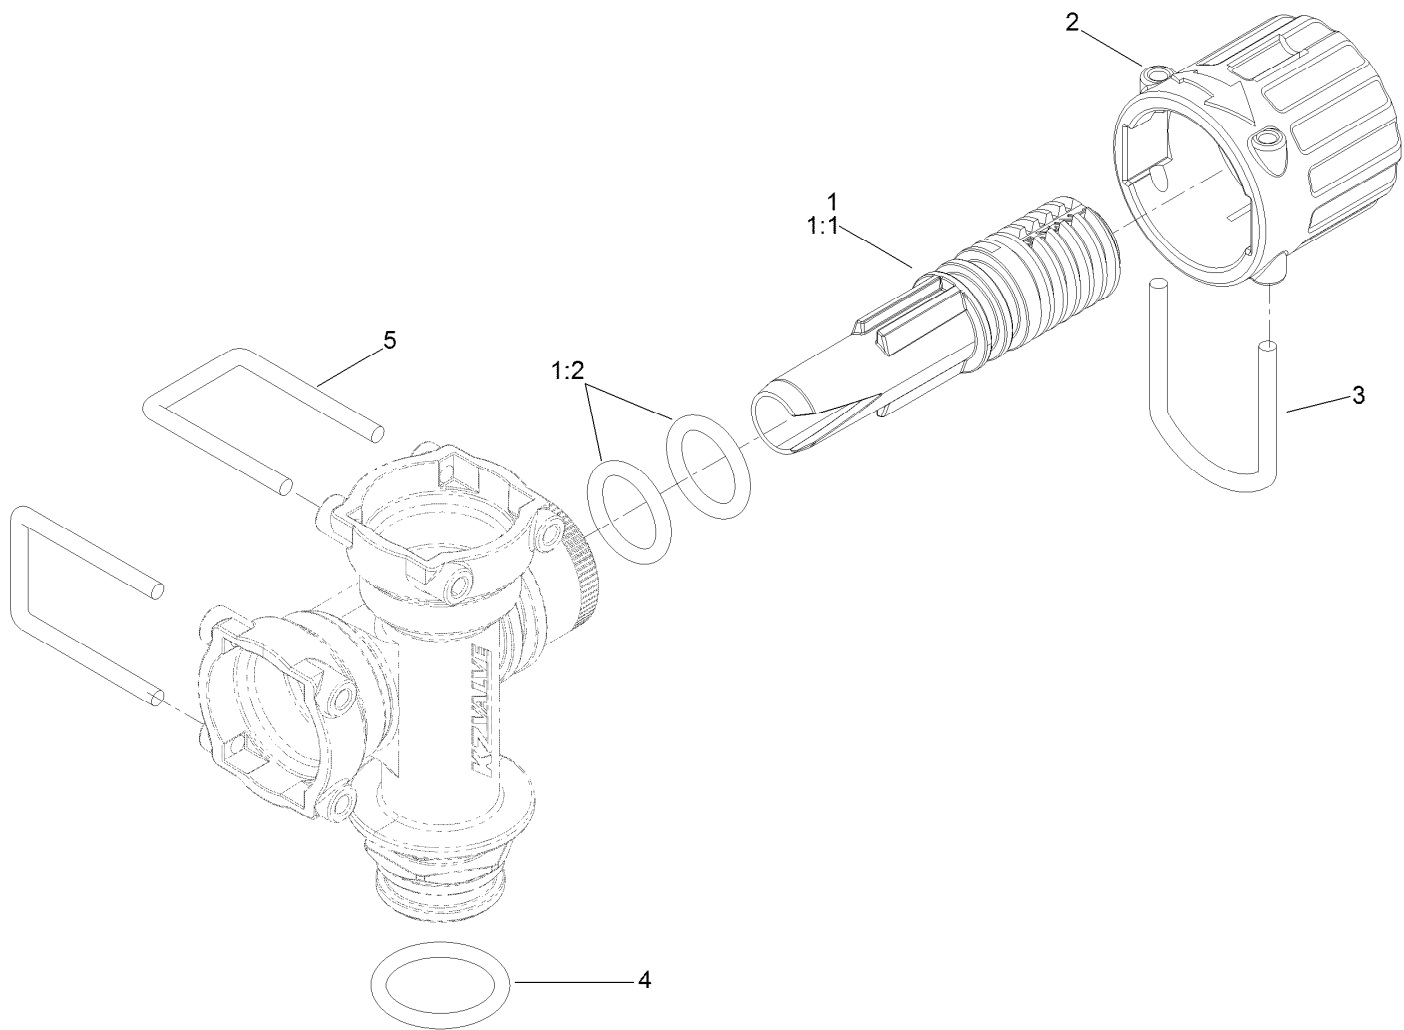


Bypass Valve Assembly No. 127-9805

Ref.	Part Number	Qty.	Description
1	131-0298	1	Bypass Needle Kit
1:1	127-1182	1	Needle-Bypass
1:2	127-1181	2	O-ring-Bypass Needle
2	127-1180	1	Knob-Bypass
3	127-1179	1	Fork-Bypass Knob
4	127-1187	1	O-Ring, Endcap
5	133-0398	2	Pin-Fork

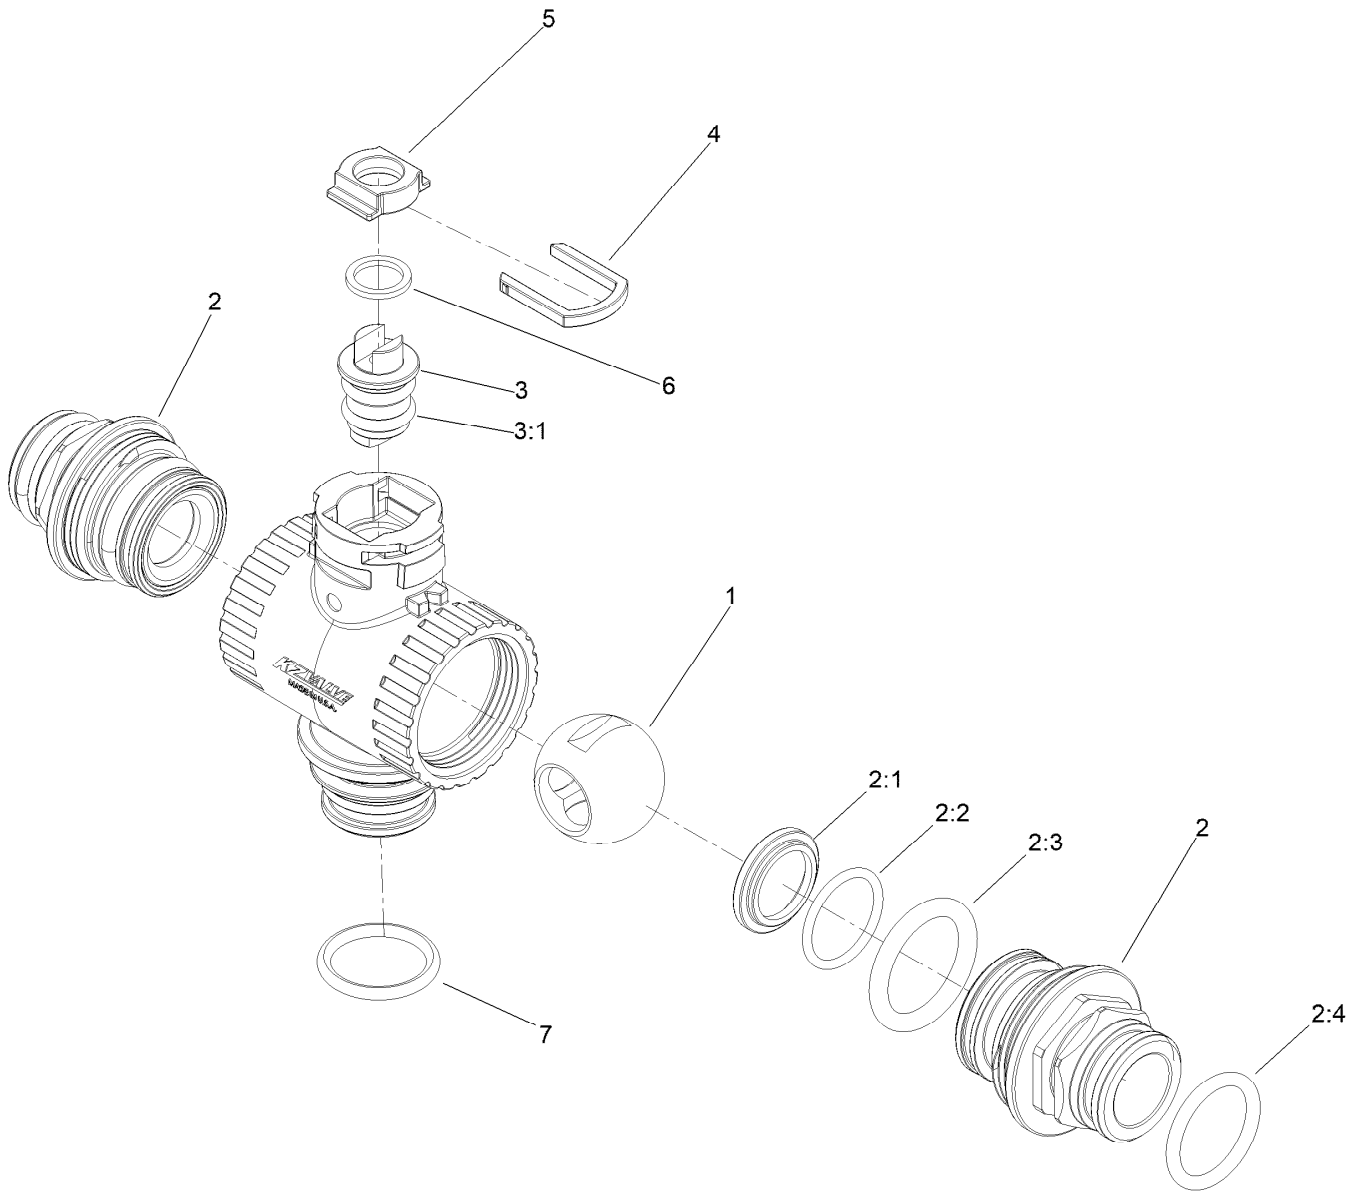 

3-Way Valve Assembly No. 147-3183


Ref.	Part Number	Qty.	Description
1	127-1194	1	Ball-Valve, 3Way
2	130-7317	2	Endcap Kit
2:1	127-1192	1	Seat-Ball
2:2	127-1188	1	O-Ring, Seat (Ball)
2:3	127-1189	1	O-Ring, Endcap
2:4	127-1187	1	O-Ring, Endcap
3	130-8248	1	Vavle Stem Kit
3:1	127-1197	2	O-Ring-Stem
4	127-1190	1	Fork-Stem, Valve
5	127-1195	1	Seat-Stem, Valve
6	127-1196	1	Washer-Stem, Valve
7	127-1187	1	O-Ring, Endcap

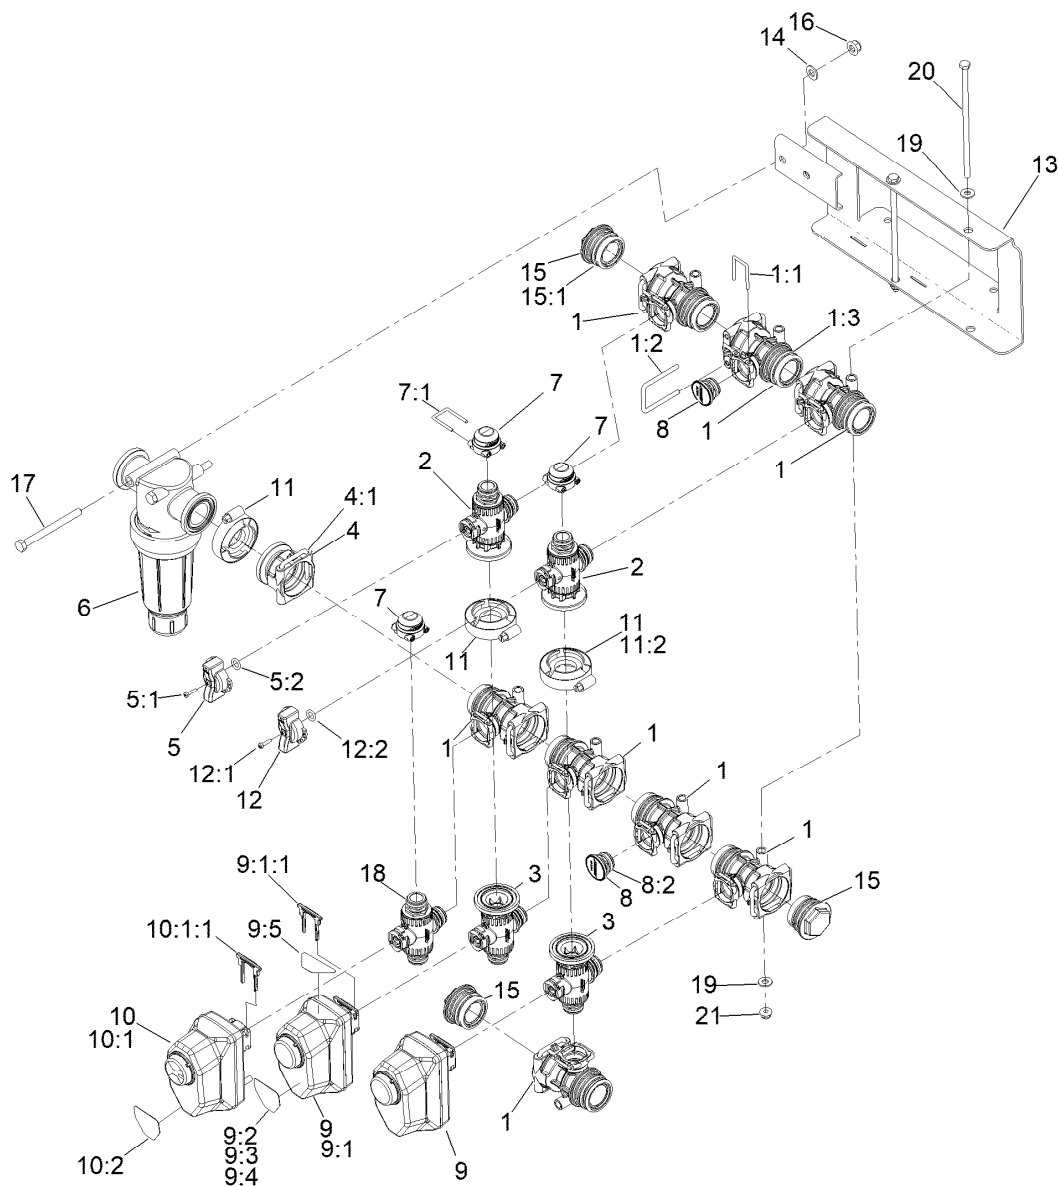 

Agitation Manifold Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	147-3187	8	Kit-Qf, Manifold Tee	9	140-7377	2	Kit-Actuator Pi, On/Off
1:1	147-3185	1	Pin-Fork, Qf Small	9:1		1	Actuator - On/Off ●
1:2	147-3186	1	Pin-Fork, Qf Large	9:1:1	130-7301	1	Hairpin-Actuator
1:3	147-3188	1	Seal-Manifold, Qf Series	9:2	127-6979	1	Decal-Valve, Agitation
2	161-4110	2	Kit-Tx2 Manifold Valve, Reg	9:3	127-6981	1	Decal-Valve, On/Off
3	147-3192	2	Kit-Tx2, 3Way Flange Manifold	9:4	127-6982	1	Decal-Valve, Master Boom
4	147-3189	1	Kit-Qf, Flange-M100 Female	9:5	127-6976	1	Decal-Valve, Bypass Adjust
4:1	147-3186	1	Pin-Fork, Qf Large	10	144-6163	1	Kit-Actuator Regulating Pi
5	131-0265	1	Agitation Regulating Handle Kit	10:1		1	Actuator-Regulating Pi ●
5:1	131-0263	1	Screw-Handle	10:1:1	130-7301	1	Hairpin-Actuator
5:2	127-1197	1	O-Ring-Stem	10:2	127-6984	1	Decal-Valve, Regulating
6	131-3791	1	Filter-Pressure	11	127-9829	3	Clamp/Gasket Kit
7	127-9811	3	Fitting-Cap, Female	11:2	127-1145	1	Gasket-Flange
7:1	133-0398	1	Pin-Fork	12	131-0266	1	Master Regulating Handle Kit
8	127-9810	2	Male Cap Fitting Kit	12:1	131-0263	1	Screw-Handle
8:2	127-1187	1	O-Ring, Endcap	12:2	127-1197	1	O-Ring-Stem
				13	161-4105	1	Agitation-Mount, ASM

 ● Not serviced separately

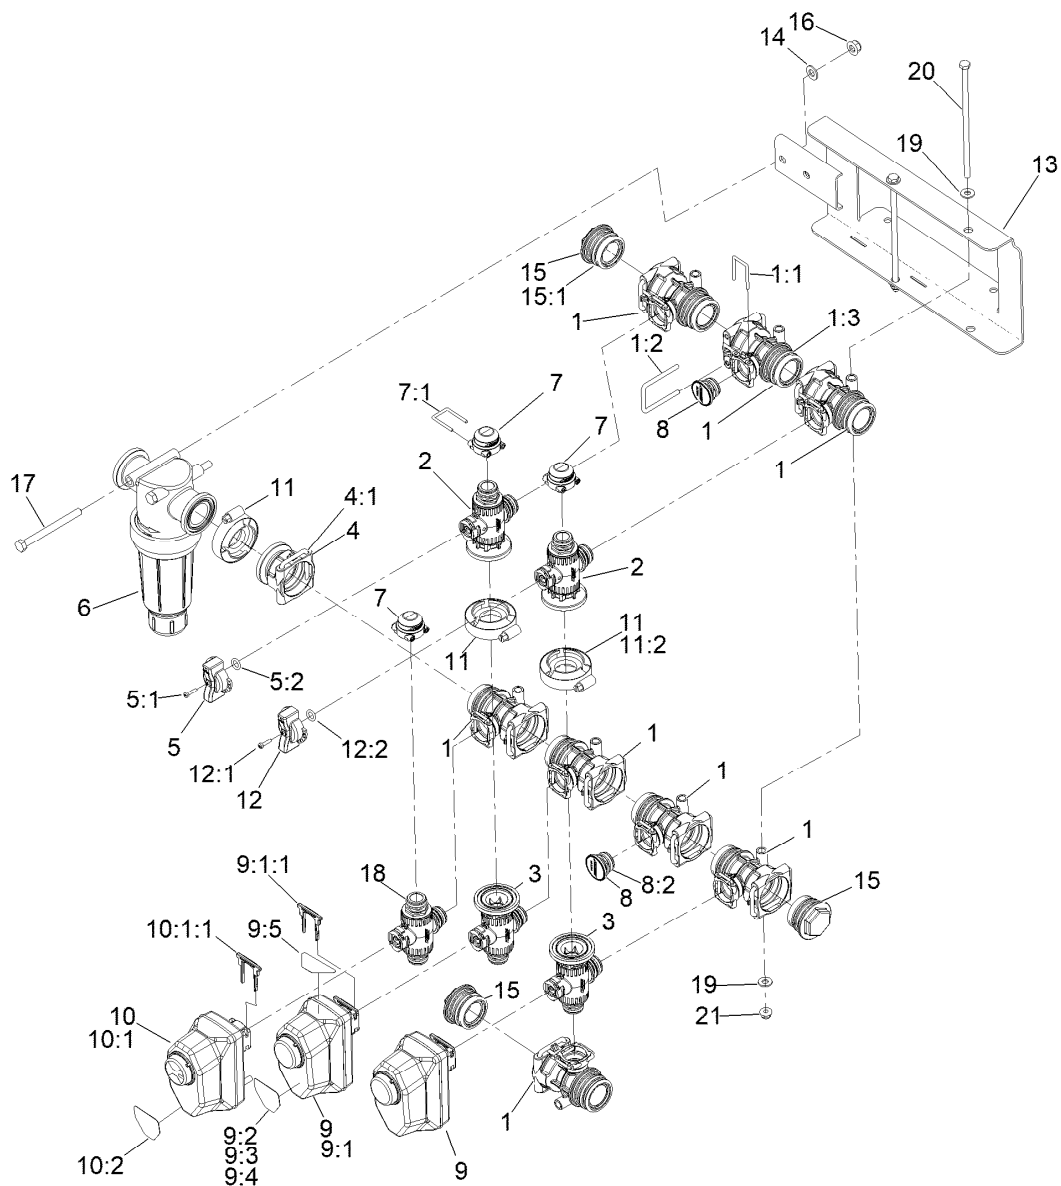


Agitation Manifold Assembly (continued)

Ref.	Part Number	Qty.	Description
14	3256-23	2	Washer-Plain
15	147-3193	3	Kit Qf, Plug-Male W/O Port
15:1	147-3188	1	Seal-Manifold, Qf Series
16	104-8300	2	Nut-HF, NI
17	322-22	2	Screw-HH

Ref.	Part Number	Qty.	Description
18	161-4111	1	Kit-Tx2 Manifold Qd, Reg
19	3256-22	4	Washer-Flat
20	161-4128	2	Screw-HH
21	104-7201	2	Nut-HF, NI

 
● Not serviced separately

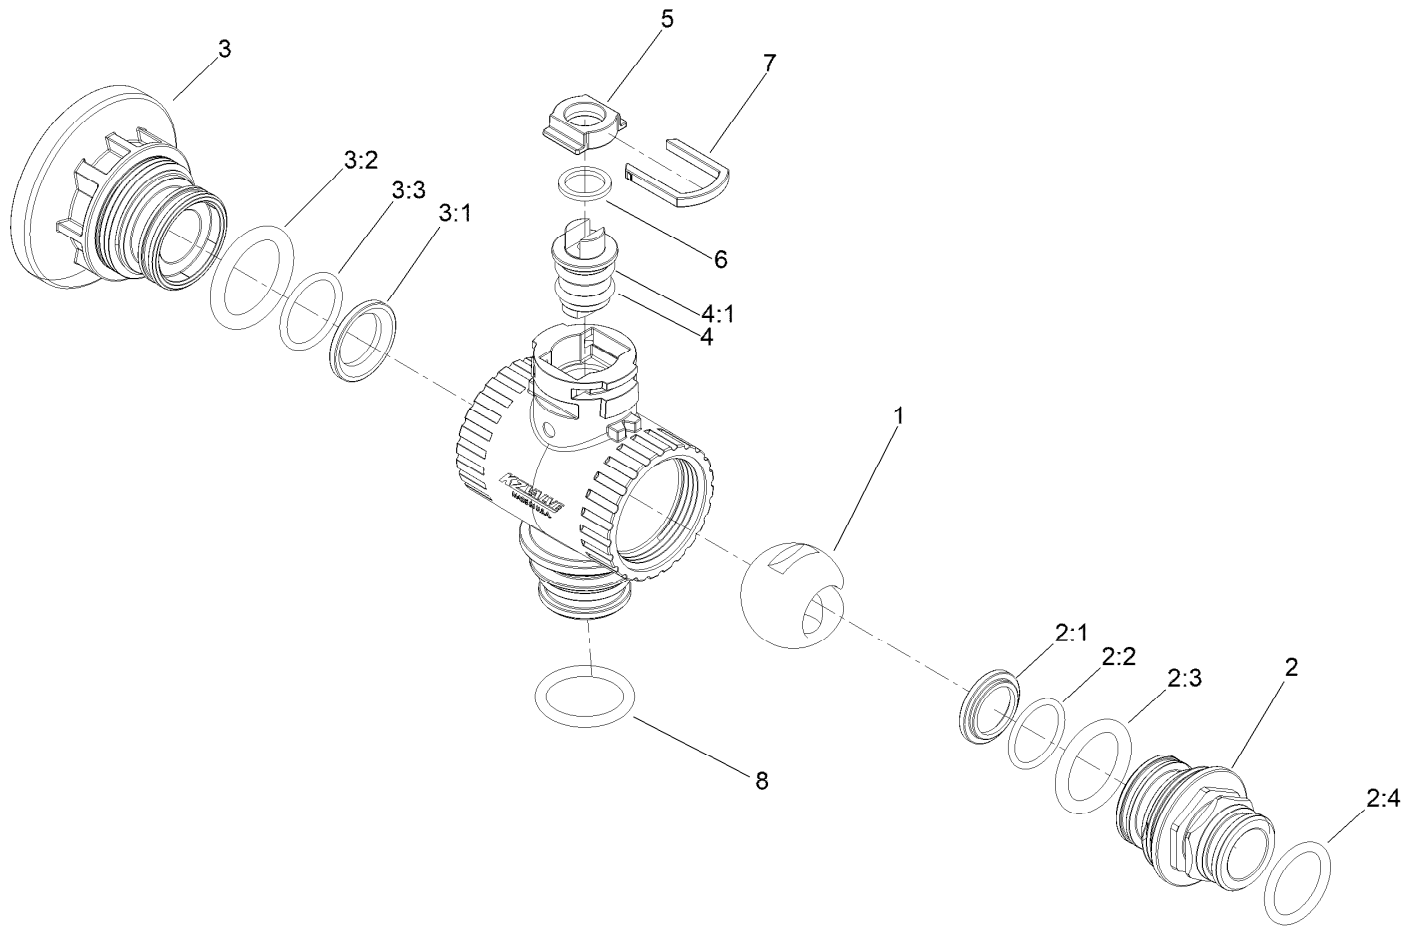

M100 Manifold Assembly No. 161-4110

Ref.	Part Number	Qty.	Description
1	127-1113	1	Ball-V
2	130-7317	1	Endcap Kit
2:1	127-1192	1	Seat-Ball
2:2	127-1188	1	O-Ring, Seat (Ball)
2:3	127-1189	1	O-Ring, Endcap
2:4	127-1187	1	O-Ring, Endcap
3	130-8249	1	Endcap Kit
3:1	127-1192	1	Seat-Ball


Ref.	Part Number	Qty.	Description
3:2	127-1188	1	O-Ring, Seat (Ball)
3:3	127-1189	1	O-Ring, Endcap
4	130-8248	1	Valve Stem Kit
4:1	127-1197	2	O-Ring-Stem
5	127-1195	1	Seat-Stem, Valve
6	127-1196	1	Washer-Stem, Valve
7	127-1190	1	Fork-Stem, Valve
8	127-1187	1	O-Ring, Endcap

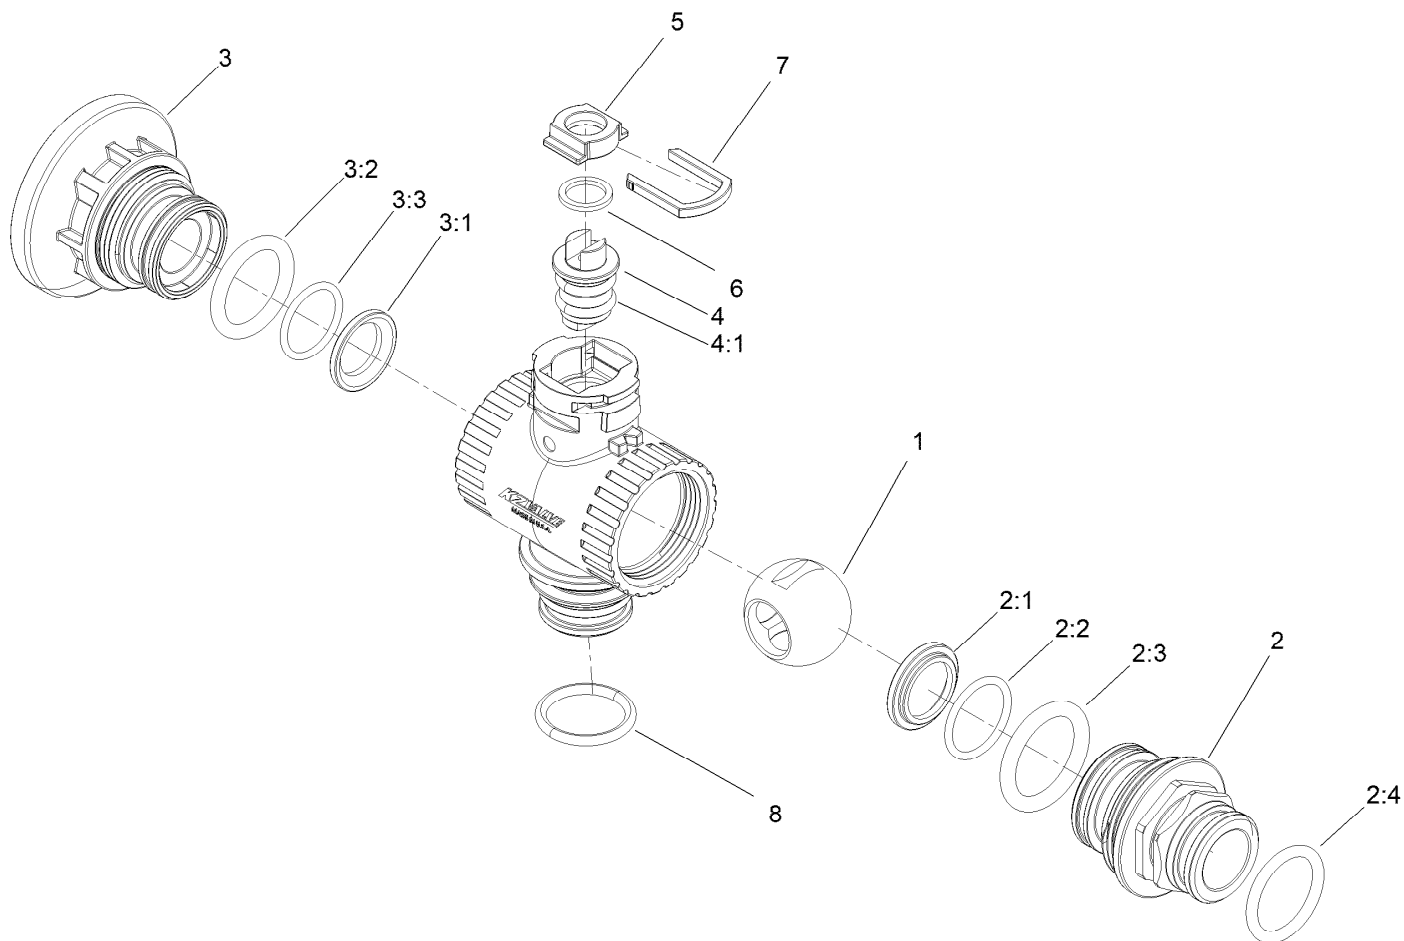 

3-Way Flange Manifold Assembly No. 147-3192


Ref.	Part Number	Qty.	Description
1	127-1194	1	Ball-Valve, 3Way
2	130-7317	1	Endcap Kit
2:1	127-1192	1	Seat-Ball
2:2	127-1188	1	O-Ring, Seat (Ball)
2:3	127-1189	1	O-Ring, Endcap
2:4	127-1187	1	O-Ring, Endcap
3	130-8249	1	Endcap Kit
3:1	127-1192	1	Seat-Ball

Ref.	Part Number	Qty.	Description
3:2	127-1188	1	O-Ring, Seat (Ball)
3:3	127-1189	1	O-Ring, Endcap
4	130-8248	1	Valve Stem Kit
4:1	127-1197	2	O-Ring-Stem
5	127-1195	1	Seat-Stem, Valve
6	127-1196	1	Washer-Stem, Valve
7	127-1190	1	Fork-Stem, Valve
8	127-1187	1	O-Ring, Endcap

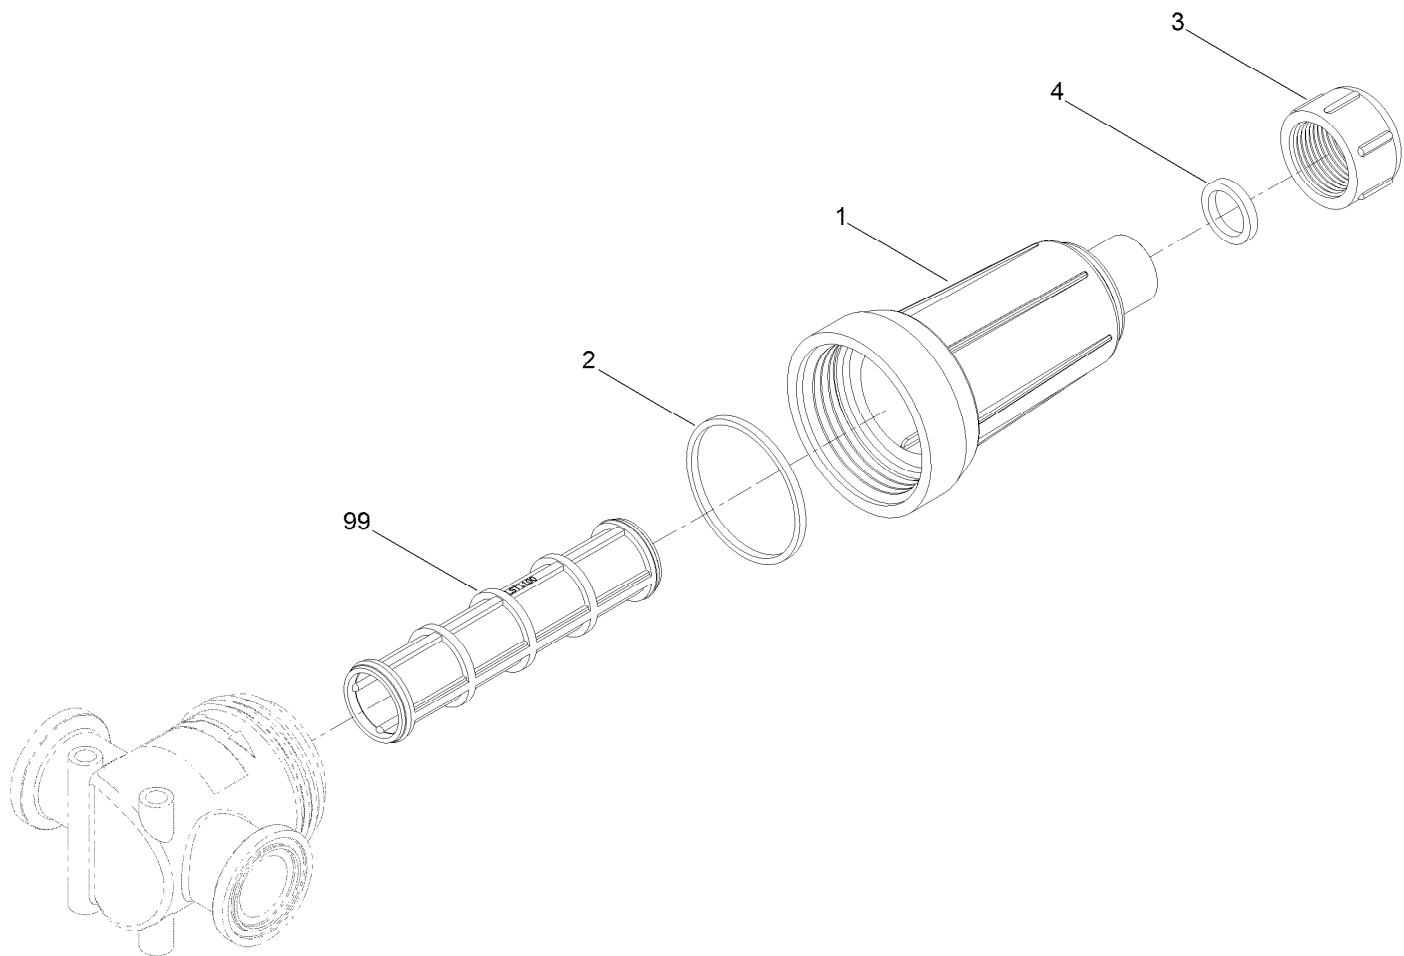 


Pressure Filter Assembly No. 131-3791

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-0397	1	Bowl-Strainer
2	136-0398	1	Rubber-Gasket
3	136-0410	1	Strainer Cap
4	136-0399	1	Rubber-Gasket
99	133-0384	1	Screen-Teejet, 30 Mesh
99	133-0385	1	Screen-Teejet, 50 Mesh
99	133-0386	1	Screen-Teejet, 80 Mesh
99	133-0387	1	Screen-Teejet, 100 Mesh

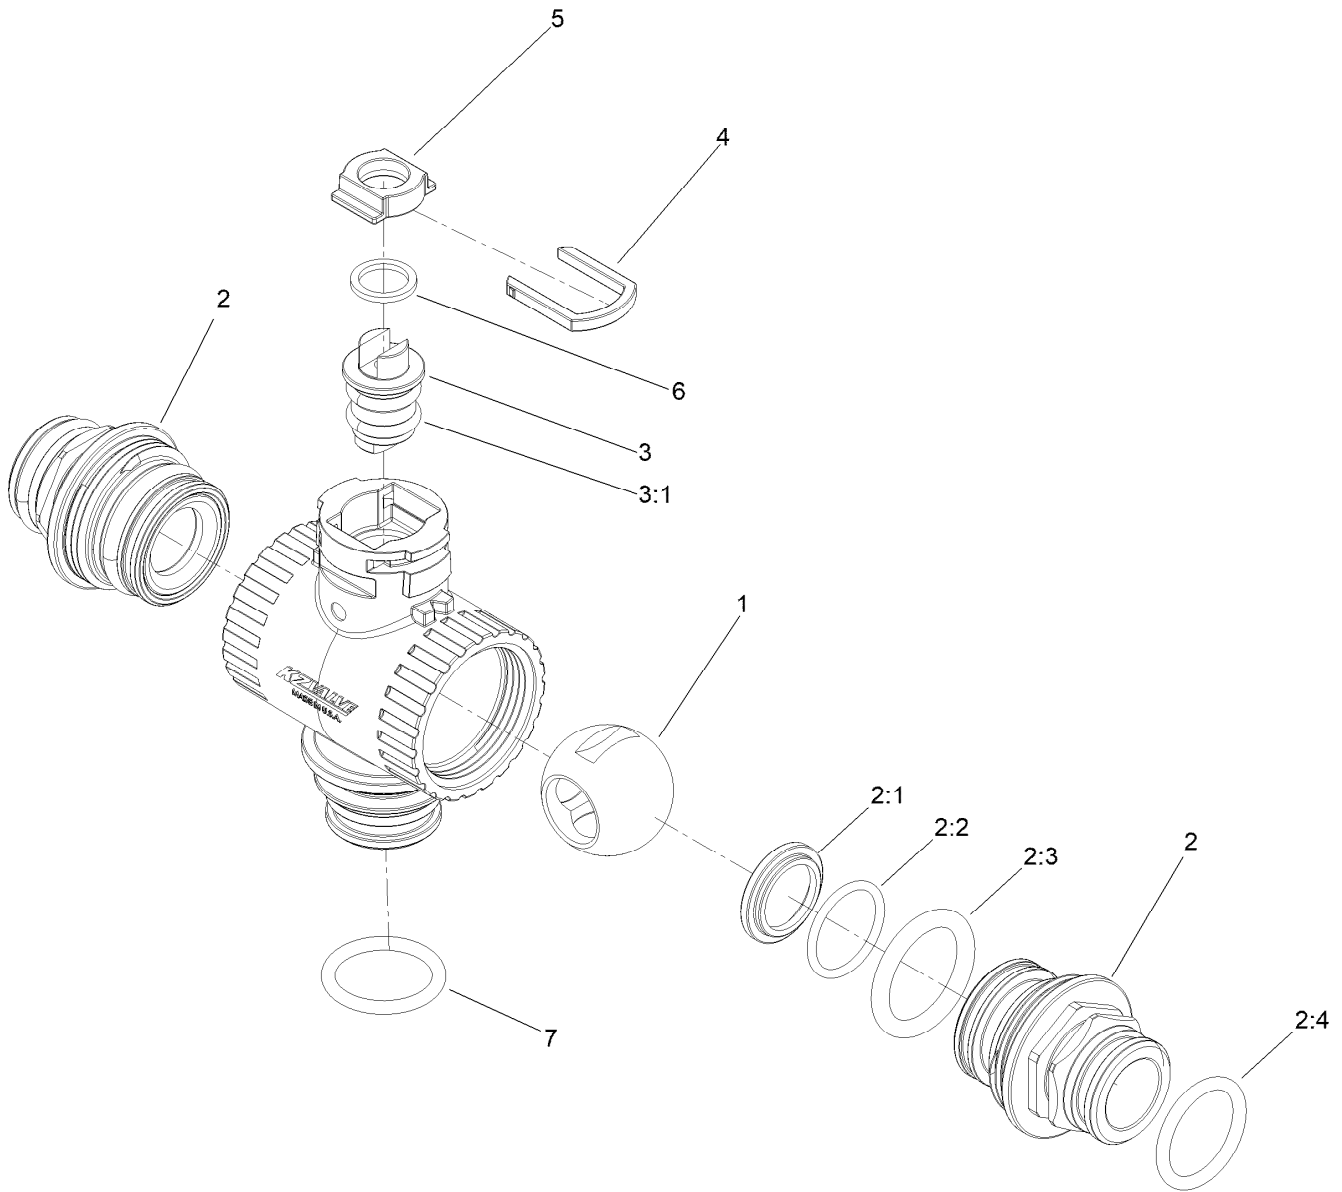 

QD Manifold Assembly No. 161-4111

Ref.	Part Number	Qty.	Description
1	127-1113	1	Ball-V
2	130-7317	2	Endcap Kit
2:1	127-1192	1	Seat-Ball
2:2	127-1188	1	O-Ring, Seat (Ball)
2:3	127-1189	1	O-Ring, Endcap
2:4	127-1187	1	O-Ring, Endcap
3	130-8248	1	Valve Stem Kit
3:1	127-1197	2	O-Ring-Stem
4	127-1190	1	Fork-Stem, Valve
5	127-1195	1	Seat-Stem, Valve
6	127-1196	1	Washer-Stem, Valve
7	127-1187	1	O-Ring, Endcap

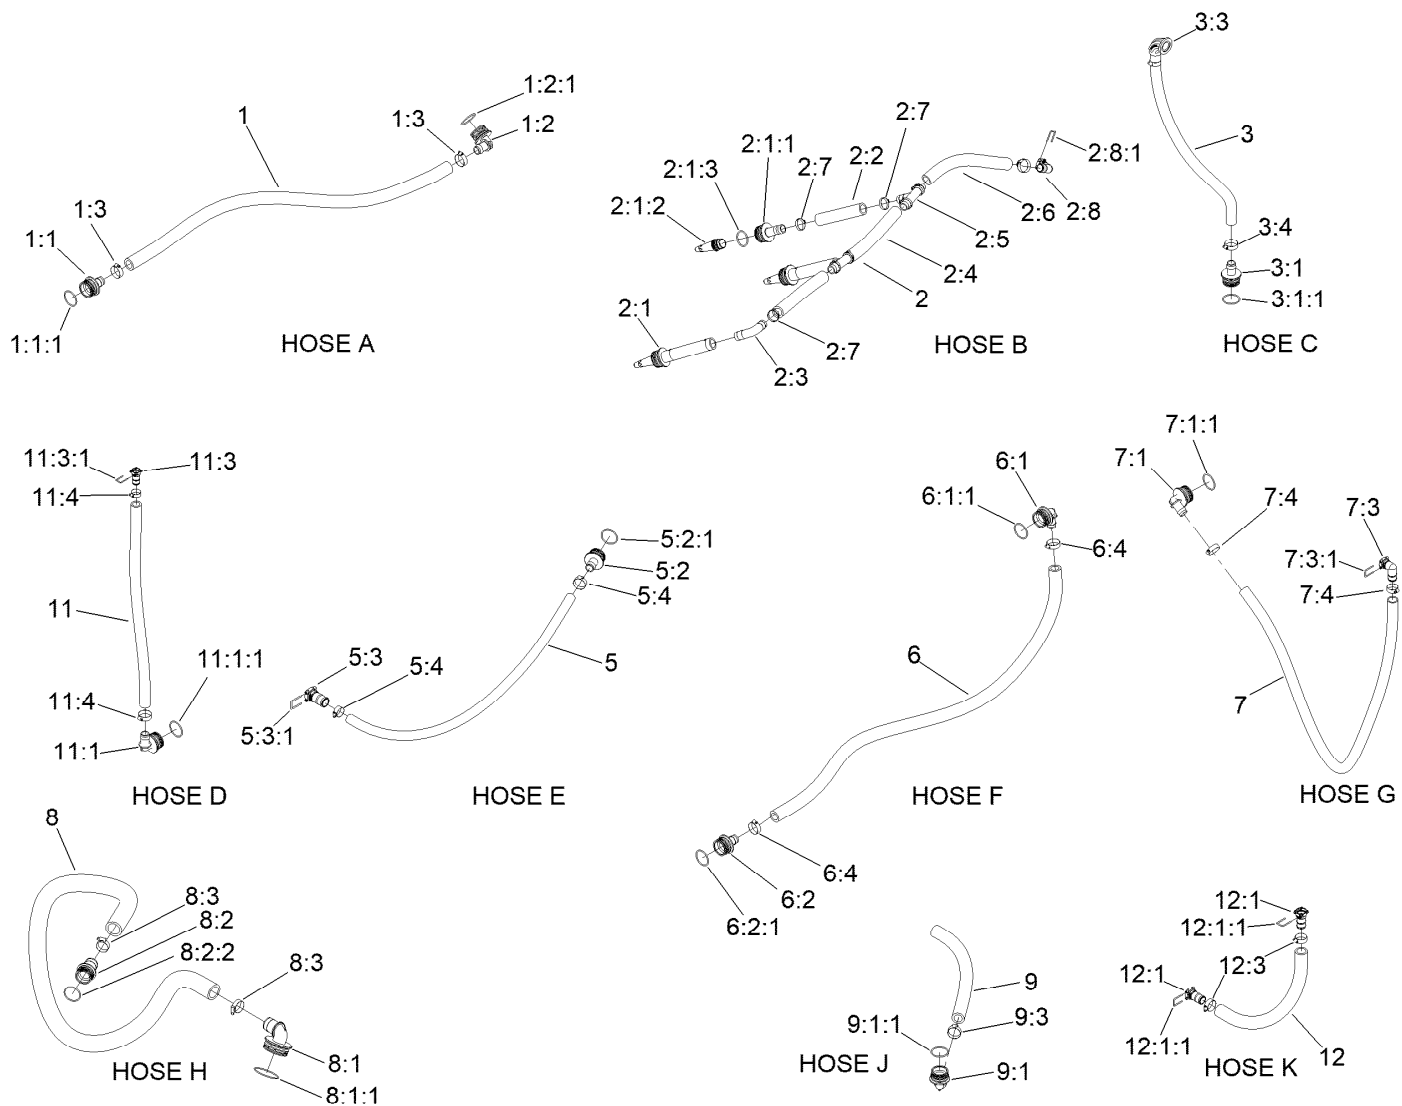 


Reference **Spray Tank Assembly** page and **Spray Tank Valve Assembly** page for hose locations and orientation

Hose Assembly

Ref.	Part Number	Qty.	Description
1	121-6539	1	Main Supply Hose ASM
1:1	106-4932	1	Hosebarb-Straight
1:1:1	100-8637	1	O-Ring
1:2	106-4933	1	Hosebarb ASM
1:2:1	100-8637	1	O-Ring
1:3	2412-34	2	Clamp-Hose
2	139-3094	1	Hose-Agitation, ASM
2:1	131-3731	3	Agitation Nozzle ASM
2:1:1	131-3732	1	Fitting-Barb
2:1:2	120-8579	1	Nozzle-Agitation
2:1:3	121-4996	1	O-Ring
2:2	125-0665	3	Nozzle-Hose, Agitation
2:3	117-7867	1	Elbow-Hosebarb
2:4	125-0664	2	Tee-Hose, Agitation
2:5	117-7866	2	Tee-Hosebarb
2:6	132-4311	1	Hose-Agitation
2:7	2412-34	12	Clamp-Hose
2:8	131-0213	1	90 DEG Barb Fitting Kit

Ref.	Part Number	Qty.	Description
2:8:1	133-0398	1	Pin-Fork
3	132-4314	1	Hose-Supply
3:1	106-4932	1	Hosebarb-Straight
3:1:1	100-8637	1	O-Ring
3:3	131-0241	1	Fitting-Elb 90
3:4	2412-34	2	Clamp-Hose
5		1	Hose ASM, Agitation Bypass
5:2	106-4932	1	Hosebarb-Straight
5:2:1	100-8637	1	O-Ring
5:3	161-4117	1	Kit-Fitting, Qf 1" Barb Female
5:3:1	147-3186	1	Pin-Fork, Qf Large
5:4	2412-34	2	Clamp-Hose
6	125-0601	1	Regulating Hose ASM
6:1	106-4933	1	Hosebarb ASM
6:1:1	100-8637	1	O-Ring
6:2	106-4932	1	Hosebarb-Straight

 ● Not serviced separately

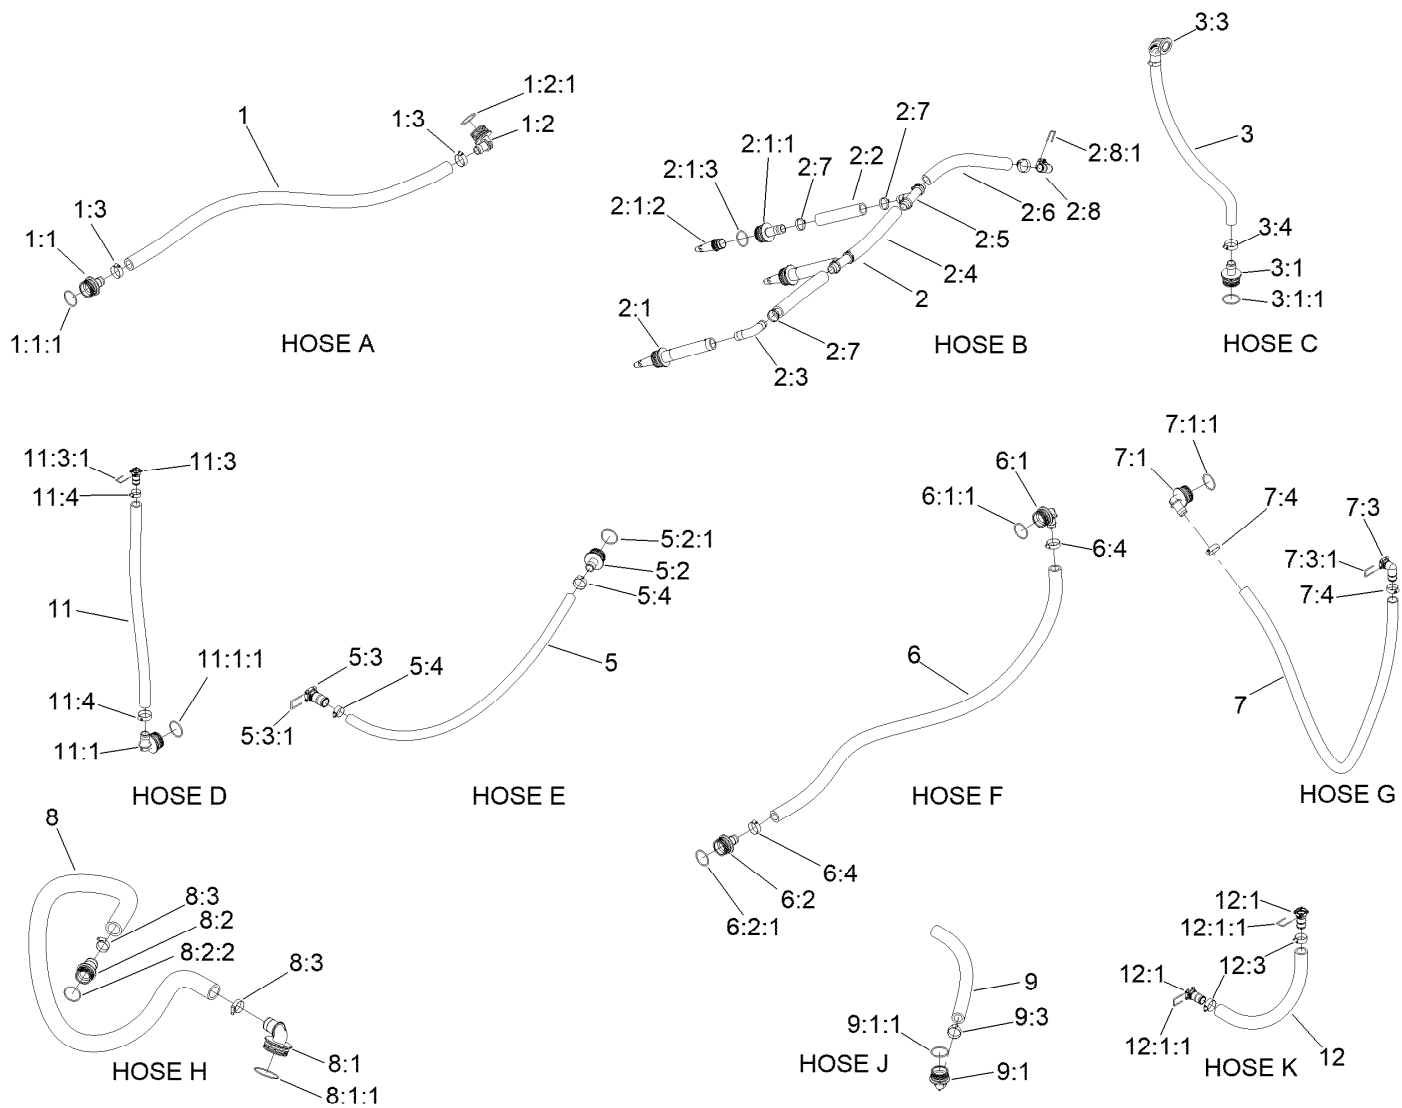


Reference **Spray Tank Assembly** page and **Spray Tank Valve Assembly** page for hose locations and orientation

Hose Assembly (continued)

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
6:2:1	100-8637	1	O-Ring	9	125-0647	1	Drain Hose ASM
6:4	2412-34	2	Clamp-Hose	9:1	106-4933	1	Hosebarb ASM
7	132-4315	1	Hose-Bypass	9:1:1	100-8637	1	O-Ring
7:1	106-4933	1	Hosebarb ASM	9:3	2412-34	1	Clamp-Hose
7:1:1	100-8637	1	O-Ring	11	132-4316	1	Hose-Regulating
7:3	131-0213	1	90 DEG Barb Fitting Kit	11:1	106-4933	1	Hosebarb ASM
7:3:1	133-0398	1	Pin-Fork	11:1:1	100-8637	1	O-Ring
7:4	2412-34	2	Clamp-Hose	11:3	127-9806	1	Fitting Kit
8	125-0603	1	Top Suction Hose ASM	11:3:1	133-0398	1	Pin-Fork
8:1	106-4952	1	Hosebarb-90 DEG	11:4	2412-34	2	Clamp-Hose
8:1:1	100-6989	1	O-Ring	12	132-4319	1	Hose-Regulating
8:2	117-7982	1	Hosebarb ASM	12:1	127-9806	2	Fitting Kit
8:2:2	100-8637	1	O-Ring	12:1:1	133-0398	1	Pin-Fork
8:3	41327	2	Clamp-Hose	12:3	2412-34	2	Clamp-Hose

 
● Not serviced separately

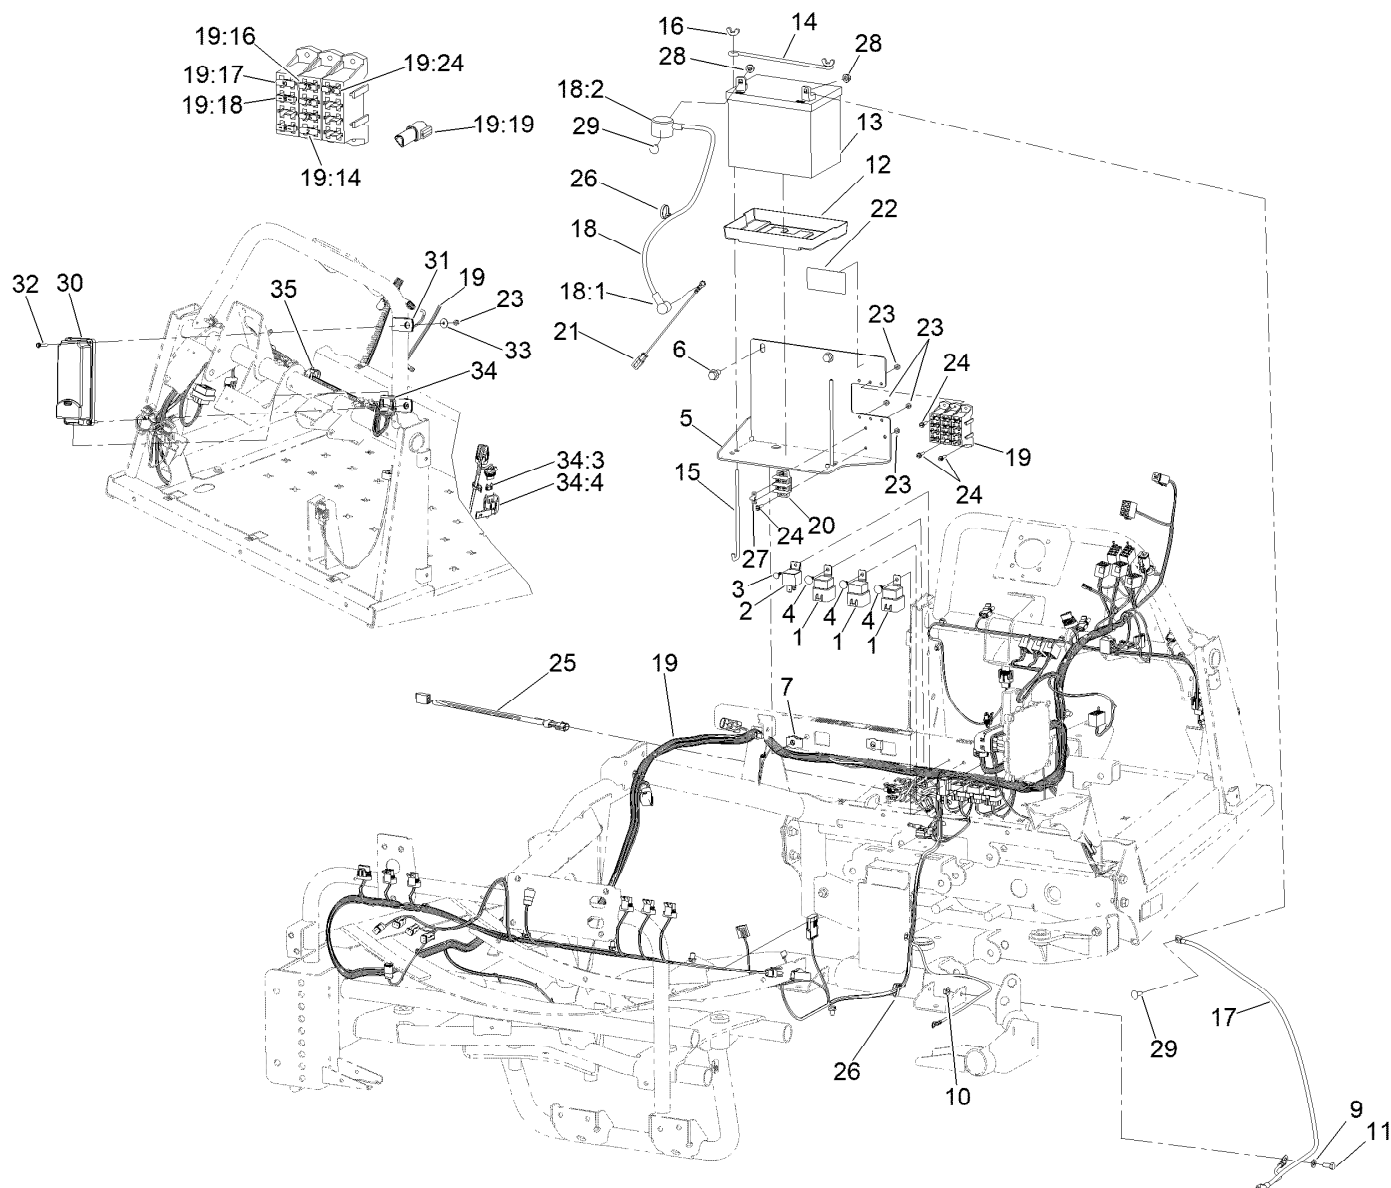

Main Wiring Harness and Battery Assembly

Ref.	Part Number	Qty.	Description
1	99-7430	3	Relay-Mini
2	99-7435	1	Relay
3	125-8067	1	Plug-Plastic
4	117-2382	3	Plug-Plastic
5	125-0908-0P	1	Base - Battery
6	3234-11	2	Screw-HHF
7	105-4886	2	Nut-Tinnerman
9	3256-23	1	Washer-Plain
10	32128-25	1	Nut-HF
11	322-3	1	Screw-HH
12	106948	1	Tray-Battery
13	104-8162	1	Battery
14	100-6434	1	Rod-Hold Down, Battery
15	100-6435	2	Post-Battery
16	1-543792	2	Wingnut
17	122-0137	1	Cable-Battery, Negative
18	109-7621	1	Positive Battery Cable ASM
18:1	1-543393	1	Insulator-Solenoid
18:2	109-2407	1	Insulator-Battery
19	122-4105	1	Harness-Wire, Mp1750
19:14	94-6710	1	Fuse-2 Amp


Ref.	Part Number	Qty.	Description
19:16	114241	3	Fuse-Blade, 7.5 Amp
19:17	218-578	1	Fuse-Blade, 10 Amp
19:18	109355	3	Fuse-Blade, 15 Amp
19:19	32180-043	2	Resistor-120 Ohm
19:24	109103	1	Fuse-Blade, 30 Amp
20	42862	1	Block-Terminal, Ground
21	108-9455	1	Harness-Wire, Fusible Link
22	144-6007	1	Decal - Fuse Block
23	3296-2	7	Nut-Lock, NI
24	32105-13	5	Screw-HWH
25	108-8657	1	Harness-Wire, Seat
26	3290-379	2	Tie-Cable
27	42863	1	Strip-Jumper
28	104-8300	2	Nut-HF, NI
29	3230-1	2	Bolt-CARR
30	161-9001	1	Gateway-Telematics
31	2412-82	2	Clamp-R
32	131-6456	2	Screw-HWH
33	3256-61	2	Washer-Flat
34	122-2164	1	Harness-Wire
34:3	121-8861	1	Fuse-Mini Blade, 2 Amp

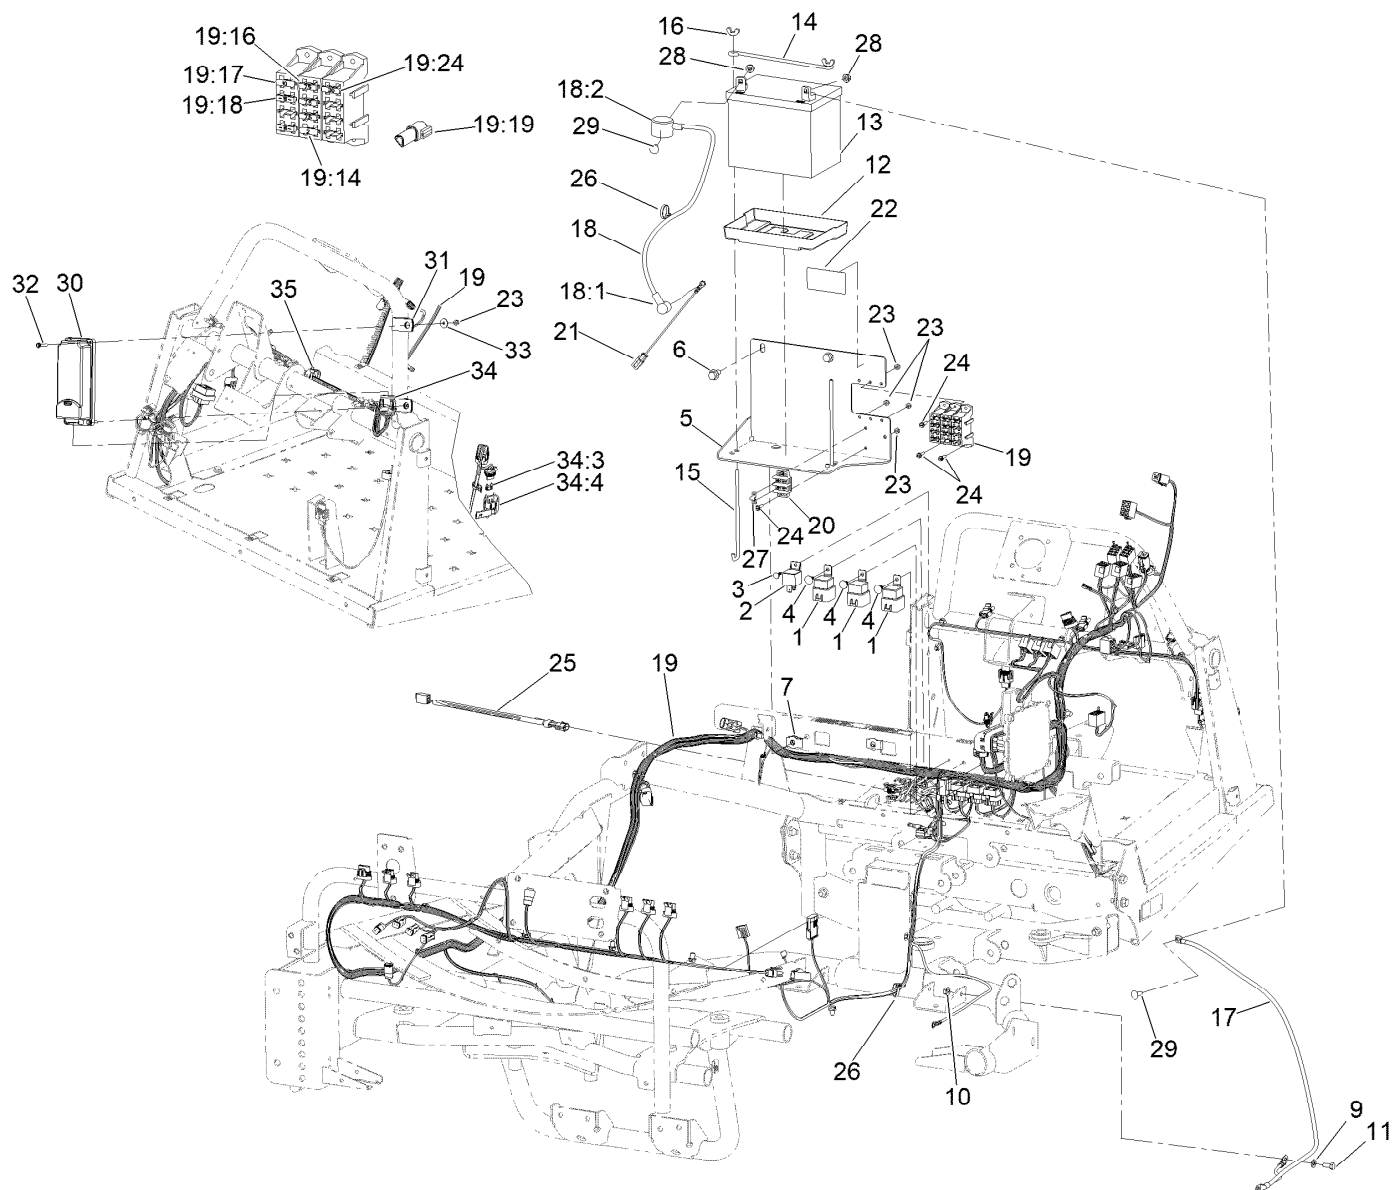 

Main Wiring Harness and Battery Assembly (continued)

Ref.	Part Number	Qty.	Description
34:4	32180-101	1	Cover-Fuse, Single
35	3290-378	11	Tie-Cable

 
Center Boom Mount Assembly

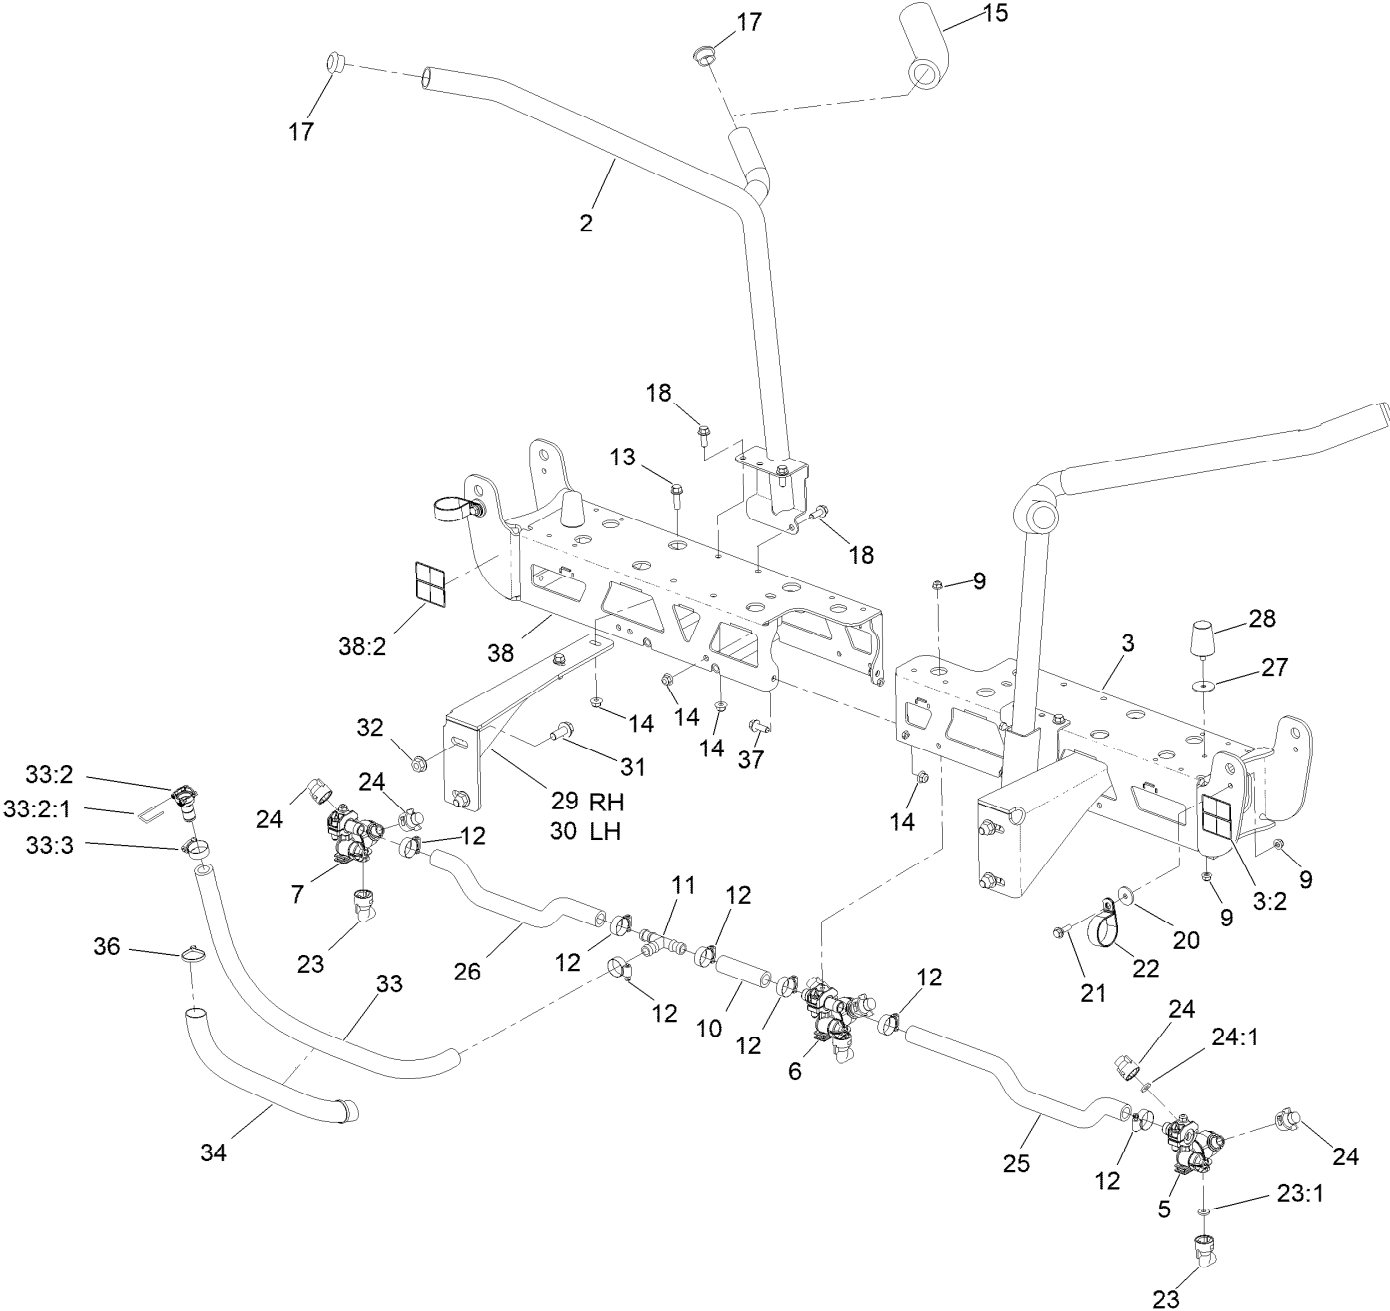

Center Boom Mount Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	161-4174	2	Cradle ASM	24	95-9187	6	Cap-Blank
3	136-0381	1	Boom-LH	24:1	40998	1	Seat-Gasket
3:2	120-0617	2	Decal-Warning, Pinch, Crush	25	108-3735	1	Hose-Boom, Center (LH)
5	108-3725	1	LH Single Body Turret ASM	26	108-3718	1	Hose-Boom, Center (RH)
6	108-3727	1	Double Turret Body ASM	27	3256-68	2	Washer-Flat
7	108-3726	1	RH Single Body Turret ASM	28	110-5070	2	Bumper
9	104-8300	7	Nut-HF, NI	29	130-8244-03	1	Mount-Boom, RH
10	108-3717	1	Hose-Boom	30	130-8245-03	1	Mount-Boom, LH
11	108-3439	1	Tee	31	110-5057	4	Capscrew-HHF
12	2412-129	7	Clamp-Hose	32	108-3745	4	Nut-HHF, Whiz
13	110-5050	4	Screw-HHF	33	132-4323	1	Hose-Boom, Center
14	104-8301	12	Nut-HF, NI	33:2	127-9807	1	Straight Fitting Kit
15	108-3457	2	Spacer	33:2:1	133-0398	1	Pin-Fork
17	108-3489	4	Cap-Tube	33:3	2412-129	1	Clamp-Hose
18	110-5052	6	Screw-HHF	34	127-3923	1	Conduit-Convoluted
20	108-3743	2	Washer	36	3290-378	2	Tie-Cable
21	108-3744	2	Screw-Shoulder	37	3234-42	2	Screw-HHF
22	114-9566	2	Clamp-R	38	136-0382	1	Boom-RH
23	95-9186	3	Cap	38:2	120-0617	2	Decal-Warning, Pinch, Crush
23:1	40998	1	Seat-Gasket				

 
RH Single Body Turret Assembly No. 108-3726

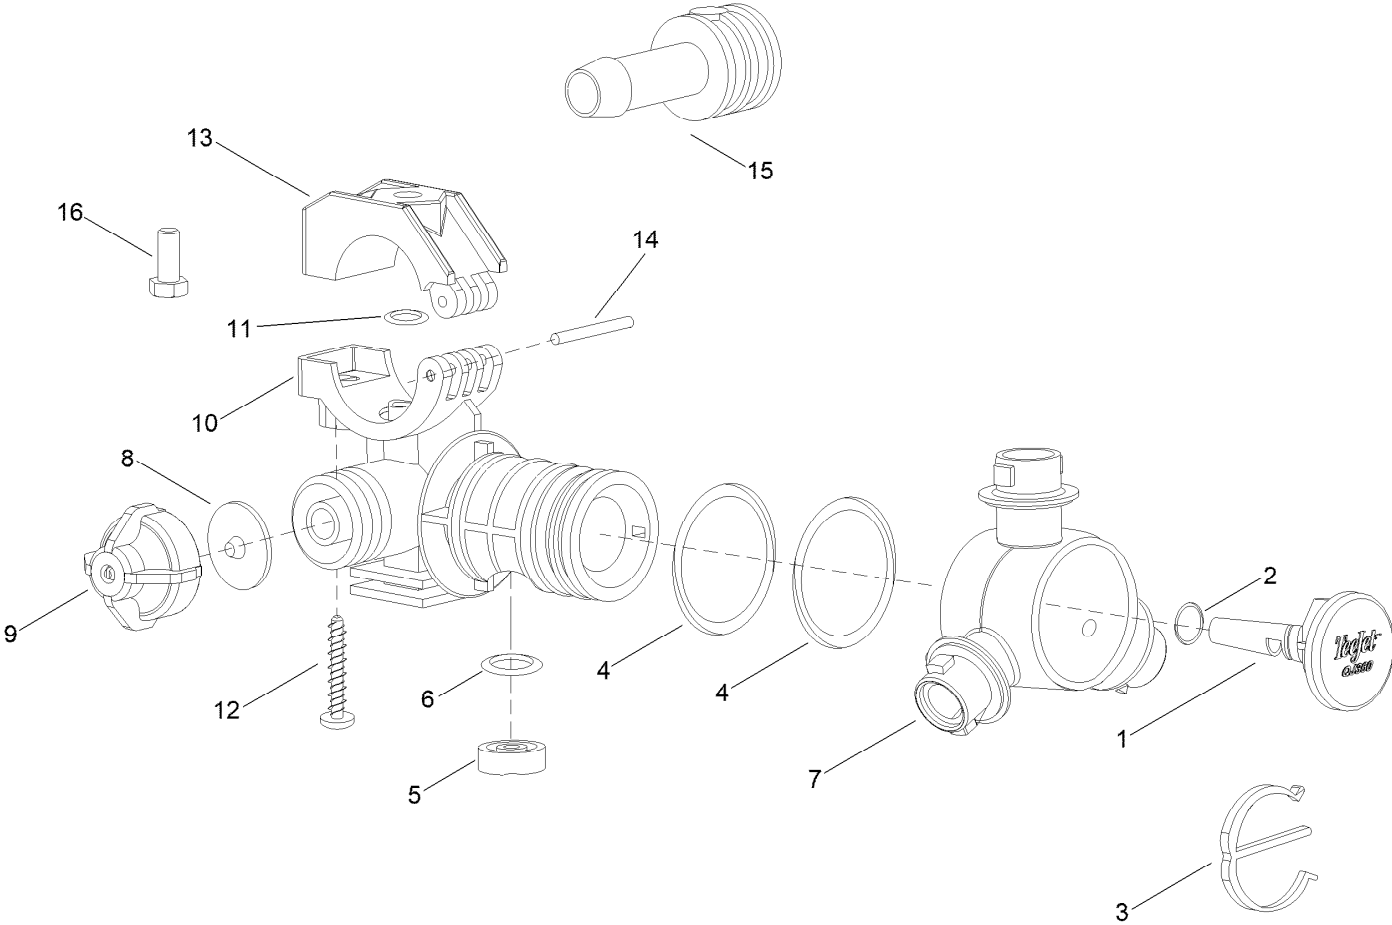

RH Single Body Turret Assembly No. 108-3726 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	95-9200	1	Plug
2	95-9198	1	O-Ring
3	95-9197	1	E-Clip
4	95-9199	2	O-Ring
5	108-3264	1	Seal-Viton
6	108-3265	1	O-Ring-Viton
7	95-9196	1	Turret
8	41003	1	Diaphragm


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
9	95-9193	1	Cap-Diaphragm
10	95-9192	1	Body-Split Eyelet
11	95-9191	1	O-Ring
12	99-0811	1	Screw-Clamp
13	99-0812	1	Clamp-Upper
14	99-0814	1	Pin-Pivot
15	95-9201	1	Shank-Hose
16	322-3	1	Screw-HH

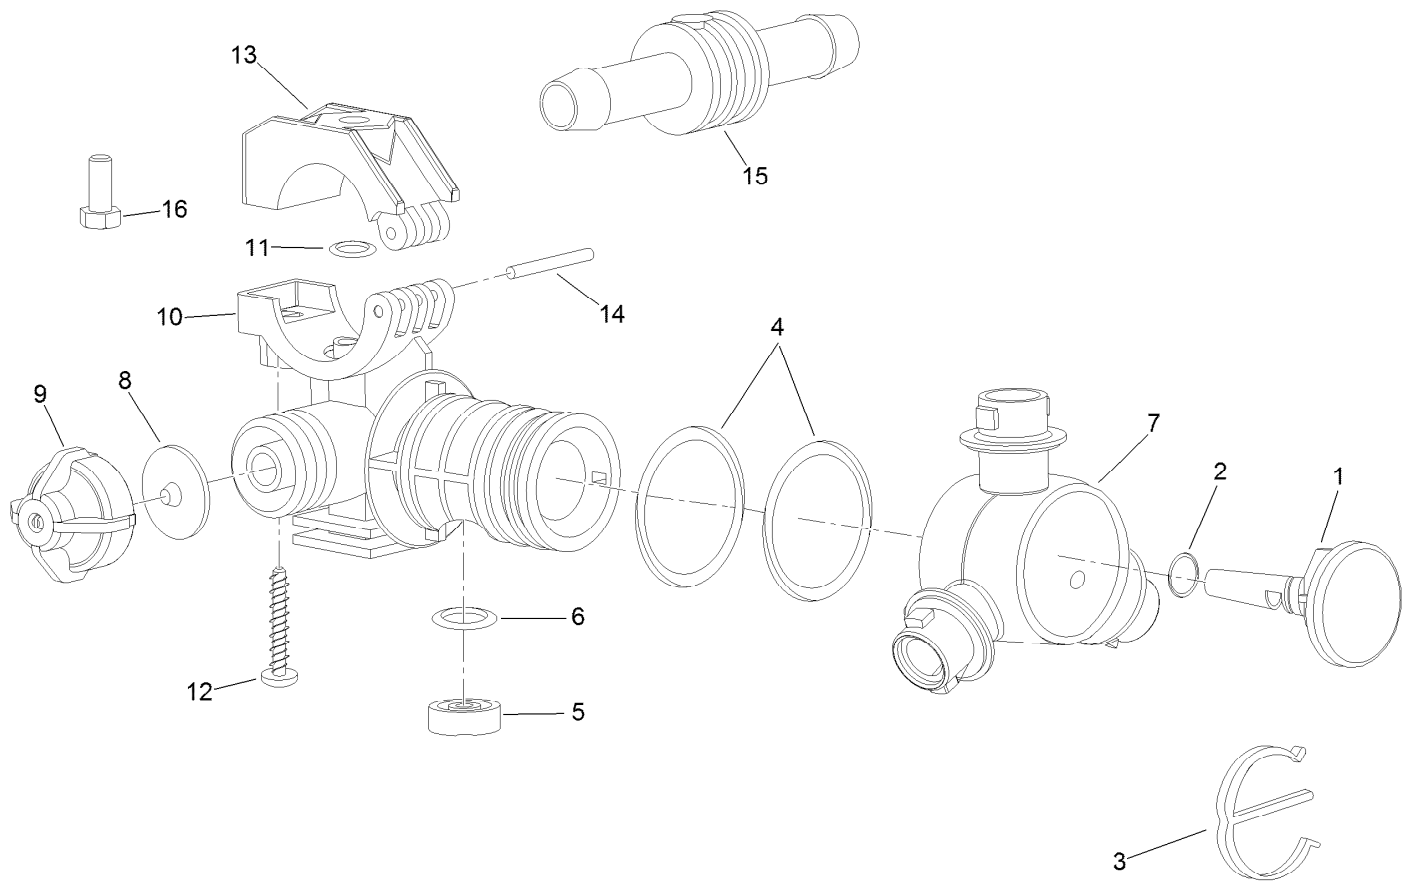 

Double Turret Body Assembly No. 108-3727

Ref.	Part Number	Qty.	Description
1	95-9200	1	Plug
2	95-9198	1	O-Ring
3	95-9197	1	E-Clip
4	95-9199	2	O-Ring
5	108-3264	1	Seal-Viton
6	108-3265	1	O-Ring-Viton
7	95-9196	1	Turret
8	41003	1	Diaphragm


Ref.	Part Number	Qty.	Description
9	95-9193	1	Cap-Diaphragm
10	95-9192	1	Body-Split Eyelet
11	95-9191	1	O-Ring
12	99-0811	1	Screw-Clamp
13	99-0812	1	Clamp-Upper
14	99-0814	1	Pin-Pivot
15	95-9202	1	Shank-Hose
16	322-3	1	Screw-HH

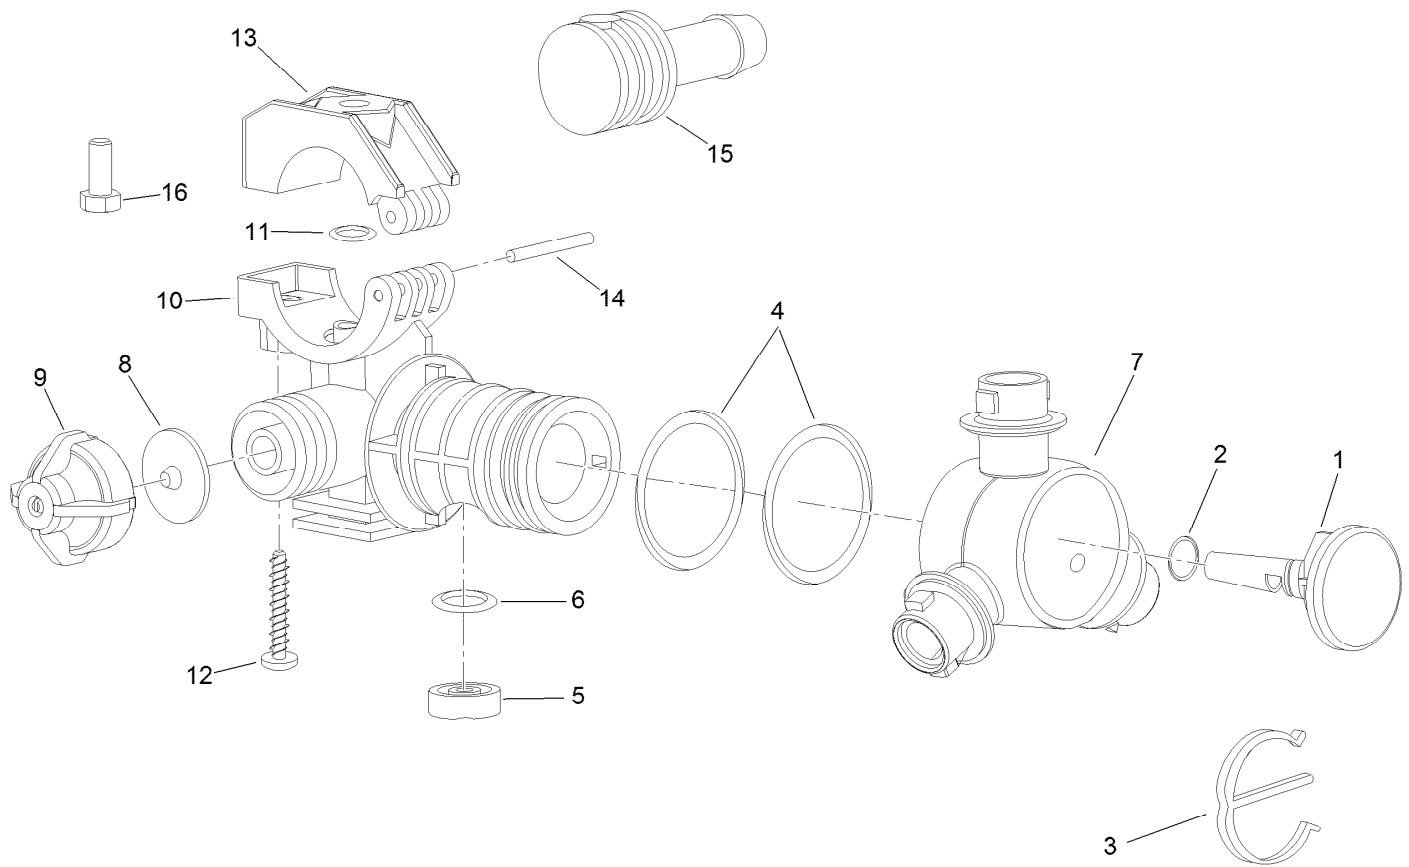 

LH Single Turret Body Assembly No. 108-3725

Ref.	Part Number	Qty.	Description
1	95-9200	1	Plug
2	95-9198	1	O-Ring
3	95-9197	1	E-Clip
4	95-9199	2	O-Ring
5	108-3264	1	Seal-Viton
6	108-3265	1	O-Ring-Viton
7	95-9196	1	Turret
8	41003	1	Diaphragm


Ref.	Part Number	Qty.	Description
9	95-9193	1	Cap-Diaphragm
10	95-9192	1	Body-Split Eyelet
11	95-9191	1	O-Ring
12	99-0811	1	Screw-Clamp
13	99-0812	1	Clamp-Upper
14	99-0814	1	Pin-Pivot
15	95-9201	1	Shank-Hose
16	322-3	1	Screw-HH

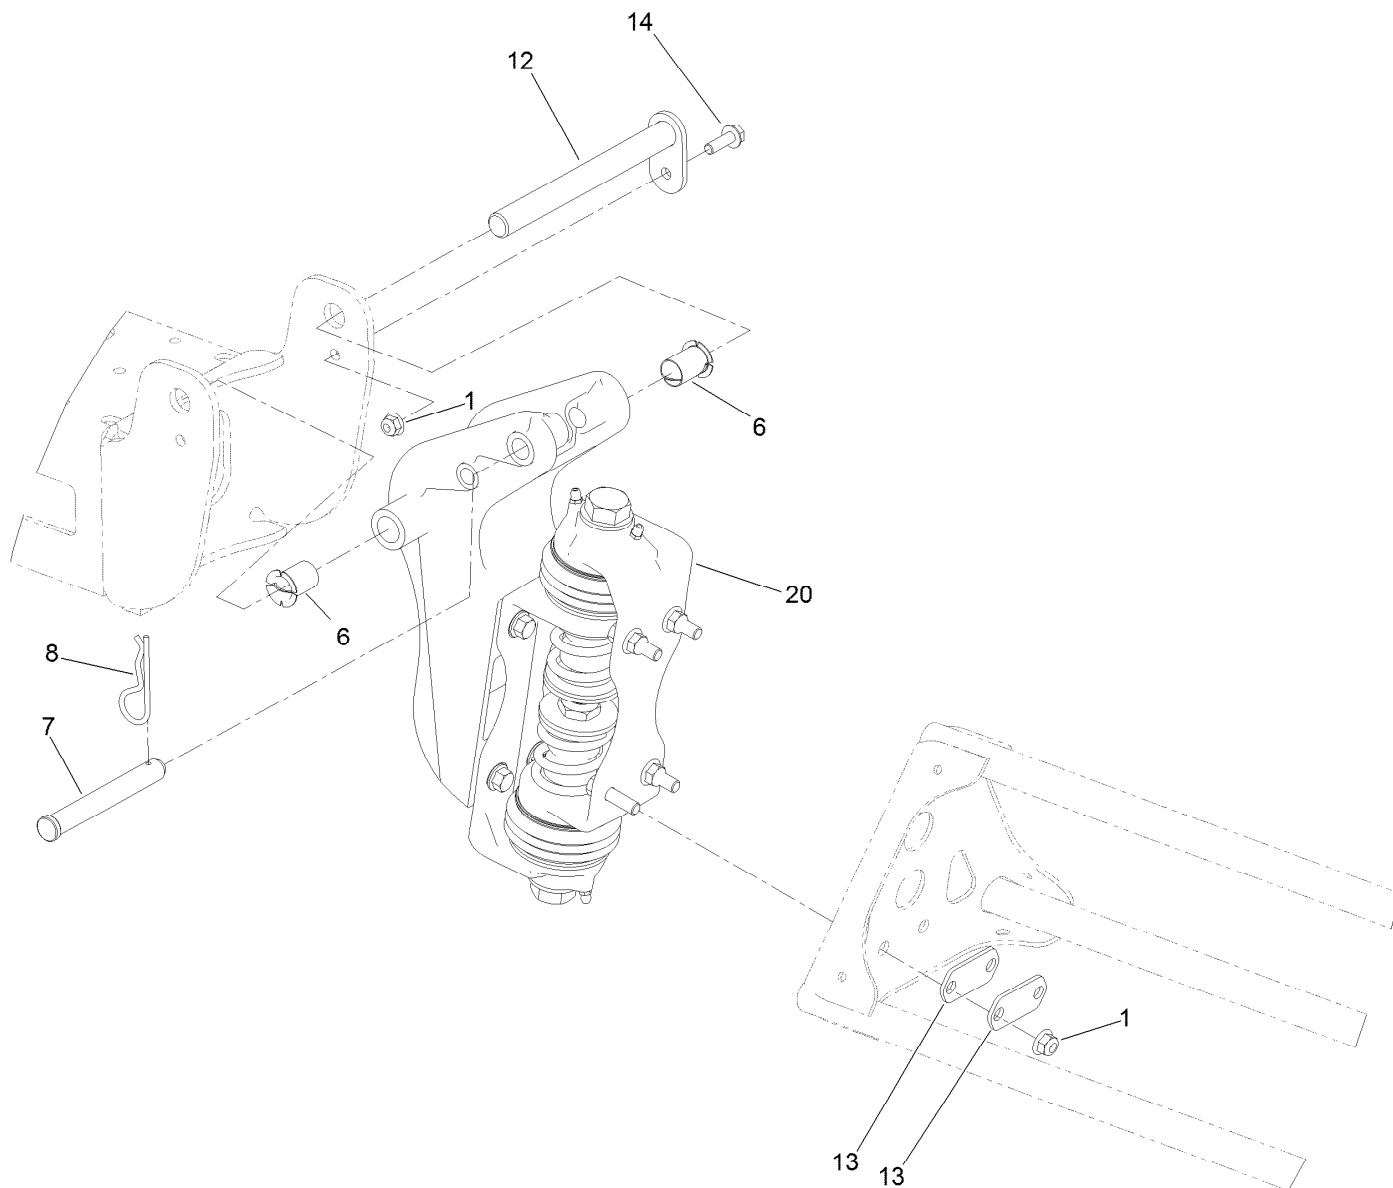 

Boom Pivot Assembly


Ref.	Part Number	Qty.	Description
1	104-8300	2	Nut-HF, NI
6	100-8541	4	Bushing-A Arm
7	108-3436	2	Pin-Clevis
8	3290-468	2	Pin-Cotter
12	108-3419	2	Pivot Pin ASM
13	108-3605	8	Plate-Backing
14	108-3748	2	Screw-HHF
20		2	Pivot Bracket Assembly ●

 ● Not serviced separately

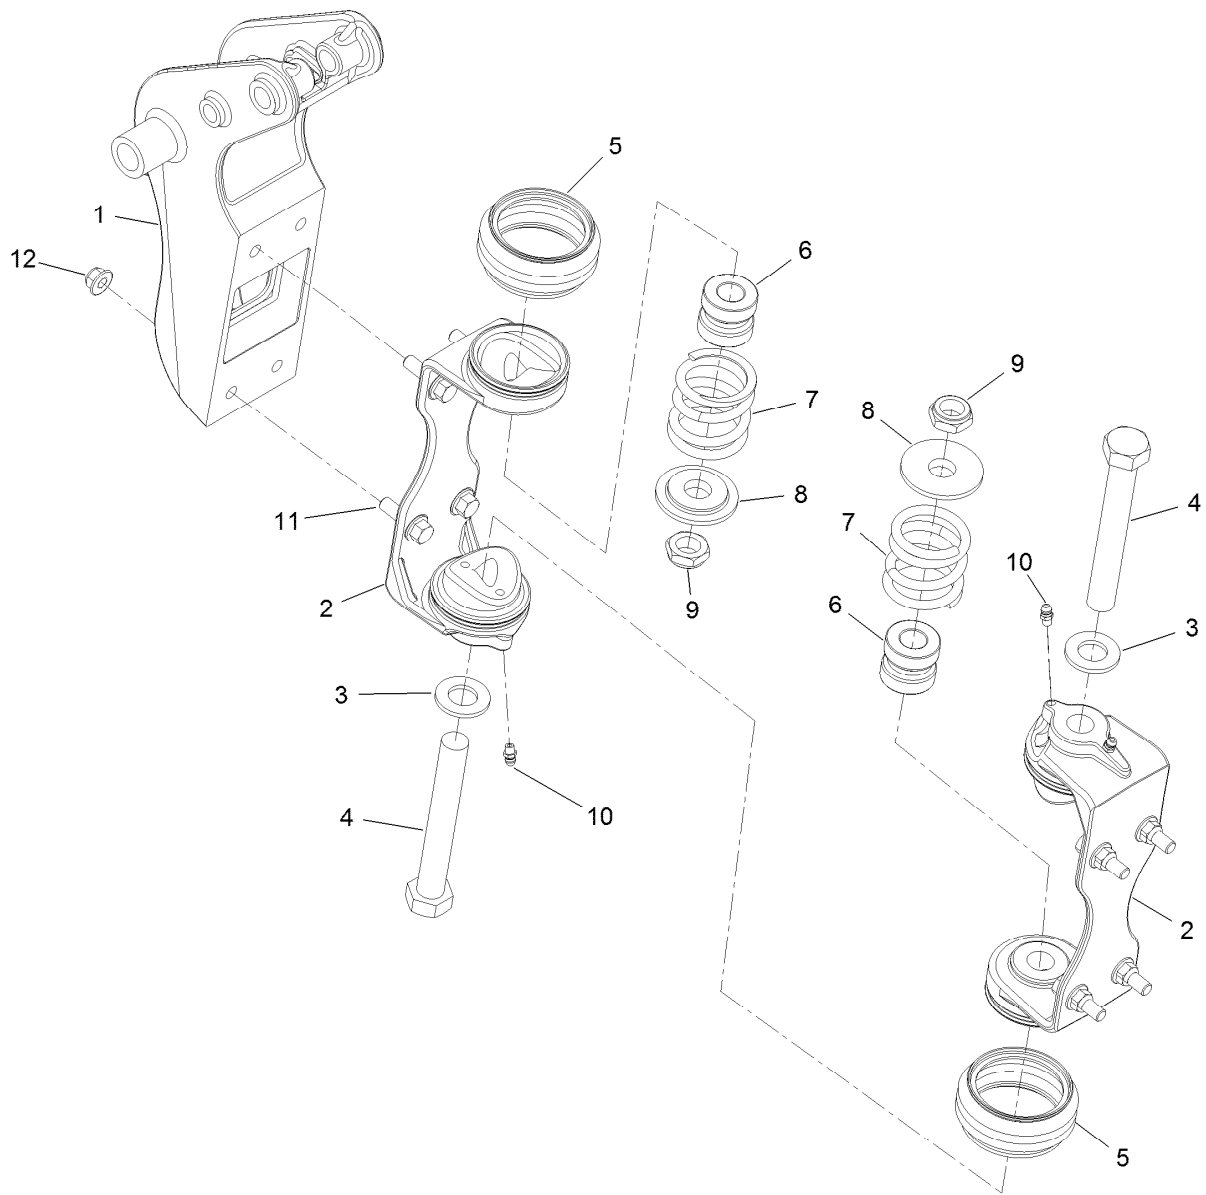

Boom Pivot Assembly

Ref.	Part Number	Qty.	Description
1	137-1673	1	Bracket-Pivot
2	137-1674	2	Hinge
3	110-5054	2	Washer-Flat
4	108-3738	2	Screw-HH
5	108-3459	2	Boot-Hinge
6	120-8541	2	Dampener-Hinge
7	108-3440	2	Spring-Breakaway, Boom
8	108-3444	2	Retainer-Spring
9	3296-15	2	Nut-Lock, NI
10	302-5	4	Fitting-Grease
11	110-5050	8	Screw-HHF
12	104-8301	8	Nut-HF, NI

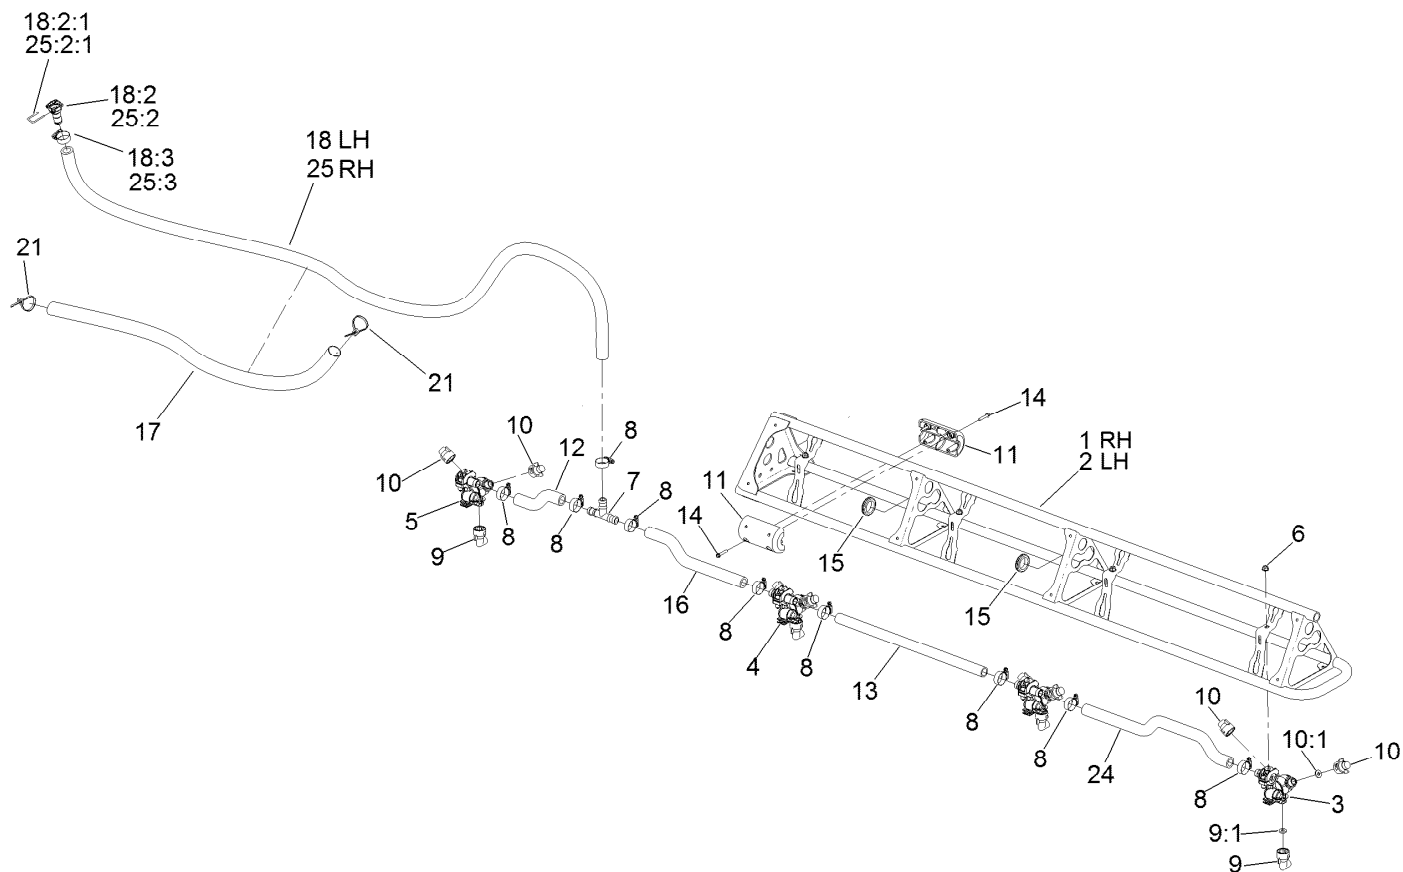 

Left and Right Hand Boom Assembly

Ref.	Part Number	Qty.	Description
1	108-3524-03	1	Boom-RH
2	108-3525-03	1	Boom-LH
3	108-3725	2	LH Single Body Turret ASM
4	108-3727	4	Double Turret Body ASM
5	108-3726	2	RH Single Body Turret ASM
6	104-8300	8	Nut-HF, NI
7	108-3439	2	Tee
8	2412-129	18	Clamp-Hose
9	95-9186	8	Cap
9:1	40998	1	Seat-Gasket
10	95-9187	16	Cap-Blank
10:1	40998	1	Seat-Gasket
11	119-9368	8	Block Slide
12	136-0437	2	Hose-Formed
13	40506	2	Hose-Jumper

Ref.	Part Number	Qty.	Description
14	119-9369	16	Screw-HHF
15	240-3	4	Grommet-Rubber
16	136-0436	2	Hose-Formed
17	107-8650	2	Conduit-Convoluted
18	132-4322	1	Hose-Boom
18:2	127-9807	1	Straight Fitting Kit
18:2:1	133-0398	1	Pin-Fork
18:3	2412-129	1	Clamp-Hose
21	3290-378	4	Tie-Cable
24	108-3735	2	Hose-Boom, Center (LH)
25	132-4324	1	Hose-Boom
25:2	127-9807	1	Straight Fitting Kit
25:2:1	133-0398	1	Pin-Fork
25:3	2412-129	1	Clamp-Hose

Attachments and Accessories

For 41196 Multi Pro 1750 Turf Sprayer

Product Name	Model/Part
Premium ATF (Drum).....	108-1185
Premium ATF (Pail)	108-1186
Premium All Purpose Grease (Tube)	108-1190
License Plate Kit.....	120-8506
Covered Boom Spring Upgrade Kit.....	120-8508
Premium Engine Oil 10w30 (55 Gallon Drum)	121-6392
Premium Engine Oil 10w30 (5 Gallon Pail)	121-6393
Lance Suction Assembly	127-9826
Sonic Boom Finish Kit.....	130-8227
Finishing Kit, Foam Marker for Multi Pro 1750 Turf Sprayer	136-0457
Pump Head Kit.....	145-3399
White Universal Sunshade	30669
Red Universal Sunshade	30671
Rear Work Light Kit.....	41010
Single Nozzle Kit.....	41023
Hand Spray Wand Kit	41118
EU Compliance Kit.....	41155
Pro Foam Concentrate (4 x 1 Gallon)	41157
Chemical Pre-Mix Kit	41158
Electric Hose Reel Kit	41159
CE Kit	41202
Tank Clean Rinse Kit	41208
Ultra Sonic Boom Leveling Kit	41219
Foam Marker Kit	41249
Drift Reduction Boom Shroud Kit	41602
Pro-Foam.....	41607
Geolink Global	41713
Geolink Finish Kit MP 1750.....	41742
Spark Arrestor Screen	94-8157



Count on it.