



Form No. 3478-325 Rev A

Count on it.

Parts Catalog

GrandStand® HDX Mower **With 60in TURBO FORCE® Cutting Unit**

Model No. 72514—Serial No. 420000000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

60 Inch Deck Assembly 4

Deck Assembly No. 145-1617 6

Deflector Assembly No. 144-2635 8

Spindle Assembly No. 137-9780 10

Ground Drive Assembly 12

LH Transmission Assembly No. 161-1323 14

RH Transmission Assembly No. 161-9807 16

Hydraulic Hose Assembly 18

Motion Control Assembly 20

Control Handle Assembly No. 132-5157 22

Control Handle Assembly No. 132-5158 24

Parking Brake Assembly 26

Deck Lift Assembly 28

HOC Lever Assembly No. 161-6735 30

Deck Strut Assembly No. 147-4557 32

Frame Assembly 34

Wheel and Bearing Assembly 36

Platform Assembly 38

Engine Assembly 40


Oil Guard Assembly 42

Fuel Tank Assembly 44

Electrical Assembly 46

Attachments and Accessories 48


60 Inch Deck Assembly

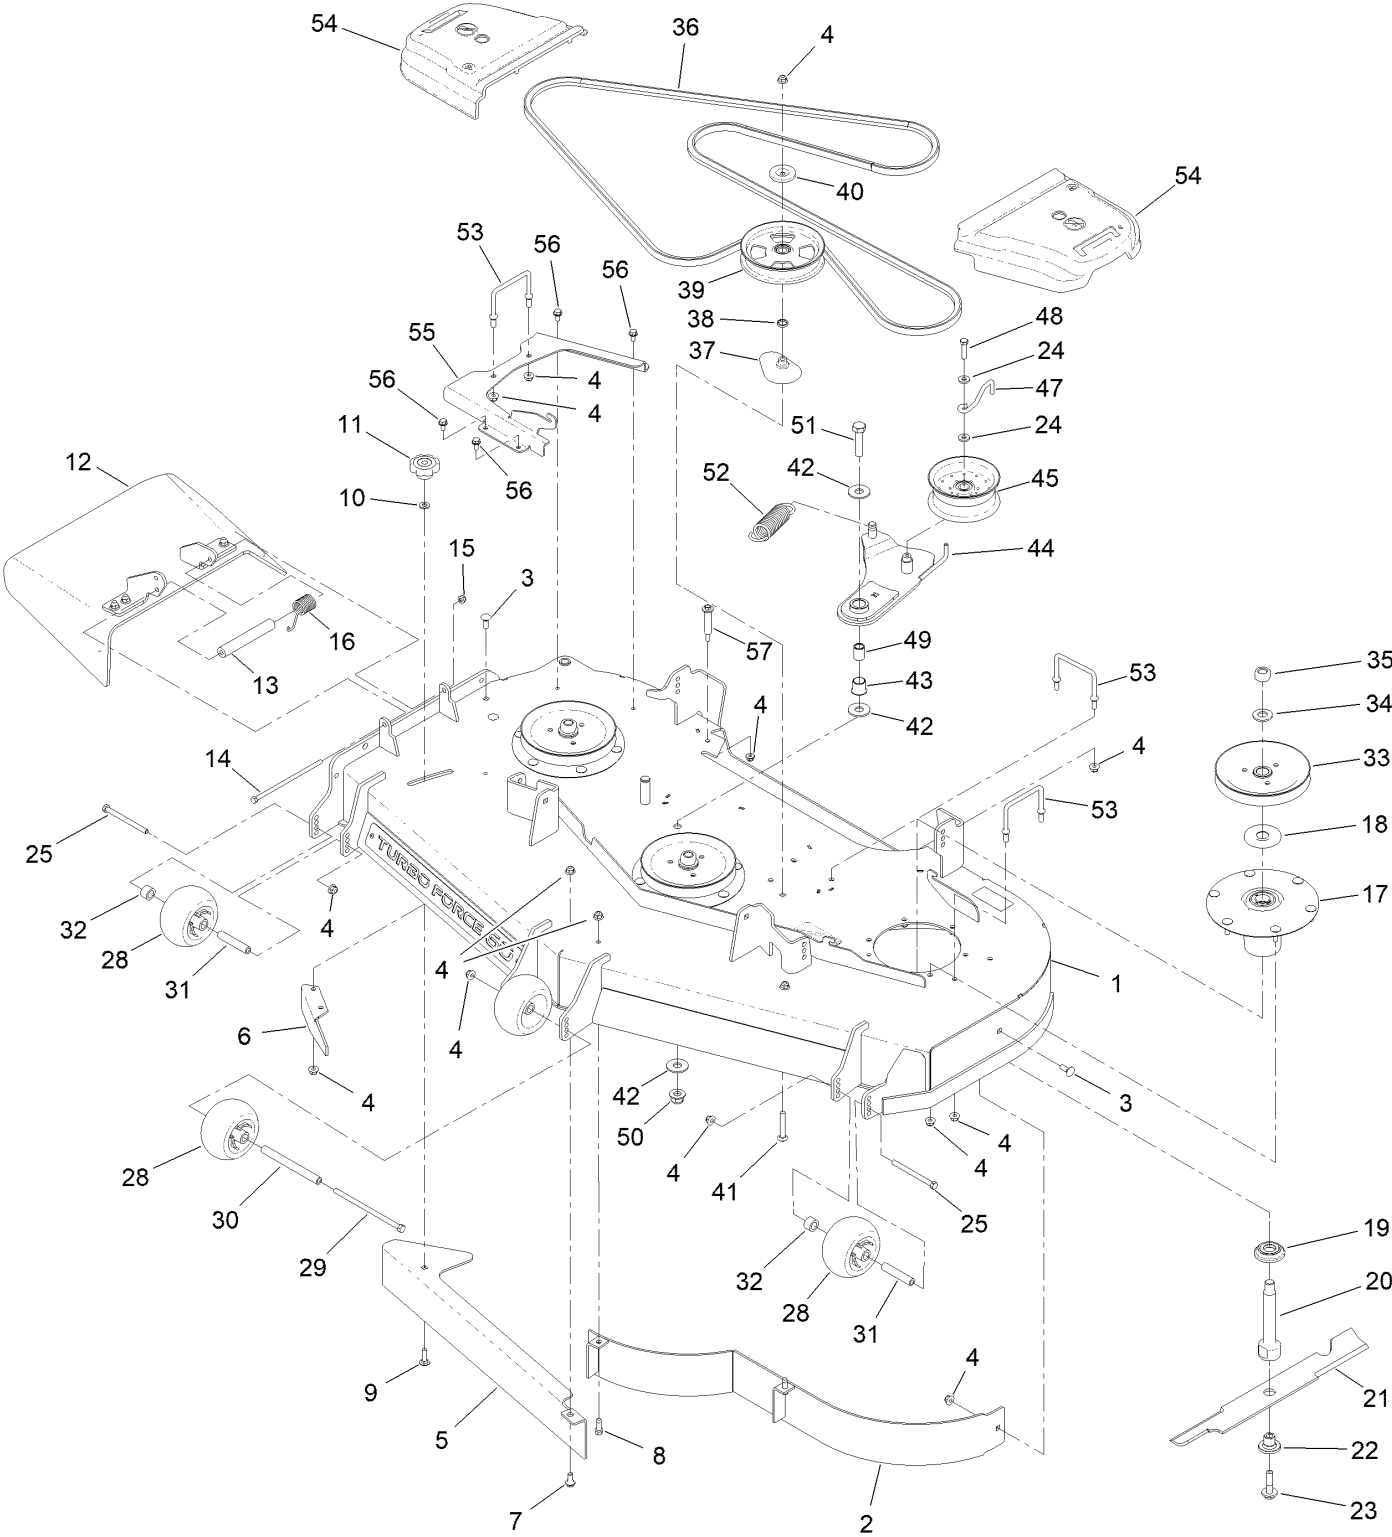

60 Inch Deck Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-1617	1	60 Deck ASM W/Decals	31	133-2129	2	Tube-Shafting
2	117-9701-01	1	Baffle ASM	32	133-2128	2	Tube-Spacer
3	3231-2	3	Bolt-CARR	33	138-6059	3	Sheave-Drive, Blade
4	104-8301	35	Nut-HF, NI	34	103-2802	3	Washer
5	139-8106-01	1	Plate-Baffle, Formed [red]	35	116-7306	3	Nut-Hex
6	106-3216-01	1	Baffle-Discharge	36	145-3481	1	Gs 48 Deck Belt-V
7	94-7582	1	Bolt-Shoulder	37	109-2872	1	Spacer-Pulley
8	92-1624	2	Screw-HWH Thd Form	38	107-4293	1	Spacer-Plate, BBC
9	119-4162	1	Screw-CARR	39	136-5404	1	Pulley-Idler, Flat
10	100-4852	1	Washer-Hardened	40	132-5153	1	Shield-Dust
11	109-1092	1	Knob	41	3231-44	1	Screw-CARR
12	144-2635	1	Rubber Deflector ASM	42	104-9216	3	Washer-Hardened
13	105-4622	1	Spacer	43	135-1248	1	Bushing, Igus
14	322-50	1	Screw-HH	44	147-7796-03	1	Idler Arm ASM [black]
15	104-8300	1	Nut-HF, NI	45	116-4666	1	Idler-Pulley, Flat
16	108-4052	1	Spring-Torsion	47	147-4644	1	Wireform Belt Guide,Idler, Top
17	137-9780	3	Spindle ASM	48	323-8	1	Screw-HH
18	103-1330	3	Guard-Bearing, Top	49	163-3438	1	Bushing-Idler Pivot
19	137-9784	3	Guard-Bottom	50	133-9681	1	Nut-HF
20	138-6045	3	Shaft-Spindle	51	327-9	1	Screw-HH
21	140-1240	3	Blade	52	108-5412	1	Spring-Extension
22	137-9787	3	Bushing-Hex	53	109-6982	3	Wireform-Cover
23	109-9220	3	Screw-Sems	54	109-6936	2	Cover-Belt, LH
24	138-7207	2	Spacer-Hub, Blower	55	147-4552-01	1	Platform, Belt Cover 60
25	323-23	2	Screw-HH	56	32144-70	4	Screw-HWHTF
28	1-603299	4	Roller-Scalp, Anti	57	112-3977	1	Bolt-Shoulder
29	108-5388	1	Screw-HH				
30	98-5967	1	Spacer-Wheel				

Deck Assembly No. 145-1617

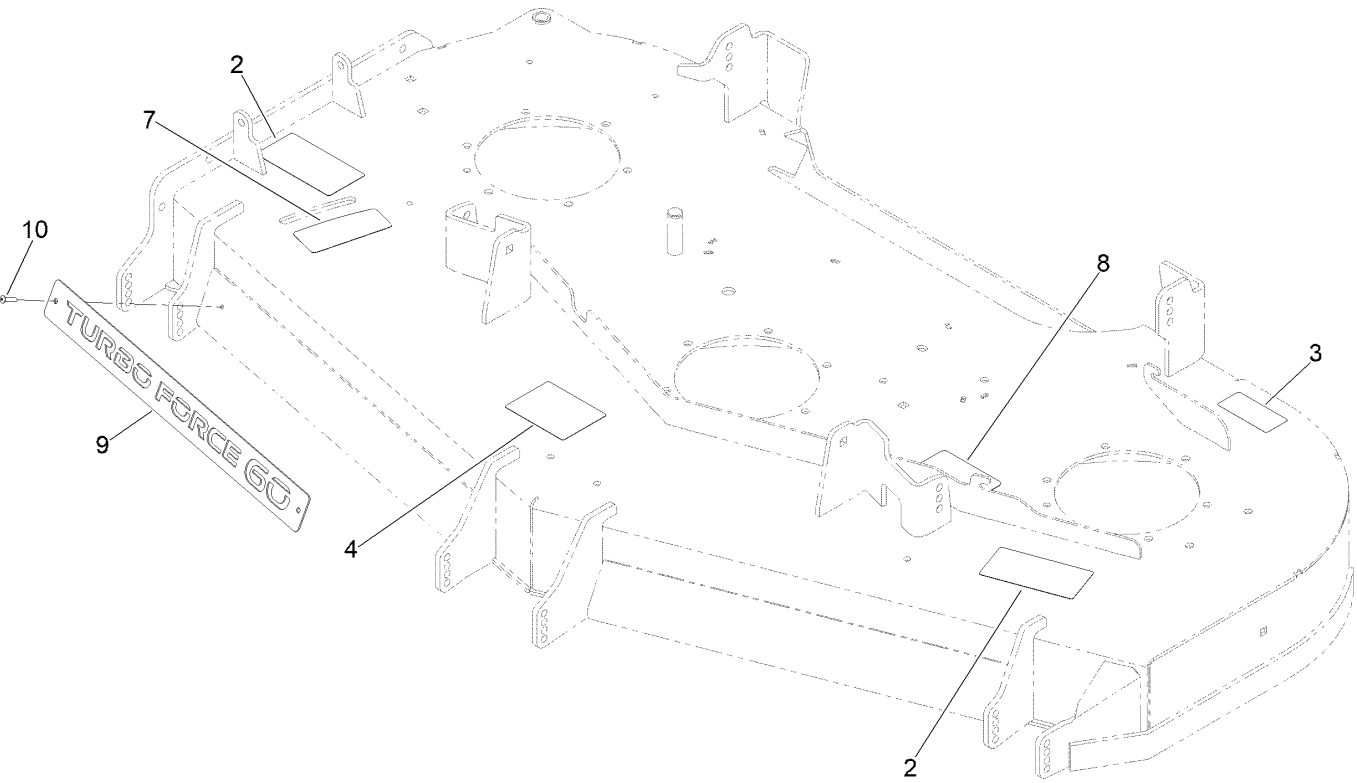


Deck Assembly No. 145-1617 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	161-6620	2	Decal-Danger, Deck
3	116-8283	1	Decal-Torque, Bolt
4	127-0326	1	Decal-Scalp, Anti
7	138-1147	1	Decal - Baffle Adjustment

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
8	147-4766	1	Decal-Belt Routing
9	147-4631-03	1	Plate-Turbo Force
10	130-8451	2	Rivet-Trifold

Deflector Assembly No. 144-2635

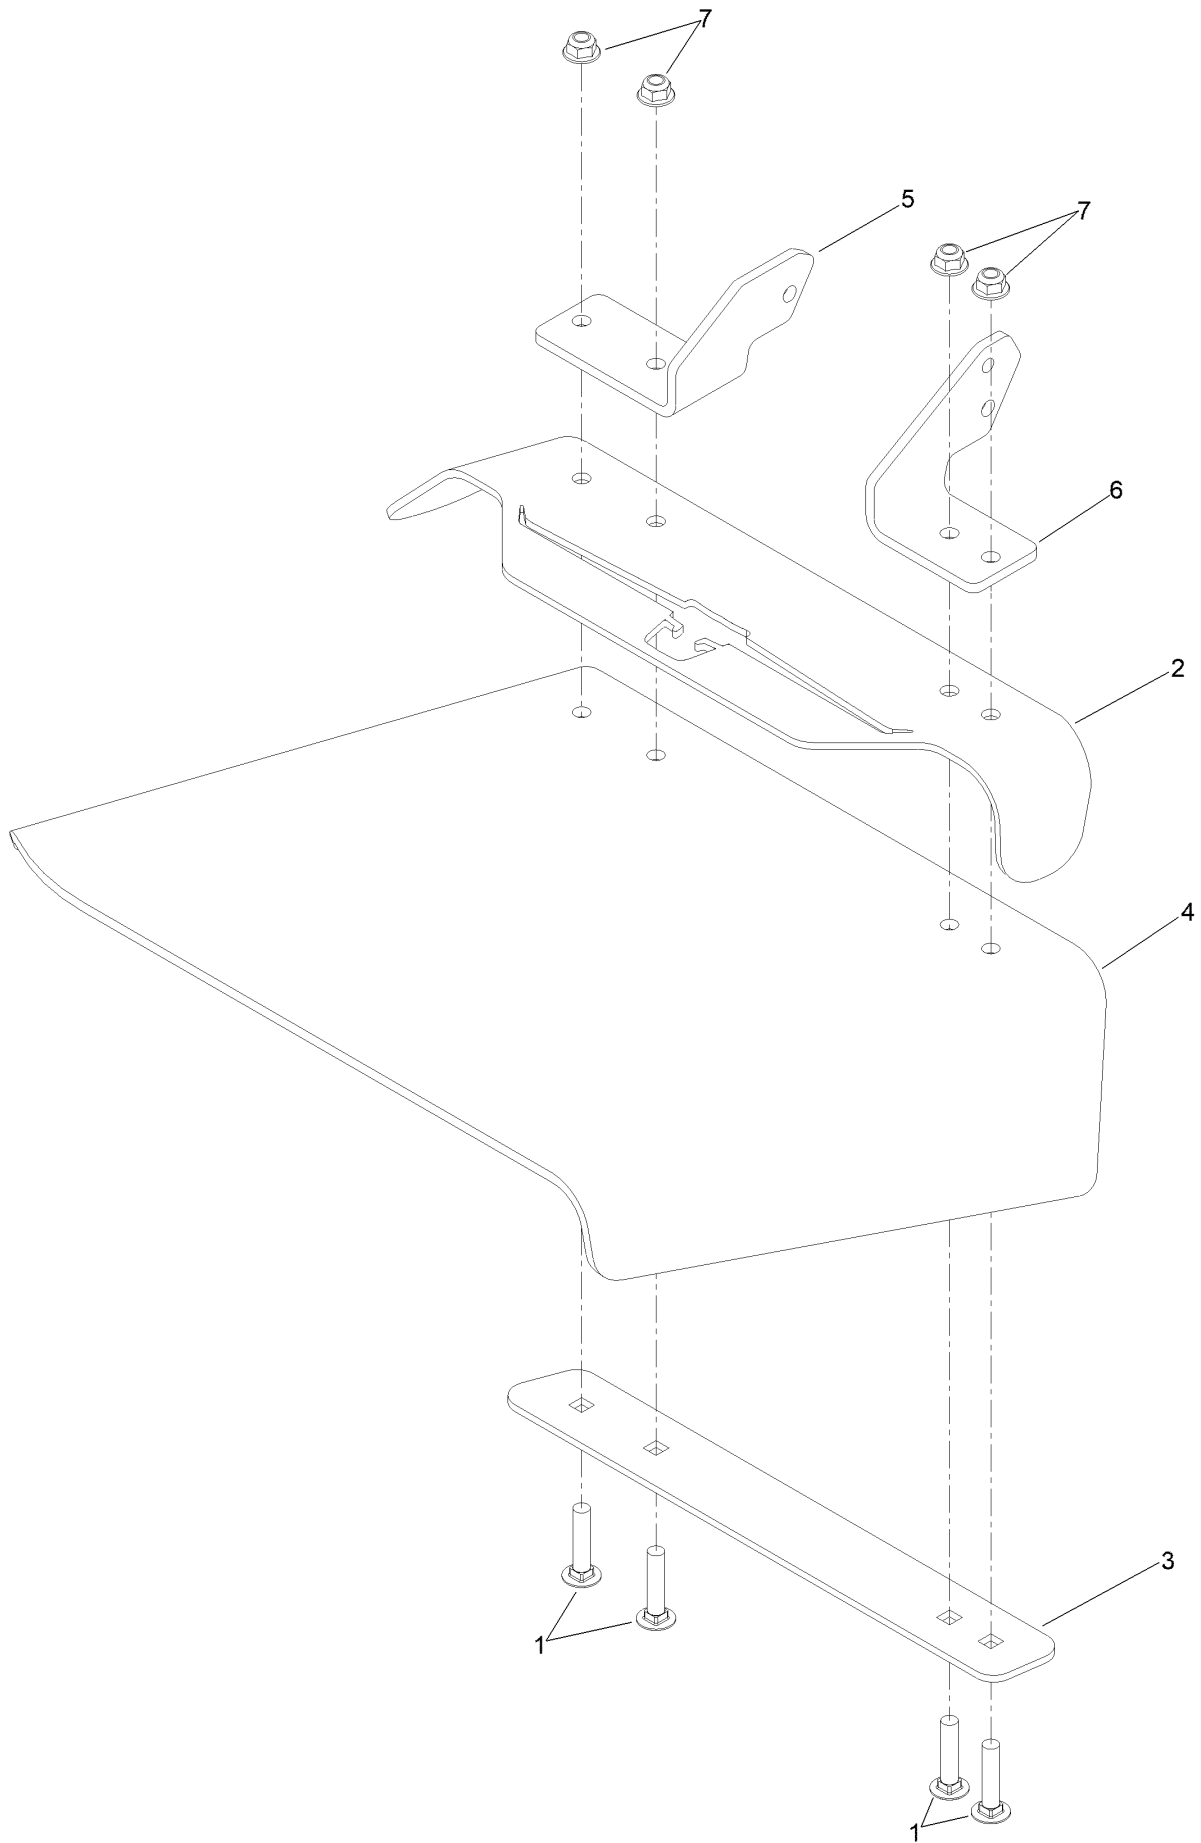


Deflector Assembly No. 144-2635 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	3231-5	4	Screw-CARR
2	161-9815-01	1	Plate-Deflector Mount
3	106-3248-03	1	Strap-Discharge
4	161-3464	1	Deflector-Deck, Rubber

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	108-4059-01	1	Plate-Hinge, Rear
6	106-3253-01	1	Plate-Hinge, Front
7	104-8301	4	Nut-HF, NI


Spindle Assembly No. 137-9780

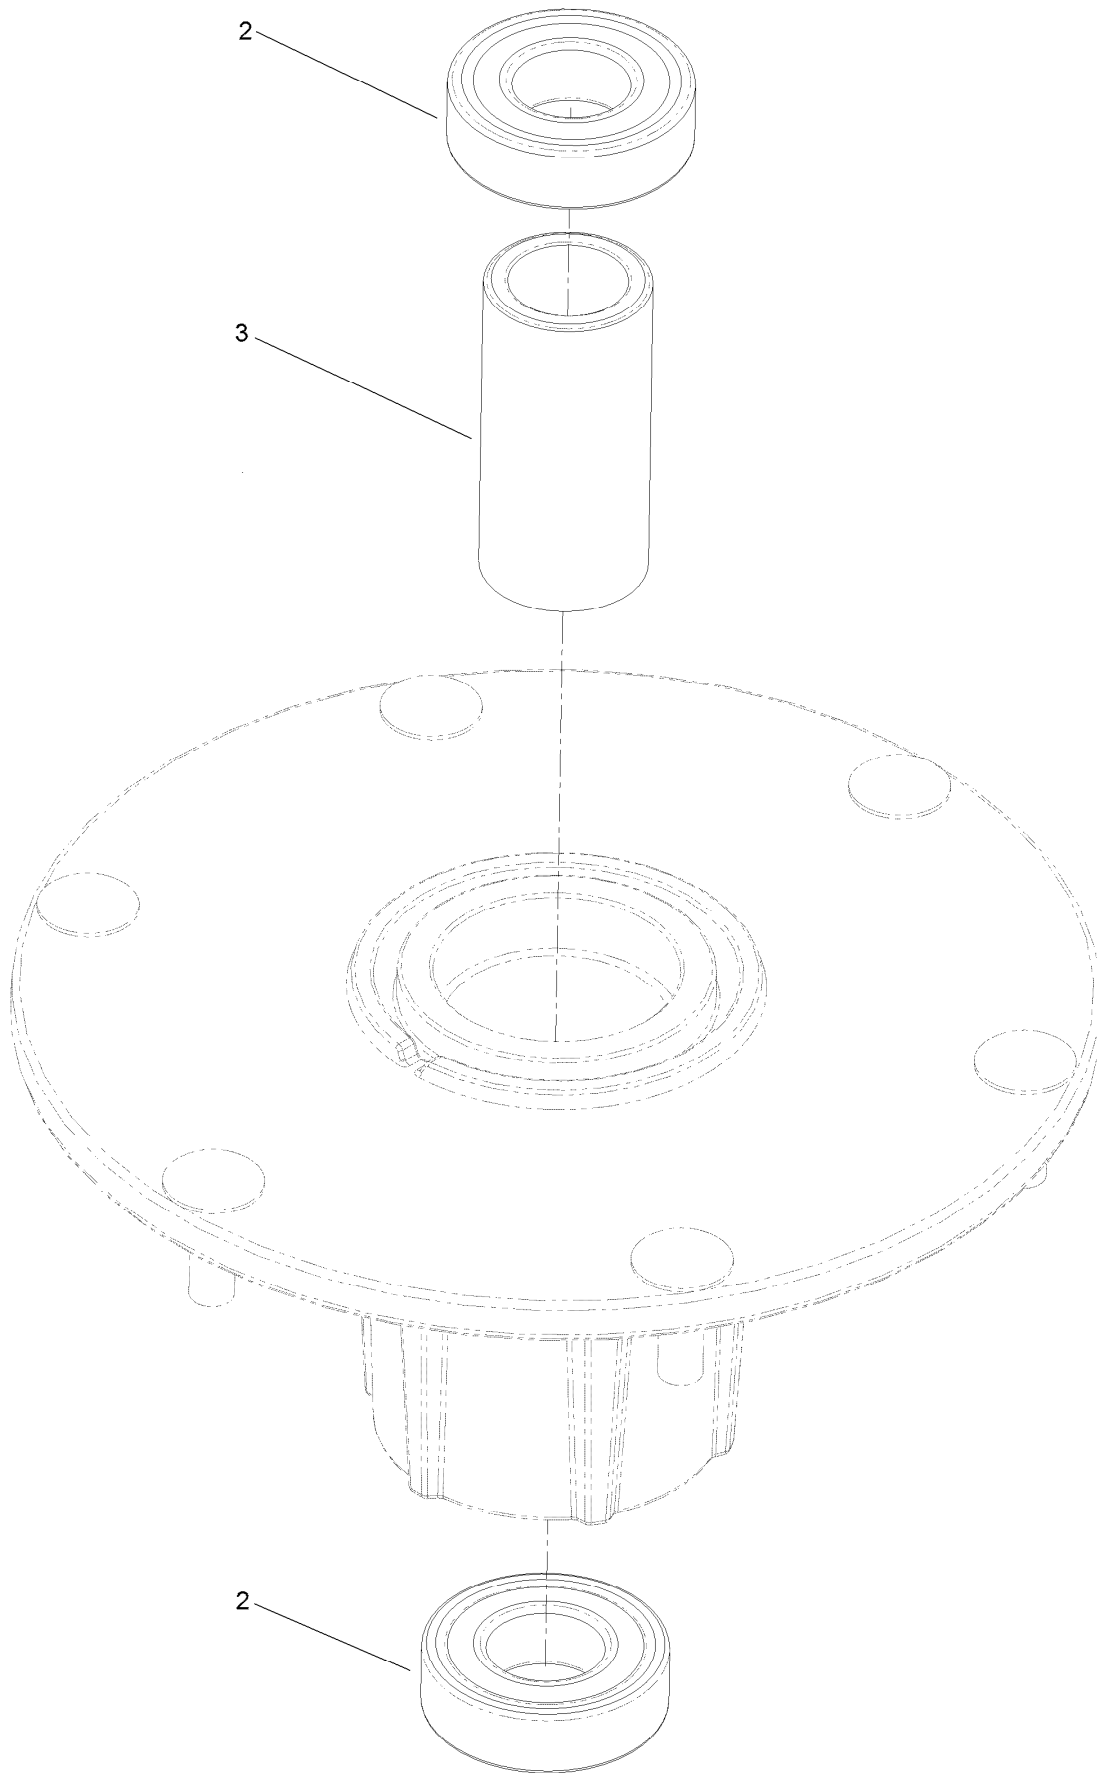

Spindle Assembly No. 137-9780 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	116-0720	2	Bearing-Ball
3	138-6042	1	Spacer-Bearing

Ground Drive Assembly

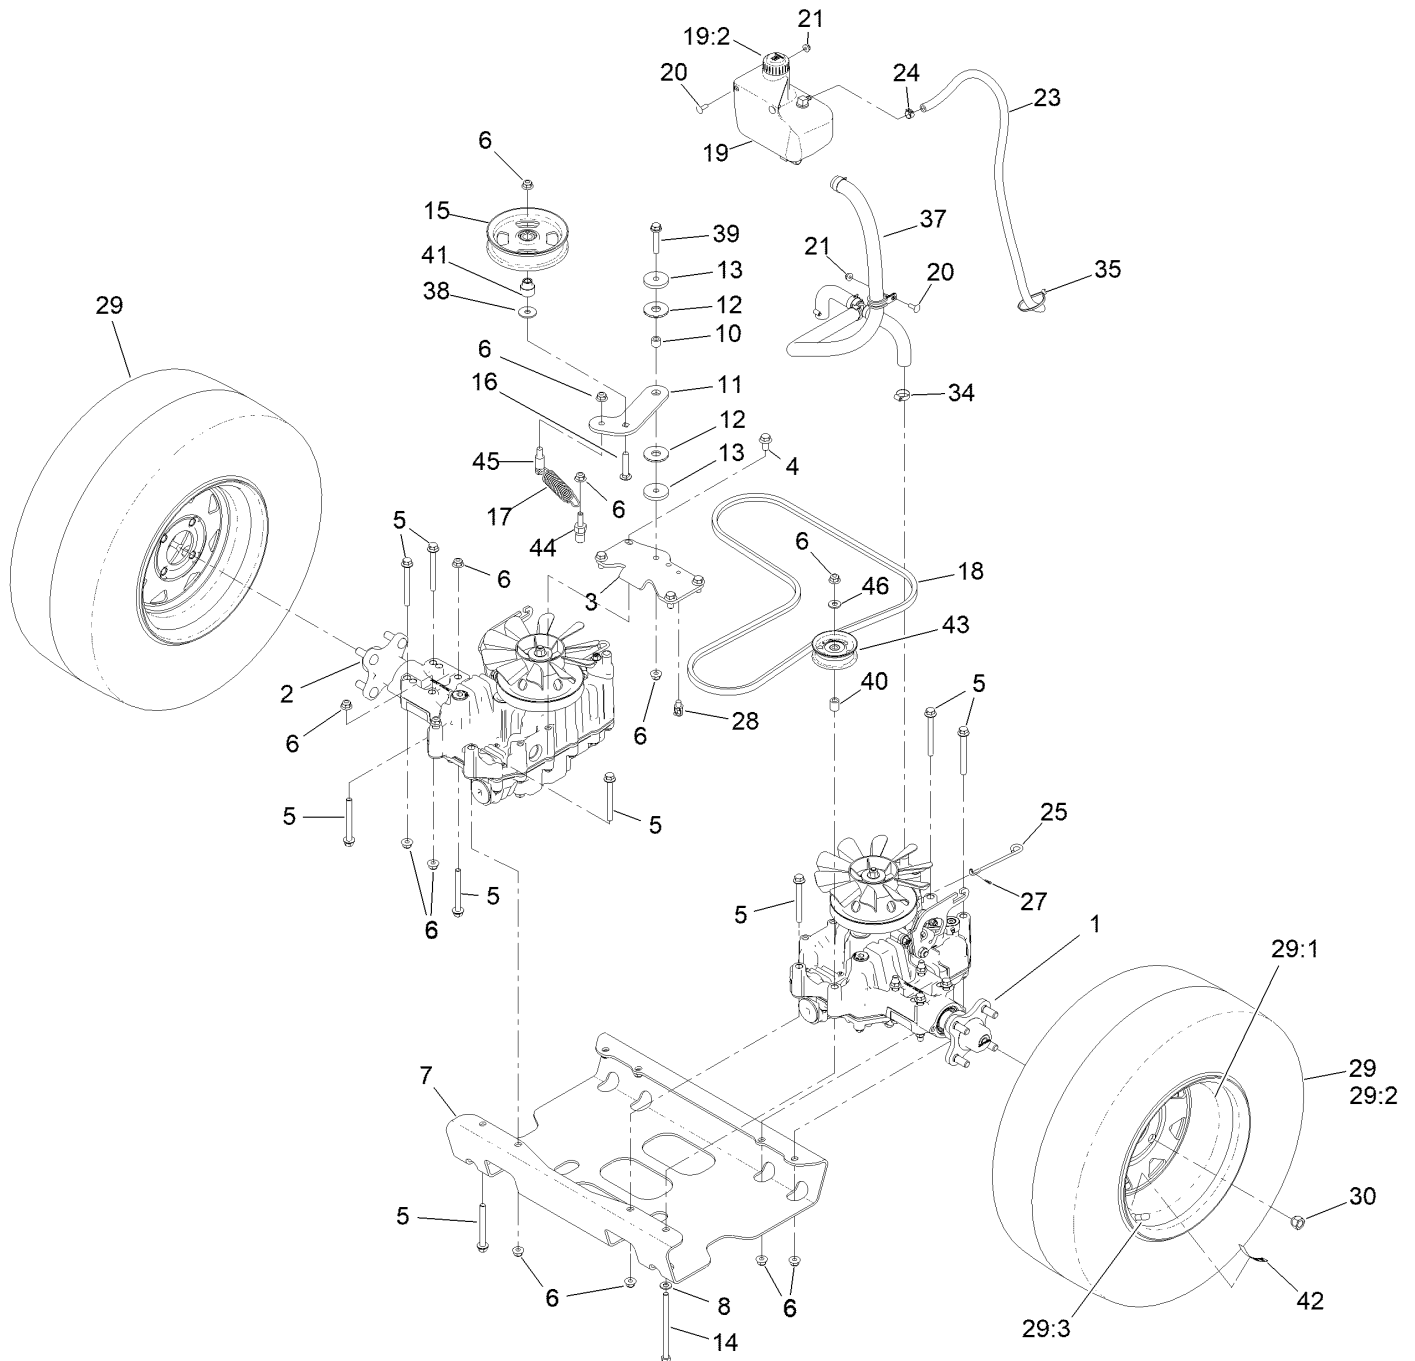


Ground Drive Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	161-1323	1	LH Transmisson (Tzt13Sy)	24	92-2379	1	Clamp-Hose
2	161-9807	1	RH Transmisson (Tzt13Sx)	25	145-6176	2	Rod-Bypass
3	147-4756-05	1	Plate, Support, Transaxle	27	108-2992	2	Pin-Hair
4	161-1312	4	Screw-Bshs	28	161-1316	2	Clip, Fir Tree
5	116-4701	15	Screw-HHF	29	144-6607	2	Wheel And Tire ASM
6	104-8301	19	Nut-HF, NI	29:1	144-6606	1	Wheel
7	147-4636-05	1	Plate-Hydro	29:2	140-7975	1	Tire
8	3256-24	1	Washer-Plain	29:3	232-27	1	Stem-Valve
10	1-413088	1	Bushing-Lever, Lift	30	139-2564	8	Nut-Lug
11	147-4757	1	Plate-Arm, Idler	34	2412-129	2	Clamp-Hose
12	114-0463	2	Washer-Friction, Composite	35	3290-378	1	Tie-Cable
13	110-9981	2	Washer-Plain	37		1	HYD Hose ASM ■
14	323-25	1	Screw-HH	38	93-8806	1	Washer-Hardened
15	136-5405	1	Pulley-Idler, Flat	39	108-3742	1	Screw-HHF
16	3231-6	1	Screw-CARR	40	115-1451	1	Spacer-Wheel
17	138-1104	1	Spring-Extension	41	138-7227	1	Bushing-Idler
18	145-5186	1	Belt-V	42	126-2055	2	Decal-Torque, Wheel Hub Lug
19	132-1135	1	Tank-HYD	43	130-8362	1	Pulley-Idler, Flat
19:2	133-8677	1	Cap-Vented	44	132-4724	1	Pin-Anchor, Spring
19:5	140-9463	1	Strainer-Neck, Removable ●	45	110-3841	1	Anchor-Spring
20	3229-25	3	Screw-CARR	46	109-6658	1	Nut-Flange, NI
21	104-7201	3	Nut-HF, NI				
23	109-0309	1	Hose-Fuel				

● Not illustrated

■ Not serviced separately

LH Transmission Assembly No. 161-1323

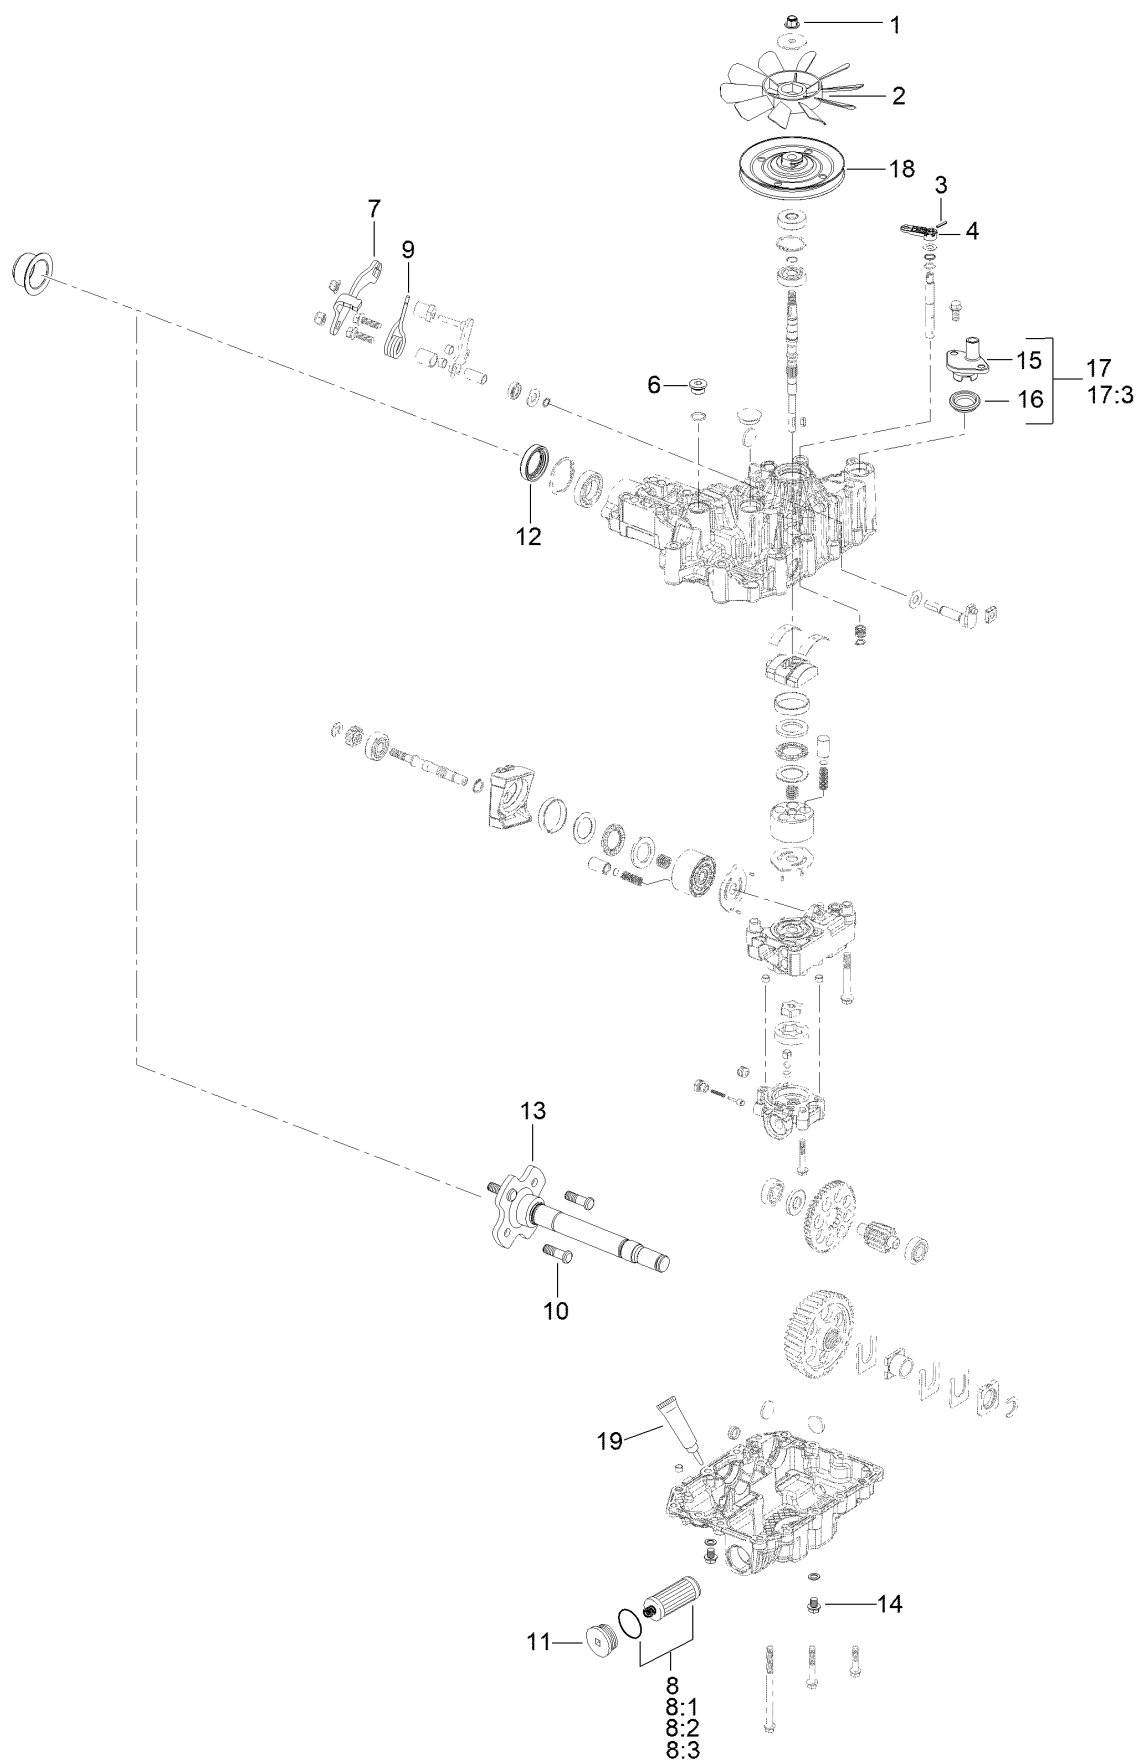

LH Transmission Assembly No. 161-1323 (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-4737	1	Nut-Lock
2	132-4738	1	Fan
3	104-3265	1	Pin
4	132-4700	1	Lever-Bypass
5	161-7919	1	Brake Kit, Y ●
6	132-4735	1	Cap-Oil
7	161-7914	1	Lever-Control, LH
8	144-3842	1	2 Transmission Filter Kit
8:1		2	Filter (1A6370-26450) ■
8:2	136-5410	2	O-Ring
8:3		4	Sealing Washer ●■
9	137-4109	1	Spring-Torsion
10	137-9509	4	Stud-Wheel
11	138-4613	1	Cap-Oil Filter
12	139-5587	1	Seal-Axle, Ua
13	163-7372	1	Axle ASM Kit

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
13:1		2	Thrust Washer ●■
13:2		1	Oil Seal Ua18Lip ●■
13:3		1	Collar 25.4 ●■
13:4		1	Flange ASM, Axle ●■
13:5		1	Bearing 6006 ●■
13:6		1	Ring 20 ●■
13:7		1	Bushing ●■
13:8		1	Ring 55 ●■
14	139-5589	2	Drain Bolt
15	139-5590	1	Expansion Fitting
16	139-5591	1	Grommet Seal, Expansion Fitting
17	139-7871	1	Expansion Fitting - W/ Seal
17:3		1	M8*20 Flange Bolt ■
18	161-7916	1	Pulley
19	163-4197	1	Seal Kit, Hydro ●

● Not illustrated

■ Not serviced separately

RH Transmission Assembly No. 161-9807

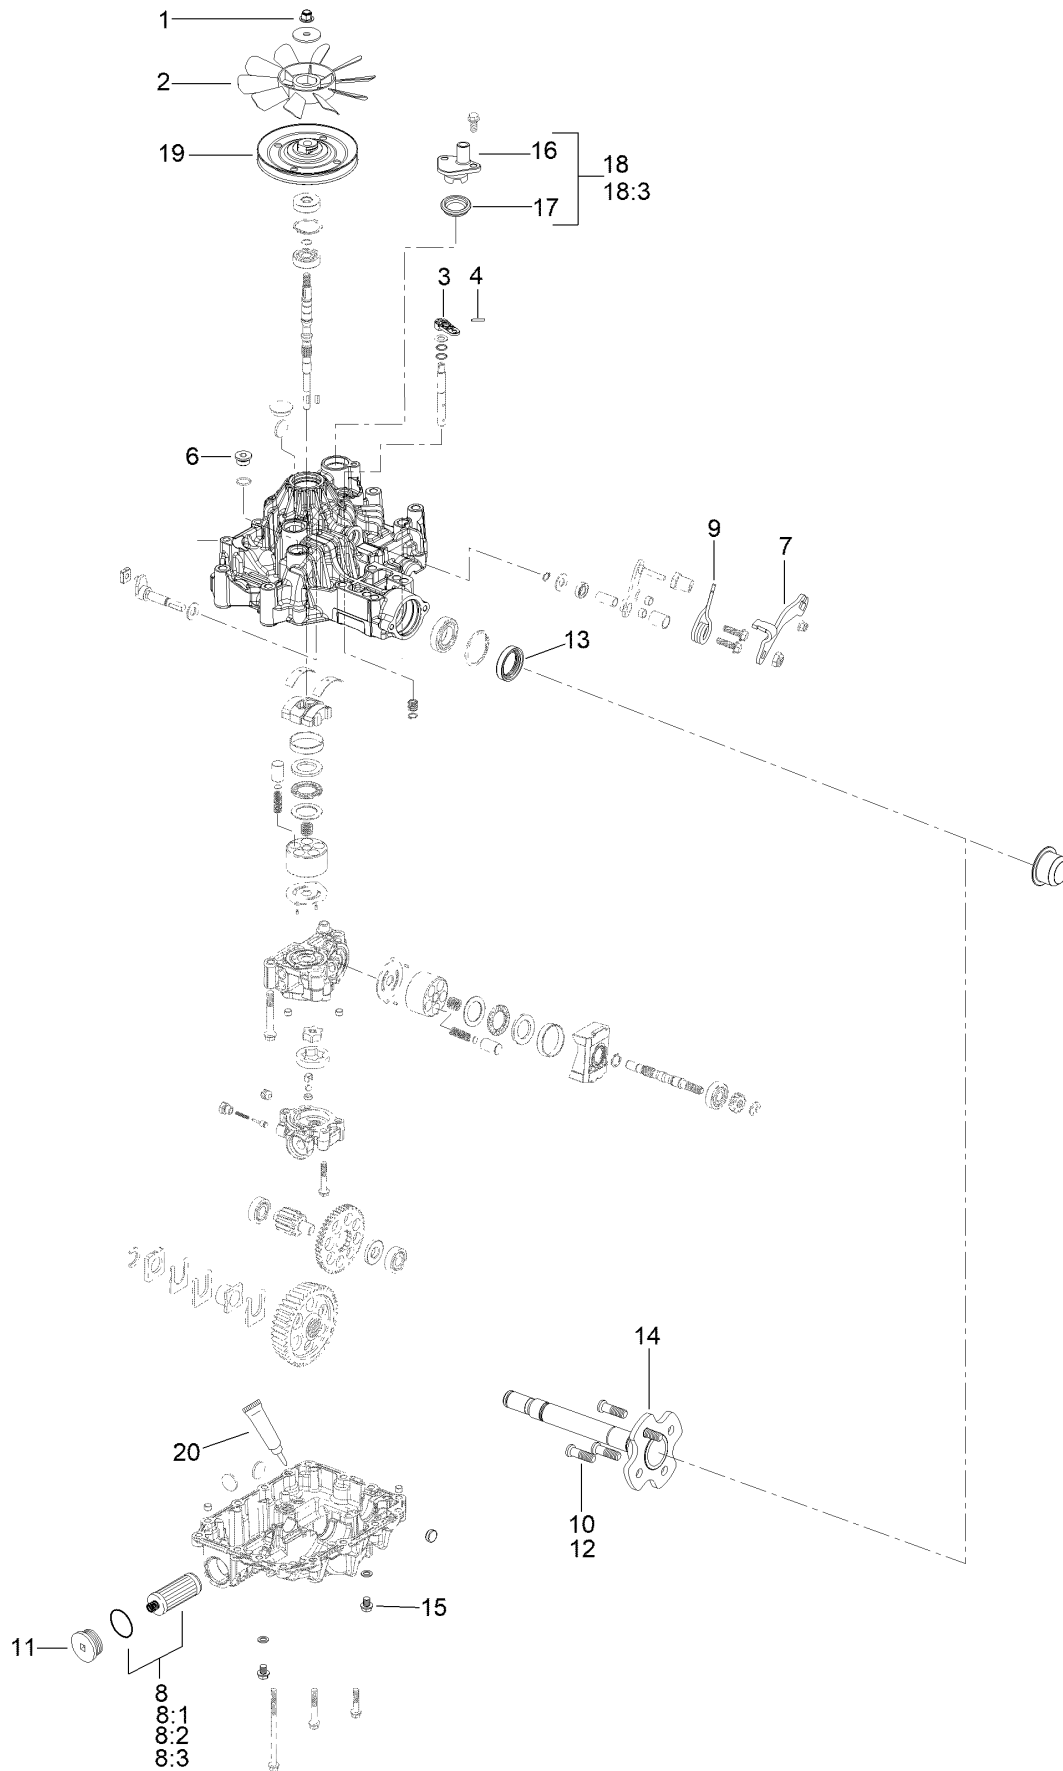

RH Transmission Assembly No. 161-9807 (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-4737	1	Nut-Lock
2	132-4738	1	Fan
3	104-3265	1	Pin
4	132-4700	1	Lever-Bypass
5	161-7917	1	Brake Kit, X ●
6	132-4735	1	Cap-Oil
7	161-7915	1	Lever-Control, RH
8	144-3842	1	2 Transmission Filter Kit
8:1		2	Filter (1A6370-26450) ■
8:2	136-5410	2	O-Ring
8:3		4	Sealing Washer ●■
9	137-4109	1	Spring-Torsion
10	137-9509	1	Stud-Wheel
11	138-4613	1	Cap-Oil Filter
12	137-9509	4	Stud-Wheel
13	139-5587	1	Seal-Axle, Ua
14	163-7372	1	Axle ASM Kit

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
14:1		2	Thrust Washer ●■
14:2		1	Oil Seal Ua18Lip ●■
14:3		1	Collar 25.4 ●■
14:4		1	Flange ASM, Axle ●■
14:5		1	Bearing 6006 ●■
14:6		1	Ring 20 ●■
14:7		1	Bushing ●■
14:8		1	Ring 55 ●■
15	139-5589	2	Drain Bolt
16	139-5590	1	Expansion Fitting
17	139-5591	1	Grommet Seal, Expansion Fitting
18	139-7871	1	Expansion Fitting - W/ Seal
18:3		1	M8*20 Flange Bolt ■
19	161-7916	1	Pulley
20	163-4197	1	Seal Kit, Hydro ●

● Not illustrated

■ Not serviced separately

Hydraulic Hose Assembly

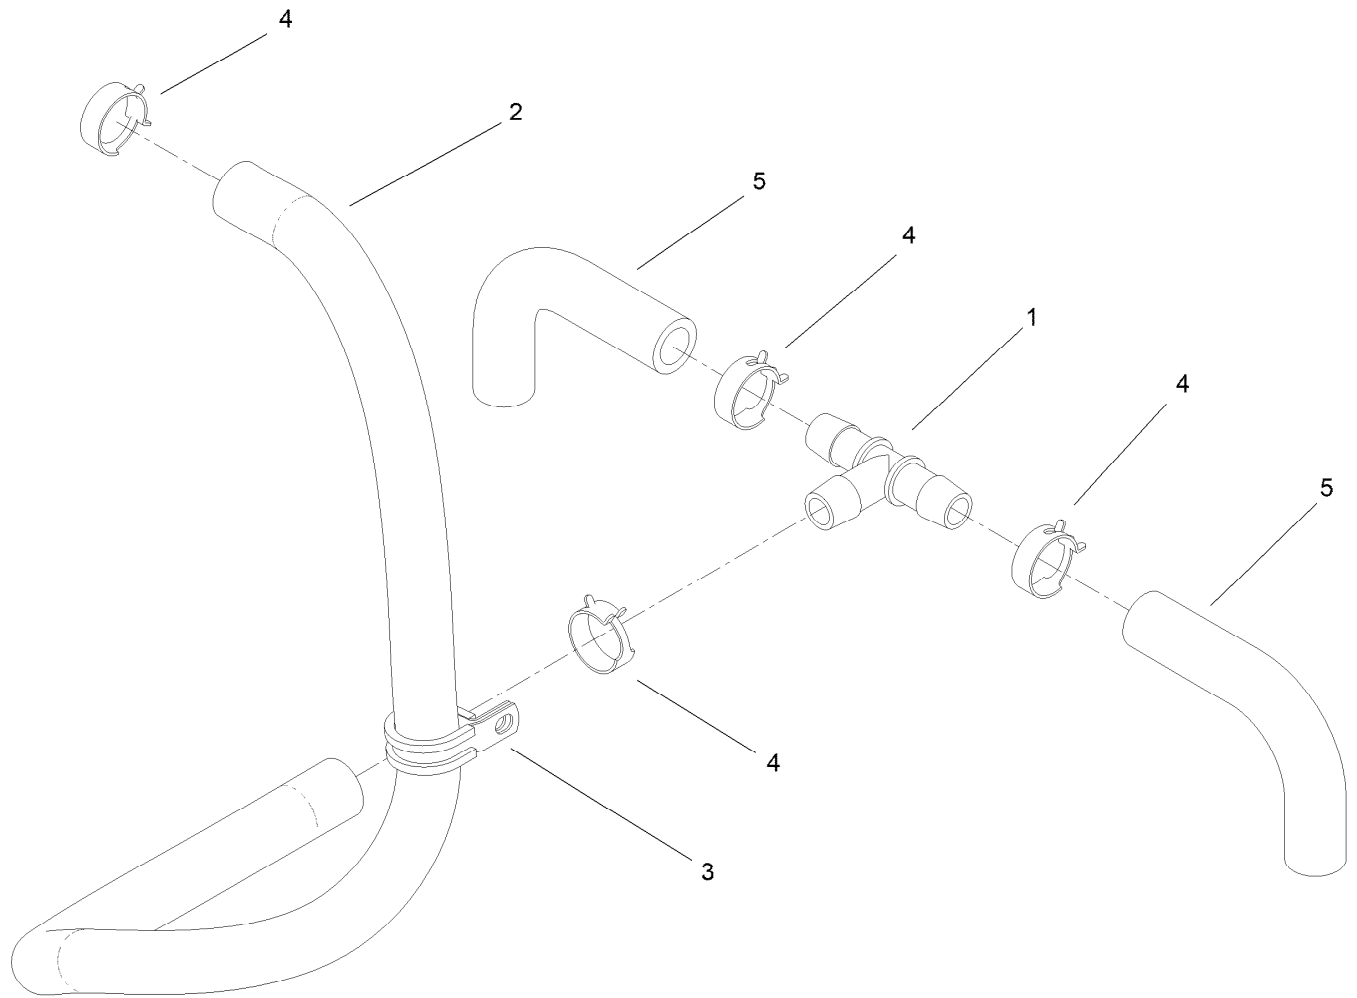


Hydraulic Hose Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	139-4055	1	Fitting Tee
2	145-1644	1	Hydraulic Hose
3	147-0201	1	R-Clamp

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	145-3599	4	Hose Clamp
5	145-6177	2	Hose-Hydraulic


Motion Control Assembly

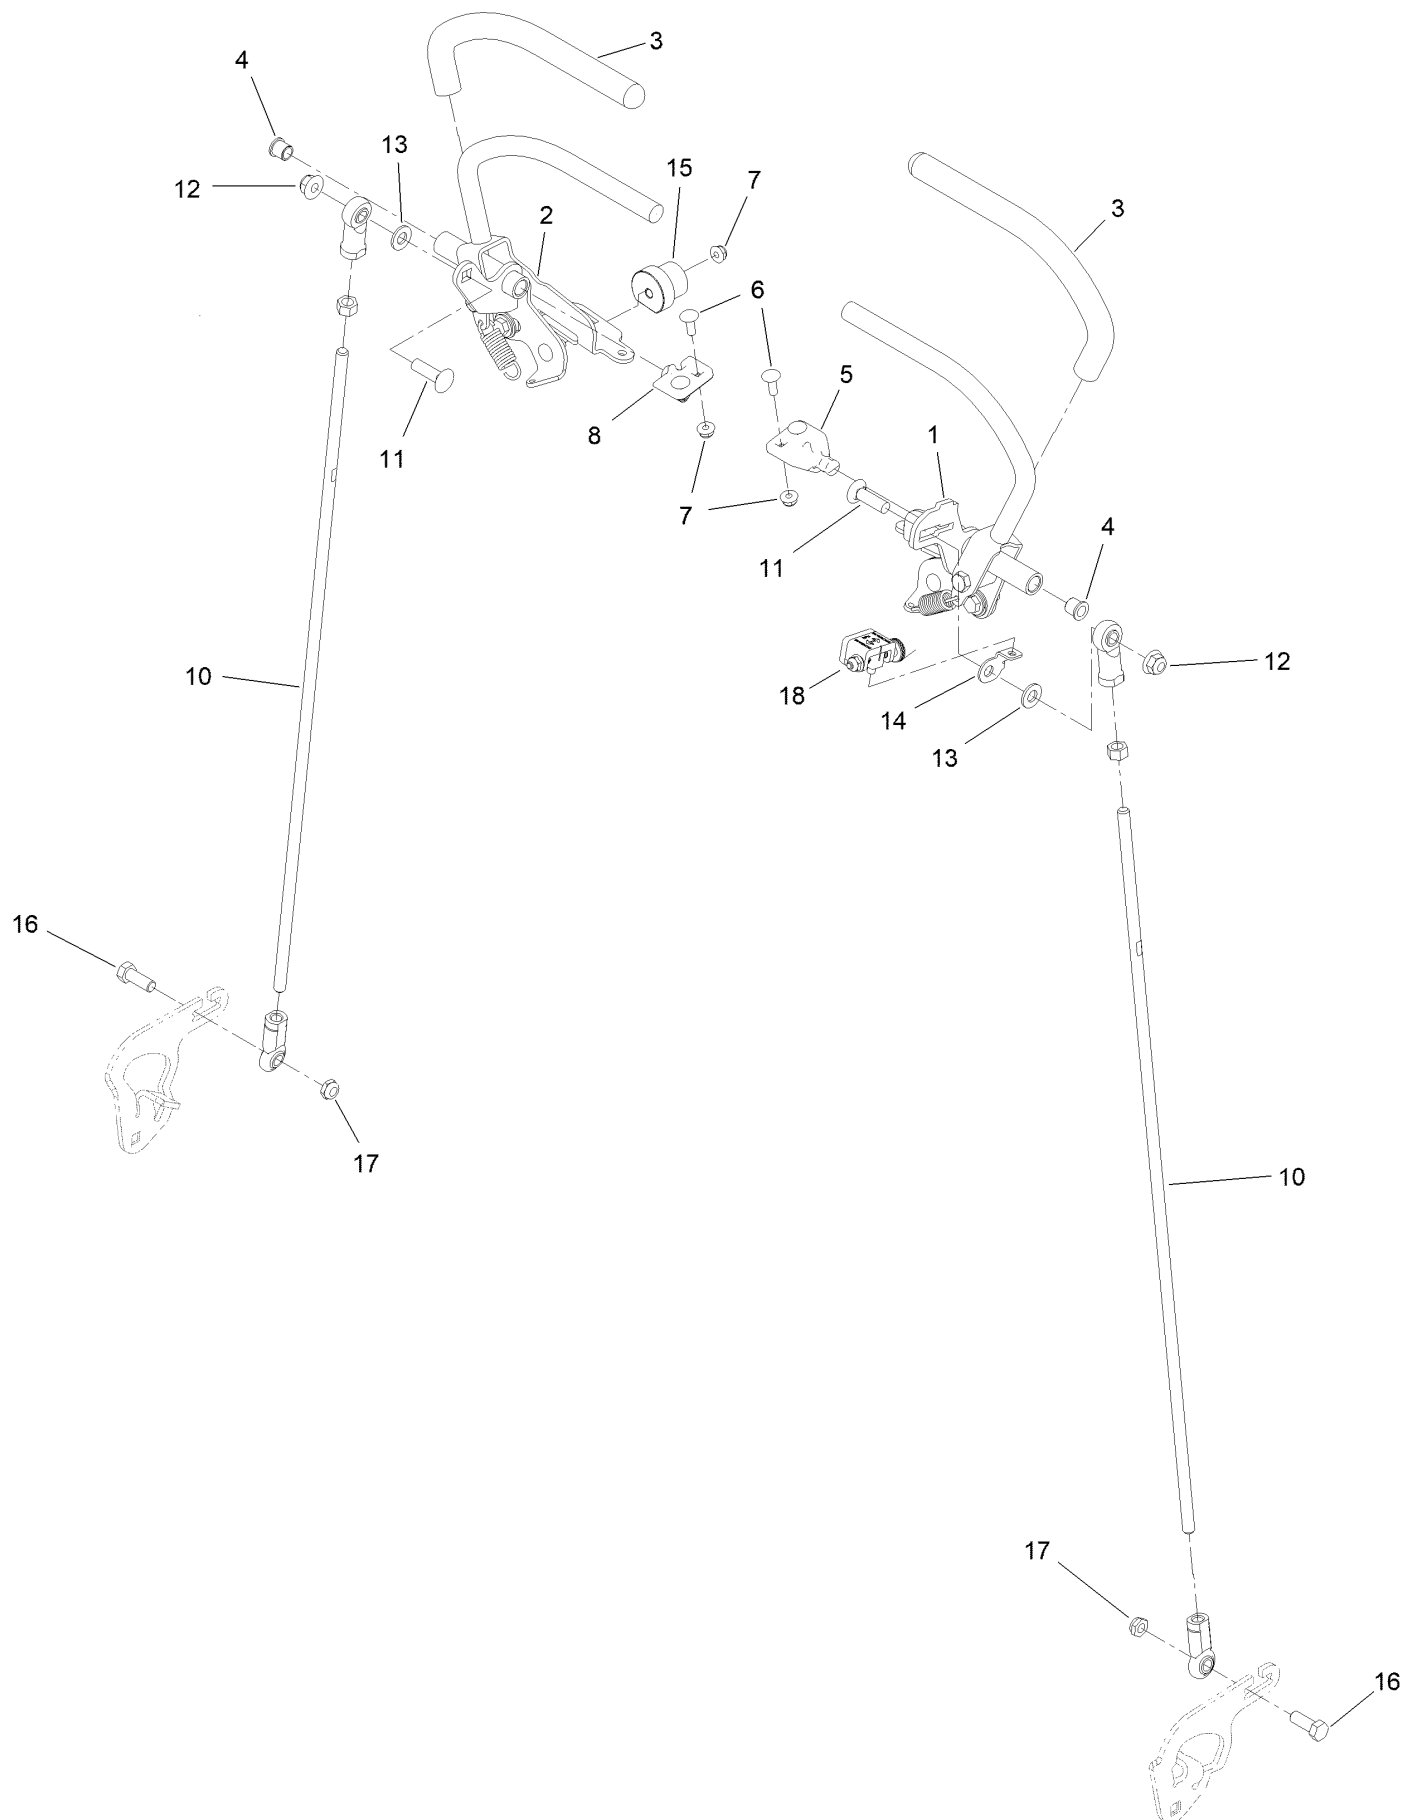

Motion Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-5157	1	LH Control Handle ASM	11	3231-28	2	Screw-CARR
2	132-5158	1	RH Control Handle ASM	12	104-8301	2	Nut-HF, NI
3	119-0222	2	Grip	13	3256-24	2	Washer-Plain
4	103-9928	2	Bearing	14	132-7538	1	Bracket-Adjustment, Speed
5	120-3288	1	Tab-Pivot, LH	15	126-1499	2	Cam
6	3229-1	4	Screw-CARR	16	323-6	2	Screw-HH
7	104-7201	6	Nut-HF, NI	17	3296-59	2	Nut-Lock, NI
8	120-3287	1	Tab-Pivot, RH	18	132-7595	1	Speed Setting Tool
10	161-2803	2	RH Control Rod ASM				

Control Handle Assembly No. 132-5157


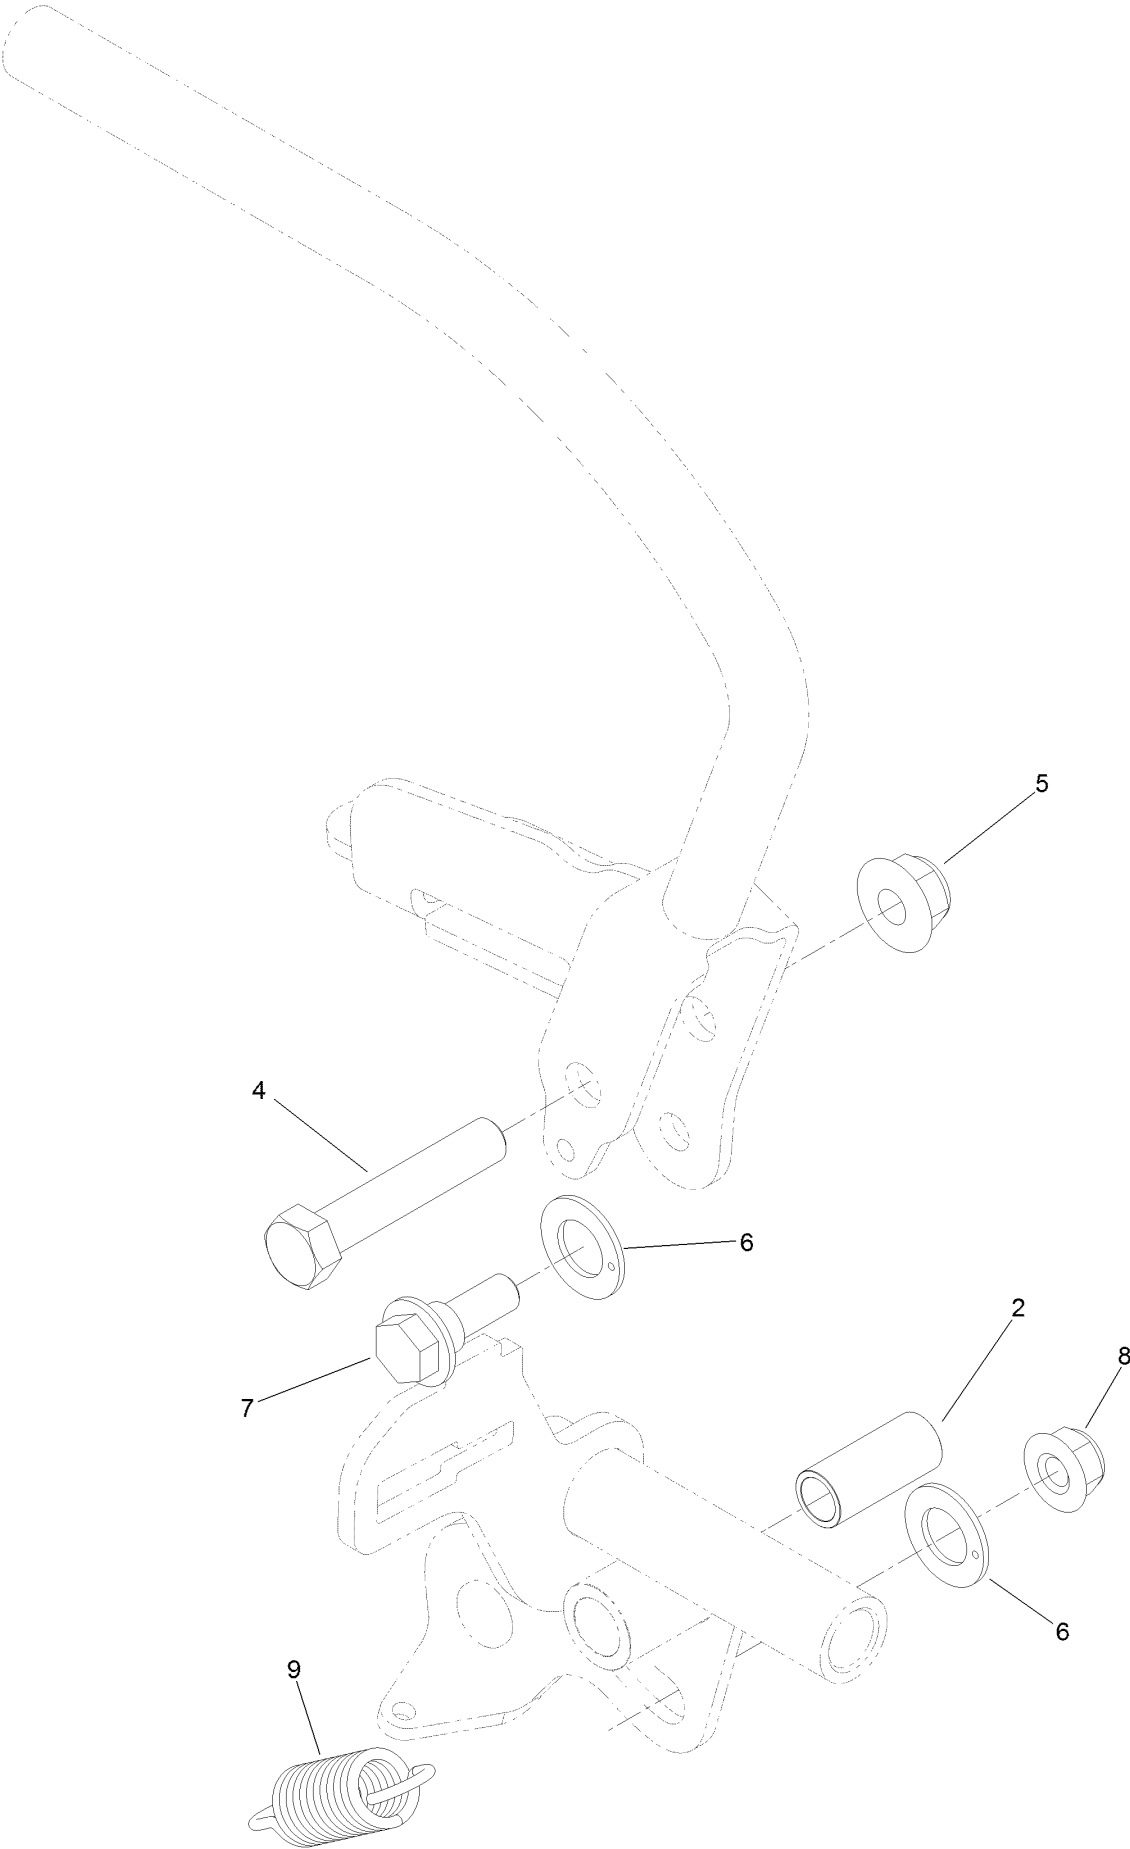


Control Handle Assembly No. 132-5157 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	131-3562	1	Bearing-Sleeve
4	323-10	1	Screw-HH
5	104-8301	1	Nut-HF, NI
6	110-7191	2	Washer-Thrust

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
7	116-2670	1	Screw-Shoulder
8	104-8300	1	Nut-HF, NI
9	132-5146	1	Spring-Extension

Control Handle Assembly No. 132-5158

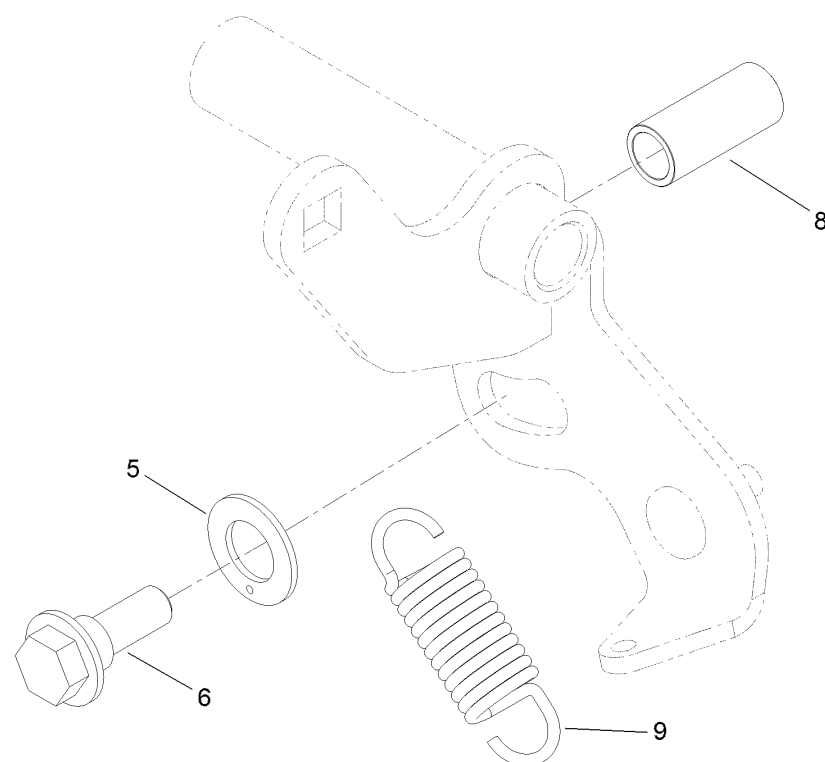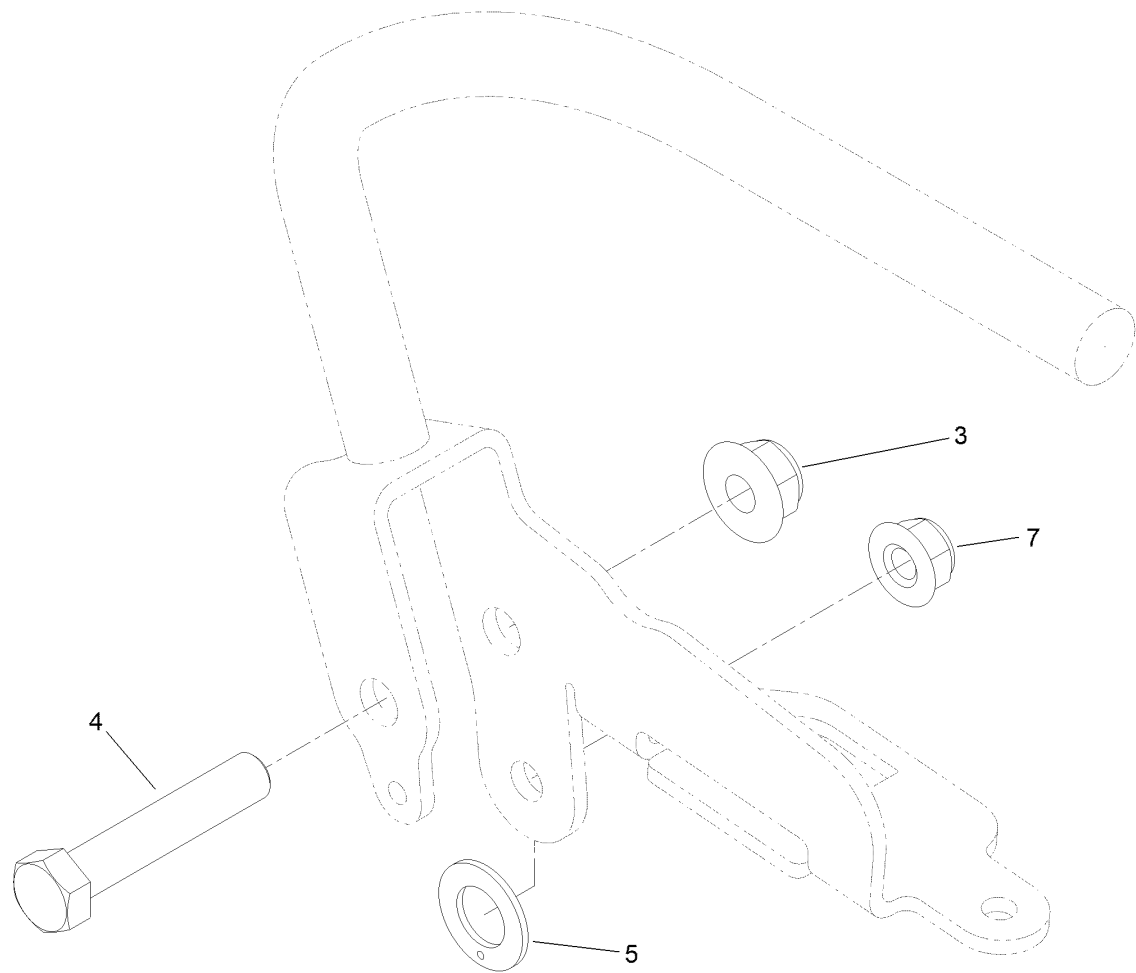


Control Handle Assembly No. 132-5158 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	104-8301	1	Nut-HF, NI
4	323-10	1	Screw-HH
5	110-7191	2	Washer-Thrust
6	116-2670	1	Screw-Shoulder

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
7	104-8300	1	Nut-HF, NI
8	131-3562	1	Bearing-Sleeve
9	132-5146	1	Spring-Extension


Parking Brake Assembly

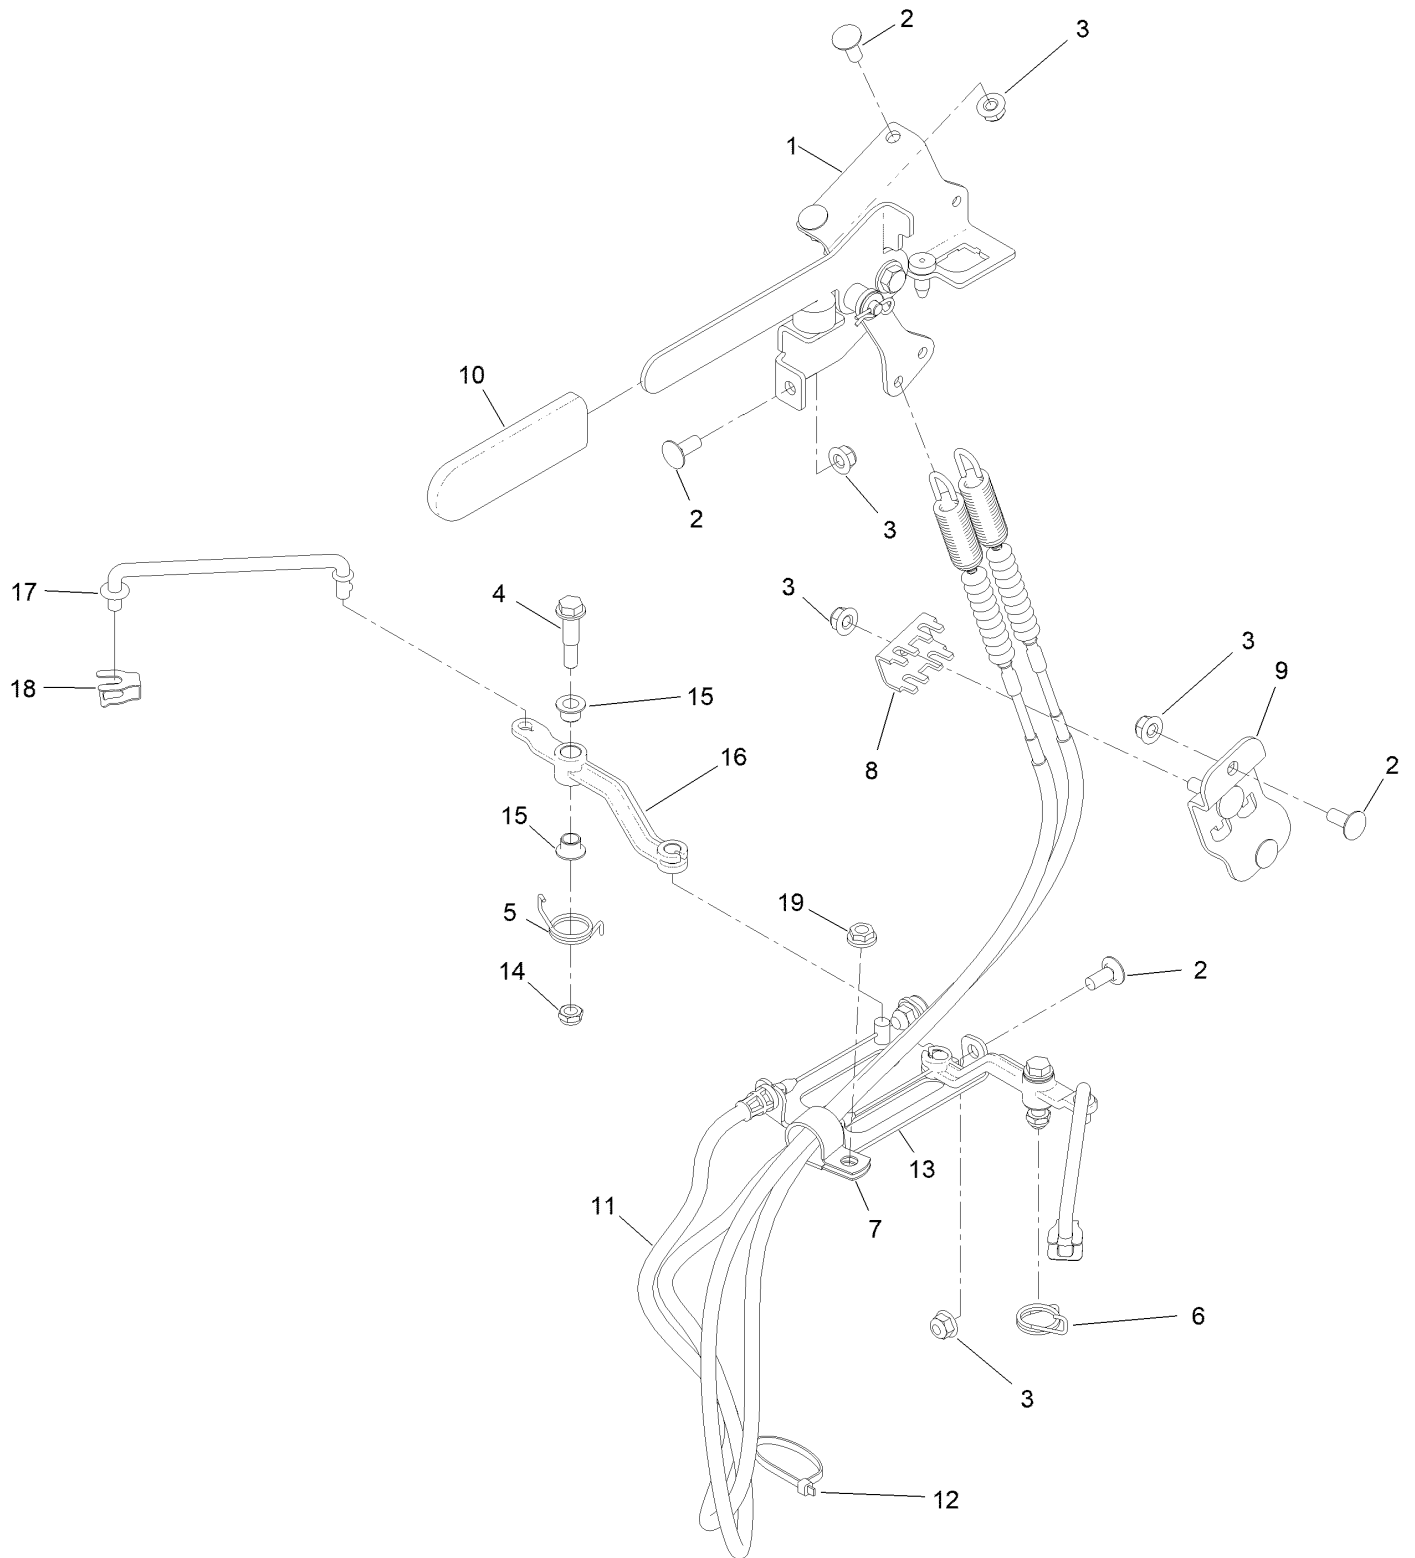

Parking Brake Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-5170	1	Brake Handle ASM	11	145-1643	2	Cable-Brake
2	3230-23	7	Bolt-CARR	12	3290-378	1	Tie-Cable
3	104-8300	8	Nut-HF, NI	13	147-3494	1	Bracket-Cable, Mount
4	116-8607	2	Screw-Shoulder	14	3296-47	2	Nut-Lock,NI
5	139-1508	1	Spring-Torsion	15	137-2374	4	Bushing-Flange
6	139-1538	1	Spring-Torsion	16	147-4801	2	Arm-Brake
7	2412-39	1	Clamp-R	17	147-3484	2	Rod-Brake
8	132-1187	1	Clamp-Cable	18	147-4783	2	Retainer-Rod
9	132-7582	1	Mount-Cable, Brake	19	32128-20	1	Nut-HF
10	1-633268	1	Grip-Lever				


Deck Lift Assembly

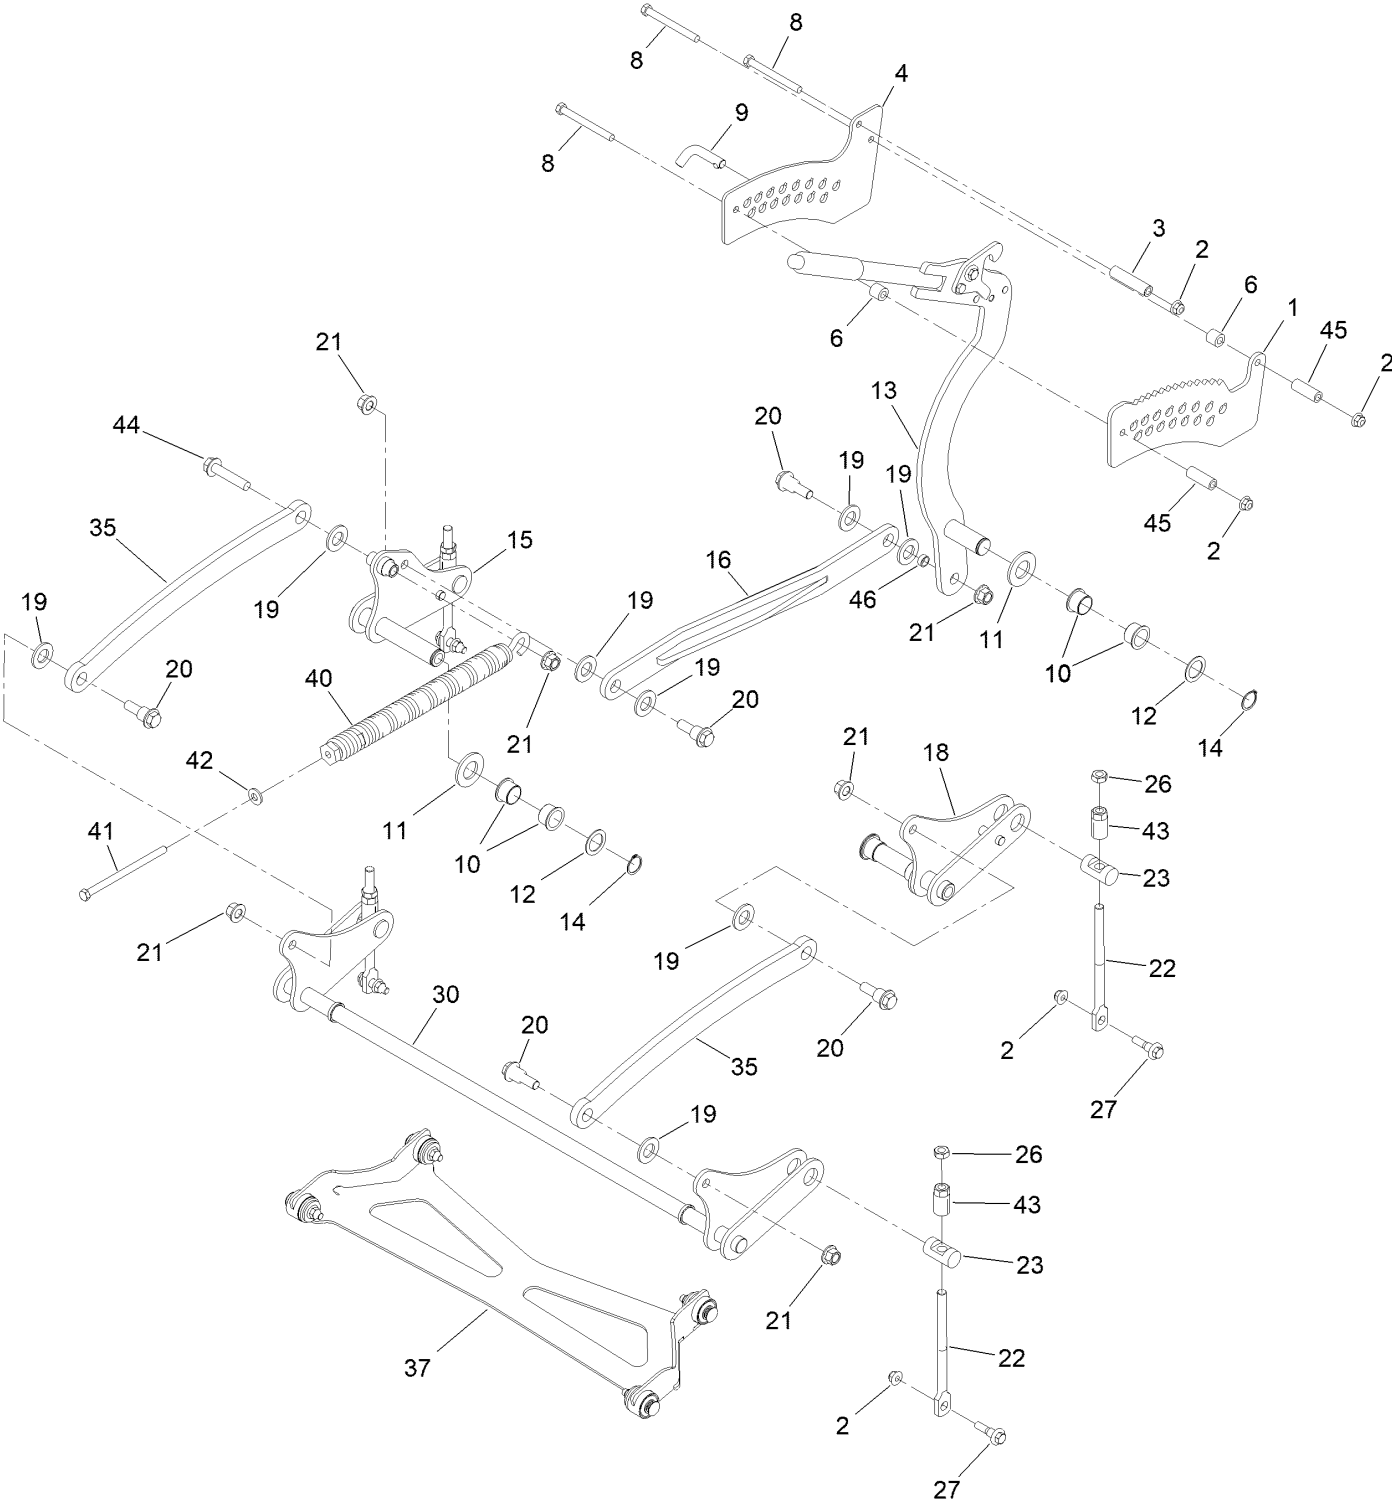

Deck Lift Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	138-4887	1	Plate-HOC, Inner	20	116-0780	5	Screw-Shoulder, HHF
2	104-8301	7	Nut-HF, NI	21	99-5107	6	Nut-HF Nylock
3	138-1111	1	Spacer	22	147-4822	4	Link-Adjuster, Deck Lift
4	132-7581	1	HOC Plate And Decal ASM	23	109-8353	4	Trunnion
6	121-1760	2	Spacer	26	3218-5	4	Nut-Jam
8	116-4701	3	Screw-HHF	27	130-0742	4	Bolt-Shoulder
9	116-5584	1	Pin-HOC	30	163-0503-03	1	Front Cross Shaft ASM [black]
10	127-0369	6	Bushing	35	127-1948-03	2	Link-Lift
11	3256-62	3	Washer-Plain	37	147-4557	1	ASM-Deck Strut W/Bushings
12	10-8110	3	Washer-Thrust	40	116-0886	1	Spring-Extension
13	161-6735	1	HOC Lever ASM	41	323-58	1	Bolt-TAP, HH
14	32151-29	3	Ring-Retaining	42	98-5975	1	Washer-Belleville
15	147-2441-03	1	RH Rear Lift Arm ASM [black]	43	109-7840	4	Adjuster-Lift, Deck
16	147-4810-03	1	HOC Link ASM [black]	44	127-7444	1	Screw-HHF
18	147-2446-03	1	LH Rear Lift Arm ASM [black]	45	95-6448	2	Spacer
19	3256-28	8	Washer-Flat	46	138-2235	1	Spacer


HOC Lever Assembly No. 161-6735

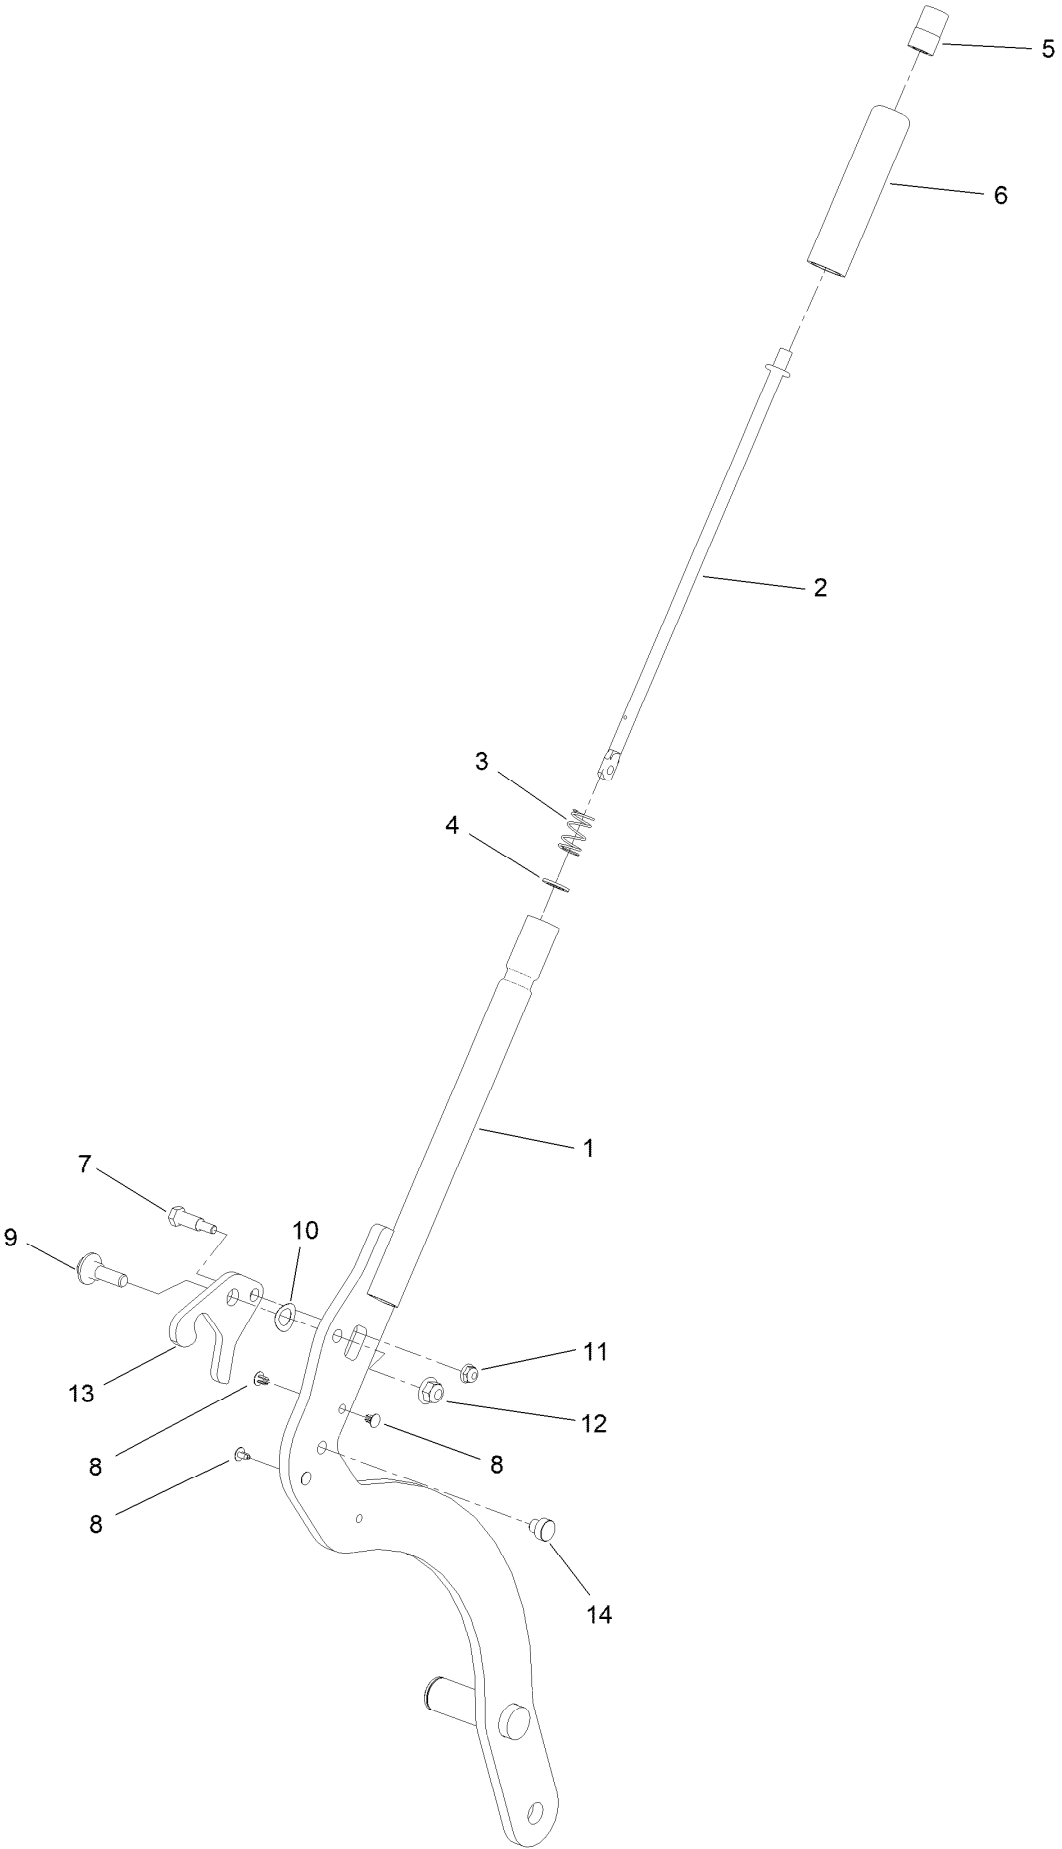

HOC Lever Assembly No. 161-6735 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	161-6736-01	1	Lift Lever ASM [red]	8	103-1363	4	Rivet
2	136-0530	1	Rod-Latch, Release	9	614672	1	Screw-Shoulder, HWH
3	114-8187	1	Spring-Compression	10	110-8982	1	Washer-Spring
4	114-1207	1	Washer-Special	11	104-7201	1	Nut-HF, NI
5	115-2750	1	Knob	12	104-8301	1	Nut-HF, NI
6	115-3592	1	Grip	13	138-4888	1	Latch-HOC
7	119-2309	1	Bolt-Shldr,HH	14	138-4863	1	Plug-Wear

Deck Strut Assembly No. 147-4557

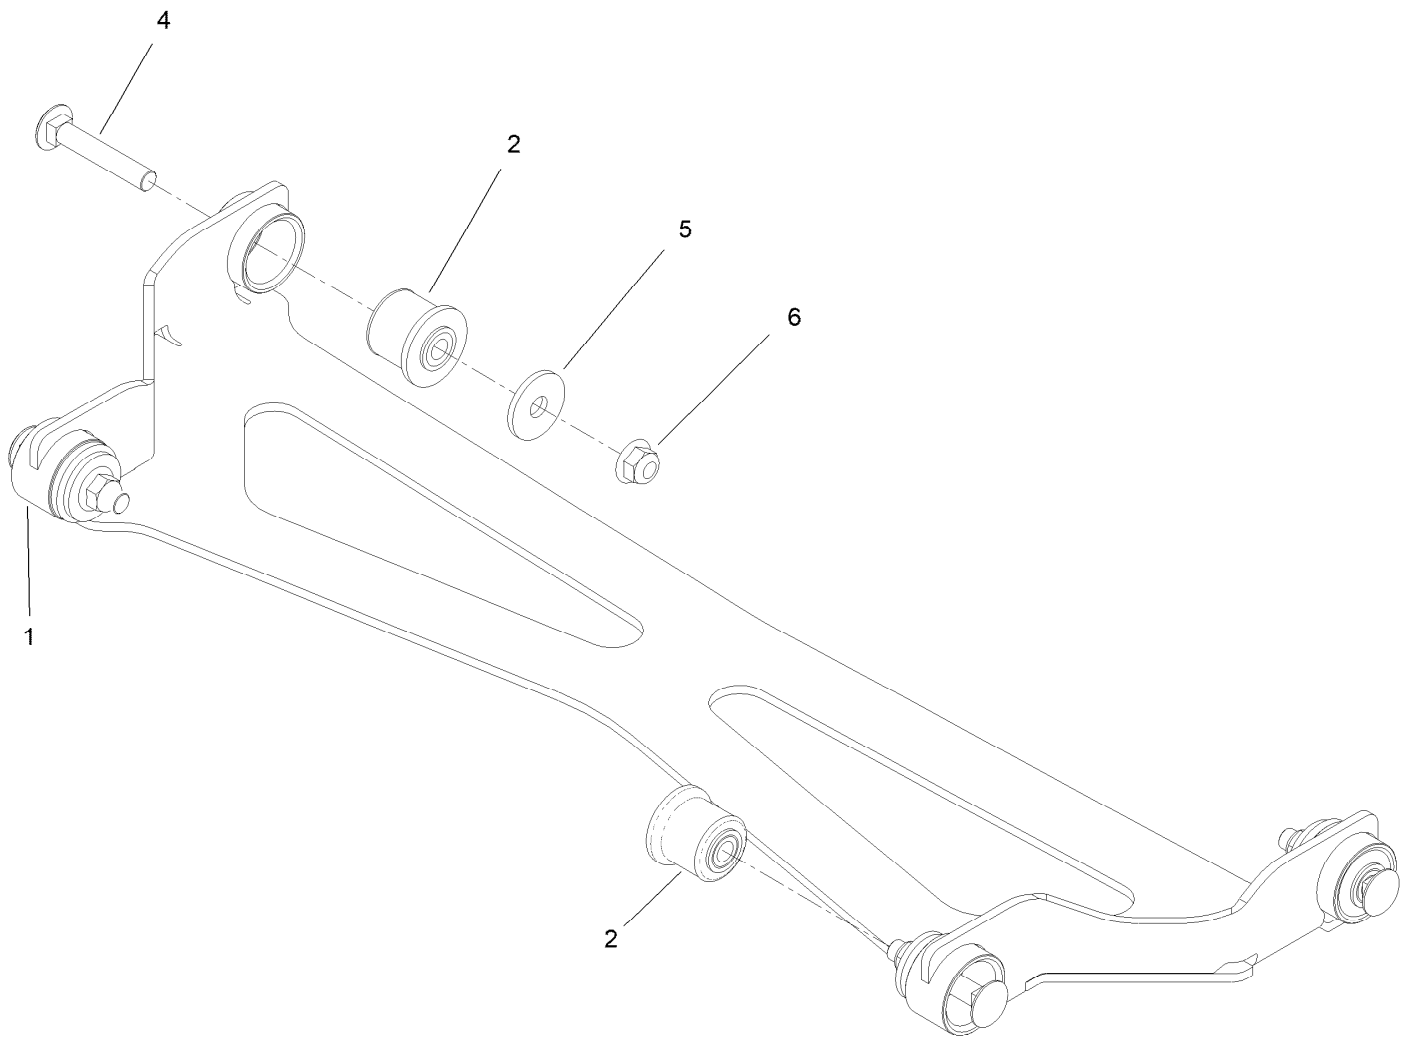


Deck Strut Assembly No. 147-4557 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-4558-03	1	ASM-Deck Strut [black]
2	147-7351	4	Spacer, Bushing ASM
4	3231-7	4	Screw-CARR

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	2844	4	Washer
6	104-8301	4	Nut-HF, NI


Frame Assembly

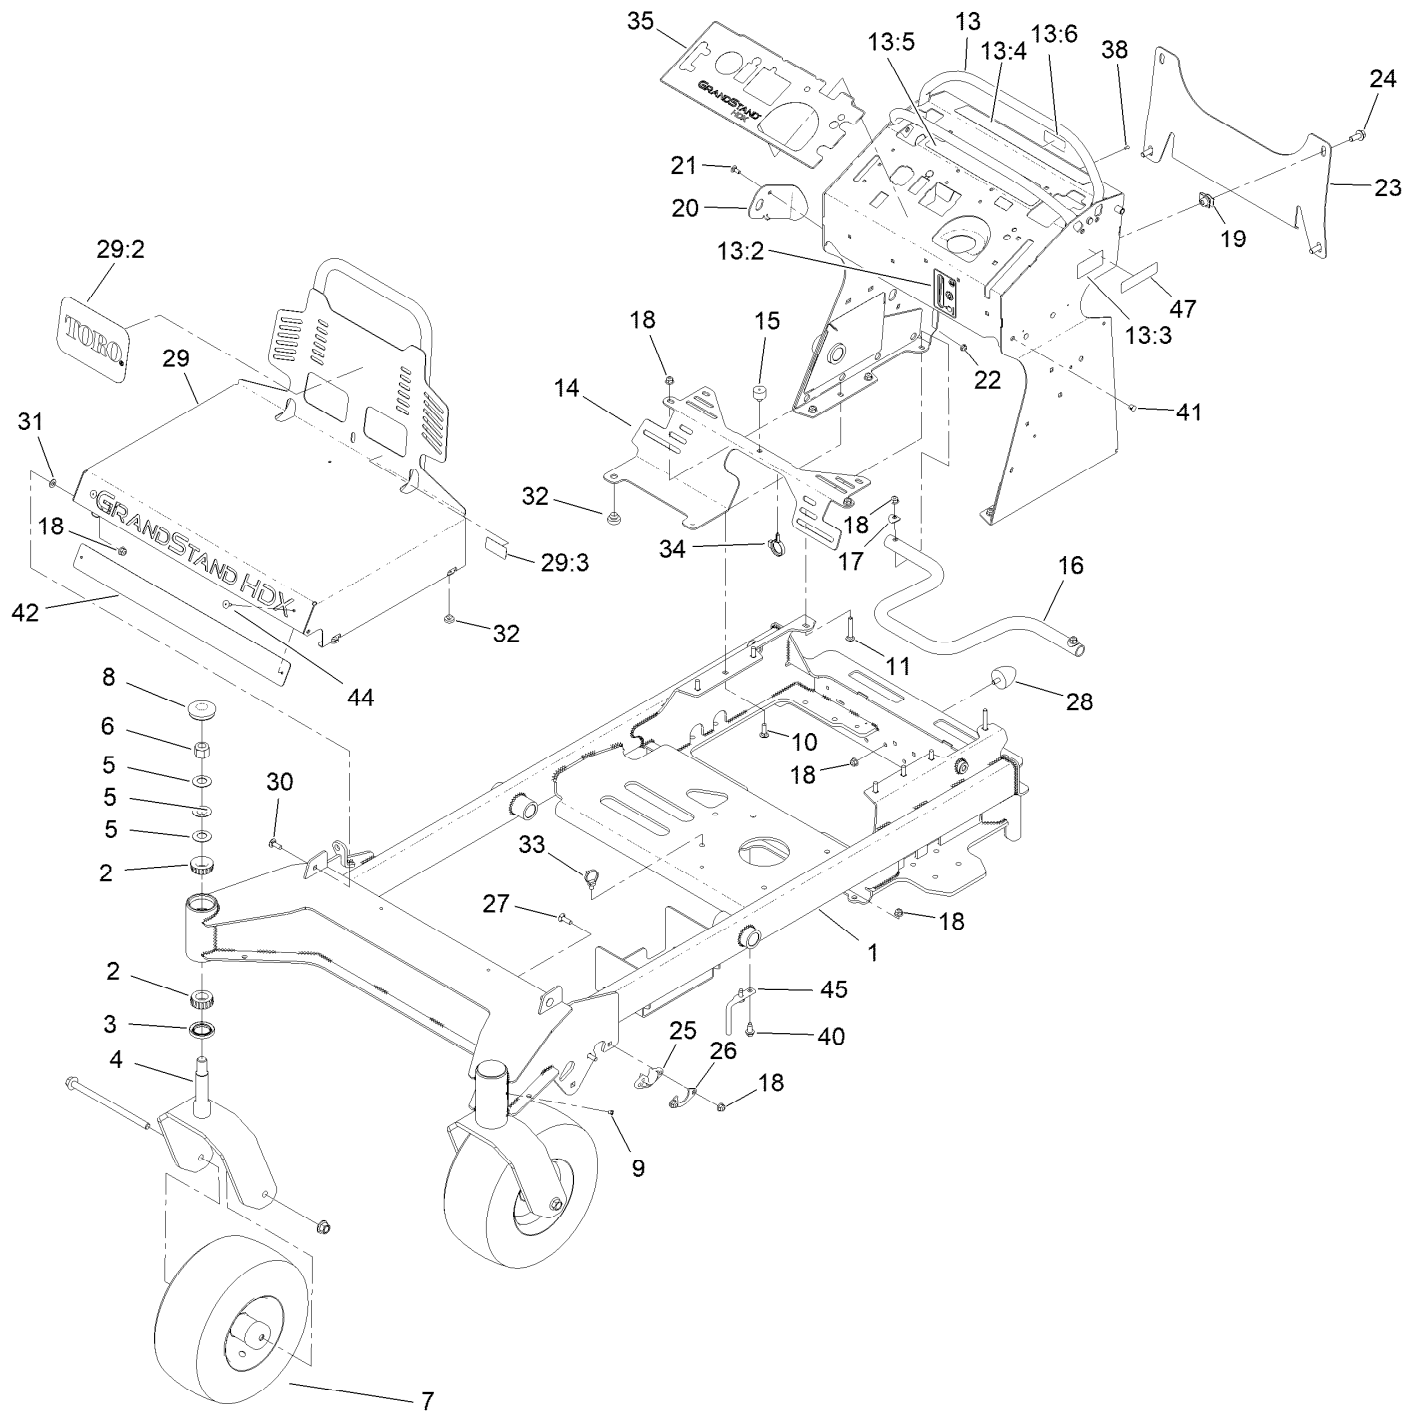

Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-2432-01	1	Frame-60	21	3229-11	1	Screw-CARR
2	1-543509	4	Bearing-Roller, Tapered	22	104-7201	1	Nut-HF, NI
3	116-5647	2	Seal-Grease	23	147-4771-05	1	Bracket-Cross
4	142-9968-01	2	Caster-Fork	24	3234-42	4	Screw-HHF
5	1-633508	6	Washer-Bellville	25	139-5872	2	Bearing-Flange
6	3296-51	2	Nut-Lock, NI	26	116-2887	2	Gusset-Lift, Deck
7	140-4896	2	Semi Pneumatic ASM 13X6.50-6	27	3230-22	4	Screw-CARR
8	144-0375	2	Cap, Grease	28	1-543963	3	Bumper-Rubber
9	1-811010	2	Plug	29	163-4104	1	Engine Guard ASM W/Decals
10	3230-2	6	Bolt-CARR	29:2	104-7213	1	Decal
11	3230-6	2	Bolt-CARR	29:3	133-4641	1	Decal-Warning, No Riders
13	145-5163	1	Tower Decal ASM	30	3230-10	2	Bolt-CARR
13:2	147-7921	1	Decal-Oil Level	31	93-6079	2	Spacer-Nylon
13:3	116-8775	1	Decal-Fill, Fuel	32	1-513658	6	Bumper
13:4	139-2878	1	Decal-Warning	33	32180-030	1	Clip-Tie
13:5	131-3526	1	Decal-Controls	34	2412-39	1	Clamp-R
13:6	147-0212	1	Decal - Fuse	35	147-4765	1	Decal-Panel Control, Briggs
14	161-1339-01	1	Guard-Fan	38	3290-271	2	Rivet-Pop
15	120-7893	1	Bumper-Grommet	40	32144-70	3	Screw-HWHTF
16	145-1586-01	1	Tube-Fuel Tank Mount	41	104-9368	3	Plug-Dome
17	107-3844	2	Washer	42	147-4805-01	1	Plate-Backing
18	104-8300	19	Nut-HF, NI	44	130-8451	2	Rivet-Trifold
19	105-4886	4	Nut-Tinnerman	45	147-4825	1	Guide-Belt
20	147-4952	1	Plate-Striker	47	133-8062	1	Decal-Spark Arrestor

Wheel and Bearing Assembly

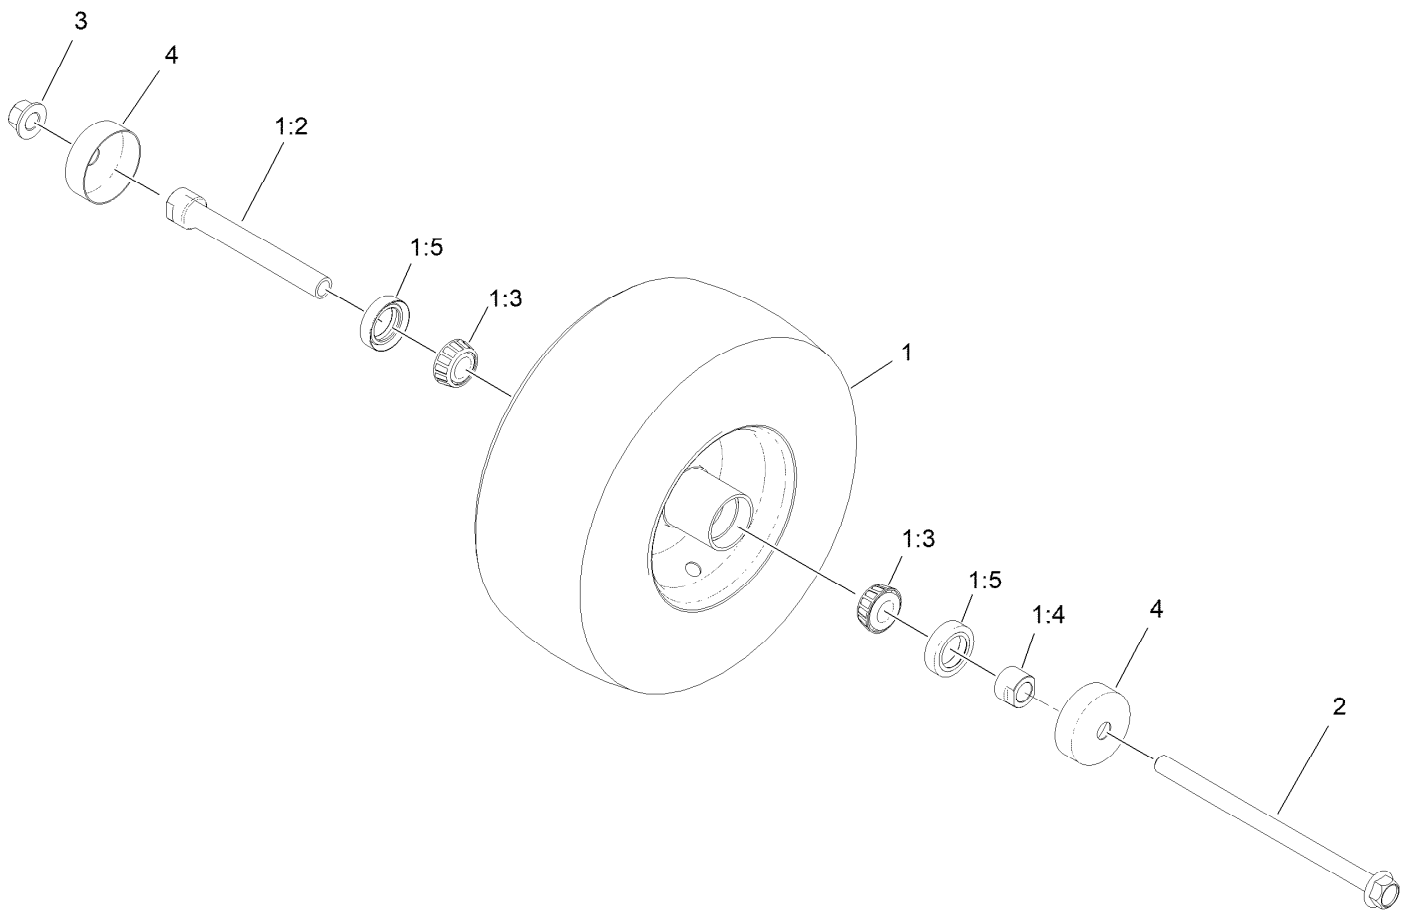


Wheel and Bearing Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Wheel And Bearings ASM ●	1:5	103-0063	2	Seal-Caster
1:2	126-7796	1	Caster Axle ASM	2	126-5389	1	Screw-HHF
1:3	1-633585	2	Bearing-Cone, Taper	3	99-5107	1	Nut-HF Nylock
1:4	103-3051	1	Spacer-Nut	4	103-2768	2	Guard-Seal

● Not serviced separately


Platform Assembly

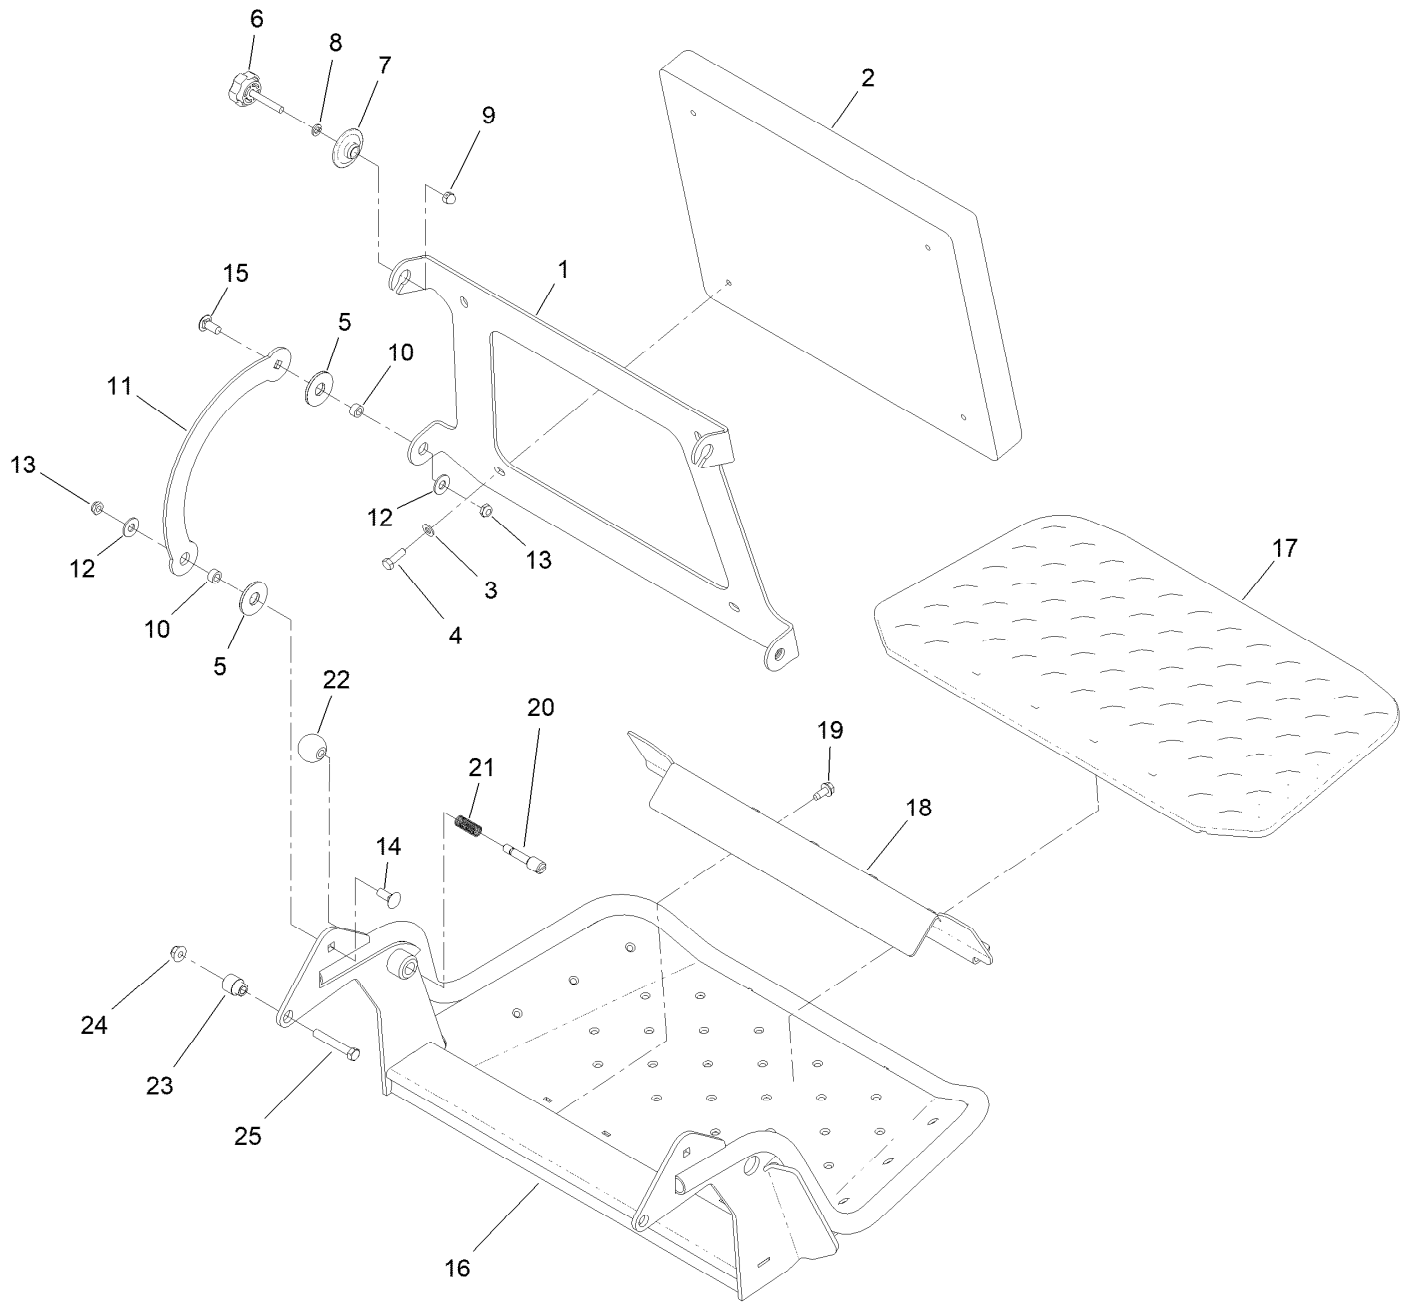

Platform Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	120-8499-05	1	Hinge-Pad	14	3231-2	2	Bolt-CARR
2	147-4839	1	Cushion-Pad	15	3231-27	2	Screw-CARR
3	3256-23	4	Washer-Plain	16	163-3498-01SP	1	Platform ASM
4	121-7999	4	Screw-HH, Patch	17	126-7157	1	Mat-Platform
5	114-0463	4	Washer-Friction, Composite	18	161-6798	1	Shield Clamp Kit
6	133-1426	2	Knob	19	32144-70	2	Screw-HWHTF
7	116-2886	2	Slide-Bushing	20	119-8650	1	Pin-Latch
8	3253-4	2	Washer-Lock	21	114-5348	1	Spring
9	137-4808	2	Nut-Acorn	22	1-603175	1	Knob-Ball
10	111044	4	Spacer	23	132-7583	2	Bushing-Flanged
11	114-1915-01	2	Link-Pad	24	104-8301	2	Nut-HF, NI
12	3256-4	4	Washer-Flat	25	323-47	2	Screw-HH
13	3296-59	4	Nut-Lock, NI				

Engine Assembly

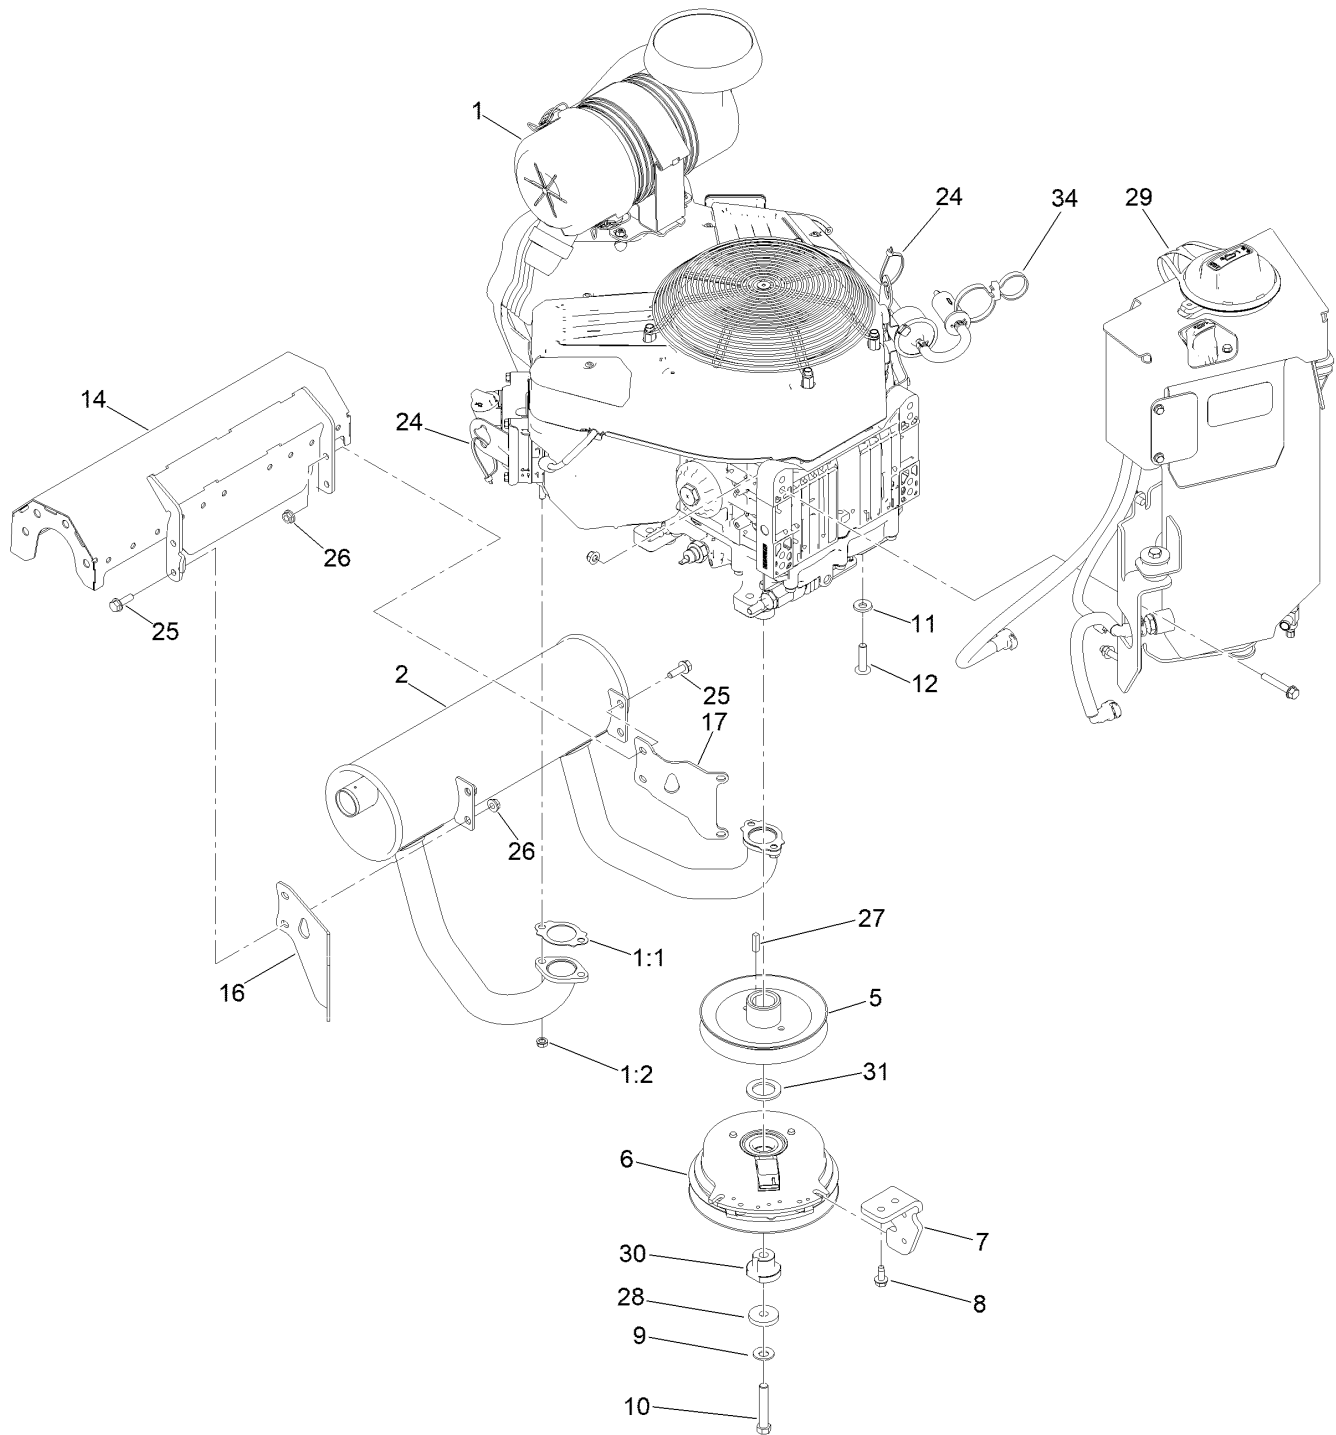

Engine Assembly (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Engine Vanguard EFI ■▲	25	3234-17	4	Screw-HHF
1:1	142-6842	2	Gasket-Exhaust	26	32128-20	4	Nut-HF
1:2	142-6843	4	Nut-Hex	27	1-807259	1	Key
2	145-6193	1	Muffler, Basco 37HP	28	1-543610	1	Washer-Flat
5	145-6115	1	Pulley	29		1	Oil Guard ASM ■
6	139-7910	1	Clutch-200Cms	30	147-4838	1	Spacer, D-Drive
7	147-0345-05	1	Bracket, Clutch Stop	31	3-6781	1	Washer-Flat
8	32144-70	2	Screw-HWHTF	34	32180-450	1	Tie-Cable, Double Loop
9	1-603610	1	Washer-Spring	99	142-6841	1	Filter-Oil ●
10	3212-10	1	Screw-HH	99	142-8433	1	Filter, Outer Air ●
11	98-5975	4	Washer-Belleville	99	142-8434	1	Filter, Inner Air ●
12	126-0983	4	Screw-BHTF	99	142-8435	2	Plug, Spark ●
14	163-4103	1	Muffler Guard ASM	99	163-4159	1	Fuel Filter Kit ●
16	147-3499	1	Bracket-Muffler	99:1	142-7451	1	Filter-Fuel ●
17	147-4750	1	Bracket-Muffler	99:2	32180-450	1	Tie-Cable, Double Loop ●
24	3290-378	2	Tie-Cable	99:3	163-4170	1	Line, Fuel ●

● Not illustrated

▲ Obtain parts from www.briggsandstratton.com

■ Not serviced separately

Oil Guard Assembly

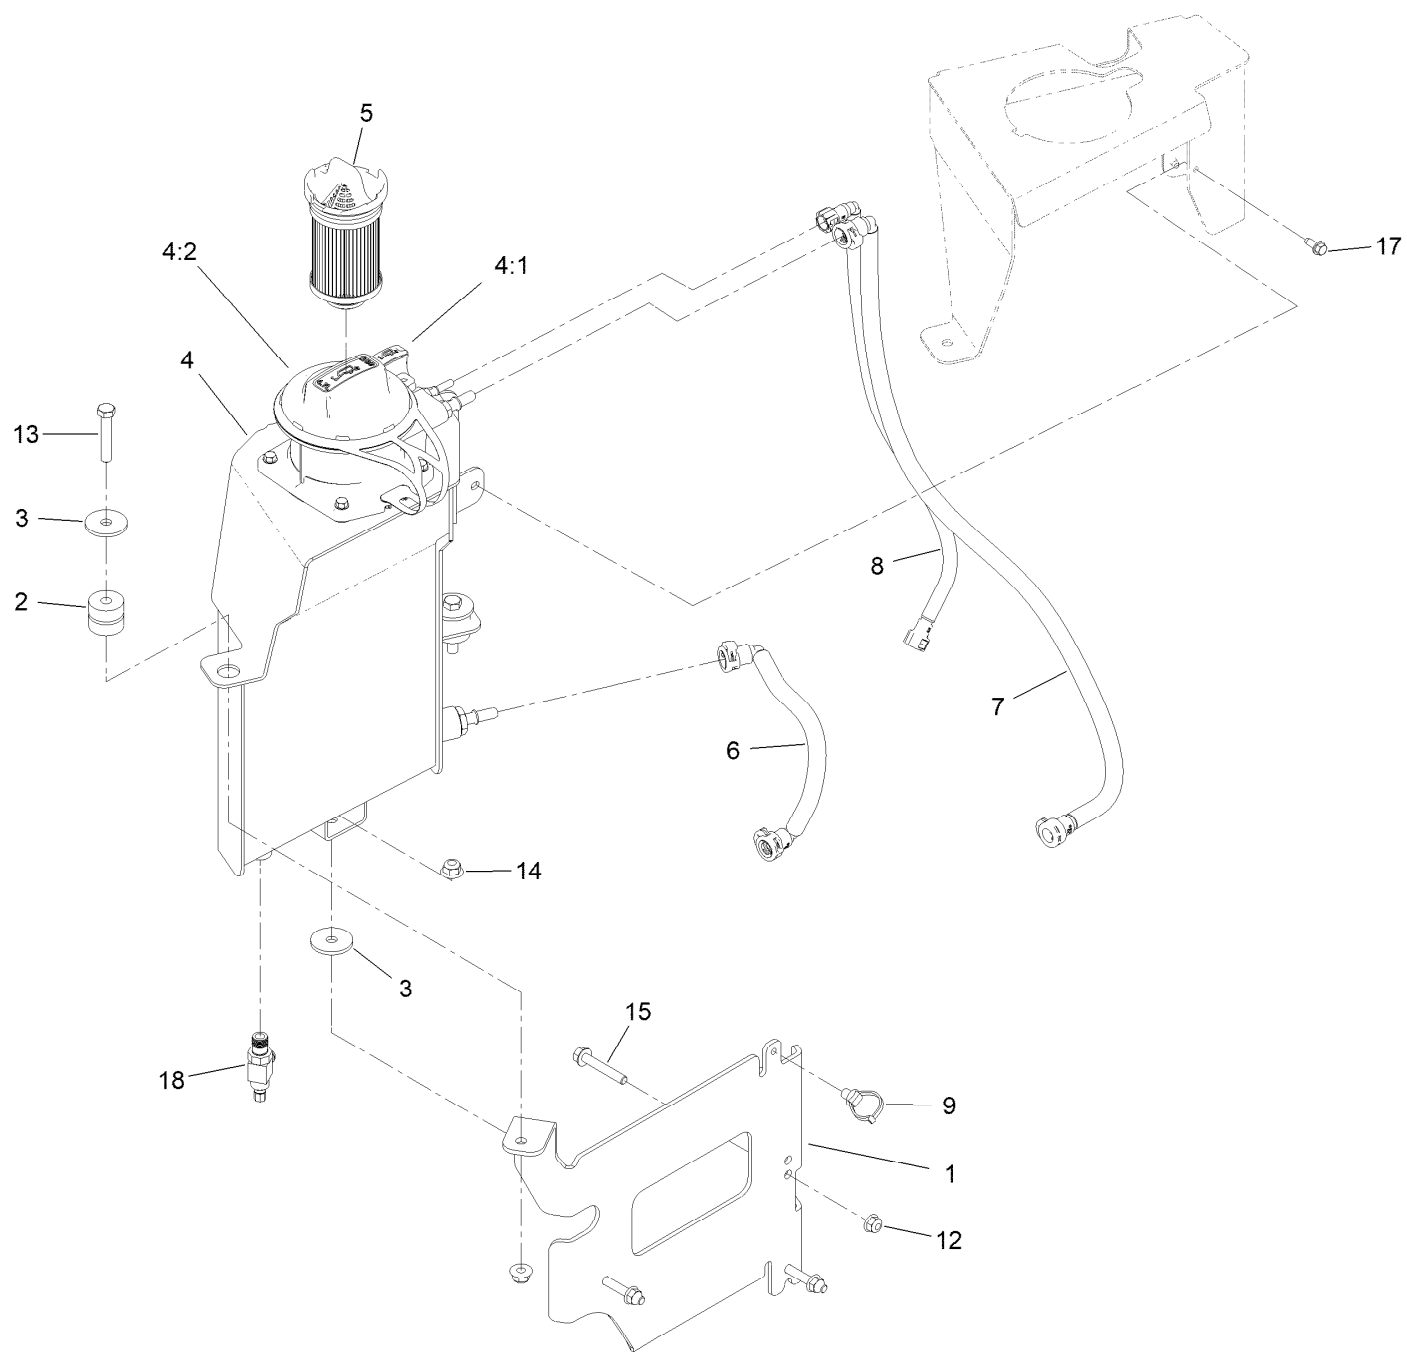


Oil Guard Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-0346-05	1	Mount-Tank, Oil	8	147-4970	1	Hose-Vent
2	142-6009	3	Isolator-Tank	9	32180-030	1	Clip-Tie
3	1-213069	4	Washer	12	104-8300	3	Nut-HF, NI
4		1	Reservoir-Oil ●	13	323-10	3	Screw-HH
4:1	142-7452	1	Oil Dipstick ASM	14	104-8301	3	Nut-HF, NI
4:2	142-7453	1	Oil Tank Cap ASM	15	142-6275	3	Screw-HHF
5	142-6841	1	Filter-Oil	17	32144-10	3	Screw-HWH
6	142-7420	1	Hose-Supply	18	103-6602	1	Valve-Oil Drain
7	142-7421	1	Hose-Scavenge				

● Not serviced separately


Fuel Tank Assembly

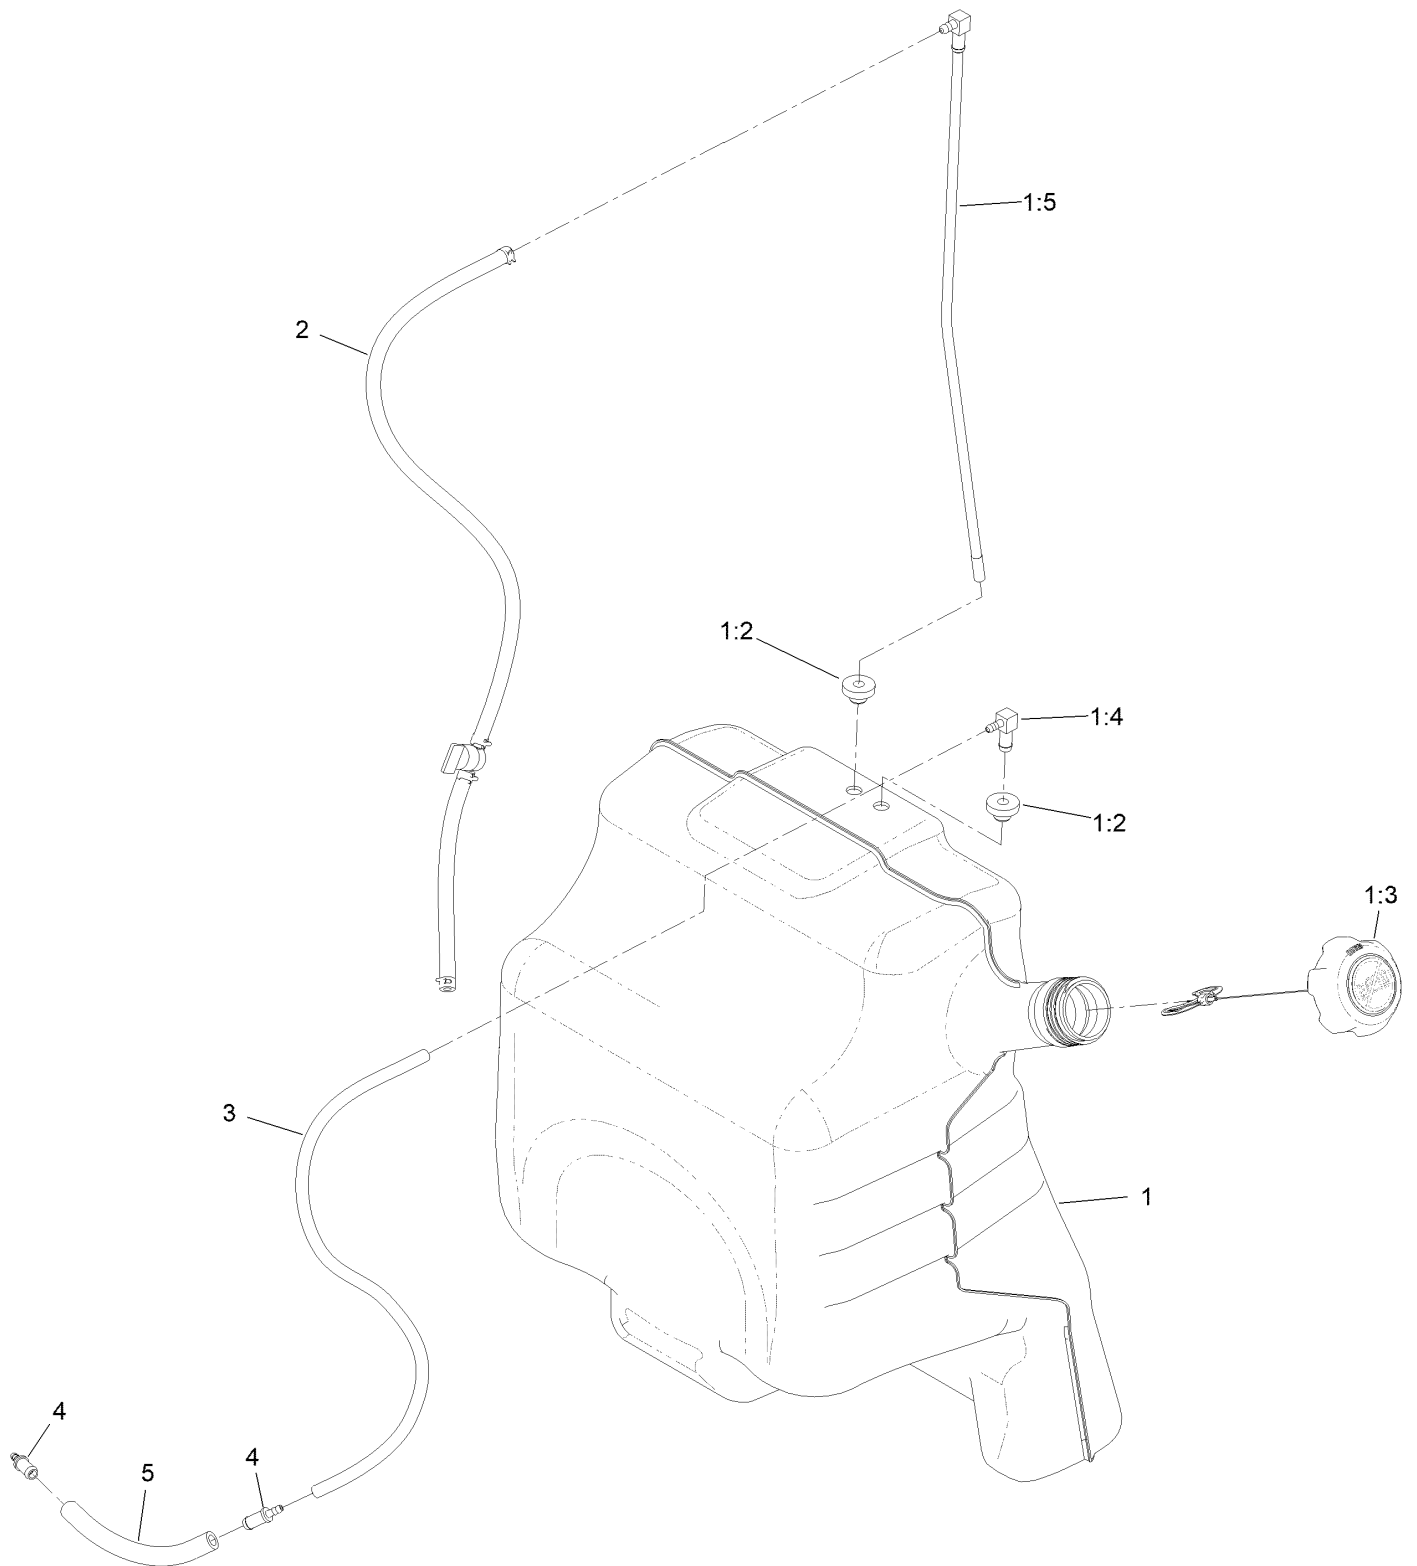

Fuel Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-7560	1	Fuel Tank ASM	2	145-6123	1	Fuel Line ASM
1:2	46-6560	2	Bushing	3	110-8255	1	Hose-Fuel
1:3	137-4127	1	Cap-Fuel	4	98-2952	2	Fitting-Straight
1:4	104-5228	1	Fitting-Elbow, 90 DEG	5	132-7576	1	Hose-Fuel
1:5	145-6195	1	ASM, Tube-Fuel				

Electrical Assembly

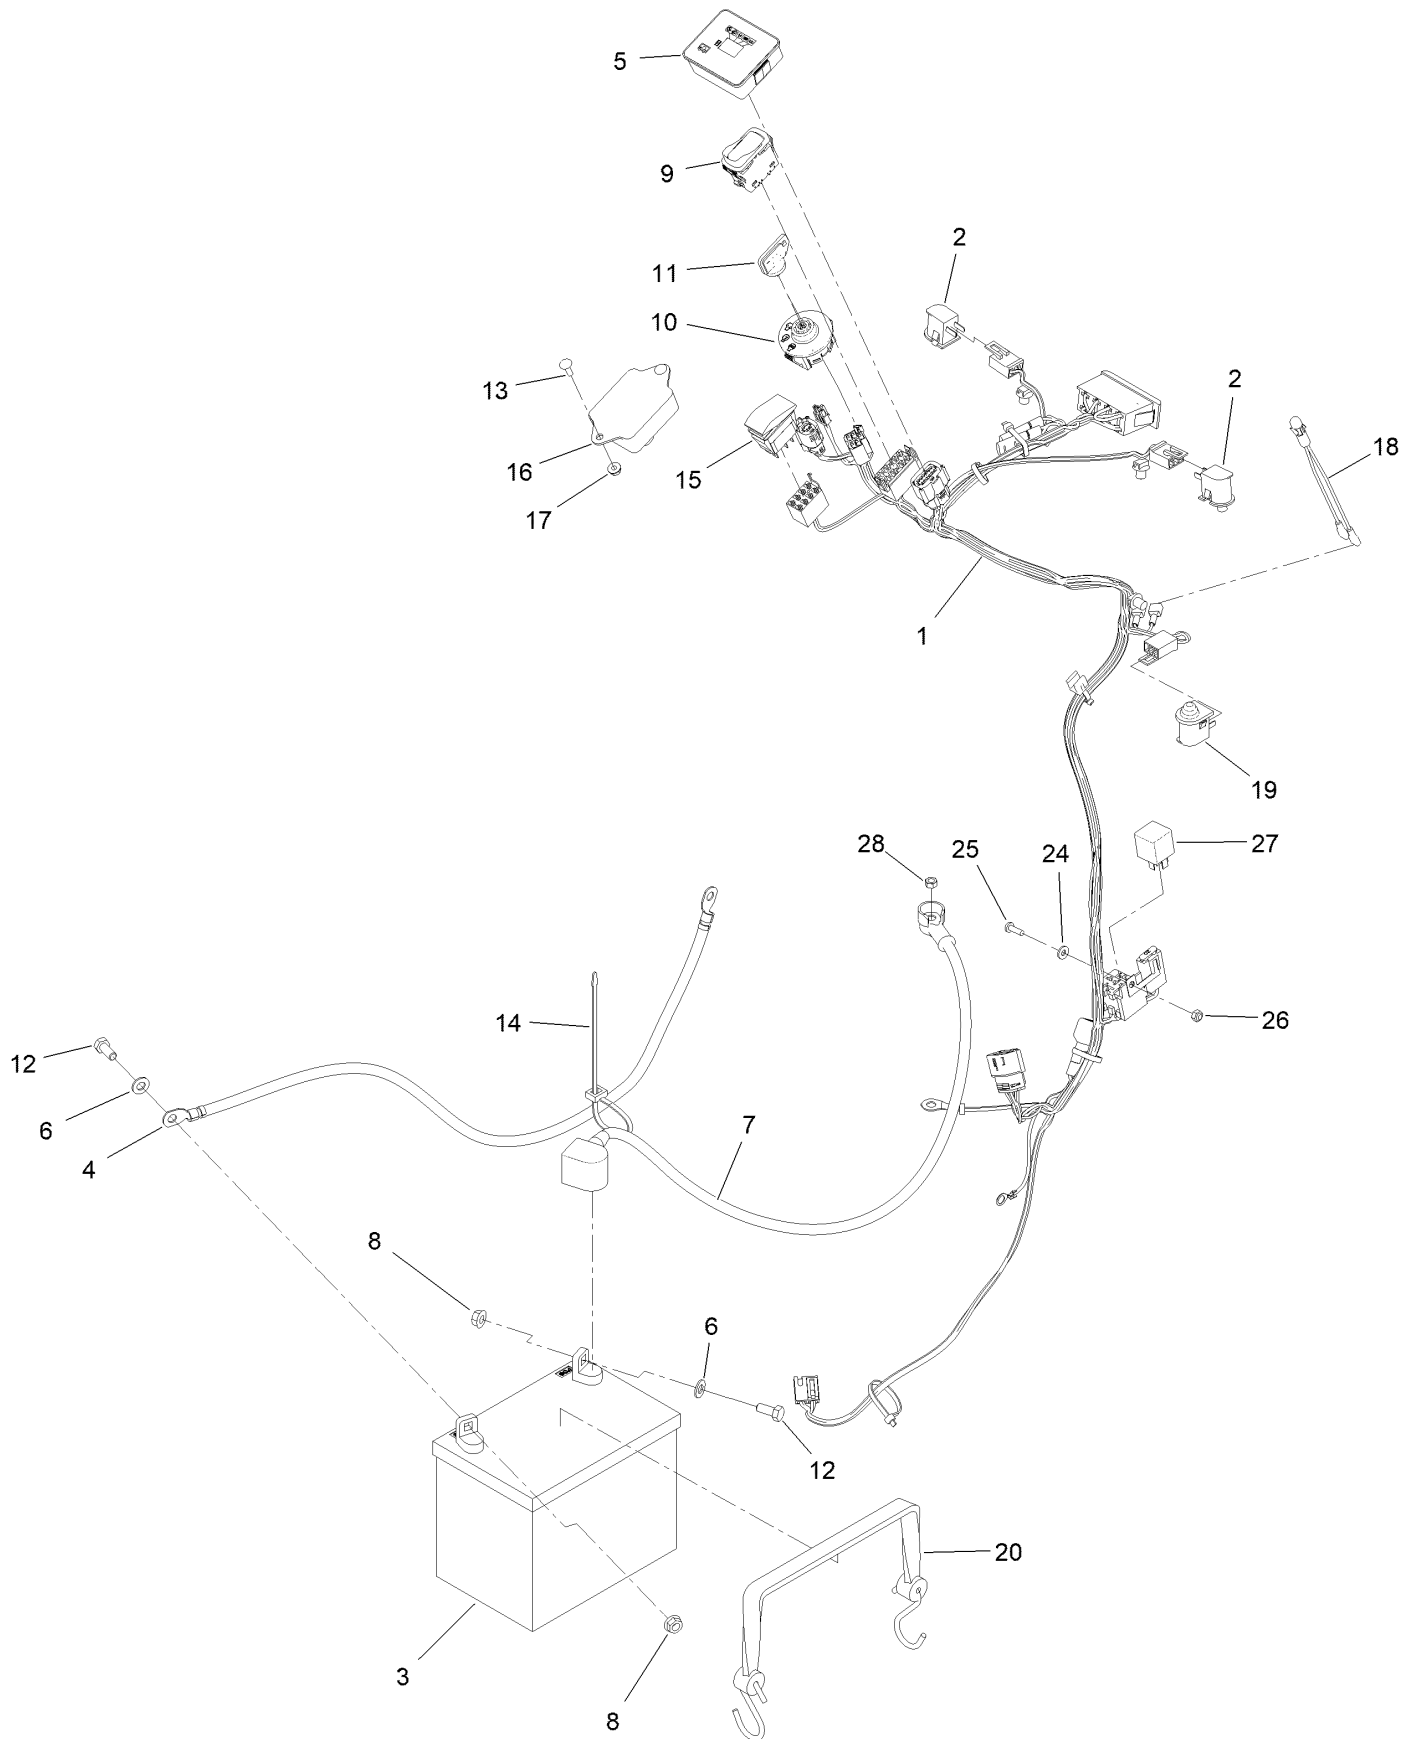

Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-5226	1	Harness-Wire, Grandstand	14	3290-378	5	Tie-Cable
2	82-2190	2	Switch-Bail	15	112-3530	1	Switch-Rocker, On-On-On
3	104-8162	1	Battery	16	147-4767	1	Box-Resistor, ASM
4	147-4795	1	Battery-Cable, Bk ASM	17	32128-17	2	Nut-Lock, Flange
5	140-1884	1	Module-Meter, Hour	18	1-643267	1	Indicator-LED, Red
6	3256-23	2	Washer-Plain	19	133-4654	1	Switch-Plunger
7	147-4794	1	Battery-Cable, Rd ASM	20	139-2381	1	Strap-Rubber
8	109-5715	2	Nut-HHF, Smooth	24	3256-14	1	Washer-Flat
9	139-6367	1	Switch-Rocker, (On)-On-Off	25	3290-500	1	Screw-PPH
10	137-4101	1	Switch-Ignition	26	3296-2	1	Nut-Lock, NI
11	63-8360	1	Key-Ignition	27	1-643275	1	Relay
12	322-3	2	Screw-HH	28	33014-00	1	Nut-Hex
13	1-807533	2	Bolt-CARR				

Attachments and Accessories

For 72514 — GrandStand HDX Mower With 60in TURBO FORCE Cutting Unit

Product Name	Model/Part
Speed Setting Tool.....	132-7595
Trash Bag Assembly.....	133-1435
Light Kit.....	133-1437
HOC Set Blocks.....	133-1439
Strobe Light Kit.....	133-1495
5 Gallon Bucket.....	133-2533
Recycler Kit.....	139-6655
Harness Wire Splitter.....	121-5988
Hydraulic Cap Lock Kit.....	136-5420
Bucket Mount Kit.....	136-5681
Blade-20.50, Low Flow.....	140-4854
6 Pack-Blade, 20.5 Low Flow.....	140-4879
Tweel-Turf Tire.....	139-3649
Blade-20.50 Medium Flow.....	140-4853
6 Pack-Blade, 20.5 Med Flow.....	140-4878
Blade-20.5 High Flow.....	140-1240
6 Pack-Blade, 20.5 High Flow.....	140-4877
13x6.5n6 Caster Tweel Asm.....	147-6294
Blade-20.50 Recycler.....	140-4855
6 Pack-Blade, 20.5 Recycler.....	140-4881
Blade-20.50 Atomic.....	140-1241
6 Pack-Blade, 20.5 Atomic.....	140-4880
Toro Premium Fuel Treatment 12oz Bottle.....	131-6572
10W30 4-Cycle Engine Oil (32oz Bottle).....	38280
Toro 4-Cycle SAE 30 Oil (32oz Bottle).....	38903
Hypr-Oil 500 (quart).....	114-4713
Hypr-Oil 500 (gallon).....	114-4714
Hypr-Oil 500-5 (5 gallon).....	114-4715
Hydro Oil Change Kit.....	133-1457
2 Transmission Filter Kit.....	144-3842
Spark Arrestor, 1.5in.....	146-0561

Notes:

Notes:

Notes:



Count on it.