



## 62in Blower Kit

### Groundsmaster® 200 Series Side Discharge Mowers

Model No. 30506 - 240000001 and up.

## Parts Catalog

### Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

### Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

### Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

### Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

## Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. ....	as required	HYD. ....	hydraulic
ASM. ....	assembly	INC. ....	incorporated
CARR. ....	carriage	LH. ....	left hand
DEG. ....	degrees	NI. ....	nylon insert
FH. ....	flat head	PPH. ....	phillips pan head
GA. ....	gauge	PTH. ....	phillips truss head
HF. ....	hex flange	PTO. ....	power take off
HH. ....	hex head	RH. ....	right hand
HHF. ....	hex head flange	SFH. ....	slotted fillister head
HHFTF. ....	hex head flange thread forming	SHH. ....	slotted hex head
HJ. ....	hex jam	SHWH. ....	slotted hex washer head
HLH. ....	hex lag head	SPH. ....	slotted pan head
HOC. ....	height-of-cut	SQH. ....	square head
HS. ....	hex	SRH. ....	slotted round head
HSBH. ....	hex socket button head	STD. ....	standard
HSFH. ....	hex socket flat head	TAP. ....	self tapping
HSH. ....	hex socket head	TTH. ....	torx truss head
HWH. ....	hex washer head	WH. ....	wing head
HWHTF. ....	hex washer head thread forming		


## Footnotes

- ❶ Not serviced separately

## Contents

Description	Page
Blower Housing and Mount Assembly	..... 3
Shelf and Deflector Assembly	..... 4
Pulley and Bumper Assembly	..... 5
Counterbalance Spring and Front and Back Pivot Bracket Assembly	..... 6


PROTOTYPE

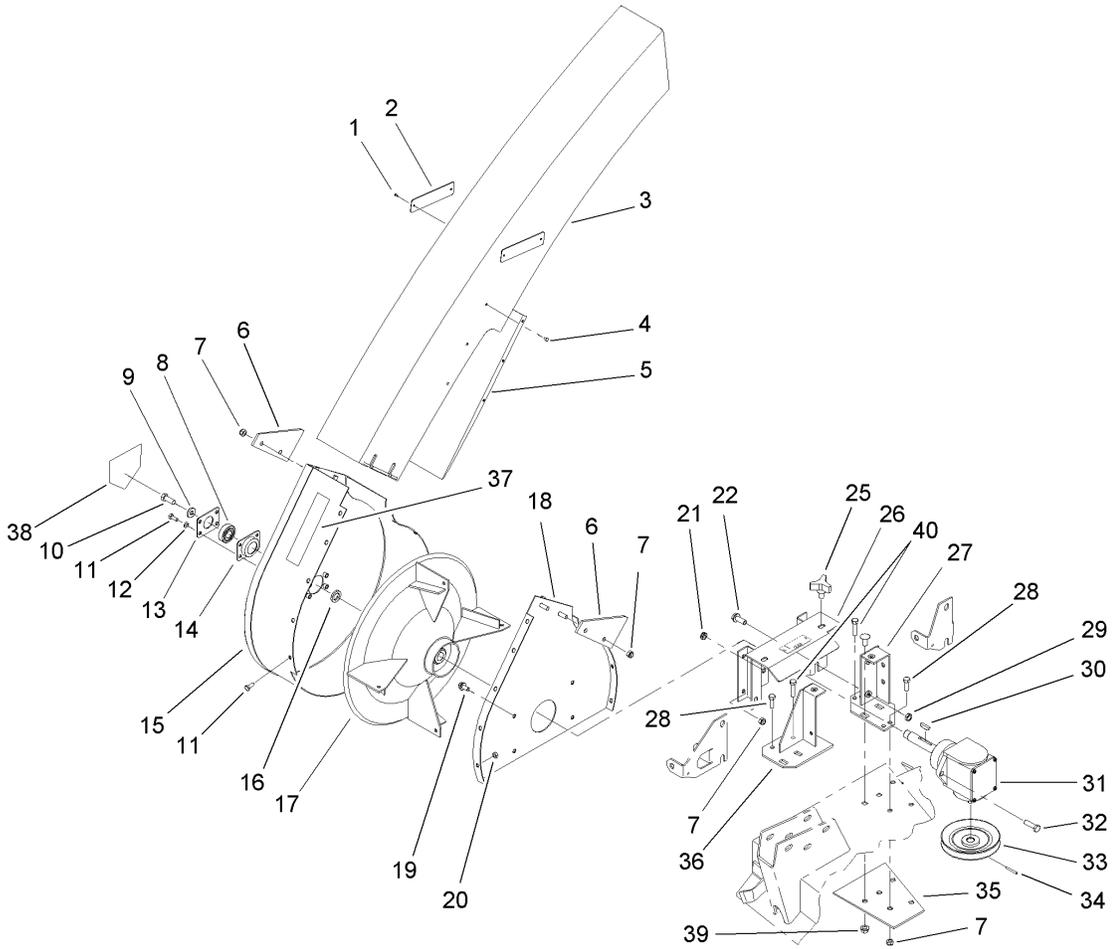

## Blower Housing and Mount Assembly

Ref	Part No.	Qty.	Description
1	3290-271	4	Rivet-Pop
2	107-2926	2	Decal-Warning Plate
3	77-6720	1	Chute-Blower
3	80-3720	1	Chute ASM
4	3290-409	6	Rivet
5	77-6730-03	1	Deflector-Chute
6	43-0960-03	2	Brkt-Chute
7	3296-29	11	Nut-Lock, NI
8	38-7820	1	Bearing-Ball
9	43-0940	1	Spacer-Hub, Blower
10	3235-22	1	Screw-HH Lock
11	321-3	13	Screw-HH
12	3253-3	4	Washer-Lock
13	63-9700-03	1	Plate-Cover
14	37-6730	1	Cup-Bearing
15	13-0269	1	Blower Housing ASM
16	63-9710	1	Spacer-Bearing
17	56-4780-03	1	Impeller
18	77-5820-03	1	Plate-Mounting
19	3234-14	4	Screw-HHF
20	3296-42	9	Nut-Lock, NI
21	3296-44	2	Nut-Lock, NI
22	3234-11	2	Screw-HHF
25	62-6520	2	Knob


Ref	Part No.	Qty.	Description
26	99-5187-03	1	Mount-Blower
27	77-5560	1	Bracket-LH
28	322-5	2	Screw-HH
29	3218-3	2	Nut-Jam
30	3257-40	1	Key-Hi Pro
31	53-4530-03	1	Gear Box ASM
32	323-7	2	Screw-HH
33	56-4810-03	1	Pulley
34	32121-8	1	Pin-Roll
35	99-5159-03	1	Plate-Reinforcement
36	99-5177	1	RH Bracket ASM
37	93-7301	1	Decal-Warning
38	106-6753	1	Decal-Danger, Ce
39	3290-357	4	Nut-Flange
40	322-3	2	Screw-HH

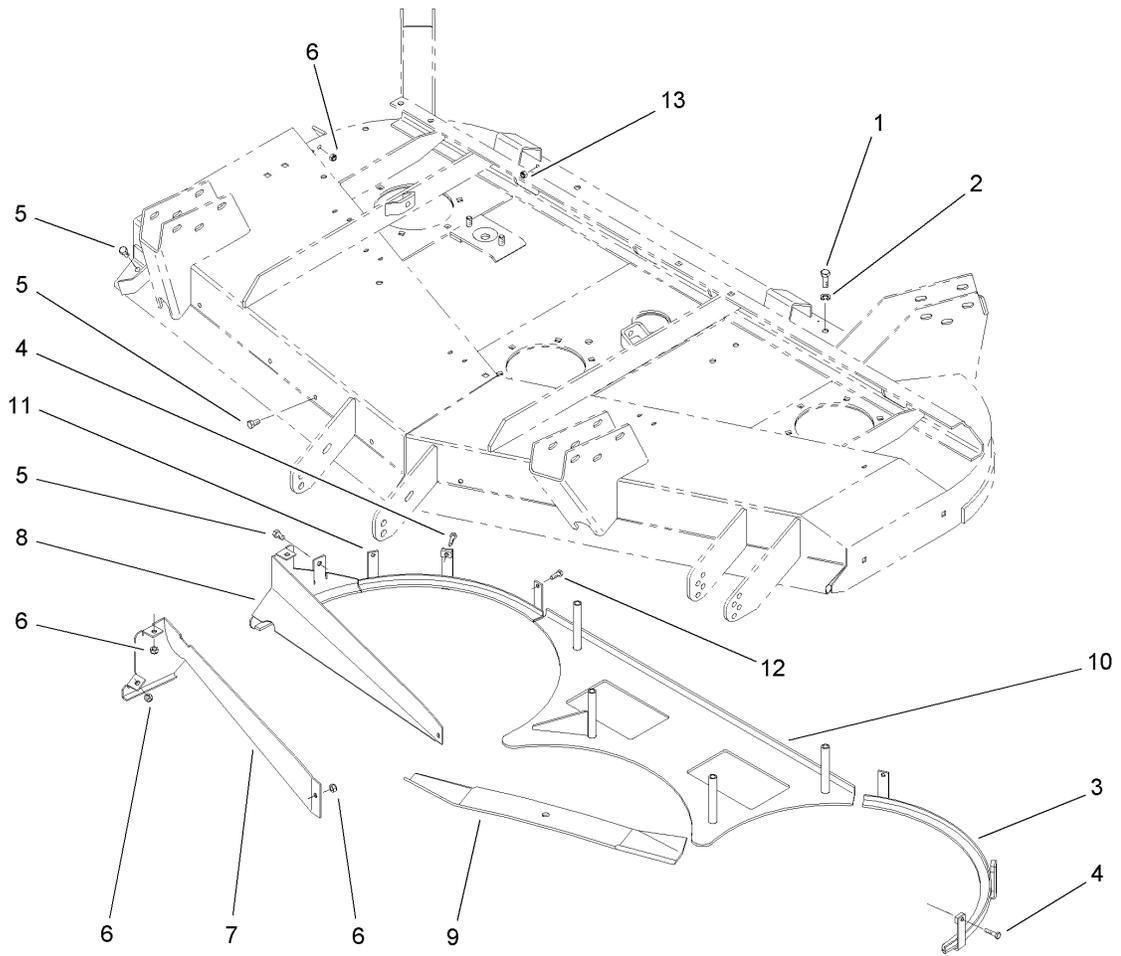

### Shelf and Deflector Assembly

Ref	Part No.	Qty.	Description
1	323-6	4	Screw-HH
2	3253-21	4	Washer-Lock
3	77-5930-01	1	Shelf-Bottom, LH
4	321-6	3	Screw-HH
5	322-2	5	Screw-HH
6	3296-29	6	Nut-Lock, NI
7	77-5740-01	1	Deflector-Front
8	77-5670-01	1	Deflector-Rear
9	77-6710-03	3	Blade (21.5in)
10	77-5640-01	1	Shelf-Bottom, Right Rear
11	77-5850-01	1	Shelf-Bottom, RH
12	321-4	3	Screw-HH
13	3296-42	6	Nut-Lock, NI

PROTOTYPE

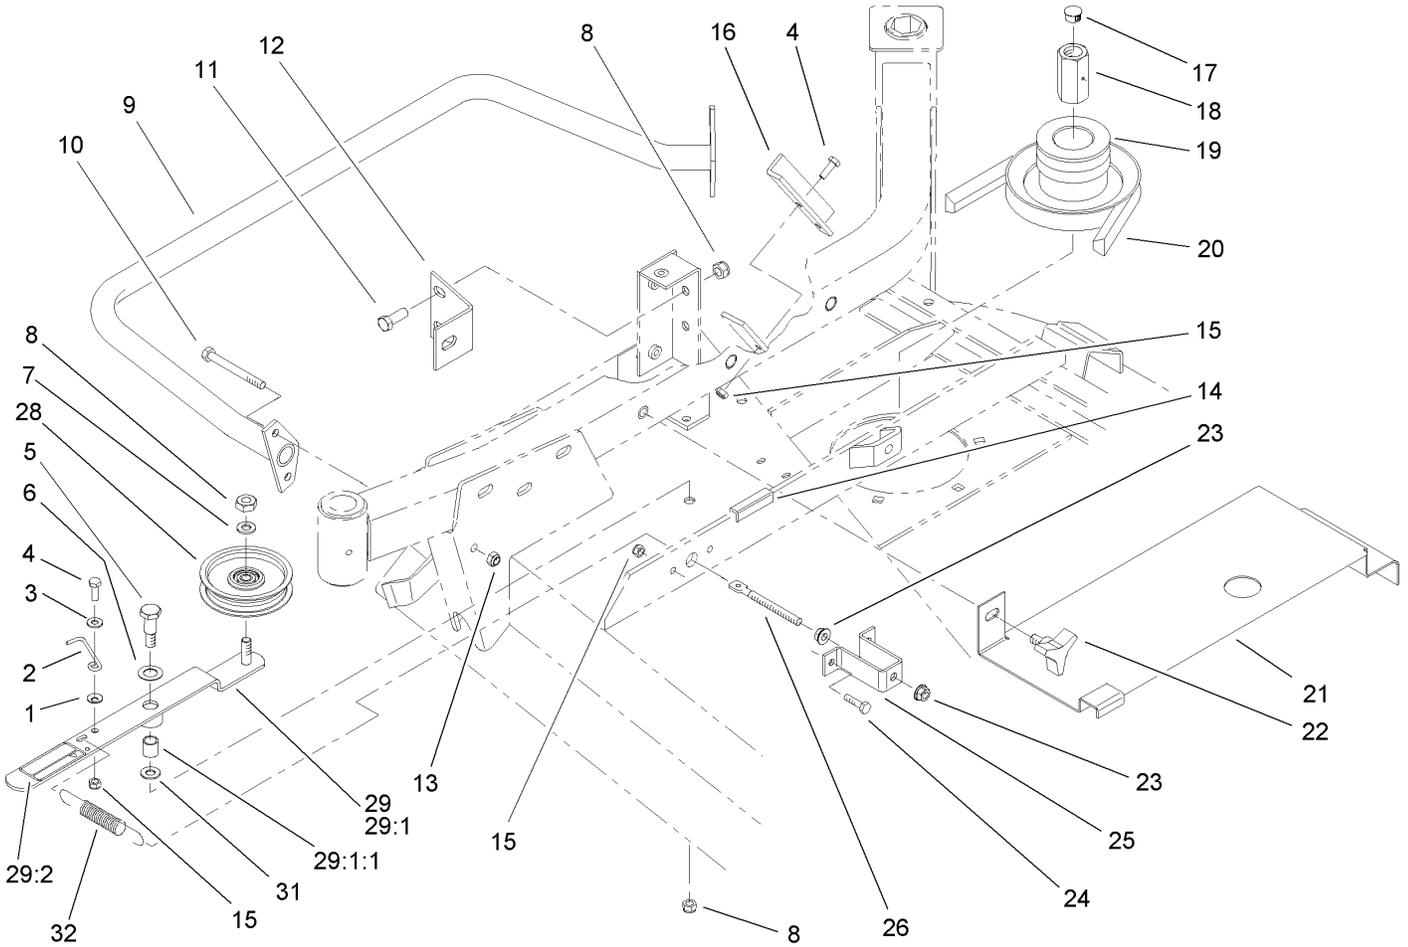


## Pulley and Bumper Assembly

Ref	Part No.	Qty.	Description
1	3290-451	1	Washer-Belleville
2	99-5183	1	Hook
3	3256-22	1	Washer-Flat
4	321-4	3	Screw-HH
5	80-3250	1	Screw-Pivot
6	257-10	1	Washer-Thrust
7	3256-38	1	Washer-Flat
8	3296-59	3	Nut-Lock, NI
9	99-5166-03	1	Bumper ASM
10	322-14	4	Screw-HH
11	323-6	2	Screw-HH
12	99-5176-03	1	Brace-Blower
13	3296-29	4	Nut-Lock, NI
14	70-2040	1	Trim
15	3296-42	5	Nut-Lock, NI
16	80-3550-03	1	Stop-Deflector
17	59-5310	1	Nut-Cover
18	59-5190	1	Nut-Pulley
19	77-5420-03	1	Pulley-Splined
20	80-3590	1	V-Belt
21	99-5169-01	1	Cover-Belt
22	62-6520	1	Knob
23	32128-20	2	Nut-HF
24	321-6	2	Screw-HH

Ref	Part No.	Qty.	Description
25	99-5165-01	1	Bracket-Spring
26	80-3560	1	Rod-Threaded
28	56-4920-01	1	Pulley-Idler
29	80-3310	1	Idler Arm ASM
29:1		1	Idler Arm And Bushing ASM
29:1:1	256-206	1	Bushing
29:2	93-6696	1	Decal-Warning
31	257-9	1	Washer-Thrust
32	37-8880	1	Spring-Traction

PROTOTYPE

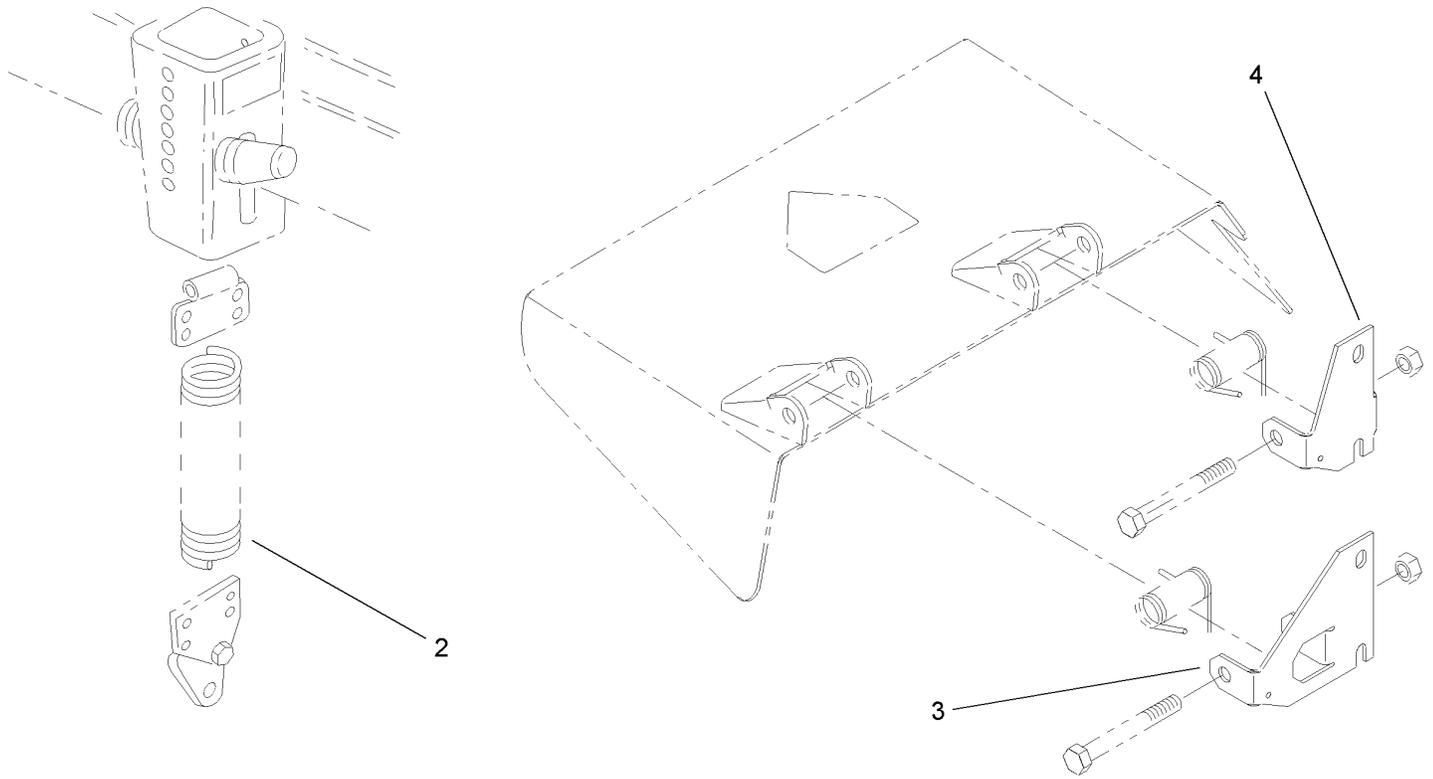

## Counterbalance Spring and Front and Back Pivot Bracket Assembly

Ref	Part No.	Qty.	Description	
2	66-8390-03	1	Spring-Extension	
3	80-2810-03	1	Bracket-Pivot, Front	
4	80-2820-03	1	Bracket-Pivot, Rear	
PROTOTYPE				

**NOTES**

*PROTOTYPE*



*PROTOTYPE*